



Count on it.

Parts Catalog

112 Commercial Walk Mower

Model No. 30112—Serial No. 6000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Frame Assembly	4
Engine and Clutch Assembly	5
Clutch Assembly No. 54-3200	6
Axle Assembly	7
Peerless Transmission Model No. 787	8
Handle Assembly	9
Engine Assembly	10
Crankcase Assembly	11
Governor Assembly	13
Recoil and Flywheel Assembly	14
Recoil Assembly	15
Air Cleaner and Carburetor Assembly	16
Carburetor Assembly	17
Air Cleaner Assembly	18
Muffler Assembly	19
36 Inch Cutting Deck Model No. 30136	20
36 Inch Carrier Frame Model No. 30136	22
Drive Spindle No. 54-7780 Model 30136	23
36 Inch Side Discharge Bagging Kit No. 30125 (Optional)	24
Sulky Kit Model No. 30122 (optional)	25

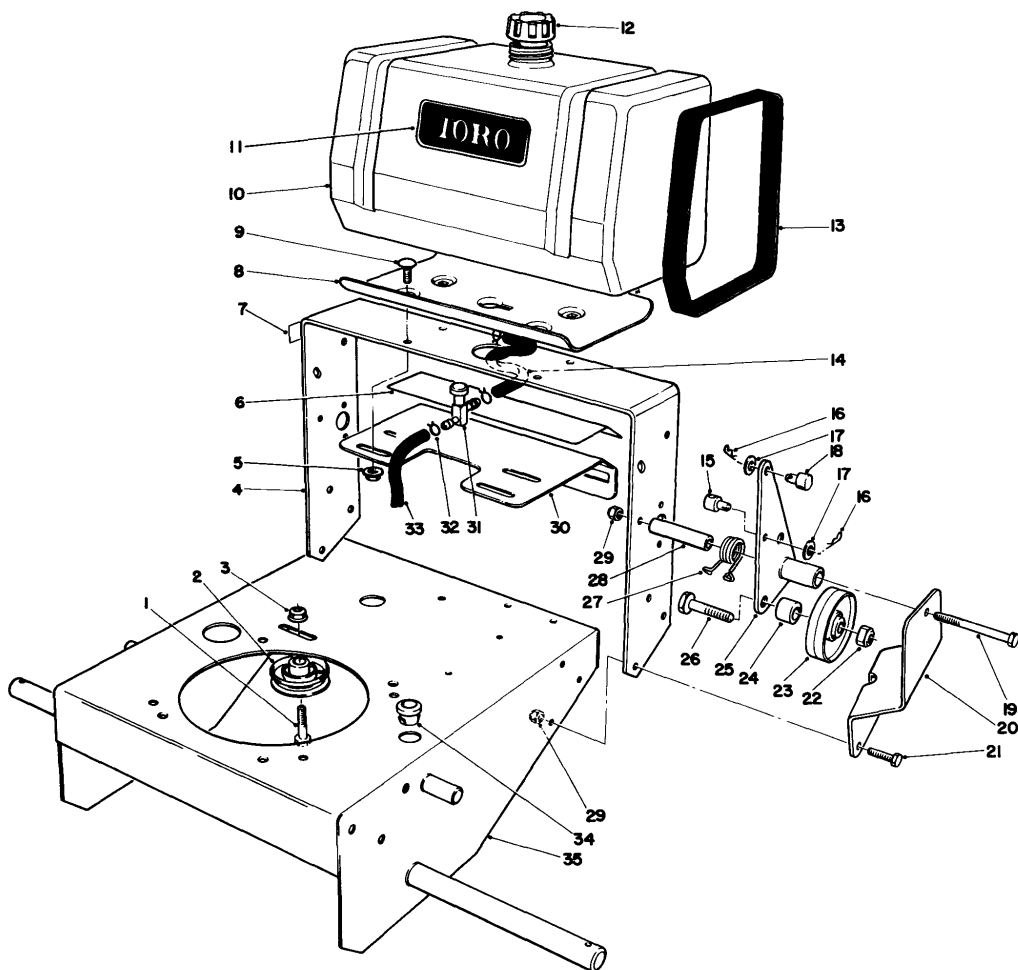


Frame Assembly

Ref.	Part Number	Qty.	Description
1	323-9	1	Screw-HH
2	51-4810	1	Pulley-Idler
3	32128-21	1	Nut-HF
4	54-3170	1	Frame-Rear
5	32128-13	4	Nut-HHF
6	52-2140	1	Decal-Ground Speed
7	55-4230	1	Decal-Fuel Shut Off
8	54-3100	1	Plate-Fuel Tank
9	3230-2	4	Bolt-CARR
10	54-2010	1	Tank-Fuel
11	57-4170	2	Gas Tank Decal
12	55-3570	1	Gas Cap ASM
13	54-3110	2	Hinge-Seat
14	47-2980	1	Hose-Fuel
15	51-4690	2	Rod Fitting
16	3290-307	4	Pin-Hair
17	3256-23	4	Washer-Flat
18	54-3080	2	Rod Fitting
19	323-16	2	Screw-HH


Ref.	Part Number	Qty.	Description
20	51-4360	1	Support-Idler L.H.
	51-4350	1	Support-Idler R.H. ●
21	323-6	6	Screw-HH
22	3296-23	2	Nut-Lock, NI
23	51-4480	2	Idlerwheel
24	51-4490	1	Wheel Idler Spacer
25	51-4310	1	LH Idler Brkt Wa
	51-4300	1	Bracket-Idler R.H. ●
26	51-4450	2	Screw-Leveler
27	51-4380	1	Spring-Torsion, LH
	51-4370	1	Spring-Torsion, RH ●
28	51-4340	2	Pivot Idler Spacer
29	3296-39	8	Nut-Lock, NI
30	51-4140	1	Control Plate *r
31	54-3150	1	Fuel Valve
32	2412-33	3	Clamp
33	47-2985	1	Gas Hose
34	237-124	1	Grommet
35	51-4100	1	Frame

● Not Illustrated.

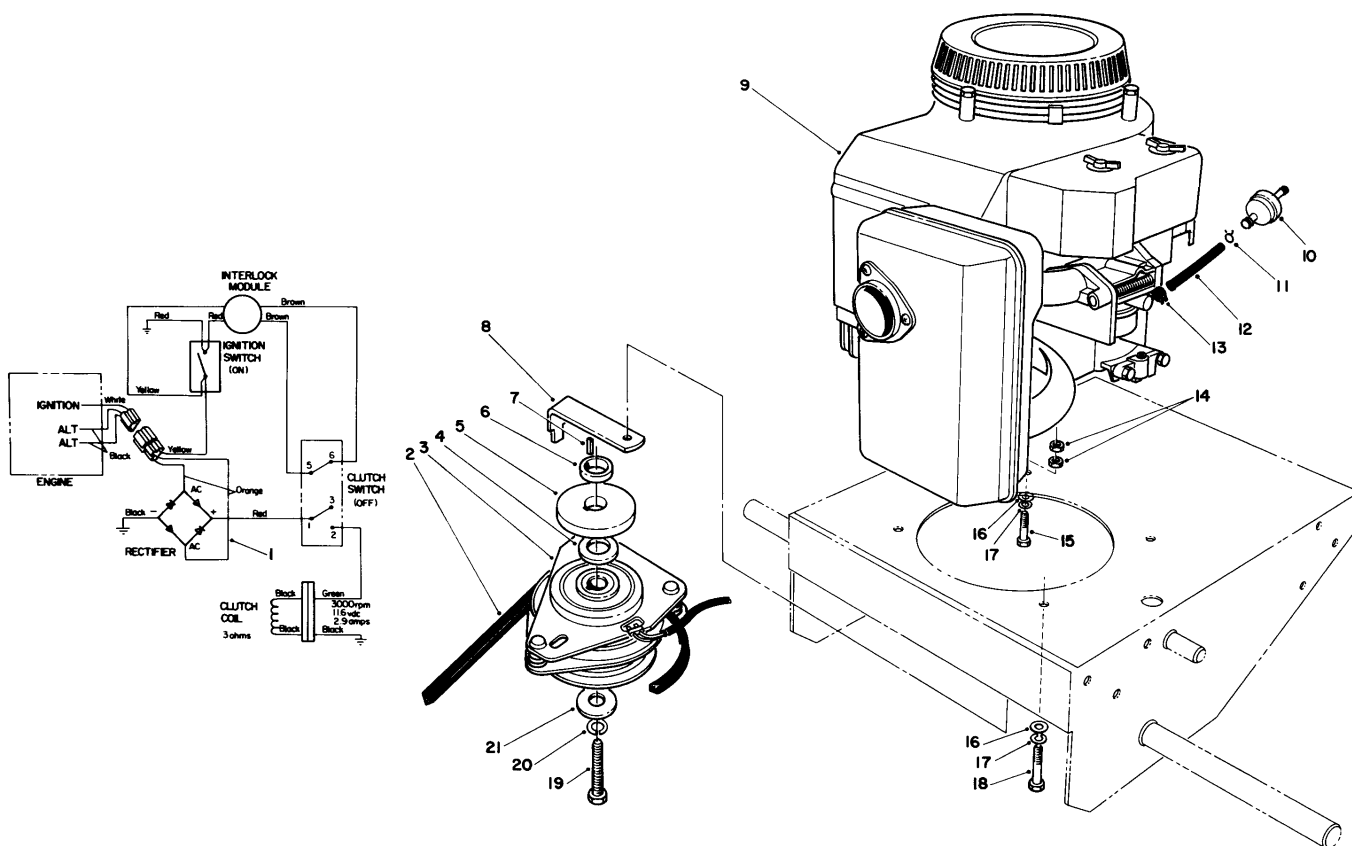


Engine and Clutch Assembly

Ref.	Part Number	Qty.	Description
1	57-6320	1	Wire Harness
2	26-9670	1	V-Belt
3	54-3200	1	Clutch/Brake
4	51-3280	1	Spacer-Lower
5	51-4460	1	Pulley-Drive
6	51-3290	1	Spacer-Upper
7	5-1336	1	Key-Square
8	51-4540	1	Retainer-Clutch
9	12-2879	1	Engine-Kawasaki
10	42-5240	1	Nut
11	2412-33	2	Clamp
12	47-2982	1	Hose-Fuel
13	2412-80	1	Clamp-Hose
14	57-6390	2	Nut-Jam
15	57-6370	1	Screw (Engine, Ground)
16	3256-23	4	Washer-Flat
17	3253-4	4	Washer-Lock
18	57-6380	3	Screw-HH
19	57-6360	1	Screw-Clutch
20	3253-22	1	Washer-Lock
21	44-8160	1	Washer-Clutch

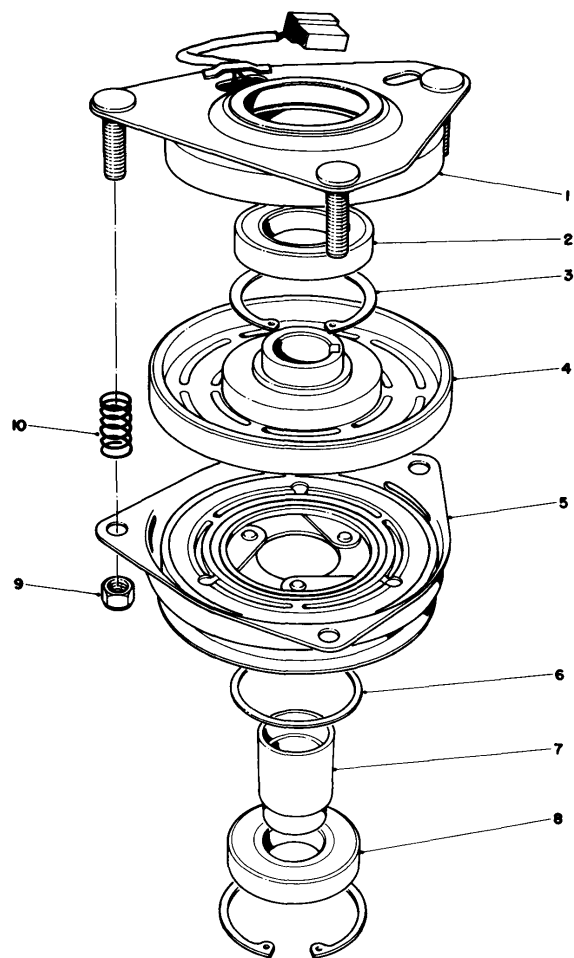

Clutch Assembly No. 54-3200

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	44-8350	1	Field Assembly (Incl. Ref. #2 & 3)
2	251-292	1	Bearing-Field
3	44-8310	2	Ring-Retaining
4	44-8360	1	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)
5	55-7410	1	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7 & 8)
6	44-8330	1	Spacer-Bearing, Pulley
7	44-8340	1	Collar-Bearing
8	251-291	1	Bearing-Pulley
9	3296-5	3	Nut-Lock
10	44-8320	3	Spring

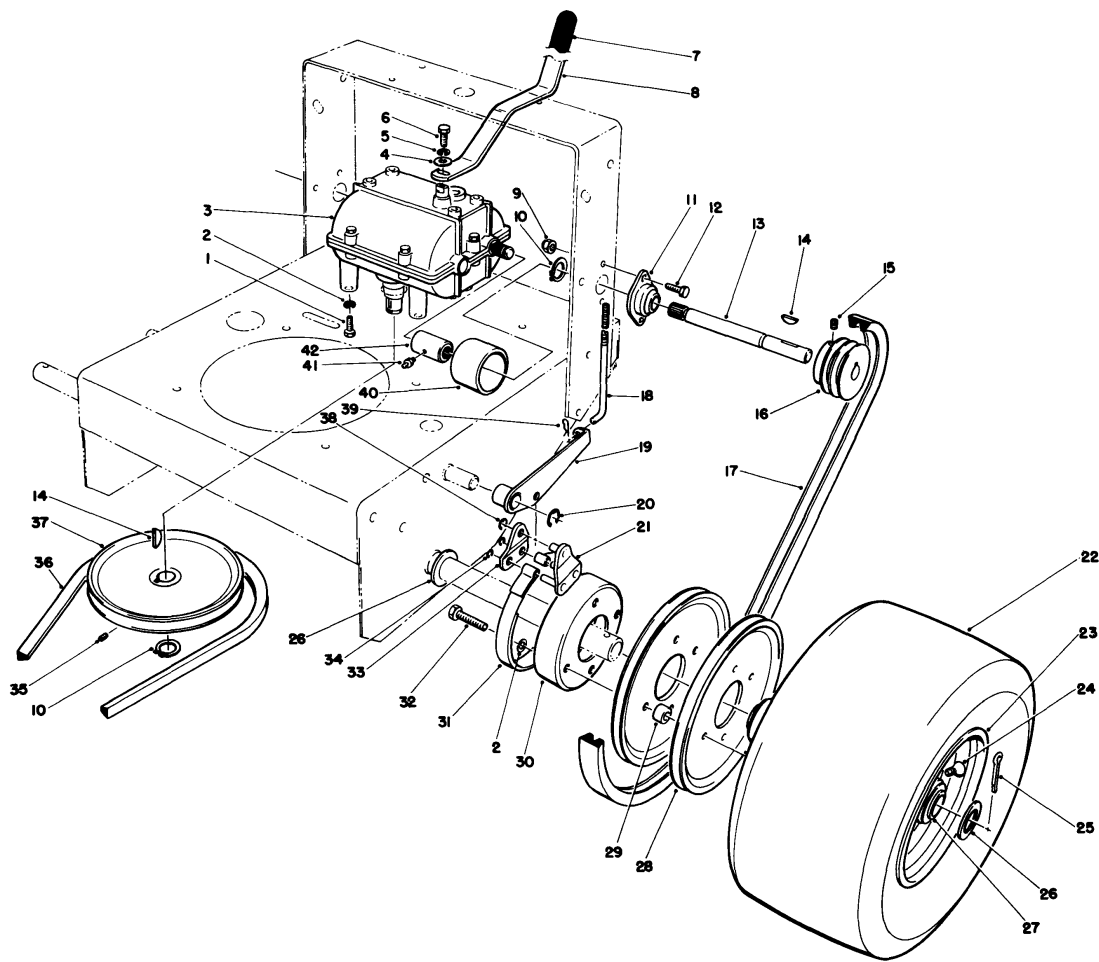


Axle Assembly

Ref.	Part Number	Qty.	Description
1	322-2	4	Screw-HH
2	3253-4	12	Washer-Lock
3	51-4090	1	Transmission
4	7-5461	1	Spacer
5	3253-3	1	Washer-Lock
6	329-4	1	Screw-HH
7	47-1970	1	Grip
8	51-4150	1	Lever-Shift
9	3296-42	4	Nut-Lock, NI
10	32120-64	3	Ring-Snap, External
11	51-4270	2	Bearing-External Shaft
12	321-4	4	Screw-HH
13	51-4240	1	Shaft-Extension, RH ●
13	51-4250	1	Shaft-Extension, LH
14	3257-41	3	Key-Woodruff
15	3246-6	2	Screw-Set, HSH
16	51-4280	2	Pulley-Drive
17	51-4290	2	V-Belt
18	51-4580	2	Rod-Brake
19	51-4610	1	Brake Arm-LH
19	51-4600	1	Brake Arm-RH ●
20	32151-40	2	Ring-Retaining

Ref.	Part Number	Qty.	Description
21	51-4650	2	Link-Brake
22	231-111	2	Tire
23	242-73	2	Rim
24	232-27	2	Stem-Valve
25	3272-30	2	Pin-Cotter
26	51-4230	4	Washer-Wheel
27	251-299	2	Bearing-Wheel
28	51-4160	4	Pulley-Wheel
29	51-4170	8	Spacer-Pulley
30	51-4180	2	Drum-Brake
31	51-4700	2	Band-Brake
32	322-7	8	Screw-HH
33	51-4660	2	Plate-Link
34	32151-72	4	Ring-Retaining
35	3245-1	1	Screw-Set, HSH
36	26-9670	1	V-Belt
37	51-4190	1	Pulley-Driven
38	32151-56	2	Ring-Retaining, External
39	3290-307	2	Pin-Hair
40	51-4220	2	Guard-Coupler
41	302-58	2	Fitting-Straight
42	51-4260	2	Coupler


● Not illustrated

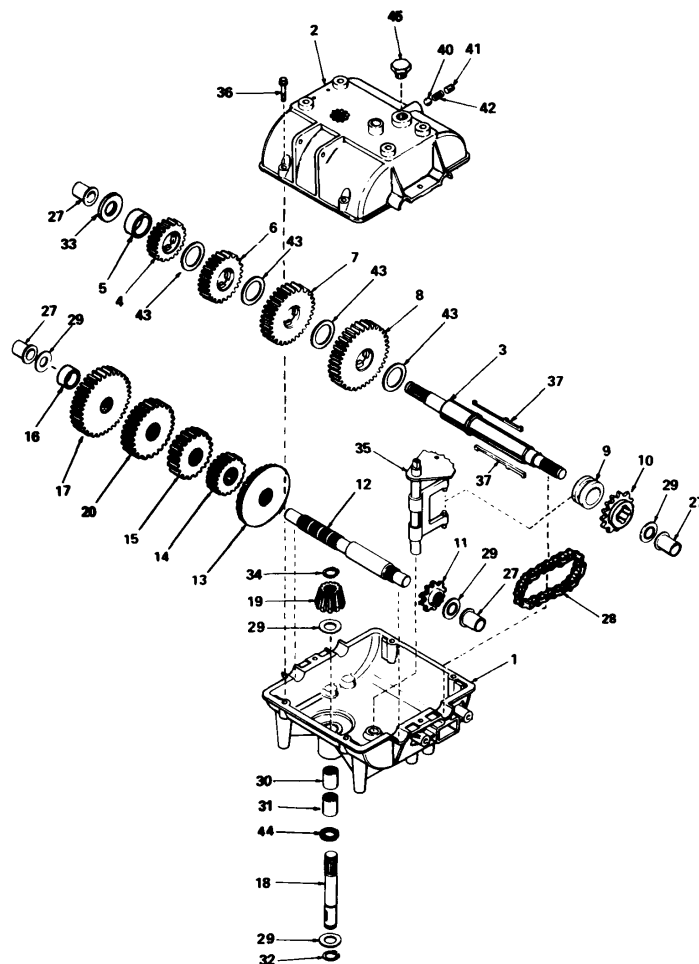

Peerless Transmission Model No. 787


Ref.	Part Number	Qty.	Description
1	770061	1	Case-Transmission
2	772083	1	Cover-Transmission
3	776217	1	Shaft-Output
4	778123A	1	Gear-Spur, 25 Teeth
5	786072	1	Spacer
6	778124A	1	Gear-Spur, 30 Teeth
7	778125	1	Gear-Spur, 35 Teeth
8	778146A	1	Gear-Spur, 37 Teeth
9	784266	1	Collar-Shift
10	786083	1	Sprocket-18 Teeth
11	786082	1	Sprocket-9 Teeth
12	776134	1	Countershaft
13	778154	1	Gear-Bevel, 42 Teeth
14	778145	1	Gear-Spur, 12 Teeth
15	778151	1	Gear-Spur, 15 Teeth
16	786071	1	Spacer
17	778127A	1	Gear-Spur, 25 Teeth
18	776135	1	Shaft-Input
19	778153	1	Bevel Pinion-Input

Ref.	Part Number	Qty.	Description
20	778126A	1	Gear-Spur, 20 Teeth
27	780105A	1	Bushing-Flange
28	786081	1	Chain-Roller #41
29	780072	1	Washer
30	780086	1	Bearing-Needle
31	780142	1	Bearing-Needle
32	792035	1	Ring-Snap
33	780139	1	Washer
34	788040	1	Ring-Retainer
35	784267	1	Rod And Fork ASM
36	792073	1	Ring Set (.020 O S)
37	792089A	1	Key
40	792077	1	Ball-Steel
41	792078	1	Screw-Set
42	792079	1	Spring
43	780108	1	Washer
44	792001	1	O Ring
45	792074	1	Plug

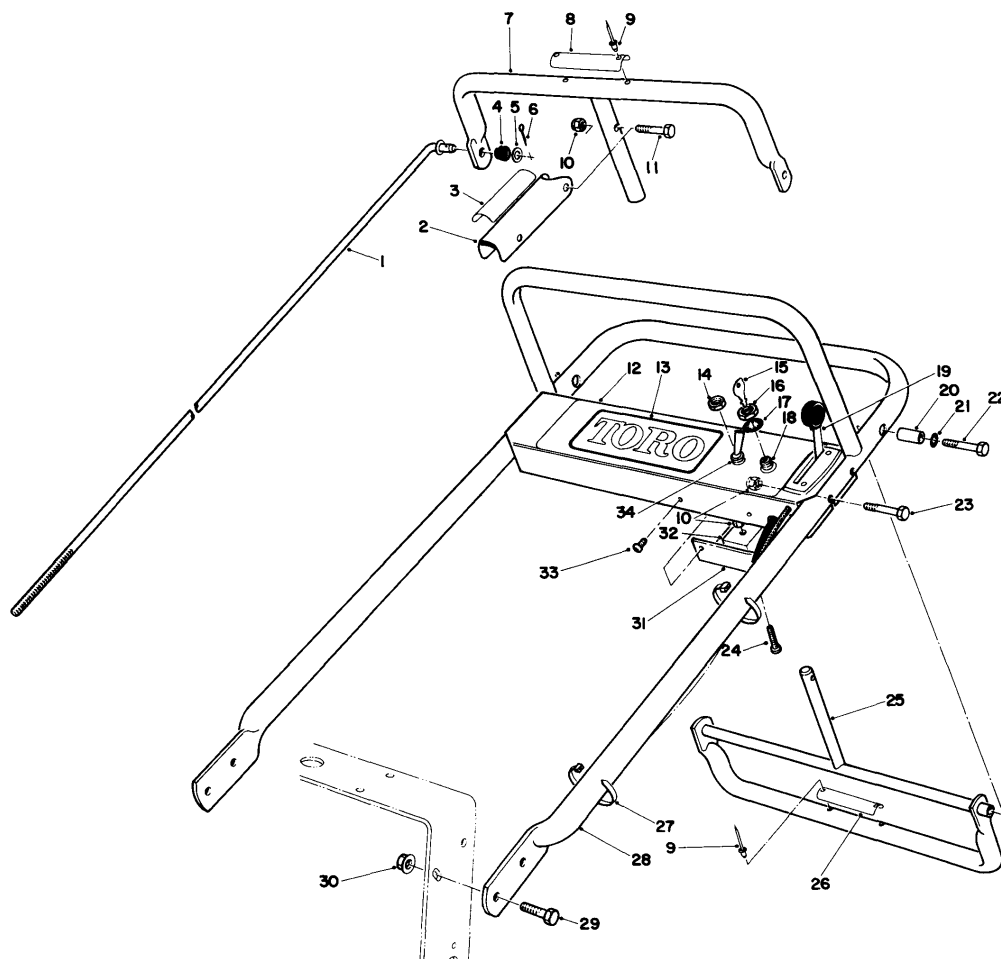

Handle Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	54-3070	2	Rod-Control	19	51-4820	1	Throttle-Control
2	51-4850	1	Lever-Parking Brake	20	51-4790	2	Pivot-Spacer
3	52-2010	1	Decal-Lever, Parking	21	3253-21	2	Washer-Lock
4	237-141	2	Grommet-Rubber	22	323-10	2	Screw-HH
5	3256-23	2	Washer-Flat	23	32105-14	4	Screw-SHH
6	3272-4	2	Pin-Cotter	24	32105-13	1	Screw-HWH
7	51-4730	1	Bar-Control	25	51-4760	1	Control-Pivot
8	54-2740	1	Decal-Control Bar	26	52-2120	1	Decal-Reverse Handle
9	3290-54	4	Rivet-Pop	27	3290-379	2	Tie-Cable
10	3296-2	6	Nut-Lock, NI	28	51-4550	1	Handle-Upper
11	32105-1	1	Screw-SHH	29	3234-11	4	Screw-HHF
12	54-2860	1	Panel-Control	30	32128-21	4	Nut-HF
13	57-6310	1	Decal-Control Panel	31	57-5810	1	Panel-Bottom
14	218-500	1	Nut	32	29-6050	1	Bridge Rectifier
15	218-412	1	Key	33	32104-76	4	Screw
16	218-461	1	Nut-HH	34	37-2610	1	Switch-Clutch (Incl. Ref. #14)
17	3254-5	1	Washer-Tooth, Internal				
18	29-5560	1	Switch (Incl. Ref. # 18 & 19)				

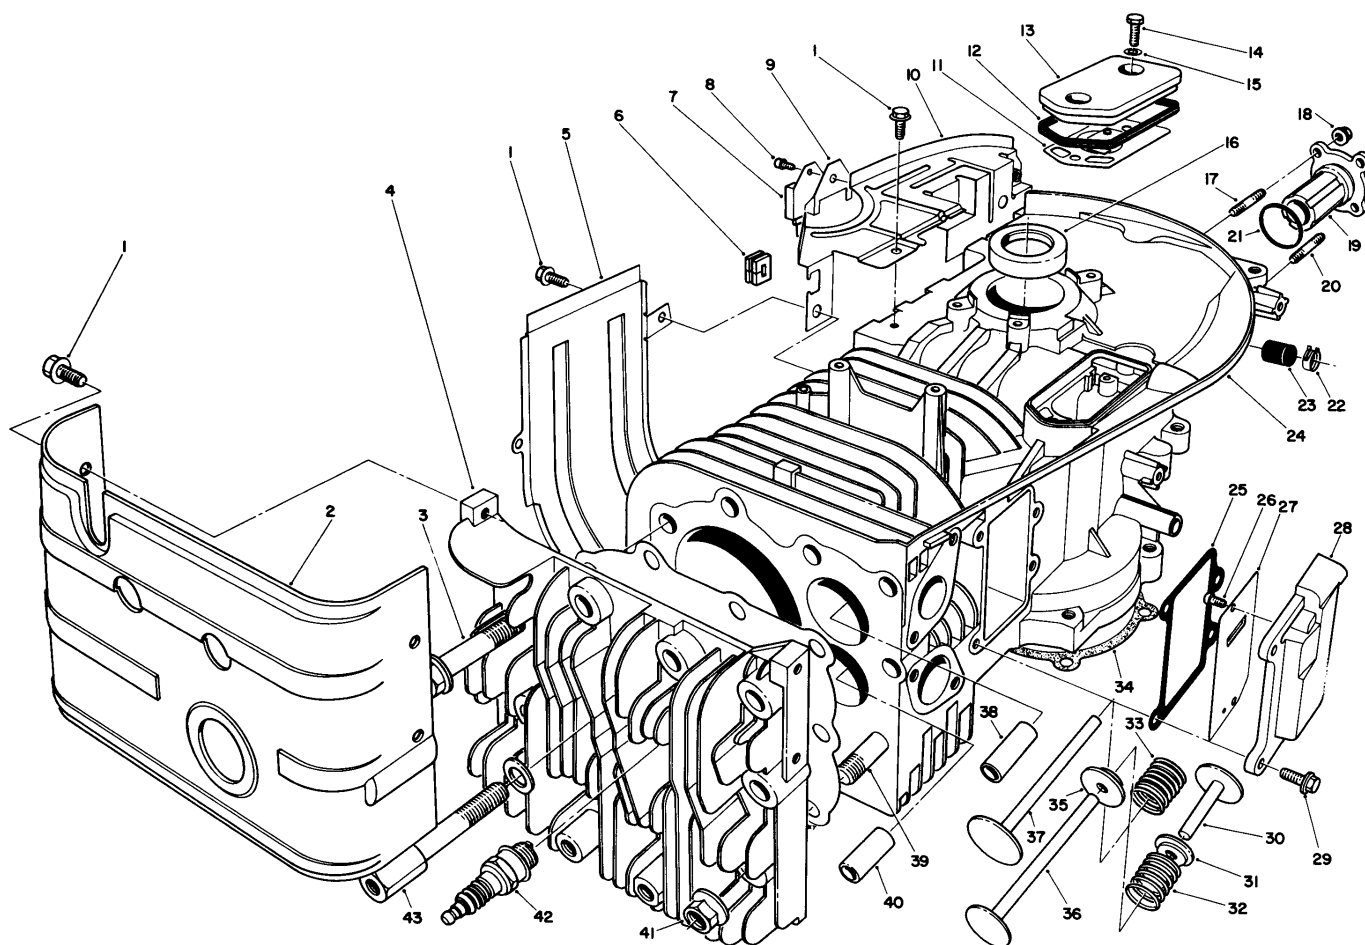

Engine Assembly

Ref.	Part Number	Qty.	Description
1	130B0610	9	Bolt-Flanged (6X10)
2	49089-2181-9H	1	Shroud
3	130G1055	4	Bolt
4	11001-2076	1	Head-Cylinder
5	49089-2169-9H	1	Shroud
6		6	Grommet
7	21119-2092	1	Igniter
8	233B0408	1	Screw
9	310702-8137A	1	Bracket
10	59066-2238-9H	1	Housing-Fan
11	14069-2062	1	Breather
12	11009-2339	1	Gasket
13	14025-2040	1	Cover
14	315501-5381A	2	Bolt
15	312200-7415-02	2	Gasket
16	92049-2096	1	Oil Seal
17	171G0612	2	Stud
18	92015-1193	4	Nut
19	13107-2082	1	Shaft
20	92004-2083	2	Stud
21	92055-2062	1	O-Ring
22	317196-6812-00	1	Clip

Ref.	Part Number	Qty.	Description
23	92066-2096	1	Plug
24	49120-6001	1	Crankcase Assembly
25	11009-2338	1	Gasket
26	314405-3092A	2	Screw
27	14025-2143	1	Cover
28	49108-2011	1	Cover-Valve Chamber
29	130G0616	4	Bolt-Flanged (6X16)
30	12032-2058	2	Tappet
31	39108-2054	2	Retainer-Spring
32	49078-2058	1	Spring-Valve
33	49078-2059	1	Spring-Valve
34	11009-2337	1	Gasket
35	12039-2052	1	Rotator
36	12005-2065	1	Valve-Exhaust
37	120042072	1	Valve-Intake
38	49002-2012	1	Guide-Valve Intake
39	92004-2082	3	Stud
40	49002-2013	1	Guide-Valve Exhaust
41	92015-2115	3	Nut
42	92070-2072	1	Spark Plug
43	92002-2258	2	Bolt

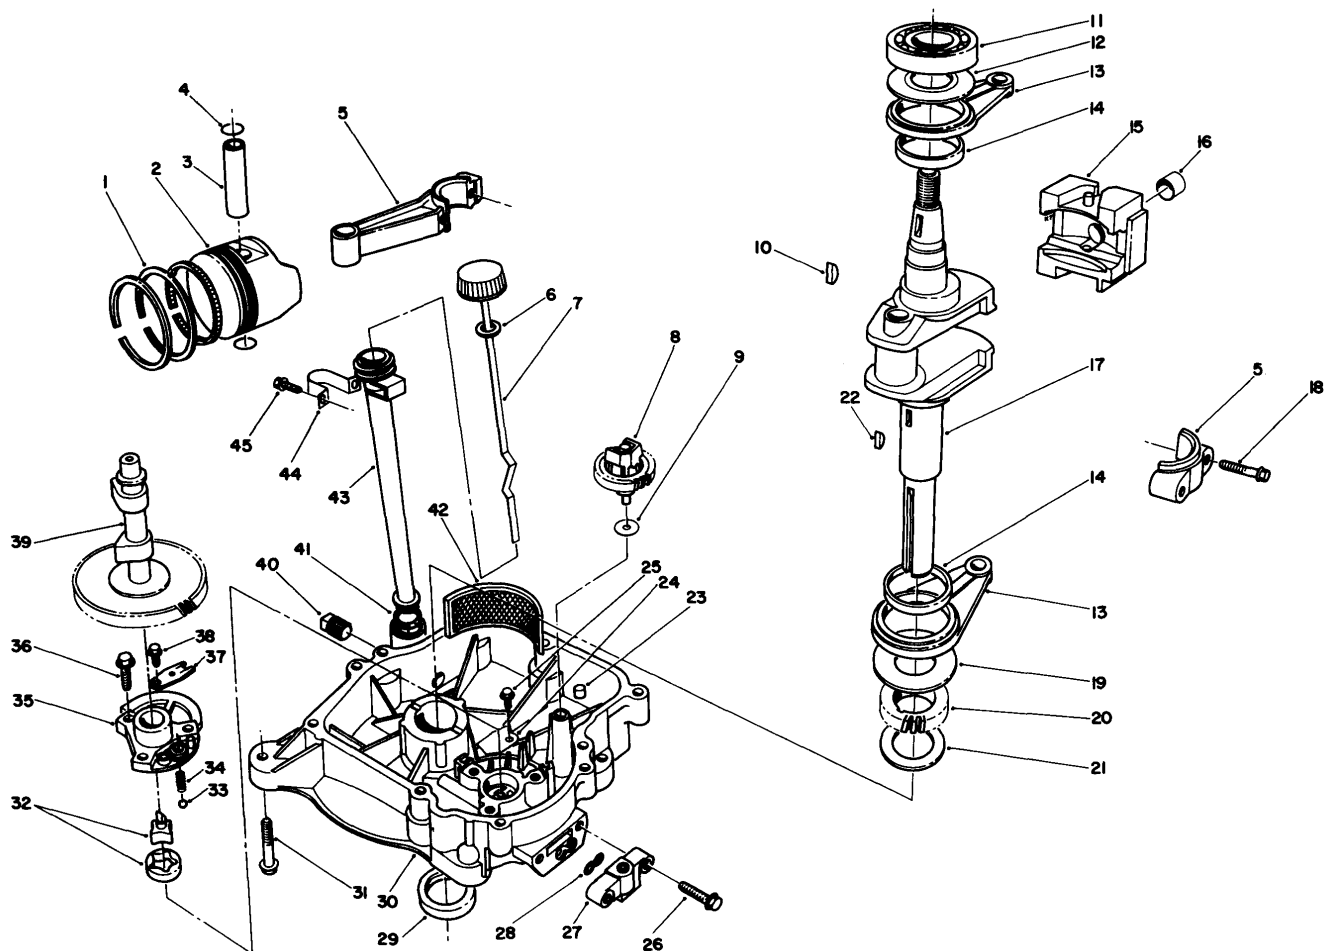


Crankcase Assembly

Ref.	Part Number	Qty.	Description
1	13008-6001	1	Piston Ring Set
	13008-6002	0	Set-Ring Piston 0.25 ●
	13008-6003	0	Set-Ring Piston 0.50 ●
	13008-6004	0	Piston Rin Set (.75Mm) ●
2	13001-2084	1	Piston
	13029-2019	0	Piston 0.25 ●
	13029-2020	0	Piston 0.50 ●
	13027-2001	0	Piston (.75Mm) ●
3	13002-2066	1	Pin-Piston
4	92033-2066	2	Ring-Snap
5	13251-6005	1	Rod ASM Incl #10 11
	13251-6007	0	Rod ASM Incl #10 110.50 ●
6	11009-2346	1	Gasket
7	52005-2058	1	Gauge
	49110-2067	1	Governor ASM ●
9	314401-5135A	1	Washer
10	510A5100	1	Key-Woodruff
11	601A6207	1	Ball Bearing
12	92026-2150	1	Spacer
13	46102-6001	2	Rod Assembly
14	92141-2088	2	Bushing
15	13042-6001	1	Weight
16	92141-2007	1	Bushing
17	49119-2106	1	Crankshaft
18	315801-3245A	2	Bolt

Ref.	Part Number	Qty.	Description
19	92026-2156	1	Spacer
20	59056-2018	1	Gear
21	92025-2145	0	Shim (1.18)
	92025-2146	0	Shim (1.25) ●
	92025-2147	0	Shim (1.32) ●
	92025-2148	0	Shim (1.39) ●
	92025-2149	0	Shim (1.46) ●
	92025-2150	0	Shim (1.53) ●
	92025-2151	0	Shim (1.60) ●
	92025-2152	0	Shim (1.67) ●
	92025-2153	0	Shim (1.74) ●
22	510A5100	1	Key-Woodruff
23	551A0814	2	Pin-Dowel
24	13169-2359	1	Plate
25	130B0508	1	Bolt
26	130B0830	2	Bolt
27	14025-2145	1	Cover
28	92055-2063	1	Seal
29	92049-2095	1	Seal-Oil
30	49015-6001	1	Gasket
31	130G0825	4	Bolt-Flanged (8X25)
32	16082-2057	1	Pump ASM-Oil
33	600A1000	1	Ball
34	92081-2216	1	Spring
35	16142-6001	1	Cover-Pump

● Not Illustrated.

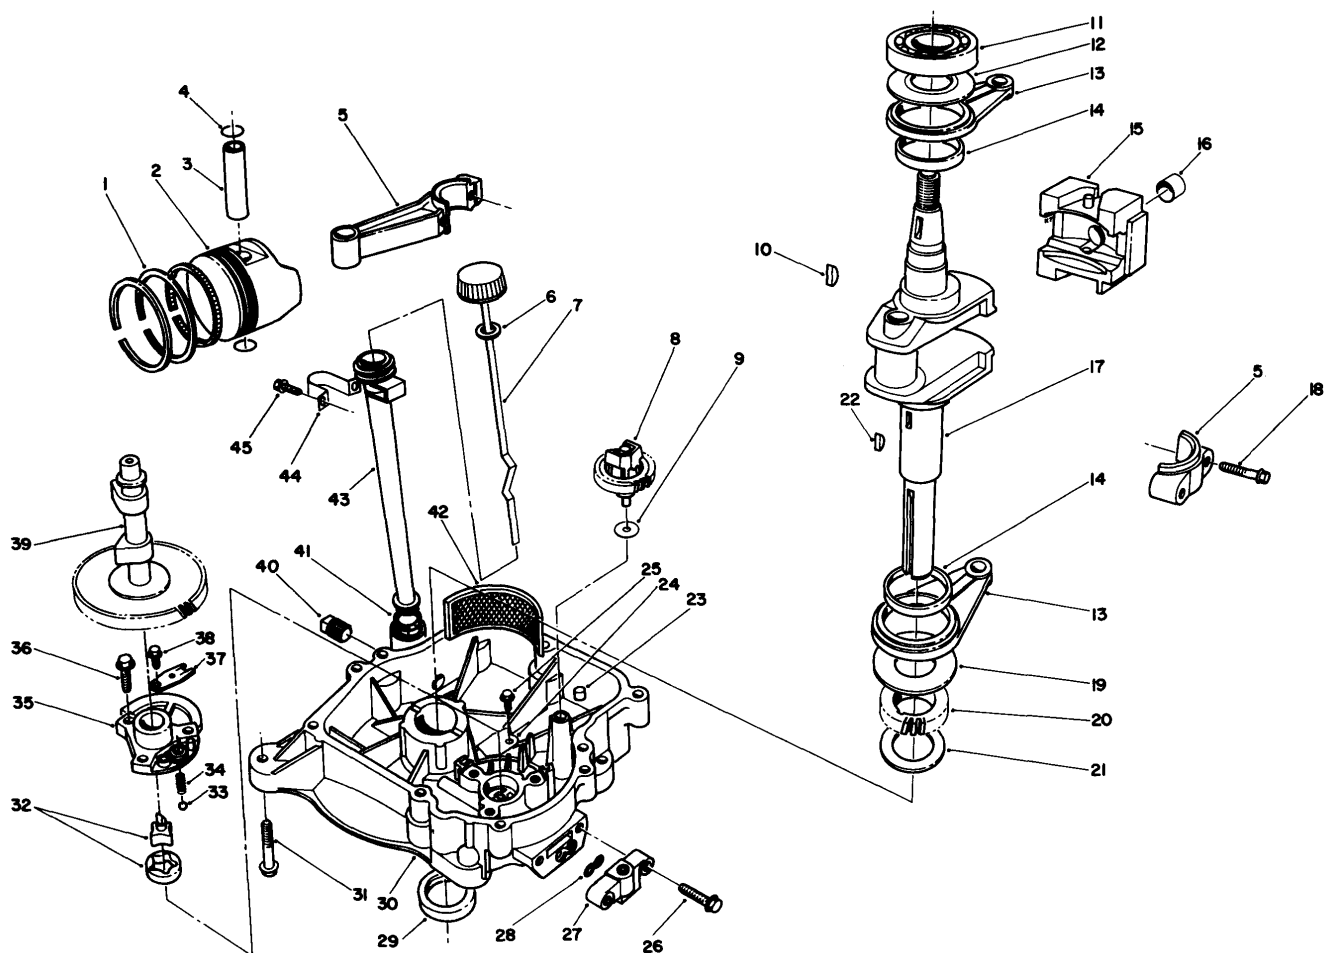


Crankcase Assembly (continued)

Ref.	Part Number	Qty.	Description
36	130G0825	3	Bolt-Flanged (8X25)
37	13169-2360	1	Plate
38	130B0610	1	Bolt-Flanged (6X10)
39	120442109	1	Camshaft
40		1	Drain Plug


Ref.	Part Number	Qty.	Description
41	670D2016	1	O-Ring (16Mm)
42	49065-2056	1	Filter-Oil
43	59231-2059	1	Filler
44	92037-2160-9H	1	Clamp
45	233B0508	1	Screw

● Not Illustrated.

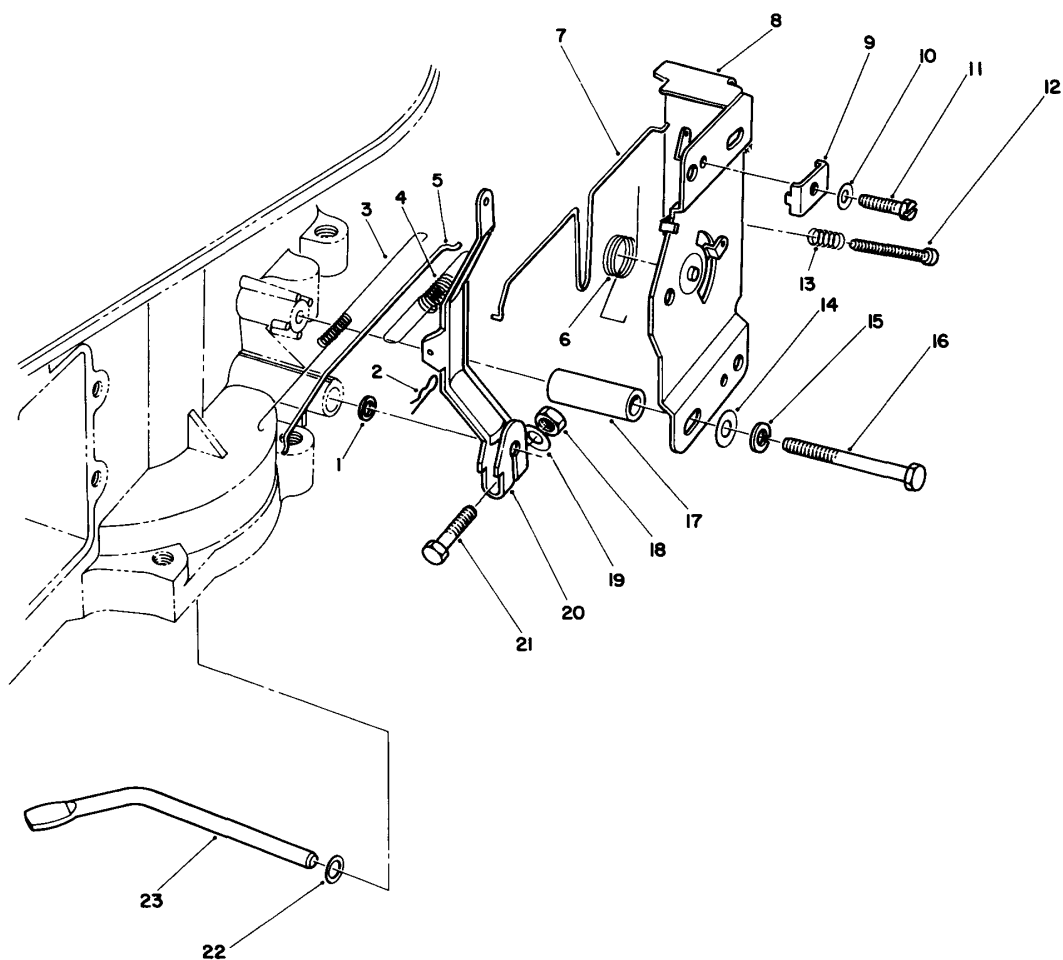

Governor Assembly


Ref.	Part Number	Qty.	Description
1	92049-2097	1	Seal-Oil (Vc6X10X2.6)
2	554A0600	1	Pin-Snap (1.2 X 21.2)
3	92081-2213	1	Spring
4	92081-2214	1	Spring
5	16171-2001	1	Link
6	92081-2073	1	Spring
7	16169-2074	1	Link-Choke
8	49113-2056	1	Control Panel Assembly
9	92037-2020	1	Clamp
10	411B0500	1	Washer
11	315501-5381A	1	Bolt
12	214b0425	1	Screw
13	314401-5321B	1	Spring
14	311509-3595-00	2	Washer
15	461F0600A	2	Lockwasher
16	112B0650	2	Bolt
17	92027-2071	2	Collar
18	311B0600	1	Nut-Hex (6Mm)
19	411B0600	1	Washer-Plain (6Mm)
20	21187-2001	1	Arm-Governor
21	110B0625	1	Bolt
22	410B0600	1	Washer
23	39003-2062	1	Arm-Pivot

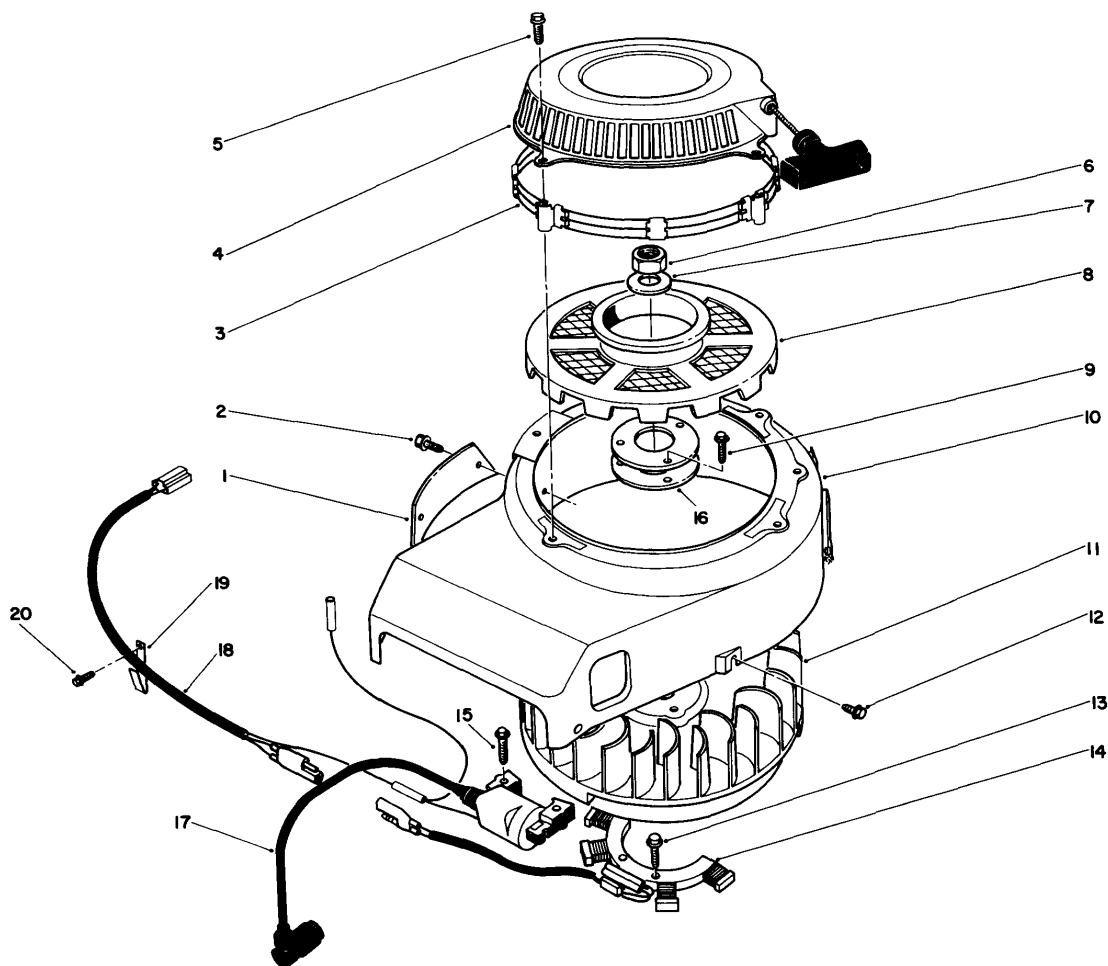

Recoil and Flywheel Assembly

Ref.	Part Number	Qty.	Description
1	14025-2165-9H	1	Cover
2	241B0406	2	Screw
3	55020-2054	1	Guard
4	49088-2212-9H	1	Recoil Starter ASM
5	130B0635	4	Bolt-Flanged (6X35)
6	314G1800	1	Nut
7	92022-2178	1	Washer
8	49080-2101-9H	1	Pulley
9	130G0812	3	Bolt-Flanged (8X12)
10	59066-2238-9H	1	Housing-Fan
11	211942111	1	Flywheel
12	130B0610	2	Bolt-Flanged (6X10)
13	242B0620	2	Screw
14		1	Coil-Charging ●
15	130B0525	2	Bolt
16	92025-2161	0	Shim
17	21121-2008	1	Coil
18		1	Wire Harness ●
19	311901-8161A	1	Clamp
20	233B0408	2	Screw


● Not serviced separately

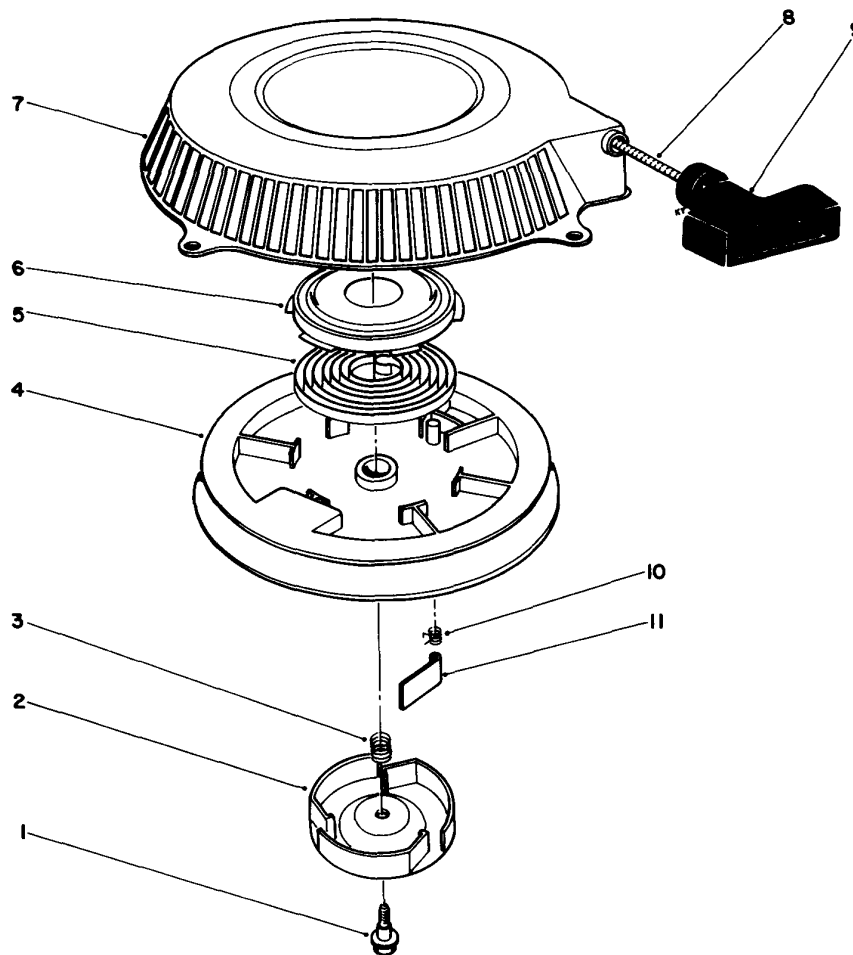

Recoil Assembly


Ref.	Part Number	Qty.	Description
1	314501-3447A	1	Bolt
2	14020-2054	1	Retainer
3	92081-2268	1	Spring
4	59101-2054	1	Reel
5	92081-2267	1	Spring
6	32099-2060	1	Case
7	32099-2059-9H	1	Case
8	59106-2060	1	Rope
9	46075-2059	1	Grip
10	314401-3444A	1	Spring-Return
11	13165-2057	1	Pawl
	49088-2212-9H	1	Recoil Starter ASM ●

● Not Illustrated.

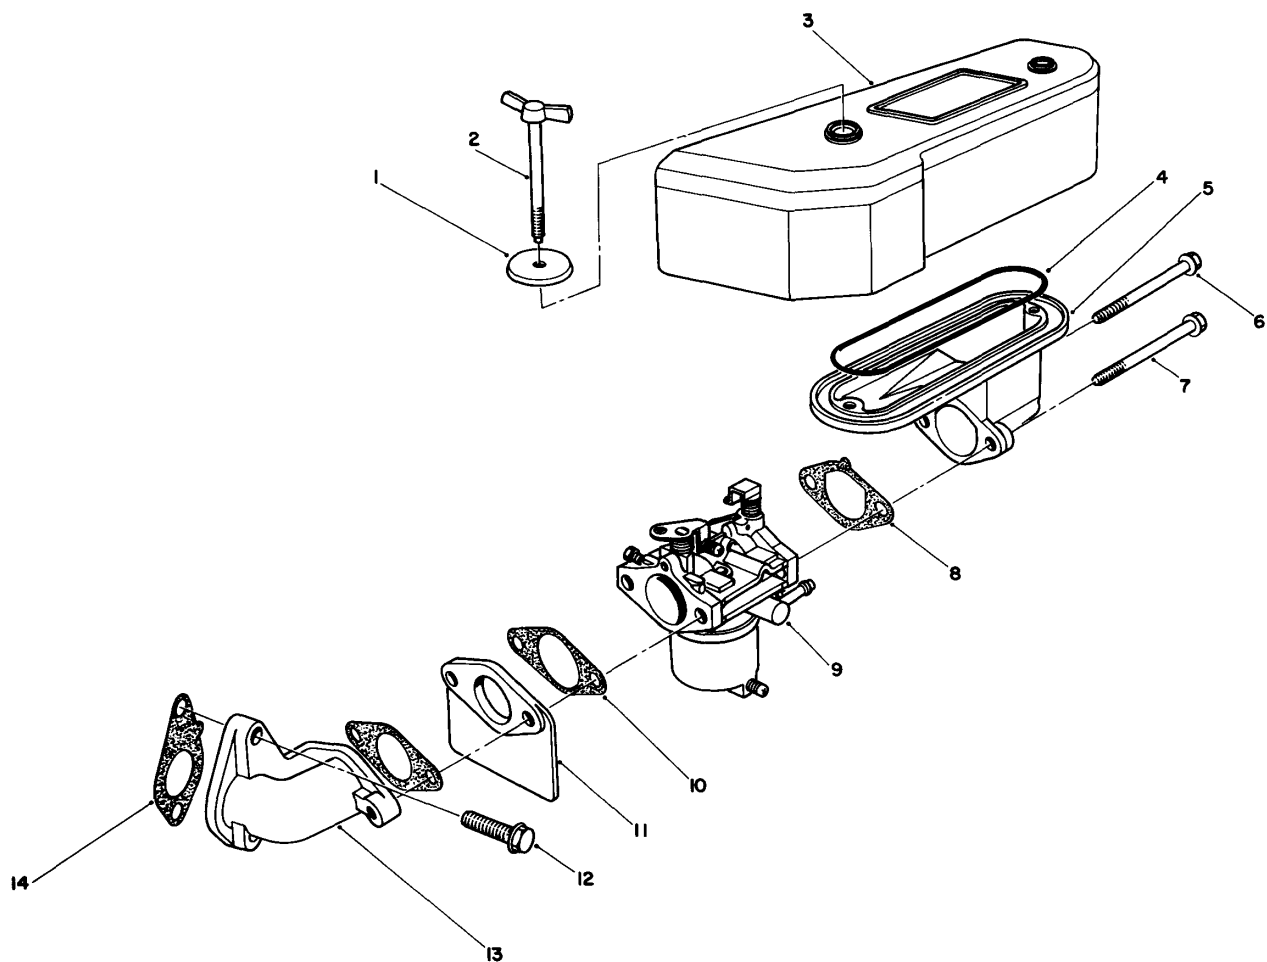

Air Cleaner and Carburetor Assembly

Ref.	Part Number	Qty.	Description
1	92022-2179	2	Washer
2	92002-2230	2	Bolt
3	11010-2222	1	Air Cleaner ASM
4	11009-2340	1	Gasket
5	16060-2108	1	Pipe-Intake
6	92002-2254	1	Bolt
7	92002-2253	1	Bolt
8	11009-2344	1	Gasket
9	15001-2366	1	Carburetor ASM
10	11009-2343	2	Gasket
11	16073-2091	1	Insulator
12	130G0825	2	Bolt-Flanged (8X25)
13	16060-2109	1	Pipe-Intake
14	11009-2342	1	Gasket

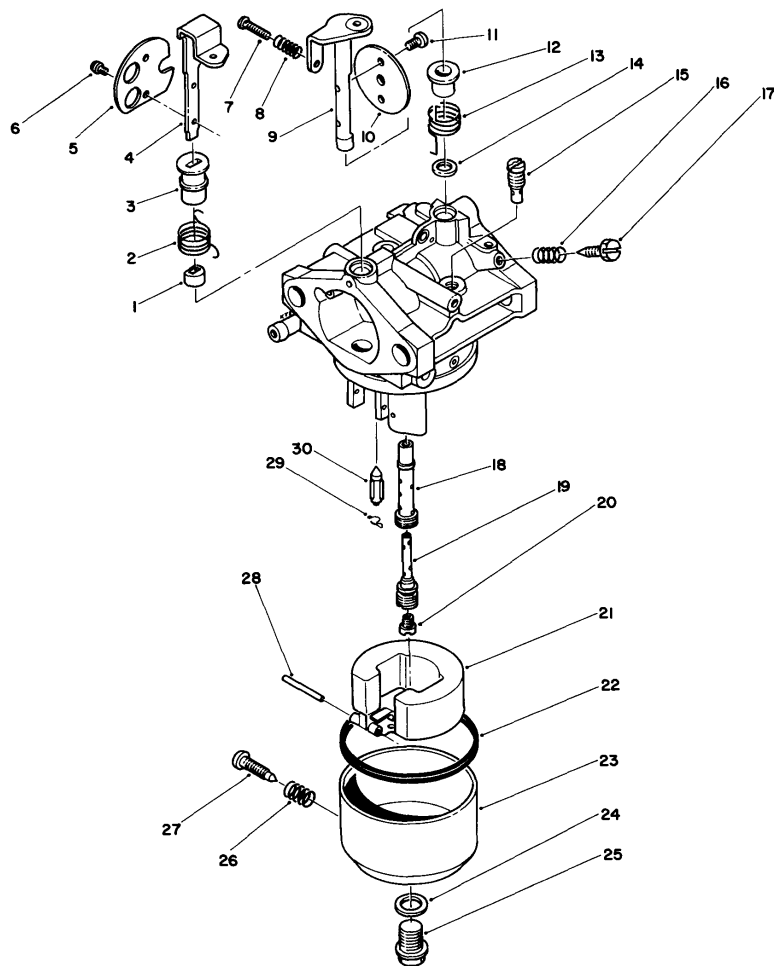


Carburetor Assembly

Ref.	Part Number	Qty.	Description
1	314598-6138A	1	Ring
2	92081-2078	1	Spring
3	92027-2026	1	Ring
4	16041-2010	1	Shaft-Choke
5	16126-2011	1	Valve-Choke
6	314572-6137A	2	Screw
7	92009-2079	1	Screw
8	313650-6108-00	1	Spring
9	16041-2009	1	Shaft-Throttle
10	16025-2005	1	Valve-Throttle
11	316550-6137A	2	Screw
12	92027-2025	1	Collar
13	92081-2077	1	Spring
14	316626-6206A	1	Seal
15	317490-6112-00	1	Jet
16	312750-6116-00	1	Spring

Ref.	Part Number	Qty.	Description
17	314V1-6114A	1	Screw-Adjustment
18	49121-2010	1	Nozzle
19	49123-2016	1	Pipe-Bleed
20	92063-2010	1	Jet
21	315801-6126A	1	Float
22	313650-6128-00	1	Gasket
23	315823-6130A	1	Chamber-Float
24	318190-6159-00	1	Washer
25	314486-6143A	1	Bolt
26	313122-6116-00	1	Spring
27	315470-6133A	1	Screw
28	314499-6127A	1	Pin
29	314595-6134A	1	Clip
30	16030-2021	1	Valve-Needle
	15001-2366	1	Carburetor ASM ●


● Not Illustrated.

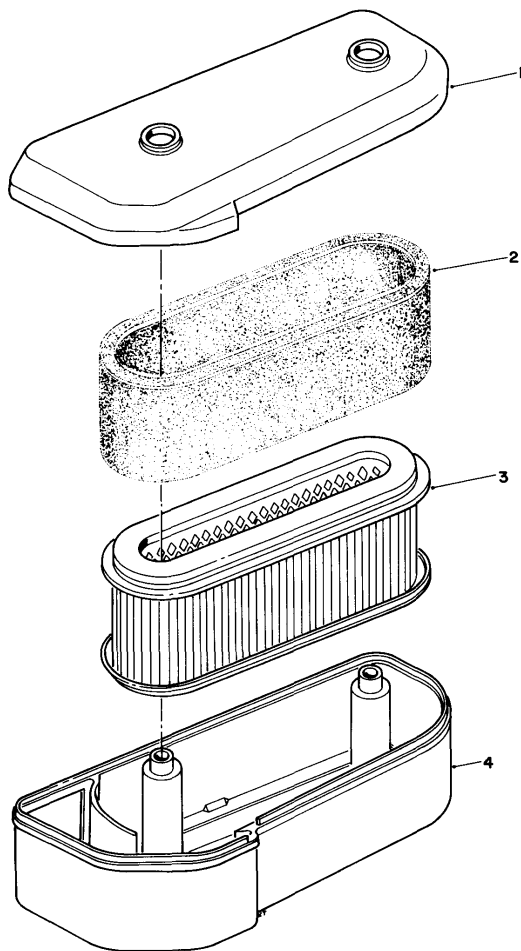

Air Cleaner Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	11012-2083	1	Cap-Air Cleaner
2	11013-2020	1	Element
3	11013-2021	1	Element
4	11011-2016	1	Case-Air Cleaner
	11010-2222	1	Air Cleaner ASM ●

● Not Illustrated.

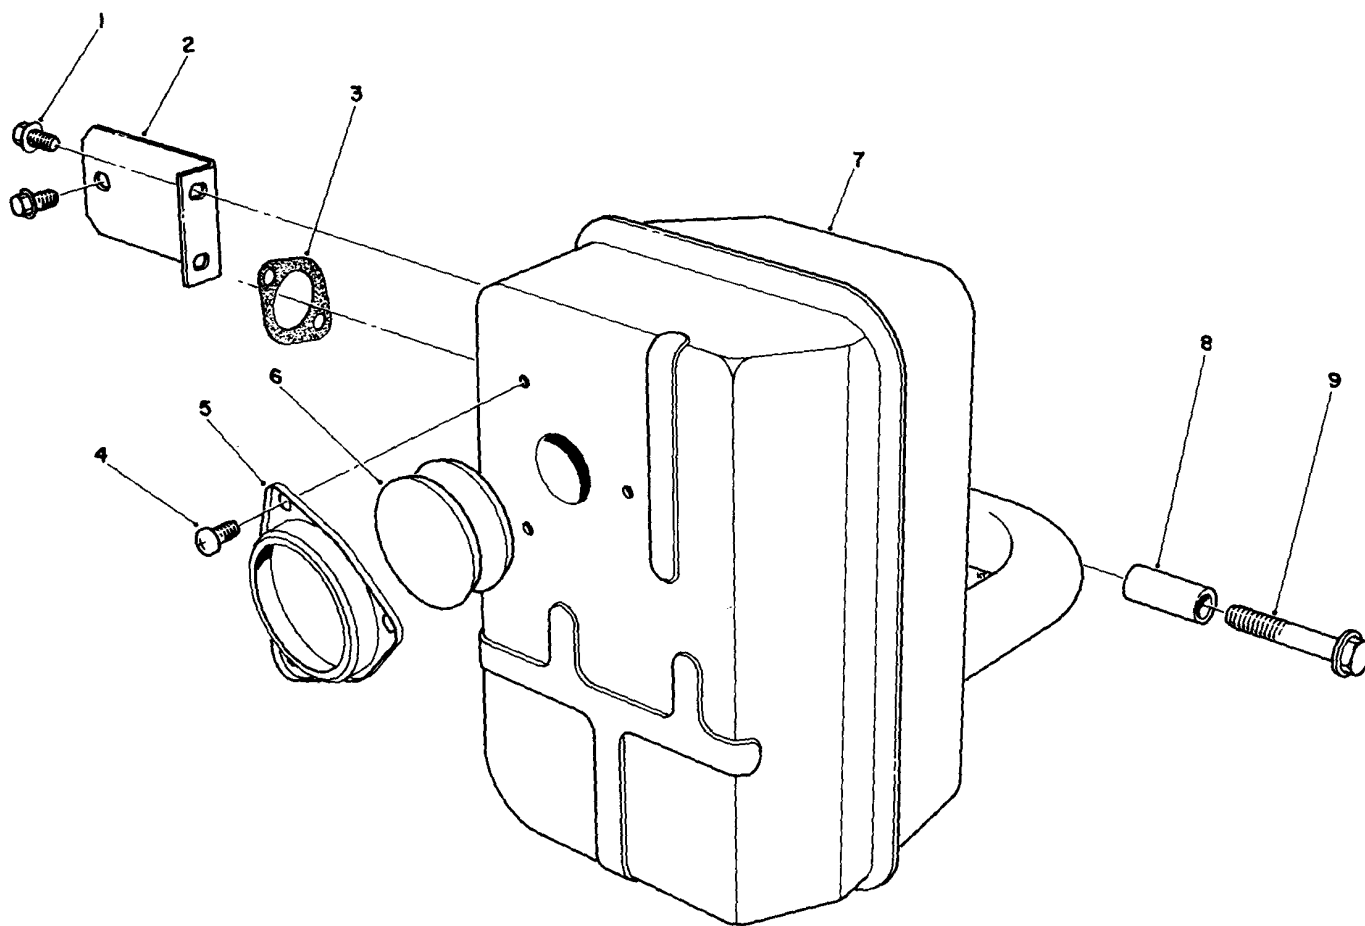

Muffler Assembly

Ref.	Part Number	Qty.	Description
1	130G0812	4	Bolt-Flanged (8X12)
2	11044-2069-9Y	1	Bracket
3	11009-2378	1	Gasket
4	92009-2166	3	Screw
5	11012-2165-9Y	1	Cap
6	18077-2052	2	Arrester-Spark
7	49069-2096-9Y	1	Muffler Assembly
8	92027-2081	2	Collar
9	130G0845	2	Bolt-Flanged (8X45)

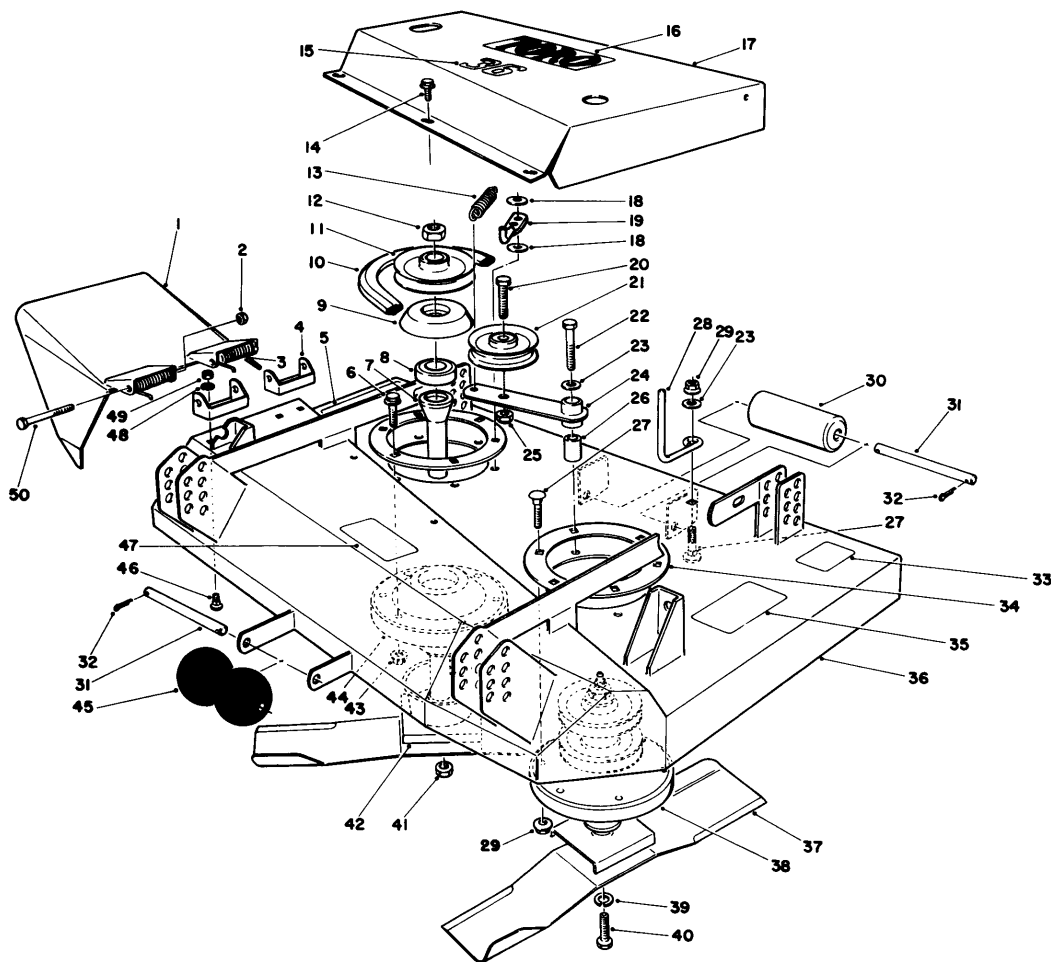


36 Inch Cutting Deck Model No. 30136

Ref.	Part Number	Qty.	Description
1	51-3670	1	Deflector-Grass
2	3296-5	2	Nut-Lock
3	40-6230	2	Spring
4	29-5590	2	Bracket-Pivot
5	26-7980	1	Decal-Caution, Deflector
6	3234-17	6	Screw-HHF
7	40-6320	1	Spacer-Grease Shield
8	40-6340	1	Bearing
9	39-7690	1	Cover-Dust
10	51-3530	1	V-Belt-Drive, Deck
11	51-3520	1	Pulley And Hub ASM
12	32146-19	1	Locknut
13	51-3650	1	Spring-Extension
14	46-8560	6	Screw-HHFTF
15	51-3730	1	Decal-36 Inch
16	43-5120	1	Decal-Toro
17	51-3690	1	Cover-Deck
18	3256-2	2	Washer-Flat
19	57-3880	1	Rod-Spring
20	3211-5	1	Screw-HH
21	51-3660	1	Pulley-Idler
22	323-11	1	Screw-HH
23	3256-24	4	Washer-Flat
24	51-3610	1	Arm-Idler, Deck
25	3296-5	1	Nut-Lock

Ref.	Part Number	Qty.	Description
26	51-3640	1	Sleeve
27	3231-22	7	Screw-CARR
28	52-4780	2	Rod-Belt
29	32128-21	8	Nut-HF
30	36-1740	1	Roller-Deck
31	40-6400	2	Shaft-Roller
32	3272-11	4	Pin-Cotter
33	42-6860	1	Decal
34	27-7680	2	Support-Deck, Ring
35	26-7970	1	Decal-Caution, Blade
36	51-3310	1	Deck
37	40-3760	2	Blade
38	54-7780	1	Spindle ASM
39	3253-23	1	Washer-Lock/Sp
40	51-4060	1	Screw-Blade
41	32146-19	1	Locknut
42	40-6310	1	Shaft And Saddle ASM
43	32128-20	6	Nut-HF
44	51-3510	1	Spindle ASM
45	29-4820	2	Roller
46	3230-18	4	Screw-CARR
47	26-7960	1	Decal-Caution
48	3253-4	4	Washer-Lock
49	3217-6	4	Nut-Hex


● Not illustrated

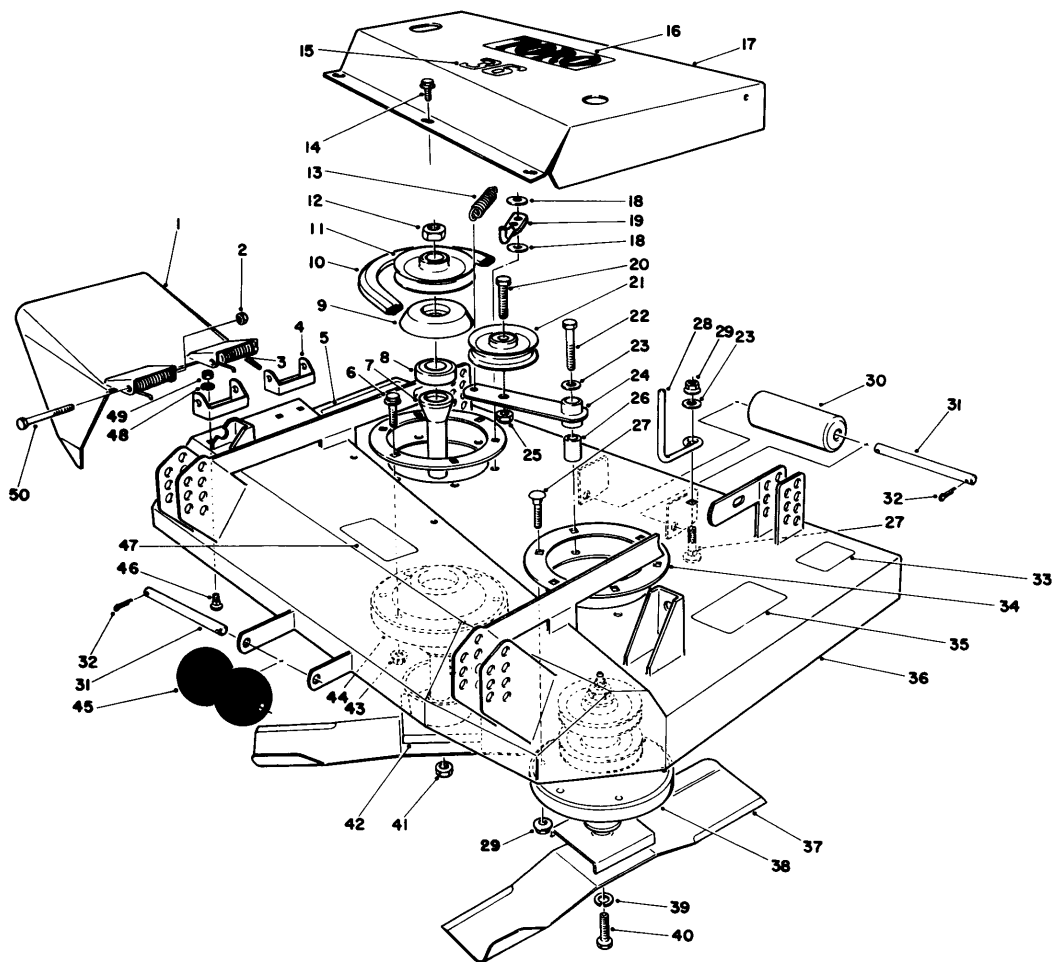

36 Inch Cutting Deck Model No. 30136 (continued)

Ref.	Part Number	Qty.	Description
50	3211-15	2	Screw-HH
	55-4210	1	Blade-18 Inch ●

● Not illustrated

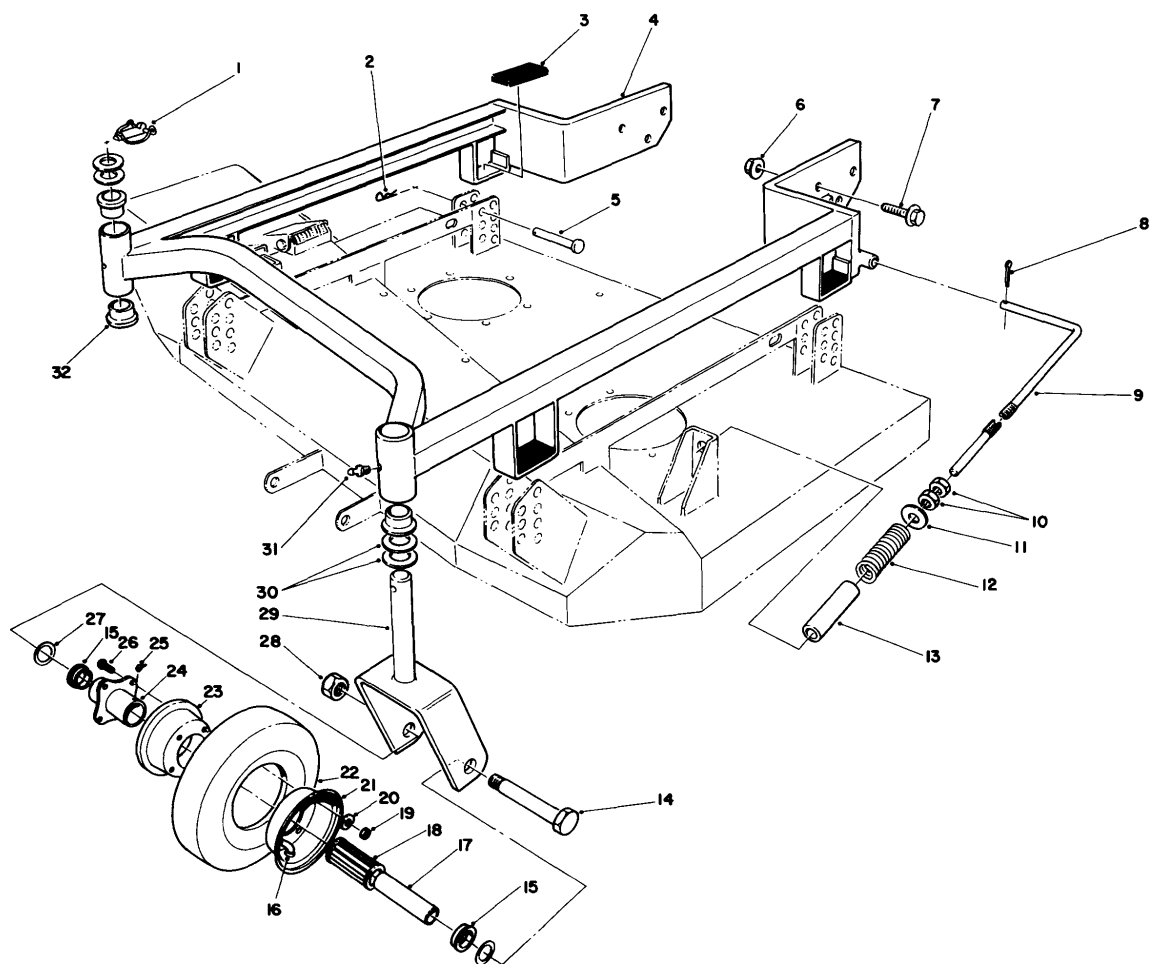


36 Inch Carrier Frame Model No. 30136

Ref.	Part Number	Qty.	Description
1	3290-384	2	Pin-Lynch
2	3290-355	4	Pin-Hair
3	51-3720	4	Cushion-Rubber
4	51-3740	1	Frame-Carrier (Incl. Ref. #32)
5	283-55	1	Pin-Clevis
6	32128-27	6	Nut-Lock, Flange
7	3234-6	6	Screw-HHF
8	3272-7	2	Pin-Cotter
9	51-3490	2	Adjusting Shaft
10	3218-5	4	Nut-Jam
11	51-3500	2	Washer
12	47-0960	2	Spring-Compression
13	51-3480	2	Sleeve-Tube, 36 Inch
14	328-9	2	Screw-HH
15	54-8840	4	Retainer
16	54-5880	2	Bolt-Stud


Ref.	Part Number	Qty.	Description
17	54-8860	2	Bushing-Spanner
18	54-8850	2	Bearing-Roller
19	3217-6	8	Nut-Hex
20	3253-4	8	Washer-Lock
21	54-8900	2	Wheel Half-Male
22	54-8870	2	Tire-8 Inch (4-Ply)
23	54-8910	2	Wheel Half-Female
24	54-8830	2	Hub-Centered
25	302-10	2	Fitting-Grease
26	54-8890	8	Bolt-Wheel
27	57-4250	4	Spacer-Wheel
28	32153-6	2	Nut-Lock
29	40-0370	2	Fork-Castor
30	3-6781	8	Washer-Thrust
31	302-5	2	Fitting-Grease
32	28-9290	4	Bushing
	12-1519	2	Wheel ●

● Not illustrated

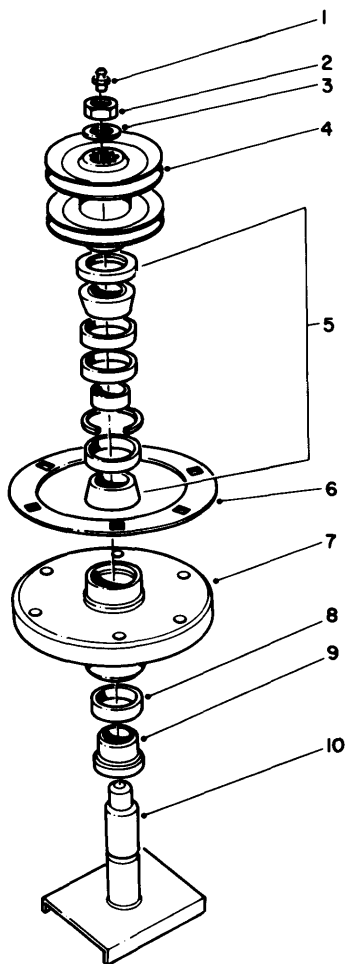

Drive Spindle No. 54-7780 Model 30136


Ref.	Part Number	Qty.	Description
1	302-2	1	Fitting-Grease
2	32146-20	1	Nut-Jam
3	7-4150	1	Washer
4	54-2980	1	Pulley & Hub Wa *b
5	46-8530	1	Bearing ASM
6	27-7680	1	Support-Deck, Ring
7	27-0880	1	Housing-Spindle
8	253-139	2	Seal-Oil
9	27-0950	1	Spacer
10	51-3550	1	Spdle Shaft Wa *b

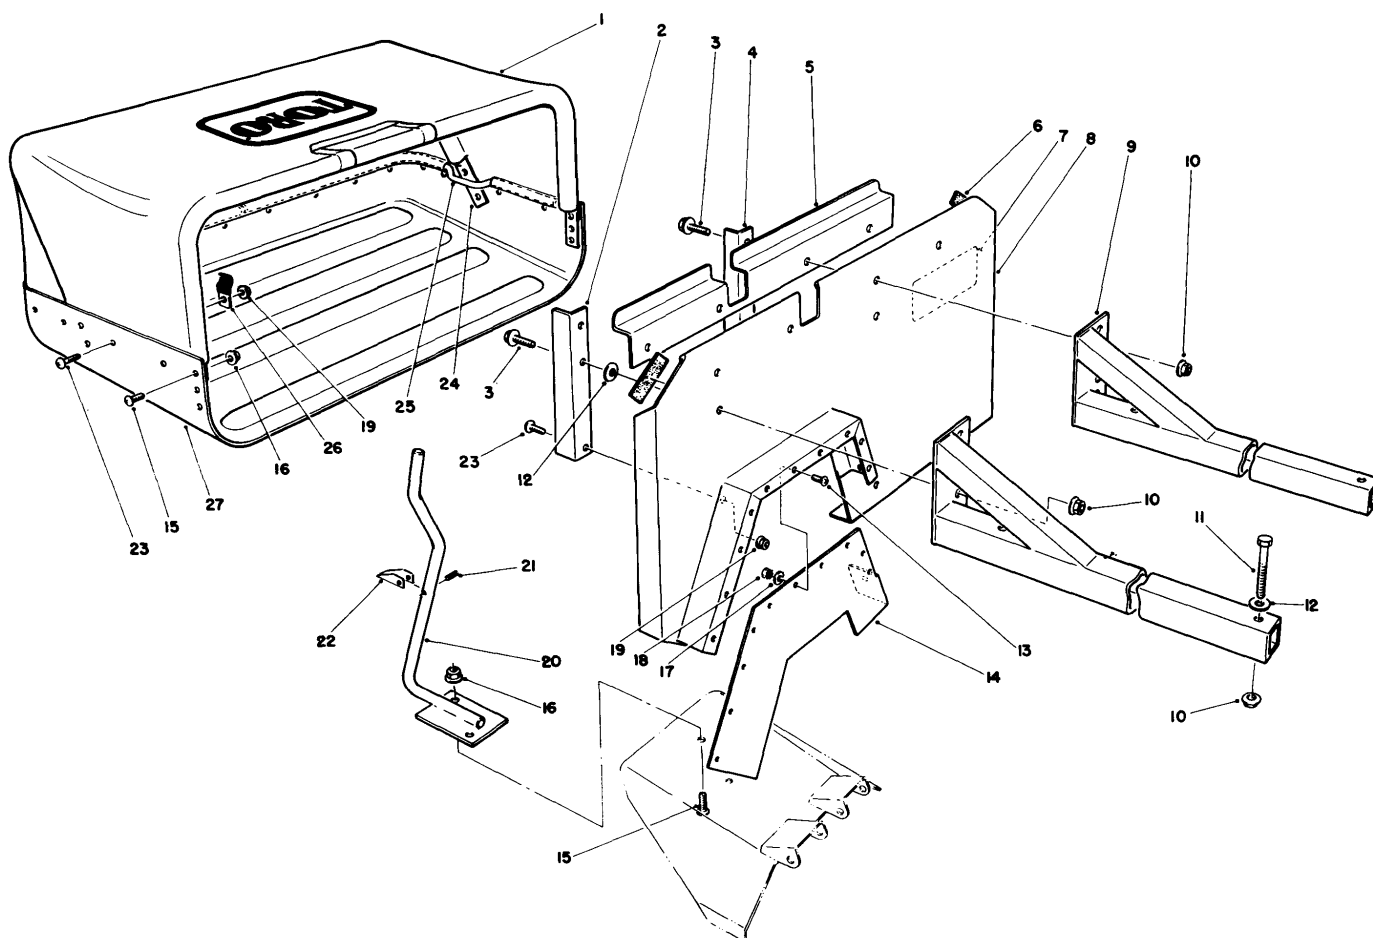

36 Inch Side Discharge Bagging Kit No. 30125 (Optional)

Ref.	Part Number	Qty.	Description
1	52-5280	1	Bag-Cloth
2	52-5310	1	Support-Panel, RH
3	3234-11	6	Screw-HHF
4	52-5320	1	Support-Panel
5	52-5290	1	Support-Bag Attachment
6	52-5260	2	Pad-Rubber
7	52-5370	1	Decal-Danger
8	52-5220	1	Panel-Back
9	52-5170	2	Mount-Beam
10	3290-357	10	Nut-HHF, Whiz
11	323-11	4	Screw-HH
12	3256-4	6	Washer-Flat
13	32104-122	11	Screw
14	52-5250	1	Extension-Rubber

Ref.	Part Number	Qty.	Description
15	32122-14	12	Screw-PPH
16	32128-20	12	Nut-HF
17	3256-49	11	Washer-Flat
18	32149-7	11	Nut-Keps
19	32128-10	18	Nut-Lock, HHF
20	52-5340	1	Rod-Lockup
21	32121-16	1	Pin-Spring
22	52-5300	1	Latch-Lockup
23	32122-42	18	Screw
24	52-5270	2	Tube-Bag Support
25	52-5330	2	Rod-Cloth
26	2412-90	16	Clip-Half
27	52-4620	1	Tray-Bag, Grass

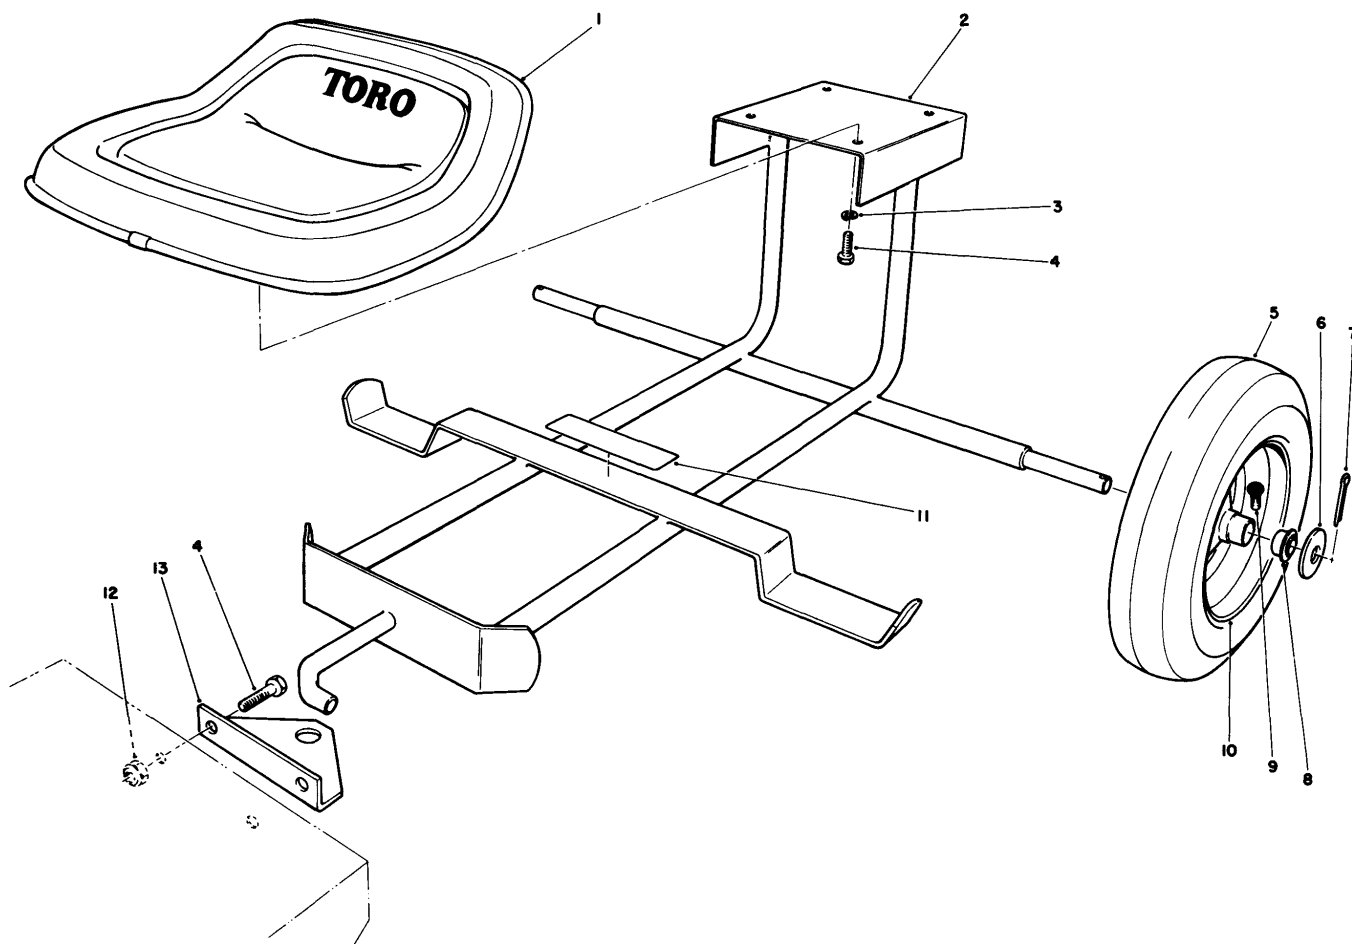

Sulky Kit Model No. 30122 (optional)

Ref.	Part Number	Qty.	Description
1	38-0840	1	Seat
2	55-9810	1	Frame ASM
3	3253-4	4	Washer-Lock
4	322-3	6	Screw-HH
5	55-3720	2	Tire
6	3256-39	2	Washer-Flat
7	3272-12	2	Pin-Cotter
8	55-3740	4	Bearing
9	55-3730	2	Valve Stem-Inner Tube
10	55-3750	2	Wheel
11	55-9900	1	Sulky Decal
12	3296-29	2	Nut-Lock, NI
13	55-9880	1	Bracket-Hitch

Notes:

Notes:



Count on it.