 


TORO®

MODEL NO. 03800-60324 & UP
MODEL NO. 03801-60331 & UP

PARTS CATALOG


REELMASTER® 6500D – 2WD/4WD TRACTION UNIT

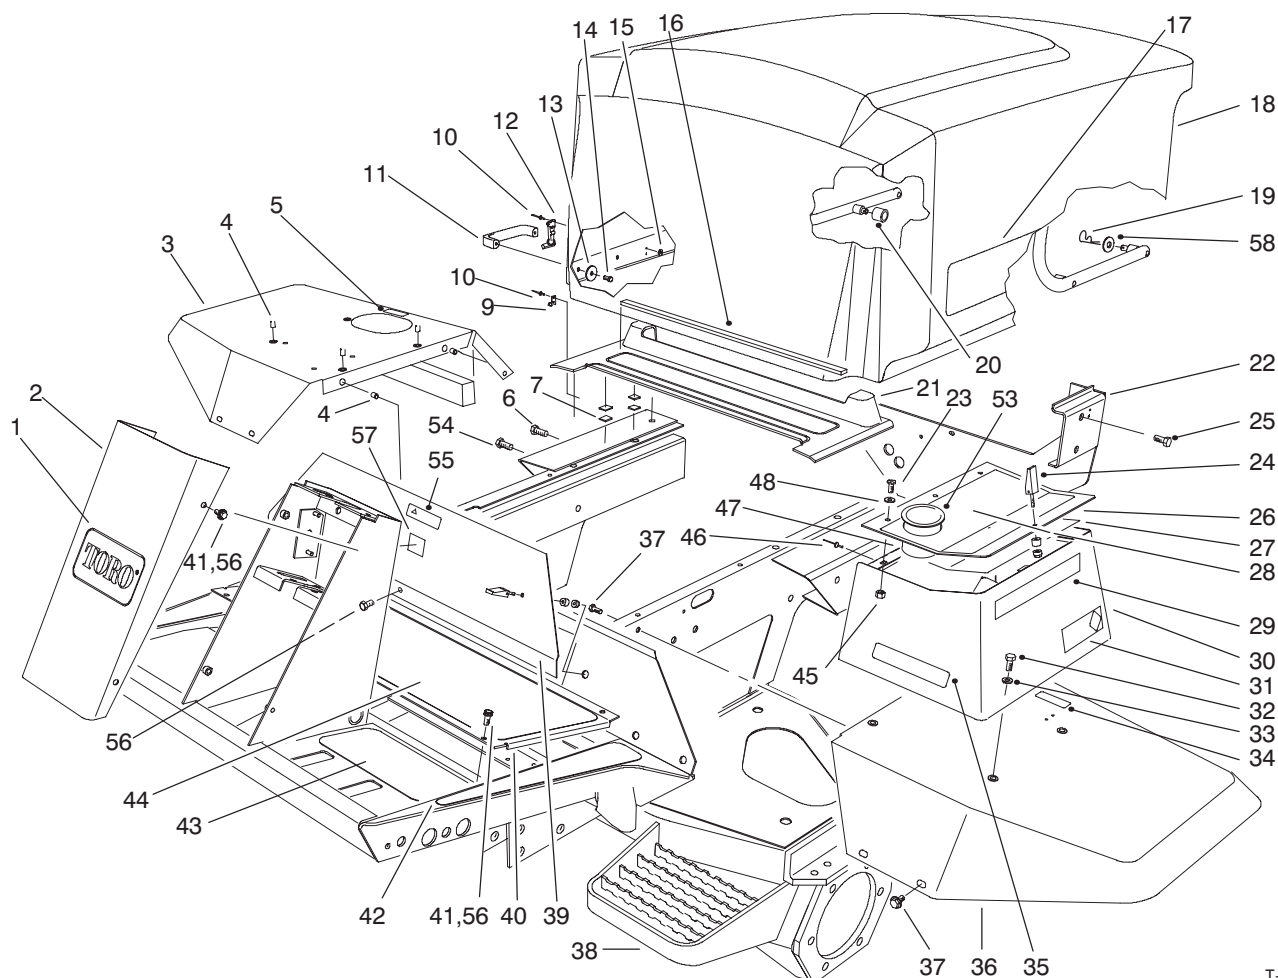

T-2366-2

FRAME & BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-5550	Decal – Toro	1	16	92-7633	Strip – Bumper, Hood	1
2	93-7996	Cover – Tower	1	17	92-7532	Decal – RM6500D	2
3	93-7579	Fender – RH	1	18	92-7511	Hood	1
4	32148-7	Nut – Clinch	5	19	3290-467	Pin – Cotter, Hair	2
5	85-4730	Decal – Hydraulic Oil Only	1	20	93-7582	Hose	1
5	93-6686	Decal – Hydraulic Oil (Europe)	1	21	94-2617	Cover – Pump	1
5	88-1980	Decal – Hydraulic Oil (Japan)	1	22	94-8131	Frame – Rear (Incl. Ref. #1, Page 49)	1
6	33106-035	Screw – HHF	8	23	3258-166	Screw	3
7	93-9155	Velcro	2	24	74-5950	Latch – Swell	3
9	249-40	Keeper	1	25	33108-035	Screw	6
10	3269-13	Rivet – Pop	4	26	93-9180	Cover – Box, Tool	1
11	65-5100	Handle – Hood	1	27	93-9165	Decal – Instr. Service, 2WD	1
12	59-9740	Latch – Draw	1	27	94-2935	Decal – Service (Danish)	1
13	3256-78	Washer – Flat	2	27	94-2936	Decal – Service (Dutch)	1
14	46-8091	Screw – Tapping	2	27	94-2937	Decal – Service (Finnish)	1
15	3269-10	Washer – Flat	2	27	94-2938	Decal – Service (French)	1
				27	94-2939	Decal – Service (German)	1

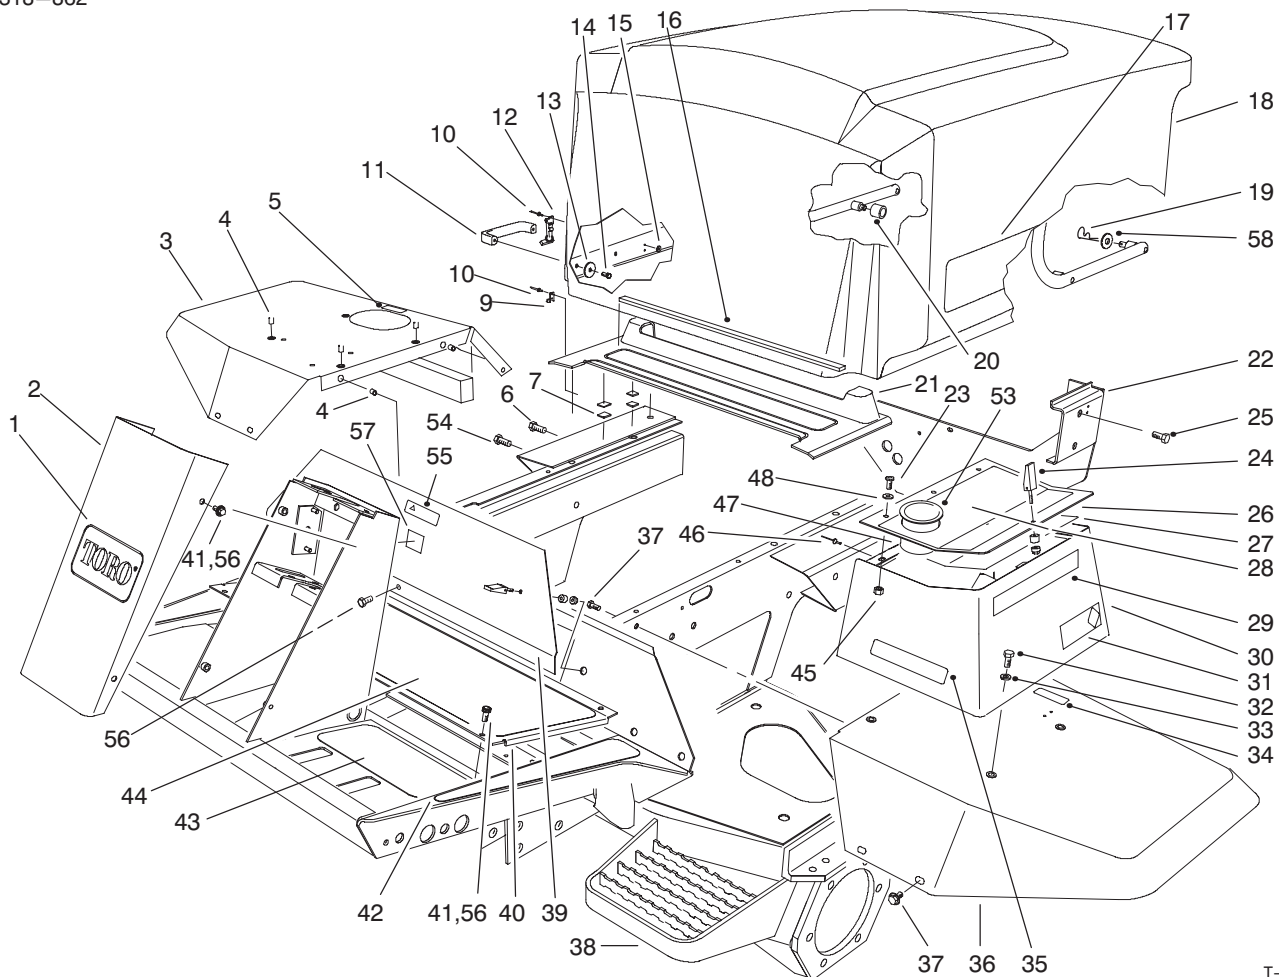 


T-2366-2

FRAME & BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
27	94-2940	Decal - Service (Italian)	1	34	93-6680	Decal - Fuel, Diesel (Europe)	1
27	94-2942	Decal - Service (Norwegian)	1	34	84-2860	Decal - Fuel, Diesel (Japan)	1
27	94-2943	Decal - Service (Portuguese)	1	35	75-5190	Decal - No Riders	1
27	94-2944	Decal - Service (Spanish)	1	35	93-6689	Decal - No Riders (Europe)	1
27	94-2945	Decal - Service (Swedish)	1	35	84-3420	Decal - No Riders (Japan)	1
27	94-2941	Decal - Service (Japan)	1	36	75-3860	Fender - LH	1
27	93-9166	Decal - Instr. Service, 4WD	1	37	3234-14	Screw - Flange	10
27	94-2924	Decal - Service (Danish)	1	38	94-9953	Frame - Front (Incl. Ref. #42, 43 & on Page 65, #21)	1
27	94-2925	Decal - Service (Dutch)	1	39	75-1390	Cover - Access, Front	1
27	94-2926	Decal - Service (Finnish)	1	40	75-1410	Plate - Access, Floor	1
27	94-2927	Decal - Service (French)	1	41	75-6840	Knob - Knurled	8
27	94-2928	Decal - Service (German)	1	42	93-7592	Tread - Footrest	2
27	94-2929	Decal - Service (Italian)	1	43	75-0620	Tread - Foot, LH	1
27	94-2931	Decal - Service (Norwegian)	1	*	75-0610	Tread - Foot, RH	1
27	94-2932	Decal - Service (Portuguese)	1	44	75-0630	Tread - Foot, Center	1
27	94-2933	Decal - Service (Spanish)	1	45	32128-33	Nut - Flange	3
27	94-2934	Decal - Service (Swedish)	1	46	93-8744	Rivet - Pop	3
27	94-2930	Decal - Service (Japan)	1	47	75-5780	Hinge - Cover	1
28	93-9177	Decal - Warning, Hillside	1	48	3256-1	Washer - Flat	3
28	93-1262	Decal - Hillside (Europe)	1	53	94-1410	Holder - Can, Beverage	1
28	94-4572	Decal - Hillside (Japan)	1	54	33105-035	Screw - Flange	2
29	72-3560	Decal - 4WD (Model 03801)	1	55	93-9426	Decal - Danger	1
30	75-5810	Box - Tool	1	55	93-9425	Decal - Danger (Europe)	1
31	93-0096	Decal - ACE	2	55	94-4579	Decal - Danger (Japan)	1
32	322-3	Screw - Cap Hex. Hd.	4	56	3234-7	Screw - (Europe)	3
33	3256-3	Washer - Flat	4	57	93-7252	Decal - (Europe)	1
34	52-1320	Decal - Fuel, Diesel	1	58	66-6480	Washer	2

 
*Not Illustrated

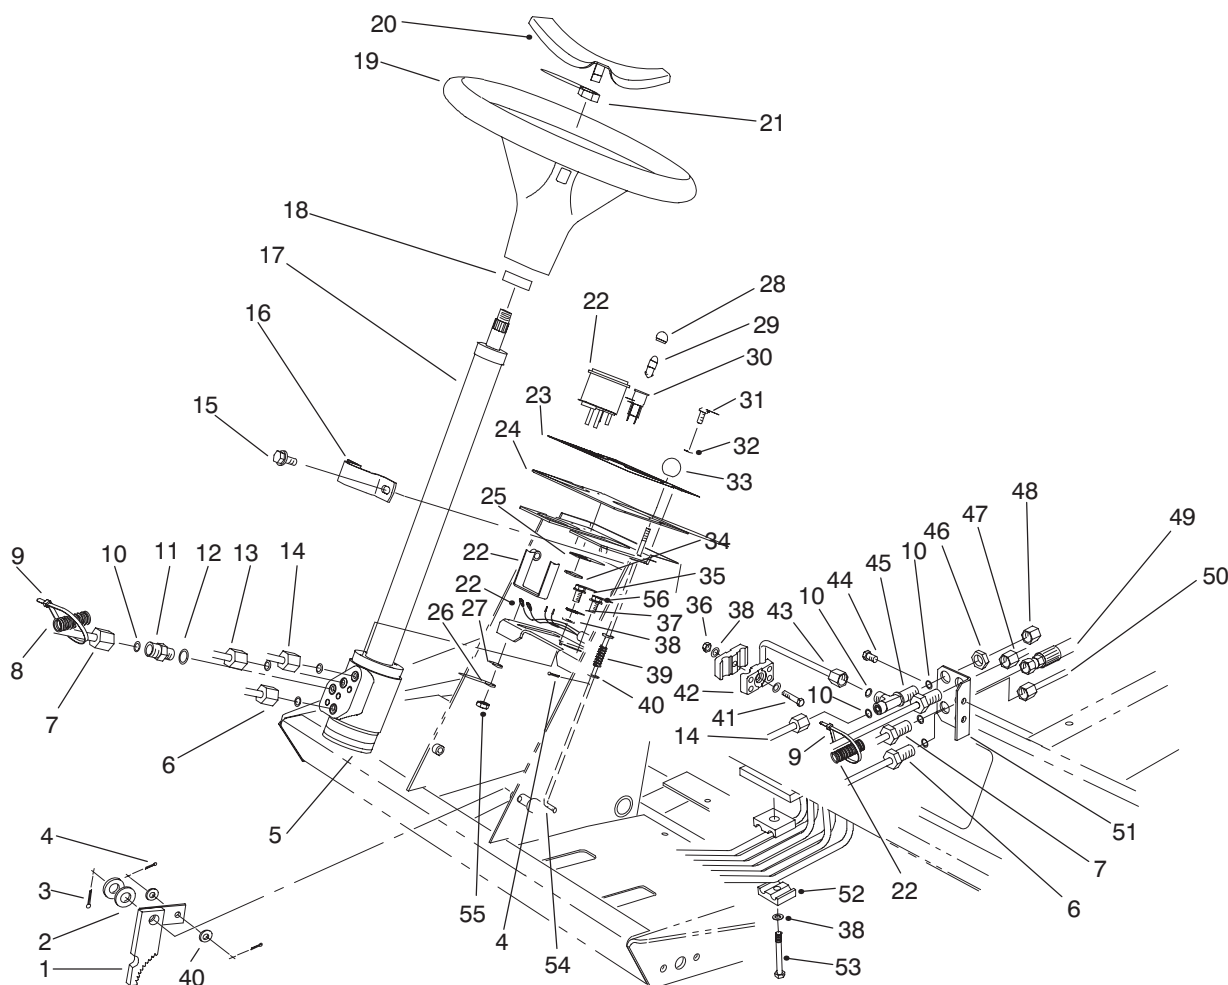

T-2447-1

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	63-7900	Rack	1	23	94-4573	Decal - Tower (Japan)	1
2	3256-26	Washer - Flat	2	24	93-7998	Plate - Instrument	1
3	3272-10	Pin - Cotter	1	25	218-536	Washer - Lock, Int. Tooth	1
4	3272-5	Pin - Cotter	3	26	3219-14	Washer - Lock	3
5	94-9950	Assembly - Valve, Steering	1	27	3256-14	Washer - Flat	2
6	94-3059	Tube - Steering, RH	1	28	218-533	Lens - Red	1
7	94-3061	Tube - Steering, Front, In	1	29	93-7480	Bulb - LED	1
8	94-3090	Harness - Wire, Main	1	30	44-2210	Assembly - Light, Warning (Incl. Ref. #25, 28, 29, & 34)	1
9	3290-378	Tie - Cable	7	31	87-6620	Screw - Torx Pan Hd.	2
10	237-22	O-Ring	10	32	3256-1	Washer - Flat	2
11	340-2	Adapter (Incl. Ref. #10 & 12)	4	33	233-17	Knob	1
12	237-42	O-Ring	4	34	218-535	Nut - Lock	1
13	94-3060	Tube - Steering, Front LH	1	35	33103-025	Screw - HHF	1
14	94-3062	Tube - Steering, Front, Out	1	36	3296-47	Nut - Lock	1
15	3234-7	Screw	2	37	3255-8	Washer - Lock	1
16	75-2810	Bracket - Column, Steering	1	38	3256-23	Washer - Flat	6
17	94-9951	Asm. - Column, Steering	1	39	95-1821	Spring - Brake, Park	1
18	21-9260	Cover - Dust	1	40	3256-22	Washer - Flat	4
19	94-3500	Wheel, Steering (Incl. Ref. #20)	1	41	322-7	Screw - HH	1
20	88-3870	Cover	1	42	56-7972	Clamp	2
21	94-9952	Nut - Jam	1	43	94-1447	Tube - Steering, Return	1
22	93-4213	Assembly - Speedometer (Incl. Ref. #26, 27 & 53))	1	44	32144-11	Screw Thread Forming	2
23	93-7554	Decal - Tower	1	45	340-68	Fitting - Tee, Bulkhead (Incl. Ref. #10)	1
23	93-1263	Decal - Tower (Europe)	1	46	340-70	Nut - Lock, Bulkhead	4
				47	92-7495	Asm. - Tube, Steering Rear	1

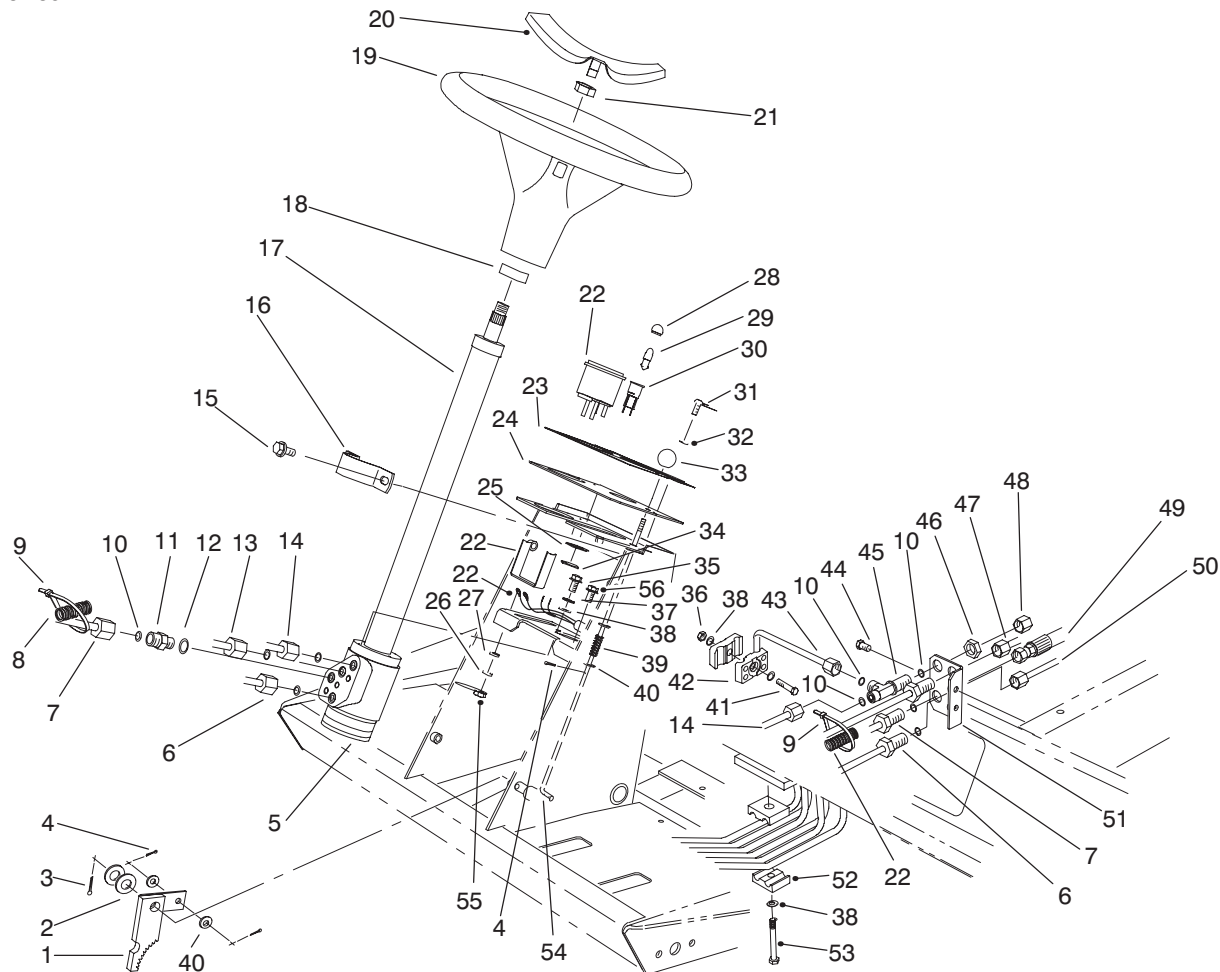 


T-2447-1

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
48	340-117	Cap - Fitting	1
49	92-7622	Hose - Steering	1
50	92-7494	Asm. - Tube Steering Rear	1
51	92-7606	Bracket - Bulkhead	1
52	56-7973	Clamp	6

Ref. No.	Part No.	Description	No. Used
53	322-6	Screw - Cap Hex. Hd.	3
54	75-1490	Rod - Brake, Park	1
55	3253-2	Nut - Hex.	9
56	33103-020	Screw - HHF	2

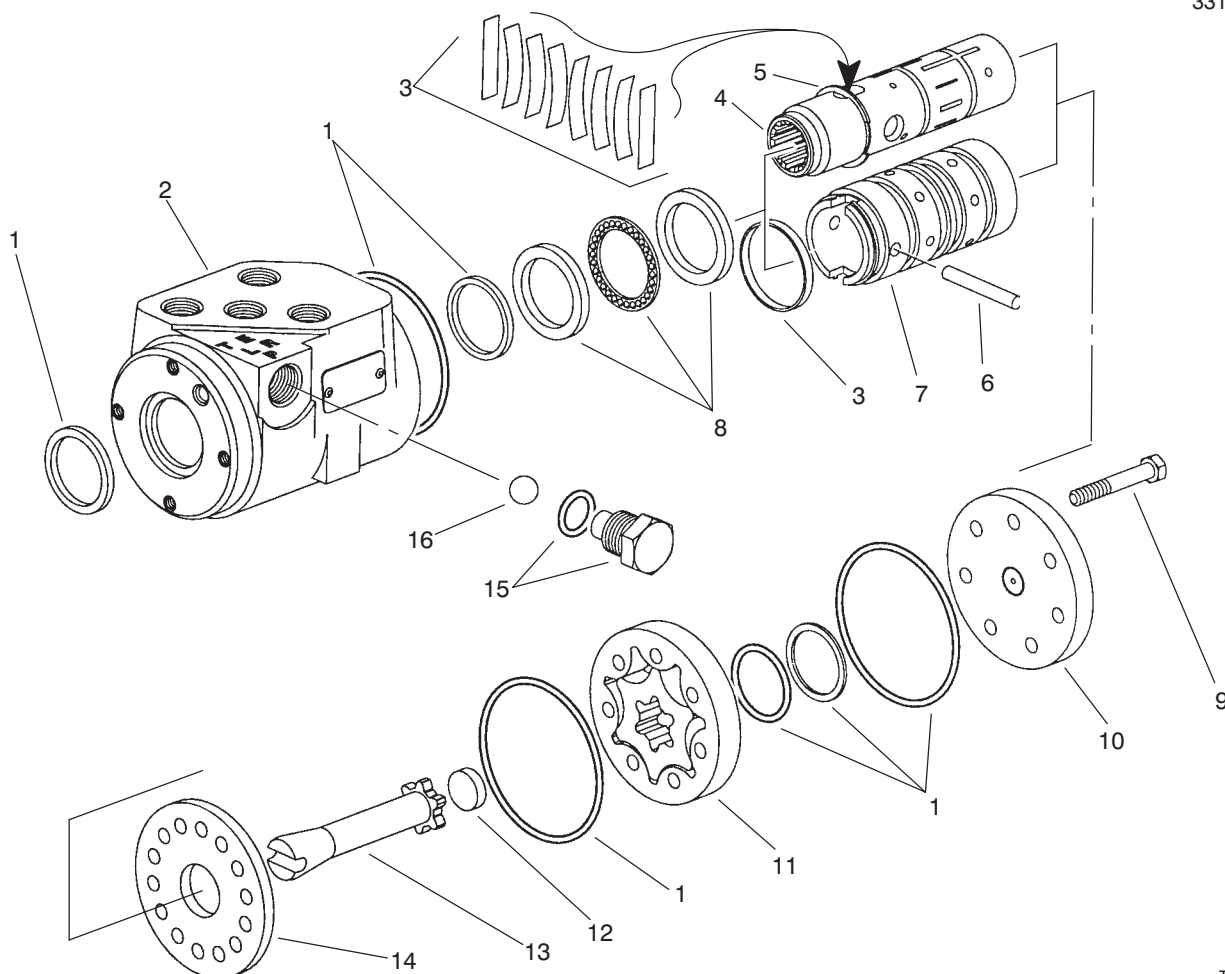 


T-2312-1

STEERING VALVE ASSEMBLY NO. 94-9950

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-4099	Kit - Seal	1	9	94-4088	Screw - Cap	7
†2		Housing	1	10	94-4089	Cap - End	1
3	94-4095	Kit - Spring, Centering	1	11	94-4090	Gerotor	1
†4		Spool	1	12	94-4091	Spacer	1
5	94-4098	Ring - Retaining	1	13	94-4093	Drive	1
6	94-4094	Pin	1	14	94-4092	Plate - Wear	1
†7		Sleeve	1	15	94-4097	Asm. - Plug	1
8	94-4096	Kit - Bearing	1	16	94-4100	Ball	1

 † Not Serviced Separately.

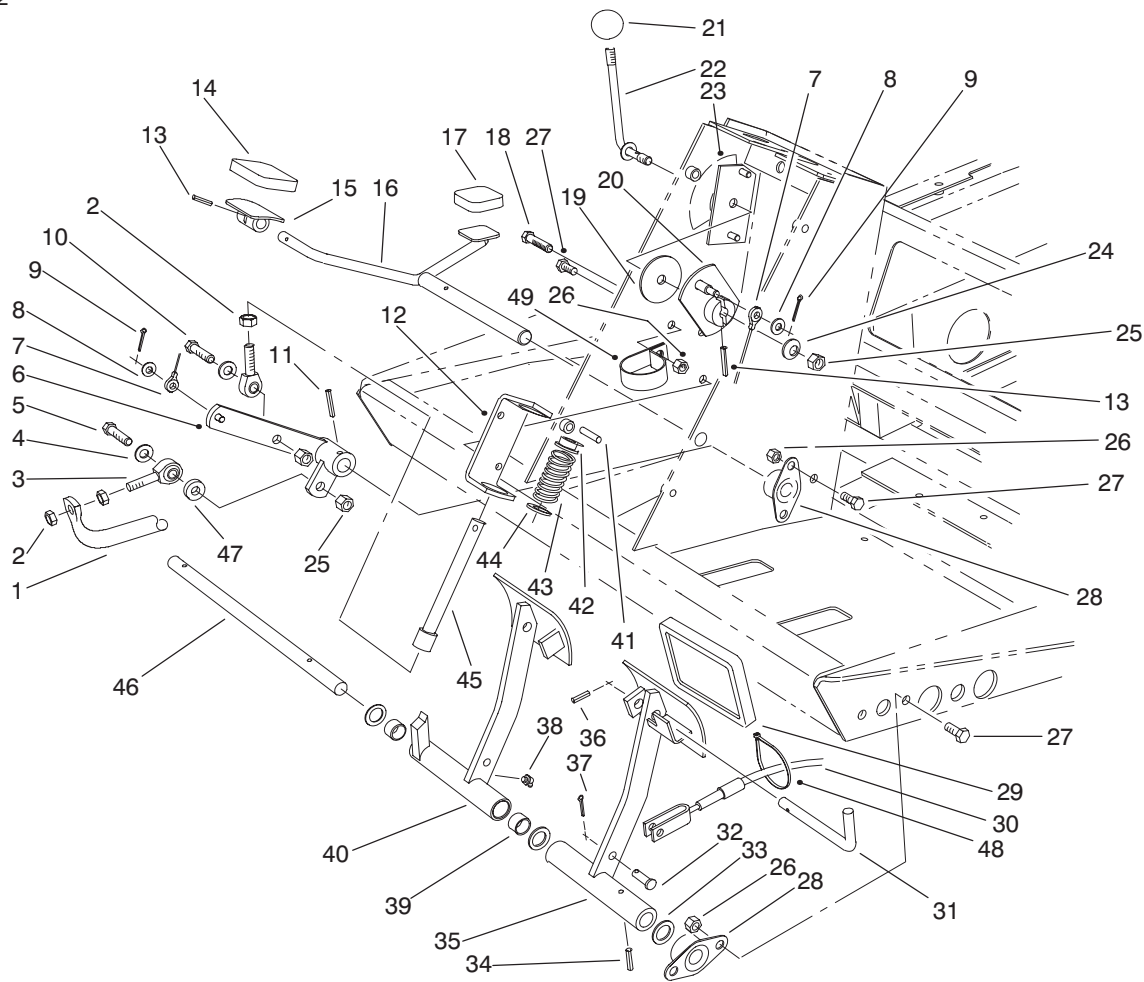


T-2063-2

TRACTION & BRAKE PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-7531	Tube - Control, Pump	1
2	3220-3	Nut - Jam	3
3	2411-36	Bearing - Rod End	2
4	3256-24	Washer - Flat	2
5	323-9	Screw - Cap Hex. Hd.	1
6	75-3270	Hub - Pivot, Traction	1
7	75-6580	Cable - Pedal	1
8	3256-22	Washer - Flat	2
9	3272-2	Pin - Cotter	2
10	323-7	Screw - Cap Hex. Hd.	1
11	32121-6	Pin - Roll	1
12	92-7608	Bracket - Spring	1
13	32121-45	Pin - Roll	2
14	74-9100	Pad - Pedal, Forward	1
15	49-6440	Pedal - Accelerator	1
16	75-2970	Pedal - Traction	1
17	74-9110	Pad - Pedal, Reverse	1
18	32144-14	Screw - Cap Hex. Hd.	2
19	75-6550	Disc - Friction	1
20	75-6510	Bracket - Lever	1
21	233-42	Knob	1
22	75-6490	Lever	1
23	75-6710	Decal - Fast/Slow	1
23	93-6699	Decal - Fast/Slow (Europe)	1
23	84-3500	Decal - Fast/Slow (Japan)	1
24	3290-461	Washer - Belleville	1
25	3296-39	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
26	32128-20	Nut - Lock	9
27	322-3	Screw - Cap Hex. Hd.	9
28	256-236	Bearing - Flange	4
29	93-8742	Pad - Brake	2
30	92-7530	Assy. - Cable, Brake LH	1
*	92-7529	Assy. - Cable, Brake RH	1
31	63-7880	Pin - Latch, Brake	1
32	283-58	Pin - Clevis	2
33	3256-69	Washer - Flat	3
34	32121-16	Pin - Roll	1
35	75-1440	Pedal - Brake, LH	1
36	32121-50	Pin - Roll	1
37	3272-10	Pin - Cotter	2
38	302-60	Fitting - Grease	1
39	256-42	Bushing	2
40	75-1430	Pedal - Brake, RH (Incl. Ref. #38 & 39)	1
41	32121-11	Pin - Roll	1
42	92-7610	Retainer - Spring	1
43	60-5700	Spring - Compression	1
44	3256-5	Washer - Flat	1
45	92-7609	Shaft - Spring	1
46	75-1470	Pin - Pivot, Brake	1
47	5-0652	Spacer	1
48	3290-378	Tie - Cable	1
49	2412-96	Clamp - R	1

 
*Not Illustrated

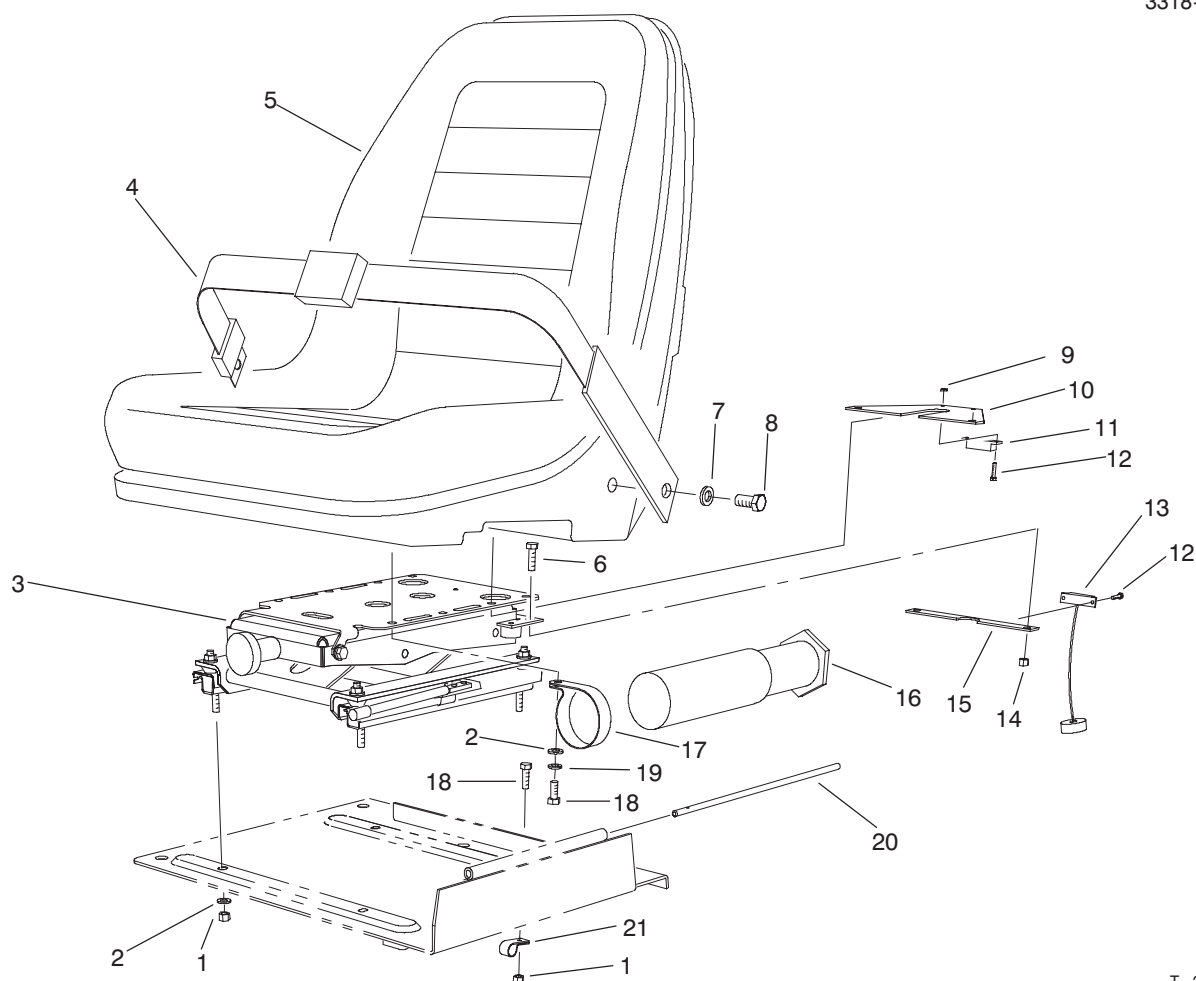

T-2064-1

SEAT FRAME & THROTTLE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	5	10	75-4370	Bracket - Seat	1
2	3256-23	Washer - Flat	8	11	92-8753	Magnet - Switch, Reed	1
3		Suspension - Seat	1	12	3250-29	Screw	4
4	21-4191	Assembly - Seat Belt (Model 03801 Only)	1	13	92-8001	Sensor - Switch, Reed	1
5	92-1180	Assembly - Seat	1	14	3296-39	Nut - Lock	2
6	323-4	Screw - Cap Hex. Hd.	2	15	75-4360	Bracket - Suspension, Seat	1
7	3253-6	Washer - Lock (Model 03801 Only)	2	16	74-0720	Tube - Manual	1
8	3212-4	Screw (Model 03801 Only)	2	17	2412-133	Clamp-R	2
9	3296-54	Nut - Lock	4	18	322-3	Screw - Cap Hex. Hd.	2
				19	3253-4	Washer - Lock	4
				20	75-3400	Shaft - Pivot, Seat	1
				21	2412-93	Clamp-R	1

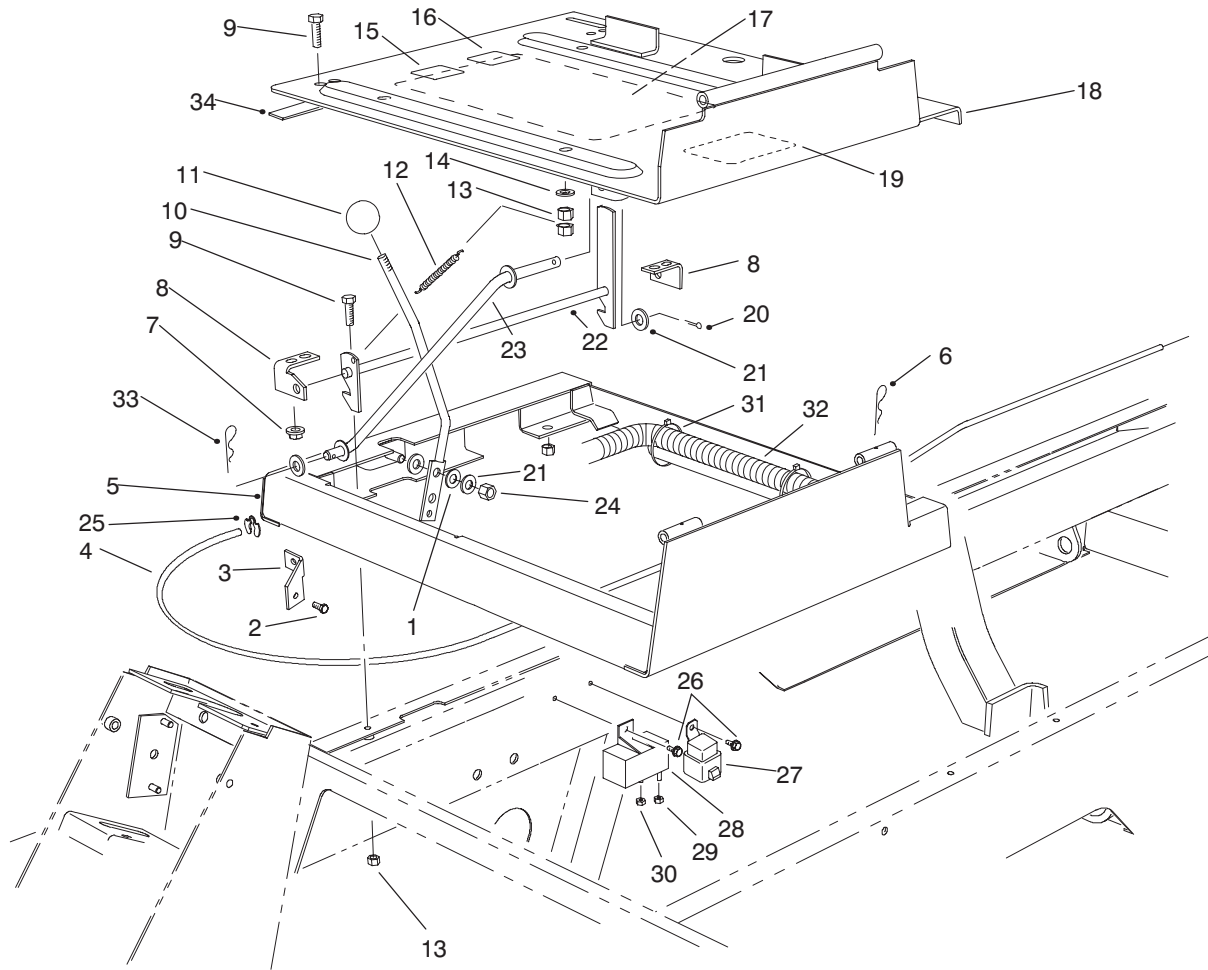 

T-2065-2

SEAT FRAME & THROTTLE ASSEMBLY (Continued)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-2920	Washer - Nylon	2	18	93-9976	Plate - Seat	1
2	49-2040	Screw - Cap Hex. Hd.	1	19	93-9184	Decal - Rear Manifold Block	1
3	92-7396	Mount - Cable	1	19	94-2913	Decal - Rear Manifold (DK)	1
4	92-7520	Cable - Throttle	1	19	94-2914	Decal - Rear Manifold (NL)	1
5	93-9973	Frame - Seat	1	19	94-2915	Decal - Rear Manifold (SF)	1
6	3290-467	Pin - Cotter, Hair	1	19	94-2916	Decal - Rear Manifold (F)	1
7	32128-25	Nut - Lock	4	19	94-2917	Decal - Rear Manifold (D)	1
8	93-9983	Bracket - Latch, Seat	2	19	94-2918	Decal - Rear Manifold (I)	1
9	322-3	Screw - HH	8	19	94-2920	Decal - Rear Manifold (N)	1
10	93-7598	Lever - Throttle	1	19	94-2921	Decal - Rear Manifold (P)	1
11	233-42	Knob	1	19	94-2922	Decal - Rear Manifold (ES)	1
12	66-4190	Spring	1	19	94-2923	Decal - Rear Manifold (S)	1
13	3296-29	Nut - Lock	9	19	94-2919	Decal - Rear Manifold (J)	1
14	3256-23	Washer - Flat	4	20	3272-10	Pin - Cotter	1
15	63-9920	Decal - EEC 105 DBA	1	21	3256-24	Washer - Flat	3
16	85-6910	Decal - EEC 86 DBA	1	22	93-9979	Latch, Seat	1
17	93-7573	Decal - Instructions, Clip	1	23	75-3680	Rod - Seat	1
17	94-2902	Decal - Clip (Danish)	1	24	3296-39	Nut - Lock	1
17	94-2903	Decal - Clip (Dutch)	1	25	52-5910	Ring - Retaining	1
17	94-2904	Decal - Clip (Finnish)	1	26	32144-10	Screw	2
17	94-2905	Decal - Clip (French)	1	27	70-1480	Relay	1
17	94-2906	Decal - Clip (German)	1	28	76-5260	Relay - Glow Plug	1
17	94-2907	Decal - Clip (Italian)	1	29	48-7880	Nut	1
17	94-2909	Decal - Clip (Norwegian)	1	30	48-7890	Nut	1
17	94-2910	Decal - Clip (Portuguese)	1	31	3290-378	Tie - Cable	2
17	94-2911	Decal - Clip (Spanish)	1	32	94-3090	Harness - Wire, Main	1
17	94-2912	Decal - Clip (Swedish)	1	33	3290-307	Pin - Cotter, Hair	1
17	94-2908	Decal - Clip (Japan)	1	34	94-8146	Strip - Foam, Seat	1

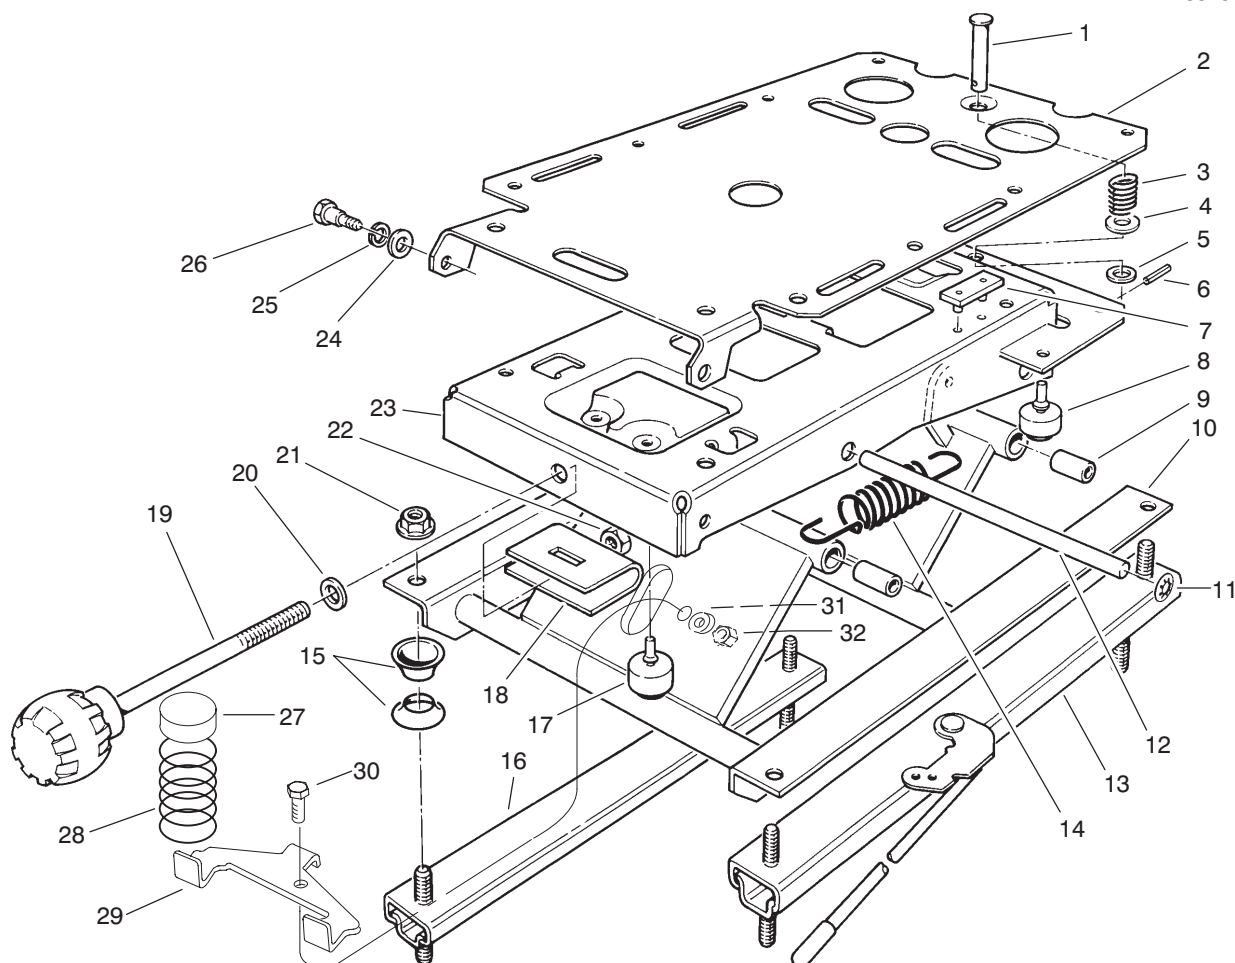 

T-1031-1

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	80-4860	Pin - Clevis	1	17	66-8520	Bumper - Down-stop	2
2	75-3580	Plate - Mounting, Seat	1	18	77-2870	Weldment - Hanger	1
3	75-3530	Spring - Compression	1	19	76-1930	Knob - Tension Adjustment	1
4	3256-5	Washer - Flat	1	20	3256-46	Washer - Flat	1
5	3256-24	Washer	1	21	32128-26	Nut - Flange	4
6	75-3540	Pin - Roll	1	22	3296-44	Nut - Lock	1
7	75-3550	Bumper - Seat	2	23	75-3480	Weldment - Upper	1
8	76-2940	Bumper - Rubber	2	24	3256-26	Washer - Flat	2
9	76-1920	Bushing - Sleeve	4	25	3253-6	Washer - Lock	2
10	66-8610	Weldment - Lower	1	26	75-3510	Bolt - Shoulder	2
11	66-8560	Nut - Push	4	27	93-3164	Cap	2
12	76-1910	Shaft - Pivot	2	28	93-3163	Spring	1
13	82-9060	Adjuster W/Handle	1	29	93-3165	Bracket	1
14	76-1940	Spring - Extension	2	30	322-6	Screw - Cap Hex. Hd.	1
15	66-9290	Spacer	6	31	3253-33	Washer - Lock	1
16	66-8530	Adjuster	1	32	3217-6	Nut - Jam	1

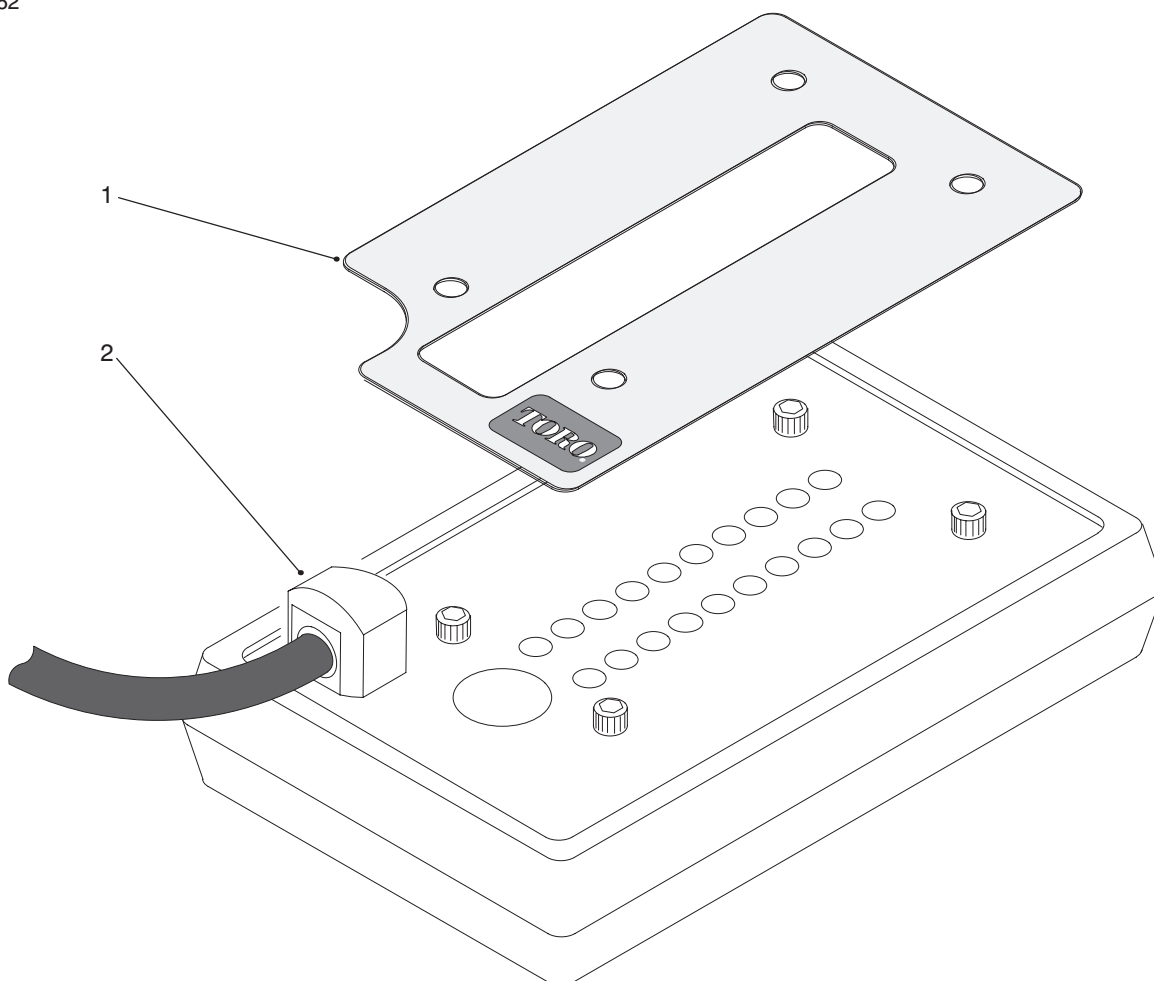 

T-1458-1


DIAGNOSTIC — ACE DISPLAY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-7543	Decal — Diagnostic ACE V 1.0	1
1	94-3354	Decal — Diagnostic ACE V 1.0 (Danish)	1
1	94-3355	Decal — Diagnostic ACE V 1.0 (Dutch)	1
1	94-3356	Decal — Diagnostic ACE V 1.0 (Finnish)	1
1	94-3357	Decal — Diagnostic ACE V 1.0 (French)	1
1	94-3358	Decal — Diagnostic ACE V 1.0 (German)	1
1	94-3359	Decal — Diagnostic ACE V 1.0 (Italian)	1
1	94-3361	Decal — Diagnostic ACE V 1.0 (Norwegian)	1
1	94-3362	Decal — Diagnostic ACE V 1.0 (Portuguese)	1
1	94-3363	Decal — Diagnostic ACE V 1.0 (Spanish)	1
1	94-3364	Decal — Diagnostic ACE V 1.0 (Swedish)	1
1	94-3360	Decal — Diagnostic ACE V 1.0 (Japan)	1

Ref. No.	Part No.	Description	No. Used
2	85-4750	Display — Diagnostic ACE	1
*3	94-5386	Decal — Diagnostic	1
*3	94-8060	Decal — Diagnostic (Danish)	1
*3	94-8061	Decal — Diagnostic (Dutch)	1
*3	94-8062	Decal — Diagnostic (Finnish)	1
*3	94-8063	Decal — Diagnostic (French)	1
*3	94-8064	Decal — Diagnostic (German)	1
*3	94-8065	Decal — Diagnostic (Italian)	1
*3	94-8066	Decal — Diagnostic (Japanese)	1
*3	94-8067	Decal — Diagnostic (Norwegian)	1
*3	94-8068	Decal — Diagnostic (Portuguese)	1
*3	94-8069	Decal — Diagnostic (Spanish)	1
* 3	94-8070	Decal — Diagnostic (Swedish)	1

 *Not Illustrated



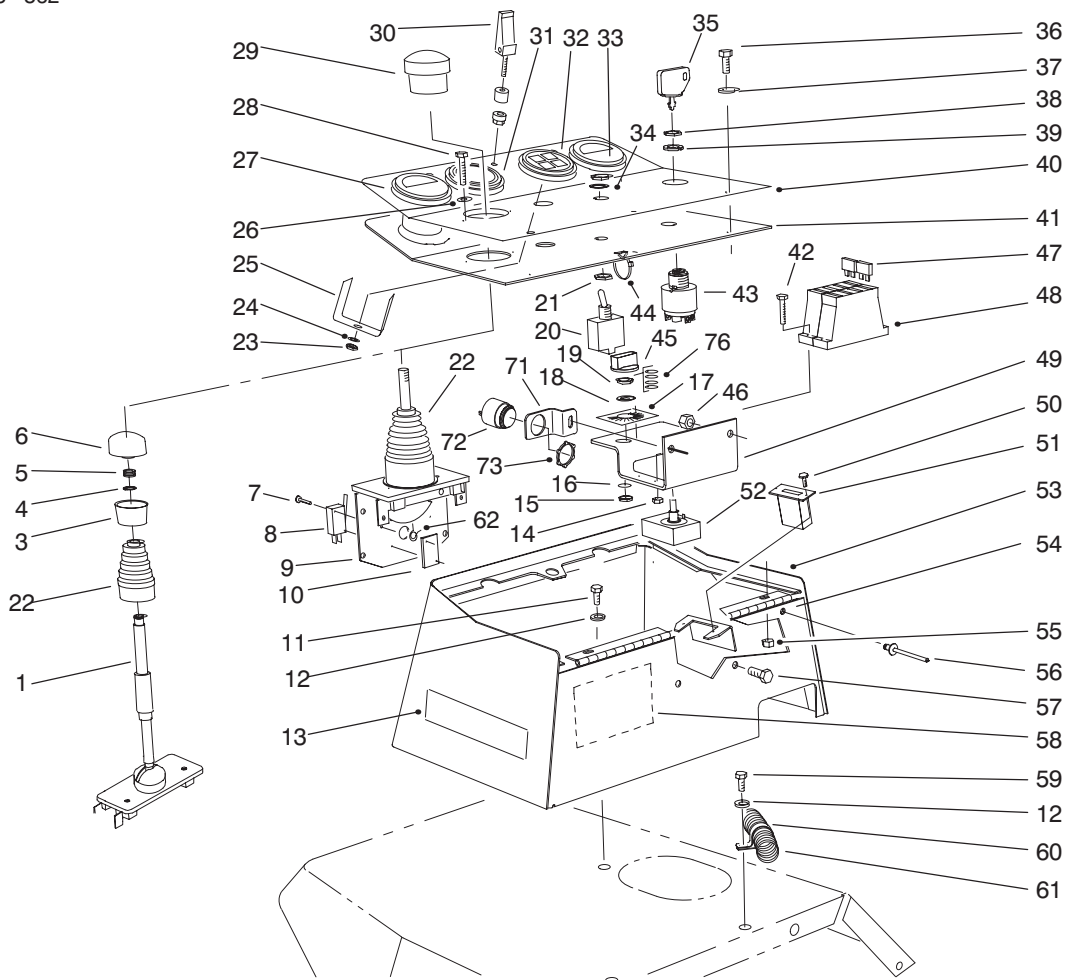


T-2066-5


CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-8102	Tube - Interlock (Europe)	1
3	94-3055	Cap - Lower, Joystick (Europe)	1
4	94-3056	Snap Ring - Joystick (Europe)	1
5	94-3057	Spring - Compression (Europe)	1
6	94-3058	Cap - Upper, Joystick (Europe)	1
7	3290-93	Screw - HH	4
8	94-8104	Switch - Micro	2
9	75-3420	Lever - Control (Incl. Ref. #7-8, 10, 22 & 29)	1
9	94-6753	Joystick (Europe) (Incl. Ref. #1-6, 7-8, 10 & 22)	1
10	3290-354	Plate - Nut	2
11	322-3	Screw - HH	3
12	3256-23	Washer - Flat	4
13	75-5190	Decal - No Riders	1
13	93-6689	Decal - No Riders (Europe)	1
13	84-3420	Decal - No Riders (Japan)	1
14	3296-2	Nut - Lock	1
15		Nut - Lock	1
16		Washer - Lock	1
17	94-2633	Decal - HOC Selector	1


Ref. No.	Part No.	Description	No. Used
17	93-1268	Decal - HOC Selector (Europe)	1
17	94-4575	Decal - HOC Selector (Japan)	1
18	3254-6	Washer - Lock	1
19	3220-24	Nut - Lock	1
20	75-1010	Switch (Incl. Ref. #21, 34 & 74-75)	1
21	218-498	Nut - Hex.	2
22	94-8103	Boot - Control, Lift	1
23	3217-26	Nut	1
24	3254-1	Washer - Lock	1
25		Clamp	1
26	3256-14	Washer - Flat	2
27	93-8497	Gauge - Fuel	1
28	3250-31	Screw - Pan Hd.	2
29	3290-489	Knob - Control, Lift	1
30	74-5950	Latch - Swell	1
31	93-7484	Light - Warning Bank (Incl. Ref. #23-25 & 62-63)	1
32	93-7483	Light - Warning Bank (Incl. Ref. #23-25 & 62-63)	1
33	76-9060	Gauge - Temperature (Incl. Ref. #64-65)	1
34	218-589	Washer - Lock	1
35	63-8360	Key - Ignition	1
36	3258-166	Screw	3

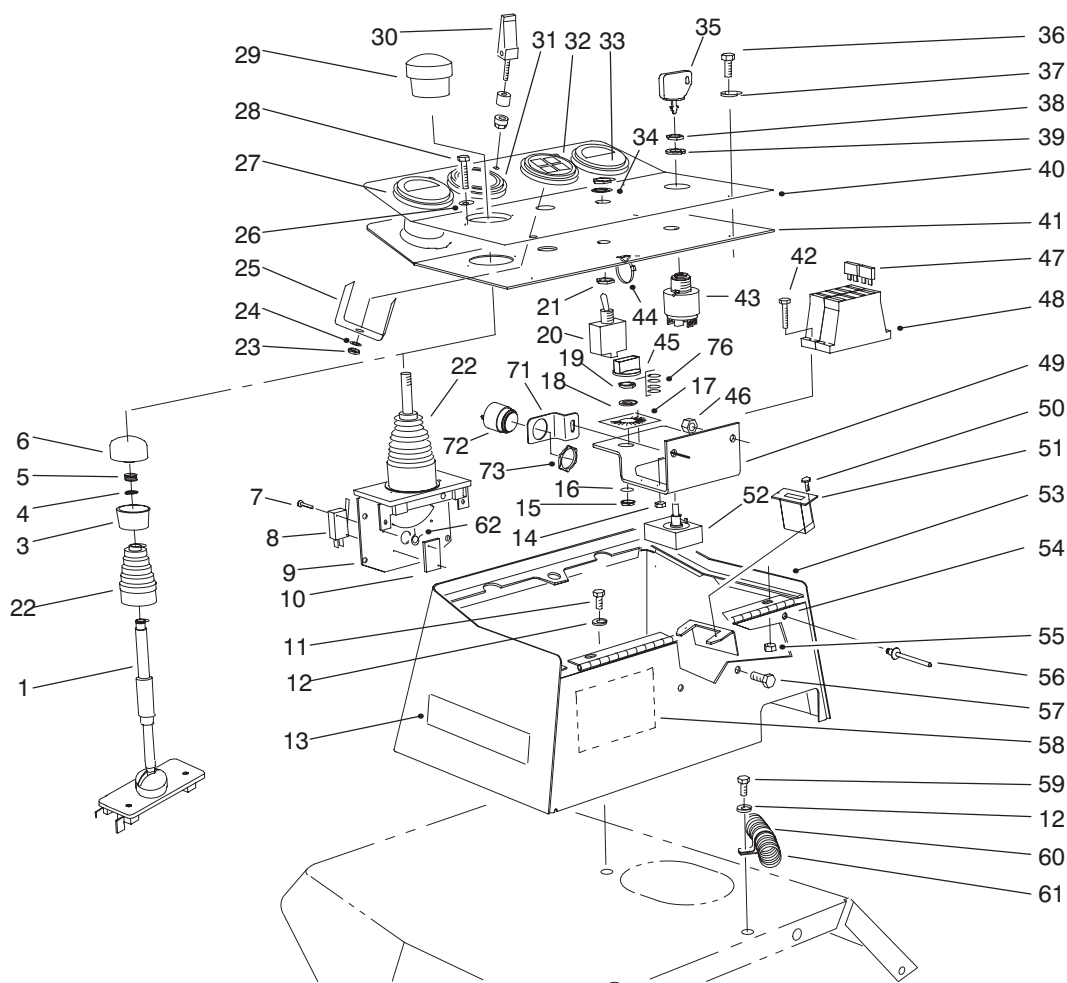 

HYDRAULIC SCHEMATIC (Model 03800)

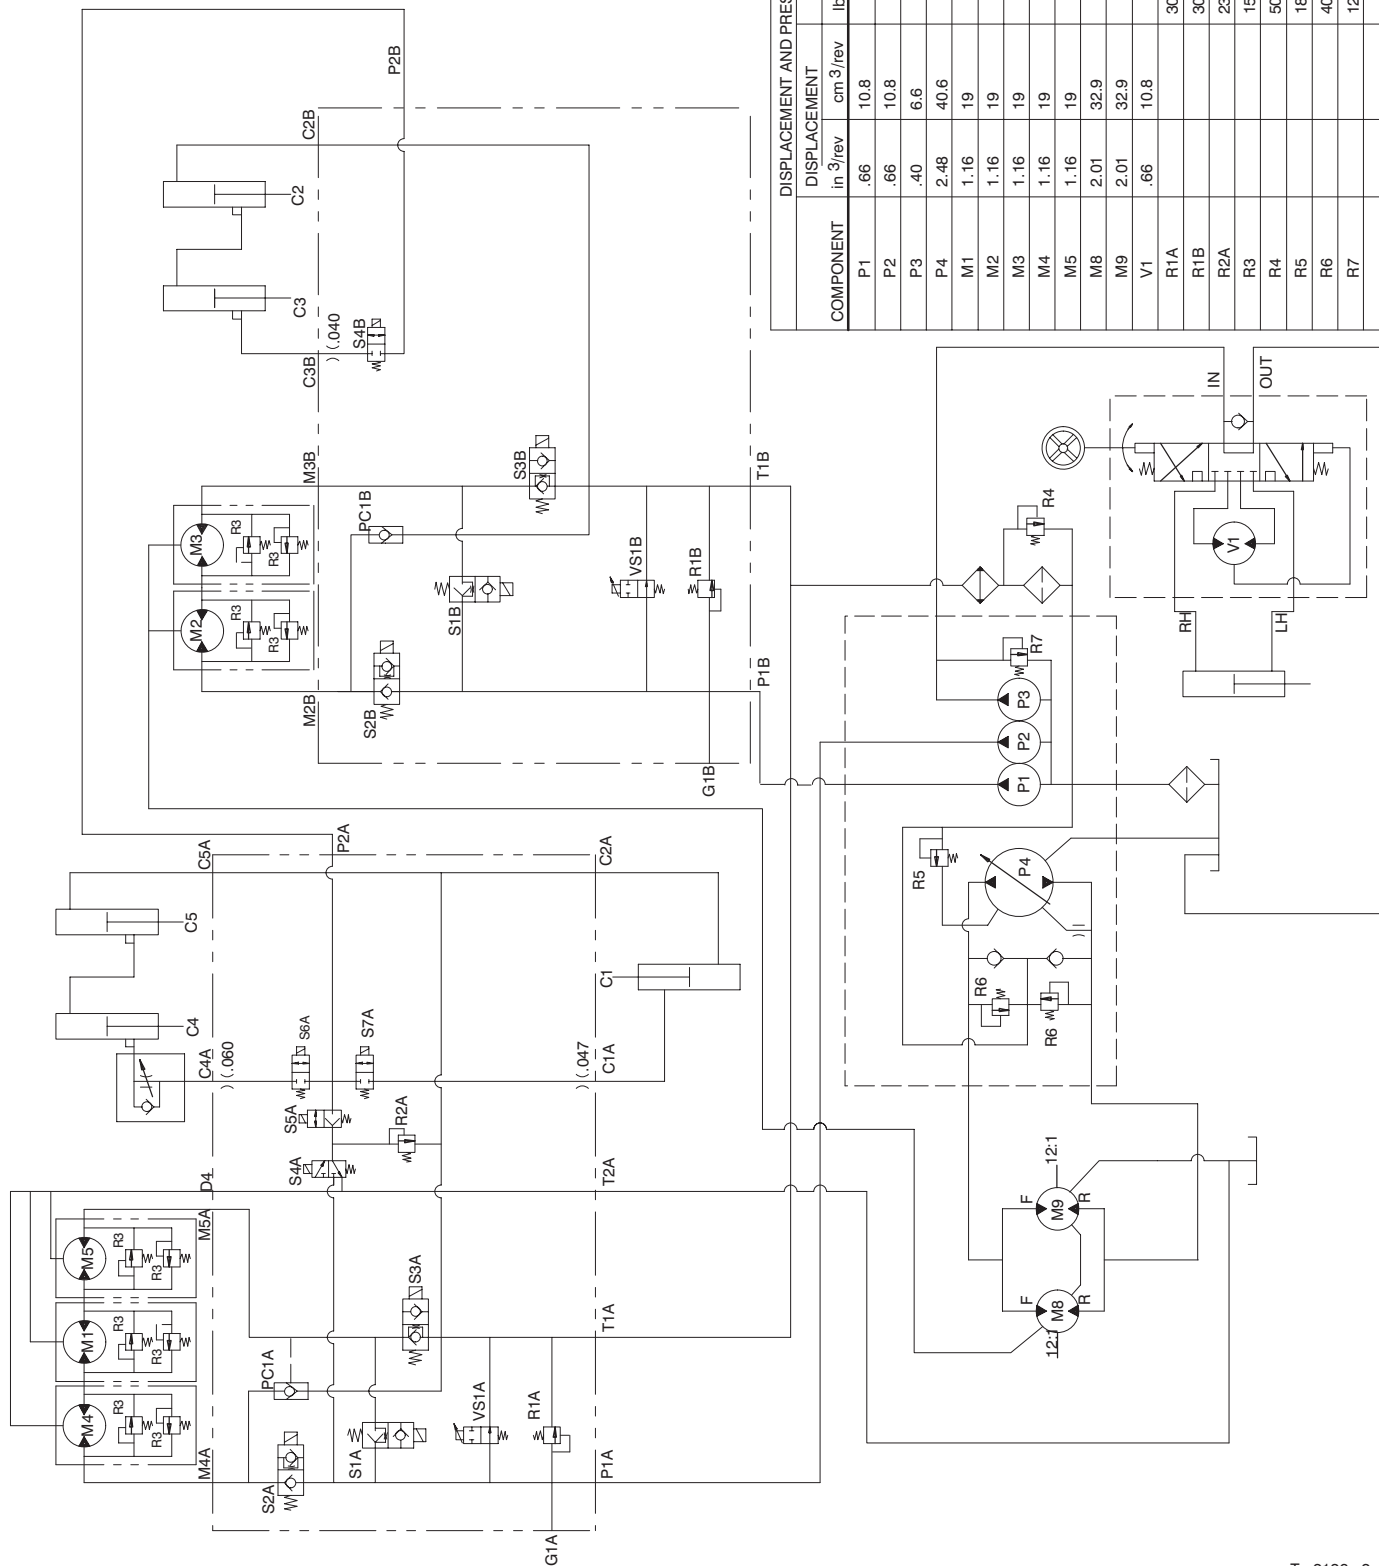 

COMPONENT	DISPLACEMENT AND PRESSURE CHART			*FLOW RATE	
	DISPLACEMENT in 3/rev	cm 3/rev	PRESSURE lbs/in 2	GPM	LPM
P1	.66	10.8		7.0	26.5
P2	.66	10.8		7.0	26.5
P3	.40	6.6		4.2	15.9
P4	2.48	40.6		26.3	99.5
M1	1.16	19			
M2	1.16	19			
M3	1.16	19			
M4	1.16	19			
M5	1.16	19			
M8	2.01	32.9			
M9	2.01	32.9			
V1	.66	10.8			
R1A			3000	207	
R1B			3000	207	
R2A			2300	159	
R3			1500	103	
R4			50	3	
R5			180	12	
R6			4000	276	
R7			1250	86	

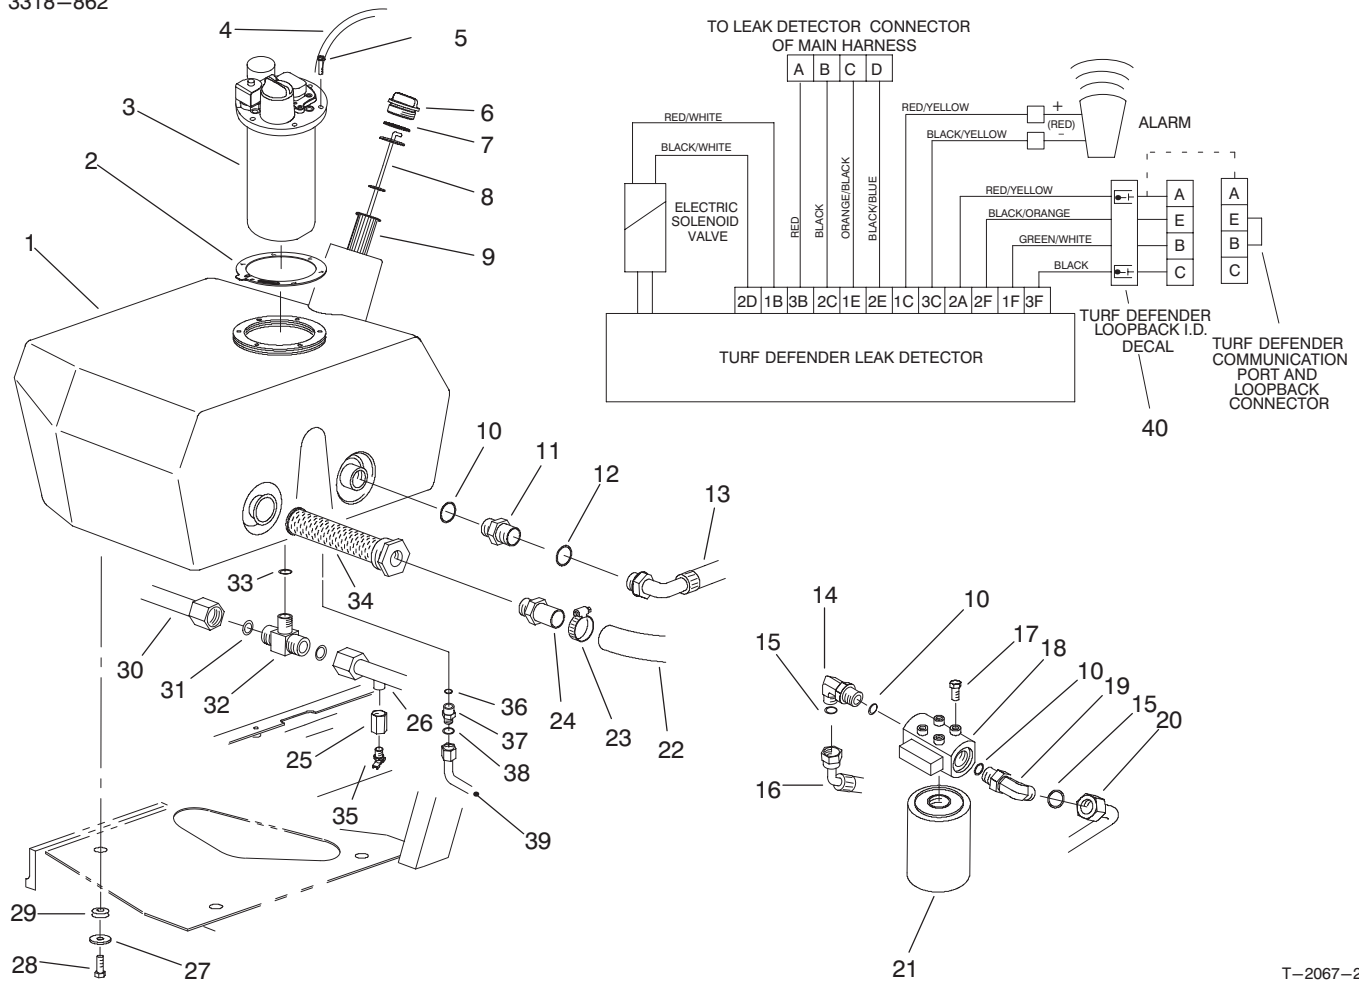 


T-2067-2

LEAK DETECTOR, FILTER & RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-7488	Tank - Hydraulic	1
2	94-2660	Gasket - Flange	1
3	94-2650	Asm. - Detector, Leak	1
4	94-4222	Wire Harness	1
5	94-3559	Screw - Hex. Hd. Flange	6
6	93-7498	Plug - Plastic	1
7	94-8166	O-Ring	1
8	94-9411	Dipstick	1
9	61-2790	Filter - Screen	1
10	237-81	O-Ring	3
11	340-9	Fitting - Hydraulic (Incl. Ref. #10 & 12)	1
12	237-58	O-Ring	1
13	92-7489	Hose - Return	1
14	340-139	Fitting - Elbow 90° (Incl. Ref. #10 & 15)	1
15	237-65	O-Ring	2
16	92-7490	Hose - Filter	1
17	3234-1	Screw	2
18	94-2620	Head - Filter (Incl. Ref. #21)	1
19	340-142	Fitting - Hydraulic 90° (Incl. Ref. #10 & 15)	1

Ref. No.	Part No.	Description	No. Used
20	92-7493	Hose - Filter	1
21	94-2621	Element	1
22	92-7465	Hose - Suction	1
23	2412-111	Clamp	1
24	92-7525	Fitting - Hose	1
25	94-8145	Fitting - Hyd.	1
26	94-1446	Tube - Drain	1
27	63-8410	Washer - Flat	3
28	33105-025	Screw - Hex. Hd. Flange	3
29	240-11	Grommet	3
30	92-7478	Tube - Motor, RH	1
31	237-30	O-Ring	2
32	340-157	Fitting - Tee (Incl. Ref. #31 & 33)	1
33	237-79	O-Ring	1
34	92-7527	Strainer - Suction	1
35	304-46	Valve - Drain Cock	3
36	237-42	O-Ring	1
37	340-2	Adapter (Incl. Ref. #36 & 38)	1
38	237-22	O-Ring	1
39	94-1447	Tube - Steering, Return	1
40	94-6345	Decal - Wire Identification	1

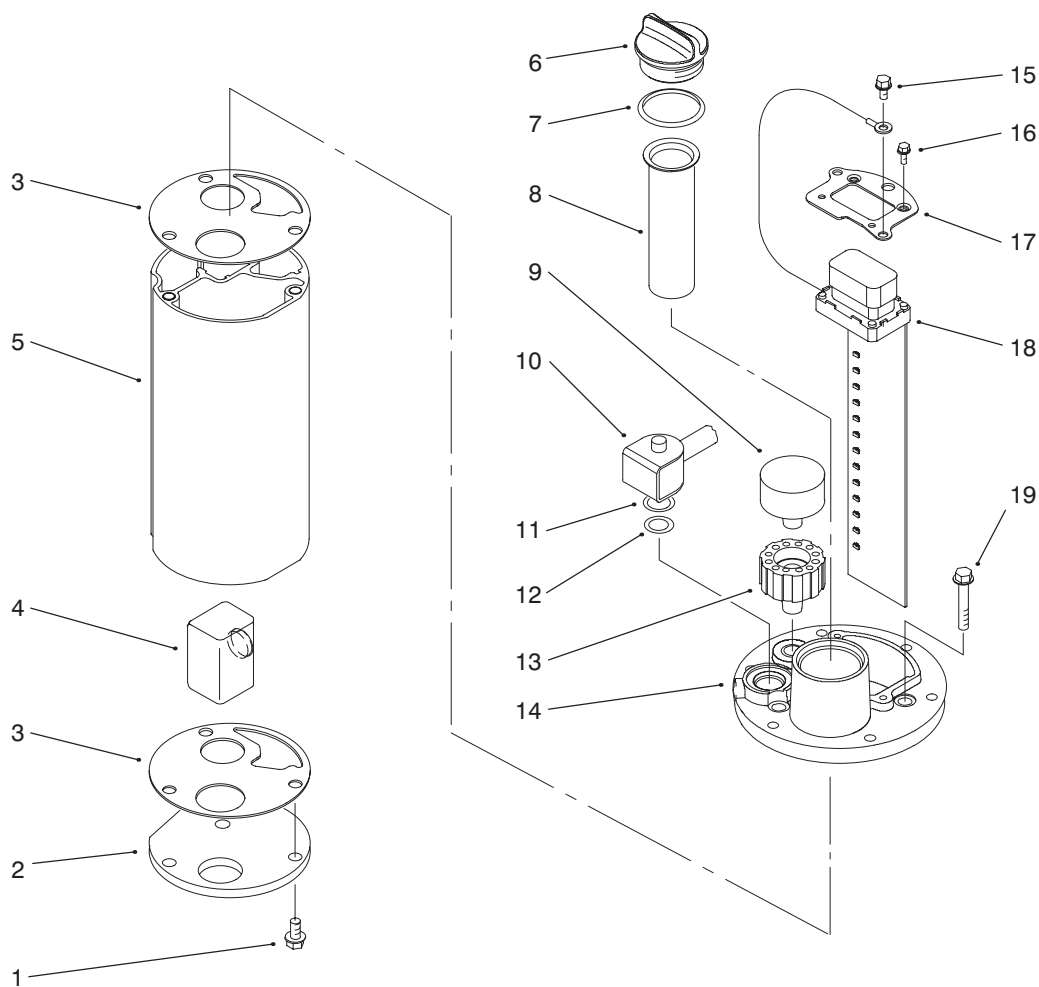 


T-2463-1

LEAK DETECTOR ASSEMBLY NO. 94-2650

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - HH	3	11	237-79	O-Ring	1
2	94-2651	Cover - Bottom	1	12	237-122	O-Ring	1
3	92-2652	Gasket - Extrusion	2	13	92-8020	Adapter - Breather	1
4	95-2713	Asm. - Float	1	†14		Housing - Leak Detector	1
†5		Extrusion - Leak Detector	1	15	32144-73	Screw - HWHTF	2
6	93-7498	Plug - Plastic	1	†16		Screw - PPH	4
7	237-101	O-Ring	1	†17		Plate - Connector	1
8	92-1705	Screen - Filter	1	†18		Asm. - Board, Circuit	1
9	68-6150	Breather - Air	1	19	3274-86	Screw - HSH	3
10	94-2658	Valve - Solenoid	1				

 †Not serviced separately.

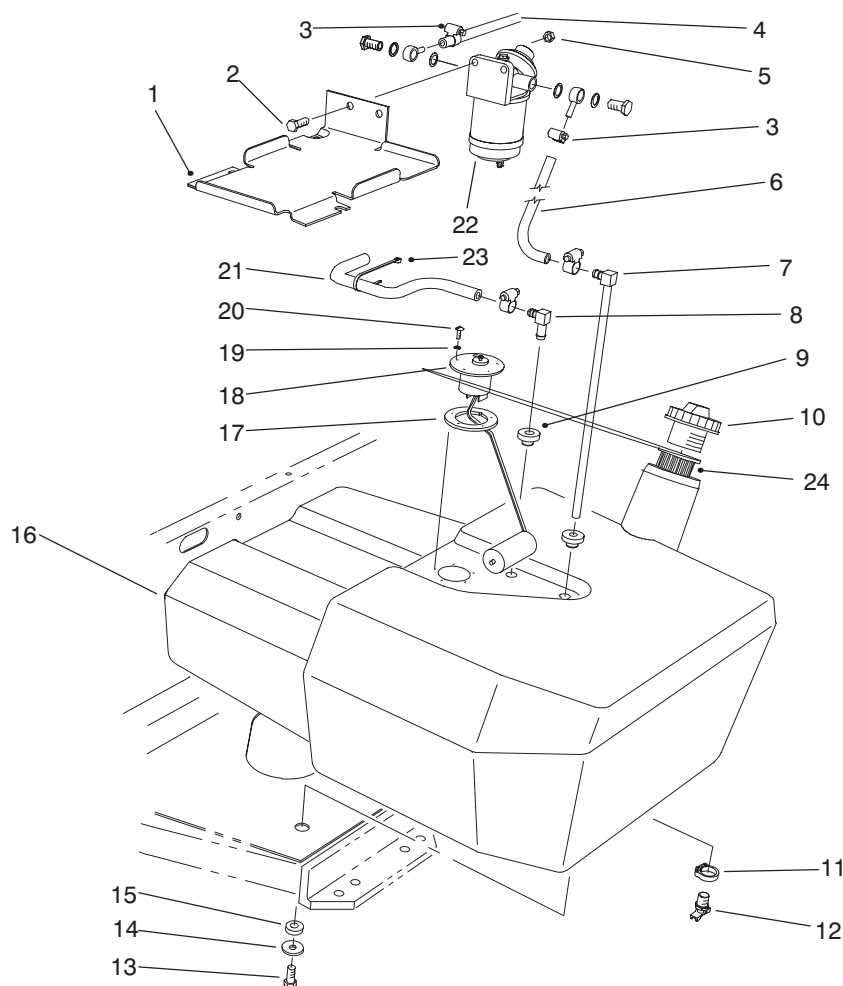


T-2068-1

FUEL TANK & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-7974	Plate - Box, Battery	1
2	33105-030	Screw - Hex. Hd. Flange	2
3	2412-108	Clamp - Hose	4
4	63-7627	Hose - Fuel	1
5	33005-00	Nut - Hex. Flange	2
6	92-7522	Hose - Fuel	1
7	66-8121	Standpipe	1
8	46-6550	Fitting - Connector	1
9	46-6560	Bushing	2
10	93-3102	Cap - Fuel, Diesel	1
11	2412-36	Clamp - Drain	1
12	304-46	Fitting - Drain	1
13	33105-025	Screw - Hex. Hd. Flange	3

Ref. No.	Part No.	Description	No. Used
14	63-8410	Washer - Flat	3
15	240-11	Grommet	3
16	92-7422	Tank - Fuel (Incl. Ref. #11 & 12)	1
17	62-7650	Gasket	1
18	63-7640	Sender - Fuel	1
19	3253-15	Washer - Lock	5
20	32122-24	Screw	5
21	92-7521	Hose - Fuel	1
†22	76-5300	Assembly - Filter, Fuel	1
23	3290-378	Tie - Cable	3
24	61-2790	Filler - Screen	1

 
†Furnished with engine.

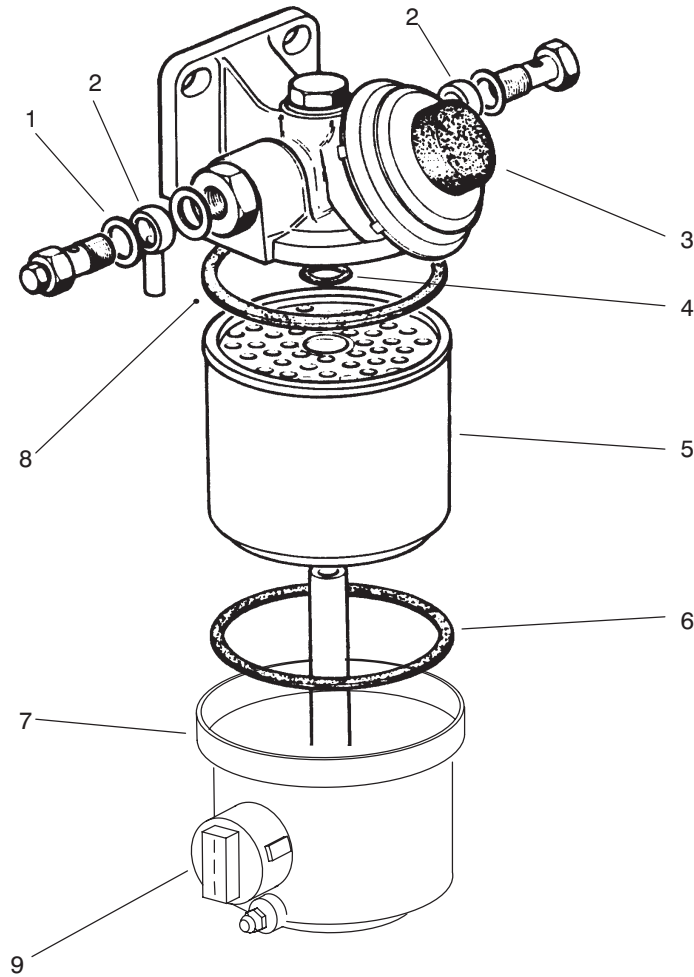

T-0966-1

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5180	Washer - Copper	4	6		Seal - Gasket	1
2	76-5190	Fitting - Adjustable	2	7		Cap - Filter, Fuel	1
3	76-5300	Assembly - Filter, Fuel (Incl. Ref. #7 & 9)	1	8		Seal - Gasket	1
4		O-Ring	1	9	76-5320	Sensor - Water	1
5	76-5220	Element - Filter (Incl. Ref. #4, 6 & 8)	1				

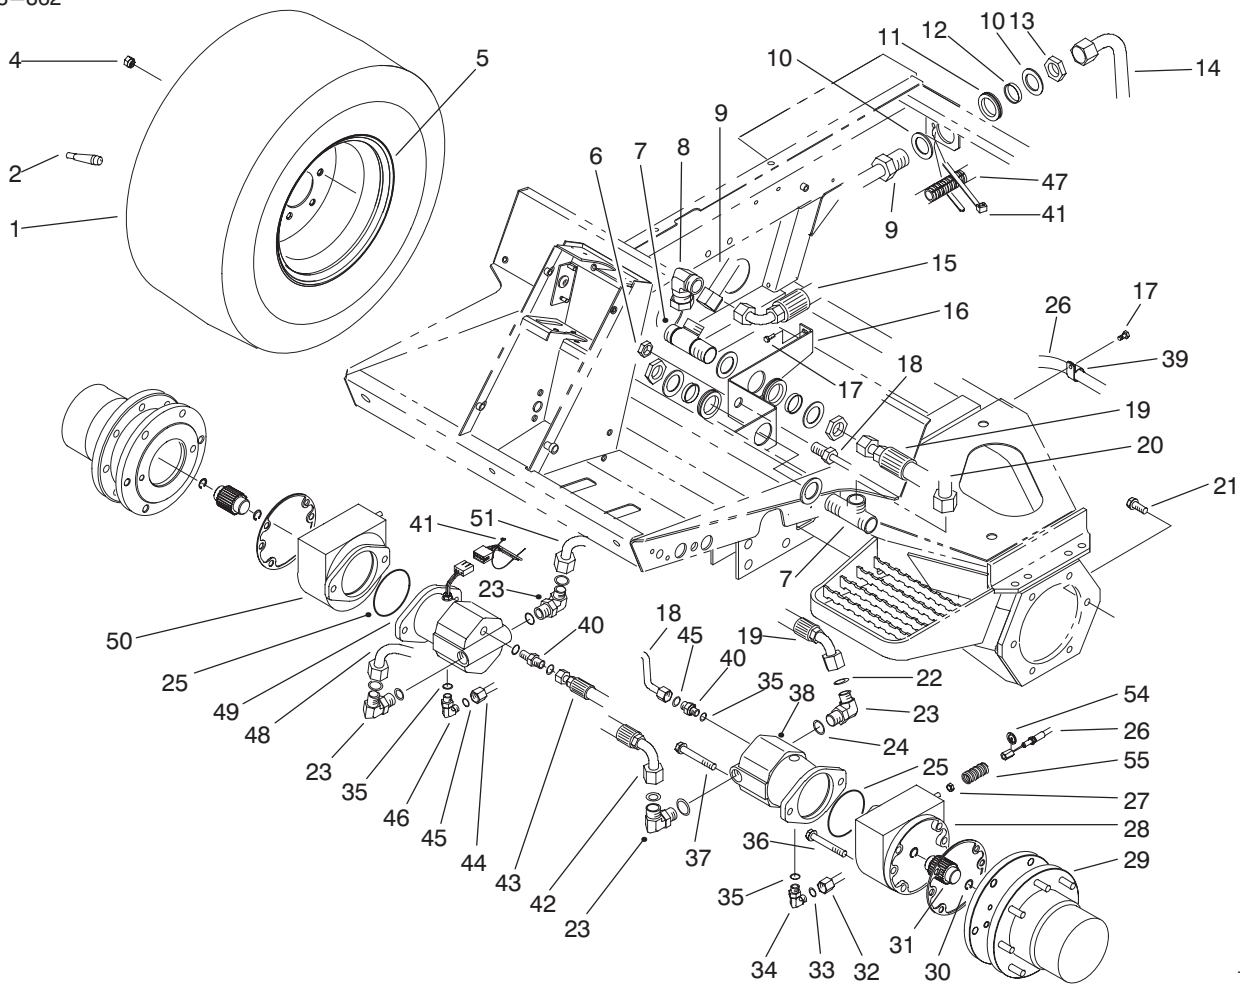 


T-2069-2

FRONT HYDRAULIC DRIVE & BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-8143	Tire	2
2	232-24	Stem - Valve	2
4	92-7483	Nut - Lug	16
5	94-8149	Rim	2
6	340-127	Nut - Bulkhead	1
7	92-7550	Fitting - Tee, Bulkhead (Incl. Ref. #53)	2
8	92-7645	Fitting - Hydraulic 90° (Model 03800)	1
9	92-7474	Assembly - Tube, Front (Model 03801)	1
10	69-8920	Washer (Model 03800)	4
10	69-8920	Washer (Model 03801)	6
11	240-2	Grommet (Model 03800)	2
11	240-2	Grommet (Model 03801)	3
12	69-8950	Spacer (Model 03800)	2
12	69-8950	Spacer (Model 03801)	3
13	340-128	Nut - Bulkhead (Model 03800)	2
13	340-128	Nut - Bulkhead (Model 03801)	3

Ref. No.	Part No.	Description	No. Used
14	92-7473	Assembly - Tube, Rear (Model 03801)	1
15	92-7634	Assembly - Hose, Traction (Model 03800)	1
16	92-7455	Plate - Bulkhead	1
17	32144-11	Screw - Thread Forming	5
18	92-7477	Assembly Tube, Motor Drain	1
19	92-7486	Assembly - Hose	1
20	92-7485	Assembly - Hose	1
21	33106-030	Screw - Hex. Hd. Flange	12
22	237-58	O-Ring	4
23	340-142	Fitting - Hydraulic 90° (Incl. Ref. #22 & 24)	4
24	237-81	O-Ring	4
25	237-166	O-Ring	2
26	92-7530	Cable - Brake, LH	1
27	3218-4	Nut - Jam	2
28	92-7417	Assembly - Brake, LH	1
29	92-7415	Assembly - Drive, Planetary	2
30	93-7972	Ring - Retaining	4
31	93-7966	Shaft - Splined, Brake	2
32	92-7598	Assembly - Tube, Frt. Drain	1
33	237-22	O-Ring	1
34	340-18	Fitting - Hydraulic 90° (Incl. Ref. #33 & 35)	1
35	237-79	O-Ring	4
36	33106-090	Screw - Hex. Hd. Flange	8

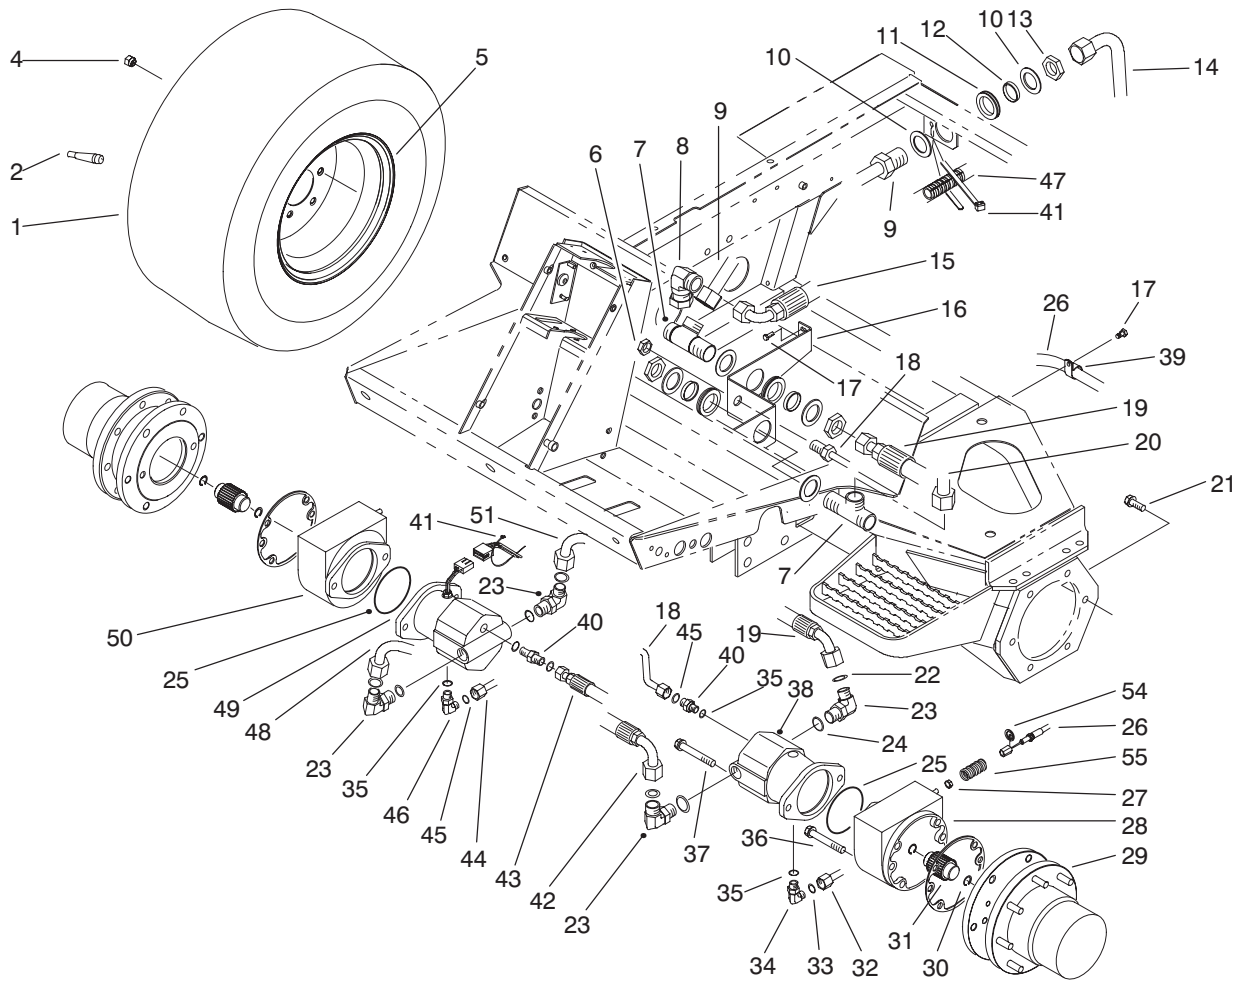 


T-2069-2

FRONT HYDRAULIC DRIVE & BRAKE ASM. (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
37	33116-120	Screw - Hex. Hd.	4	46	340-98	Fitting - Hydraulic 90° (Incl. Ref. #35 & 45)	1
38	92-7385	Motor - Planetary	1	47	94-3090	Harness - Wire, Main	1
39	2412-93	R-Clamp	2	48	92-7476	Assembly - Tube, Traction	1
40	340-5	Fitting - Hydraulic (Incl. Ref. #22 & 24)	2	49	93-7476	Motor - Hydraulic W/Sensor	1
41	3290-378	Tie - Cable	3	50	92-7414	Assembly - Brake, RH	1
42	92-7487	Assembly - Tube	1	51	92-7475	Assembly - Tube, Traction	1
43	92-7488	Assembly - Hose	1	*53	340-65	O-Ring	6
44	92-7478	Assembly - Tube, Motor RH	1	54	94-3050	Plate - Spring	2
45	237-30	O-Ring	3	55	94-3088	Spring - Brake	2

 *Not Illustrated

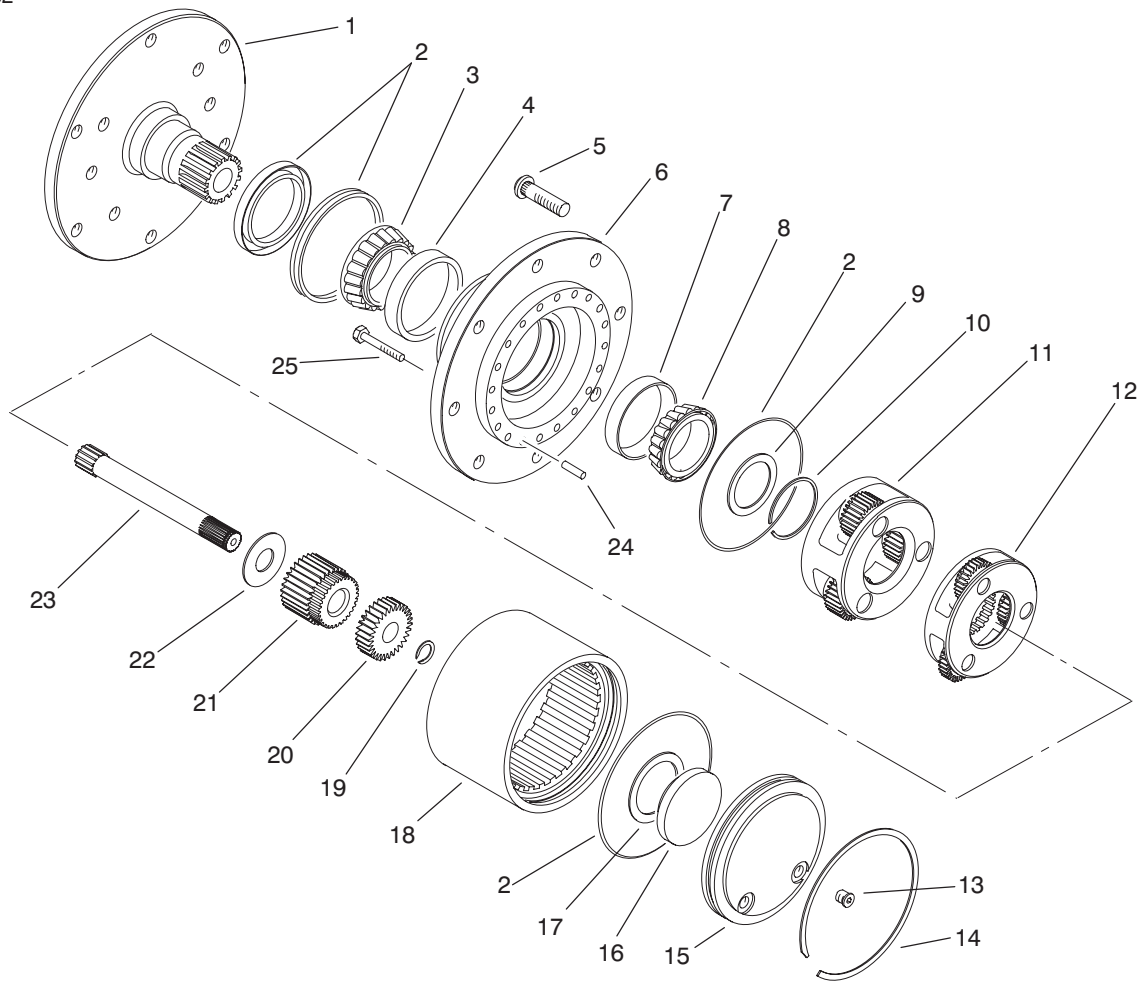


T-2070-1

PLANETARY DRIVE ASSEMBLY NO. 92-7415

Ref. No.	Part No.	Description	No. Used
1	93-7450	Spindle	1
2	93-7474	Kit - Seal	1
3	93-7451	Cone - Bearing	1
4	93-7452	Cup - Bearing	1
5	93-7455	Stud - Wheel	8
6	93-7453	Housing	1
7	93-7470	Cup - Bearing	1
8	93-7469	Cone - Bearing	1
9	93-7468	Washer - Thrust	1
10	93-7467	Ring - Retaining, External	1
11	93-7472	Asm - Carrier, Secondary	1
12	93-7473	Asm - Carrier, Primary	1
13	93-7461	Plug - Pipe	2
14	93-7462	Ring - Retaining, Internal	1

Ref. No.	Part No.	Description	No. Used
15	93-7458	Plate - Cover	1
16	93-7457	Spacer - Input	1
17	93-7460	Washer - Thrust	1
18	93-7456	Gear - Ring	1
19	93-7459	Ring - Retaining, External	1
20	93-7463	Gear - Sun	1
21	93-7464	Gear - Sun	1
22	93-7465	Washer - Thrust	1
23	93-7471	Shaft - Input	1
24	93-7466	Pin - Dowel	2
25	93-7454	Screw - HH	18
*	92-7415	Asm - Complete (Incl. Ref. #1-25)	1

 *Not Illustrated

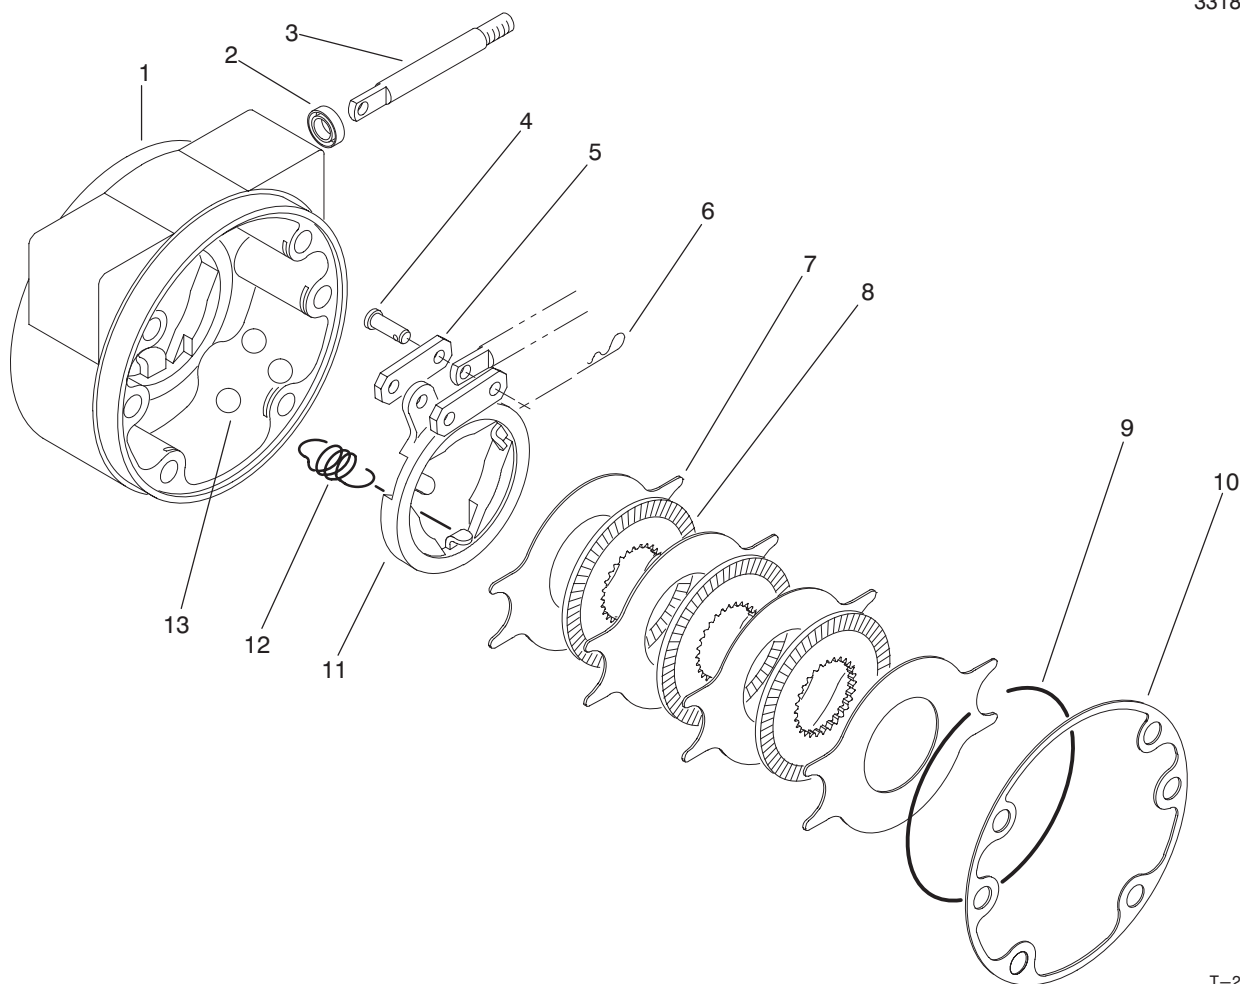


T-2071-1

BRAKE ASM NO. 92-7414 RH & 92-7417 LH (Shown)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		Housing - Brake, LH	1	7	93-7986	Disc - Stationary	4
†*		Housing - Brake, RH	1	8	93-7981	Disc - Rotating	3
2	93-7977	Seal	1	9	93-7976	Ring - Retaining	1
3	93-7978	Rod - Pull	1	10	93-7984	Gasket	1
4	93-7983	Pin - Clevis	2	11	93-7982	Actuator	1
5	93-7980	Link	2	12	93-7987	Spring - Extension	3
6	93-7979	Pin - Cotter, Hair	2	13	93-7985	Ball	3

*Not Illustrated

 †Not Serviced Separately

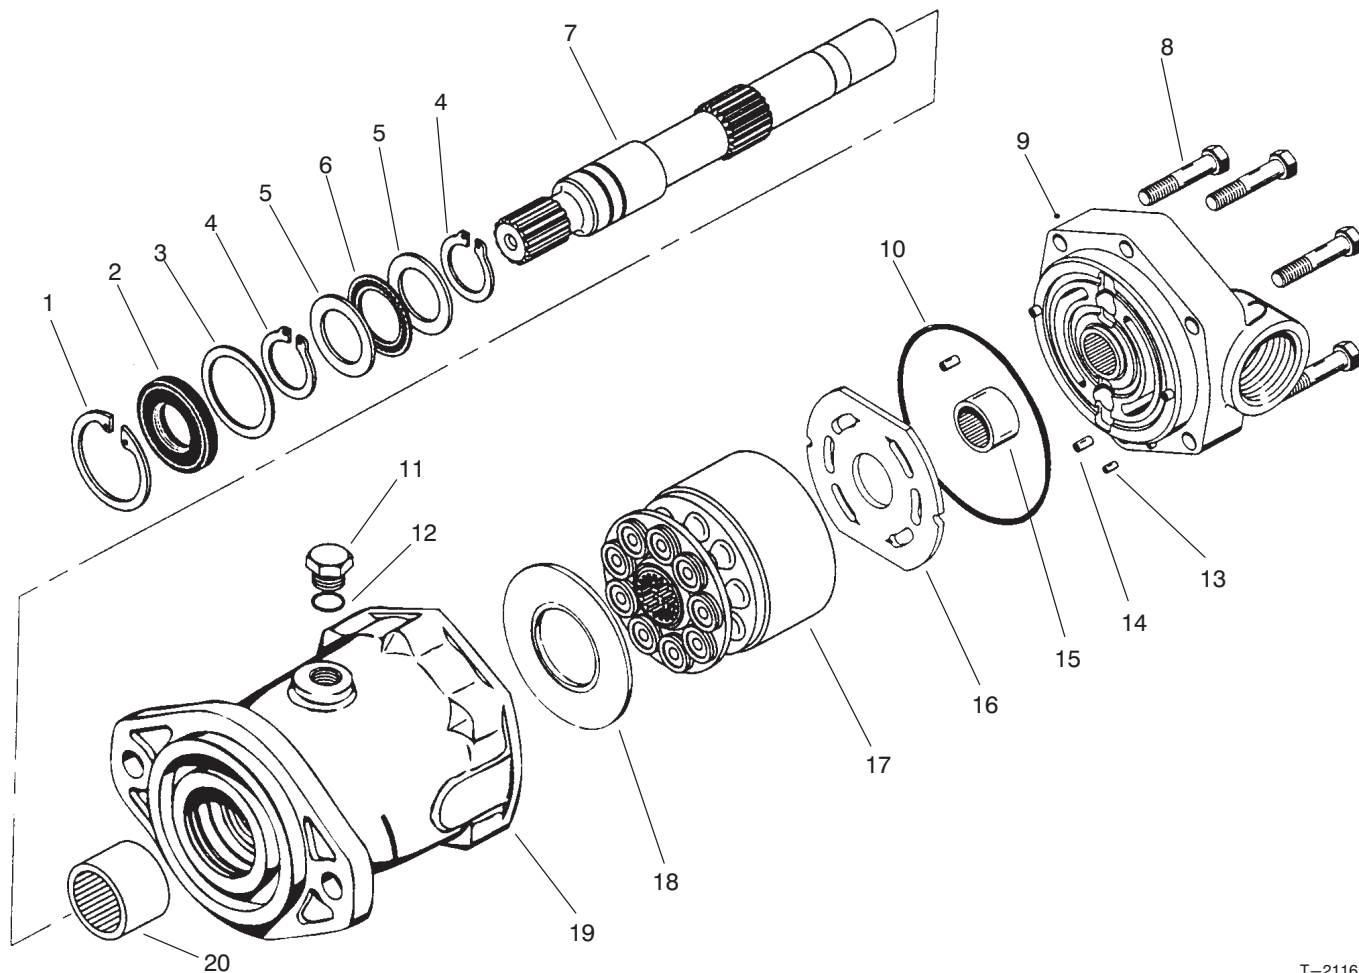


T-2116-1

HYDRAULIC MOTOR ASSEMBLY NO. 92-7385

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring - Retaining	1
2	94-3008	Seal - Shaft	1
3	94-3007	Washer	1
4	76-7000	Ring - Retaining	2
5	76-6950	Race - Thrust	2
6	76-6960	Bearing - Thrust	1
7	94-3004	Shaft - Drive, Splined	1
8	94-3002	Screw - HH	6
9	94-3005	Asm. - Backplate (Incl. Ref. #13-15)	1
10	76-6980	O-Ring	1
11	94-3009	Asm. - Plug	


Ref. No.	Part No.	Description	No. Used
		(Incl. Ref. #12)	1
12		O—Ring	1
13		Pin — Dowel	1
14		Pin — Dowel	3
15		Bearing — Needle	1
16	94—3003	Plate — Valve	1
17	76—6910	Kit — Rotating	1
18	76—6970	Insert — Camplate	1
19	94—3006	Housing	
		(Incl. Ref. #20)	1
20		Bearing — Needle	1

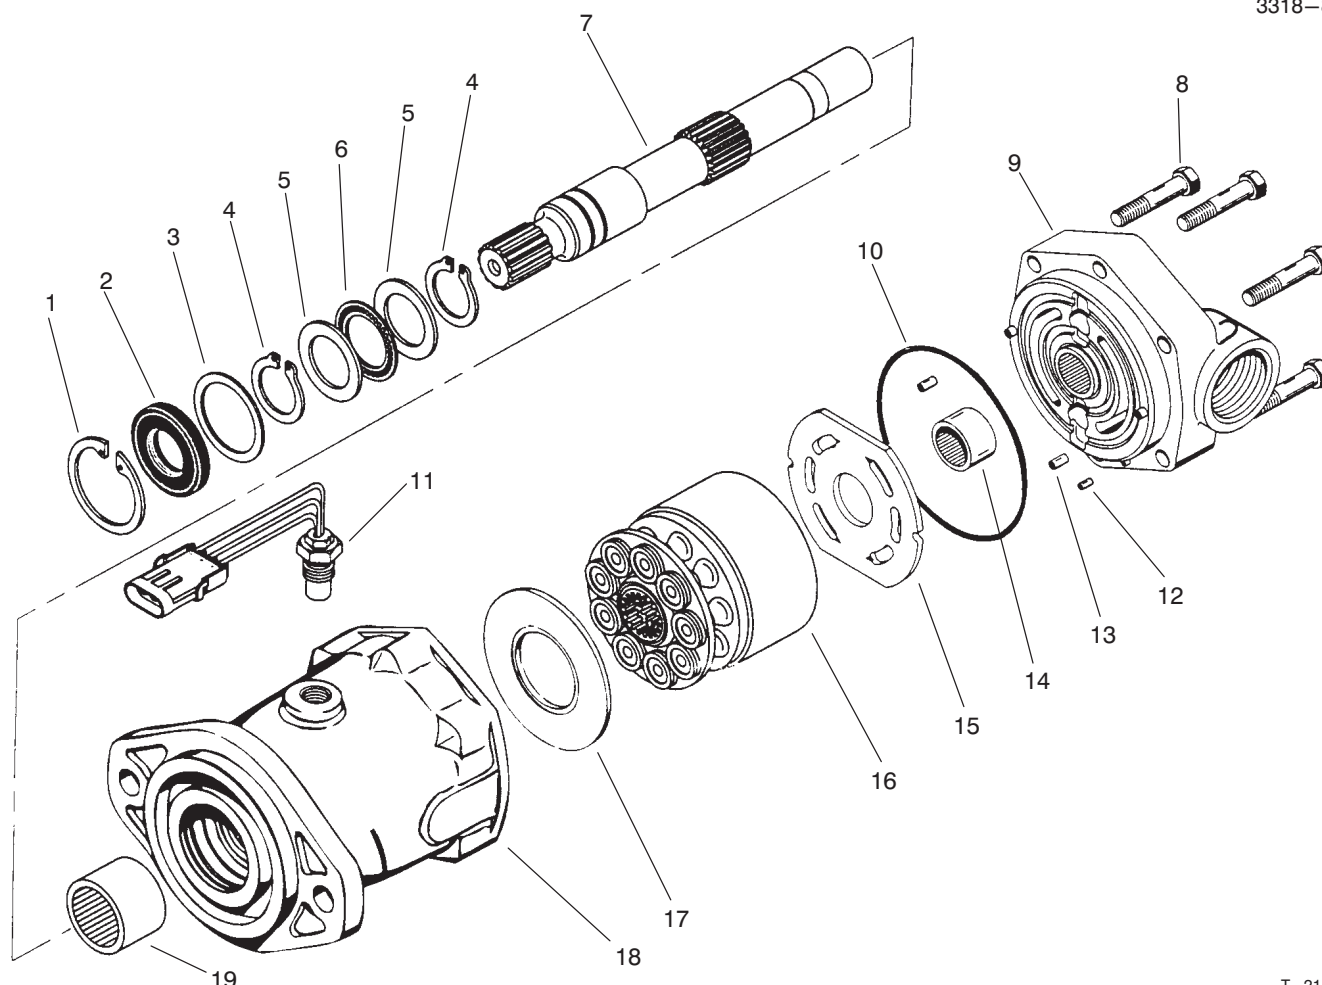 

T-2117-1

HYDRAULIC MOTOR ASM. NO. 93-7476 W/SENSOR

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring - Retaining	1	11	94-3010	Sensor - Speed Pickup	1
2	94-3008	Seal - Shaft	1	12		Pin - Dowel	1
3	94-3007	Washer	1	13		Pin - Dowel	3
4	76-7000	Ring - Retaining	2	14		Bearing - Needle	1
5	76-6950	Race - Thrust	2	15	94-3003	Plate - Valve	1
6	76-6960	Bearing - Thrust	1	16	76-6910	Kit - Rotating	1
7	94-3004	Shaft - Drive, Splined	1	17	76-6970	Insert - Camplate	1
8	94-3002	Screw - HH	6	18	94-3006	Housing	1
9	94-3005	Asm. - Backplate (Incl. Ref. #12-14)	1	19		(Incl. Ref. #19) Bearing - Needle	1
10	76-6980	O-Ring	1				

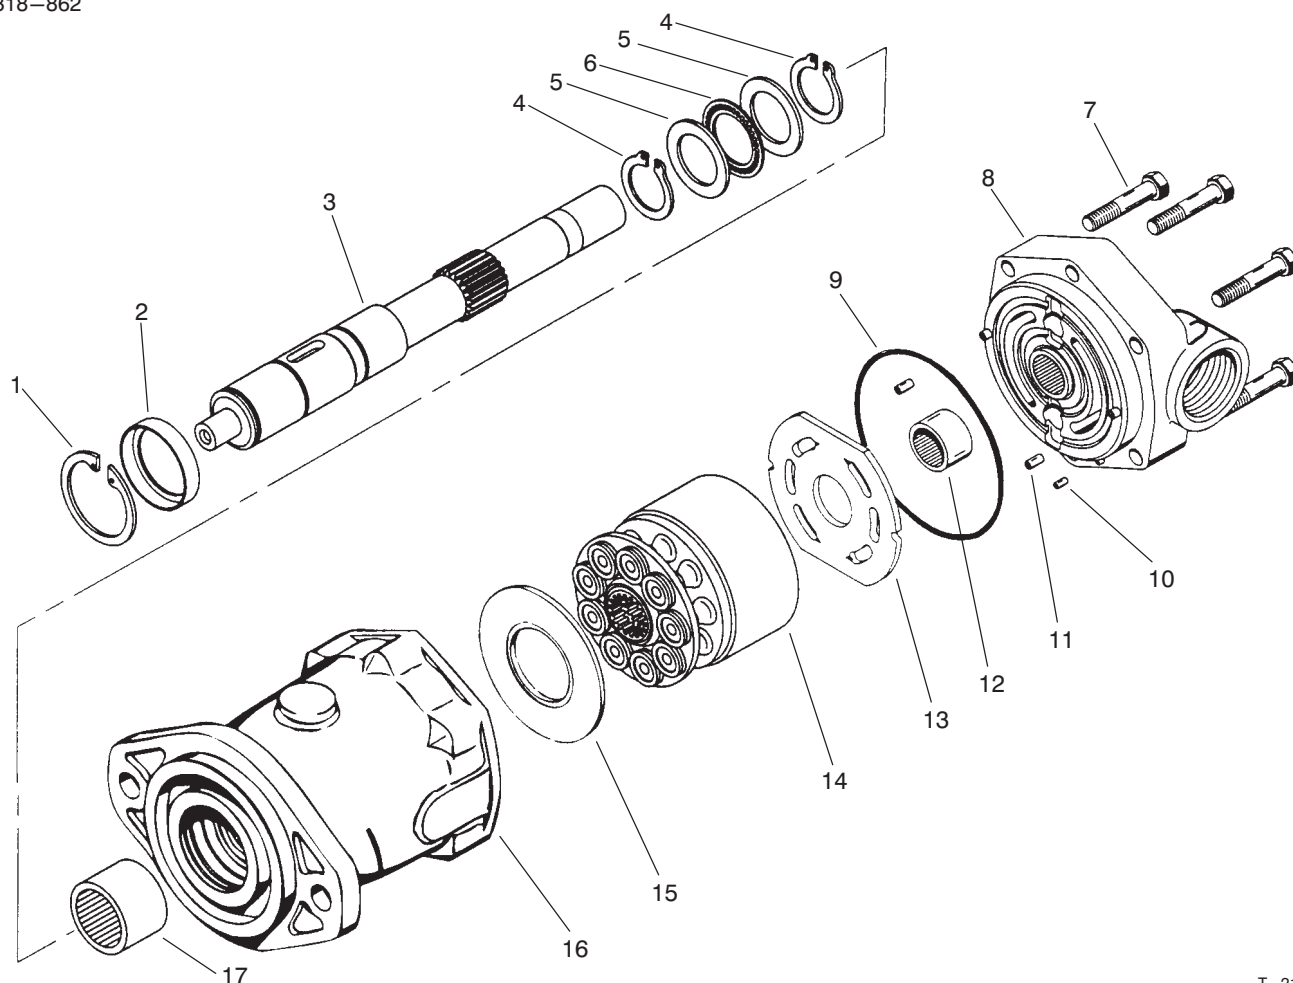 


T-2118-1

4 WD HYDRAULIC MOTOR ASM. NO. 92-7386

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring - Retaining	1
2	76-7020	Spacer	1
3	76-6930	Shaft - Drive, Straight	1
4	76-7000	Ring - Retaining	2
5	76-6950	Race - Thrust	2
6	76-6960	Bearing - Thrust	1
7	94-3002	Screw - HH	6
8	94-3000	Asm. - Backplate (Incl. Ref. #10-12)	1
9	76-6980	O-Ring	1

Ref. No.	Part No.	Description	No. Used
10		Pin - Dowel	3
11		Pin - Dowel	1
12		Bearing - Needle	1
13	94-3003	Plate - Valve	1
14	76-6910	Kit - Rotating	1
15	76-6970	Insert - Camplate	1
16	94-3001	Housing (Incl. Ref. #17)	1
17		Bearing - Needle	1

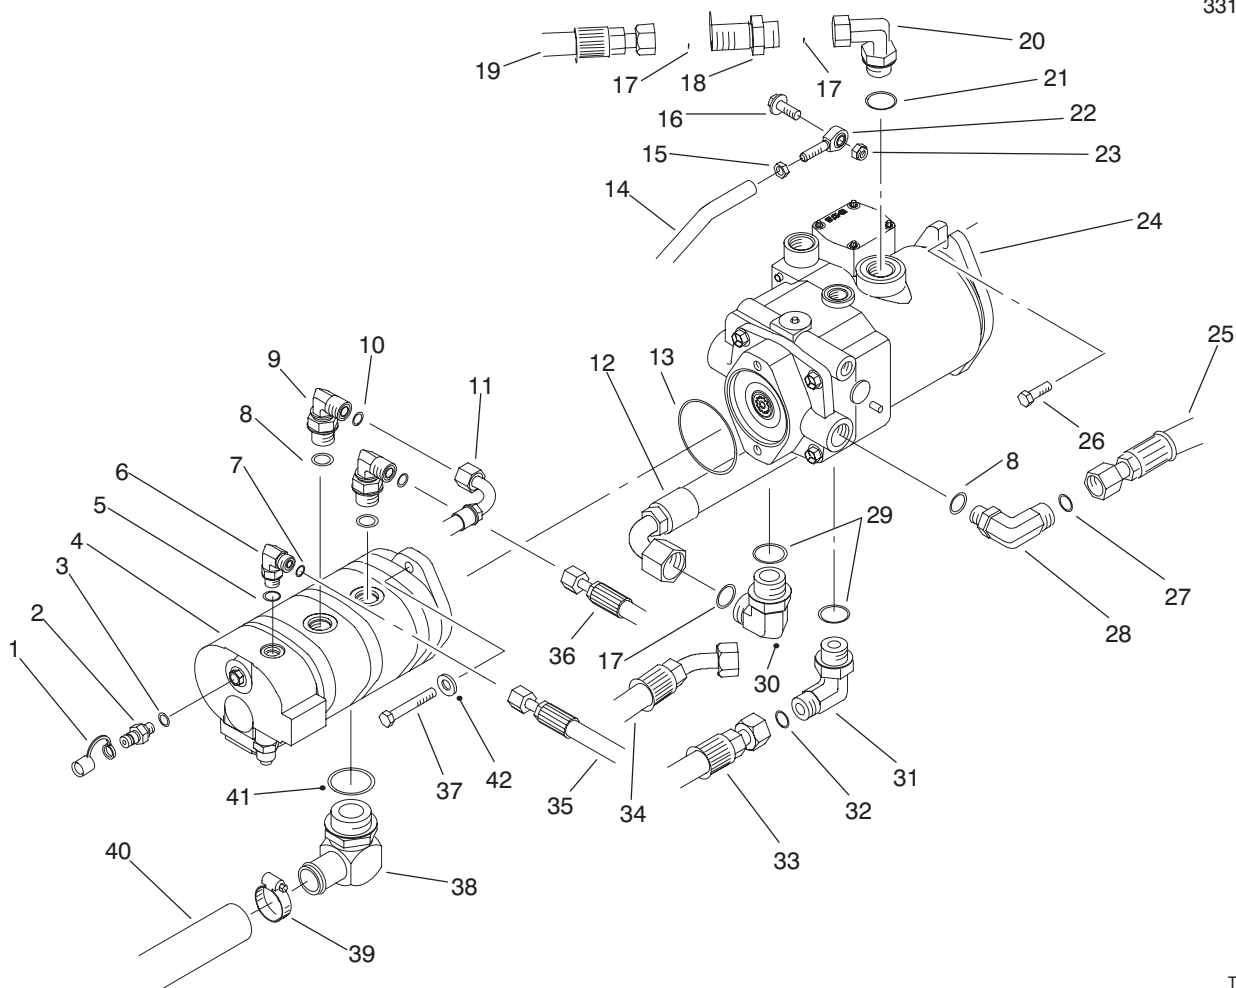 

T-2072-1


PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	354-79	Cap - Dust	4
2	354-77	Fitting - Quick Connect (Incl. Ref. #3)	4
3	237-78	O-Ring	4
4	93-2175	Assembly - Pump, Gear	1
5	237-42	O-Ring	1
6	340-77	Fitting - Hydraulic 90° (Incl. Ref. #5 & 7)	1
7	237-22	O-Ring	1
8	237-80	O-Ring	3
9	340-105	Fitting - Hydraulic 90° (Incl. Ref. #8 & 10)	2
10	237-30	O-Ring	2
11	92-7491	Assembly - Hose	1
12	92-7484	Assembly - Hose (Model No. 03801)	1
13	237-99	O-Ring	1
14	92-7531	Tube - Rod, Control	1
15	3220-3	Nut - Jam	1
16	3234-11	Screw - Flange Head	1
17	237-58	O-Ring	3
18	94-2637	Fitting - Hydraulic, Straight (Incl. Ref. #17)	1
19	92-7489	Hose - Return	1
20	94-2636	Fitting - Hydraulic 90°	1
21	237-81	O-Ring	1
22	2411-36	Bearing - Rod End	1
23	3296-59	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
24	95-3450	Pump - Piston	1
25	92-7490	Assembly - Hose, Filter	1
26	82-5050	Screw - Cap Hex. Hd.	2
27	237-65	O-Ring	1
28	340-17	Fitting - Hydraulic 90° (Incl. Ref. #8 & 27)	1
29	237-146	O-Ring	2
30	340-15	Fitting - Hydraulic 90° (Incl. Ref. #17 & 29) (Model No. 03801)	1
30	340-129	Fitting - Hydraulic 90° (Incl. Ref. #29 & 32) (Model No. 03800)	1
31	340-129	Fitting - Hydraulic 90° (Incl. Ref. #29 & 32)	1
32	340-65	O-Ring	2
33	92-7485	Assembly - Hose	1
34	92-7634	Assembly - Hose, Traction (Model No. 03800)	1
35	92-7622	Assembly - Hose, Steering	1
36	92-7492	Assembly - Hose	1
37	323-7	Screw - Cap Hex. Hd.	2
38	92-7526	Fitting - Hydraulic, Suction	1
39	2412-111	Clamp - Hose	2
40	92-7465	Hose - Suction	1
41	237-101	O-Ring	1
42	3256-46	Washer - Flat	2

*Not Illustrated

 GEAR PUMP ASSEMBLY NO. 93-2175

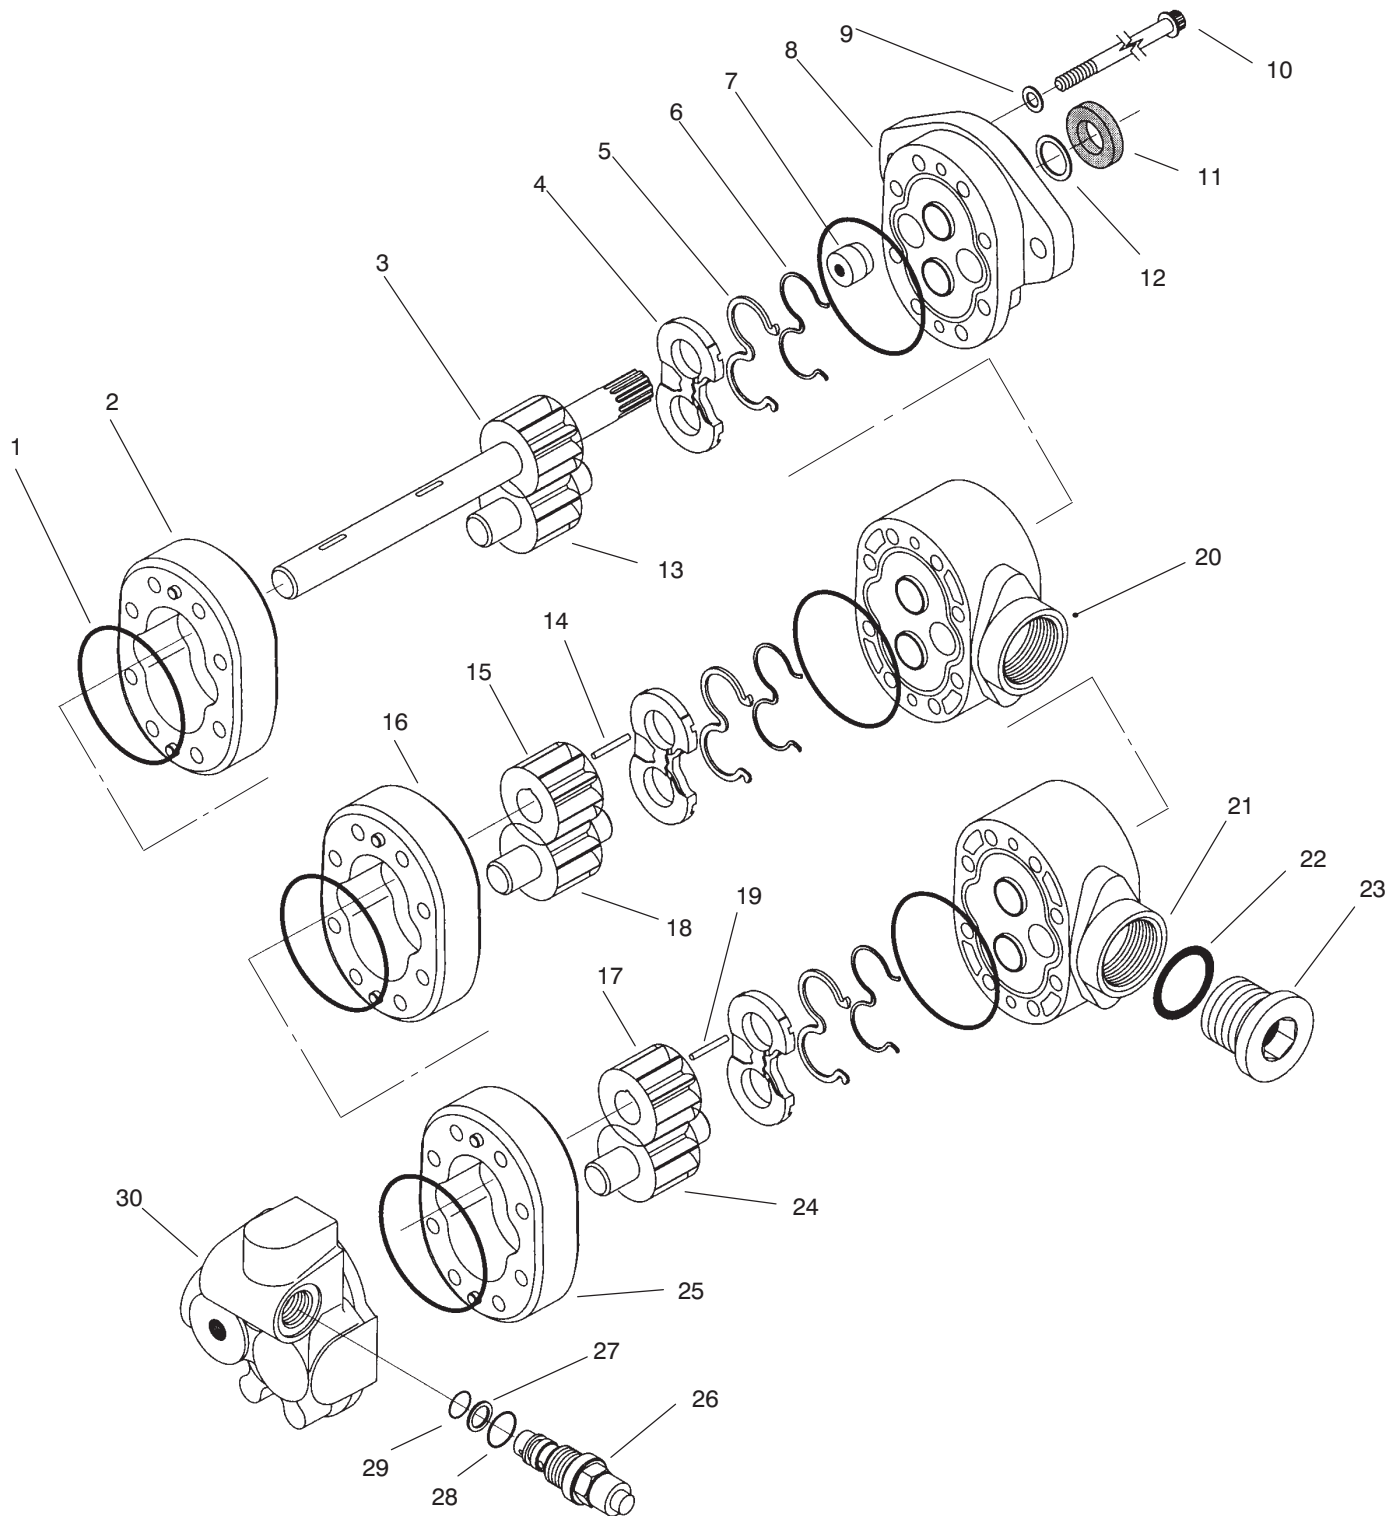


GEAR PUMP ASSEMBLY NO. 93—2175

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	56—6710	O—Ring	6	†18		Gear — Idler	1
†2		Body	1	†19		Key	1
†3		Asm. — Gear, Drive	1	†20		Plate — Adaptor	1
4		Plate — Wear	3	†21		Plate — Adaptor	1
5		Seal — Pressure, Balance	3	†22		O—Ring	1
6		Gasket — Backup	3	23	94—3013	Plug	
7	94—3011	Plug	1			(Incl. Ref. #22)	1
†8		Asm. — Plate, Front	1	†24		Gear — Idler	1
9	74—8920	Washer — Copper	4	†25		Body	1
10	94—3012	Screw — Cap	8	26	94—3014	Valve — Relief	
11	49—2640	Seal — Shaft	1			(Incl. Ref. #27—29)	1
12	60—5890	Washer	1	†27		Washer — Backup	1
†13		Gear — Idler	1	†28		O—Ring	1
†14		Key	1	†29		O—Ring	1
†15		Gear	1	†30		Asm. — Backplate	1
†16		Body	1	*	94—3015	Kit — Seal	
†17		Gear	1			(Incl. Ref. #1, & 4—6)	1

*Not Illustrated

†Not Serviced Separately

 SERVO CONTROLLED PISTON PUMP ASM. NO. 92-7383

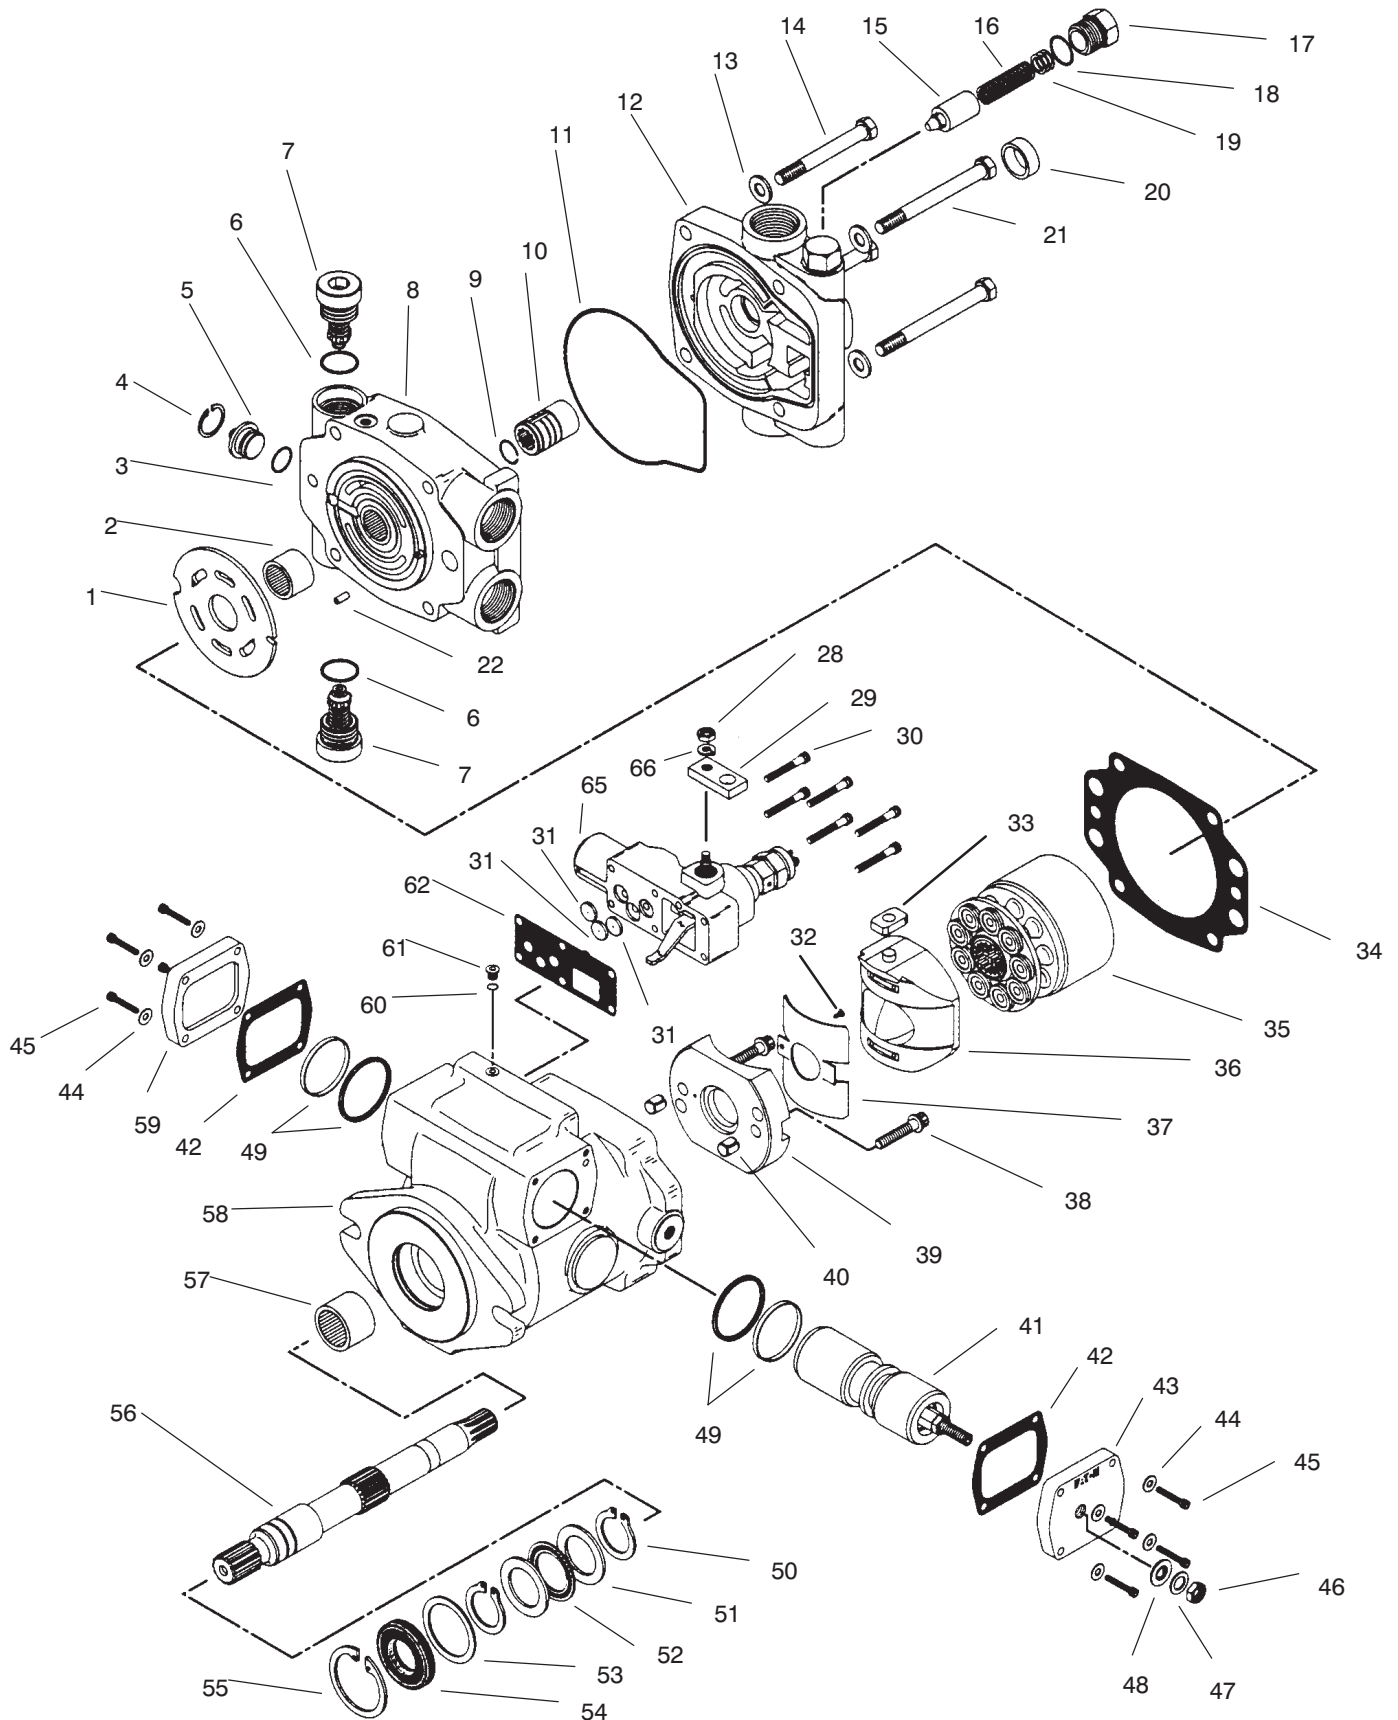


SERVO CONTROLLED PISTON PUMP ASM. NO. 92-7383

Ref. No.	Part No.	Description	No. Used
1	94-3022	Plate - Valve	1
†2		Bearing	1
3	94-3036	Ring - Quad	1
4	94-3037	Ring - Retaining	1
5	94-3038	Plug - Dump Valve	1
†6		O-Ring	2
7	94-9999	Valve - Relief	2
8	94-3016	Asm. - Backplate (Incl. Ref. #2 & 22)	1
9	94-3035	Ring - Lock	1
10	94-3023	Coupler	1
†11		O-Ring, Molded	1
12	94-3017	Adaptor - Charge Relief (Incl. Ref. #15-20)	1
13	3256-24	Washer - Flat	4
14	94-3028	Screw - Cap	2
†15		Poppet	2
†16		Spring	2
†17		Plug	1
†18		O-Ring	1
†19		Washer	3
†20		Bushing	1
21	94-3029	Screw - Cap	2
†22		Pin - Roll	1
28	3217-5	Nut	1
29	94-3031	Arm - Control	1
30	3274-59	Screw - Cap	6
31	94-3040	Orifice - Valve, Control	3
†32		Screw	1
33	94-3032	Follower - Piston	1
†34		Gasket - Housing	1
35	94-3021	Asm. - Kit, Rotating	1
36	94-3026	Asm. - Camplate	1

Ref. No.	Part No.	Description	No. Used
†37		Bushing	1
†38		Screw - Cap	1
†39		Asm. - Cradle	1
†40		Dowel - Bushing	2
41	94-3025	Asm. - Piston, Servo	1
†42		Gasket - Plate, Cover	2
43	94-3034	Plate - Cover	1
44	3256-77	Washer - Flat	8
45	3274-81	Screw - Cap	8
46	3220-3	Nut - Jam	1
47	94-3030	Washer	1
48	94-3027	Washer - Seal	1
†49		Seal	2
50	76-7000	Ring - Retaining	2
51	76-6950	Race - Thrust	1
52	76-6960	Bearing - Thrust	1
53	94-3007	Washer	1
54	94-3008	Seal - Shaft	1
55	76-7010	Ring - Retaining	1
56	94-3020	Shaft - Drive	1
†57		Bearing	1
58	94-3018	Asm. - Housing (Incl. Ref. #32, 37-40, 49, 57, & 60-61)	1
59	94-3033	Plate - Cover	1
†60		O-Ring	1
†61		Plug	1
†62		Gasket	1
65	94-3019	Control - Servo, Manual	1
66	3253-3	Washer - Lock	1
*	94-3039	Kit - Seal (Incl. Ref. #11, 34, 42 & 62)	1

*Not Illustrated

 † Not Serviced Separately.

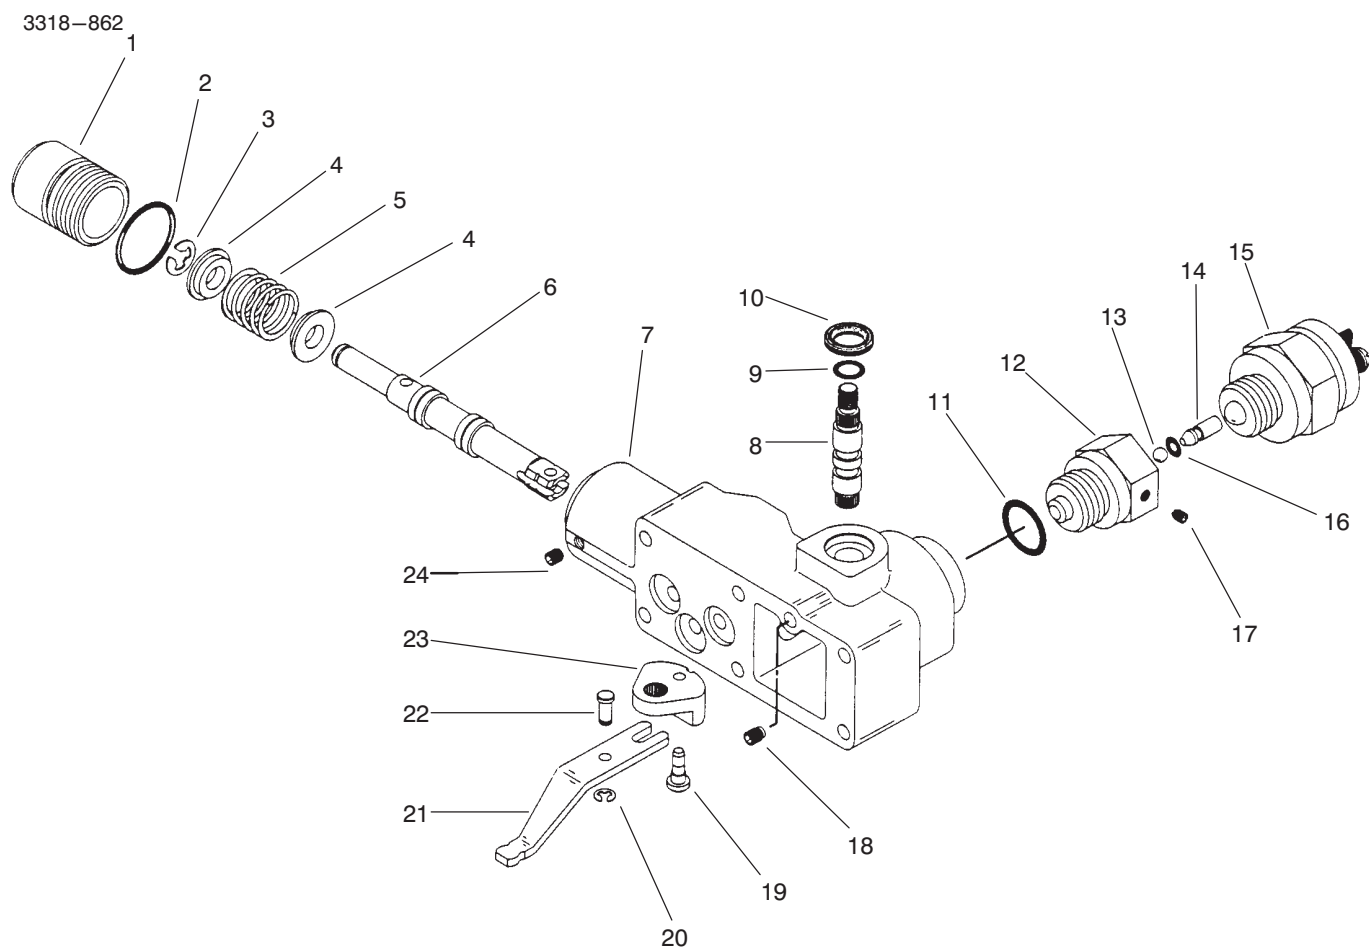


T-2119-1

MANUAL SERVO CONTROL NO. 94-3019

Ref. No.	Part No.	Description	No. Used
1		Plug	1
2		O-Ring	1
3		Ring - Retaining	1
4		Retainer - Spring	2
5		Spring	1
6		Valve - Spool	1
7		Housing - Control	1
8		Shaft - Input	1
9		O-Ring	1
10		Seal - Wiper	1
11		O-Ring	1
12		Adaptor	1
13		Ball	1

Ref. No.	Part No.	Description	No. Used
14		Pin	1
15	94-3043	Switch	1
16		O-Ring	1
17		Screw - Set	1
18		Screw - Set	1
19		Pin	1
20		Ring - Retaining	1
21		Link	1
22		Pin - Dowel	1
23		Crank - Bell	1
24		Screw - Set	1
*	94-3044	Kit - Seal (Incl. Ref. #2, 9-11 & 16)	1

 
*Not Illustrated

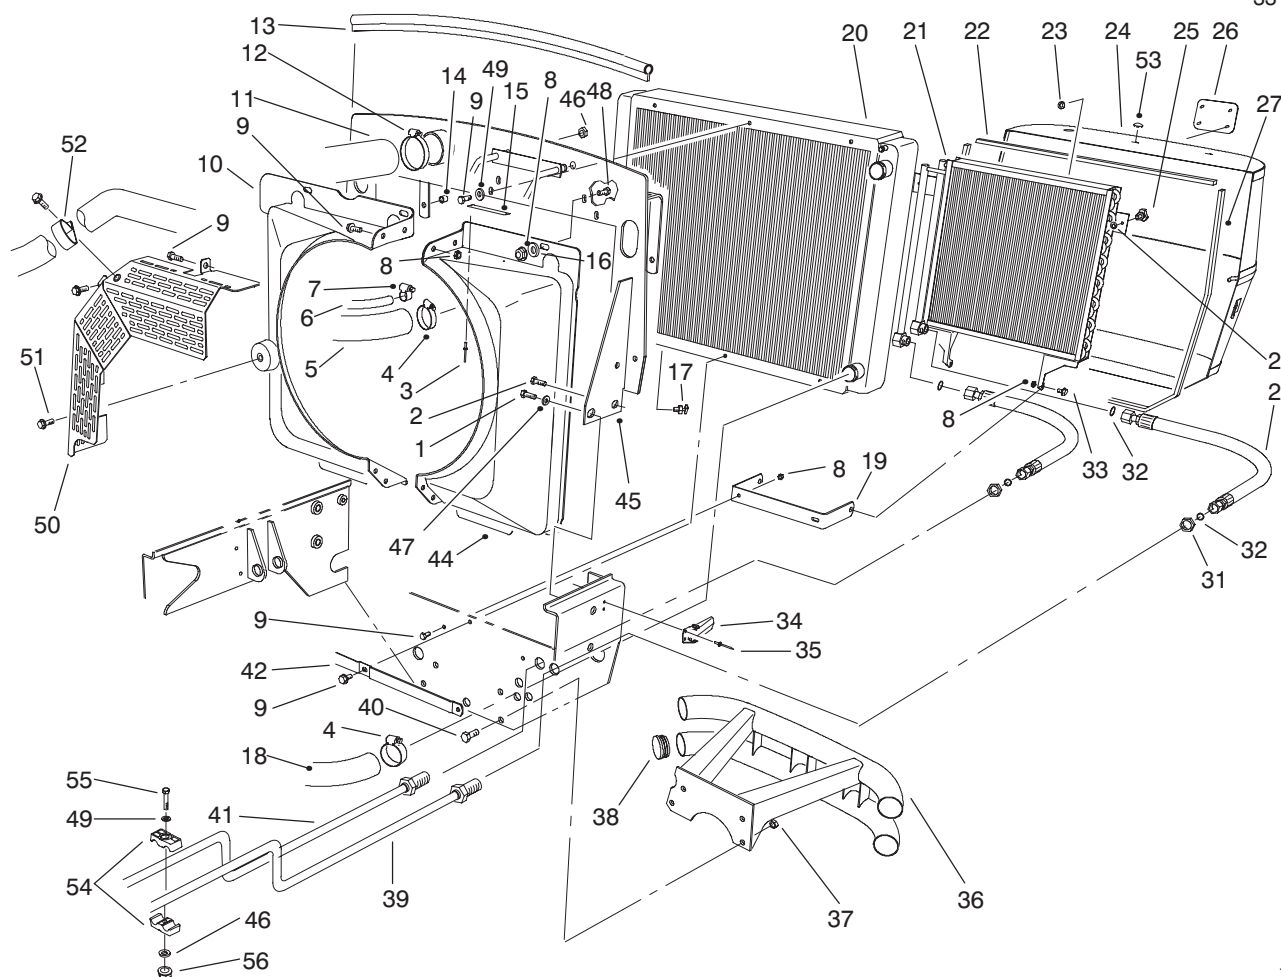

T-2073-4

RADIATOR & SHROUD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33108-025	Screw - Hex. Hd. Flange	2	26	93-6028	Plate - Logo, Toro	1
2	33105-030	Screw - Hex. Hd. Flange	2	27	93-4208	Strip - Seal, Screen	1
3	3290-271	Rivet - Pop	2	28	32151-72	Retainer - Push On	2
4	2412-3	Clamp - Hose	2	29	92-7535	Assembly - Hose, Oil Cooler	2
5	93-4215	Hose - Radiator, Upper Rear	1	31	340-74	Nut - Bulkhead	2
6	92-7424	Hose - Radiator, Overflow	1	32	237-65	O-Ring	4
7	2412-36	Clamp - Hose	1	33	37-8771	Bolt - Shoulder	2
8	32128-20	Nut - Flange	4	34	69-3020	Latch - Draw	2
9	3234-5	Screw - Flange	10	35	3269-4	Rivet - Pop	4
10	92-7374	Shroud - Fan RH	1	36	94-3084	Bumper (Model 03800)	1
11	93-7584	Hose - Intake	1	36	92-7623	Bumper (Model 03801)	1
12	2412-125	Clamp - Hose	1	37	3296-23	Nut - Lock	4
13	93-7553	Seal - Hood	1	38	2410-42	Cap - Bumper	2
14	32148-10	Nut - Clinch	2			(Model 03800)	
15	93-6681	Plate - Warning	1	38	2410-42	Cap - Bumper	4
15	94-2646	Decal - Warning (Europe)	1			(Model 03801)	
15	94-4577	Decal - Warning (Japan)	1	39	92-7493	Assembly - Tube, Filter	1
16	3256-56	Washer - Flat	3	40	325-5	Screw - Cap Hex. Hd.	2
17	304-46	Nut - Drain Cock	1	41	92-7558	Assembly - Tube, Cooler	1
18	92-7463	Hose - Radiator, Lower	1	42	92-7416	Strap - Radiator	1
19	92-7516	Bracket - Support, Cooler	1	44	92-7375	Shroud - Fan LH	1
20	74-3410	Assembly - Radiator	1	45	92-7388	Support - Radiator	1
21	82-3740	Cooler - Oil	1	46	3296-23	Nut - Lock	2
22	92-7631	Sealstrip - Screen	1	47	3256-27	Washer - Flat	2
23	94-2638	Nut - Push On	4	48	3230-2	Screw - Carriage	3
24	92-7505	Screen	1	49	3256-23	Washer - Flat	3
25	77-3620	Retainer - Cover	2	50	94-2646	Guard - Fan (Europe)	1

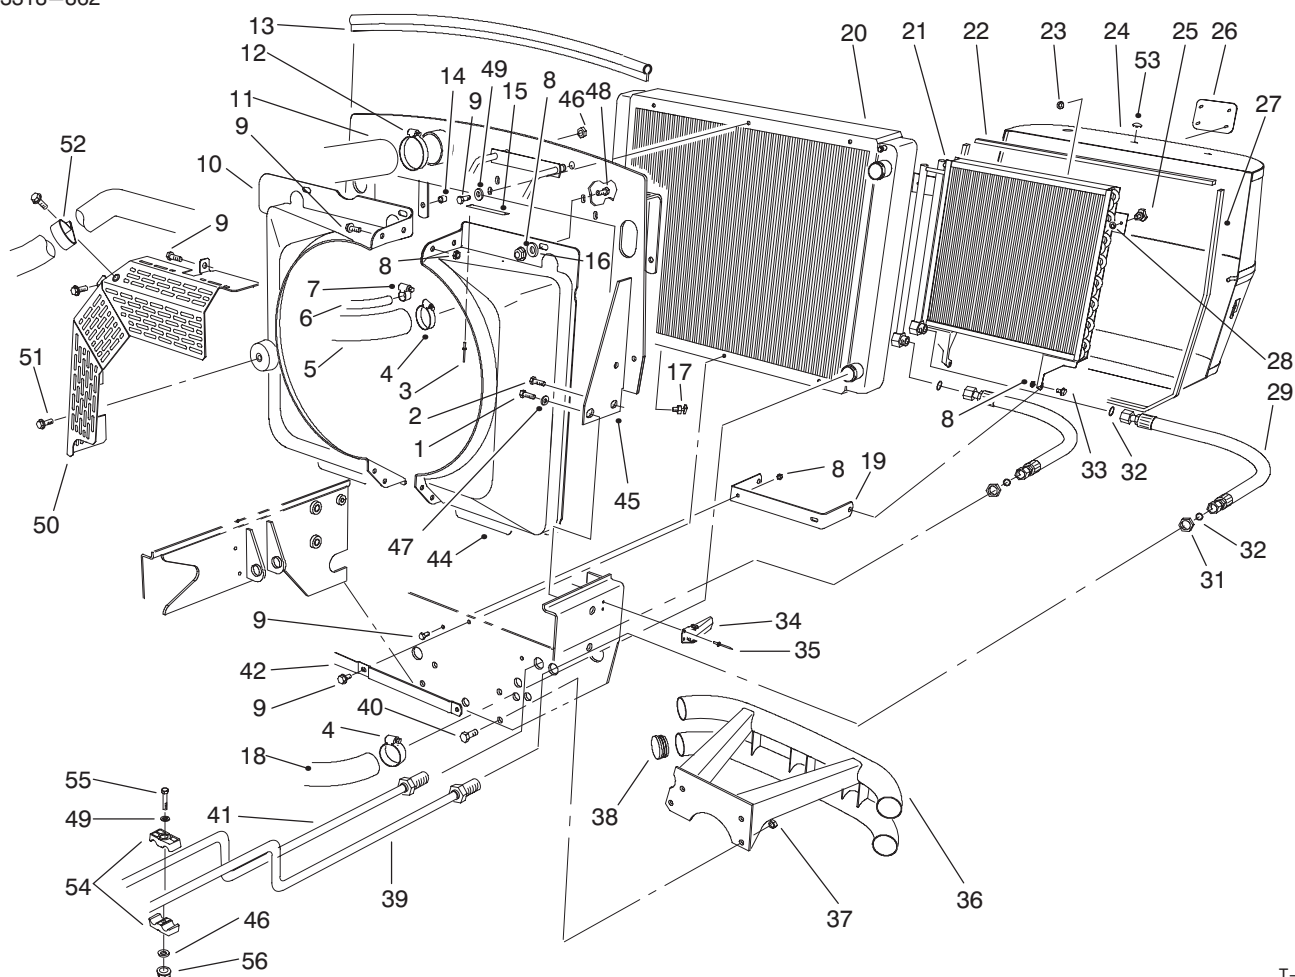 


T-2073-4

RADIATOR & SHROUD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
51	33104-020	Screw – HHF (Europe)	3
52	2412-96	Clamp–R (Europe)	1
53	2410-64	Button – Plug	3

Ref. No.	Part No.	Description	No. Used
54	94-8105	Clamp – Tube	2
55	322-9	Screw – HH	1
56	3296-47	Nut – Lock	1

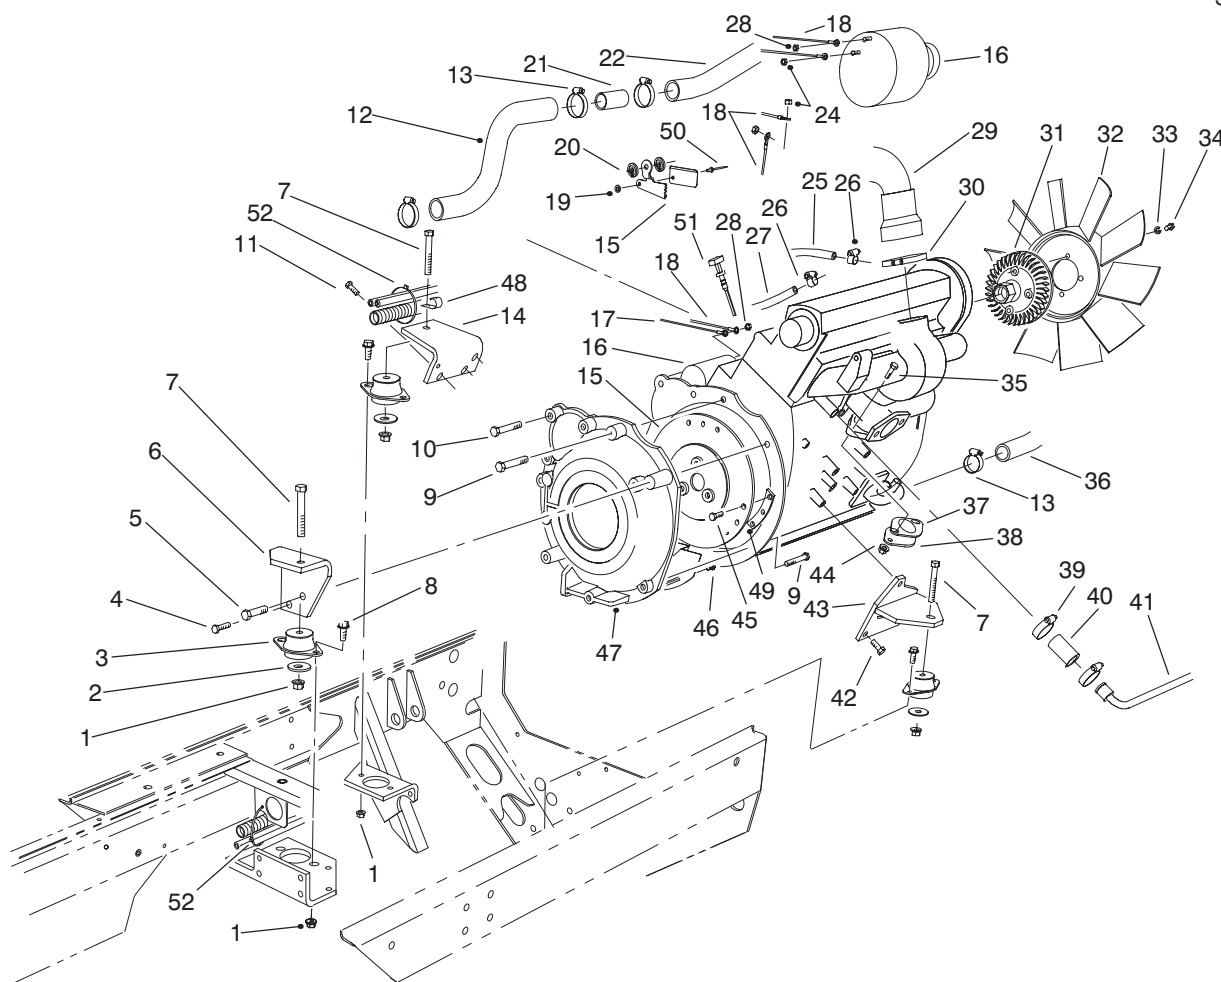 


T-2074-1

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33005-00	Nut - Hex. Flange	9	26	2412-108	Clamp - Hose	2
2	87-5100	Washer - Snubbing	3	27	63-7627	Hose - Fuel	1
3	53-9681	Mount - Rubber	3	28	48-7930	Nut - Hex.	2
4	48-9470	Screw	1	29	94-2624	Hose - Manifold	1
5	48-7840	Screw - Cap Hex. Hd.	1	30	2412-125	Clamp - Hose	1
6	92-7425	Support - Mount, Engine	1	31	92-7466	Clutch - Fan	1
7	33105-070	Screw - Hex. Hd. Flange	3	32	74-3650	Fan - Engine	1
8	33105-030	Screw - Hex. Hd. Flange	6	35	33104-020	Screw - Hex. Hd. Flange	2
9	48-7570	Screw - Cap Hex. Hd.	3	36	92-7463	Hose - Radiator, Lower	1
10	48-7810	Screw - Cap Hex. Hd.	3	37	77-3700	Gasket - Exhaust, Manifold	1
11	66-3160	Screw	4	38	92-7382	Cover - Manifold	1
12	94-1418	Hose - Radiator, Upper	1	39	2412-129	Clamp - Hose	4
13	2412-3	Clamp - Hose	4	40	74-6490	Hose - Water Line	2
14	92-7429	Mount - Motor, RH	1	41	92-7381	Tube - Water, Return	1
15	94-1421	Coupling - Center, Spring	1	42	48-7780	Screw - Hex. Hd.	3
16	93-4233	Assembly - Engine	1	43	92-7426	Mount - Motor	1
17	75-1370	Cable - Battery, Positive	1	44	33004-00	Nut - Hex. Flange	2
18	94-3090	Harness - Wire, Main	1	45	48-7700	Screw - Hex. Hd.	6
*	94-9967	Circuit Breaker - 50 Amp	1	46	48-7610	Screw - Cap Hex. Hd.	3
*	94-9968	Circuit Breaker - 100 Amp	1	47	82-5120	Adapter - Pump To Engine	1
19	3256-49	Washer - Flat	1	48	2412-150	J-Clip	1
20	86-2990	Mount - Cable, Throttle	2	49	94-1422	Spacer - Coupler	3
21	93-7594	Spacer - Tubular	1	50	3290-282	Rivet - Pop	1
22	93-4215	Hose - Radiator, Upper Rear	1	51	93-9176	Dipstick - Peugeot	1
24	48-7880	Nut	3	52	3290-378	Tie - Cable	2
25	92-7521	Hose - Fuel	1				

 *Not Illustrated

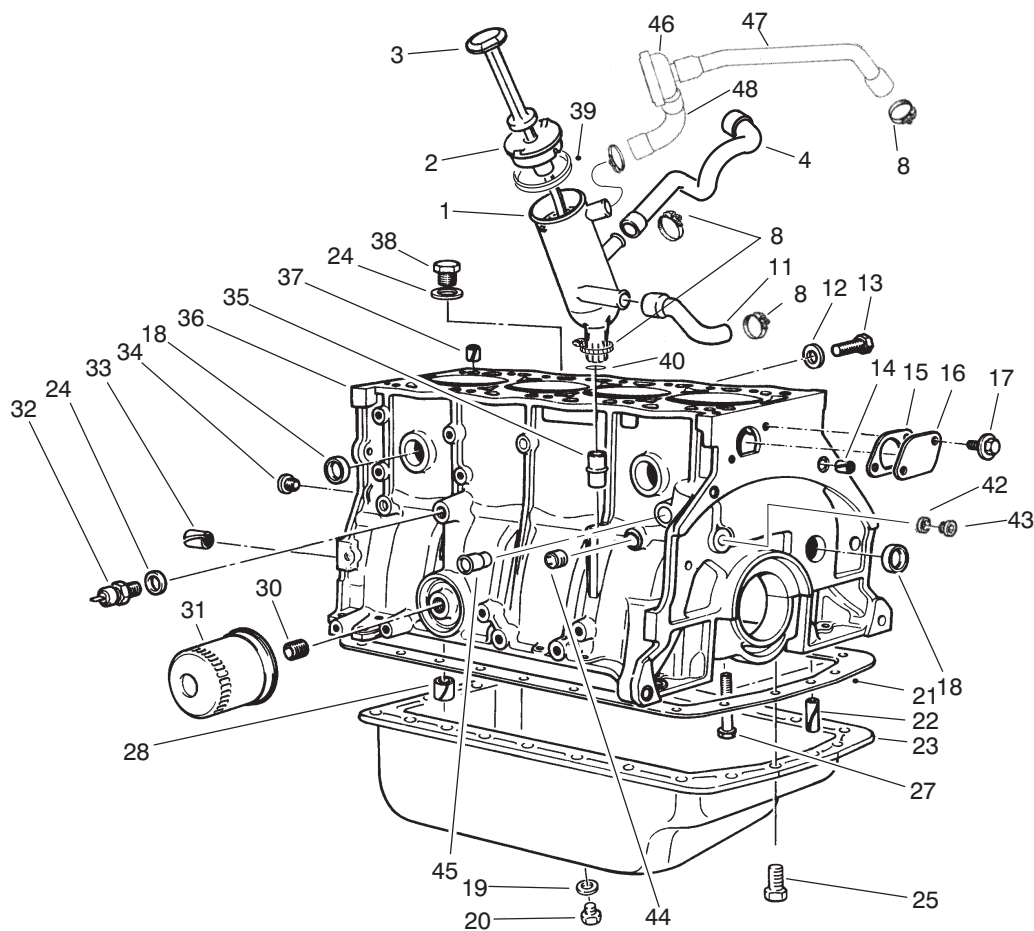


T-2142-3

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3181	Oil Filler (Incl. Ref. 39)	1
2	94-3182	Plug	1
3	93-9176	Dipstick - Oil	1
4	94-3184	Union	1
8	2412-129	Clamp - Hose	8
11	74-7770	Hose - Crankcase	1
12	74-7780	Gasket	1
13	74-7790	Screw	1
14	94-3102	Pin	2
15	74-7810	Gasket - Plate	1
16	74-7820	Plate	1
17	94-3112	Screw - Washer Hd.	2
18	74-7840	Plug - 27 mm Dia.	8
*	94-3108	Plug - 27.5 mm Dia.	8
*	94-3109	Plug - 28.5 mm Dia.	9
19	74-7320	Gasket	1
20	74-7310	Plug - Threaded	1
21	74-7380	Gasket - Oil Pan	1
22	94-3111	Pin - Groove	2
23	74-7300	Pan - Oil	1
24	94-3107	Gasket	2
25	74-7330	Screw - Cap Hex. Hd.	23
26	77-3790	Plug - Drain	1

Ref. No.	Part No.	Description	No. Used
27	74-7930	Screw - Bearing Cap	10
28	74-7940	Bushing - Spring	1
29	74-7950	Screw - Plate	6
30	74-7960	Stud - Filter	1
31	74-7970	Filter - Oil	1
32	94-3180	Switch - Pressure	1
33	74-7990	Pin - Spring	4
34	74-8000	Plug	2
35	74-8010	Guide - Dipstick	1
36	94-3100	Short Block Assembly (Incl. Pistons next page)	1
37	74-8030	Pin - Spring	1
38	94-3105	Plug - Drain	1
39	94-3183	Gasket	1
40	94-3186	O-Ring	1
42	94-3106	Gasket	2
43	94-3104	Plug - Threaded	2
44	94-3103	Plug - Threaded	1
45	94-3110	Stud	1
46	94-3190	PCV Valve	1
47	94-3192	Union	1
48	94-3191	Union	1
*	94-3101	Gasket Set (Without Head Gasket)	1

 *Not Illustrated

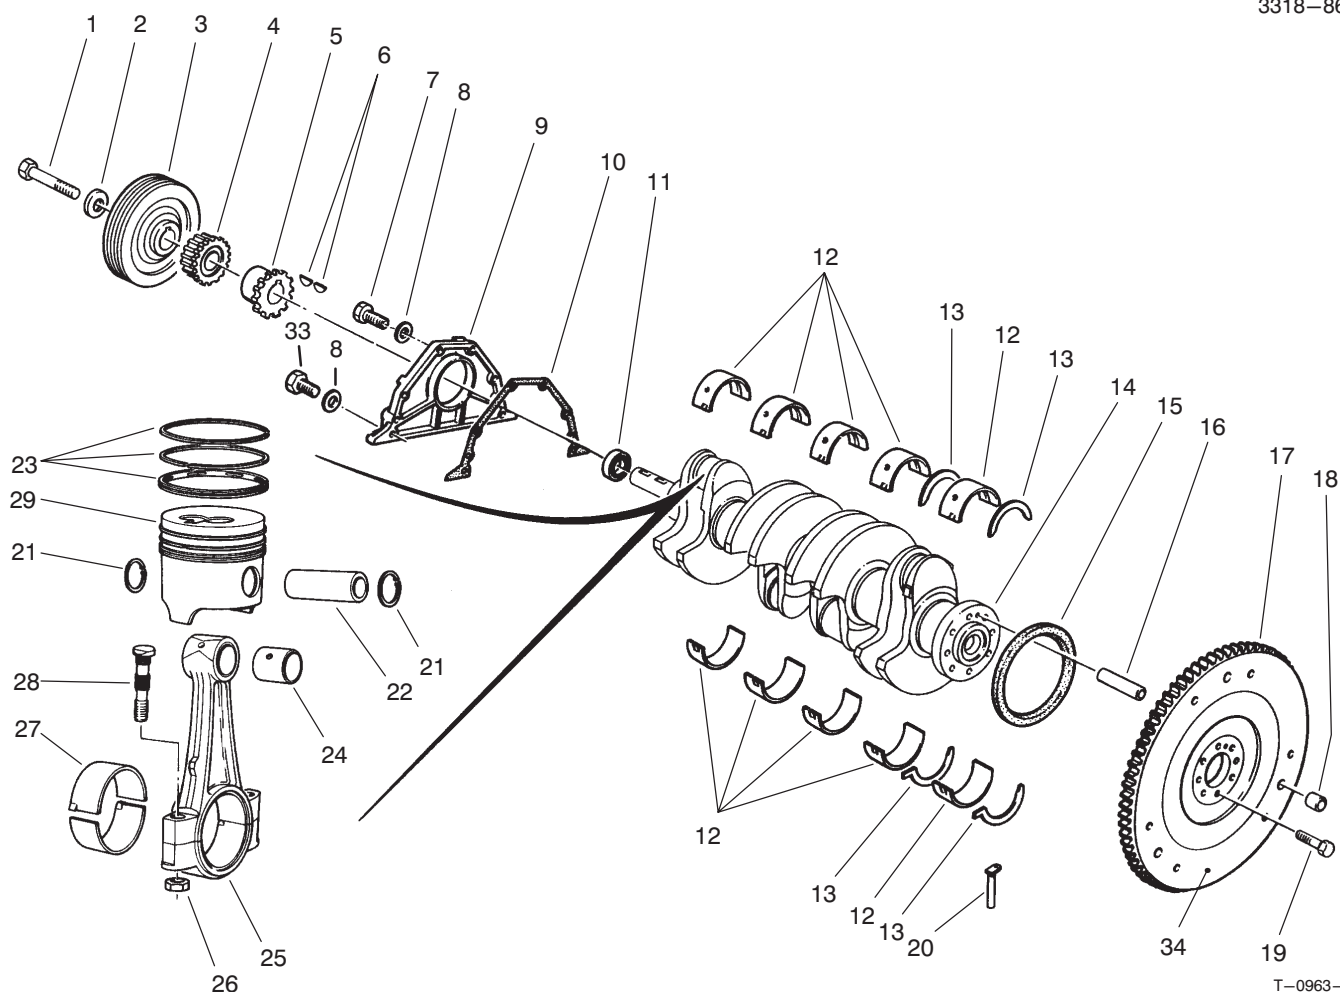


T-0963-1

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3145	Screw — Cap Hex. Hd.	1
2	94-3146	Washer	1
3	94-3144	Pulley	1
4	74-8100	Gear — Pinion	1
5	74-8110	Sprocket — Oil Pump	1
6	74-8120	Key — Woodruff	2
7	94-3150	Screw — Cap Hex. Hd.	4
8	94-3151	Washer	6
9	74-8140	Cover	1
10	74-8150	Gasket — Cover	1
11	94-3148	Seal — Shaft	1
12	74-8170	Bearing Set (Std.)	2
*	94-3140	Bearing Set (.30mm OS)	2
13	94-3141	Thrust Bearing Set (Std.)	2
*	94-3142	Thrust Bearing Set (.10mm OS)	2
*	74-8210	Thrust Bearing Set (.15mm OS)	2
*	94-3143	Thrust Bearing Set (.20mm OS)	2
14	74-8230	Crankshaft	1
15	94-3147	Seal	1
16	74-7990	Pin	1
17	94-3149	Gear — Flywheel	1
18	74-8270	Pin	3
19	74-8280	Screw — Cap Hex. Hd.	8
20	74-8290	Seal — #1 Bearing Cap	2
21	74-8300	Clip — Piston Pin	8

Ref. No.	Part No.	Description	No. Used
22	74-8310	Pin — Piston	4
23	94-3158	Piston Ring Set Std.	4
*	74-8320	Piston Ring Set — 0.20 mm	4
*	74-8330	Piston Ring Set — 0.50 mm	4
*	74-8340	Piston Ring Set — 0.80 mm	4
24	94-3154	Bushing — Sleeve	4
25	94-3153	Rod — Connecting	4
26		Nut — Hex.	8
27	74-8380	Bearing — Connecting Rod (Std.)	4
*	94-3155	Bearing — Connecting Rod (49.7mm ID)	4
28	94-3156	Bolt — Connecting Rod (Incl. Ref. #26)	8
29	94-3157	Piston Set — Std. (Incl. Ref. #21-23)	1
29	74-8420	Piston Set — Stage #1 (83.13mm OD) (Incl. Ref. #21-23)	1
*	74-8430	Piston Set — Stage #2 (83.43mm OD) (Incl. Ref. #21-23)	1
*	74-8440	Piston Set — Stage #3 (83.73mm OD) (Incl. Ref. #21-23)	1
33	94-3152	Screw — Cap Hex. Hd.	2
34	74-8260	Flywheel	1

 *Not Illustrated

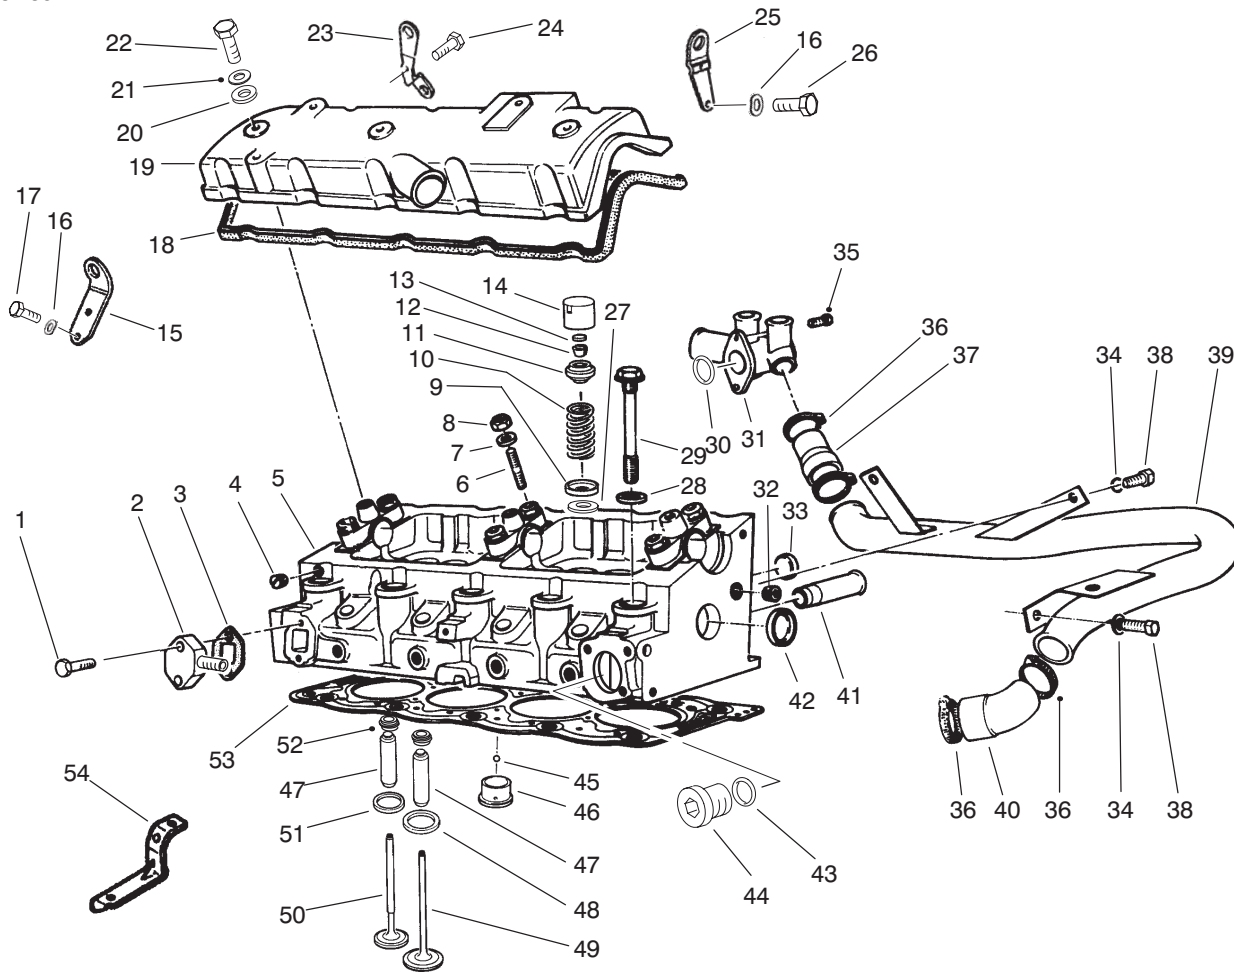


T-2148-4

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3123	Screw – Cap Hex. Hd.	2
2	94-3117	Plate	1
3	94-3116	Gasket	1
4	74-7600	Plug	4
5	94-3113	Cylinder Head Assembly	1
6	76-5130	Stud	6
7	74-8900	Washer – Flat	6
8	94-3115	Nut – Lock	6
9	74-6570	Cup – Lower Valve Spring	8
10	74-6560	Spring – Valve	8
11	74-6550	Cup – Upper Valve Spring	8
12	74-7240	Collar – Split	16
13	74-6580	Insert – Valve (1.650mm)	8
*	74-6590	Insert – Valve (1.725mm)	8
*	74-6600	Insert – Valve (1.800mm)	8
*	74-6610	Insert – Valve (1.900mm)	8
*	74-6620	Insert – Valve (1.975mm)	8
*	74-6630	Insert – Valve (2.050mm)	8
*	74-6640	Insert – Valve (2.125mm)	8
*	74-6650	Insert – Valve (2.225mm)	8
*	74-6660	Insert – Valve (2.250mm)	8
*	74-6670	Insert – Valve (2.275mm)	8
*	74-6680	Insert – Valve (2.300mm)	8
*	74-6690	Insert – Valve (2.325mm)	8
*	74-6700	Insert – Valve (2.350mm)	8
*	74-6710	Insert – Valve (2.375mm)	8

Ref. No.	Part No.	Description	No. Used
13	74-6720	Insert – Valve (2.400mm)	8
*	74-6730	Insert – Valve (2.425mm)	8
*	74-6740	Insert – Valve (2.450mm)	8
*	74-6750	Insert – Valve (2.475mm)	8
*	74-6760	Insert – Valve (2.500mm)	8
*	74-6770	Insert – Valve (2.525mm)	8
*	74-6780	Insert – Valve (2.550mm)	8
*	74-6790	Insert – Valve (2.575mm)	8
*	74-6800	Insert – Valve (2.600mm)	8
*	74-6810	Insert – Valve (2.625mm)	8
*	74-6820	Insert – Valve (2.650mm)	8
*	74-6830	Insert – Valve (2.675mm)	8
*	74-6840	Insert – Valve (2.700mm)	8
*	74-6850	Insert – Valve (2.725mm)	8
*	74-6860	Insert – Valve (2.750mm)	8
*	74-6870	Insert – Valve (2.775mm)	8
*	74-6880	Insert – Valve (2.800mm)	8
*	74-6890	Insert – Valve (2.825mm)	8
*	74-6900	Insert – Valve (2.850mm)	8
*	74-6910	Insert – Valve (2.875mm)	8
*	74-6920	Insert – Valve (2.900mm)	8
*	74-6930	Insert – Valve (2.925mm)	8
*	74-6940	Insert – Valve (2.950mm)	8
*	74-6950	Insert – Valve (2.975mm)	8
*	74-6960	Insert – Valve (3.000mm)	8
*	74-6970	Insert – Valve (3.025mm)	8

 *Not Illustrated

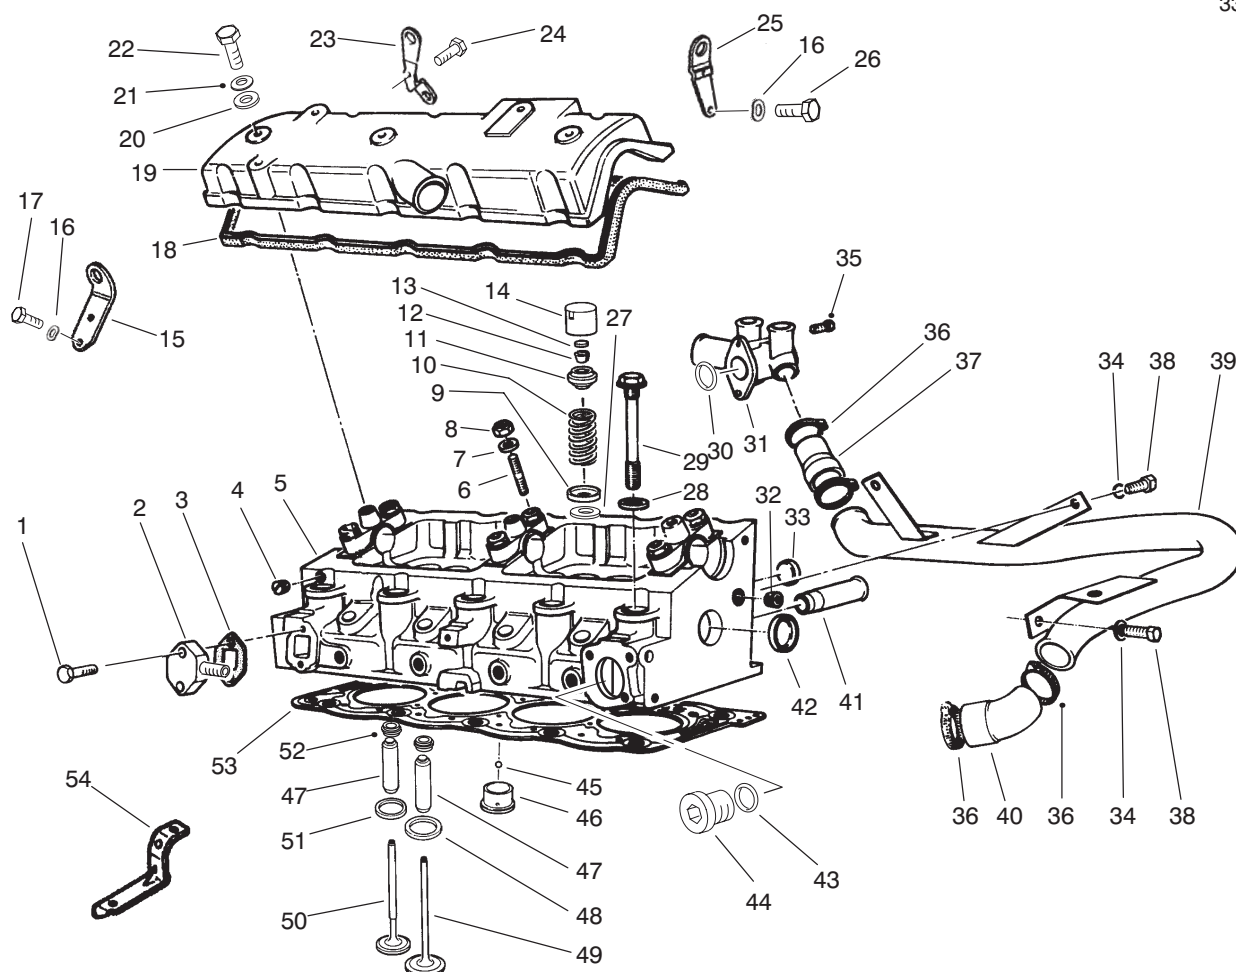


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
13	74-6980	Insert - Valve (3.050mm)	8	14	74-6540	Tappet - Valve	8
*	74-6990	Insert - Valve (3.075mm)	8	15	94-3135	Bracket - Lifting	1
*	74-7000	Insert - Valve (3.100mm)	8	16	74-7560	Washer - Spring	3
*	74-7010	Insert - Valve (3.125mm)	8	17	76-5440	Screw	2
*	74-7020	Insert - Valve (3.150mm)	8	18	74-7630	Gasket - Valve Cover	1
*	74-7030	Insert - Valve (3.175mm)	8	19	74-7640	Cover - Valve	1
*	74-7040	Insert - Valve (3.200mm)	8	20	74-7650	Washer - Flat	3
*	74-7050	Insert - Valve (3.225mm)	8	21	94-3125	Washer	3
*	74-7060	Insert - Valve (3.250mm)	8	22	94-3124	Bolt - Valve Cover	3
*	74-7070	Insert - Valve (3.275mm)	8	23	94-3136	Bracket - Lifting	1
*	74-7080	Insert - Valve (3.300mm)	8	24	94-3138	Screw	1
*	74-7090	Insert - Valve (3.325mm)	8	25	94-3137	Bracket - Lifting	1
*	74-7100	Insert - Valve (3.350mm)	8	26	94-3139	Screw	1
*	74-7110	Insert - Valve (3.375mm)	8	27	94-3174	Washer	8
*	74-7120	Insert - Valve (3.400mm)	8	28	74-7270	Washer - Flat	10
*	74-7130	Insert - Valve (3.425mm)	8	29	74-7260	Bolt - Head	10
*	74-7140	Insert - Valve (3.450mm)	8	30	94-3197	O-Ring	1
*	74-7150	Insert - Valve (3.475mm)	8	31	94-3196	Inlet - Water	1
*	74-7160	Insert - Valve (3.500mm)	8	32	94-3118	Plug	1
*	74-7170	Insert - Valve (3.550mm)	8	33	74-7840	Plug - 27 mm Dia.	2
*	74-7180	Insert - Valve (3.625mm)	8	*	94-3108	Plug - 27.5 mm Dia.	2
*	74-7190	Insert - Valve (3.700mm)	8	*	94-3109	Plug - 28.5 mm Dia.	2
*	74-7200	Insert - Valve (3.775mm)	8	34	68-9420	Washer - Lock	3
*	74-7210	Insert - Valve (3.850mm)	8	35	94-3198	Screw	2
*	74-7220	Insert - Valve (3.925mm)	8	36	2412-129	Clamp - Hose	4
*	74-7230	Insert - Valve (4.000mm)	8	37	94-3200	Hose - By-Pass	1

 *Not Illustrated

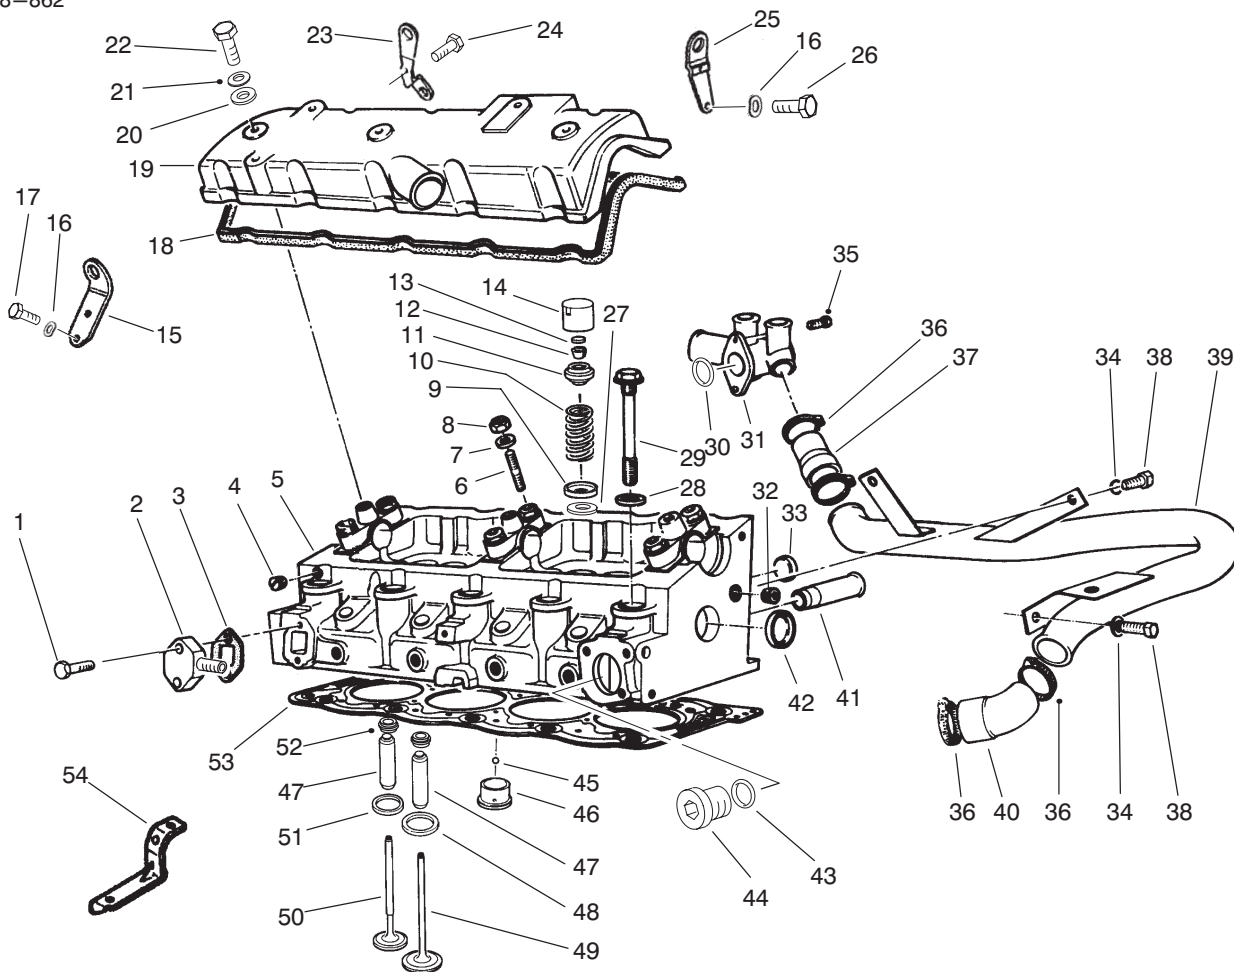


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
38	48-7700	Screw — Cap Hex. Hd.	3
39	94-3199	Pipe — By-Pass	1
40	94-3201	Hose — By-Pass	1
41	74-7400	Tube	1
42	74-7840	Plug	2
43	94-3122	Gasket	1
44	94-3121	Plug	1
45	74-7420	Ball	4
46	74-7430	Chamber — Turbulence (32.45mm)	4
*	74-7440	Chamber — Turbulence (32.65mm)	4
47	92-7792	Guide — Valve (14.29mm)	8
*	92-7793	Guide — Valve (14.59mm)	8
48	74-7450	Seat — Intake Valve (39.3mm)	4
*	74-7460	Seat — Intake Valve (39.5mm)	4

Ref. No.	Part No.	Description	No. Used
49	74-7480	Valve — Intake	4
50	92-7794	Valve — Exhaust	4
51	92-7795	Seat — Exhaust Valve (34.5mm)	4
52	92-7791	Seal — Valve	8
53	94-8132	Gasket — Head (1.48 mm)	1
*	94-8133	Gasket — Head (1.52 mm)	1
*	94-8134	Gasket — Head (1.58 mm)	1
*	94-8135	Gasket — Head (1.62 mm)	1
54	94-3120	Bracket	1
*	74-7670	Head Bolt & Washer Set (Incl. Ref. #28 & 29)	1
*	94-3119	Kit — Gasket	1
*	94-9965	Asm. — Head, Cylinder	1

 *Not Illustrated

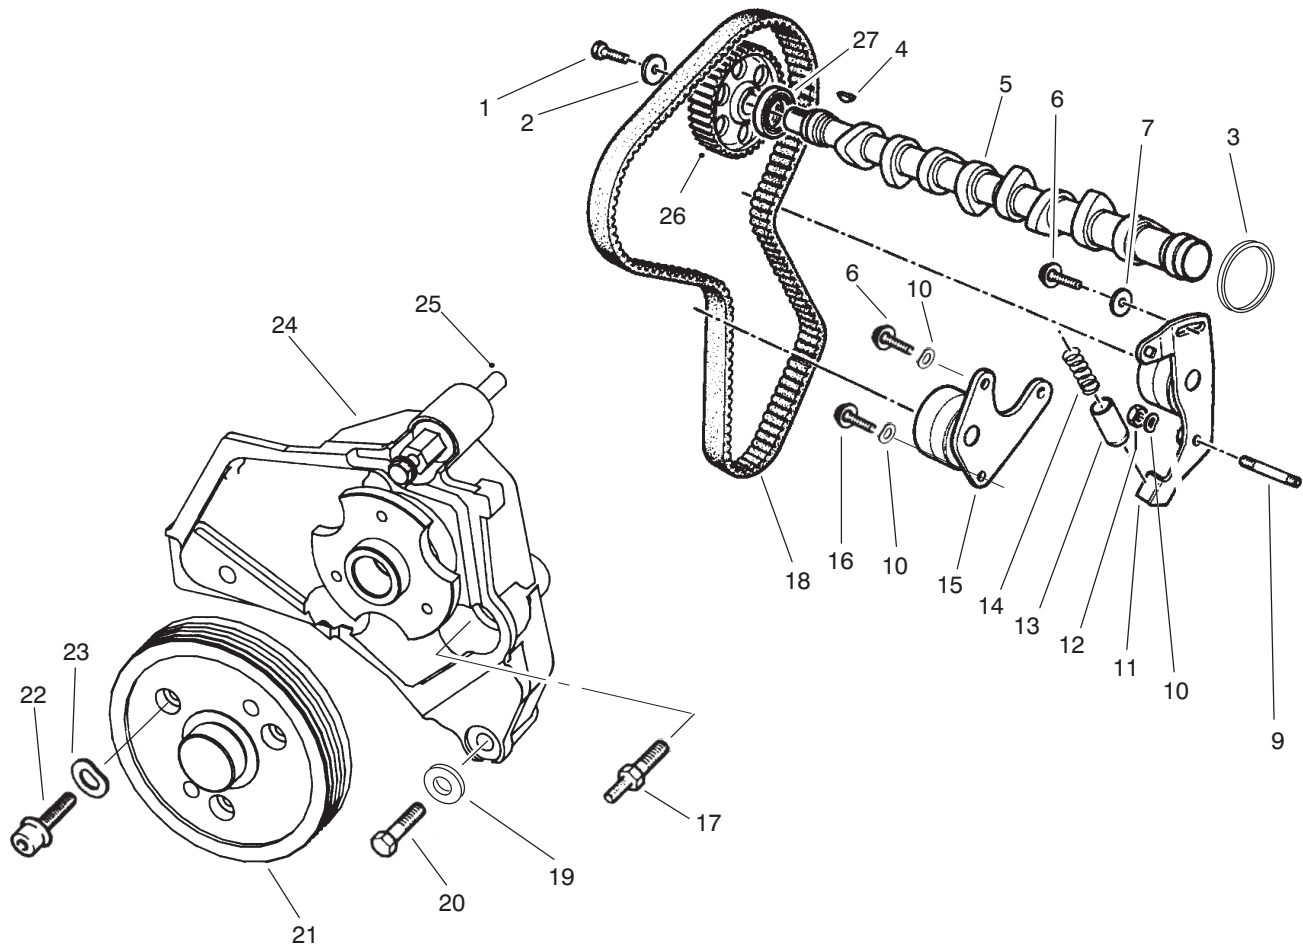


T-2141-1

CAMSHAFT & FAN SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-3440	Screw	2
2	77-3450	Washer	2
3	77-3420	Gasket	1
4	77-3410	Key	1
5	77-3400	Camshaft	1
6	94-3163	Screw	1
7	94-3166	Washer - Flat	1
9	94-3162	Stud	1
10	94-3164	Washer - Spring	4
11	94-3159	Roller Assembly	1
12	94-3165	Nut - Lock	1
13	77-3520	Cup	1
14	77-3510	Spring	1

Ref. No.	Part No.	Description	No. Used
15	94-3160	Roller Assembly	1
16	94-3161	Screw	2
17	94-3170	Screw	1
18	74-8830	Belt	1
19	94-3172	Washer	3
20	94-3171	Screw	2
21	94-3168	Pulley - Fan	1
22	94-3173	Screw	3
23	76-5010	Washer	3
24	94-3167	Bracket - Fan	1
25	94-3169	Screw	1
26	92-7787	Pulley - Camshaft	1
27	94-9994	Gasket - Camshaft	1

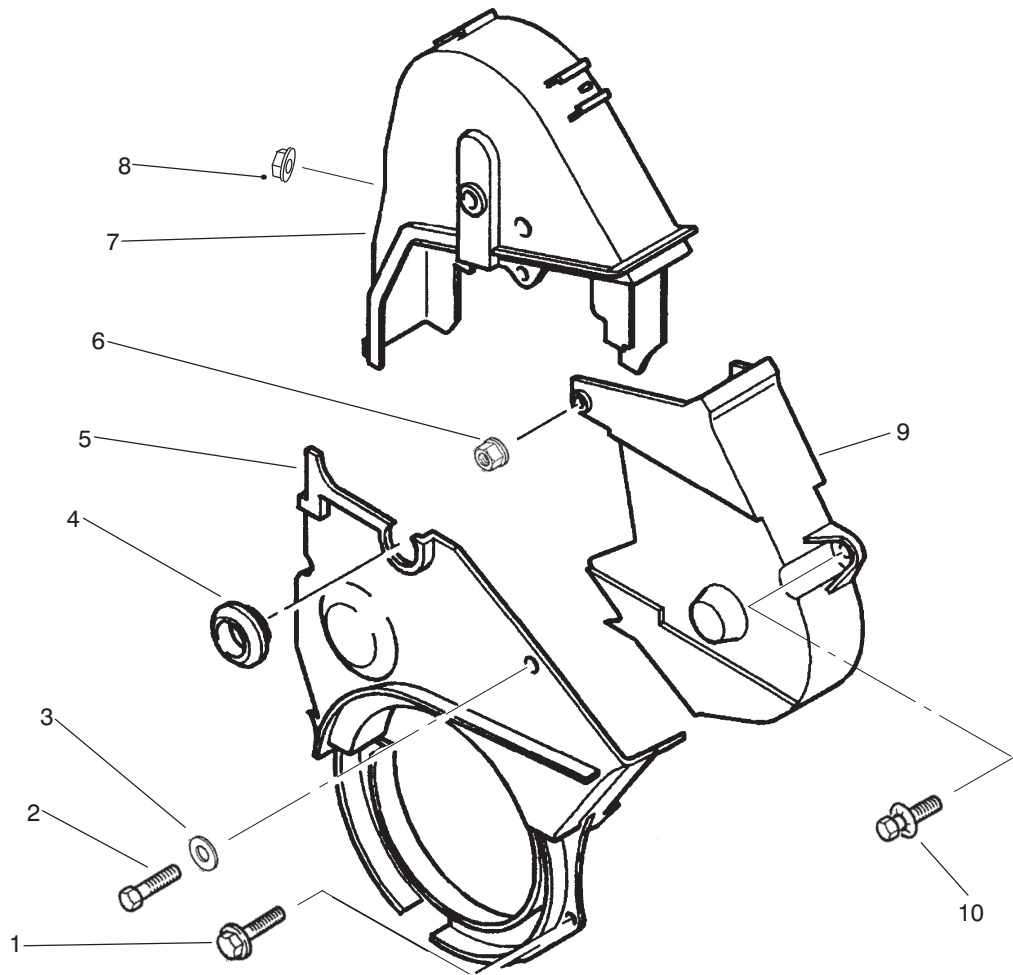 


T-2140-2

TIMING COVER

Ref. No.	Part No.	Description	No. Used
1	94-3132	Screw	2
2	94-3130	Screw	1
3	94-3125	Washer - Flat	1
4	94-3129	Plug	1
5	94-3126	Protector - Lower	1

Ref. No.	Part No.	Description	No. Used
6	94-3133	Nut W/Washer	1
7	94-3127	Case - Timing, Left	1
8	94-3134	Nut	1
9	94-3128	Case - Timing, Right	1
10	94-3131	Screw	1

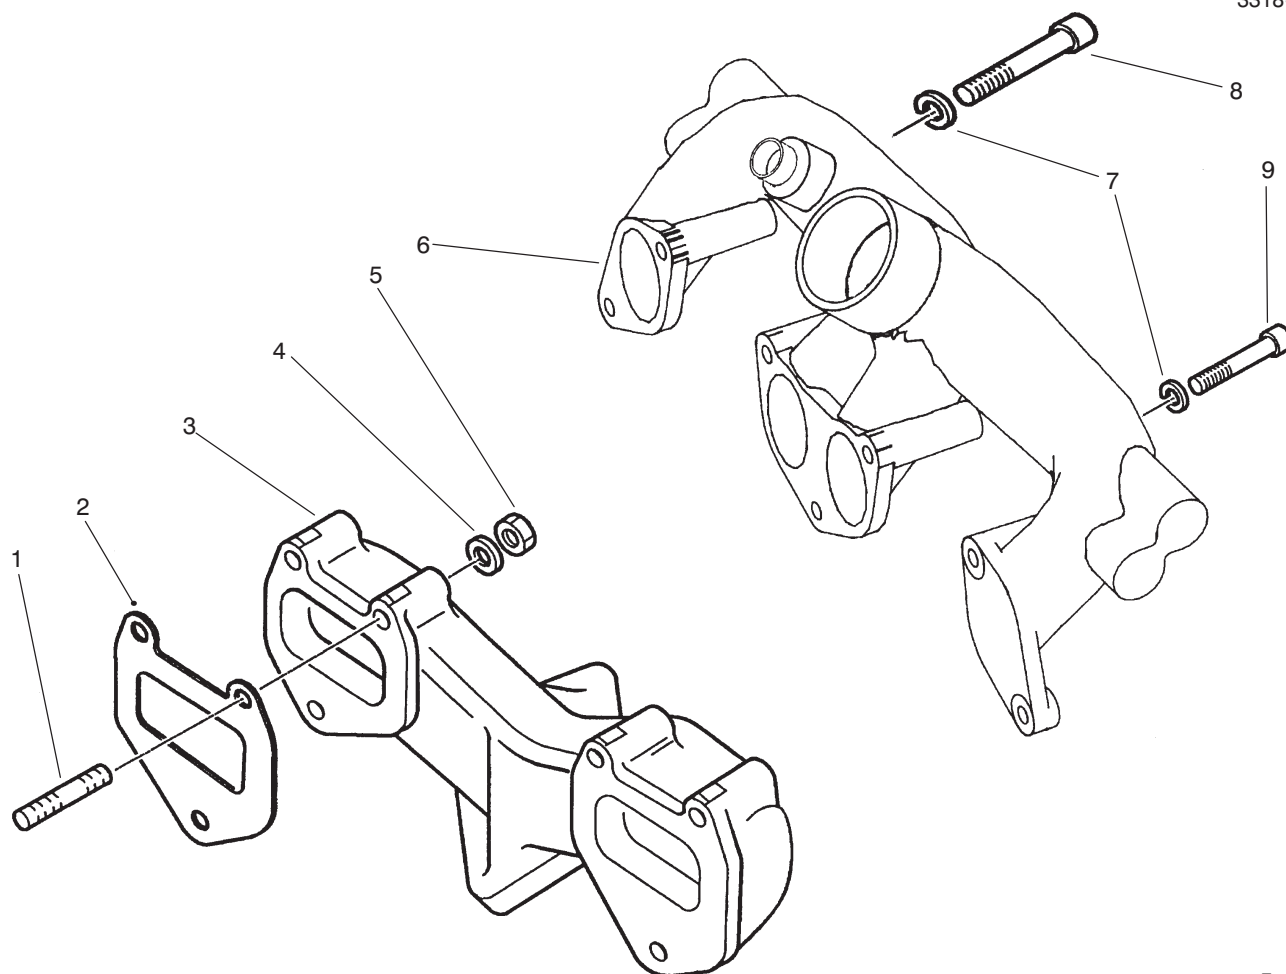 


T-2149-3

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-3300	Stud	6	6	94-3215	Manifold - Intake	1
2	77-3310	Gasket	2	7	94-3164	Washer - Spring	7
3	77-3340	Manifold - Exhaust	1	8	94-3216	Screw	5
4	68-9420	Washer - Lock	6	9	94-3217	Screw	4
5	77-3320	Nut - Hex	6	*	94-3218	Screw	1

 *Not Illustrated

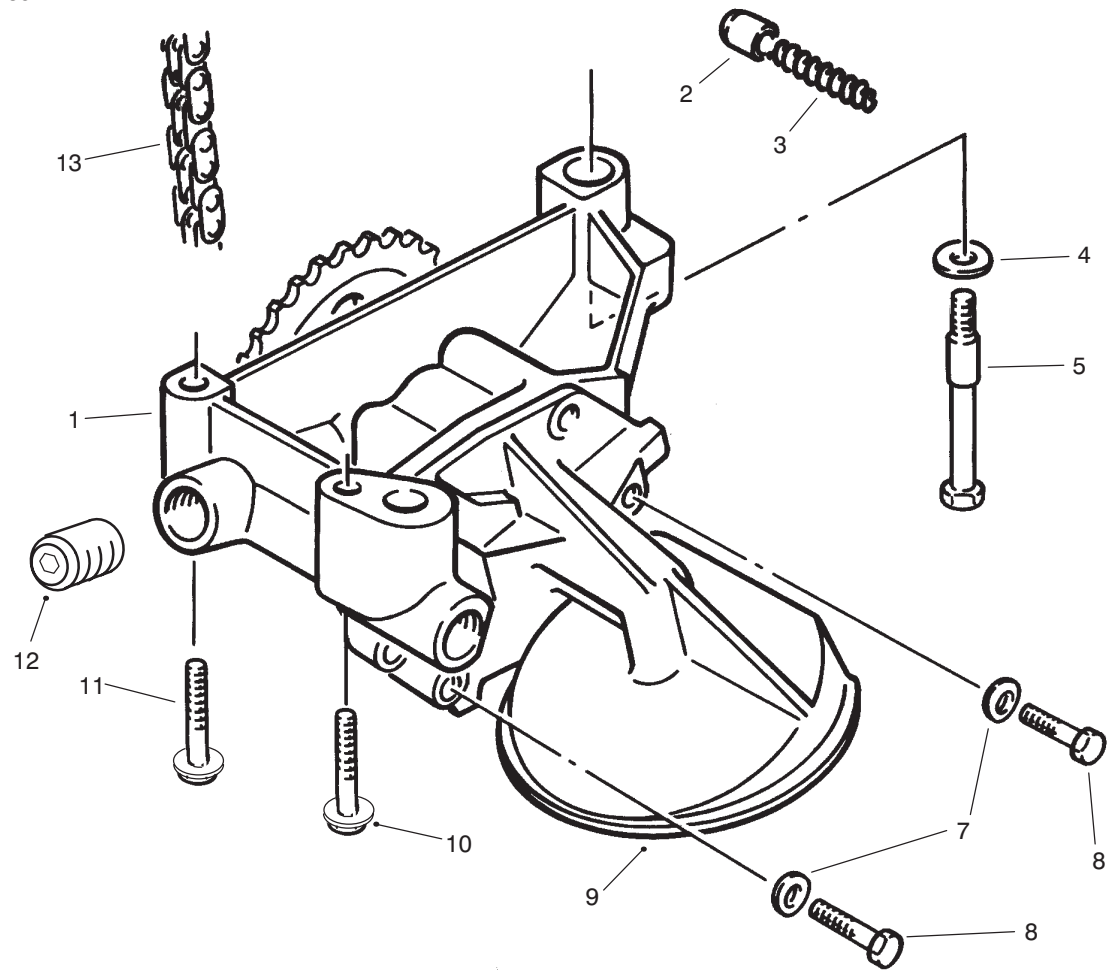


T-0964-2

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5070	Oil Pump Assembly	1
2	94-3176	Gear - Oil Pump	1
3	76-5090	Spring - Piston	1
4	94-3179	Washer - Spring	3
5	76-5100	Bolt - Shoulder	1
7	76-5010	Washer - Spring	5

Ref. No.	Part No.	Description	No. Used
8	94-3124	Screw - Cap Hex. Hd.	2
9	94-3178	Strainer	1
10	77-3470	Screw	1
11	77-3490	Screw	1
12	94-3177	Plug	2
13	76-5170	Chain - Pump Drive	1

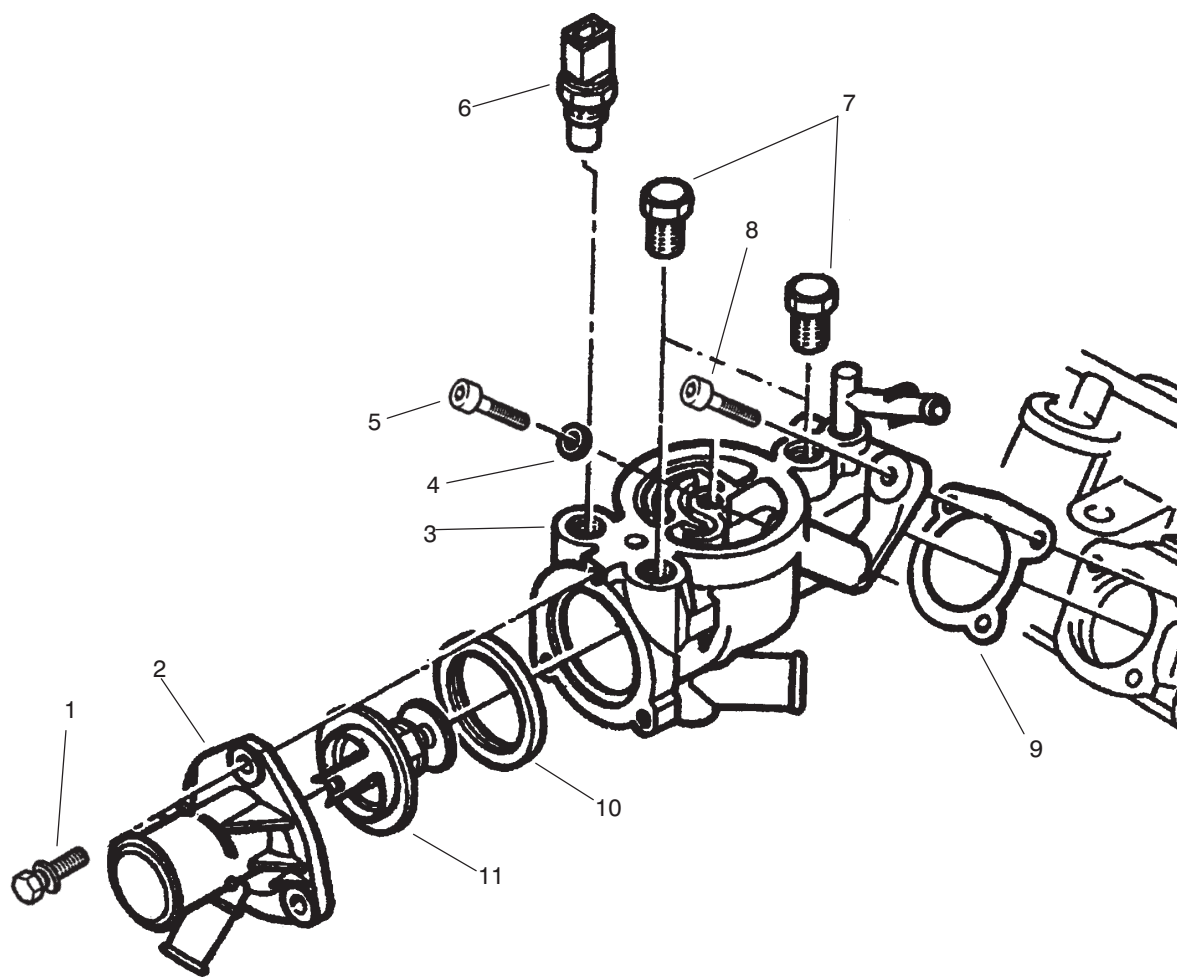 


T-2143-2

COLLECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3131	Screw	3
2	94-3208	Stub - Outlet	1
3	94-3205	Box - Outlet	1
4	94-3207	Ring	1
5	94-3214	Screw	1
6	94-3211	Temp Sending Unit	1

Ref. No.	Part No.	Description	No. Used
7	94-3212	Plug	2
8	94-3213	Screw	1
9	94-3206	Gasket	1
10	94-3210	Gasket	1
11	94-3209	Thermostat	1

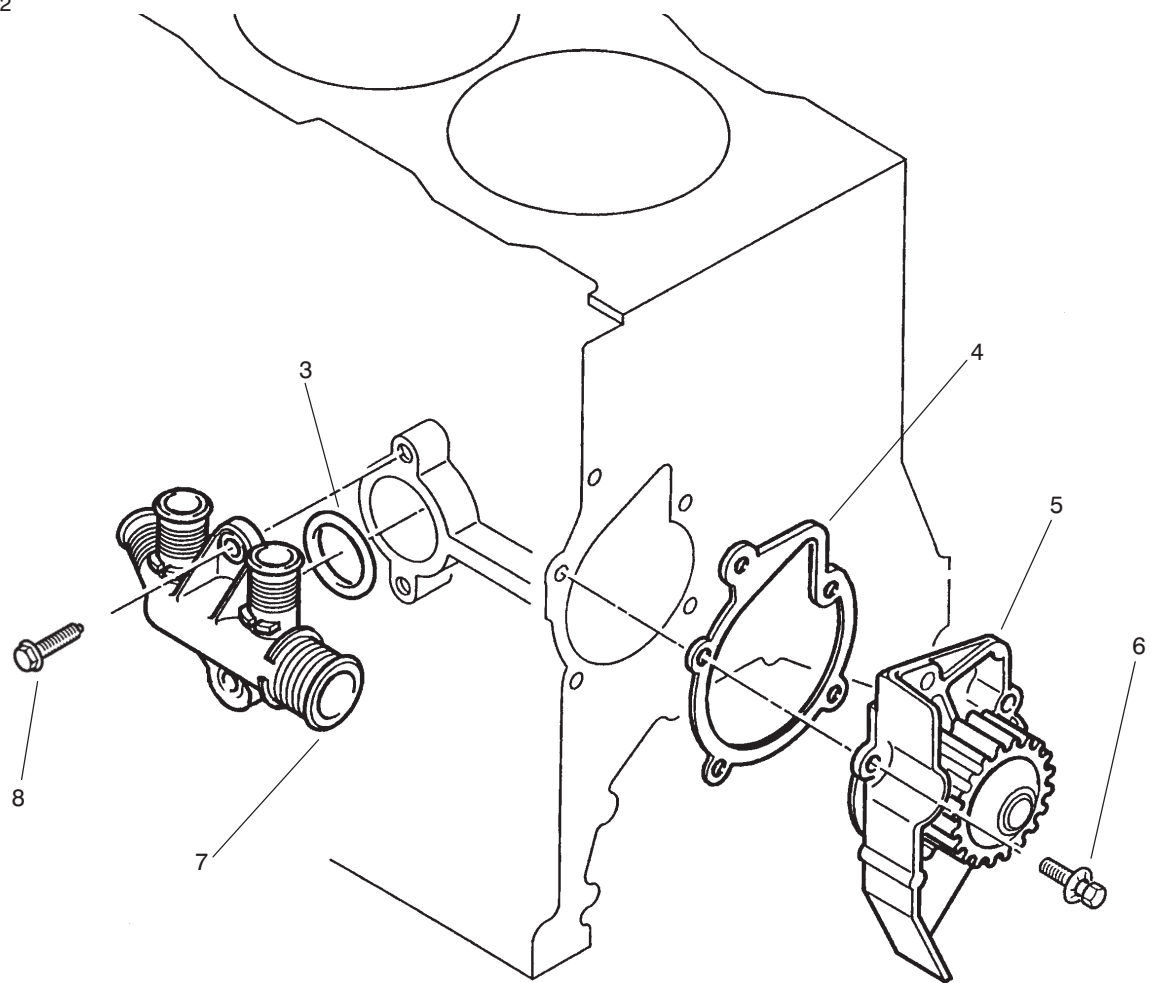 


T-2144-1

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	94-3197	O-Ring	1
4	94-3195	Gasket — Pump, Water	1
5	94-3194	Cover — Pump, Water (Incl. Ref. #4)	1

Ref. No.	Part No.	Description	No. Used
6	76-5500	Screw	5
7	94-3196	Inlet — Water	1
8	94-3198	Screw	2

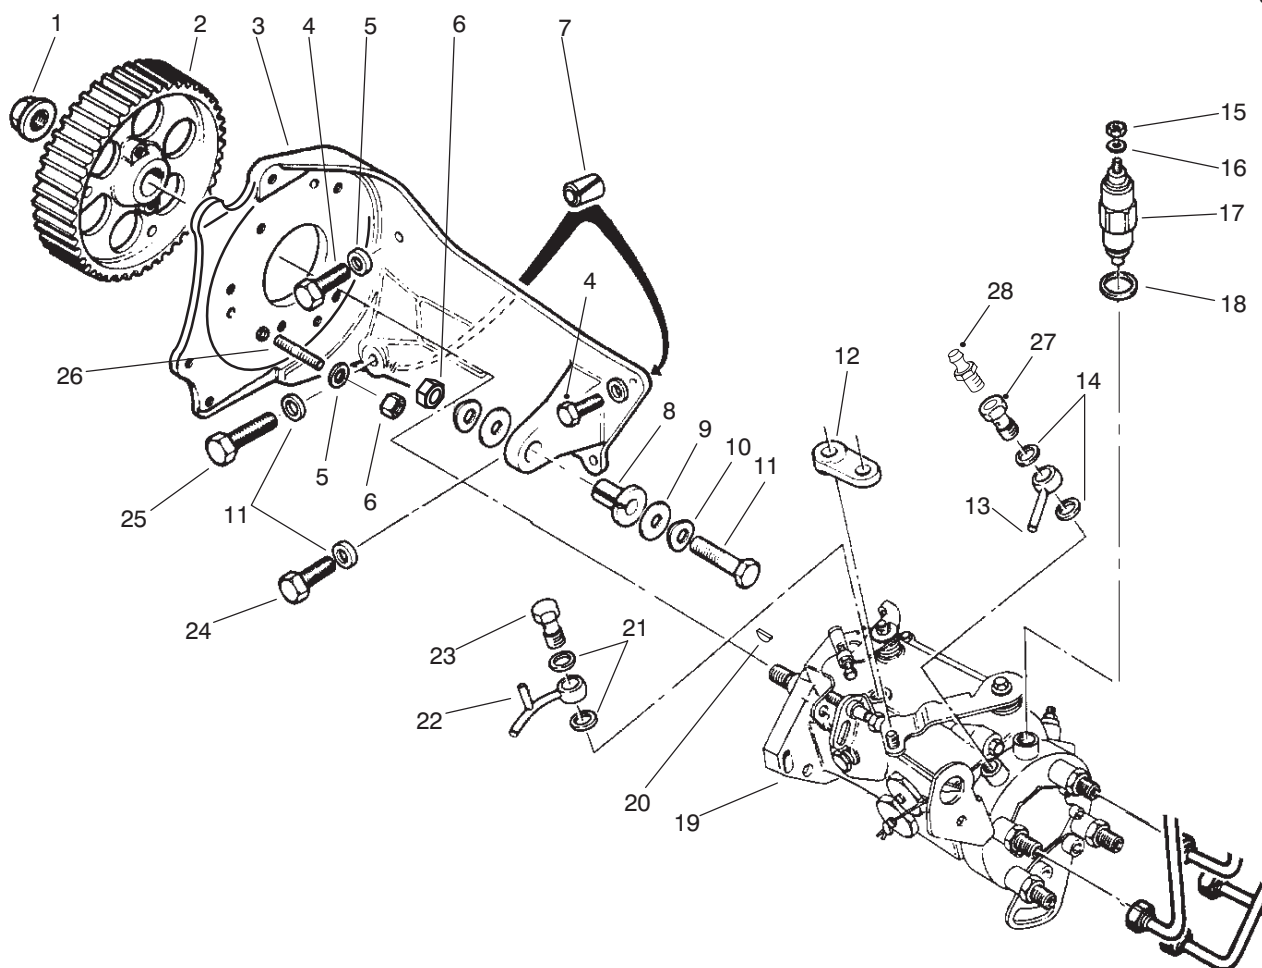 


T-2146-1

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-4950	Nut	1
2	76-4940	Gear — Pump, Injection	1
3	94-3220	Bracket	1
4	94-3225	Screw	2
5	76-4930	Washer	3
6	94-3165	Nut	4
7	74-8610	Pin	2
8	74-8630	Bushing — Flange	1
9	94-3224	Washer — Flat	2
10	94-3164	Washer — Spring	6
11	94-3221	Screw	1
12	74-8650	Journal	1
13	74-8670	Union — Inlet	1
14	74-8680	Gasket	2

Ref. No.	Part No.	Description	No. Used
15	94-3251	Nut	1
16	74-8710	Washer	1
17	93-5856	Valve — Solenoid	1
18	94-3274	O—Ring	1
19	94-3219	Pump — Injection	1
20	94-3222	Key	1
21	74-8870	Gasket	2
22	94-3249	Tube — Outlet	1
23	94-3250	Screw — Connection	1
24	94-3161	Screw	1
25	94-3223	Screw	1
26	76-4910	Stud	3
27	94-9969	Screw — Connection	1
28	93-5835	Screw — Purge	1

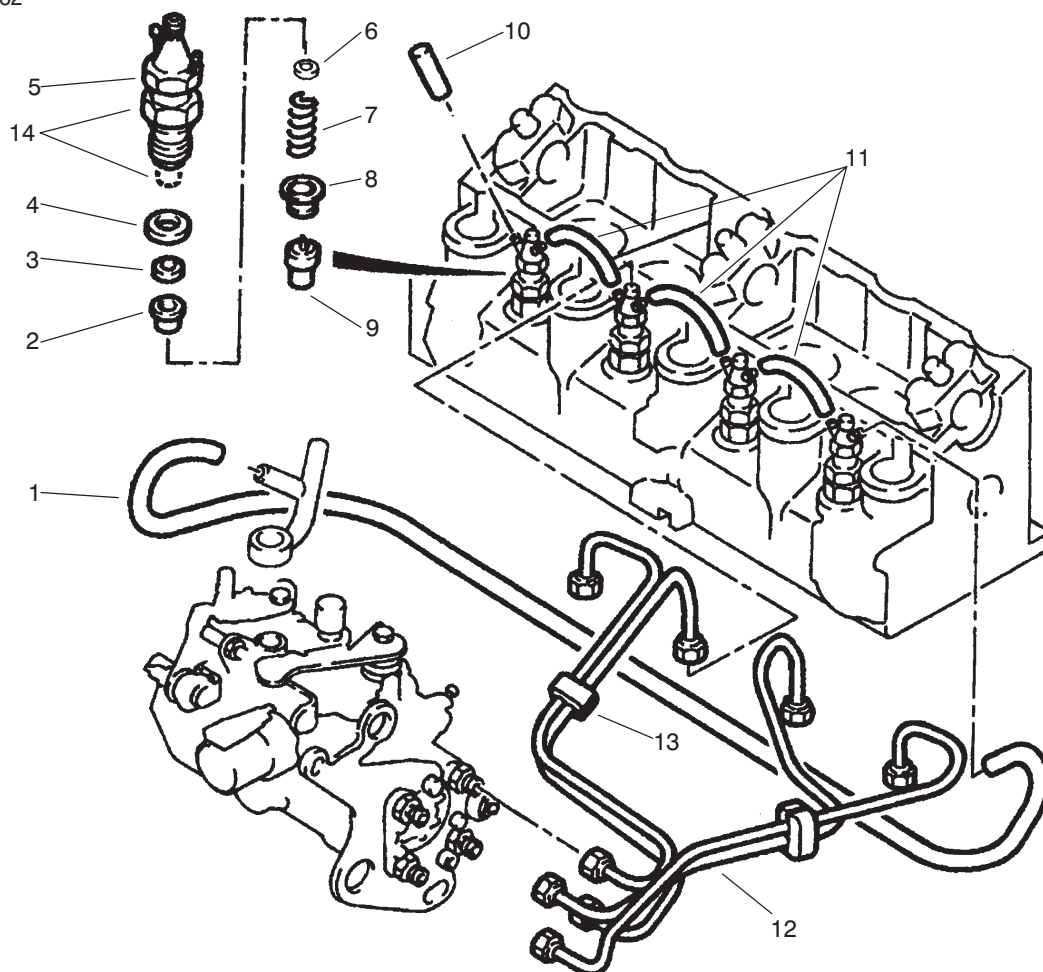 


T-2145-2

FUEL INJECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3230	Hose	1
2	76-5540	Plug	4
3	76-5530	Gasket - Injector	4
4	94-3226	Gasket - Injector	4
5	76-5520	Holder - Injector	4
6	94-3232	Washer - 0.79 mm	4
*	94-3233	Washer - 0.82 mm	4
*	94-3234	Washer - 0.85 mm	4
*	94-3235	Washer - 0.88 mm	4
*	94-3236	Washer - 0.91 mm	4
*	94-3237	Washer - 0.94 mm	4
*	94-3238	Washer - 0.97 mm	4
*	94-3239	Washer - 1.00 mm	4
*	94-3240	Washer - 1.03 mm	4
*	94-3241	Washer - 1.06 mm	4

Ref. No.	Part No.	Description	No. Used
6	94-3242	Washer - 1.30 mm	4
*	94-3243	Washer - 1.33 mm	4
*	94-3244	Washer - 1.36 mm	4
*	94-3245	Washer - 1.39 mm	4
*	94-3246	Washer - 1.42 mm	4
*	94-3247	Washer - 1.45 mm	4
*	94-3248	Washer - 1.48 mm	4
7	94-3228	Spring	4
8	94-3227	Spacer	4
9	94-8147	Nozzle - Injector	4
10	74-8770	Plug	1
11	94-3229	Union	3
12	74-8750	Pipe	1
13	94-3231	Bracket	2
14	76-5600	Asm. - Holder, Injector	4

 *Not Illustrated

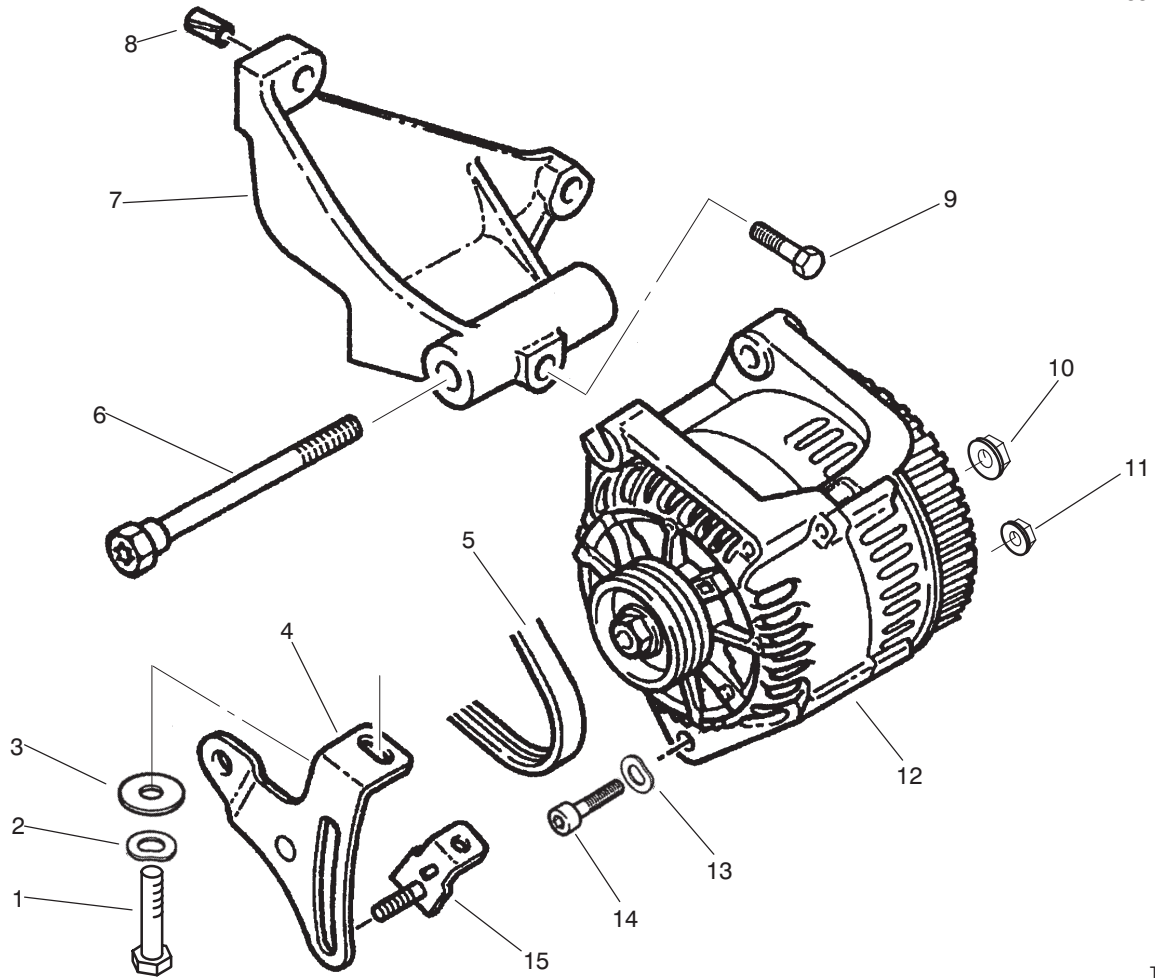


T-2147-2

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5060	Screw	1
2	76-5010	Washer - Spring	1
3	94-3260	Washer - Flat	1
4	94-3255	Slide	1
5	94-3256	Belt	1
6	94-3254	Screw	1
7	94-3253	Bracket	1
8	74-8610	Pin	2

Ref. No.	Part No.	Description	No. Used
9	94-3259	Screw	1
10	94-3262	Nut	1
11	94-3261	Nut	1
12	94-3252	Alternator	1
13	94-3257	Washer - Spring	1
14	94-3258	Screw	1
15	76-4990	Bracket	1

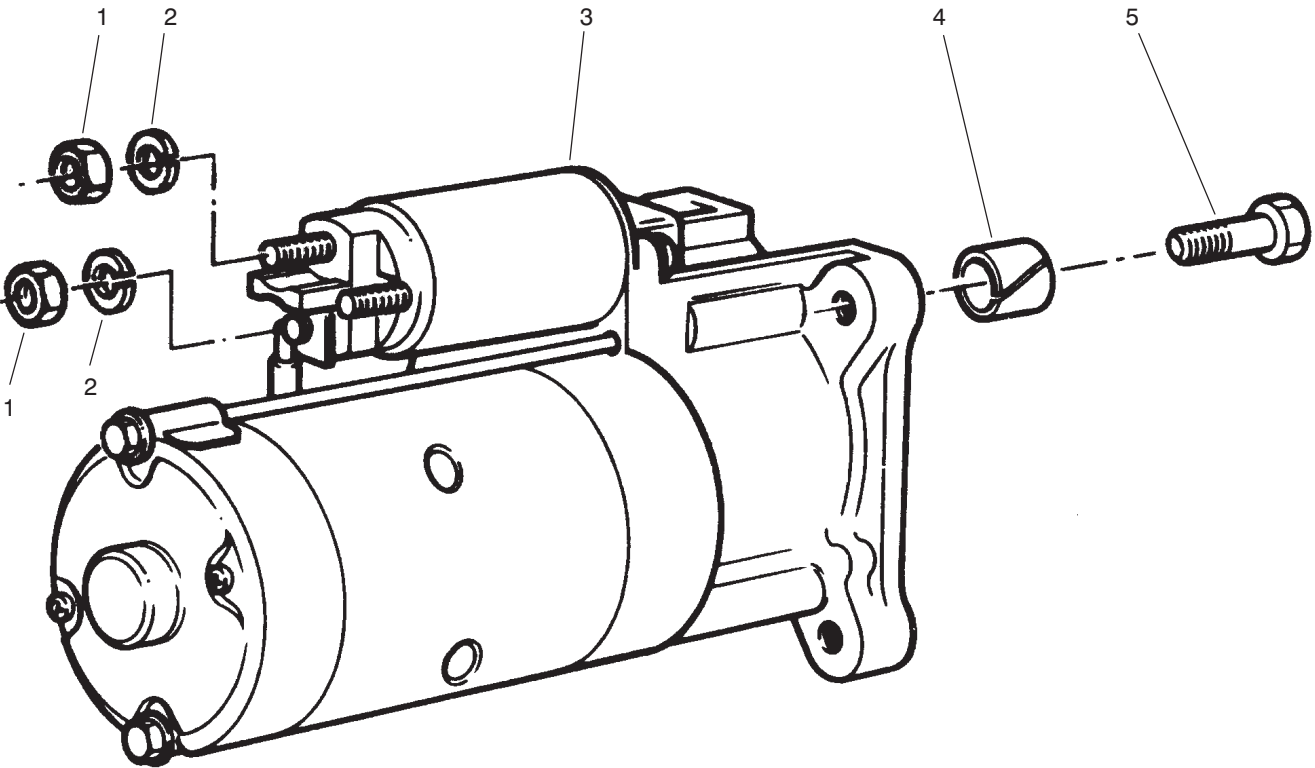 


T-0968-1

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-0330	Nut-Hex	2
2	76-5570	Washer-Lock	2
3	94-3263	Starter	1
4	76-5590	Sleeve - Spring	1

Ref. No.	Part No.	Description	No. Used
5	48-7810	Screw-Mounting	3
*	94-3275	Solenoid - Starter	1

 *Not Illustrated

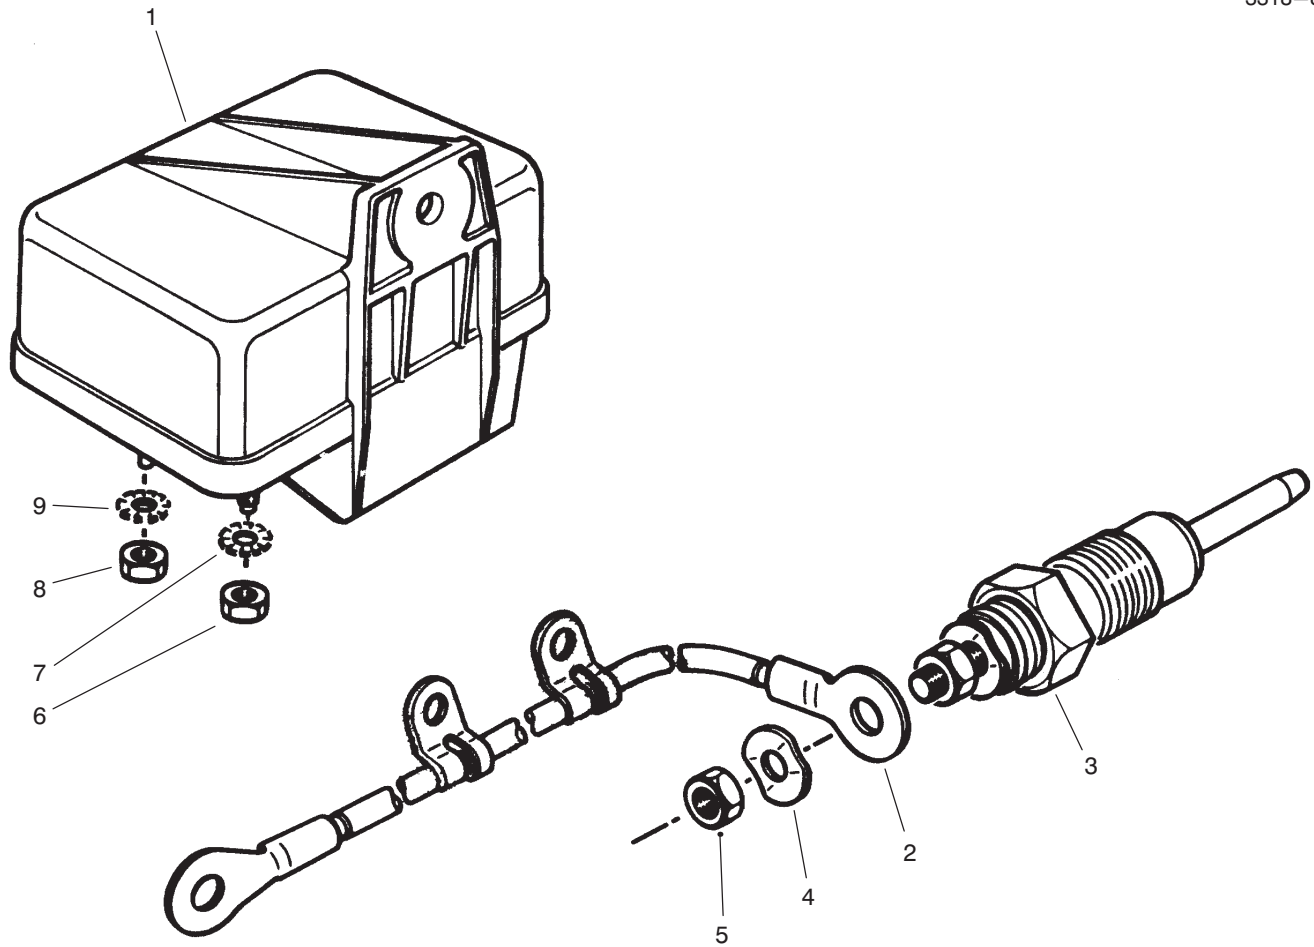


T-0972-1

GLOW PLUG & GLOW RELAY

Ref. No.	Part No.	Description	No. Used
1	76-5260	Relay - Glow Plug	1
2	94-3265	Cable - Glow Plug	4
3	94-3264	Plug - Glow	4
4	76-5290	Washer - Spring	4
5	94-3266	Nut - Hex.	4

Ref. No.	Part No.	Description	No. Used
6	94-3267	Nut - Lock	1
7	76-5310	Washer - E.T.L.W.	1
8	94-3251	Nut - Lock	1
9	74-8710	Washer - E.T.L.W.	1

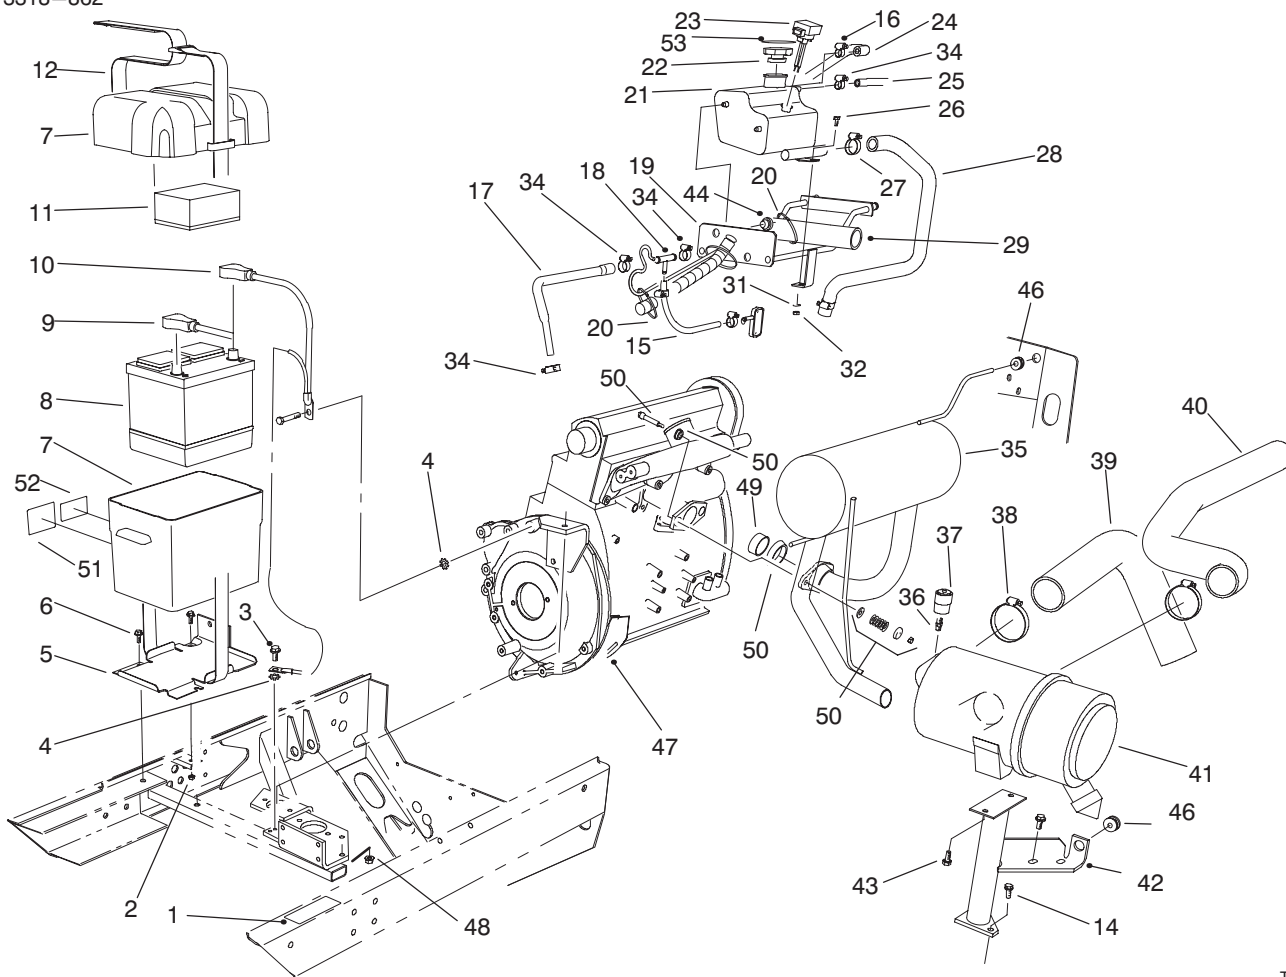 

T-2373-3


ENGINE COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-9198	Decal - Hot Surface	1
1	93-1265	Decal - Hot Surface (Europe)	1
1	94-4578	Decal - Hot Surface (Japan)	1
2	3296-29	Nut - Lock	1
4	3255-9	Washer - Lock, Ext. Tooth	2
5	93-7974	Plate - Battery, Box	1
6	3234-5	Screw - Flange Hd.	3
7	93-7595	Assembly - Box, Battery	1
†8		Battery	1
9	75-1370	Cable - Battery, Positive	1
10	94-1411	Cable - Battery, Negative	1
11	93-7968	Pad - Foam, Battery	1
12	94-1445	Strap - Battery	1
14	33105-030	Screw - Hex. Hd. Flange	2
15	63-7622	Hose - Fuel	1
16	2412-108	Clamp - Hose	3
17	94-2630	Hose - Return	1
18	93-4207	Fitting - Tee	1
19	94-1408	Wireform - Overflow	1
20	3290-378	Tie - Cable	3
†21	94-9983	Box - Degassing	1
†22	94-2800	Cap - Radiator	1
22	66-3240	Cap - Radiator (Europe)	1
†23	94-9984	Sensor - Water Level	1
24	93-7591	Hose - Return	1
25	92-7424	Hose - Overflow, Radiator	1

† Furnished with engine.

‡ Obtain locally.

Ref. No.	Part No.	Description	No. Used
26	33103-020	Screw - Hex. Hd. Flange	1
27	2412-129	Clamp - Hose	2
28	93-7589	Hose - Overflow	1
29	93-4215	Hose - Radiator, Upper Rear	1
31	33093-00	Washer	1
32	33023-00	Nut - Lock	1
34	2412-36	Clamp - Hose	4
35	93-9178	Muffler	1
*	94-2849	Muffler - Spark Arrestor	1
36	94-1416	Adapter - Indicator	1
37	93-9164	Indicator - Service	1
38	2412-125	Clamp - Hose	2
39	94-2624	Hose - Manifold	1
40	93-7584	Hose - Intake	1
41	93-7485	Assembly - Filter, Air	1
42	94-8108	Support - Filter, Air	1
43	33104-016	Screw - Hex. Hd. Flange	2
†44	94-2801	Grommet - Rubber	2
46	94-2812	Grommet	2
†47	77-3600	Plate - Closing	1
48	33005-00	Nut - Hex. Flange	2
†49	94-2815	Sleeve - Exhaust Flange	1
†50	94-2814	Kit - Exhaust Coupler	1
51	93-6668	Decal - Charging (Europe)	1
52	93-7276	Decal - Danger (Europe)	1
53	93-7840	Decal - Cap (Europe)	1

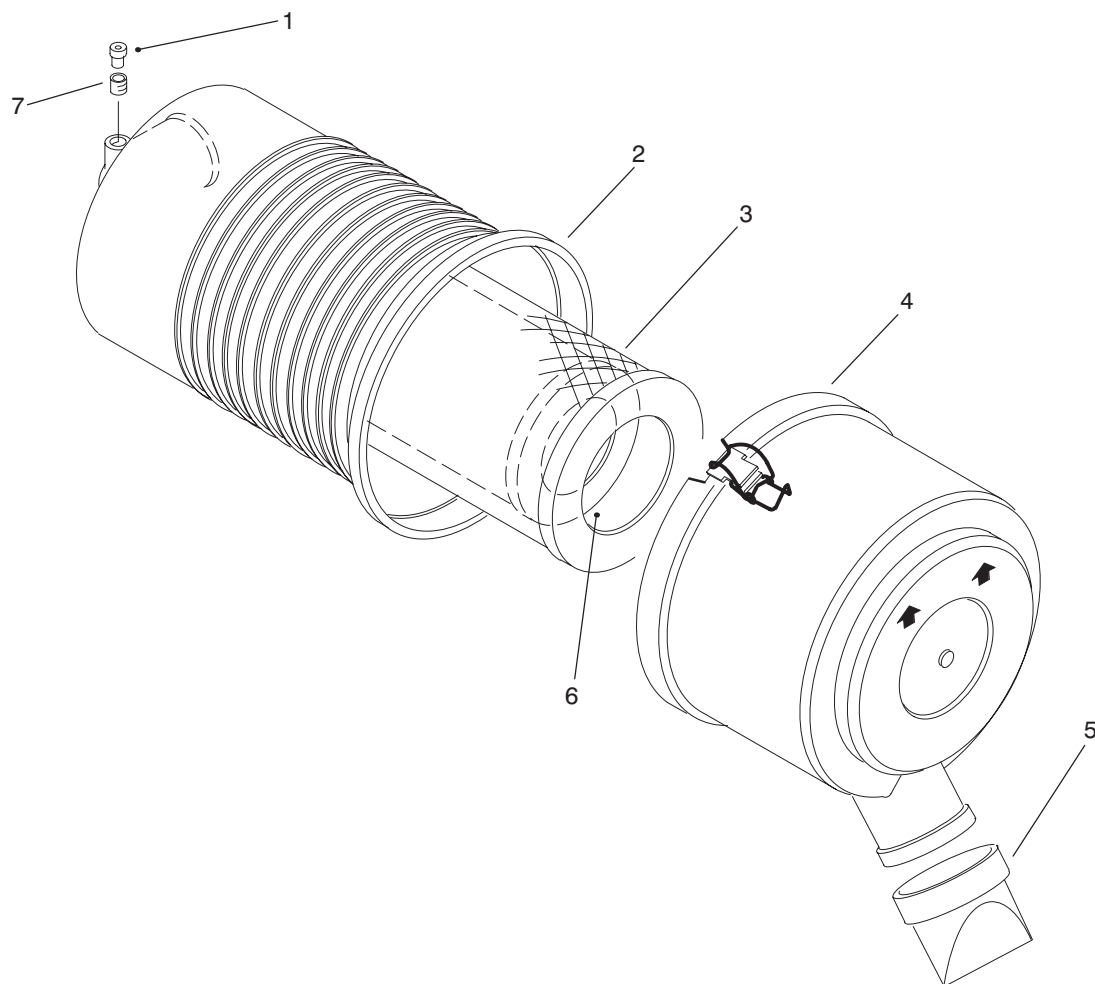 


T-2076-1

AIR CLEANER ASSEMBLY NO. 93-7485

Ref. No.	Part No.	Description	No. Used
1	93-9164	Indicator	1
2		Asm. - Body	1
3	94-1412	Filter - Primary	1
4	93-5986	Asm. - Cover	1

Ref. No.	Part No.	Description	No. Used
5	94-1414	Valve - Vacuator	1
6	94-1413	Filter - Safety	1
7	94-1416	Asm. - Adaptor	1

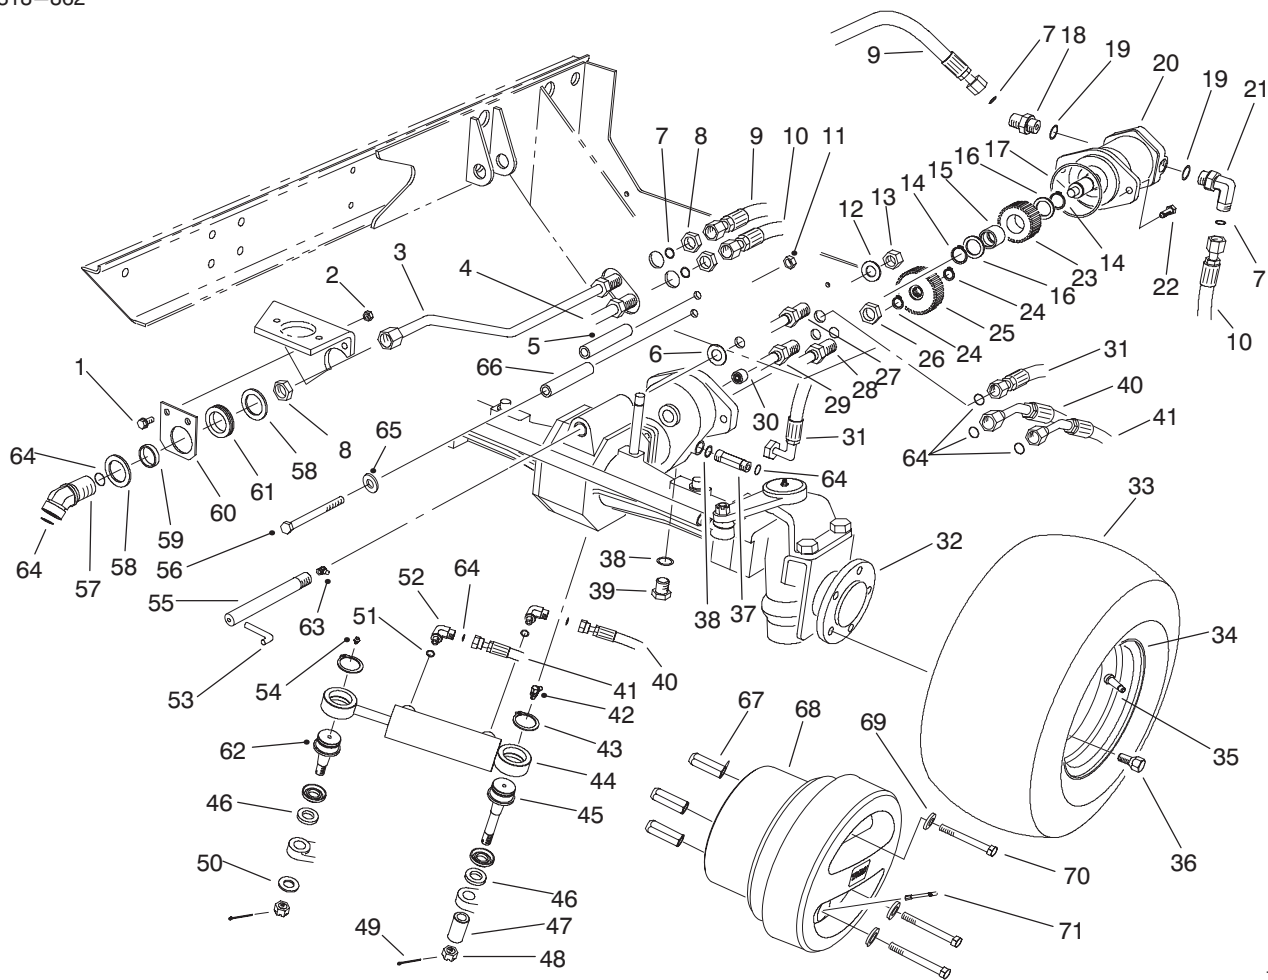 


T-2077-4

4-WD AXLE ASSEMBLY (Model No. 03801)

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex. Hd.	2
2	32128-21	Nut - Hex. Hd. Flange	2
3	92-7472	Assembly - Tube, Rear	1
4	92-7473	Assembly - Tube, Rear	1
5	76-8350	Stop - Axle, 4WD	2
6	93-7247	Washer - Thrust	1
7	237-58	O-Ring	6
8	340-126	Nut - Bulkhead	3
9	92-7536	Assy. - Hose, Rear Motor	1
10	92-7537	Assy. - Hose, Rear Motor	1
11	3296-23	Nut - Lock	2
12	3256-29	Washer - Flat	1
13	94-8000	Nut - Lock	1
14	32151-96	Ring - Retaining	1
15	71-4580	Clutch - Roller	1
16	71-4590	Washer - Thrust	2
17	237-166	O-Ring	1
18	340-9	Fitting - Hydraulic (Incl. Ref. #7 & 19)	1
19	237-81	O-Ring	2
20	92-7386	Motor - Hydraulic	1
21	340-142	Fitting - Hydraulic 90° (Incl. Ref. #7 & 19)	1
22	325-4	Screw - Cap Hex. Hd.	2
23	92-7587	Gear - Driver	1

Ref. No.	Part No.	Description	No. Used
24	32120-15	Ring - Retaining	2
25	92-7586	Gear - Driven	1
26	340-70	Nut - Lock	2
27	92-7553	Assy. - Tube, Rear Drain	1
28	92-7495	Assy. - Tube, Steering	1
29	92-7494	Assy. - Tube, Steering	1
30	74-5700	Bearing - Needle	1
31	92-7534	Assembly - Hose	1
32	93-7780	Axle - 4WD	1
33	86-5910	Tire	2
34	217-125	Wheel	2
35	232-27	Stem - Valve	2
36	74-5500	Bolt - Wheel	10
37	340-2	Adapter	1
38	237-42	O-Ring	2
39	353-508	Plug	1
40	92-7539	Assembly - Hose	1
41	92-7538	Assembly - Hose	1
42	302-60	Fitting - Grease 90°	1
43	32151-104	Ring - Retaining	2
44	94-8141	Cylinder - Hydraulic	1
45	92-5839	Ball Joint	1
46	92-5833	Spacer - Ball Joint	2
47	92-5844	Spacer - Ball Joint	1
48	32136-14	Nut - Hex. Slotted	2

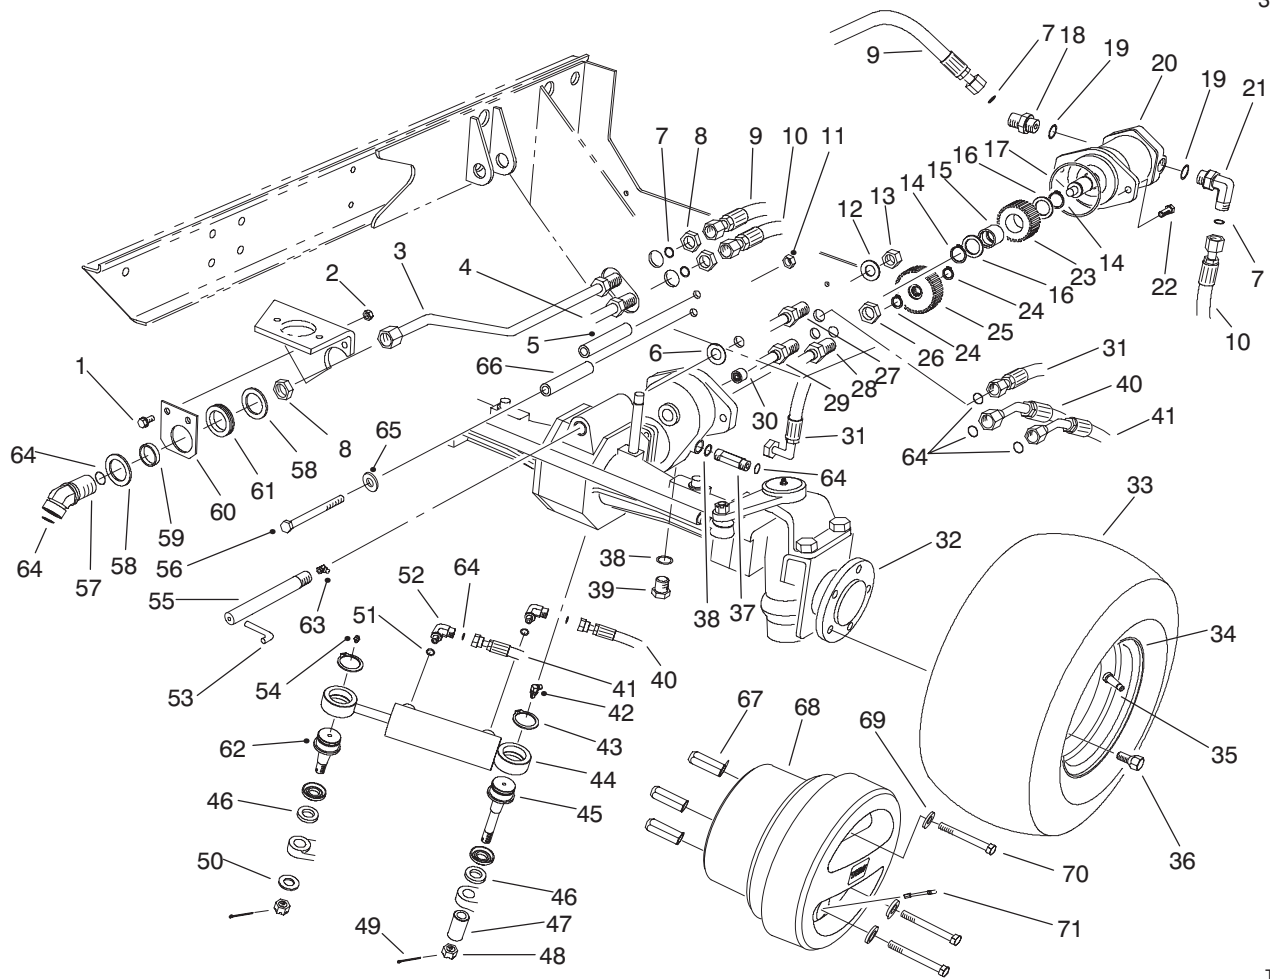 


T-2077-4

4-WD AXLE ASSEMBLY (Model No. 03801)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
49	3272-12	Pin - Cotter	2	60	92-7552	Bracket - Bulkhead	1
50	92-5836	Washer - Axle	1	61	240-7	Grommet	1
51	237-78	O-Ring	2	62	92-5838	Ball Joint	1
52	340-97	Fitting - Hydraulic 90° (Incl. Ref. #51 & 64)	2	63	302-33	Fitting - Grease	1
53	92-7604	Pin - Stop	1	64	237-22	O-Ring	6
54	302-5	Fitting - Grease	1	65	3256-26	Washer	1
55	94-8115	Pin - Axle, Pivot	1	66	88-1550	Stop - Axle	2
56	325-33	Screw - Cap Hex. Hd. 2WD	2	67	94-2806	Adaptor - Nut (Europe)	6
56	325-33	Screw - Cap Hex. Hd. 4WD	4	68	94-3052	Weight - Wheel (Europe)	2
57	92-7646	Fitting - Hydraulic 45° (Incl. Ref. #7)	1	69	3256-26	Washer - Flat (Europe)	6
58	69-8910	Washer	2	70	3213-14	Screw - HH (Europe)	6
59	69-8900	Spacer	1	71	94-3063	Extension - Stem, Valve (Europe)	2

 *Not Illustrated

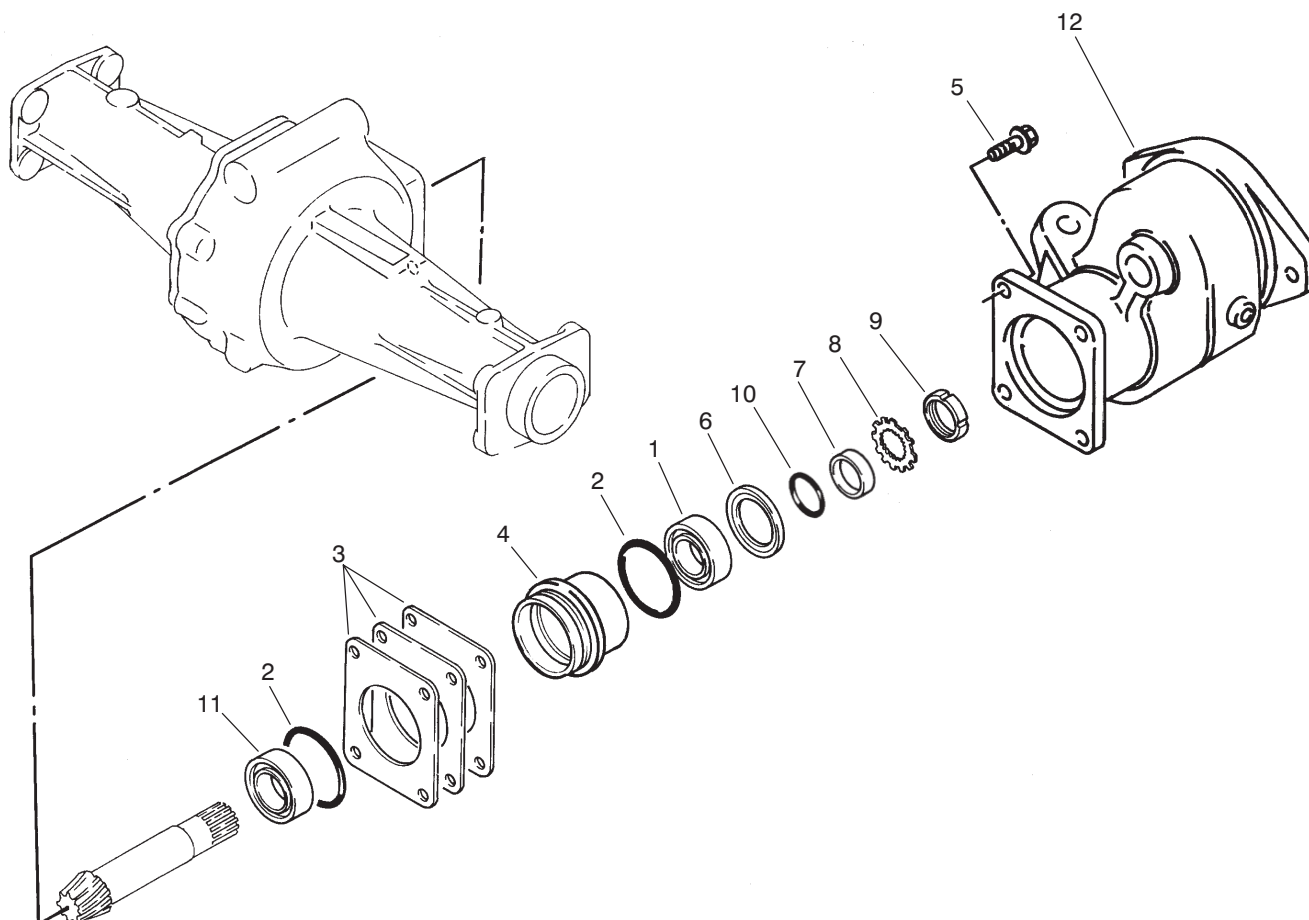


T-1109-3

SLEEVE ASSEMBLY AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7330	Bearing	1
2	76-7400	O-Ring	2
3	76-7410	Shim - 0.1 mm	A/R
*	76-7420	Shim - 0.2 mm	A/R
*	76-7430	Shim - 0.4 mm	A/R
4	76-7320	Sleeve	1
5	93-7773	Bolt	4
6	76-7340	Seal - Oil	1

Ref. No.	Part No.	Description	No. Used
7	76-7350	Bushing	1
8	76-7380	Washer	1
9	76-7390	Nut - Lock	1
10	76-7360	O-Ring	1
11	76-7370	Bearing	1
12	76-8070	Adapter	1
*	77-4010	Shim Set (Incl. Ref. #3)	1

 *Not Illustrated

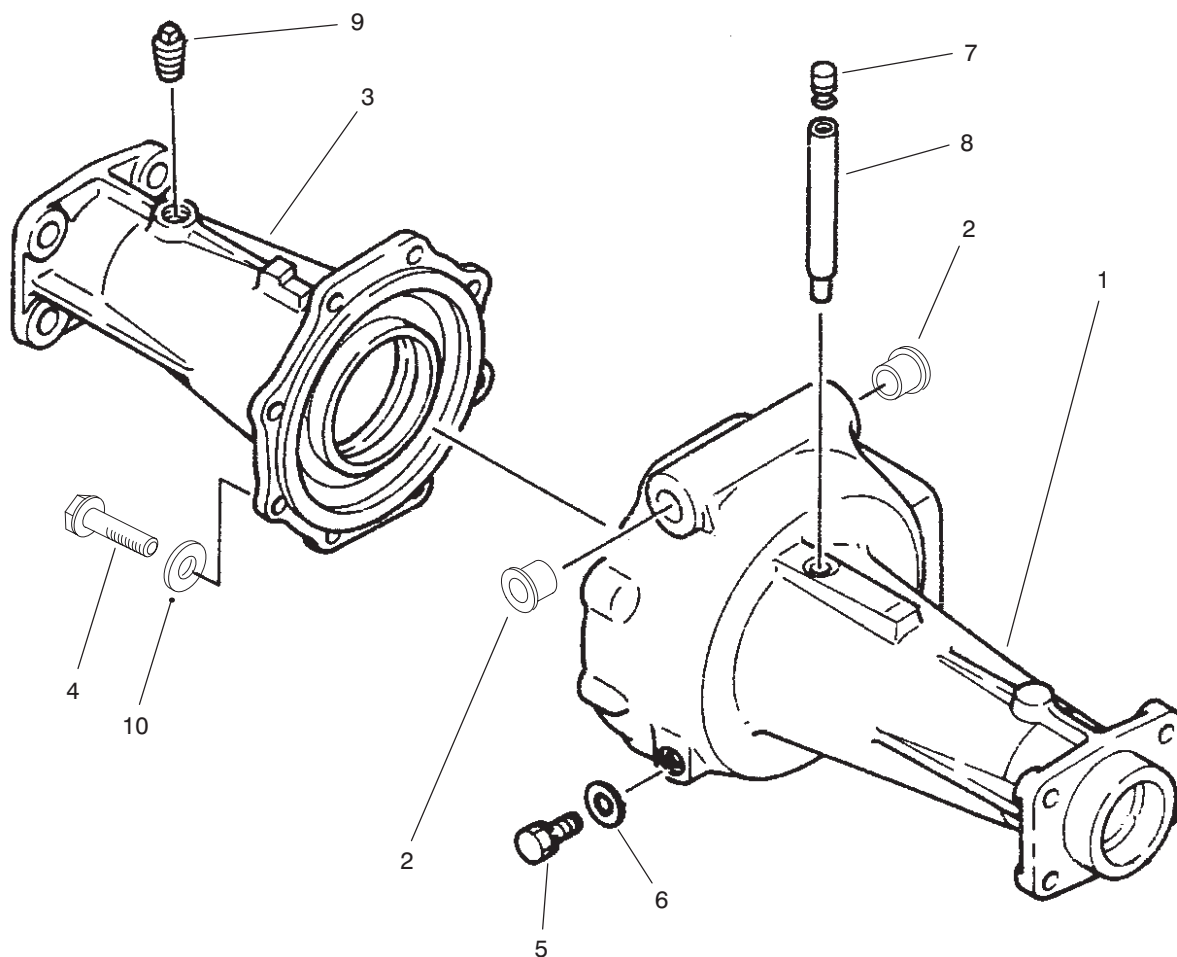


T-1112-3

AXLE HOUSING ASSEMBLY

AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used
1	93-7778	Housing - Axle A	1
2	93-7787	Bushing - Flange	2
3	93-7779	Housing - Axle B	1
4	93-7782	Screw - HHF	8
5	76-7110	Plug	1

Ref. No.	Part No.	Description	No. Used
6	76-7120	Seal - Washer	1
7	76-7480	Plug - Vent	1
8	76-7470	Pipe	1
9	76-7140	Plug	1
10	93-7781	Washer	8

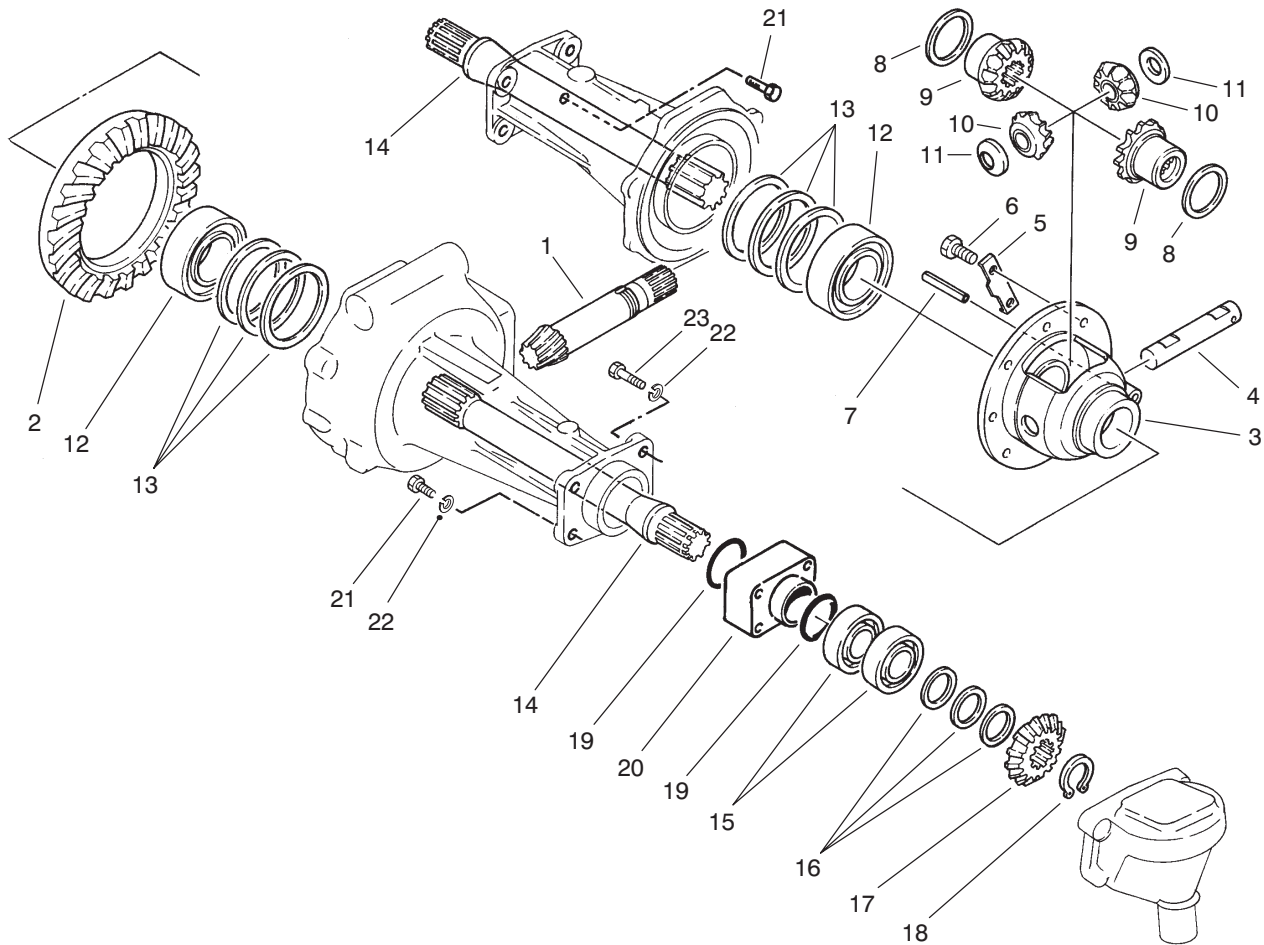 


T-1111-2

DIFFERENTIAL & SHAFT ASSEMBLY AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7250	Shaft - Drive	1
2	76-7240	Ring - Gear	1
3	76-7170	Case - Differential	1
4	76-7200	Shaft - Pinion	1
5	76-7230	Washer - Lock	4
6	76-7260	Bolt	8
7	76-7270	Pin - Spring	1
8	76-7220	Washer - Thrust	2
9	76-7190	Gear - Side	2
10	76-7180	Pinion - Mate	2
11	76-7210	Washer - Thrust	2
12	76-7280	Bearing	2
13	76-7290	Shim - 0.1 mm	A/R
*	76-7300	Shim - 0.2 mm	A/R
*	76-7310	Shim - 0.3 mm	A/R
14	76-7490	Shaft - Differential	2
15	76-7500	Bearing	4

Ref. No.	Part No.	Description	No. Used
16	76-7520	Shim - 0.1 mm	A/R
*	76-7530	Shim - 0.2 mm	A/R
*	76-7540	Shim - 0.4 mm	A/R
17	76-7510	Pinion - 14T	2
18	76-7550	Ring - Retaining	2
19	76-7580	Seal - O-Ring	4
20	76-7590	Spacer	2
21	76-7600	Bolt - Reamer	2
22	76-7620	Washer - Lock	8
23	76-7610	Bolt	6
*	76-7160	Gear Case Assembly (Incl. Ref. #2-11)	1
*	77-4000	Shim Set (Incl. Ref. #13)	1
*	77-4020	Shim Set (Incl. Ref. #16)	1

 *Not Illustrated

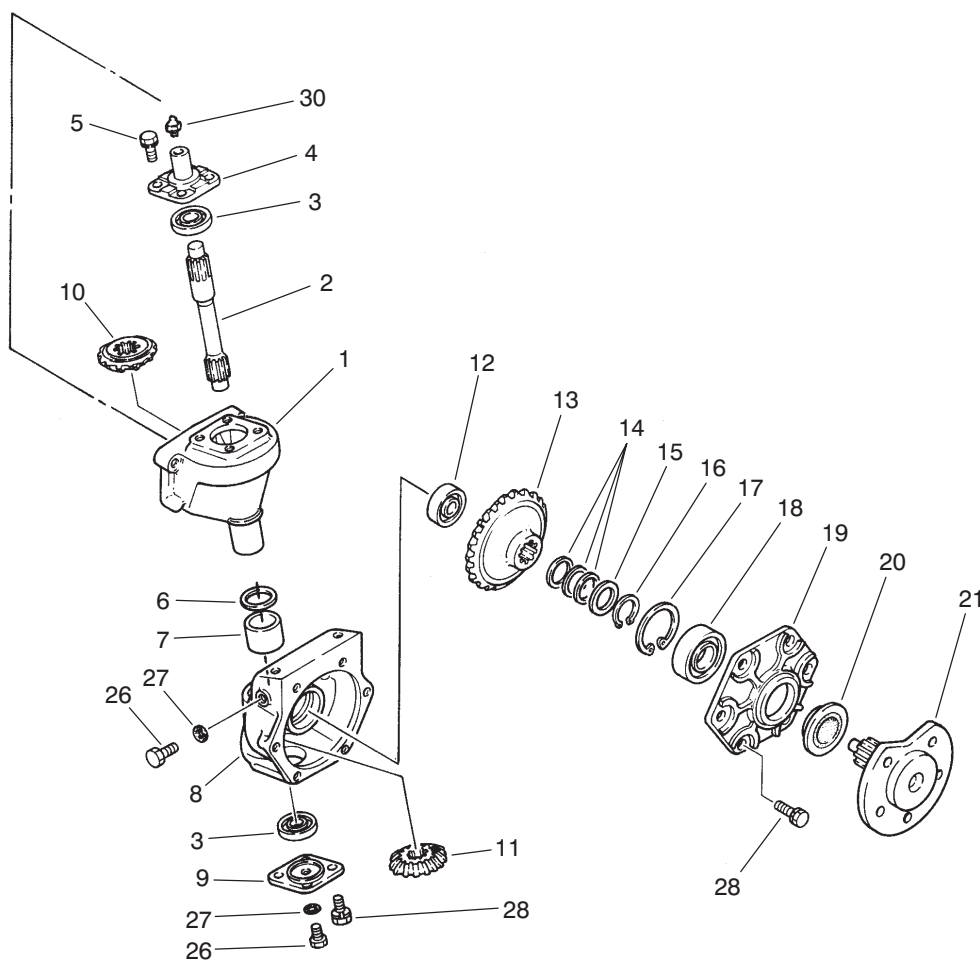


T-1110-1

STEERING GEAR CASE ASSEMBLY AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7560	Case - Gear	2
2	76-7650	Shaft - Final Drive	2
3	76-7670	Bearing	4
4	76-7660	Holder - 20 mm L.H.	1
*	76-7630	Holder - 25 mm R.H.	1
5	76-7640	Bolt	8
6	76-7740	Seal - Oil	2
7	76-7730	Bushing	2
8	76-7680	Case - Final Drive	2
9	76-7770	Cover	2
10	76-7510	Pinion - 14T	2
11	76-7750	Pinion - 15T	2
12	94-2803	Bearing	2
13	76-7840	Gear - Bevel	2
14	76-7890	Shim - 0.15 mm	A/R
*	76-7900	Shim - 0.2 mm	A/R
*	76-7910	Shim - 0.4 mm	A/R

Ref. No.	Part No.	Description	No. Used
15	76-7880	Spacer	2
16	76-7920	Ring - Retaining	2
17	76-7930	Ring - Retaining	2
18	93-7775	Bearing	2
19	76-7810	Holder - Bearing	2
20	76-7870	Seal - Oil	2
21	76-7830	Shaft - Wheel	2
26	76-7110	Plug	4
27	76-7120	Seal - Washer	4
28	76-7640	Bolt	20
30	76-7960	Fitting - Grease	2
*	77-4030	Shim Set (Incl. Ref. #14)	1

 *Not Illustrated

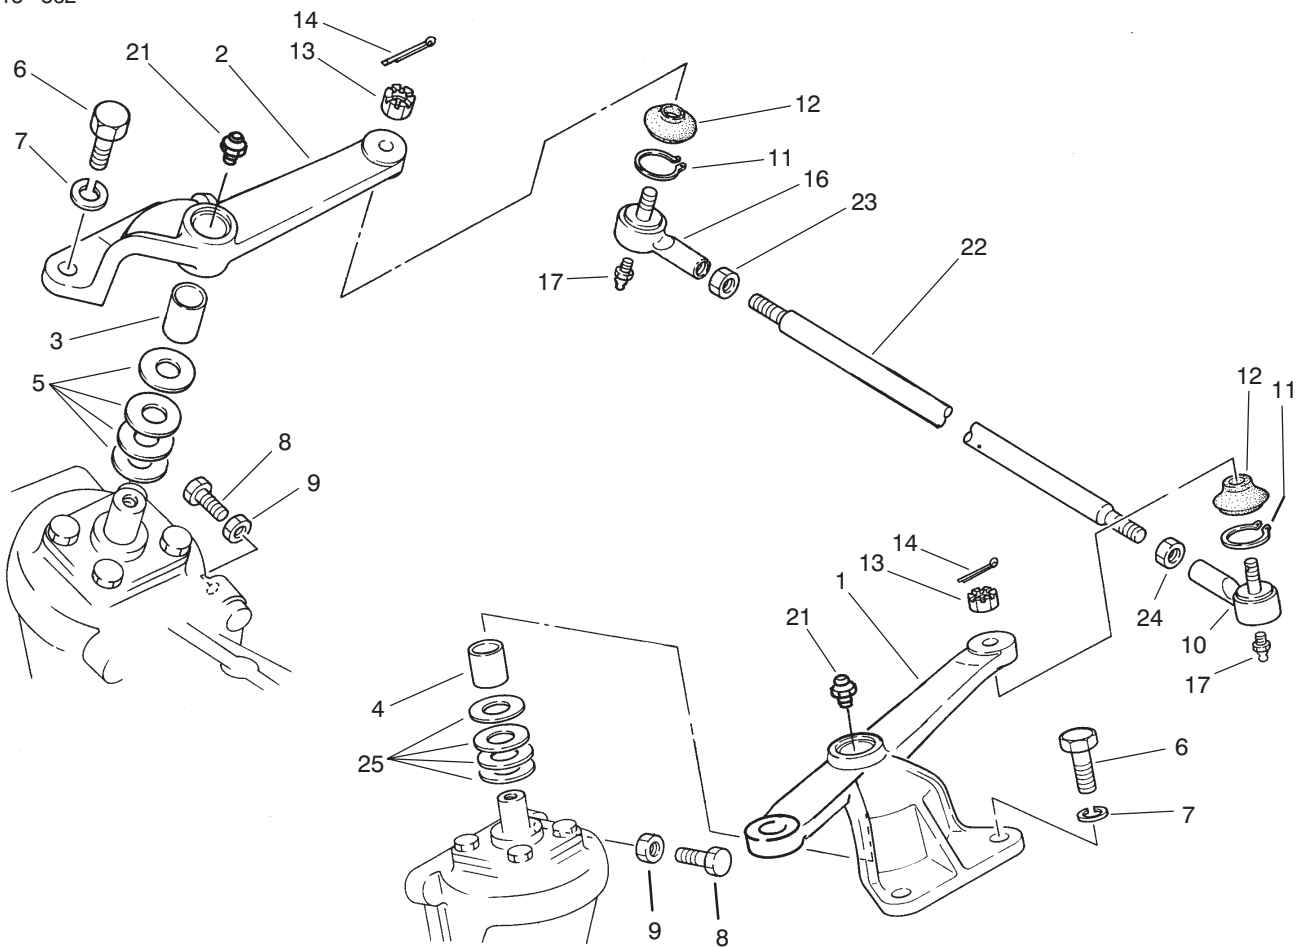


T-1108-1

STEERING ARM LINKAGE AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used
1	94-8018	Arm - Drag Link	1
2	94-8019	Arm - Tie Rod	1
3	76-4260	Bushing	1
4	76-7950	Bushing	1
5	76-7820	Shim - 1.0 mm	A/R
*	76-7970	Shim - 1.4 mm	A/R
*	76-7980	Shim - 1.2 mm	A/R
*	76-7990	Shim - .08 mm	A/R
6	76-8000	Bolt	4
7	76-8010	Washer	2
8	76-7710	Bolt	2
9	76-7720	Nut	4
10	76-8030	L.H. Rod End Assembly (Incl. Ref. #11-14 & 17)	1
11	93-7783	Ring - Retaining	2
12	93-7784	Cover	2
13	93-7785	Nut - Slotted	2

Ref. No.	Part No.	Description	No. Used
14	3272-7	Pin - Cotter	2
16	76-8050	R.H. Rod End Assembly (Incl. Ref. #11-14 & 17)	1
17	93-7786	Fitting - Grease	2
21	76-7960	Fitting - Grease	2
22	76-8020	Rod - Tie	1
23	76-8060	Nut - R.H.	1
24	76-8040	Nut - L.H.	1
25	76-7700	Shim - 0.8 mm	A/R
*	76-7760	Shim - 1.0 mm	A/R
*	76-7780	Shim - 1.2 mm	A/R
*	76-7790	Shim - 1.4 mm	A/R
*	77-4050	Shim Set (Incl. Ref. #5)	1
*	77-4040	Shim Set (Incl. Ref. #25)	1

 *Not Illustrated

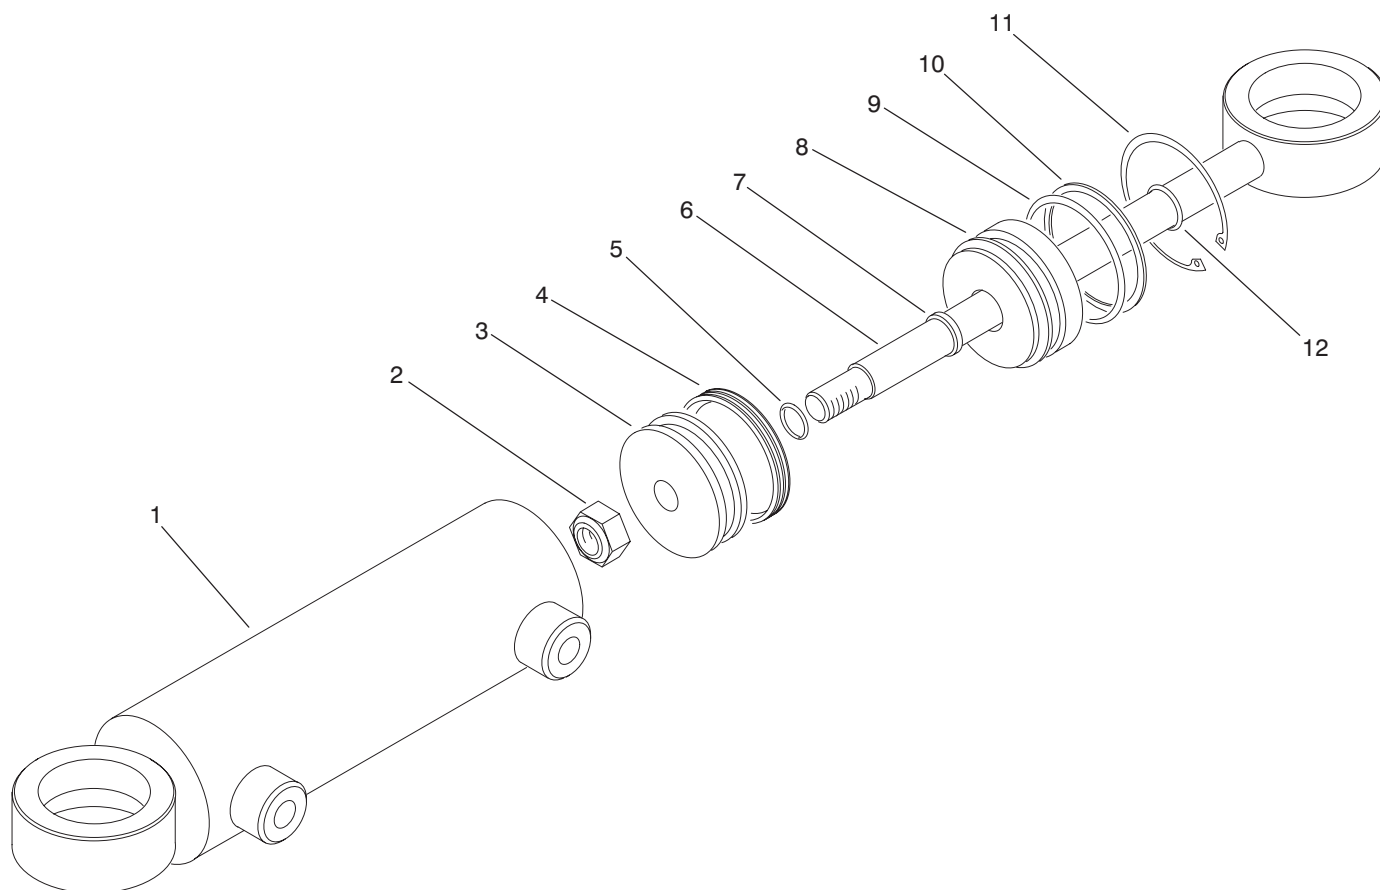


T-2452-1

HYDRAULIC CYLINDER NO. 94—8141 (Model No. 03801)

Ref. No.	Part No.	Description	No. Used
1	94—9955	Asm. — Barrel	1
2	32152—10	Nut — Lock	1
3	94—9957	Piston	1
4		Uniring	1
5		O—Ring	1
6	94—9956	Asm. — Piston Rod	1
7		Seal — Rod	1
8	94—9958	Gland — Cylinder	1

Ref. No.	Part No.	Description	No. Used
9		O—Ring	1
10		Backup	1
11	32120—8	Ring — Retaining	1
12		O—Ring	1
*	86—5390	Kit — Seal (Incl. Ref. #4, 5, 7, 9, 10 & 12)	1

 *Not Illustrated

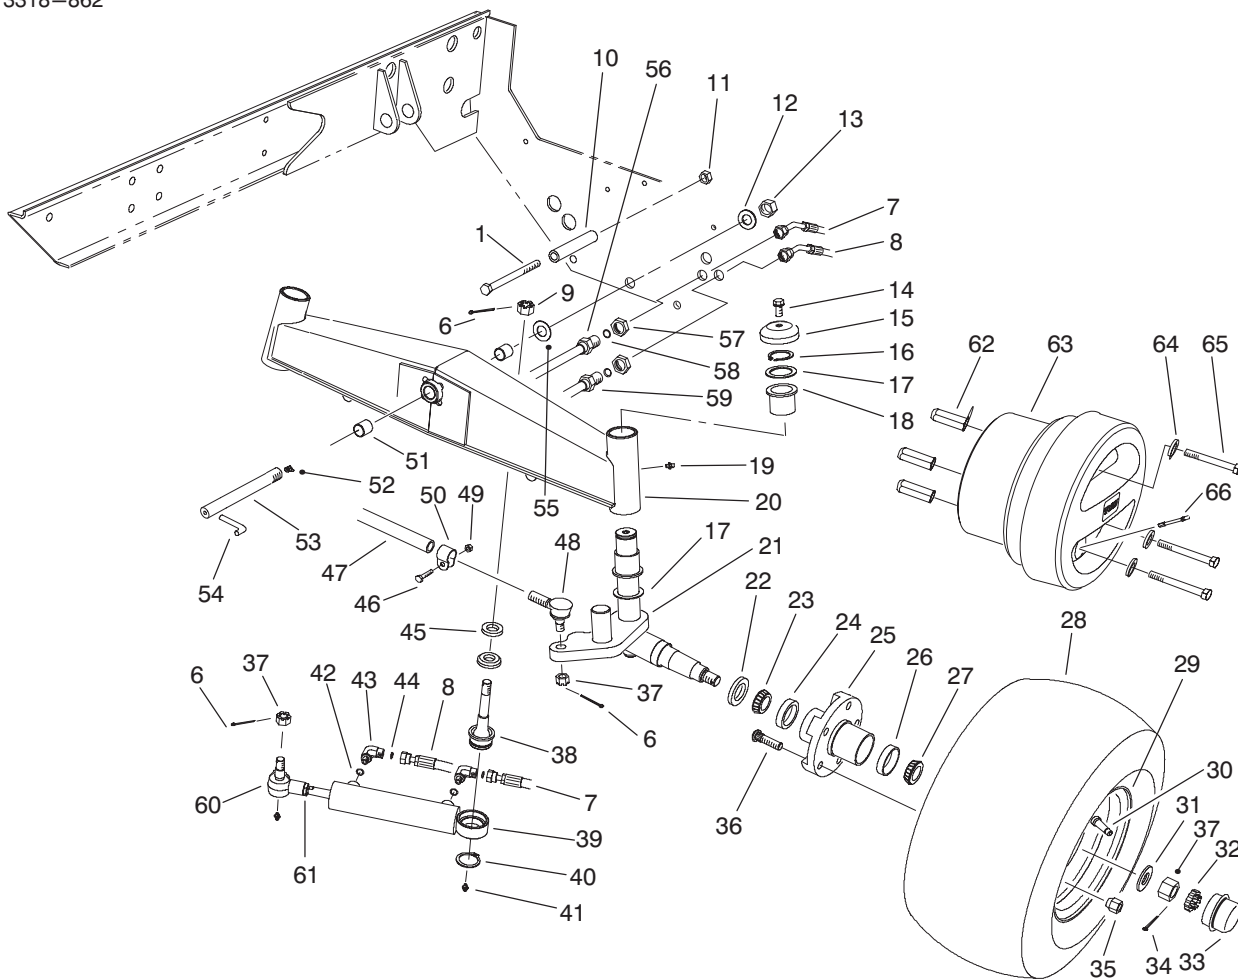


T-2078-3

2-WD REAR AXLE ASSEMBLY (Model No. 03800)

Ref. No.	Part No.	Description	No. Used
1	325-20	Screw - Cap Hex. Hd.	2
6	3272-12	Pin - Cotter	2
7	92-7594	Assembly - Hose	1
8	92-7595	Assembly - Hose	1
9	32136-14	Nut - Hex. Slotted	4
10	76-8350	Stop - Axle	2
11	3296-45	Nut - Lock	2
12	3256-29	Washer - Flat	1
13	94-8000	Nut - Lock	1
14	3234-12	Screw - Hex. Hd. Flange	2
15	69-8890	Cap - Spindle	2
16	32151-10	Ring - Retaining	2
17	62-2170	Washer - Thrust	4
18	69-6470	Bushing - Flange	4
19	302-11	Fitting - Grease	2
20	94-5607	Assembly - Axle, Rear (Incl. Ref. #18, 19 & 51)	1
21	92-9725	Spindle - LH	1
*	92-9724	Spindle - RH	1
22	69-2980	Seal - Inner	2
23	254-106	Cone - Bearing	2
24	254-107	Cup - Bearing	2
25	92-9650	Assembly - Hub (Incl. Ref. #22, 24, 26, 27, 33 & 36)	2
26	254-72	Cup - Bearing	2


Ref. No.	Part No.	Description	No. Used
27	254-92	Cone - Bearing	2
28	86-5910	Tire	2
29	217-125	Wheel	2
30	232-27	Stem - Valve	2
31	93-0309	Washer - Tab	2
32	93-0307	Nut - Retainer	2
33	69-2970	Cap - Hub	2
34	3272-13	Pin - Cotter	2
35	242-50	Nut - Lug	10
36	92-9652	Stud - Drive	10
37	3220-7	Nut - Jam	2
38	92-5839	Ball Joint	1
39	94-8142	Assembly - Cylinder	1
40	32151-104	Ring - Retaining	1
41	302-5	Fitting - Grease	1
42	237-78	O-Ring	2
43	340-97	Fitting - Hydraulic 90° (Incl. Ref. #42 & 44)	2
43	340-97	Fitting - Hydraulic 90° (Incl. Ref. #42 & 44)	2
44	237-22	O-Ring	2
45	92-5833	Spacer - Ball Joint	1
46	3210-5	Screw - Cap Hex. Hd.	2
47	74-5940	Assembly - Rod, Tie	1
48	2411-46	Joint - Ball, LH (Incl. Ref. #6)	1

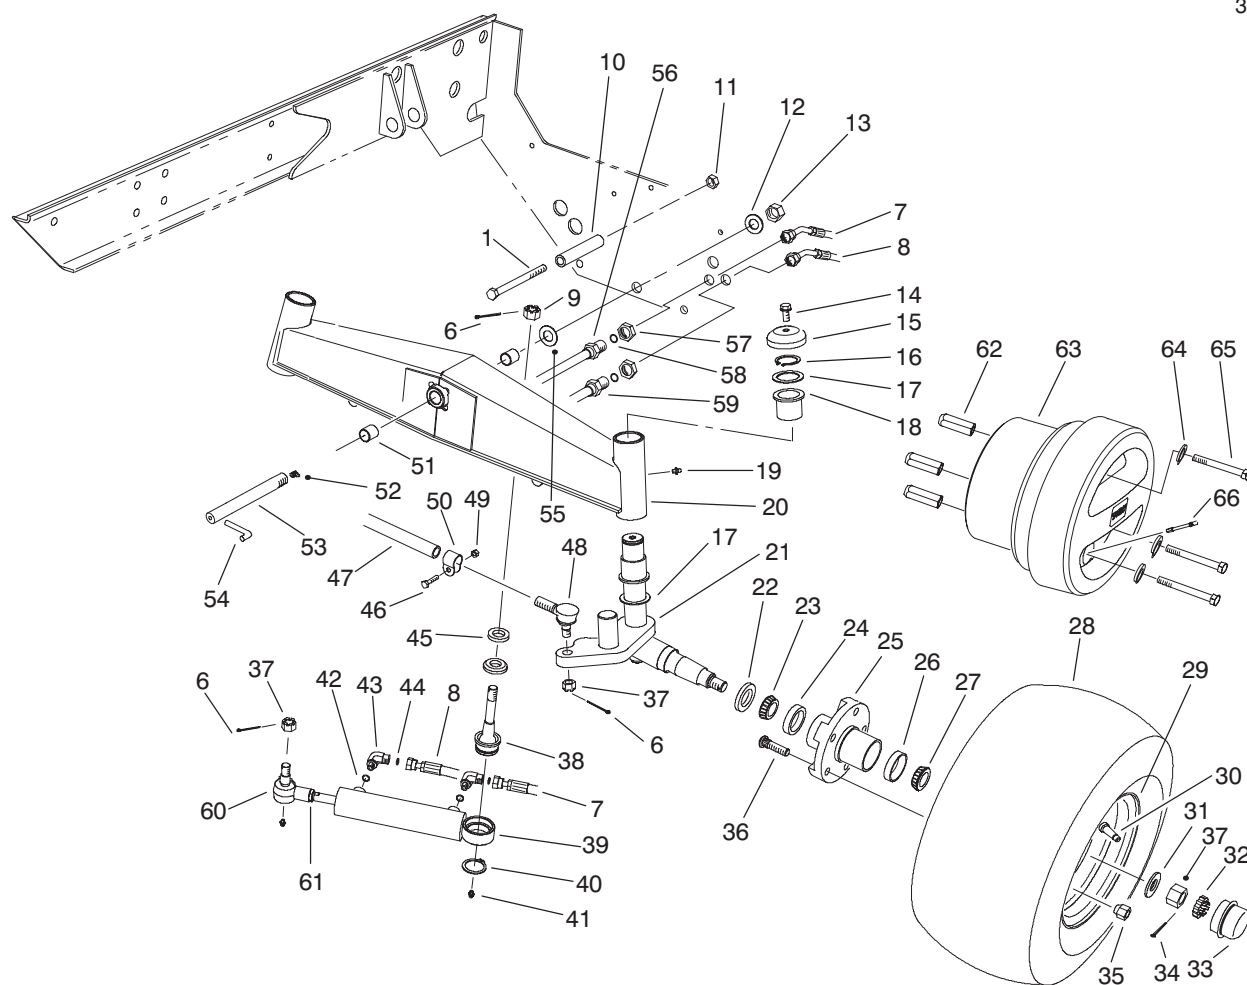 

T-2078-3

2-WD REAR AXLE ASSEMBLY (Model No. 03800) (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
48	2411-45	Joint - Ball, RH (Incl. Ref. #6)	1	57	340-70	Nut - Lock, Bulkhead	2
49	32152-5	Nut - Lock	2	58	237-22	O-Ring	2
50	2412-122	Assembly - Clamp (Incl. Ref. #46 & 49)	2	59	92-7494	Asm. - Tube, Steering Rear	1
51	94-5603	Bushing - Sleeve	2	60	92-5837	Asm. - Rod End	1
52	302-33	Fitting - Grease 90°	1	61	3220-11	Nut - Jam	1
53	94-8115	Pin - Axle, Pivot	1	62	94-2807	Adaptor - Nut (Europe)	6
54	92-7604	Pin - Stop	1	63	94-3052	Weight - Wheel (Europe)	2
55	93-7247	Washer - Thrust	1	64	3256-26	Washer - Flat (Europe)	6
56	92-7495	Asm. - Tube, Steering Rear	1	65	3213-14	Screw - HH (Europe)	6
				66	94-3063	Extension - Stem, Valve (Europe)	2

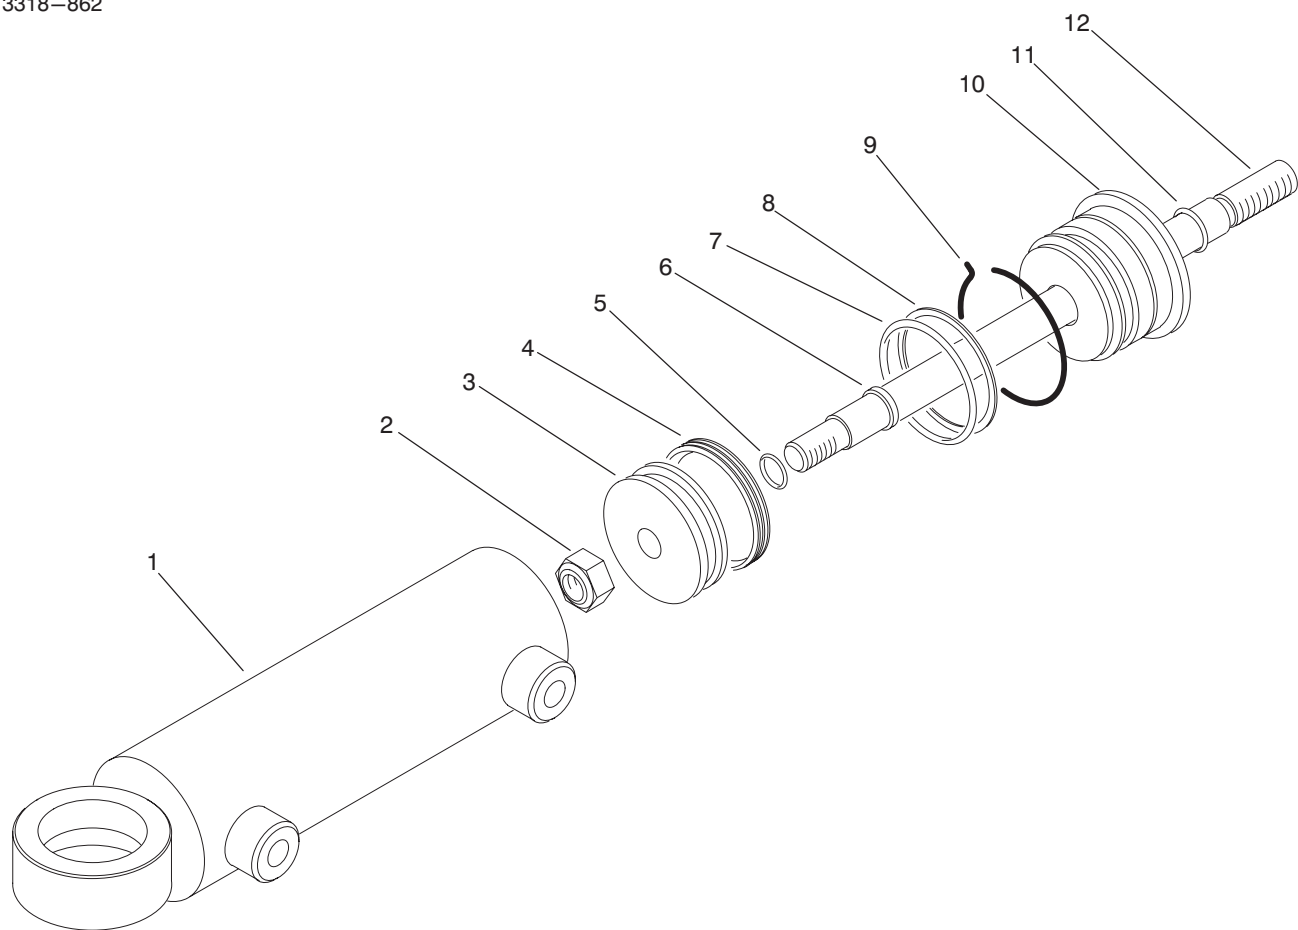 


T-2453-1

HYDRAULIC CYLINDER NO. 94-8142 (Model No. 03800)

Ref. No.	Part No.	Description	No. Used
1	94-9959	Asm. - Barrel	1
2	32152-10	Nut - Lock	1
3	94-9961	Piston	1
4		Uniring	1
5		O-Ring	1
6		Seal - Rod	1
7		O-Ring	1

Ref. No.	Part No.	Description	No. Used
8		Backup	1
9	94-9963	Ring - Retaining	1
10	94-9962	Gland - Cylinder	1
11		O-Ring	1
12	94-9960	Asm. - Rod, Piston	1
*	94-9964	Kit - Seal (Incl. Ref. #4-8, & 11)	1

 
*Not Illustrated

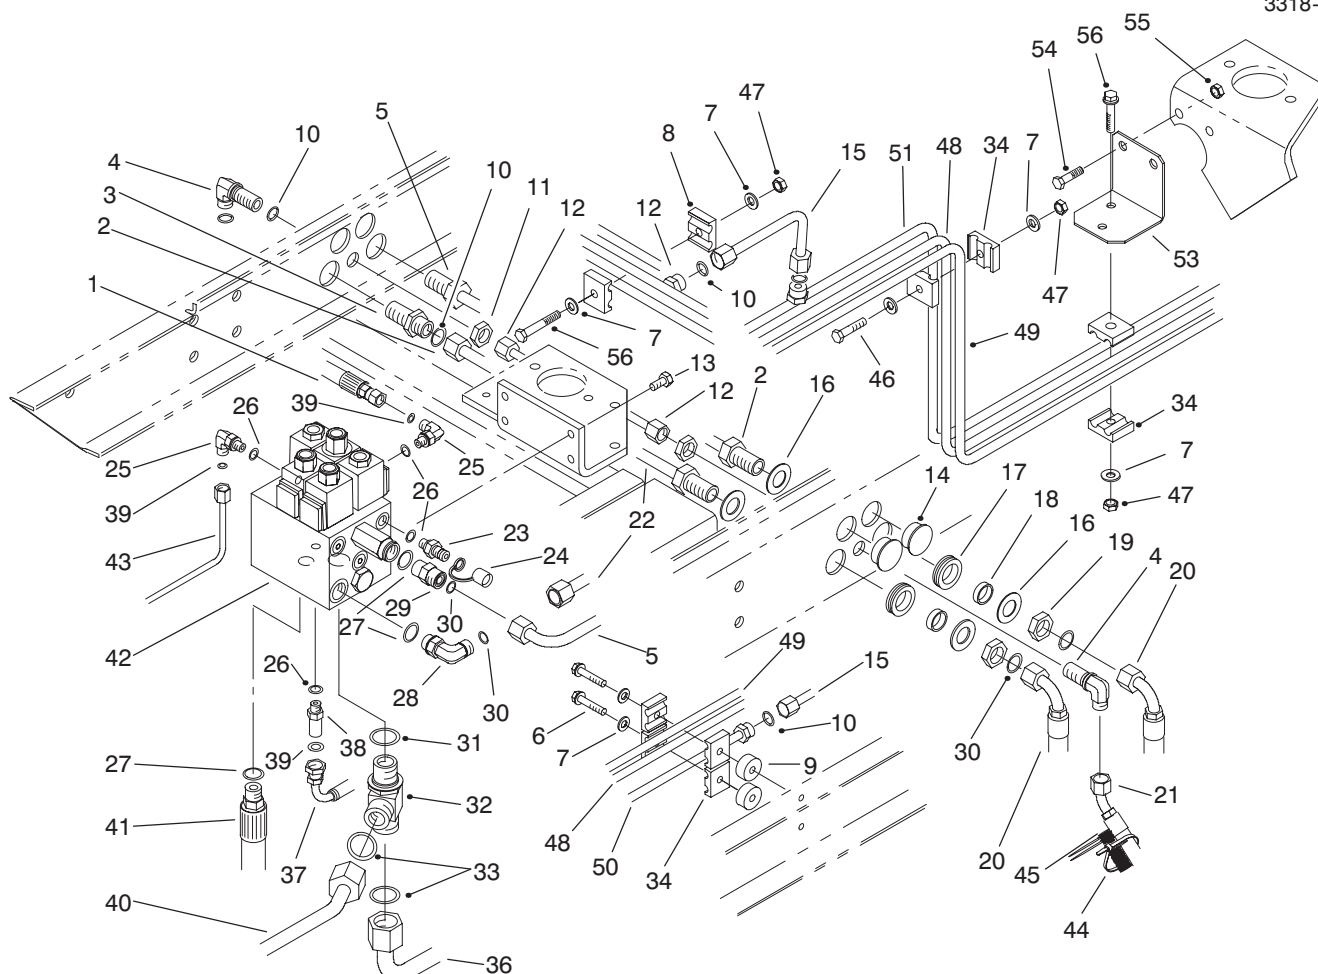

T-2079-1

REAR HYDRAULIC CONTROL BLOCK & TUBES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-7638	Assembly - Hose	1	22	92-7585	Assembly - Tube	1
2	92-7648	Assembly - Hose	1	23	354-77	Fitting - Quick Connect (Incl. Ref. #26)	1
3	340-161	Fitting - Adapter (Incl. Ref. #30)	1	24	354-79	Cap - Fitting	1
4	340-154	Fitting - Hydraulic 90° (Incl. Ref. #10)	2	25	340-132	Fitting - Hydraulic 90° (Incl. Ref. #26 & 39)	2
5	92-7584	Assembly - Tube	1	26	237-78	O-Ring	4
6	32104-37	Screw - Hex. Hd.	2	27	237-79	O-Ring	3
7	3256-23	Washer - Flat	8	28	340-98	Fitting - Hydraulic 90° (Incl. Ref. #27 & 30)	1
8	56-7972	Clamp - Tube	2	29	340-4	Fitting - Hydraulic (Incl. Ref. #27 & 30)	1
9	80-8660	Spacer	2	30	237-30	O-Ring	6
10	237-22	O-Ring	2	31	237-81	O-Ring	1
11	340-70	Nut - Bulkhead	7	32	340-148	Fitting - Tee (Incl. Ref. #31, 33)	1
12	92-7647	Assembly - Tube, Drain	1	33	237-58	O-Ring	2
13	33104-025	Screw - Hex. Hd. Flange	4	34	56-7973	Clamp - Tube	10
14	94-1402	Plug	4	36	92-7558	Assy. - Tube, Cooler Rear	1
15	93-4205	Assembly - Tube, Drain (Model 03800)	1	37	92-7639	Assembly - Hose	1
15	93-4206	Assembly - Tube, Drain (Model 03801)	1	38	94-1403	Fitting - Hydraulic (Incl. Ref. #26 & 39)	1
16	69-8930	Washer	8	39	237-21	O-Ring	2
17	240-5	Grommet	4	40	92-7557	Assy. - Tube, Cooler Front	1
18	69-8960	Spacer	4	41	92-7492	Assembly - Hose	1
19	340-127	Nut - Bulkhead	4	42	92-7419	Assembly - Block, Manifold	1
20	92-7649	Assembly - Hose	4				
21	93-4201	Assembly - Hose	2				

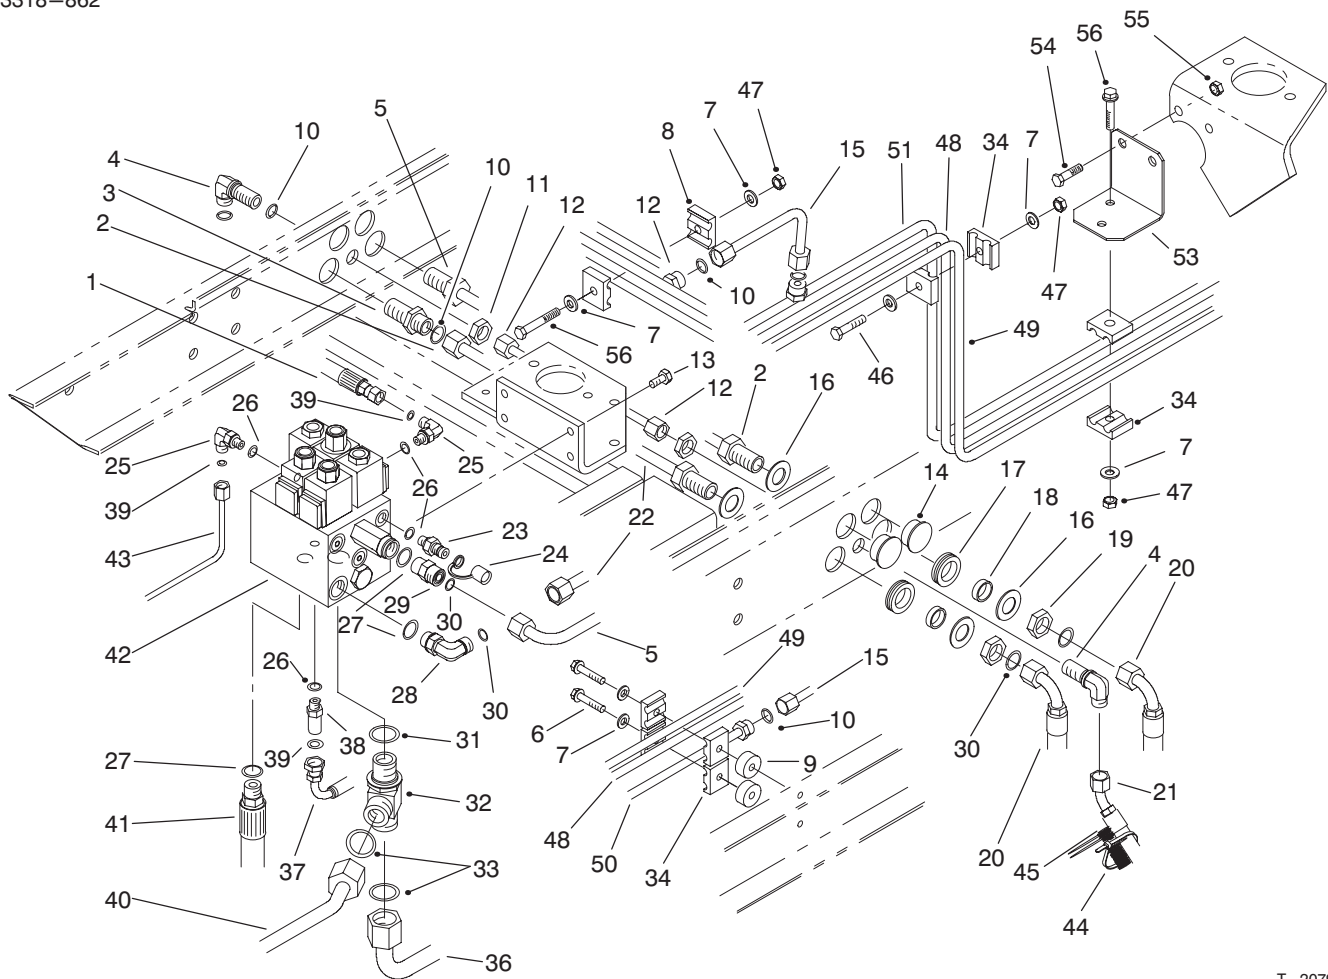 


T-2079-1

REAR HYDRAULIC CONTROL BLOCK & TUBES (Cont.)

Ref. No.	Part No.	Description	No. Used
43	92-7591	Assembly — Tube, P2A	1
44	3290-378	Tie — Cable	6
45	94-3090	Harness — Wire, Main	1
46	322-6	Screw — HH	1
47	3296-47	Nut — Lock	4
48	92-7494	Asm. — Tube, Steering, Rear	1
49	92-7495	Asm. — Tube, Steering, Rear	1
50	92-7598	Asm. — Tube, Front Drain	1

Ref. No.	Part No.	Description	No. Used
51	92-7553	Asm. — Tube, Rear Drain (Model 03801)	1
52	237-42	O-Ring	2
53	94-2834	Bracket — Clamp	1
54	323-6	Screw — Cap Hex. Hd.	2
55	32128-21	Nut — Lock	2
56	322-7	Screw — Cap Hex. Hd.	3

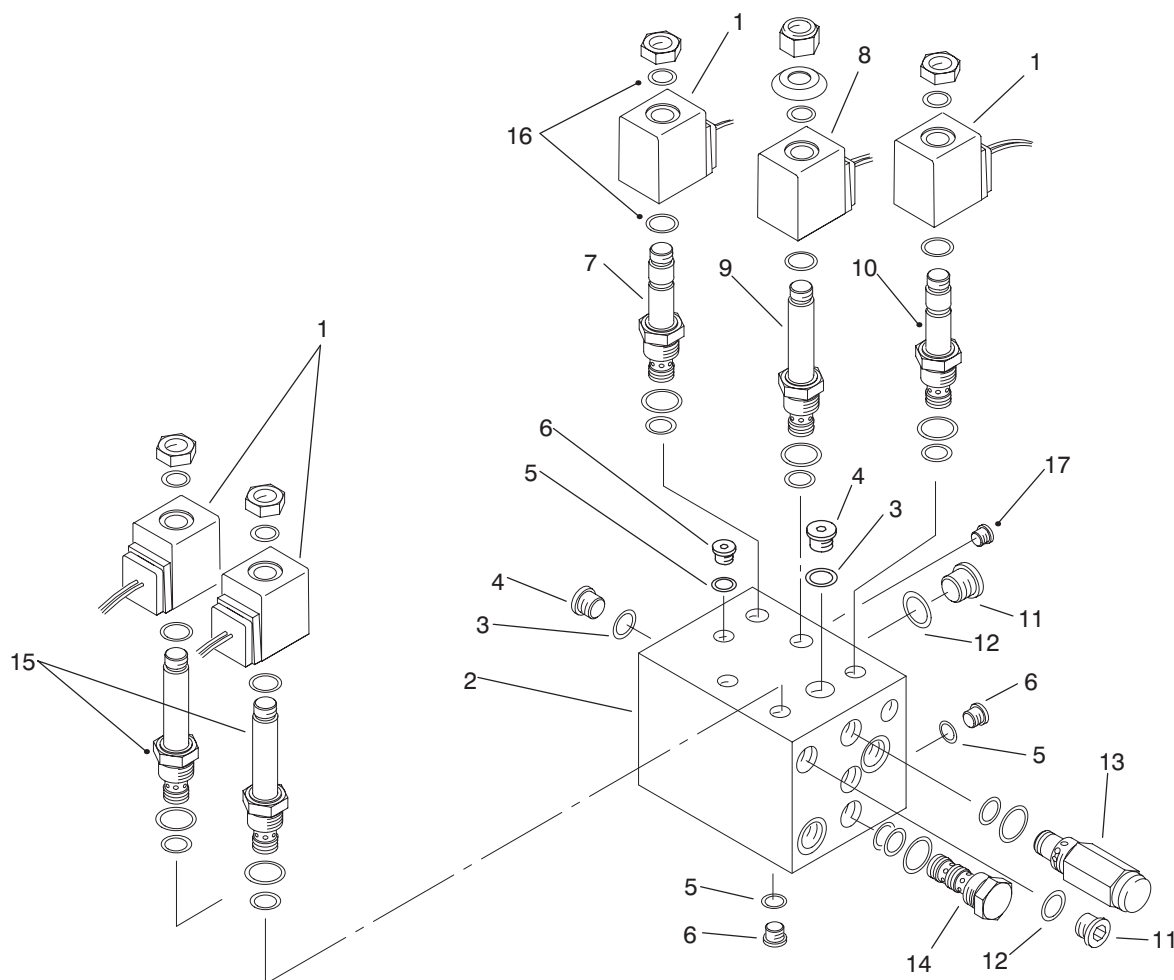 


T-2080-1

MANIFOLD ASSEMBLY NO. 92-7419

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-9190	Solenoid - 20 Watt	4	11	353-989	Plug (Incl. Ref. #12)	5
†2		Block - Manifold, Rear	1	12	237-42	O-Ring	5
3	237-78	O-Ring	4	13	75-0920	Cartridge - Relief 3000 psi (Use Seal Kit 75-2080)	1
4	353-990	Plug (Incl. Ref. #30)	4	14	93-7491	Cartridge - Pilot Check (Use Seal Kit 69-4260)	1
5	237-56	O-Ring	4	15	93-7494	Cartridge - N.O. Poppet (Use Seal Kit 75-2080)	2
6	353-991	Plug (Incl. Ref. #5)	4	16	94-5438	Seal - Solenoid	10
7	88-6990	Cartridge - N.C. Spool (Use Seal Kit 75-2080)	1	17	94-2626	Plug - Orifice	1
8	88-9200	Solenoid - 28 Watt	1	*	75-2080	Seal Kit	5
9	88-6970	Cartridge - No Flow (Use Seal Kit 75-2080)	1	*	69-4260	Seal Kit	1
10	88-6980	Cartridge - N.C. Poppet (Use Seal Kit 75-2080)	1				

*Not Illustrated

 †Not Serviced Separately

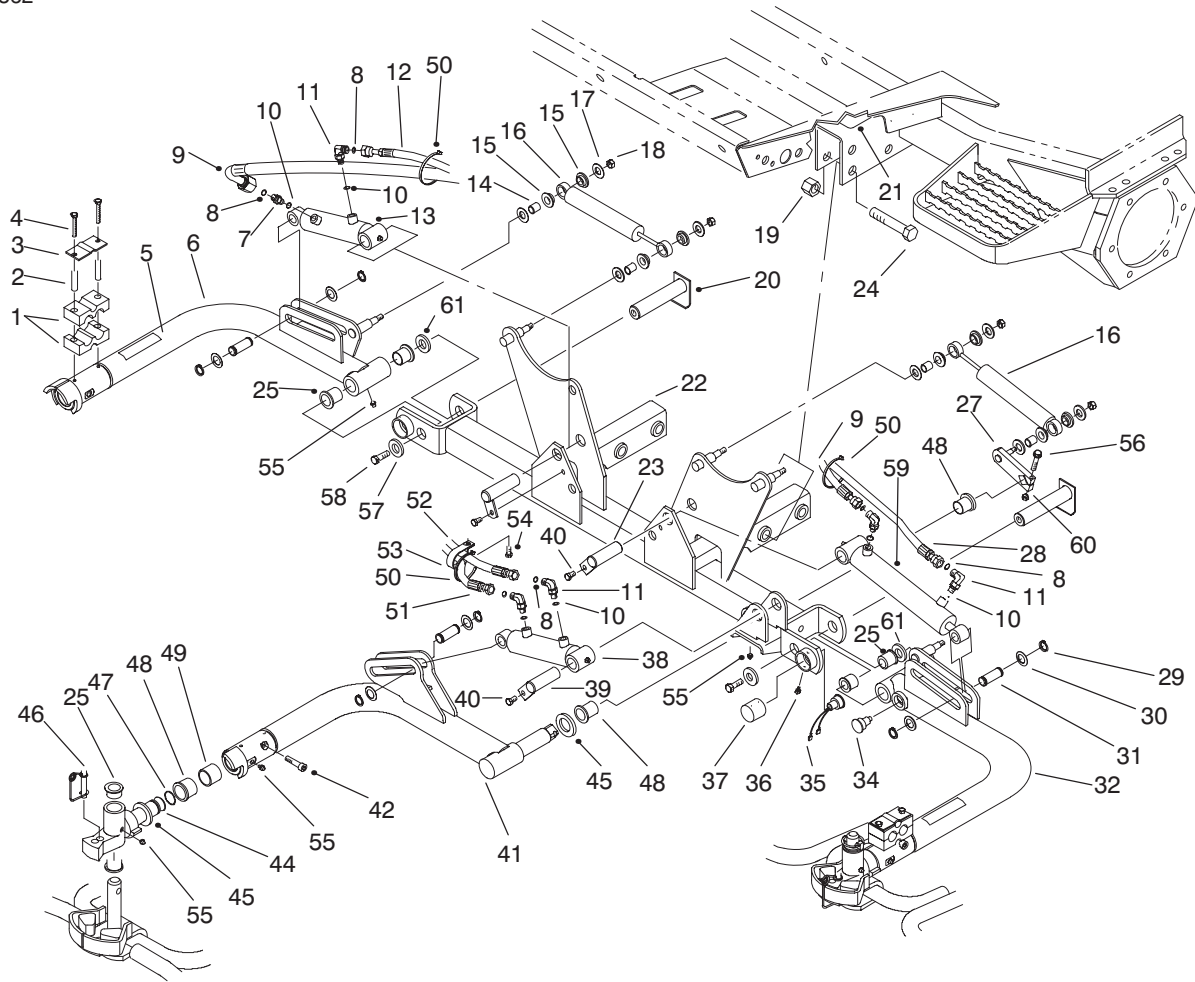


T-2081-1

FRONT LIFT ARMS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-8170	Clamp	6
2	93-7960	Spacer	6
3	93-7961	Clamp - Drain, Case	3
4	60-6700	Screw - Cap Hex. Hd.	6
5	36-3400	Decal - Warning	2
5	93-6687	Decal - No Step (Europe)	2
5	84-2780	Decal - No Step (Japan)	2
6	93-9194	Lift Arm #5	1
7	340-92	Fitting - Hydraulic (Incl. Ref. #8 & 10)	1
8	237-21	O-Ring	6
9	75-5890	Hose	2
10	237-78	O-Ring	6
11	340-132	Fitting - Hydraulic 90° (Incl. Ref. #8 & 10)	5
12	92-7564	Assembly - Hose	1
13	93-7551	Cylinder - Hydraulic	1
14	256-172	Bushing	6
15	94-1430	Bushing - Flange	12
16	93-4224	Absorber - Shock	3
17	69-8980	Washer - Flat	12
18	33025-00	Nut	6
19	3296-51	Nut - Lock	4
20	93-9189	Pin	2
21	88-0440	Decal - Floor Plate	1
21	93-6693	Decal - Floor Plate (Europe)	1
21	88-1900	Decal - Floor Plate (Japan)	1


Ref. No.	Part No.	Description	No. Used
22	93-2649	Assembly - Frame, Carrier	1
23	83-6780	Pin - Cylinder	2
24	328-7	Screw - Cap Hex. Hd.	4
25	94-8949	Bushing - Flange	12
27	93-1425	Bar - Lift, Center	1
28	82-6490	Assembly - Hose	1
29	32120-93	Ring - Retaining	6
30	3-6498	Washer - Thrust	6
31	75-5350	Pin - Cylinder, Slide	3
32	93-9193	Lift Arm #4	1
34	92-8754	Magnet - Switch, Reed	1
35	92-8002	Sensor - Switch, Reed	1
36	32104-76	Screw - Self Tapping	2
37	75-6370	Cap - Sensor	1
38	93-2650	Cylinder - Hydraulic	1
39	83-6790	Pin - Short, Cylinder	1
40	32144-14	Screw - Cap Hex. Hd.	3
41	93-9190	Lift Arm #1	1
42	93-4234	Screw - Socket Hd.	3
44	93-9181	Knuckle - Pivot	3
45	94-8946	Washer - Thrust	3
46	93-9161	Pin	3
47	93-7524	O-Ring	3
48	94-8947	Bushing - Flange	5
49	94-8948	Bushing	3
50	3290-378	Tie - Cable	3
51	92-7565	Assembly - Hose	1

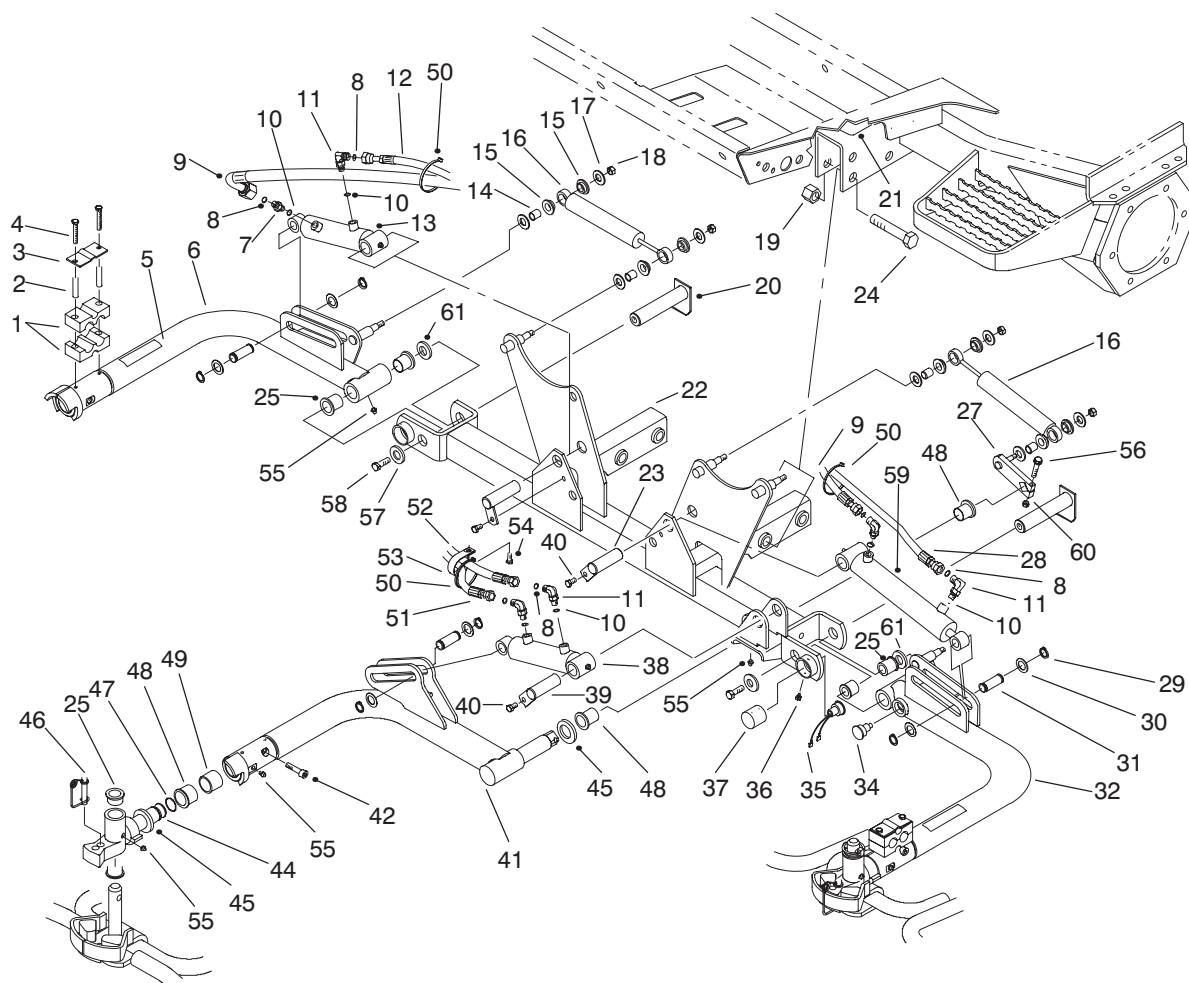 

T-2081-1

FRONT LIFT ARMS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
52	92-7562	Assembly -- Hose	1	57	53-6380	Washer -- Flat	2
53	2412-96	Clamp	1	58	33105-040	Screw -- HH	2
54	322-4	Screw -- HH	1	59	93-7555	Cylinder -- Hydraulic	1
55	302-5	Fitting -- Grease	9	60	33024-00	Nut	1
56	33104-060	Screw -- HH	1	61	3256-42	Washer -- Flat	2

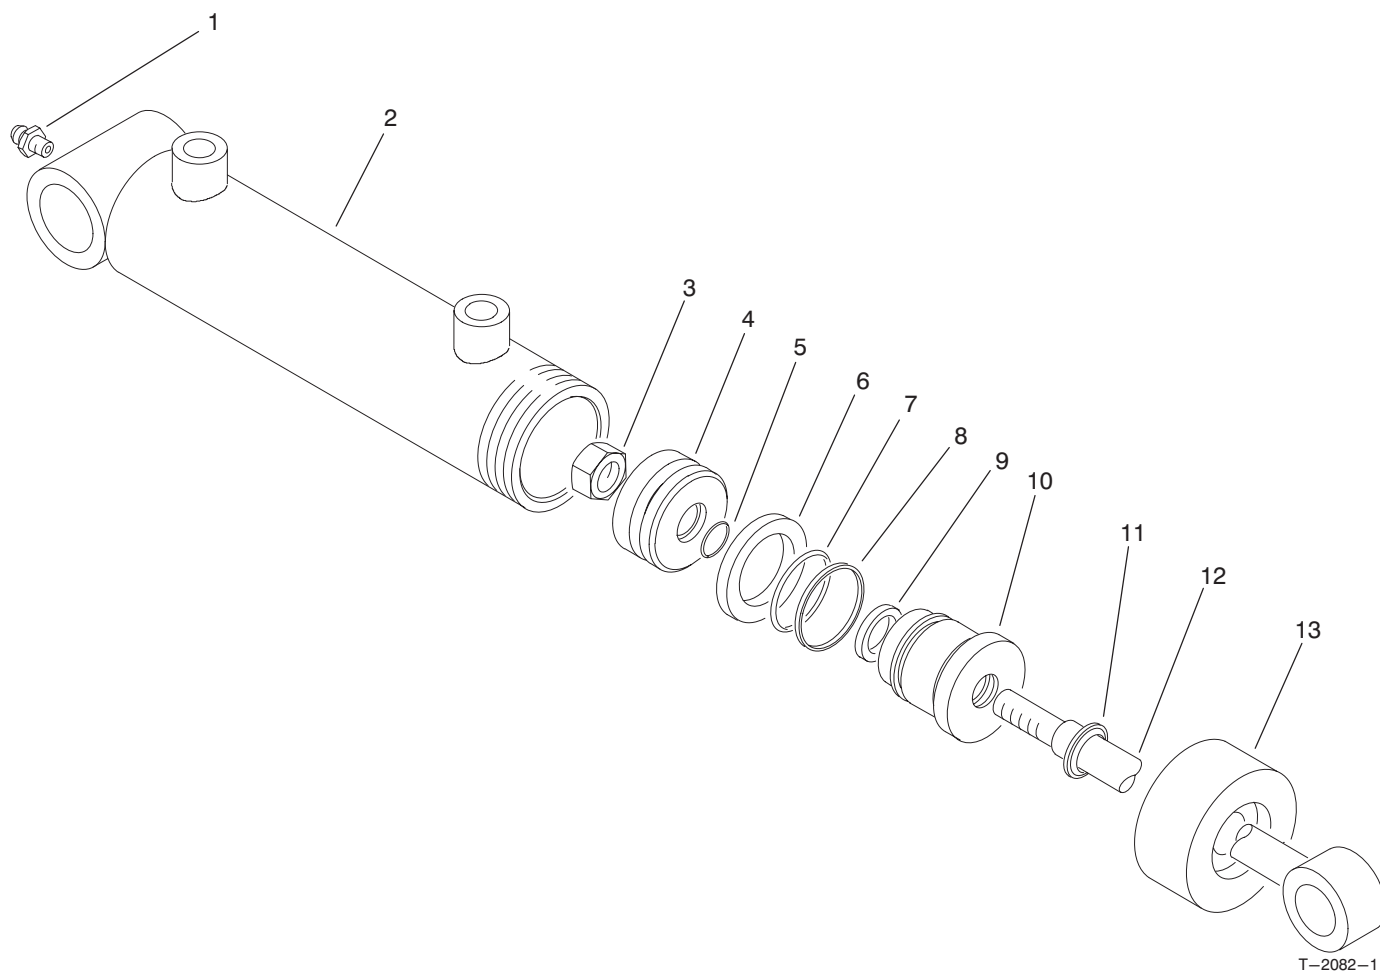 


HYDRAULIC CYLINDER NO. 93-7555

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	1
†2		Assembly - Barrel	1
3	32152-10	Nut - Lock	1
4	70-2780	Piston	1
†5		O-Ring	1
†6		Seal - Special	1
†7		O-Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal - Rod	1
10	93-7990	Head	1
†11		Seal - Dust	1
12	94-2644	Shaft With Clevis	1
13	93-7991	Collar	1
*	86-7330	Kit - Seal Repair (Incl. Ref. #5-9, & 11)	1

†Not Serviced Separately.

 *Not Illustrated

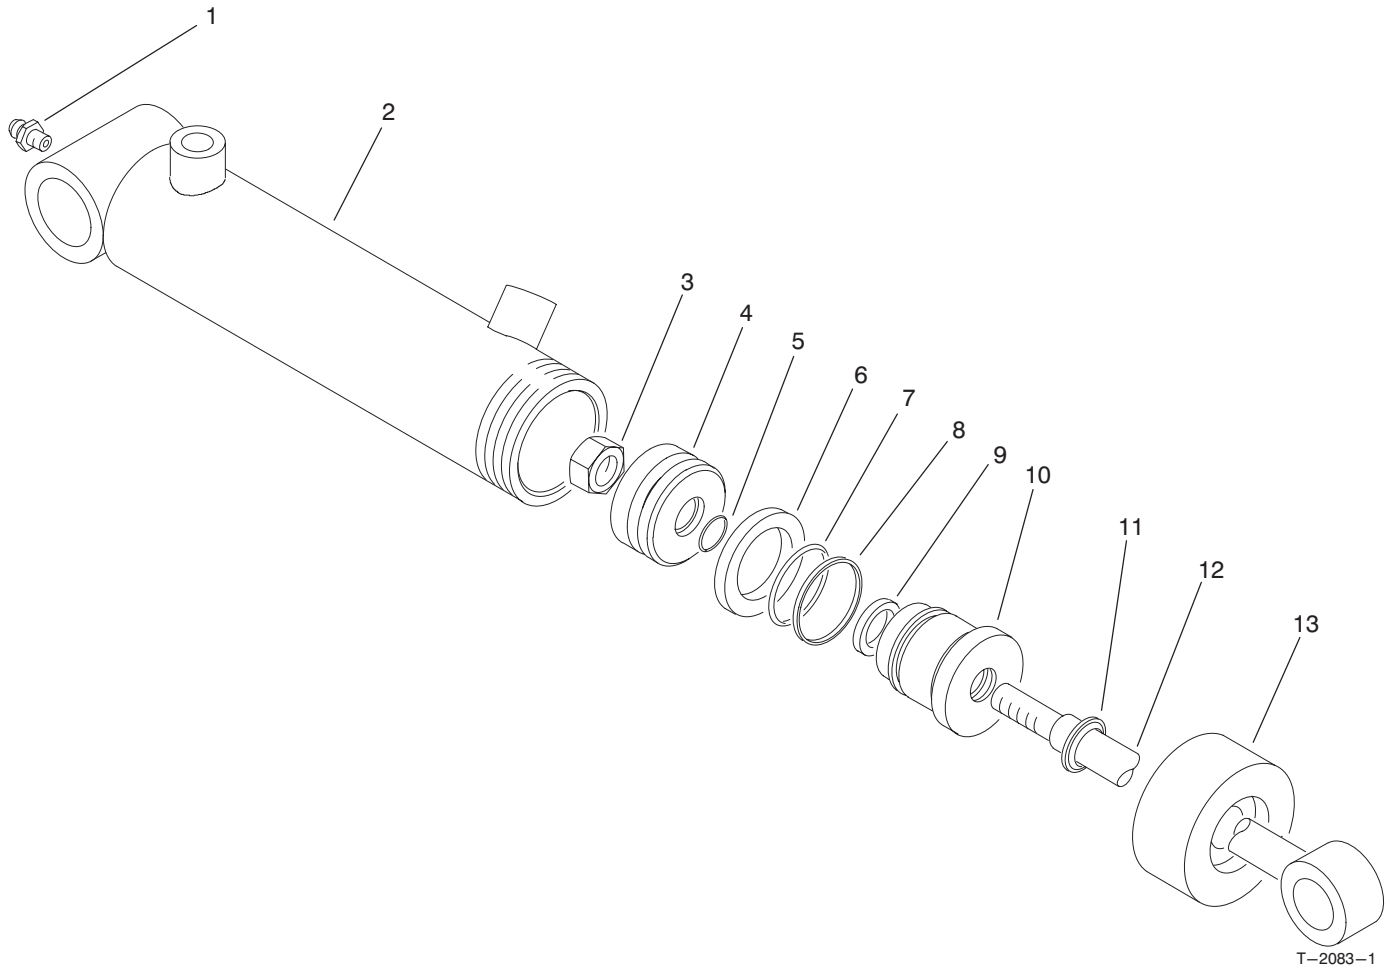


HYDRAULIC CYLINDER NO. 93—7551

Ref. No.	Part No.	Description	No. Used
1	302—5	Fitting — Grease	1
†2		Assembly — Barrel	1
3	32152—10	Nut — Lock	1
4	84—1710	Piston	1
†5		O—Ring	1
†6		Seal — Special	1
†7		O—Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal — Rod	1
10	93—7993	Head	1
†11		Seal — Dust	1
12	84—1740	Shaft With Clevis	1
13	93—7994	Collar	1
*	84—1760	Kit — Seal Repair (Incl. Ref. #5—9, & 11)	1

 † Not Serviced Separately.
 *Not Illustrated

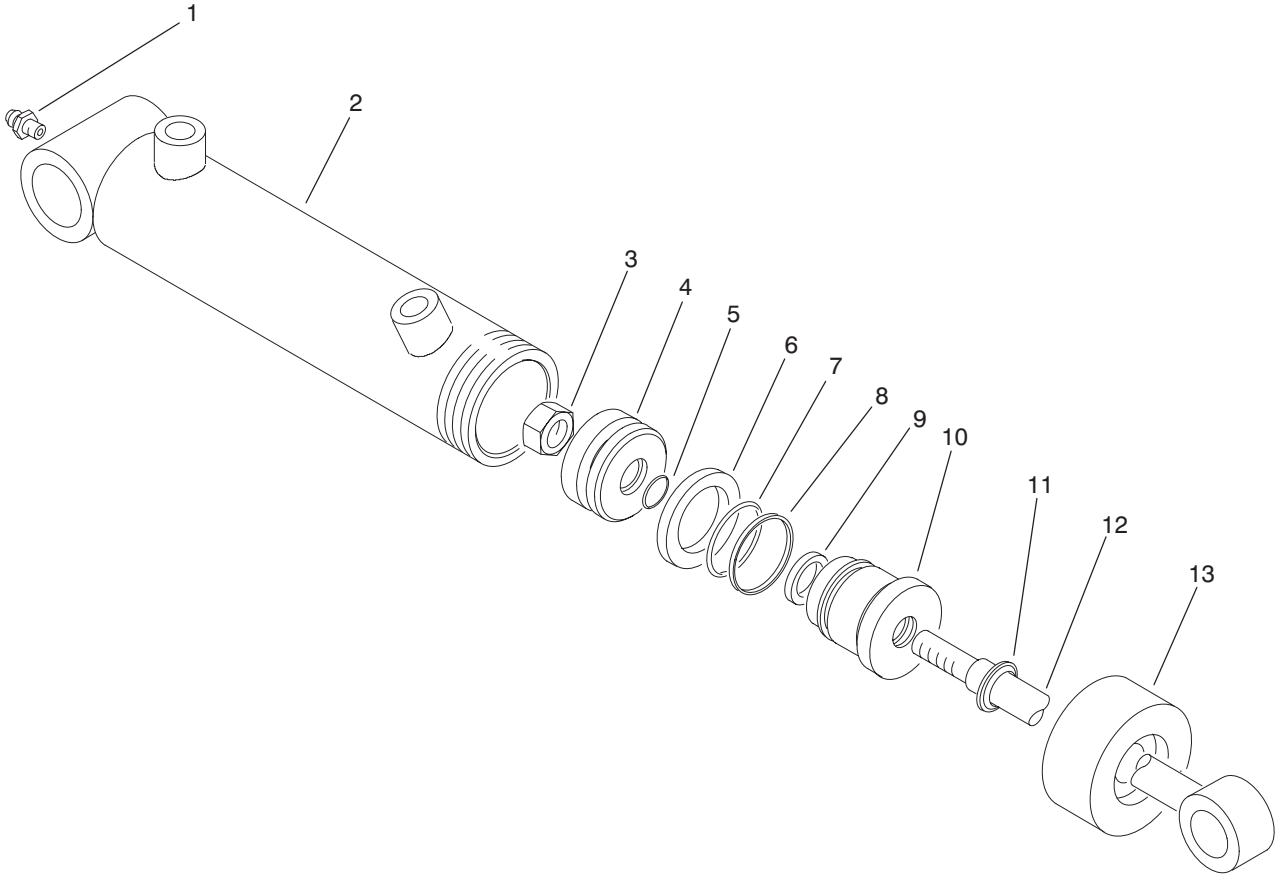


T-2084-1

HYDRAULIC CYLINDER NO. 93-2650

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	1
†2		Assembly - Barrel	1
3	32152-10	Nut - Lock	1
4	70-2780	Piston	1
†5		O-Ring	1
†6		Seal - Special	1
†7		O-Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal - Rod	1
10	93-7990	Head	1
†11		Seal - Dust	1
12	94-2644	Shaft With Clevis	1
13	93-7991	Collar	1
*	86-7330	Kit - Seal Repair (Incl. Ref. #5-9, & 11)	1

 † Not Serviced Separately.
* Not Illustrated

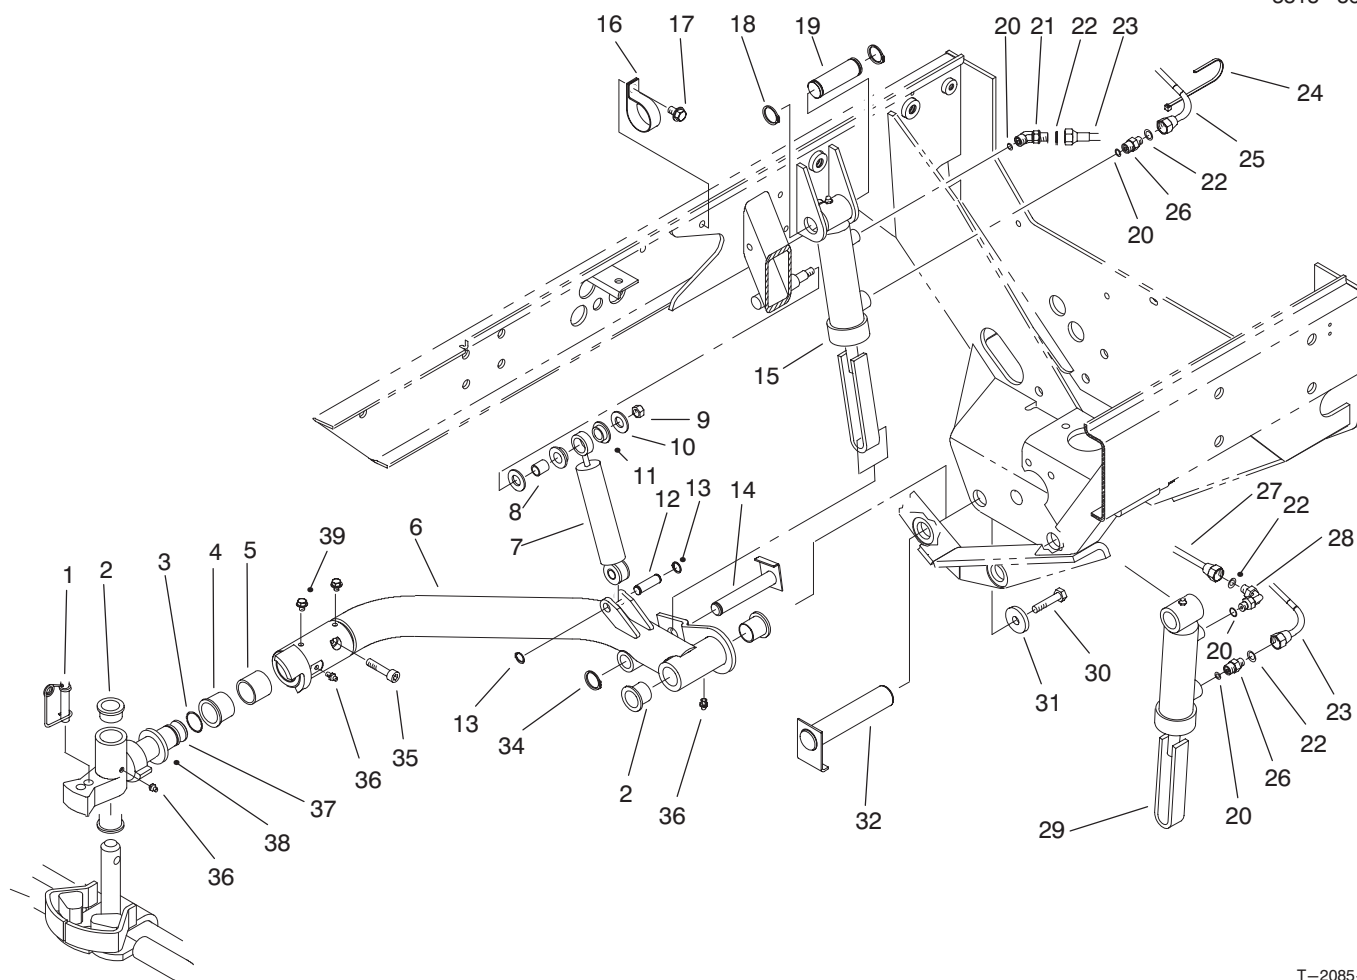


T-2085-1

REAR LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-9161	Pin	2	21	340-103	Fitting - Hydraulic 45° (Incl. Ref. #20 & 22)	1
2	94-8949	Bushing - Flange	8	22	237-21	O-Ring	4
3	93-7524	O-Ring	2	23	92-7636	Assembly - Hose	1
4	94-8947	Bushing - Flange	2	24	3290-378	Tie - Cable	2
5	94-8948	Bushing	2	25	92-7638	Assembly - Hose	1
6	93-9192	Lift Arm #3	1	26	340-92	Fitting - Hydraulic (Incl. Ref. #20 & 22)	2
*	93-9191	Lift Arm #2	1	27	92-7639	Assembly - Hose	1
7	93-4224	Absorber - Shock	2	28	340-132	Fitting - Hydraulic 90° (Incl. Ref. #20 & 22)	1
8	256-172	Bushing	4	29	92-7421	Assy. - Cylinder, Hyd. LH	1
9	33025-00	Nut	2	30	33105-040	Screw - HHF	2
10	69-8980	Washer - Flat	4	31	53-6380	Washer - Flat	2
11	94-1430	Bushing - Flange	8	32	93-9189	Pin	2
12	93-4246	Pin - Shock	2	34	32120-93	Ring - Retaining	2
13	32151-61	Ring - Retaining	4	35	93-4234	Screw - Socket Hd.,	2
14	92-7456	Pin	2	36	302-5	Fitting - Grease	6
15	92-7420	Assy. - Cylinder, Hyd. #3	1	37	93-9181	Knuckle - Pivot	2
16	2412-96	Clamp-R	1	38	94-8946	Washer - Thrust	2
17	32144-11	Screw - Self Tapping	1	39	33104-010	Screw - HH	4
18	32151-36	Ring - Retaining	4				
19	92-7548	Pin - Cylinder	2				
20	237-78	O-Ring	4				

 *Not Illustrated

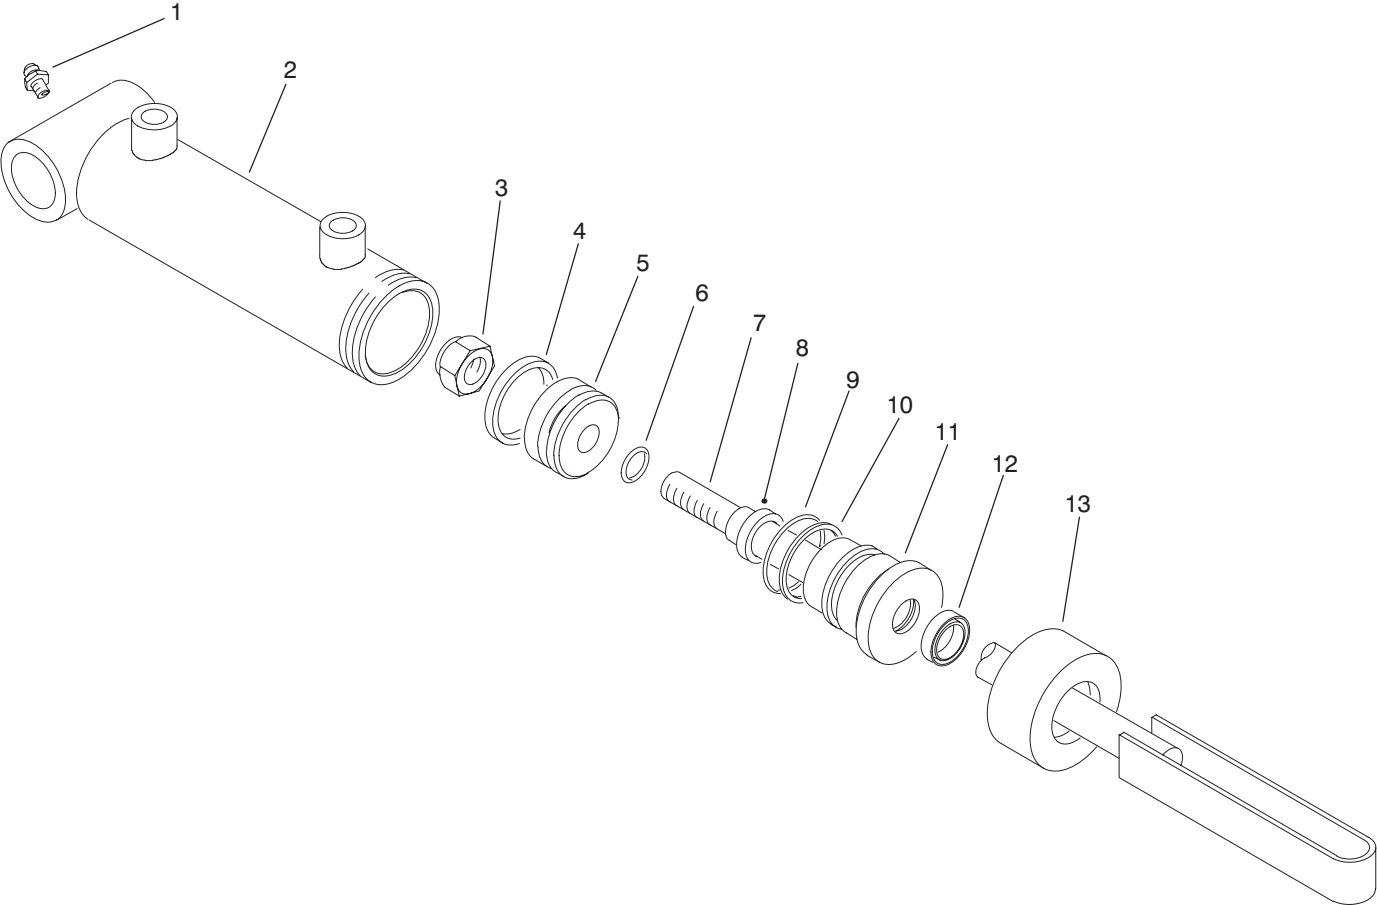


T-2086-1

HYDRAULIC CYLINDER NO. 92-7420

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	1
2	93-7992	Asm. - Barrel	1
3	32152-10	Nut	1
†4		Uni-ring	1
5	70-2780	Piston	1
†6		O-Ring	1
7	93-7989	Shaft W/Clevis	1
†8		Seal - Rod	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
†10		Backup	1
11	93-7990	Head	1
†12		Seal - Dust	1
13	93-7991	Collar	1
*	86-7330	Seal repair Kit (Incl. Ref. #4, 6, 8-10 & 12)	1

 *Not Illustrated
† Not Serviced Separately.

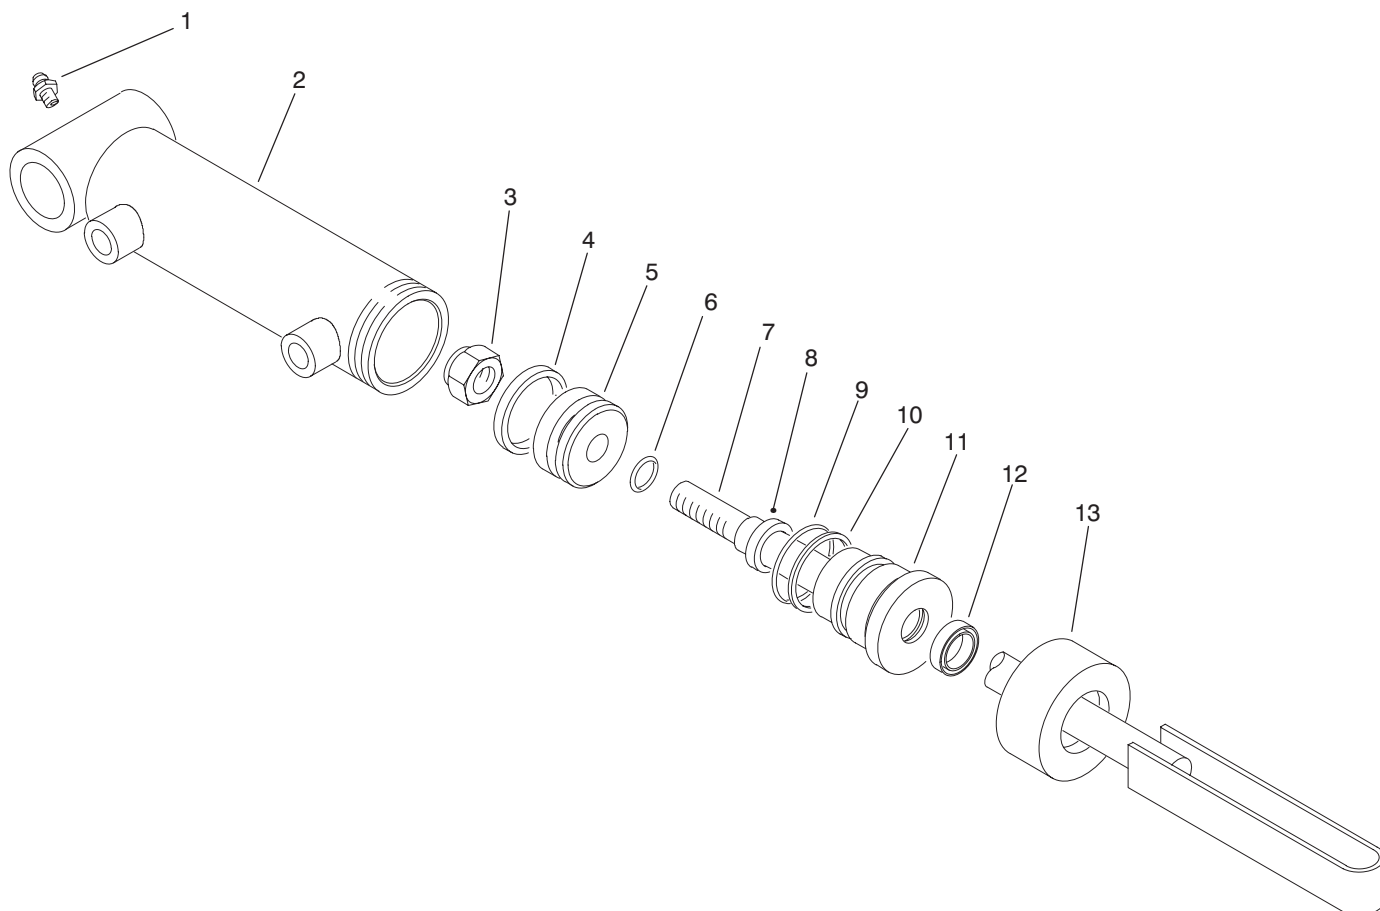

T-2087-1


HYDRAULIC CYLINDER NO. 92-7421

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	1
2	93-7995	Asm. - Barrel	1
3	32152-10	Nut	1
†4		Uni-ring	1
5	84-1710	Piston	1
†6		O-Ring	1
7	93-7989	Shaft W/Clevis	1
†8		Seal - Rod	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
†10		Backup	1
11	93-7993	Head	1
†12		Seal - Dust	1
13	93-7994	Collar	1
*	84-1760	Seal repair Kit (Incl. Ref. #4, 6, 8-10 & 12)	1

*Not Illustrated

 †Not Serviced Separately.

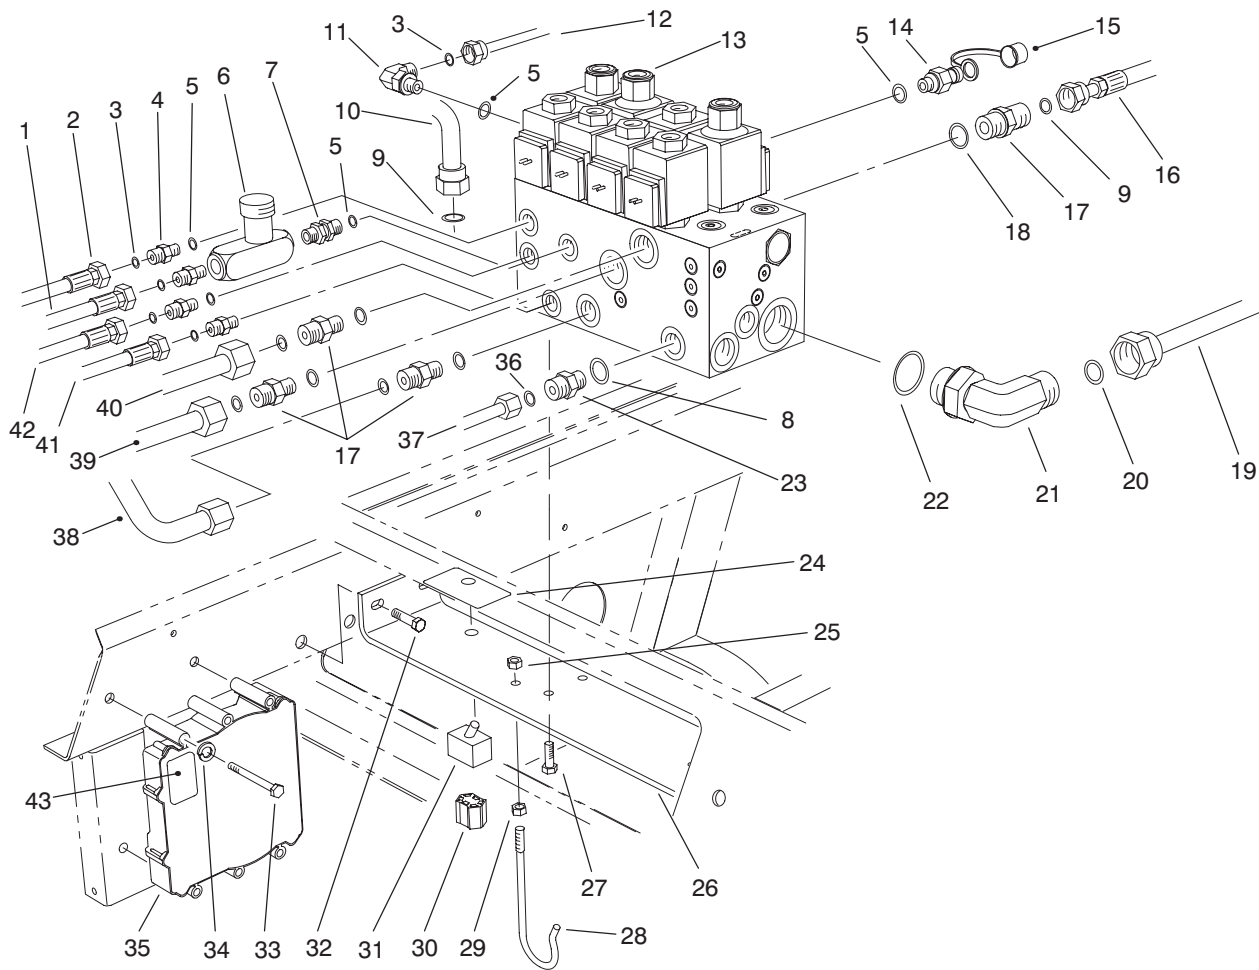


T-2088-1

FRONT HYDRAULIC CONTROL BLOCK & HOSES

Ref. No.	Part No.	Description	No. Used
1	82-6490	Assembly - Hose	1
2	92-7562	Assembly - Hose	1
3	237-21	O-Ring	5
4	340-92	Fitting - Hydraulic (Incl. Ref. #3 & 5)	4
5	237-78	O-Ring	8
6	93-7489	Valve - Control, Flow	1
7	93-7597	Fitting - SAE (Incl. Ref. #5)	1
8	237-42	O-Ring	1
9	237-30	O-Ring	4
10	92-7479	Assembly - Tube	1
11	340-132	Fitting - Hydraulic 90° (Incl. Ref. #3 & 5)	1
12	92-7591	Assembly - Tube	1
13	92-7418	Assembly - Block, Control	1
14	354-77	Fitting - Quick Connect (Incl. Ref. #5)	1
15	354-79	Cap - Fitting	1
16	92-7491	Assembly - Hose	1
17	340-4	Fitting - Hydraulic (Incl. Ref. #9 & 18)	4
18	237-79	O-Ring	4
19	92-7557	Assembly - Tube	1
20	237-65	O-Ring	1
21	340-139	Fitting - Hydraulic 90° (Incl. Ref. #20 & 22)	1

Ref. No.	Part No.	Description	No. Used
22	237-81	O-Ring	1
23	340-2	Adapter - Hydraulic (Incl. Ref. #8 & 36)	1
24	93-9197	Decal - Switch, Backlap	1
24	93-1264	Decal - Switch, Backlap (Europe)	1
24	94-4580	Decal - Backlap (Japan)	1
25	3296-29	Nut - Lock	1
26	92-7519	Bracket - Block, Manifold	1
27	33104-016	Screw - Hex. Hd. Flange	4
28	93-7970	Form - Wire, Hose Mount	1
29	3217-6	Nut - Jam	1
30	94-3090	Harness - Wire, Main	1
31	93-7487	Switch - Toggle	1
32	3234-17	Screw - Flange Hd.	4
33	321-15	Screw - HH	3
34	3253-3	Washer - Lock	3
35	92-5720	Controller - Solid State	1
36	237-22	O-Ring	1
37	93-4222	Assy. - Tube, Drain Return	1
38	94-1447	Asm. - Tube, Steering Ret.	1
39	93-4217	Assembly - Tube	1
40	93-4216	Assembly - Tube	1
41	92-7565	Assembly - Hose	1
42	92-7564	Assembly - Hose	1
43	93-8053	Decal - ECU Label (Europe)	1

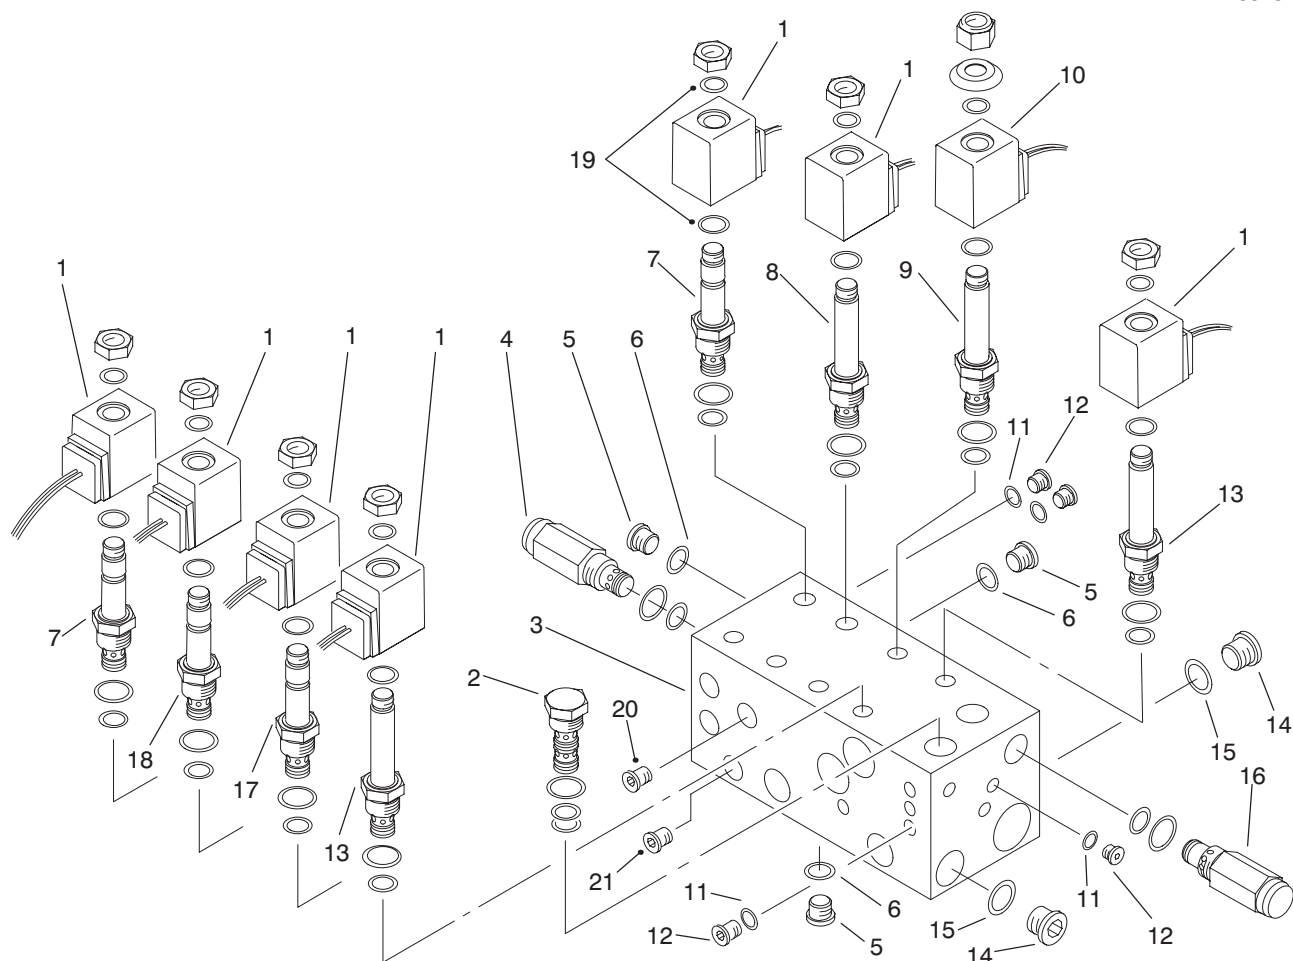 


T-2089-2

CONTROL BLOCK ASSEMBLY NO. 92-7418

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-9190	Solenoid — 20 Watt	7	13	93-7494	Cartridge — N.O. Poppet (Use Seal Kit 75-2080)	2
2	93-7491	Cartridge — Pilot Check (Use Seal Kit 69-4260)	1	14	353-989	Plug (Incl. Ref. #15)	5
†3		Block — Manifold, Front	1	15	237-42	O-Ring	5
4	93-7492	Cartridge — Relief 2300 psi (Use Seal Kit 75-2080)	1	16	75-0920	Cartridge — Relief 3000 psi (Use Seal Kit 75-2080)	1
5	353-990	Plug (Incl. Ref. #6)	10	17	88-6980	Cartridge — N.O. Poppet (Use Seal Kit 75-2080)	1
6	237-78	O-Ring	10	18	92-6315	Cartridge — N.C. Poppet (Use Seal Kit 75-2080)	1
7	88-6990	Cartridge — N.C. (Use Seal Kit 75-2080)	2	19	94-5438	Seal — Solenoid	16
8	92-3071	Solenoid (Use Seal Kit 69-4260)	1	20	94-3077	Plug — Orifice	1
9	88-6970	Cartridge — N.O. (Use Seal Kit 75-2080)	1	21	94-8140	Plug — Orifice	1
10	88-9200	Solenoid — 28 Watt	1	*	75-2080	Seal Kit	7
11	237-156	O-Ring	10	*	69-4260	Seal Kit	2
12	353-991	Plug (Incl. Ref. #11)	10				

*Not Illustrated

 †Not Serviced Separately

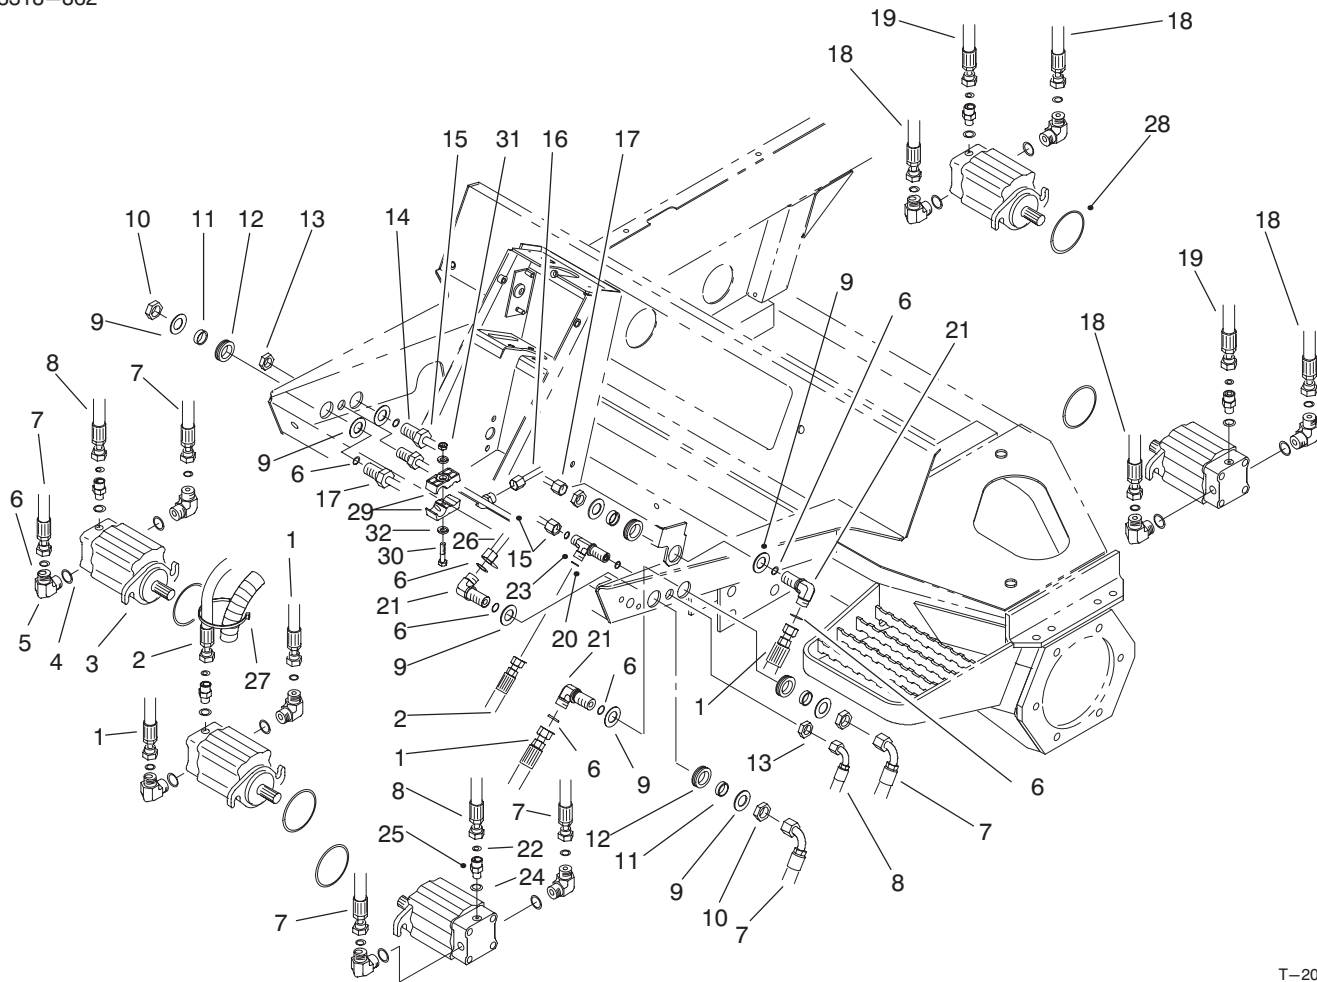


T-2090-1

REEL MOTORS & HOSES

Ref. No.	Part No.	Description	No. Used
1	92-7556	Assembly - Hose	1
2	92-7560	Assembly - Hose	1
3	92-7387	Motor - Hydraulic	5
4	237-79	O-Ring	10
5	340-98	Fitting - Hydraulic 90° (Incl. Ref. #4 & 6)	10
6	237-30	O-Ring	18
7	92-7555	Assembly - Hose	4
8	92-7559	Assembly - Hose	2
9	69-8930	Washer	10
10	340-127	Nut - Bulkhead	5
11	69-8960	Spacer	5
12	240-5	Grommet	5
13	340-70	Nut - Bulkhead	2
14	93-4216	Assembly - Tube (Incl. Ref. #6)	1
15	93-4223	Assy. - Tube, Front Drain (Incl. Ref. #20)	1
16	93-4222	Assy. - Tube, Drain Return	1
17	93-4219	Assy. - Tube, #1 Bulkhead (Incl. Ref. #6)	1

Ref. No.	Part No.	Description	No. Used
18	92-7649	Assembly - Hose	4
19	93-4201	Assembly - Hose	2
20	237-22	O-Ring	3
21	93-9151	Fitting - Hydraulic 90° (Incl. Ref. #6)	3
22	237-21	O-Ring	5
23	340-68	Fitting - Hydraulic, Tee (Incl. Ref. #20)	1
24	237-78	O-Ring	5
25	340-92	Fitting - Hydraulic (Incl. Ref. #22 & 24)	5
26	93-4217	Assembly - Tube	1
27	3290-378	Tie - Cable	1
28	93-9783	O-Ring	10
29	56-7972	Clamp - Tube	4
30	322-7	Screw - HH	2
31	3296-47	Nut - Lock	2
32	3256-23	Washer - Flat	4

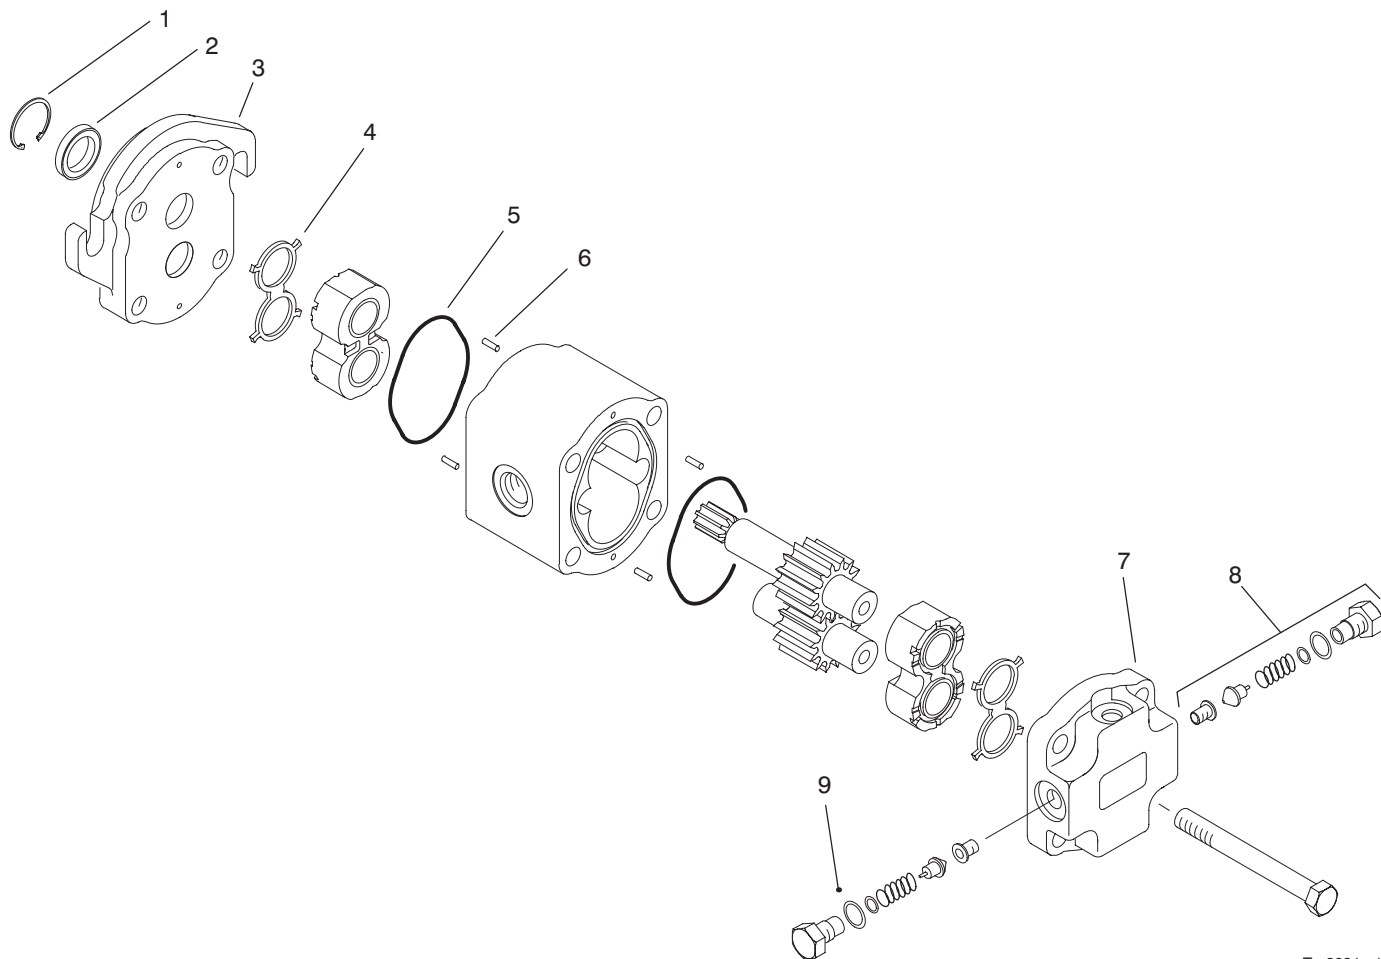 


T-2091-1

REEL MOTOR NO. 92—7387 ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Ring — Retaining	1
2		Seal — Shaft	1
3		Flange	1
4		E—Seal	2
5		O—Ring	2
6		Pin — Dowel	4
7		Block — Valve (Incl. Ref. #8)	1

Ref. No.	Part No.	Description	No. Used
8		Valve — Adjusting	2
9		O—Ring	2
*	93—9152	Kit — Flange (Incl. Ref. #1—3 & 6)	1
*	93—9153	Kit — Seal (Incl. Ref. #1, 2, 4, 5 & 9)	1
*	93—9154	Kit — Valve Block (Incl. Ref. #6 & 7)	1

 *Not Illustrated

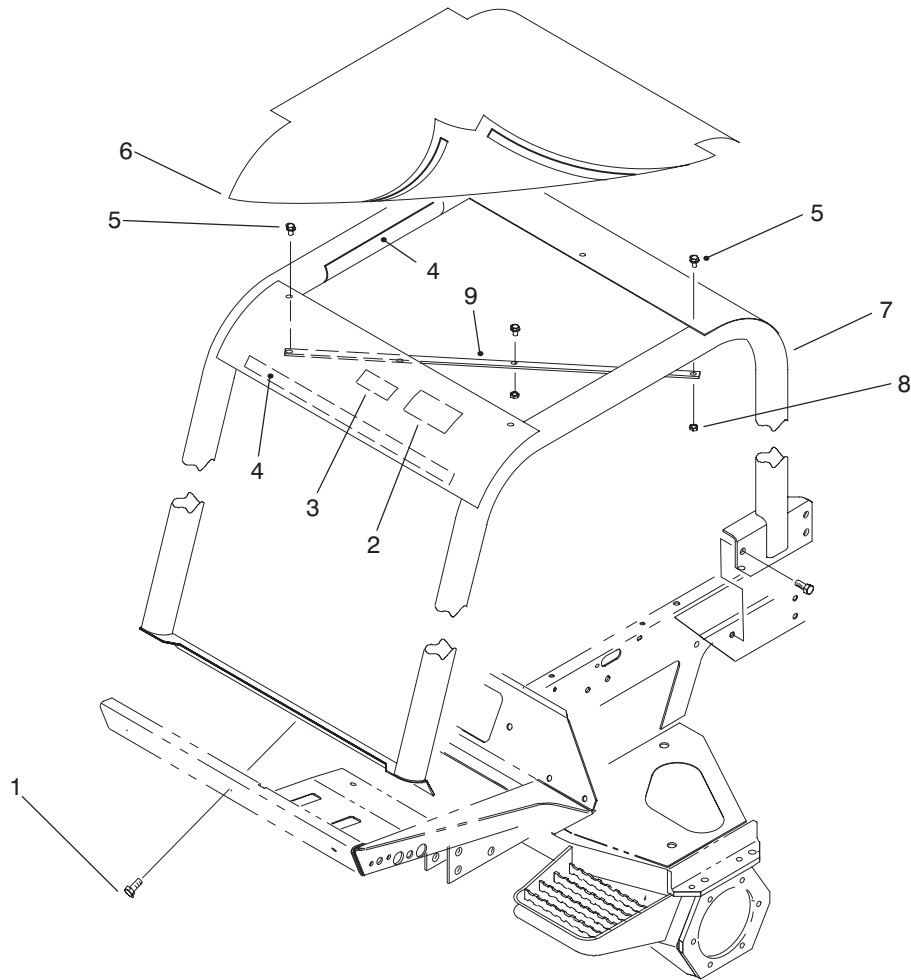


T-2092-1

ROLL OVER PROTECTION SYSTEM (ROPS)

Ref. No.	Part No.	Description	No. Used
1	33106-035	Screw - HHF	3
2	83-7430	Decal - Danger	1
2	93-8050	Decal - Warning (Europe)	1
2	84-4300	Decal - Warning (Japan)	1
3	92-7540	Decal - ROPS	1
3	93-8073	Decal - Blank (Europe)	1
4	93-9157	Velcro	4

Ref. No.	Part No.	Description	No. Used
5	33104-030	Screw - HHF	5
6	93-9160	Cover - ROPS	1
7	94-2643	Frame - ROPS (Incl. Ref. #2-4)	1
8	33024-00	Nut - Lock	5
9	93-9159	Strap - Cover	2

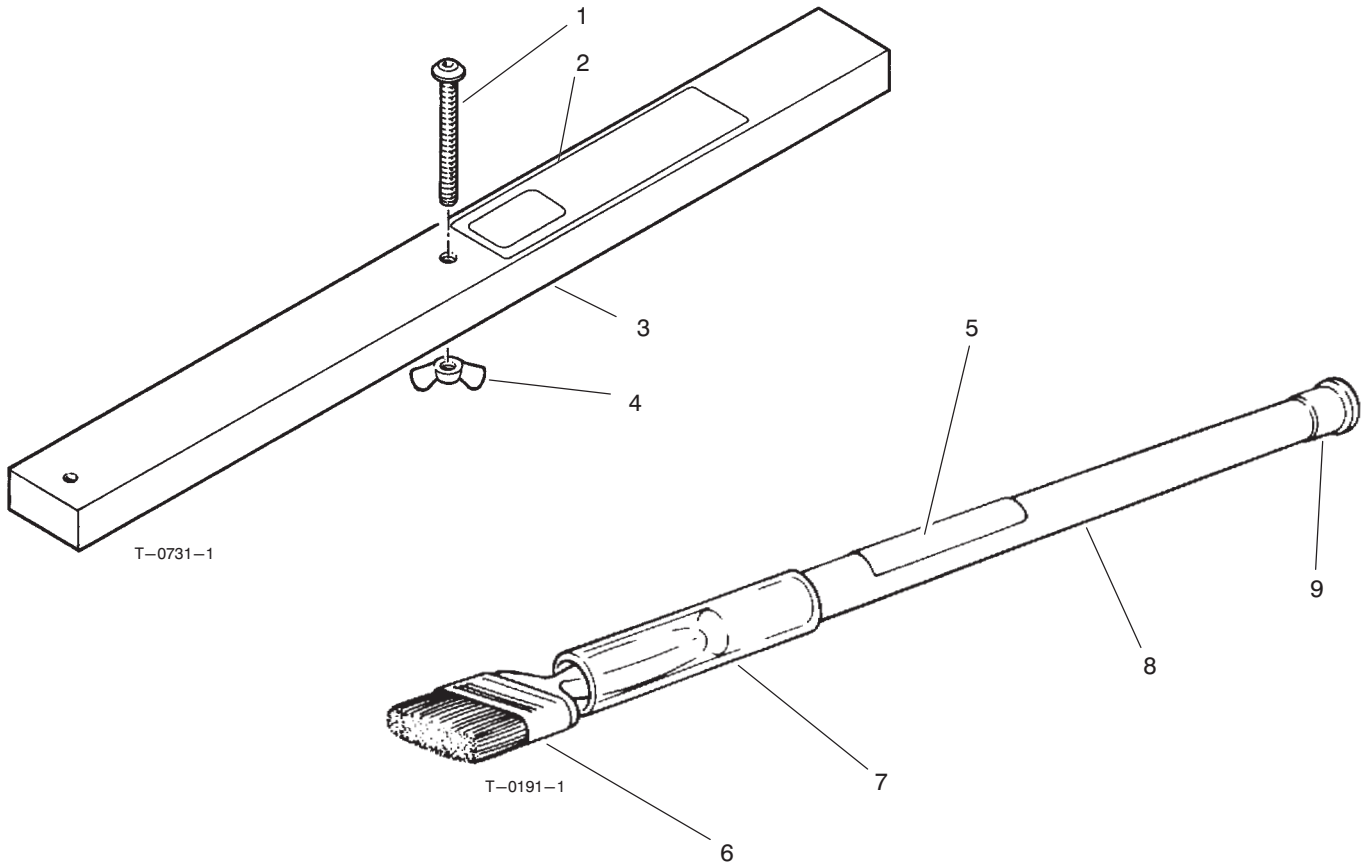 

GAUGE BAR & BACKLAPPING BRUSH ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	32122-54	Screw — Machine Slot Hd.	1
2	59-7930	Decal	1
3	59-7900	Asm. — Gauge Bar (Incl. Ref. #1-2 & 4)	1
4	32103-3	Nut — Wing	1
5	12-9140	Decal	1

Ref. No.	Part No.	Description	No. Used
6	36-4310	Brush	1
7	29-9090	Hose — Handle	1
8	29-9080	Handle	1
9	2410-18	Plug	1
*	29-9100	Asm. — Backlapping Brush (Incl. Ref. #5-9)	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-6498	Washer - Thrust	68	30	6	66-3240	Cap - Radiator (Europe)	52	22	1
5-0652	Spacer	6	47	1	66-4190	Spring	8	12	1
12-9140	Decal	81	5	1	66-6480	Washer	2	58	2
21-4191	Assembly - Seat Belt	7	4	1	66-8121	Standpipe	18	7	1
21-9260	Cover - Dust	3	18	1	66-8520	Bumper - Down-stop	9	17	2
27-2360	Switch - Ignition	13	43	1	66-8530	Adjuster	9	16	1
29-9080	Handle	81	8	1	66-8560	Nut - Push	9	11	4
29-9090	Hose - Handle	81	7	1	66-8610	Weldment - Lower	9	10	1
29-9100	Asm. - Backlapping Brush	81	*	1	66-9290	Spacer	9	15	6
36-3400	Decal - Warning	68	5	2	67-7160	Block - Fuse	13	48	2
36-4310	Brush	81	6	1	68-6150	Breather - Air	17	9	1
37-8771	Bolt - Shoulder	33	33	2	68-9420	Washer - Lock	43	4	6
44-2210	Assembly - Light, Warning	3	30	1	68-9420	Washer - Lock	39	34	3
46-0330	Nut - Hex	50	1	2	69-2970	Cap - Hub	62	33	2
46-6550	Fitting - Connector	18	8	1	69-2980	Seal - Inner	62	22	2
46-6560	Bushing	18	9	2	69-3020	Latch - Draw	33	34	2
46-8091	Screw - Tapping	1	14	2	69-4260	Seal Kit	67	*	1
48-7570	Screw - Cap Hex. Hd.	35	9	3	69-4260	Seal Kit	77	*	2
48-7610	Screw - Cap Hex. Hd.	35	46	3	69-6470	Bushing - Flange	62	18	4
48-7700	Screw - Cap Hex. Hd.	40	38	3	69-8890	Cap - Spindle	62	15	2
48-7700	Screw - Hex. Hd.	35	45	6	69-8900	Spacer	55	59	1
48-7780	Screw - Hex. Hd.	35	42	3	69-8910	Washer	55	58	2
48-7810	Screw - Cap Hex. Hd.	35	10	3	69-8920	Washer	20	10	4
48-7810	Screw - Mounting	50	5	3	69-8920	Washer	20	10	6
48-7840	Screw - Cap Hex. Hd.	35	5	1	69-8930	Washer	78	9	10
48-7880	Nut	35	24	3	69-8930	Washer	65	16	8
48-7880	Nut	8	29	1	69-8950	Spacer	20	12	2
48-7890	Nut	8	30	1	69-8950	Spacer	20	12	3
48-7930	Nut - Hex.	35	28	2	69-8960	Spacer	78	11	5
48-9470	Screw	35	4	1	69-8960	Spacer	65	18	4
49-2040	Screw - Cap Hex. Hd.	8	2	1	69-8980	Washer - Flat	73	10	4
49-2640	Seal - Shaft	29	11	1	69-8980	Washer - Flat	68	17	12
49-6440	Pedal - Accelerator	6	15	1	70-1480	Relay	8	27	1
52-1320	Decal - Fuel, Diesel	2	34	1	70-2780	Piston	70	4	1
52-5910	Ring - Retaining	8	25	1	70-2780	Piston	72	4	1
53-6380	Washer - Flat	73	31	2	70-2780	Piston	74	5	1
53-6380	Washer - Flat	69	57	2	71-4580	Clutch - Roller	54	15	1
53-9681	Mount - Rubber	35	3	3	71-4590	Washer - Thrust	54	16	2
56-6710	O-Ring	29	1	6	72-3560	Decal - 4WD (Model 03801)	2	29	1
56-7972	Clamp	3	42	2	74-0720	Tube - Manual	7	16	1
56-7972	Clamp - Tube	65	8	2	74-3410	Assembly - Radiator	33	20	1
56-7972	Clamp - Tube	78	29	4	74-3650	Fan - Engine	35	32	1
56-7973	Clamp	4	52	6	74-5500	Bolt - Wheel	54	36	10
56-7973	Clamp - Tube	65	34	10	74-5700	Bearing - Needle	54	30	1
59-7900	Asm. - Gauge Bar	81	3	1	74-5940	Assembly - Rod, Tie	62	47	1
59-7930	Decal	81	2	1	74-5950	Latch - Swell	1	24	3
59-9740	Latch - Draw	1	12	1	74-5950	Latch - Swell	12	30	1
60-5700	Spring - Compression	6	43	1	74-6490	Hose - Water Line	35	40	2
60-5890	Washer	29	12	1	74-6540	Tappet - Valve	39	14	8
60-6700	Screw - Cap Hex. Hd.	68	4	6	74-6550	Cup - Upper Valve Spring	38	11	8
61-2790	Filler - Screen	18	24	1	74-6560	Spring - Valve	38	10	8
61-2790	Filter - Screen	16	9	1	74-6570	Cup - Lower Valve Spring	38	9	8
62-2170	Washer - Thrust	62	17	4	74-6580	Insert - Valve (1.650mm)	38	13	8
62-5550	Decal - Toro	1	1	1	74-6590	Insert - Valve (1.725mm)	38	*	8
62-7650	Gasket	18	17	1	74-6600	Insert - Valve (1.800mm)	38	*	8
63-7622	Hose - Fuel	52	15	1	74-6610	Insert - Valve (1.900mm)	38	*	8
63-7627	Hose - Fuel	18	4	1	74-6620	Insert - Valve (1.975mm)	38	*	8
63-7627	Hose - Fuel	35	27	1	74-6630	Insert - Valve (2.050mm)	38	*	8
63-7640	Sender - Fuel	18	18	1	74-6640	Insert - Valve (2.125mm)	38	*	8
63-7880	Pin - Latch, Brake	6	31	1	74-6650	Insert - Valve (2.225mm)	38	*	8
63-7900	Rack	3	1	1	74-6660	Insert - Valve (2.250mm)	38	*	8
63-8360	Key - Ignition	12	35	1	74-6670	Insert - Valve (2.275mm)	38	*	8
63-8410	Washer - Flat	18	14	3	74-6680	Insert - Valve (2.300mm)	38	*	8
63-8410	Washer - Flat	16	27	3	74-6690	Insert - Valve (2.325mm)	38	*	8
63-9920	Decal - EEC 105 DBA	8	15	1	74-6700	Insert - Valve (2.350mm)	38	*	8
65-5100	Handle - Hood	1	11	1	74-6710	Insert - Valve (2.375mm)	38	*	8
66-2920	Washer - Nylon	8	1	2	74-6720	Insert - Valve (2.400mm)	38	13	8
66-3160	Screw	35	11	4	74-6730	Insert - Valve (2.425mm)	38	*	8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
74-6740	Insert - Valve (2.450mm)	38 * 8	74-7640	Cover - Valve	39 19 1
74-6750	Insert - Valve (2.475mm)	38 * 8	74-7650	Washer - Flat	39 20 3
74-6760	Insert - Valve (2.500mm)	38 * 8	74-7670	Head Bolt & Washer Set	40 * 1
74-6770	Insert - Valve (2.525mm)	38 * 8	74-7770	Hose - Crankcase	36 11 1
74-6780	Insert - Valve (2.550mm)	38 * 8	74-7780	Gasket	36 12 1
74-6790	Insert - Valve (2.575mm)	38 * 8	74-7790	Screw	36 13 1
74-6800	Insert - Valve (2.600mm)	38 * 8	74-7810	Gasket - Plate	36 15 1
74-6810	Insert - Valve (2.625mm)	38 * 8	74-7820	Plate	36 16 1
74-6820	Insert - Valve (2.650mm)	38 * 8	74-7840	Plug	40 42 2
74-6830	Insert - Valve (2.675mm)	38 * 8	74-7840	Plug - 27 mm Dia.	36 18 8
74-6840	Insert - Valve (2.700mm)	38 * 8	74-7840	Plug - 27 mm Dia.	39 33 2
74-6850	Insert - Valve (2.725mm)	38 * 8	74-7930	Screw - Bearing Cap	36 27 10
74-6860	Insert - Valve (2.750mm)	38 * 8	74-7940	Bushing - Spring	36 28 1
74-6870	Insert - Valve (2.775mm)	38 * 8	74-7950	Screw - Plate	36 29 6
74-6880	Insert - Valve (2.800mm)	38 * 8	74-7960	Stud - Filter	36 30 1
74-6890	Insert - Valve (2.825mm)	38 * 8	74-7970	Filter - Oil	36 31 1
74-6900	Insert - Valve (2.850mm)	38 * 8	74-7990	Pin	37 16 1
74-6910	Insert - Valve (2.875mm)	38 * 8	74-7990	Pin - Spring	36 33 4
74-6920	Insert - Valve (2.900mm)	38 * 8	74-8000	Plug	36 34 2
74-6930	Insert - Valve (2.925mm)	38 * 8	74-8010	Guide - Dipstick	36 35 1
74-6940	Insert - Valve (2.950mm)	38 * 8	74-8030	Pin - Spring	36 37 1
74-6950	Insert - Valve (2.975mm)	38 * 8	74-8100	Gear - Pinion	37 4 1
74-6960	Insert - Valve (3.000mm)	38 * 8	74-8110	Sprocket - Oil Pump	37 5 1
74-6970	Insert - Valve (3.025mm)	38 * 8	74-8120	Key - Woodruff	37 6 2
74-6980	Insert - Valve (3.050mm)	39 13 8	74-8140	Cover	37 9 1
74-6990	Insert - Valve (3.075mm)	39 * 8	74-8150	Gasket - Cover	37 10 1
74-7000	Insert - Valve (3.100mm)	39 * 8	74-8170	Bearing Set (Std.)	37 12 2
74-7010	Insert - Valve (3.125mm)	39 * 8	74-8210	Thrust Bearing Set	37 * 2
74-7020	Insert - Valve (3.150mm)	39 * 8	74-8230	Crankshaft	37 14 1
74-7030	Insert - Valve (3.175mm)	39 * 8	74-8260	Flywheel	37 34 1
74-7040	Insert - Valve (3.200mm)	39 * 8	74-8270	Pin	37 18 3
74-7050	Insert - Valve (3.225mm)	39 * 8	74-8280	Screw - Cap Hex. Hd.	37 19 8
74-7060	Insert - Valve (3.250mm)	39 * 8	74-8290	Seal - #1 Bearing Cap	37 20 2
74-7070	Insert - Valve (3.275mm)	39 * 8	74-8300	Clip - Piston Pin	37 21 8
74-7080	Insert - Valve (3.300mm)	39 * 8	74-8310	Pin - Piston	37 22 4
74-7090	Insert - Valve (3.325mm)	39 * 8	74-8320	Piston Ring Set - 0.20 mm	37 * 4
74-7100	Insert - Valve (3.350mm)	39 * 8	74-8330	Piston Ring Set - 0.50 mm	37 * 4
74-7110	Insert - Valve (3.375mm)	39 * 8	74-8340	Piston Ring Set - 0.80 mm	37 * 4
74-7120	Insert - Valve (3.400mm)	39 * 8	74-8380	Bearing - Connecting Rod	37 27 4
74-7130	Insert - Valve (3.425mm)	39 * 8	74-8420	Piston Set - Stage #1	37 29 1
74-7140	Insert - Valve (3.450mm)	39 * 8	74-8430	Piston Set - Stage #2	37 * 1
74-7150	Insert - Valve (3.475mm)	39 * 8	74-8440	Piston Set - Stage #3	37 * 1
74-7160	Insert - Valve (3.500mm)	39 * 8	74-8610	Pin	47 7 2
74-7170	Insert - Valve (3.550mm)	39 * 8	74-8610	Pin	49 8 2
74-7180	Insert - Valve (3.625mm)	39 * 8	74-8630	Bushing - Flange	47 8 1
74-7190	Insert - Valve (3.700mm)	39 * 8	74-8650	Journal	47 12 1
74-7200	Insert - Valve (3.775mm)	39 * 8	74-8670	Union - Inlet	47 13 1
74-7210	Insert - Valve (3.850mm)	39 * 8	74-8680	Gasket	47 14 2
74-7220	Insert - Valve (3.925mm)	39 * 8	74-8710	Washer	47 16 1
74-7230	Insert - Valve (4.000mm)	39 * 8	74-8710	Washer - E.T.L.W.	51 9 1
74-7240	Collar - Split	38 12 16	74-8750	Pipe	48 12 1
74-7260	Bolt - Head	39 29 10	74-8770	Plug	48 10 1
74-7270	Washer - Flat	39 28 10	74-8830	Belt	41 18 1
74-7300	Pan - Oil	36 23 1	74-8870	Gasket	47 21 2
74-7310	Plug - Threaded	36 20 1	74-8900	Washer - Flat	38 7 6
74-7320	Gasket	36 19 1	74-8920	Washer - Copper	29 9 4
74-7330	Screw - Cap Hex. Hd.	36 25 23	74-9100	Pad - Pedal, Forward	6 14 1
74-7380	Gasket - Oil Pan	36 21 1	74-9110	Pad - Pedal, Reverse	6 17 1
74-7400	Tube	40 41 1	75-0610	Tread - Foot, RH	2 * 1
74-7420	Ball	40 45 4	75-0620	Tread - Foot, LH	2 43 1
74-7430	Chamber - Turbulence	40 46 4	75-0630	Tread - Foot, Center	2 44 1
74-7440	Chamber - Turbulence	40 * 4	75-0920	Cartridge - Relief 3000 psi	67 13 1
74-7450	Seat - Intake Valve	40 48 4	75-0920	Cartridge - Relief 3000 psi	77 16 1
74-7460	Seat - Intake Valve	40 * 4	75-1010	Switch	12 20 1
74-7480	Valve - Intake	40 49 4	75-1370	Cable - Battery, Positive	52 9 1
74-7560	Washer - Spring	39 16 3	75-1370	Cable - Battery, Positive	35 17 1
74-7600	Plug	38 4 4	75-1390	Cover - Access, Front	2 39 1
74-7630	Gasket - Valve Cover	39 18 1	75-1410	Plate - Access, Floor	2 40 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
75-1430	Pedal — Brake, RH	6 40 1	76-5500	Screw	46 6 5
75-1440	Pedal — Brake, LH	6 35 1	76-5520	Holder — Injector	48 5 4
75-1470	Pin — Pivot, Brake	6 46 1	76-5530	Gasket — Injector	48 3 4
75-1490	Rod — Brake, Park	4 54 1	76-5540	Plug	48 2 4
75-2080	Seal Kit	67 * 5	76-5570	Washer—Lock	50 2 2
75-2080	Seal Kit	77 * 7	76-5590	Sleeve — Spring	50 4 1
75-2810	Bracket — Column, Steering	3 16 1	76-5600	Asm. — Holder, Injector	48 14 4
75-2970	Pedal — Traction	6 16 1	76-6910	Kit — Rotating	26 14 1
75-3270	Hub — Pivot, Traction	6 6 1	76-6910	Kit — Rotating	25 16 1
75-3400	Shaft — Pivot, Seat	7 20 1	76-6910	Kit — Rotating	24 17 1
75-3420	Lever — Control	12 9 1	76-6930	Shaft — Drive, Straight	26 3 1
75-3480	Weldment — Upper	9 23 1	76-6950	Race — Thrust	24 5 2
75-3510	Bolt — Shoulder	9 26 2	76-6950	Race — Thrust	25 5 2
75-3530	Spring — Compression	9 3 1	76-6950	Race — Thrust	26 5 2
75-3540	Pin — Roll	9 6 1	76-6950	Race — Thrust	31 51 1
75-3550	Bumper — Seat	9 7 2	76-6960	Bearing — Thrust	24 6 1
75-3580	Plate — Mounting, Seat	9 2 1	76-6960	Bearing — Thrust	25 6 1
75-3680	Rod — Seat	8 23 1	76-6960	Bearing — Thrust	26 6 1
75-3860	Fender — LH	2 36 1	76-6960	Bearing — Thrust	31 52 1
75-4360	Bracket — Suspension, Seat	7 15 1	76-6970	Insert — Camplate	26 15 1
75-4370	Bracket — Seat	7 10 1	76-6970	Insert — Camplate	25 17 1
75-5190	Decal — No Riders	12 13 1	76-6970	Insert — Camplate	24 18 1
75-5190	Decal — No Riders	2 35 1	76-6980	O—Ring	26 9 1
75-5350	Pin — Cylinder, Slide	68 31 3	76-6980	O—Ring	24 10 1
75-5740	Box — Control	13 53 1	76-6980	O—Ring	25 10 1
75-5780	Hinge — Cover	2 47 1	76-7000	Ring — Retaining	24 4 2
75-5780	Hinge — Cover	13 54 1	76-7000	Ring — Retaining	25 4 2
75-5810	Box — Tool	2 30 1	76-7000	Ring — Retaining	26 4 2
75-5890	Hose	68 9 2	76-7000	Ring — Retaining	31 50 2
75-6370	Cap — Sensor	68 37 1	76-7010	Ring — Retaining	24 1 1
75-6490	Lever	6 22 1	76-7010	Ring — Retaining	25 1 1
75-6510	Bracket — Lever	6 20 1	76-7010	Ring — Retaining	26 1 1
75-6550	Disc — Friction	6 19 1	76-7010	Ring — Retaining	31 55 1
75-6580	Cable — Pedal	6 7 1	76-7020	Spacer	26 2 1
75-6710	Decal — Fast/Slow	6 23 1	76-7110	Plug	57 5 1
75-6820	Hour Meter	13 51 1	76-7110	Plug	59 26 4
75-6840	Knob — Knurled	2 41 8	76-7120	Seal — Washer	57 6 1
76-1910	Shaft — Pivot	9 12 2	76-7120	Seal — Washer	59 27 4
76-1920	Bushing — Sleeve	9 9 4	76-7140	Plug	57 9 1
76-1930	Knob — Tension Adjustment	9 19 1	76-7160	Gear Case Assembly	58 * 1
76-1940	Spring — Extension	9 14 2	76-7170	Case — Differential	58 3 1
76-2940	Bumper — Rubber	9 8 2	76-7180	Pinion — Mate	58 10 2
76-4260	Bushing	60 3 1	76-7190	Gear — Side	58 9 2
76-4910	Stud	47 26 3	76-7200	Shaft — Pinion	58 4 1
76-4930	Washer	47 5 3	76-7210	Washer — Thrust	58 11 2
76-4940	Gear — Pump, Injection	47 2 1	76-7220	Washer — Thrust	58 8 2
76-4950	Nut	47 1 1	76-7230	Washer — Lock	58 5 4
76-4990	Bracket	49 15 1	76-7240	Ring — Gear	58 2 1
76-5010	Washer	41 23 3	76-7250	Shaft — Drive	58 1 1
76-5010	Washer — Spring	49 2 1	76-7260	Bolt	58 6 8
76-5010	Washer — Spring	44 7 5	76-7270	Pin — Spring	58 7 1
76-5060	Screw	49 1 1	76-7280	Bearing	58 12 2
76-5070	Oil Pump Assembly	44 1 1	76-7290	Shim — 0.1 mm	58 13 A/R
76-5090	Spring — Piston	44 3 1	76-7300	Shim — 0.2 mm	58 * A/R
76-5100	Bolt — Shoulder	44 5 1	76-7310	Shim — 0.3 mm	58 * A/R
76-5130	Stud	38 6 6	76-7320	Sleeve	56 4 1
76-5170	Chain — Pump Drive	44 13 1	76-7330	Bearing	56 1 1
76-5180	Washer — Copper	19 1 4	76-7340	Seal — Oil	56 6 1
76-5190	Fitting — Adjustable	19 2 2	76-7350	Bushing	56 7 1
76-5220	Element — Filter	19 5 1	76-7360	O—Ring	56 10 1
76-5260	Relay — Glow Plug	51 1 1	76-7370	Bearing	56 11 1
76-5260	Relay — Glow Plug	8 28 1	76-7380	Washer	56 8 1
76-5290	Washer — Spring	51 4 4	76-7390	Nut — Lock	56 9 1
76-5300	Assembly — Filter, Fuel	18 22 1	76-7400	O—Ring	56 2 2
76-5300	Assembly — Filter, Fuel	19 3 1	76-7410	Shim — 0.1 mm	56 3 A/R
76-5310	Washer — E.T.L.W.	51 7 1	76-7420	Shim — 0.2 mm	56 * A/R
76-5320	Sensor — Water	19 9 1	76-7430	Shim — 0.4 mm	56 * A/R
76-5440	Screw	39 17 2	76-7470	Pipe	57 8 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-7480	Plug - Vent	57 7 1	77-3440	Screw	41 1 2
76-7490	Shaft - Differential	58 14 2	77-3450	Washer	41 2 2
76-7500	Bearing	58 15 4	77-3470	Screw	44 10 1
76-7510	Pinion - 14T	59 10 2	77-3490	Screw	44 11 1
76-7510	Pinion - 14T	58 17 2	77-3510	Spring	41 14 1
76-7520	Shim - 0.1 mm	58 16 A/R	77-3520	Cup	41 13 1
76-7530	Shim - 0.2 mm	58 * A/R	77-3600	Plate - Closing	52 47 1
76-7540	Shim - 0.4 mm	58 * A/R	77-3620	Retainer - Cover	33 25 2
76-7550	Ring - Retaining	58 18 2	77-3700	Gasket - Exhaust, Manifold	35 37 1
76-7560	Case - Gear	59 1 2	77-3790	Plug - Drain	36 26 1
76-7580	Seal - O-Ring	58 19 4	77-4000	Shim Set	58 * 1
76-7590	Spacer	58 20 2	77-4010	Shim Set	56 * 1
76-7600	Bolt - Reamer	58 21 2	77-4020	Shim Set	58 * 1
76-7610	Bolt	58 23 6	77-4030	Shim Set	59 * 1
76-7620	Washer - Lock	58 22 8	77-4040	Shim Set	60 * 1
76-7630	Holder - 25 mm R.H.	59 * 1	77-4050	Shim Set	60 * 1
76-7640	Bolt	59 5 8	80-4860	Pin - Clevis	9 1 1
76-7640	Bolt	59 28 20	80-8660	Spacer	65 9 2
76-7650	Shaft - Final Drive	59 2 2	82-3740	Cooler - Oil	33 21 1
76-7660	Holder - 20 mm L.H.	59 4 1	82-5050	Screw - Cap Hex. Hd.	27 26 2
76-7670	Bearing	59 3 4	82-5120	Adapter - Pump To Engine	35 47 1
76-7680	Case - Final Drive	59 8 2	82-6490	Assembly - Hose	76 1 1
76-7700	Shim - 0.8 mm	60 25 A/R	82-6490	Assembly - Hose	68 28 1
76-7710	Bolt	60 8 2	82-8170	Clamp	68 1 6
76-7720	Nut	60 9 4	82-9060	Adjuster W/Handle	9 13 1
76-7730	Bushing	59 7 2	83-6780	Pin - Cylinder	68 23 2
76-7740	Seal - Oil	59 6 2	83-6790	Pin - Short, Cylinder	68 39 1
76-7750	Pinion - 15T	59 11 2	83-7430	Decal - Danger	80 2 1
76-7760	Shim - 1.0 mm	60 * A/R	84-1710	Piston	71 4 1
76-7770	Cover	59 9 2	84-1710	Piston	75 5 1
76-7780	Shim - 1.2 mm	60 * A/R	84-1740	Shaft With Clevis	71 12 1
76-7790	Shim - 1.4 mm	60 * A/R	84-1760	Kit - Seal Repair	71 * 1
76-7810	Holder - Bearing	59 19 2	84-1760	Seal repair Kit	75 * 1
76-7820	Shim - 1.0 mm	60 5 A/R	84-2780	Decal - No Step (Japan)	68 5 2
76-7830	Shaft - Wheel	59 21 2	84-2860	Decal - Fuel, Diesel (Japan)	2 34 1
76-7840	Gear - Bevel	59 13 2	84-3420	Decal - No Riders (Japan)	12 13 1
76-7870	Seal - Oil	59 20 2	84-3420	Decal - No Riders (Japan)	2 35 1
76-7880	Spacer	59 15 2	84-3500	Decal - Fast/Slow (Japan)	6 23 1
76-7890	Shim - 0.15 mm	59 14 A/R	84-4300	Decal - Warning (Japan)	80 2 1
76-7900	Shim - 0.2 mm	59 * A/R	85-4470	Potentiometer	13 52 1
76-7910	Shim - 0.4 mm	59 * A/R	85-4480	Knob	13 45 1
76-7920	Ring - Retaining	59 16 2	85-4730	Decal - Hydraulic Oil Only	1 5 1
76-7930	Ring - Retaining	59 17 2	85-4750	Display - Diagnostic ACE	10 2 1
76-7950	Bushing	60 4 1	85-6910	Decal - EEC 86 DBA	8 16 1
76-7960	Fitting - Grease	60 21 2	86-2990	Mount - Cable, Throttle	35 20 2
76-7960	Fitting - Grease	59 30 2	86-5390	Kit - Seal	61 * 1
76-7970	Shim - 1.4 mm	60 * A/R	86-5910	Tire	62 28 2
76-7980	Shim - 1.2 mm	60 * A/R	86-5910	Tire	54 33 2
76-7990	Shim - .08 mm	60 * A/R	86-7330	Kit - Seal Repair	70 * 1
76-8000	Bolt	60 6 4	86-7330	Kit - Seal Repair	72 * 1
76-8010	Washer	60 7 2	86-7330	Seal repair Kit	74 * 1
76-8020	Rod - Tie	60 22 1	87-5100	Washer - Snubbing	35 2 3
76-8030	L.H. Rod End Assembly	60 10 1	87-6270	Socket - Light	13 *63 4
76-8040	Nut - L.H.	60 24 1	87-6620	Screw - Torx Pan Hd.	3 31 2
76-8050	R.H. Rod End Assembly	60 16 1	88-0440	Decal - Floor Plate	68 21 1
76-8060	Nut - R.H.	60 23 1	88-1550	Stop - Axle	55 66 2
76-8070	Adapter	56 12 1	88-1900	Decal - Floor Plate (Japan)	68 21 1
76-8350	Stop - Axle	62 10 2	88-1980	Decal - Hydraulic Oil	1 5 1
76-8350	Stop - Axle, 4WD	54 5 2	88-3870	Cover	3 20 1
76-9060	Gauge - Temperature	12 33 1	88-6970	Cartridge - N.O.	77 9 1
77-2870	Weldment - Hanger	9 18 1	88-6970	Cartridge - No Flow	67 9 1
77-3300	Stud	43 1 6	88-6980	Cartridge - N.C. Poppet	67 10 1
77-3310	Gasket	43 2 2	88-6980	Cartridge - N.O. Poppet	77 17 1
77-3320	Nut - Hex	43 5 6	88-6990	Cartridge - N.C.	77 7 2
77-3340	Manifold - Exhaust	43 3 1	88-6990	Cartridge - N.C. Spool	67 7 1
77-3400	Camshaft	41 5 1	88-9190	Solenoid - 20 Watt	67 1 4
77-3410	Key	41 4 1	88-9190	Solenoid - 20 Watt	77 1 7
77-3420	Gasket	41 3 1	88-9200	Solenoid - 28 Watt	67 8 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
88-9200	Solenoid - 28 Watt	77 10 1	92-7491	Assembly - Hose	76 16 1
92-1180	Assembly - Seat	7 5 1	92-7492	Assembly - Hose	27 36 1
92-1705	Screen - Filter	17 8 1	92-7492	Assembly - Hose	65 41 1
92-2652	Gasket - Extrusion	17 3 2	92-7493	Assembly - Tube, Filter	33 39 1
92-3071	Solenoid	77 8 1	92-7493	Hose - Filter	16 20 1
92-5720	Controller - Solid State	76 35 1	92-7494	Asm. - Tube Steering Rear	4 50 1
92-5833	Spacer - Ball Joint	62 45 1	92-7494	Asm. - Tube, Steering Rear	63 59 1
92-5833	Spacer - Ball Joint	54 46 2	92-7494	Asm. - Tube, Steering, Rear	66 48 1
92-5836	Washer - Axle	55 50 1	92-7494	Assy. - Tube, Steering	54 29 1
92-5837	Asm. - Rod End	63 60 1	92-7495	Asm. - Tube, Steering Rear	3 47 1
92-5838	Ball Joint	55 62 1	92-7495	Asm. - Tube, Steering Rear	63 56 1
92-5839	Ball Joint	62 38 1	92-7495	Asm. - Tube, Steering, Rear	66 49 1
92-5839	Ball Joint	54 45 1	92-7495	Assy. - Tube, Steering	54 28 1
92-5844	Spacer - Ball Joint	54 47 1	92-7505	Screen	33 24 1
92-6315	Cartridge - N.C. Poppet	77 18 1	92-7511	Hood	1 18 1
92-7374	Shroud - Fan RH	33 10 1	92-7516	Bracket - Support, Cooler	33 19 1
92-7375	Shroud - Fan LH	33 44 1	92-7519	Bracket - Block, Manifold	76 26 1
92-7381	Tube - Water, Return	35 41 1	92-7520	Cable - Throttle	8 4 1
92-7382	Cover - Manifold	35 38 1	92-7521	Hose - Fuel	18 21 1
92-7385	Motor - Planetary	21 38 1	92-7521	Hose - Fuel	35 25 1
92-7386	Motor - Hydraulic	54 20 1	92-7522	Hose - Fuel	18 6 1
92-7387	Motor - Hydraulic	78 3 5	92-7525	Fitting - Hose	16 24 1
92-7388	Support - Radiator	33 45 1	92-7526	Fitting - Hydraulic, Suction	27 38 1
92-7396	Mount - Cable	8 3 1	92-7527	Strainer - Suction	16 34 1
92-7414	Assembly - Brake, RH	21 50 1	92-7529	Assy. - Cable, Brake RH	6 * 1
92-7415	Asm - Complete	22 * 1	92-7530	Assy. - Cable, Brake LH	6 30 1
92-7415	Assembly - Drive, Planetary	20 29 2	92-7530	Cable - Brake, LH	20 26 1
92-7416	Strap - Radiator	33 42 1	92-7531	Tube - Control, Pump	6 1 1
92-7417	Assembly - Brake, LH	20 28 1	92-7531	Tube - Rod, Control	27 14 1
92-7418	Assembly - Block, Control	76 13 1	92-7532	Decal - RM6500D	1 17 2
92-7419	Assembly - Block, Manifold	65 42 1	92-7534	Assembly - Hose	54 31 1
92-7420	Assy. - Cylinder, Hyd. #3	73 15 1	92-7535	Assembly - Hose, Oil Cooler	33 29 2
92-7421	Assy. - Cylinder, Hyd. LH	73 29 1	92-7536	Assy. - Hose, Rear Motor	54 9 1
92-7422	Tank - Fuel	18 16 1	92-7537	Assy. - Hose, Rear Motor	54 10 1
92-7424	Hose - Overflow, Radiator	52 25 1	92-7538	Assembly - Hose	54 41 1
92-7424	Hose - Radiator, Overflow	33 6 1	92-7539	Assembly - Hose	54 40 1
92-7425	Support - Mount, Engine	35 6 1	92-7540	Decal - ROPS	80 3 1
92-7426	Mount - Motor	35 43 1	92-7543	Decal - Diagnostic ACE	10 1 1
92-7429	Mount - Motor, RH	35 14 1	92-7548	Pin - Cylinder	73 19 2
92-7455	Plate - Bulkhead	20 16 1	92-7550	Fitting - Tee, Bulkhead	20 7 2
92-7456	Pin	73 14 2	92-7552	Bracket - Bulkhead	55 60 1
92-7463	Hose - Radiator, Lower	33 18 1	92-7553	Asm. - Tube, Rear Drain	66 51 1
92-7463	Hose - Radiator, Lower	35 36 1	92-7553	Assy. - Tube, Rear Drain	54 27 1
92-7465	Hose - Suction	16 22 1	92-7555	Assembly - Hose	78 7 4
92-7465	Hose - Suction	27 40 1	92-7556	Assembly - Hose	78 1 1
92-7466	Clutch - Fan	35 31 1	92-7557	Assembly - Tube	76 19 1
92-7472	Assembly - Tube, Rear	54 3 1	92-7557	Assy. - Tube, Cooler Front	65 40 1
92-7473	Assembly - Tube, Rear	54 4 1	92-7558	Assembly - Tube, Cooler	33 41 1
92-7473	Assembly - Tube, Rear	20 14 1	92-7558	Assy. - Tube, Cooler Rear	65 36 1
92-7474	Assembly - Tube, Front	20 9 1	92-7559	Assembly - Hose	78 8 2
92-7475	Assembly - Tube, Traction	21 51 1	92-7560	Assembly - Hose	78 2 1
92-7476	Assembly - Tube, Traction	21 48 1	92-7562	Assembly - Hose	76 2 1
92-7477	Assembly Tube, Motor Drain	20 18 1	92-7562	Assembly - Hose	69 52 1
92-7478	Assembly - Tube, Motor RH	21 44 1	92-7564	Assembly - Hose	68 12 1
92-7478	Tube - Motor, RH	16 30 1	92-7564	Assembly - Hose	76 42 1
92-7479	Assembly - Tube	76 10 1	92-7565	Assembly - Hose	76 41 1
92-7483	Nut - Lug	20 4 16	92-7565	Assembly - Hose	68 51 1
92-7484	Assembly - Hose	27 12 1	92-7584	Assembly - Tube	65 5 1
92-7485	Assembly - Hose	20 20 1	92-7585	Assembly - Tube	65 22 1
92-7485	Assembly - Hose	27 33 1	92-7586	Gear - Driven	54 25 1
92-7486	Assembly - Hose	20 19 1	92-7587	Gear - Driver	54 23 1
92-7487	Assembly - Tube	21 42 1	92-7591	Assembly - Tube	76 12 1
92-7488	Assembly - Hose	21 43 1	92-7591	Assembly - Tube, P2A	66 43 1
92-7489	Hose - Return	16 13 1	92-7594	Assembly - Hose	62 7 1
92-7489	Hose - Return	27 19 1	92-7595	Assembly - Hose	62 8 1
92-7490	Assembly - Hose, Filter	27 25 1	92-7598	Asm. - Tube, Front Drain	66 50 1
92-7490	Hose - Filter	16 16 1	92-7598	Assembly - Tube, Frt. Drain	20 32 1
92-7491	Assembly - Hose	27 11 1	92-7604	Pin - Stop	55 53 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92–7604	Pin – Stop	63 54 1	93–4216	Assembly – Tube	76 40 1
92–7606	Bracket – Bulkhead	4 51 1	93–4217	Assembly – Tube	78 26 1
92–7608	Bracket – Spring	6 12 1	93–4217	Assembly – Tube	76 39 1
92–7609	Shaft – Spring	6 45 1	93–4219	Assy. – Tube, #1 Bulkhead	78 17 1
92–7610	Retainer – Spring	6 42 1	93–4222	Assy. – Tube, Drain Return	78 16 1
92–7622	Assembly – Hose, Steering	27 35 1	93–4222	Assy. – Tube, Drain Return	76 37 1
92–7622	Hose – Steering	4 49 1	93–4223	Assy. – Tube, Front Drain	78 15 1
92–7623	Bumper (Model 03801)	33 36 1	93–4224	Absorber – Shock	73 7 2
92–7631	Sealstrip – Screen	33 22 1	93–4224	Absorber – Shock	68 16 3
92–7633	Strip – Bumper, Hood	1 16 1	93–4233	Assembly – Engine	35 16 1
92–7634	Assembly – Hose, Traction	20 15 1	93–4234	Screw – Socket Hd.	68 42 3
92–7634	Assembly – Hose, Traction	27 34 1	93–4234	Screw – Socket Hd.,	73 35 2
92–7636	Assembly – Hose	73 23 1	93–4246	Pin – Shock	73 12 2
92–7638	Assembly – Hose	73 25 1	93–5835	Screw – Purge	47 28 1
92–7638	Assembly – Hose	65 1 1	93–5856	Valve – Solenoid	47 17 1
92–7639	Assembly – Hose	73 27 1	93–5986	Asm. – Cover	53 4 1
92–7639	Assembly – Hose	65 37 1	93–6028	Plate – Logo, Toro	33 26 1
92–7645	Fitting – Hydraulic 90°	20 8 1	93–6668	Decal – Charging (Europe)	52 51 1
92–7646	Fitting – Hydraulic 45°	55 57 1	93–6680	Decal – Fuel, Diesel (Europe)	2 34 1
92–7647	Assembly – Tube, Drain	65 12 1	93–6681	Plate – Warning	33 15 1
92–7648	Assembly – Hose	65 2 1	93–6686	Decal – Hydraulic Oil	1 5 1
92–7649	Assembly – Hose	78 18 4	93–6687	Decal – No Step (Europe)	68 5 2
92–7649	Assembly – Hose	65 20 4	93–6689	Decal – No Riders (Europe)	12 13 1
92–7787	Pulley – Camshaft	41 26 1	93–6689	Decal – No Riders (Europe)	2 35 1
92–7791	Seal – Valve	40 52 8	93–6693	Decal – Floor Plate (Europe)	68 21 1
92–7792	Guide – Valve (14.29mm)	40 47 8	93–6699	Decal – Fast/Slow (Europe)	6 23 1
92–7793	Guide – Valve (14.59mm)	40 * 8	93–7247	Washer – Thrust	54 6 1
92–7794	Valve – Exhaust	40 50 4	93–7247	Washer – Thrust	63 55 1
92–7795	Seat – Exhaust Valve	40 51 4	93–7252	Decal – (Europe)	2 57 1
92–8001	Sensor – Switch, Reed	7 13 1	93–7276	Decal – Danger (Europe)	52 52 1
92–8002	Sensor – Switch, Reed	68 35 1	93–7450	Spindle	22 1 1
92–8020	Adapter – Breather	17 13 1	93–7451	Cone – Bearing	22 3 1
92–8753	Magnet – Switch, Reed	7 11 1	93–7452	Cup – Bearing	22 4 1
92–8754	Magnet – Switch, Reed	68 34 1	93–7453	Housing	22 6 1
92–9650	Assembly – Hub	62 25 2	93–7454	Screw – HH	22 25 18
92–9652	Stud – Drive	62 36 10	93–7455	Stud – Wheel	22 5 8
92–9724	Spindle – RH	62 * 1	93–7456	Gear – Ring	22 18 1
92–9725	Spindle – LH	62 21 1	93–7457	Spacer – Input	22 16 1
93–0096	Decal – ACE	2 31 2	93–7458	Plate – Cover	22 15 1
93–0307	Nut – Retainer	62 32 2	93–7459	Ring – Retaining, External	22 19 1
93–0309	Washer – Tab	62 31 2	93–7460	Washer – Thrust	22 17 1
93–1261	Decal – Console (Europe)	13 40 1	93–7461	Plug – Pipe	22 13 2
93–1262	Decal – Hillside (Europe)	2 28 1	93–7462	Ring – Retaining, Internal	22 14 1
93–1263	Decal – Tower (Europe)	3 23 1	93–7463	Gear – Sun	22 20 1
93–1264	Decal – Switch, Backlap	76 24 1	93–7464	Gear – Sun	22 21 1
93–1265	Decal – Hot Surface (Europe)	52 1 1	93–7465	Washer – Thrust	22 22 1
93–1266	Decal – Fuses (Europe)	13 58 1	93–7466	Pin – Dowel	22 24 2
93–1268	Decal – HOC Selector	12 17 1	93–7467	Ring – Retaining, External	22 10 1
93–1425	Bar – Lift, Center	68 27 1	93–7468	Washer – Thrust	22 9 1
93–2175	Assembly – Pump, Gear	27 4 1	93–7469	Cone – Bearing	22 8 1
93–2649	Assembly – Frame, Carrier	68 22 1	93–7470	Cup – Bearing	22 7 1
93–2650	Cylinder – Hydraulic	68 38 1	93–7471	Shaft – Input	22 23 1
93–3102	Cap – Fuel, Diesel	18 10 1	93–7472	Asm – Carrier, Secondary	22 11 1
93–3163	Spring	9 28 1	93–7473	Asm – Carrier, Primary	22 12 1
93–3164	Cap	9 27 2	93–7474	Kit – Seal	22 2 1
93–3165	Bracket	9 29 1	93–7476	Motor – Hydraulic W/Sensor	21 49 1
93–3625	Spring – Return, Joystick	13 62 1	93–7480	Bulb – LED	3 29 1
93–4201	Assembly – Hose	78 19 2	93–7483	Light – Warning Bank	12 32 1
93–4201	Assembly – Hose	65 21 2	93–7484	Light – Warning Bank	12 31 1
93–4205	Assembly – Tube, Drain	65 15 1	93–7485	Assembly – Filter, Air	52 41 1
93–4206	Assembly – Tube, Drain	65 15 1	93–7487	Switch – Toggle	76 31 1
93–4207	Fitting – Tee	52 18 1	93–7488	Tank – Hydraulic	16 1 1
93–4208	Strip – Seal, Screen	33 27 1	93–7489	Valve – Control, Flow	76 6 1
93–4213	Assembly – Speedometer	3 22 1	93–7491	Cartridge – Pilot Check	77 2 1
93–4215	Hose – Radiator, Upper Rear	33 5 1	93–7491	Cartridge – Pilot Check	67 14 1
93–4215	Hose – Radiator, Upper Rear	35 22 1	93–7492	Cartridge – Relief 2300 psi	77 4 1
93–4215	Hose – Radiator, Upper Rear	52 29 1	93–7494	Cartridge – N.O. Poppet	77 13 2
93–4216	Assembly – Tube	78 14 1	93–7494	Cartridge – N.O. Poppet	67 15 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-7498	Plug - Plastic	16 6 1	93-7996	Cover - Tower	1 2 1
93-7498	Plug - Plastic	17 6 1	93-7998	Plate - Instrument	3 24 1
93-7524	O-Ring	73 3 2	93-8050	Decal - Warning (Europe)	80 2 1
93-7524	O-Ring	68 47 3	93-8053	Decal - ECU Label (Europe)	76 43 1
93-7551	Cylinder - Hydraulic	68 13 1	93-8073	Decal - Blank (Europe)	80 3 1
93-7553	Seal - Hood	33 13 1	93-8497	Gauge - Fuel	12 27 1
93-7554	Decal - Tower	3 23 1	93-8742	Pad - Brake	6 29 2
93-7555	Cylinder - Hydraulic	69 59 1	93-8744	Rivet - Pop	2 46 3
93-7573	Decal - Instructions, Clip	8 17 1	93-8744	Rivet - Pop	13 56 3
93-7579	Fender - RH	1 3 1	93-9151	Fitting - Hydraulic 90°	78 21 3
93-7582	Hose	1 20 1	93-9152	Kit - Flange	79 * 1
93-7584	Hose - Intake	33 11 1	93-9153	Kit - Seal	79 * 1
93-7584	Hose - Intake	52 40 1	93-9154	Kit - Valve Block	79 * 1
93-7587	Bracket - Fuse Block	13 49 1	93-9155	Velcro	1 7 2
93-7589	Hose - Overflow	52 28 1	93-9157	Velcro	80 4 4
93-7591	Hose - Return	52 24 1	93-9159	Strap - Cover	80 9 2
93-7592	Tread - Footrest	2 42 2	93-9160	Cover - ROPS	80 6 1
93-7594	Spacer - Tubular	35 21 1	93-9161	Pin	73 1 2
93-7595	Assembly - Box, Battery	52 7 1	93-9161	Pin	68 46 3
93-7597	Fitting - SAE	76 7 1	93-9164	Indicator	53 1 1
93-7598	Lever - Throttle	8 10 1	93-9164	Indicator - Service	52 37 1
93-7773	Bolt	56 5 4	93-9165	Decal - Instr. Service, 2WD	1 27 1
93-7775	Bearing	59 18 2	93-9166	Decal - Instr. Service, 4WD	2 27 1
93-7778	Housing - Axle A	57 1 1	93-9167	Decal - Console	13 40 1
93-7779	Housing - Axle B	57 3 1	93-9176	Dipstick - Oil	36 3 1
93-7780	Axle - 4WD	54 32 1	93-9176	Dipstick - Peugeot	35 51 1
93-7781	Washer	57 10 8	93-9177	Decal - Warning, Hillside	2 28 1
93-7782	Screw - HHF	57 4 8	93-9178	Muffler	52 35 1
93-7783	Ring - Retaining	60 11 2	93-9180	Cover - Box, Tool	1 26 1
93-7784	Cover	60 12 2	93-9181	Knuckle - Pivot	73 37 2
93-7785	Nut - Slotted	60 13 2	93-9181	Knuckle - Pivot	68 44 3
93-7786	Fitting - Grease	60 17 2	93-9184	Decal - Rear Manifold Block	8 19 1
93-7787	Bushing - Flange	57 2 2	93-9189	Pin	68 20 2
93-7840	Decal - Cap (Europe)	52 53 1	93-9189	Pin	73 32 2
93-7960	Spacer	68 2 6	93-9190	Lift Arm #1	68 41 1
93-7961	Clamp - Drain, Case	68 3 3	93-9191	Lift Arm #2	73 * 1
93-7966	Shaft - Splined, Brake	20 31 2	93-9192	Lift Arm #3	73 6 1
93-7968	Pad - Foam, Battery	52 11 1	93-9193	Lift Arm #4	68 32 1
93-7970	Form - Wire, Hose Mount	76 28 1	93-9194	Lift Arm #5	68 6 1
93-7972	Ring - Retaining	20 30 4	93-9197	Decal - Switch, Backlap	76 24 1
93-7974	Plate - Battery, Box	52 5 1	93-9198	Decal - Hot Surface	52 1 1
93-7974	Plate - Box, Battery	18 1 1	93-9425	Decal - Danger (Europe)	2 55 1
93-7976	Ring - Retaining	23 9 1	93-9426	Decal - Danger	2 55 1
93-7977	Seal	23 2 1	93-9783	O-Ring	78 28 10
93-7978	Rod - Pull	23 3 1	93-9973	Frame - Seat	8 5 1
93-7979	Pin - Cotter, Hair	23 6 2	93-9976	Plate - Seat	8 18 1
93-7980	Link	23 5 2	93-9979	Latch, Seat	8 22 1
93-7981	Disc - Rotating	23 8 3	93-9983	Bracket - Latch, Seat	8 8 2
93-7982	Actuator	23 11 1	94-1402	Plug	65 14 4
93-7983	Pin - Clevis	23 4 2	94-1403	Fitting - Hydraulic	65 38 1
93-7984	Gasket	23 10 1	94-1408	Wireform - Overflow	52 19 1
93-7985	Ball	23 13 3	94-1410	Holder - Can, Beverage	2 53 1
93-7986	Disc - Stationary	23 7 4	94-1411	Cable - Battery, Negative	52 10 1
93-7987	Spring - Extension	23 12 3	94-1412	Filter - Primary	53 3 1
93-7989	Shaft W/Clevis	74 7 1	94-1413	Filter - Safety	53 6 1
93-7989	Shaft W/Clevis	75 7 1	94-1414	Valve - Vacuator	53 5 1
93-7990	Head	70 10 1	94-1416	Adapter - Indicator	52 36 1
93-7990	Head	72 10 1	94-1416	Asm. - Adaptor	53 7 1
93-7990	Head	74 11 1	94-1417	Cover - Box, Control	13 41 1
93-7991	Collar	70 13 1	94-1418	Hose - Radiator, Upper	35 12 1
93-7991	Collar	72 13 1	94-1421	Coupling - Center, Spring	35 15 1
93-7991	Collar	74 13 1	94-1422	Spacer - Coupler	35 49 3
93-7992	Asm. - Barrel	74 2 1	94-1430	Bushing - Flange	73 11 8
93-7993	Head	71 10 1	94-1430	Bushing - Flange	68 15 12
93-7993	Head	75 11 1	94-1445	Strap - Battery	52 12 1
93-7994	Collar	71 13 1	94-1446	Tube - Drain	16 26 1
93-7994	Collar	75 13 1	94-1447	Asm. - Tube, Steering Ret.	76 38 1
93-7995	Asm. - Barrel	75 2 1	94-1447	Tube - Steering, Return	16 39 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-1447	Tube — Steering, Return	3 43 1	94-2939	Decal — Service (German)	1 27 1
94-2617	Cover — Pump	1 21 1	94-2940	Decal — Service (Italian)	2 27 1
94-2620	Head — Filter	16 18 1	94-2941	Decal — Service (Japan)	2 27 1
94-2621	Element	16 21 1	94-2942	Decal — Service (Norwegian)	2 27 1
94-2624	Hose — Manifold	35 29 1	94-2943	Decal — Service	2 27 1
94-2624	Hose — Manifold	52 39 1	94-2944	Decal — Service (Spanish)	2 27 1
94-2626	Plug — Orifice	67 17 1	94-2945	Decal — Service (Swedish)	2 27 1
94-2630	Hose — Return	52 17 1	94-3000	Asm. — Backplate	26 8 1
94-2633	Decal — HOC Selector	12 17 1	94-3001	Housing	26 16 1
94-2636	Fitting — Hydraulic 90°	27 20 1	94-3002	Screw — HH	26 7 6
94-2637	Fitting — Hydraulic, Straight	27 18 1	94-3002	Screw — HH	24 8 6
94-2638	Nut — Push On	33 23 4	94-3002	Screw — HH	25 8 6
94-2643	Frame — ROPS	80 7 1	94-3003	Plate — Valve	26 13 1
94-2644	Shaft With Clevis	70 12 1	94-3003	Plate — Valve	25 15 1
94-2644	Shaft With Clevis	72 12 1	94-3003	Plate — Valve	24 16 1
94-2646	Decal — Warning (Europe)	33 15 1	94-3004	Shaft — Drive, Splined	24 7 1
94-2646	Guard — Fan (Europe)	33 50 1	94-3004	Shaft — Drive, Splined	25 7 1
94-2650	Asm. — Detector, Leak	16 3 1	94-3005	Asm. — Backplate	24 9 1
94-2651	Cover — Bottom	17 2 1	94-3005	Asm. — Backplate	25 9 1
94-2658	Valve — Solenoid	17 10 1	94-3006	Housing	25 18 1
94-2660	Gasket — Flange	16 2 1	94-3006	Housing	24 19 1
94-2800	Cap — Radiator	52 22 1	94-3007	Washer	24 3 1
94-2801	Grommet — Rubber	52 44 2	94-3007	Washer	25 3 1
94-2803	Bearing	59 12 2	94-3007	Washer	31 53 1
94-2806	Adaptor — Nut (Europe)	55 67 6	94-3008	Seal — Shaft	24 2 1
94-2807	Adaptor — Nut (Europe)	63 62 6	94-3008	Seal — Shaft	25 2 1
94-2812	Grommet	52 46 2	94-3008	Seal — Shaft	31 54 1
94-2814	Kit — Exhaust Coupler	52 50 1	94-3009	Asm. — Plug	24 11 1
94-2815	Sleeve — Exhaust Flange	52 49 1	94-3010	Sensor — Speed Pickup	25 11 1
94-2834	Bracket — Clamp	66 53 1	94-3011	Plug	29 7 1
94-2849	Muffler — Spark Arrestor	52 * 1	94-3012	Screw — Cap	29 10 8
94-2902	Decal — Clip (Danish)	8 17 1	94-3013	Plug	29 23 1
94-2903	Decal — Clip (Dutch)	8 17 1	94-3014	Valve — Relief	29 26 1
94-2904	Decal — Clip (Finnish)	8 17 1	94-3015	Kit — Seal	29 * 1
94-2905	Decal — Clip (French)	8 17 1	94-3016	Asm. — Backplate	31 8 1
94-2906	Decal — Clip (German)	8 17 1	94-3017	Adaptor — Charge Relief	31 12 1
94-2907	Decal — Clip (Italian)	8 17 1	94-3018	Asm. — Housing	31 58 1
94-2908	Decal — Clip (Japan)	8 17 1	94-3019	Control — Servo, Manual	31 65 1
94-2909	Decal — Clip (Norwegian)	8 17 1	94-3020	Shaft — Drive	31 56 1
94-2910	Decal — Clip (Portuguese)	8 17 1	94-3021	Asm. — Kit, Rotating	31 35 1
94-2911	Decal — Clip (Spanish)	8 17 1	94-3022	Plate — Valve	31 1 1
94-2912	Decal — Clip (Swedish)	8 17 1	94-3023	Coupler	31 10 1
94-2913	Decal — Rear Manifold (DK)	8 19 1	94-3025	Asm. — Piston, Servo	31 41 1
94-2914	Decal — Rear Manifold (NL)	8 19 1	94-3026	Asm. — Camplate	31 36 1
94-2915	Decal — Rear Manifold (SF)	8 19 1	94-3027	Washer — Seal	31 48 1
94-2916	Decal — Rear Manifold (F)	8 19 1	94-3028	Screw — Cap	31 14 2
94-2917	Decal — Rear Manifold (D)	8 19 1	94-3029	Screw — Cap	31 21 2
94-2918	Decal — Rear Manifold (I)	8 19 1	94-3030	Washer	31 47 1
94-2919	Decal — Rear Manifold (J)	8 19 1	94-3031	Arm — Control	31 29 1
94-2920	Decal — Rear Manifold (N)	8 19 1	94-3032	Follower — Piston	31 33 1
94-2921	Decal — Rear Manifold (P)	8 19 1	94-3033	Plate — Cover	31 59 1
94-2922	Decal — Rear Manifold (ES)	8 19 1	94-3034	Plate — Cover	31 43 1
94-2923	Decal — Rear Manifold (S)	8 19 1	94-3035	Ring — Lock	31 9 1
94-2924	Decal — Service (Danish)	2 27 1	94-3036	Ring — Quad	31 3 1
94-2925	Decal — Service (Dutch)	2 27 1	94-3037	Ring — Retaining	31 4 1
94-2926	Decal — Service (Finnish)	2 27 1	94-3038	Plug — Dump Valve	31 5 1
94-2927	Decal — Service (French)	2 27 1	94-3039	Kit — Seal	31 * 1
94-2928	Decal — Service (German)	2 27 1	94-3040	Orifice — Valve, Control	31 31 3
94-2929	Decal — Service (Italian)	2 27 1	94-3043	Switch	32 15 1
94-2930	Decal — Service (Japan)	2 27 1	94-3044	Kit — Seal	32 * 1
94-2931	Decal — Service (Norwegian)	2 27 1	94-3050	Plate — Spring	21 54 2
94-2932	Decal — Service	2 27 1	94-3052	Weight — Wheel (Europe)	63 63 2
94-2933	Decal — Service (Spanish)	2 27 1	94-3052	Weight — Wheel (Europe)	55 68 2
94-2934	Decal — Service (Swedish)	2 27 1	94-3055	Cap — Lower, Joystick	12 3 1
94-2935	Decal — Service (Danish)	1 27 1	94-3056	Snap Ring — Joystick	12 4 1
94-2936	Decal — Service (Dutch)	1 27 1	94-3057	Spring — Compression	12 5 1
94-2937	Decal — Service (Finnish)	1 27 1	94-3058	Cap — Upper, Joystick	12 6 1
94-2938	Decal — Service (French)	1 27 1	94-3059	Tube — Steering, RH	3 6 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-3060	Tube - Steering, Front LH	3 13 1	94-3148	Seal - Shaft	37 11 1
94-3061	Tube - Steering, Front, In	3 7 1	94-3149	Gear - Flywheel	37 17 1
94-3062	Tube - Steering, Front, Out	3 14 1	94-3150	Screw - Cap Hex. Hd.	37 7 4
94-3063	Extension - Stem, Valve	63 66 2	94-3151	Washer	37 8 6
94-3063	Extension - Stem, Valve	55 71 2	94-3152	Screw - Cap Hex. Hd.	37 33 2
94-3077	Plug - Orifice	77 20 1	94-3153	Rod - Connecting	37 25 4
94-3084	Bumper (Model 03800)	33 36 1	94-3154	Bushing - Sleeve	37 24 4
94-3088	Spring - Brake	21 55 2	94-3155	Bearing - Connecting Rod	37 * 4
94-3090	Harness - Wire, Main	3 8 1	94-3156	Bolt - Connecting Rod	37 28 8
94-3090	Harness - Wire, Main	35 18 1	94-3157	Piston Set - Std.	37 29 1
94-3090	Harness - Wire, Main	76 30 1	94-3158	Piston Ring Set Std.	37 23 4
94-3090	Harness - Wire, Main	8 32 1	94-3159	Roller Assembly	41 11 1
94-3090	Harness - Wire, Main	66 45 1	94-3160	Roller Assembly	41 15 1
94-3090	Harness - Wire, Main	21 47 1	94-3161	Screw	41 16 2
94-3090	Harness - Wire, Main	13 61 1	94-3161	Screw	47 24 1
94-3091	Decal - Fuses (Japan)	13 58	94-3162	Stud	41 9 1
94-3100	Short Block Assembly	36 36 1	94-3163	Screw	41 6 1
94-3101	Gasket Set	36 * 1	94-3164	Washer - Spring	43 7 7
94-3102	Pin	36 14 2	94-3164	Washer - Spring	41 10 4
94-3103	Plug - Threaded	36 44 1	94-3164	Washer - Spring	47 10 6
94-3104	Plug - Threaded	36 43 2	94-3165	Nut	47 6 4
94-3105	Plug - Drain	36 38 1	94-3165	Nut - Lock	41 12 1
94-3106	Gasket	36 42 2	94-3166	Washer - Flat	41 7 1
94-3107	Gasket	36 24 2	94-3167	Bracket - Fan	41 24 1
94-3108	Plug - 27.5 mm Dia.	36 * 8	94-3168	Pulley - Fan	41 21 1
94-3108	Plug - 27.5 mm Dia.	39 * 2	94-3169	Screw	41 25 1
94-3109	Plug - 28.5 mm Dia.	36 * 9	94-3170	Screw	41 17 1
94-3109	Plug - 28.5 mm Dia.	39 * 2	94-3171	Screw	41 20 2
94-3110	Stud	36 45 1	94-3172	Washer	41 19 3
94-3111	Pin - Groove	36 22 2	94-3173	Screw	41 22 3
94-3112	Screw - Washer Hd.	36 17 2	94-3174	Washer	39 27 8
94-3113	Cylinder Head Assembly	38 5 1	94-3176	Gear - Oil Pump	44 2 1
94-3115	Nut - Lock	38 8 6	94-3177	Plug	44 12 2
94-3116	Gasket	38 3 1	94-3178	Strainer	44 9 1
94-3117	Plate	38 2 1	94-3179	Washer - Spring	44 4 3
94-3118	Plug	39 32 1	94-3180	Switch - Pressure	36 32 1
94-3119	Kit - Gasket	40 * 1	94-3181	Oil Filler	36 1 1
94-3120	Bracket	40 54 1	94-3182	Plug	36 2 1
94-3121	Plug	40 44 1	94-3183	Gasket	36 39 1
94-3122	Gasket	40 43 1	94-3184	Union	36 4 1
94-3123	Screw - Cap Hex. Hd.	38 1 2	94-3186	O-Ring	36 40 1
94-3124	Bolt - Valve Cover	39 22 3	94-3190	PCV Valve	36 46 1
94-3124	Screw - Cap Hex. Hd.	44 8 2	94-3191	Union	36 48 1
94-3125	Washer	39 21 3	94-3192	Union	36 47 1
94-3125	Washer - Flat	42 3 1	94-3194	Cover - Pump, Water	46 5 1
94-3126	Protector - Lower	42 5 1	94-3195	Gasket - Pump, Water	46 4 1
94-3127	Case - Timing, Left	42 7 1	94-3196	Inlet - Water	46 7 1
94-3128	Case - Timing, Right	42 9 1	94-3196	Inlet - Water	39 31 1
94-3129	Plug	42 4 1	94-3197	O-Ring	46 3 1
94-3130	Screw	42 2 1	94-3197	O-Ring	39 30 1
94-3131	Screw	45 1 3	94-3198	Screw	46 8 2
94-3131	Screw	42 10 1	94-3198	Screw	39 35 2
94-3132	Screw	42 1 2	94-3199	Pipe - By-Pass	40 39 1
94-3133	Nut W/Washer	42 6 1	94-3200	Hose - By-Pass	39 37 1
94-3134	Nut	42 8 1	94-3201	Hose - By-Pass	40 40 1
94-3135	Bracket - Lifting	39 15 1	94-3205	Box - Outlet	45 3 1
94-3136	Bracket - Lifting	39 23 1	94-3206	Gasket	45 9 1
94-3137	Bracket - Lifting	39 25 1	94-3207	Ring	45 4 1
94-3138	Screw	39 24 1	94-3208	Stub - Outlet	45 2 1
94-3139	Screw	39 26 1	94-3209	Thermostat	45 11 1
94-3140	Bearing Set (.30mm OS)	37 * 2	94-3210	Gasket	45 10 1
94-3141	Thrust Bearing Set (Std.)	37 13 2	94-3211	Temp Sending Unit	45 6 1
94-3142	Thrust Bearing Set	37 * 2	94-3212	Plug	45 7 2
94-3143	Thrust Bearing Set	37 * 2	94-3213	Screw	45 8 1
94-3144	Pulley	37 3 1	94-3214	Screw	45 5 1
94-3145	Screw - Cap Hex. Hd.	37 1 1	94-3215	Manifold - Intake	43 6 1
94-3146	Washer	37 2 1	94-3216	Screw	43 8 5
94-3147	Seal	37 15 1	94-3217	Screw	43 9 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-3218	Screw	43 * 1	94-4089	Cap — End	5 10 1
94-3219	Pump — Injection	47 19 1	94-4090	Gerotor	5 11 1
94-3220	Bracket	47 3 1	94-4091	Spacer	5 12 1
94-3221	Screw	47 11 1	94-4092	Plate — Wear	5 14 1
94-3222	Key	47 20 1	94-4093	Drive	5 13 1
94-3223	Screw	47 25 1	94-4094	Pin	5 6 1
94-3224	Washer — Flat	47 9 2	94-4095	Kit — Spring, Centering	5 3 1
94-3225	Screw	47 4 2	94-4096	Kit — Bearing	5 8 1
94-3226	Gasket — Injector	48 4 4	94-4097	Asm. — Plug	5 15 1
94-3227	Spacer	48 8 4	94-4098	Ring — Retaining	5 5 1
94-3228	Spring	48 7 4	94-4099	Kit — Seal	5 1 1
94-3229	Union	48 11 3	94-4100	Ball	5 16 1
94-3230	Hose	48 1 1	94-4222	Wire Harness	16 4 1
94-3231	Bracket	48 13 2	94-4572	Decal — Hillside (Japan)	2 28 1
94-3232	Washer — 0.79 mm	48 6 4	94-4573	Decal — Tower (Japan)	3 23 1
94-3233	Washer — 0.82 mm	48 * 4	94-4574	Decal — Console (Japan)	13 40 1
94-3234	Washer — 0.85 mm	48 * 4	94-4575	Decal — HOC Selector	12 17 1
94-3235	Washer — 0.88 mm	48 * 4	94-4577	Decal — Warning (Japan)	33 15 1
94-3236	Washer — 0.91 mm	48 * 4	94-4578	Decal — Hot Surface (Japan)	52 1 1
94-3237	Washer — 0.94 mm	48 * 4	94-4579	Decal — Danger (Japan)	2 55 1
94-3238	Washer — 0.97 mm	48 * 4	94-4580	Decal — Backlap (Japan)	76 24 1
94-3239	Washer — 1.00 mm	48 * 4	94-5386	Decal — Diagnostic	10 *3 1
94-3240	Washer — 1.03 mm	48 * 4	94-5438	Seal — Solenoid	67 16 10
94-3241	Washer — 1.06 mm	48 * 4	94-5438	Seal — Solenoid	77 19 16
94-3242	Washer — 1.30 mm	48 6 4	94-5582	Alarm — Audio	13 72 1
94-3243	Washer — 1.33 mm	48 * 4	94-5603	Bushing — Sleeve	63 51 2
94-3244	Washer — 1.36 mm	48 * 4	94-5607	Assembly — Axle, Rear	62 20 1
94-3245	Washer — 1.39 mm	48 * 4	94-6343	Decal — Wire Identification #1	13 * 1
94-3246	Washer — 1.42 mm	48 * 4	94-6344	Decal — Wire Identification #2	13 * 1
94-3247	Washer — 1.45 mm	48 * 4	94-6345	Decal — Wire Identification	16 40 1
94-3248	Washer — 1.48 mm	48 * 4	94-6349	Decal — Fuses	13 58 1
94-3249	Tube — Outlet	47 22 1	94-6710	Fuse — 2A	13 47 1
94-3250	Screw — Connection	47 23 1	94-6753	Joystick (Europe)	12 9 1
94-3251	Nut	47 15 1	94-8000	Nut — Lock	54 13 1
94-3251	Nut — Lock	51 8 1	94-8000	Nut — Lock	62 13 1
94-3252	Alternator	49 12 1	94-8018	Arm — Drag Link	60 1 1
94-3253	Bracket	49 7 1	94-8019	Arm — Tie Rod	60 2 1
94-3254	Screw	49 6 1	94-8060	Decal — Diagnostic	10 *3 1
94-3255	Slide	49 4 1	94-8061	Decal — Diagnostic	10 *3 1
94-3256	Belt	49 5 1	94-8062	Decal — Diagnostic	10 *3 1
94-3257	Washer — Spring	49 13 1	94-8063	Decal — Diagnostic	10 *3 1
94-3258	Screw	49 14 1	94-8064	Decal — Diagnostic	10 *3 1
94-3259	Screw	49 9 1	94-8065	Decal — Diagnostic	10 *3 1
94-3260	Washer — Flat	49 3 1	94-8066	Decal — Diagnostic	10 *3 1
94-3261	Nut	49 11 1	94-8067	Decal — Diagnostic	10 *3 1
94-3262	Nut	49 10 1	94-8068	Decal — Diagnostic	10 *3 1
94-3263	Starter	50 3 1	94-8069	Decal — Diagnostic	10 *3 1
94-3264	Plug — Glow	51 3 4	94-8070	Decal — Diagnostic	10* 3 1
94-3265	Cable — Glow Plug	51 2 4	94-8102	Tube — Interlock (Europe)	12 1 1
94-3266	Nut — Hex.	51 5 4	94-8103	Boot — Control, Lift	12 22 1
94-3267	Nut — Lock	51 6 1	94-8104	Switch — Micro	12 8 2
94-3274	O—Ring	47 18 1	94-8105	Clamp — Tube	34 54 2
94-3275	Solenoid — Starter	50 * 1	94-8108	Support — Filter, Air	52 42 1
94-3343	Bracket — Beeper	13 71 1	94-8115	Pin — Axle, Pivot	63 53 1
94-3354	Decal — Diagnostic ACE	10 1 1	94-8115	Pin — Axle, Pivot	55 55 1
94-3355	Decal — Diagnostic ACE	10 1 1	94-8131	Frame — Rear	1 22 1
94-3356	Decal — Diagnostic ACE	10 1 1	94-8132	Gasket — Head (1.48 mm)	40 53 1
94-3357	Decal — Diagnostic ACE	10 1 1	94-8133	Gasket — Head (1.52 mm)	40 * 1
94-3358	Decal — Diagnostic ACE	10 1 1	94-8134	Gasket — Head (1.58 mm)	40 * 1
94-3359	Decal — Diagnostic ACE	10 1 1	94-8135	Gasket — Head (1.62 mm)	40 * 1
94-3360	Decal — Diagnostic ACE	10 1 1	94-8140	Plug — Orifice	77 21 1
94-3361	Decal — Diagnostic ACE	10 1 1	94-8141	Cylinder — Hydraulic	54 44 1
94-3362	Decal — Diagnostic ACE	10 1 1	94-8142	Assembly — Cylinder	62 39 1
94-3363	Decal — Diagnostic ACE	10 1 1	94-8143	Tire	20 1 2
94-3364	Decal — Diagnostic ACE	10 1 1	94-8145	Fitting — Hyd.	16 25 1
94-3500	Wheel, Steering	3 19 1	94-8146	Strip — Foam, Seat	8 34 1
94-3559	Screw — Hex. Hd. Flange	16 5 6	94-8147	Nozzle — Injector	48 9 4
94-4088	Screw — Cap	5 9 7	94-8149	Rim	20 5 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-8166	O-Ring	16 7 1	237-22	O-Ring	16 38 1
94-8946	Washer - Thrust	73 38 2	237-22	O-Ring	62 44 2
94-8946	Washer - Thrust	68 45 3	237-22	O-Ring	63 58 2
94-8947	Bushing - Flange	73 4 2	237-22	O-Ring	55 64 6
94-8947	Bushing - Flange	68 48 5	237-30	O-Ring	78 6 18
94-8948	Bushing	73 5 2	237-30	O-Ring	76 9 4
94-8948	Bushing	68 49 3	237-30	O-Ring	27 10 2
94-8949	Bushing - Flange	73 2 8	237-30	O-Ring	65 30 6
94-8949	Bushing - Flange	68 25 12	237-30	O-Ring	16 31 2
94-9411	Dipstick	16 8 1	237-30	O-Ring	21 45 3
94-9950	Assembly - Valve, Steering	3 5 1	237-42	O-Ring	27 5 1
94-9951	Asm. - Column, Steering	3 17 1	237-42	O-Ring	76 8 1
94-9952	Nut - Jam	3 21 1	237-42	O-Ring	3 12 4
94-9953	Frame - Front	2 38 1	237-42	O-Ring	67 12 5
94-9955	Asm. - Barrel	61 1 1	237-42	O-Ring	77 15 5
94-9956	Asm. - Piston Rod	61 6 1	237-42	O-Ring	16 36 1
94-9957	Piston	61 3 1	237-42	O-Ring	54 38 2
94-9958	Gland - Cylinder	61 8 1	237-42	O-Ring	66 52 2
94-9959	Asm. - Barrel	64 1 1	237-56	O-Ring	67 5 4
94-9960	Asm. - Rod, Piston	64 12 1	237-58	O-Ring	54 7 6
94-9961	Piston	64 3 1	237-58	O-Ring	16 12 1
94-9962	Gland - Cylinder	64 10 1	237-58	O-Ring	27 17 3
94-9963	Ring - Retaining	64 9 1	237-58	O-Ring	20 22 4
94-9964	Kit - Seal	64 * 1	237-58	O-Ring	65 33 2
94-9965	Asm. - Head, Cylinder	40 * 1	237-65	O-Ring	16 15 2
94-9967	Circuit Breaker - 50 Amp	35 * 1	237-65	O-Ring	76 20 1
94-9968	Circuit Breaker - 100 AMP	35 * 1	237-65	O-Ring	27 27 1
94-9969	Screw - Connection	47 27 1	237-65	O-Ring	33 32 4
94-9983	Box - Degassing	52 21 1	237-78	O-Ring	27 3 4
94-9984	Sensor - Water Level	52 23 1	237-78	O-Ring	67 3 4
94-9994	Gasket - Camshaft	41 27 1	237-78	O-Ring	76 5 8
94-9999	Valve - Relief	31 7 2	237-78	O-Ring	77 6 10
95-1821	Spring - Brake, Park	3 39 1	237-78	O-Ring	68 10 6
95-2713	Asm. - Float	17 4 1	237-78	O-Ring	73 20 4
95-3450	Pump - Piston	27 24 1	237-78	O-Ring	78 24 5
217-125	Wheel	62 29 2	237-78	O-Ring	65 26 4
217-125	Wheel	54 34 2	237-78	O-Ring	62 42 2
218-446	Washer - Lock	13 39 1	237-78	O-Ring	55 51 2
218-447	Nut - Hex.	13 38 1	237-79	O-Ring	78 4 10
218-498	Nut - Hex.	12 21 2	237-79	O-Ring	17 11 1
218-533	Lens - Red	3 28 1	237-79	O-Ring	76 18 4
218-535	Nut - Lock	3 34 1	237-79	O-Ring	65 27 3
218-536	Washer - Lock, Int. Tooth	3 25 1	237-79	O-Ring	16 33 1
218-574	Fuse - 7.5A	13 47 1	237-79	O-Ring	20 35 4
218-578	Fuse - 10A	13 47 4	237-80	O-Ring	27 8 3
218-581	Fuse - 15A	13 47 1	237-81	O-Ring	16 10 3
218-588	Screw	13 *74 2	237-81	O-Ring	54 19 2
218-589	Washer - Lock	12 34 1	237-81	O-Ring	27 21 1
218-594	Fuse - 20A	13 47 1	237-81	O-Ring	76 22 1
219-17	Bulb	13 *64 4	237-81	O-Ring	20 24 4
232-24	Stem - Valve	20 2 2	237-81	O-Ring	65 31 1
232-27	Stem - Valve	62 30 2	237-99	O-Ring	27 13 1
232-27	Stem - Valve	54 35 2	237-101	O-Ring	17 7 1
233-17	Knob	3 33 1	237-101	O-Ring	27 41 1
233-42	Knob	8 11 1	237-122	O-Ring	17 12 1
233-42	Knob	6 21 1	237-146	O-Ring	27 29 2
237-7	O-Ring	13 76 4	237-156	O-Ring	77 11 10
237-21	O-Ring	76 3 5	237-166	O-Ring	54 17 1
237-21	O-Ring	68 8 6	237-166	O-Ring	20 25 2
237-21	O-Ring	73 22 4	240-2	Grommet	20 11 2
237-21	O-Ring	78 22 5	240-2	Grommet	20 11 3
237-21	O-Ring	65 39 2	240-5	Grommet	78 12 5
237-22	O-Ring	27 7 1	240-5	Grommet	65 17 4
237-22	O-Ring	3 10 10	240-7	Grommet	55 61 1
237-22	O-Ring	65 10 2	240-11	Grommet	18 15 3
237-22	O-Ring	78 20 3	240-11	Grommet	16 29 3
237-22	O-Ring	20 33 1	242-50	Nut - Lug	62 35 10
237-22	O-Ring	76 36 1	249-40	Keeper	1 9 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
2410-18	Plug	18 9 1	322-3	Screw - HH	12 11 3
2410-42	Cap - Bumper	33 38 2	322-4	Screw - HH	69 54 1
2410-42	Cap - Bumper	33 38 4	322-5	Screw - Cap Hex. Hd.	13 59 1
2410-64	Button - Plug	34 53 3	322-6	Screw - Cap Hex. Hd.	9 30 1
2411-36	Bearing - Rod End	6 3 2	322-6	Screw - Cap Hex. Hd.	4 53 3
2411-36	Bearing - Rod End	27 22 1	322-6	Screw - HH	66 46 1
2411-45	Joint - Ball, RH	63 48 1	322-7	Screw - Cap Hex. Hd.	66 56 3
2411-46	Joint - Ball, LH	62 48 1	322-7	Screw - HH	78 30 2
2412-3	Clamp - Hose	33 4 2	322-7	Screw - HH	3 41 1
2412-3	Clamp - Hose	35 13 4	322-9	Screw - HH	34 55 1
2412-36	Clamp - Drain	18 11 1	323-4	Screw - Cap Hex. Hd.	7 6 2
2412-36	Clamp - Hose	33 7 1	323-6	Screw - Cap Hex. Hd.	54 1 2
2412-36	Clamp - Hose	52 34 4	323-6	Screw - Cap Hex. Hd.	66 54 2
2412-93	Clamp-R	7 21 1	323-7	Screw - Cap Hex. Hd.	6 10 1
2412-93	R-Clamp	21 39 2	323-7	Screw - Cap Hex. Hd.	27 37 2
2412-96	Clamp - R	6 49 1	323-9	Screw - Cap Hex. Hd.	6 5 1
2412-96	Clamp	69 53 1	325-4	Screw - Cap Hex. Hd.	54 22 2
2412-96	Clamp-R	73 16 1	325-5	Screw - Cap Hex. Hd.	33 40 2
2412-96	Clamp-R (Europe)	34 52 1	325-20	Screw - Cap Hex. Hd.	62 1 2
2412-108	Clamp - Hose	18 3 4	325-33	Screw - Cap Hex. Hd. 2WD	55 56 2
2412-108	Clamp - Hose	52 16 3	325-33	Screw - Cap Hex. Hd. 4WD	55 56 4
2412-108	Clamp - Hose	35 26 2	328-7	Screw - Cap Hex. Hd.	68 24 4
2412-111	Clamp	16 23 1	3210-5	Screw - Cap Hex. Hd.	62 46 2
2412-111	Clamp - Hose	27 39 2	3212-4	Screw	7 8 2
2412-122	Assembly - Clamp	63 50 2	3213-14	Screw - HH (Europe)	63 65 6
2412-125	Clamp - Hose	33 12 1	3213-14	Screw - HH (Europe)	55 70 6
2412-125	Clamp - Hose	35 30 1	3217-5	Nut	31 28 1
2412-125	Clamp - Hose	52 38 2	3217-6	Nut - Jam	76 29 1
2412-126	Clamp-R	13 60 1	3217-6	Nut - Jam	9 32 1
2412-129	Clamp - Hose	36 8 8	3217-25	Nut	13 65 2
2412-129	Clamp - Hose	52 27 2	3217-26	Nut	12 23 1
2412-129	Clamp - Hose	39 36 4	3217-29	Nut - Hex.	13 *67 6
2412-129	Clamp - Hose	35 39 4	3218-4	Nut - Jam	20 27 2
2412-133	Clamp-R	7 17 2	3219-14	Nut - Hex.	13 *69 8
2412-150	J-Clip	35 48 1	3219-14	Washer - Lock	3 26 3
254-72	Cup - Bearing	62 26 2	3220-3	Nut - Jam	6 2 3
254-92	Cone - Bearing	62 27 2	3220-3	Nut - Jam	27 15 1
254-106	Cone - Bearing	62 23 2	3220-3	Nut - Jam	31 46 1
254-107	Cup - Bearing	62 24 2	3220-7	Nut - Jam	62 37 2
256-42	Bushing	6 39 2	3220-11	Nut - Jam	63 61 1
256-172	Bushing	73 8 4	3220-24	Nut - Lock	12 19 1
256-172	Bushing	68 14 6	3230-2	Screw - Carriage	33 48 3
256-236	Bearing - Flange	6 28 4	3234-1	Screw	16 17 2
283-58	Pin - Clevis	6 32 2	3234-5	Screw - Flange	33 9 10
302-5	Fitting - Grease	70 1 1	3234-5	Screw - Flange Hd.	52 6 3
302-5	Fitting - Grease	71 1 1	3234-7	Screw	3 15 2
302-5	Fitting - Grease	72 1 1	3234-7	Screw - (Europe)	2 56 3
302-5	Fitting - Grease	74 1 1	3234-11	Screw - Flange Head	27 16 1
302-5	Fitting - Grease	75 1 1	3234-12	Screw - Hex. Hd. Flange	62 14 2
302-5	Fitting - Grease	73 36 6	3234-14	Screw - Flange	2 37 10
302-5	Fitting - Grease	62 41 1	3234-17	Screw - Flange Hd.	76 32 4
302-5	Fitting - Grease	55 54 1	3250-29	Screw	7 12 4
302-5	Fitting - Grease	69 55 9	3250-31	Screw - Pan Hd.	12 28 2
302-11	Fitting - Grease	62 19 2	3253-2	Nut - Hex.	4 55 9
302-33	Fitting - Grease	55 63 1	3253-2	Washer - Lock	13 *70 5
302-33	Fitting - Grease 90°	63 52 1	3253-3	Washer - Lock	76 34 3
302-60	Fitting - Grease	6 38 1	3253-3	Washer - Lock	31 66 1
302-60	Fitting - Grease 90°	54 42 1	3253-4	Washer - Lock	7 19 4
304-46	Fitting - Drain	18 12 1	3253-6	Washer - Lock	7 7 2
304-46	Nut - Drain Cock	33 17 1	3253-6	Washer - Lock	9 25 2
304-46	Valve - Drain Cock	16 35 3	3253-15	Washer - Lock	13 *66 2
321-15	Screw - HH	76 33 3	3253-15	Washer - Lock	18 19 5
321-39	Screw - Cap Hex. Hd.	13 57 2	3253-33	Washer - Lock	9 31 1
322-3	Screw - Cap Hex. Hd.	7 18 2	3254-1	Washer - Lock	12 24 1
322-3	Screw - Cap Hex. Hd.	6 27 9	3254-6	Washer - Lock	12 18 1
322-3	Screw - Cap Hex. Hd.	2 32 4	3255-8	Washer - Lock	3 37 1
322-3	Screw - HH	17 1 3	3255-9	Washer - Lock, Ext. Tooth	52 4 2
322-3	Screw - HH	8 9 8	3255-19	Washer - Lock	13 *75 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3255-24	Washer - Lock, Ext. Tooth	13 *68 3	3290-378	Tie - Cable	66 44 6
3256-1	Washer	13 37 3	3290-378	Tie - Cable	6 48 1
3256-1	Washer - Flat	3 32 2	3290-378	Tie - Cable	68 50 3
3256-1	Washer - Flat	2 48 3	3290-378	Tie - Cable	35 52 2
3256-3	Washer - Flat	2 33 4	3290-461	Washer - Belleville	6 24 1
3256-5	Washer - Flat	9 4 1	3290-467	Pin - Cotter, Hair	8 6 1
3256-5	Washer - Flat	6 44 1	3290-467	Pin - Cotter, Hair	1 19 2
3256-14	Washer - Flat	12 26 2	3290-489	Knob - Control, Lift	12 29 1
3256-14	Washer - Flat	3 27 2	3296-2	Nut - Lock	12 14 1
3256-22	Washer - Flat	6 8 2	3296-23	Nut - Lock	54 11 2
3256-22	Washer - Flat	3 40 4	3296-23	Nut - Lock	33 37 4
3256-23	Washer - Flat	12 12 4	3296-23	Nut - Lock	33 46 2
3256-23	Washer - Flat	78 32 4	3296-29	Nut - Lock	7 1 5
3256-23	Washer - Flat	7 2 8	3296-29	Nut - Lock	52 2 1
3256-23	Washer - Flat	65 7 8	3296-29	Nut - Lock	8 13 9
3256-23	Washer - Flat	8 14 4	3296-29	Nut - Lock	76 25 1
3256-23	Washer - Flat	3 38 6	3296-39	Nut - Lock	7 14 2
3256-23	Washer - Flat	33 49 3	3296-39	Nut - Lock	8 24 1
3256-24	Washer	9 5 1	3296-39	Nut - Lock	6 25 3
3256-24	Washer - Flat	8 21 3	3296-42	Nut - Lock	13 46 2
3256-24	Washer - Flat	6 4 2	3296-44	Nut - Lock	9 22 1
3256-24	Washer - Flat	31 13 4	3296-45	Nut - Lock	62 11 2
3256-26	Washer	55 65 1	3296-47	Nut - Lock	78 31 2
3256-26	Washer - Flat (Europe)	63 64 6	3296-47	Nut - Lock	3 36 1
3256-26	Washer - Flat (Europe)	55 69 6	3296-47	Nut - Lock	66 47 4
3256-26	Washer - Flat	3 2 2	3296-47	Nut - Lock	34 56 1
3256-26	Washer - Flat	9 24 2	3296-51	Nut - Lock	68 19 4
3256-27	Washer - Flat	33 47 2	3296-54	Nut - Lock	7 9 4
3256-29	Washer - Flat	54 12 1	3296-59	Nut - Lock	27 23 1
3256-29	Washer - Flat	62 12 1	32103-3	Nut - Wing	81 4 1
3256-42	Washer - Flat	69 61 2	32104-37	Screw - Hex. Hd.	65 6 2
3256-46	Washer - Flat	9 20 1	32104-76	Screw - Self Tapping	68 36 2
3256-46	Washer - Flat	27 42 2	32105-13	Screw - HH	13 42 4
3256-49	Washer - Flat	35 19 1	32120-8	Ring - Retaining	61 11 1
3256-56	Washer - Flat	33 16 3	32120-15	Ring - Retaining	54 24 2
3256-69	Washer - Flat	6 33 3	32120-93	Ring - Retaining	68 29 6
3256-77	Washer - Flat	31 44 8	32120-93	Ring - Retaining	73 34 2
3256-78	Washer - Flat	1 13 2	32121-6	Pin - Roll	6 11 1
3258-166	Screw	1 23 3	32121-11	Pin - Roll	6 41 1
3258-166	Screw	12 36 3	32121-16	Pin - Roll	6 34 1
3269-4	Rivet - Pop	33 35 4	32121-45	Pin - Roll	6 13 2
3269-10	Washer - Flat	1 15 2	32121-50	Pin - Roll	6 36 1
3269-13	Rivet - Pop	1 10 4	32122-24	Screw	18 20 5
3272-2	Pin - Cotter	6 9 2	32122-54	Screw - Machine Slot Hd.	81 1 1
3272-5	Pin - Cotter	3 4 3	32128-20	Nut - Flange	33 8 4
3272-7	Pin - Cotter	60 14 2	32128-20	Nut - Lock	6 26 9
3272-10	Pin - Cotter	3 3 1	32128-21	Nut - Hex. Hd. Flange	54 2 2
3272-10	Pin - Cotter	8 20 1	32128-21	Nut - Lock	66 55 2
3272-10	Pin - Cotter	6 37 2	32128-25	Nut - Lock	8 7 4
3272-12	Pin - Cotter	62 6 2	32128-26	Nut - Flange	9 21 4
3272-12	Pin - Cotter	55 49 2	32128-33	Nut - Flange	2 45 3
3272-13	Pin - Cotter	62 34 2	32128-33	Nut - Lock	13 55 3
3274-59	Screw - Cap	31 30 6	32136-14	Nut - Hex. Slotted	62 9 4
3274-81	Screw - Cap	31 45 8	32136-14	Nut - Hex. Slotted	54 48 2
3274-86	Screw - HSH	17 19 3	32144-10	Screw	8 26 2
3290-93	Screw - HH	12 7 4	32144-11	Screw - Self Tapping	73 17 1
3290-271	Rivet - Pop	33 3 2	32144-11	Screw - Thread Forming	20 17 5
3290-282	Rivet - Pop	35 50 1	32144-11	Screw Thread Forming	3 44 2
3290-307	Pin - Cotter, Hair	8 33 1	32144-14	Screw - Cap Hex. Hd.	6 18 2
3290-354	Plate - Nut	12 10 2	32144-14	Screw - Cap Hex. Hd.	68 40 3
3290-378	Tie - Cable	3 9 7	32144-18	Screw - Hex. Washer Hd.	13 50 2
3290-378	Tie - Cable	52 20 3	32144-73	Screw - HWHTF	17 15 2
3290-378	Tie - Cable	18 23 3	32148-7	Nut - Clinch	1 4 5
3290-378	Tie - Cable	73 24 2	32148-10	Nut - Clinch	33 14 2
3290-378	Tie - Cable	78 27 1	32151-10	Ring - Retaining	62 16 2
3290-378	Tie - Cable	8 31 2	32151-36	Ring - Retaining	73 18 4
3290-378	Tie - Cable	21 41 3	32151-61	Ring - Retaining	73 13 4
3290-378	Tie - Cable	13 44 2	32151-72	Retainer - Push On	33 28 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
32151-96	Ring - Retaining	54 14 1	340-18	Fitting - Hydraulic 90°	20 34 1
32151-104	Ring - Retaining	62 40 1	340-65	O-Ring	21 *53 6
32151-104	Ring - Retaining	54 43 2	340-65	O-Ring	27 32 2
32152-5	Nut - Lock	63 49 2	340-68	Fitting - Hydraulic, Tee	78 23 1
32152-10	Nut	74 3 1	340-68	Fitting - Tee, Bulkhead	3 45 1
32152-10	Nut	75 3 1	340-70	Nut - Bulkhead	65 11 7
32152-10	Nut - Lock	61 2 1	340-70	Nut - Bulkhead	78 13 2
32152-10	Nut - Lock	64 2 1	340-70	Nut - Lock	54 26 2
32152-10	Nut - Lock	70 3 1	340-70	Nut - Lock, Bulkhead	3 46 4
32152-10	Nut - Lock	71 3 1	340-70	Nut - Lock, Bulkhead	63 57 2
32152-10	Nut - Lock	72 3 1	340-74	Nut - Bulkhead	33 31 2
33004-00	Nut - Hex. Flange	35 44 2	340-77	Fitting - Hydraulic 90°	27 6 1
33005-00	Nut - Hex. Flange	35 1 9	340-92	Fitting - Hydraulic	76 4 4
33005-00	Nut - Hex. Flange	18 5 2	340-92	Fitting - Hydraulic	68 7 1
33005-00	Nut - Hex. Flange	52 48 2	340-92	Fitting - Hydraulic	78 25 5
33023-00	Nut - Lock	52 32 1	340-92	Fitting - Hydraulic	73 26 2
33024-00	Nut	69 60 1	340-97	Fitting - Hydraulic 90°	55 52 2
33024-00	Nut - Lock	80 8 5	340-97	Fitting - Hydraulic 90°	62 43 2
33025-00	Nut	73 9 2	340-97	Fitting - Hydraulic 90°	62 43 2
33025-00	Nut	68 18 6	340-98	Fitting - Hydraulic 90°	78 5 10
33093-00	Washer	52 31 1	340-98	Fitting - Hydraulic 90°	65 28 1
33103-020	Screw - HHF	4 56 2	340-98	Fitting - Hydraulic 90°	21 46 1
33103-020	Screw - Hex. Hd. Flange	52 26 1	340-103	Fitting - Hydraulic 45°	73 21 1
33103-025	Screw - HHF	3 35 1	340-105	Fitting - Hydraulic 90°	27 9 2
33104-010	Screw - HH	73 39 4	340-117	Cap - Fitting	4 48 1
33104-016	Screw - Hex. Hd. Flange	76 27 4	340-126	Nut - Bulkhead	54 8 3
33104-016	Screw - Hex. Hd. Flange	52 43 2	340-127	Nut - Bulkhead	20 6 1
33104-020	Screw - HHF (Europe)	34 51 3	340-127	Nut - Bulkhead	78 10 5
33104-020	Screw - Hex. Hd. Flange	35 35 2	340-127	Nut - Bulkhead	65 19 4
33104-025	Screw - Hex. Hd. Flange	65 13 4	340-128	Nut - Bulkhead	20 13 2
33104-030	Screw - HHF	80 5 5	340-128	Nut - Bulkhead	20 13 3
33104-060	Screw - HH	69 56 1	340-129	Fitting - Hydraulic 90°	27 30 1
33105-025	Screw - Hex. Hd. Flange	18 13 3	340-129	Fitting - Hydraulic 90°	27 31 1
33105-025	Screw - Hex. Hd. Flange	16 28 3	340-132	Fitting - Hydraulic 90°	68 11 5
33105-030	Screw - Hex. Hd. Flange	18 2 2	340-132	Fitting - Hydraulic 90°	76 11 1
33105-030	Screw - Hex. Hd. Flange	33 2 2	340-132	Fitting - Hydraulic 90°	65 25 2
33105-030	Screw - Hex. Hd. Flange	35 8 6	340-132	Fitting - Hydraulic 90°	73 28 1
33105-030	Screw - Hex. Hd. Flange	52 14 2	340-139	Fitting - Elbow 90°	16 14 1
33105-035	Screw - Flange	2 54 2	340-139	Fitting - Hydraulic 90°	76 21 1
33105-040	Screw - HH	69 58 2	340-142	Fitting - Hydraulic 90°	16 19 1
33105-040	Screw - HHF	73 30 2	340-142	Fitting - Hydraulic 90°	54 21 1
33105-070	Screw - Hex. Hd. Flange	35 7 3	340-142	Fitting - Hydraulic 90°	20 23 4
33106-030	Screw - Hex. Hd. Flange	20 21 12	340-148	Fitting - Tee	65 32 1
33106-035	Screw - HHF	80 1 3	340-154	Fitting - Hydraulic 90°	65 4 2
33106-035	Screw - HHF	1 6 8	340-157	Fitting - Tee	16 32 1
33106-090	Screw - Hex. Hd. Flange	20 36 8	340-161	Fitting - Adapter	65 3 1
33108-025	Screw - Hex. Hd. Flange	33 1 2	353-508	Plug	54 39 1
33108-035	Screw	1 25 6	353-989	Plug	67 11 5
33116-120	Screw - Hex. Hd.	21 37 4	353-989	Plug	77 14 5
340-2	Adapter	3 11 4	353-990	Plug	67 4 4
340-2	Adapter	54 37 1	353-990	Plug	77 5 10
340-2	Adapter	16 37 1	353-991	Plug	67 6 4
340-2	Adapter - Hydraulic	76 23 1	353-991	Plug	77 12 10
340-4	Fitting - Hydraulic	76 17 4	354-77	Fitting - Quick Connect	27 2 4
340-4	Fitting - Hydraulic	65 29 1	354-77	Fitting - Quick Connect	76 14 1
340-5	Fitting - Hydraulic	21 40 2	354-77	Fitting - Quick Connect	65 23 1
340-9	Fitting - Hydraulic	16 11 1	354-79	Cap - Dust	27 1 4
340-9	Fitting - Hydraulic	54 18 1	354-79	Cap - Fitting	76 15 1
340-15	Fitting - Hydraulic 90°	27 30 1	354-79	Cap - Fitting	65 24 1
340-17	Fitting - Hydraulic 90°	27 28			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 6500D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the operator's platform. In any correspondence concerning the Reelmaster 6500D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 6500D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame & Body Assembly	1–2	Collector Assembly	45
Steering Tower Assembly	3–4	Water Pump Assembly	46
Steering Control Valve Asm. 94–9950	5	Fuel Injection Pump Assembly	47
Traction & Brake Pedal Assembly	6	Fuel Injector Assembly	48
Seat Frame & Throttle Assembly	7–8	Alternator Assembly	49
Seat Suspension Assembly	9	Starter Assembly	50
Diagnostic – ACE Display Assembly	10	Glow Plug & Glow Relay	51
Electrical Schematic	11	Engine Components Assembly	52
Control Console Assembly	12–13	Air Cleaner Assembly No. 93–7485	53
Hydraulic Schematic Model 03800	14	4–WD Axle Assembly (Model No. 03801)	54–55
Hydraulic Schematic Model 03801	15	Sleeve Assembly (Model No. 03801)	56
Leak Detector, Filter & Reservoir Assembly	16	Axle Housing Assembly (Model No. 03801)	57
Leak Detector Assembly No. 94–2650	17	Differential & Shaft Assembly (Model No. 03801)	58
Fuel Tank & Filter Assembly	18	Steering Gear Case Asm. (Model No. 03801)	59
Fuel Filter Assembly	19	Steering Arm Linkage (Model No. 03801)	60
Front Hydraulic Drive & Brake Assembly	20–21	Hydraulic Cylinder No. 94–8141	61
Planetary Drive Assembly No. 92–7415	22	2–WD Rear Axle Assembly (Model No. 03800)	62–63
Brake Asm. No. 92–7414 RH & 92–7417 LH	23	Hydraulic Cylinder No. 94–8142	64
Hydraulic Motor Assembly No. 92–7385	24	Rear Hydraulic Control Block & Tubes	65–66
Hydraulic Motor Asm. No. 93–7476 W/Sensor	25	Manifold Assembly No. 92–7419	67
4–WD Hydraulic Motor Asm. No. 92–7386	26	Front Lift Arms Assembly	68–69
Pump Installation Assembly	27	Hydraulic Cylinder No. 93–7555	70
Gear Pump Assembly No. 93–2175	28–29	Hydraulic Cylinder No. 93–7551	71
Servo Controlled Piston Pump Asm. No. 92–7383	30–31	Hydraulic Cylinder No. 93–2650	72
Manual Servo Control No. 94–3019	32	Rear Lift Arm Assembly	73
Radiator & Shroud Assembly	33–34	Hydraulic Cylinder No. 93–7420	74
Engine Installation Assembly	35	Hydraulic Cylinder No. 93–7421	75
Crankcase Assembly	36	Front Hydraulic Control Block & Hoses	76
Crankshaft Assembly	37	Control Block Assembly No. 92–7418	77
Cylinder Head Assembly	38–40	Reel Motor & Hoses	78
Camshaft & Fan Support Assembly	41	Reel Motor Assembly No. 92–7387	79
Timing Cover	42	Roll Over Protection System (ROPS)	80
Intake & Exhaust Manifold Assembly	43	Gauge Bar & Backlapping Brush Assemblies	81
Oil Pump Assembly	44	Numerical Parts Index	82–95