



Replacement Hood Kit

XLS Lawn Tractor

Model No. 121-4011

Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
Traction bracket link arm	1	Install motion control link kit
Front motion control link arm	1	
Rear motion control link arm	1	
Flat washer	2	
Hairpin cotter	2	
Shoulder bolt	1	
Pivot washer	1	
Locknut (5/16 inch)	1	



1. Stop the engine, wait for all moving parts to stop, and remove the ignition key.
2. Remove the exiting motion control link arm (). Save the existing clevis pin, hairpin cotter and E-clip.

Note: E-clip is spring loaded.

Figure 1

1. Post
 2. Existing E-clip
 3. Existing motion control link arm
 4. Existing clevis pin
 5. Existing hairpin cotter
-

3. Install the traction bracket link arm using the locknut (5/16 inch), pivot washer and shoulder bolt ().

Figure 2

1. Locknut (5/16 inch)
 2. Pivot washer
 3. Traction bracket link arm
 4. Shoulder bolt
-

4. Install the rear motion control link arm using the flat washer and hairpin cotter \emptyset supplied with this kit and the existing E-clip from step 2.

Figure 3

- | | |
|-------------------|---------------------------------|
| 1. Hairpin cotter | 5. Rear motion control link arm |
| 2. Flat washer | 6. Traction bracket link arm |
| 3. Post | 7. Hole nearest outer edge |
| 4. E-clip | |
-

5. Install the front motion control link arm to the traction bracket link arm using the flat washer and hairpin cotter \emptyset .
6. Install the other end of the front motion control link arm and adjust the yoke as noted in .

Note: Use the existing clevis pin and the hairpin cotter from step 2.

Figure 4

- | | |
|----------------------------------|--|
| 1. Hairpin cotter | 6. Existing clevis pin |
| 2. Flat washer | 7. Existing hairpin cotter |
| 3. Rear motion control link arm | 8. Frame |
| 4. Traction bracket link arm | 9. 10.59 inches to 10.64 inches (26.91 cm to 27.04 cm) |
| 5. Front motion control link arm | |
-