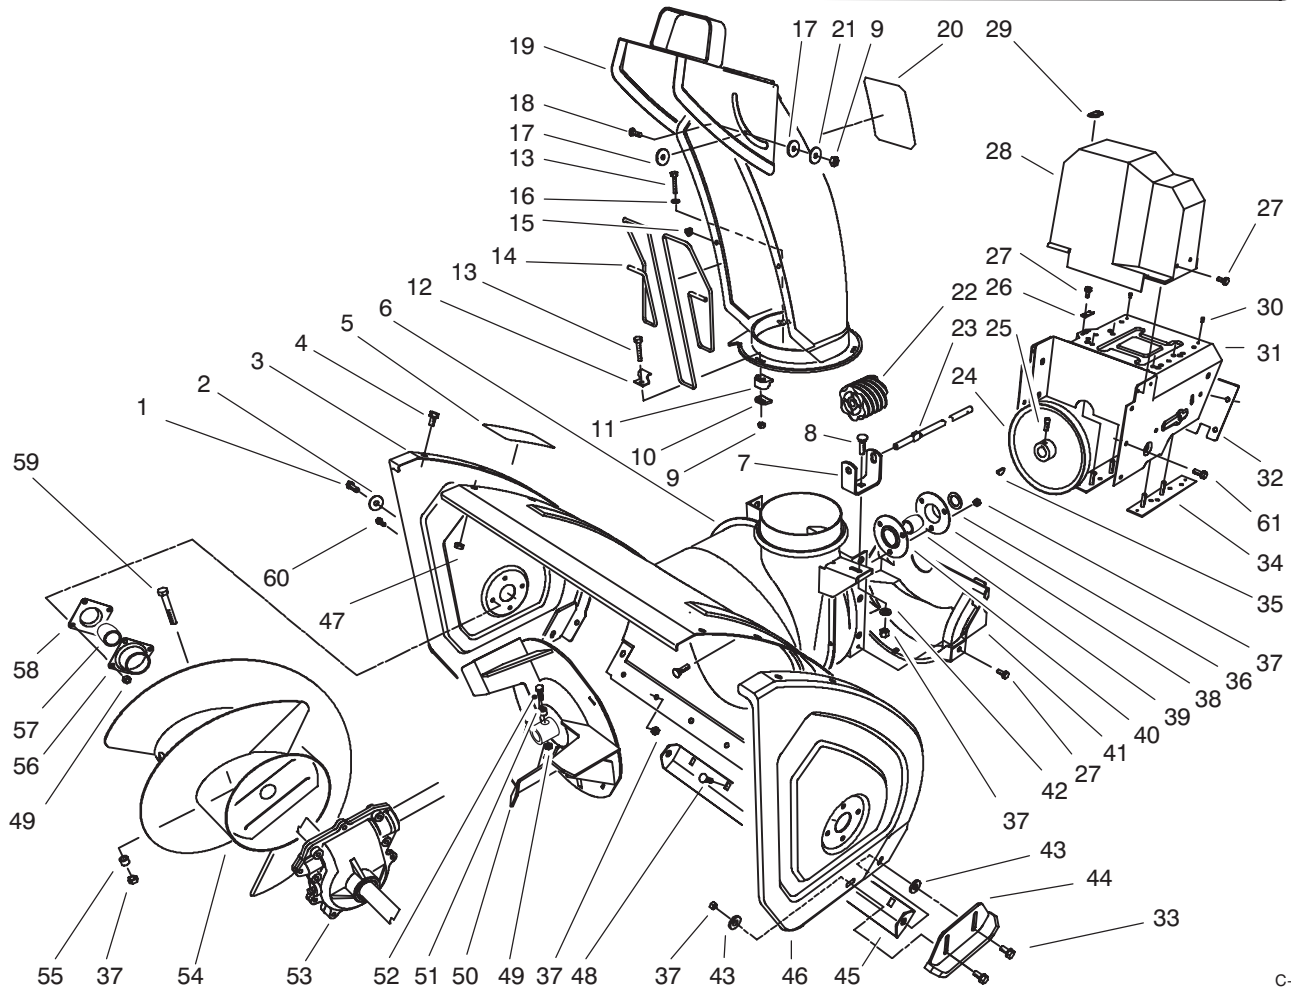 


TORO®
MODEL NO. 38540-7900001 & UP
MODEL NO. 38543-7900001 & UP
PARTS
CATALOG
824 POWER SHIFT®
SNOWTHROWER


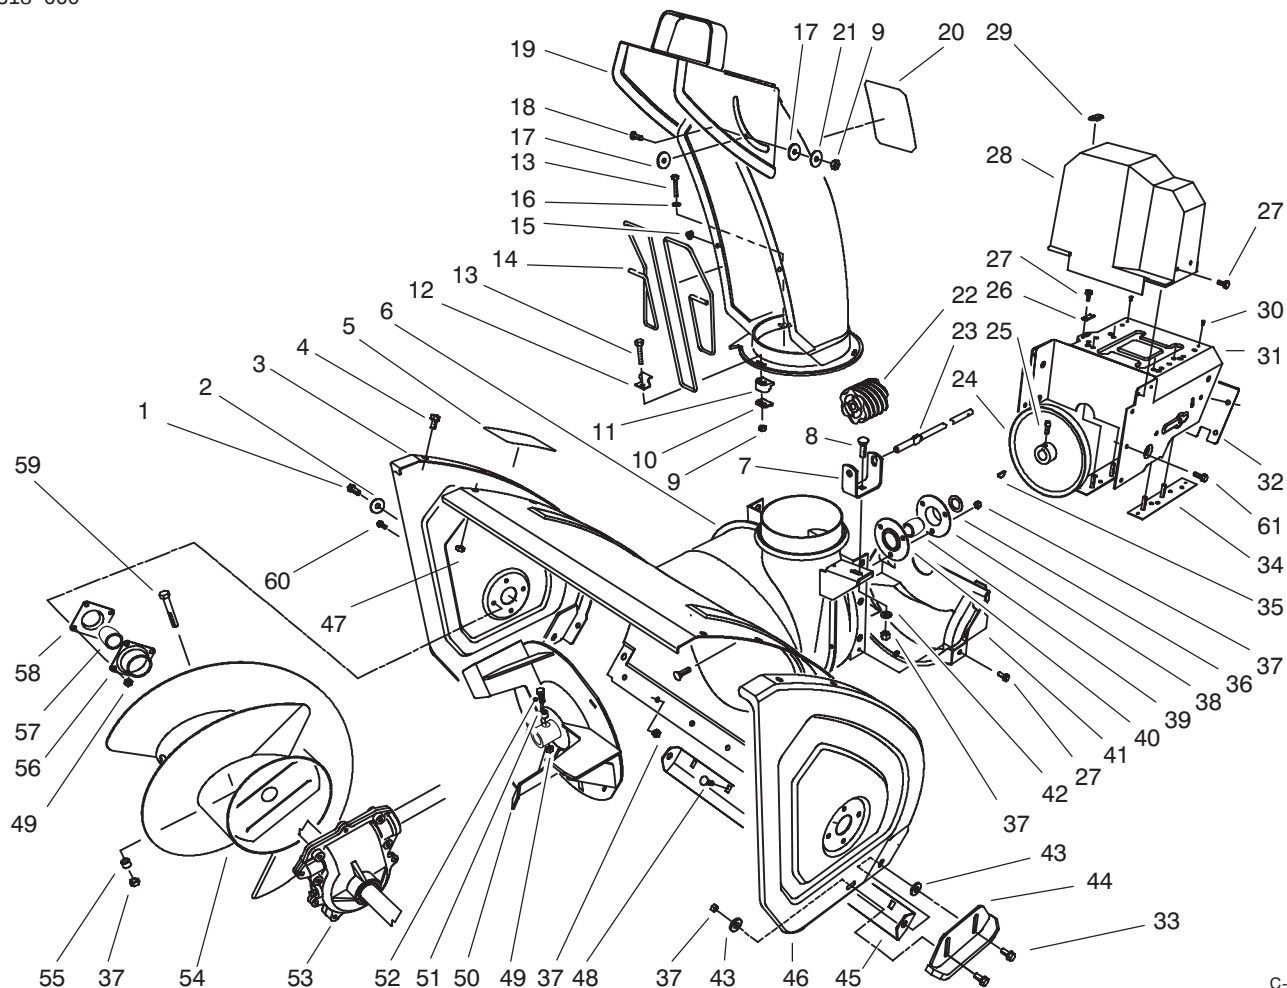 
C-0045

HOUSING & CHUTE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Hex. Hd.	2
2	3-0750	Washer - Retaining	2
3	66-7821	Plate - Side R.H.	1
4	3234-28	Screw - Hex. Flange Hd.	12
5	53-7670	Decal - Danger Auger	1
*	94-2568	Decal - Danger Auger Model No. 38540	1
6	62-0720	Housing - 24"	1
7	63-2180	Bracket - Gear	1
8	3230-2	Bolt - Carriage	1
9	3296-2	Nut - Lock	4
10	63-2670	Plate - Chute Retainer	3
11	62-1430	Retainer - Chute	3
12	63-3130	Clip - Chute Guard	1
13	3274-13	Screw - Machine	3
14	63-3020	Guard - Chute	1
15	3290-326	Nut - Push	2

Ref. No.	Part No.	Description	No. Used
16	3256-14	Washer - Flat	1
17	63-2900	Washer - Plastic	2
18	32122-32	Screw	1
19	62-0840	Chute Assembly	1
20	94-8079	Decal - Danger Chute	1
*	94-2559	Decal - Danger Chute Model 38540	1
21	3256-61	Washer - Flat	1
22	62-0820	Gear - Worm	1
23	62-1720	Rod - Chute Gear	1
24	62-1300	Pulley - Impeller	1
25	3242-4	Screw - Set Sq. Hd.	2
26	63-2300	Retainer - Cable	1
27	32144-4	Screw - Hex. Flange Hd.	5
28	63-2080	Cover - Belt (Upper)	1
29	63-3290	Cover - Cable	1
30	3269-23	Rivet	4

*Not Illustrated




C-0045

HOUSING & CHUTE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	66-6980	Frame -- Engine	1
32	62-1440	Cover -- Engine Frame	1
33	3234-5	Screw -- Hex.. Washer Hd.	4
34	68-4110	Plate -- Engine Stud L.H.	1
*	68-4100	Plate -- Engine Stud R.H.	1
35	3257-23	Key -- Woodruff	1
36	252-80	Washer -- Thrust	1
37	3296-29	Nut -- Lock	14
38	26-6110	Flange -- Bearing (Front)	1
39	63-3450	Bearing -- Impeller	1
40	26-6120	Flange -- Bearing (Rear)	1
41	68-8410	Cover -- Belt (Lower)	1
42	3256-23	Washer -- Flat	1
43	52-2861	Washer	4
44	74-1440	Skid Assembly	2
45	66-7762	Blade -- Scraper	1
46	66-7831	Plate -- Side L.H.	1
47	3296-47	Nut -- Lock	20

Ref. No.	Part No.	Description	No. Used
48	3230-23	Screw -- Carriage	9
49	3296-42	Nut -- Lock	10
50	66-7910	Impeller	1
51	66-8010	Spacer	2
52	321-44	Screw -- Hex. Hd.	2
53	74-1560	Auger Gearbox Assembly	1
54	68-7450	Auger -- R.H.	1
*	68-7460	Auger -- L.H.	1
55	25-5090	Spacer -- Auger Hub	2
56	20-0990	Flange -- Bearing (Inner)	2
57	20-0980	Bearing -- Auger	2
58	20-1000	Flange -- Bearing (Outer)	2
59	322-12	Bolt -- Auger	2
60	321-3	Screw -- Hex. Hd.	8
61	3234-7	Screw	6
*	12-8789	Impeller Bearing Assembly (Incl. Ref. #38-40)	1

 *Not Illustrated

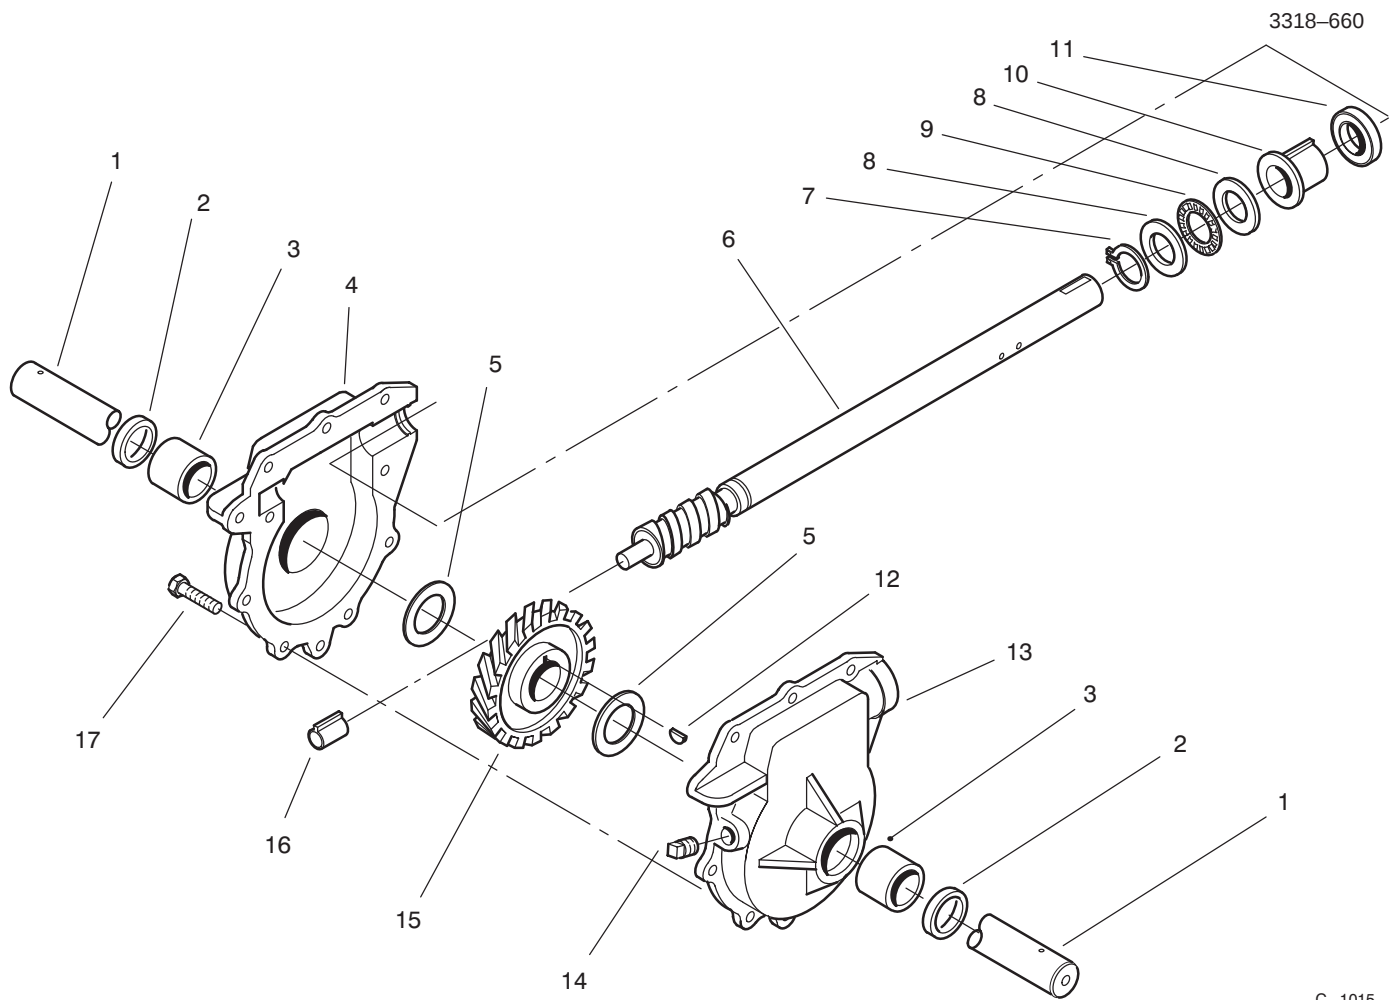


C-1015

24" AUGER GEARCASE ASSEMBLY NO. 74-1560

Ref. No.	Part No.	Description	No. Used
1	62-1530	Shaft - Auger 24"	1
2	7-0045	Seal - Oil	2
3	256-237	Bushing - Sleeve	2
4	74-1550	Gearcase Assembly - R.H. (Incl. Ref. # 2-3)	1
5	252-71	Bearing - Thrust	2
6	66-7811	Shaft - Impeller	1
7	32151-33	Ring - Snap	1
8	252-78	Washer - Thrust	2
9	252-76	Bearing - Thrust	1

Ref. No.	Part No.	Description	No. Used
10	37-6560	Bushing - Input	1
11	253-149	Seal - Input	1
12	3257-10	Key - Woodruff	1
13	74-1540	Gearcase Assembly - L.H. (Incl. Ref. # 2-3, & 17)	1
14	281-1	Plug - Pipe Sq. Hd.	1
15	62-0120	Gear - Helical	1
16	62-1150	Bushing - Worm	1
17	32144-110	Screw - Hex. Washer Hd.	9
*	505-129	Sealant - 100g Tube	1

 *Not Illustrated

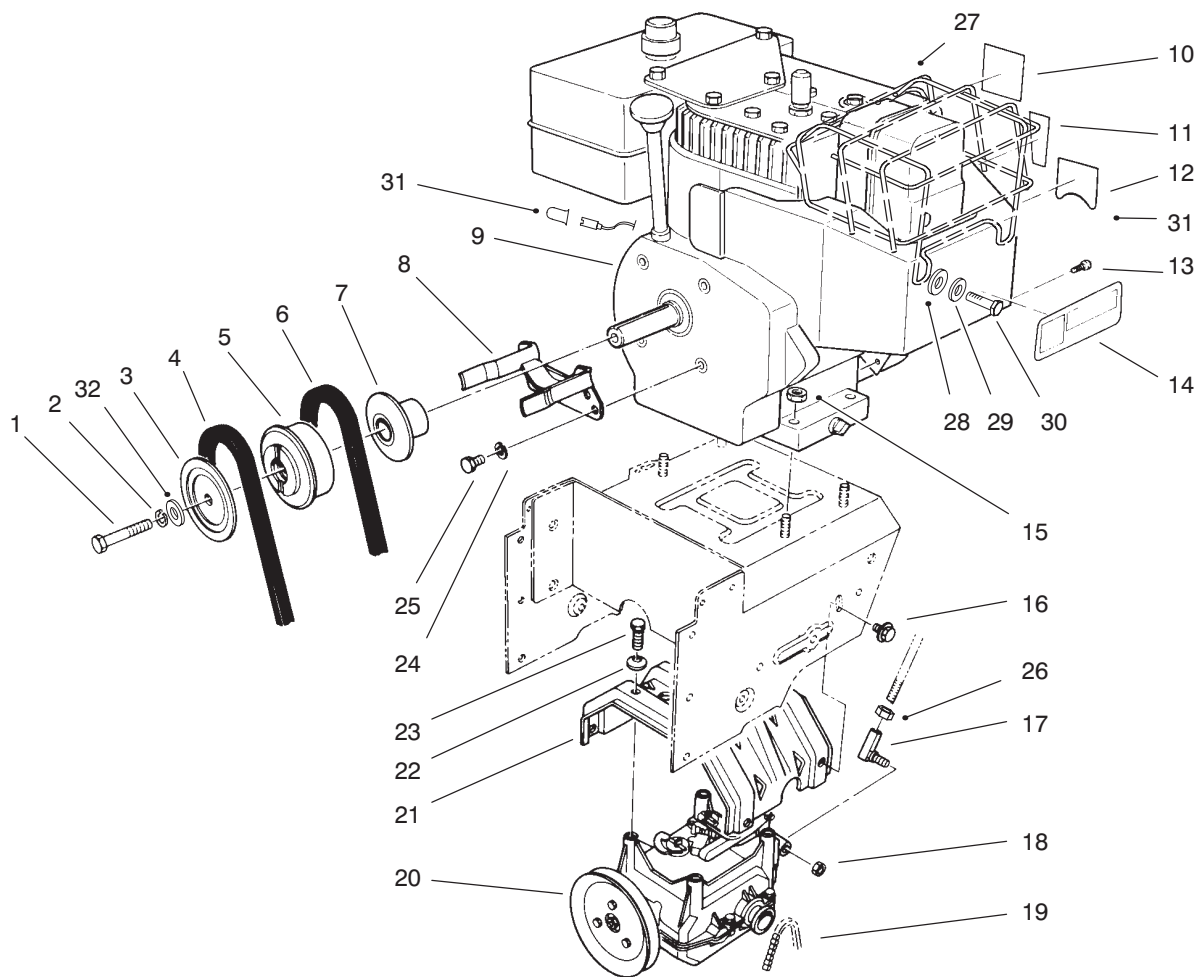

C-1727


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3212-8	Screw — Hex. Hd.	1
2	3253-6	Washer — Lock	1
3	62-0940	Sheave Half — Impeller	1
4	63-2961	Belt — Impeller	1
5	62-0930	Hub — Sheave	1
6	63-2951	Belt — Traction	1
7	62-0920	Sheave Half — Traction	1
8	68-7510	Guide — Belt	1
†9		Engine	1
10	94-2572	Decal — Primer	1
11	63-2450	Decal — Throttle	1
12	63-2410	Decal — Choke	1
13	32144-4	Screw	1
14	93-1265	Decal — Hot Surface (Model 38543 Only)	1
14	66-6840	Decal — Hot Surface (Model 38540 Only)	1
15	32128-20	Nut — Lock	4
16	3234-7	Screw — Hex. Flange Hd.	4
17	78-2920	Joint— Ball	1

Ref. No.	Part No.	Description	No. Used
18	3296-6	Nut — Lock	1
19	63-2940	Chain — Drive	1
20	66-8030	Transmission Assembly	1
21	63-2990	Frame — Transmission	1
22	3290-461	Washer — Belleville	4
23	11-0590	Screw — Hex. Hd.	4
24	3253-4	Washer — Lock	2
25	3210-1	Screw — Hex. Hd.	2
26	3220-3	Nut — Jam	1
†27	127-20	Guard — Muffler (Model 38543 Only)	1
†28	32-251-1	Washer — Flat (Model 38543 Only)	2
†29	36-180	Washer — Lock (Model 38543 Only)	2
†30	42-671	Screw — Self Tapping (Model 38543 Only)	2
31	94-2782	Cap — Wire	1
32	3256-41	Washer	1

*Not Illustrated

 
†Obtain from your local Tecumseh Dealer.

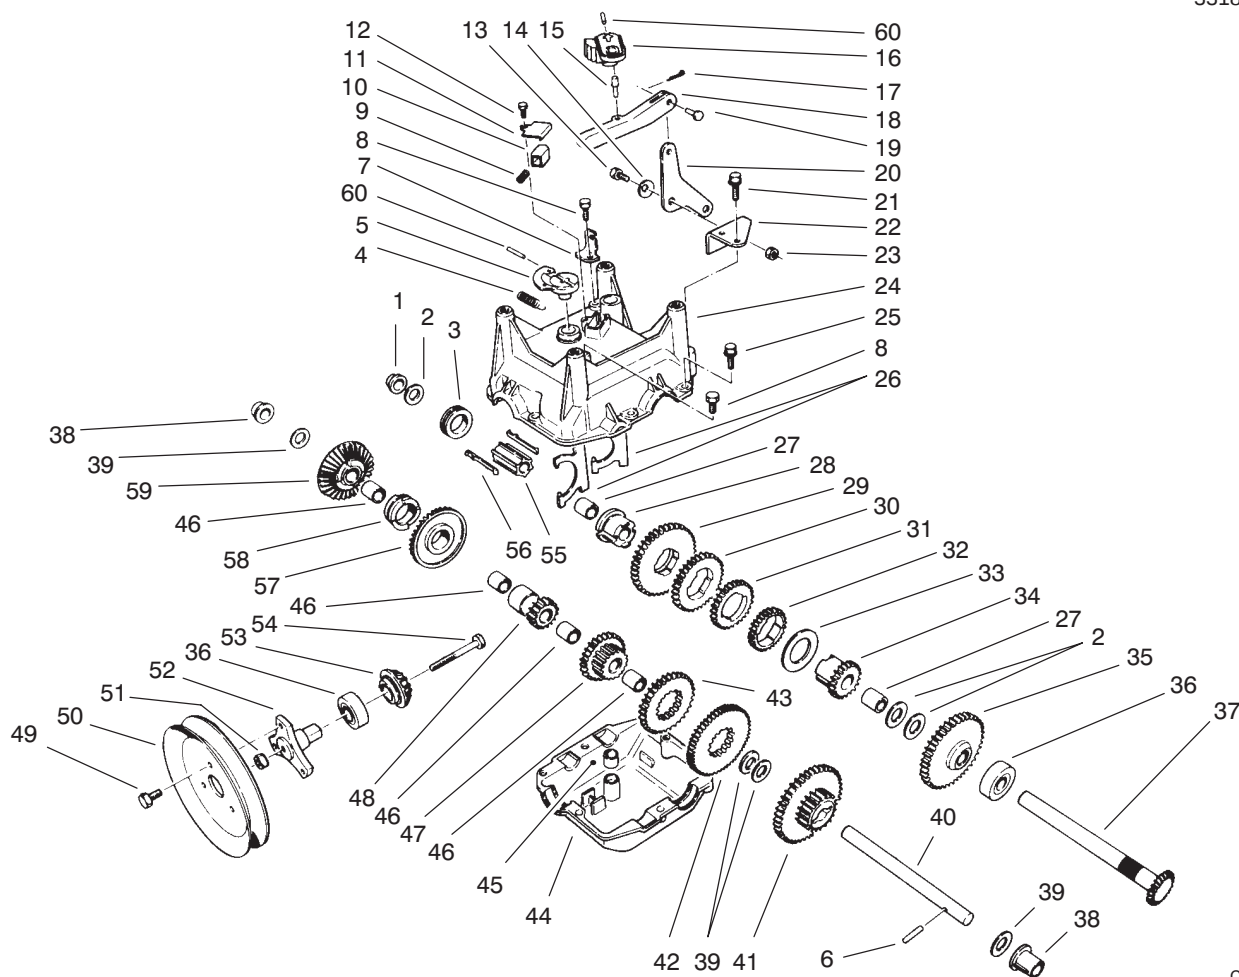

C-1736

TRANSMISSION ASSEMBLY NO. 66-8030

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-1180	Bushing - Output (Flange)	1	22	62-1190	Bracket - Bellcrank	1
2	252-59	Washer - Thrust	3	23	3296-42	Nut - Lock	1
3	62-0430	Collar - Shift (Speed)	1	24	62-0490	Gear Case - Upper	1
4	63-2920	Spring - Extension (F/R Return)	1	25	32144-86	Screw - Hex. Washer Hd.	6
5	62-0880	Lever - Direction Shift	1	26	62-1040	Yoke-Shift	2
6	32121-106	Pin - Coil	3	27	62-1350	Bushing - Output	2
7	62-1740	Bracket - Cable	1	28	62-0320	Sleeve	1
8	32144-4	Screw - Self Tapping	2	29	62-0240	Gear - 45T	1
9	63-2890	Spring - Compression (Detent)	1	30	62-0220	Gear - 34T	1
10	62-1020	Button - Detent	1	31	62-0200	Gear - 27T	1
11	62-1690	Cover - Detent	1	32	62-0250	Gear - 29T	1
12	32104-71	Screw - Pan Hd.	1	33	63-2280	Washer - Thrust	1
13	63-3410	Bolt - Shoulder	1	34	62-0340	Sleeve - Gear 19T	1
14	3290-477	Washer - Curved	1	35	62-0370	Gear - 41T	1
15	63-2190	Pin - Gearshift Link	1	36	38-7820	Bearing - Ball	2
16	62-0870	Lever - Gear Shift	1	37	62-1080	Shaft - Output	1
17	3272-1	Pin - Cotter	1	38	62-1170	Bushing - Flange	2
18	62-0860	Link - Gearshift	1	39	257-10	Washer - Thrust	4
19	283-3	Pin - Clevis	1	40	62-0330	Shaft - Intermediate	1
20	63-2600	Bellcrank	1	41	62-0360	Gear - Compound 19T/41T	1
21	32104-95	Screw - Hex. Washer Hd.	2	42	62-0260	Gear - 51T	1
				43	62-0210	Gear - 33T	1
				44	62-0480	Gear Case - Lower	1

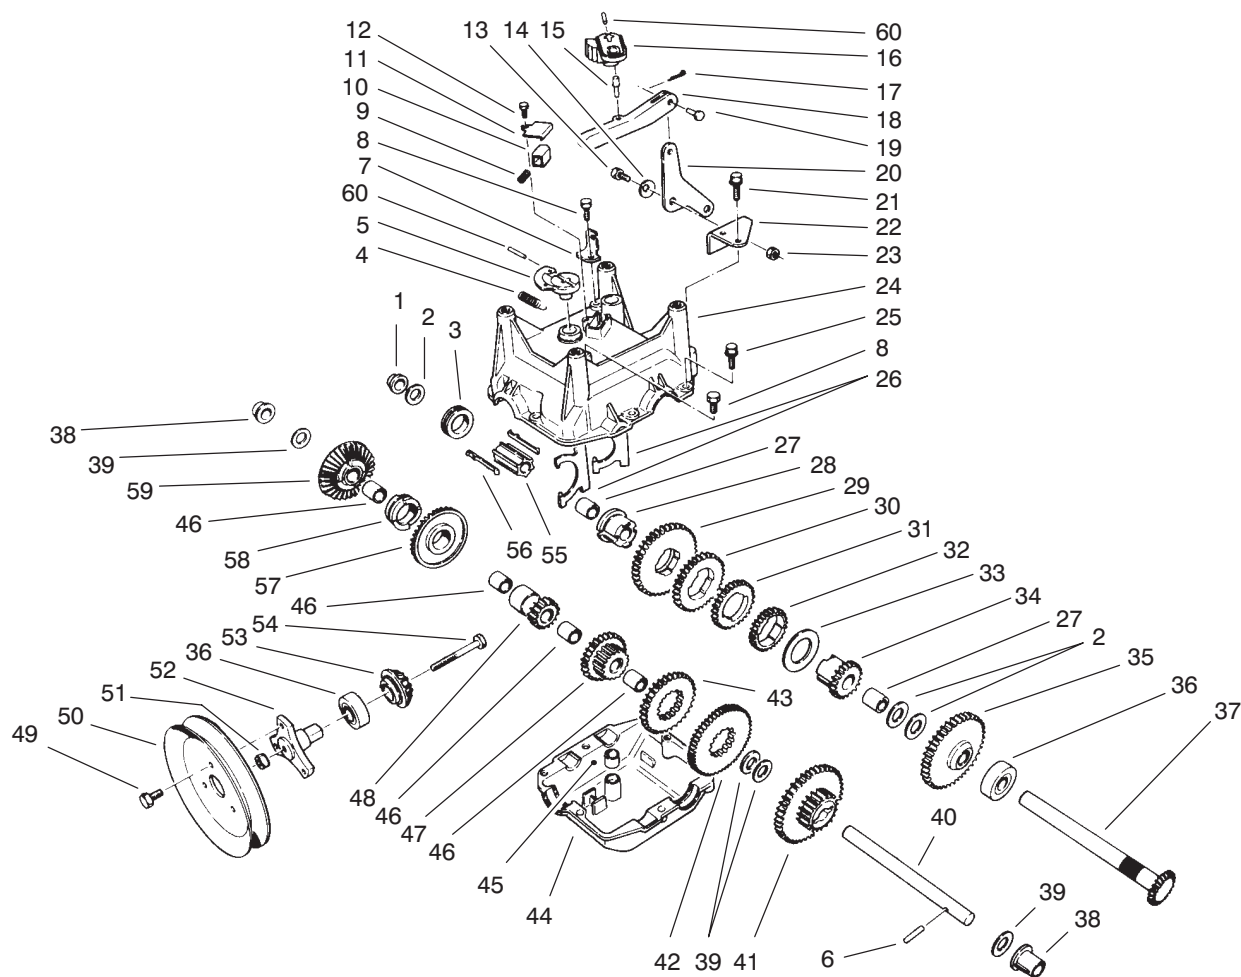 


TRANSMISSION ASSEMBLY NO. 66-8030 (Continued)

Ref. No.	Part No.	Description	No. Used
45	29-9570	Bushing - Yoke	1
46	62-1160	Bushing - Intermediate	4
47	68-4310	Gear - 26T	1
48	62-0500	Gear - 15T	1
49	12-3270	Screw	3
50	62-1310	Pulley - Traction	1
51	32128-32	Nut - Flange Lock	1
52	62-0380	Hub - Pulley	1
53	62-0350	Pinion - Bevel 19T	1

Ref. No.	Part No.	Description	No. Used
54	321-15	Screw - Hex. Hd.	1
55	68-4320	Sleeve - Shift	1
56	62-0310	Key - Shift	2
57	67-5870	Gear - Bevel 36T	1
58	67-5880	Collar - Shift	1
59	13-3559	Gear - Bevel Reverse 36T (Incl. Ref. #46)	1
60	32121-120	Roll - Pin	2
*	505-101	Grease - 14.5 oz. Cartridge	1

 *Not Illustrated

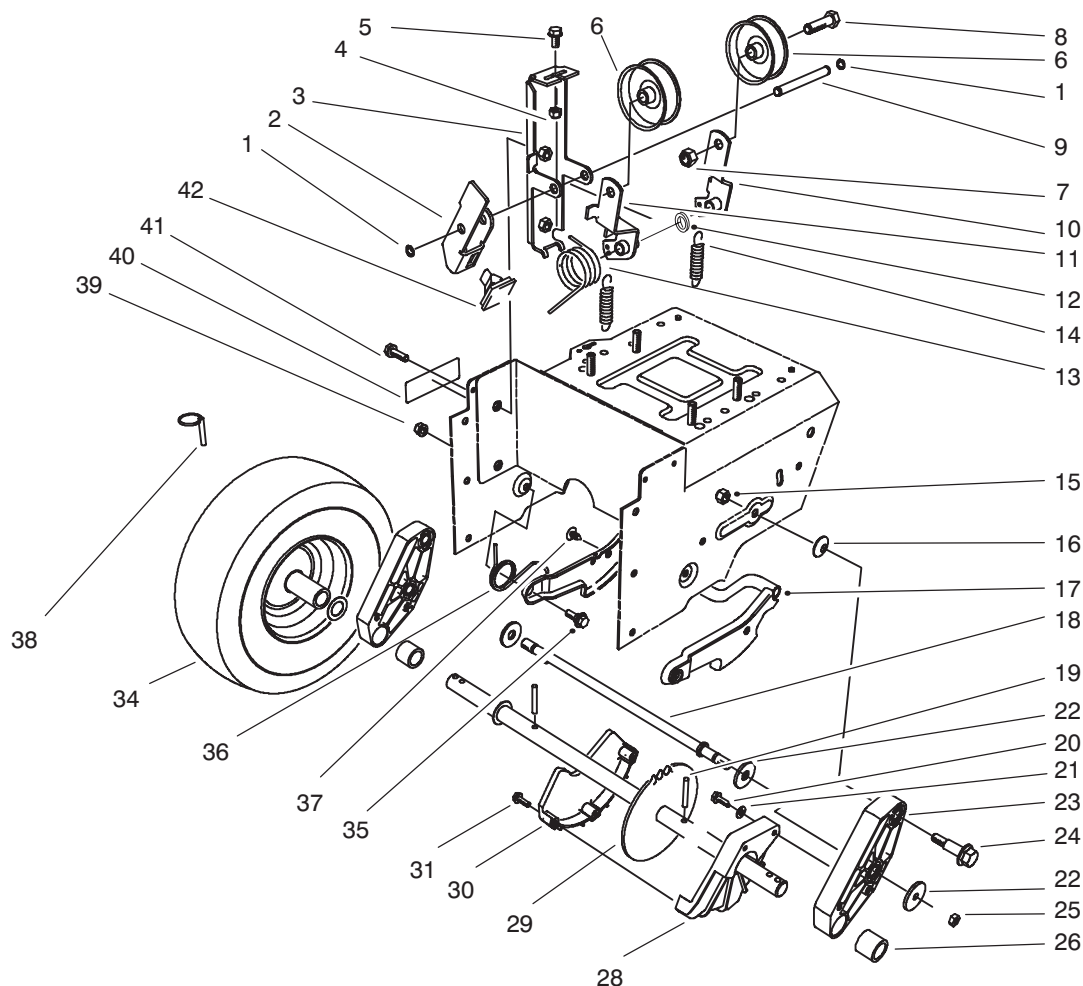


C-0053

TRACTION DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32120-46	Ring — Retaining	2	23	66-7740	Pivot Arm Assembly (Incl. Ref. # 26)	2
2	63-2810	Arm — Brake	1	24	62-1330	Bolt — Shoulder	2
3	63-2850	Bracket — Idler Arm	1	25	3296-23	Nut — Lock	2
4	3296-42	Nut — Lock	1	26	63-2250	Bushing — Axle	2
5	3234-13	Screw — Hex. Washer Hd.	1	27	252-80	Washer — Thrust	4
6	3-4244	Pulley — Idler	2	28	62-1010	Guard — Chain L.H.	1
7	3296-59	Nut — Lock	2	29	63-2111	Axle Assembly	1
8	323-7	Screw — Hex. Hd.	2	30	62-1000	Guard — Chain R.H.	1
9	62-0970	Pin — Idler	1	31	32104-121	Screw — Hex. Flange Hd.	3
10	93-8045	Arm — Traction Idler	1	34	67-9220	Tire & Wheel Assembly	2
11	93-8046	Arm — Impeller Idler	1	35	5-2490	Bolt — Shoulder	2
12	3256-38	Washer — Flat	1	36	63-2740	Spring — Torsion	1
13	63-2880	Spring — Torsion	1	37	3290-476	Fastener — Panel	1
14	63-2870	Spring — Extension	2	38	3290-243	Pin — Klik	2
15	3296-39	Nut — Lock	2	39	3296-47	Nut — Lock	2
16	3290-461	Washer — Belleville	2	40	66-6860	Decal — Warning (Model No. 38540 Only)	1
17	62-0470	Latch — Arm	1	*	94-2575	Decal — Warning (Model No. 38543 Only)	1
18	66-7720	Rod — Latch	1	41	3234-7	Screw — Hex. Flange Hd.	2
19	32121-9	Pin — Roll	2	42	66-8060	Pad — Brake	1
20	32144-4	Screw — Hex. Flange Hd.	2				
21	3256-1	Washer — Flat	2				
22	63-3340	Washer	4				

 *Not Illustrated

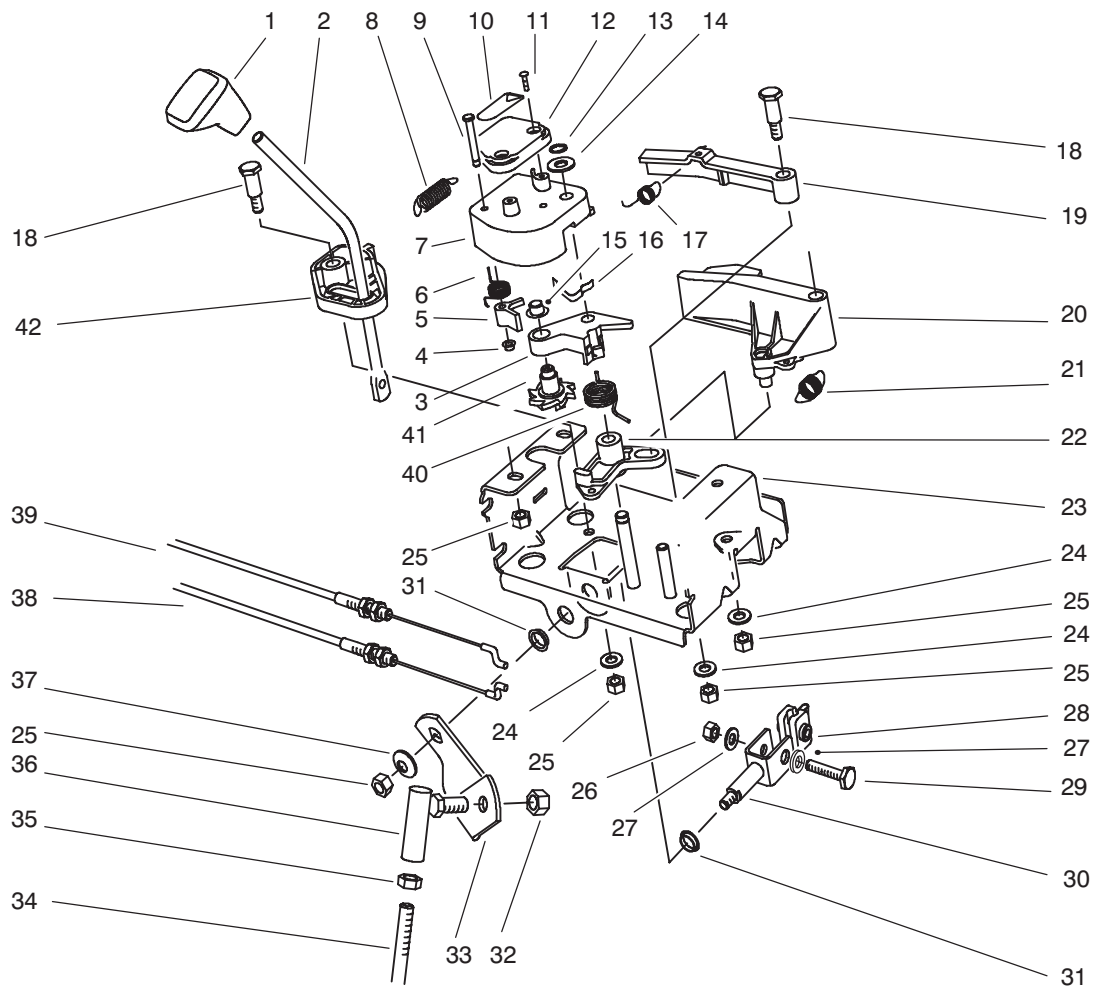


C-0054

TRACTION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-1290	Knob - Shift	1
2	67-9240	Rod - Shift (Upper)	1
3	62-1110	Lever - Index Wheel	1
4	3290-422	Nut - Push	1
5	62-0180	Tang - Index	1
6	62-1650	Spring - Torsion	1
7	62-1100	Lever - Latch	1
8	63-2220	Spring - Extension	1
9	63-2610	Pin - Tang	1
10	63-2480	Decal - #2	1
11	94-6961	Screw - Pan Hd.	2
12	62-1140	Cover - Latch	1
13	32120-46	Ring - Retaining	1
14	257-9	Washer - Thrust	1
15	3290-320	Nut - Push	1
16	62-1710	Spring - Flat	1
17	63-2240	Spring - Extension	1
18	63-2650	Screw - Shoulder	2
19	62-1700	Lever - Lockout	1
20	62-1130	Lever - Reverse	1
21	63-2230	Spring - Extension	1

Ref. No.	Part No.	Description	No. Used
22	62-1120	Lever - Reverse	1
23	63-2150	Frame - Control	1
24	3256-23	Washer - Flat	3
25	3296-29	Nut - Lock	7
26	3296-42	Nut - Lock	1
27	3256-1	Washer - Flat	2
28	67-9250	Retainer - Shift Rod	1
29	321-9	Screw - Hex. Hd.	1
30	66-7730	Clevis	1
31	256-296	Bushing - Nylon	2
32	3296-6	Nut - Lock	1
33	63-2630	Bracket - Shift	1
34	63-2830	Rod - Shift (Lower)	1
35	3220-3	Nut - Jam	1
36	78-2920	Joint - Ball	1
37	3290-456	Washer - Belleville	1
38	63-2210	Cable - Gearbox	1
39	63-2200	Cable - Latch	1
40	63-2270	Spring - Torsion	1
41	62-0170	Wheel - Index	1
42	62-1470	Base - Lockout	1

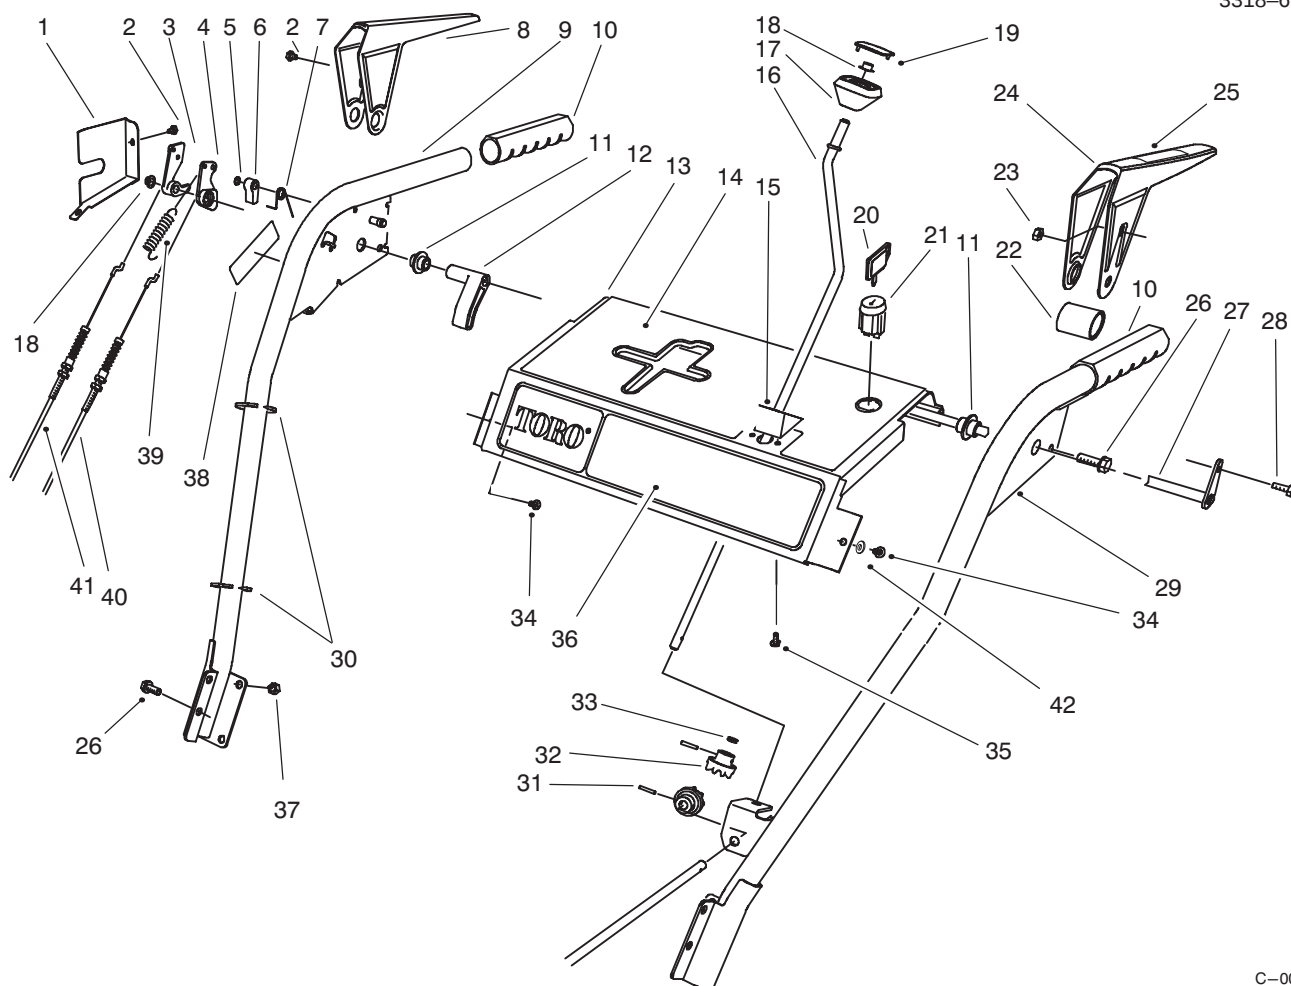 


C-0055

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63-2170	Cover — Lever Lock	1
2	2210-250	Screw	3
3	62-0300	Tang — Locking	1
4	62-0290	Cam — Release	1
5	32151-66	Ring — Retaining	1
6	62-0280	Latch — Lock	1
7	63-2910	Spring — Torsion	1
8	62-1050	Lever — Impeller	1
9	62-1380	Handle — R.H.	1
10	66-7850	Handlegrip	2
11	62-1070	Bushing — Lever	2
12	62-1640	Lever — Trip	1
13	66-8100	Panel — Control	1
14	66-6850	Decal — Panel Top	1
		(Model No. 38540 Only)	
*	94-2578	Decal — Panel Top	1
		(Model No. 38543 Only)	
15	62-1490	Plate — Guide	1
16	63-2160	Rod — Chute Crank	1
17	62-1320	Knob — Chute Control	1
18	3290-320	Nut — Push	2

Ref. No.	Part No.	Description	No. Used
19	62-1520	Cover — Knob	1
20	63-8360	Key — Switch	1
21	40-5940	Switch — On/Off	1
22	63-3380	Spacer — Traction Lever	1
23	3296-2	Nut — Lock	1
24	62-1060	Lever — Traction	1
25	63-3050	Decal — Lever	1
		(Model No. 38540 Only)	
26	3234-7	Screw — Hex. Flange Hd.	6
27	63-2030	Rod — Cross	1
28	3290-359	Screw	1
29	66-8090	Handle — L.H.	1
30	3290-378	Tie — Cable	3
31	32121-50	Pin — Roll	2
32	62-1460	Gear — Universal	2
33	62-1230	Washer — Rubber	1
34	32104-76	Screw — Self Tapping	2
35	94-6961	Screw — Pan Hd.	2
36	63-2510	Decal — Panel Front	1
37	3296-47	Nut — Lock	4

 *Not Illustrated

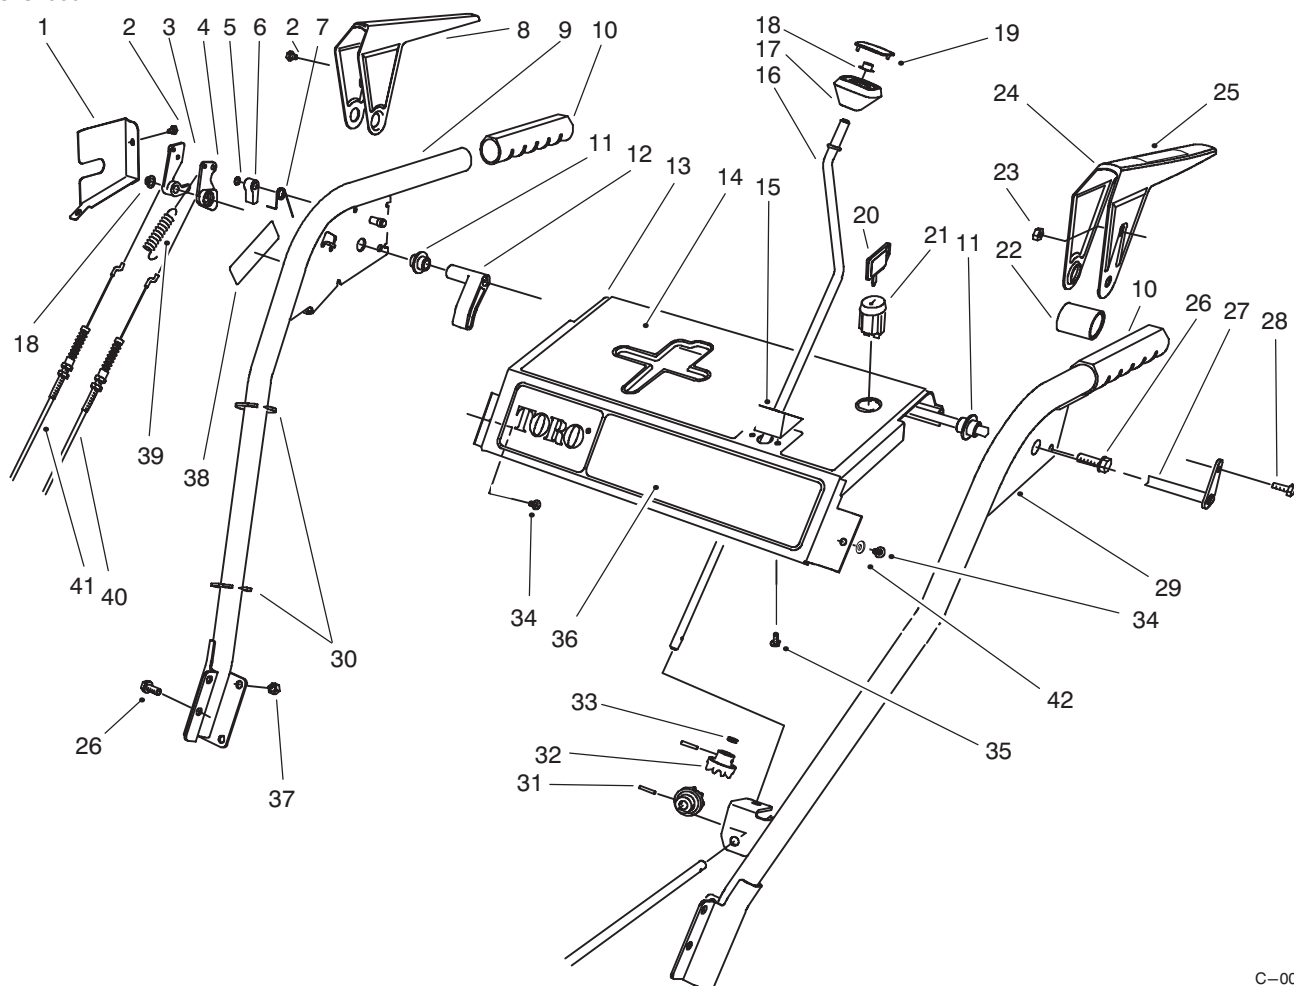


C-0055

HANDLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
38	66-6860	Decal - Warning (Model No. 38540 Only)	1
*	94-2575	Decal - Warning (Model No. 38543 Only)	1
39	88-0810	Spring - Extension	1
40	63-2710	Cable - Traction	1
41	63-2700	Cable - Impeller	1

Ref. No.	Part No.	Description	No. Used
42	3256-14	Washer - Flat	2
*	63-3420	Harness - Wire	1
*	17-4299	Loose Parts Kit (Model 38540 Only)	1
*	17-4249	Loose Parts Kit (Model 38543 Only)	1

 *Not Illustrated

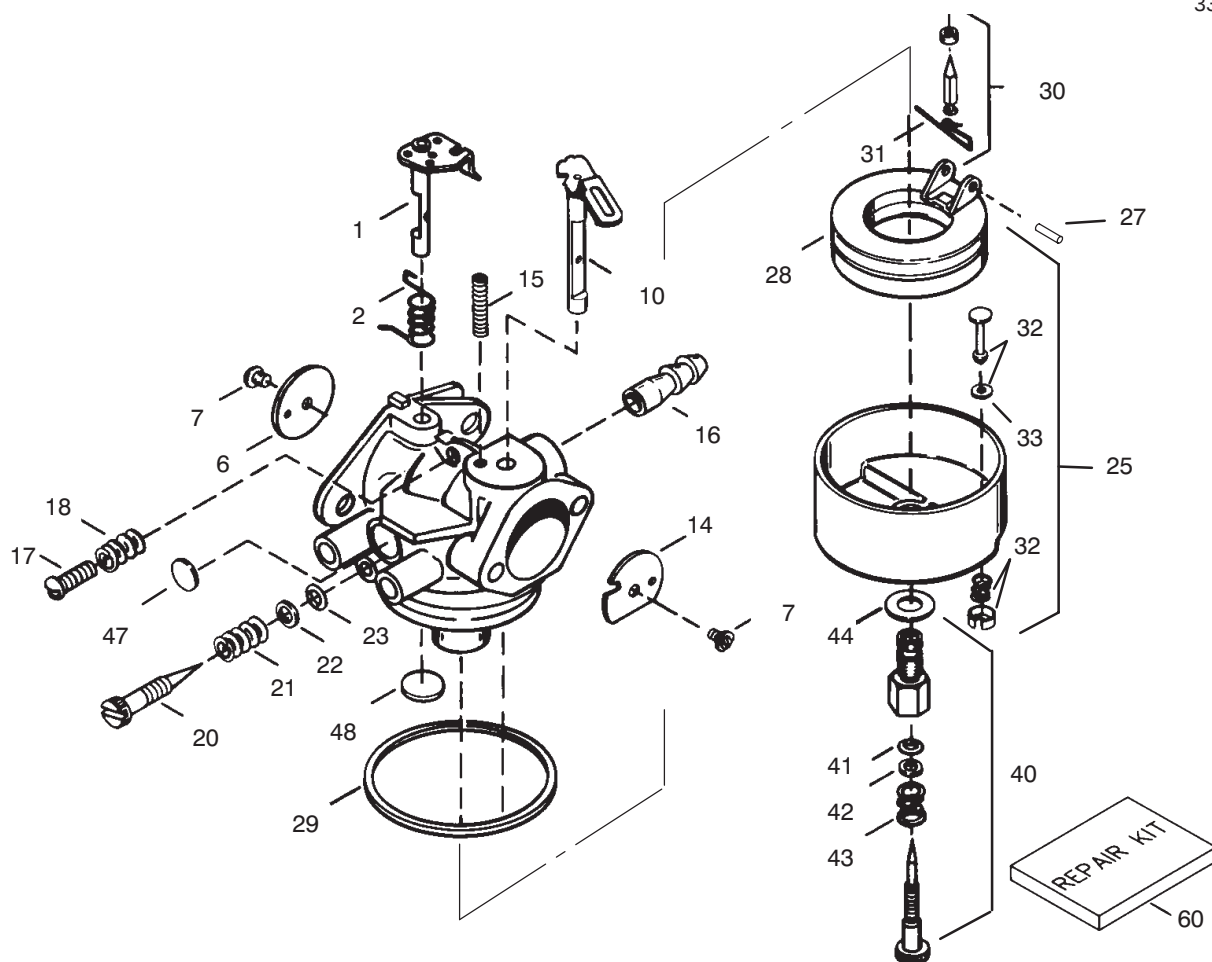

C-1744

CARBURETOR TECUMSEH NO. 632334A

Ref. No.	Part No.	Description	No. Used
1	631776A	Shaft/Lever — Throttle	1
2	631970	Spring — Throttle Return	1
6	631778	Shutter — Throttle	1
7	650506	Screw — Shutter	2
10	632112	Shaft/Lever — Choke	1
14	632174	Shutter — Choke	1
15	630735	Spring — Choke Positioning	1
16	632164	Fitting — Fuel Inlet	1
17	650417	Screw — Idle Regulating	1
18	630766	Spring — Tension	1
*20	632281	Screw — Idle Adjustment	1
21	630766	Spring — Regulating Screw	1
22	630739	Washer — Flat	1
*23	630740	O—Ring — Adj. Screw	1
25	631951	Float Bowl Assembly (Incl. Ref. #32 & 33)	1
*27	631024	Shaft — Float	1

Ref. No.	Part No.	Description	No. Used
28	632019	Float — Carburetor	1
*29	631028	Gasket — Bowl to Body	1
*30	631021	Inlet Needle, Seat & Clip Asm (Incl. Ref. #31)	1
31	631022	Clip — Inlet Needle	1
32	27136A	Drain Assembly (Incl. Ref. #33)	1
33	27554	Gasket — Bowl Drain	1
*40	632239	Adjustment Screw Asm (Incl. Ref. #43, 44, 41 & 42)	1
41	630740	O—Ring — Adj. Screw	1
42	630739	Washer — Adj. Screw	1
43	630738	Spring — Adjustment Screw	1
44	27110	Gasket — Bowl to Body	1
*47	630748	Plug — Welch	1
*48	631027	Plug — Welch	1
60	632347	Kit — Repair	1

*Included in Repair Kit Ref. #60.


ENGINE TECUMSEH MODEL NO. HMSK80-155386U

Ref. No.	Part No.	Description	No. Used
1	35385	Cylinder Asm (Incl. Ref. #2, 20, & 72)	1
2	27652	Dowel Pin	2
3	650820	Screw	2
4	XXXXX	Oil Drain Extension	1
5	30969	Extension Cap	1
15	30699C	Governor (Incl. Ref. #15A & 15B)	1
15A	30700	Governor Yoke	1
15B	650494	Screw	1
16	33454	Governor Lever	1
17	29916	Governor Lever Clamp	1
18	650548	Screw	1
19	34663	Spring - Speed Control	1
20	35319	Oil Seal	1
25	36460	Blower Housing Baffle	1
26	650561	Screw	2
28	30322	Lock Nut	1
30	35571A	Crankshaft	1
35	29826	Screw	1
36	29918	Lock Washer	1
37	29216	Lock Nut	1
38	29642	Retaining Ring	1
40	34552	Piston, Pin & Ring Set (Std.)	1
40	34553	Piston, Pin & Ring Set (.010" OS)	1
40	34554	Piston, Pin & Ring Set (.020" OS)	1
41	34329A	Piston & Pin Asm (Std.) (Incl. Ref. #43)	1
41	34330A	Piston & Pin Asm (.010" OS) (Incl. Ref. #43)	1
41	34331A	Piston & Pin Asm (.020" OS) (Incl. Ref. #43)	1
42	34332	Ring Set (Std.)	1
42	34333	Ring Set (.010" OS)	1
42	34334	Ring Set (.020" OS)	1
43	27888	Piston Pin Retaining Ring	2
45	35373A	Connecting Rod Asm (Incl. Ref. #46, 47, & 49)	1
46	650908	Connecting Rod Bolt	1
47	650882	Connecting Rod Bolt	1
48	34034	Valve Lifter	2
49	35374	Oil Dipper	1
50	35375	Camshaft (MCR)	1
60	33273A	Blower Housing Extension	1
61	34126	Grommet Mounting Bracket	1
62	650760	Screw	1
63	28545	Grommet	1
65	650128	Screw	1
*69	35262A	Cylinder Cover Gasket	1
70	35376	Cylinder Cover (Incl. Ref. #71, 75, & 80)	1
71	35377	Crankshaft Bushing	1

Ref. No.	Part No.	Description	No. Used
75	35319	Oil Seal	1
80	31845	Governor shaft	1
81	30590A	Washer	1
82	35378	Governor Gear Asm (Incl. Ref. #81)	1
83	30588A	Governor Spool	1
84	29193	Retaining Ring	1
86	650833	Screw	7
87	650832	Screw	1
89	32589	Flywheel Key	1
90	611093	Flywheel (W/Ring Gear)	1
92	650880	Lock Washer	1
93	650881	Flywheel Nut	1
100	35135	Solid State Ignition	1
101	610118	Spark Plug Cover	1
102	650872	Solid State Mounting Stud	2
103	651007	Screw, Torx T-15	2
110	35253	Ground Wire	1
*119	36448	Cylinder Head Gasket	1
120	36449	Cylinder Head	1
125	27878A	Exhaust Valve (Std.) (Incl. Ref. #151)	1
125	27880A	Exhaust valve (1/32" OS) (Incl. Ref. #151)	1
126	34035	Intake Valve (Std.) (Incl. Ref. #151)	1
126	34036	Intake Valve (1/32" OS) (Incl. Ref. #151)	1
127	650691	Washer	2
129	650727	Screw	2
130B	6021A	Screw	7
131A	650713	Screw	2
135	35395	Resistor Spark Plug (RJ19LM)	1
139	33369	Governor Gear Bracket	1
140	650836	Screw	2
149	27882	Valve Spring Cap	1
149A	35862	Valve Spring Cap	1
150	27881	Valve Spring	2
151	32581	Valve Spring Keeper	2
*169	27896A	Valve Cover Gasket	2
170	28423	Breather Body	1
171	28424	Breather Element	1
172	28425	Valve Cover	1
173	35350	Breather Tube	1
174	650128	Screw	2
178	29752	Nut & Lock Washer	2
182	30088A	Screw	2
183A	34587	Choke Bracket	1
*184	33263	Carburetor To Intake Pipe Gasket	1
185	33877	Intake Pipe	1
186	34667	Governor Link	1
186A	36652	Spring - Choke	1

*Included in Gasket Set 36450

 ENGINE TECUMSEH MODEL HMSK80-155386U (Cont.)

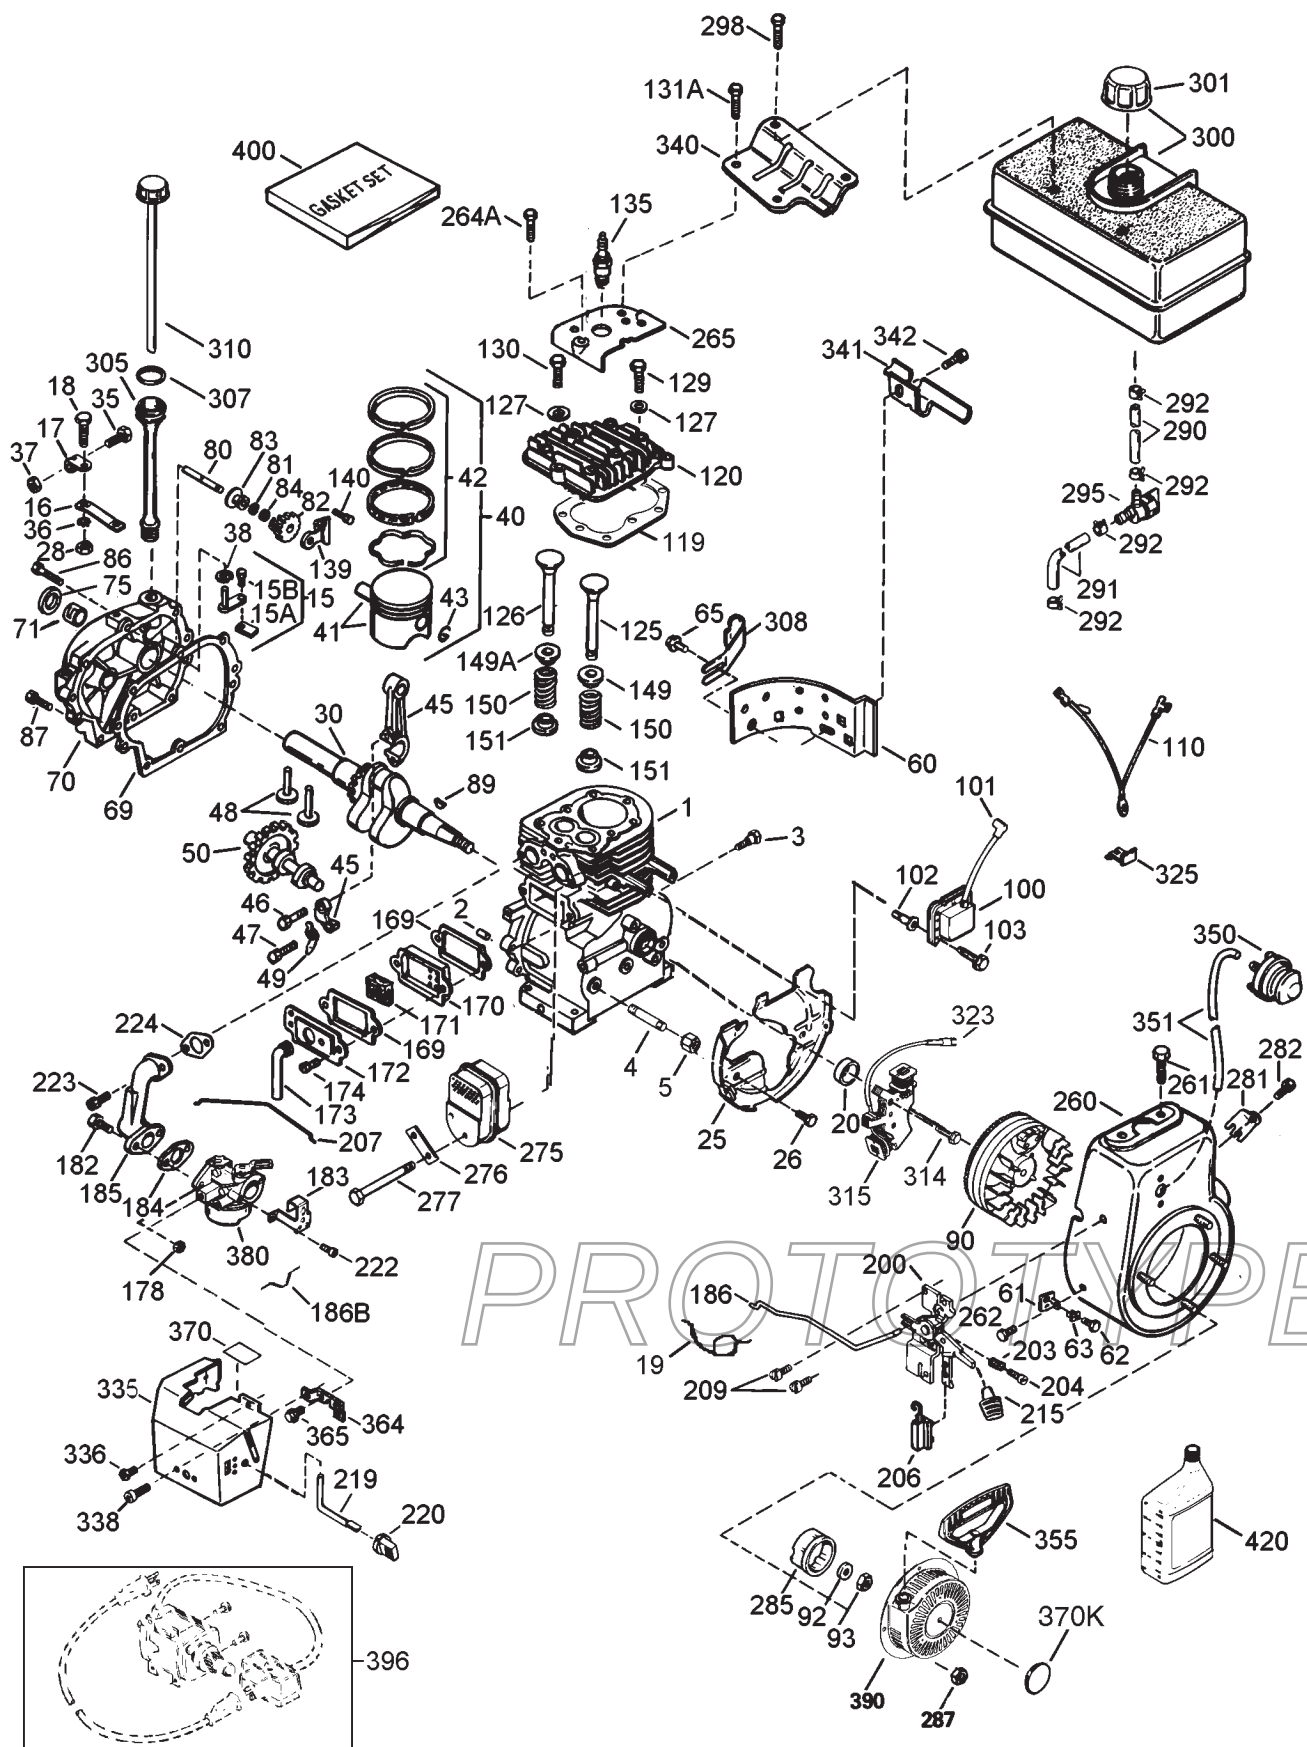


ENGINE TECUMSEH MODEL HMSK80—155386U (Cont.)

Ref. No.	Part No.	Description	No. Used
200	34677	Control Bracket (Incl. Ref.#19, 203, 204 & 206)	1
203	31342	Compression Spring	1
204	650549	Screw	1
206	610973	Terminal	1
207	33878	Throttle Link	1
209	650821	Screw	2
215	35440	Control Knob	1
219	34586	Choke rod	1
220	35438	Choke Knob	1
222	28820	Screw	2
223	650378	Screw, Torx T—30	2
*224	27915A	Intake Pipe Gasket	1
260	35447A	Blower Housing	1
261	650788	Screw	2
262	29747B	Screw, Torx T—40	2
264A	650802	Screw	1
265	33272B	Cylinder Head Cover	1
275	35056	Muffler	1
276	31588	Locking Plate	1
277	651002	Screw	2
281	33013	Starter bubble Cover	1
282	650760	Screw	1
285	35985B	Starter Cup	1
287	29752	Nut & Lock Washer	4
290	29774	Fuel Line	1
291	30705	Fuel Line	1
292	26460	Fuel Line Clamp	4
295	35857	Fuel shut—Off Valve	1
298	650665	Screw	2

Ref. No.	Part No.	Description	No. Used
300	34156A	Fuel Tank (Incl. Ref. #292 & 301)	1
301	36246	Fuel Cap	1
305	35554	Oil fill Tube	1
307	35499	"O" Ring	1
308	35540	Fill Tube Clip	1
310	36205	Dipstick	1
314	650873	Screw	1
315	611111	Alternator Coil (18 Watt) (Incl. Ref. #323)	1
323	611118	Terminal	1
325	29443	Wire Clip	1
335	35057A	Carburetor Cover	1
336	650765	Screw	1
338	28942	Screw	2
340	34155	Fuel Tank Bracket	1
341	34154	Fuel Tank Bracket	1
342	650561	Screw	1
350	570682	Primer Bulb	1
351	32180C	Primer Line	1
355	590574	Starter Handle	1
364	33377	Carburetor Cover Bracket	1
365	650767	Screw	2
370	36261	Identification Decal	1
370K	36695	Starter Decal	1
380	632334A	Carburetor (Incl. Ref. #184)	1
390	590733	Rewind Starter	1
396	33329D	Electric Starter Motor, 120 Volt (Optional)	1
400	36450A	Gasket Set	1
420	730226	SAE 5W30 4—Cyc. Eng. Oil	1

PROTOTYPE

 *Included in Gasket Set 36450

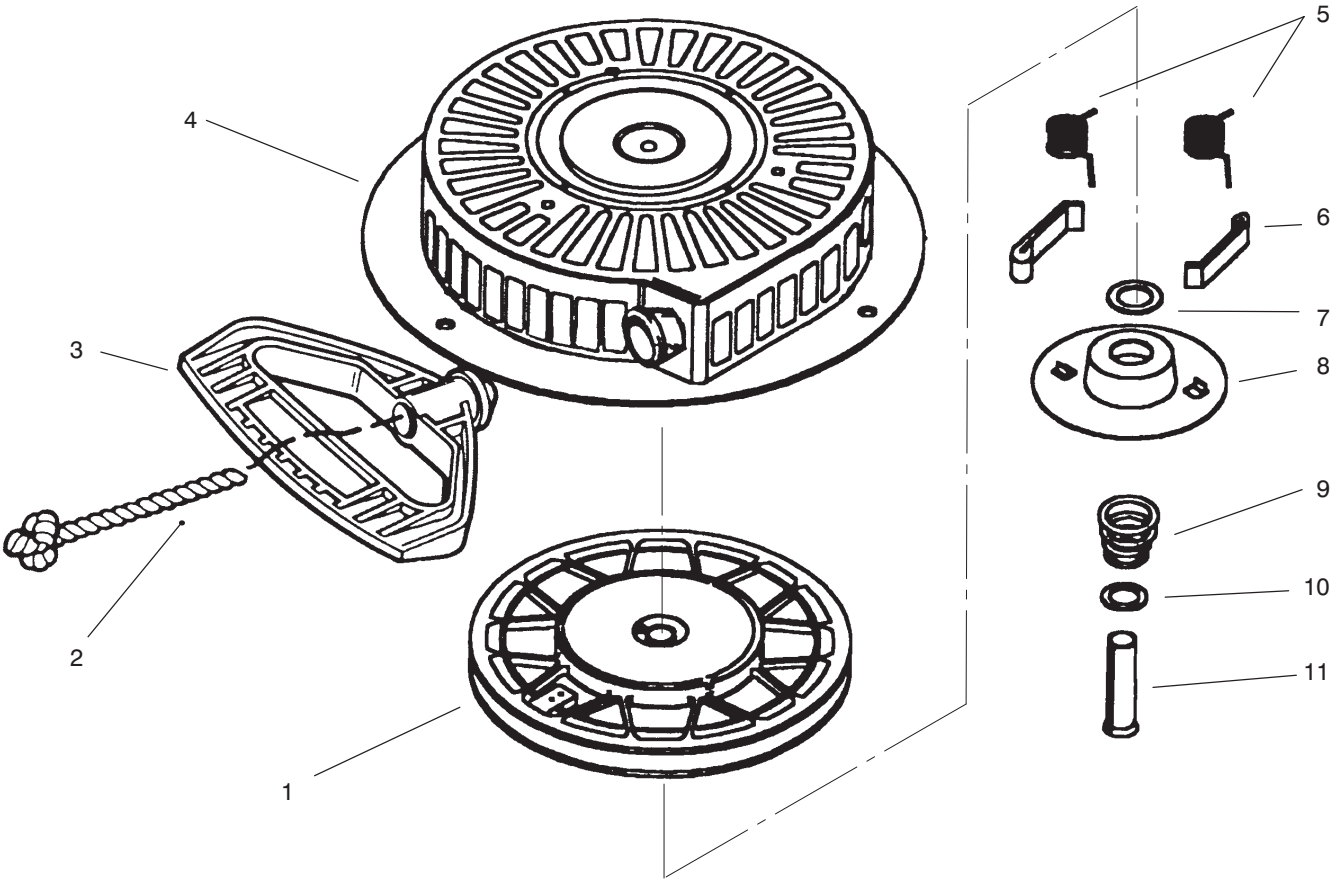

REWIND STARTER TECUMSEH NO. 590733

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	590709	Pulley & Rewind Spring Assembly	1	7	590601	Washer	1
2	590535	Rope – Starter	1	8	590676	Retainer	1
‡3	590574	Handle – Mitten Grip	1	9	590697	Spring – Brake	1
4	590534	Starter Housing Asm	1	10	590600	Washer	1
5	590699	Spring – Dog	2	11	590599A	Pin – Spring (Incl. Ref. #7)	1
6	590698	Dog – Starter	2				

‡Not Included in Starter Assembly.

TORO PART NUMBER INDEX

3318-660

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0750	Washer - Retaining	1 2 2	62-1140	Cover - Latch	8 12 1
3-4244	Pulley - Idler	7 6 2	62-1150	Bushing - Worm	3 16 1
5-2490	Bolt - Shoulder	7 35 2	62-1160	Bushing - Intermediate	6 46 4
7-0045	Seal - Oil	3 2 2	62-1170	Bushing - Flange	5 38 2
11-0590	Screw - Hex. Hd.	4 23 4	62-1180	Bushing - Output (Flange)	5 1 1
12-3270	Screw	6 49 3	62-1190	Bracket - Bellcrank	5 22 1
12-8789	Impeller Bearing Assembly	2 * 1	62-1230	Washer - Rubber	9 33 1
13-3559	Gear - Bevel Reverse 36T	6 59 1	62-1290	Knob - Shift	8 1 1
17-4249	Loose Parts Kit	10 * 1	62-1300	Pulley - Impeller	1 24 1
17-4299	Loose Parts Kit	10 * 1	62-1310	Pulley - Traction	6 50 1
20-0980	Bearing - Auger	2 57 2	62-1320	Knob - Chute Control	9 17 1
20-0990	Flange - Bearing (Inner)	2 56 2	62-1330	Bolt - Shoulder	7 24 2
20-1000	Flange - Bearing (Outer)	2 58 2	62-1350	Bushing - Output	5 27 2
25-5090	Spacer - Auger Hub	2 55 2	62-1380	Handle - R.H.	9 9 1
26-6110	Flange - Bearing (Front)	2 38 1	62-1430	Retainer - Chute	1 11 3
26-6120	Flange - Bearing (Rear)	2 40 1	62-1440	Cover - Engine Frame	2 32 1
29-9570	Bushing - Yoke	6 45 1	62-1460	Gear - Universal	9 32 2
32-251-1	Washer - Flat	4 28 2	62-1470	Base - Lockout	8 42 1
36-180	Washer - Lock	4 29 2	62-1490	Plate - Guide	9 15 1
37-6560	Bushing - Input	3 10 1	62-1520	Cover - Knob	9 19 1
38-7820	Bearing - Ball	5 36 2	62-1530	Shaft - Auger 24	3 1 1
40-5940	Switch - On/Off	9 21 1	62-1640	Lever - Trip	9 12 1
42-671	Screw - Self Tapping	4 30 2	62-1650	Spring - Torsion	8 6 1
52-2861	Washer	2 43 4	62-1690	Cover - Detent	5 11 1
53-7670	Decal - Danger Auger	1 5 1	62-1700	Lever - Lockout	8 19 1
62-0120	Gear - Helical	3 15 1	62-1710	Spring - Flat	8 16 1
62-0170	Wheel - Index	8 41 1	62-1720	Rod - Chute Gear	1 23 1
62-0180	Tang - Index	8 5 1	62-1740	Bracket - Cable	5 7 1
62-0200	Gear - 27T	5 31 1	63-2030	Rod - Cross	9 27 1
62-0210	Gear - 33T	5 43 1	63-2080	Cover - Belt (Upper)	1 28 1
62-0220	Gear - 34T	5 30 1	63-2111	Axle Assembly	7 29 1
62-0240	Gear - 45T	5 29 1	63-2150	Frame - Control	8 23 1
62-0250	Gear - 29T	5 32 1	63-2160	Rod - Chute Crank	9 16 1
62-0260	Gear - 51T	5 42 1	63-2170	Cover - Lever Lock	9 1 1
62-0280	Latch - Lock	9 6 1	63-2180	Bracket - Gear	1 7 1
62-0290	Cam - Release	9 4 1	63-2190	Pin - Gearshift Link	5 15 1
62-0300	Tang - Locking	9 3 1	63-2200	Cable - Latch	8 39 1
62-0310	Key - Shift	6 56 2	63-2210	Cable - Gearbox	8 38 1
62-0320	Sleeve	5 28 1	63-2220	Spring - Extension	8 8 1
62-0330	Shaft - Intermediate	5 40 1	63-2230	Spring - Extension	8 21 1
62-0340	Sleeve - Gear 19T	5 34 1	63-2240	Spring - Extension	8 17 1
62-0350	Pinion - Bevel 19T	6 53 1	63-2250	Bushing - Axle	7 26 2
62-0360	Gear - Compound 19T/41T	5 41 1	63-2270	Spring - Torsion	8 40 1
62-0370	Gear - 41T	5 35 1	63-2280	Washer - Thrust	5 33 1
62-0380	Hub - Pulley	6 52 1	63-2300	Retainer - Cable	1 26 1
62-0430	Collar - Shift (Speed)	5 3 1	63-2410	Decal - Choke	4 12 1
62-0470	Latch - Arm	7 17 1	63-2450	Decal - Throttle	4 11 1
62-0480	Gear Case - Lower	5 44 1	63-2480	Decal - #2	8 10 1
62-0490	Gear Case - Upper	5 24 1	63-2510	Decal - Panel Front	9 36 1
62-0500	Gear - 15T	6 48 1	63-2600	Bellerank	5 20 1
62-0720	Housing - 24	1 6 1	63-2610	Pin - Tang	8 9 1
62-0820	Gear - Worm	1 22 1	63-2630	Bracket - Shift	8 33 1
62-0840	Chute Assembly	1 19 1	63-2650	Screw - Shoulder	8 18 2
62-0860	Link - Gearshift	5 18 1	63-2670	Plate - Chute Retainer	1 10 3
62-0870	Lever - Gear Shift	5 16 1	63-2700	Cable - Impeller	10 41 1
62-0880	Lever - Direction Shift	5 5 1	63-2710	Cable - Traction	10 40 1
62-0920	Sheave Half - Traction	4 7 1	63-2740	Spring - Torsion	7 36 1
62-0930	Hub - Sheave	4 5 1	63-2810	Arm - Brake	7 2 1
62-0940	Sheave Half - Impeller	4 3 1	63-2830	Rod - Shift (Lower)	8 34 1
62-0970	Pin - Idler	7 9 1	63-2850	Bracket - Idler Arm	7 3 1
62-1000	Guard - Chain R.H.	7 30 1	63-2870	Spring - Extension	7 14 2
62-1010	Guard - Chain L.H.	7 28 1	63-2880	Spring - Torsion	7 13 1
62-1020	Button - Detent	5 10 1	63-2890	Spring - Compression	5 9 1
62-1040	Yoke-Shift	5 26 2	63-2900	Washer - Plastic	1 17 2
62-1050	Lever - Impeller	9 8 1	63-2910	Spring - Torsion	9 7 1
62-1060	Lever - Traction	9 24 1	63-2920	Spring - Extension	5 4 1
62-1070	Bushing - Lever	9 11 2	63-2940	Chain - Drive	4 19 1
62-1080	Shaft - Output	5 37 1	63-2951	Belt - Traction	4 6 1
62-1100	Lever - Latch	8 7 1	63-2961	Belt - Impeller	4 4 1
62-1110	Lever - Index Wheel	8 3 1	63-2990	Frame - Transmission	4 21 1
62-1120	Lever - Reverse	8 22 1	63-3020	Guard - Chute	1 14 1
62-1130	Lever - Reverse	8 20 1	63-3050	Decal - Lever	9 25 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
63-3130	Clip - Chute Guard	1 12 1	257-10	Washer - Thrust	5 39 4
63-3290	Cover - Cable	1 29 1	281-1	Plug - Pipe Sq. Hd.	3 14 1
63-3340	Washer	7 22 4	283-3	Pin - Clevis	5 19 1
63-3380	Spacer - Traction Lever	9 22 1	321-3	Screw - Hex. Hd.	2 60 8
63-3410	Bolt - Shoulder	5 13 1	321-9	Screw - Hex. Hd.	8 29 1
63-3420	Harness - Wire	10 * 1	321-15	Screw - Hex. Hd.	6 54 1
63-3450	Bearing - Impeller	2 39 1	321-44	Screw - Hex. Hd.	2 52 2
63-8360	Key - Switch	9 20 1	322-12	Bolt - Auger	2 59 2
66-6840	Decal - Hot Surface	4 14 1	323-6	Screw - Hex. Hd.	1 1 2
66-6850	Decal - Panel Top	9 14 1	323-7	Screw - Hex. Hd.	7 8 2
66-6860	Decal - Warning	10 38 1	3210-1	Screw - Hex. Hd.	4 25 2
66-6860	Decal - Warning	7 40 1	3212-8	Screw - Hex. Hd.	4 1 1
66-6980	Frame - Engine	2 31 1	3220-3	Nut - Jam	4 26 1
66-7720	Rod - Latch	7 18 1	3220-3	Nut - Jam	8 35 1
66-7730	Clevis	8 30 1	3230-2	Bolt - Carriage	1 8 1
66-7740	Pivot Arm Assembly	7 23 2	3230-23	Screw - Carriage	2 48 9
66-7762	Blade - Scraper	2 45 1	3234-5	Screw - Hex.. Washer Hd.	2 33 4
66-7811	Shaft - Impeller	3 6 1	3234-7	Screw	2 61 6
66-7821	Plate - Side R.H.	1 3 1	3234-7	Screw - Hex. Flange Hd.	4 16 4
66-7831	Plate - Side L.H.	2 46 1	3234-7	Screw - Hex. Flange Hd.	9 26 6
66-7850	Handlegrip	9 10 2	3234-7	Screw - Hex. Flange Hd.	7 41 2
66-7910	Impeller	2 50 1	3234-13	Screw - Hex. Washer Hd.	7 5 1
66-8010	Spacer	2 51 2	3234-28	Screw - Hex. Flange Hd.	1 4 12
66-8030	Transmission Assembly	4 20 1	3242-4	Screw - Set Sq. Hd.	1 25 2
66-8060	Pad - Brake	7 42 1	3253-4	Washer - Lock	4 24 2
66-8090	Handle - L.H.	9 29 1	3253-6	Washer - Lock	4 2 1
66-8100	Panel - Control	9 13 1	3256-1	Washer - Flat	7 21 2
67-5870	Gear - Bevel 36T	6 57 1	3256-1	Washer - Flat	8 27 2
67-5880	Collar - Shift	6 58 1	3256-14	Washer - Flat	1 16 1
67-9220	Tire & Wheel Assembly	7 34 2	3256-14	Washer - Flat	10 42 2
67-9240	Rod - Shift (Upper)	8 2 1	3256-23	Washer - Flat	8 24 3
67-9250	Retainer - Shift Rod	8 28 1	3256-23	Washer - Flat	2 42 1
68-4100	Plate - Engine Stud R.H.	2 * 1	3256-38	Washer - Flat	7 12 1
68-4110	Plate - Engine Stud L.H.	2 34 1	3256-41	Washer	4 32 1
68-4310	Gear - 26T	6 47 1	3256-61	Washer - Flat	1 21 1
68-4320	Sleeve - Shift	6 55 1	3257-10	Key - Woodruff	3 12 1
68-7450	Auger - R.H.	2 54 1	3257-23	Key - Woodruff	2 35 1
68-7460	Auger - L.H.	2 * 1	3269-23	Rivet	1 30 4
68-7510	Guide - Belt	4 8 1	3272-1	Pin - Cotter	5 17 1
68-8410	Cover - Belt (Lower)	2 41 1	3274-13	Screw - Machine	1 13 3
74-1440	Skid Assembly	2 44 2	3290-243	Pin - Klik	7 38 2
74-1540	Gearcase Assembly - L.H.	3 13 1	3290-320	Nut - Push	8 15 1
74-1550	Gearcase Assembly - R.H.	3 4 1	3290-320	Nut - Push	9 18 2
74-1560	Auger Gearbox Assembly	2 53 1	3290-326	Nut - Push	1 15 2
78-2920	Joint - Ball	8 36 1	3290-359	Screw	9 28 1
78-2920	Joint - Ball	4 17 1	3290-378	Tie - Cable	9 30 3
88-0810	Spring - Extension	10 39 1	3290-422	Nut - Push	8 4 1
93-1265	Decal - Hot Surface	4 14 1	3290-456	Washer - Belleville	8 37 1
93-8045	Arm - Traction Idler	7 10 1	3290-461	Washer - Belleville	7 16 2
93-8046	Arm - Impeller Idler	7 11 1	3290-461	Washer - Belleville	4 22 4
94-2559	Decal - Danger Chute	1 * 1	3290-476	Fastener - Panel	7 37 1
94-2568	Decal - Danger Auger	1 * 1	3290-477	Washer - Curved	5 14 1
94-2572	Decal - Primer	4 10 1	3296-2	Nut - Lock	1 9 4
94-2575	Decal - Warning	10 * 1	3296-2	Nut - Lock	9 23 1
94-2575	Decal - Warning	7 * 1	3296-6	Nut - Lock	4 18 1
94-2578	Decal - Panel Top	9 * 1	3296-6	Nut - Lock	8 32 1
94-2782	Cap - Wire	4 31 1	3296-23	Nut - Lock	7 25 2
94-6961	Screw - Pan Hd.	8 11 2	3296-29	Nut - Lock	8 25 7
94-6961	Screw - Pan Hd.	9 35 2	3296-29	Nut - Lock	2 37 14
94-8079	Decal - Danger Chute	1 20 1	3296-39	Nut - Lock	7 15 2
127-20	Guard - Muffler	4 27 1	3296-42	Nut - Lock	7 4 1
2210-250	Screw	9 2 3	3296-42	Nut - Lock	5 23 1
252-59	Washer - Thrust	5 2 3	3296-42	Nut - Lock	8 26 1
252-71	Bearing - Thrust	3 5 2	3296-42	Nut - Lock	2 49 10
252-76	Bearing - Thrust	3 9 1	3296-47	Nut - Lock	9 37 4
252-78	Washer - Thrust	3 8 2	3296-47	Nut - Lock	7 39 2
252-80	Washer - Thrust	7 27 4	3296-47	Nut - Lock	2 47 20
252-80	Washer - Thrust	2 36 1	3296-59	Nut - Lock	7 7 2
253-149	Seal - Input	3 11 1	32104-71	Screw - Pan Hd.	5 12 1
256-237	Bushing - Sleeve	3 3 2	32104-76	Screw - Self Tapping	9 34 2
256-296	Bushing - Nyliner	8 31 2	32104-95	Screw - Hex. Washer Hd.	5 21 2
257-9	Washer - Thrust	8 14 1	32104-121	Screw - Hex. Flange Hd.	7 31 3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3318—660

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
32120—46	Ring — Retaining	7 1 2	32151—33	Ring — Snap	3 7 1
32120—46	Ring — Retaining	8 13 1	32151—66	Ring — Retaining	9 5 1
32121—9	Pin — Roll	7 19 2	505—101	Grease — 14.5 oz. Cartridge	6 * 1
32121—50	Pin — Roll	9 31 2	505—129	Sealant — 100g Tube	3 * 1
32121—106	Pin — Coil	5 6 3			
32121—120	Roll — Pin	6 60 2			
32122—32	Screw	1 18 1			
32128—20	Nut — Lock	4 15 4			
32128—32	Nut — Flange Lock	6 51 1			
32144—4	Screw	4 13 1			
32144—4	Screw — Hex. Flange Hd.	7 20 2			
32144—4	Screw — Hex. Flange Hd.	1 27 5			
32144—4	Screw — Self Tapping	5 8 2			
32144—86	Screw — Hex. Washer Hd.	5 25 6			
32144—110	Screw — Hex. Washer Hd.	3 17 9			

OPTIONAL EQUIPMENT

110 Vac Electric Starter Kit	Part No. 37—4810
Drift Breaker	Part No. 66—7960
Light Kit	Part No. 66—7941
Tire Chain Kit (Do Not Use W/68—9300)	Part No. 56—2700
Snow Cab Kit	Part No. 68—9500
Weight Kit (Requried W/Snow Cab) . . .	Part No. 74—1190
Differential Kit	Part No. 68—9300

PROTOTYPE

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.