




MODEL NO. 62924-790001 & UP	<b>PARTS CATALOG</b>
<b>5 H.P. LAWN VACUUM, S.P.</b>	

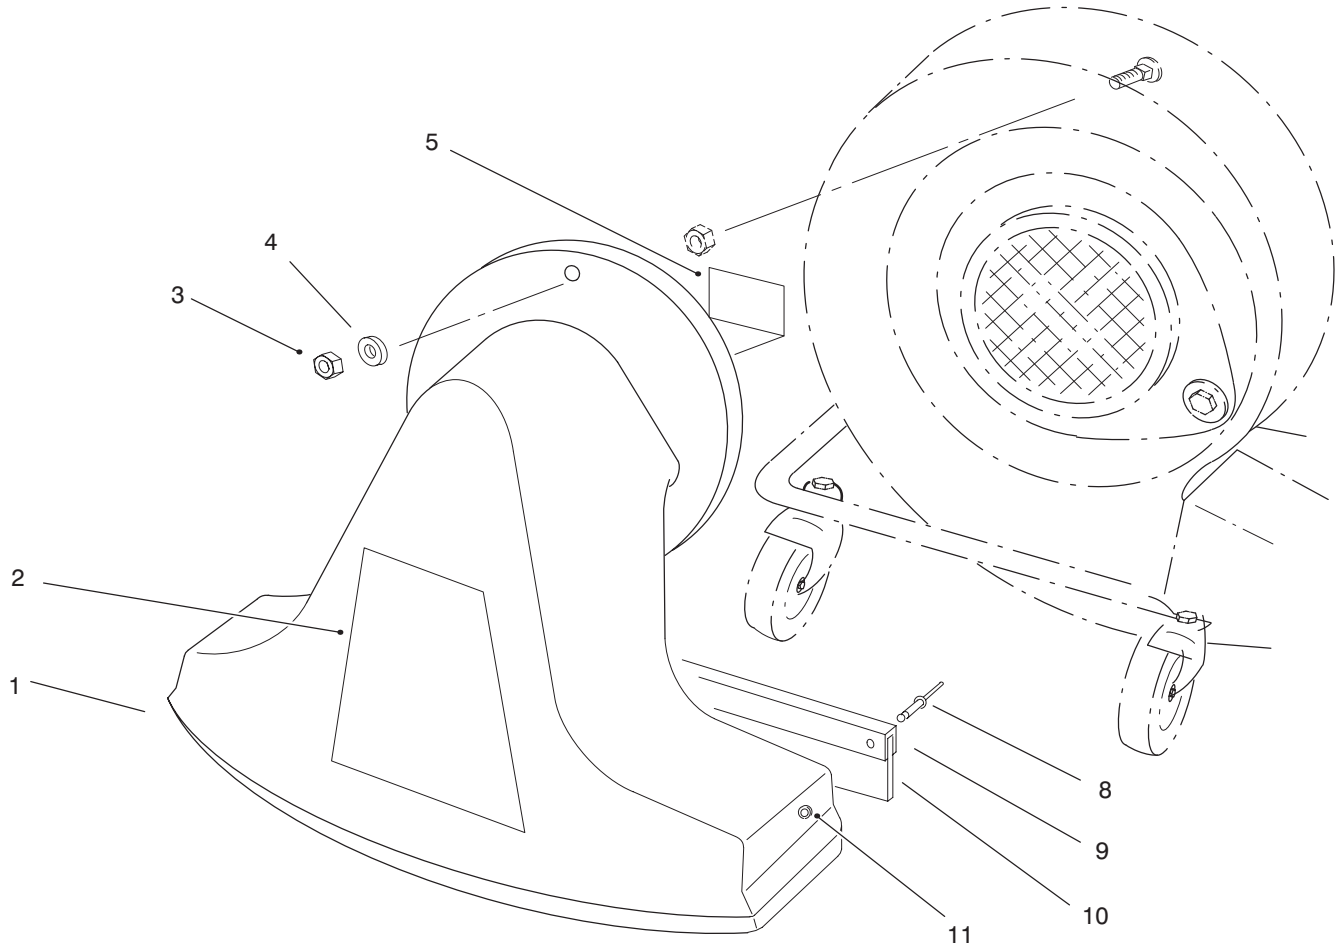


C-2324

## SNOUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	40-7000	Snout Assembly (Incl. Ref.. #1,8-10)	1
2	67-7720	Decal - Toro Vacuum	1
3	3296-58	Nut - Flange Hd.	1
4	95-1823	Washer	1

Ref. No.	Part No.	Description	No. Used
5	93-4139	Decal - Caution	1
8	3290-417	Rivet - Pop	5
9	20-6840	Clamp - Flap	1
10	20-6830	Flap - Rubber	1
11	3256-51	Washer	5

\*Not Illustrated

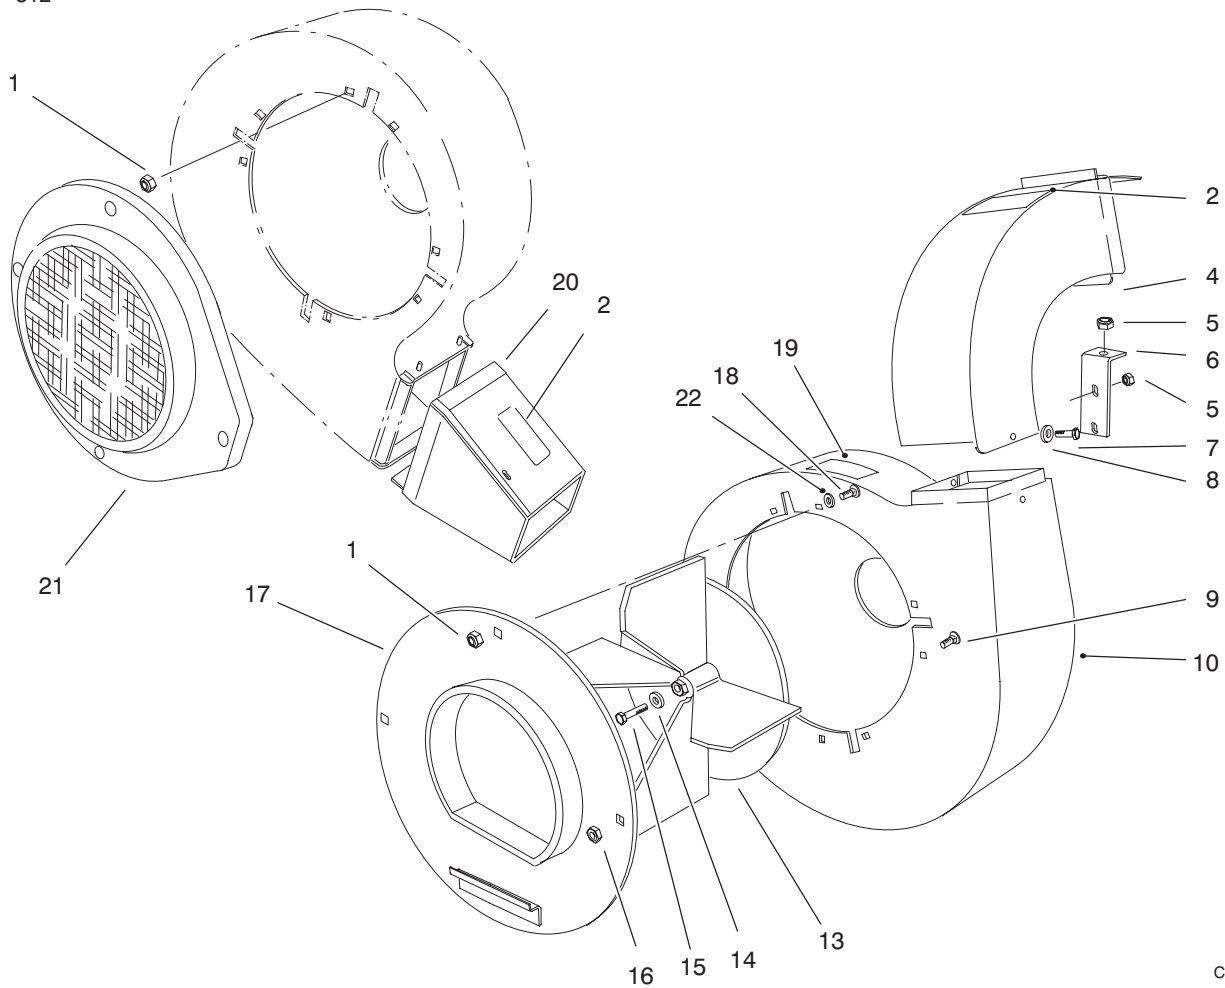


C-2325

## BLOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-26	Nut - Flange	1
2	93-4139	Decal - Caution	3
4	20-6130	Chute - Vacuum	1
5	3296-58	Nut - Flange Lock	3
6	39-4660	Bracket - Housing	1
7	321-4	Screw	1
8	3290-436	Washer - Lock	1
9	3230-18	Bolt - Carriage	3
10	20-5890	Housing - Blower	1
13	93-3677	Fan Assembly	1


Ref. No.	Part No.	Description	No. Used
14	3290-340	Washer - Lock	1
15	3211-5	Screw	1
16	3296-29	Nut - Lock	3
17	20-5450	Cover - Blower	1
18	57-3220	Bolt - Carriage	1
19	93-4138	Decal - Warning	1
20	93-4124	Blower - Exhaust	1
21	20-5780	Blower - Intake	1
22	3256-25	Washer - Flat	1

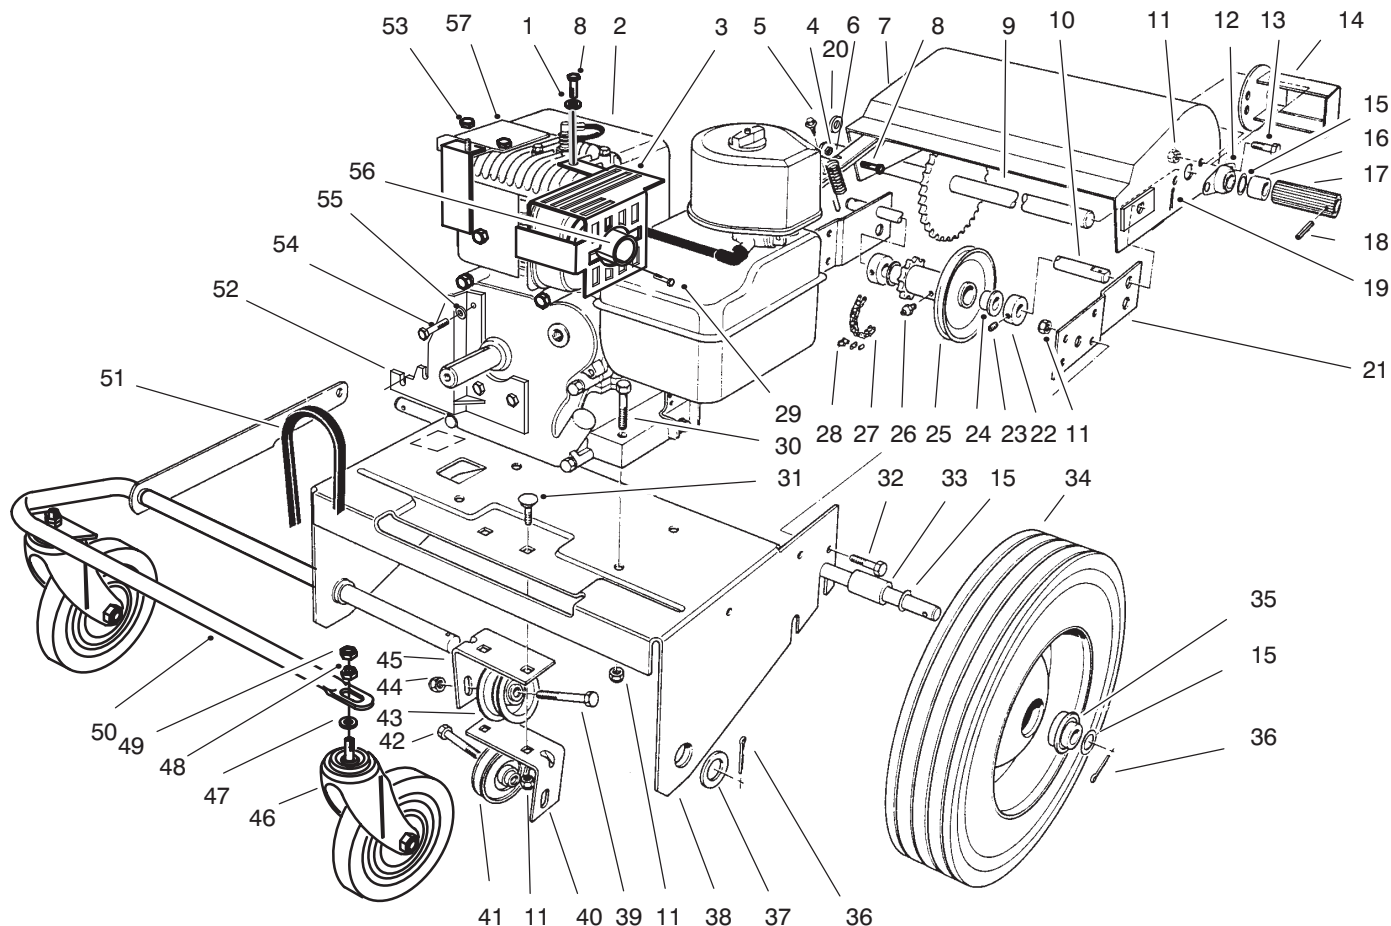

C-2326

## ENGINE & BASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-436	Washer - Belleville	1	21	43-6830	Bracket - Mounting	2
2		Engine	1	22	20-5950	Collar (Incl. Ref.. #23)	2
3	93-7692	Shield - Muffler	1	23	3245-38	Screw - Set	2
4	3296-42	Nut	1	24	256-105	Bushing - Flange	2
5	32140-32	Screw - Self Tapping	1	25	20-6000	Idler Assembly (Incl. Ref.. #24 & 26)	1
6	23-3520	Spring	1	26	302-5	Fitting - Grease	1
7	93-8461	Guard	1	27	3-3434	Chain (Incl. Ref.. #28)	1
8	321-4	Screw	2	28	2710-31	Link - Connecting	1
9	20-7270	Shaft - Friction	1	29	93-9841	Screw	4
10	20-5870	Shaft	1	30	322-8	Screw	4
11	3296-29	Nut	14	31	3230-16	Bolt - Carriage	2
12	256-236	Bearing	2	32	322-5	Screw	6
13	322-2	Screw - Hex. Hd.	4	33	20-5410	Spacer - Axle	2
14	37-9210	Guard	2	34	20-6100	Wheel (Incl. Ref.. #35)	2
15	7-3590	Washer	7	35	251-258	Bearing	4
16	20-5460	Spacer	2	36	3272-17	Pin - Cotter	3
17	20-5960	Wheel - Friction	2	37	3256-29	Washer - Flat	1
18	32121-4	Pin - Roll	2	38	20-5560	Plate - Engine	1
19	3272-7	Pin - Cotter	2	39	323-10	Screw	1
20	3256-26	Washer	1				

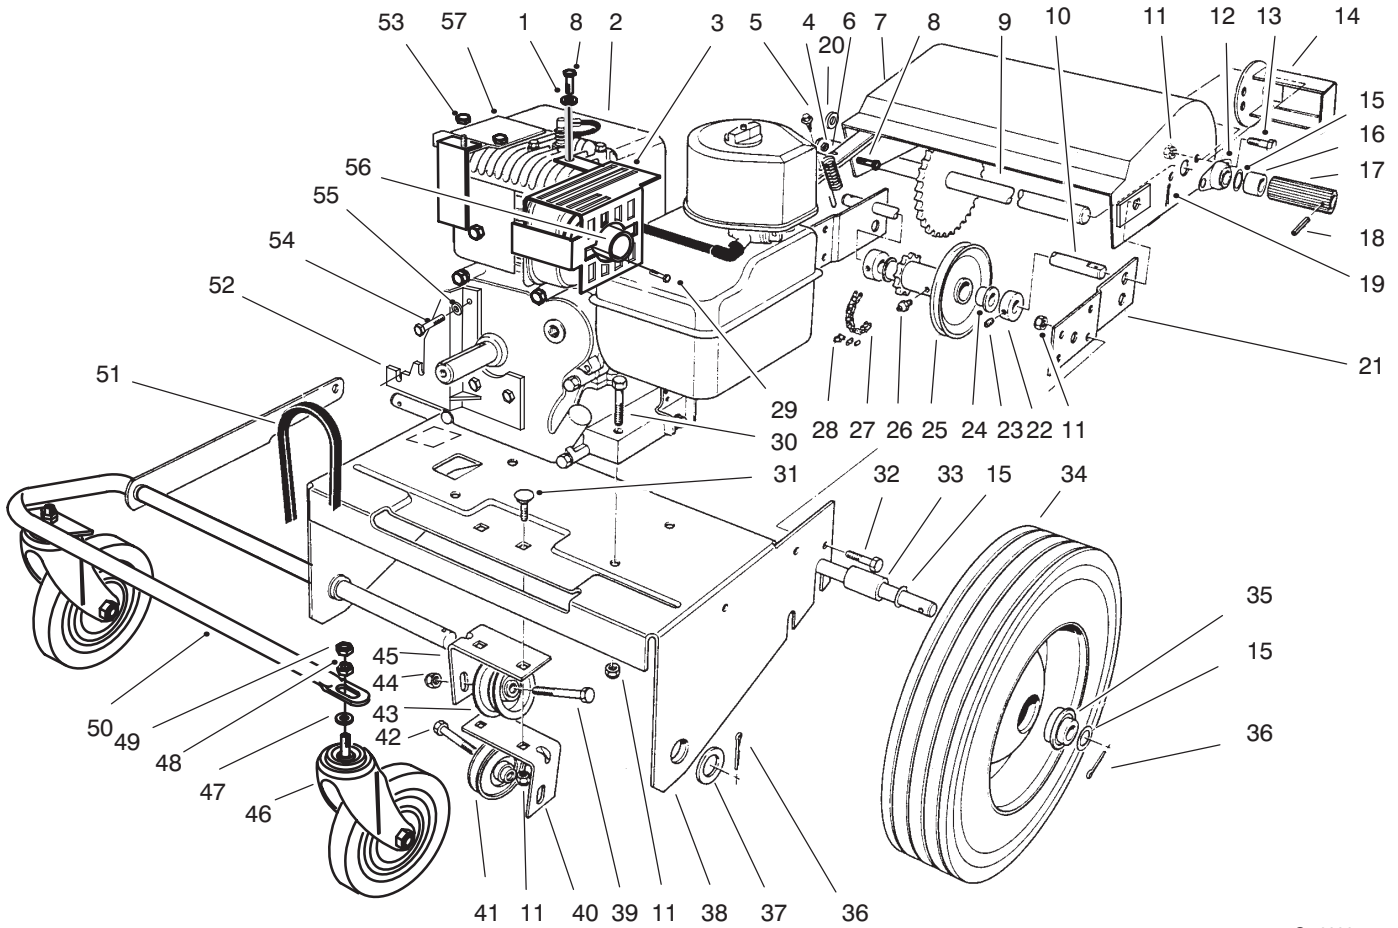


C-2326

## ENGINE & BASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
40	20-8690	Bracket - Idler Mount L.H.	1
41	12-5820	Pulley - Idler	1
42	323-19	Screw	1
43	12-6700	Pulley - Idler	1
44	3296-39	Nut	2
45	20-8680	Bracket - Idler Mount R.H.	1
46	23-3320	Caster	2
47	3254-4	Washer - Lock	2
48	3217-9	Nut	2


Ref. No.	Part No.	Description	No. Used
49	3296-23	Nut - Lock	2
50	93-4146	Support - Front Wheel	1
51	20-5990	"V" Belt	1
52	93-7414	Guard	1
53	3296-58	Nut	1
54	3210-2	Screw	3
55	3253-4	Washer - Lock	3
56	93-8721	Extension - Exhaust	1
57	39-4680	Bracket - Mounting	1

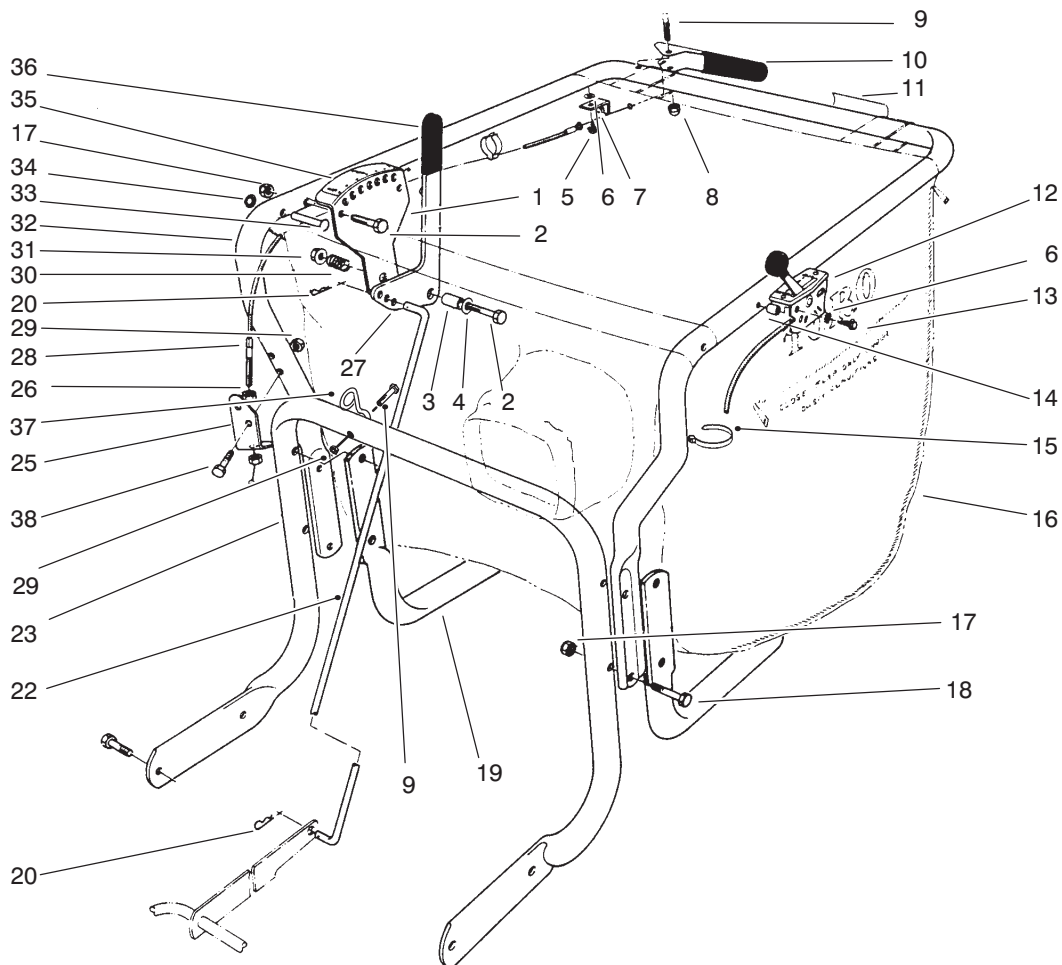

C-2327A

## CONTROL & HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	20-5820	Bracket - Adjustment	1	19	66-1640	Support - Bag	1
2	322-8	Screw	3	20	3290-250	Pin - Cotter	2
3	20-5650	Spacer	1	22	33-2410	Rod - Connecting	1
4	3256-3	Washer - Flat	1	23	93-9331	Handle - Lower	1
5	32144-112	Screw - Special	1	25	33-2830	Mount - Bodine	1
6	3255-17	Washer - Lock	3	26	32149-5	Nut	2
7	20-8780	Ring - Retaining	1	27	23-3410	Handle - Adjustment	1
8	32111-7	Nut	1	28	93-8463	Cable - Forward	1
9	321-10	Screw	2	29	3296-42	Nut - Lock	3
10	93-8464	Lever	1	30	20-6110	Spring	1
11	93-4141	Decal - Traction Control	1	31	32128-13	Nut - Flange	1
12	23-3610	Throttle Control	1	32	23-3570	Handle - Upper	1
13	32104-72	Screw - Self Tapping	2	33	3263-9	Rivet	2
14	23-3620	Spacer	2	34	3290-418	Nut - Push On	2
15	3290-378	Cable Tie	2	35	93-4137	Decal - Adjustment	1
16	71-3540	Bag - Vacuum	1	36	3-7877	Grip - Handle	1
17	3296-29	Nut - Lock	6	37	46-8082	Guide - Rope	1
18	322-9	Screw - Hex. Hd.	4	38	321-9	Screw - Hex Hd. Cap	2

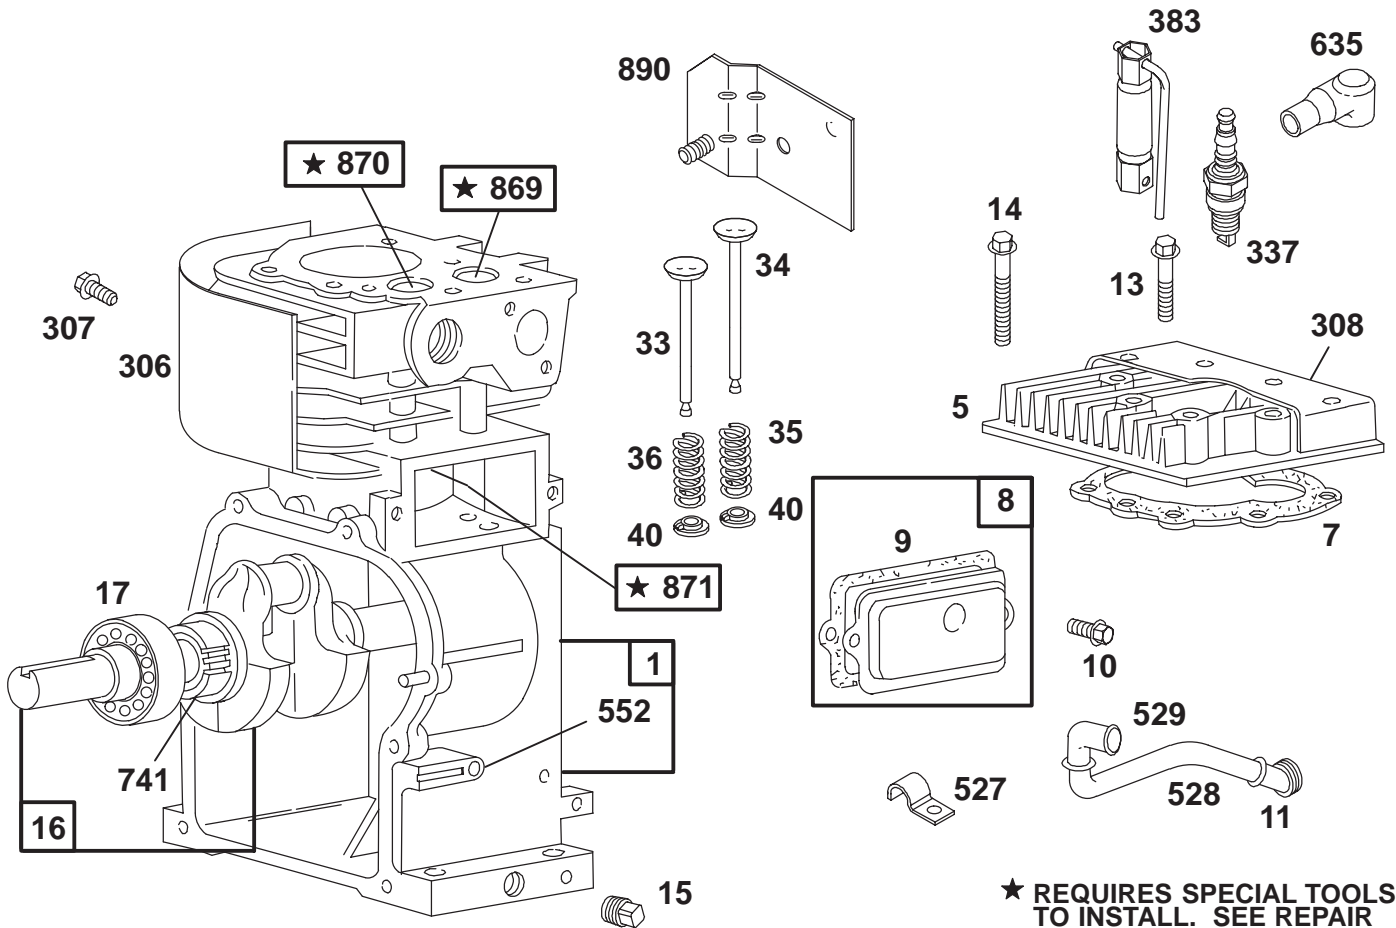

Assemblies include all parts shown in frames.


★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

## ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
1	395990	Cylinder Assembly	1
5	214040	Head-Cylinder	1
★7	272157	Gasket-Cylinder Head	1
8	495774	Breather Assy.	1
★9	27549	Gasket-Breather	1
10	94621	Screw-Breather Mtg.	1
11	66578	Grommet	1
13	94221	Screw-Cylinder Head	1
14	94679	Screw-Cylinder Head	1
15	94387	Plug-Oil Drain	1
16	495845	Crankshaft	1
17	494874	Bearing-Ball	1
33	211119	Valve-Exhaust	1
34	261044	Valve-Intake	1
35	260552	Spring-Valve (Intake)	1
36	26478	Spring-Valve (Ex.)	1
40	93312	Retainer-Valve	1

Ref. No.	Part No.	Description	No. Used
307	94680	Screw-Hex. Hd.	1
306	221511	Shield-Cylinder	1
308	224738	Cover-Cylinder Head	1
308A	224740	Cover-Cylinder Head	1
337	802592	Plug-Spark	1
383	89838	Wrench-Spark Plug	1
527	223786	Clamp-Tube	1
528	231550	Tube-Breather	1
529	67838	Grommet	1
552	231079	Bushing-Gov. Crank	1
635	66538	Elbow-Spark Plug	1
741	262992	Gear-Timing	1
869	211787	Seat-Int. Valve	1
870	211172	Seat-Ex. Valve	1
871	262001	Guide-Exhaust Valve	1
890	496783	Bracket-Mounting	1

★ Included in Gasket Set-Part No. 495603.

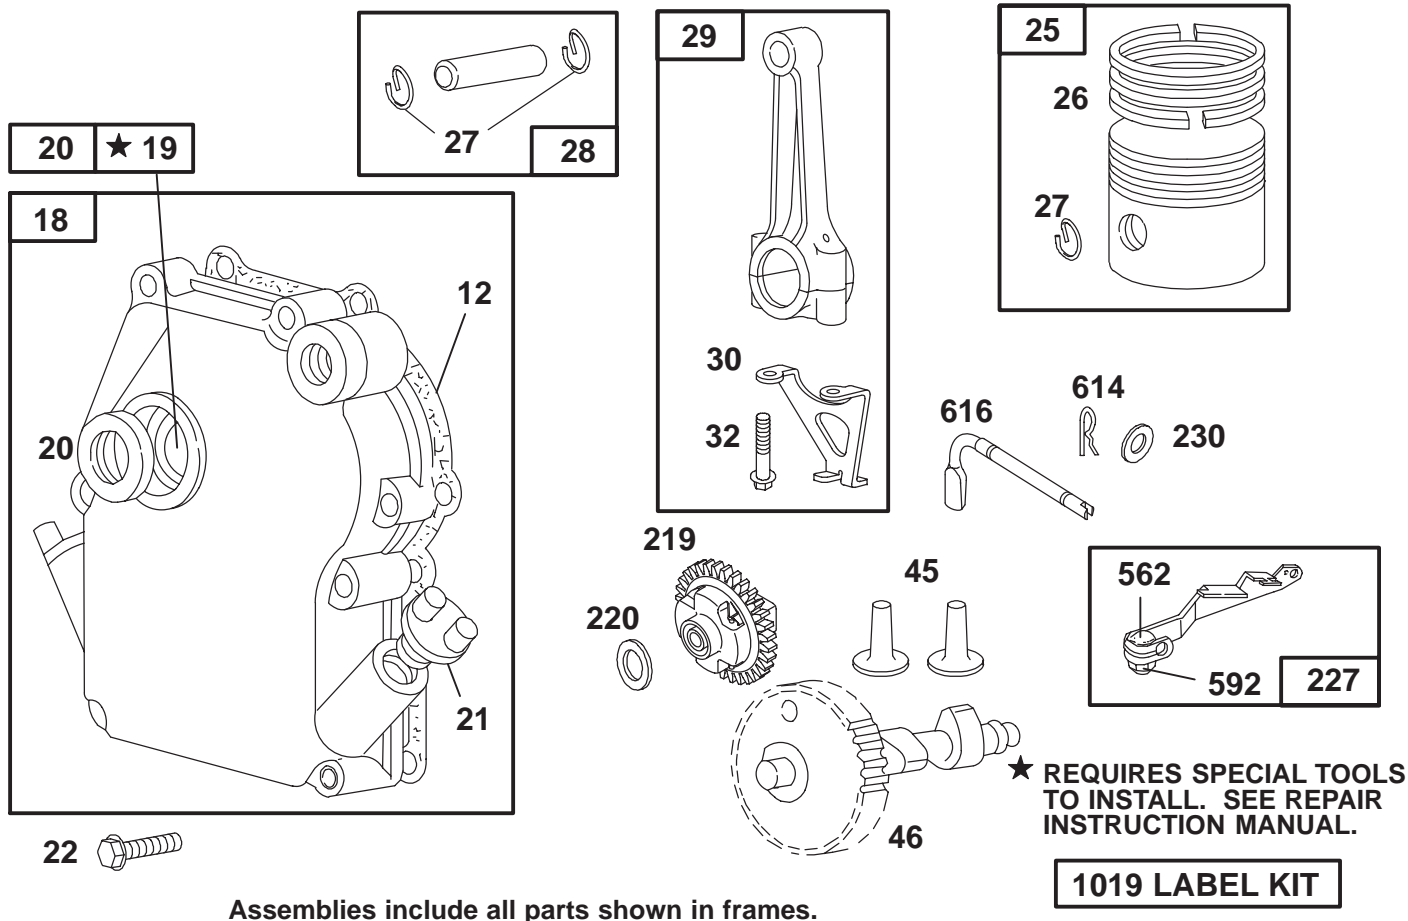


## ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
K12	270080	Gasket—Crankcase (.015" Thick, Std.)	1
★	270125	Gasket—Crankcase (.005" Thick)	1
★	270126	Gasket—Crankcase (.009" Thick)	1
18	494044	Cover Assy.—Crkcase.	1
19	495660	Bushing—Crankcase Cover	1
★20	294606	Seal—Oil	1
21	66768	Plug—Oil Filler	1
22	94682	Screw—Cover Mtg.	1
25	298904	Piston Assy. (Std.)	1
	298905	Piston Assy. (.010" O.S.)	1
	298906	Piston Assy. (.020" O.S.)	1
	298907	Piston Assy. (.030" O.S.)	1
26	298982	Ring Set—Piston Std.	1
	298983	Ring Set—Piston (.010" O.S.)	1
	298984	Ring Set—Piston (.020" O.S.)	1
	298985	Ring Set—Piston (.030" O.S.)	1
27	26026	Lock—Piston Pin	1
		<b>Note:</b> For Chrome Ring Set (Std. Size) Order No. 299742	

Ref. No.	Part No.	Description	No. Used
28	298909	Pin Assy.—Piston (Std.)	1
	298908	Pin Assy.—Piston (.005" O.S.)	1
29	299430	Rod Assy.—Connecting	1
	390985	Rod Conn. (.020" U.S.) Pin Bore	1
30	221890	Dipper—Conn. Rod	1
32	94745	Screw—Conn. Rod	1
45	260642	Tappet—Valve	1
46	212733	Gear—Cam	1
219	494845	Gear—Governor	1
220	221551	Washer—Thrust	1
227	490374	Lever Assy.—Governor	1
230	222450	Washer—Gov. Lever	1
562	92613	Bolt—Governor Lever	1
592	231082	Nut—Hex.	1
614	93306	Pin—Cotter	1
615	93307	Retainer—E-Ring	1
616	231077	Crank—Governor	1
1019	491102	Label Kit	1

★ Included in Gasket Set—Part No. 495603.

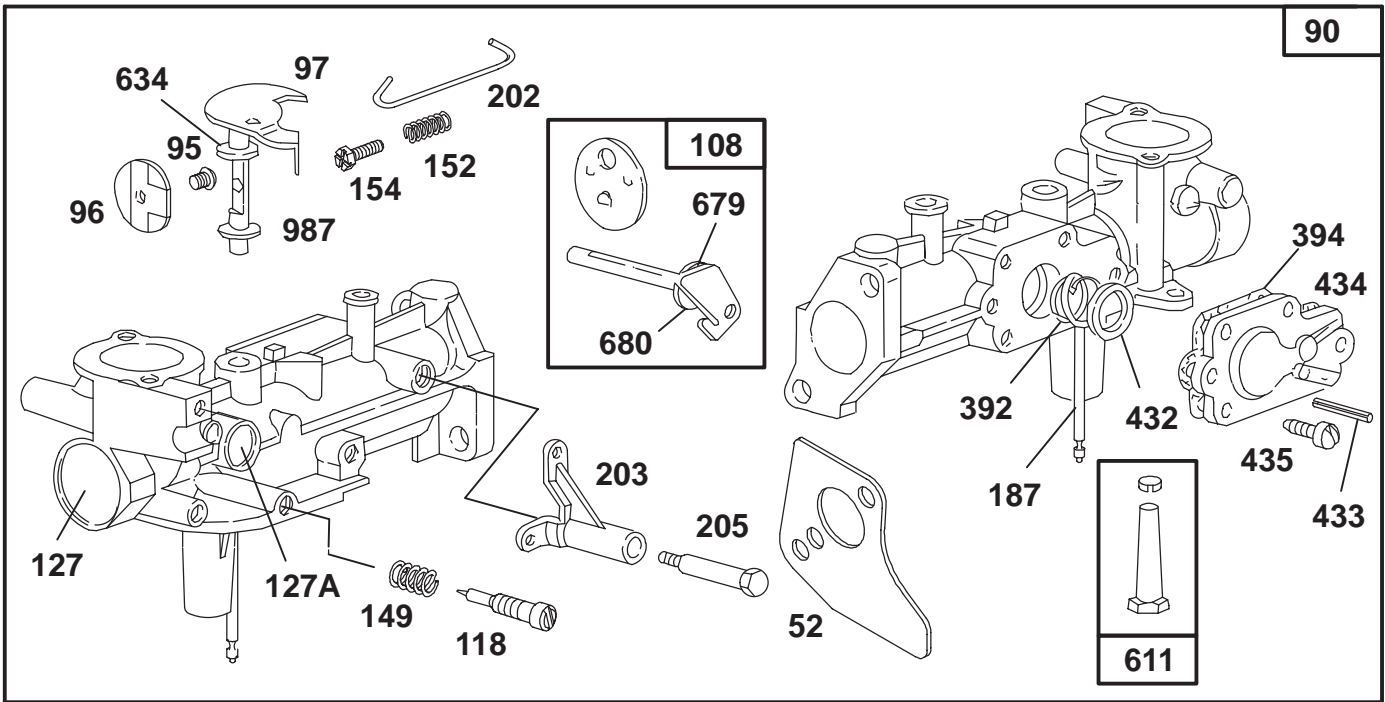

Assemblies include all parts shown in frames.


## ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
★●52	272585	Gasket—Carb. Mtg.	1
90	495951	Carburetor	1
95	93499	Screw—Sem	1
96	223793	Valve—Throttle	1
97	490048	Shaft—Throttle	1
108	495949	Valve—Choke	1
●118	231533	Valve—Needle	1
124	94616	Screw—Hex. Head	1
127	220352	Plug—Welch	1
127A	223789	Plug—Welch	1
149	26336	Spring—Needle Valve	1
152	260575	Spring—Adjustment	1
154	93527	Screw—Rd. Hd.	1
187	231068	Pipe—Fuel Pick-up	1

Ref. No.	Part No.	Description	No. Used
202	262270	Link—Throttle	1
203	280720	Crank—Bell	1
205	231520	Screw—Shoulder	1
392	262328	Spring—Diaphragm	1
●394	272538	Diaphragm—Carburetor	1
432	221377	Cap—Spring	1
433	93265	Pin—Diaphragm Cover	1
434	214021	Cover—Diaphragm	1
435	93141	Screw—Sem	1
611	391813	Tube—Pick-Up	1
634	271853	Washer—Throttle Shaft	1
679	270382	Washer—Foam	1
680	221839	Washer—Brass	1
987	398970	Seal—Throttle Shaft	1

★ Included in Gasket Set—Part No. 495603.

● Included in Carburetor Overhaul Kit—Part No. 495606.

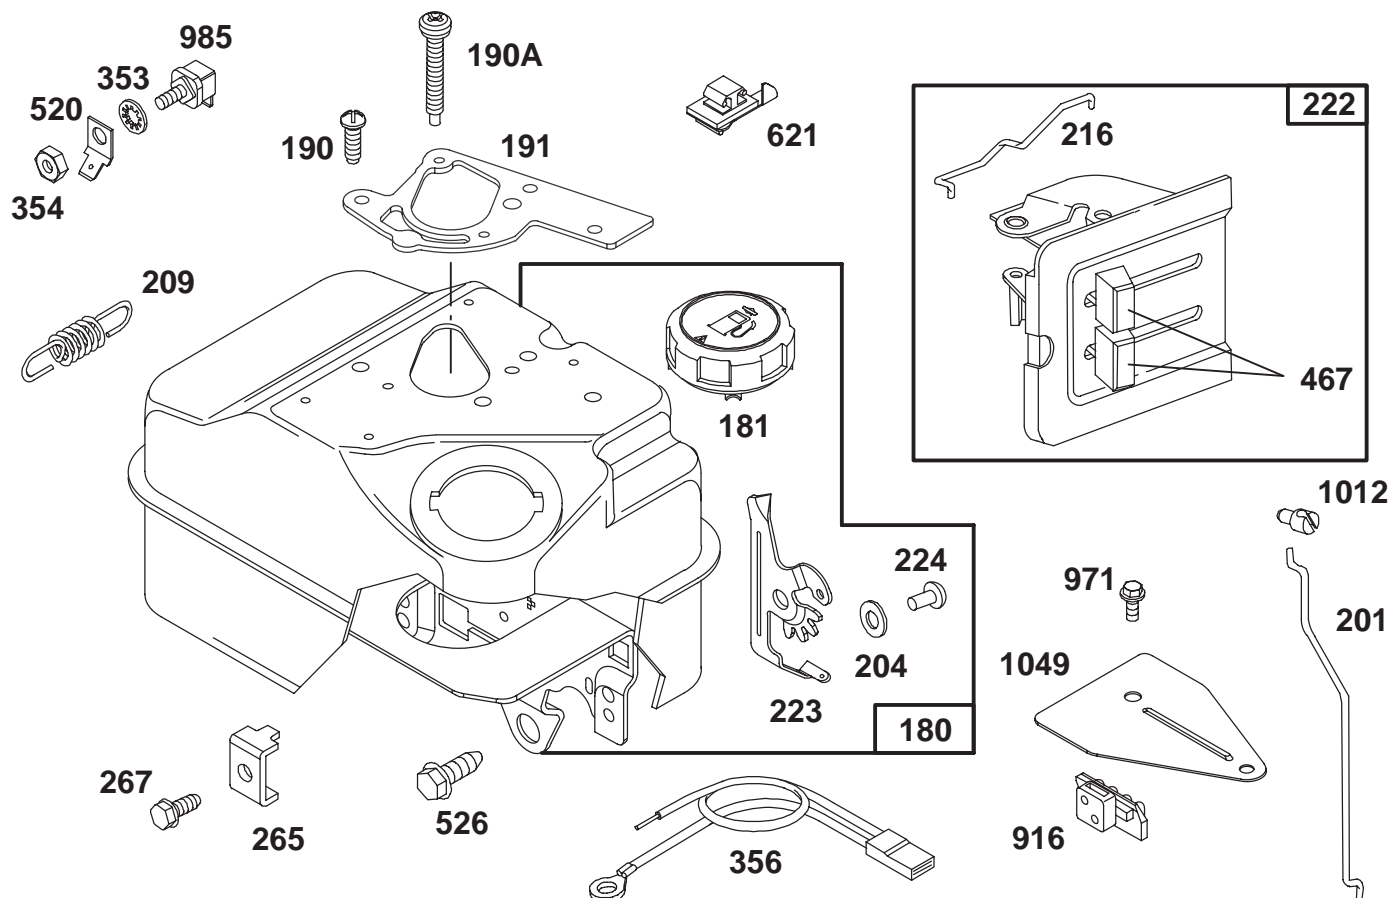


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
180	495405	Tank—Fuel	1	971	93572	Screw	1
181	494559	Cap—Fuel Tank	1	985	398525	Insulator	1
190	94712	Screw—Sem	1	1012	490507	Retainer—Link	1
190A	94677	Screw—Sem	1	1049	224728	Support—Control	1
★●191	272489	Gasket—Tank Mtg.	1	414	220982	Washer	1
201	262280	Link—Governor	1	414A	221198	Washer	1
204	222962	Bushing—Lever	1	971	94018	Screw—Hex. Hd.	1
209	262283	Spring—Governor	1	995	223814	Bracket—Link	1
216	262359	Link—Choke	1	1012	490507	Retainer—Link	1
222	490649	Bracket—Control	1	1049	224728	Support—Control	1
223	223455	Lever—Gov. Control	1	224	93491	Rivet—Gov. Control Lever	1
224	93491	Rivet—Tubular	1	265	221535	Clamp—Casing	1
265	221535	Clamp—Casing	1	267	93496	Screw—Sem	1
267	93496	Screw—Sem	1	353	92791	Washer—Lock	1
353	92791	Washer—Lock	1	354	90576	Nut—Hex.	1
354	90576	Nut—Hex.	1	356A	398808	Wire—Ground	1
356	398808	Wire—Ground	1	520	93722	Terminal—Spade	1
467	280715	Knob	1	526	94659	Screw—Tank Bracket Mtg.	1
520	93722	Terminal	1	621	396847	Switch—Stop	1
526	94659	Screw—Sem	1	916	280324	Rack—Gear Control	1
621	396847	Switch—Stop	1	985	398525	Insulator Assy.	1
916	280324	Rack—Gov. Gear	1				

★ Included in Gasket Set—Part No. 495603.

● Included in Carburetor Overhaul Kit—Part No. 495606.

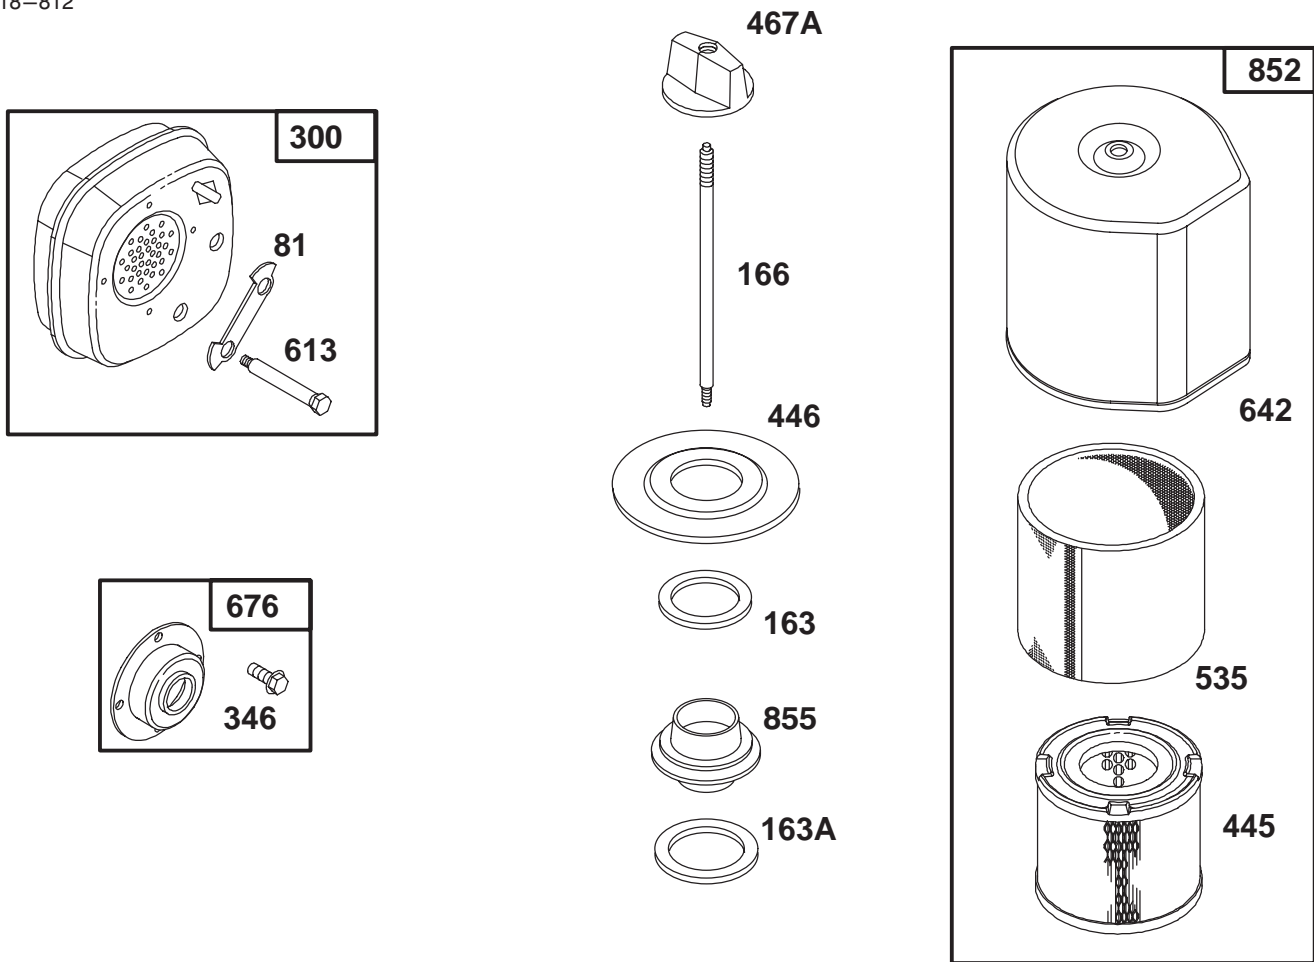


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
81	222263	Lock-Screw	1
★●163	271139	Gasket-Air Cleaner	1
★163A	272631	Gasket-Air Cleaner	1
166	231819	Stud-Air Cleaner	1
300	393615	Muffler-Exhaust	1
346	93705	Screw-Sem	1
445	396424	Filter-Air	1
446	222844	Base-Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
467A	493903	Knob	1
535	271466	Filter-Air	1
613	93935	Screw-Hex. Head	1
642	493822	Cover-Air Cleaner	1
676	395700	Deflector-Exhaust	1
852	396397	Air Cleaner Assembly	1
855	281189	Adapter-Air Cleaner	1

★ Included in Gasket Set-Part No. 495603.  
 ● Included in Carburetor Overhaul Kit-Part No. 495606.

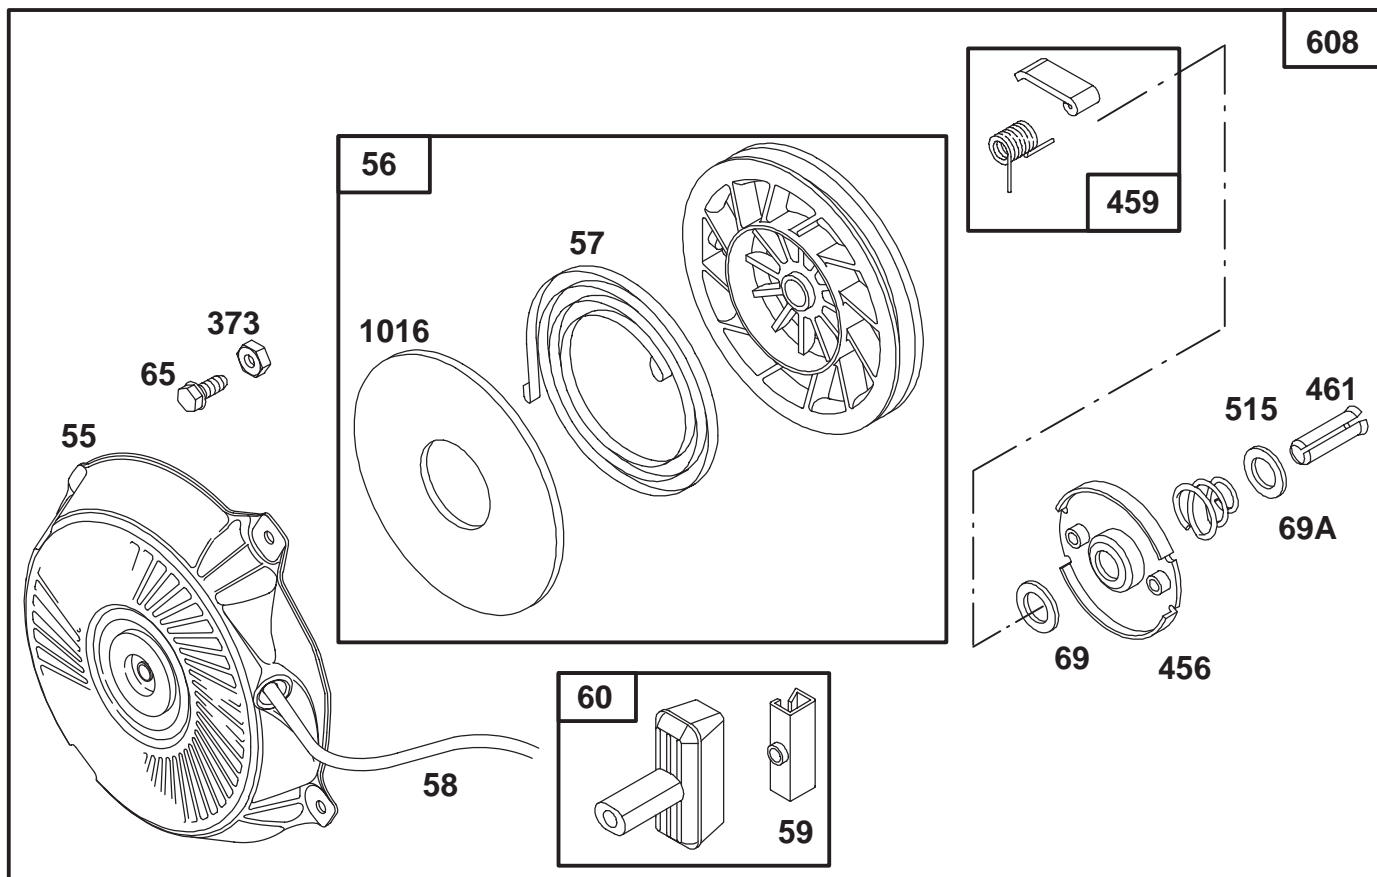


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
55	494846	Housing—Rewind Starter	1
56	493824	Pulley—Starter	1
57	262594	Spring—Rewind Starter	1
58	280406	Rope—Starter (Cut to Length)	1
59	224467	Insert—Starter Handle	1
60	494212	Handle—Rewind Starter	1
65	94686	Screw—Housing Mtg.	1
69	280973	Washer	1

Ref. No.	Part No.	Description	No. Used
69A	224322	Washer	1
373	92987	Nut—Hex.	1
456	224321	Retainer—Spring	1
459	492833	Pawl—Ratchet	1
461	262626	Pin—Spring	1
515	262625	Spring	1
608	495766	Starter—Rewind	1
1016	224278	Spacer	1

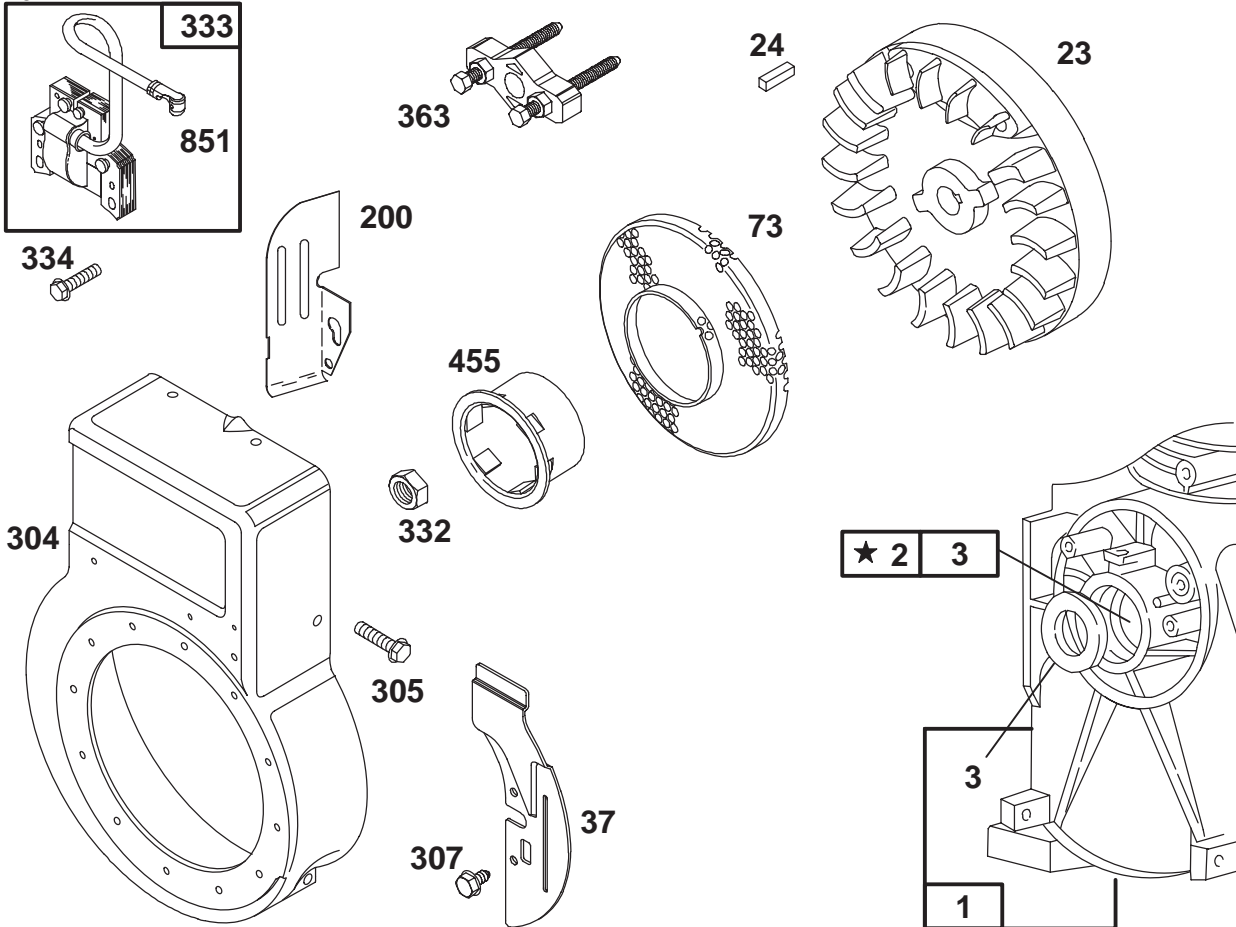



Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
1	395990	Cylinder Assembly	1
2	399268	Bushing	1
★3	299819	Seal-Oil	1
23	297229	Flywheel	1
24	222698	Key-Flywheel	1
37	222443	Guard-Flywheel	1
73	224632	Screen-Rotating	1
200	223886	Guide-Air	1
304	495759	Housing-Blower	1

Ref. No.	Part No.	Description	No. Used
305	94786	Screw-Sem	1
307	94680	Screw-Sem	1
332	92284	Nut-Flywheel	1
333	397358	Armature Group	1
334	93414	Screw-Sem	1
363	19069	Flywheel Puller	1
455	224250	Cup-Flywheel	1
851	221798	Terminal-Cable	1

★ Included in Gasket Set-Part No. 495603.

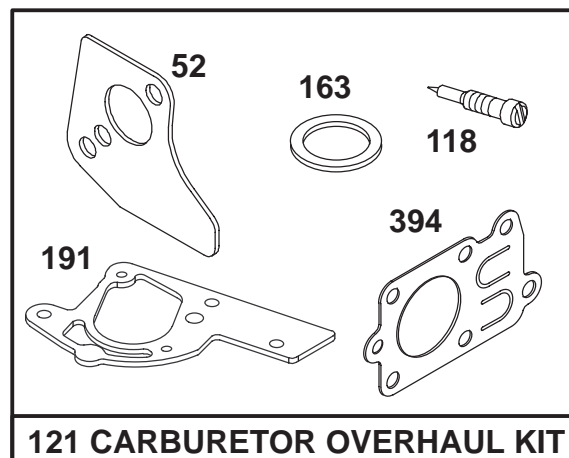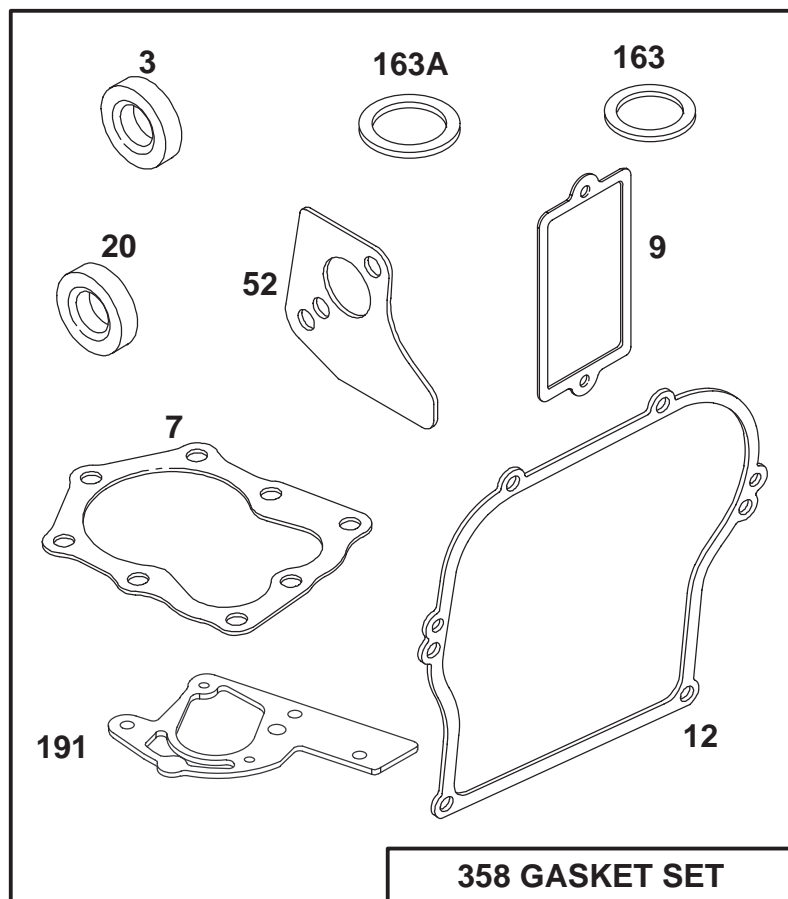

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 135202-0263-01

Ref. No.	Part No.	Description	No. Used
K3	299819	Seal—Oil	1
★7	272157	Gasket—Cylinder Head	1
★9	27549	Gasket—Breather	1
★12	270080	Gasket—Crankcase (.015" Thick, Std.)	1
★	270125	Gasket—Crankcase (.005" Thick)	1
★	270126	Gasket—Crankcase (.009" Thick)	1

Ref. No.	Part No.	Description	No. Used
★20	294606	Seal—Oil	1
★●52	272585	Gasket—Carburetor Mtg.	1
●118	231533	Valve—Needle	1
121	495606	Carburetor Overhaul Kit	1
★●163	271139	Gasket—Air Cleaner	1
★163A	272631	Gasket—Air Cleaner	1
★●191	272489	Gasket—Tank	1
358	495603	Gasket Set	1
●394	272538	Diaphragm—Carburetor	1

★ Included in Gasket Set—Part No. 495603.

● Included in Carburetor Overhaul Kit—Part No. 495606.





# TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-3434	Chain	3	27	1	95-1823	Washer	1	4	1
3-7877	Grip - Handle	5	36	1	251-258	Bearing	3	35	4
7-3590	Washer	3	15	7	256-105	Bushing - Flange	3	24	2
12-5820	Pulley - Idler	4	41	1	256-236	Bearing	3	12	2
12-6700	Pulley - Idler	4	43	1	2710-31	Link - Connecting	3	28	1
20-5410	Spacer - Axle	3	33	2	302-5	Fitting - Grease	3	26	1
20-5450	Cover - Blower	2	17	1	321-4	Screw	3	8	2
20-5460	Spacer	3	16	2	321-4	Screw	2	7	1
20-5560	Plate - Engine	3	38	1	321-9	Screw - Hex Hd. Cap	5	38	2
20-5650	Spacer	5	3	1	321-10	Screw	5	9	2
20-5780	Blower - Intake	2	21	1	322-2	Screw - Hex. Hd.	3	13	4
20-5820	Bracket - Adjustment	5	1	1	322-5	Screw	3	32	6
20-5870	Shaft	3	10	1	322-8	Screw	5	2	3
20-5890	Housing - Blower	2	10	1	322-8	Screw	3	30	4
20-5950	Collar	3	22	2	322-9	Screw - Hex. Hd.	5	18	4
20-5960	Wheel - Friction	3	17	2	323-10	Screw	3	39	1
20-5990	VBelt	4	51	1	323-19	Screw	4	42	1
20-6000	Idler Assembly	3	25	1	3210-2	Screw	4	54	3
20-6100	Wheel	3	34	2	3211-5	Screw	2	15	1
20-6110	Spring	5	30	1	3217-9	Nut	4	48	2
20-6130	Chute - Vacuum	2	4	1	3230-16	Bolt - Carriage	3	31	2
20-6830	Flap - Rubber	1	10	1	3230-18	Bolt - Carriage	2	9	3
20-6840	Clamp - Flap	1	9	1	3245-38	Screw - Set	3	23	2
20-7270	Shaft - Friction	3	9	1	3253-4	Washer - Lock	4	55	3
20-8680	Bracket - Idler Mount R.H.	4	45	1	3254-4	Washer - Lock	4	47	2
20-8690	Bracket - Idler Mount L.H.	4	40	1	3255-17	Washer - Lock	5	6	3
20-8780	Ring - Retaining	5	7	1	3256-3	Washer - Flat	5	4	1
23-3320	Caster	4	46	2	3256-25	Washer - Flat	2	22	1
23-3410	Handle - Adjustment	5	27	1	3256-26	Washer	3	20	1
23-3520	Spring	3	6	1	3256-29	Washer - Flat	3	37	1
23-3570	Handle - Upper	5	32	1	3256-51	Washer	1	11	5
23-3610	Throttle Control	5	12	1	3263-9	Rivet	5	33	2
23-3620	Spacer	5	14	2	3272-7	Pin - Cotter	3	19	2
33-2410	Rod - Connecting	5	22	1	3272-17	Pin - Cotter	3	36	3
33-2830	Mount - Bodine	5	25	1	3290-250	Pin - Cotter	5	20	2
37-9210	Guard	3	14	2	3290-340	Washer - Lock	2	14	1
39-4660	Bracket - Housing	2	6	1	3290-378	Cable Tie	5	15	2
39-4680	Bracket - Mounting	4	57	1	3290-417	Rivet - Pop	1	8	5
40-7000	Snout Assembly	1	1	1	3290-418	Nut - Push On	5	34	2
43-6830	Bracket - Mounting	3	21	2	3290-436	Washer - Belleville	3	1	1
46-8082	Guide - Rope	5	37	1	3290-436	Washer - Lock	2	8	1
57-3220	Bolt - Carriage	2	18	1	3296-23	Nut - Lock	4	49	2
66-1640	Support - Bag	5	19	1	3296-29	Nut	3	11	14
67-7720	Decal - Toro Vacuum	1	2	1	3296-29	Nut - Lock	2	16	3
71-3540	Bag - Vacuum	5	16	1	3296-29	Nut - Lock	5	17	6
93-3677	Fan Assembly	2	13	1	3296-39	Nut	4	44	2
93-4124	Blower - Exhaust	2	20	1	3296-42	Nut	3	4	1
93-4137	Decal - Adjustment	5	35	1	3296-42	Nut - Lock	5	29	3
93-4138	Decal - Warning	2	19	1	3296-58	Nut	4	53	1
93-4139	Decal - Caution	2	2	3	3296-58	Nut - Flange Hd.	1	3	1
93-4139	Decal - Caution	1	5	1	3296-58	Nut - Flange Lock	2	5	3
93-4141	Decal - Traction Control	5	11	1	32104-72	Screw - Self Tapping	5	13	2
93-4146	Support - Front Wheel	4	50	1	32111-7	Nut	5	8	1
93-7414	Guard	4	52	1	32121-4	Pin - Roll	3	18	2
93-7692	Shield - Muffler	3	3	1	32128-13	Nut - Flange	5	31	1
93-8461	Guard	3	7	1	32128-26	Nut - Flange	2	1	1
93-8463	Cable - Forward	5	28	1	32140-32	Screw - Self Tapping	3	5	1
93-8464	Lever	5	10	1	32144-112	Screw - Special	5	5	1
93-8721	Extension - Exhaust	4	56	1	32149-5	Nut	5	26	2
93-9331	Handle - Lower	5	23	1					
93-9841	Screw	3	29	4					

\*Not Illustrated