



314-H GT

Garden Tractor

Model No. 73403 – 7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Hood Assembly	1	Hydrostatic Transmission (Continued)	22
Frame Axle and Steering System	2	Eaton Hydrostatic Transmission #110-062	23
Hoodstand, Console	3	Eaton Hydrostatic Transmission #110-062	24
Footrest & Hoodstand Side Covers	4	Air Cleaner	25
Gauges, Warning Lights & Controls	5	Carburetor	26
Hydraulic Lift System	6	Governor Linkage	27
Hydraulic Lift System	7	Fuel Pump	28
Hydro Controls, Brake System	8	Baffles And Shrouds	29
Hydro Drive, & Parking Brake	9	Breather And Vent	30
Fender, Seat & Tail Lights	10	Flywheel	31
PTO Clutch And Cover	11	Ignition System	32
PTO Clutch System	12	Crankcase And Cylinder Head	33
Engine Assembly	13	Camshaft, Crankshaft And Valves	34
Transmission Control & Filter Assembly	14	Piston And Rings	35
Transmission Control & Filter Assembly	15	Oil Pan And Dipstick	36
Wheel Assemblies	16	Starter	37
Hitch Assembly	17	Wire Harness & Cable Routing	38
Battery Assembly	18	Electric Schematic	39
Fuel Tank Assembly	19	314-H Wire Harness Attachment & Component's	40
Hoodstand Electrical Housing & Wire Harness	20	PC Board & Test Switch	41
Hydrostatic Transmission	21	Note:	

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HSH	hex socket head
ASM	assembly	HWH	hex washer head
CARR	carriage	HWHTF	hex washer head thread forming
DEG	degrees	INC	incorporated
FH	flat head	INCL	includes
GA	gauge	PH	pan head
HF	hex flange	PPH	Phillips pan head
HFW	hex flange washer	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HHST	hex head self tapping	SH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	STD	standard
HSBH	hex socket button head	TAP	self tapping
HSFH	hex socket flat head	TH	truss head

94-1820 Rev. G

TTH Torx truss head

WH wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y*. *X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

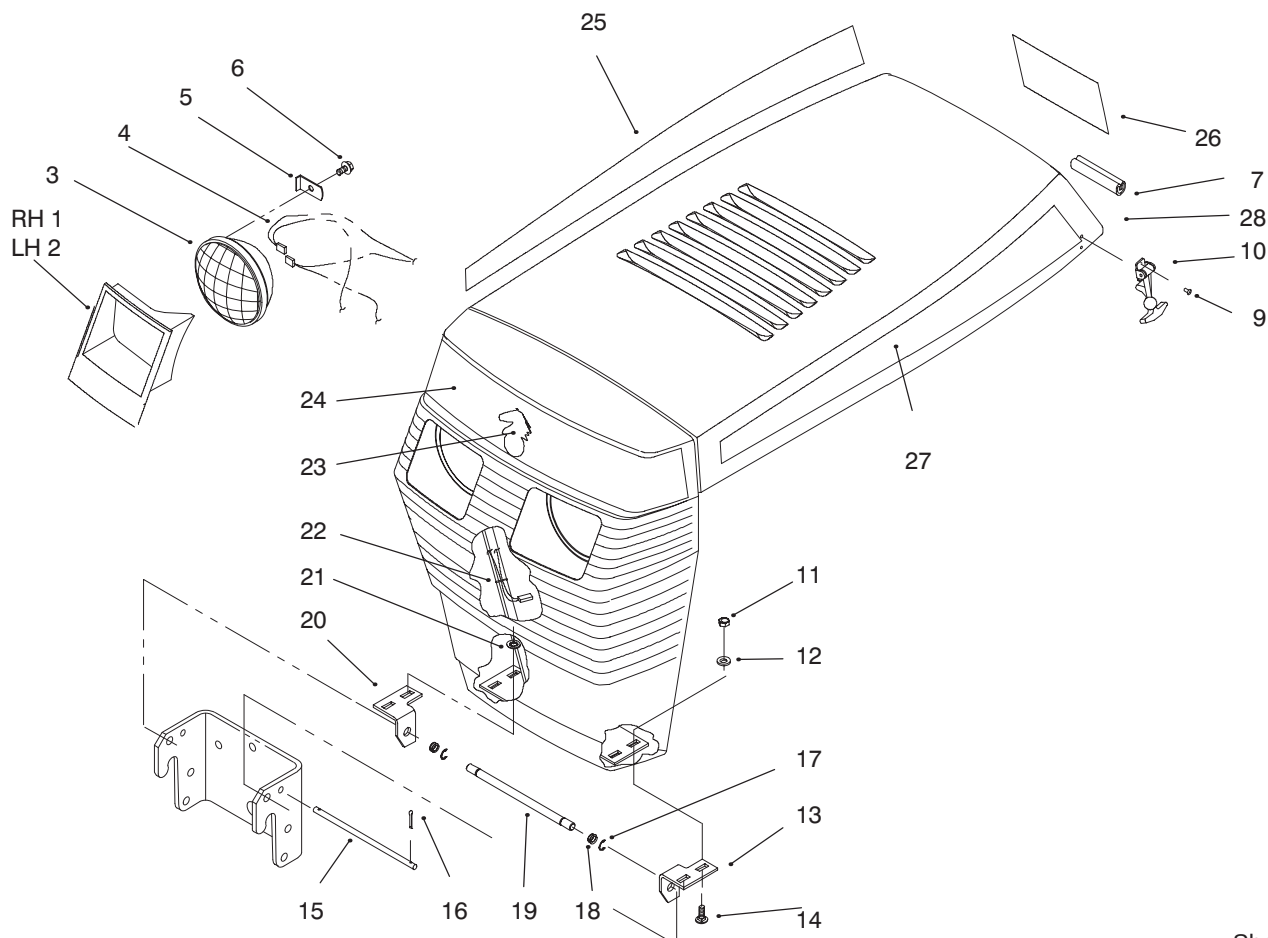

Sheet No.: 2

Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	109495	1	Bezel-LH Headlight
2	109494	1	Bezel-RH Headlight
3	102881	2	Headlamp
4	108130	1	Wire-Ground
5	109459	2	Clamp-Headlight
6	9266714	2	Screw-HWHTF
7	111757	1	Edging
9	117432	4	Poprivet
10	117344	2	Handle-Latch
11	3296-42	4	Nut-Lock
12	3256-22	3	Washer-Flat
13	116747	1	Bracket-Grill LH
14	3229-25	4	Screw-CARR
15	101850	1	Rod-Hood Stop
16	3272-1	2	Pin-Cotter
17	5979	2	Bushing-Nyliner
18	105797	2	Ring-Retaining
19	116745	1	Rod-Grill Pivot
20	116746	1	Bracket-Grill RH
21	3254-2	1	Washer-Lock
23	94-3736	1	Plate-Logo
24	92-9826	1	Decal-Front Hood
25	92-9825	1	Decal-Hood RH
26	92-9837	1	Decal-Danger
27	92-9824	1	Decal-Hood LH
28	112358	1	ASM-Hood & Grill

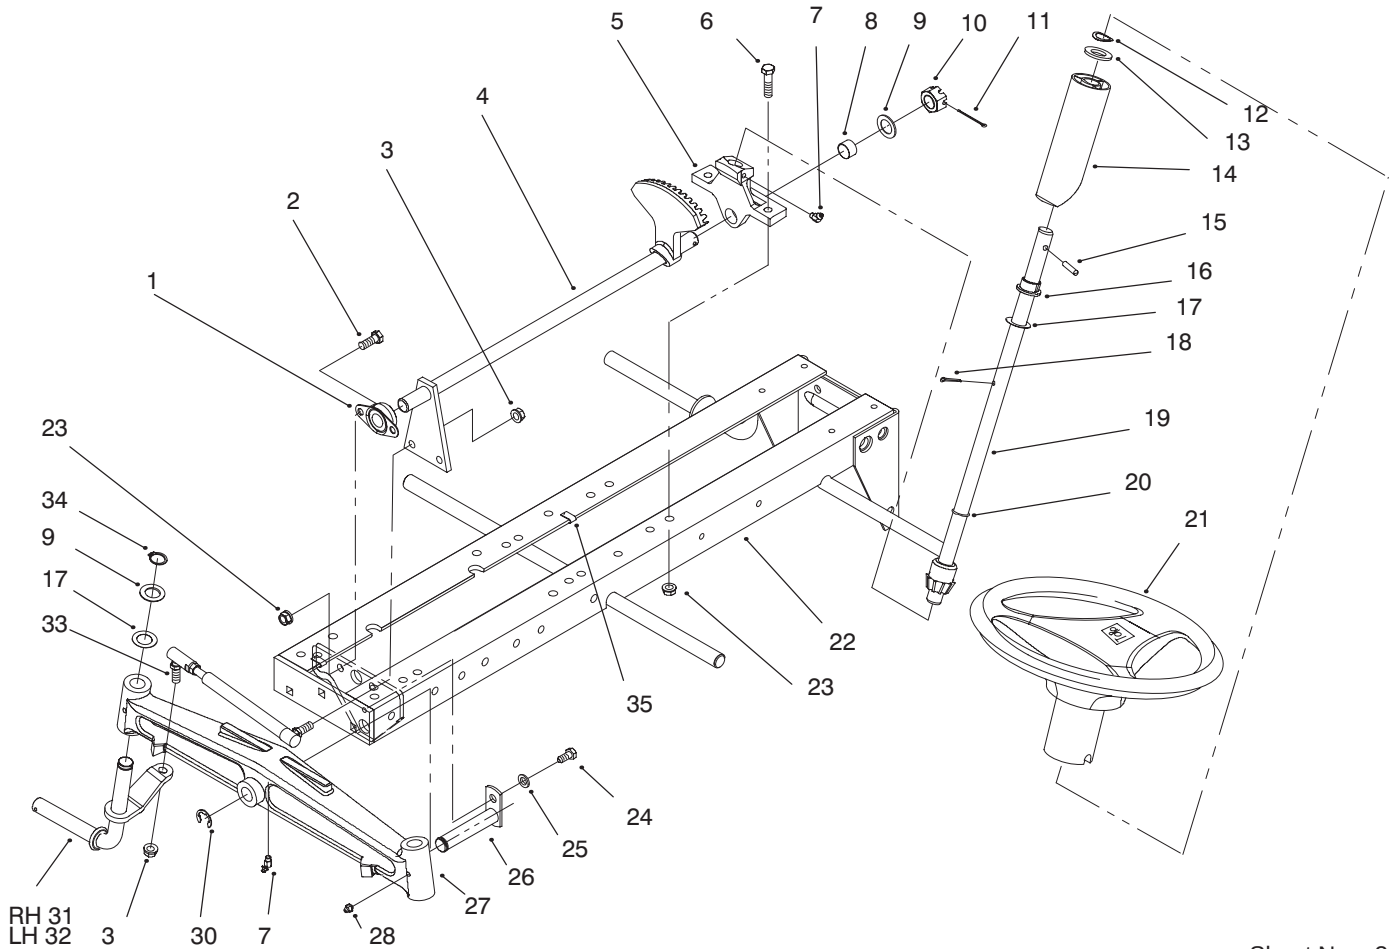


Sheet No.: 3

Frame Axle and Steering System

Ref. No.	Part No.	Qty.	Description
1	6472	1	Bearing-Flanged
2	323-6	2	Screw-HH
3	3296-6	4	Nut-Lock
4	78-2880-01	1	Shaft-Steering
5	88-2710-01	1	Support-Lower Steering
6	323-8	2	Screw-HH
7	302-11	2	Fitting-Grease
8	6397	1	Bearing-Bronze
9	1278	3	Washer-Shim
10	32136-5	1	Nut-Slotted
11	3272-19	1	Pin-Cotter
12	7896	1	Washer-Bowed
13	109262	2	Washer
14	113443	1	Tube-Steering Shaft
15	32121-111	1	Pin-Spiral
16	109189	1	Bearing-Flange
17	5210	14	Washer-Shim
18	3272-21	1	Pin-Cotter
19	92-4987	1	Shaft-Steering
20	237-69	1	O-Ring
21	94-3519	1	Wheel-Steering
21.1	88-3870	1	Cover-Steering Wheel
22	94-6673-01	1	Frame
23	3296-39	4	Nut-Lock
24	322-1	1	Screw-HH


Ref. No.	Part No.	Qty.	Description
25	3253-4	1	Washer-Lock
26	6216	1	Pin-Pivot
27	5638-01	1	Axle-Front
28	302-5	2	Fitting-Grease
30	5618	1	Ring-Retaining
31	113382-01	1	Spindle-RH
32	113381-01	1	Spindle-LH
33	78-2900	2	ASM-Rod
34	32120-93	2	Snap Ring
35	8519	2	Clip-Wire

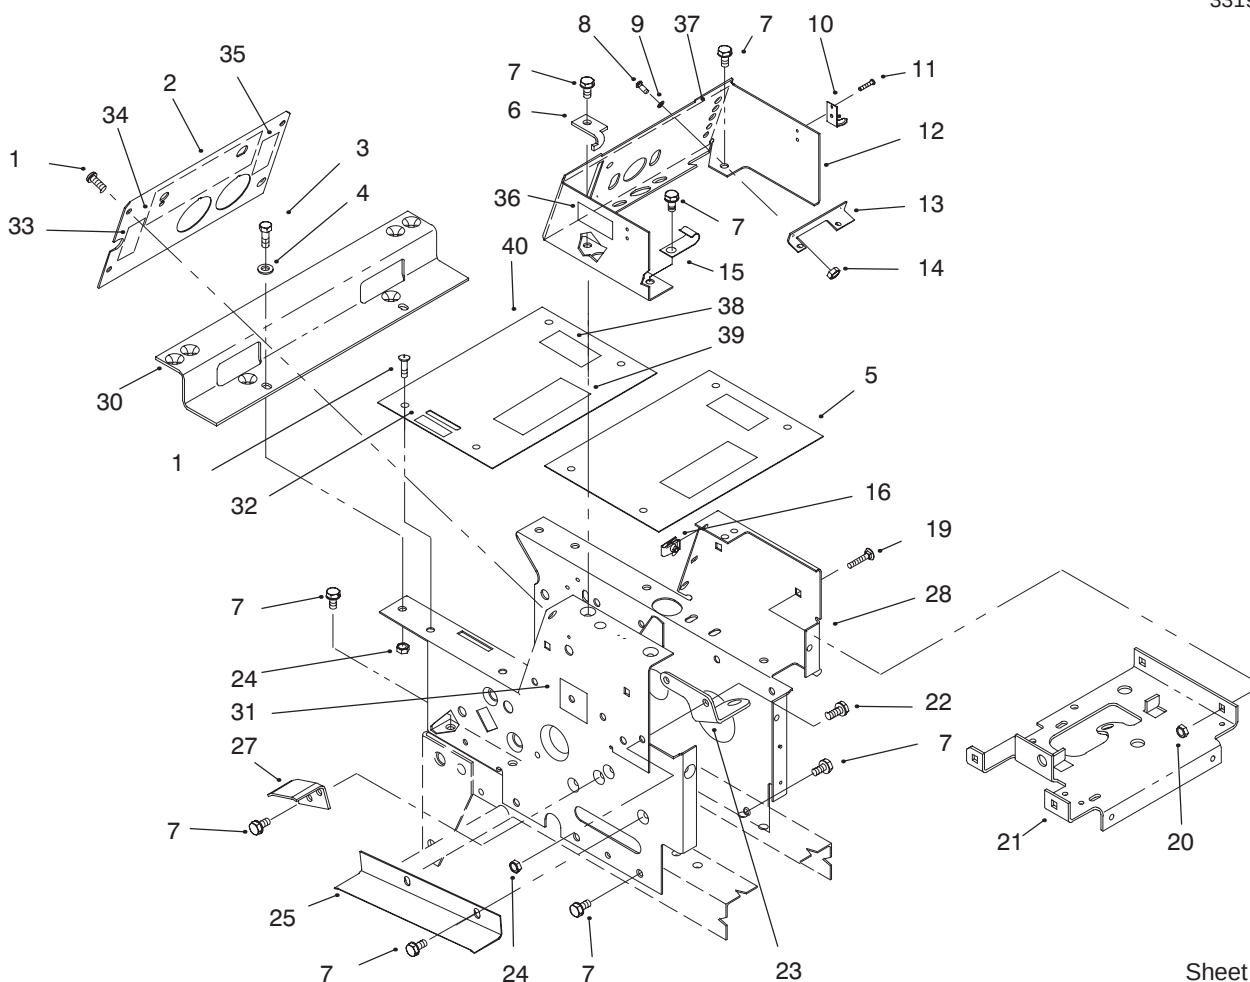

Sheet No.: 7

Hoodstand, Console

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	9108372	8	Screw-Phcr	31	92-9830	2	Decal-314 Hydro
2	78-5620-03	1	Plate-Hoodstand Rear	32	78-9130	1	Decal-Cold Start
3	322-5	2	Screw-HH	33	111960	1	Decal-PTO Clutch
4	3256-23	2	Washer-Flat	34	79-2470	1	Decal-Back Plate
6	112415	1	Stop-PTO	35	78-7300	1	Decal-Choke
7	9266944	17	Screw-HH	36	111926	1	Decal-Elec System
8	9107622	2	Screw-Phcr	37	78-7190	1	Decal-Lower Dash
9	9201504	2	Washer-Lock	38	116445	1	Decal-Parking Brake
10	117343	2	Latch-Hood	39	92-8946	1	Decal-Danger
11	117432	4	Poprivet	40	78-8110-03	1	Plate-Shift
12	78-5610-03	1	Console				
13	112506	1	Bracket				
14	9159604	2	Nut				
15	111392	1	Retainer				
16	107069	4	Nut-Retainer				
19	117371	4	Screw-CARR				
20	9151126	4	Nut				
21	78-3000-03	1	Bracket-Battery Support				
22	322-3	2	Screw-HH				
23	78-1540-03	1	Bracket-Control				
24	3296-29	4	Nut-Lock				
25	106209-03	1	Angle-Belt Guard				
27	108537-03	1	Bracket-Belt				
28	92-1525-03	1	Hoodstand				
30	107951-03	1	Bracket-Fender Front				

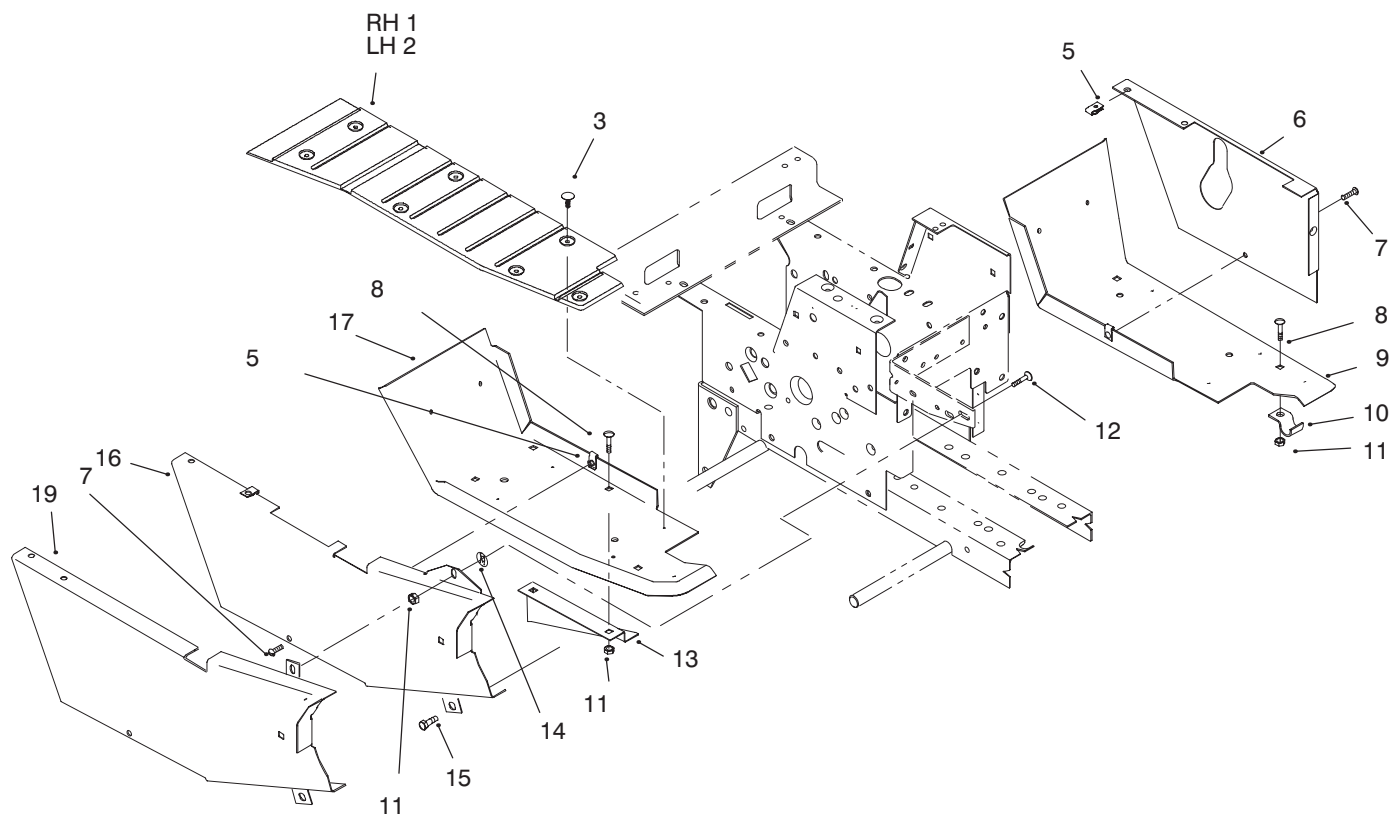


Sheet No.: 9

Footrest & Hoodstand Side Covers

Ref. No.	Part No.	Qty.	Description
1	94-3710	1	Mat-Foot RH
2	94-3712	1	Mat-Foot LH
3	3290-479	16	Fastener-Panel
5	107069	6	Nut-Retainer
6	79-5130-01	1	Cover-Side LH
7	9108372	2	Screw-Phcr
8	116000	4	Screw-CARR
9	94-3522-01	1	Footrest LH
10	7456	4	Clamp
11	3296-29	5	Nut-Lock
12	3230-1	1	Bolt-CARR
14	108457	1	Nut-Push On
15	9266944	1	Screw-HH
17	94-3521-01	1	Footrest RH
19	94-3724-01	1	Belt Guard


Ref. No.	Part No.	Qty.	Description

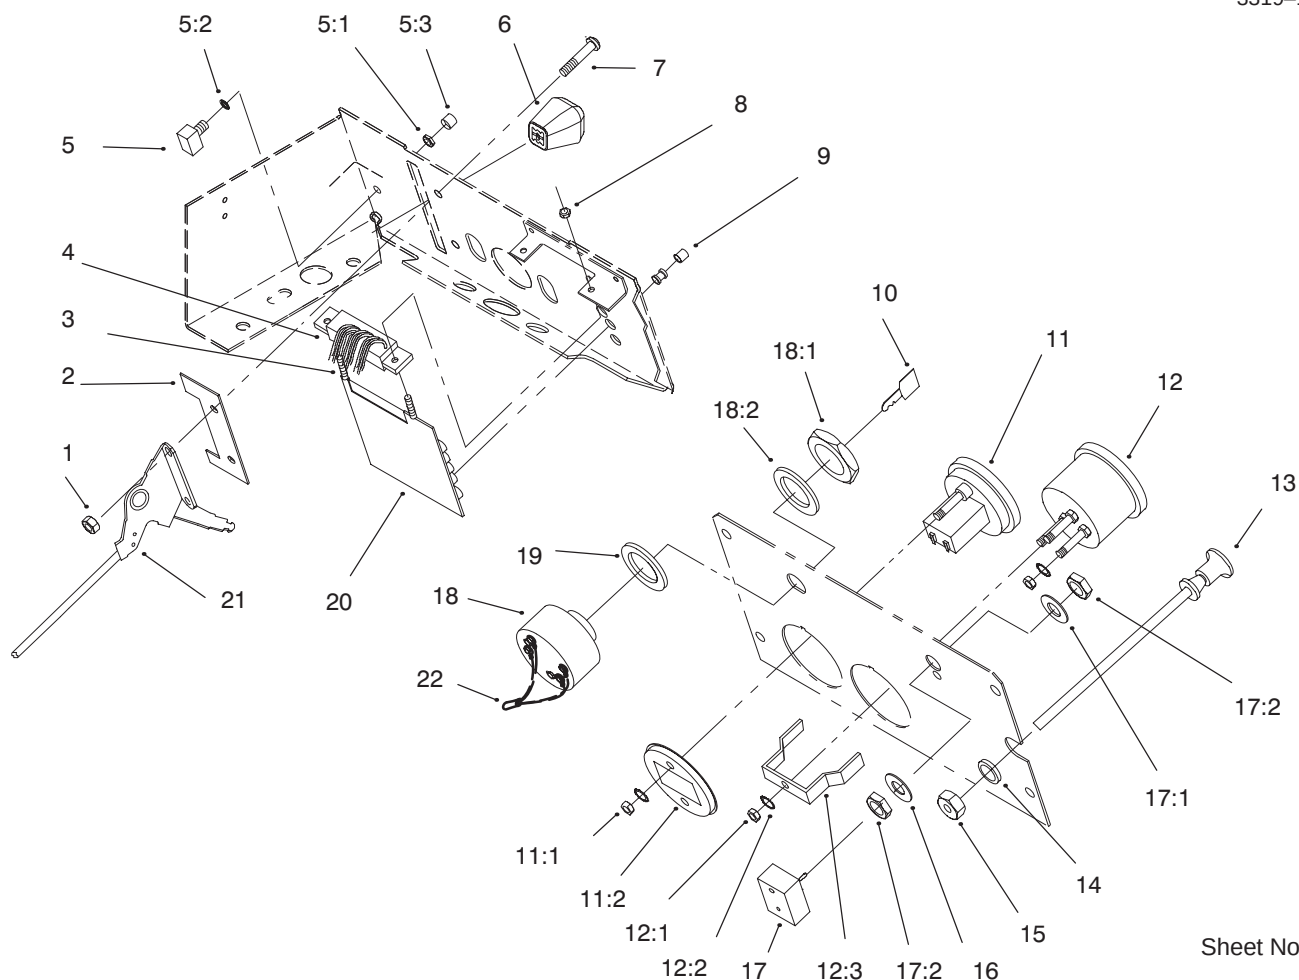

Sheet No.: 11

Gauges, Warning Lights & Controls

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	9157404	2	Nut	17:2	113179	1	Nut-Hex
2	120590-03	1	Stop-Throttle	18	116338	1	Switch-Ignition
3	9107562	2	Screw-Phcr	18:1	101884	1	Nut
4	116723	1	Harness-P C Board	18:2	9201604	1	Washer-Lock
5	116796	1	Switch-Button	19	9202624	1	Washer-Flat
5:1	111359	1	Nut	20	114825	1	Pc Board
5:2	111767		Washer	21	115854	1	Control-Throttle
5:3	117217	1	Button				
6	66-0120	1	Knob				
7	9107922	2	Screw-Phcr				
8	9157324	2	Nut-Lock				
9	111343	5	Lens & Bushing ASM				
10	62-7770	2	Key-Ignition				
11	94-3723	1	Hourmeter				
11:1	32149-9	2	Nut/Washer-Lock				
11:2	94-1849	1	Cup-Retainer				
12	79-0060	1	Voltmeter				
12:1	3217-27	1	Nut-HH				
12:2	3255-25	1	Washer-Lock				
12:3	78-0080	1	Bracket-Mounting				
13	112214	1	Control-Choke				
14	3256-37	1	Washer-Flat				
15	109530	1	Nut-Hex Palnut				
16	9202594	1	Washer				
17	102138	1	Switch-Light				
17:1	102950	1	Washer-Tab				

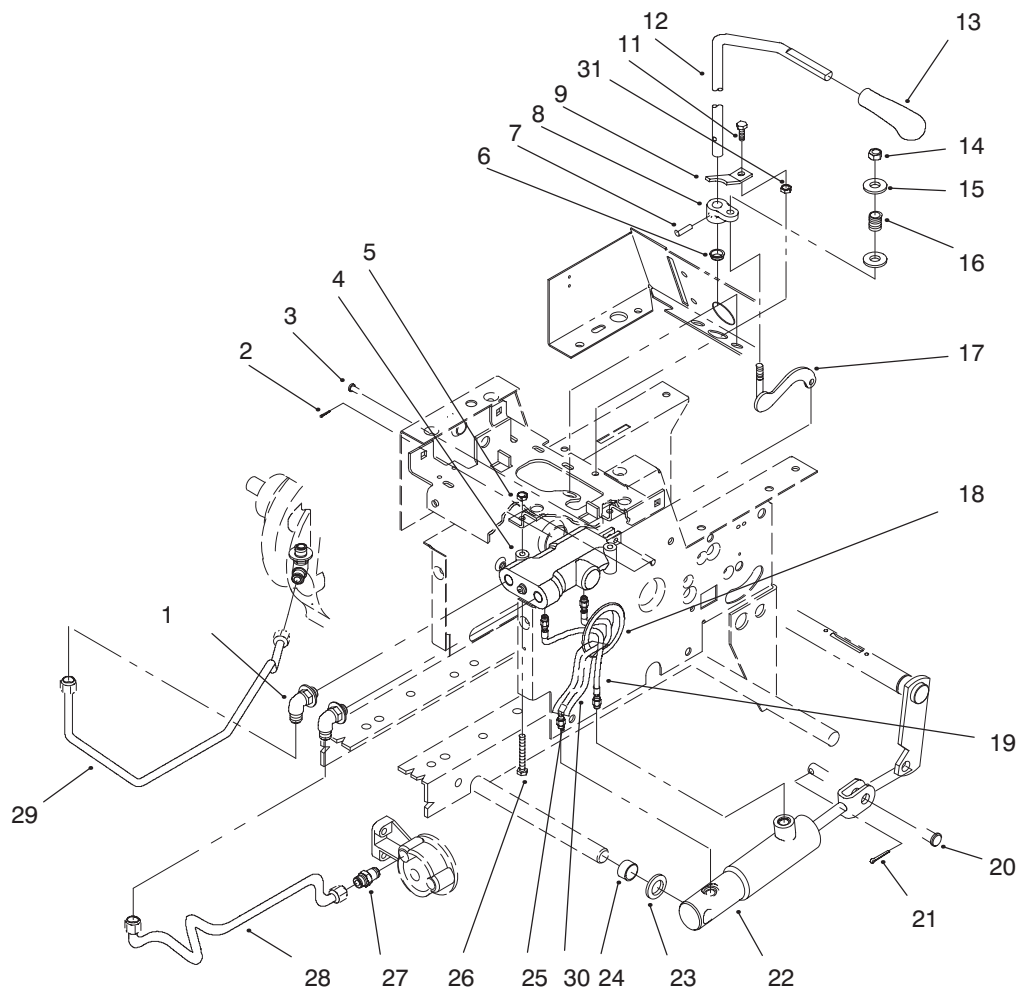


Sheet No.: 14

Hydraulic Lift System

Ref. No.	Part No.	Qty.	Description
1	108365	2	Fitting-Tube
2	3272-1	1	Pin-Cotter
3	9321204	1	Pin-Clevis
4	114000	1	Valve ASM - Hyd
5	3296-42	2	Nut-Lock
6	5983	1	Bushing
7	933198	1	Pin-Spirol
8	116302	1	Arm-Control
9	116305-03	1	Bracket-Control
11	321-4	1	Screw-HH
12	78-5670	1	Rod-Lift Control
13	94-3700	1	Knob-Lift
14	3296-29	2	Nut-Lock
15	3256-23	2	Washer-Flat
16	104841	1	Spring
17	78-5640	1	Valve Actuator Bar ASM
18	106267	1	Grommet
19	110125	1	Hose ASM-Hydraulic
20	9329974	1	Pin-Clevis
21	3272-11	1	Pin-Cotter
22	119340	1	Cylinder-Hydraulic
23	9202324	1	Washer
24	101757	1	Spacer
25	110124	1	Hose ASM-Hydraulic
26	321-11	2	Screw-HH


Ref. No.	Part No.	Qty.	Description
27	102628	1	Fitting-Tube
28	86-9290	1	Tube ASM-Hyd Return
29	86-9280	1	Tube ASM-Hyd Pressure
31	3296-8	1	Nut-Lock

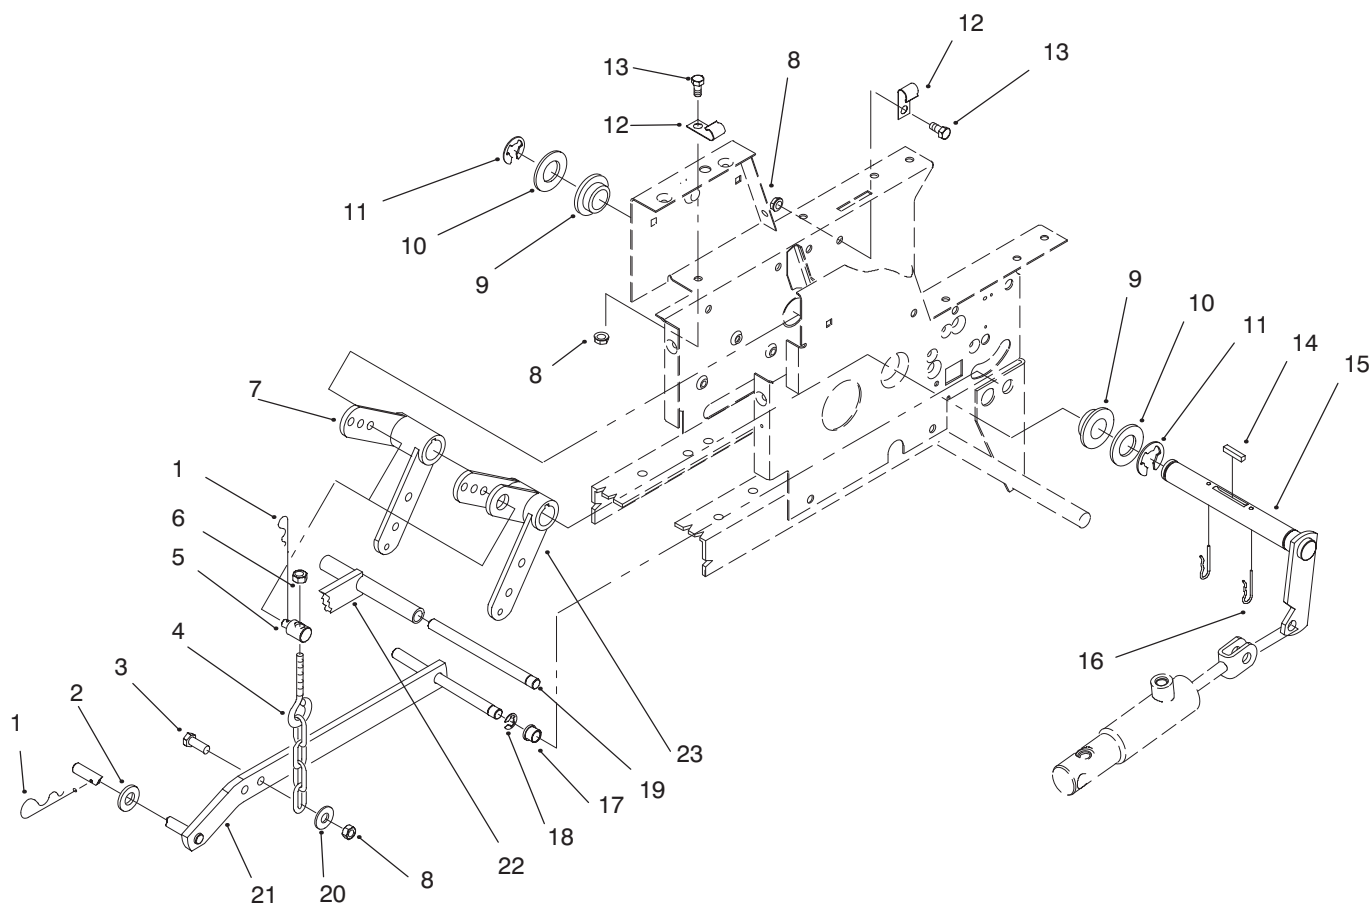

Sheet No.: 15

Hydraulic Lift System

Ref. No.	Part No.	Qty.	Description
1	9335054	2	Hairpin
2	3256-26	1	Washer-Flat
3	322-6	1	Screw-HH
4	106522	1	Chain-Lift
5	6739	1	Trunnion
6	3296-39	1	Nut-Lock
7	78-1550	1	Lever-Lift
8	3296-29	3	Nut-Lock
9	106269	2	Bearing-Flange
10	3256-62	2	Washer-Flat
11	32151-91	2	Ring-Retaining
12	8830	2	Retainer-"J"
13	322-2	2	Screw-HH
14	1121	1	Key
15	121100	1	Lift Arm ASM
16	9335074	2	Cotter-Hairpin
17	6229	1	Bearing
18	32120-47	1	Ring-Retaining
20	3256-23	1	Washer-Flat
21	113445-01	1	Bar-Lift

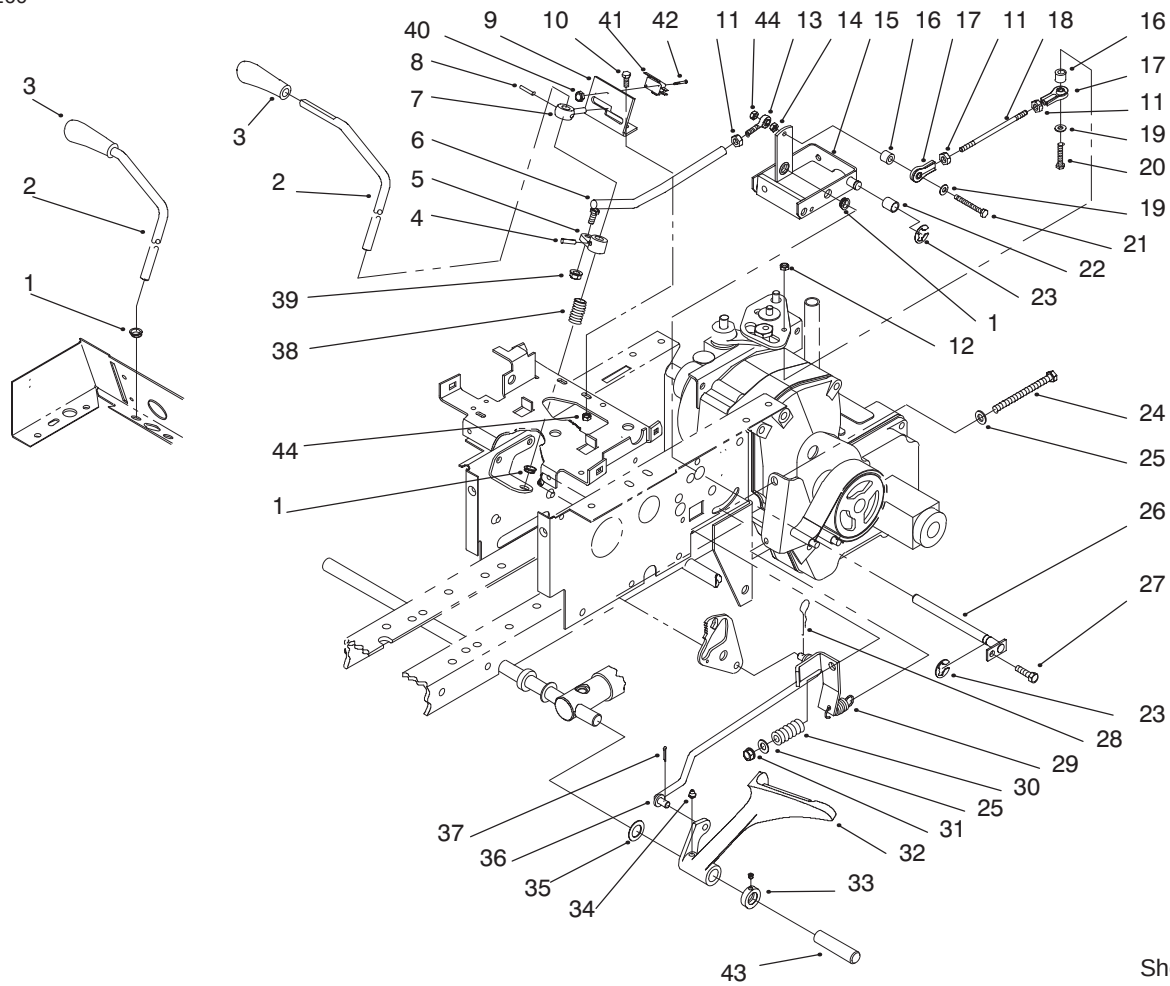


Sheet No.: 16

Hydro Controls, Brake System

Ref. No.	Part No.	Qty.	Description
1	5983	3	Bushing
2	78-5660	1	Rod-Control
3	94-6668	1	Knob-Control
4	933198	1	Pin-Spirol
5	116321	1	Arm-Control
6	116324	1	Rod & Balljoint ASM
7	118660	1	Guide-Control
8	32121-94	1	Pin-Spirol
9	78-5631-03	1	Bracket-Control
10	321-4	2	Screw-HH
11	3220-1	3	Nut-HH
12	3296-42	1	Nut-Lock
13	116407	1	Rod End
14	3217-5	1	Nut-Hex
15	113454-03	1	ASM-Cam Control
16	100304	2	Bearing-Cam Roller
17	110189	2	Rod End ASM
18	108904	1	Rod-Control
19	3256-22	2	Washer-Flat
20	321-9	1	Screw-HH
21	9114584	1	Screw-HH
22	100656	1	Bearing-Cam Return
23	32120-47	3	Ring-Retaining
24	323-23	1	Screw-HH
25	3256-24	2	Washer-Flat
26	108496	1	Pivot

Ref. No.	Part No.	Qty.	Description
27	9266944	1	Screw-HH
28	9335044	1	Hairpin
29	103125	1	Spring-Extension
30	108680	1	Spring-Compression
31	3296-39	1	Nut-Lock
32	94-3707-01	1	Pedal-Brake
33	111383	1	Collar w/Set Screw
33:1	3245-32	1	Screw-Set
34	302-5	1	Fitting-Grease
35	1278	1	Washer-Shim
36	94-6654-01	1	Rod-Brake
37	3272-10	1	Pin-Cotter
38	101853	1	Spring-Compression
39	3296-4	1	Nut-Lock
40	9157324	2	Nut-Lock
41	115230	1	Switch-Clutch
42	9109484	2	Screw-Phcr
43	94-6683	1	Sleeve-Protective
44	3296-8	3	Nut-Lock

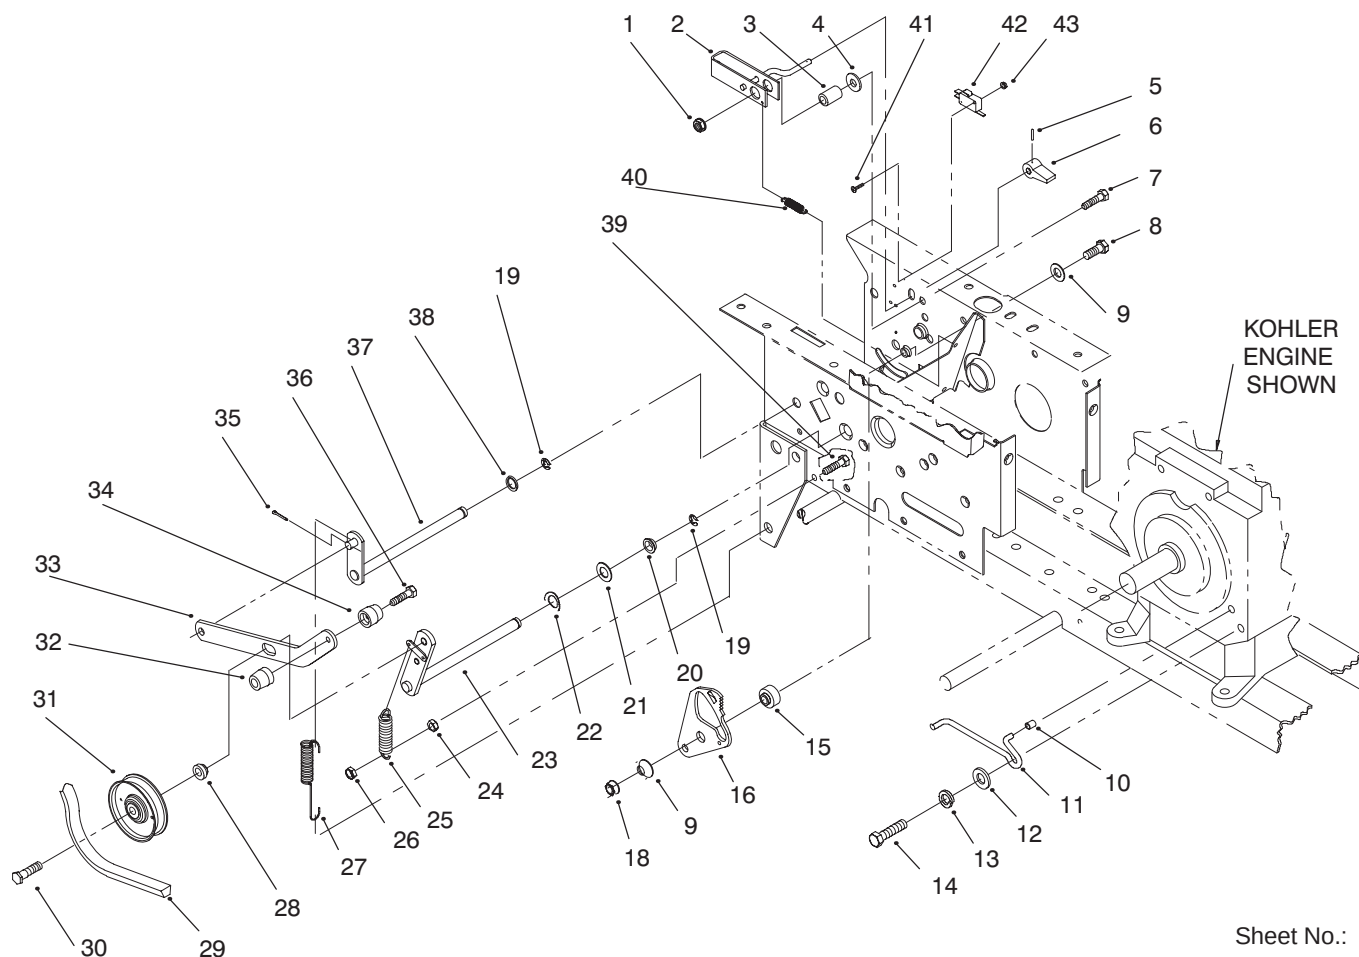


Sheet No.: 17

Hydro Drive, & Parking Brake

Ref. No.	Part No.	Qty.	Description
1	32128-19	1	Nut-Lock
2	78-8500-03	1	ASM-Parking Brake Pawl
3	102025	1	Spacer
4	9202414	1	Washer-Flat
5	933135	1	Pin-Spirol
6	118860	1	Knob-Parking Brake
7	323-9	1	Screw-HH
8	323-8	1	Screw-HH
9	3256-4	2	Washer-Flat
10	112841	1	Cap
11	111242	1	Wire-Guide
12	3256-25	1	Washer-Flat
13	3253-6	1	Washer-Lock
14	324-5	1	Screw-HH
15	108717	1	Spacer-Cam Plate
16	108716-03	1	Plate-Neutral Cam
18	3296-39	1	Nut-Lock
19	32120-47	2	Ring-Retaining
20	7879	1	Bushing
21	3765	1	Washer-Shim
22	114823	1	Washer-Curved Spring
23	106368	1	Idler Arm
24	3217-5	1	Nut-Hex
25	107938	1	Spring-Extension

Ref. No.	Part No.	Qty.	Description
26	3296-42	1	Nut-Lock
27	110769	1	Spring-Extension
28	106450	1	Spacer-Link
29	108501	1	Belt-Drive
30	106193	1	Screw-Spec HH
31	112426	1	Pulley-Idler
32	8693	1	Knob
33	110780-03	1	Handle-Brake & Clutch
34	8722	1	Knob
35	3272-2	1	Pin-Cotter
36	9117474	1	Screw-Phcr
37	106369	1	Lever-Brake
38	9202634	1	Washer-Flat
39	321-6	1	Screw-HH
40	83-2820	1	Spring-Extension
41	9109484	2	Screw-Phcr
42	111332	1	Switch-Interlock
43	9157324	2	Nut-Lock

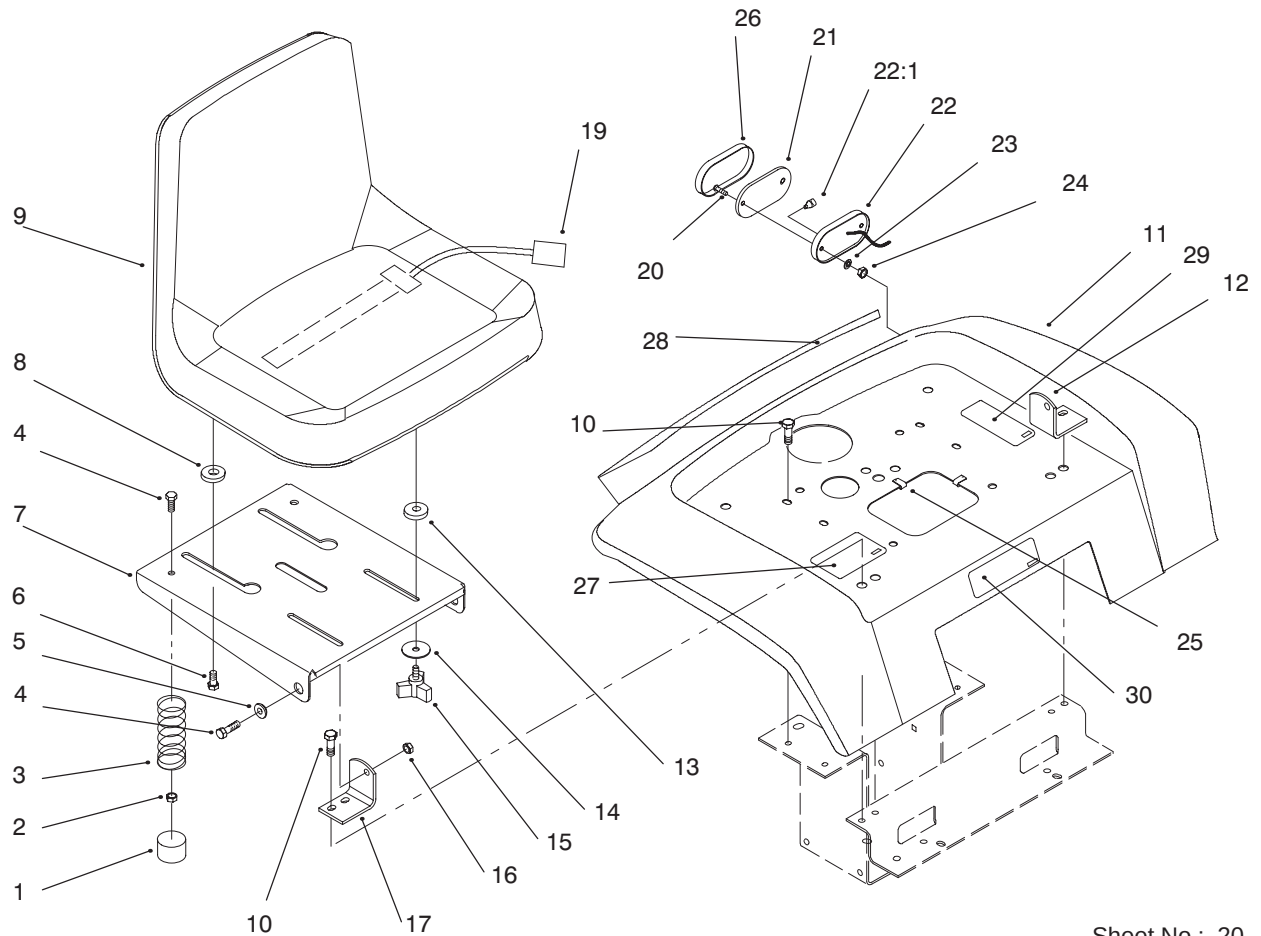


Sheet No.: 20

Fender, Seat & Tail Lights

Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap-Protector
2	3296-58	2	Nut-Flange
3	92-7054	2	Spring-Compression
4	322-4	4	Screw-HH
5	105503	2	Bushing
6	92-6986	2	Bolt-Shoulder
7	92-6972-03	1	Support-Seat
8	92-6750	2	Spacer-Nylon
9	92-6511	1	Seat
10	9266944	8	Screw-HH
11	94-3722-01	1	Fender
12	79-0970-03	1	Bracket-Pivot LH
13	109989	2	Spacer
14	94-2869	2	Washer-Flat
15	700806	2	Knob
16	3296-29	2	Nut-Lock
17	79-0950-03	1	Bracket-Pivot RH
19	38-1420	1	Switch-Seat
20	3250-31	4	Screw-Phcr
22	105202	2	Base-Light
23	3254-1	4	Washer-Lock
24	3296-27	4	Nut-Lock
25	3023	2	Clip
26	112564	2	Lens-Light
27	116446	1	Decal-Do Not Tow

Ref. No.	Part No.	Qty.	Description
28	92-9827	1	Decal-Fender
30	76-1340	1	Decal-USA

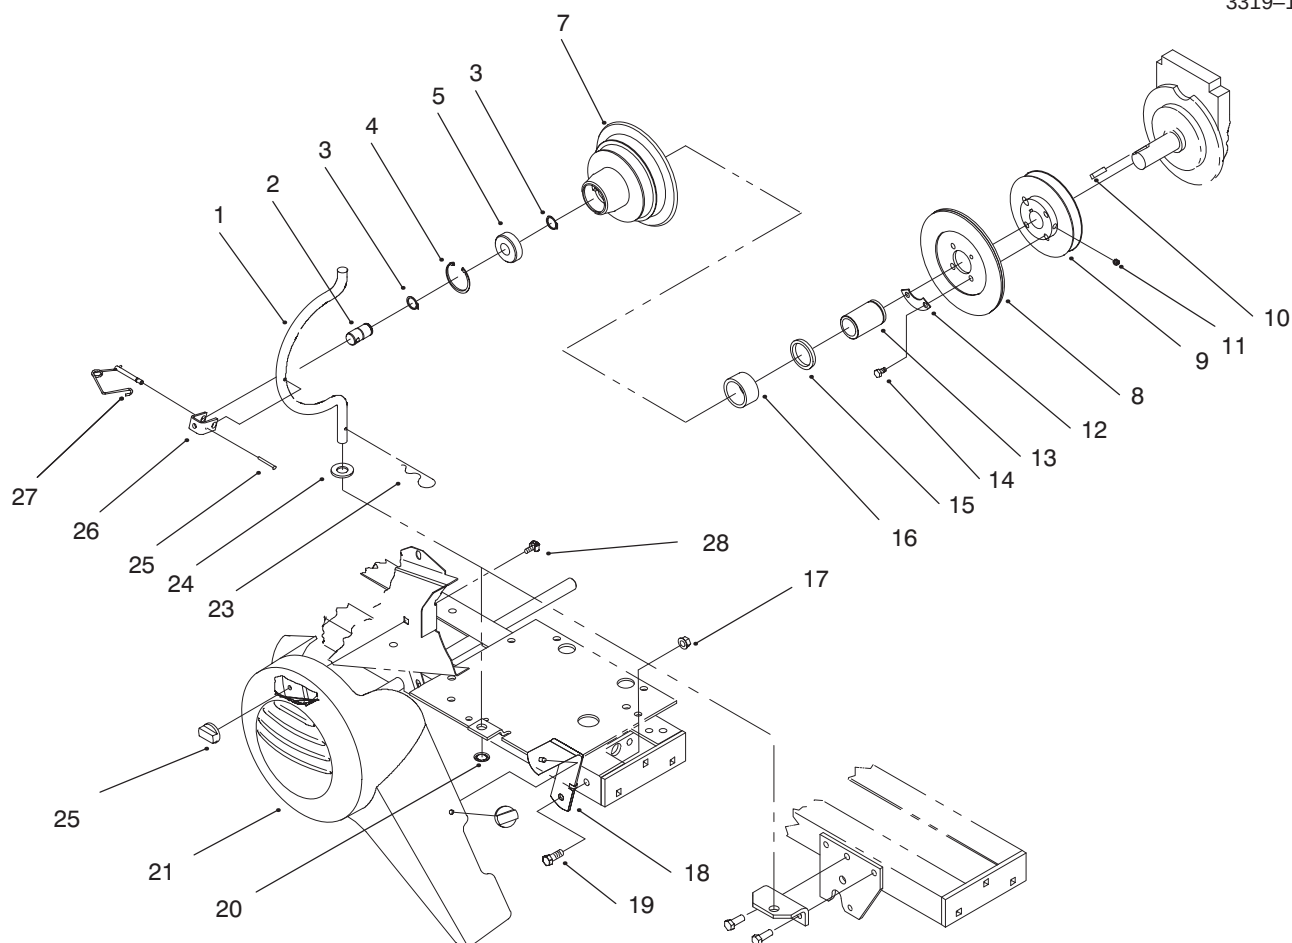


300 SERIES

Sheet No.: 22

PTO Clutch And Cover

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	113108	1	Rod-PTO Housing	27	111314	1	Lock Pin ASM
2	102872	1	Shaft-PTO	28	94-3729	1	Retainer-Bolt
3	32120-72	2	Ring-Retaining				
4	32120-62	1	Ring-Retaining				
5	109842	1	Bearing-Ball				
7	103478-01	1	Housing-Clutch				
8	94-6650	1	ASM-Plate				
9	7443	1	Pulley-Engine				
10	105453	1	Key-Sq				
11	3246-2	2	Screw-HSH Set				
12	6659	2	Retainer				
13	6658	1	Race-Bearing				
14	9080026	4	Screw-Lock				
15	6663	1	Seal-Oil				
16	6662	1	Bearing-Needle				
17	32128-40	1	Nut-Lock				
18	94-3726-01	1	Bracket				
19	323-6	1	Screw-HH				
20	106695	1	Ring-Push On				
21	94-3704	1	Belt Cover-PTO				
22	94-3735	2	Nut-Wing				
23	9335064	1	Hairpin				
24	3256-27	1	Washer-Flat				
25	933274	1	Pin-Spirol				
26	113107	1	Clevis				

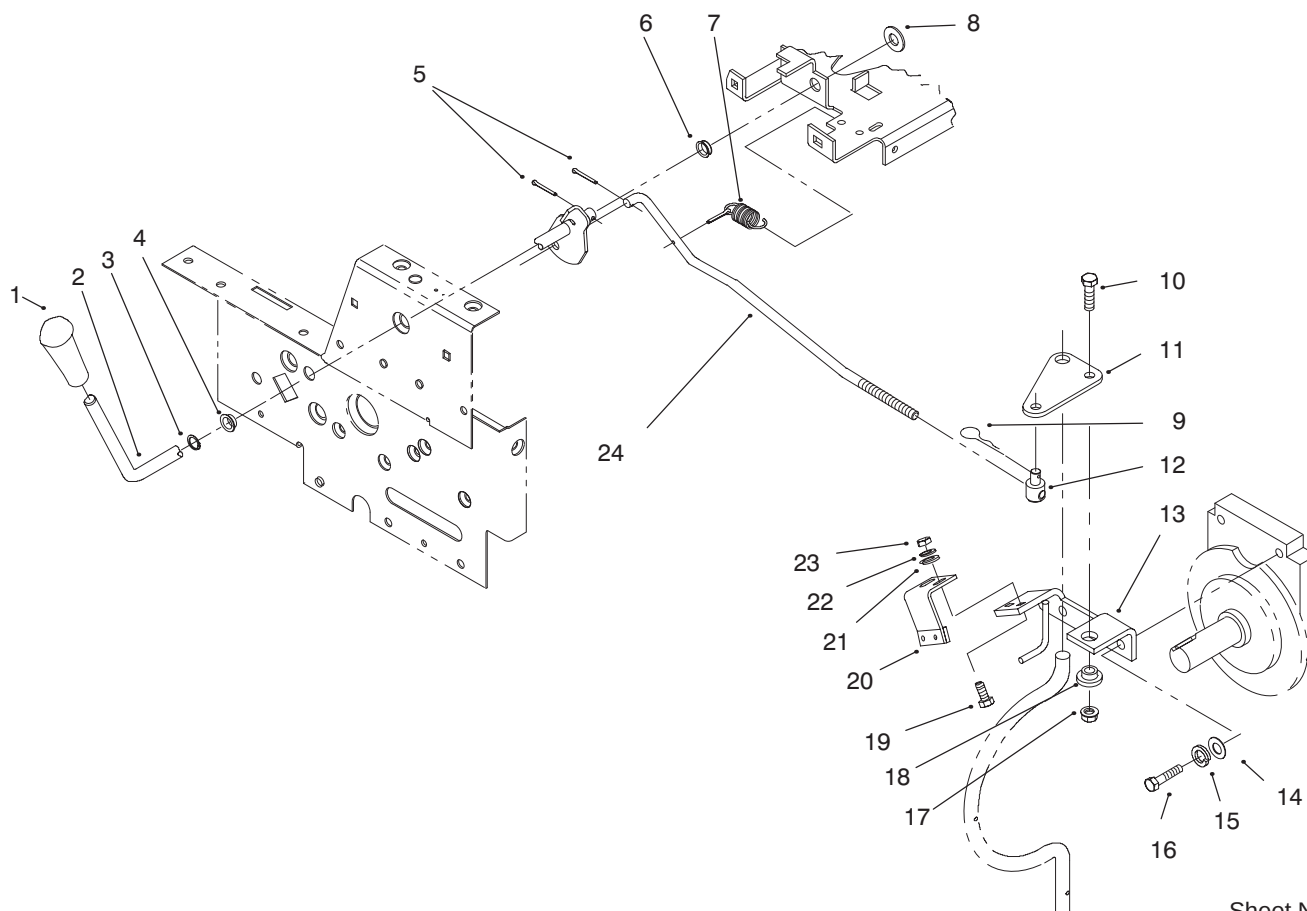


Sheet No.: 23

PTO Clutch System

Ref. No.	Part No.	Qty.	Description
1	94-3727	1	Knob
2	94-3701	1	Rod-PTO Control
3	32151-11	1	Ring-Grip
4	5666	1	Bushing-Nyliner
5	3272-10	3	Pin-Cotter
6	5983	1	Bushing
7	103125	1	Spring-Extension
8	3765	1	Washer-Shim
9	9335054	1	Hairpin
10	323-6	1	Screw-HH
11	110669	1	Plate-PTO
12	110656	1	Trunnion
13	111241-03	1	Bracket-PTO
14	3256-25	2	Washer-Flat
15	3253-6	2	Washer-Lock
16	324-5	2	Screw-HH
17	3296-59	1	Nut-Lock
18	104859	1	Spacer-Link
19	3229-25	2	Screw-CARR
20	94-6652	1	ASM-Brake
21	3256-22	2	Washer-Flat
22	3253-3	2	Washer-Lock
23	3218-1	2	Nut-Jam
24	111052	1	Rod-PTO Clutch


Ref. No.	Part No.	Qty.	Description

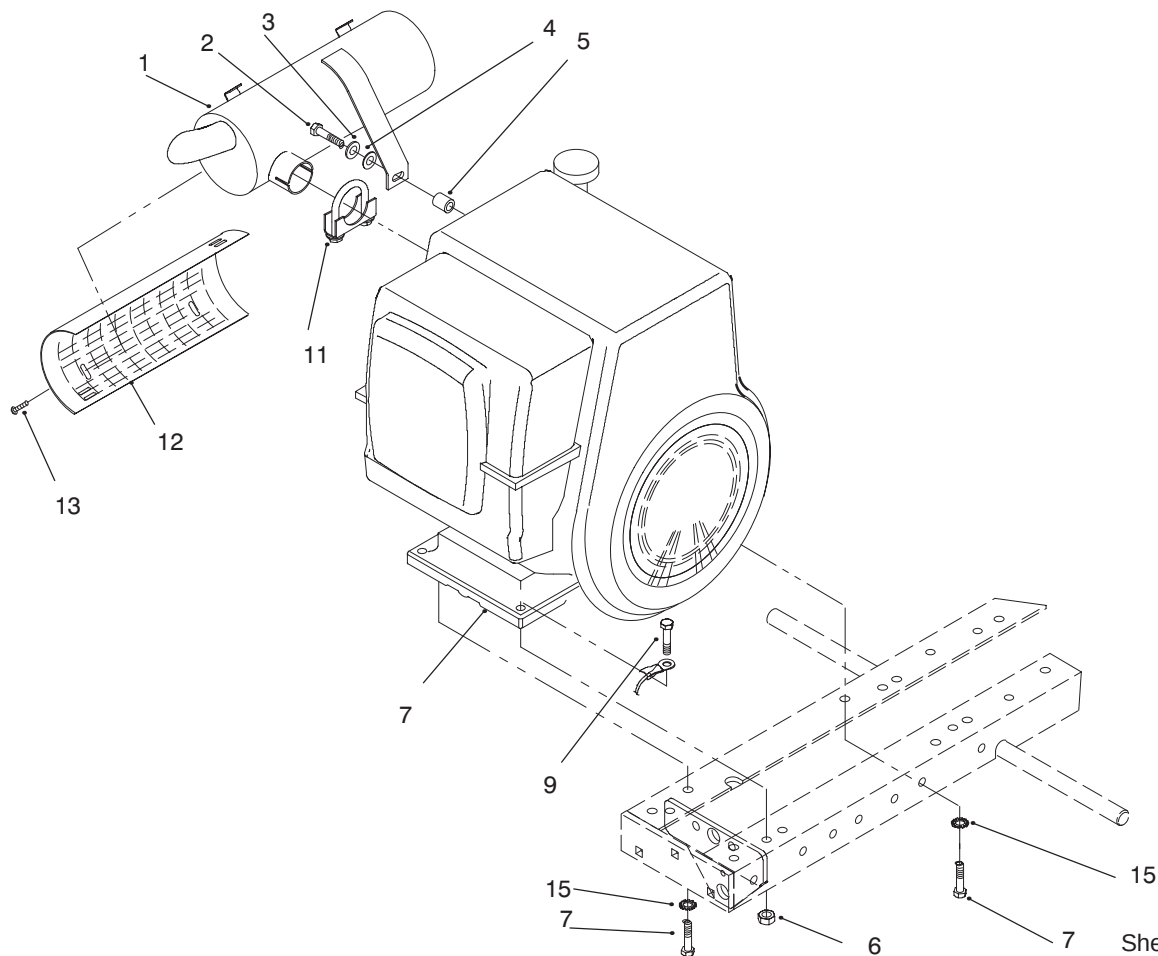

Sheet No.: 25

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	94-3739	1	Muffler
2	322-7	1	Screw-HH
3	3253-4	1	Washer-Lock
4	3256-23	1	Washer-Flat
5	6876	1	Spacer
6	3296-39	2	Nut-Lock
7	323-6	2	Screw-HH
9	323-8	2	Screw-HH
10	92-1532	1	Engine-14 Hp Kohler
11	106858	1	Clamp-Muffler
12	94-3738	1	Shield-Heat
13	9103312	4	Screw
14	109910	1	Wire-Ground
15	3255-9	2	Washer-Lock

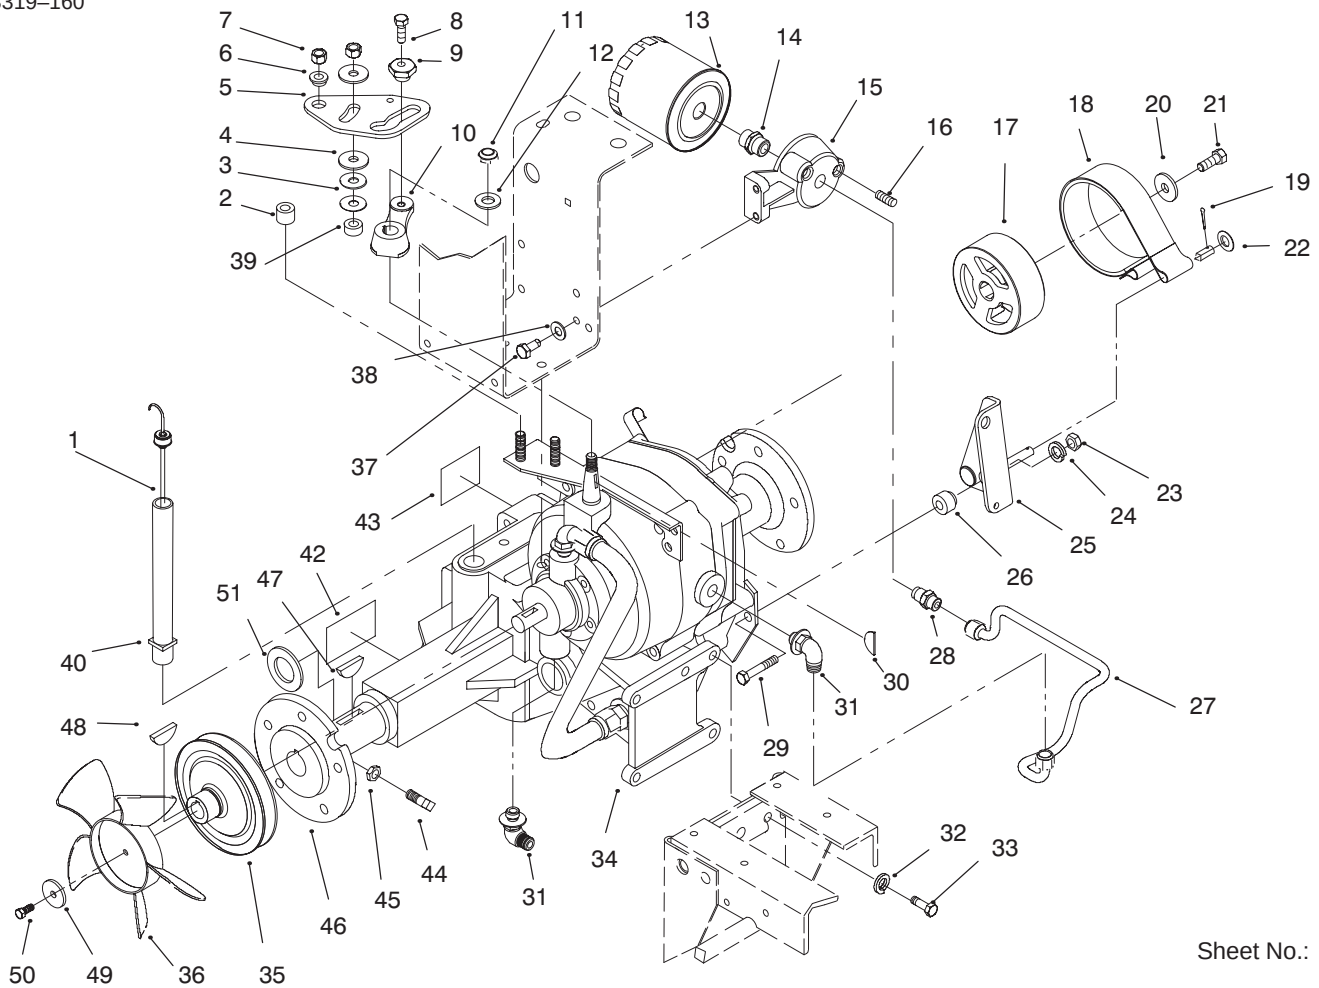


Sheet No.: 28

Transmission Control & Filter Assembly

Ref. No.	Part No.	Qty.	Description
1	110768-03	1	Dipstick
2	108326-03	1	Spacer-Pivot
3	100365	2	Washer-Spring Disc
4	100305	2	Washer-Friction
5	108333	1	Plate-Cam
6	100309	1	Bushing-Cam Pivot
7	108881	2	Nut-Hex
8	9080196	1	Screw-HH
9	106661	1	Cam-Eccentric
10	108325	1	Arm-Speed Control
11	3296-45	1	Nut
12	3256-26	1	Washer-Flat
13	79-5270	1	Filter-Oil
14	5991	1	Fitting-Filter
15	108323	1	Base-Filter
16	281-10	1	Plug-Pipe
17	106719	1	Drum-Brake
18	109371	1	Brake Band
19	3272-6	2	Pin-Cotter
20	2844	1	Washer-Flat
21	3235-22	1	Screw-HH
22	3256-24	2	Washer-Flat
23	3296-39	1	Nut-Lock
24	3256-4	1	Washer-Flat
25	78-7740-01	1	Pivot Arm-Brake
26	109356	1	Bushing-Pivot

Ref. No.	Part No.	Qty.	Description
27	79-5020	1	Tube Cmplt- Fltr To Pump
28	102628	1	Fitting-Tube
29	323-9	1	Screw-HH
30	3257-24	1	Key-Woodruff
31	108365	2	Fitting-Tube
32	3253-21	4	Washer-Lock
33	323-7	4	Screw-HH
34		1	Transaxle/Decal Incl 32 33
35	108316	1	Pulley-Hydro
36	108393	1	Fan-Hydro
37	322-3	2	Screw-HH
38	3253-4	2	Washer-Lock
39	108327	1	Spacer-Pivot
40	106448	1	Nipple-Trans Filler
42	88-2790	1	Decal-Danger
43	94-1834	1	Decal-Unidrive
44	3243-5	4	Screw-Set
45	3218-3	4	Nut-HJ
46	105763-03	2	Hub-Wheel
47	937108	2	Key-Woodruff
48	937089	2	Key-Woodruff
49	103995	1	Washer

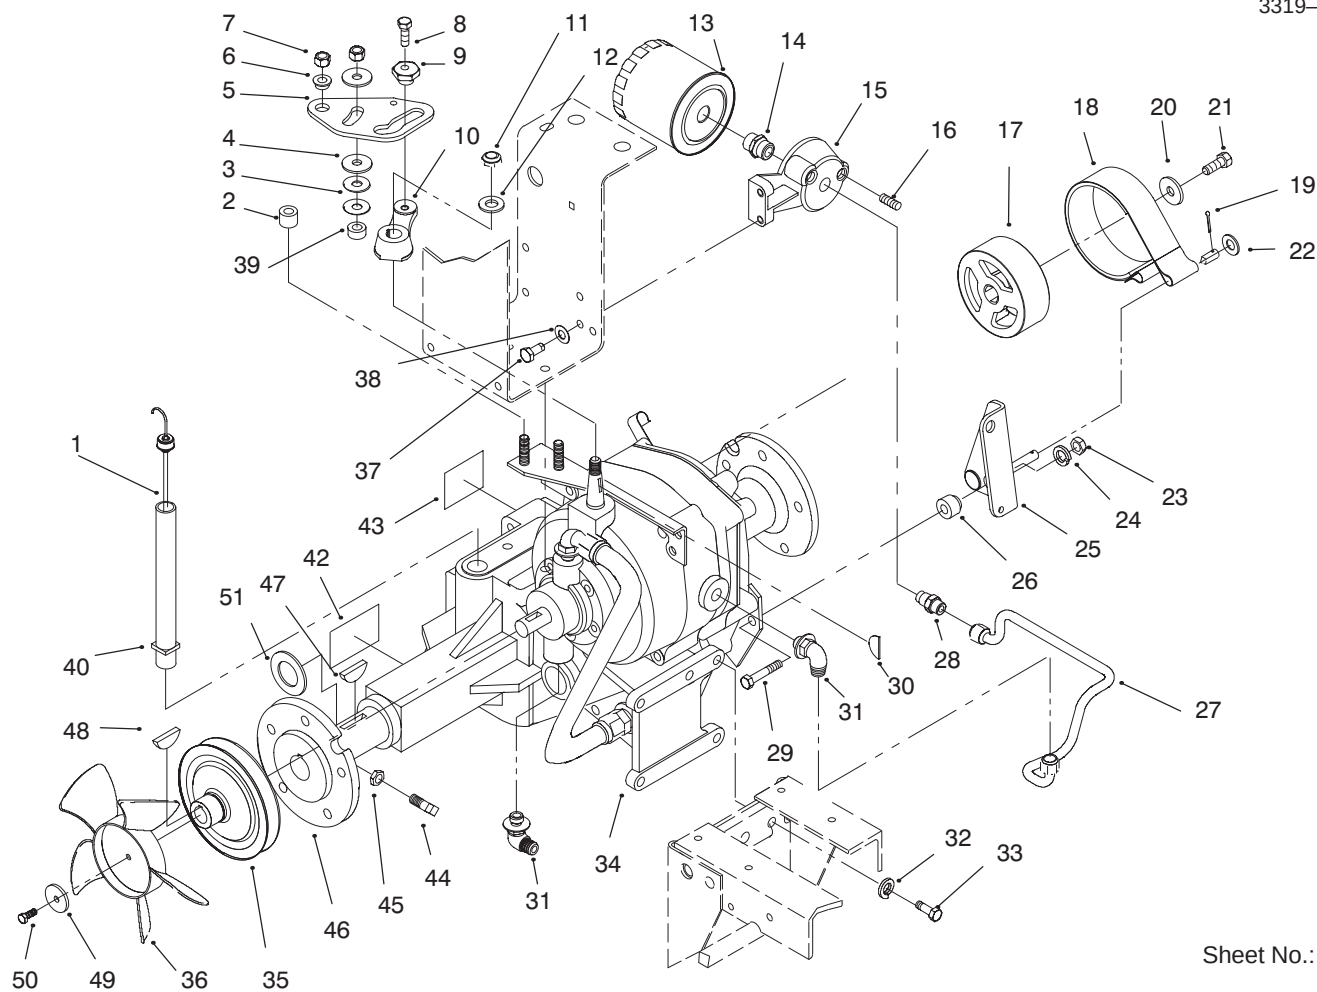


Sheet No.: 28

Transmission Control & Filter Assembly

Ref. No.	Part No.	Qty.	Description
50	9080026	1	Screw-Lock
51	106826	2	Washer-Thrust

Ref. No.	Part No.	Qty.	Description

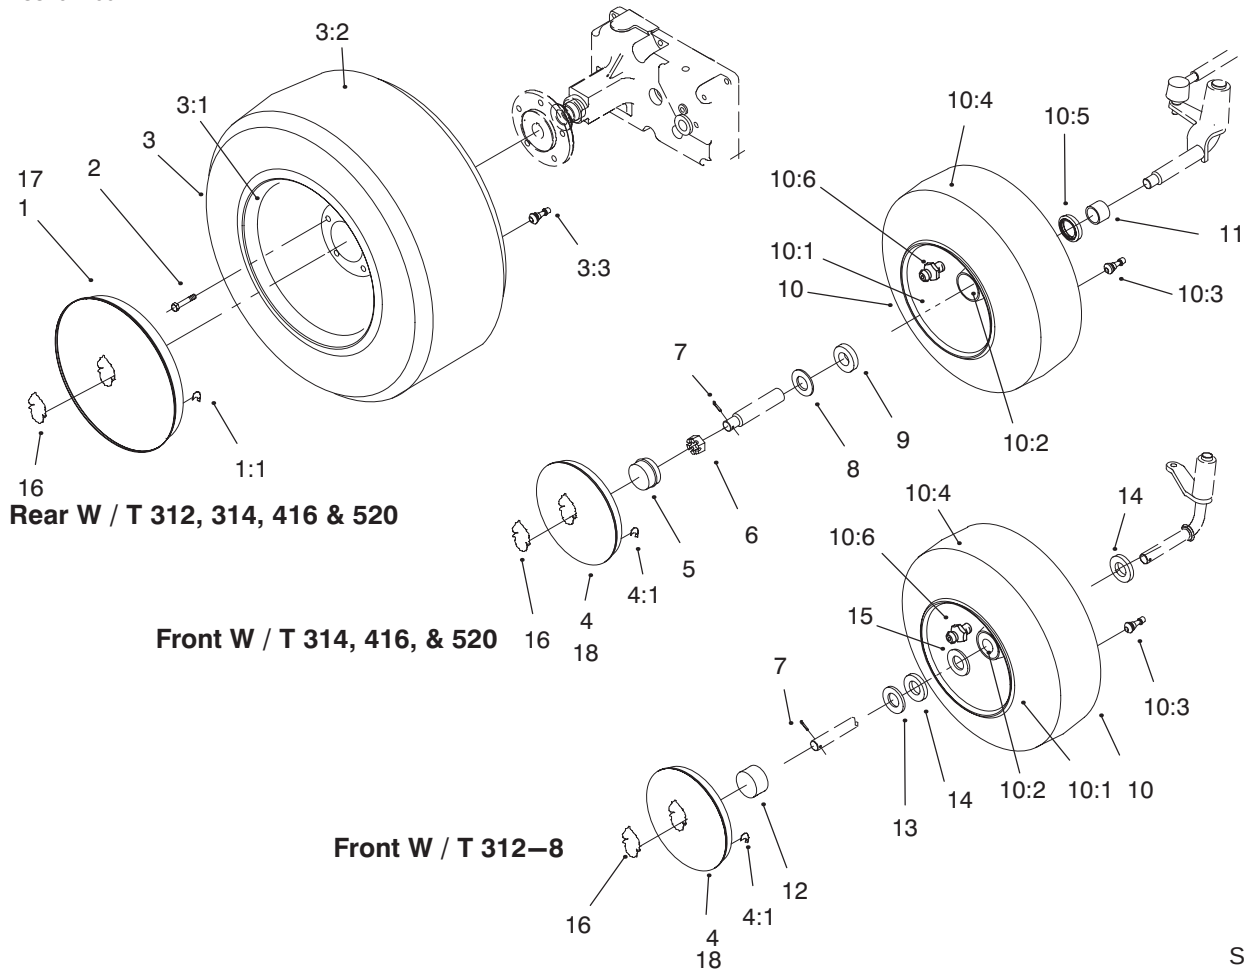


Sheet No.: 29

Wheel Assemblies

Ref. No.	Part No.	Qty.	Description
1	94-3731	2	Hubcap-12"
1:1	94-9729	8	Clip-Hubcap
2	83-2720	10	Bolt-Lug
3		2	ASM-Wheel & Tire
3:1	111516	2	Wheel
3:2	116744	2	Tire
3:3	5108	2	Valve-Tire Tubeless
4	94-3730	2	Hubcap-8"
4:1	94-9729	6	Clip-Hubcap
7	3272-17	2	Pin-Cotter
10	93-9800	2	ASM-Wheel & Tire
10:1	93-9801	2	ASM-Wheel w/Zerk
10:2	110513	4	Bearing-Wheel
10:3	5108	2	Valve-Tire Tubeless
10:4	117127	2	Tire
10:6	109500	2	Fitting-Grease
12	111951	2	Cap-Hub
13	111952	2	Washer
14	1278	4	Washer-Shim
15	5210	2	Washer-Shim
16	94-3736	4	Plate-Logo
17	94-3718	2	ASM-Hubcap
17:1	94-3731	2	Hubcap-12"
17:2	94-3736	2	Plate-Logo
18	94-3717	2	ASM-Hubcap


Ref. No.	Part No.	Qty.	Description
18:1	94-3730	2	Hubcap-8"
18:2	94-3736	2	Plate-Logo

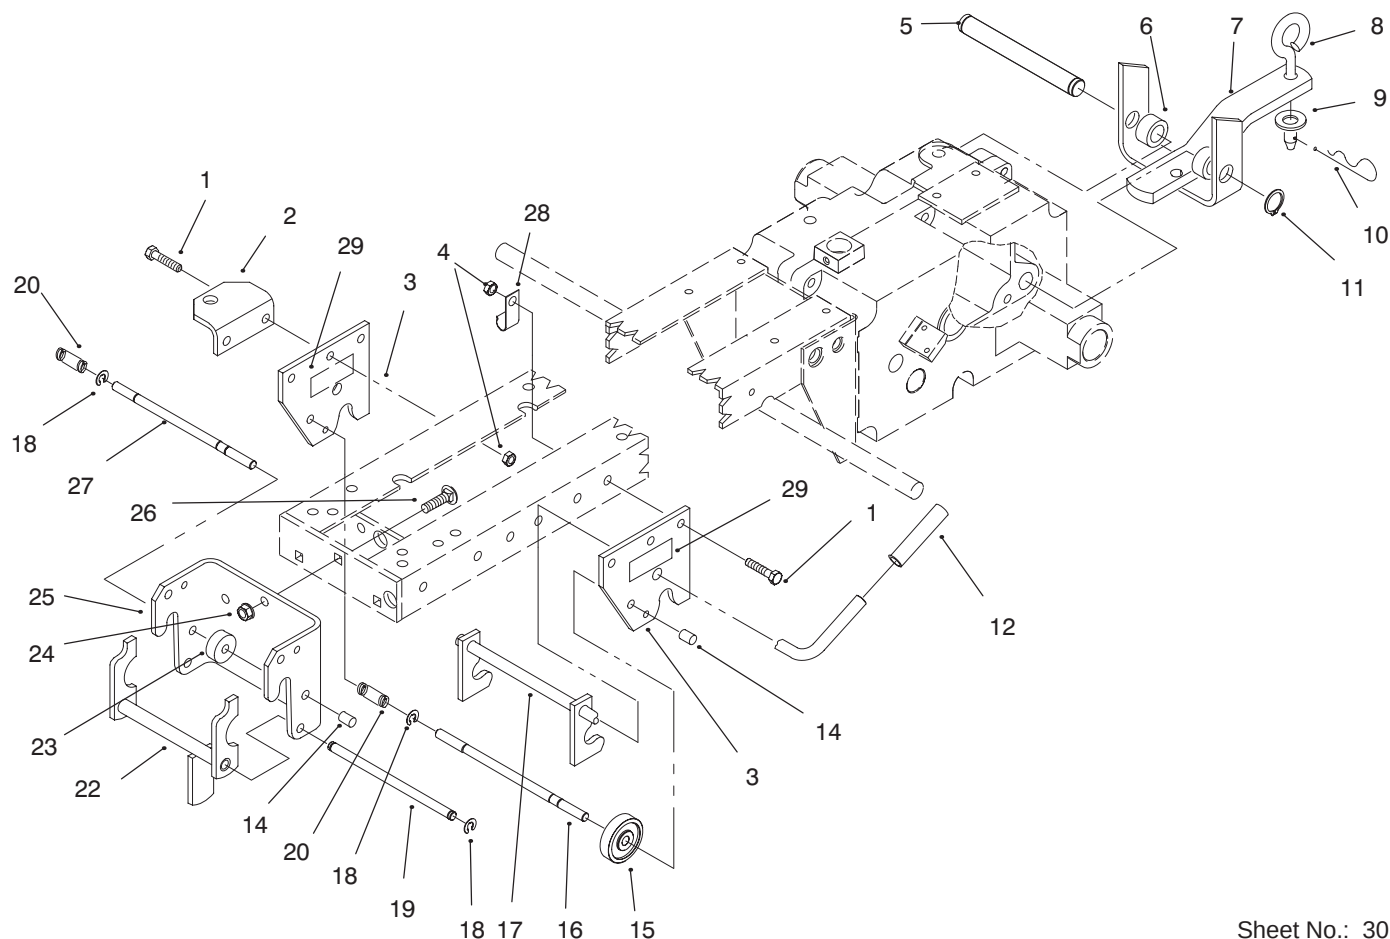

Sheet No.: 30

Hitch Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	323-44	6	Screw-HH	28	8830	1	Retainer-"J"
2	102870-01	1	Bracket-PTO Support	29	92-8747	2	Decal-Attach A Matic
3	102644-01	2	Plate-Hitch				
4	108881	6	Nut-Hex				
5	105269	1	Pin-Drawbar Hitch				
6	9791204	2	Spacer				
7	1644-01	1	Hitch ASM				
8	106634	1	Pin-Tool				
9	3256-26	1	Washer-Flat				
10	9335054	1	Hairpin				
11	5618	2	Ring-Retaining				
12	9038	1	Grip				
14	105316	2	Cap-Rod				
15	101017	1	Lock-Hitch				
16	83-6520	1	Rod-Lock				
17	117930	1	Latch ASM-Mid				
18	105797	8	Ring-Retaining				
19	101750	1	Rod-Latch Pivot				
20	8616	2	Spring				
22	93-1613	1	Latch-Front				
23	101707	1	Lock-Attachment				
24	3296-39	3	Nut-Lock				
25	101711-01	1	Plate-Front Hitch				
26	3231-25	3	Screw-CARR				
27	101751	1	Rod-Lock				

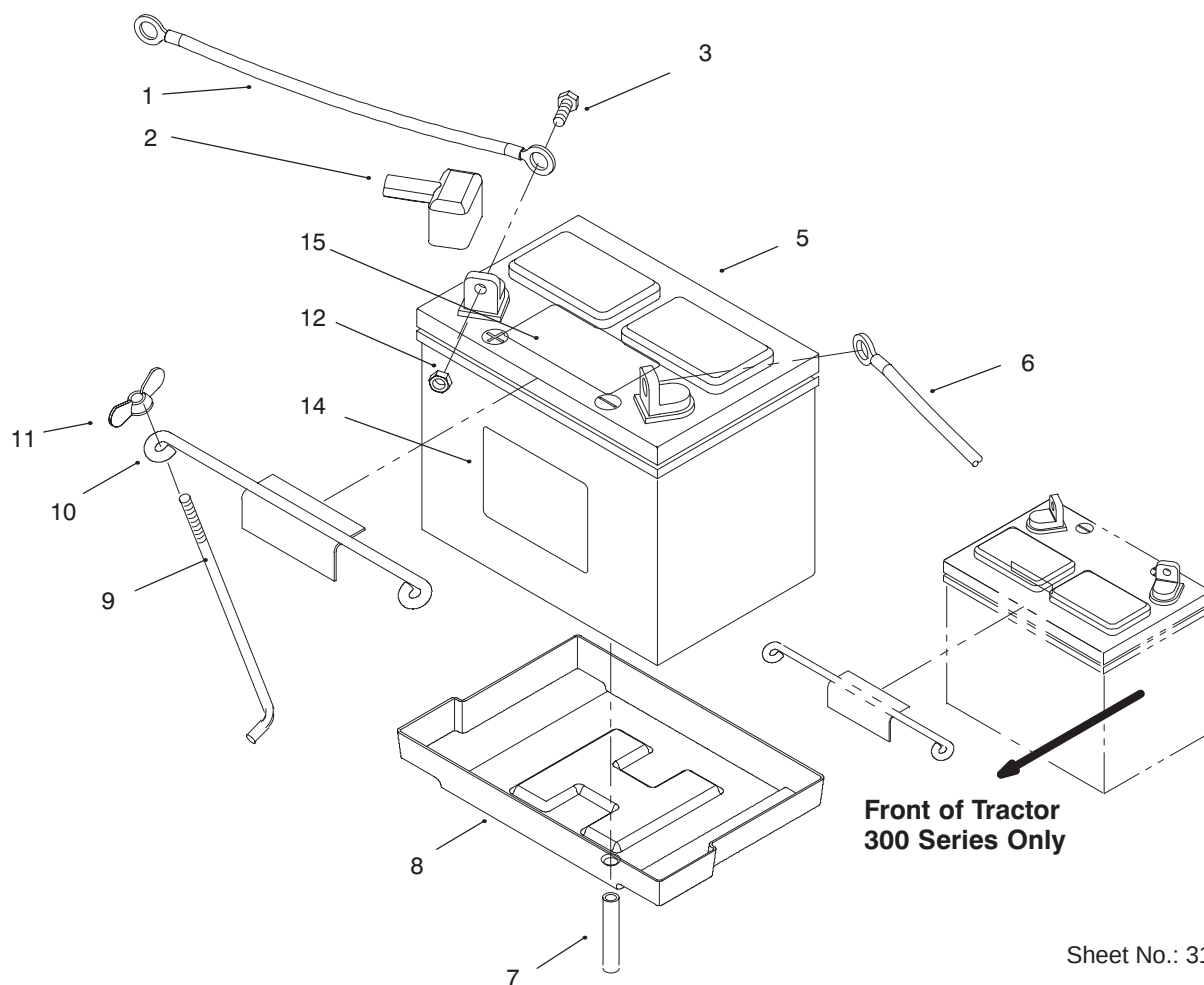


Sheet No.: 31

Battery Assembly

Ref. No.	Part No.	Qty.	Description
1	111074	1	Cable-16" Lg.
2	28-8080	1	Boot-Battery Terminal
3	321-4	2	Screw-HH
5	105842	1	Battery
6	111069	1	Cable-8" Lg.
7	114720	1	Tube-Battery Drain
8	106948	1	Tray-Battery
9	113969	2	Hook-Retainer
10	113010	1	Hold Down
11	32103-22	2	Nut-Wing
12	3296-42	2	Nut-Lock

Ref. No.	Part No.	Qty.	Description

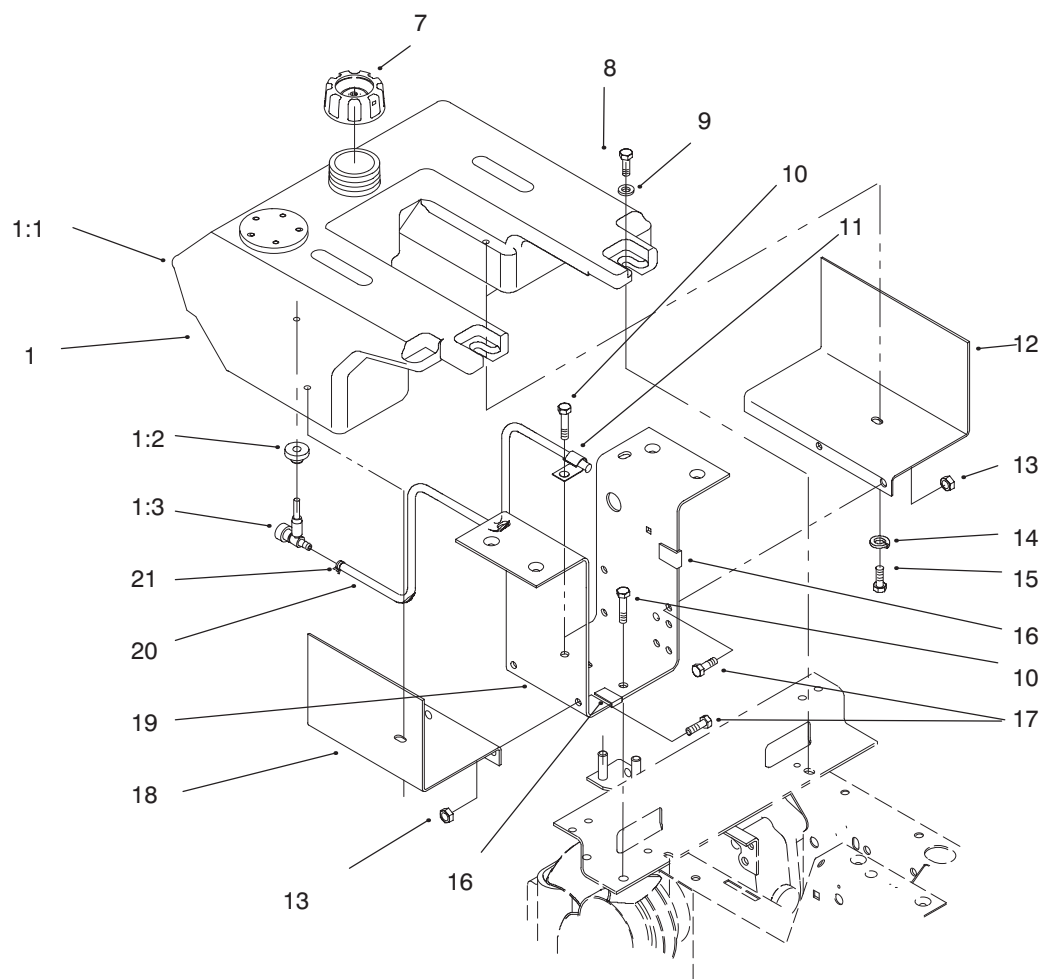


Sheet No.: 32

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	106234	1	ASM—Tank
1:1	106235	1	Tank—Fuel
1:2	104048	1	Assembly—Valve
1:3	104047	1	Bushing
7	55—3570	1	Cap—Fuel
8	9266974	2	Screw—HH
9	3256—4	2	Washer—Flat
10	3235—22	2	Screw—HH
11	8830	1	Retainer—"J"
12	94—6693—01	1	Bracket—Support
13	3296—29	4	Nut—Lock
14	3253—4	2	Washer—Lock
15	322—2	2	Screw—HH
16	519337	1	Clip
17	322—3	4	Screw—HH
18	94—6692—01	1	Bracket—Support
19	79—4990—01	1	Bracket—Fender Support
20	92—9511	1	Line—Fuel 62"
21	2412—98	2	Clamp—Hose

Ref. No.	Part No.	Qty.	Description


3319-160

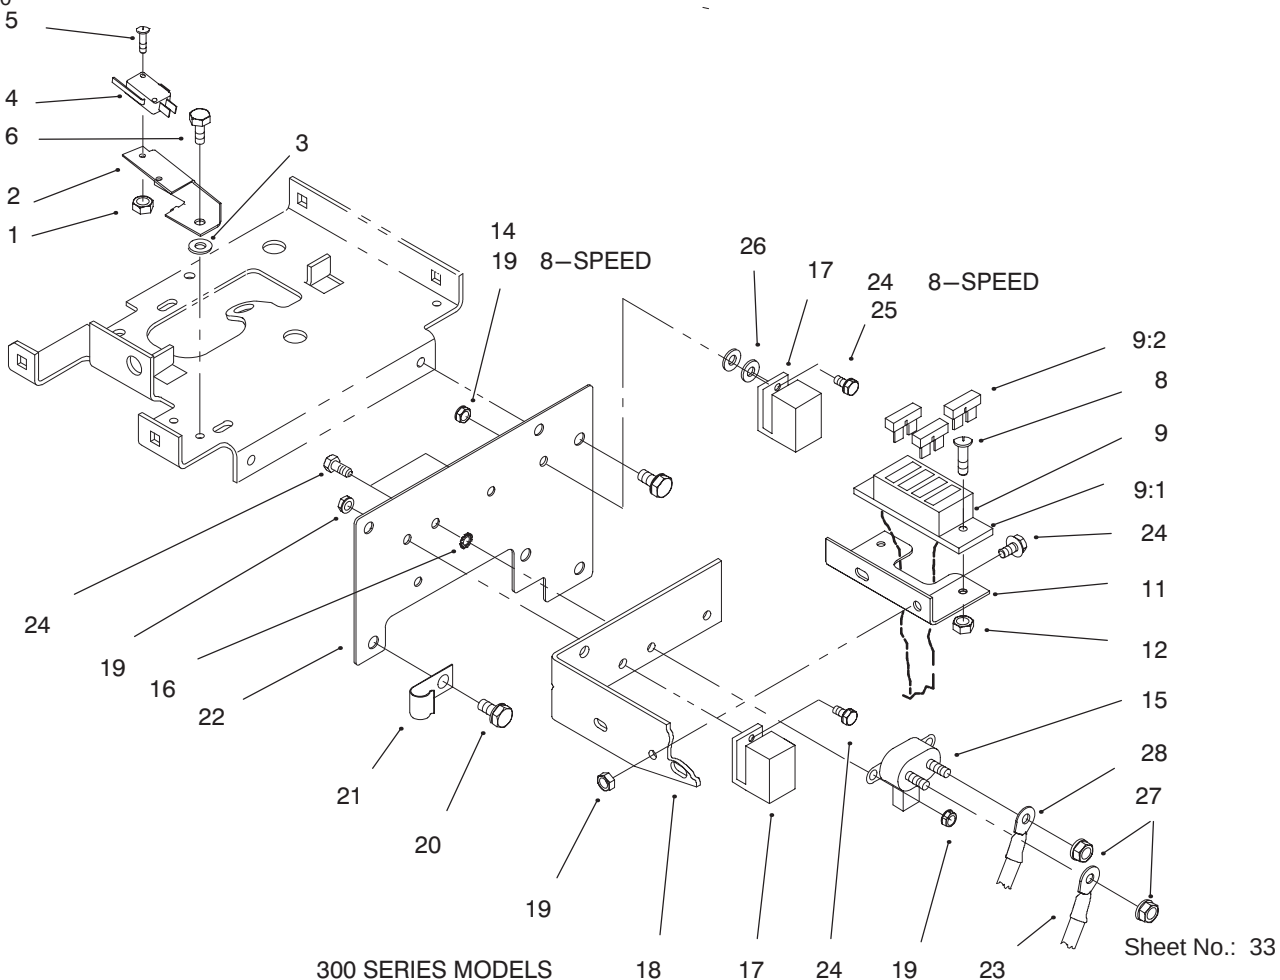

Hoodstand Electrical Housing & Wire Harness

Ref. No.	Part No.	Qty.	Description
1	9157324	2	Nut-Lock
2	115411	1	Bracket-Switch
3	3254-2	1	Washer-Lock
4	111332	2	Switch-Interlock
5	9104784	2	Screw
6	9266714	1	Screw-HWHTF
8	9107944	2	Screw-Phcr
9	79-3610	1	Wire Harness
9:1	120930	1	Fuse Holder
9:2	109355	1	Fuse-15 Amp
9:3	109102	1	Fuse-25 Amp
9:4	NN10277	1	Fuse-30 Amp
11	117331-03	1	Bracket-Fuse Holder
12	9157404	2	Nut
14	3296-56	1	Nut-Lock
15	92-9845	1	Solenoid
16	3255-7	2	Washer-Lock
17	116397	2	Relay
18	109554-03	1	Bracket-Guard
19	3296-42	5	Nut-Lock
20	9266944	5	Screw-HH
21	8830	1	Retainer-"J"
22	78-3020-03	1	Plate-Front
23	111069	1	Cable-8" Lg.
24	3234-33	5	Screw-HFW
25	3234-13	1	Screw-HHF

Ref. No.	Part No.	Qty.	Description
26	3256-22	2	Washer-Flat
27	32149-2	2	Nut-Hex Lock
28	111074	1	Cable-16" Lg.

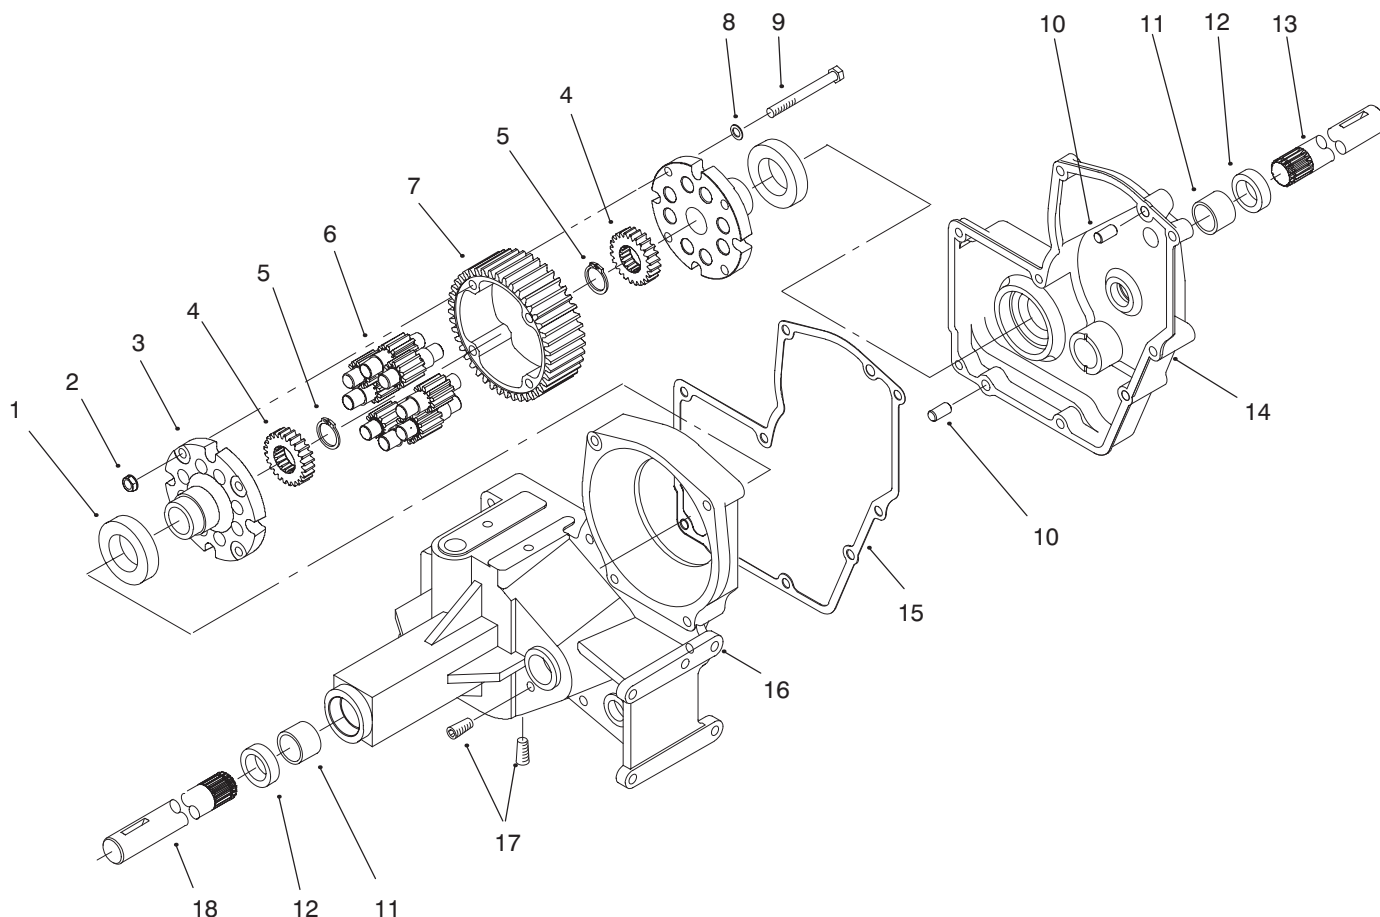


Sheet No.: 201

Hydrostatic Transmission

Ref. No.	Part No.	Qty.	Description
1	111199	2	Bearing-Ball
2	108881	4	Nut-Hex
3	111196	2	Cap-End
4	101889	2	Gear-Axle
5	105876	2	Ring-Retaining
6	101623	8	Gear-Pinion
7	105061	1	Gear-Differential
8	107374	4	Washer-Flat
9	911423	4	Screw-HH
10	108363	2	Pin-Locating
11	9416	2	Bearing-Needle
12	6449	2	Seal-Oil
13	108361	1	Axle-Rear
14	111201-01	1	Case-Transaxle
15	108312	1	Gasket-Transaxle
16	113927-01	1	Case-Transaxle
16	92-7298	1	Casehalf Decal ASM
16:1	113927-01	1	Case-Transaxle
16:2	88-2790	1	Decal-Danger
17	281-10	2	Plug-Pipe
18	108362	1	Axle-Rear

Ref. No.	Part No.	Qty.	Description

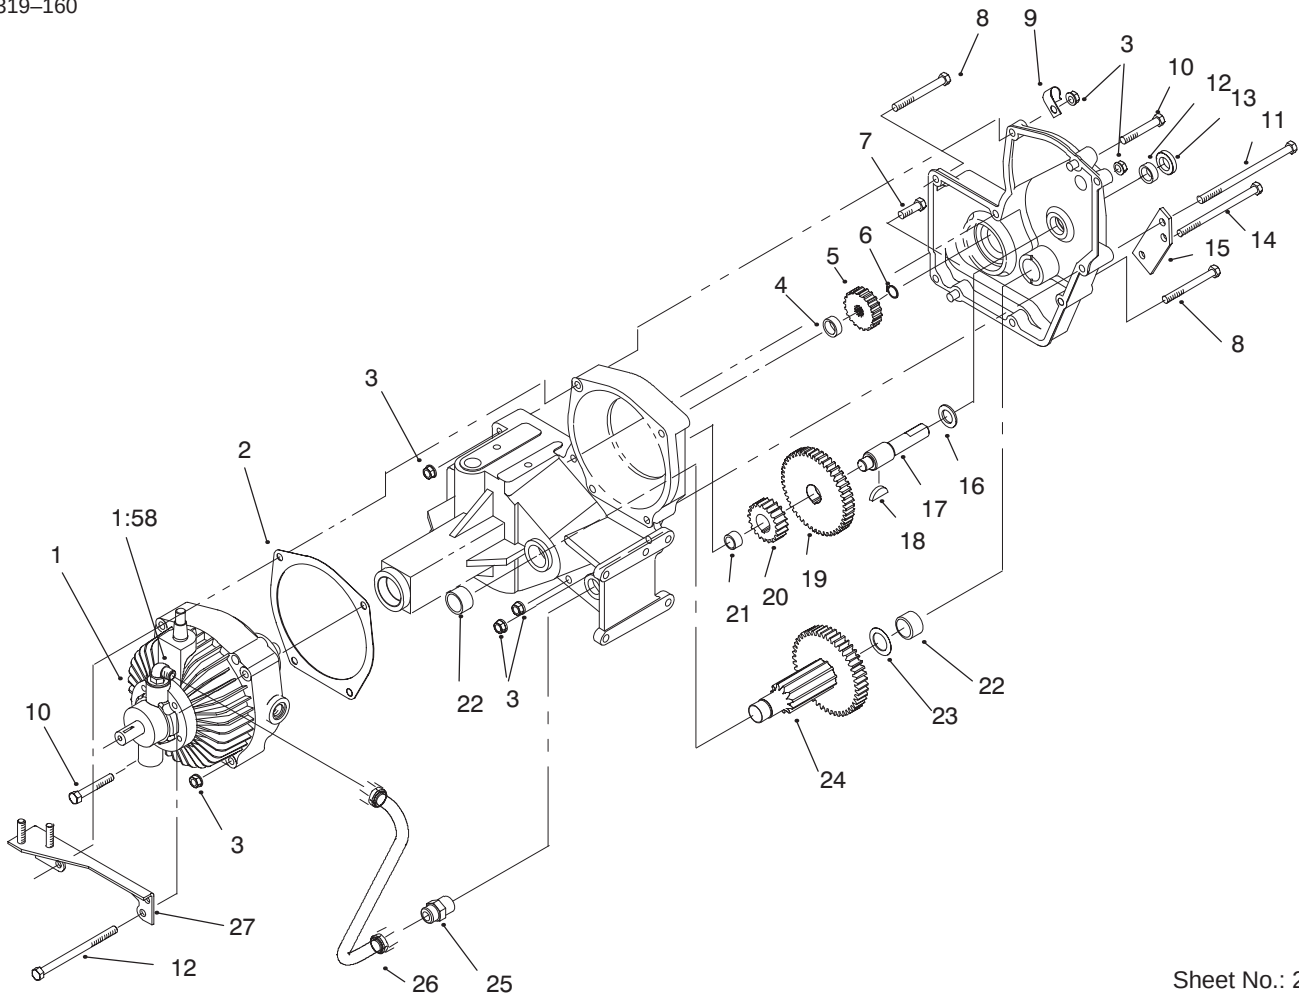


Sheet No.: 202

Hydrostatic Transmission (Continued)

Ref. No.	Part No.	Qty.	Description
1	92-9848	1	Trans-Hydro
2	108319	1	Gasket-Transmission
3	3296-39	6	Nut-Lock
4	108366	1	Spacer-Gear
5	109751	1	Gear-20t
6	32120-64	1	Ring-Retaining
7	9080356	1	Screw-HH
8	323-15	2	Screw-HH
9	8830	1	Retainer-"J"
10	9080406	2	Screw-HH
11	323-26	1	Screw-HH
12	1538	1	Bearing-Needle
13	108357	1	Seal-Oil
14	323-25	3	Screw-HH
15	109367-03	1	Bracket-Brake
16	7956	1	Washer-Thrust
17	109370	1	Shaft-Brake
18	937099	1	Key-Woodruff
19	109752	1	Gear-46t
20	109742	1	Gear-20t
21	1518	1	Bearing-Needle
22	1532	2	Bearing-Needle
23	9547	1	Washer-Thrust
24	109703	1	ASM-Gear
25	108364	1	Fitting-Hyd

Ref. No.	Part No.	Qty.	Description
26	111217	1	Tube-Suction
27	108329-03	1	Plate-Control


Eaton Hydrostatic Transmission #110-062

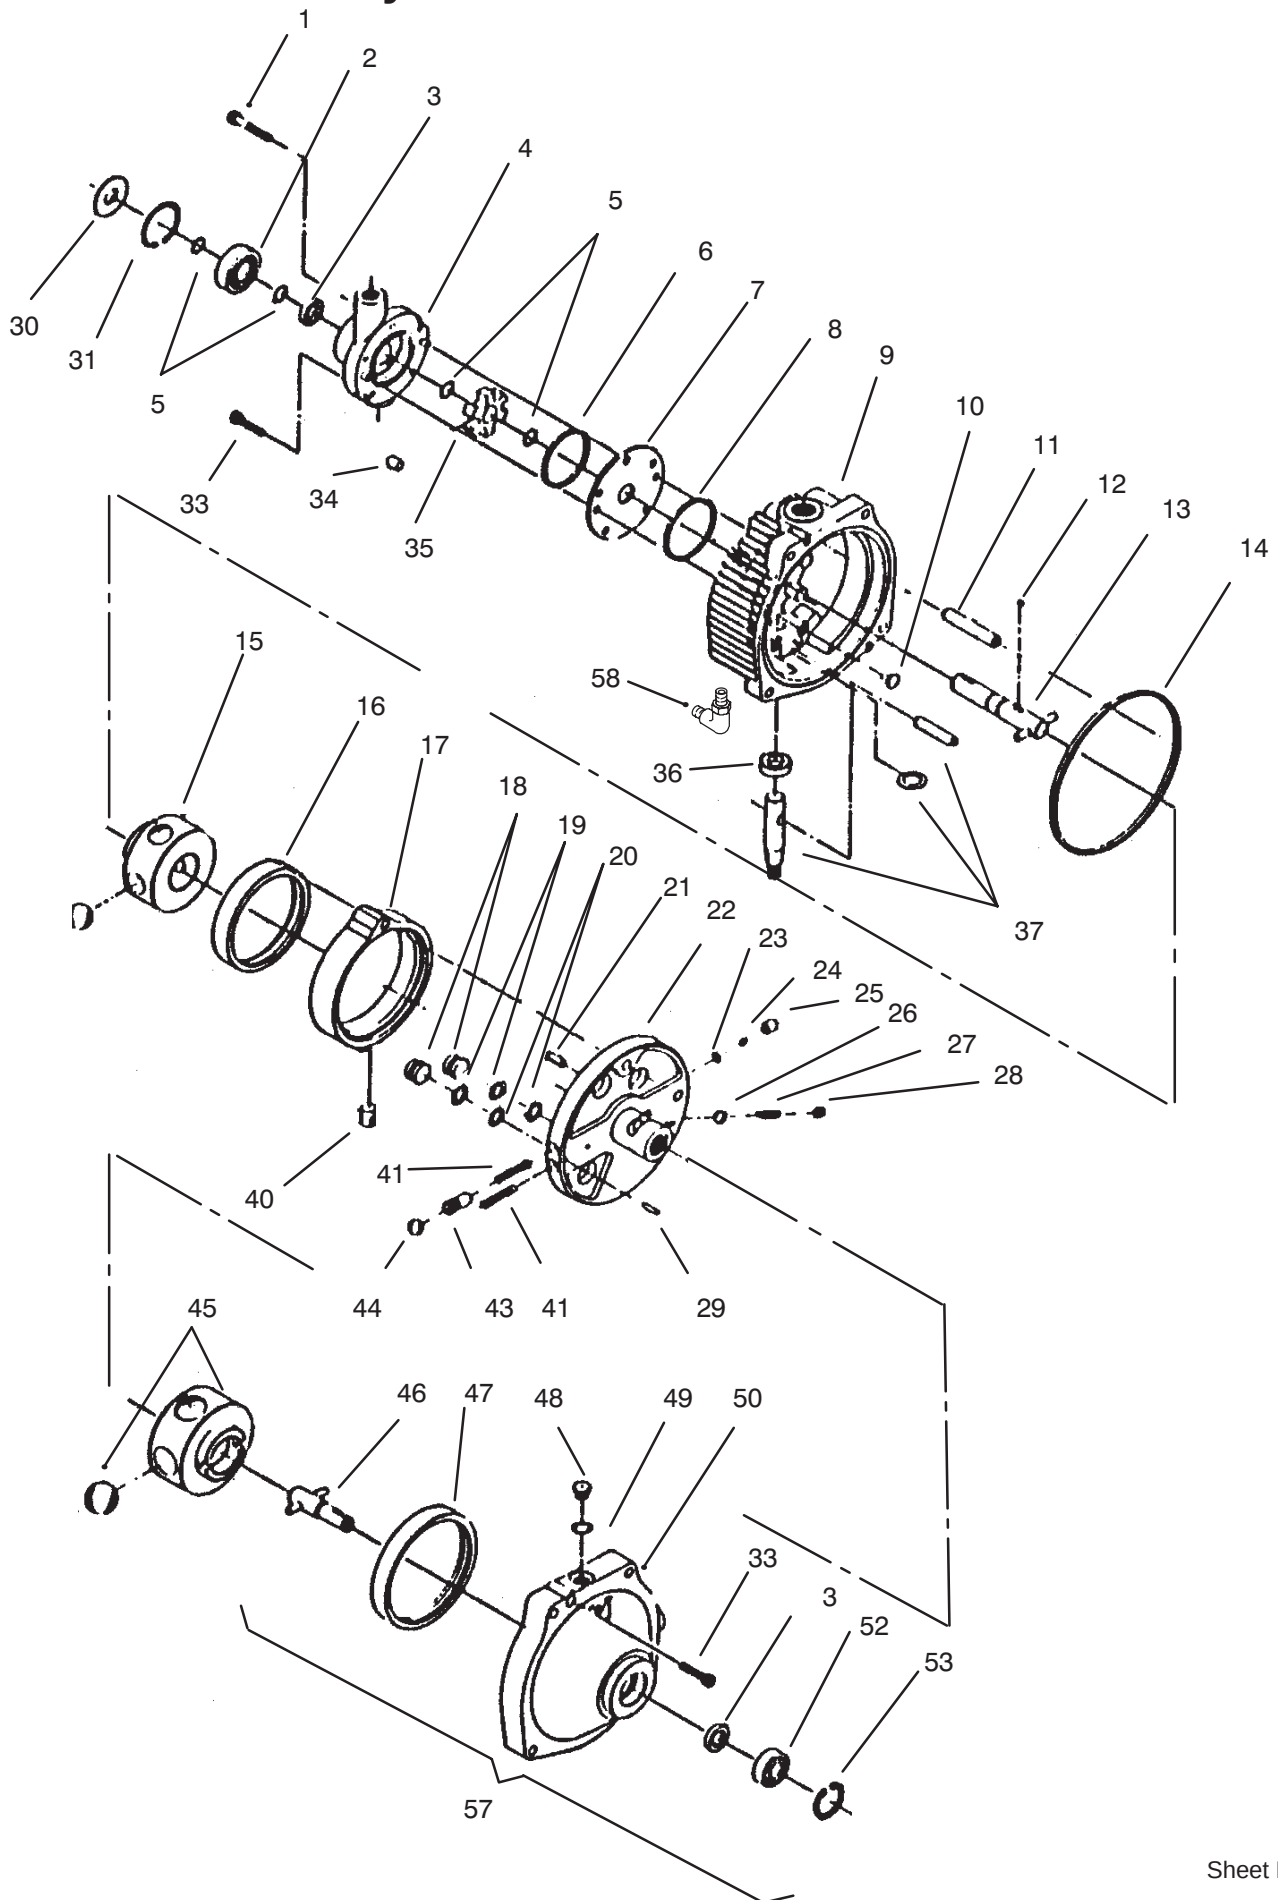

Eaton Hydrostatic Transmission #110-062

Ref. No.	Part No.	Qty.	Description
1	56-2800	1	Screw-HH Socket
2	56-2810	1	Bearing-Ball
3	56-2820	2	Seal-Oil
4	112637	1	ASM-Pump
5	56-3090	4	Ring-Retaining
6	56-2850	1	Ring-Seal
7	56-2860	1	Plate-Pump
8	56-2870	1	Ring-Seal
9	112641	1	ASM-Cover
9	112641	1	ASM-Cover
10	56-2880	2	Button
11	56-2890	1	Pin-Dowel
12	56-2900	1	Pin-Drive
12	56-2900	1	Pin-Drive
13	56-2910	1	Shaft-Input
13	56-2910	1	Shaft-Input
14	56-2920	1	Ring-Seal
15	56-2930	1	Rotor/Ball-Pump
16	113136	1	Race-Pump
17	93-9810	1	Ring-Cam
18	56-2950	2	Piston
19	56-2960	2	Ring-Backup
20	56-2970	2	O-Ring
20	56-2970	2	O-Ring
21	56-2980	1	Pin-Coil
22	56-2990	1	ASM-Pintle
23	56-3000	2	Ring-Retaining
24	56-3010	2	Ball-.313 Dia
25	56-3020	2	Body-Valve
26	56-3030	1	Ball-.438 Dia
27	56-3040	1	Spring-Valve
28	56-3050	1	Plug-Valve
29	56-3060	1	Pin-Dowel
30	112652	1	Shield-Grass
31	112653	1	Ring-Retaining
33	56-3100	6	Screw-Socket Hd
34	56-3110	6	Roller
35	56-3120	1	Carrier
36	56-3130	1	Seal-Oil
37	56-3140	1	Kit-Shaft
40	56-3170	1	Insert-Ring
41	56-3180	1	Spring-Valve
43	56-3200	2	Body-Valve
44	56-3210	2	Ball-.625 Dia
45	56-3220	1	Rotor/Ball-Motor
46	56-3230	1	Shaft-Output
46	56-3230	1	Shaft-Output
47	56-3240	1	Race-Motor
48	56-3250	1	ASM-Plug
49	56-3260	1	O-Ring
50	93-9811	1	Body
52	56-3280	1	Bearing-Ball
53	56-3290	1	Ring-Retaining
55	56-3310	1	Kit-Seal
			Incl.3 6 14 12 19 20 49
56	56-2940	1	ASM-Ring
57	93-9812	1	ASM-Body
58	93-9813	1	Fitting-Hydraulic

Ref. No.	Part No.	Qty.	Description

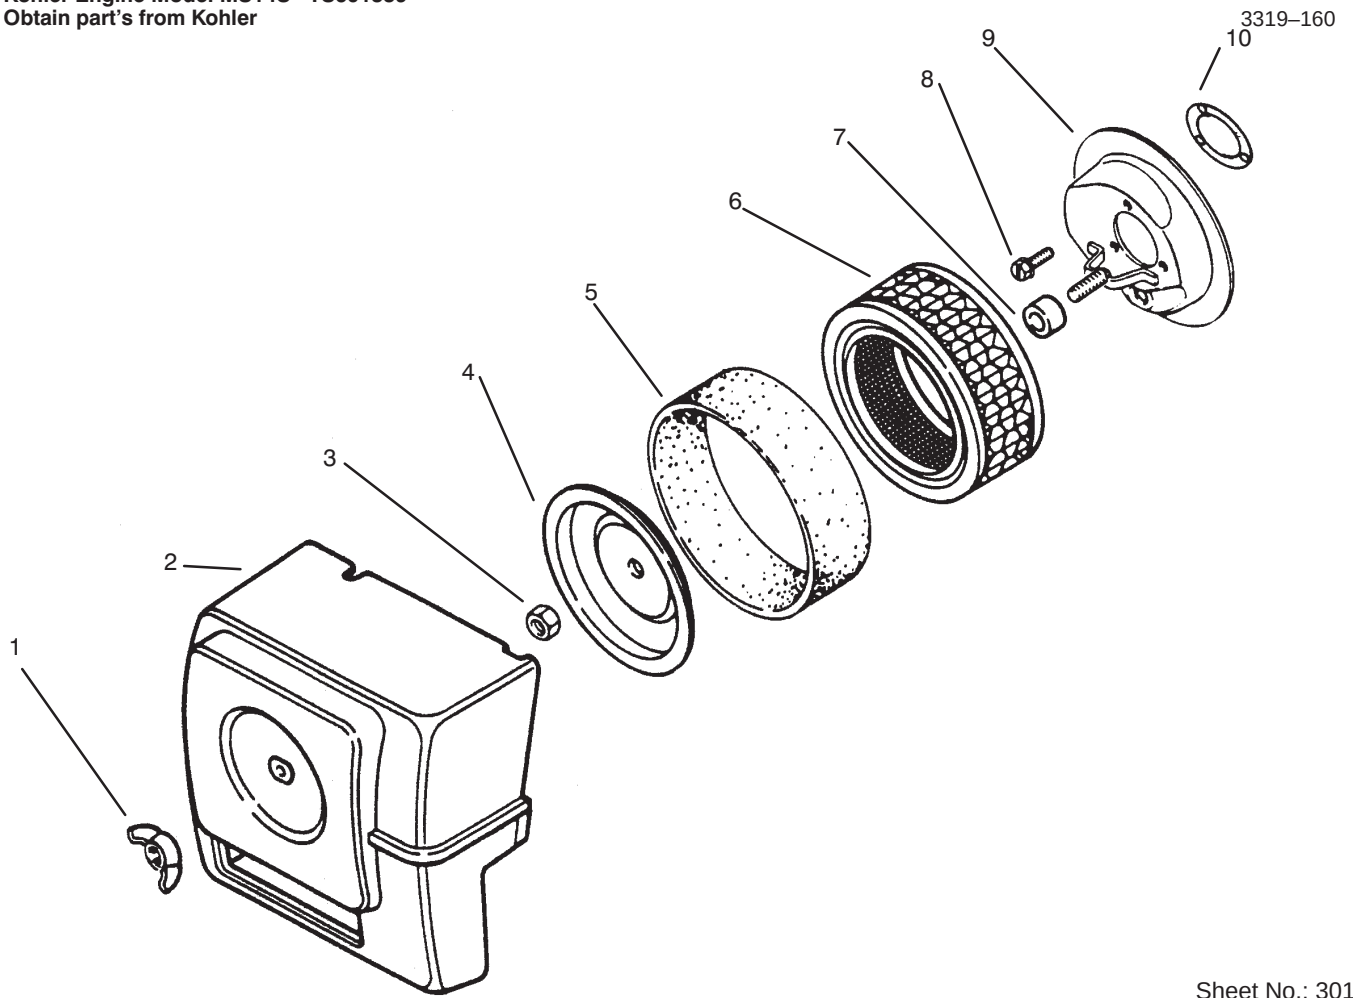

Sheet No.: 301

Air Cleaner


Ref. No.	Part No.	Qty.	Description
1	X-276-7	1	Nut-Wing
2	47-096-10	1	Cover
3	41-100-04	1	Nut
4	52-082-04	1	Cover-Air Clean Element
5	45-083-01	1	Element-Precleaner
6	45-083-02	1	Element
7	231032	1	Seal
8	X-67-65	3	Screw
9	47-094-20	1	Base-Air Cleaner
10	45-041-07	1	Gasket
	41-113-02	1	Decal-Air Cleaner

Ref. No.	Part No.	Qty.	Description



Ref. No.	Part No.	Qty.	Description
1	25-100-05	1	Screw
2	25-041-03	1	Gasket
3	25-104-01	1	Bowl-Fuel Incl Pin
4	25-757-09	1	Kit-Float Incl 5
6	254-041-04	1	Gasket
7	25-194-01	1	Ball
8	25-089-03	1	Spring
10	47-853-20	1	Carburetor ASM Incl 5-8
10	47-853-29	1	Carburetor Complete
12	14-144-25	1	Shaft Lever/Seal Incl 11
12	457-144-21	1	Shaft Lever & Seal
13	47-146-10	1	Plate-Throttle
14	25-086-27	4	Screw
15	25-368-01	1	Needle-Idle Fuel Adj
16	25-089-02	1	Spring-Idle Fuel
17	25-368-03	1	Main-Needle
18	25-089-04	1	Spring-Adj
19	25-086-26	1	Screw-Idle Speed Adj
20	47-090-38	1	Shaft-Choke
21	47-146-08	1	Plate-Choke

26

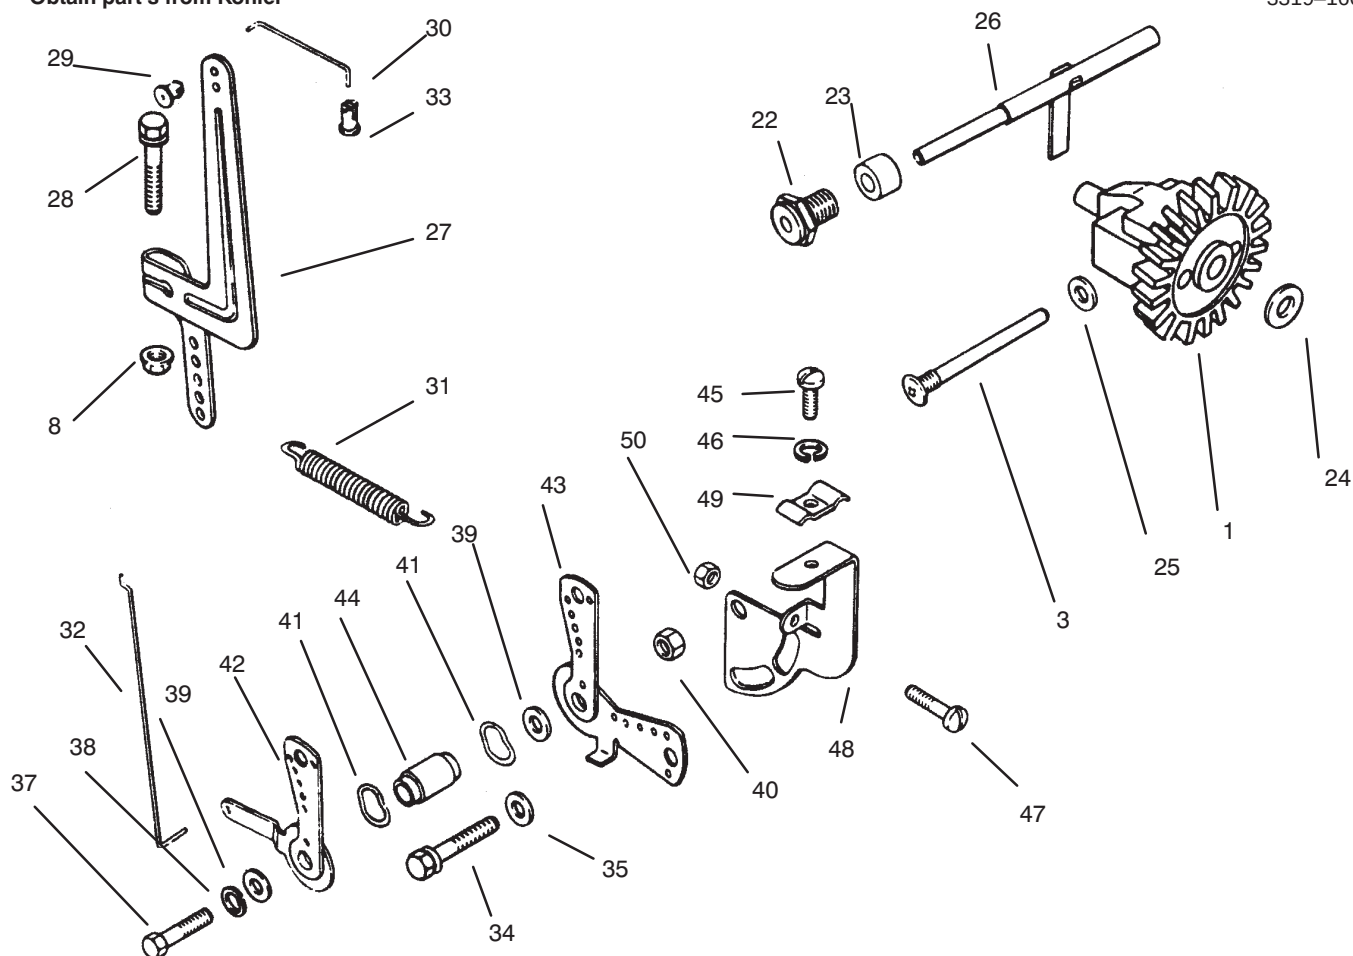

Sheet No.: 303

Governor Linkage


Ref. No.	Part No.	Qty.	Description
1	A-235743-5	1	Kit-Governor Gear INCL 24
3	231355	1	Pin-Governor Stop
8	X-799-1	1	Nut-Pal
22	235476	1	Bushing
23	X-400-80	1	Spacer
24	237022	1	Washer
25	25-468-01	1	Washer
26	A-235256-S	1	Kit-Governor Cross Shaft
27	47-090-20	1	Lever-Governor
28	X-776-1	1	Screw
29	47-158-07	1	Bushing
30	47-079-10	1	Linkage
31	47-091-01	1	Spring
32	47-079-01	1	Linkage-Choke
33	25-158-09	1	Bushing
33	25-158-11	1	Bushing
34	X-132-6	1	Screw
35	X-25-72	1	Washer
37	X-5-26	1	Screw
38	X-20-1	1	Washer-Lock
39	X-25-63	1	Washer-Flat
40	X-76-2	1	Nut
41	275690	2	Washer
42	47-090-07	1	Lever-Choke Control

Ref. No.	Part No.	Qty.	Description
43	47-090-08	1	Lever-Throttle Control
44	47-112-02	1	Spacer
45	X-67-51	1	Screw
46	25-468-04	1	Washer
47	232556	1	Screw
48	47-126-09	1	Bracket-Clutch Contro;
49	47-237-02	1	Clamp
50	X-72-4	1	Nut
	47-087-03	1	Choke Lver ASM INCL 37-44



Ref. No.	Part No.	Qty.	Description
1	25-353-01	1	Line-Fuel
2	X-426-9	2	Clamp-Hose
3	25-155-02	2	Connector-90 DEG
4	47-559-08	1	Pump ASM-Fuel INCL 5 & 7
5	25-041-05	1	Gasket
6	X-25-63	2	Washer-Flat
7	X-174-2	2	Screw-Pozidrive

 28




Ref. No.	Part No.	Qty.	Description
1	52-086-11	6	Screw-Hex Hd
2	47-086-06	1	Baffle-Side Air
3	45-063-08	1	Baffle-Head
4	X-25-53	1	Washer
5	47-086-08	3	Screw-Pozidrive TH
6	47-063-10	1	Baffle-Cylinder
7	47-063-07	1	Baffle-Inner
8	47-027-42	1	Housing-Blower
9	47-113-36	1	Decal-14hp

Ref. No.	Part No.	Qty.	Description




Ref. No.	Part No.	Qty.	Description
1	236765	1	Gasket
2	235631	1	Plate
3	235047	1	Reed
4	270146	1	Baffle
5	47-050-01	1	Filter
6	231032	1	Seal
7	275144	1	Gasket
8	47-096-01	1	Cover
9	275220	1	Stud
10	X-799-1	1	Nut-Pal
11	47-326-03	1	Hose

30

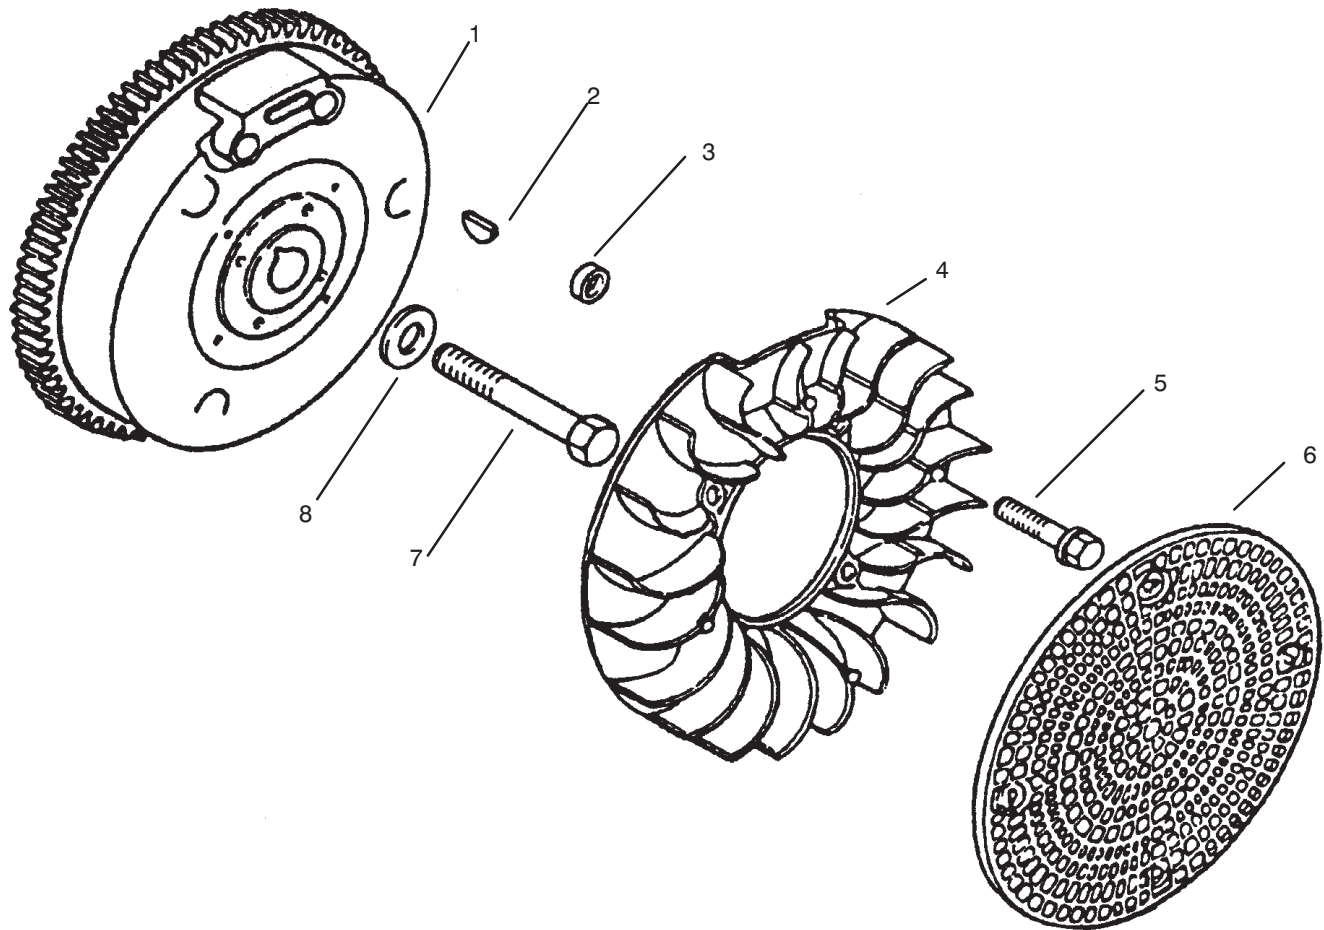

Flywheel

Ref. No.	Part No.	Qty.	Description
1	47-025-53	1	Flywheel
2	X-46-3	1	Key-Woodruff
3	41-100-01	1	Spacer
4	25-157-01	1	Fan
5	25-086-21	4	Screw-Hex Hd
6	24-162-01	1	Screen
7	25-086-24	1	Screw
8	52-468-15	1	Washer

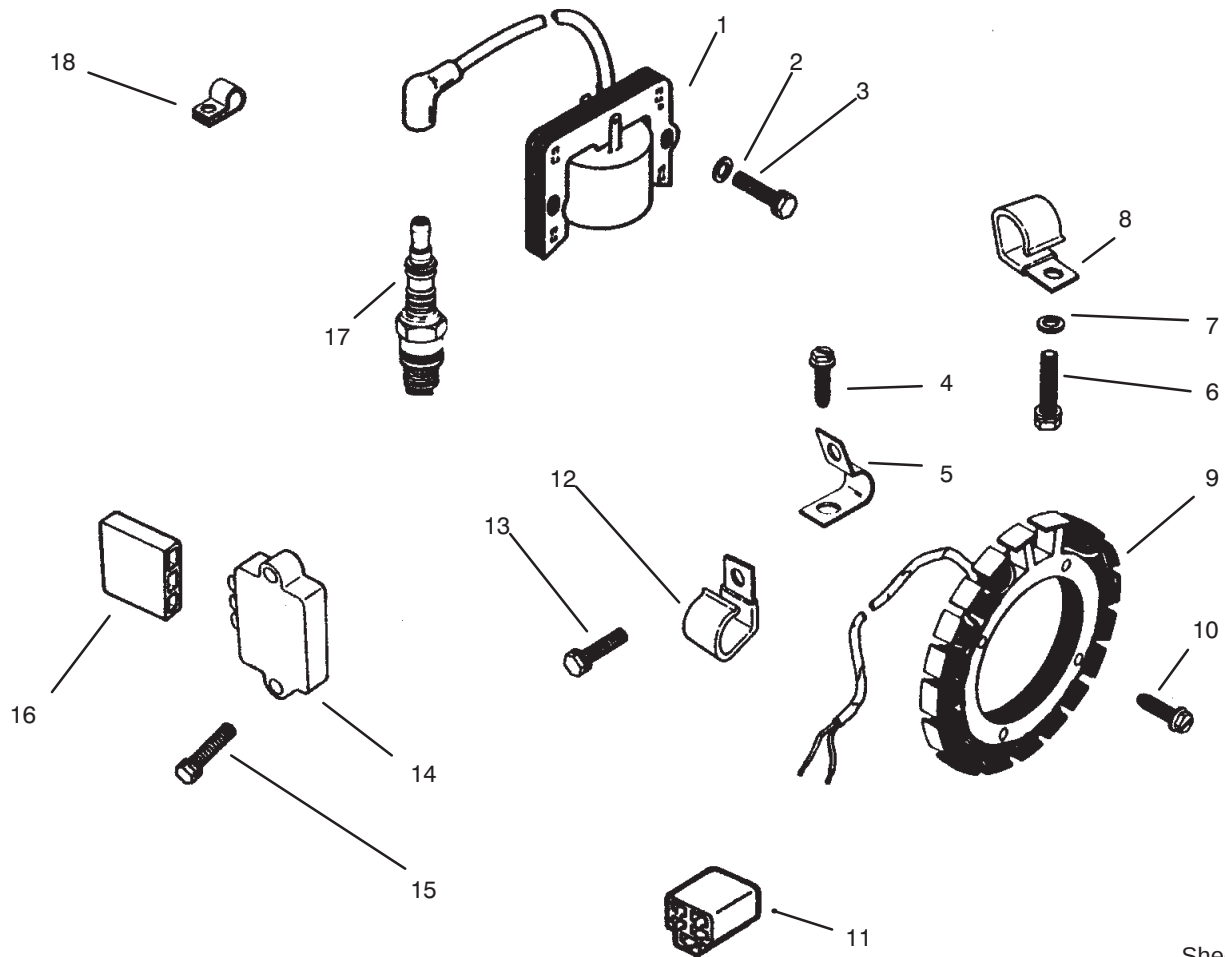


Sheet N o.: 308

Ignition System

Ref. No.	Part No.	Qty.	Description
1	47-584-02	1	Module-Ignition
2	X-25-79	2	Washer
3	X-156-1	2	Screw
4	X-67-59	1	Screw-Hex Hd
5	X-728-1	1	Clip-Kill Lead
6	X-67-83	1	Screw
7	X-25-72	1	Washer
8	255173	1	Clip
9	237878	1	Kit-Starter 15amp INCL 8
10	X-67-51	4	Screw
11	48-155-01	1	Connector
12	8830	1	Retainer-"j"
13	321-2	1	Screw-HH
14	25-755-03	2	Regulator-Rectifier
14	41-403-05	2	Regulator-Rectifier
15	X-132-4	2	Screw
15	X-132-5	2	Screw
16	236602	1	Connector-Regulator
17	235041-2	1	Plug-Spark
18	210281	1	Clip-Hi Tension
	47-518-36	1	Lead-Regulator
	47-518-43	1	Lead Wire

Ref. No.	Part No.	Qty.	Description

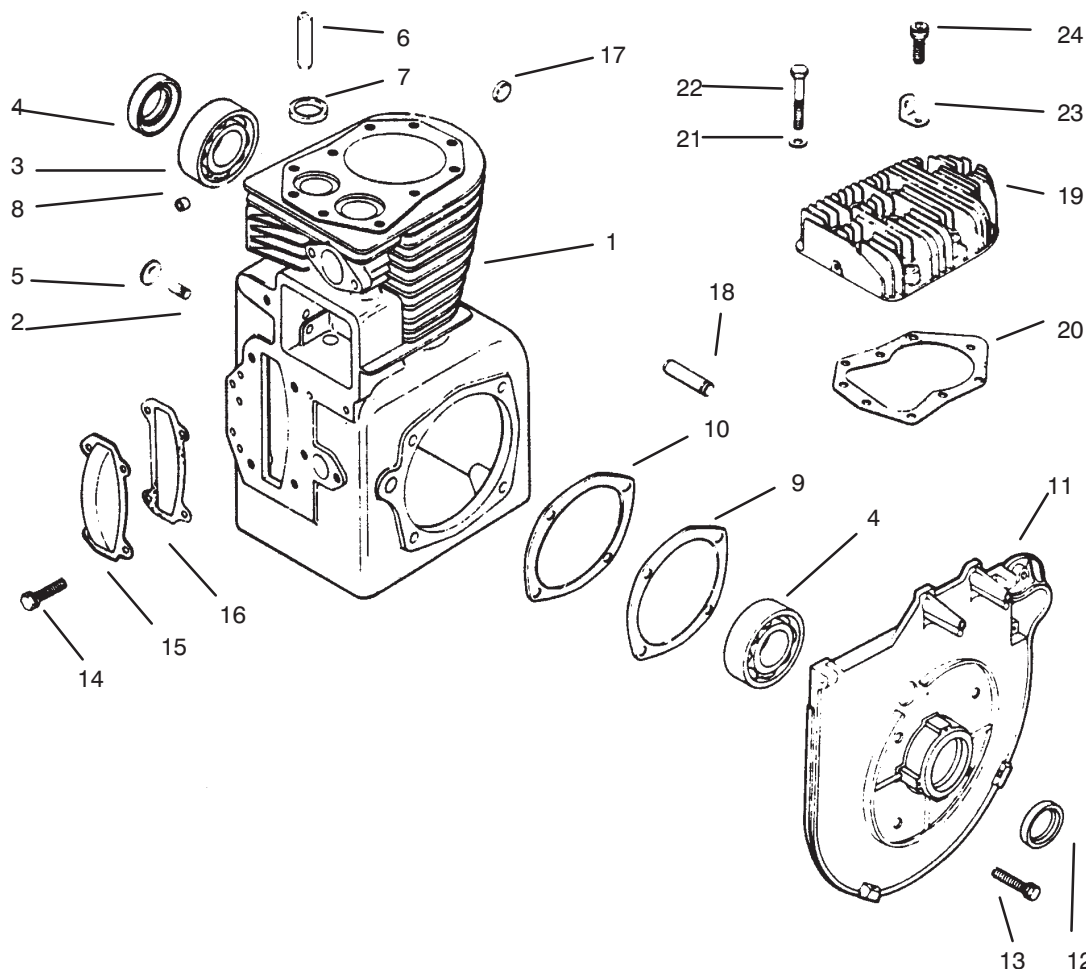

Sheet No.: 309

Crankcase And Cylinder Head

Ref. No.	Part No.	Qty.	Description
1	47-782-67	1	Short Block 14hp
*	47-782-80	1	Miniblock W/Out Crank
2	235125-S	1	Shaft-Governor Gear 14hp
3	235376	2	Ball Bearing
4	47-032-07	1	Seal
5	X-230-11	1	Plug
6	235007-S	2	Guide-Valve 14hp
7	230265	1	Insert-Exh Valve 14hp
8	234866	1	Bearing
9	47-041-09	1	Gasket
10	47-522-05	1	Gasket
11	47-146-11	1	Plate-Bearing
12	47-032-06	1	Seal
13	X-159-2	4	Screw
14	X-132-6	4	Screw
15	235026	1	Cover
16	235025	1	Gasket
18	236559	1	Shaft-Balance Gear
19	47-015-06	1	Head-Cylinder
20	47-041-15	1	Gasket
21	270889	9	Washer
22	270158	8	Screw
23	47-455-02	1	Strap-Lifting
24	47-086-17	1	Screw


Ref. No.	Part No.	Qty.	Description
	47-004-02	1	Set-Gasket W/o Seals
	47-755-27	1	Set-Gasket W/ Seals

* Not Illustrated



Ref. No.	Part No.	Qty.	Description
1	47-010-11	1	Camshaft ASM INCL 2
2	47-089-01	1	Spring
3	275066	1	Spacer .005
4	47-380-09	1	Pin-Camshaft
5	237672	1	Valve-Exhaust
6	235582	1	Valve-Intake
7	235011	2	Retainer-Spring
8	235010	1	Spring
10	41-755-10	2	Kit-Retainer
12	D-235327	2	Tappet-Valve
13	52-413-01	2	Rotator-Valve
14	235168	1	Spring
15	X-702-3	1	Plug-Cup
16	45-142-21	1	Kit-Crankshaft
19	47-755-01	2	Kit-Spacer
20	X-269-34	1	Retainer
	275067	1	Spacer .010

Ref. No.	Part No.	Qty.	Description

 

Ref. No.	Part No.	Qty.	Description
1	47-108-05	1	Set-Ring STD .003 14hp
*	47-108-06	1	Set-Ring .010
*	47-108-07	1	Set-Ring .020
*	47-108-08	1	Set-Ring .030
2	47-874-21	1	Piston-Ring Set STD 14hp
*	47-874-22	1	Piston-Ring Set .003
*	47-874-23	1	Piston-Ring Set .010
*	47-874-24	1	Piston-Ring Set .020
*	47-874-25	1	Piston-Ring Set .030
*	47-018-01	2	Retainer-Piston Pin
4	45-067-24	1	Rod-Connecting STD
*	25-468-04	1	Rod-Connecting.010

Ref. No.	Part No.	Qty.	Description


35



Ref. No.	Part No.	Qty.	Description
1	47-038-27	1	Dipstick
2	41-153-01	1	O-Ring
4	47-029-06	1	Adapter-Oil Fill
5	X-131-2	3	Screw
6	237064	1	Gasket
7	45-199-05	1	Pan-Oil
8	235057	1	Gasket
9	X-159-3	4	Screw
10	X-75-10	4	Plug-SH 3/8 NPTF
11	25-704-04	1	Kit-Float Switch
12	25-431-02	1	Sleeve
*	25-113-05	1	Decal-Float Switch
*	48-155-01	1	Connector

Ref. No.	Part No.	Qty.	Description


36

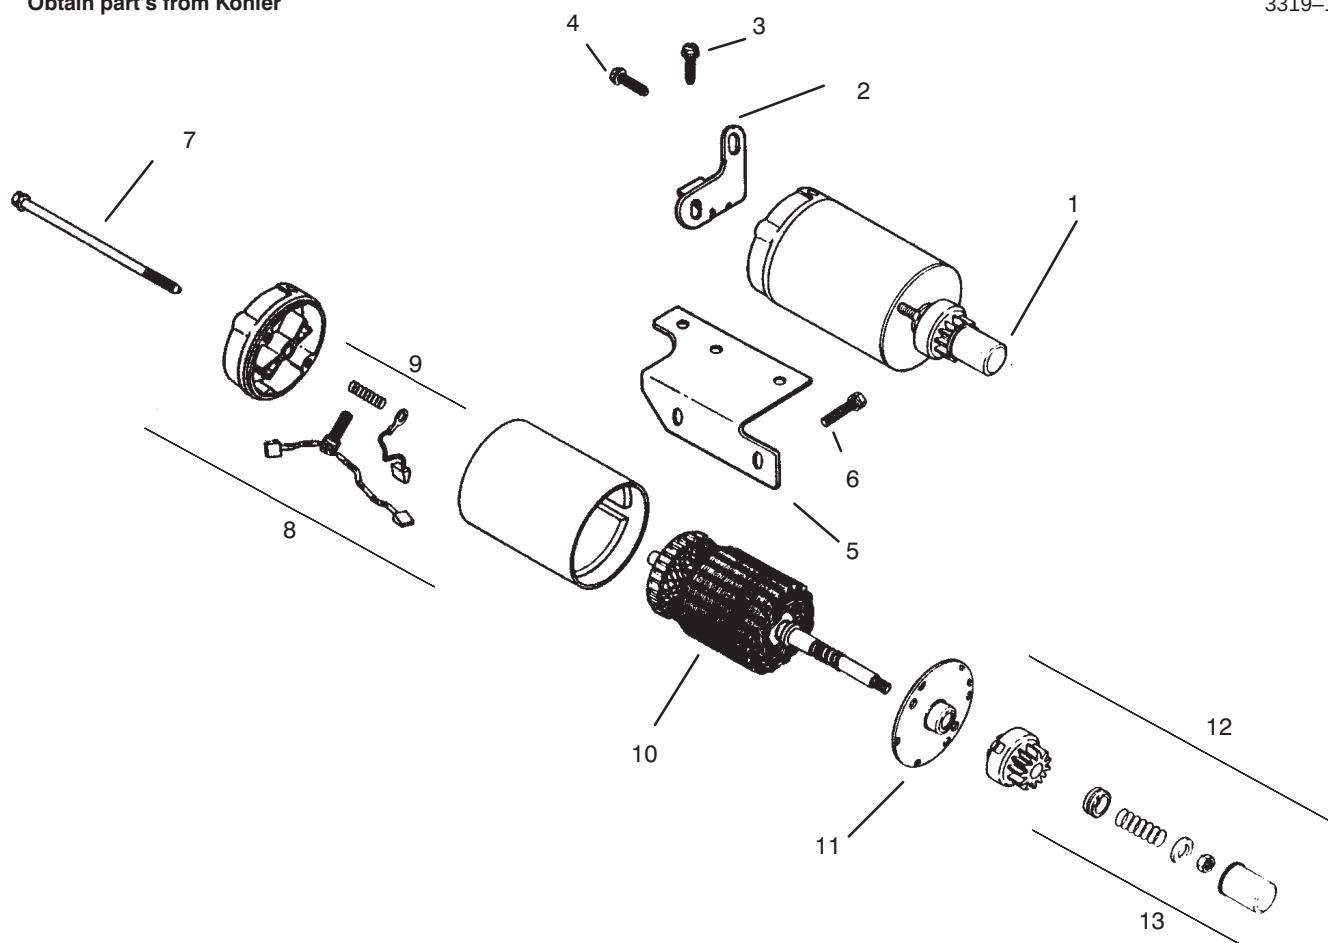

Sheet No.: 313


Starter


Ref. No.	Part No.	Qty.	Description
1	41-098-04	1	Starter ASM INCL 9-15
2	45-126-17	1	Brace-Starter Tail
3	X-67-62	1	Screw-Hex Hd
4	X-67-83	1	Screw
5	47-126-29	1	Bracket-Solenoid
6	X-159-2	2	Screw
7	41-086-19	2	Bolt
8	41-227-04	1	End Cap ASM-INCL 9
9	52-755-15	1	Kit-Brush
10	47-170-02	1	Armature
11	41-227-03	1	Cap-Drive End
12	47-755-07	1	Kit-Drive INCL 15
13	7-755-13	1	Kit-Drive Parts INCL
	47-126-29	1	Bracket-Solenoid
	X-159-2	1	Screw

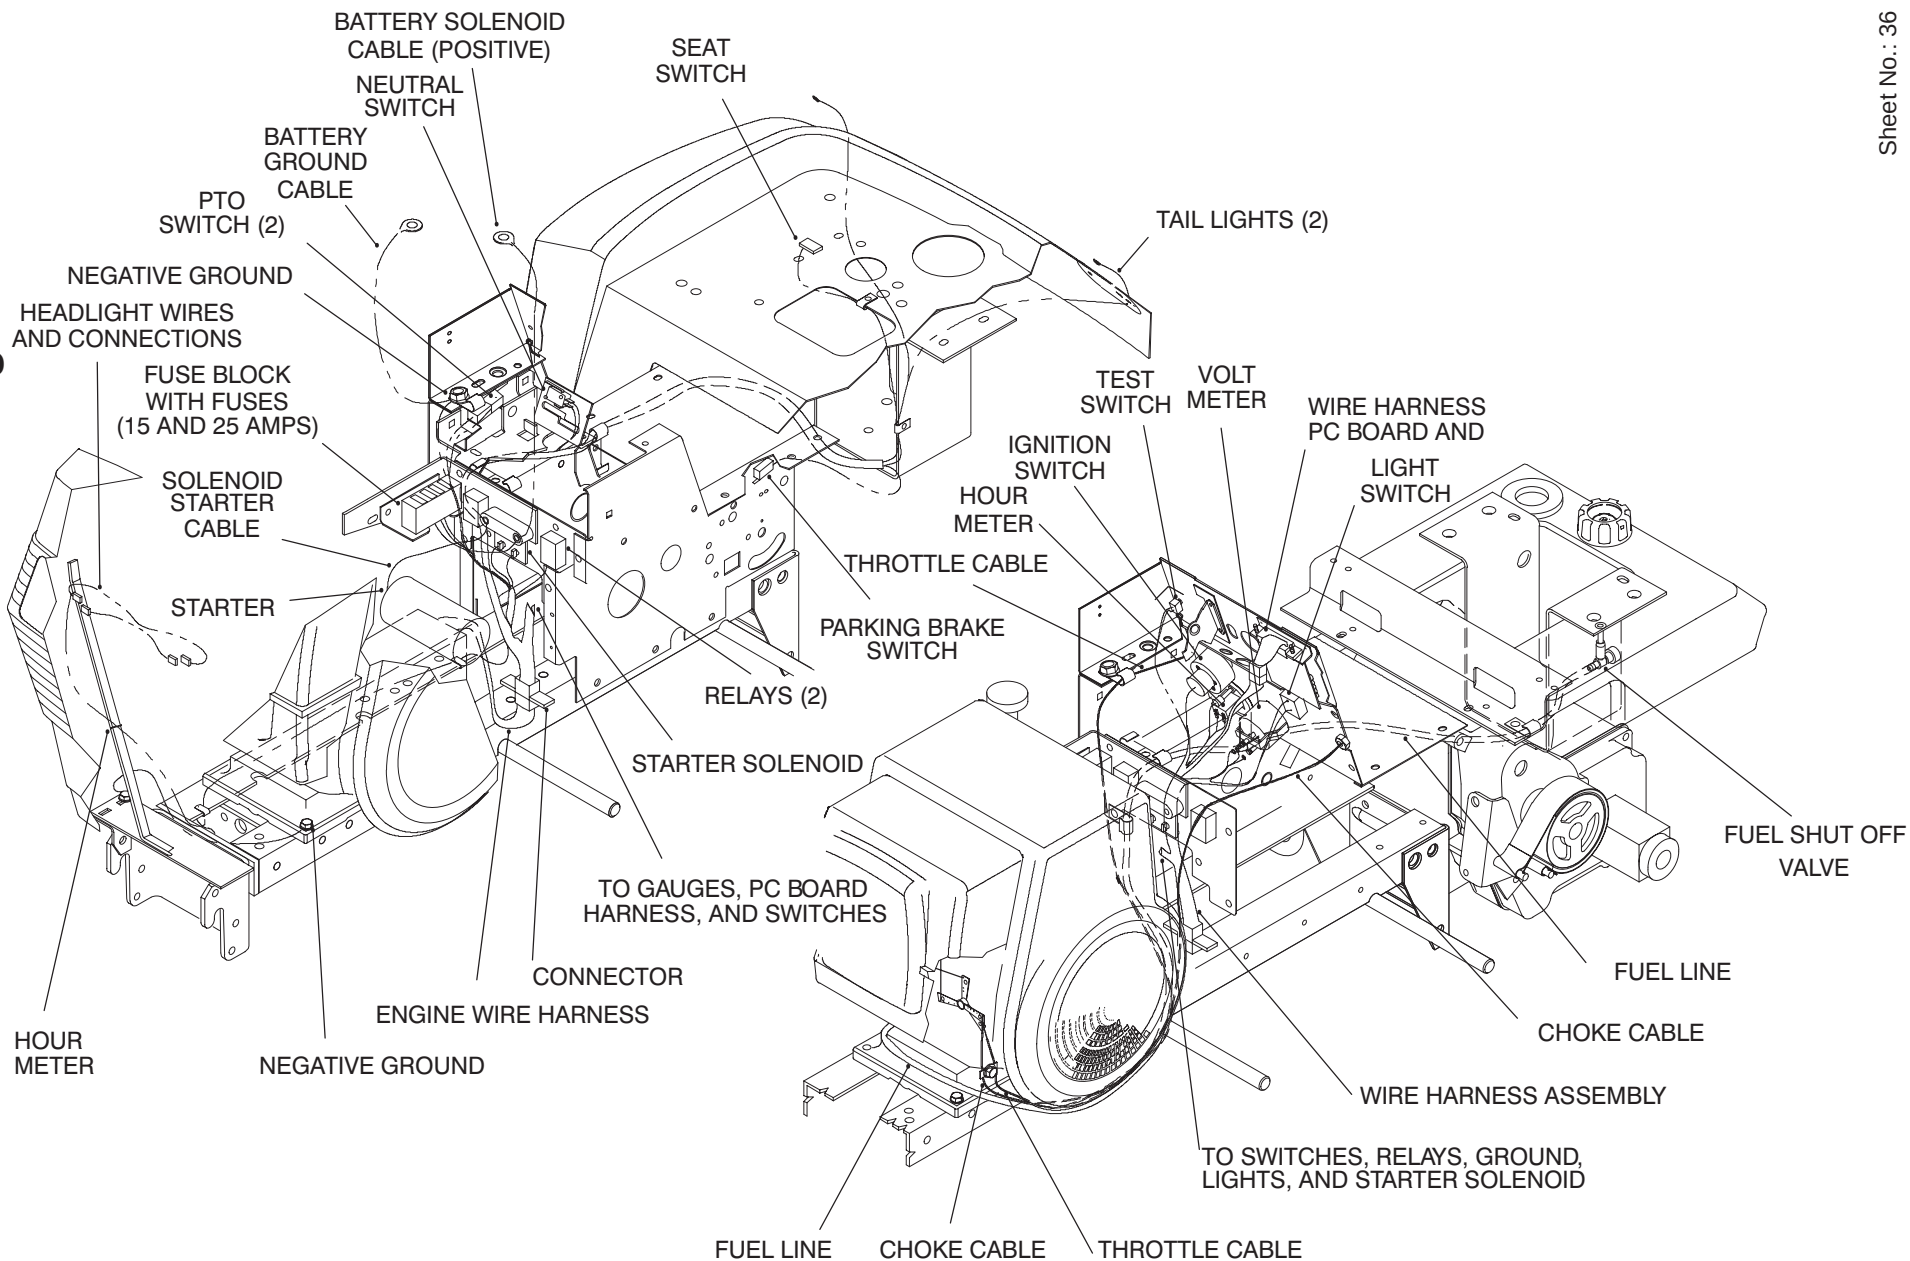

314-H WIRE HARNESS, CABLE, AND TUBE ROUTING SINGLE CYLINDER

Electric Schematic

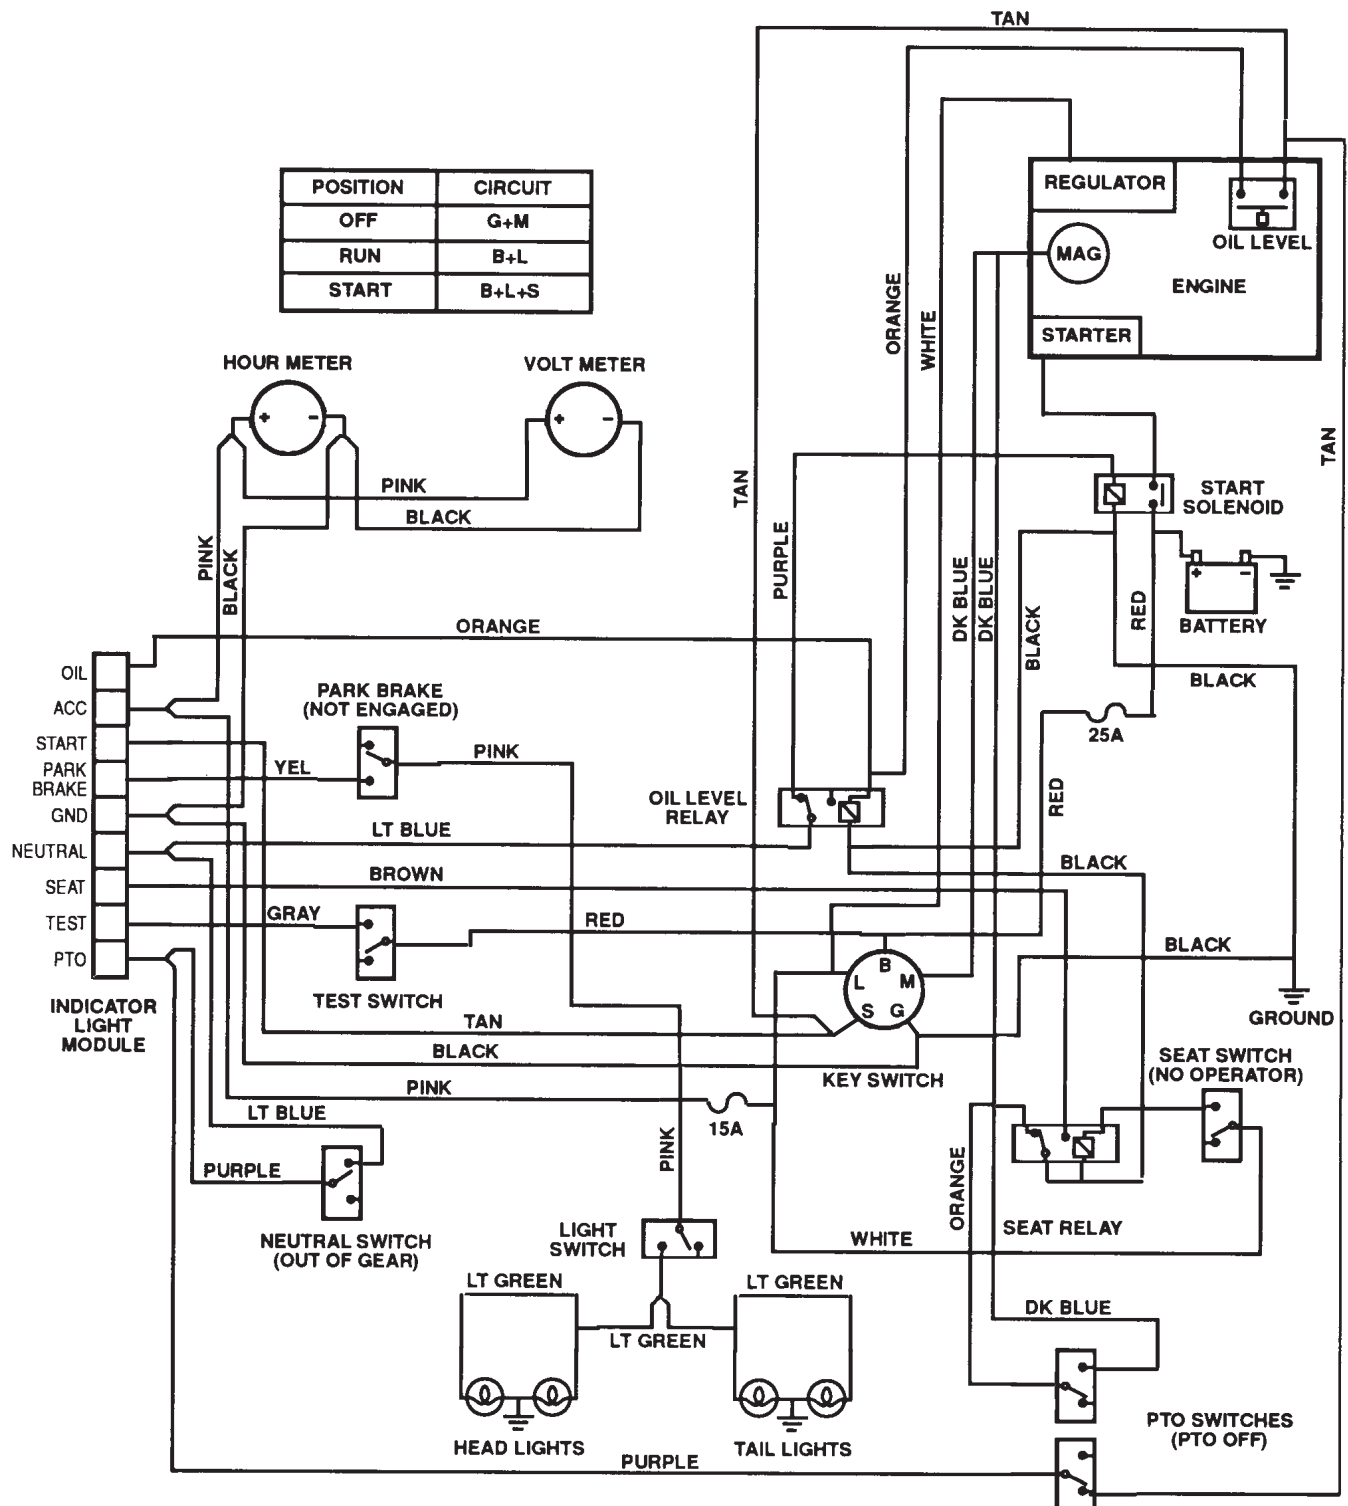

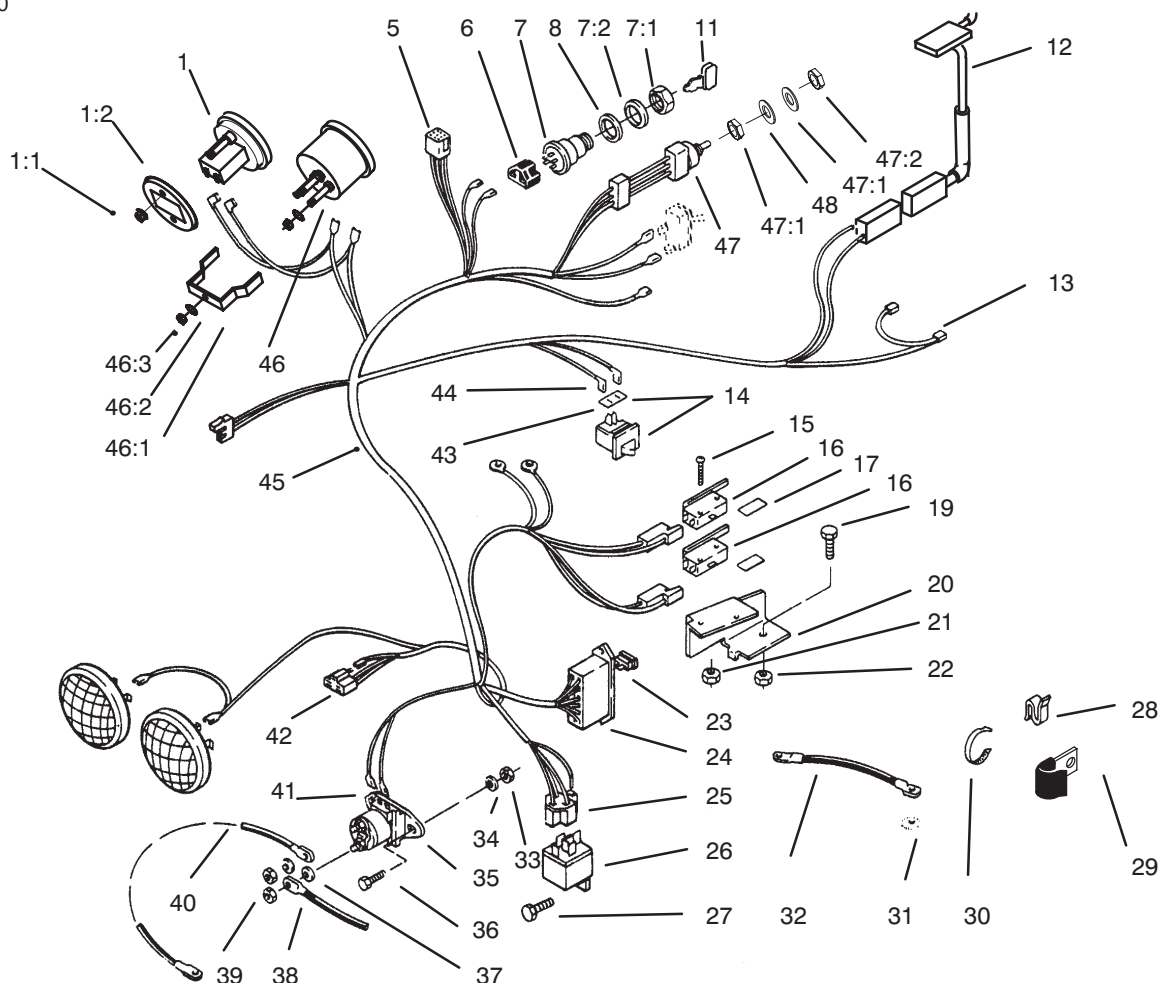


Sheet No.:

314-H Wire Harness Attachment & Component's

Ref. No.	Part No.	Qty.	Description
1	94-3723	1	Meter - Hour
1:1	32149-9	1	Nut - Lock
		1	Washer - Lock
1:2	94-1849	1	Retainer - Cup
5	102651	8	Terminal - Female
6	104926	1	Switch - Connector
7	116338	1	Switch - Ignition
7:1	101884	1	Nut - Special
7:2	920104	1	Washer - IntL. T
8	9202624	1	Washer - Special
11	62-7770	1	Key - Ignition,
12	38-1420	1	Switch - Seat
13	6921	1	Terminal
14	103480	1	Switch - Interlock, (Incl. Ref. #43)
15	910478	2	Screw
16	111332	3	Switch - PTO
17	111642	2	Barrier - Switch
19	926671	1	Bolt
20	115411	1	Support - Switch
21	915732	2	Nut
22	9155732	2	Nut
23	109355	1	Fuse 15 Amp
*	109102	1	Fuse 25 Amp
*	NN10277	1	Fuse 30 Amp
24	120930	1	Body - Fuse
25	518105	1	Terminal
26	116397	1	Relay
27	960152	2	Bolt - Whizlock

Ref. No.	Part No.	Qty.	Description
28	519337	1	Clip — Cable
29	8830	1	Clip
30	3290—378	1	Tie — Cable
31	3254—2	1	Washer — Lock
32	109910	1	Cable — Ground
33	3217—5	2	Nut — Lock
34	253—3	2	Washer — Lock
35	92—9845	1	Solenoid
38	111074	1	Cable — Battery +
39	3218—1	2	Nut
40	111069	1	Cable — Solenoid To Starter
41	518105	1	Terminal
42	112185	1	Body — Connector
43	110502	1	Shield — Dirt
44	518077	2	Terminal
45	79—3590	1	Wire Harness (Incl. Ref.# 5,6,13, 24, 25 42 &45)
47	102138	1	Switch — Lights
47:1	3255—25	1	Washer — Lock
47:2	321—27	1	Nut
46	79—0060	1	Meter — Volt
46:1	78—0080	1	Bracket — Mounting
46:2	3255—24	1	Washer — Lock
46:3	3217—27	1	Nut
48	9202594	1	Washer

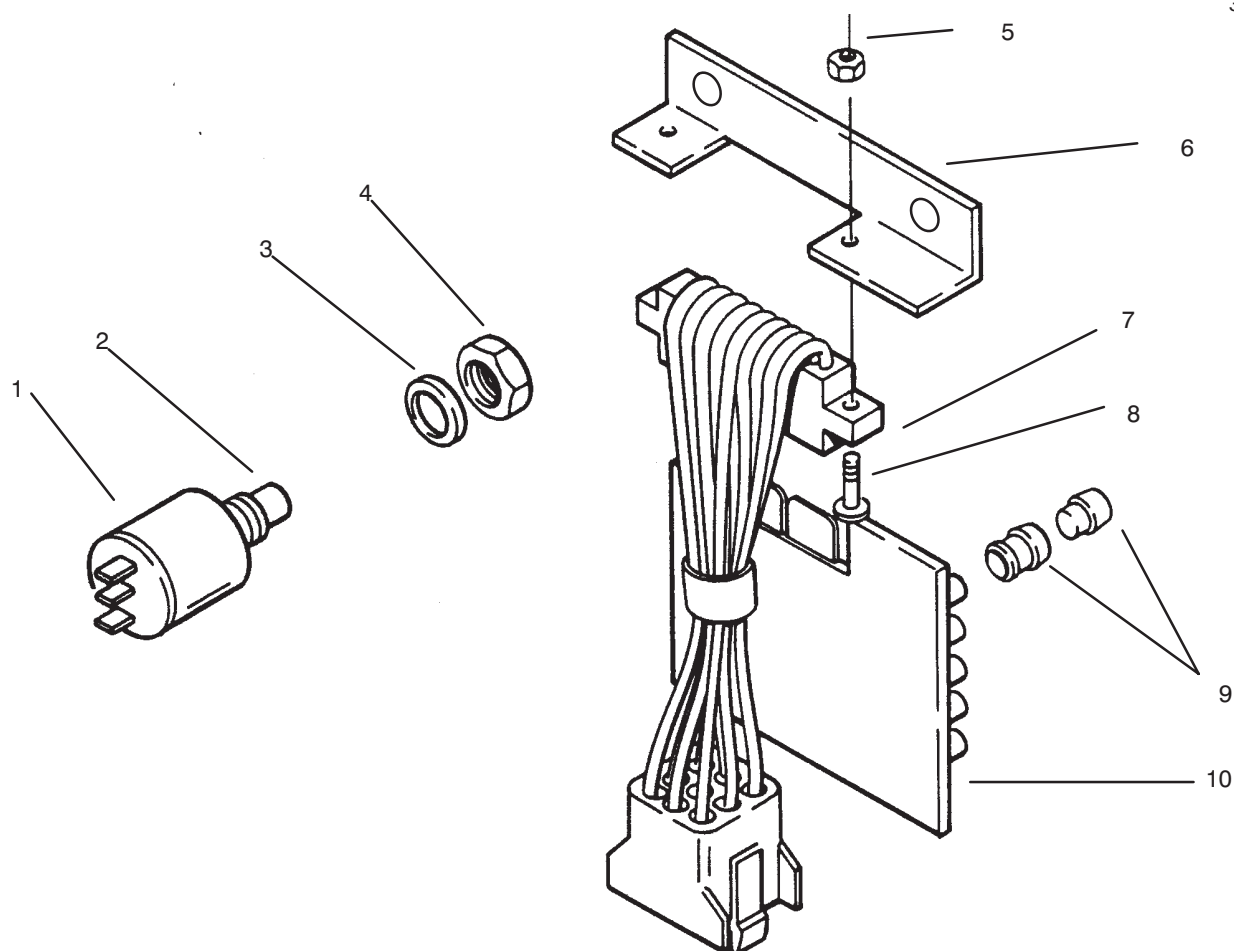

Sheet No.:

PC Board & Test Switch

Ref. No.	Part No.	Qty.	Description
1	116796	1	Test Switch
2	117217	1	Switch — Button (Incl. Ref. #2—4)
3	111767	1	Washer
4	111359	4	Nut — Hex
5	915732	2	Nut — Lock
6	112506	1	Bracket
7	116723	1	Harness — Wiring
8	9107562	2	Screw
9	111343	5	Bushing Assembly & Indicator Lens
10	114825	1	PC Board w/Lights

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1121	7	14	1	Key
1278	2	9	3	Washer—Shim
1278	8	35	1	Washer—Shim
1278	16	14	4	Washer—Shim
1518	22	21	1	Bearing—Needle
1532	22	22	2	Bearing—Needle
1538	22	12	1	Bearing—Needle
2844	14	20	1	Washer—Flat
3023	10	25	2	Clip
3765	9	21	1	Washer—Shim
3765	12	8	1	Washer—Shim
5108	16	3:3	2	Valve—Tire Tubeless
5108	16	10:3	2	Valve—Tire Tubeless
5210	2	17	14	Washer—Shim
5210	16	15	2	Washer—Shim
5618	2	30	1	Ring—Retaining
5618	17	11	2	Ring—Retaining
5666	12	4	1	Bushing—Nyliner
5979	1	17	2	Bushing—Nyliner
5983	6	6	1	Bushing
5983	8	1	3	Bushing
5983	12	6	1	Bushing
5991	14	14	1	Fitting—Filter
6216	2	26	1	Pin—Pivot
6229	7	17	1	Bearing
6397	2	8	1	Bearing—Bronze
6449	21	12	2	Seal—Oil
6472	2	1	1	Bearing—Flanged
6658	11	13	1	Race—Bearing
6659	11	12	2	Retainer
6662	11	16	1	Bearing—Needle
6663	11	15	1	Seal—Oil
6739	7	5	1	Trunnion
6876	13	5	1	Spacer
7443	11	9	1	Pulley—Engine
7456	4	10	4	Clamp
7879	9	20	1	Bushing
7896	2	12	1	Washer—Bowed
7956	22	16	1	Washer—Thrust
8519	2	35	2	Clip—Wire
8616	17	20	2	Spring
8693	9	32	1	Knob
8722	9	34	1	Knob
8830	7	12	2	Retainer—"J"
8830	17	28	1	Retainer—"J"
8830	19	11	1	Retainer—"J"
8830	20	21	1	Retainer—"J"
8830	22	9	1	Retainer—"J"
9038	17	12	1	Grip
9416	21	11	2	Bearing—Needle
9547	1	23	1	Washer—Thrust
9547	22	23	1	Washer—Thrust
100304	8	16	2	Bearing—Cam Roller
100305	14	4	2	Washer—Friction
100309	14	6	1	Bushing—Cam Pivot
100365	14	3	2	Washer—Spring Disc
100656	8	22	1	Bearing—Cam Return
101017	17	15	1	Lock—Hitch
101623	21	6	8	Gear—Pinion
101707	17	23	1	Lock—Attachment
101750	17	19	1	Rod—Latch Pivot
101751	17	27	1	Rod—Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
101757	6	24	1	Spacer
101850	1	15	1	Rod—Hood Stop
101853	8	38	1	Spring—Compression
101889	21	4	2	Gear—Axle
102025	9	3	1	Spacer
102138	5	17	1	ASM—Switch
102628	6	27	1	Fitting—Tube
102628	14	28	1	Fitting—Tube
102872	11	2	1	Shaft—PTO
102881	1	3	2	Headlamp
103125	8	29	1	Spring—Extension
103125	12	7	1	Spring—Extension
103995	14	49	1	Washer
104047	19	1:3	1	Bushing
104048	19	1:2	1	Assembly—Valve
104841	6	16	1	Spring
104859	12	18	1	Spacer—Link
105061	21	7	1	Gear—Differential
105202	10	22	2	Base—Light
105269	17	5	1	Pin—Drawbar Hitch
105316	17	14	2	Cap—Rod
105453	11	10	1	Key—Sq
105503	10	5	2	Bushing
105797	1	18	2	Ring—Retaining
105797	17	18	8	Ring—Retaining
105842	18	5	1	Battery
105876	21	5	2	Ring—Retaining
106193	9	30	1	Screw—Spec HH
106235	19	1:1	1	Tank—Fuel
106267	6	18	1	Grommet
106269	7	9	2	Bearing—Flange
106368	9	23	1	Idler Arm
106369	9	37	1	Lever—Brake
106448	14	40	1	Nipple—Trans Filler
106450	9	28	1	Spacer—Link
106522	7	4	1	Chain—Lift
106634	17	8	1	Pin—Tool
106661	14	9	1	Cam—Eccentric
106695	11	20	1	Ring—Push On
106719	14	17	1	Drum—Brake
106826	15	51	2	Washer—Thrust
106858	13	11	1	Clamp—Muffler
106948	18	8	1	Tray—Battery
107069	3	16	4	Nut—Retainer
107069	4	5	6	Nut—Retainer
107374	21	8	4	Washer—Flat
107938	9	25	1	Spring—Extension
108130	1	4	1	Wire—Ground
108312	21	15	1	Gasket—Transaxle
108316	14	35	1	Pulley—Hydro
108319	22	2	1	Gasket—Transmission
108323	14	15	1	Base—Filter
108325	14	10	1	Arm—Speed Control
108327	14	39	1	Spacer—Pivot
108333	14	5	1	Plate—Cam
108357	22	13	1	Seal—Oil
108361	21	13	1	Axle—Rear
108362	21	18	1	Axle—Rear
108363	21	10	2	Pin—Locating
108364	22	25	1	Fitting—Hyd
108365	6	1	2	Fitting—Tube
108365	14	31	2	Fitting—Tube

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
108366	22	4	1	Spacer—Gear
108393	14	36	1	Fan—Hydro
108457	4	14	1	Nut—Push On
108496	8	26	1	Pivot
108501	9	29	1	Belt—Drive
108680	8	30	1	Spring—Compression
108717	9	15	1	Spacer—Cam Plate
108881	14	7	2	Nut—Hex
108881	17	4	6	Nut—Hex
108881	21	2	4	Nut—Hex
108904	8	18	1	Rod—Control
109189	2	16	1	Bearing—Flange
109262	2	13	2	Washer
109356	14	26	1	Bushing—Pivot
109370	22	17	1	Shaft—Brake
109371	14	18	1	Brake Band
109459	1	5	2	Clamp—Headlight
109494	1	2	1	Bezel—RH Headlight
109495	1	1	1	Bezel—LH Headlight
109530	5	15	1	Nut—Hex Palnut
109703	22	24	1	ASM—Gear
109742	22	20	1	Gear—20t
109751	22	5	1	Gear—20t
109752	22	19	1	Gear—46t
109842	11	5	1	Bearing—Ball
109910	13	14	1	Wire—Ground
109989	10	13	2	Spacer
110124	6	25	1	Hose ASM—Hydraulic
110125	6	19	1	Hose ASM—Hydraulic
110189	8	17	2	Rod End ASM
110513	16	10:2	4	Bearing—Wheel
110656	12	12	1	Trunnion
110669	12	11	1	Plate—PTO
110769	9	27	1	Spring—Extension
111052	12	24	1	Rod—PTO Clutch
111069	18	6	1	Cable—8" Lg.
111069	20	23	1	Cable—8" Lg.
111074	18	1	1	Cable—16" Lg.
111074	20	28	1	Cable—16" Lg.
111196	21	3	2	Cap—End
111199	21	1	2	Bearing—Ball
111217	22	26	1	Tube—Suction
111242	9	11	1	Wire—Guide
111314	11	27	1	Lock Pin ASM
111332	9	42	1	Switch—Interlock
111332	20	4	2	Switch—Interlock
111343	5	9	5	Lens & Bushing ASM
111383	8	33	1	Collar w/Set Screw
111392	3	15	1	Retainer
111516	16	3:1	2	Wheel
111757	1	7	1	Edging
111926	3	36	1	Decal—Elec System
111951	16	12	2	Cap—Hub
111952	16	13	2	Washer
111960	3	33	1	Decal—PTO Clutch
112214	5	13	1	Control—Choke
112358	1	28	1	ASM—Hood & Grill
112415	3	6	1	Stop—PTO
112426	9	31	1	Pulley—Idler
112506	3	13	1	Bracket
112564	10	26	2	Lens—Light
112637	24	4	1	ASM—Pump

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
112641	24	9	1	ASM—Cover
112641	24	9	1	ASM—Cover
112652	24	30	1	Shield—Grass
112653	24	31	1	Ring—Retaining
112841	9	10	1	Cap
113010	18	10	1	Hold Down
113107	11	26	1	Clevis
113108	11	1	1	Rod—PTO Housing
113136	24	16	1	Race—Pump
113443	2	14	1	Tube—Steering Shaft
113969	18	9	2	Hook—Retainer
114000	6	4	1	Valve ASM — Hyd
114720	18	7	1	Tube—Battery Drain
114823	9	22	1	Washer—Curved Spring
114825	5	20	1	Pc Board & Schematic
115230	8	41	1	Switch—Clutch
115411	20	2	1	Bracket—Switch
115854	5	21	1	Control—Throttle
116000	4	8	4	Screw—CARR
116302	6	8	1	Arm—Control
116321	8	5	1	Arm—Control
116324	8	6	1	Rod & Balljoint ASM
116338	5	18	1	ASM—Switch
116397	20	17	2	Relay
116407	8	13	1	Rod End
116445	3	38	1	Decal—Parking Brake
116446	10	27	1	Decal—Do Not Tow
116723	5	4	1	Harness—P C Board
116744	16	3:2	2	Tire
116745	1	19	1	Rod—Grill Pivot
116746	1	20	1	Bracket—Grill RH
116747	1	13	1	Bracket—Grill LH
116796	5	5	1	Switch—Button
117127	16	10:4	2	Tire
117343	3	10	2	Latch—Hood
117344	1	10	2	Handle—Latch
117371	3	19	4	Screw—CARR
117432	1	9	4	Poprivet
117432	3	11	4	Poprivet
117930	17	17	1	Latch ASM—Mid
118660	8	7	1	Guide—Control
118860	9	6	1	Knob—Parking Brake
119340	6	22	1	Cylinder—Hydraulic
120930	20	9:1	1	Fuse Holder
121100	7	15	1	Lift Arm ASM
519337	19	16	1	Clip
700806	10	15	2	Knob
701178	10	1	2	Cap—Protector
911423	21	9	4	Screw—HH
933135	9	5	1	Pin—Spirol
933198	6	7	1	Pin—Spirol
933198	8	4	1	Pin—Spirol
933274	11	25	1	Pin—Spirol
937089	14	48	2	Key—Woodruff
937099	22	18	1	Key—Woodruff
937108	14	47	2	Key—Woodruff
9080026	11	14	4	Screw—Lock
9080026	15	50	1	Screw—Lock
9080196	14	8	1	Screw—HH
9080356	22	7	1	Screw—HH
9080406	22	10	2	Screw—HH
9103312	13	13	4	Screw

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
9104784	20	5	2	Screw
9107562	5	3	2	Screw—Phcr
9107622	3	8	2	Screw—Phcr
9107922	5	7	2	Screw—Phcr
9107944	20	8	2	Screw—Phcr
9108372	3	1	8	Screw—Phcr
9108372	4	7	2	Screw—Phcr
9109484	8	42	2	Screw—Phcr
9109484	9	41	2	Screw—Phcr
9114584	8	21	1	Screw—HH
9117474	9	36	1	Screw—Phcr
9151126	3	20	4	Nut
9157324	5	8	2	Nut—Lock
9157324	8	40	2	Nut—Lock
9157324	9	43	2	Nut—Lock
9157324	20	1	2	Nut—Lock
9157404	5	1	2	Nut
9157404	20	12	2	Nut
9159604	3	14	2	Nut
9201504	3	9	2	Washer—Lock
9202324	6	23	1	Washer
9202414	9	4	1	Washer—Flat
9202594	5	16	1	Washer
9202624	5	19	1	Washer—Flat
9202634	9	38	1	Washer—Flat
9266714	1	6	2	Screw—HWHTF
9266714	20	6	1	Screw—HWHTF
9266944	3	7	17	Screw—HH
9266944	4	15	1	Screw—HH
9266944	8	27	1	Screw—HH
9266944	10	10	8	Screw—HH
9266944	20	20	5	Screw—HH
9266974	19	8	2	Screw—HH
9321204	6	3	1	Pin—Clevis
9329974	6	20	1	Pin—Clevis
9335044	8	28	1	Hairpin
9335054	7	1	2	Hairpin
9335054	12	9	1	Hairpin
9335054	17	10	1	Hairpin
9335064	11	23	1	Hairpin
9335074	7	16	2	Cotter—Hairpin
9791204	17	6	2	Spacer
28—8080	18	2	1	Boot—Battery Terminal
38—1420	10	19	1	Switch—Seat
55—3570	19	7	1	Cap—Fuel
56—2800	24	1	1	Screw—HH Socket
56—2810	24	2	1	Bearing—Ball
56—2820	24	3	2	Seal—Oil
56—2850	24	6	1	Ring—Seal
56—2860	24	7	1	Plate—Pump
56—2870	24	8	1	Ring—Seal
56—2880	24	10	2	Button
56—2890	24	11	1	Pin—Dowel
56—2900	24	12	1	Pin—Drive
56—2900	24	12	1	Pin—Drive
56—2910	24	13	1	Shaft—Input
56—2910	24	13	1	Shaft—Input
56—2920	24	14	1	Ring—Seal
56—2930	24	15	1	Rotor/Ball—Pump
56—2940	24	56	1	ASM—Ring
56—2950	24	18	2	Piston
56—2960	24	19	2	Ring—Backup

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
56-2970	24	20	2	O-Ring
56-2970	24	20	2	O-Ring
56-2980	24	21	1	Pin-Coil
56-2990	24	22	1	ASM-Pintle
56-3000	24	23	2	Ring-Retaining
56-3010	24	24	2	Ball-.313 Dia
56-3020	24	25	2	Body-Valve
56-3030	24	26	1	Ball-.438 Dia
56-3040	24	27	1	Spring-Valve
56-3050	24	28	1	Plug-Valve
56-3060	24	29	1	Pin-Dowel
56-3090	24	5	4	Ring-Retaining
56-3100	24	33	6	Screw-Socket Hd
56-3110	24	34	6	Roller
56-3120	24	35	1	Carrier
56-3130	24	36	1	Seal-Oil
56-3140	24	37	1	Kit-Shaft
56-3170	24	40	1	Insert-Ring
56-3180	24	41	1	Spring-Valve
56-3200	24	43	2	Body-Valve
56-3210	24	44	2	Ball-.625 Dia
56-3220	24	45	1	Rotor/Ball-Motor
56-3230	24	46	1	Shaft-Output
56-3230	24	46	1	Shaft-Output
56-3240	24	47	1	Race-Motor
56-3250	24	48	1	ASM-Plug
56-3260	24	49	1	O-Ring
56-3280	24	52	1	Bearing-Ball
56-3290	24	53	1	Ring-Retaining
56-3310	24	55	1	Kit-Seal
62-7770	5	10	2	Key-Ignition
66-0120	5	6	1	Knob
76-1340	10	30	1	Decal-USA
78-1540-03	3	23	1	Bracket-Control
78-1550	7	7	1	Lever-Lift
78-2880-01	2	4	1	Shaft-Steering
78-2900	2	33	2	ASM-Rod
78-3000-03	3	21	1	Bracket-Battery Support
78-3020-03	20	22	1	Plate-Front
78-5610-03	3	12	1	Console
78-5620-03	3	2	1	Plate-Hoodstand Rear
78-5631-03	8	9	1	Bracket-Control
78-5640	6	17	1	Valve Actuator Bar ASM
78-5660	8	2	1	Rod-Control
78-5670	6	12	1	Rod-Lift Control
78-7190	3	37	1	Decal-Lower Dash
78-7300	3	35	1	Decal-Choke
78-7740-01	14	25	1	Pivot Arm-Brake
78-8110-03	3	40	1	Plate-Shift
78-8500-03	9	2	1	ASM-Parking Brake Pawl
78-9130	3	32	1	Decal-Cold Start
79-0060	5	11	1	Voltmeter
79-0950-03	10	17	1	Bracket-Pivot RH
79-0970-03	10	12	1	Bracket-Pivot LH
79-2470	3	34	1	Decal-Back Plate
79-3610	20	9	1	Wire Harness & Schem.
79-4990-01	19	19	1	Bracket-Fender Support
79-5020	14	27	1	Tube Cmplt- Fltr To Pump
79-5130-01	4	6	1	Cover-Side LH
79-5270	14	13	1	Filter-Oil
83-2720	16	2	10	Bolt-Lug
83-2820	9	40	1	Spring-Extension

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
83-6520	17	16	1	Rod—Lock
86-9280	6	29	1	Tube ASM—Hyd Pressure
86-9290	6	28	1	Tube ASM—Hyd Return
88-2710-01	2	5	1	Support—Lower Steering
88-2790	14	42	1	Decal—Danger
88-2790	21	16:2	1	Decal—Danger
88-3870	2	21:1	1	Cover—Steering Wheel
92-1525-03	3	28	1	Hoodstand
92-1532	13	10	1	Engine—14 Hp Kohler
92-4987	2	19	1	Shaft—Steering
92-6511	10	9	1	Seat
92-6750	10	8	2	Spacer—Nylon
92-6972-03	10	7	1	Support—Seat
92-6986	10	6	2	Bolt—Shoulder
92-7054	10	3	2	Spring—Compression
92-7298	21	16	1	Casehalf Decal ASM
92-8747	17	29	2	Decal—Attach A Matic
92-8946	3	39	1	Decal—Danger
92-9511	19	20	1	Line—Fuel 62"
92-9824	1	27	1	Decal—Hood LH
92-9825	1	25	1	Decal—Hood RH
92-9826	1	24	1	Decal—Front Hood
92-9827	10	28	1	Decal—Fender
92-9830	3	31	2	Decal—314 Hydro
92-9837	1	26	1	Decal—Danger
92-9845	20	15	1	Solenoid
92-9848	22	1	1	Trans—Hydro (Service)
93-1613	17	22	1	Latch—Front
93-9800	16	10	2	ASM—Wheel & Tire
93-9801	16	10:1	2	ASM—Wheel w/Zerk
93-9810	24	17	1	Ring—Cam
93-9811	24	50	1	Body
93-9812	24	57	1	ASM—Body
93-9813	24	58	1	Fitting—Hydraulic
94-1834	14	43	1	Decal—Unidrive
94-2869	10	14	2	Washer—Flat
94-3519	2	21	1	Wheel—Steering
94-3521-01	4	17	1	Footrest RH
94-3522-01	4	9	1	Footrest LH
94-3700	6	13	1	Knob—Lift
94-3701	12	2	1	Rod—PTO Control
94-3704	11	21	1	Belt Cover—PTO
94-3707-01	8	32	1	Pedal—Brake
94-3710	4	1	1	Mat—Foot RH
94-3712	4	2	1	Mat—Foot LH
94-3717	16	18	2	ASM—Hubcap
94-3718	16	17	2	ASM—Hubcap
94-3722-01	10	11	1	Fender
94-3723	5	12	1	Hourmeter
94-3724-01	4	19	1	Belt Guard
94-3726-01	11	18	1	Bracket
94-3727	12	1	1	Knob
94-3729	11	28	1	Retainer—Bolt
94-3730	16	4	2	Hubcap—8"
94-3730	16	18:1	2	Hubcap—8"
94-3731	16	1	2	Hubcap—12"
94-3731	16	17:1	2	Hubcap—12"
94-3735	11	22	2	Nut—Wing
94-3736	1	23	1	Plate—Logo
94-3736	16	16	4	Plate—Logo
94-3736	16	17:2	2	Plate—Logo
94-3736	16	18:2	2	Plate—Logo

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-3738	13	12	1	Shield-Heat
94-3739	13	1	1	Muffler
94-6650	11	8	1	ASM-Plate
94-6652	12	20	1	ASM-Brake
94-6654-01	8	36	1	Rod-Brake
94-6668	8	3	1	Knob-Control
94-6672	14	34	1	Transaxle ASM
94-6673-01	2	22	1	Frame
94-6683	8	43	1	Sleeve-Protective
94-6692-01	19	18	1	Bracket-Support
94-6693-01	19	12	1	Bracket-Support
94-9729	16	1:1	8	Clip-Hubcap
94-9729	16	4:1	6	Clip-Hubcap
101711-01	17	25	1	Plate-Front Hitch
102644-01	17	3	2	Plate-Hitch
102870-01	17	2	1	Bracket-PTO Support
103478-01	11	7	1	Housing-Clutch
105763-03	14	46	2	Hub-Wheel
106209-03	3	25	1	Angle-Belt Guard
107951-03	3	30	1	Bracket-Fender Front
108326-03	14	2	1	Spacer-Pivot
108329-03	22	27	1	Plate-Control
108537-03	3	27	1	Bracket-Belt
108716-03	9	16	1	Plate-Neutral Cam
109367-03	22	15	1	Bracket-Brake
109554-03	20	18	1	Bracket-Guard
110768-03	14	1	1	Dipstick
110780-03	9	33	1	Handle-Brake & Clutch
111201-01	21	14	1	Case-Transaxle
111241-03	12	13	1	Bracket-PTO
113381-01	2	32	1	Spindle-LH
113382-01	2	31	1	Spindle-RH
113445-01	7	21	1	Bar-Lift
113454-03	8	15	1	ASM-Cam Control
113927-01	21	16	1	Case-Transaxle
113927-01	21	16:1	1	Case-Transaxle
116305-03	6	9	1	Bracket-Control
117331-03	20	11	1	Bracket-Fuse Holder
120590-03	5	2	1	Stop-Throttle
1644-01	17	7	1	Hitch ASM
237-69	2	20	1	O-Ring
2412-98	19	21	2	Clamp-Hose
281-10	14	16	1	Plug-Pipe
281-10	21	17	2	Plug-Pipe
302-5	2	28	2	Fitting-Grease
302-5	8	34	1	Fitting-Grease
302-11	2	7	2	Fitting-Grease
321-4	6	11	1	Screw-HH
321-4	8	10	2	Screw-HH
321-4	18	3	2	Screw-HH
321-6	9	39	1	Screw-HH
321-9	8	20	1	Screw-HH
321-11	6	26	2	Screw-HH
322-1	2	24	1	Screw-HH
322-2	7	13	2	Screw-HH
322-2	19	15	2	Screw-HH
322-3	3	22	2	Screw-HH
322-3	14	37	2	Screw-HH
322-3	19	17	4	Screw-HH
322-4	10	4	4	Screw-HH
322-5	3	3	2	Screw-HH
322-6	7	3	1	Screw-HH

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
322-7	13	2	1	Screw—HH
323-6	2	2	2	Screw—HH
323-6	11	19	1	Screw—HH
323-6	12	10	1	Screw—HH
323-6	13	7	2	Screw—HH
323-7	14	33	4	Screw—HH
323-8	2	6	2	Screw—HH
323-8	9	8	1	Screw—HH
323-8	13	9	2	Screw—HH
323-9	9	7	1	Screw—HH
323-9	14	29	1	Screw—HH
323-15	22	8	2	Screw—HH
323-23	8	24	1	Screw—HH
323-25	22	14	3	Screw—HH
323-26	22	11	1	Screw—HH
323-44	17	1	6	Screw—HH
324-5	9	14	1	Screw—HH
324-5	12	16	2	Screw—HH
3217-5	8	14	1	Nut—Hex
3217-5	9	24	1	Nut—Hex
3218-1	12	23	2	Nut—Jam
3218-3	14	45	4	Nut—HJ
3220-1	8	11	3	Nut—HH
3229-25	1	14	4	Screw—CARR
3229-25	12	19	2	Screw—CARR
3230-1	4	12	1	Bolt—CARR
3231-25	17	26	3	Screw—CARR
3234-13	20	25	1	Screw—HHF
3234-33	20	24	5	Screw—HFW
3235-22	14	21	1	Screw—HH
3235-22	19	10	2	Screw—HH
3243-5	14	44	4	Screw—Set
3245-32	8	33:1	1	Screw—Set
3246-2	11	11	2	Screw—HSH Set
3250-31	10	20	4	Screw—Phcr
3253-3	12	22	2	Washer—Lock
3253-4	2	25	1	Washer—Lock
3253-4	13	3	1	Washer—Lock
3253-4	14	38	2	Washer—Lock
3253-4	19	14	2	Washer—Lock
3253-6	9	13	1	Washer—Lock
3253-6	12	15	2	Washer—Lock
3253-21	14	32	4	Washer—Lock
3254-1	10	23	4	Washer—Lock
3254-2	1	21	1	Washer—Lock
3254-2	20	3	1	Washer—Lock
3255-7	20	16	2	Washer—Lock
3255-9	13	15	2	Washer—Lock
3256-4	9	9	2	Washer—Flat
3256-4	14	24	1	Washer—Flat
3256-4	19	9	2	Washer—Flat
3256-22	1	12	3	Washer—Flat
3256-22	8	19	2	Washer—Flat
3256-22	12	21	2	Washer—Flat
3256-22	20	26	2	Washer—Flat
3256-23	3	4	2	Washer—Flat
3256-23	6	15	2	Washer—Flat
3256-23	7	20	1	Washer—Flat
3256-23	13	4	1	Washer—Flat
3256-24	8	25	2	Washer—Flat
3256-24	14	22	2	Washer—Flat
3256-25	9	12	1	Washer—Flat

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3256-25	12	14	2	Washer-Flat
3256-26	7	2	1	Washer-Flat
3256-26	14	12	1	Washer-Flat
3256-26	17	9	1	Washer-Flat
3256-27	11	24	1	Washer-Flat
3256-37	5	14	1	Washer-Flat
3256-62	7	10	2	Washer-Flat
3257-24	14	30	1	Key-Woodruff
3272-1	1	16	2	Pin-Cotter
3272-1	6	2	1	Pin-Cotter
3272-2	9	35	1	Pin-Cotter
3272-6	14	19	2	Pin-Cotter
3272-10	8	37	1	Pin-Cotter
3272-10	12	5	3	Pin-Cotter
3272-11	6	21	1	Pin-Cotter
3272-17	16	7	2	Pin-Cotter
3272-19	2	11	1	Pin-Cotter
3272-21	2	18	1	Pin-Cotter
3290-479	4	3	16	Fastener-Panel
3296-4	8	39	1	Nut-Lock
3296-6	2	3	4	Nut-Lock
3296-8	6	31	1	Nut-Lock
3296-8	8	44	3	Nut-Lock
3296-27	10	24	4	Nut-Lock
3296-29	3	24	4	Nut-Lock
3296-29	4	11	5	Nut-Lock
3296-29	6	14	2	Nut-Lock
3296-29	7	8	3	Nut-Lock
3296-29	10	16	2	Nut-Lock
3296-29	19	13	4	Nut-Lock
3296-39	2	23	4	Nut-Lock
3296-39	7	6	1	Nut-Lock
3296-39	8	31	1	Nut-Lock
3296-39	9	18	1	Nut-Lock
3296-39	13	6	2	Nut-Lock
3296-39	14	23	1	Nut-Lock
3296-39	17	24	3	Nut-Lock
3296-39	22	3	6	Nut-Lock
3296-42	1	11	4	Nut-Lock
3296-42	6	5	2	Nut-Lock
3296-42	8	12	1	Nut-Lock
3296-42	9	26	1	Nut-Lock
3296-42	18	12	2	Nut-Lock
3296-42	20	19	5	Nut-Lock
3296-45	14	11	1	Nut
3296-56	20	14	1	Nut-Lock
3296-58	10	2	2	Nut-Flange
3296-59	12	17	1	Nut-Lock
32103-22	18	11	2	Nut-Wing
32120-47	7	18	1	Ring-Retaining
32120-47	8	23	3	Ring-Retaining
32120-47	9	19	2	Ring-Retaining
32120-62	11	4	1	Ring-Retaining
32120-64	22	6	1	Ring-Retaining
32120-72	11	3	2	Ring-Retaining
32120-93	2	34	2	Snap Ring
32121-94	8	8	1	Pin-Spirol
32121-111	2	15	1	Pin-Spiral
32128-19	9	1	1	Nut-Lock
32128-40	11	17	1	Nut-Lock
32136-5	2	10	1	Nut-Slotted
32149-2	20	27	2	Nut-Hex Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
32151—11	12	3	1	Ring—Grip
32151—91	7	11	2	Ring—Retaining
5638—01	2	27	1	Axle—Front

*Not Illustrated