




MODEL NO. 38430-7900001 & UP
 MODEL NO. 38431-7900001 & UP

PARTS
 CATALOG


CCR-3000 GTS SNOWTHROWER
CCR-3000 GTS SNOWTHROWER INT'L

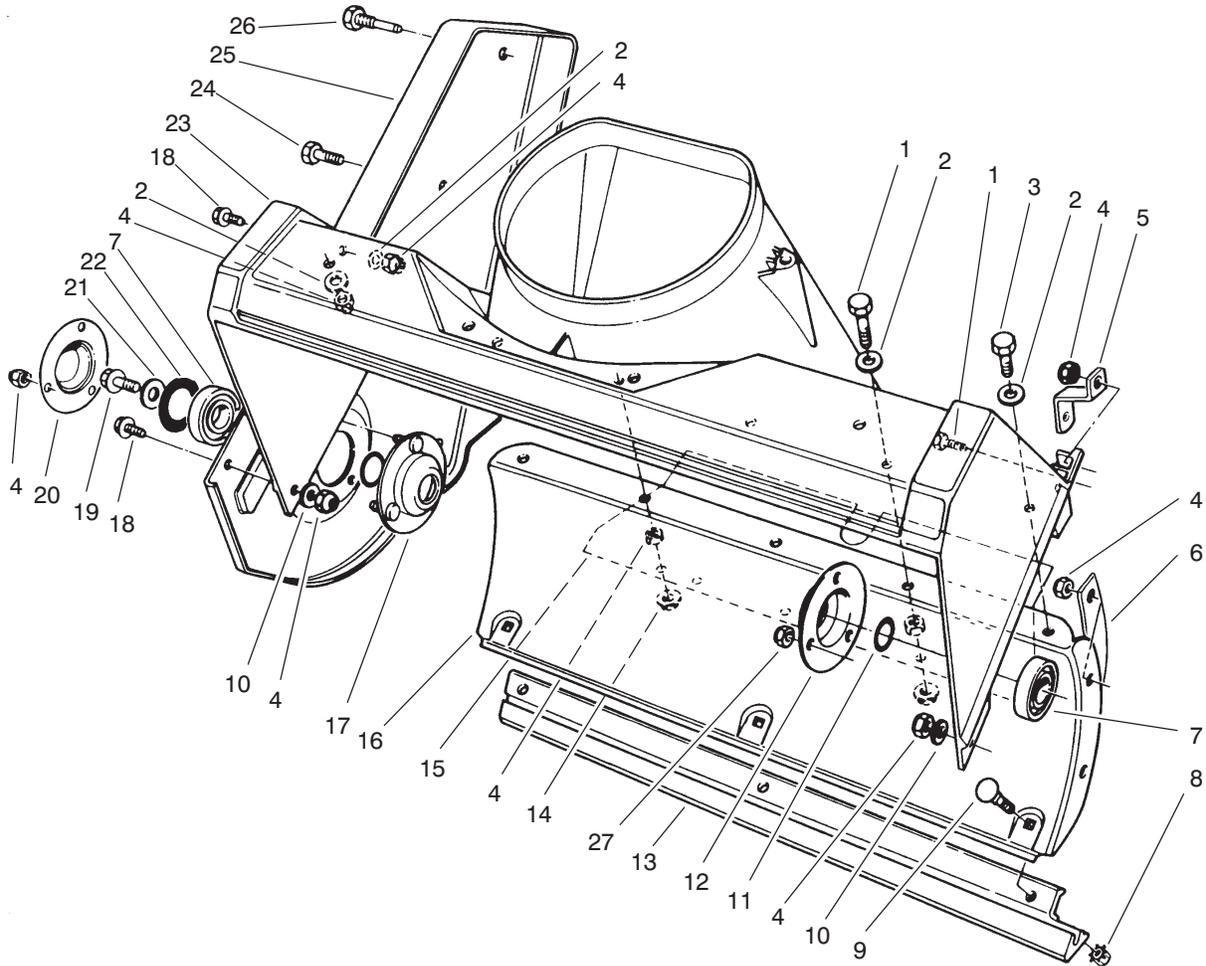

C-2121

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	321-6	Screw - Hex. Hd.	3	15	55-9512	Cover - Bottom	1
2	3256-22	Washer	9	16	55-9220	Housing - Lower	1
3	321-4	Screw - Hex. Hd.	3	17	52-9110	Flange - Bearing	1
4	3296-42	Nut - Lock	16	18	32105-15	Screw - Hex. Hd.	5
5	55-9430	Bracket - Housing	1	19	3234-25	Screw - Hex. Flange Hd.	1
6	56-2610	Bracket - Lower Housing	1	20	52-7290	Retainer - Bearing	1
7	38-7820	Bearing - Ball	2	21	3256-24	Washer	1
8	32149-2	Nut - Keps	3	22	52-7270	Washer - Rubber	1
9	3229-11	Screw - Carriage	3	23	55-8700	Housing	1
10	3256-67	Washer	2	24	322-43	Screw - Hex. Hd.	1
11	52-7280	Washer - Thrust	2	25	55-8840	Sideplate - R.H.	1
12	38-8620	Retainer - Bearing	1	26	38-8211	Pin	1
13	55-8760	Scraper	1	27	3296-2	Nut - Lock	3
14	32128-10	Nut - Flange Lock	2				

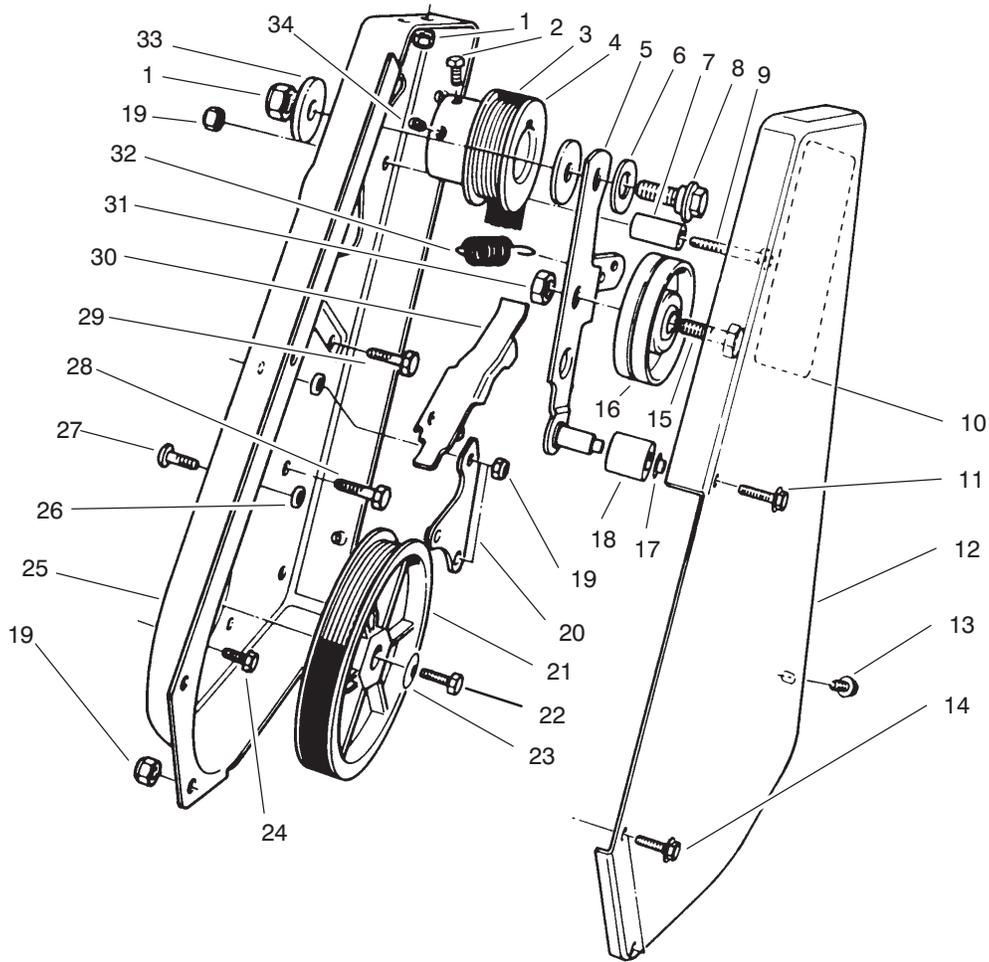

C-2122

DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	3	18	55-9520	Roller - Brake	1
2	3241-7	Screw - Set, Sq. Hd.	1	19	3296-42	Nut - Lock	6
3	55-9300	Belt - Drive	1	20	55-9570	Pivot Plate Assembly	1
4	55-9180	Pulley - Engine	1	21	60-9320	Pulley - Rotor	1
5	12-8279	Idler Arm Assembly (Incl. Ref. #17 & 18)	1	22	321-30	Screw - Hex. Hd.	1
6	25-5640	Washer	1	23	3290-456	Washer - Belleville	1
7	55-9530	Guide - Drive Belt	1	24	32105-8	Screw - Hex. Hd.	3
8	27-0410	Screw - Shoulder	1	25	55-8851	Sideplate - L.H.	1
9	321-13	Screw - Hex. Hd.	1	26	55-9620	Spacer	3
10	60-9480	Decal - Belt Routing	1	27	3274-31	Screw - Button Hd.	1
11	36-3860	Screw - Special	1	28	321-4	Screw - Hex Head	2
12	55-9010	Cover - Drive	1	29	322-3	Screw - Hex. Hd.	2
13	12-3270	Screw - Self Tapping	2	30	55-9550	Arm - Brake	1
14	32105-15	Screw - Hex Head	2	31	32152-2	Nut - Lock	1
15	323-29	Screw - Hex. Hd.	1	32	55-9280	Spring - Extension	1
16	55-9290	Pulley - Idler	1	33	5-4460	Washer	2
17	32112-11	Pushnut	1	34	3245-41	Screw - Set	1

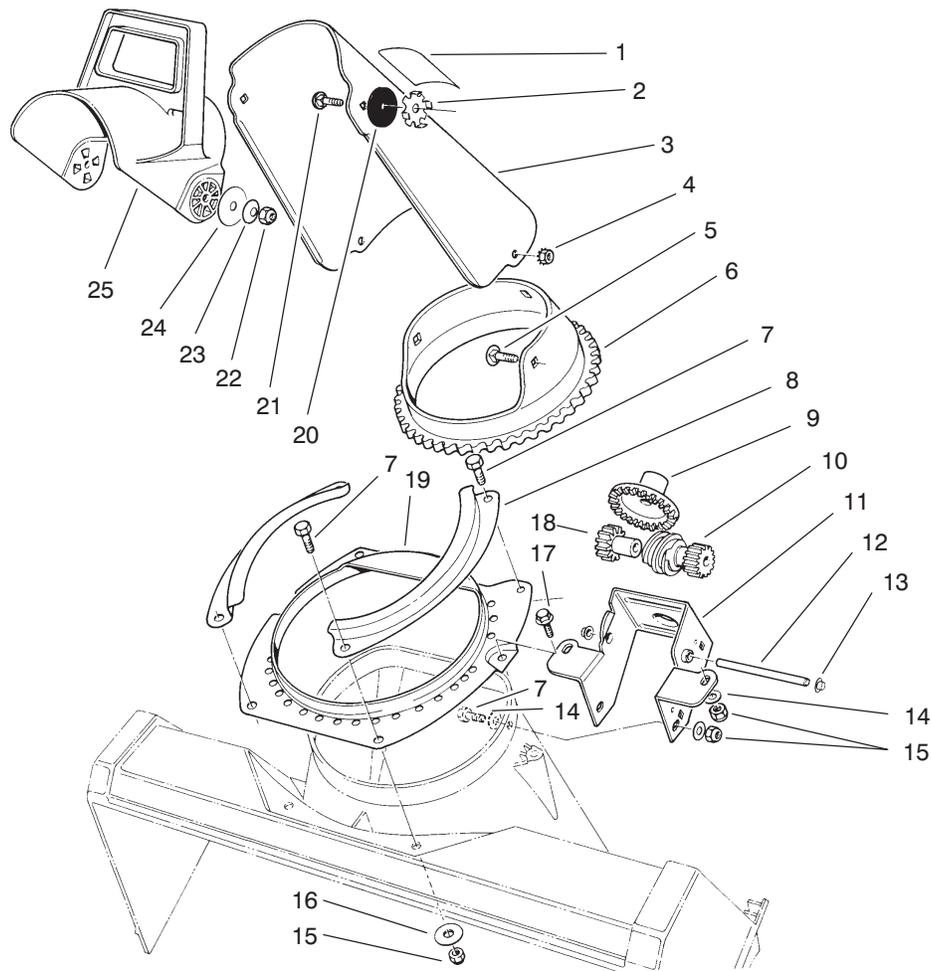


C-0014

DISCHARGE CHUTE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-2900	Decal - Discharge (Model No. 38430)	1	10	55-8730	Gear - Worm/Spur	1
*	94-2901	Decal - Discharge (Model No. 38431)	1	11	84-5650	Bracket - Chute Gears	1
2	55-8950	Plate - Friction	2	12	55-9150	Shaft - Gear	1
3	94-2790	Chute - Discharge (Model No. 38430) (Incl. Ref. #1)	1	13	32112-11	Pushnut	2
*	94-2791	Chute - Discharge (Model No. 38431) (Incl. Ref. #1)	1	14	3256-22	Washer	6
4	32149-1	Nut - Keps	3	15	3296-42	Nut - Lock	6
5	3230-18	Screw - Carriage	3	16	3256-22	Washer	2
6	55-8720	Gear Ring - Chute	1	17	46-8092	Screw - Special	2
7	321-4	Screw - Hex. Hd.	6	18	55-8750	Spacer/Spur Gear	1
8	55-8910	Retainer - Chute Ring	2	19	55-8921	Ring - Chute Support	1
9	55-8740	Gear - Face	1	20	20-4320	Washer - Rubber	2
				21	3230-22	Bolt - Carriage	2
				22	3296-29	Nut - Lock	2
				23	3290-456	Washer - Belleville	2
				24	3256-68	Washer	2
				25	56-2680	Deflector	1

*Not Illustrated

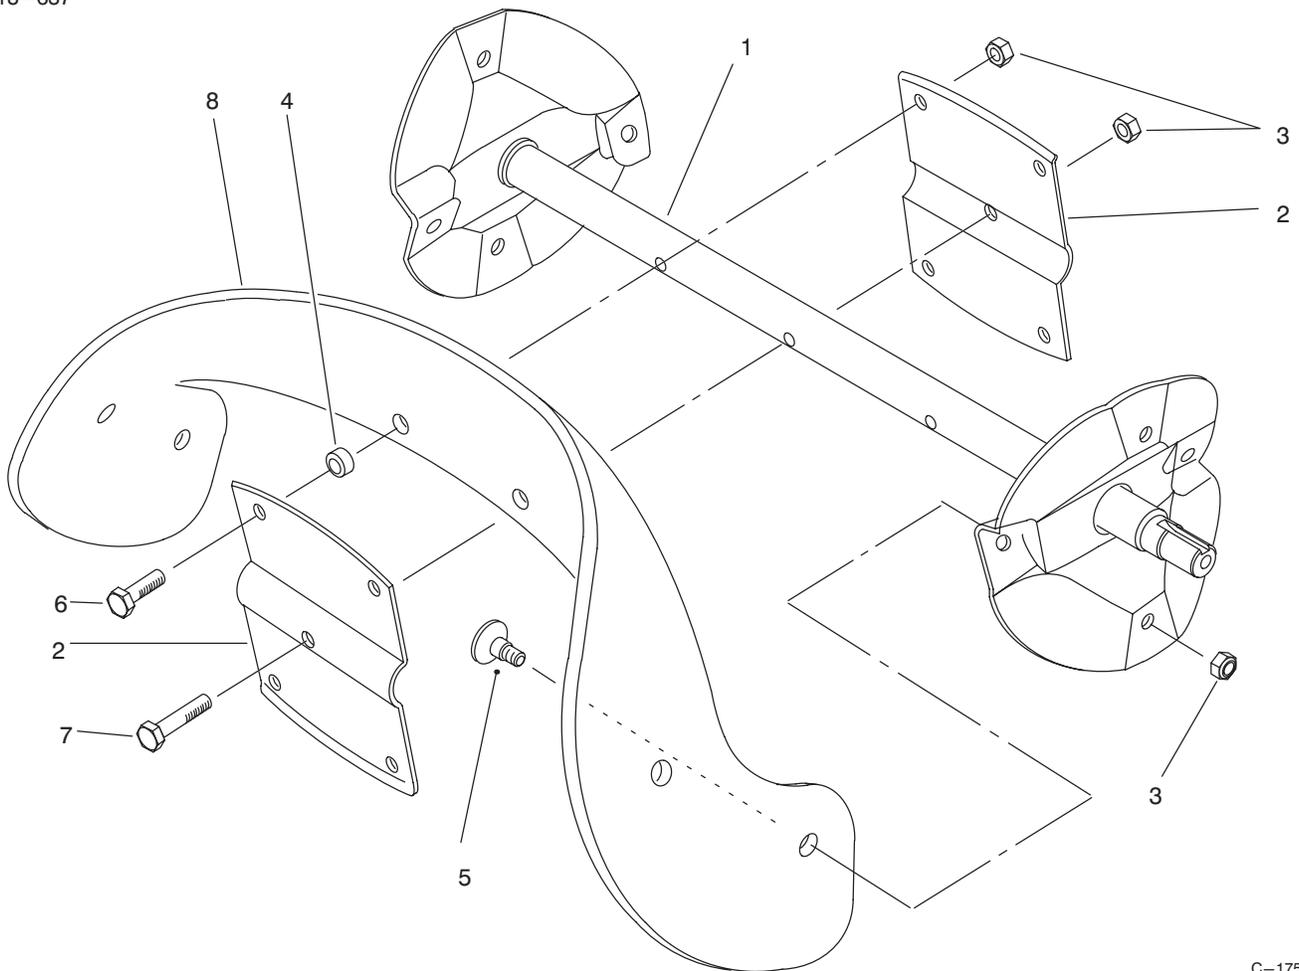


C-1755

ROTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	55-9202	Rotor Shaft Assembly	1	5	84-1971	Screw - Countersunk	8
2	66-6600	Rotor Half	2	6	321-4	Screw - Hex. Hd.	4
3	3296-56	Nut - Lock	13	7	321-8	Screw - Hex. Hd.	1
4	55-9370	Spacer	4	8	88-0771	Blade - Rotor	2


PROTOTYPE

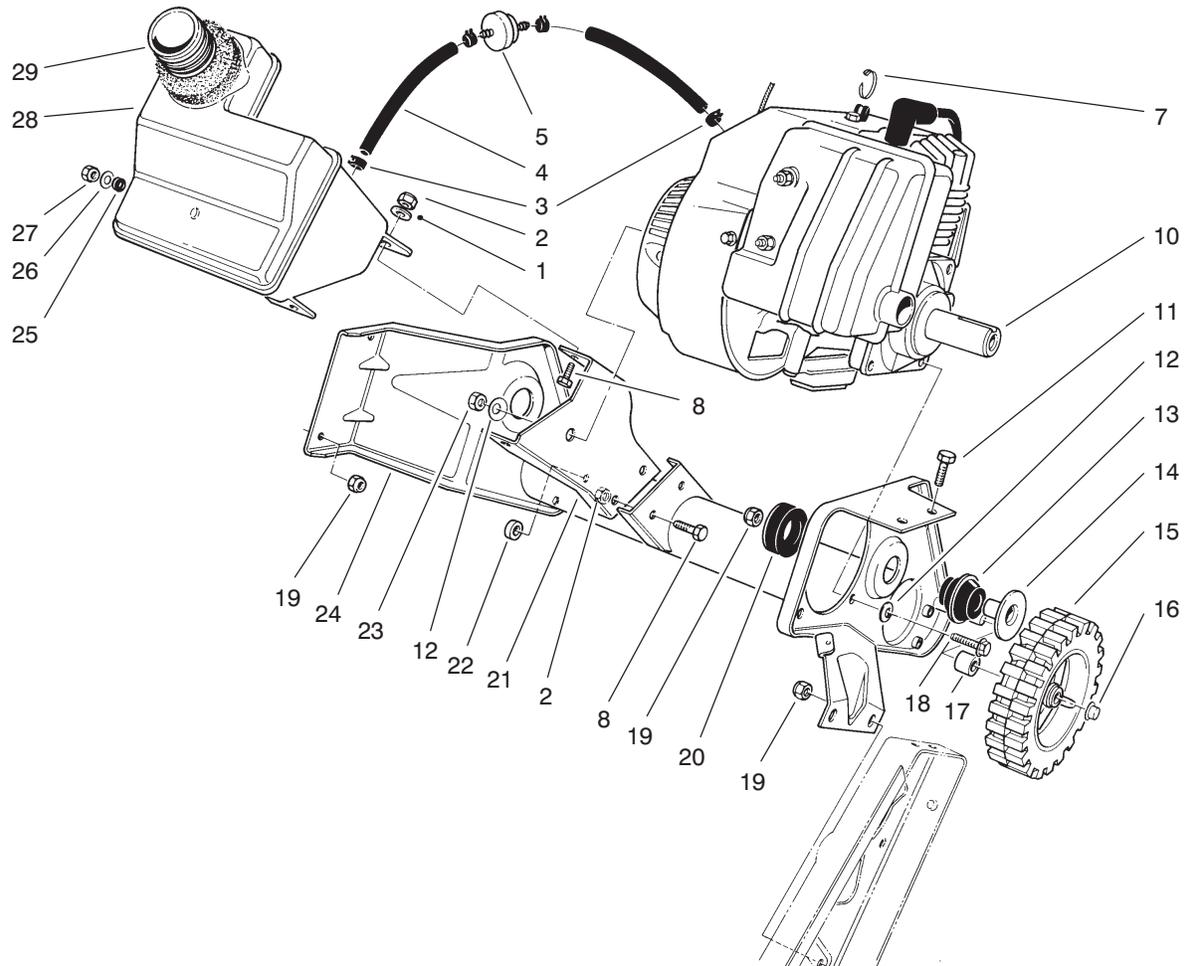

C-0016

ENGINE & MAIN FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3256-22	Washer	2	17	66-6501	Spacer - Wheel	1
2	3296-42	Nut - Lock	4	18	81-0570	Bolt - Engine Mount	4
3	2412-98	Clamp - Fuel Line	4	19	3296-29	Nut - Lock	5
4	49-2481	Line - Fuel	2	20	55-9450	Mount - Load	2
5	56-6360	Filter - Fuel	1	21	55-9070	Support - Recoil	1
7	250-4	Cable Tie	1	22	66-6500	Spacer - Wheel	1
8	321-4	Screw - Hex. Hd.	4	23	81-0300	Nut - Lock	1
10		Engine Assembly	1	24	63-3750	Frame Assembly	1
11	322-3	Screw - Hex. Hd.	2	25	237-89	Grommet	1
12	3290-456	Washer - Belleville	5	26	3256-23	Washer	1
13	55-9460	Mount - Rebound	2	27	32152-8	Nut - Lock	1
14	55-9470	Tube - Spacer	2	28	13-2459	Tank - Fuel (Incl. Ref. #25)	1
15	66-6510	Wheel	2	29	55-9310	Seal - Tank	1
16	32112-14	Pushnut	2				

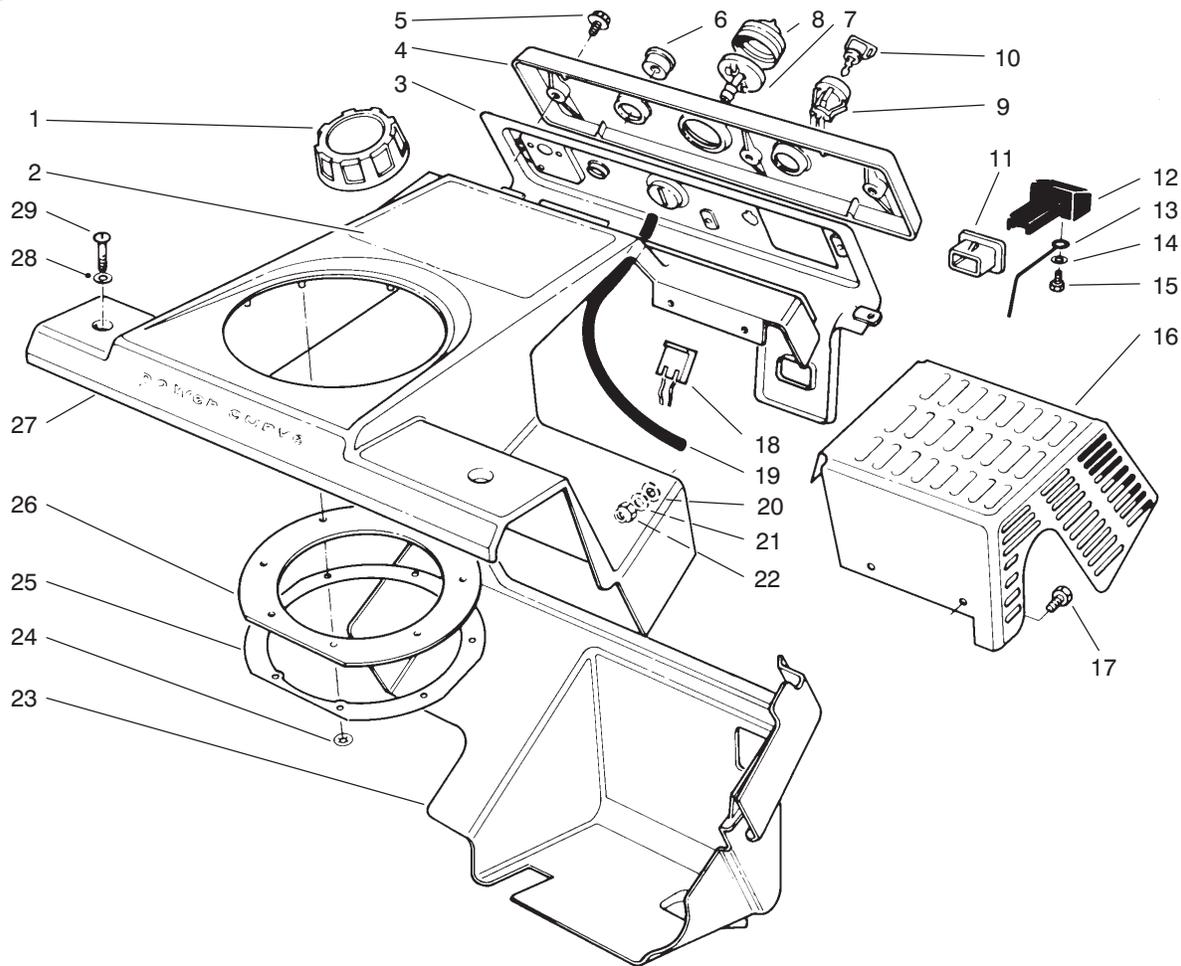


C-0017

CONTROL PANEL & SHROUDING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	55-3573	Gas Cap Assembly	1	13	94-2797	Linkage - Choke	1
2	94-8874	Decal - CCR-3000	1	14	3256-49	Washer	1
3	12-4659	Control Panel Assembly (Incl. Ref. #6-8 & 11)	1	15	32144-111	Screw - Hex. Hd.	1
4	55-9350	Nameplate - Control (Model No. 38430)	1	16	55-9210	Shield - Heat	1
*	94-2570	Nameplate - Control (Model No. 38431)	1	17	32105-8	Screw - Hex. Hd.	4
5	32144-112	Screw - Hex Flange Hd.	3	18	218-532	Connector Body	1
6	55-9410	Guide - Starter Rope	1	19	44-3171	Hose - Primer	1
7	44-2750	Body - Primer	1	20	55-9660	Washer - Rubber	4
8	66-7460	Bulb - Primer	1	21	3256-14	Washer	4
9	40-5940	Switch - Key	1	22	3296-12	Nut - Lock	4
10	63-8360	Key	1	23	55-8791	Shroud - Lower	1
11	55-8820	Fitting - Choke Control	1	24	3290-474	Pushnut	8
12	55-8810	Control - Choke (Model No. 38430)	1	25	55-9540	Retainer - Chute Seal	1
*	55-8811	Control - Choke (Model No. 38431)	1	26	55-9260	Seal - Chute	1
				27	94-9898	Upper Shroud Assembly (Incl. Ref. #2 & 24-26)	1
				28	3256-22	Washer	2
				29	3250-32	Screw - Phillips	2

*Not Illustrated

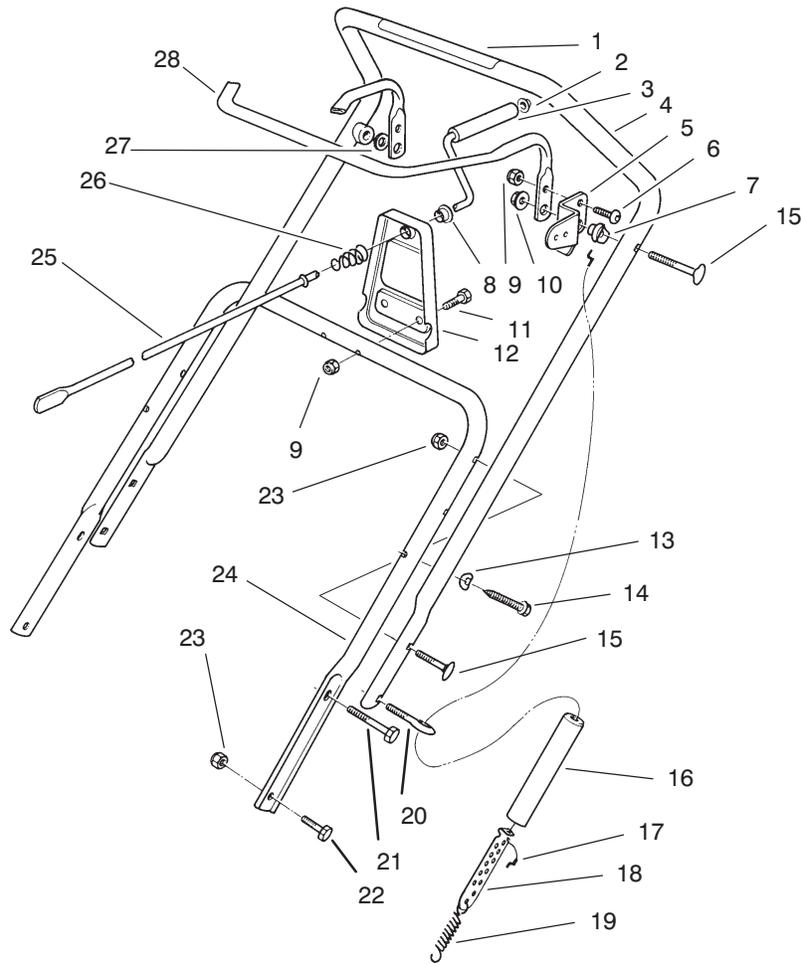


C-0018

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-6870	Decal - Rotor Drive (Model No. 38430)	1	14	61-8640	Screw - Hex. Hd.	2
*	94-2577	Decal - Rotor Drive (Model No. 38431)	1	15	17-9424	Screw - Handle	5
2	3290-320	Pushnut	1	16	55-9390	Cover - Spring	1
3	40-8230	Grip - Crank Handle	1	17	55-9321	Cable - Clutch	1
4	12-5939	Upper Handle Assembly (Incl. Ref. #1, Model 38430)	1	18	55-9380	Adjuster - Clutch Cable	1
*	94-2794	Upper Handle Assembly (Incl. Ref. #1, Model 38431)	1	19	55-9270	Spring - Extension	1
5	55-9100	Arm - Clutch Cable	1	20	55-9420	Bolt - Eye	1
6	3274-31	Screw - Button Hd.	1	21	322-9	Screw - Hex. Hd.	2
7	55-9340	Spacer - Control Bar	2	22	322-3	Screw - Hex. Hd.	2
8	32111-8	Nut - Flange Lock	2	23	3296-29	Nut - Lock	6
9	3296-42	Nut - Lock	3	24	55-9121	Handle - Lower (Model 38430)	1
10	256-249	Nyliner	1	*	55-9120	Handle - Lower (Model 38431)	1
11	321-13	Screw - Hex. Hd.	2	25	55-9140	Rod - Chute Crank	1
12	55-9090	Support - Chute Crank	1	26	55-9440	Spring - Compression	1
13	3-7501	Washer - Curved	2	27	55-9670	Washer - Rubber	1
				28	55-9130	Bar - Control	1

*Not Illustrated

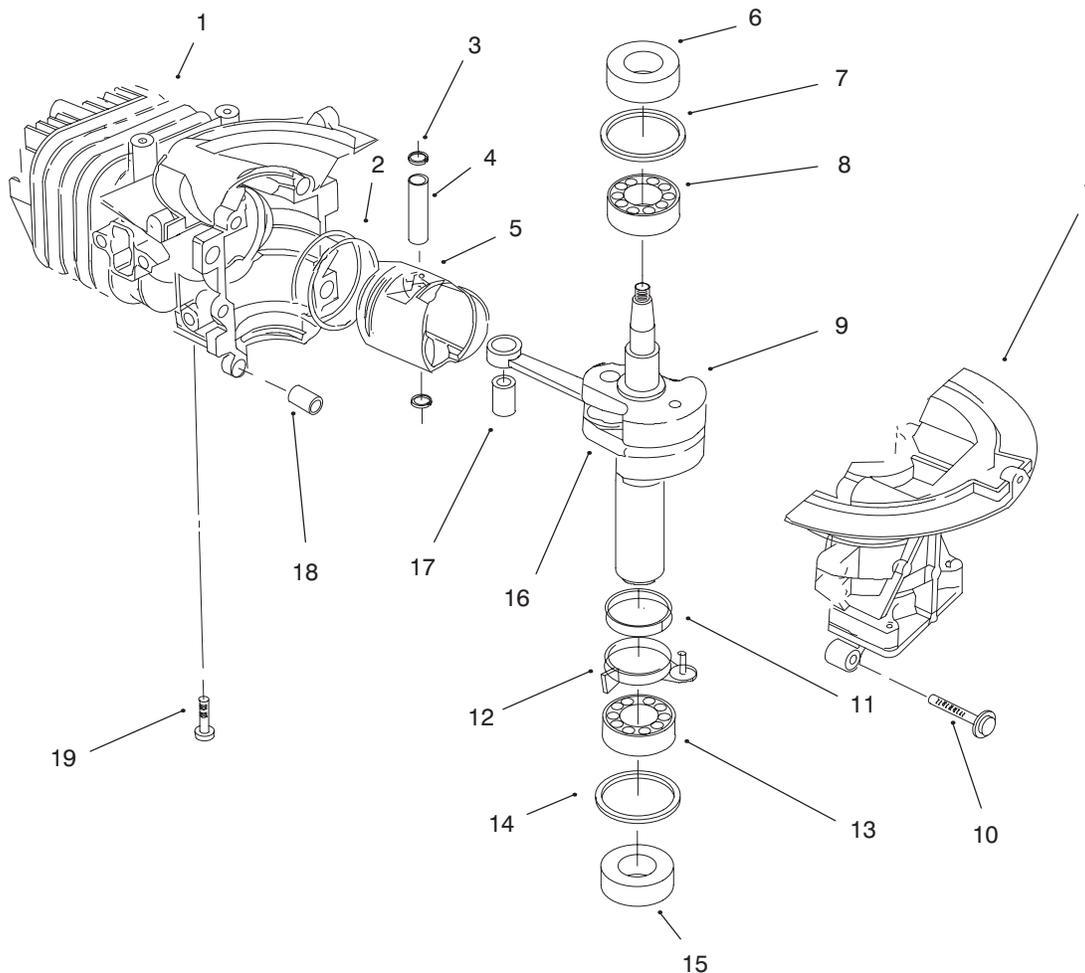


ENGINE ASSEMBLY MODEL NO. 47PT6-4

Ref. No.	Part No.	Description	No. Used
1	81-0350	Cylinders//Crankcase Asm	1
2	81-0590	Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Pin - Wrist	1
5	81-2140	Piston	1
6	81-0720	Oil Seal	1
7	81-0710	Washer - Thrust	1
8	81-0690	Bearing - Upper	1
9	81-5700	Crankshaft	1
10	81-0540	Bolt	5
11	81-0770	Collar - Governor	1

Ref. No.	Part No.	Description	No. Used
12	81-0750	Centrifugal Bracket - Governor	1
13	81-0700	Bearing - Lower	1
14	81-0730	Washer - Thrust	1
15	81-0740	Oil Seal	1
16	81-0760	Pin - Governor	1
17	81-0610	Wrist Pin	1
18	81-0520	Dowel Pin - Crankcase	2
19	81-0570	Bolt	4
*	94-9896	Short Block (Incl. Ref. #1-19)	1

*Not Illustrated

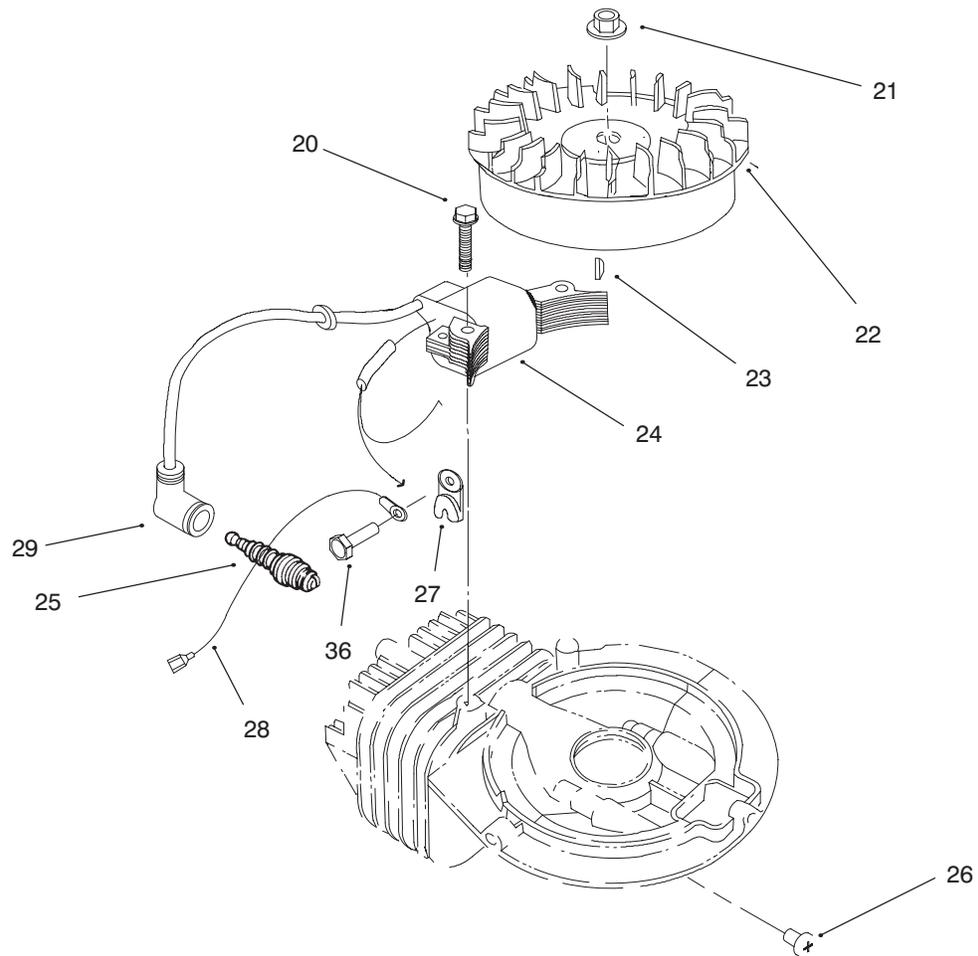


ENGINE ASSEMBLY (Continued)

MODEL NO. 47PT6-4

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
20	81-5710	Socket Hd. Capscrew	2	26	81-0380	Screw	2
21	81-1330	Nut - Hex. Flange	1	27	81-1480	Clamp - Magneto Wire	1
22	81-0320	Flywheel	1	28	81-2860	Wire - Ground	1
23	81-2370	Woodruff Key	1	29	81-1500	Cover - Spark Plug	1
24	94-8890	Coil - Magneto	1	36	53-1340	Bolt	1
25	50-1170	Plug - Spark	1	*	41-7650	Puller - Flywheel	1

*Not Illustrated

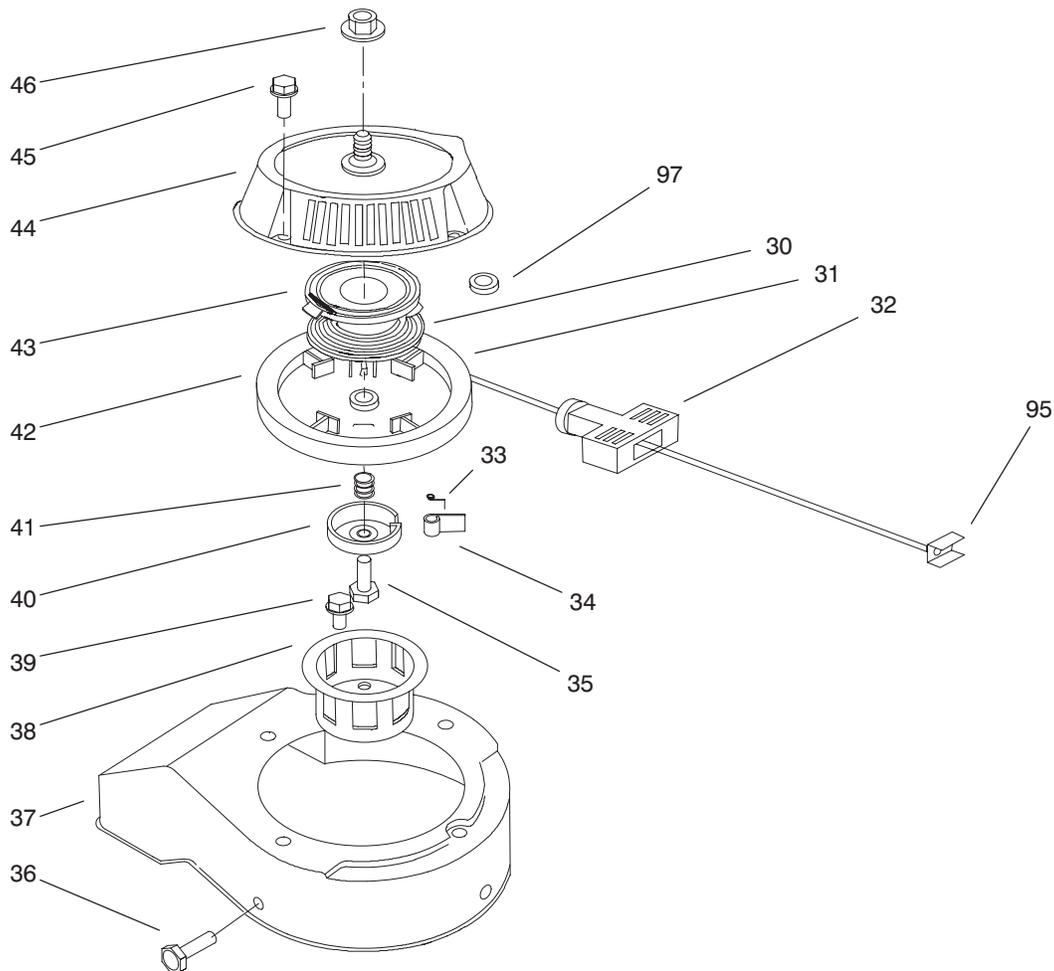


ENGINE ASSEMBLY (Continued) MODEL NO. 47PT6-4

Ref. No.	Part No.	Description	No. Used
30	81-1200	Spring - Recoil	1
31	81-2870	Rope	1
32	81-1630	Handle - Recoil	1
33	81-1220	Spring - Dog	1
34	81-1230	Dog - Starter	1
35	81-1260	Bolt	1
36	53-1340	Bolt	3
37	81-0310	Shroud - Blower	1
38	81-1290	Cup - Starter	1
39	82-1300	Bolt	3
40	81-1250	Retainer - Dog	1
41	81-1240	Spring - Compression	1
42	81-1210	Reel - Rope Pulley	1

Ref. No.	Part No.	Description	No. Used
43	81-1640	Retainer - Recoil Spring	1
44	81-0290	Case - Recoil	1
45	81-0390	Bolt	4
46	81-0300	Nut - Lock	1
95	81-5760	Insert - Recoil Handle	1
97	55-9620	Spacer	1
*	81-0280	Recoil Assembly (Incl. Ref. #30-35, & 40-44)	1
*	81-2300	Recoil Spring & Retainer Assembly (Incl. Ref. #30 & 43)	1


*Not Illustrated

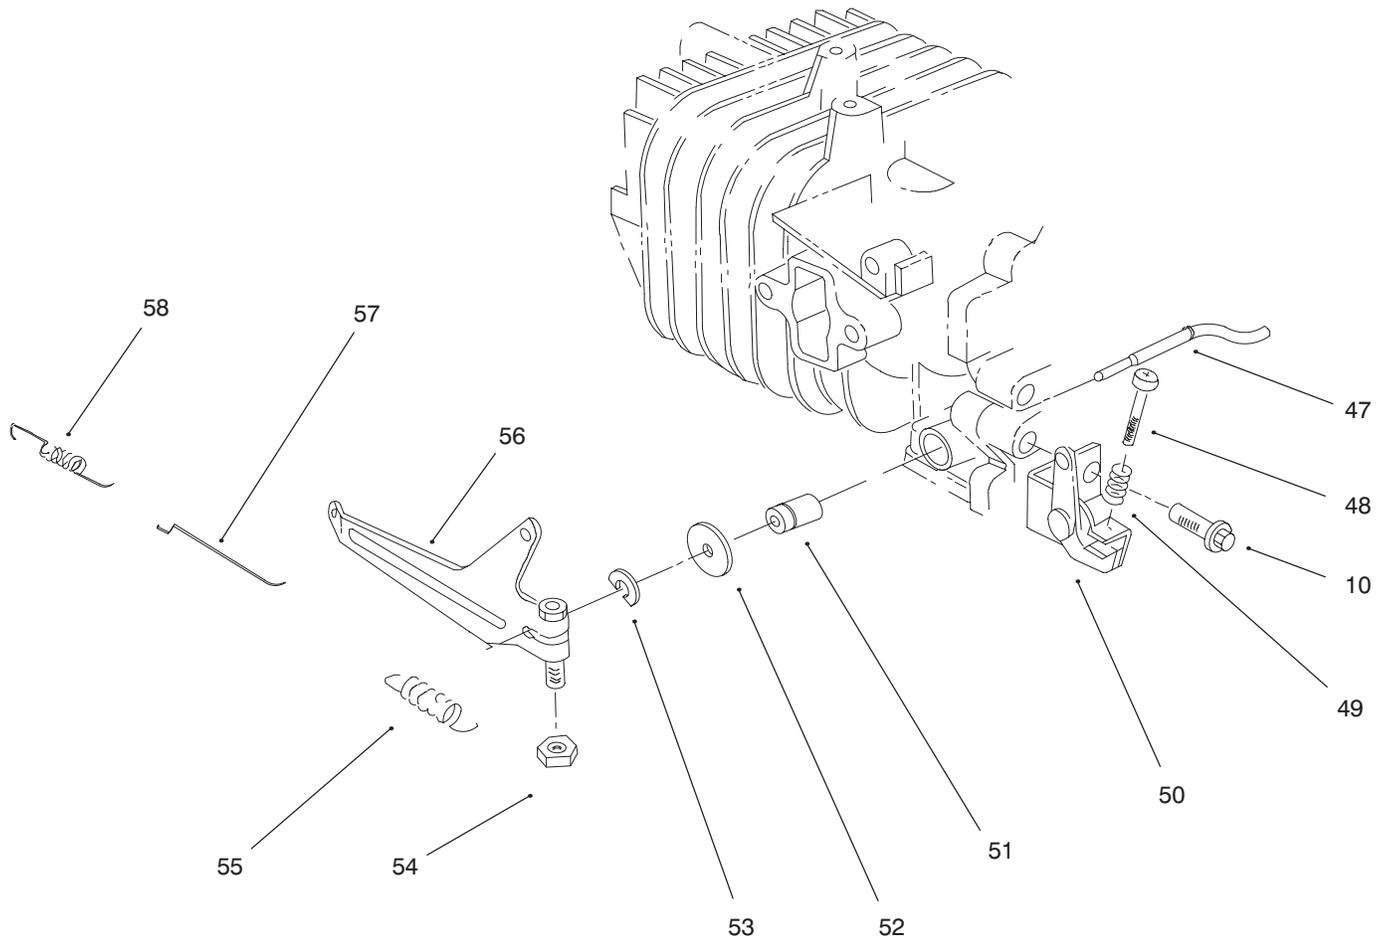

ENGINE ASSEMBLY (Continued)

MODEL NO. 47PT6-4

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
10	81-0540	Bolt	1	52	81-0860	Washer	1
47	81-2880	Shaft - Governor	1	53	81-0870	E-Ring	1
48	81-2890	Screw	1	54	81-0900	Nut - Hex.	1
49	81-2900	Spring - Compression	1	55	81-0360	Spring - Governor	1
50	81-0370	Bracket - Governor	1	56	81-0410	Arm - Governor	1
51	81-0850	Oil Seal	1	57	81-0430	Rod - Carburetor	1
				58	81-0440	Spring - Carburetor	1

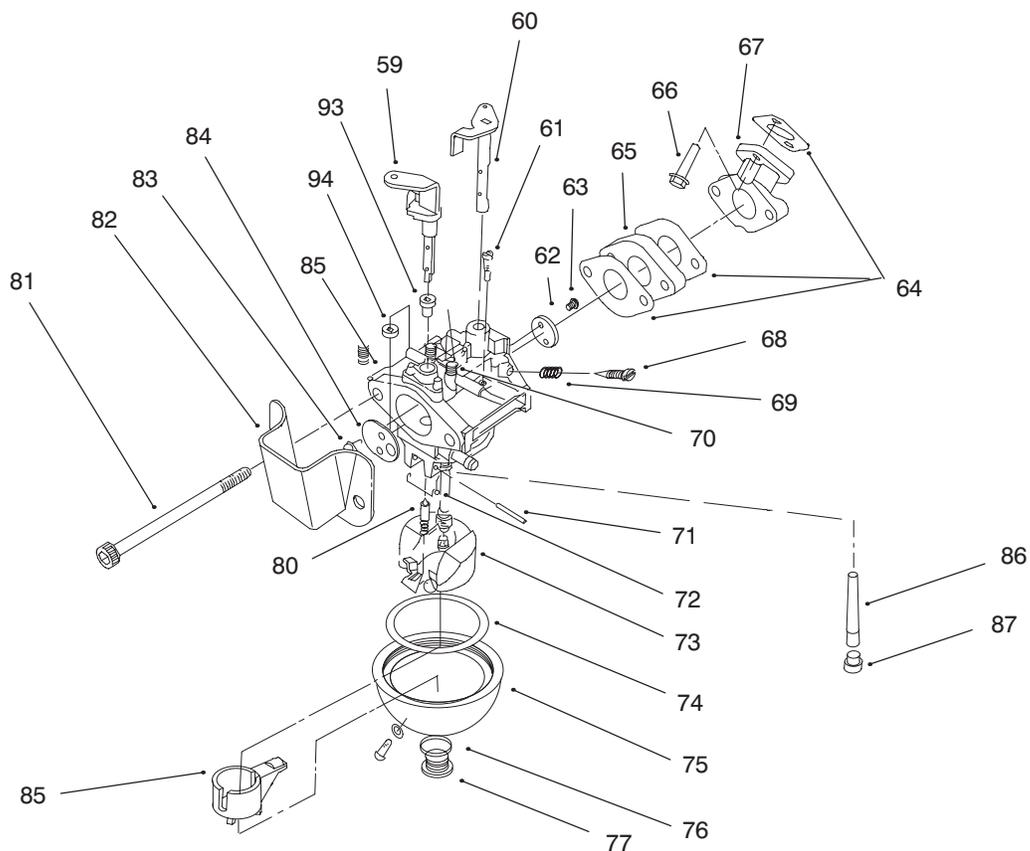


ENGINE ASSEMBLY (Continued) MODEL NO. 47PT6-4

Ref. No.	Part No.	Description	No. Used
59	81-5510	Shaft - Choke (Incl. Ref. #93 & 94)	1
60	81-2920	Shaft - Throttle	1
61	81-2930	Jet - Pilot	1
62	81-2940	Valve - Throttle	1
63	81-2710	Screw	2
64	81-2570	Gasket - Carburetor	3
65	81-0460	Insulator - Carburetor	1
66	50-6350	Bolt	2
67	81-0470	Manifold - Intake	1
68	50-2360	Screw - Pilot	1
69	81-2580	Spring - Pilot Screw	1
70	81-2590	Spring - Choke Detent	2
71	81-2600	Pin - Hinge	1
72	81-2610	Spring - Torsion	1
73	81-4920	Float	1
74	81-2630	Gasket - Float Bowl	1
75	81-2640	Bowl - Float	1
76	81-2650	Gasket - Bowl Screen	1
77	81-2660	Screw - Float Bowl	1
78	81-2670	Screw - Drain	1

Ref. No.	Part No.	Description	No. Used
79	81-2680	Gasket - Drain Screw	1
80	81-4700	Needle	1
81	81-0450	Screw	2
82	81-2700	Spitcup	1
83	81-2710	Screw - Choke Valve	2
84	81-2720	Valve - Choke	1
85	81-4930	Spacer - Float	1
86	81-2740	Nozzle - Main	1
87	81-1040	Jet - Main (#80)	1
*	81-1940	Jet - Main (#76.3)	1
93	81-5520	Ring - Upper Choke	1
94	81-5530	Ring - Lower Choke	1
*	81-4690	Carburetor Assembly Complete	1
*	81-2910	Choke Shaft Ass'y (Incl. Ref. #59 & 93-94)	1
*	81-5820	Needle Valve Seat Kit	1
*	92-6002	Carburetor Kit (Incl. Ref. #64, 72, 74, 79, 94, & Part No. 81-5820)	1

*Not Illustrated

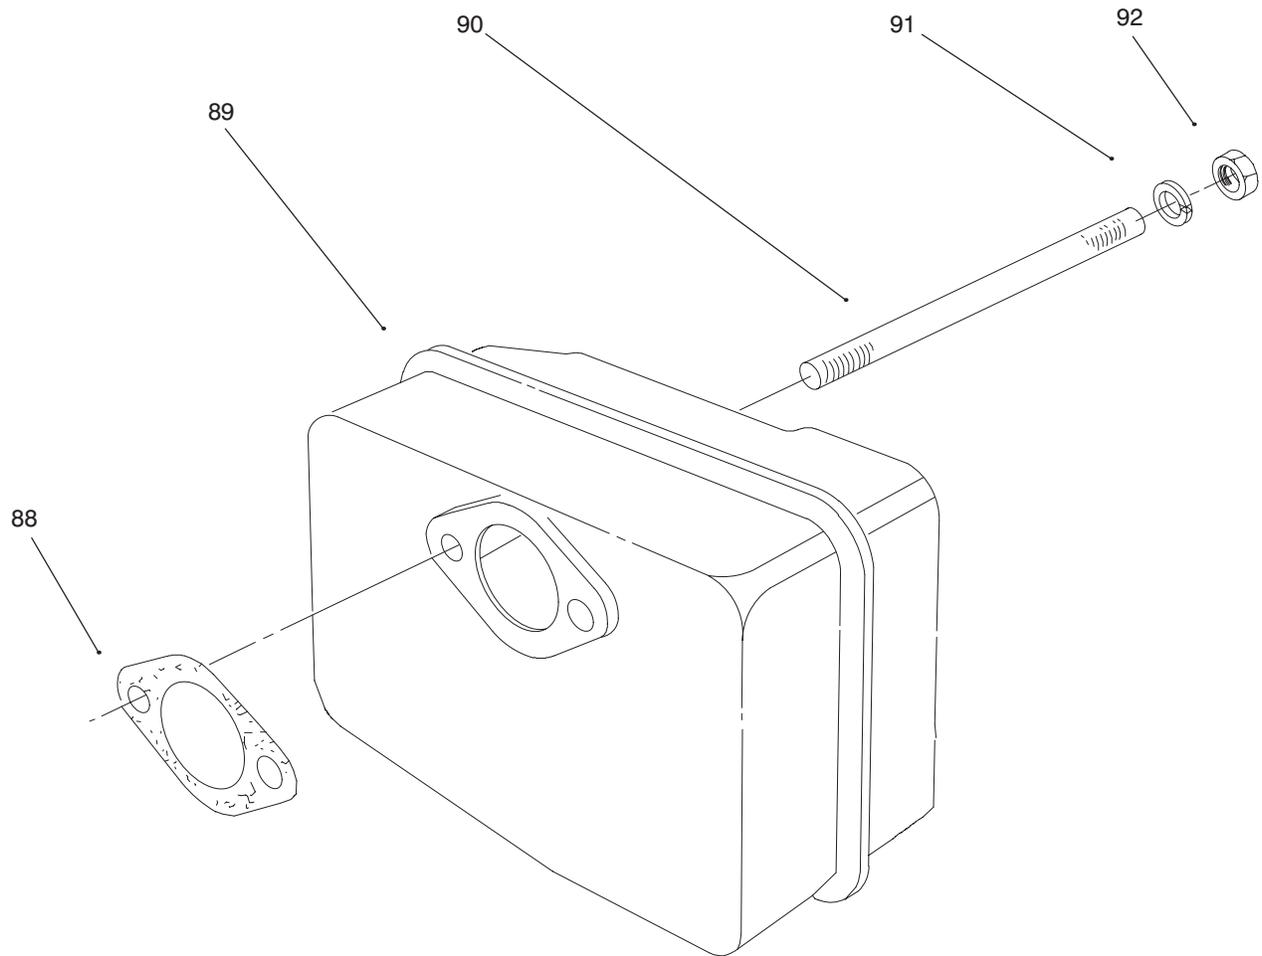

ENGINE ASSEMBLY (Continued)

MODEL NO. 47PT6-4

Ref. No.	Part No.	Description	No. Used
88	81-1080	Gasket - Muffler	1
89	81-0490	Muffler	1
90	81-0500	Stud - Muffler	2

Ref. No.	Part No.	Description	No. Used
91	81-1120	Washer - Lock	2
92	81-1110	Nut - Hex.	2

PROTOTYPE

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-7501	Washer - Curved	7	13	2	55-9300	Belt - Drive	2	3	1
5-4460	Washer	2	33	2	55-9310	Seal - Tank	5	29	1
12-3270	Screw - Self Tapping	2	13	2	55-9321	Cable - Clutch	7	17	1
12-4659	Control Panel Assembly	6	3	1	55-9340	Spacer - Control Bar	7	7	2
12-5939	Upper Handle Assembly	7	4	1	55-9350	Nameplate - Control	6	4	1
12-8279	Idler Arm Assembly	2	5	1	55-9370	Spacer	4	4	4
13-2459	Tank - Fuel	5	28	1	55-9380	Adjuster - Clutch Cable	7	18	1
17-9424	Screw - Handle	7	15	5	55-9390	Cover - Spring	7	16	1
20-4320	Washer - Rubber	3	20	2	55-9410	Guide - Starter Rope	6	6	1
25-5640	Washer	2	6	1	55-9420	Bolt - Eye	7	20	1
27-0410	Screw - Shoulder	2	8	1	55-9430	Bracket - Housing	1	5	1
36-3860	Screw - Special	2	11	1	55-9440	Spring - Compression	7	26	1
38-7820	Bearing - Ball	1	7	2	55-9450	Mount - Load	5	20	2
38-8211	Pin	1	26	1	55-9460	Mount - Rebound	5	13	2
38-8620	Retainer - Bearing	1	12	1	55-9470	Tube - Spacer	5	14	2
40-5940	Switch - Key	6	9	1	55-9512	Cover - Bottom	1	15	1
40-8230	Grip - Crank Handle	7	3	1	55-9520	Roller - Brake	2	18	1
41-7650	Puller - Flywheel	9	*	1	55-9530	Guide - Drive Belt	2	7	1
44-2750	Body - Primer	6	7	1	55-9540	Retainer - Chute Seal	6	25	1
44-3171	Hose - Primer	6	19	1	55-9550	Arm - Brake	2	30	1
46-8092	Screw - Special	3	17	2	55-9570	Pivot Plate Assembly	2	20	1
49-2481	Line - Fuel	5	4	2	55-9620	Spacer	2	26	3
50-1170	Plug - Spark	9	25	1	55-9620	Spacer	10	97	1
50-2360	Screw - Pilot	12	68	1	55-9660	Washer - Rubber	6	20	4
50-6350	Bolt	12	66	2	55-9670	Washer - Rubber	7	27	1
52-7270	Washer - Rubber	1	22	1	56-2610	Bracket - Lower Housing	1	6	1
52-7280	Washer - Thrust	1	11	2	56-2680	Deflector	3	25	1
52-7290	Retainer - Bearing	1	20	1	56-6360	Filter - Fuel	5	5	1
52-9110	Flange - Bearing	1	17	1	60-9320	Pulley - Rotor	2	21	1
53-1340	Bolt	10	36	3	60-9480	Decal - Belt Routing	2	10	1
53-1340	Bolt	9	36	1	61-8640	Screw - Hex. Hd.	7	14	2
55-3573	Gas Cap Assembly	6	1	1	63-3750	Frame Assembly	5	24	1
55-8700	Housing	1	23	1	63-8360	Key	6	10	1
55-8720	Gear Ring - Chute	3	6	1	66-6500	Spacer - Wheel	5	22	1
55-8730	Gear - Worm/Spur	3	10	1	66-6501	Spacer - Wheel	5	17	1
55-8740	Gear - Face	3	9	1	66-6510	Wheel	5	15	2
55-8750	Spacer/Spur Gear	3	18	1	66-6600	Rotor Half	4	2	2
55-8760	Scraper	1	13	1	66-6870	Decal - Rotor Drive	7	1	1
55-8791	Shroud - Lower	6	23	1	66-7460	Bulb - Primer	6	8	1
55-8810	Control - Choke	6	12	1	81-0280	Recoil Assembly	10	*	1
55-8811	Control - Choke	6	*	1	81-0290	Case - Recoil	10	44	1
55-8820	Fitting - Choke Control	6	11	1	81-0300	Nut - Lock	5	23	1
55-8840	Sideplate - R.H.	1	25	1	81-0300	Nut - Lock	10	46	1
55-8851	Sideplate - L.H.	2	25	1	81-0310	Shroud - Blower	10	37	1
55-8910	Retainer - Chute Ring	3	8	2	81-0320	Flywheel	9	22	1
55-8921	Ring - Chute Support	3	19	1	81-0350	Cylinders//Crankcase Asm	8	1	1
55-8950	Plate - Friction	3	2	2	81-0360	Spring - Governor	11	55	1
55-9010	Cover - Drive	2	12	1	81-0370	Bracket - Governor	11	50	1
55-9070	Support - Recoil	5	21	1	81-0380	Screw	9	26	2
55-9090	Support - Chute Crank	7	12	1	81-0390	Bolt	10	45	4
55-9100	Arm - Clutch Cable	7	5	1	81-0410	Arm - Governor	11	56	1
55-9120	Handle - Lower	7	*	1	81-0430	Rod - Carburetor	11	57	1
55-9121	Handle - Lower	7	24	1	81-0440	Spring - Carburetor	11	58	1
55-9130	Bar - Control	7	28	1	81-0450	Screw	12	81	2
55-9140	Rod - Chute Crank	7	25	1	81-0460	Insulator - Carburetor	12	65	1
55-9150	Shaft - Gear	3	12	1	81-0470	Manifold - Intake	12	67	1
55-9180	Pulley - Engine	2	4	1	81-0490	Muffler	13	89	1
55-9202	Rotor Shaft Assembly	4	1	1	81-0500	Stud - Muffler	13	90	2
55-9210	Shield - Heat	6	16	1	81-0520	Dowel Pin - Crankcase	8	18	2
55-9220	Housing - Lower	1	16	1	81-0540	Bolt	11	10	1
55-9260	Seal - Chute	6	26	1	81-0540	Bolt	8	10	5
55-9270	Spring - Extension	7	19	1	81-0570	Bolt	8	19	4
55-9280	Spring - Extension	2	32	1	81-0570	Bolt - Engine Mount	5	18	4
55-9290	Pulley - Idler	2	16	1	81-0590	Ring Set	8	2	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3318-637

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
81-0600	Pin - Wrist	8	4	1	81-4920	Float	12	73	1
81-0610	Wrist Pin	8	17	1	81-4930	Spacer - Float	12	85	1
81-0620	Circlip	8	3	2	81-5510	Shaft - Choke	12	59	1
81-0690	Bearing - Upper	8	8	1	81-5520	Ring - Upper Choke	12	93	1
81-0700	Bearing - Lower	8	13	1	81-5530	Ring - Lower Choke	12	94	1
81-0710	Washer - Thrust	8	7	1	81-5700	Crankshaft	8	9	1
81-0720	Oil Seal	8	6	1	81-5710	Socket Hd. Capscrew	9	20	2
81-0730	Washer - Thrust	8	14	1	81-5760	Insert - Recoil Handle	10	95	1
81-0740	Oil Seal	8	15	1	81-5820	Needle Valve Seat Kit	12	*	1
81-0750	Centrifugal Bracket -	8	12	1	82-1300	Bolt	10	39	3
81-0760	Pin - Governor	8	16	1	84-1971	Screw - Countersunk	4	5	8
81-0770	Collar - Governor	8	11	1	84-5650	Bracket - Chute Gears	3	11	1
81-0850	Oil Seal	11	51	1	88-0771	Blade - Rotor	4	8	2
81-0860	Washer	11	52	1	92-6002	Carburetor Kit	12	*	1
81-0870	E-Ring	11	53	1	94-2570	Nameplate - Control	6	*	1
81-0900	Nut - Hex.	11	54	1	94-2577	Decal - Rotor Drive	7	*	1
81-1040	Jet - Main (#80)	12	87	1	94-2790	Chute - Discharge	3	3	1
81-1080	Gasket - Muffler	13	88	1	94-2791	Chute - Discharge	3	*	1
81-1110	Nut - Hex.	13	92	2	94-2794	Upper Handle Assembly	7	*	1
81-1120	Washer - Lock	13	91	2	94-2797	Linkage - Choke	6	13	1
81-1200	Spring - Recoil	10	30	1	94-2900	Decal - Discharge	3	1	1
81-1210	Reel - Rope Pulley	10	42	1	94-2901	Decal - Discharge	3	*	1
81-1220	Spring - Dog	10	33	1	94-8874	Decal - CCR-3000	6	2	1
81-1230	Dog - Starter	10	34	1	94-8890	Coil - Magneto	9	24	1
81-1240	Spring - Compression	10	41	1	94-9896	Short Block	8	*	1
81-1250	Retainer - Dog	10	40	1	94-9898	Upper Shroud Assembly	6	27	1
81-1260	Bolt	10	35	1	218-532	Connector Body	6	18	1
81-1290	Cup - Starter	10	38	1	237-89	Grommet	5	25	1
81-1330	Nut - Hex. Flange	9	21	1	2412-98	Clamp - Fuel Line	5	3	4
81-1480	Clamp - Magneto Wire	9	27	1	250-4	Cable Tie	5	7	1
81-1500	Cover - Spark Plug	9	29	1	256-249	Nyliner	7	10	1
81-1630	Handle - Recoil	10	32	1	321-4	Screw - Hex Head	2	28	2
81-1640	Retainer - Recoil Spring	10	43	1	321-4	Screw - Hex. Hd.	1	3	3
81-1940	Jet - Main (#76.3)	12	*	1	321-4	Screw - Hex. Hd.	4	6	4
81-2140	Piston	8	5	1	321-4	Screw - Hex. Hd.	3	7	6
81-2300	Recoil Spring & Retainer	10	*	1	321-4	Screw - Hex. Hd.	5	8	4
81-2370	Woodruff Key	9	23	1	321-6	Screw - Hex. Hd.	1	1	3
81-2570	Gasket - Carburetor	12	64	3	321-8	Screw - Hex. Hd.	4	7	1
81-2580	Spring - Pilot Screw	12	69	1	321-13	Screw - Hex. Hd.	2	9	1
81-2590	Spring - Choke Detent	12	70	2	321-13	Screw - Hex. Hd.	7	11	2
81-2600	Pin - Hinge	12	71	1	321-30	Screw - Hex. Hd.	2	22	1
81-2610	Spring - Torsion	12	72	1	322-3	Screw - Hex. Hd.	5	11	2
81-2630	Gasket - Float Bowl	12	74	1	322-3	Screw - Hex. Hd.	7	22	2
81-2640	Bowl - Float	12	75	1	322-3	Screw - Hex. Hd.	2	29	2
81-2650	Gasket - Bowl Screen	12	76	1	322-9	Screw - Hex. Hd.	7	21	2
81-2660	Screw - Float Bowl	12	77	1	322-43	Screw - Hex. Hd.	1	24	1
81-2670	Screw - Drain	12	78	1	323-29	Screw - Hex. Hd.	2	15	1
81-2680	Gasket - Drain Screw	12	79	1	3229-11	Screw - Carriage	1	9	3
81-2700	Spitcup	12	82	1	3230-18	Screw - Carriage	3	5	3
81-2710	Screw	12	63	2	3230-22	Bolt - Carriage	3	21	2
81-2710	Screw - Choke Valve	12	83	2	3234-25	Screw - Hex. Flange Hd.	1	19	1
81-2720	Valve - Choke	12	84	1	3241-7	Screw - Set, Sq. Hd.	2	2	1
81-2740	Nozzle - Main	12	86	1	3245-41	Screw - Set	2	34	1
81-2860	Wire - Ground	9	28	1	3250-32	Screw - Phillips	6	29	2
81-2870	Rope	10	31	1	3256-14	Washer	6	21	4
81-2880	Shaft - Governor	11	47	1	3256-22	Washer	5	1	2
81-2890	Screw	11	48	1	3256-22	Washer	1	2	9
81-2900	Spring - Compression	11	49	1	3256-22	Washer	3	14	6
81-2910	Choke Shaft Ass'y	12	*	1	3256-22	Washer	3	16	2
81-2920	Shaft - Throttle	12	60	1	3256-22	Washer	6	28	2
81-2930	Jet - Pilot	12	61	1	3256-23	Washer	5	26	1
81-2940	Valve - Throttle	12	62	1	3256-24	Washer	1	21	1
81-4690	Carburetor Assembly	12	*	1	3256-49	Washer	6	14	1
81-4700	Needle	12	80	1	3256-67	Washer	1	10	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3256-68	Washer	3 24 2	3296-42	Nut - Lock	2 19 6
3274-31	Screw - Button Hd.	7 6 1	3296-56	Nut - Lock	4 3 13
3274-31	Screw - Button Hd.	2 27 1	32105-8	Screw - Hex. Hd.	6 17 4
3290-320	Pushnut	7 2 1	32105-8	Screw - Hex. Hd.	2 24 3
3290-456	Washer - Belleville	5 12 5	32105-15	Screw - Hex Head	2 14 2
3290-456	Washer - Belleville	2 23 1	32105-15	Screw - Hex. Hd.	1 18 5
3290-456	Washer - Belleville	3 23 2	32111-8	Nut - Flange Lock	7 8 2
3290-474	Pushnut	6 24 8	32112-11	Pushnut	3 13 2
3296-2	Nut - Lock	1 27 3	32112-11	Pushnut	2 17 1
3296-12	Nut - Lock	6 22 4	32112-14	Pushnut	5 16 2
3296-29	Nut - Lock	2 1 3	32128-10	Nut - Flange Lock	1 14 2
3296-29	Nut - Lock	5 19 5	32144-111	Screw - Hex. Hd.	6 15 1
3296-29	Nut - Lock	3 22 2	32144-112	Screw - Hex Flange Hd.	6 5 3
3296-29	Nut - Lock	7 23 6	32149-1	Nut - Keps	3 4 3
3296-42	Nut - Lock	5 2 4	32149-2	Nut - Keps	1 8 3
3296-42	Nut - Lock	1 4 16	32152-2	Nut - Lock	2 31 1
3296-42	Nut - Lock	7 9 3	32152-8	Nut - Lock	5 27 1
3296-42	Nut - Lock	3 15 6			

PROTOTYPE