 


TORO®

MODEL NO. 20822-7900001 & UP

PARTS CATALOG


48cm RECYCLER[®] REAR BAGGING MOWER

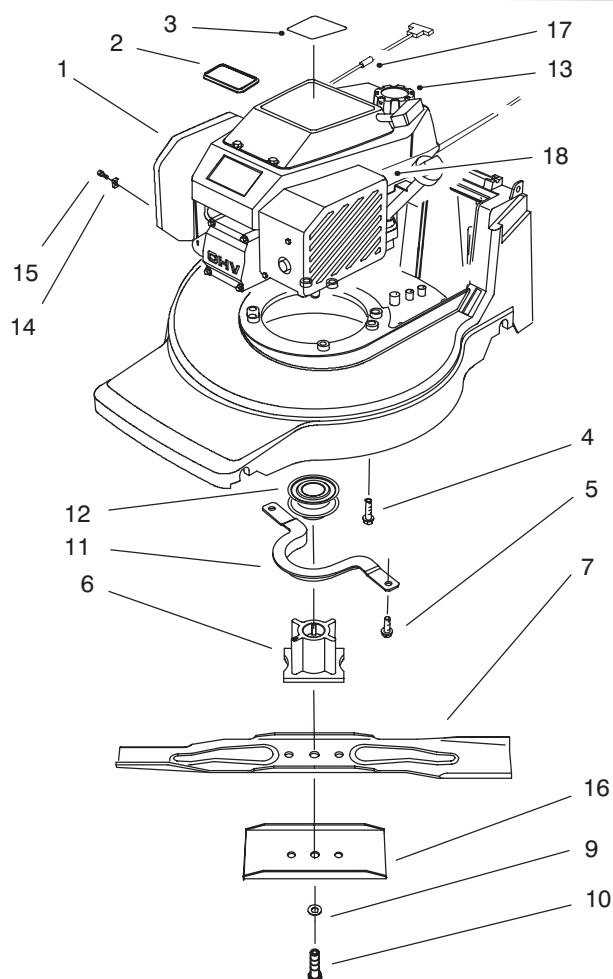

C-2085

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-1604	Engine - Complete	1	11	71-7960	Guide - Engine Belt	1
2	92-2289	Plate - Toro Logo	1	12	62-7550	Pulley - Driver	1
3	93-4355	Decal - Recoil	1	13	93-7198	Cap - Gas	1
4	32144-102	Screw - Thread Forming	3	14	2210-249	Clamp - Casing	1
5	32144-4	Screw - Thread Forming	2	15	86-7990	Screw - Clamp	1
6	71-7940	Retainer - Blade	1	16	80-0510	Stiffener - Blade	1
7	71-9260	Blade - 48cm	1	17	2210-316	Stop - Rope	1
9	3253-22	Washer - Lock	1	18	77-9550	Cover - Brake	1
10	26-0672	Bolt - Blade	1				

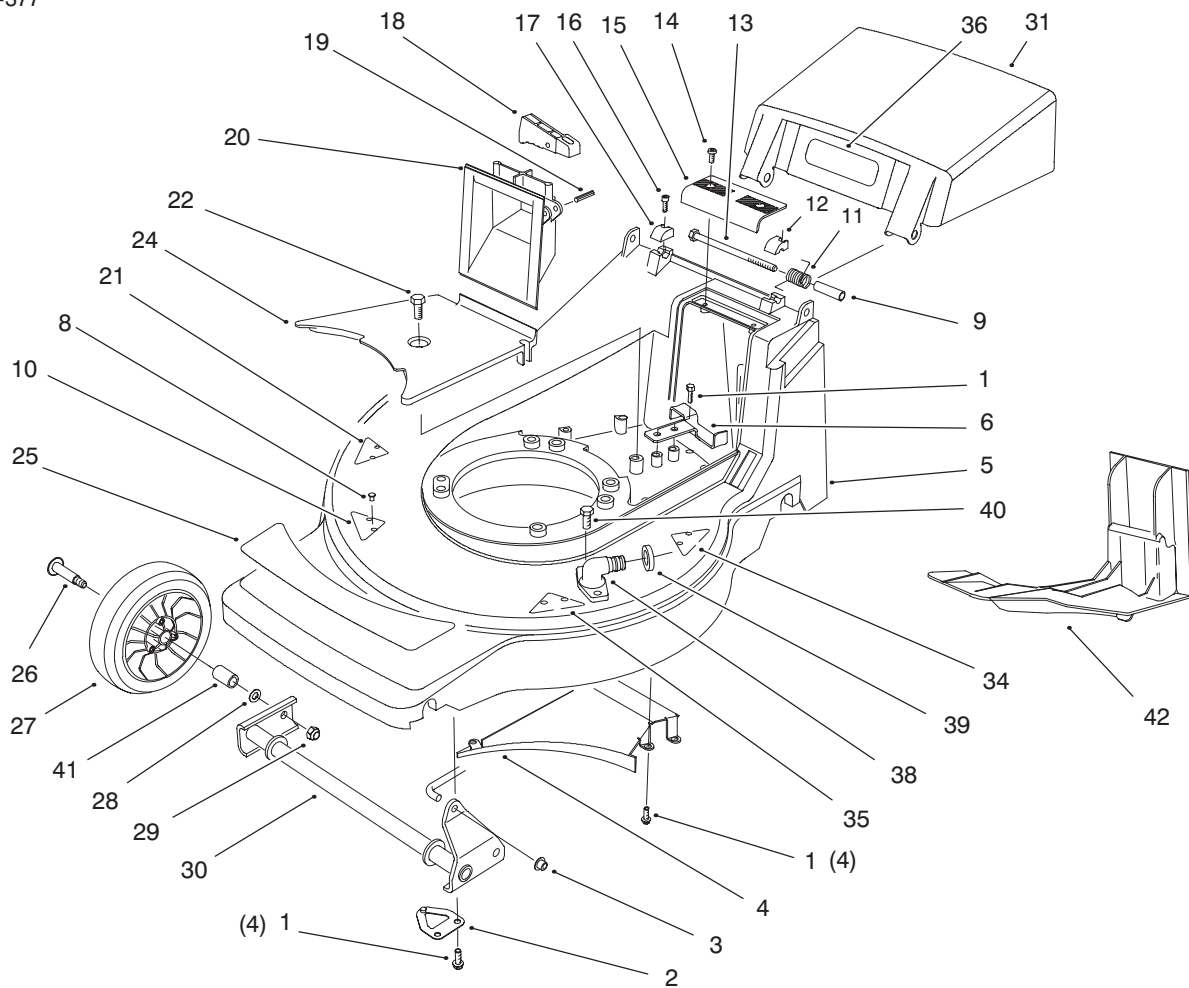 


C-2681

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw – Hex Head	10
2	71-8830	Retainer – Shaft Assembly	2
3	32112-11	Nut – Push	1
4	71-7990	Ramp – Discharge	1
5	95-6134	Housing Assembly (Incl. Ref. # 8, 10, 21, 25, 34, 35, 38-40)	1
6	71-7890	Guide – Belt, Rear	1
8	32144-111	Screw – Phillips Pan Head	8
9	71-8580	Spacer – Door	2
10	71-8920	Kicker – Front, Right	1
11	71-9840	Spring – Door	2
12	71-7900	Cap – Bolt, Hinge (LH)	1
13	322-29	Screw – Hex Head	2
14	32144-97	Screw – Phillips Pan Head	2
15	71-7860	Grip – Upper	1
16	65-5210	Screw – Thread Forming	2
17	71-7910	Cap – Bolt, Hinge (RH)	1
18	71-7930	Trigger – Height of Cut	1
19	3284-5	Pin – Groove	1
20	71-7870	Grip – Lower	1

Ref. No.	Part No.	Description	No. Used
21	71-9230	Kicker – Right, Rear	1
22	32144-70	Screw – Tap	1
24	71-7920	Cover – Belt	1
25	92-7863	Decal – Deck	1
26	27-6230	Bolt – Wheel	2
27	46-1113	Wheel & Tire Assembly (Incl. Ref. #41)	2
28	40-1940	Washer	2
29	3296-5	Nut – Lock	2
30	71-7820	Pivot – Front	1
31	17-1569	Discharge Door Assembly (Incl. Ref. # 36)	1
34	71-9250	Kicker – Rear, Left	1
35	71-9440	Kicker – Front, Left	1
36	93-4105	Decal – Danger	1
38	95-2747	Fitting – Washout	1
39	46-6290	O-Ring	1
40	46-6811	Screw – Hex Washer Head	2
41	27-6250	Bushing	2
42	71-9990	Plug – Recycler	1

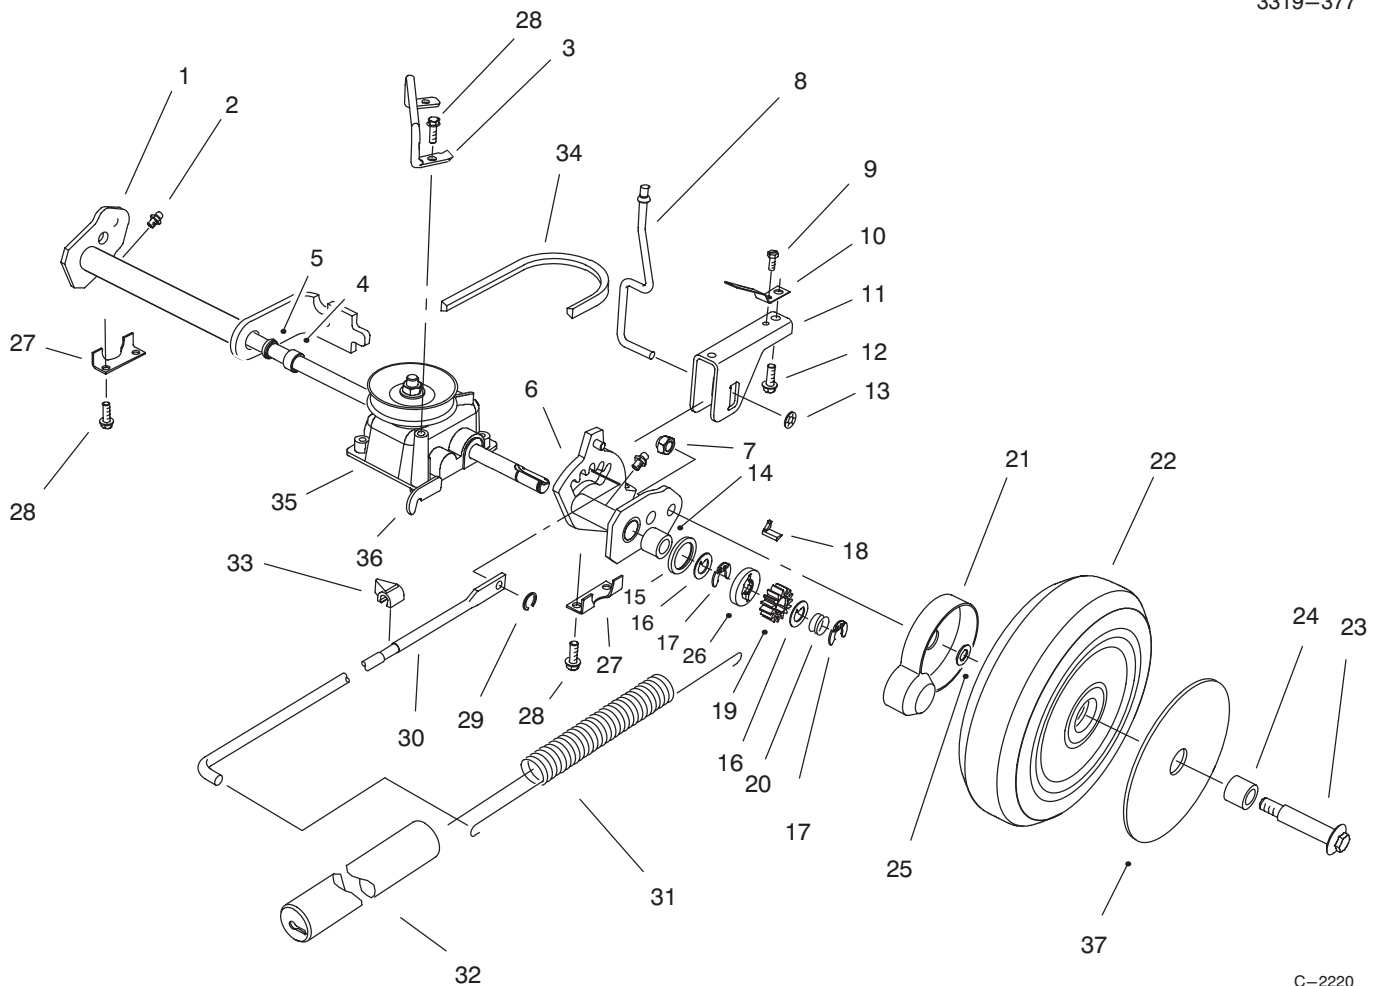 


C-2220

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-9680	Rear Pivot Assembly R.H. (Incl. Ref. #2, 4, 5 & 14)	1
2	302-26	Fitting - Grease	2
3	95-2740	Retainer Belt	1
4	47-2890	Bushing - Sleeve	2
5	47-6730	Seal - Grease	2
6	92-9677	Rear Pivot Assembly L.H. (Incl. Ref. #2, 4, 5 & 14)	1
7	3296-5	Nut - Lock	2
8	71-7840	Rod - Trigger	1
9	32144-31	Screw - Thread Forming	1
10	71-8060	Spring - Trigger Return	2
11	71-8080	Saddle - H.O.C.	1
12	63-8590	Screw - Thread Forming	2
13	32112-13	Nut - Push	1
14	48-2060	Bearing - Needle	2
15	65-4710	Washer - Friction	2
16	65-4740	Washer - Keyed Thrust	4
17	65-2720	Ring - Retaining	4
18	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1

Ref. No.	Part No.	Description	No. Used
19	65-4750	Gear - Pinion	2
20	65-4720	Spring - Compression	2
21	74-1660	Cover - Wheel	2
22	14-9959	Wheel, Tire & Gear Assy. (Incl. Ref. #24)	2
23	27-6230	Bolt - Wheel	2
24	27-6250	Bushing - Wheel	4
25	74-1670	Spacer - Wheel	2
26	65-4760	Washer - Clutch	2
27	71-7770	Plate - Rear Securing	2
28	32144-4	Screw - Thread Forming	6
29	32151-93	Ring - Grip	1
30	71-7970	Rod - Link	1
31	71-7740	Spring - Counterbalance	1
32	71-8450	Cover - Spring	1
33	71-7980	Indicator - H.O.C.	1
34	71-9450	V-Belt	1
35	71-9600	Gearcase Assembly (Incl. Ref. #36)	1
36	71-9630	Bracket - Traction	1
37	92-7663	Cover - Wheel	1

 *Not Illustrated

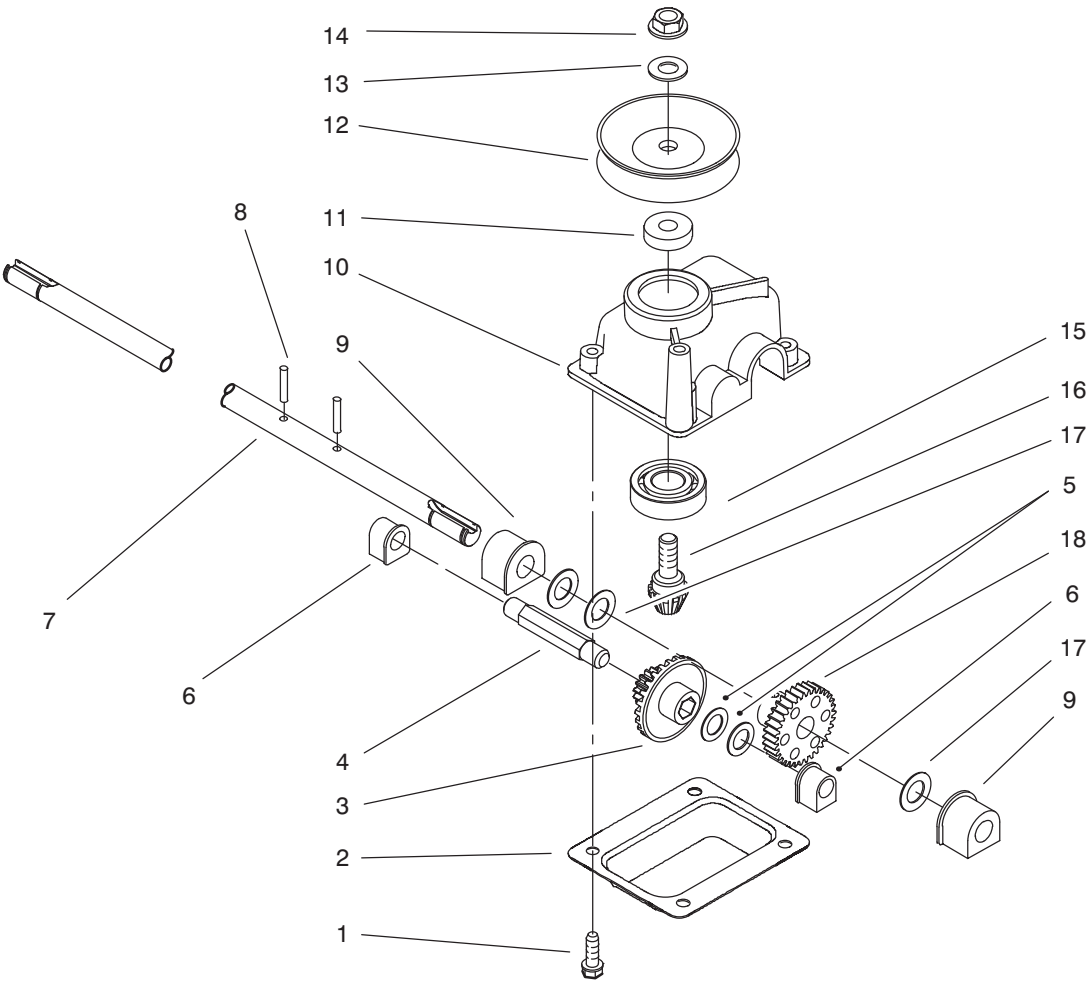


C-1292

GEARCASE ASSEMBLY NO. 71-9600

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	71-9620	Shaft - Output	1
8	32121-63	Pin - Spirol	2
9	60-8850	Bushing - Output	2
10	614578	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
*	71-9600	Gear Case Ass'y Complete	1

 *Not Illustrated

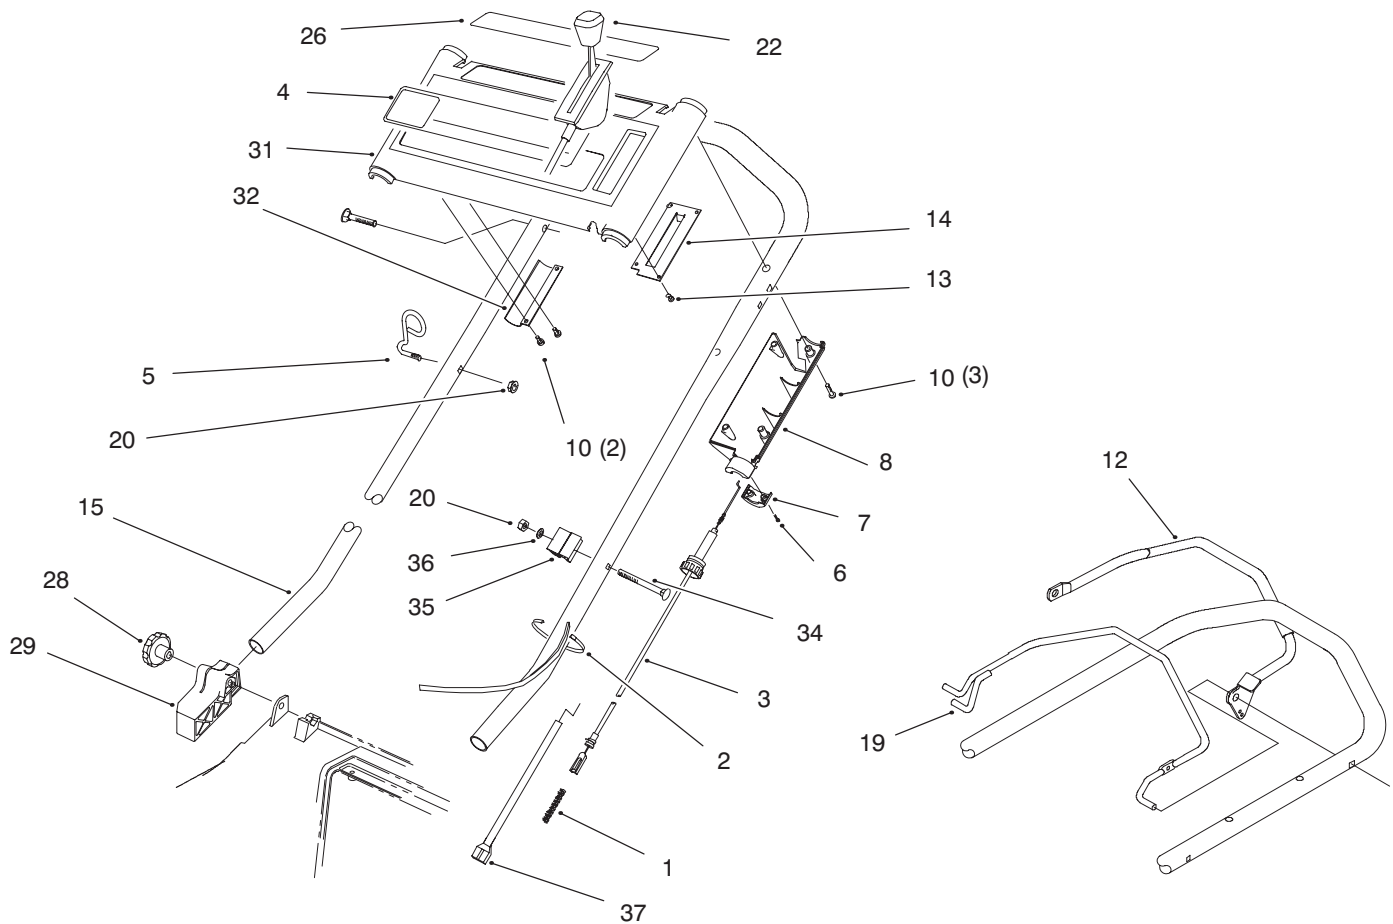


C-2680

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring - Compression	1
2	3290-378	Tie - Cable	1
3	95-9649	Cable - Traction	1
4	71-9863	Decal - Panel	1
5	95-4457	Guide - Rope	1
6	32144-99	Screw - Phillips Pan Hd.	2
7	71-7630	Cap - Throttle Lower	1
8	93-0339	Cover - Throttle Lower	1
10	32144-97	Screw - Phillips Pan Hd.	5
12	95-4450	Bail - Traction	1
13	32144-98	Screw - Phillips Pan Hd.	4
14	71-8040	Plate - Throttle	1
15	94-4367	Handle	1
19	95-4454	Bail - Brake	1

Ref. No.	Part No.	Description	No. Used
20	3296-73	Nut - Lock, Insert	2
22	93-1115	Control - Throttle	1
26	94-6027	Decal - Instruction	1
28	19-4050	Knob	2
29	71-8100	Mount - Handle R.H.	1
*	71-8090	Mount - Handle L.H.	1
31	17-4529	Panel - Control (Incl. Ref. #4,26)	1
32	71-8130	Bracket - Control	1
34	95-4453	Screw - Handle	1
35	92-7729	Support - Cable	1
36	3256-1	Washer - Flat	1
37	93-1116	Cable - Brake	1

 *Not Illustrated

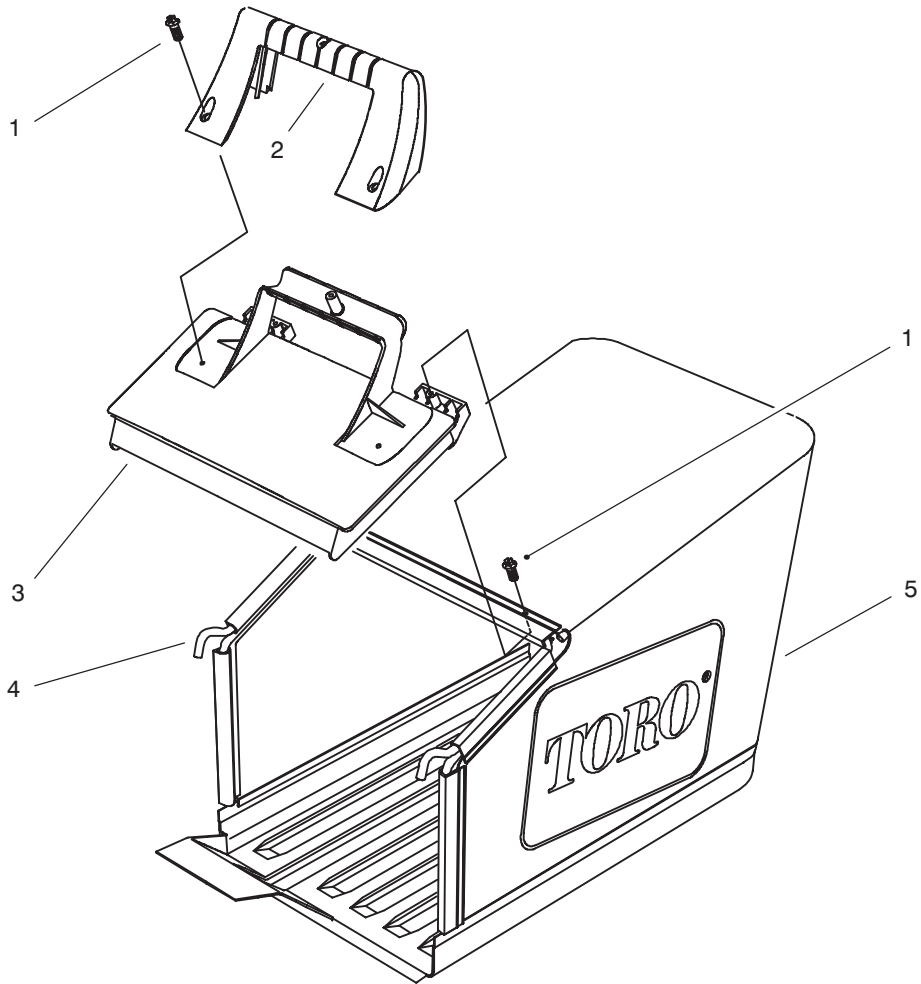


C-1509

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Hex Washer Hd. Thread Forming	5
2	71-9480	Handle - Door	1

Ref. No.	Part No.	Description	No. Used
3	71-9470	Door - Bag	1
4	71-9900	Frame - Bag	1
5	71-9460	Bag - Grass	1

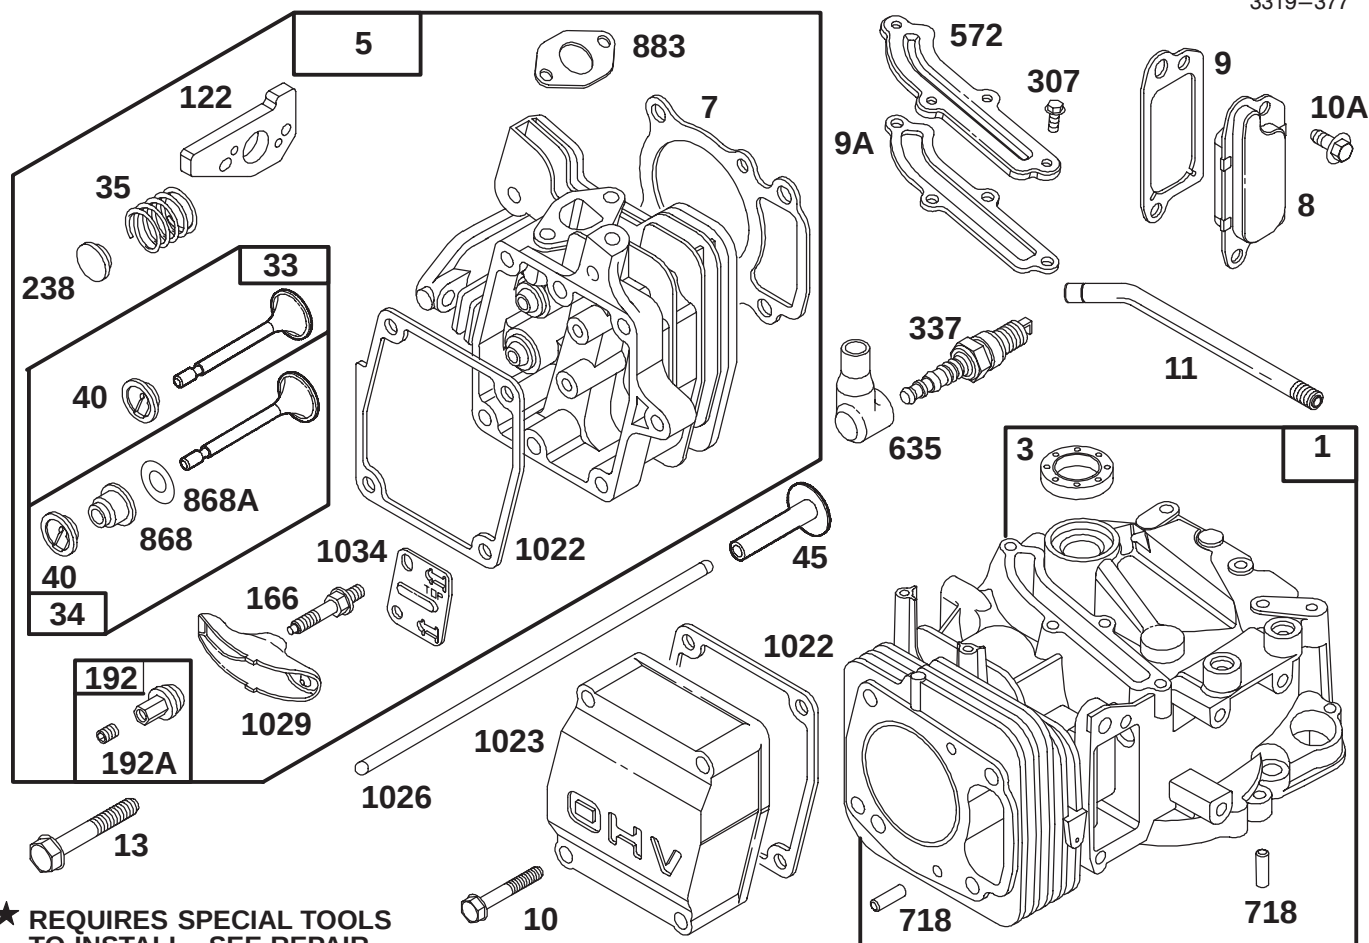 

★ **REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Assy	1
*3	77-9060	Seal-Oil	1
5	77-7730	Head-Cylinder	1
*7	77-7740	Gasket-Cylinder Head	1
8	77-9260	Breather Assy	1
*9	77-9250	Gasket-Breather	1
*9A	77-7410	Gasket-Breather Cover	1
10	77-7360	Screw-Hex Head (Valve Cover)	1
10A	77-9200	Screw-Hex. Head	1
11	77-9410	Tube-Breather	1
13	77-7630	Screw-Cylinder Head	1
33	77-7860	Valve-Exhaust	1
34	77-7880	Valve-Intake	1
35	77-7810	Spring-Valve	1
40	77-7870	Retainer-Spring	1
45	77-7610	Tappet-Valve	1
†122	77-7820	Adapter Assy.	1

Ref. No.	Part No.	Description	No. Used
166	77-7780	Stud-Rocker Arm	1
192	77-7910	Ball & Screw-Rocker Arm	1
192A	77-9560	Screw-Set	1
238	77-7800	Cap-Valve	1
307	77-7420	Screw-Cover Mtg (Breather Cover)	1
337	77-7330	Plug-Spark	1
572	77-7400	Cover-Breather	1
635	77-7340	Elbow-Spark Plug	1
718	77-7600	Pin-Dowel	1
*868	77-7890	Seal Assy-Valve	1
*868A	77-7900	Gasket-Valve	1
*883	77-7760	Gasket-Exhaust	1
*1022	77-7320	Gasket-Rocker Cover	1
1023	77-9320	Cover-Valve	1
1026	77-7620	Rod-Push	1
1029	77-7790	Arm-Rocker	1
1034	77-7770	Guide-Push Rod	1

* Included in Gasket Set—Part No. 77-8900

 † Included in Carburetor Overhaul Kit—Part No. 77-9580

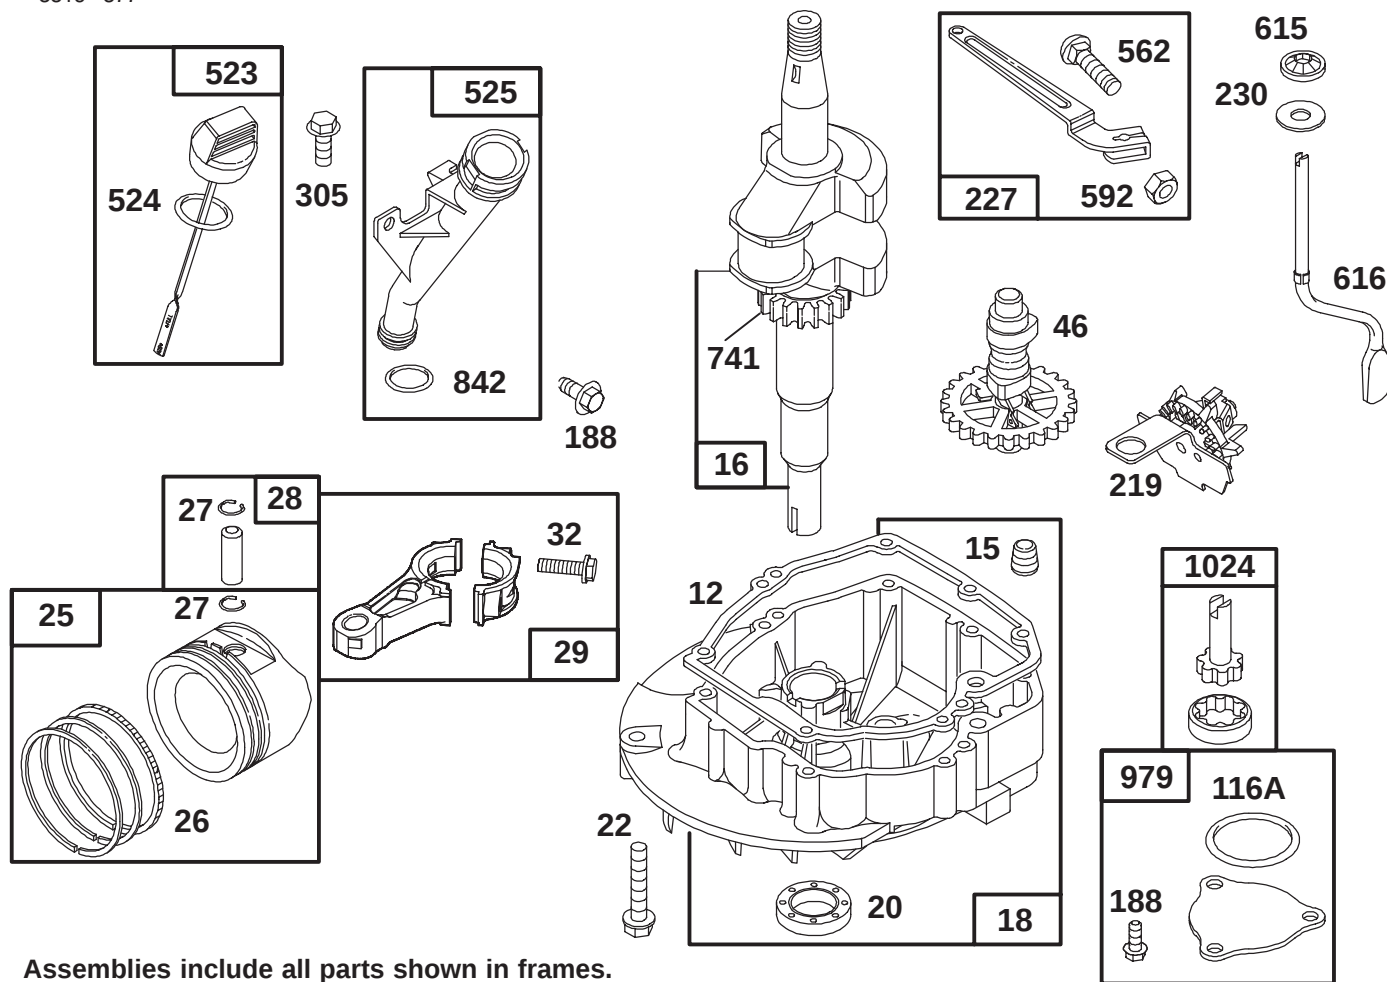


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
*12	77-7550	Gasket—Engine Base	1
15	77-9590	Plug—Pipe	1
16	77-7520	Crankshaft	1
		Note: Order Part No. 77-7540 For Timing Gear Key	1
18	77-7560	Base—Engine	1
*20	77-7570	Seal—Oil	1
22	77-9070	Screw—Engine Base	1
25	77-7690	Piston Assy (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock—Piston Pin	1
28	77-9340	Pin Assembly—Piston	1
29	77-7690	Rod—Connecting	1
32	77-9350	Screw—Connecting Rod	1
46	77-7490	Gear—Cam	1
*116A	77-7660	Seal—O-Ring	1

Ref. No.	Part No.	Description	No. Used
188	94-1652	Screw—Hex. Head	1
219	77-7500	Gear—Governor	1
227	77-7370	Lever Assembly—Governor	1
230	77-7470	Washer	1
305	77-8310	Screw—Hex. Head	1
523	77-7260	Dipstick—Oil	1
*524	77-7270	Seal—O-Ring	1
525	77-7280	Tube—Oil Fill	1
562	77-7380	Bolt—Governor Lever	1
592	77-7390	Nut—Hex	1
615	77-7480	Push Nut	1
616	77-7460	Crank—Governor	1
741	77-7530	Gear—Timing	1
*842	77-7300	Seal—O-Ring	1
979	77-7650	Cover—Oil Pump	1
1024	77-7640	Pump—Oil	1

 * Included in Gasket Set—Part No. 77-8900

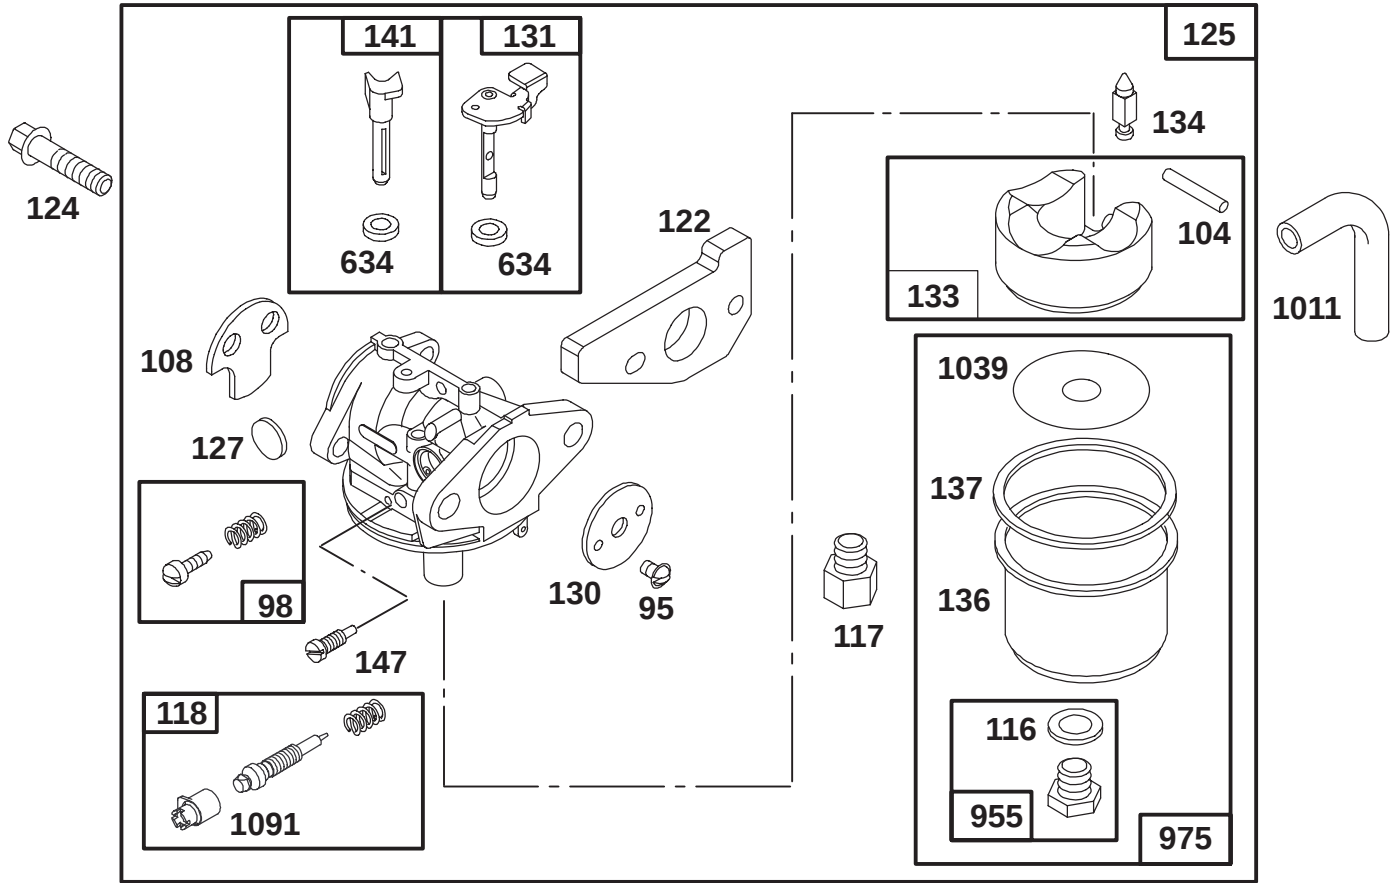

Assemblies include all parts shown in frames.


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw—Valve Mtg	1
98	77-8240	Screw—Idle Adj.	1
†104	77-8180	Pin—Float Hinge	1
108	77-9600	Valve—Choke	1
†‡116	77-8210	Washer—Bowl	1
†117	77-9610	Jet—Main	1
		Note:For High Altitude Jet, Order Part No. 94-1650	1
†118	77-9620	Valve & Spring—Needle	1
†122	77-7820	Adapter Assy	1
124	77-7970	Screw—Hex Head (carb mtg)	1
125	77-9630	Carburetor Assy	1
†127	77-8100	Plug—Welch	1
130	77-8080	Valve—Throttle	1

Ref. No.	Part No.	Description	No. Used
131	77-8160	Shaft—Throttle	1
133	77-8170	Float—Carburetor	1
†134	77-8110	Valve—Inlet (Includes Seat)	1
136	77-7240	Bowl—Fuel	1
†‡137	77-8200	Gasket—Float Bowl	1
141	77-8130	Shaft—Choke	1
147	77-9640	Jet—Pilot	1
†‡634	77-8150	Washer—Seal	1
955	77-8220	Screw—Hex Head	1
975	77-8190	Bowl Assy—Carburetor	1
1011	77-8040	Tube—Vent	1
†1039	77-7250	Limiter—Float	1
†1091	77-9650	Cap—Limiter	1

† Included in Carburetor Overhaul Kit—Part No. 77-9580

 ‡ Included in Carburetor Gasket Set—Part No. 77-8930

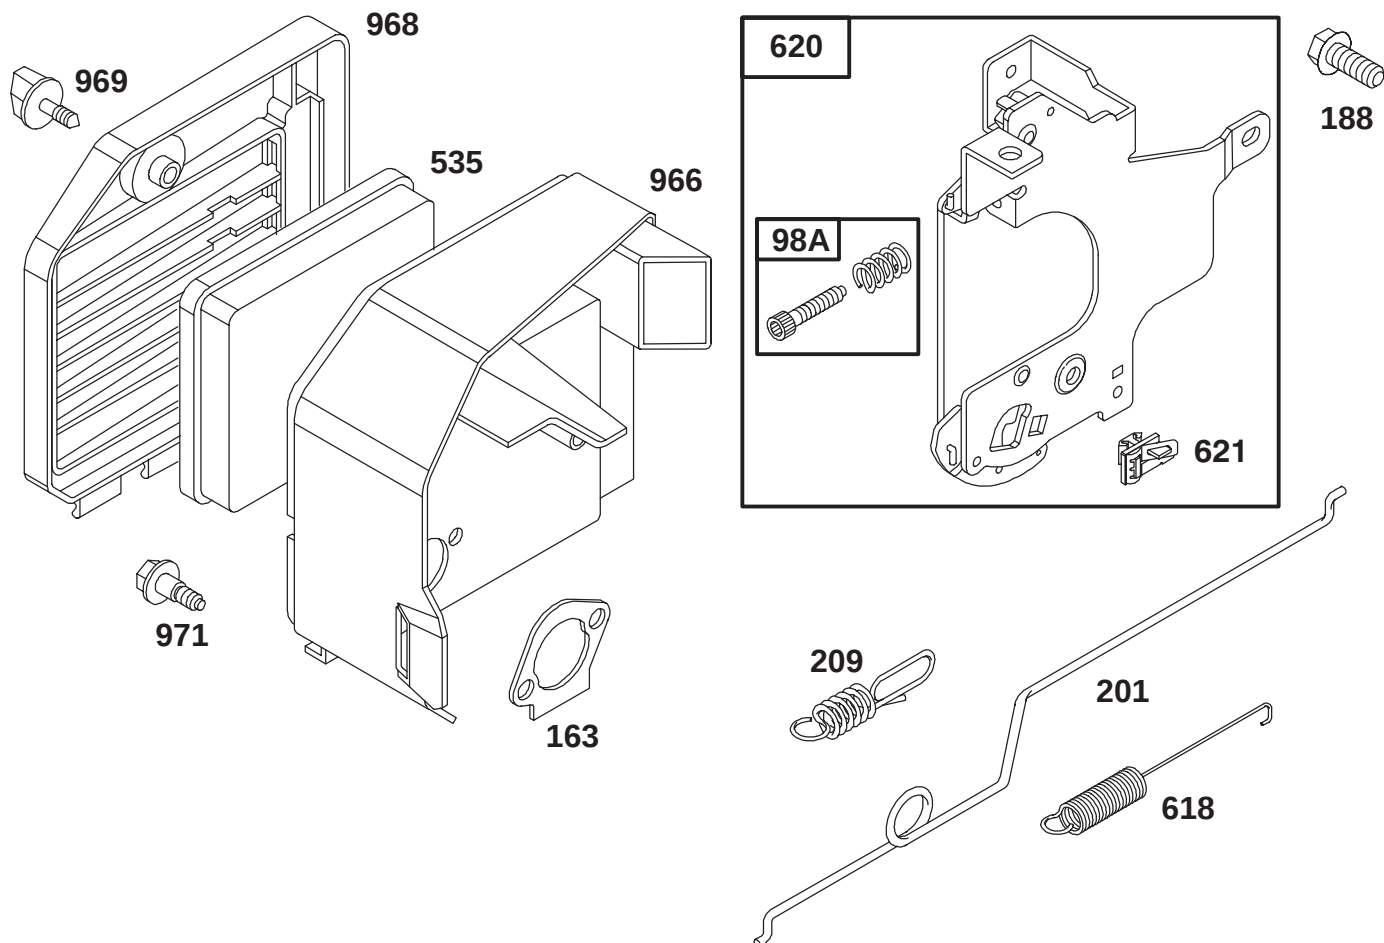


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
98A	77-8020	Screw Assy-Speed Adj.	1
*163	77-7960	Gasket-Air Cleaner	1
188	94-1652	Screw-Hex Head	1
201	77-7980	Link-Governor	1
209	77-7990	Spring-Governor	1
535	77-7950	Element-Filter	1
618	77-8140	Spring-Choke	1

Ref. No.	Part No.	Description	No. Used
620	77-8000	Bracket-Carburetor	1
621	77-8010	Switch-Stop	1
966	77-7940	Base Air Cleaner	1
968	77-7040	Cover-Air Cover	1
969	77-7920	Screw-Air Cleaner	1
971	77-7930	Screw-Air Cleaner	1

 * Included in Gasket Set-Part No. 77-8900

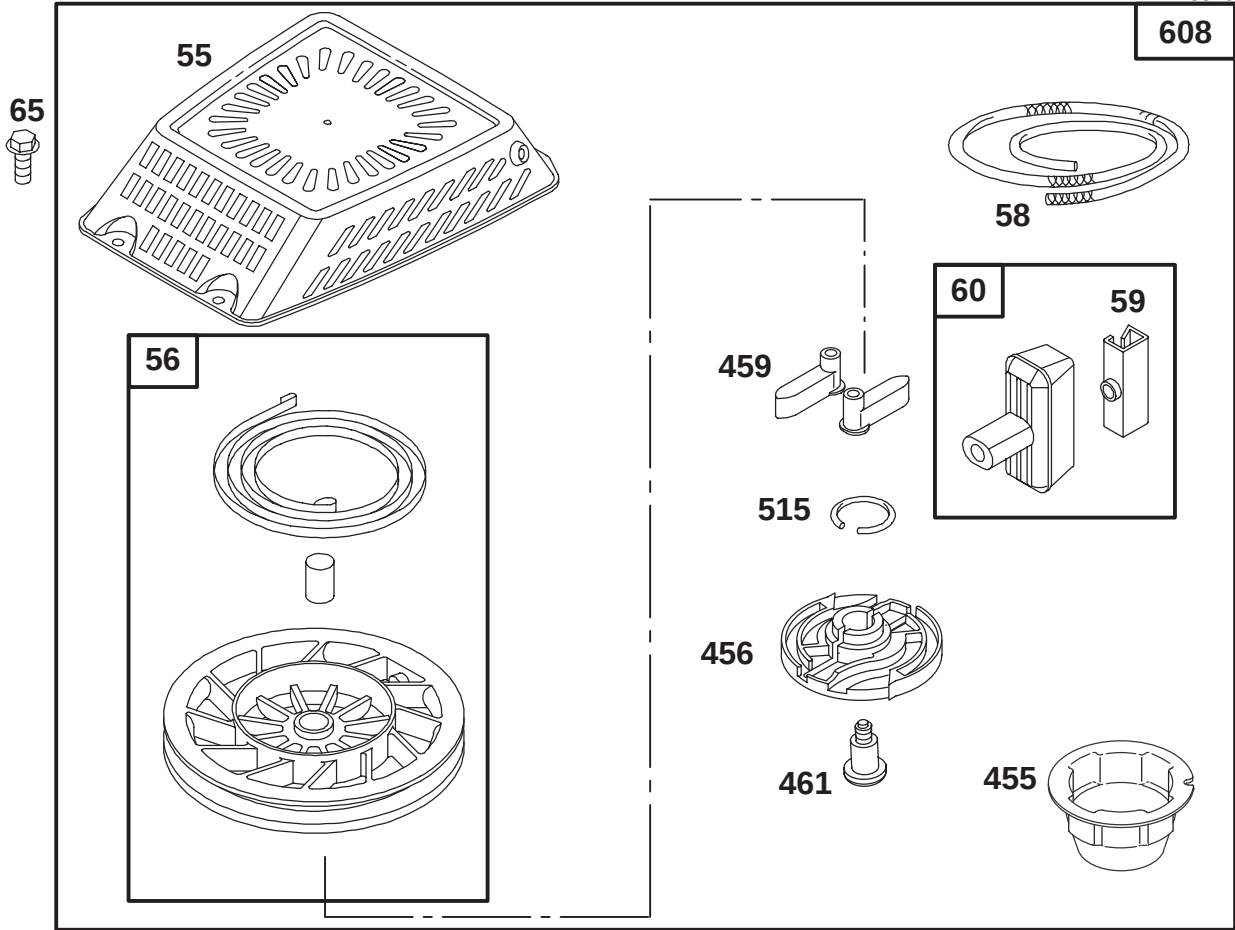


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	94-1656	Housing – Rewind Starter	1
56	94-1657	Pulley – Rewind Starter	1
58	94-1668	Rope – Starter (Cut To Required Length)	1
59	77-7210	Insert – Rewind Handle	1
60	77-8510	Handle – Rewind Starter	1
65	77-8300	Screw – Hex. Hd.	1


Ref. No.	Part No.	Description	No. Used
455	94-1653	Cup–Starter	1
456	94-1659	Retainer – Rewind Starter	1
459	94-1654	Pawl – Starter	1
461	94-1660	Screw – Rewind Starter	1
515	94-1655	Spring – Torsion	1
608	94-1661	Starter Assy. – Rewind	1
	77-9020	Short Block	1

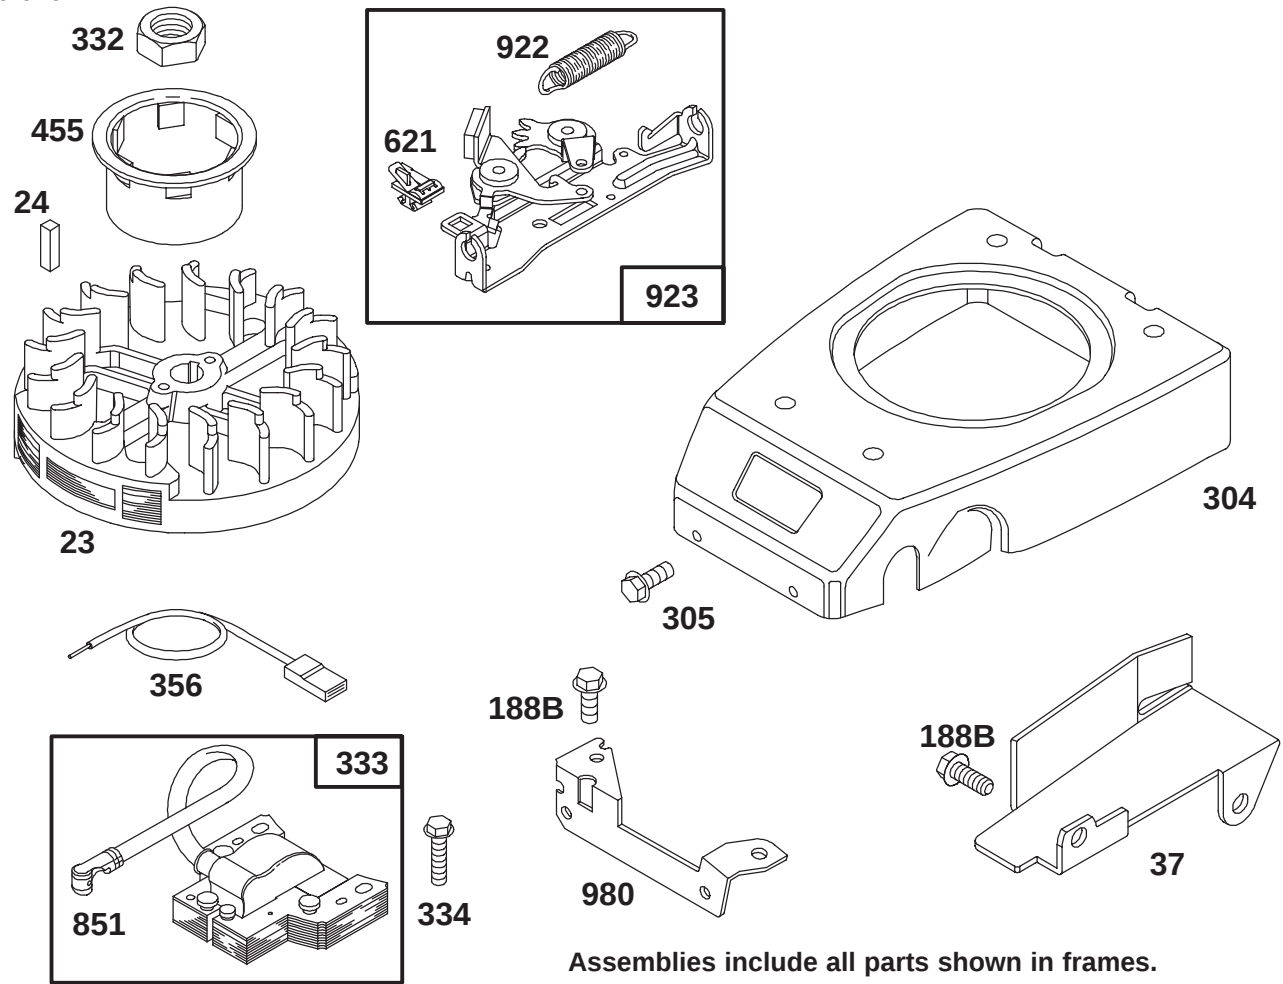 

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
23	77-8330	Flywheel-Magneto	1
24	77-8340	Key-Flywheel	1
37	77-7190	Guard-Flywheel	1
188B	77-7450	Screw-Hex Head	1
304	94-1680	Housing-Blower	1
305	77-8310	Screw-Hex Head	1
332	77-8360	Nut-Flywheel	1
333	77-8420	Armature-Magneto	1

Ref. No.	Part No.	Description	No. Used
334	77-9420	Screw-Armature Mtg.	1
356	77-8400	Wire-Ground	1
455	77-8350	Cup-Starter	1
621	77-8010	Switch-Stop	1
851	77-9450	Terminal-Spark Plug	1
922	94-1663	Spring-Brake	1
923	77-9460	Brake Assembly	1
980	77-7140	Bracket-Blower Housing	1

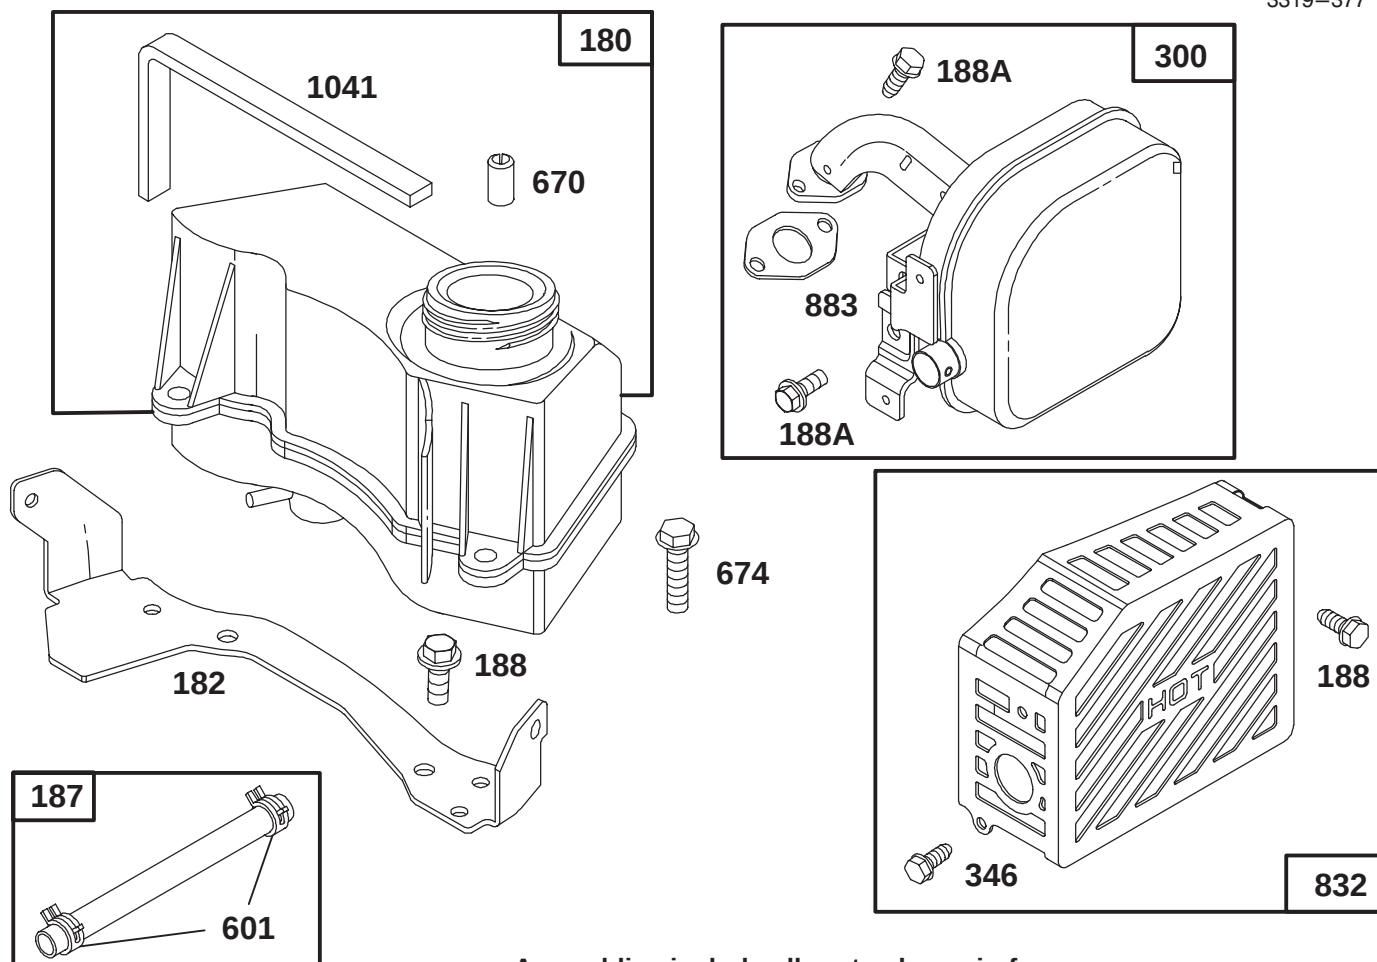 




Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
180	77-8580	Tank Assy.—Fuel	1
182	77-7170	Bracket—Fuel Tank	1
187	78-4100	Hose—Fuel (Cut to Suit)	1
188	94-1652	Screw—Hex. Head	1
188A	94-1676	Screw—Hex. Head	1
300	77-8640	Muffler—Exhaust	1
346	77-9430	Screw—Hex. Head	1

Ref. No.	Part No.	Description	No. Used
601	78-4690	Clamp-Hose	1
670	77-9030	Spacer-Fuel Tank	1
674	77-8600	Screw-Tank Mtg.	1
832	77-9290	Guard-Muffler	1
*883	77-7760	Gasket-Exhaust	1
*1041	77-8590	Seal-Foam	1

   * Included in Gasket Set—Part No. 77-8900

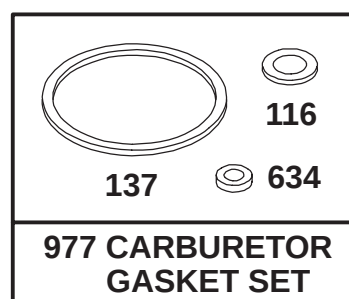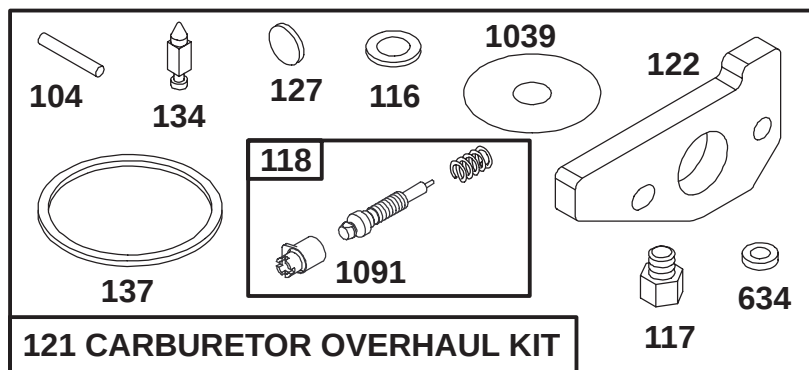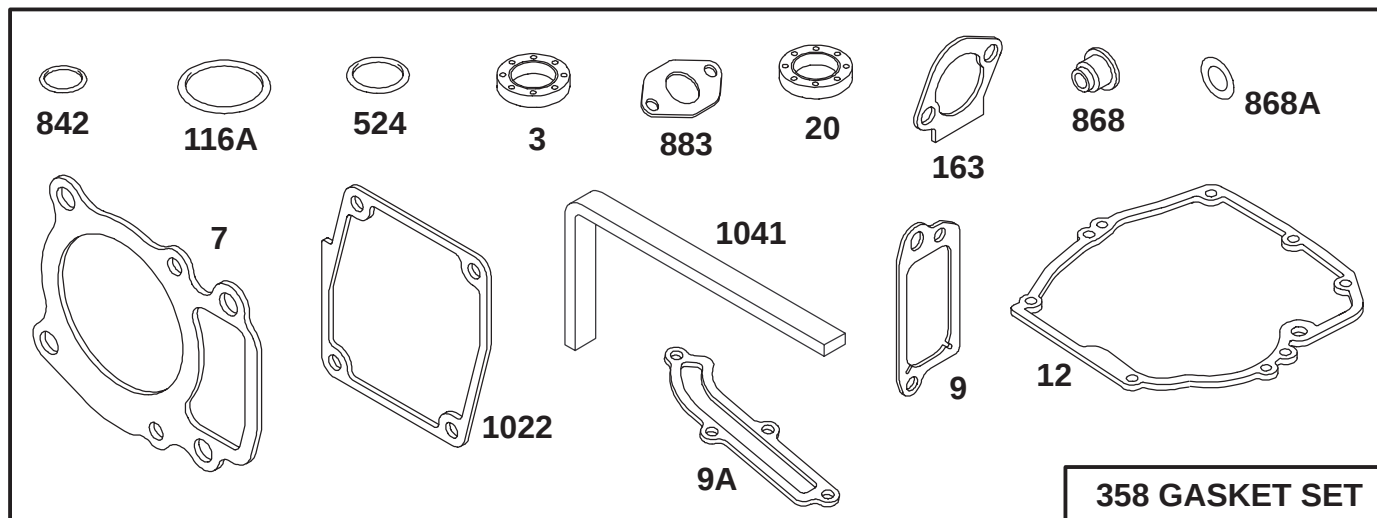

Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
*3	77-9060	Seal—Oil (Upper)	1
*7	77-7740	Gasket—Cylinder Head	1
*9	77-9250	Gasket—Breather	1
*9A	77-7410	Gasket—Breather Cover	1
*12	77-7550	Gasket—Engine Base	1
*20	77-7570	Seal—Oil (Lower)	1
†104	77-8180	Pin—Float Hinge	1
†116	77-8210	Washer—Bowl	1
*116A	77-7660	Seal—O-Ring (Oil Pump Cover)	1
†117	77-9610	Jet—Main	1
†118	77-9620	Valve & Spring—Needle	1
121	77-9580	Overhaul Kit—Carburetor	1
†122	77-7820	Adapter Assy.	1
†127	94-1651	Plug—Welch	1
†134	77-8110	Valve—Inlet (Includes Seat)	1
†137	77-8200	Gasket—Float Bowl	1

Ref. No.	Part No.	Description	No. Used
*163	77-7960	Gasket—Air Cleaner	1
358	77-8900	Gasket Set	1
*524	77-7270	Seal—O-Ring (Oil Fill Cap)	1
†634	77-8150	Washer—Seal (Throttle Shaft)	1
*842	77-7300	Seal—O-Ring (Oil Fill Tube)	1
*868	77-7890	Seal Assy.—Valve	1
*868A	77-7900	Seal—Valve	1
*883	77-7760	Gasket—Exhaust	1
977	77-8930	Carburetor Gasket Set	1
*1022	77-7320	Gasket—Rocker Cover	1
†1039	77-7250	Limiter—Float	1
*1041	77-8590	Seal—Foam (Fuel Tank)	1
†1091	77-9650	Cap—Limiter	1

† Included in Carburetor Overhaul Kit—Part No. 77-9580

‡ Included in Carburetor Gasket Set—Part No. 77-8930

* Included in Gasket Set—Part No. 77-8900

TORO PART NUMBER INDEX

3319-377

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
614578	Gearcase	4	10	1	71-9450	V-Belt	3	34	1
614596	Gear 34 Tooth	4	18	1	71-9460	Bag - Grass	6	5	1
614668	Cover - Gear Case	4	2	1	71-9470	Door - Bag	6	3	1
614696	Shaft - Intermediate	4	4	1	71-9480	Handle - Door	6	2	1
14-9959	Wheel, Tire & Gear Assy.	3	22	2	71-9600	Gear Case Ass'y Complete	4		1
17-1569	Discharge Door Assembly	2	31	1	71-9600	Gearcase Assembly	3	35	1
17-4529	Panel - Control	5	31	1	71-9610	Pulley - Half	4	12	2
19-4050	Knob	5	28	2	71-9620	Shaft - Output	4	7	1
26-0672	Bolt - Blade	1	10	1	71-9630	Bracket - Traction	3	36	1
27-6230	Bolt - Wheel	2	26	2	71-9840	Spring - Door	2	11	2
27-6230	Bolt - Wheel	3	23	2	71-9863	Decal - Panel	5	4	1
27-6250	Bushing	2	41	2	71-9900	Frame - Bag	6	4	1
27-6250	Bushing - Wheel	3	24	4	71-9990	Plug - Recycler	2	42	1
36-4780	Washer - Thrust	4	17	3	74-1660	Cover - Wheel	3	21	2
36-4791	Washer	4	5	2	74-1670	Spacer - Wheel	3	25	2
38-7820	Bearing - Ball	4	15	1	77-7040	Cover-Air Cover	10	968	1
40-1940	Washer	2	28	2	77-7140	Bracket-Blower Housing	12	980	1
46-1113	Wheel & Tire Assembly	2	27	2	77-7170	Bracket-Fuel Tank	13	182	1
46-6290	O-Ring	2	39	1	77-7190	Guard-Flywheel	12	37	1
46-6811	Screw - Hex Washer Head	2	40	2	77-7210	Insert - Rewind Handle	11	59	1
47-2890	Bushing - Sleeve	3	4	2	77-7240	Bowl-Fuel	9	136	1
47-6730	Seal - Grease	3	5	2	77-7250	Limiter-Float	9	1039	1
48-2060	Bearing - Needle	3	14	2	77-7260	Dipstick-Oil	8	523	1
49-2040	Screw - Tapite	4	1	4	77-7270	Seal-O-Ring	14	524	1
55-3760	Pinion - 15 Tooth	4	3	1	77-7270	Seal-O-Ring	8	524	1
60-8750	Bushing	4	6	2	77-7280	Tube-Oil Fill	8	525	1
60-8850	Bushing - Output	4	9	2	77-7300	Seal-O-Ring	14	842	1
60-8890	Gear - Bevel Pinion	4	16	1	77-7300	Seal-O-Ring	8	842	1
62-6660	Spacer	4	11	1	77-7320	Gasket-Rocker Cover	14	1022	1
62-7550	Pulley - Driver	1	12	1	77-7330	Plug-Spark	7	337	1
63-8590	Screw - Thread Forming	3	12	2	77-7340	Elbow-Spark Plug	7	635	1
65-2720	Ring - Retaining	3	17	4	77-7360	Screw-Hex Head	7	10	1
65-4710	Washer - Friction	3	15	2	77-7370	Lever Assembly-	8	227	1
65-4720	Spring - Compression	3	20	2	77-7380	Bolt-Governor Lever	8	562	1
65-4740	Washer - Keyed Thrust	3	16	4	77-7390	Nut-Hex	8	592	1
65-4750	Gear - Pinion	3	19	2	77-7400	Cover-Breather	7	572	1
65-4760	Washer - Clutch	3	26	2	77-7410	Gasket-Breather Cover	14	9A	1
65-5210	Screw - Thread Forming	2	16	2	77-7410	Gasket-Breather Cover	7	9A	1
66-6040	Key - Rocking R.H.	3		1	77-7420	Screw-Cover Mtg	7	307	1
66-6050	Key - Rocking L.H.	3	18	1	77-7450	Screw-Hex Head	12	188B	1
71-7630	Cap - Throttle Lower	5	7	1	77-7460	Crank-Governor	8	616	1
71-7740	Spring - Counterbalance	3	31	1	77-7470	Washer	8	230	1
71-7770	Plate - Rear Securing	3	27	2	77-7480	Push Nut	8	615	1
71-7820	Pivot - Front	2	30	1	77-7490	Gear-Cam	8	46	1
71-7840	Rod - Trigger	3	8	1	77-7500	Gear-Governor	8	219	1
71-7860	Grip - Upper	2	15	1	77-7520	Crankshaft	8	16	1
71-7870	Grip - Lower	2	20	1	77-7530	Gear-Timing	8	741	1
71-7890	Guide - Belt, Rear	2	6	1	77-7550	Gasket-Engine Base	14	12	1
71-7900	Cap - Bolt, Hinge (LH)	2	12	1	77-7550	Gasket-Engine Base	8	12	1
71-7910	Cap - Bolt, Hinge (RH)	2	17	1	77-7560	Base-Engine	8	18	1
71-7920	Cover - Belt	2	24	1	77-7570	Seal-Oil	8	20	1
71-7930	Trigger - Height of Cut	2	18	1	77-7570	Seal-Oil (Lower)	14	20	1
71-7940	Retainer - Blade	1	6	1	77-7590	Cylinder Assy	7	1	1
71-7960	Guide - Engine Belt	1	11	1	77-7600	Pin-Dowel	7	718	1
71-7970	Rod - Link	3	30	1	77-7610	Tappet-Valve	7	45	1
71-7980	Indicator - H.O.C.	3	33	1	77-7620	Rod-Push	7	1026	1
71-7990	Ramp - Discharge	2	4	1	77-7630	Screw-Cylinder Head	7	13	1
71-8040	Plate - Throttle	5	14	1	77-7640	Pump-Oil	8	1024	1
71-8060	Spring - Trigger Return	3	10	2	77-7650	Cover-Oil Pump	8	979	1
71-8080	Saddle - H.O.C.	3	11	1	77-7660	Seal-O-Ring	14	116A	1
71-8090	Mount - Handle L.H.	5		1	77-7660	Seal-O-Ring	8	116A	1
71-8100	Mount - Handle R.H.	5	29	1	77-7690	Piston Assy (Std.)	8	25	1
71-8130	Bracket - Control	5	32	1	77-7690	Rod-Connecting	8	29	1
71-8310	Spring - Compression	5	1	1	77-7700	Ring Set (Std.)	8	26	1
71-8450	Cover - Spring	3	32	1	77-7710	Lock-Piston Pin	8	27	1
71-8580	Spacer - Door	2	9	2	77-7730	Head-Cylinder	7	5	1
71-8830	Retainer - Shaft Assembly	2	2	2	77-7740	Gasket-Cylinder Head	14	7	1
71-8920	Kicker - Front, Right	2	10	1	77-7740	Gasket-Cylinder Head	7	7	1
71-9230	Kicker - Right, Rear	2	21	1	77-7760	Gasket-Exhaust	13	883	1
71-9250	Kicker - Rear, Left	2	34	1	77-7760	Gasket-Exhaust	14	883	1
71-9260	Blade - 48cm	1	7	1	77-7760	Gasket-Exhaust	7	883	1
71-9440	Kicker - Front, Left	2	35	1	77-7770	Guide-Push Rod	7	1034	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
77-7780	Stud-Rocker Arm	7	166	1	77-9250	Gasket-Breather	14	9	1
77-7790	Arm-Rocker	7	1029	1	77-9250	Gasket-Breather	7	9	1
77-7800	Cap-Valve	7	238	1	77-9260	Breather Assy	7	8	1
77-7810	Spring-Valve	7	35	1	77-9290	Guard-Muffler	13	832	1
77-8150	Washer-Seal	9	634	1	77-9320	Cover-Valve	7	1023	1
77-7820	Adapter Assy	9	122	1	77-9340	Pin Assembly-Piston	8	28	1
77-7820	Adapter Assy.	14	122	1	77-9350	Screw-Connecting Rod	8	32	1
77-7820	Adapter Assy.	7	122	1	77-9410	Tube-Breather	7	11	1
77-7860	Valve-Exhaust	7	33	1	77-9420	Screw-Armature Mtg.	12	334	1
77-7870	Retainer-Spring	7	40	1	77-9430	Screw-Hex. Head	13	346	1
77-7880	Valve-Intake	7	34	1	77-9450	Terminal-Spark Plug	12	851	1
77-7890	Seal Assy-Valve	7	868	1	77-9460	Brake Assembly	12	923	1
77-7890	Seal Assy.-Valve	14	868	1	77-9550	Cover - Brake	1	18	1
77-7900	Seal-Valve	14	868A	1	77-9560	Screw-Set	7	192A	1
77-7900	Gasket-Valve	7	868A	1	77-9580	Overhaul Kit-Carburetor	14	121	1
77-7910	Ball & Screw Rocker Arm	7	192	1	77-9590	Plug-Pipe	8	15	1
77-7920	Screw-Air Cleaner	10	969	1	77-9600	Valve-Choke	9	108	1
77-7930	Screw-Air Cleaner	10	971	1	77-9610	Jet-Main	14	117	1
77-7940	Base Air Cleaner	10	966	1	77-9610	Jet-Main	9	117	1
77-7950	Element-Filter	10	535	1	77-9620	Valve & Spring-Needle	14	118	1
77-7960	Gasket-Air Cleaner	10	163	1	77-9620	Valve & Spring-Needle	9	118	1
77-7960	Gasket-Air Cleaner	14	163	1	77-9630	Carburetor Assy	9	125	1
77-7970	Screw-Hex Head	9	124	1	77-9640	Jet-Pilot	9	147	1
77-7980	Link-Governor	10	201	1	77-9650	Cap-Limiter	9	1091	1
77-7990	Spring-Governor	10	209	1	78-4100	Hose-Fuel (Cut to Suit)	13	187	1
77-8000	Bracket-Carburetor	10	620	1	78-4690	Clamp-Hose	13	601	1
77-8010	Switch-Stop	10	621	1	80-0510	Stiffener - Blade	1	16	1
77-8010	Switch-Stop	12	621	1	86-7990	Screw - Clamp	1	15	1
77-8020	Screw Assy-Speed Adj.	10	98A	1	92-2289	Plate - Toro Logo	1	2	1
77-8040	Tube-Vent	9	1011	1	92-7663	Cover - Wheel	3	37	1
77-8080	Valve-Throttle	9	130	1	92-7729	Support - Cable	5	35	1
77-8090	Screw-Valve Mtg	9	95	1	92-7863	Decal - Deck	2	25	1
77-8100	Plug-Welch	9	127	1	92-9677	Rear Pivot Assembly L.H.	3	6	1
77-8110	Valve-Inlet	14	134	1	92-9680	Rear Pivot Assembly R.H.	3	1	1
77-8110	Valve-Inlet	9	134	1	93-0339	Cover - Throttle Lower	5	8	1
77-8130	Shaft-Choke	9	141	1	93-1115	Control - Throttle	5	22	1
77-8140	Spring-Choke	10	618	1	93-1116	Cable - Brake	5	37	1
77-8150	Washer-Seal	14	634	1	93-4105	Decal - Danger	2	36	1
77-8160	Shaft-Throttle	9	131	1	93-4355	Decal - Recoil	1	3	1
77-8170	Float-Carburetor	9	133	1	93-7198	Cap - Gas	1	13	1
77-8180	Pin-Float Hinge	14	104	1	94-1604	Engine - Complete	1	1	1
77-8180	Pin-Float Hinge	9	104	1	94-1651	Plug-Welch	14	127	1
77-8190	Bowl Assy-Carburetor	9	975	1	94-1652	Screw-Hex Head	10	188	1
77-8200	Gasket-Float	14	137	1	94-1652	Screw-Hex. Head	13	188	1
77-8200	Gasket-Float	9	137	1	94-1652	Screw-Hex. Head	8	188	1
77-8210	Washer-Bowl	14	116	1	94-1653	Cup-Starter	11	455	1
77-8210	Washer-Bowl	9	116	1	94-1654	Pawl - Starter	11	459	1
77-8220	Screw-Hex Head	9	955	1	94-1655	Spring - Torsion	11	515	1
77-8240	Screw-Idle Adj	9	98	1	94-1656	Housing - Rewind Starter	11	55	1
77-8300	Screw - Hex. Hd.	11	65	1	94-1657	Pulley - Rewind Starter	11	56	1
77-8310	Screw-Hex Head	12	305	1	94-1659	Retainer - Rewind Starter	11	456	1
77-8310	Screw-Hex. Head	8	305	1	94-1660	Screw - Rewind Starter	11	461	1
77-8330	Flywheel-Magneto	12	23	1	94-1661	Starter Assy. - Rewind	11	608	1
77-8340	Key-Flywheel	12	24	1	94-1663	Spring-Brake	12	922	1
77-8350	Cup-Starter	12	455	1	94-1668	Rope - Starter	11	58	1
77-8360	Nut-Flywheel	12	332	1	94-1676	Screw-Hex. Head	13	188A	1
77-8400	Wire-Ground	12	356	1	94-1680	Housing-Blower	12	304	1
77-8420	Armature-Magneto	12	333	1	94-4367	Handle	5	15	1
77-8510	Handle - Rewind Starter	11	60	1	94-6027	Decal - Instruction	5	26	1
77-8580	Tank Assy.-Fuel	13	180	1	95-2740	Retainer Belt	3	3	1
77-8590	Seal-Foam	13	1041	1	95-2747	Fitting - Washout	2	38	1
77-8590	Seal-Foam	14	1041	1	95-4450	Bail - Traction	5	12	1
77-8600	Screw-Tank Mtg.	13	674	1	95-4453	Screw - Handle	5	34	1
77-8640	Muffler-Exhaust	13	300	1	95-4454	Bail - Brake	5	19	1
77-8900	Gasket Set	14	358	1	95-4457	Guide - Rope	5	5	1
77-8930	Carburetor Gasket Set	14	977	1	95-6134	Housing Assembly	2	5	1
77-9020	Short Block	11		1	95-9649	Cable - Traction	5	3	1
77-9030	Spacer-Fuel Tank	13	670	1	2210-249	Clamp - Casing	1	14	1
77-9060	Seal-Oil	7	3	1	2210-316	Stop - Rope	1	17	1
77-9060	Seal-Oil (Upper)	14	3	1	302-26	Fitting - Grease	3	2	2
77-9070	Screw-Engine Base	8	22	1	322-29	Screw - Hex Head	2	13	2
77-9200	Screw-Hex. Head	7	10A	1	3253-22	Washer - Lock	1	9	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-377

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3256-1	Washer - Flat	5	36	1	32144-4	Screw - Thread Forming	3	28	6
3256-24	Washer	4	13	1	32144-11	Screw - Phillips Pan Head	2	8	8
3284-5	Pin - Groove	2	19	1	32144-31	Screw - Thread Forming	3	9	1
3290-378	Tie - Cable	5	2	1	32144-70	Screw - Tap	2	22	1
3296-5	Nut	4	14	1	32144-97	Screw - Phillips Pan Hd.	5	10	5
3296-5	Nut - Lock	3	7	2	32144-97	Screw - Phillips Pan Head	2	14	2
3296-5	Nut - Lock	2	29	2	32144-98	Screw - Phillips Pan Hd.	5	13	4
3296-73	Nut - Lock, Insert	5	20	2	32144-99	Screw - Phillips Pan Hd.	5	6	2
32112-11	Nut - Push	2	3	1	32144-102	Screw - Thread Forming	1	4	3
32112-13	Nut - Push	3	13	1	32144-111	Screw - Hex Washer Hd	6	1	5
32121-63	Pin - Spirol	4	8	2	32151-93	Ring - Grip	3	29	1
32144-4	Screw - Hex Head	2	1	10					
32144-4	Screw - Thread Forming	1	5	2					

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.