



Z Master
60" Bagger
For Z-222 Tractor

Model No. 79432 – 790001 & UP

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Canister Assembly	1	Blower Housing Assembly	4
Canister Support Assembly	2	Note:	
Blower Pulley And Idler Arm Assembly	3		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
..			

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

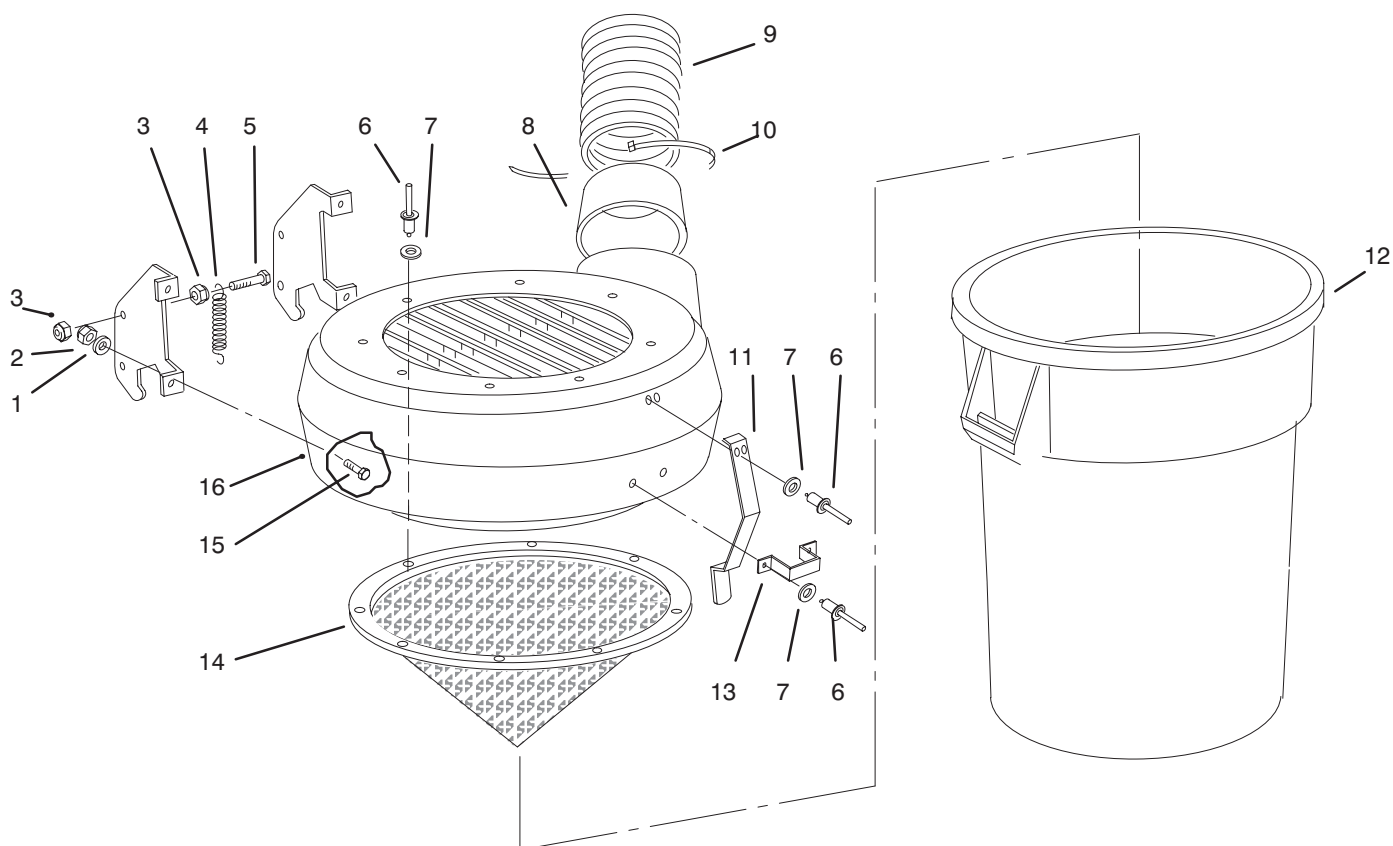


Sheet No.: 2

Canister Assembly

Ref. No.	Part No.	Qty.	Description
1	3256-23	4	Washer-Flat
2	3296-29	4	Nut-Lock
3	3217-7	2	Nut-Hex
4	100071	2	Spring-Extension
5	323-9	2	Screw-HH
6	79-0470	13	Rivet-Pop
7	9202704	13	Washer-Flat
8	79-0410	1	ASM-Seal
9	79-0920	1	Hose-Flexible
10	79-0100	1	Tie-Wire
11	78-6570	1	Latch-Top
12	79-0130	1	Canister
13	78-9280	1	Bracket
14	78-6580	1	Screen-Canister
15	322-3	4	Screw-HH
16	78-0700	1	Cover-Top


Ref. No.	Part No.	Qty.	Description

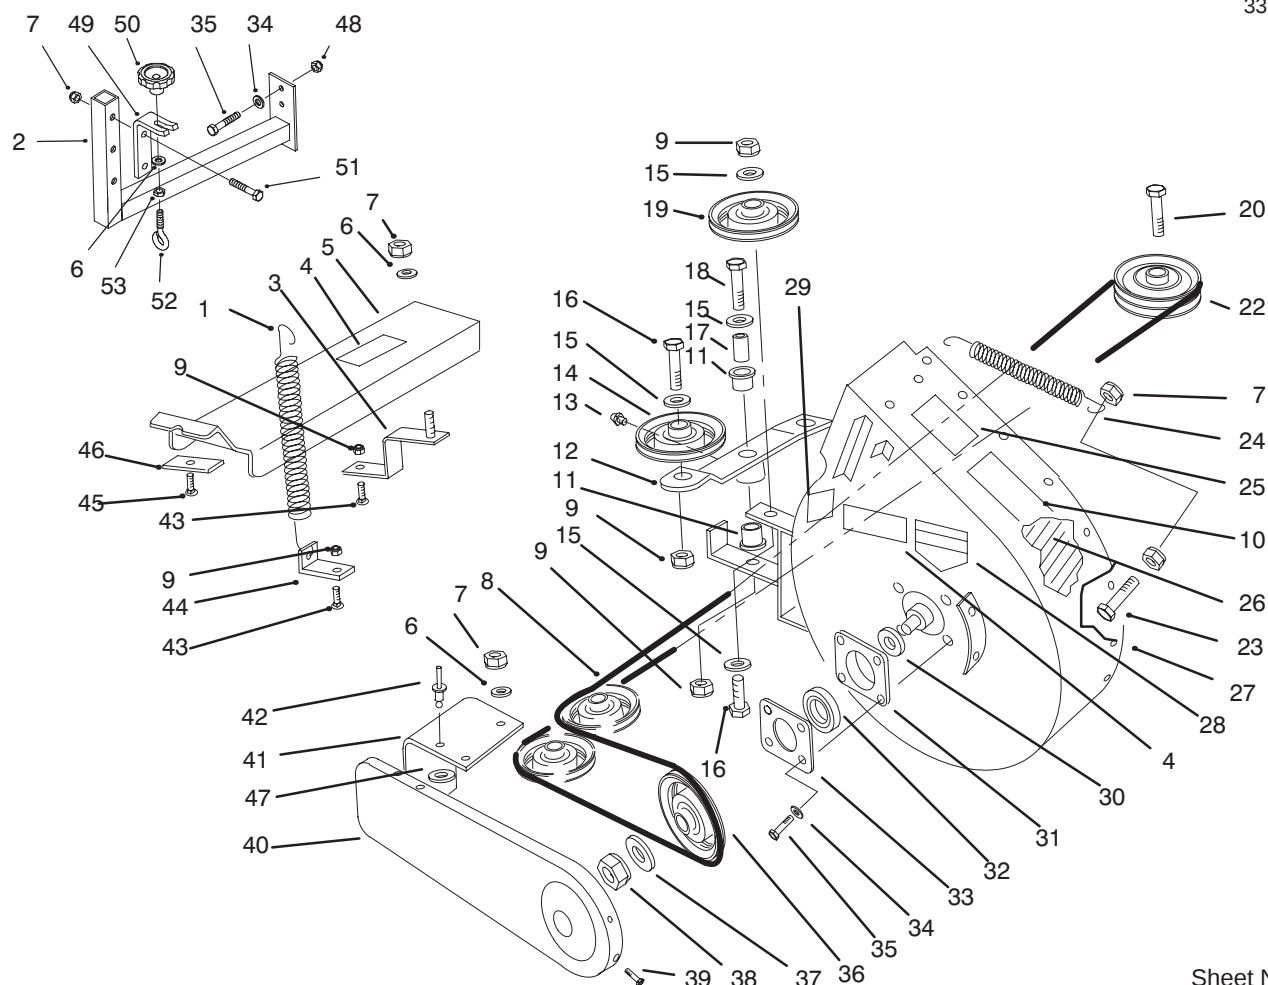

Sheet No.: 4

Blower Pulley And Idler Arm Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	79-0020	1	Spring-Extension	28	93-1122	1	Decal-Danger
2	94-6291	1	Bracket ASM	30	63-9710	1	Spacer-Bearing
3	78-9690	1	Bracket	31	37-6730	2	Cup-Bearing
4	79-0350	2	Decal-Danger	32	38-7820	2	Bearing-Ball
5	93-1635	1	ASM-Belt	33	63-9700	1	Plate-Cover
			Cover/Decal	34	3253-3	4	Washer-Lock
6	3256-23	3	Washer-Flat	35	321-3	4	Screw-HH
7	3296-29	6	Nut-Lock	36	78-0730	1	Pulley-Blower
8	108960	1	Belt-V	37	9202604	2	Washer-Flat
9	3296-39	5	Nut-Lock	38	3218-12	2	Nut-Jam
10	92-2511	1	Decal-Warning	39	9266934	5	Screw-HWHTF
11	109859	2	Bushing	40	78-9120	1	Shield-Pulley
12	78-0750	1	Arm	41	78-5450	1	Shield
13	302-26	1	Fitting-Grease	42	114439	3	Rivet-Pop
14	92-7084	1	Pulley-Idler	43	3231-25	2	Screw-CARR
15	3256-24	4	Washer-Flat	44	79-0010	1	Bracket-Angle
16	323-9	2	Screw-HH	45	3230-23	1	Bolt-CARR
17	114511	1	Spacer	46	78-7830	1	Plate
18	323-11	2	Screw	47	9202704	1	Washer-Flat
19	92-7099	1	Pulley-Idler	48	3296-42	2	Nut-Lock
20	327-7	1	Screw-HH	29	44-3216	1	Decal
22	78-0720	1	Pulley	49	94-6293	1	Plate-Support
23	322-5	1	Screw-HH	50	19-4050	1	Knob
24	116172	1	Spring-Extension	51	322-41	2	Screw
25	79-0360	1	Decal-Danger	52	55-9420	1	Bolt-Eye
26	79-1880	1	Strip-Wear	53	3217-6	1	Nut
27	93-1636	1	ASM-Blower/Decal				

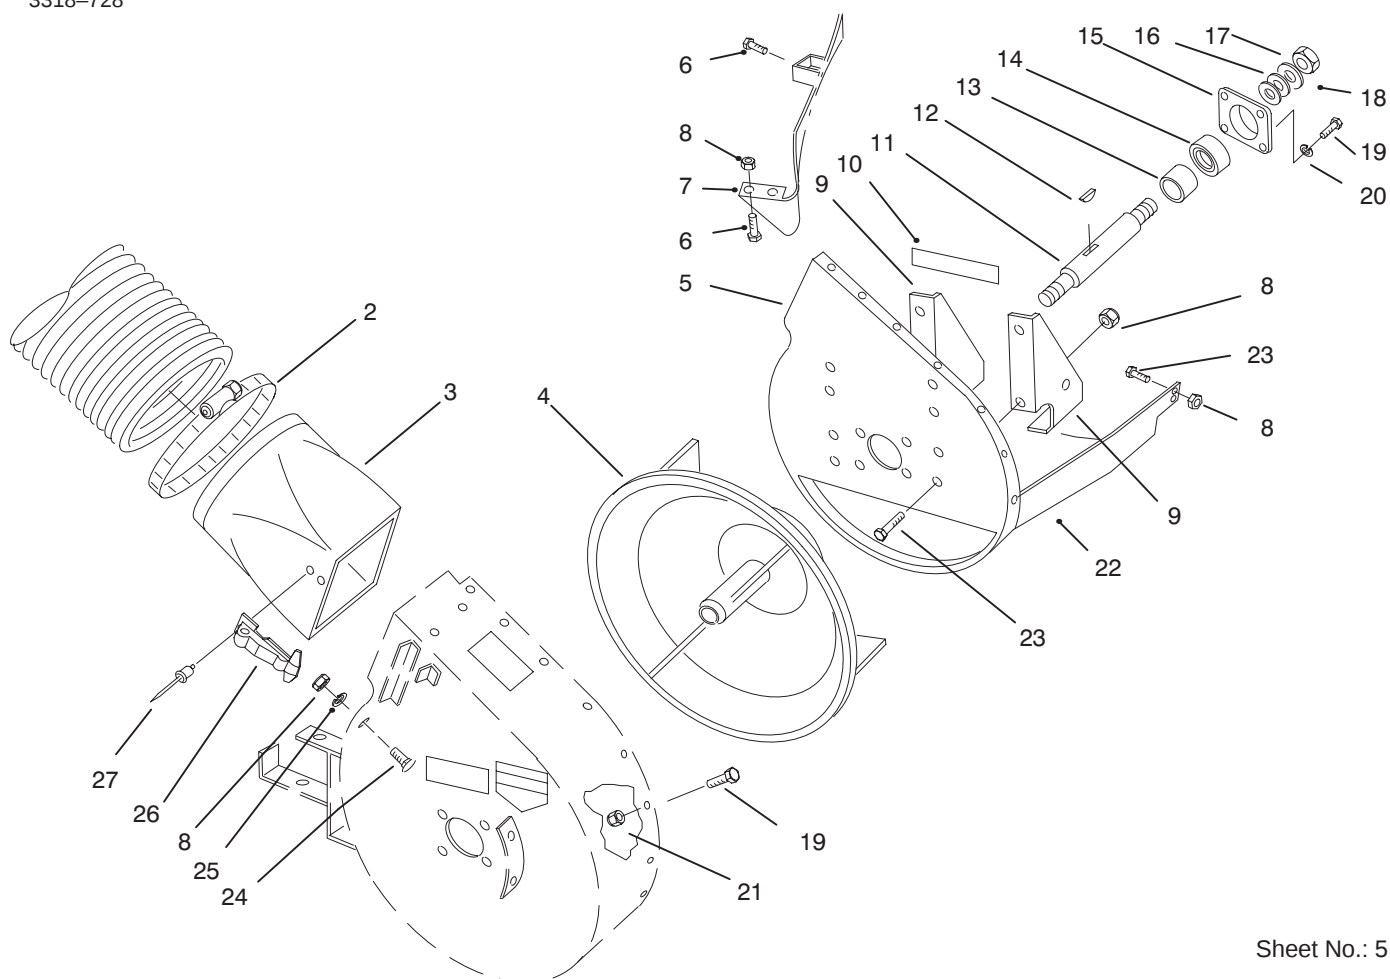

Sheet No.: 5

Blower Housing Assembly

Ref. No.	Part No.	Qty.	Description
2	102528	1	Clamp–Wormgear
3	79–0900	1	Adapter
4	79–1961	1	Impeller
5	93–1637	1	ASM–Mtg Plate/Decal
6	9266934	2	Screw–HWHTF
7	78–6520	1	Baffle
8	3296–29	13	Nut–Lock
9	78–5560	2	Bracket–Mounting
10	82–5510	1	Decal–Warning
11	78–5410	1	Shaft–Blower
12	3257–40	1	Key–Woodruff
13	7989	1	Spacer
14	38–7820	1	Bearing–Ball
15	37–6730	1	Cup–Bearing
16	9202154	2	Washer–Flat
17	3218–12	1	Nut–Jam
18	9202604	2	Washer–Flat
19	321–3	14	Screw–HH
20	3253–3	4	Washer–Lock
21	3296–42	10	Nut–Lock
22	78–6530	1	Deflector–Blower
23	322–3	10	Screw–HH
24	3230–1	5	Bolt–CARR
25	3256–23	5	Washer–Flat
26	117344	2	Handle–Latch
27	3269–13	4	Rivet–Pop

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
7989	4	13	1	Spacer
100071	1	4	2	Spring—Extention
102528	4	2	1	Clamp—Wormgear
108960	3	8	1	Belt—V
109859	3	11	2	Bushing—Flg
114439	3	42	3	Rivet—Pop
114511	3	17	1	Spacer
116172	3	24	1	Spring—Extension
117344	4	26	2	Handle—Latch
9202154	4	16	2	Washer—Flat
9202604	3	37	2	Washer—Flt
9202604	4	18	2	Washer—Flt
9202704	1	7	13	Washer—Flt
9202704	3	47	1	Washer—Fit
9266934	3	39	5	Screw—HWHTF
9266934	4	6	1	Screw—HWHTF
9335064	2	12	1	Hairpin
19-4050	3	50	1	Knob
37-6730	3	31	2	Cup—Bearing
37-6730	4	15	1	Cup—Bearing
38-7820	3	32	2	Bearing—Ball
38-7820	4	14	1	Bearing—Ball
44-3216	3	49	1	Decal
55-9420	3	52	1	Eye Bolt
63-9700	3	33	1	Plate—Cover
63-9710	3	30	1	Spacer—Brg
70-7045	5	5	1	Card—Registration
78-0610	2	3	1	Bracket—LH
78-0620	2	4	1	Bracket—RH
78-0700	1	16	1	Cover—Top
78-0720	3	22	1	Pulley
78-0730	3	36	1	Pulley—Blower
78-0750	3	12	1	Arm
78-5410	4	11	1	Shaft—Blower
78-5450	3	41	1	Shield
78-5560	4	9	2	Bracket—Mounting
78-6520	4	7	1	Wa—Baffle
78-6530	4	22	1	Deflector—Blower
78-6570	1	11	1	Latch—Top
78-6580	1	14	1	Screen—Canister
78-7830	3	46	1	Plate
78-9120	3	40	1	Shield—Pulley
78-9280	1	13	1	Bracket
78-9690	3	3	1	Bracket
78-9760	2	5	1	Shield—Heat
78-9930	2	13	1	Bracket—Support
79-0010	3	44	1	Bracket—Angle
79-0020	3	1	1	Spring—Extension
79-0100	1	10	1	Tie—Wire
79-0130	1	12	1	Canister
79-0350	3	4	2	Decal—Danger
79-0360	3	25	1	Decal—Danger
79-0410	1	8	1	ASM—Seal
79-0470	1	6	13	Rivet—Pop
79-0900	4	3	1	Adapter
79-0920	1	9	1	Hose—Flexible
79-1880	3	26	1	Strip—Wear
79-1961	4	4	1	Impeller
79-3970	2	17	1	Decal—Danger
79-4040	5	6	1	Template—Mounting
82-5510	4	10	1	Decal—Warning
92-7084	3	14	1	Pulley—Idler

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–7099	3	19	1	Pulley–Idler
93–1122	5	14	1	Decal–Danger
93–1635	3	5	1	ASM–Belt Cover/Decal
93–1636	3	27	1	ASM–Blower/Decal
93–1637	4	5	1	ASM–Mtg Plate/Decal
93–1638	2	18	1	ASM–Support/Decal
94–6208	2	7	1	Bagger Mount ASM
94–6291	3	2	1	Bracket ASM
94–6293	3	49	1	Plate–Support
302–26	3	13	1	Fitting–Grease
321–3	3	35	4	Screw–HH
321–3	4	19	14	Screw–HH
322–2	2	6	4	Screw–HH
322–3	1	15	4	Screw–HH
322–3	4	23	10	Screw–HH
322–5	3	23	1	Screw–HH
322–9	3	51	2	Screw–HH
323–7	2	2	2	Screw–HH
323–9	1	5	2	Screw–HH
323–9	3	16	2	Screw–HH
323–11	2	19	2	Screw
323–11	3	18	2	Screw
323–44	2	14	2	Screw–HH
325–4	2	10	1	Screw–HH
325–17	2	15	1	Screw–HH
327–7	3	20	1	Screw–HH
3217–6	3	53	1	Nut–Hex
3217–7	1	3	4	Nut–Hex
3217–7	2	1	8	Nut–Hex
3218–12	3	38	2	Nut–Jam
3218–12	4	17	1	Nut–Jam
3230–1	4	24	5	Bolt–CARR
3230–23	3	45	1	Bolt–CARR
3231–25	3	43	2	Screw–CARR
3253–3	3	34	4	Washer–Lock
3253–3	4	20	4	Washer–Lock
3256–23	1	1	4	Washer–Flat
3256–23	2	8	4	Washer–Flat
3256–23	3	6	2	Washer–Flat
3256–23	4	25	2	Washer–Flat
3256–24	3	15	4	Washer–Flat
3257–40	4	12	1	Key–Woodruff
3269–13	4	27	4	Rivet–Pop
3296–23	2	11	2	Nut–Lock
3296–29	1	2	4	Nut–Lock
3296–29	2	9	4	Nut–Lock
3296–29	3	7	2	Nut–Lock
3296–29	4	8	11	Nut–Lock
3296–39	3	9	5	Nut–Lock
3296–42	3	48	2	Nut–Lock
3296–42	4	21	8	Nut–Lock
3296–44	2	16	2	Nut–Lock

[illegible]

[illegible]