



Z Master
52" Bagger
For Z-222 Tractor

Model No. 79433 – 790001 & UP

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Canister Assembly	1	Blower Housing Assembly	4
Canister Support Assembly	2	Note:	
Blower Pulley And Idler Arm Assembly	3		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
..			

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

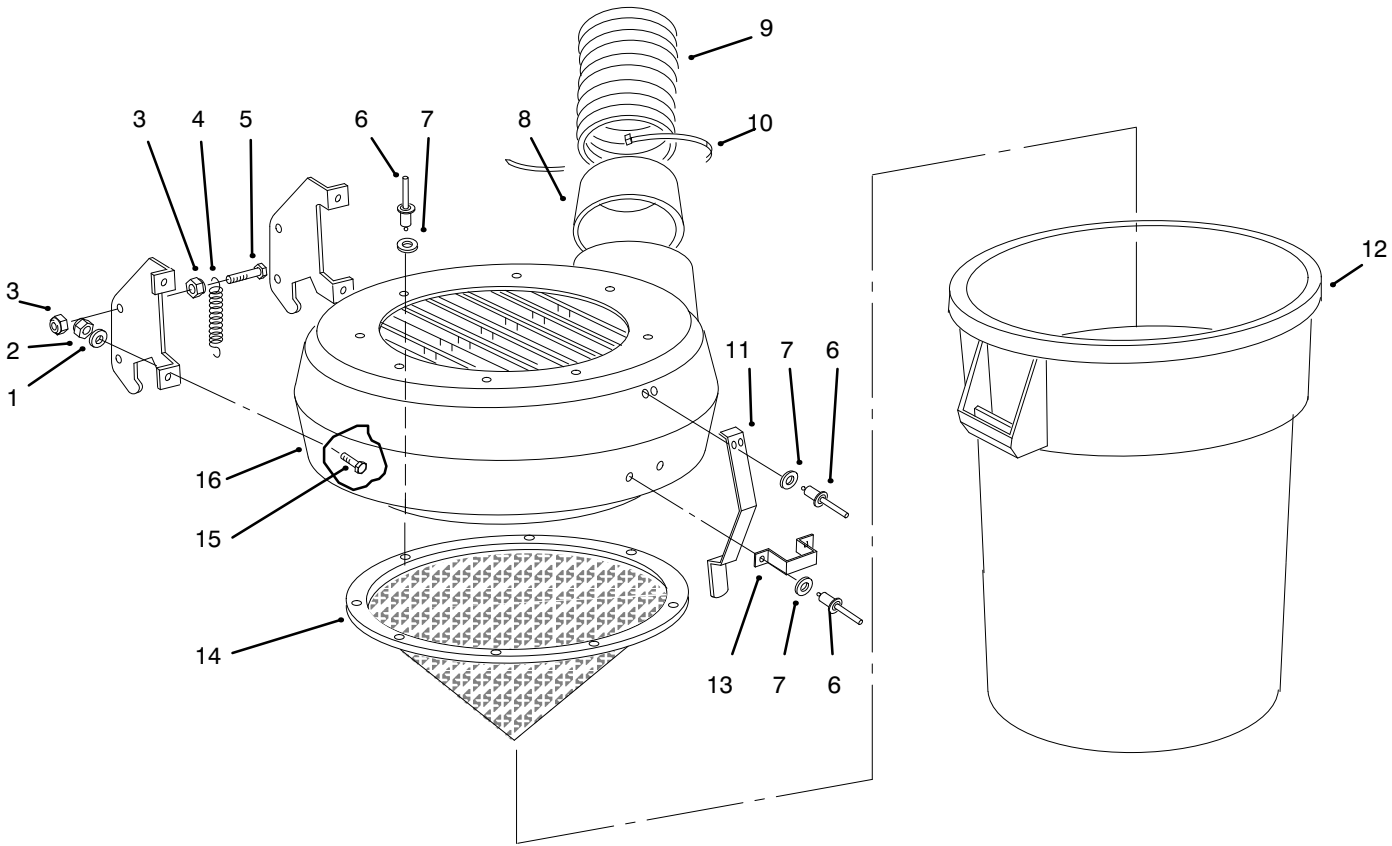

Sheet No.: 2

Canister Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3256-23	4	Washer-Flat				
2	3296-29	4	Nut-Lock				
3	3217-7	4	Nut-Hex				
4	100071	2	Spring-Extension				
5	323-9	2	Screw-HH				
6	79-0470	13	Rivet-Pop				
7	9202704	13	Washer				
8	79-0410	1	ASM-Seal				
9	79-0920	1	Hose-Flexible				
10	79-0100	1	Tie-Wire				
11	78-6570	1	Latch-Top				
12	79-0130	1	Canister				
13	78-9280	1	Bracket				
14	78-6580	1	Screen-Canister				
15	322-3	4	Screw-HH				
16	78-0700	1	Cover-Top				

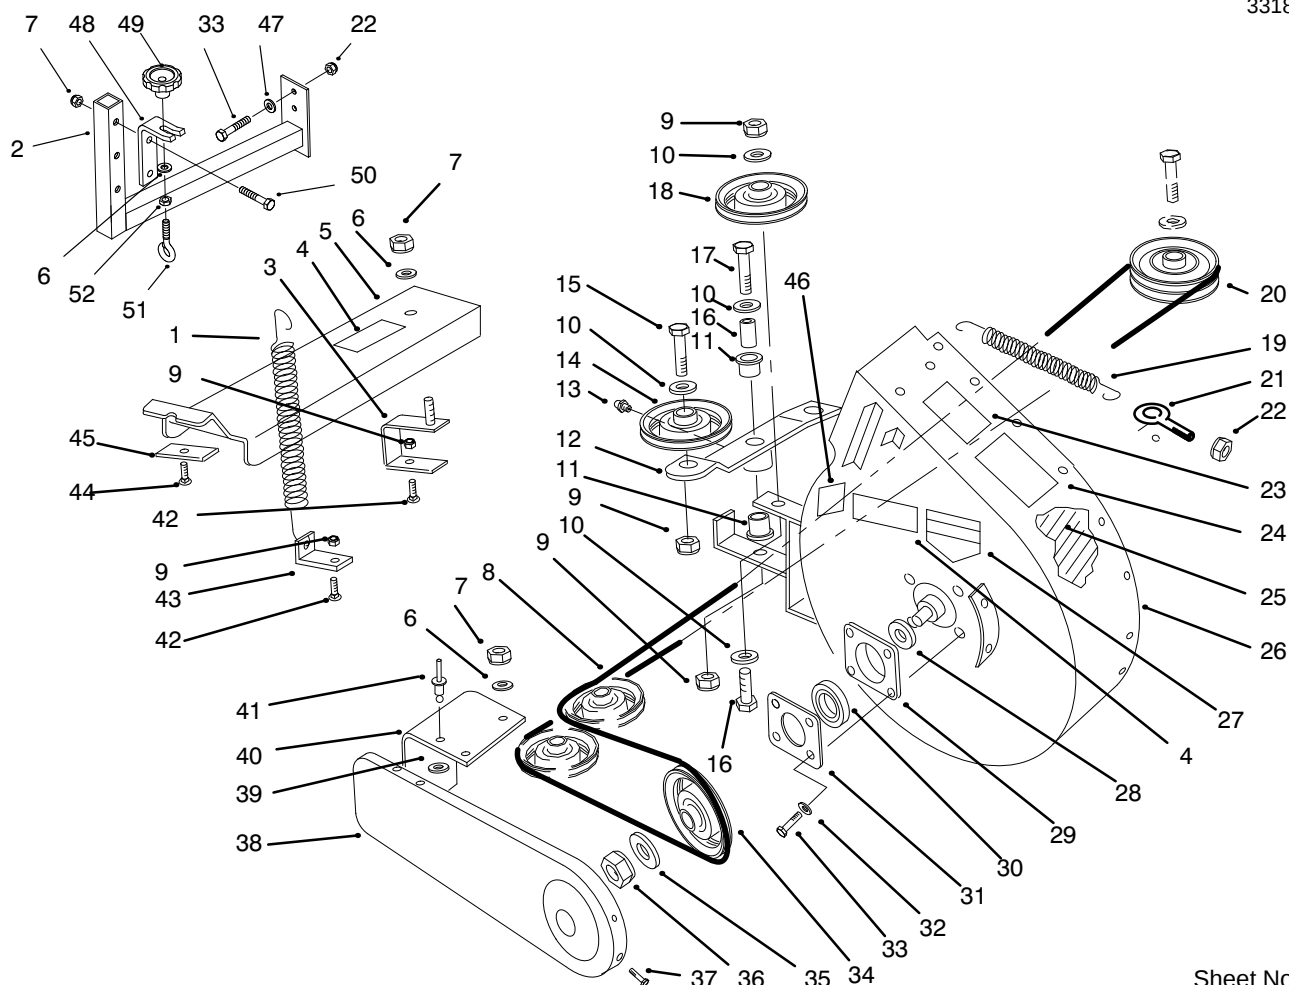 


Sheet No.: 4

Blower Pulley And Idler Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	79-0020	1	Spring-Extension
2	94-6291	1	Bracket ASM
3	79-1220	1	Bracket-Shield
4	79-0350	2	Decal-Danger
5	79-1110	1	Cover-Belt
6	3256-23	3	Washer-Flat
7	3296-29	4	Nut-Lock
8	79-1830	1	Belt-V
9	3296-39	5	Nut-Lock
10	3256-24	4	Washer-Flat
11	109859	2	Bushing
12	78-0750	1	Arm
13	302-26	1	Fitting-Grease
14	92-7084	1	Pulley-Idler
15	323-9	2	Screw-HH
16	114511	1	Spacer
17	323-11	1	Screw
18	92-7099	1	Pulley-Idler
19	6533	1	Spring-Extension
20	94-6273	1	Blower Pulley ASM
21	102555	1	Eyebolt
22	3296-42	3	Nut-Lock
23	79-0360	1	Decal-Danger
24	92-2511	1	Decal-Warning
25	79-1880	1	Strip-Wear
26	94-9698	1	ASM-Blower/Decal

Ref. No.	Part No.	Qty.	Description
27	93-1122	1	Decal-Danger
28	63-9710	1	Spacer
29	37-6730	1	Cup-Bearing
30	38-7820	1	Bearing-Ball
31	63-9700	1	Plate-Cover
32	3253-3	4	Washer-Lock
33	321-3	6	Screw-HH
34	78-0730	1	Pulley-Blower
35	9202604	1	Washer
36	3218-12	1	Nut-Jam
37	9266934	5	Screw-HWHTF
38	78-9120	1	Shield-Pulley
39	9202704	3	Washer
40	78-5450	1	Shield
41	114439	3	Rivet-Pop
42	322-3	1	Screw-HH
43	2534	1	Clip-Spring
44	3230-23	1	Bolt-CARR
45	78-7830	1	Plate
46	44-3216	1	Decal
47	3253-3	2	Washer-Lock
48	94-6293	1	Plate-Support
49	19-4050	1	Knob
50	322-41	2	Screw
51	55-9420	1	Bolt-Eye
52	3217-6	1	Nut

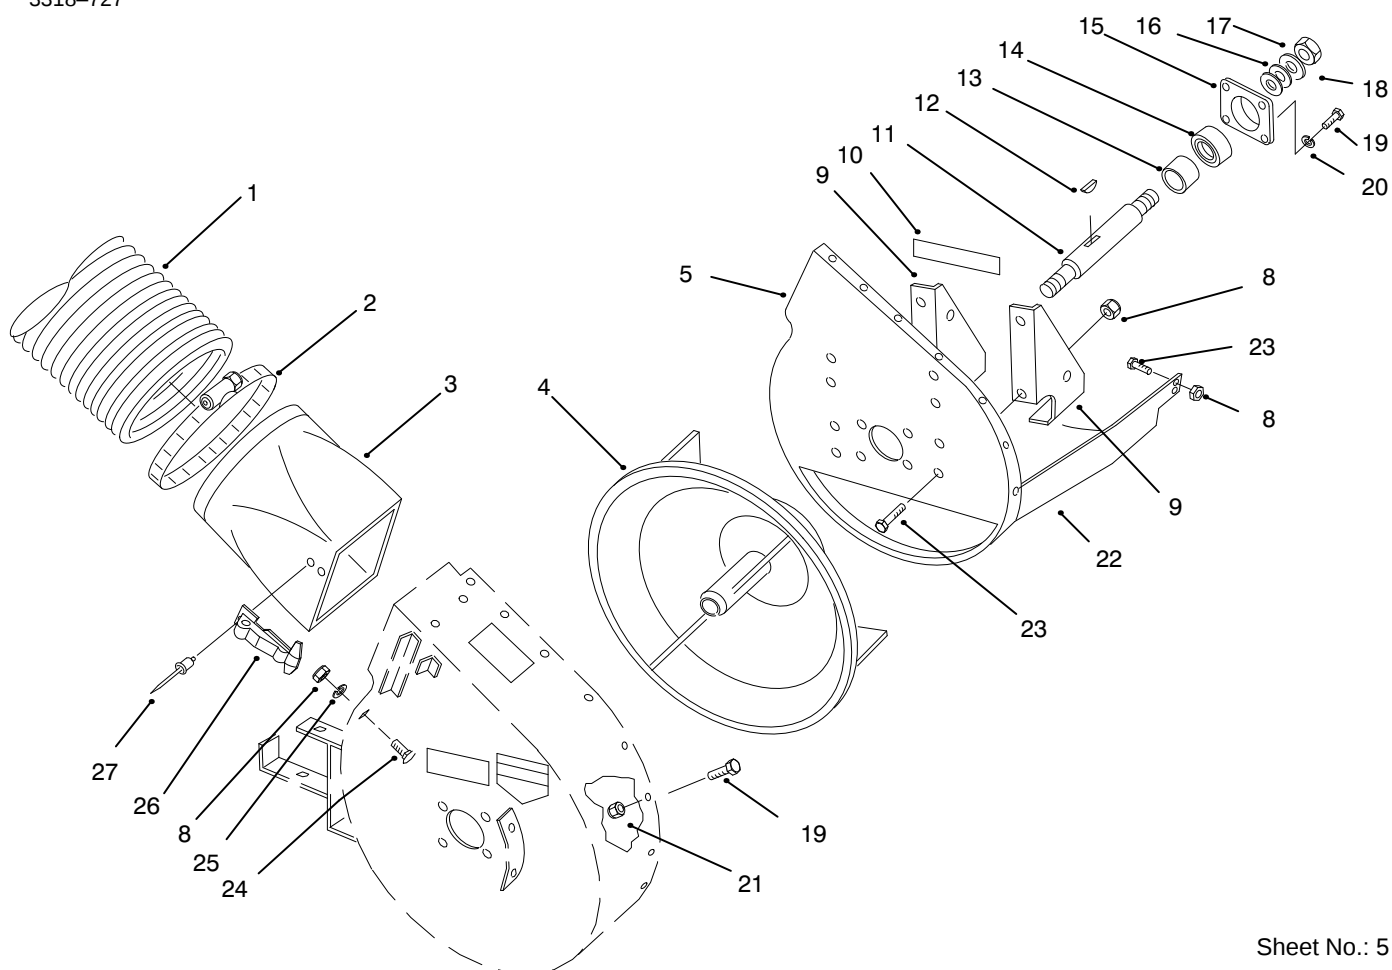 

Sheet No.: 5

Blower Housing Assembly

Ref. No.	Part No.	Qty.	Description
2	102528	1	Clamp–Worm Gear
3	79–0900	1	Adapter
4	79–1961	1	Impeller
5	94–9699	1	ASM–Mtg Plate/Decal
8	3296–29	12	Nut–Lock
9	78–5560	2	Bracket–Mounting
10	82–5510	1	Decal–Warning
11	78–5410	1	Shaft–Blower
12	3257–40	1	Key–Woodruff
13	7989	1	Spacer
14	38–7820	1	Bearing–Ball
15	37–6730	1	Cup–Bearing
16	9202154	2	Washer–Flat
17	3218–12	1	Nut–Jam
18	9202604	1	Washer
19	321–3	14	Screw–HH
20	3253–3	4	Washer–Lock
21	3296–42	10	Nut–Hex
22	79–3520	1	Deflector–Blower
23	322–3	10	Screw–HH
24	3230–1	5	Bolt–CARR
25	3256–23	5	Washer–Flat
26	117344	2	Handle–Latch
27	3269–13	4	Rivet–Pop

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
2534	3	43	1	Clip—Spring
6533	3	19	1	Spring—Extension
7989	4	13	1	Spacer
100071	1	4	2	Spring—Extention
102528	4	2	1	Clamp—Wormgear
102555	3	21	1	Eyebolt
109859	3	11	2	Bushing—Flg
114439	3	41	3	Rivet—Pop
114511	3	16	1	Spacer
117344	4	26	2	Handle—Latch
19-4050	3	49	1	Knob
9202154	4	16	2	Washer—Flat
9202604	3	35	2	Washer—Flt
9202604	4	18	1	Washer—Flt
9202704	1	7	13	Washer—Flt
9202704	3	39	3	Washer—Flt
9266934	3	37	5	Screw—HWHTF
9335064	2	12	1	Hairpin
37-6730	3	29	1	Cup—Bearing
37-6730	4	15	1	Cup—Bearing
38-7820	3	30	2	Bearing—Ball
38-7820	4	14	1	Bearing—Ball
44-3216	3	46	1	Decal
55-9420	3	50	2	Eye Bolt
63-9700	3	31	1	Plate—Cover
63-9710	3	28	1	Spacer—Brg
70-7045	5	6	1	Card—Registration
78-0610	2	3	1	Bracket—LH
78-0620	2	4	1	Bracket—RH
78-0700	1	16	1	Cover—Top
78-0730	3	34	1	Pulley—Blower
78-0750	3	12	1	5a—Arm
78-5410	4	11	1	Shaft—Blower
78-5450	3	40	1	Shield
78-5560	4	9	2	Bracket—Mounting
78-6570	1	11	1	Latch—Top
78-6580	1	14	1	Screen—Canister
78-7830	3	45	1	Plate
78-9120	3	38	1	Shield—Pulley
78-9280	1	13	1	Bracket
78-9760	2	5	1	Shield—Heat
78-9930	2	13	1	Bracket—Support
79-0020	3	1	1	Spring—Extension
79-0100	1	10	1	Tie—Wire
79-0130	1	12	1	Canister
79-0350	3	4	2	Decal—Danger
79-0360	3	23	1	Decal—Danger
79-0410	1	8	1	ASM—Seal
79-0470	1	6	13	Rivet—Pop
79-0900	4	3	1	Adapter
79-0920	1	9	1	Hose—Flexible
79-1061	3	26	1	Wa—Blower
79-1110	3	5	1	Cover—Belt
79-1220	3	3	1	Bracket—Shield
79-1830	3	8	1	Belt—V
79-1880	3	25	1	Strip—Wear
79-1961	4	4	1	Wa—Impeller
79-2990	5	4	1	Tin Clip
79-3520	4	22	1	Deflector—Blower
79-3970	2	17	1	Decal—Danger
82-5510	4	10	1	Decal—Warning
92-2511	3	24	1	Decal—Warning

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-7084	3	14	1	Pulley-Idler
92-7099	3	18	1	Pulley-Idler
93-1122	3	27	1	Decal-Danger
93-1638	2	18	1	ASM-Support/Decal
94-6208	2	7	1	Bagger Mount ASM
94-6273	3	20	1	Blower Pulley ASM
94-6291	3	2	1	Bracket ASM
94-6293	3	48	1	Plate-Support
94-9698	3	26	1	ASM-Blower/Decal
94-9699	4	5	1	ASM-Mtg Plate/Decal
302-26	3	13	1	Fitting-Grease
321-3	3	33	6	Screw-HH
321-3	4	19	14	Screw-HH
322-2	2	6	4	Screw-HH
322-3	1	15	4	Screw-HH
322-3	3	42	1	Screw-HH
322-3	4	23	13	Screw-HH
322-9	3	50	2	Screw-HH
323-7	2	2	2	Screw-HH
323-9	1	5	2	Screw-HH
323-9	3	15	2	Screw-HH
323-11	2	19	2	Screw
323-11	3	17	1	Screw
323-44	2	14	2	Screw-HH
325-4	2	10	1	Screw-HH
325-17	2	15	1	Screw-HH
3217-6	3	52	1	Nut-Hex
3217-7	1	3	4	Nut-Hex
3217-7	2	1	8	Nut-Hex
3218-12	3	36	1	Nut-Jam
3218-12	4	17	1	Nut-Jam
3230-1	4	24	5	Bolt-CARR
3230-23	3	44	1	Bolt-CARR
3253-3	3	32	4	Washer-Lock
3253-3	3	47	2	Washer-Lock
3253-3	4	20	4	Washer-Lock
3256-23	1	1	6	Washer-Flat
3256-23	2	8	4	Washer-Flat
3256-23	3	6	2	Washer-Flat
3256-23	4	25	5	Washer-Flat
3256-24	3	10	4	Washer-Flat
3257-40	4	12	1	Key-Woodruff
3269-13	4	27	4	Rivet-Pop
3296-23	2	11	2	Nut-Lock
3296-29	1	2	6	Nut-Lock
3296-29	2	9	4	Nut-Lock
3296-29	3	7	2	Nut-Lock
3296-29	4	8	12	Nut-Lock
3296-39	3	9	5	Nut-Lock
3296-42	3	22	14	Nut-Lock
3296-42	3	48	2	Nut-Lock
3296-44	2	16	2	Nut-Lock .375-16

[illegible]

8