


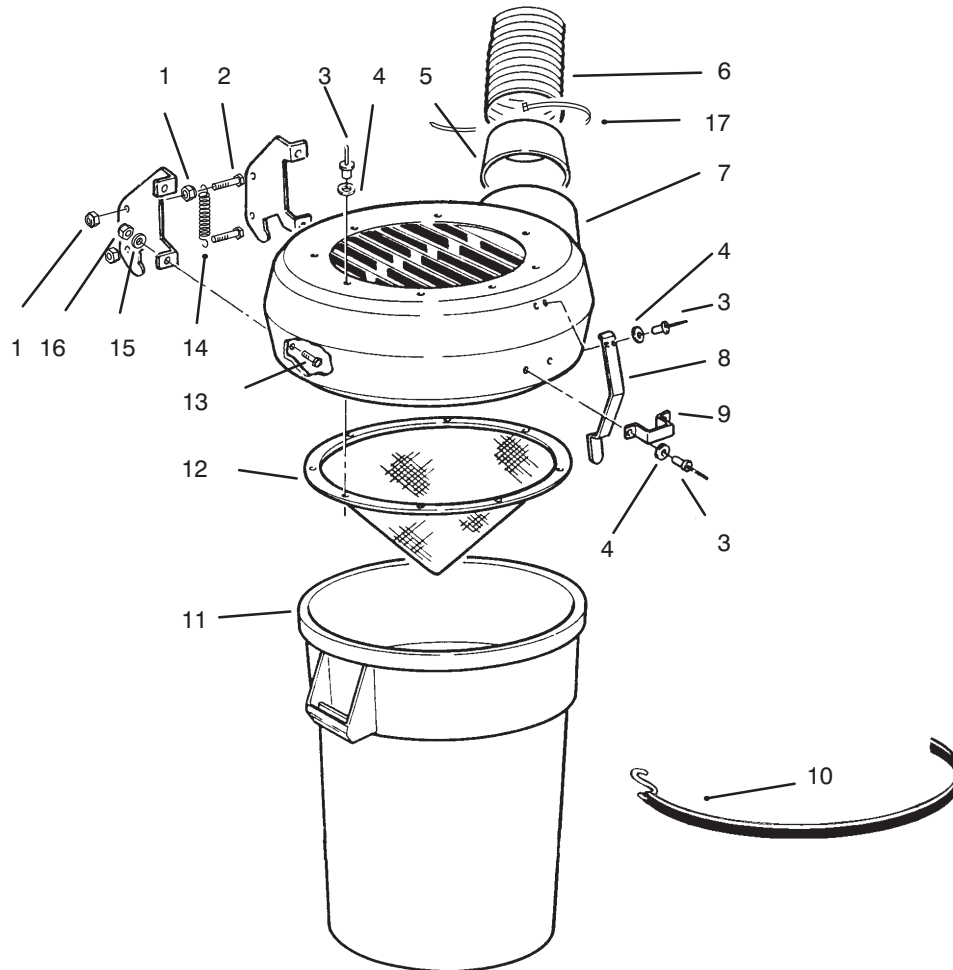

MODEL NO. 79402-690001 &amp; UP


**PARTS  
CATALOG**
**PROLINE 52" BAGGER**  
**8 Cu. Ft. ZTR**


C-2221

**CANISTER ASSEMBLY**

| Ref. No. | Part No. | Description           | No. Used | Ref. No. | Part No. | Description        | No. Used |
|----------|----------|-----------------------|----------|----------|----------|--------------------|----------|
| 1        | 3217-7   | Nut - Hex.            | 4        | 9        | 78-9280  | Bracket            | 1        |
| 2        | 323-9    | Screw - HH            | 2        | *10      |          | Strap - Bungie     | 1        |
| 3        | 79-0470  | Rivet - Pop           | 13       | 11       | 79-0130  | Canister           | 1        |
| 4        | 9202704  | Washer - Flat         | 13       | 12       | 78-6580  | Screen - Canister  | 1        |
| 5        | 79-0410  | Arm - Seal            | 1        | 13       | 322-3    | Screw - HH         | 4        |
| 6        | 79-0920  | Hose - Flexible       | 1        | 15       | 100071   | Spring - Extension | 2        |
| 7        | 78-0700  | Cover - Top, Canister | 1        | 16       | 3256-23  | Washer - Flat      | 4        |
| 8        | 78-6570  | Latch - Top           | 1        | 17       | 79-0100  | Tie - Wire         | 1        |

\*Obtain Locally

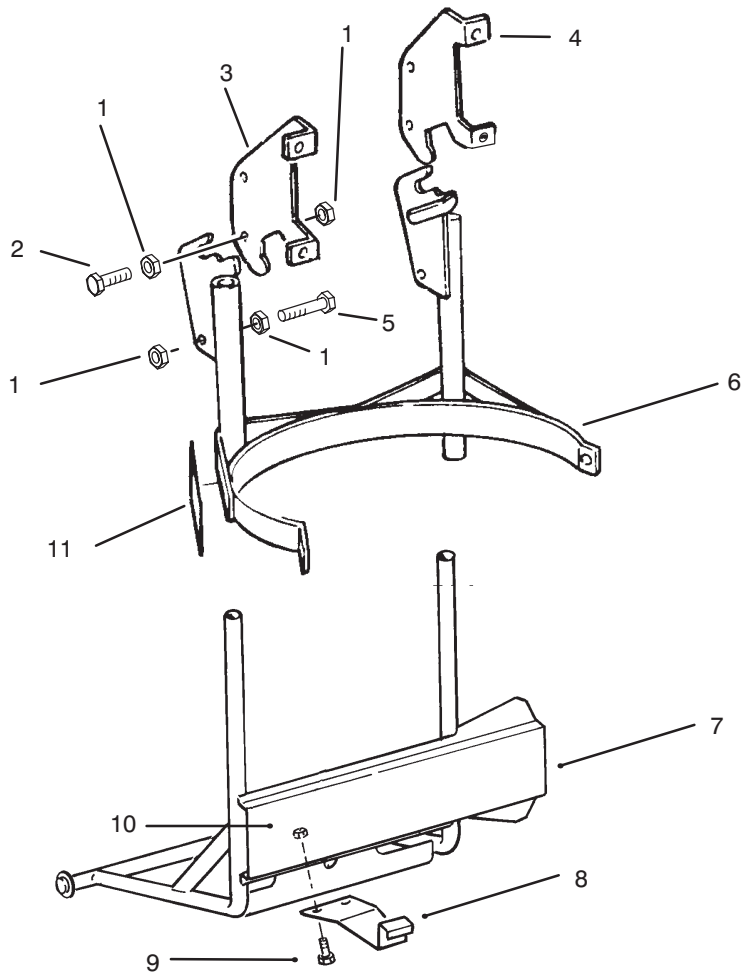


C-2222

# CANISTER SUPPORT ASSEMBLY

| Ref. No. | Part No. | Description                           | No. Used |
|----------|----------|---------------------------------------|----------|
| 1        | 3217-7   | Nut - Hex.                            | 8        |
| 3        | 323-7    | Screw - HH                            | 2        |
| 3        | 78-0610  | Bracket - Top, LH                     | 1        |
| 4        | 78-0620  | Bracket - Top, RH                     | 1        |
| 5        | 323-11   | Screw - HH                            | 2        |
| 6        | 93-1638  | Support - Canister<br>(Incl. Ref.#11) | 1        |

| Ref. No. | Part No. | Description                 | No. Used |
|----------|----------|-----------------------------|----------|
| 7        | 79-1860  | Bracket Quick Attach Asm    | 1        |
| 8        | 79-1840  | Bracket - Support, Canister | 1        |
| 9        | 323-6    | Screw - HH                  | 2        |
| 10       | 3296-39  | Nut - Lock                  | 2        |
| 11       | 79-3970  | Decal - Danger              | 1        |

\*Not Illustrated

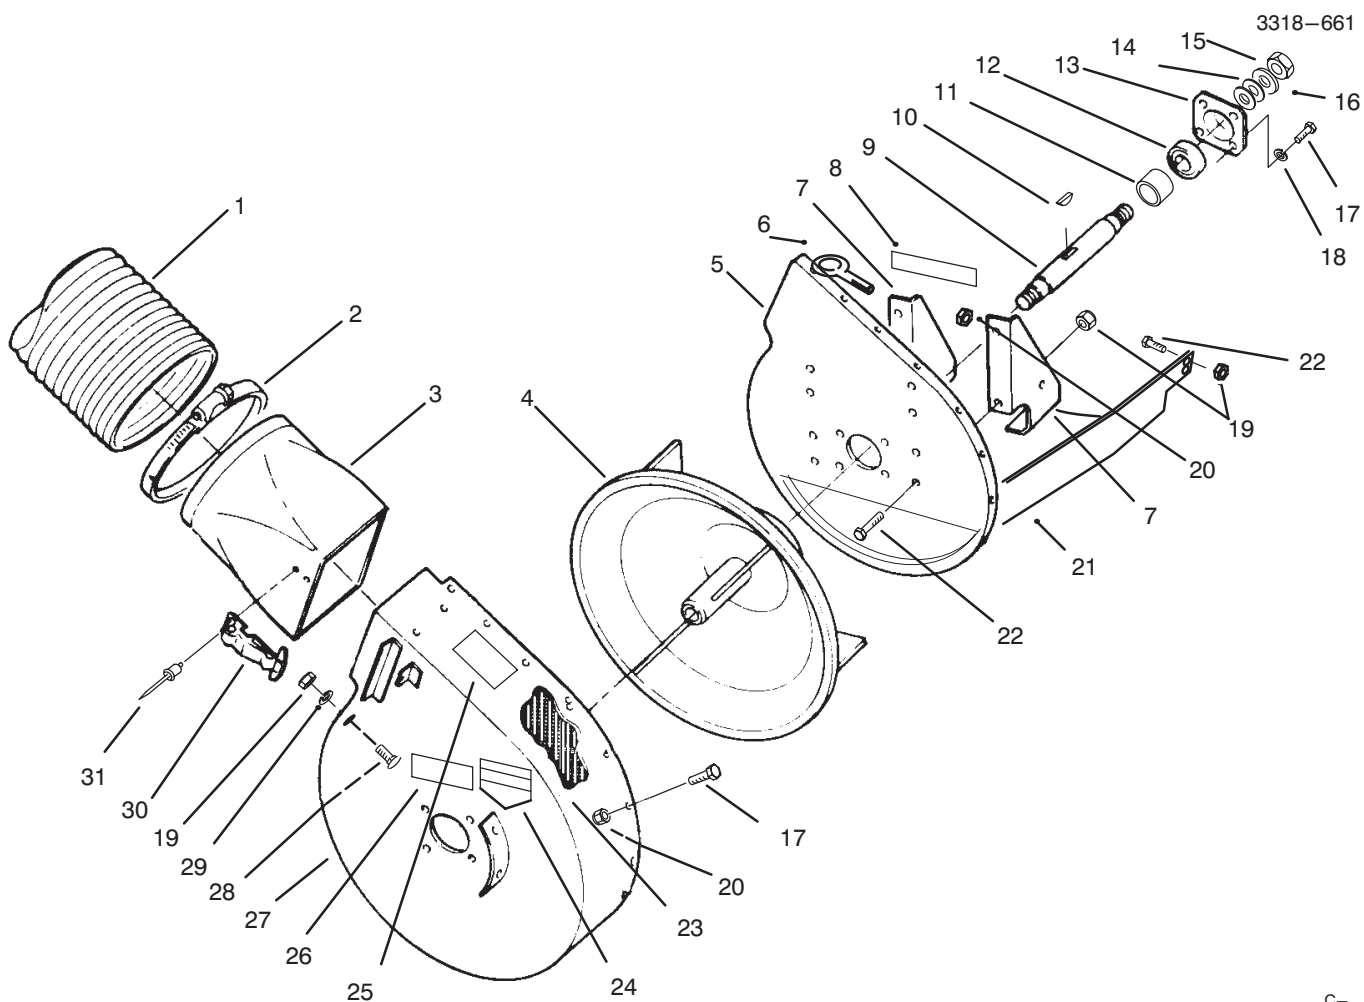


C-

## BLOWER HOUSING ASSEMBLY

| Ref. No. | Part No. | Description                        | No. Used |
|----------|----------|------------------------------------|----------|
| 1        |          | Hose – Flexible (Ref.)             |          |
| 2        | 102528   | Clamp                              | 1        |
| 3        | 79-0900  | Adapter                            | 1        |
| 4        | 79-1961  | Impeller                           | 1        |
| 5        | 94-9699  | Mount Plate Asm<br>(Incl. Ref. #8) | 1        |
| 6        | 102555   | Bolt – Eye                         | 1        |
| 7        | 78-5560  | Bracket – Mounting                 | 2        |
| 8        | 82-5510  | Decal – Warning                    | 1        |
| 9        | 78-5410  | Shaft – Blower                     | 1        |
| 10       | 3257-40  | Key – Woodruff                     | 1        |
| 12       | 38-7820  | Bearing – Ball                     | 1        |
| 13       | 37-6730  | Cup – Bearing                      | 1        |
| 11       | 7989     | Spacer                             | 1        |
| 14       | 9202154  | Washer – Flat                      | 2        |
| 15       | 3218-12  | Nut – Jam                          | 1        |
| 16       | 9202604  | Washer                             | 1        |

| Ref. No. | Part No. | Description                                      | No. Used |
|----------|----------|--------------------------------------------------|----------|
| 17       | 321-3    | Screw – HH                                       | 13       |
| 18       | 3253-3   | Washer – Lock                                    | 4        |
| 19       | 3296-29  | Nut – Lock                                       | 19       |
| 20       | 3296-42  | Nut – Lock                                       | 10       |
| 21       | 79-3520  | Deflector                                        | 1        |
| 22       | 322-3    | Screw – HH                                       | 13       |
| 23       | 79-1880  | Strip – Wear                                     | 1        |
| 24       | 79-0350  | Decal – Danger                                   | 1        |
| 25       | 79-0360  | Decal – Danger                                   | 1        |
| 26       | 93-1122  | Decal – Danger                                   | 1        |
| 27       | 94-9698  | Blower Housing Asm<br>(Incl. Ref. # 23, 25 & 26) | 1        |
| 28       | 3230-1   | Bolt – Carriage                                  | 4        |
| 29       | 3256-23  | Washer – Flat                                    | 3        |
| 30       | 117344   | Handle – Latch                                   | 2        |
| 31       | 3269-13  | Rivet – Pop                                      | 4        |

\*Not Illustrated

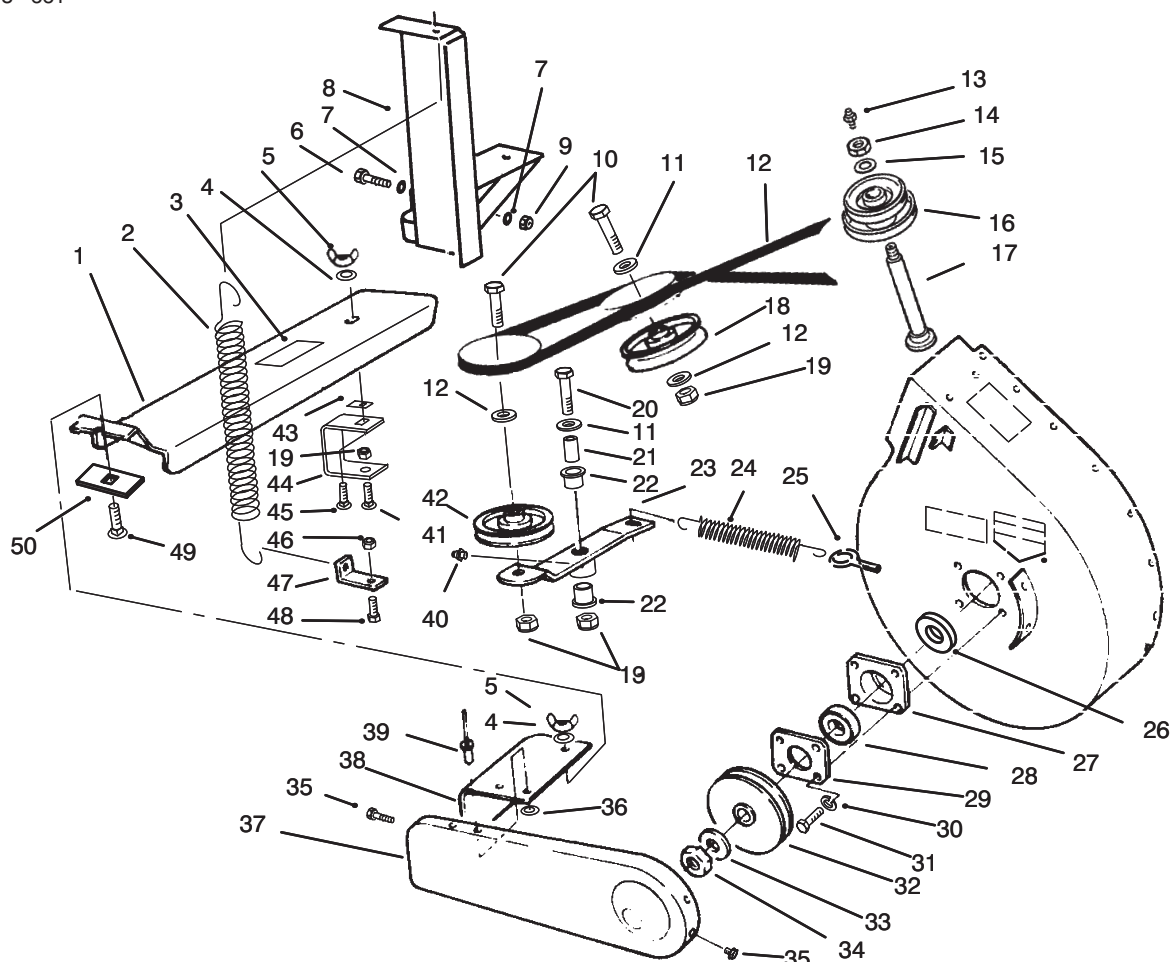


C-

## BLOWER PULLEYS & IDLER ARM ASSEMBLY

| Ref. No. | Part No. | Description                       | No. Used |
|----------|----------|-----------------------------------|----------|
| 1        | 94-9697  | Belt Cover Asm<br>(Incl. Ref.# 3) | 1        |
| 2        | 79-0020  | Spring - Extension                | 1        |
| 3        | 79-0350  | Decal - Danger                    | 1        |
| 4        | 3256-23  | Washer - Flat                     | 4        |
| 5        | 32103-23 | Nut - Wing                        | 2        |
| 6        | 321-31   | Screw - HH                        | 4        |
| 7        | 3256-22  | Washer - Flat                     | 8        |
| 8        | 79-1160  | Support - Spring                  | 1        |
| 9        | 3296-42  | Nut - Lock                        | 4        |
| 10       | 323-9    | Screw - HH                        | 2        |
| 11       | 3256-24  | Washer - Flat                     | 4        |
| 12       | 79-1830  | Belt-V                            | 1        |
| 13       |          | Fitting - Grease                  | 1        |

| Ref. No. | Part No. | Description        | No. Used |
|----------|----------|--------------------|----------|
| 14       |          | Nut                | 1        |
| 15       |          | Washer - Lock      | 1        |
| 16       | 79-0660  | Pulley - Blower    | 1        |
| 17       | 79-1910  | Shaft - Spindle    | 1        |
| 18       | 92-7099  | Pulley - Idler     | 1        |
| 19       | 3296-39  | Nut - Lock         | 3        |
| 20       | 323-11   | Screw - HH         | 1        |
| 21       | 114511   | Spacer             | 1        |
| 22       | 109859   | Bushing - Flange   | 2        |
| 23       | 78-0750  | Arm - Idler        | 1        |
| 24       | 6533     | Spring - Extension | 1        |
| 25       |          | Eyebolt (Ref.)     | 1        |
| 26       | 63-9710  | Spacer             | 1        |

\*Not Illustrated

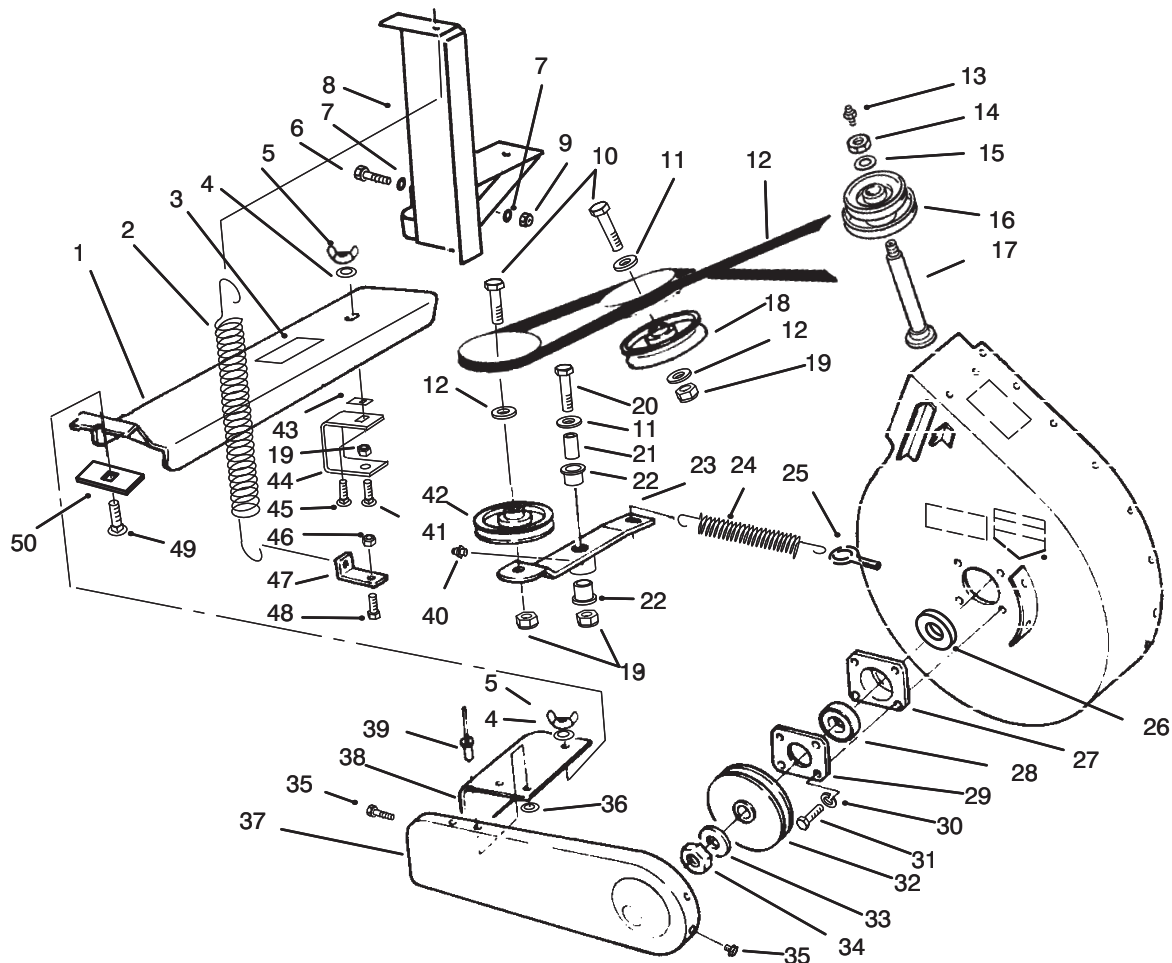

C-

## BLOWER PULLEYS & IDLER ARM ASSEMBLY (Continued)

| Ref. No. | Part No. | Description             | No. Used | Ref. No. | Part No. | Description      | No. Used |
|----------|----------|-------------------------|----------|----------|----------|------------------|----------|
| 27       | 37-6730  | Cup - Bearing           | 1        | 39       | 114439   | Rivet - Pop      | 3        |
| 28       | 38-7820  | Bearing - Ball          | 1        | 40       | 302-26   | Fitting Grease   | 1        |
| 29       | 63-9700  | Plate - Cover           | 1        | 41       | 323-4    | Screw - HH       | 1        |
| 30       | 3253-3   | Washer - Lock           | 4        | 42       | 92-7084  | Pulley - Idler   | 1        |
| 31       | 321-3    | Screw - HH              | 4        | 43       | 79-2990  | Nut              | 1        |
| 32       | 78-0730  | Pulley - Blower         | 1        | 44       | 79-1220  | Bracket - Shield | 1        |
| 33       | 9202604  | Washer                  | 1        | 45       | 3230-1   | Bolt - Carriage  | 1        |
| 34       | 3218-12  | Nut - Jam               | 1        | 46       | 3296-29  | Nut              | 1        |
| 35       | 9266934  | Screw - Hex. Washer Hd. | 4        | 47       | 2534     | Clip - Spring    | 1        |
| 36       | 9702704  | Washer                  | 3        | 48       | 322-3    | Screw - HH       | 1        |
| 37       | 78-5450  | Shield                  | 1        | 49       | 3230-23  | Bolt - Carriage  | 1        |
| 38       | 78-9120  | Shield - Pulley         | 1        | 50       | 78-7830  | Nut              | 1        |

\*Not Illustrated

# TORO PART NUMBER INDEX

| Part No. | Description                 | Pg. Ref.<br>No. No. Qty. | Part No. | Description        | Pg. Ref.<br>No. No. Qty. |
|----------|-----------------------------|--------------------------|----------|--------------------|--------------------------|
| 2534     | Clip – Spring               | 5 47 1                   | 79-1910  | Shaft – Spindle    | 4 17 1                   |
| 6533     | Spring – Extension          | 4 24 1                   | 79-1961  | Impeller           | 3 4 1                    |
| 7989     | Spacer                      | 3 11 1                   | 79-2990  | Nut                | 5 43 1                   |
| 100071   | Spring – Extension          | 1 15 2                   | 79-3520  | Deflector          | 3 21 1                   |
| 102528   | Clamp                       | 3 2 1                    | 79-3970  | Decal – Danger     | 2 11 1                   |
| 102555   | Bolt – Eye                  | 3 6 1                    | 82-5510  | Decal – Warning    | 3 8 1                    |
| 109859   | Bushing – Flange            | 4 22 2                   | 92-7084  | Pulley – Idler     | 5 42 1                   |
| 114439   | Rivet – Pop                 | 5 39 3                   | 92-7099  | Pulley – Idler     | 4 18 1                   |
| 114511   | Spacer                      | 4 21 1                   | 93-1122  | Decal – Danger     | 3 26 1                   |
| 117344   | Handle – Latch              | 3 30 2                   | 93-1638  | Support – Canister | 2 6 1                    |
| 9202154  | Washer – Flat               | 3 14 2                   | 94-9697  | Belt Cover Asm     | 4 1 1                    |
| 9202604  | Washer                      | 3 16 1                   | 94-9698  | Blower Housing Asm | 3 27 1                   |
| 9202604  | Washer                      | 5 33 1                   | 94-9699  | Mount Plate Asm    | 3 5 1                    |
| 9202704  | Washer – Flat               | 1 4 13                   | 302-26   | Fitting Grease     | 5 40 1                   |
| 9266934  | Screw – Hex. Washer Hd.     | 5 35 4                   | 321-3    | Screw – HH         | 3 17 13                  |
| 9702704  | Washer                      | 5 36 3                   | 321-3    | Screw – HH         | 5 31 4                   |
| 37-6730  | Cup – Bearing               | 3 13 1                   | 321-31   | Screw – HH         | 4 6 4                    |
| 37-6730  | Cup – Bearing               | 5 27 1                   | 322-3    | Screw – HH         | 1 13 4                   |
| 38-7820  | Bearing – Ball              | 3 12 1                   | 322-3    | Screw – HH         | 5 48 1                   |
| 38-7820  | Bearing – Ball              | 5 28 1                   | 322-3    | Screw – HH         | 3 22 13                  |
| 63-9700  | Plate – Cover               | 5 29 1                   | 323-4    | Screw – HH         | 5 41 1                   |
| 63-9710  | Spacer                      | 4 26 1                   | 323-6    | Screw – HH         | 2 9 2                    |
| 78-0610  | Bracket – Top, LH           | 2 3 1                    | 323-7    | Screw – HH         | 2 3 2                    |
| 78-0620  | Bracket – Top, RH           | 2 4 1                    | 323-9    | Screw – HH         | 1 2 2                    |
| 78-0700  | Cover – Top, Canister       | 1 7 1                    | 323-9    | Screw – HH         | 4 10 2                   |
| 78-0730  | Pulley – Blower             | 5 32 1                   | 323-11   | Screw              | 1 14 2                   |
| 78-0750  | Arm – Idler                 | 4 23 1                   | 323-11   | Screw – HH         | 2 5 2                    |
| 78-5410  | Shaft – Blower              | 3 9 1                    | 323-11   | Screw – HH         | 4 20 1                   |
| 78-5450  | Shield                      | 5 37 1                   | 3217-7   | Nut – Hex          | 1 1 4                    |
| 78-5560  | Bracket – Mounting          | 3 7 2                    | 3217-7   | Nut – Hex          | 2 1 8                    |
| 78-6570  | Latch – Top                 | 1 8 1                    | 3218-12  | Nut – Jam          | 3 15 1                   |
| 78-6580  | Screen – Canister           | 1 12 1                   | 3218-12  | Nut – Jam          | 5 34 1                   |
| 78-7830  | Nut                         | 5 50 1                   | 3230-1   | Bolt – Carriage    | 3 28 4                   |
| 78-7830  | Strap                       | 1 10 1                   | 3230-1   | Bolt – Carriage    | 5 45 1                   |
| 78-9120  | Shield – Pulley             | 5 38 1                   | 3230-23  | Bolt – Carriage    | 5 49 1                   |
| 78-9280  | Bracket                     | 1 9 1                    | 3253-3   | Washer – Lock      | 3 18 4                   |
| 79-0020  | Spring – Extension          | 4 2 1                    | 3253-3   | Washer – Lock      | 5 30 4                   |
| 79-0100  | Tie – Wire                  | 1 19 1                   | 3256-22  | Washer – Flat      | 4 7 8                    |
| 79-0130  | Canister                    | 1 11 1                   | 3256-23  | Washer – Flat      | 4 4 4                    |
| 79-0350  | Decal – Danger              | 4 3 1                    | 3256-23  | Washer – Flat      | 1 16 4                   |
| 79-0350  | Decal – Danger              | 3 24 1                   | 3256-23  | Washer – Flat      | 3 29 3                   |
| 79-0360  | Decal – Danger              | 3 25 1                   | 3256-24  | Washer – Flat      | 4 11 4                   |
| 79-0410  | Arm – Seal                  | 1 5 1                    | 3257-40  | Key – Woodruff     | 3 10 1                   |
| 79-0470  | Rivet – Pop                 | 1 3 13                   | 3269-13  | Rivet – Pop        | 3 31 4                   |
| 79-0660  | Pulley – Blower             | 4 16 1                   | 3296-29  | Nut                | 5 46 1                   |
| 79-0900  | Adapter                     | 3 3 1                    | 3296-29  | Nut – Lock         | 1 17 4                   |
| 79-0920  | Hose – Flexible             | 1 6 1                    | 3296-29  | Nut – Lock         | 3 19 19                  |
| 79-1160  | Support – Spring            | 4 8 1                    | 3296-39  | Nut – Lock         | 2 10 2                   |
| 79-1220  | Bracket – Shield            | 5 44 1                   | 3296-39  | Nut – Lock         | 4 19 3                   |
| 79-1830  | Belt-V                      | 4 12 1                   | 3296-42  | Nut – Lock         | 4 9 4                    |
| 79-1840  | Bracket – Support, Canister | 2 8 1                    | 3296-42  | Nut – Lock         | 3 20 10                  |
| 79-1860  | Bracket Quick Attach Asm    | 2 7 1                    | 32103-23 | Nut – Wing         | 4 5 2                    |
| 79-1880  | Strip – Wear                | 3 23 1                   |          |                    |                          |

\*Not Illustrated

[illegible]

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

## MAINTENANCE RECORD

[illegible]