



Form No. 3364-364 Rev B

Count on it.

Parts Catalog

66cm Heavy-Duty Rear Bagger Lawn Mower

Model No. 22203TE—Serial No. 312000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LPG: Liquid Propane Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Deck and Chute Assembly 4

Bag and Door Assembly 5

Handle Assembly 6

Gear Case and Pinion Assembly 7

Gear Case Assembly No. 116-0786 8

Engine and Fuel Tank Assembly 10

Blade Drive Assembly 11

 
Cutter Housing Assembly No. 107-4065 12

Rear Wheel Assembly 13

Wheel Assembly No. 112-8707 14

Front Wheel Assembly 15


Attachments and Accessories 16

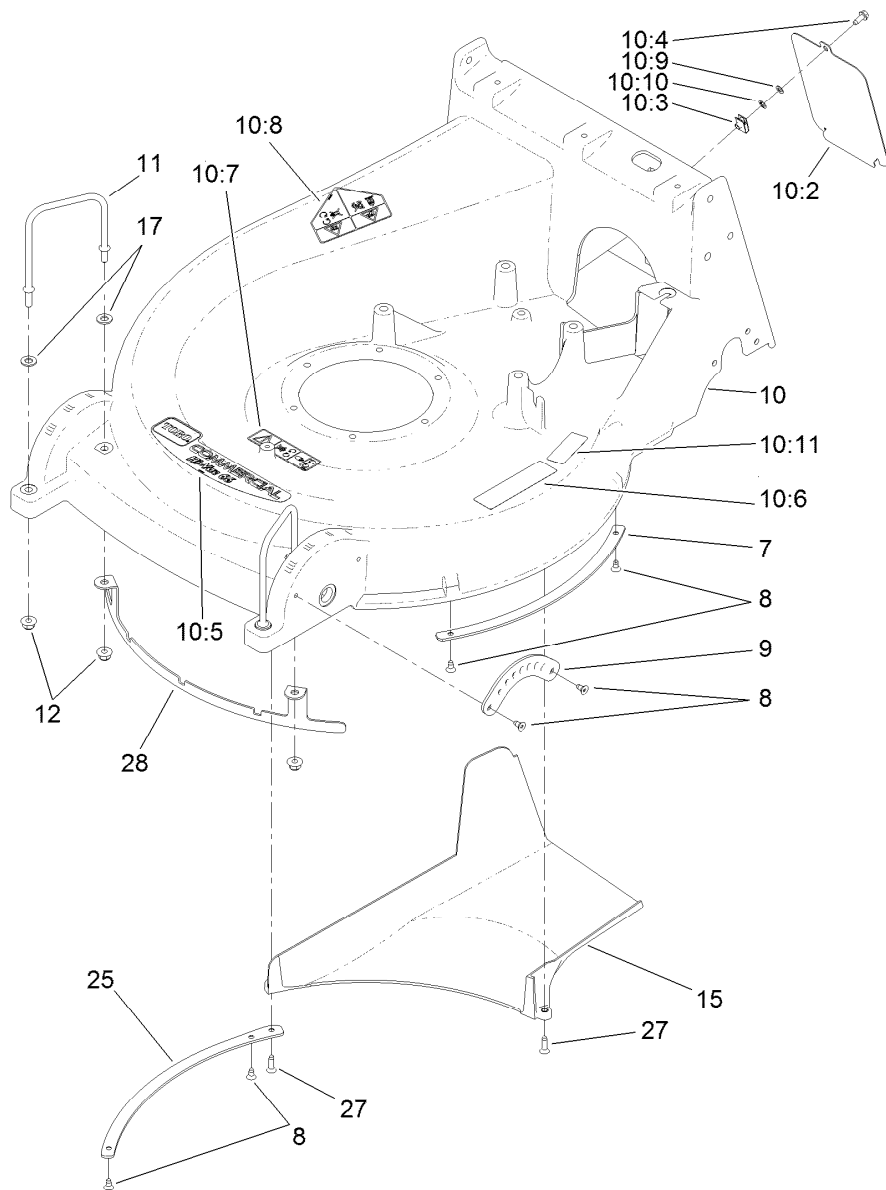

Deck and Chute Assembly


Ref.	Part Number	Qty.	Description
7	116-0059-03	1	Plate-Skid, 10 Gage
8	103-6145	8	Screw
9	103-6460	2	Quadrant-Front
10	115-4240	1	Deck ASM
10:2	116-0336	1	Cover-Access, Axle
10:3	107069	1	Clip
10:4	32144-10	1	Screw-HWH
10:5	112-8709	1	Decal
10:6	110-4978	1	Decal-Danger
10:7	112-9028	1	Decal-Cover Missing
10:8	112-8760	1	Decal-Danger

Ref.	Part Number	Qty.	Description
10:9	3256-60	1	Washer-Flat
10:10	106-8737	1	Nut-Retainer
10:11	121-1449	1	Decal, Block Warning
11	116-6944	2	Handle-Deck
12	104-8301	4	Nut-Flange, NI
15	116-1405	1	Plastic Chute Kit (W/Screws)
17	3256-24	4	Washer-Flat
25	116-1273-03	1	Plate-Skid
27	116-0606	2	Screw-Torx
28	116-6862-01	1	Guard-Front Blade

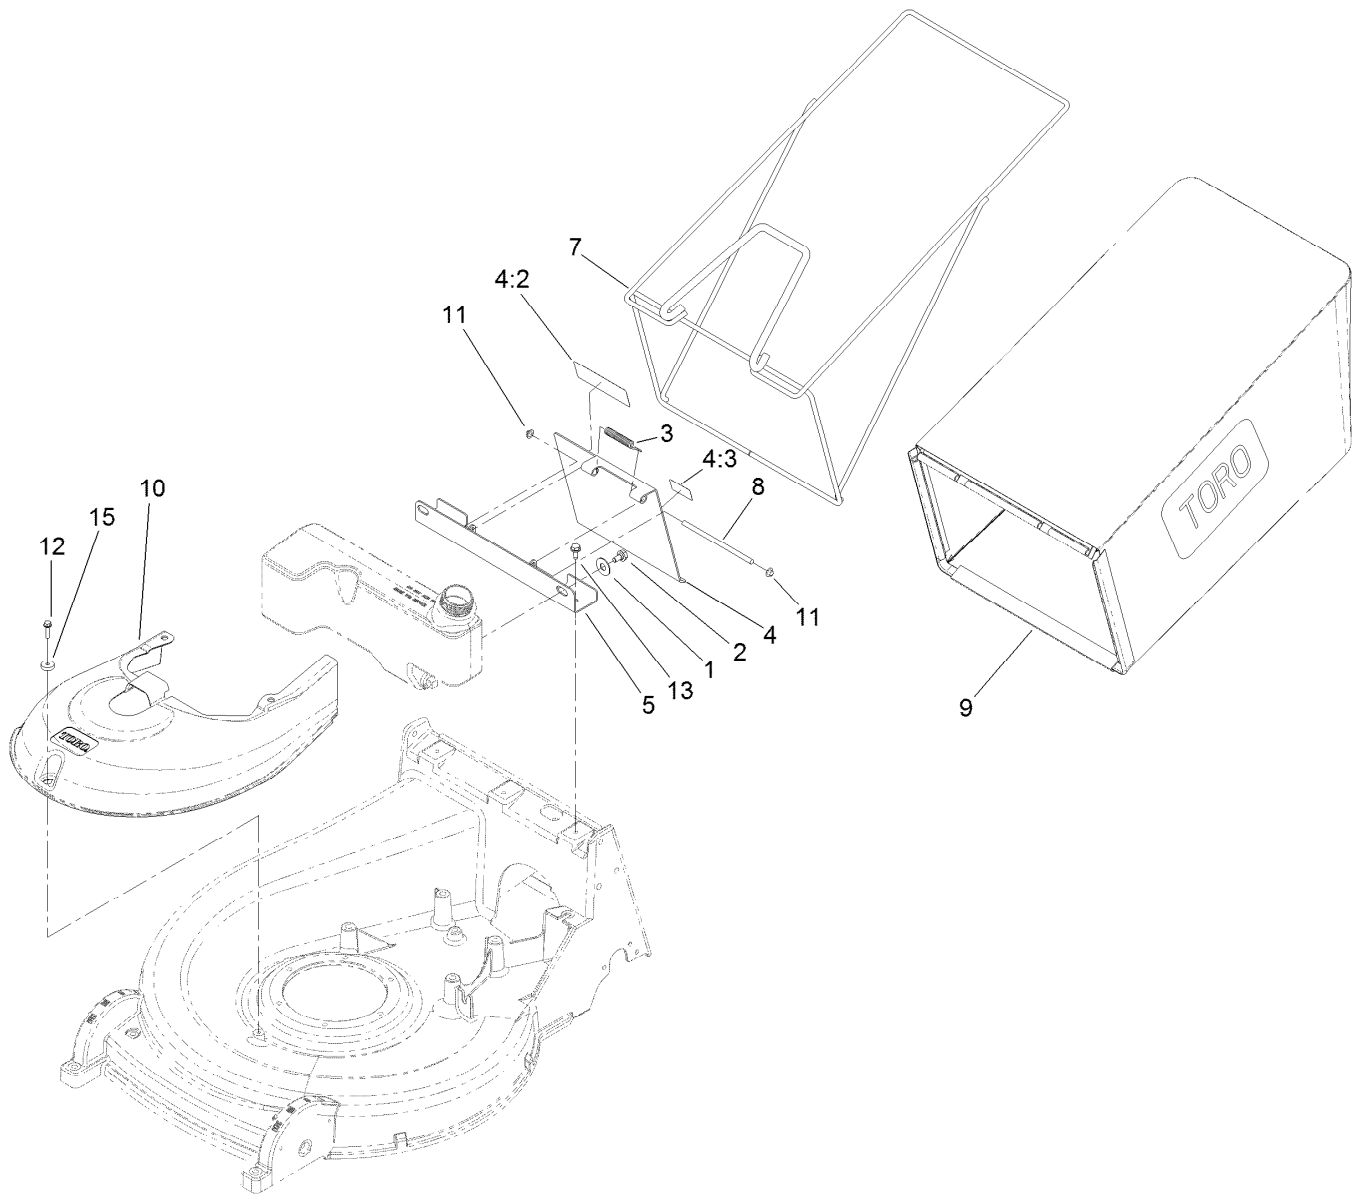 

Bag and Door Assembly


Ref.	Part Number	Qty.	Description
1	28-2450	2	Washer-Plastic
2	37-8771	2	Bolt-Shoulder
3	99-5293	1	Spring-Torsion
4	112-9741	1	Door ASM
4:2	110-4977	1	Decal-Danger
4:3	115-4207	1	Decal-Grease
5	103-8223-03	1	Bracket-Mount, Bag/Door
7	109-2445-03	1	Frame-Bag
8	109-2453	1	Rod-Pivot, Door
9	110-5029	1	Grass Bag ASM
10	114-3413	1	Cover-Spindle
11	32112-11	2	Nut-Push
12	32144-86	1	Screw-HWHTF
13	32144-70	3	Screw-HWHTF
15	1-323417	1	Washer

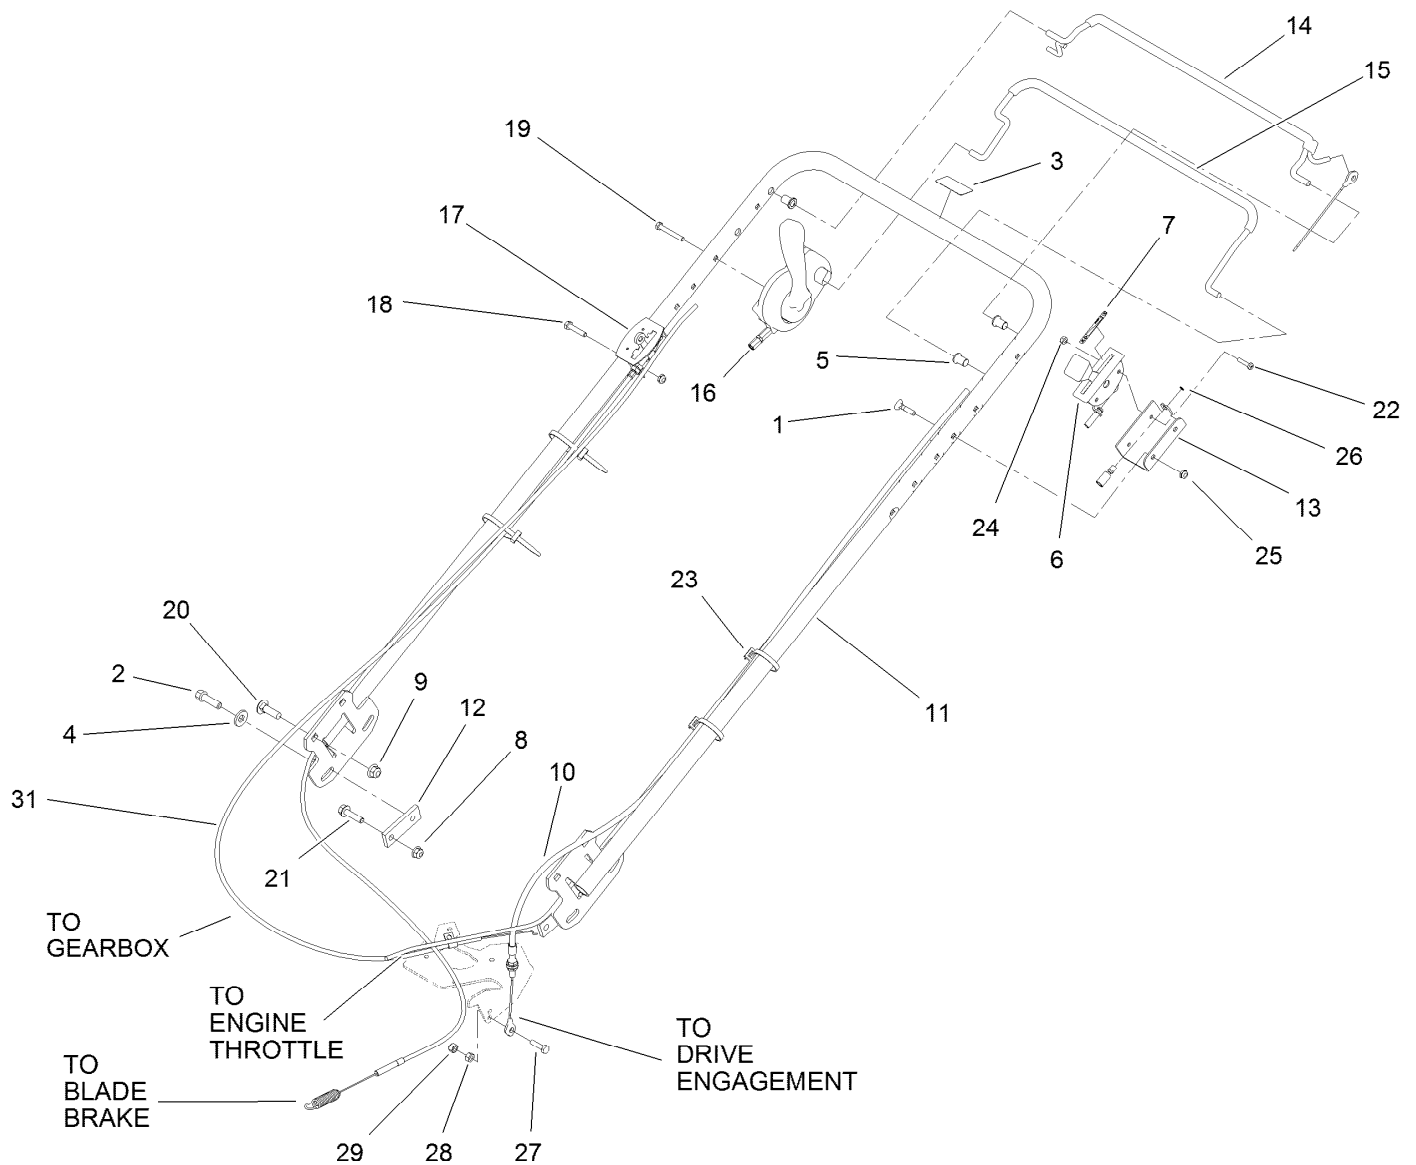 

Handle Assembly

Ref.	Part Number	Qty.	Description
1	109-8144	2	Bolt-Handle
2	95-1727	2	Screw-Taptite
3	98-4387	1	Decal-Protection, Ear
4	98-5975	2	Washer-Belleville
5	109-2713	3	Bushing
6	103-6123	1	Control-Throttle
7	103-6328	1	Decal-Throttle / Choke
8	104-8300	2	Nut-Flange, NI
9	104-8301	2	Nut-Flange, NI
10	109-2212	1	Cable-Traction
11	109-2441-03	1	Handle
12	109-2643-03	2	Nut-Handle
13	109-2821-03	1	Bracket-Control
14	116-0389	1	Traction Bail With Grip ASM
15	109-2826	1	Bail-BBC (With Grip)


Ref.	Part Number	Qty.	Description
16	116-1079	1	Control-BBC
17	116-0504	1	Control-Shift
18	321-8	2	Screw-HH
19	33113-045	1	Screw-HH
20	3231-25	2	Screw-CARR
21	3234-36	2	Screw-HHF
22	3250-27	2	Screw-PPH
23	3290-378	4	Tie-Cable
24	3296-2	2	Nut-Lock, NI
25	3296-56	2	Nut-Lock, NI
26	32151-86	1	E-Ring
27	321-6	1	Screw-HH
28	3217-5	1	Nut-Hex
29	3296-42	1	Nut-Lock, NI
31	109-4115	1	Cable-Shifter

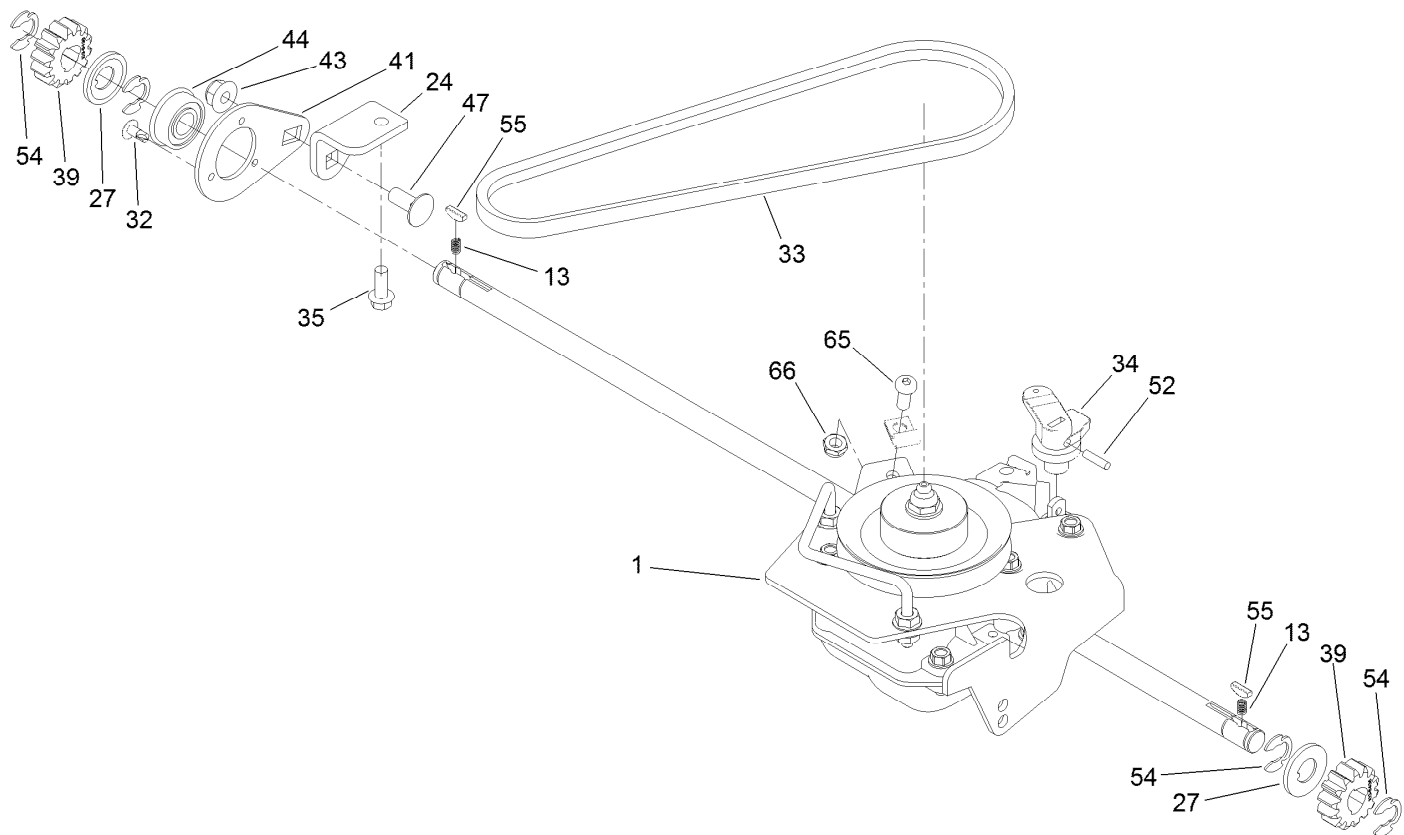 

Gear Case and Pinion Assembly

Ref.	Part Number	Qty.	Description
1	116-0786	1	Gear Case ASM
13	39-9650	2	Spring-Compression
24	116-0222	1	Bracket-Bearing, Plated
27	62-3830	2	Washer-Thrust, Outer
32	92-9665	3	Screw-TAP
33	103-6114	1	Belt-V, Traction
34	103-6138	1	Lever-Shift
35	32144-85	1	Screw-HWH
39	103-6436	2	Gear-Pinion


Ref.	Part Number	Qty.	Description
41	109-6612	1	Plate-Bearing
43	104-8300	1	Nut-Flange, NI
44	251-180	1	Bearing-Ball
47	3230-23	1	Screw-CARR
52	32121-99	1	Pin-Coil
54	32151-68	4	Ring-Retaining
55	612066	2	Key
65	3274-31	1	Screw-HSBH
66	3296-56	1	Nut-Lock, NI

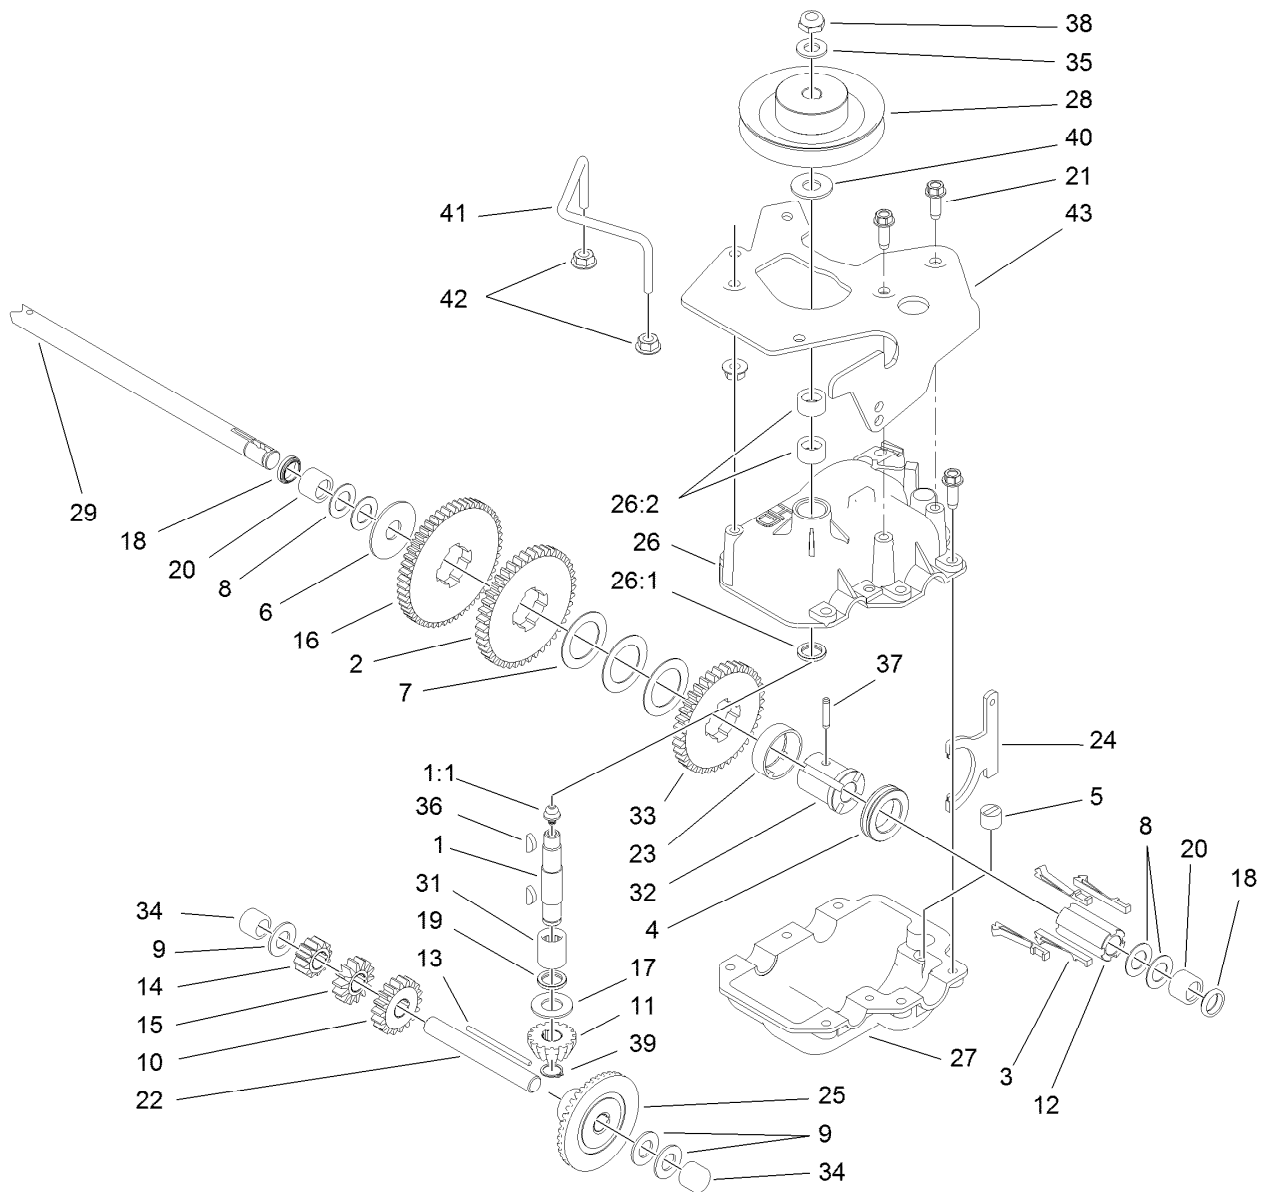 

Gear Case Assembly No. 116-0786

Ref.	Part Number	Qty.	Description
1	13-5149	1	Input Shaft ASM
1:1	302-63	1	Zerk
2	29-9271	1	Gear-42T
3	29-9330	4	Key-Shift
4	29-9340	1	Collar-Shift
5	29-9570	1	Bushing-Yoke
6	29-9690	1	Washer
7	36-4770	3	Washer
8	36-4780	4	Washer-Plain
9	36-4792	3	Washer-Thrust
10	39-6650	1	Gear-18T
11	39-6660	1	Pinion-Bevel
12	39-6720	1	Sleeve
13	39-7842	1	Key
14	46-3540	1	Gear-12T
15	46-3550	1	Gear-14T
16	46-3560	1	Gear
17	47-2910	1	Washer-Thrust
18	47-6730	2	Seal-Oil
19	47-7260	1	Seal


Ref.	Part Number	Qty.	Description
20	117-3500	2	Bearing-Caged Needle Roller
21	49-2040	9	Screw-HWHTF
22	53-7950	1	Shaft-Intermediate
23	55-8020	1	Retainer-Key
24	60-8870	1	Yoke-Shift
25	74-1760	1	Gear-Bevel
26	13-9739	1	Upper Gearcase ASM
26:1	47-7260	1	Seal
26:2	47-7270	2	Bearing-Needle
27	119-7863	1	Gearcase-Lower
28	103-6429	1	Sheave
29	103-6435	1	Shaft-Axle
31	103-9773	1	Bearing-Roller, Caged
32	109-2642	1	Sleeve-4 Dog
33	109-3130	1	Gear-38T
34	252-103	2	Bearing-Needle, Closed
35	3256-45	1	Washer-Flat
36	3257-1	2	Key-Woodruff
37	3285-19	1	Pin-Groove
38	3296-5	1	Nut-Lock

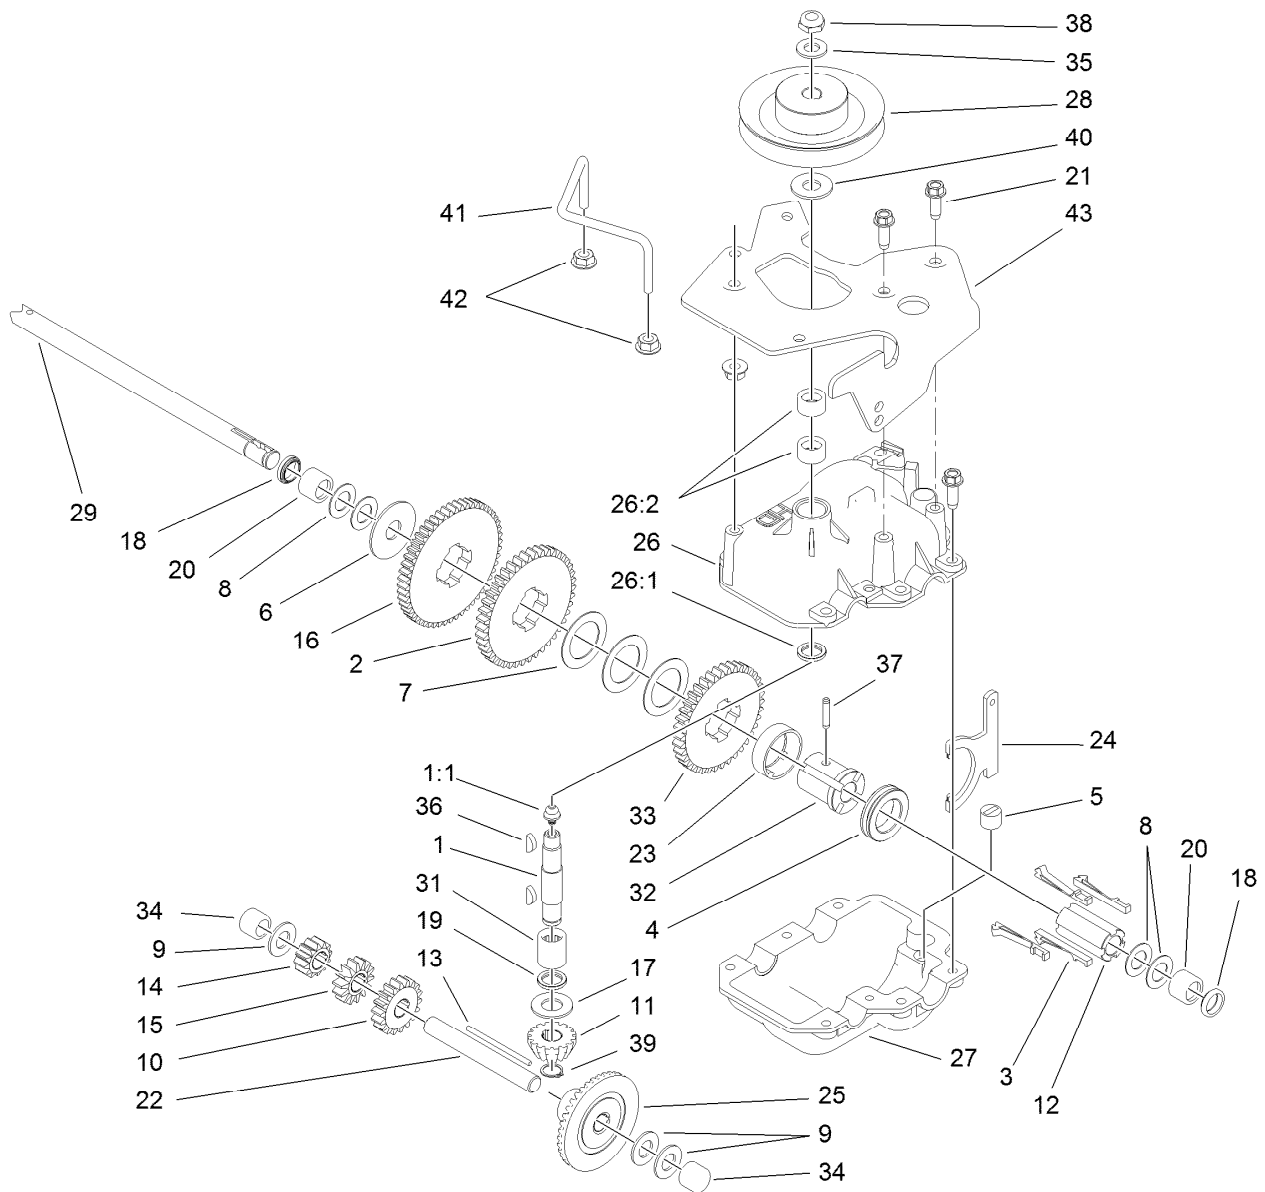 

Gear Case Assembly No. 116-0786 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
39	32151-57	1	Ring-Retaining
40	109-3614	1	Washer
41	103-8224	1	Guide-Belt


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
42	32128-33	4	Nut-HF
43	116-0339-03	1	Bracket-Guide, Belt

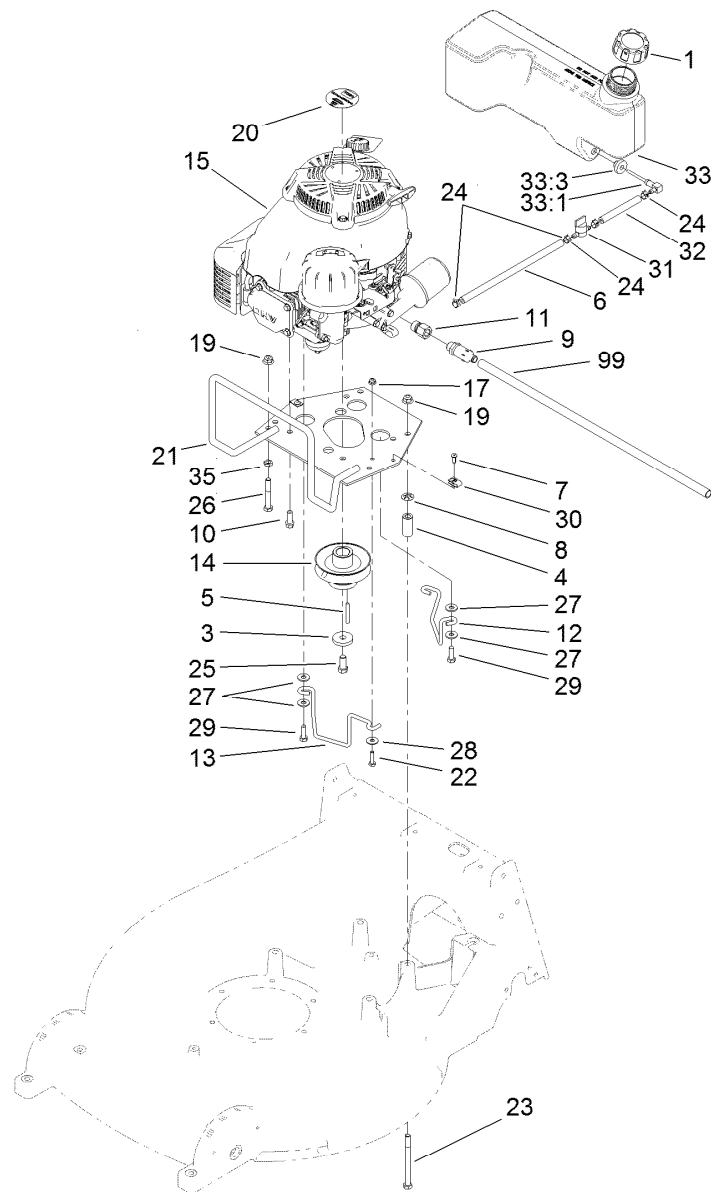 

Engine and Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
1	93-7198	1	Gas Cap ASM
3	1-543610	1	Washer-Clutch
4	116-1182	4	Spacer
5	7-0036	1	Key-Square
6	109-0294	1	Hose-Fuel
7	63-8590	2	Screw
8	78-7170	4	Ring-Retaining
9	92-6877	1	Valve-Drain, Oil
10	95-1726	4	Screw-Taptite
11	103-1966	1	Adapter
12	116-0860	1	Guide-Belt, Rear
13	116-0859	1	Guide-Belt, Front
14	116-0822	1	Sheave-Drive
15	117-5225	1	Engine-Kawasaki, Fj180V-Am54-M
17	104-7201	1	Nut-HF
19	104-8301	5	Nut-Flange, NI
20	110-0520	1	Decal


Ref.	Part Number	Qty.	Description
21	116-0972-03	1	Plate-Engine
22	321-6	1	Screw-HH
23	323-23	4	Screw-HH
24	2412-98	4	Clamp-Hose
25	3212-4	1	Screw-HH
26	323-12	1	Screw-HH
27	3256-3	6	Washer-Flat
28	3290-456	1	Washer-Belleville
29	33114-025	3	Screw-HH
30	107069	2	Clip
31	1-603770	1	Valve-Fuel
32	109-0295	1	Hose-Fuel
33	109-3851	1	Fuel Tank ASM
33:1	1-543277	1	Elbow-Tank, Fuel
33:3	104-7789	1	Bushing
35	3218-3	1	Nut-Jam
99	103-1964	1	Hose-Drain, Oil

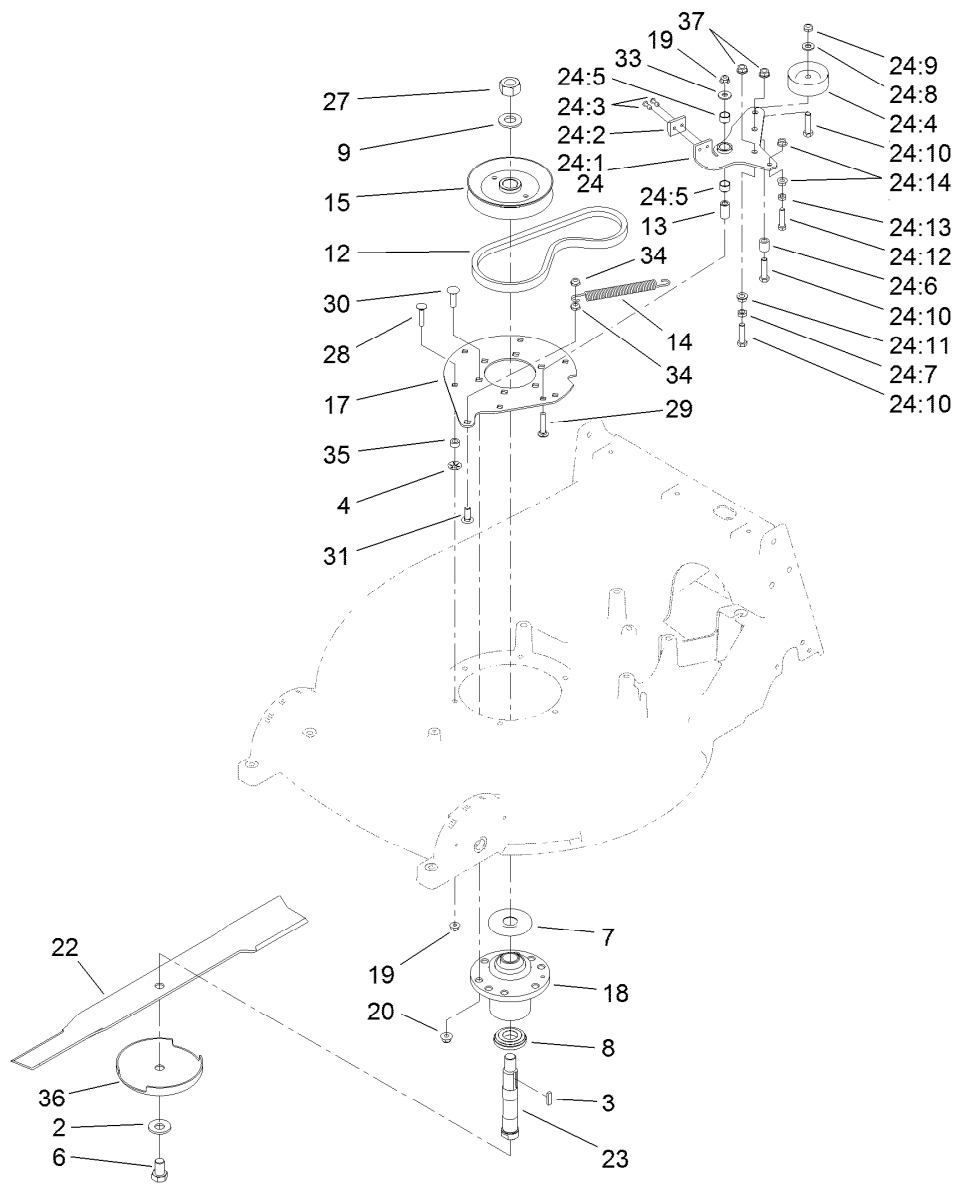 

Blade Drive Assembly

Ref.	Part Number	Qty.	Description
2	1-513208	1	Washer-Spring
3	1-807268	1	Key-Rectangle
4	78-7170	6	Ring-Retaining
6	103-1026	1	Screw-Cap
7	103-1330	1	Guard-Bearing, Top
8	103-2535	1	Spacer-Guard, Bottom
9	103-2802	1	Washer
12	116-0823	1	Belt
13	103-7108	1	Bushing-Arm, Idler
14	103-7896	1	Spring-Brake
15	116-0821	1	Sheave-Split, Steel (W/Hub)
17	116-0092-03	1	Plate-Adapter, Housing
18	107-4065	1	Cutter Housing ASM
19	104-8300	7	Nut-Flange, NI
20	104-8301	6	Nut-Flange, NI
22	109-0343	1	Blade
23	109-2650	1	Shaft-Spindle
24	116-0096	1	Idler Arm ASM
24:1	116-0085-03	1	Arm-Idler
24:2	116-0959	1	Pad-Brake
24:3	103-0138	2	Rivet-Pop


Ref.	Part Number	Qty.	Description
24:4	109-3546	1	Pulley-Idler
24:5	103-6111	2	Bearing
24:6	1-633080	1	Bushing-Lever, Lift
24:7	3218-3	1	Nut-Jam
24:8	3256-24	1	Washer-Flat
24:9	3296-59	1	Nut-Lock, NI
24:10	323-8	3	Screw-HH
24:11	3290-357	3	Nut-HHF, Whiz
24:12	1-403180	1	Screw-HH
24:13	3218-2	1	Nut-Jam
24:14	32128-20	2	Nut-HF
27	3217-46	1	Nut-HH
28	3230-4	6	Screw-CARR
29	116-0629	1	Screw-CARR
30	3231-28	6	Screw-CARR
31	3231-22	1	Screw-CARR
33	3256-3	1	Washer-Flat
34	3296-59	3	Nut-Lock, NI
35	111044	6	Spacer
36	67-7561	1	Cup-Scalp, Anti
37	3290-357	3	Nut-HHF, Whiz

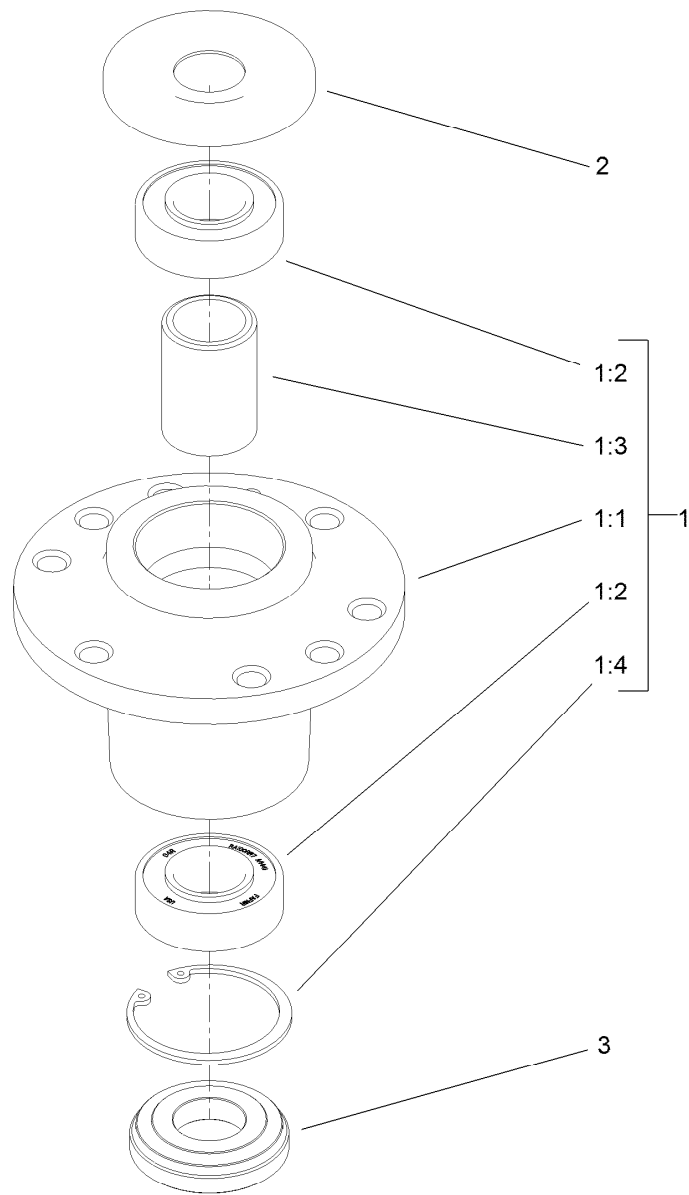 

Cutter Housing Assembly No. 107-4065

Ref.	Part Number	Qty.	Description
1		1	Cutter Housing ASM ●
1:1	103-7975	1	Housing-Spindle
1:2	103-2477	2	Bearing-Jackshaft
1:3	103-2534	1	Spacer-Bearing
1:4	32120-8	1	Ring-Snap
2	103-1330	1	Guard-Bearing, Top
3	103-2535	1	Spacer-Guard, Bottom

 
● Not serviced separately

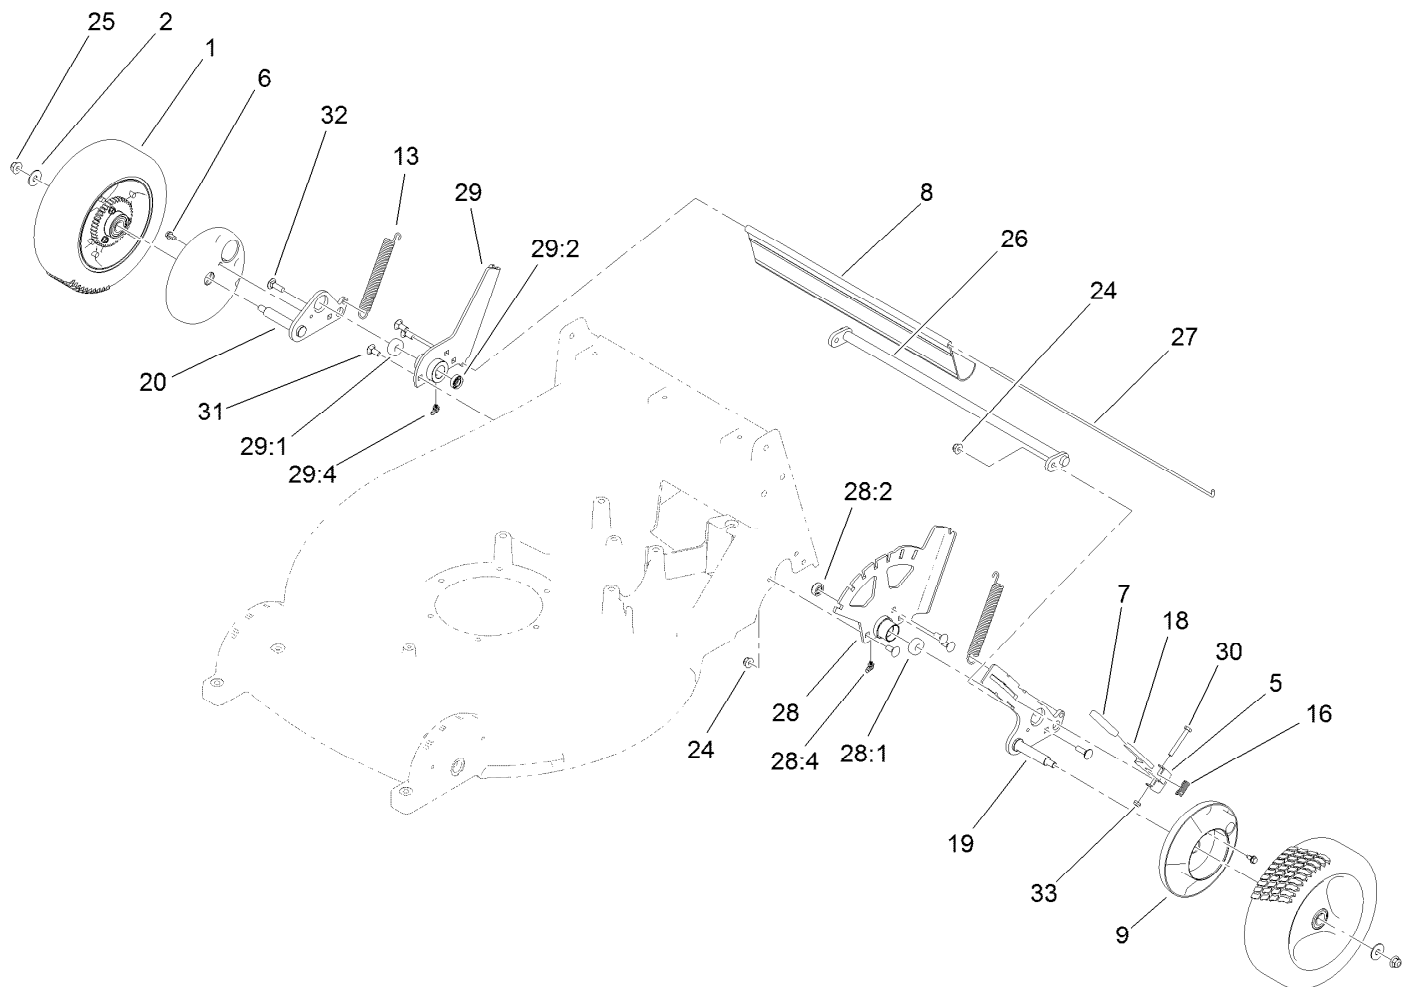

Rear Wheel Assembly


Ref.	Part Number	Qty.	Description
1	112-8707	2	10 Inch Wheel ASM
2	52-2860	2	Washer
5	103-6158	1	Bracket-Pivot, Lift
6	12-3270	2	Screw
7	103-6165	1	Cover-Handle
8	109-5974	1	Shield-Rear
9	103-6441	2	Cover-Gear
13	103-7659	2	Spring-Assist, Lift
16	103-7897	1	Spring-Latch
18	103-8226	1	Lever-Lift
19	103-8227	1	Arm-Axle, LH
20	103-8229	1	Arm-Axle, RH
24	104-8300	8	Nut-Flange, NI
25	104-8301	2	Nut-Flange, NI

Ref.	Part Number	Qty.	Description
26	109-2456-03	1	Rod-Torque
27	109-2458	1	Rod-Shield
28	109-2833	1	LH Bearing Support ASM
28:1	103-6110	1	Bearing-Axle, Rear
28:2	103-7654	1	Seal-Axle
28:4	103-8864	1	Fitting-Grease
29	109-2834	1	RH Bearing Support ASM
29:1	103-6110	1	Bearing-Axle, Rear
29:2	103-7654	1	Seal-Axle
29:4	103-8864	1	Fitting-Grease
30	321-10	1	Screw-HH
31	3230-1	6	Bolt-CARR
32	3230-2	2	Bolt-CARR
33	3296-56	1	Nut-Lock, NI

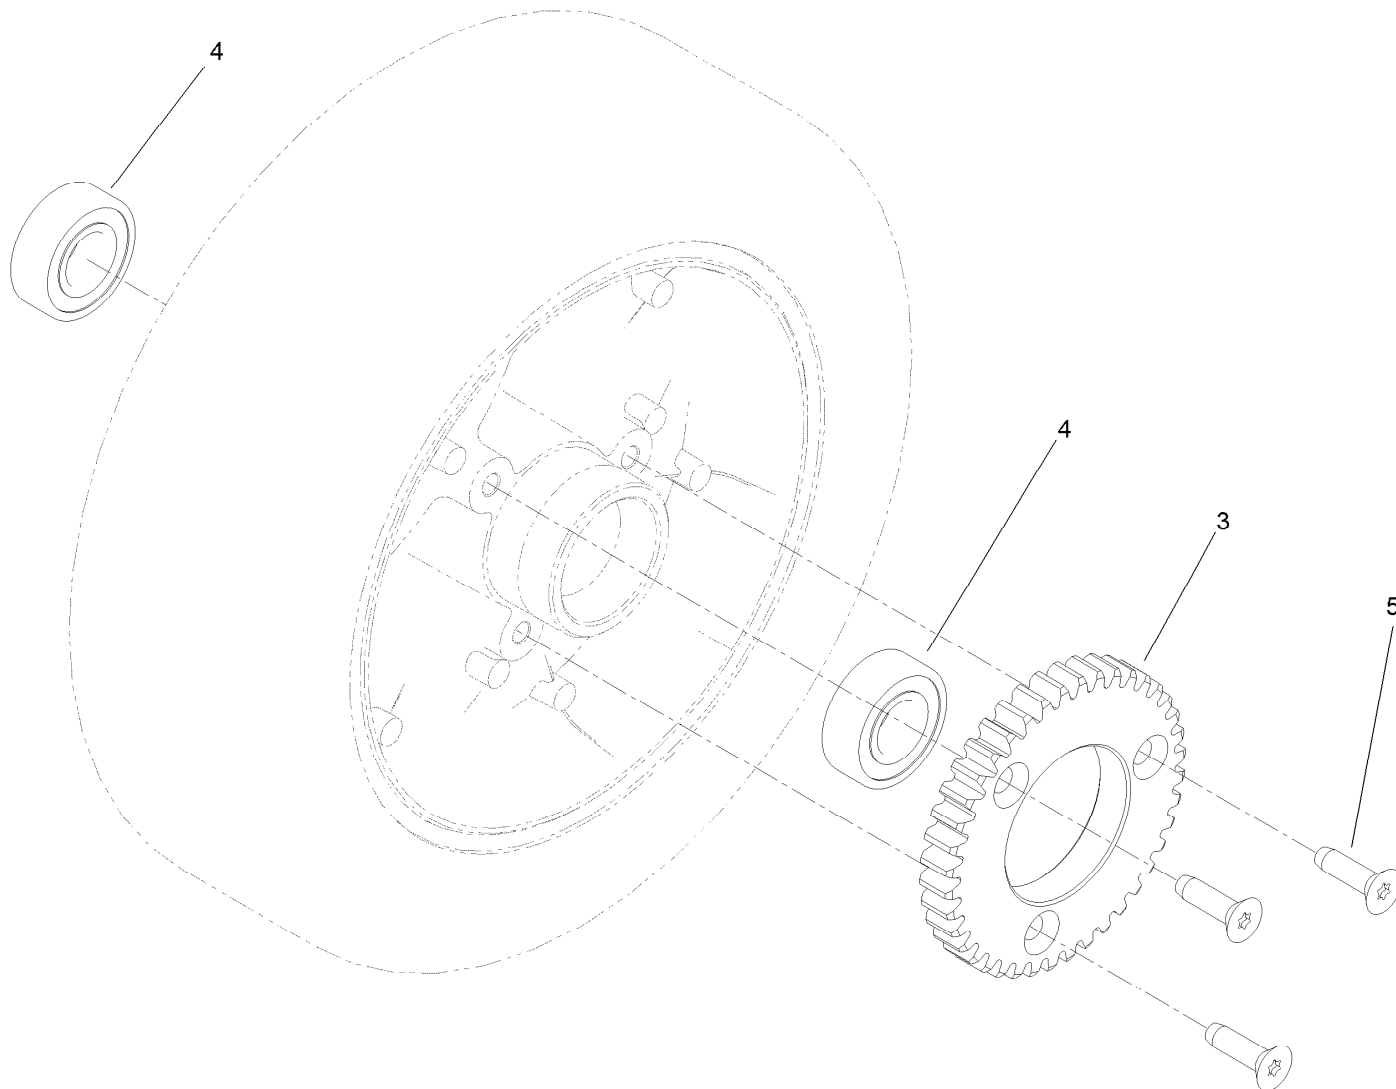 

Wheel Assembly No. 112-8707

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	103-6445	1	Gear-Driven
4	103-6103	2	Bearing-Ball
5	116-0606	3	Screw-Torx

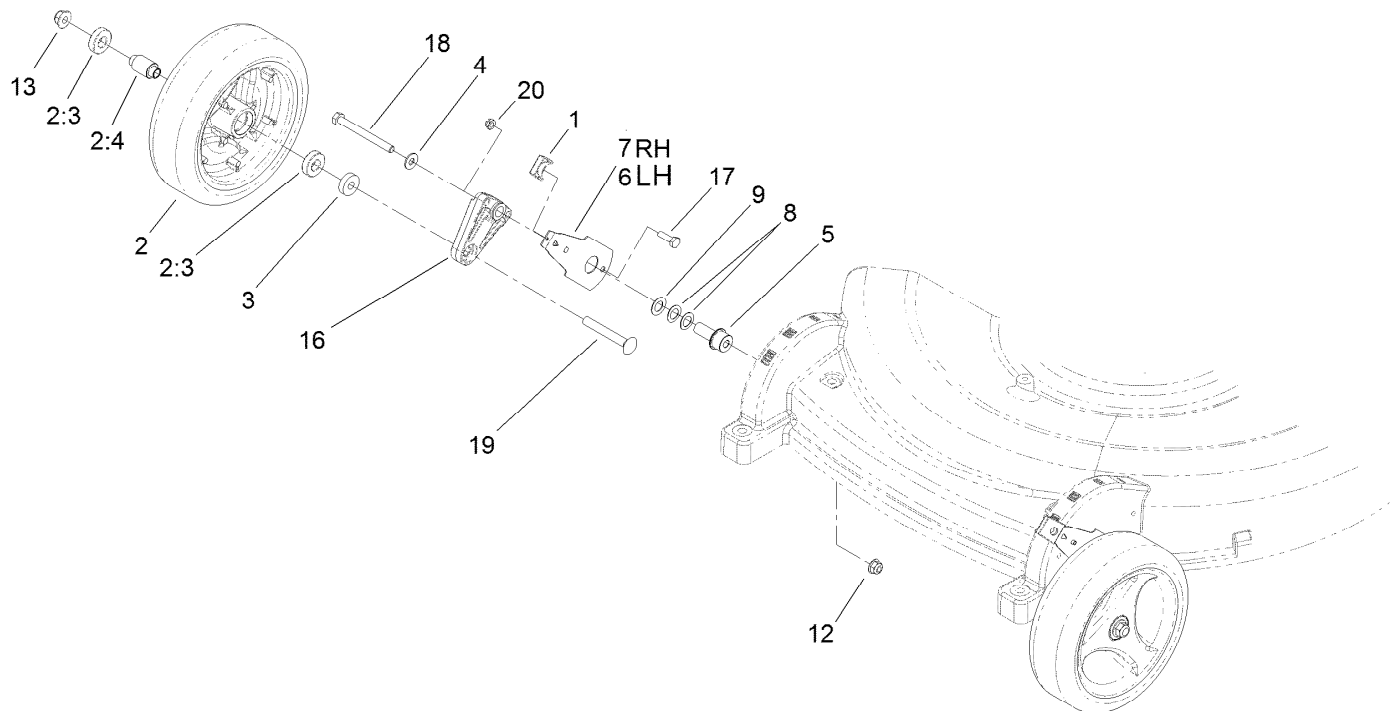 

Front Wheel Assembly

Ref.	Part Number	Qty.	Description
1	25-7740	2	Knob-Arm
2	112-8706	2	8 Inch Wheel ASM
2:3	52-2450	2	Bearing-Wheel
2:4	103-7649	1	Spacer-Wheel, Front
3	62-6660	2	Spacer
4	98-3499	2	Washer-Flat
5	109-6041	2	Bushing-Pivot, Wheel
6	103-5847	1	LH Front Spring Arm ASM
7	103-5848	1	RH Front Spring Arm ASM

Ref.	Part Number	Qty.	Description
8	116-4280	4	Washer-Conical
9	36-4780	2	Washer-Plain
12	104-8300	2	Nut-Flange, NI
13	104-8301	2	Nut-Flange, NI
16	116-4305	2	ASM-Front Wheel Arm
17	321-5	2	Screw-HH
18	322-20	2	Screw-HH
19	3231-9	2	Screw-CARR
20	3296-56	2	Nut-Lock, NI

Attachments and Accessories

For 22203TE 66cm Heavy-Duty Rear Bagger Lawn Mower

Product Name	Model/Part
Mulch Kit.....	22201
Side-Discharge Kit.....	22202

Notes:

Notes:

Notes:



Count on it.