



ProLine

Mid Size Traction Unit

12.5 HP Kawasaki Gear Drive

Model No. 30167 – 695001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Fuel Tank And Idler Bracket Asm	1	Lubrication Equipment	12
Transmission And Idler Pulley Asm	2	Cooling Equipment	13
Brake, Wheel Pulley And Wheel Asm	3	Electric Equipment	14
Wheel And Tire Asm	4	Control Equipment	15
Handle Asm	5	Carburetor	16
Engine Asm	6	Air Filter	17
Clutch Asm No. 54–3200	7	Starter	18
Peerless Transmission Model No. 700–039	8	Muffler	19
Crankcase	9	Electric Schematic	20
Piston / Crankshaft	10	Note:	
Valve / Camshaft	11		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y*. *X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

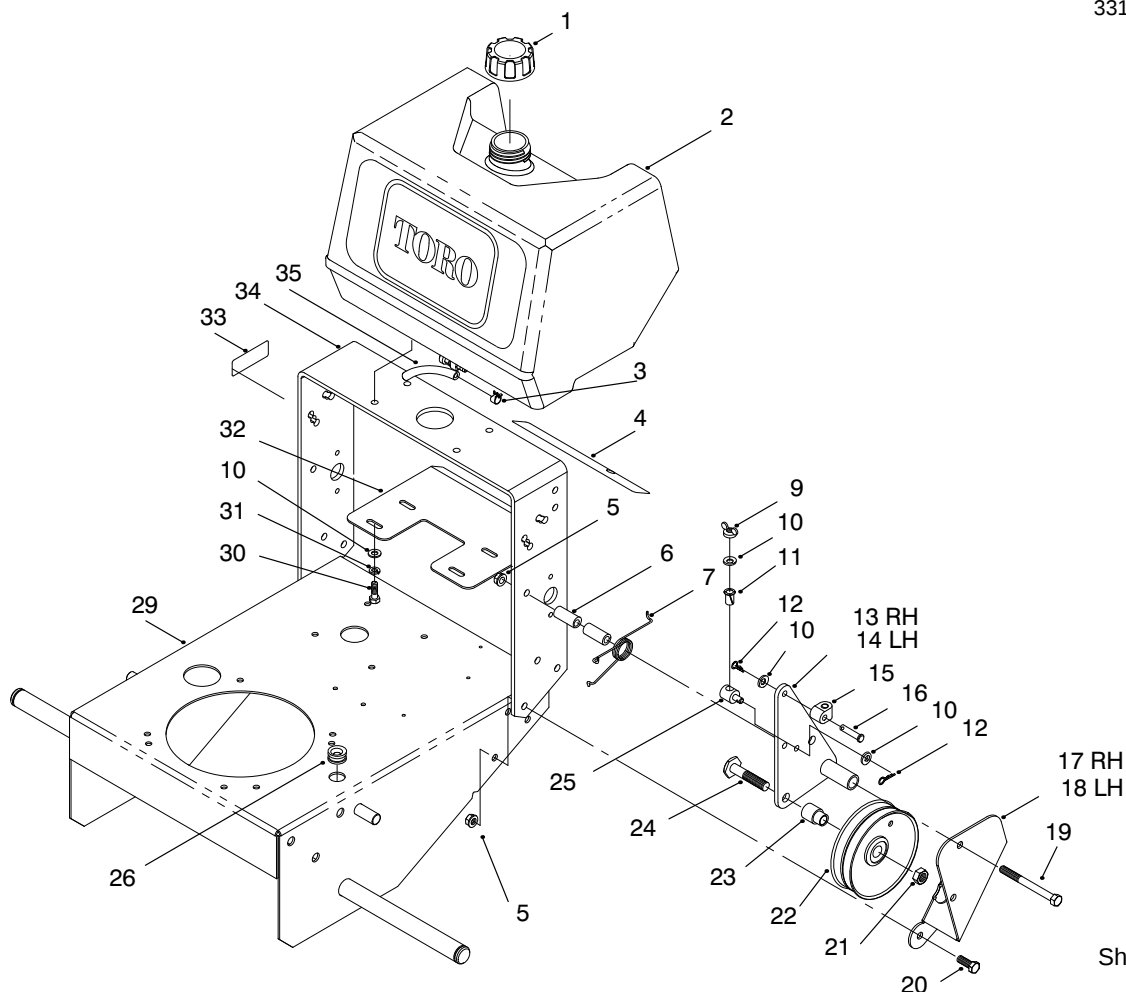

Sheet No.: 2

Fuel Tank And Idler Bracket Asm

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3570	1	ASM-Cap	26	237-124	1	Grommet
2	82-8440	1	Tank-Fuel	29	93-1156	1	Frame
3	2412-98	2	Clamp-Hose	30	322-4	4	Screw-HH
4	82-7750	1	Decal-Ground Speed	31	3253-4	4	Washer-Lock
5	3296-39	8	Nut-Lock	32	66-7400	1	Plate-Control
6	74-0040	4	Spacer-Pivot	33	74-0490	1	Decal-Fuel Shut-Off
7	51-4370	1	Spring-Torsion	34	74-0360	1	Frame-Rear
8	51-4380	1	Spring-Torsion	35	47-2982	1	Hose-Fuel
9	32103-25	2	Nut-Wing				
10	3256-23	10	Washer-Flat				
11	52-2890	2	Bushing - Steering Links				
12	3290-307	4	Pin-Cotter				
13	74-0230	1	Idler Bracket RH				
14	74-0220	1	Idler Bracket LH				
15	283-6	2	Pin-Clevis				
16	74-0521	2	Rod-Fitting				
17	67-6370	1	Bracket-Support				
18	67-6380	1	Bracket-Support				
19	323-16	2	Screw-HH				
20	323-6	6	Screw-HH				
21	3296-23	2	Nut-Lock				
22	51-4480	2	Pulley-Idler				
23	51-4490	2	Spacer-Pulley				
24	51-4450	2	Screw-Leveler				
25	68-9690	2	Fitting Rod				

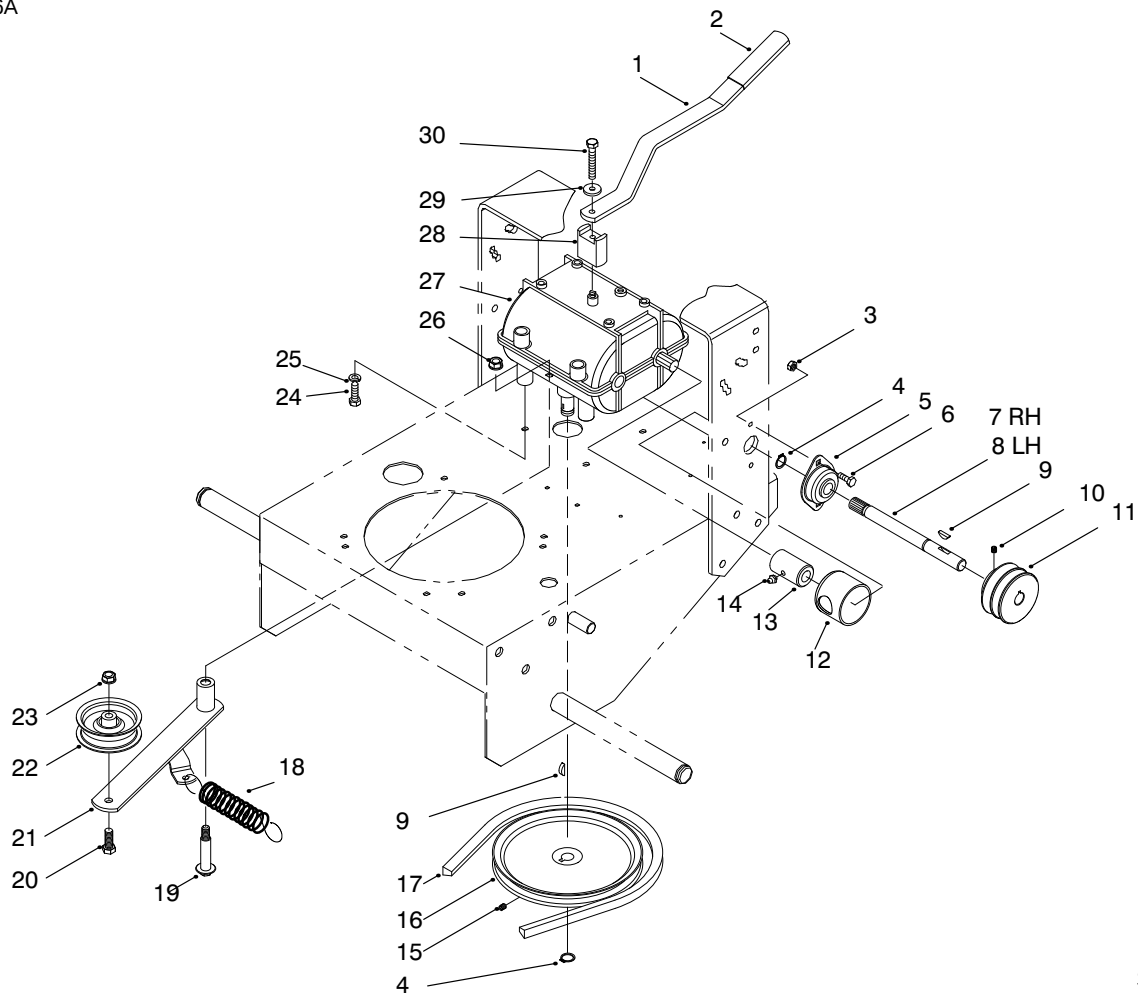


Sheet No.: 3

Transmission And Idler Pulley Asm

Ref. No.	Part No.	Qty.	Description
1	74-0320	1	Lever-Shift
2	47-1970	1	Grip-Engagement
3	3296-42	4	Nut-Lock
4	32120-64	3	Ring-Retaining
5	51-4270	2	Bearing-Shaft Ext
6	321-4	4	Screw-HH
7	51-4240	1	Shaft-Extension RH
8	51-4250	1	Shaft-Extension LH
9	3257-5	3	Key-Woodruff
10	3245-3	2	Screw-HSH
11	74-0480	2	Pulley-Drive ASM
12	51-4220	2	Guard-Coupler
13	51-4260	2	Coupler
14	302-5	2	Fitting-Grease
15	3245-1	1	Screw-Set
16	51-4190	1	Pulley-Drive
17	26-9671	1	"v" Belt
18	68-2190	1	Spring-Extension
19	27-6230	1	Bolt-Wheel
20	323-8	1	Screw-HH
21	82-4800	1	Lever-Idler
22	62-4540-03	1	Pulley-Idler
23	3296-39	1	Nut-Lock
24	322-2	4	Screw-HH
25	3253-4	4	Washer-Lock
26	3296-6	1	Nut-Lock


Ref. No.	Part No.	Qty.	Description
27	74-0610	1	Transmission
28	72-2190	1	Mount-Shift Lever
29	7-5461	1	Spacer-Transmission
30	329-10	1	Screw

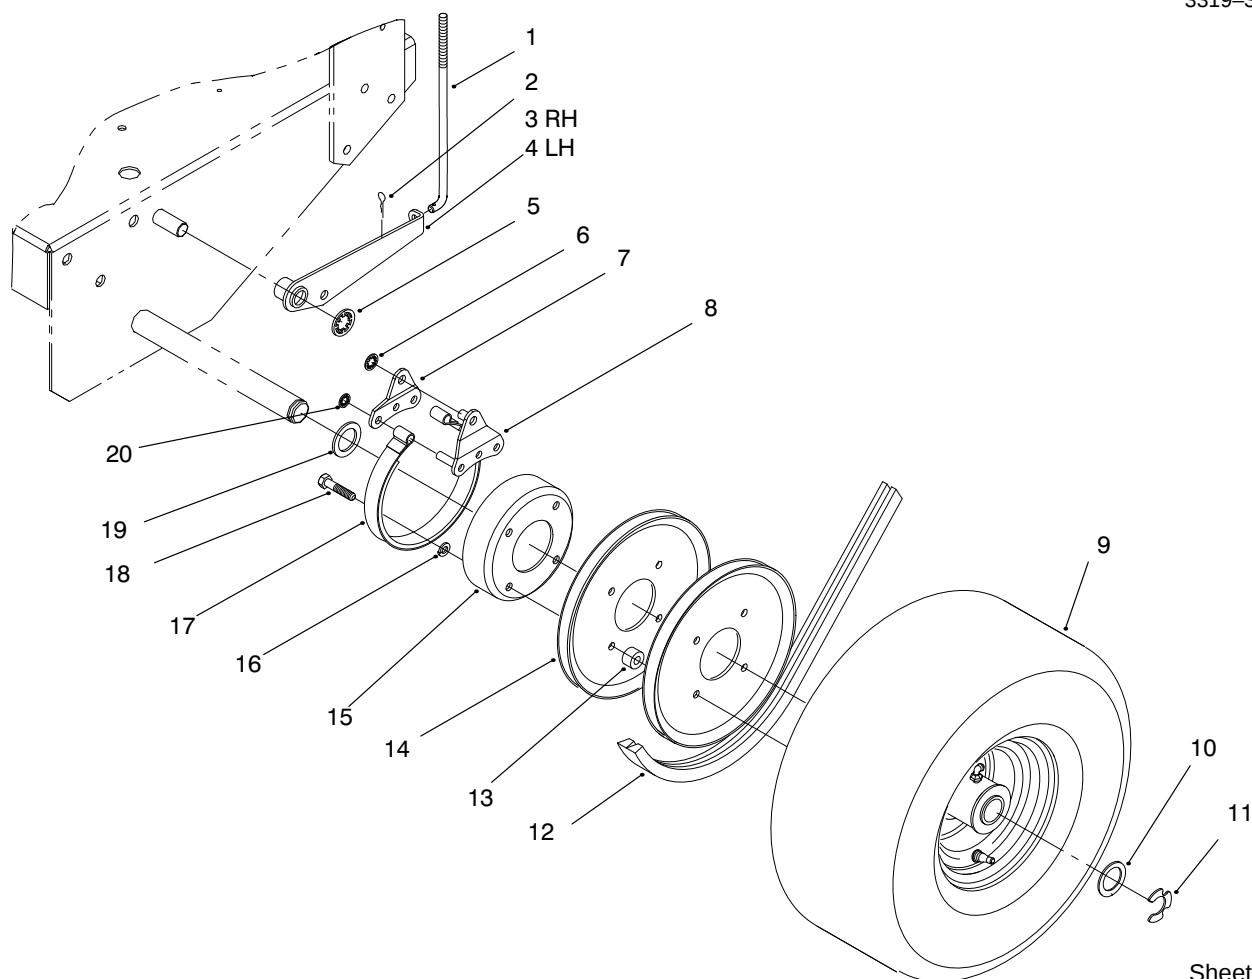

Sheet No.: 4

Brake, Wheel Pulley And Wheel Asm

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	51-4580	2	Rod-Brake				
2	3290-307	2	Pin-Cotter				
3	51-4600	1	Brake Arm Asm-RH				
4	51-4610	1	Brake Arm Asm-LH				
5	32151-40	2	Ring-Retaining				
6	32151-56	2	Ring-Retaining				
7	51-4660	2	Plate-Brake Link				
8	51-4650	2	Link-Brake				
9		2	ASM-Wheel & Tire				
10	10-8110	A/R	Washer-Thrust				
11	32151-91	2	Ring-Retaining				
12	51-4290	2	Belt-Drive				
13	51-4170	8	Spacer-Pulley				
14	51-4160	4	Pulley-Wheel				
15	51-4180	2	Drum-Brake				
16	3253-4	8	Washer-Lock				
17	51-4700	2	Band-Brake				
18	322-7	8	Screw-HH				
19	51-4230	2	Washer-Wheel				
20	32151-72	4	Ring-Retaining				

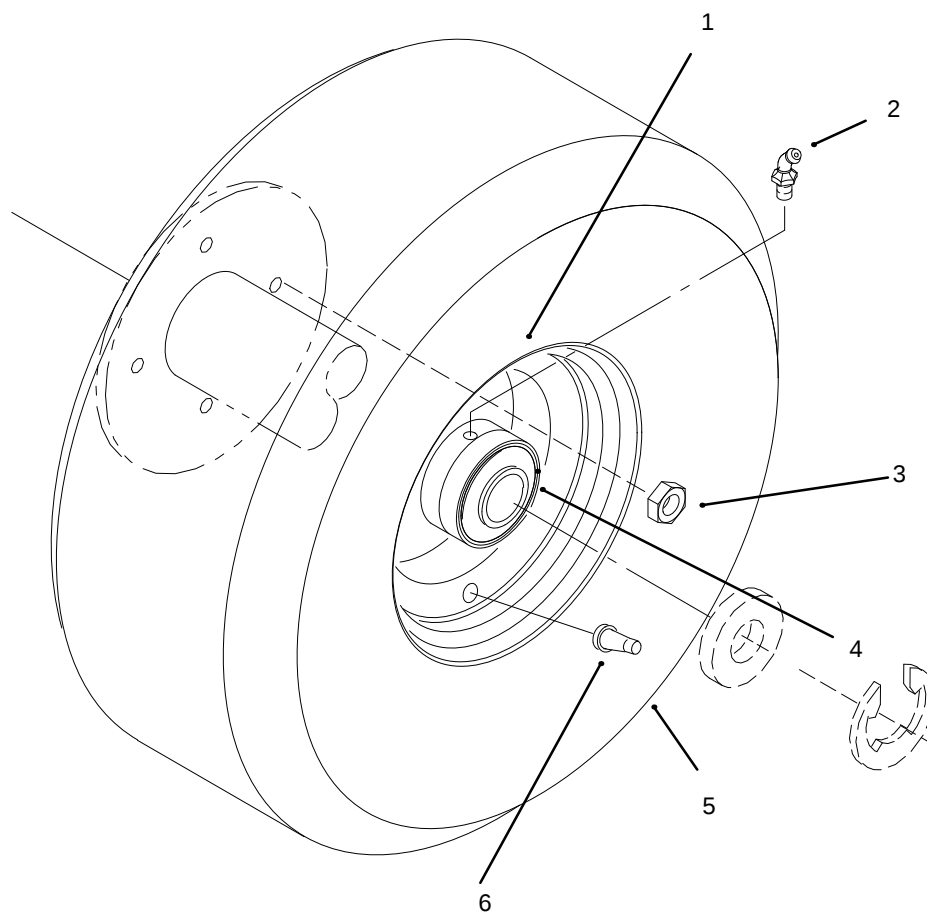


Sheet No.: 500

Wheel And Tire Asm

Ref. No.	Part No.	Qty.	Description
1	242-80	2	Rim
2	302-11	2	Fitting-Grease
3	3296-29	8	Nut-Lock
4	92-1746	4	Bearing
5	231-117	2	Tire-15x6
6	232-27	2	Valve Stem & Cap Assembly


Ref. No.	Part No.	Qty.	Description

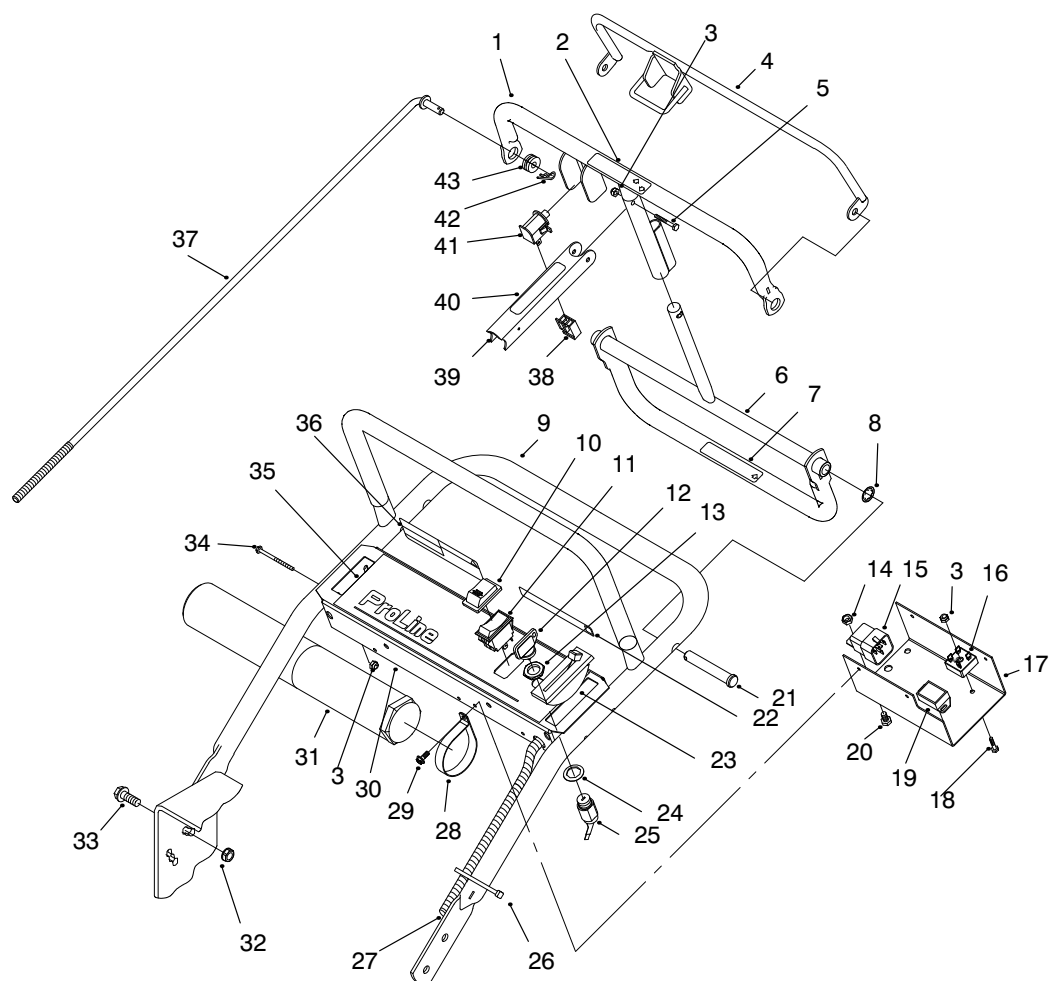

Sheet No.: 5

Handle Asm

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	82-7690	1	Bar	27	82-2440	1	Wire Harness
2	82-2290	1	Decal-Control Bar	28	2412-120	2	Clamp-"R"
3	3296-2	6	Nut Lock	29	32104-76	4	Screw-Self TAP
4	82-7680	1	Bail	30	82-2180	1	Panel-Control
5	32105-1	1	Screw-HH	31	74-0720	1	Tube-Manual
6	74-0380	1	Control Pivot	32	32128-21	4	Nut-HF
7	82-2280	1	Decal-Reverse	33	3234-11	4	Screw-HHF
8	32151-80	2	Ring-Push On	34	32105-14	4	Screw-HH
9	67-6440	1	Handle-Upper	35	82-7730	1	Decal-Panel Proline
10	82-3820	1	Boot-Switch	36	71-1280	1	Decal-Warning
11	82-2300	1	Switch	37	82-7631	2	Rod-Control
12	63-8360	2	Key-Ignition	38	218-595	1	Connector-Body
13	218-461	1	Nut-HH	39	51-4850	1	Lever-Parking Brake
14	3296-42	1	Nut-Lock	40	52-2010	1	Decal-Parking Lever
15	63-7590	1	Relay	41	82-2190	1	Switch-Bail
16	37-7600	1	Bridge Rectifier	42	3290-307	2	Pin-Cotter
17	93-1187	1	Panel-Bottom	43	237-141	2	Grommet
18	32105-13	1	Screw-HH				
19	94-5818	1	Module				
20	321-2	1	Screw-HH				
21	283-55	2	Pin-Clevis				
22	65-3090	1	Decal-Read Manual				
23	74-0740	1	Control-Throttle				
24	3254-5	1	Washer-Lock				
25	29-5560	1	Switch-On/Off				
26	3290-378	2	Tie-Cable				

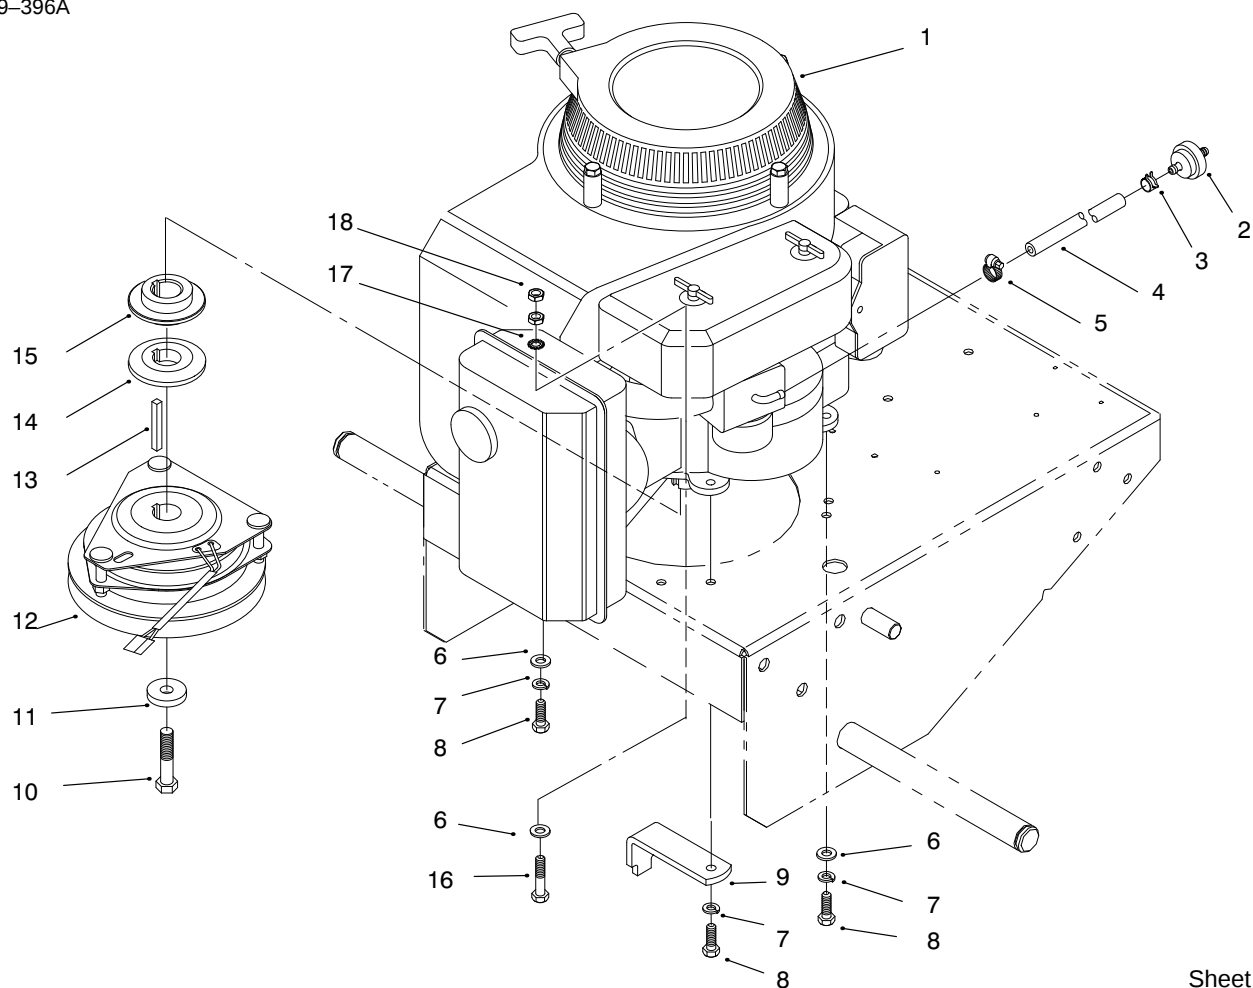


Sheet No.: 6

Engine Asm

Ref. No.	Part No.	Qty.	Description
1		1	Engine—12 Hp Kawasaki
2	56-6360	1	Filter—Fuel
3	2412-98	1	Clamp—Hose
4	47-2982	1	Hose—Fuel
5	2412-108	1	Clamp—Hose
6	3256-23	3	Washer—Flat
7	3253-4	3	Washer—Lock
8	57-6380	3	Screw—HH
9	51-4540	1	Retainer—Clutch
10	57-6360	1	Screw—HH
11	112843	1	Washer—PTO
12	54-3200	1	Clutch ASM
13	92-5436	1	Key
14	74-0050	1	Sheave—Lower
15	74-0060	1	Sheave—Upper
16	57-6370	1	Screw—HH
17	3255-8	1	Washer—Lock
18	57-6390	2	Nut


Ref. No.	Part No.	Qty.	Description

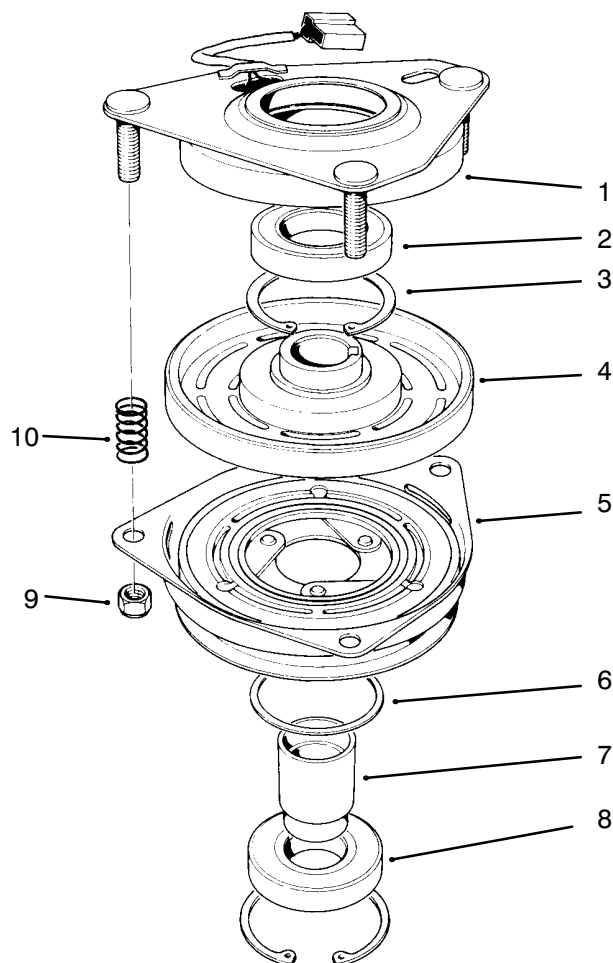

Sheet No.: 301

Clutch Asm No. 54-3200

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	54-0230	1	Field ASM Incl. 2 3				
2	251-292	1	Bearing				
3	44-8310	2	Ring-Retaining				
4	44-8360	1	Field Coil & Bearing				
5	55-7410	1	Armature & Pulley ASM				
6	44-8330	1	Spacer-Pulley Bearing				
7	44-8340	1	Collar-Bearing				
8	251-291	1	Bearing-Pulley				
9	3296-5	3	Nut-Lock				
10	44-8320	3	Spring				

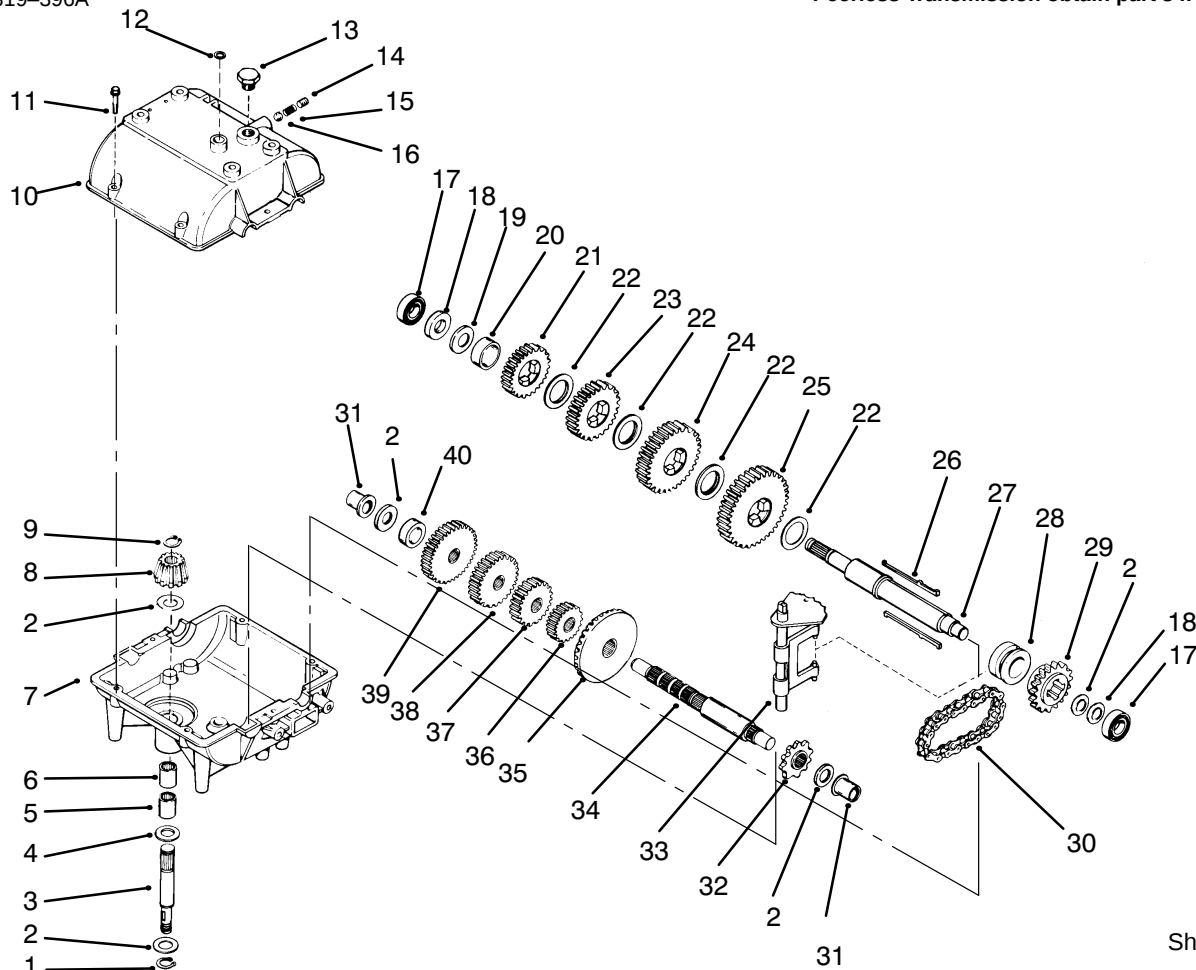


Sheet No.: 101
C-1776

Peerless Transmission Model No. 700-039

Ref. No.	Part No.	Qty.	Description
1	792035	1	Ring-Retaining
2	780072	5	Washer
3	776135	1	Shaft-Input
4	792001	2	O Ring
5	780142	1	Bearing-Needle
6	780086	1	Bearing-Needle
7	770090A	1	Case-Transmission
8	778153	1	Bevel Pinion-Input
9	788040	1	Ring-Retaining
10	772099A	1	Cover-Transmission
11	792073	6	Screw 1/4-20x1 1/4
12	788069	1	Ring-Square Cut
13	792074	1	Plug-Threaded 9/16-18
14	792078	1	Screw-Set 3/8-16x3/8
15	792079	11	Spring
16	792077	1	Ball-Steel
17	780092	2	Bearing-Ball
18	780065	2	Washer-Thrust
19	780139	1	Washer-Thrust
20	786072	1	Spacer
21	778123A	1	Gear-Spur 25teeth
22	780108	4	Washer
23	778250	1	Gear-Spur 27 Teeth
24	778124A	1	Gear-Spur 30 Teeth

Ref. No.	Part No.	Qty.	Description
25	778125	1	Geasae-Spur 35 Teeth
26	792089A	4	Key
27	776289A	1	Shaft-Output/Brake
28	784266	1	Collar-Shift
29	786083	1	Sprocket 18teeth
30	786081	1	Chain-Roller #41
31	780105A	2	Bushing-Flanged
32	786082	1	Sprocket 9teeth
33	784267	1	Rod & Fork ASM
34	776134	1	Shaft-Counter
35	778154	1	Gear-Bevel 42teeth
36	778136	1	Gear-Spur 15 Teeth
37	778126A	1	Gear-Spur 20teeth
38	778249	1	Gear-Spur 23 Teeth
39	778127A	1	Gear-Spur 25 Teeth
40	786071	1	Spacer

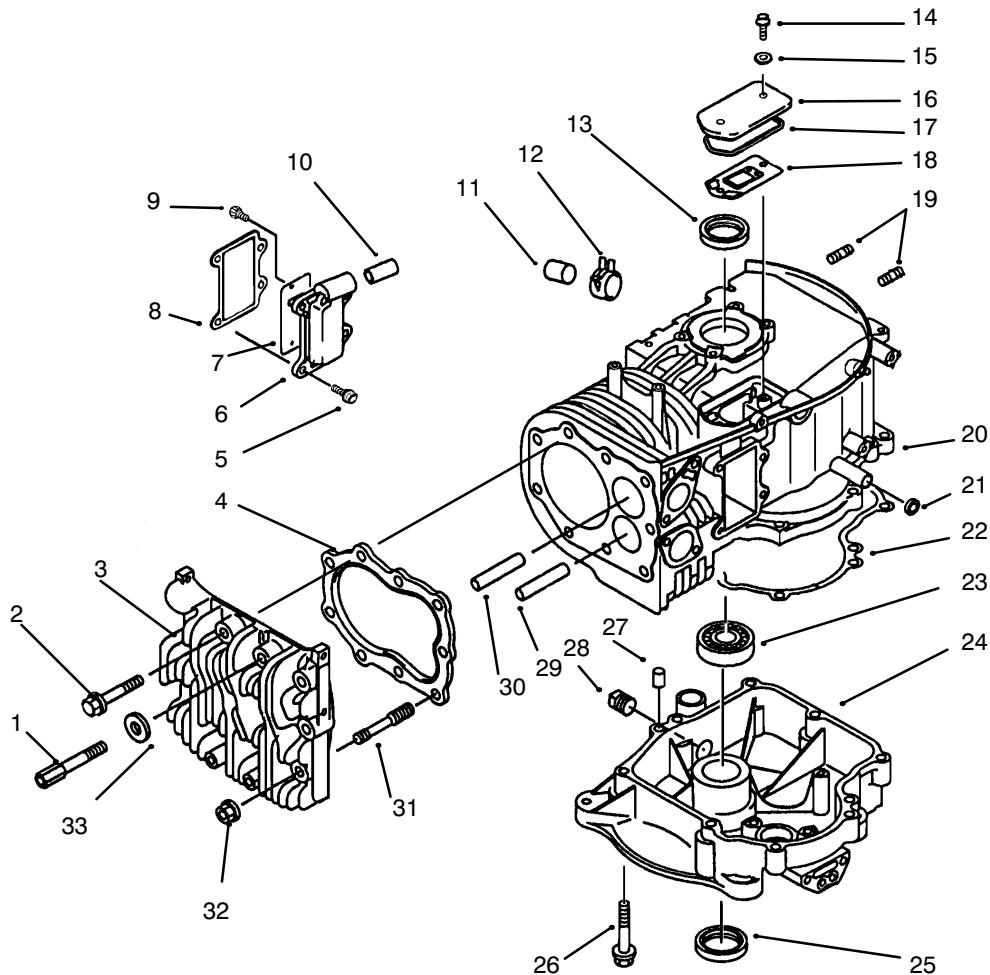


Sheet No.: 201

Crankcase

Ref. No.	Part No.	Qty.	Description
1	92002-2258	2	Bolt
2	130g1055	4	Bolt-Flange
3	11001-2151	1	Head-Cylinder
4	11004-2091	1	Gasket-Head
5	130g0616	4	Bolt-Flange
6	49108-2011	1	Cover-Valve Chamber
7	14025-2143	1	Cover
8	11060-2059	1	Gasket
9	92009-2307	2	Screw
10	92059-2142	1	Tube
11	92066-2096	1	Plug
12	92170-2088	1	Clamp
13	92049-2096	1	Seal-Oil
14	92002-2087	2	Bolt
15	11060-2323	2	Gasket
16	14025-2040	1	Cover-Breather
17	11009-2339	1	Gasket-Coveer
18	14069-2062	1	Breather
19	92004-2083	4	Stud-6 X 14
20	49120-6108	1	Crankcase-Complete
21	92049-2097	1	Seal-Oil
22	11060-2015	1	Gasket-Crankcase
23	601a6207	1	Bearing-Ball
24	49015-6176	1	Cover-Crankcase
25	92049-2227	1	Seal-Oil
26	130g0845	8	Bolt-Flange

Ref. No.	Part No.	Qty.	Description
27	92043-1263	2	Pin
28	92066-2097	1	Plug
29	49002-2071	1	Guide-Valve Exhaust
30	49002-2070	1	Guide-Valve Intake
31	92004-2082	3	Stud
32	92015-2115	3	Nut
33	410b1000	2	Washer-Plain

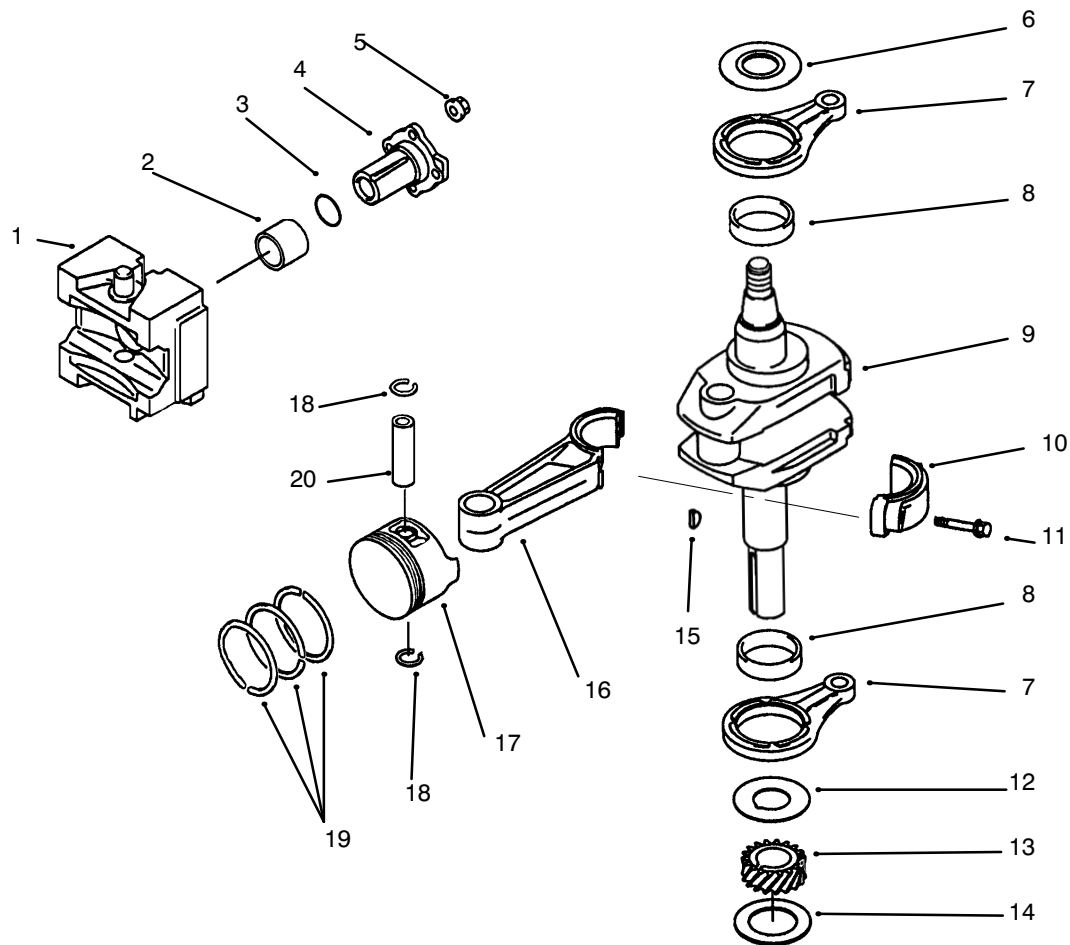


Sheet No.: 202

Piston / Crankshaft

Ref. No.	Part No.	Qty.	Description
1	13042-6006	1	Weight Incl #2
2	92141-2097	1	Bearing-Plane
3	92055-2072	1	O-Ring
4	13107-2253	1	Shaft
5	92015-1193	4	Nut
6	92026-2164	1	Spacer
7	46102-6007	2	Rod Incl #8
8	92141-2108	2	Bearing-Plane
9	49119-2177	1	Crankshaft ASM
11	92050-2193	2	Bolt
12	92026-2156	1	Spacer
13	59056-2105	1	Gear-Helical
14	92025-2145	A/R	Shim T=1.18
14	92025-2146	A/R	Shim T=1.25
14	92025-2147	A/R	Shim T=1.32
14	92025-2148	A/R	Shim T=1.39
14	92025-2149	A/R	Shim T=1.46
14	92025-2150	A/R	Shim T=1.53
14	92025-2151	A/R	Shim T=1.60
14	92025-2152	A/R	Shim T=1.67
14	92025-2153	A/R	Shim T=1.74
14	92180-2015	A/R	Shim T=1.11
14	92180-2016	A/R	Shim T=1.81
15	92038-2094	1	Key
16	13251-6005	1	Rod ASM Incl #10 11

Ref. No.	Part No.	Qty.	Description
16	13251-6007	A/R	Rod ASM Incl #10 11 0.50
17	13001-2084	1	Piston
17	13029-2019	A/R	Piston 0.25
17	13029-2020	A/R	Piston 0.50
18	92033-2066	2	Ring-Snap
19	13008-6001	1	Set-Ring Piston
19	13008-6002	A/R	Set-Ring Piston 0.25
19	13008-6003	A/R	Set-Ring Piston 0.50
20	13002-2066	1	Pin-Piston

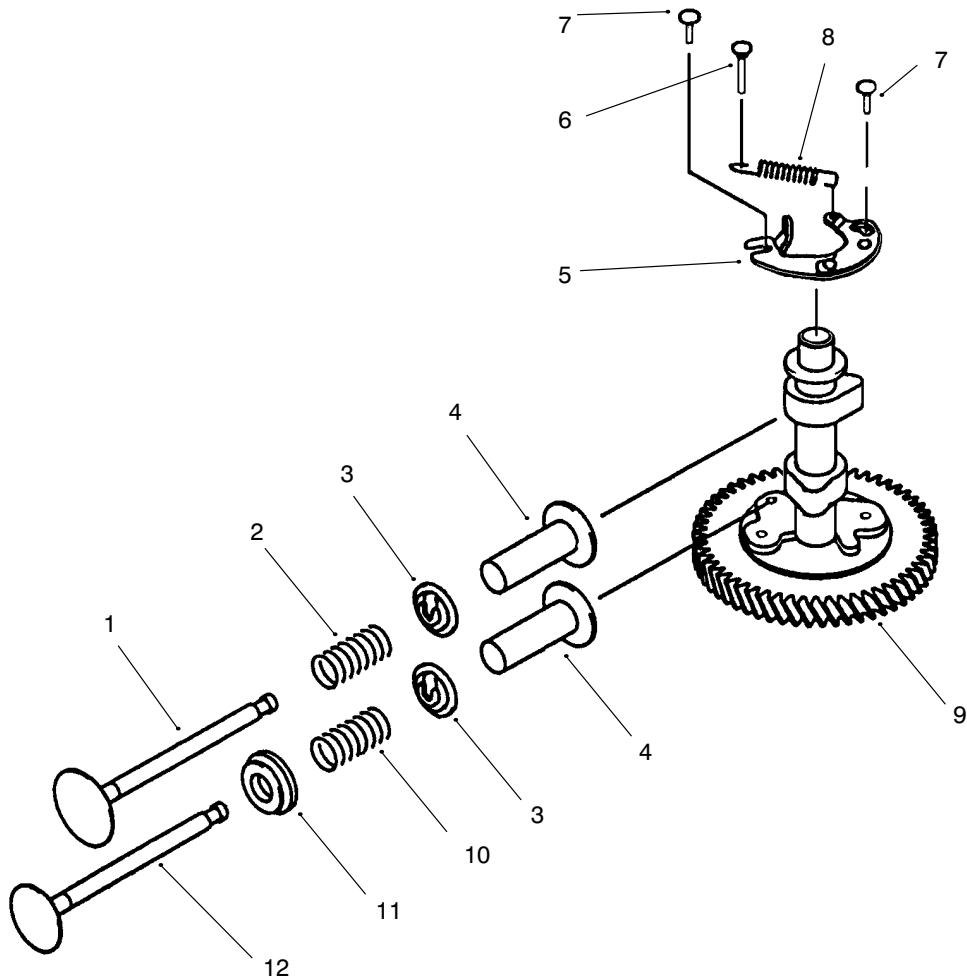

Sheet No.: 203

Valve / Camshaft

Ref. No.	Part No.	Qty.	Description
1	12004-2076	1	Valve-Intake
2	49078-2059	1	Spring-Valve
3	39108-2054	2	Retainer-Spring
4	12032-2058	2	Tappet
5	21118-2068	1	Decompressor
6	92043-2167	1	Pin
7	92043-2113	2	Pin
8	92144-2171	1	Spring
9	49118-2134	1	Camshaft Incl # 5-8
10	49078-2058	1	Spring-Valve
11	12039-2052	1	Rotator
12	12005-2066	1	Valve-Exhaust

Ref. No.	Part No.	Qty.	Description



Lubrication Equipment

Ref. No.	Part No.	Qty.	Description
1	11009-2346	1	Gasket-Oil Gauge
2	52005-2058	1	Gauge-Oil
3	130b0508	3	Bolt-Flange
4	92170-2014-9H	1	Clamp
5	59231-2059	1	Filler-Oil
6	130b0825	3	Bolt-Flange
7	16142-6001	1	Cover-Pump
8	130b0610	1	Bolt-Flange
9	13270-2054	1	Plate
10	49065-2056	1	Filter-Oil
11	16082-2057	1	Pump ASM-Oil
12	92081-2216	1	Spring
13	13169-2359	1	Plate
14	600a1000	1	Ball-Steel
15	92066-2211	1	Plug
16	14025-2145	1	Cover
17	130b0830	2	Bolt-Flange
18	92055-2063	1	O-Ring
19	670d2016	1	O-Ring

Ref. No.	Part No.	Qty.	Description




Ref. No.	Part No.	Qty.	Description
1	130g0610	9	Bolt-Flange
2	49089-2199-9H	1	Shroud-Engine
3	59066-2295-9H	1	Housing-Fan
4	234b0408	2	Screw
5	14024-2038-9H	1	Cover
6	130b0820	3	Bolt-Flange
7	14037-2104-9H	1	Screen
8	92025-2003	1	Shim T-1.20
9	11044-2084	1	Bracket
10	130g0614	6	Bolt-Flange
11	59066-2677-9H	1	Housing-Fan
12	92143-2179	4	Collar
13	59041-2081	1	Fan
14	49089-2181-9H	1	Shroud-Engine

Sheet No.: 206

Ref. No.	Part No.	Qty.	Description
1	92071-2100	1	Grommet
2	92037-2063	1	Clamp
3	26001-2113	1	Harness-Wire
4	92038-2094	1	Key
5	21121-2086	1	Coil-Ignition
6	130b0520	2	Bolt-Flange
7	314g1800	1	Nut-Hex
8	92022-2178	1	Washer
9	21194-2323	1	Flywheel
10	224b0620	2	Screw
11	59031-2106	1	Coil-Charging
12	92037-2158	1	Clamp
13	26011-2329	1	Wire-Lead
14	92170-2029	1	Clamp
15	92071-2099	1	Grommet
16	234b0408	1	Screw
17	21130-2060	1	Cap-Spark Plug
18	92070-2101	1	Spark Plug-Rcj8


Ref. No.	Part No.	Qty.	Description

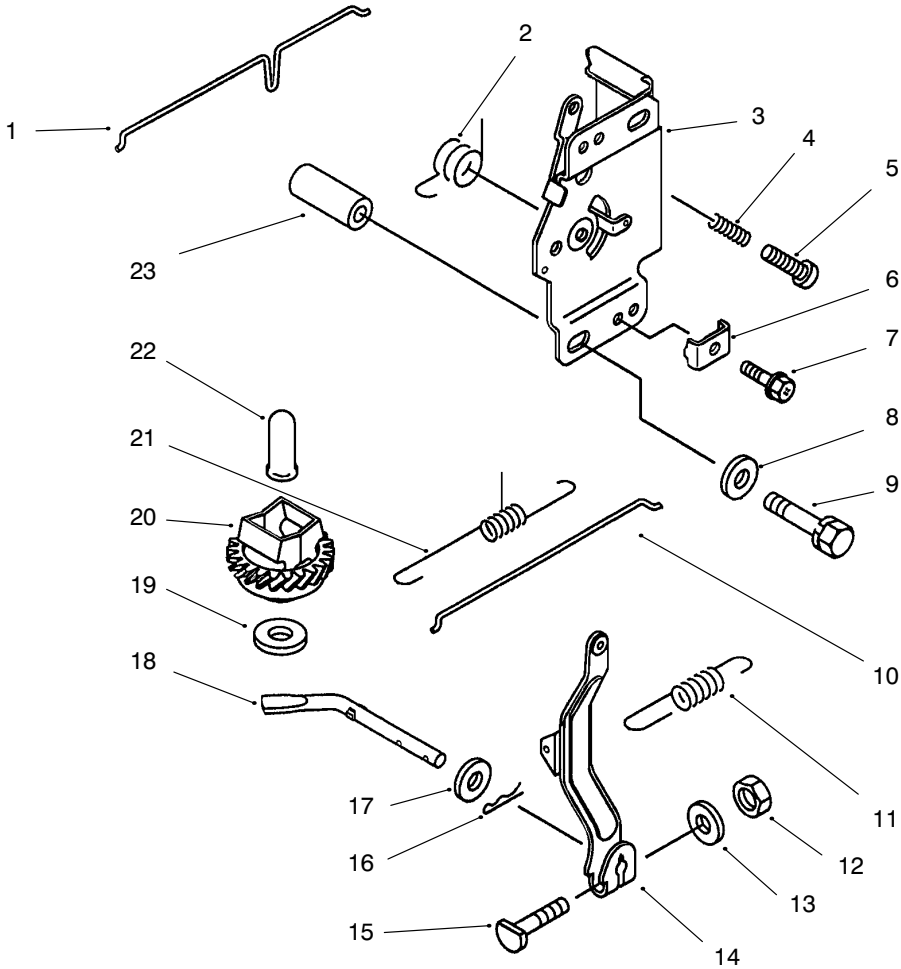

Sheet No.: 207

Control Equipment

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	16169-2126	1	Link-Choke				
2	92081-2316	1	Spring				
3	49113-2067	1	Panel Incl #2 4-7				
4	92144-2266	1	Spring				
5	214b0425	1	Screw				
6	92037-2020	1	Clamp				
7	92150-2128	1	Bolt				
8	92200-2070	2	Washer				
9	180b0650	2	Bolt				
10	16171-2083	1	Link				
11	39129-2010	1	Spring-Governor				
12	311b0600	1	Nut-HH				
13	411b0600	1	Washer				
14	21187-2052	1	Arm ASM				
15	92002-2269	1	Bolt				
16	554a0600	1	Pin-Snap				
17	92200-2029	1	Washer				
18	39003-2072	1	Arm-Pivot				
19	92200-2036	1	Washer				
20	49110-2067	1	Governor ASM				
21	92081-2213	1	Spring				
22	42036-2060	1	Sleeve				
23	92027-2071	2	Collar				

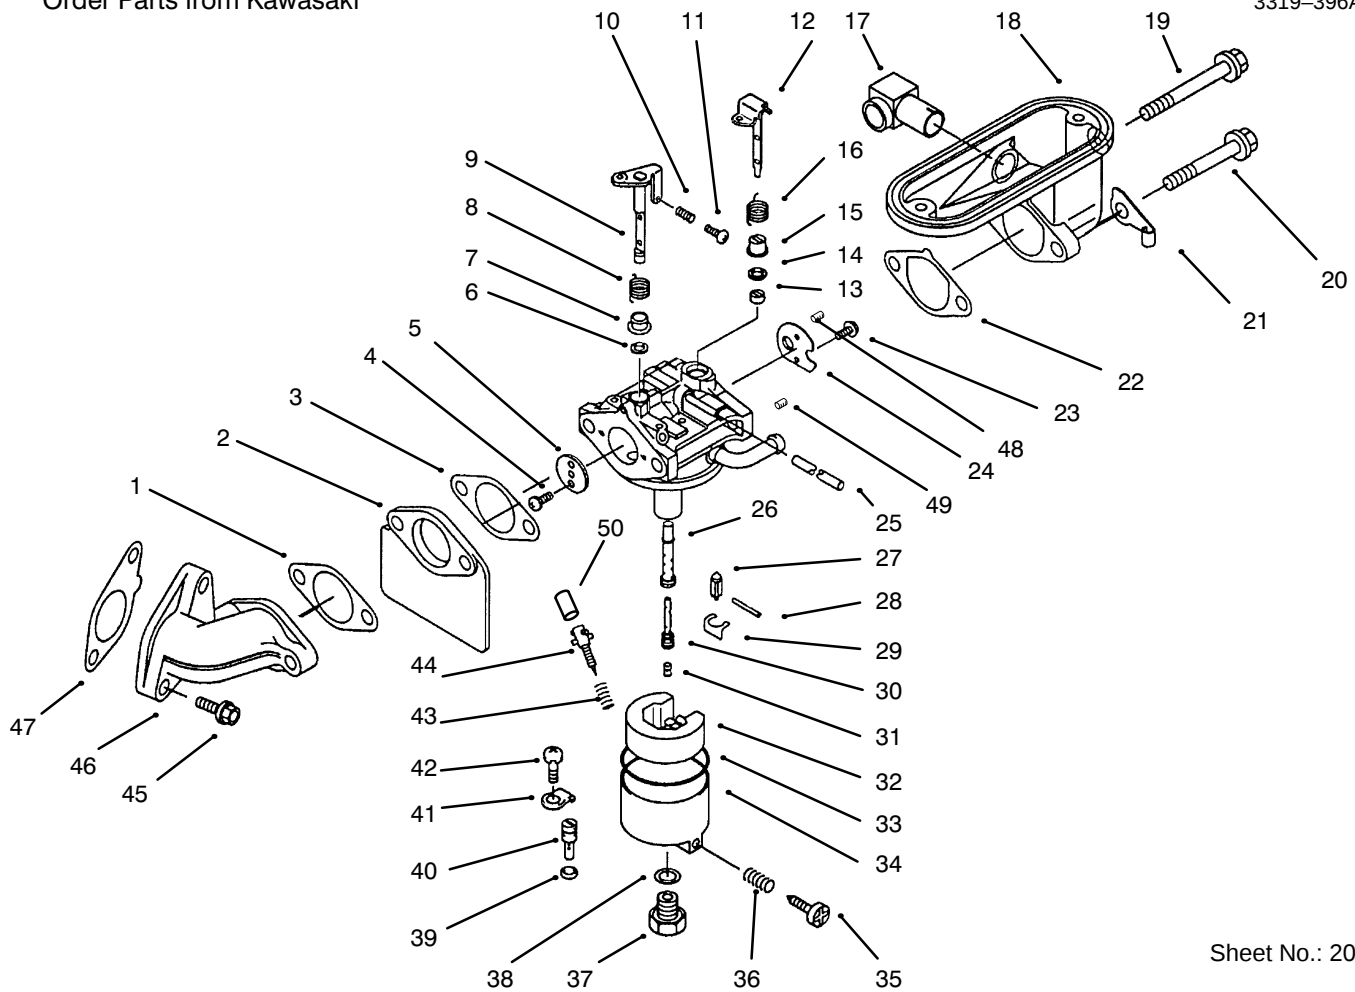


Sheet No.: 208

Carburetor

Ref. No.	Part No.	Qty.	Description
0	15003-2467	1	Carburetor ASM
1	11060-2338	1	Gasket-Intake Pipe
2	16073-2091	1	Insulator
3	11060-2339	2	Gasket-Carburetor
4	92009-2080	2	Screw
5	16025-2141	1	Valve-Throttle #110
6	92093-2082	1	Seal
7	92027-2025	1	Collar
8	92081-2077	1	Spring
9	16041-2009	1	Shaft-Throttle
10	92081-2046	1	Spring
11	92009-2079	1	Screw
12	16041-2010	1	Shaft-Choke
13	92027-2003	1	Collar
14	92093-2069	1	Seal
15	92143-2142	1	Collar
16	92144-2160	1	Spring
17	59071-2062	1	Joint
18	16060-2108	1	Pipe-Intake
19	92002-2254	1	Bolt
20	92002-2253	1	Bolt
21	92170-2019	1	Clamp
22	11009-2025	1	Gasket
23	92009-2081	2	Screw
24	16126-2206	1	Valve-Choke
25	92059-2266	1	Tube

Ref. No.	Part No.	Qty.	Description
26	49121-2207	1	Nozzle-Main
27	16030-2073	1	Valve-Float
28	92043-2006	1	Pin
29	92033-2067	1	Ring-Snap
30	49123-2078	1	Holder-Main Jet
31	92063-2294	1	Jet-Main
32	16031-2066	1	Float
33	11009-2024	1	Gasket
34	16020-2109	1	Chamber-Float Incl 35
35	92009-2015	1	Screw
36	92081-2009	1	Spring
37	92150-2146	1	Bolt
38	1100a-2025	1	Gasket
39	16038-024	1	Gasket
40	92064-2108	1	Jet-Pilot
41	13183-2252	1	Plate
42	92009-2244	1	Screw
43	92081-2008	1	Spring
44	16014-2076	1	Screw-Pilot Air
45	130g0825	2	Bolt-Flange
46	16060-2109	1	Pipe-Intake
47	11060-2337	1	Gasket-Intake Pipe
48	16035-2063	1	Jet-Air #0.9
49	16035-2051	1	Jet-Air #1.4
50	39076-2053	1	Limiter

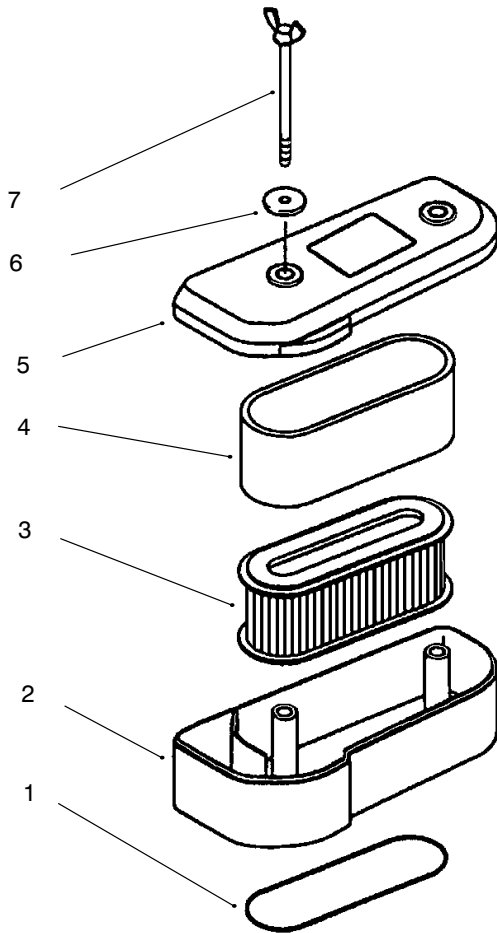

Sheet No.: 210

Air Filter


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	11009-2443	1	Gasket-Air Filter				
2	11011-2174	1	Case-Air Filter				
3	11013-2021	1	Element-Air Filter				
4	11013-2020	1	Element-Air Filter				
5	11012-2192	1	Cap-Air Filter				
6	92022-2220	2	Washer				
7	92002-2230	2	Bolt				
	11010-2291	1	Filter ASM				



Ref. No.	Part No.	Qty.	Description



Ref. No.	Part No.	Qty.	Description
1	92009-2166	2	Screw
2	11012-2165-9Y	1	Cap-Spark Arrestor
3	18077-2054	2	Arrestor-Spark
4	130b0812	4	Bolt-Flange
5	11044-2069-9Y	1	Bracket
6	49069-2190-9Y	1	Muffler ASM
7	11009-2527	1	Gasket-Muffler
8	92027-2081	1	Collar
9	130g0845	1	Bolt-Flange

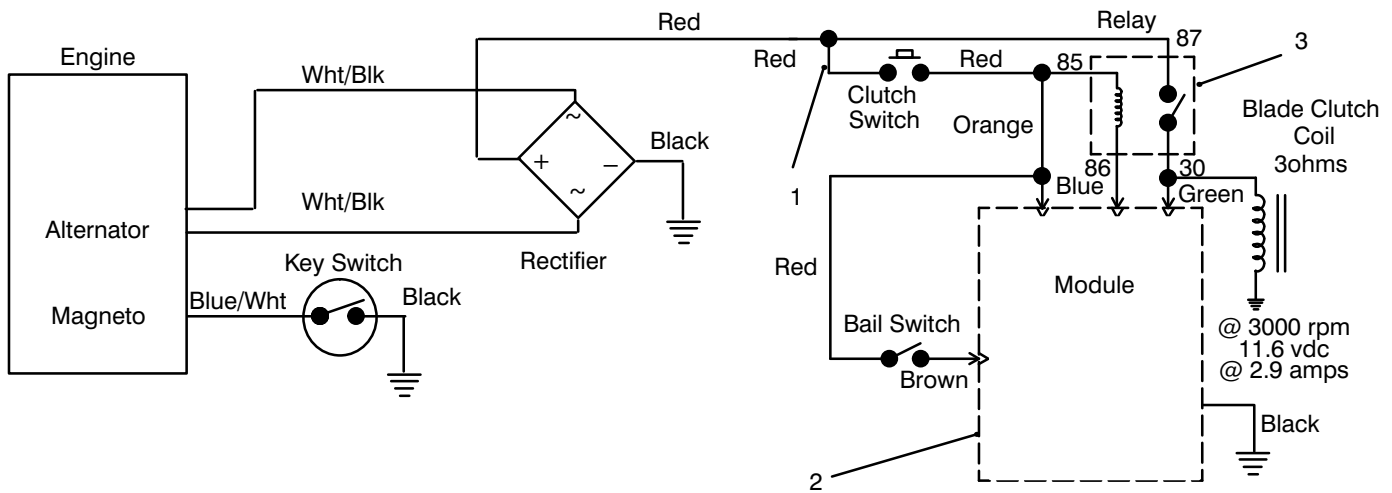

Sheet No.:

Electric Schematic

Ref. No.	Part No.	Qty.	Description
1	82-2240	1	Wire Harness
2	94-5818	1	Module - Interlock
3	63-7590	1	Relay

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
112843	6	11	1	Washer–PTO
7–5461	2	29	1	Spacer–Transmission
10–8110	3	10	A/R	Washer–Thrust
26–9671	2	17	1	"v" Belt
27–6230	2	19	1	Bolt–Wheel
29–5560	5	25	1	Switch–On/Off
37–7600	5	16	1	Bridge Rectifier
44–8310	7	3	2	Ring–Retaining
44–8320	7	10	3	Spring
44–8330	7	6	1	Spacer–Pulley Bearing
44–8340	7	7	1	Collar–Bearing
44–8360	7	4	1	Field Coil & Bearing
47–1970	2	2	1	Grip–Engagement
47–2982	1	35	1	Hose–Fuel
47–2982	6	4	1	Hose–Fuel
51–4160	3	14	4	Pulley–Wheel
51–4170	3	13	8	Spacer–Pulley
51–4180	3	15	2	Drum–Brake
51–4190	2	16	1	Pulley–Drive
51–4220	2	12	2	Guard–Coupler
51–4230	3	19	2	Washer–Wheel
51–4240	2	7	1	Shaft–Extension
51–4250	2	8	1	Shaft–Extension
51–4260	2	13	2	Coupler
51–4270	2	5	2	Bearing–Shaft Ext
51–4290	3	12	2	Belt–Drive
51–4370	1	7	1	Spring–Torsion
51–4380	1	8	1	Spring–Torsion
51–4450	1	24	2	Screw–Leveler
51–4480	1	22	2	Pulley–Idler
51–4490	1	23	2	Spacer–Pulley
51–4540	6	9	1	Retainer–Clutch
51–4580	3	1	2	Rod–Brake
51–4600	3	3	1	Brake Arm Asm–RH
51–4610	3	4	1	Brake Arm Asm–LH
51–4650	3	8	2	Link–Brake
51–4660	3	7	2	Plate–Brake Link
51–4700	3	17	2	Band–Brake
51–4850	5	39	1	Lever–Parking Brake
52–2010	5	40	1	Decal–Parking Lever
52–2890	1	11	2	Bushing – Steering Links
54–0230	7	1	1	Field ASM Incl 2 3
54–3200	6	12	1	Clutch ASM
55–3570	1	1	1	ASM–Cap
55–7410	7	5	1	Armature & Pulley ASM
56–6360	6	2	1	Filter–Fuel
	6	1	1	Engine–12 Hp Kawasaki
57–6360	6	10	1	Screw–HH
57–6370	6	16	1	Screw–HH
57–6380	6	8	3	Screw–HH
57–6390	6	18	2	Nut
62–4540	2	22	1	Pulley–Idler
63–7590	5	15	1	Relay
63–8360	5	12	2	Key–Ignition
65–3090	5	22	1	Decal–Read Manual
66–7400	1	32	1	Plate–Control
67–6370	1	17	1	Bracket–Support
67–6380	1	18	1	Bracket–Support
67–6440	5	9	1	Handle–Upper
68–2190	2	18	1	Spring–Extension
68–9690	1	25	2	Fitting Rod
71–1280	5	36	1	Decal–Warning

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
72–2190	2	28	1	Mount–Shift Lever
74–0040	1	6	4	Spacer–Pivot
74–0050	6	14	1	Sheave–Lower
74–0060	6	15	1	Sheave–Upper
74–0220	1	14	1	Idler Bracket LH
74–0230	1	13	1	Idler Bracket RH
74–0320	2	1	1	Lever–Shift
74–0360	1	34	1	Frame–Rear
74–0380	5	6	1	Control Pivot
74–0480	2	11	2	Pulley–Drive ASM
74–0490	1	33	1	Decal–Fuel Shut–Off
74–0521	1	16	2	Rod–Fitting
74–0610	2	27	1	Transmission
74–0720	5	31	1	Tube–Manual
74–0740	5	23	1	Control–Throttle
82–2180	5	30	1	Panel–Control
82–2190	5	41	1	Switch–Bail
82–2240	5	27	1	Wire Harness
82–2280	5	7	1	Decal–Reverse
82–2290	5	2	1	Decal–Control Bar
82–2300	5	11	1	Switch
82–3820	5	10	1	Boot–Switch
82–4800	2	21	1	Lever–Idler
82–7631	5	37	2	Rod–Control
82–7680	5	4	1	Bail
82–7690	5	1	1	Bar
82–7730	5	35	1	Decal–Panel Proline
82–7750	1	4	1	Decal–Ground Speed
82–8440	1	2	1	Tank–Fuel
92–1746	4	4	4	Bearing
92–5436	6	13	1	Key
93–1156	1	29	1	Frame
93–1187	5	17	1	Panel–Bottom
	3	9	2	ASM–Wheel & Tire
94–5818	5	19	1	Module
218–461	5	13	1	Nut–HH)
218–595	5	38	1	Connector–Body
231–117	4	5	2	Tire–15x6
232–27	4	6	2	Valve Stem & Cap Assembly
237–124	1	26	1	Grommet
237–141	5	43	2	Grommet
242–80	4	1	2	Rim
2412–98	1	3	2	Clamp–Hose
2412–98	6	3	1	Clamp–Hose
2412–108	6	5	1	Clamp–Hose
2412–120	5	28	2	Clamp–"R"
251–291	7	8	1	Bearing–Pulley
251–292	7	2	1	Bearing
283–6	1	15	2	Pin–Clevis
283–55	5	21	2	Pin–Clevis
302–5	2	14	2	Fitting–Grease
302–11	4	2	2	Fitting–Grease
321–2	5	20	1	Screw–HH
321–4	2	6	4	Screw–HH
322–2	2	24	4	Screw–HH
322–4	1	30	4	Screw–HH
322–7	3	18	8	Screw–HH
323–6	1	20	6	Screw–HH
323–8	2	20	1	Screw–HH
323–16	1	19	2	Screw–HH
329–10	2	30	1	Screw
3234–11	5	33	4	Screw–HHF

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3245-1	2	15	1	Screw-Set
3245-3	2	10	2	Screw-HSH
3253-4	1	31	4	Washer-Lock
3253-4	2	25	4	Washer-Lock
3253-4	3	16	8	Washer-Lock
3253-4	6	7	3	Washer-Lock
3254-5	5	24	1	Washer-Lock
3255-8	6	17	1	Washer-Lock
3256-23	1	10	10	Washer-Flat
3256-23	6	6	3	Washer-Flat
3257-5	2	9	3	Key-Woodruff
3290-307	1	12	4	Pin-Cotter
3290-307	3	2	2	Pin-Cotter
3290-307	5	42	2	Pin-Cotter
3290-378	5	26	2	Tie-Cable
3296-2	5	3	6	Nut-Lock
3296-5	7	9	3	Nut-Lock
3296-6	2	26	1	Nut-Lock
3296-23	1	21	2	Nut-Lock
3296-29	4	3	8	Nut-Lock
3296-39	1	5	8	Nut-Lock
3296-39	2	23	1	Nut-Lock
3296-42	2	3	4	Nut-Lock
3296-42	5	14	1	Nut-Lock
32103-25	1	9	2	Nut-Wing
32104-76	5	29	4	Screw-Self TAP
32105-1	5	5	1	Screw-HH
32105-13	5	18	1	Screw-HH
32105-14	5	34	4	Screw-HH
32120-64	2	4	3	Ring-Retaining
32128-21	5	32	4	Nut-HF
32151-40	3	5	2	Ring-Retaining
32151-56	3	6	2	Ring-Retaining
32151-72	3	20	4	Ring-Retaining
32151-80	5	8	2	Ring-Push On
32151-91	3	11	2	Ring-Retaining

MAINTENANCE RECORD

[illegible]