

**LAWN-BOY®**

**SILVER SERIES  
21" WALK-BEHIND  
MOWER**

Model No. 10316 – 7900001 & Up  
Model No. 10318 – 7900001 & Up

---

**Parts Catalog**

## ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

## Contents

Description	Page	Description	Page
Housing Assembly .....	1	Engine Briggs & Stratton	
Rear Axle Assembly .....	2	Model No. 12V802-0625-01 .....	7-15
Engine Assembly .....	3	Lawn-Boy Part Number Index .....	16-17
Handle Assembly .....	4		
Gear Case Assembly .....	5		
Rear Catcher Assembly (Model No. 10318 Only) .....	6	<b>Note:</b>	

## Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Rear Bagging Kit (Model No. 10316 Only) .....	Model No. 89800	Leaf Shredder Kit .....	Model No. 89860
Side Bagging Kit .....	Model No. 89814	Leaf Bag Kit w/Chute .....	Model No. 89811
Leaf bag .....	Model No. 89804	Mow & Feed Fertilizer Spreader .....	Model No. 52070

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR .....	as required	HWHTF .....	hex washer head thread forming
ASM .....	assembly	INC .....	incorporated
CARR .....	carriage	LH .....	left hand
DEG .....	degrees	PH .....	pan head
FH .....	flat head	PPH .....	Phillips pan head
GA .....	gauge	PTO .....	power take off
HF .....	hex flange	RH .....	right hand
HFW .....	hex flange washer	SFH .....	slotted fillister head
HH .....	hex head	SH .....	square head
HHF .....	hex head flange	SHWH .....	slotted hex washer head
HHST .....	hex head self tapping	SPH .....	slotted pan head
HJ .....	hex jam	STD .....	standard
HOC .....	height-of-cut	TAP .....	self tapping
HS .....	hex socket	TH .....	truss head
HSBH .....	hex socket button head	TTH .....	Torx truss head
HSFH .....	hex socket flat head	WH .....	wing head
HSH .....	hex socket head		
HWH .....	hex washer head		

# Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

## Service Assemblies

Parts within service assemblies have reference numbers in the form  $X:Y$ .  $X$  is the reference number of the service assembly and  $Y$  is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

## Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X (Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

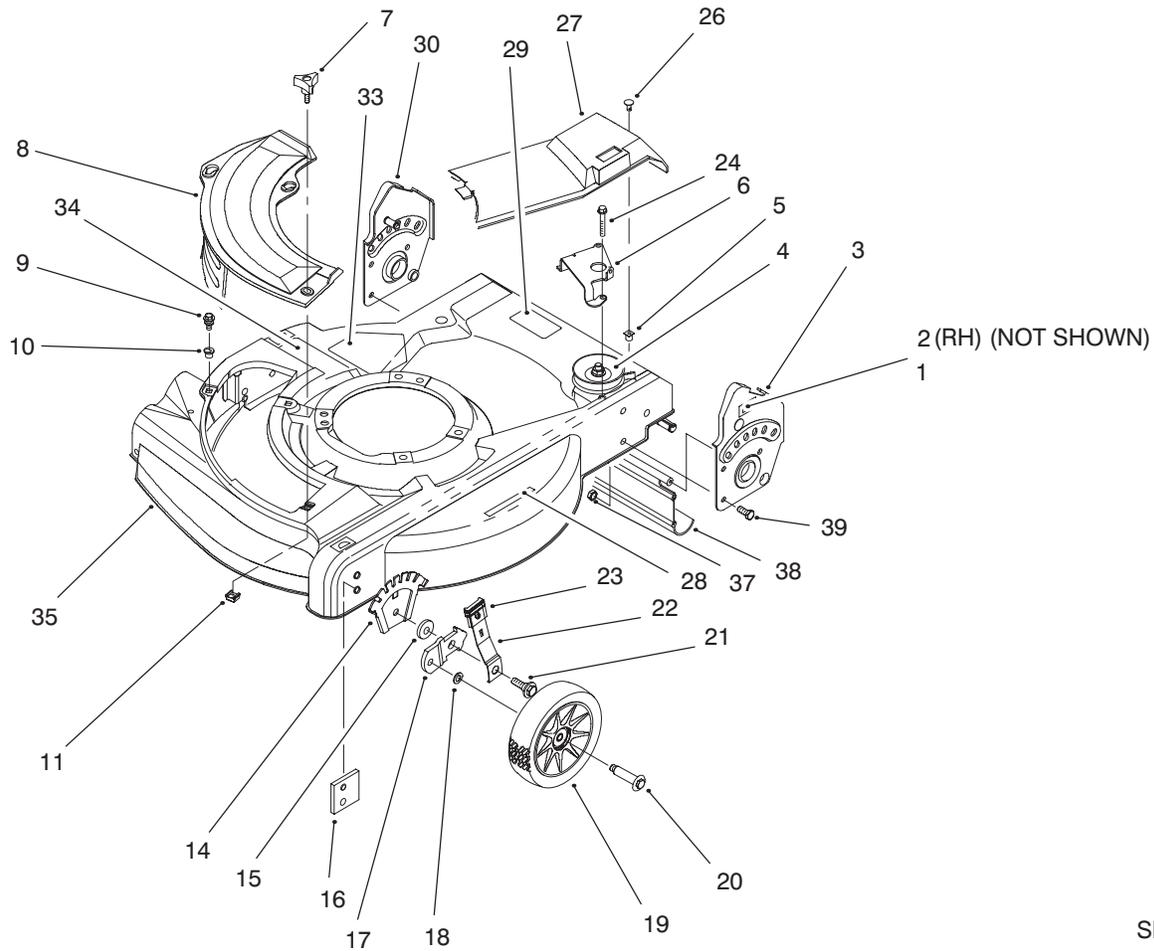

Sheet No.:2

## Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92-2915	2	Decal-HOC
2	92-2914	2	Decal-HOC
3	92-7724	1	ASM-Handle Bracket
4	92-7735	1	ASM-Gear Case
5	605120	1	Grommet
6	92-7728	1	Guide-Transmission
7	614682	1	Knob-Cover Plate
8	92-8630	1	Mulch Plate-21"
9	614677	2	Screw-Sems
10	94-1610	2	Grommet-Plastic
11	613765	1	Nut-Cage
14	92-4881	2	Plate-Height Adjust
15	92-4890	2	Washer
16	92-7731	2	Plate-Baffle
17	614637	2	Bracket-Wheel Height Adj
18	40-1940	2	Washer
19	684776	2	ASM-Wheel & Tire 6"
20	92-1099	2	Bolt-Shoulder 6" Wheel
21	614672	2	Bolt-Shoulder
22	614687	2	Spring Arm-Front
23	92-1008	4	Knob-Height Adjust
24	49-2040	2	Screw-HH
26	92-9665	1	Screw-Phil
27	614671	1	Cover-Drive


Ref. No.	Part No.	Qty.	Description
28	93-7250	1	Decal-Warning
30	92-7723	1	ASM-Handle Bracket
32	607560	1	Plate-Cover
33	39-5770	1	Decal-Danger
34	92-1097	1	Decal-Discharge
35	92-7725	1	ASM-Housing & Baffle
37	3296-29	6	Nut-Lock
38	92-8647	1	Shield-Trailing
39	322-3	6	Screw-HH









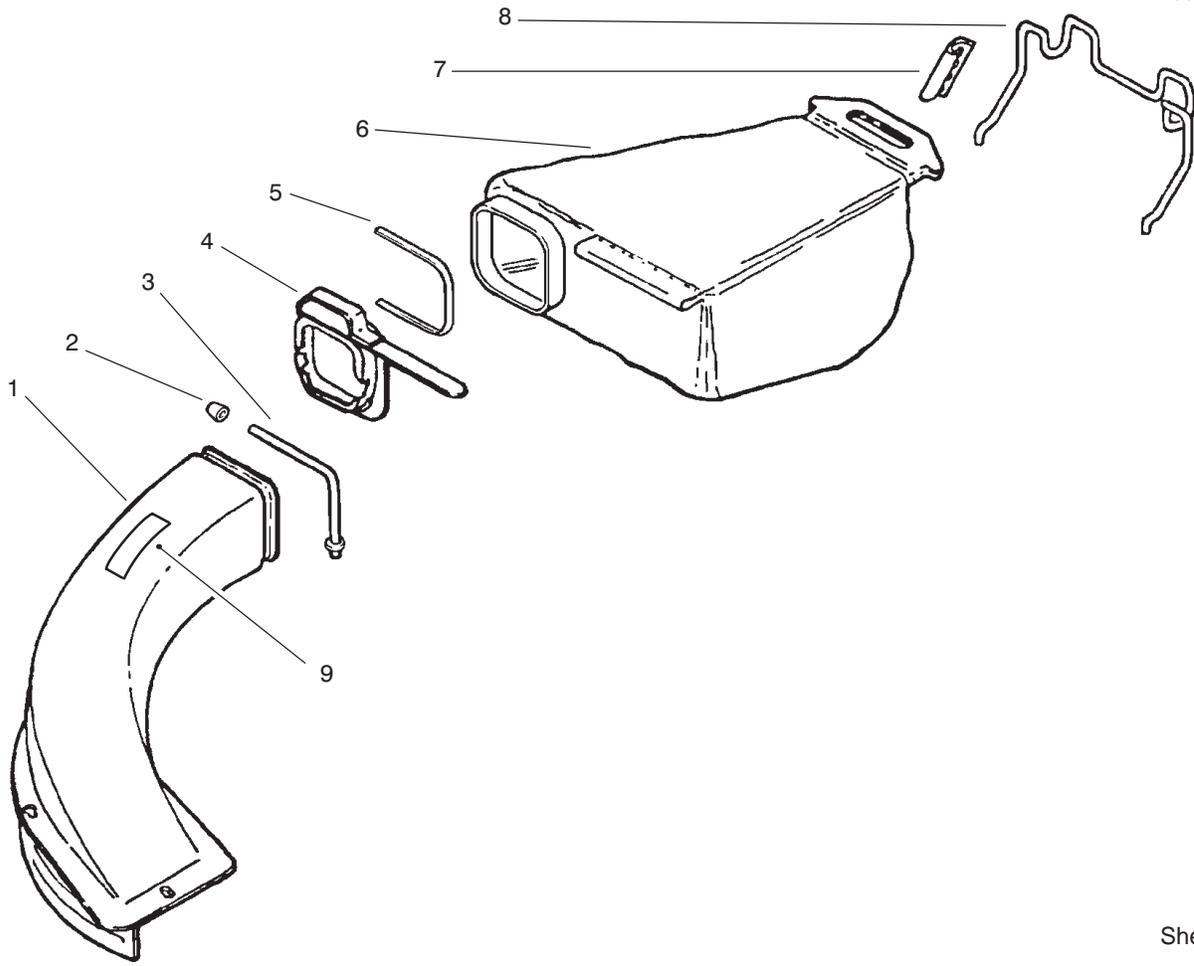


Sheet No.:7

### Rear Catcher Assembly (Model No. 10318 Only)

Ref. No.	Part No.	Qty.	Description
1	684729	1	Chute & Support Assembly
2	614589	1	Nut – Cap
3	614591	1	Chute Support
4	684727	1	Adaptor Assembly
5	614700	1	Tie Strap
6	*	1	Bag Assembly
7	613462	2	Hanger Clamp
8	613455	1	Wide Hanger
9	92-2919	1	Decal – Danger

Ref. No.	Part No.	Qty.	Description

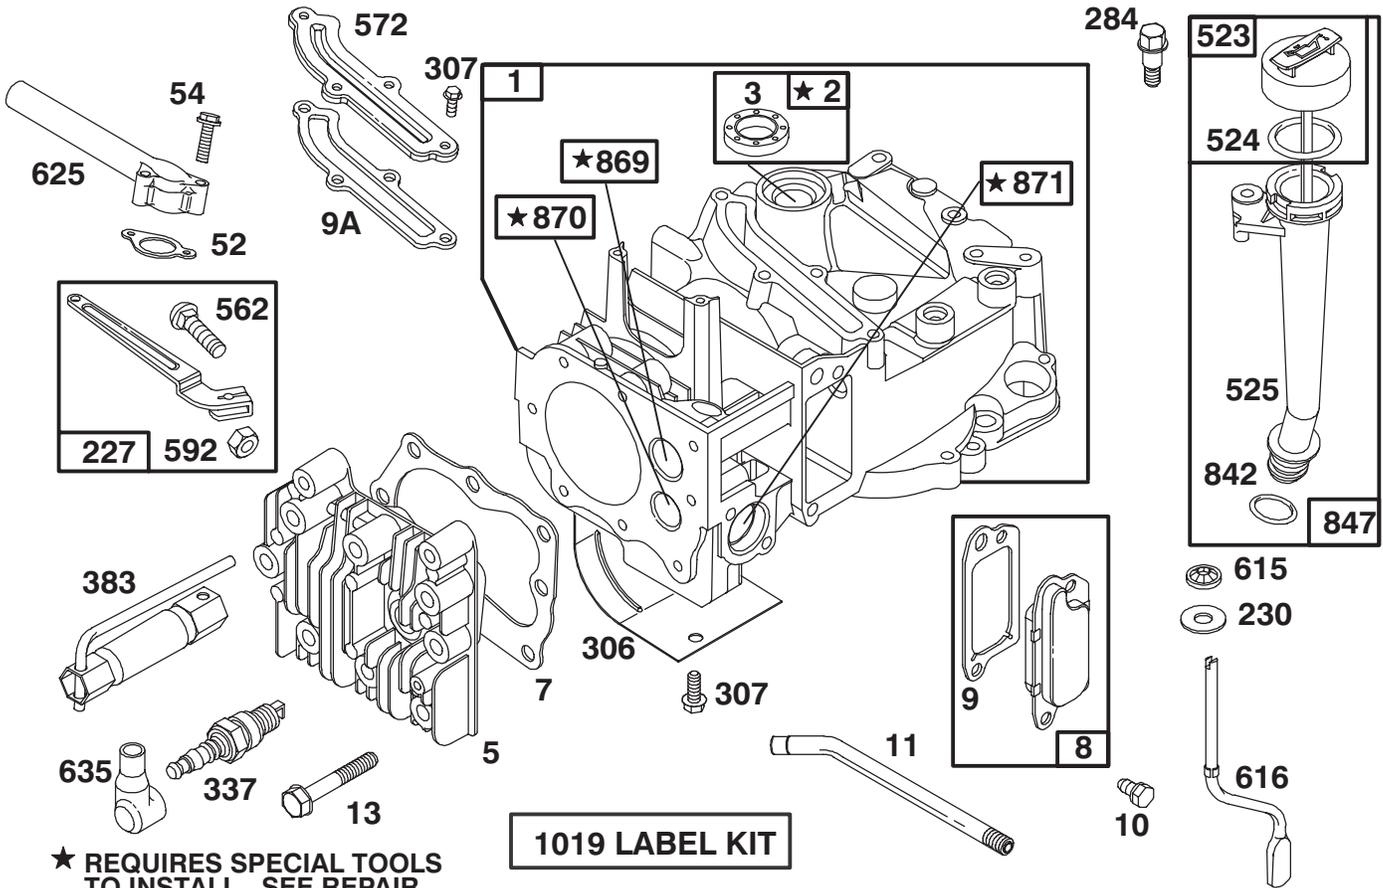


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12V802-0625-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214368	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg.	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Carriage	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	262578	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
		<b>Note:</b> 63709 Guide – Intake Valve	1
1019	494256	Label Kit	1

★ Included in Gasket Set—Part No. 497316.

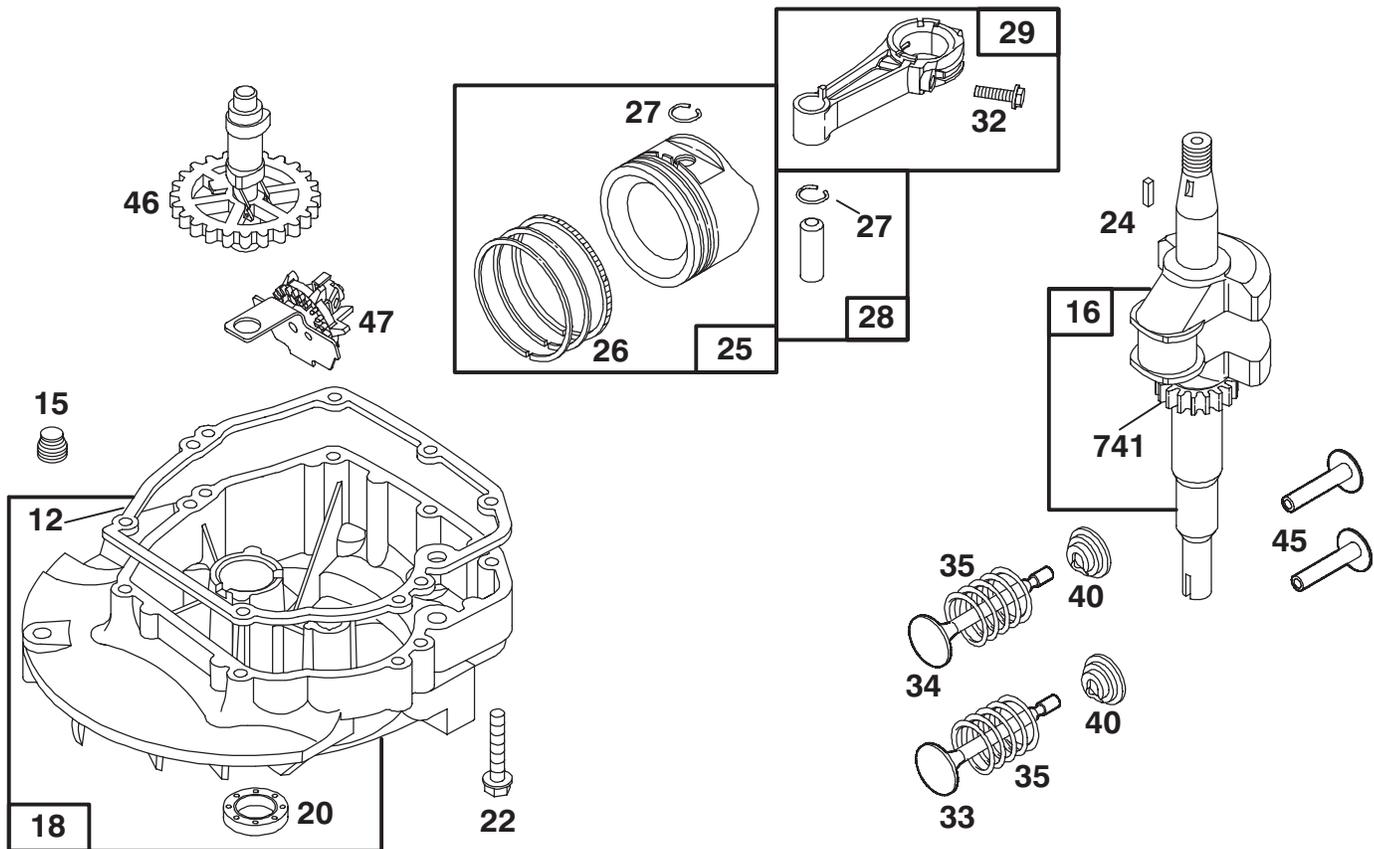


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12V802-0625-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket – Crankcase	1
15	94720	Plug – Oil Drain	1
16	498878	Crankshaft	1
		<b>Note:</b> Order 94388 For Timing Gear Key.	
18	493279	Sump – Engine	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex. Head	1
		<b>Note:</b> 94612 Screw – Hex. Head (One Used in Hole Nearest Breather)	
24	222698	Key – Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock – Piston Pin	1
28	298909	Pin – Piston (Standard)	1
	298908	Pin – Piston (.005" O.S.)	1
29	490566	Rod Assembly – Connecting	1
		<b>Note:</b> For Connecting Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	498275	Gear – Cam	1
47	493737	Slinger – Oil	1
741	262598	Gear – Timing	1

★ Included in Gasket Set—Part No. 497316.

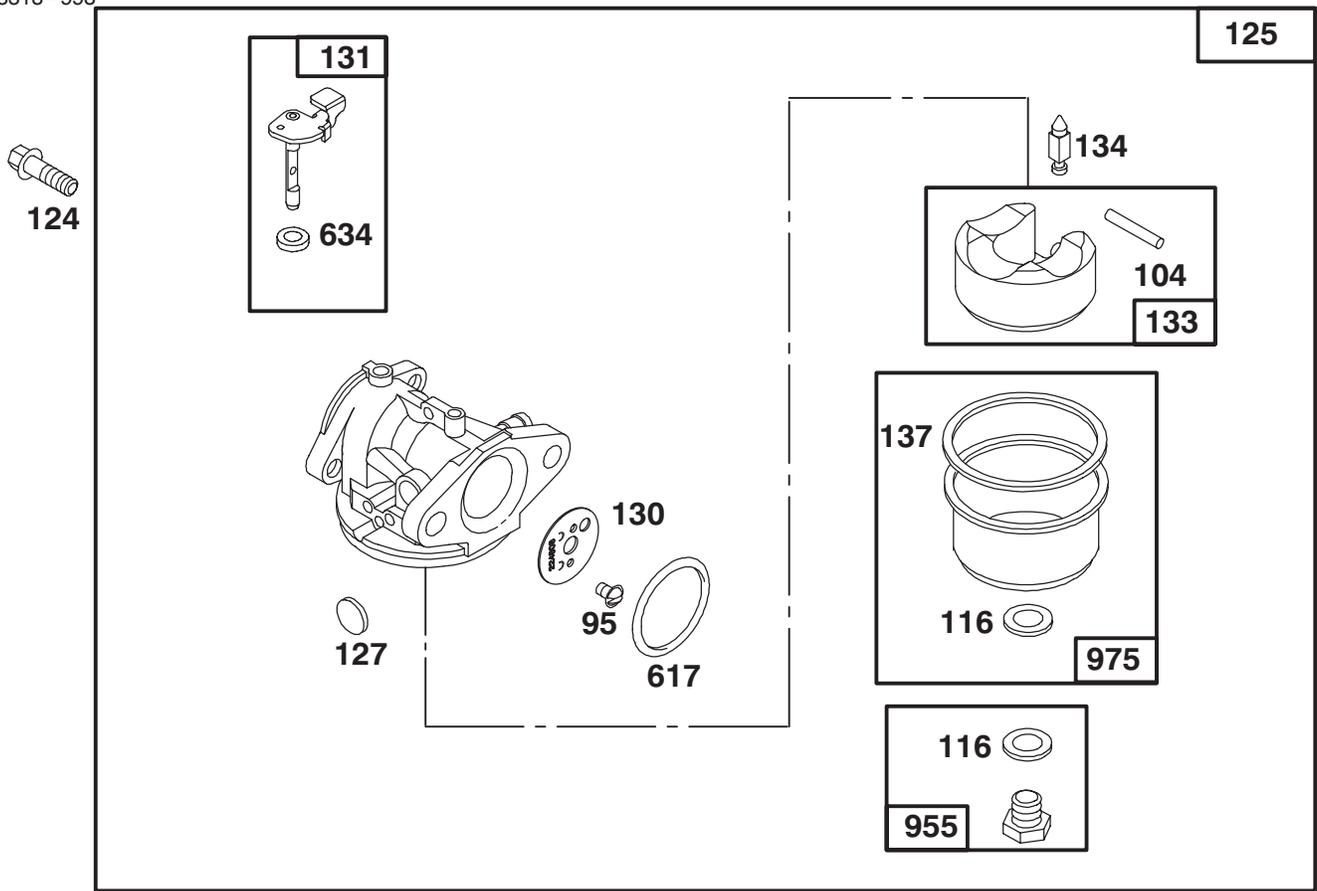

Assemblies include all parts shown in frames.


## ENGINE BRIGGS & STRATTON MODEL 12V802-0625-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mtg.	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only)	1
124	94525	Screw – Carburetor Mtg.	1
125	498966	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only)	1
955	498975	Screw – Bowl Mtg. (Std.)	1
		<b>Note:</b> 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

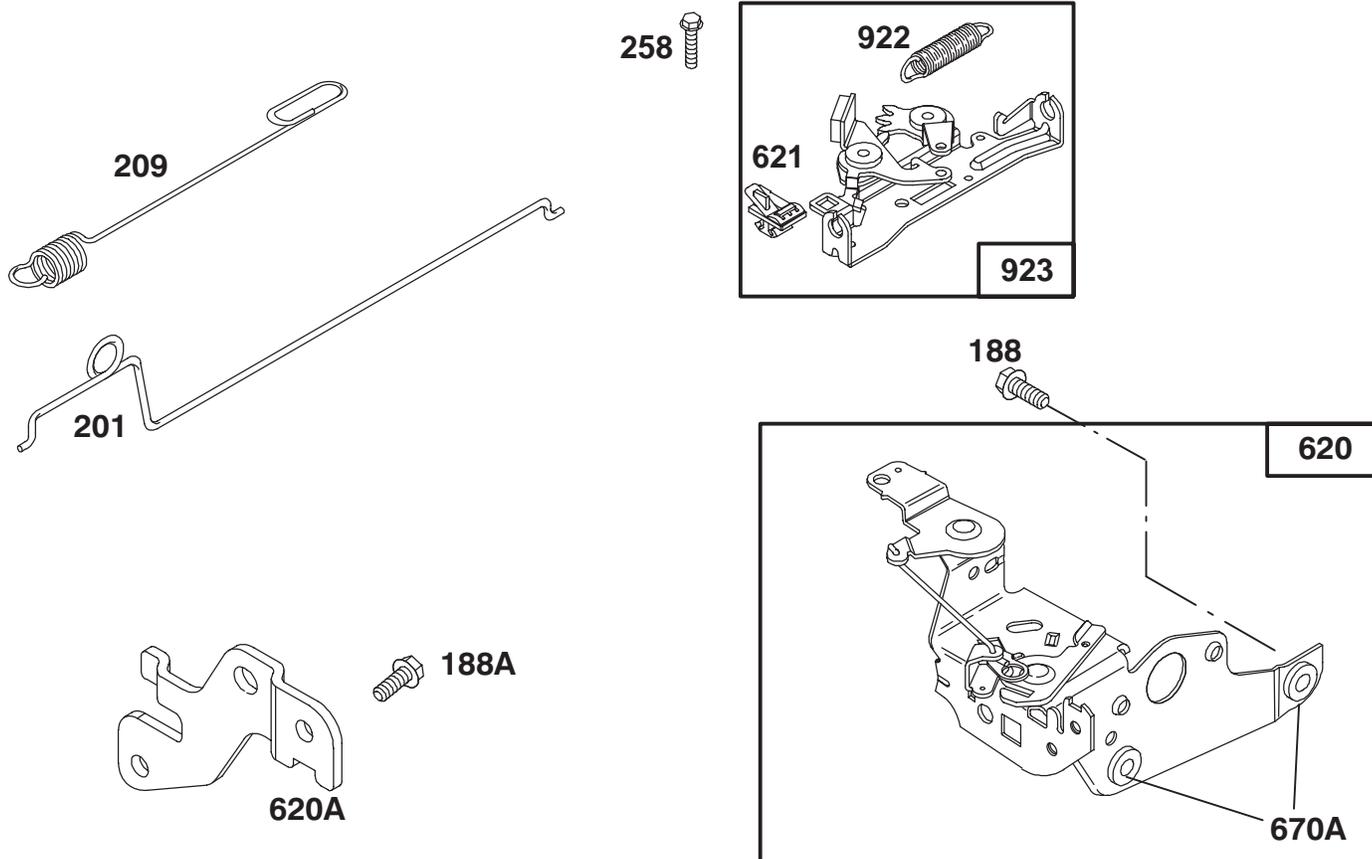

Assemblies include all parts shown in frames.

### ENGINE BRIGGS & STRATTON MODEL 12V802-0625-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw - Hex. Head	1
188A	94602	Screw - Hex. Head	1
201	262579	Link - Governor	1
209	263046	Spring - Governor	1
258	94512	Screw - Hex. Head	1
620	497203	Bracket - Carburetor	1


Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket - Control	1
621	396847	Switch - Stop	1
670A	493823	Spacer - Bracket	1
922	262640	Spring - Brake	1
923	493442	Brake Assembly	1

3318-998


969




968

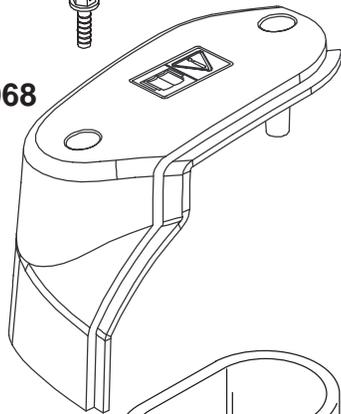

535

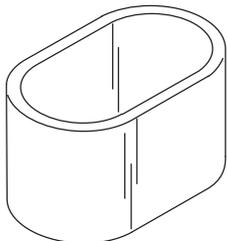

445


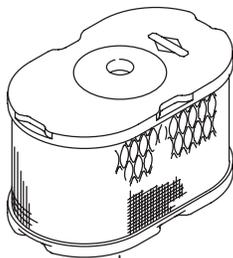


971



966

387

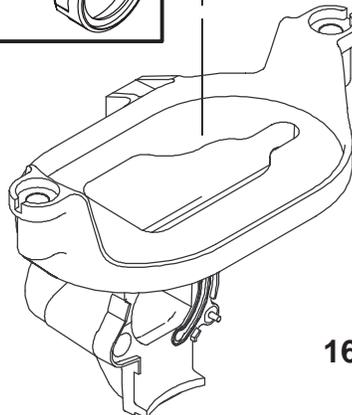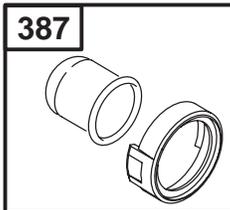

529



163




Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12V802-0625-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
445	497725	Filter — Air	1
529	281556	Grommet — Breather	1
535	273185	Filter — Air	1

Ref. No.	Part No.	Description	No. Used
966	497915	Base — Air Cleaner	1
968	281340	Cover — Air Cleaner	1
969	94777	Screw — Cover Mtg.	1
971	94655	Screw — Air Cleaner	1

\* Included in Gasket Set—Part No. 497316.

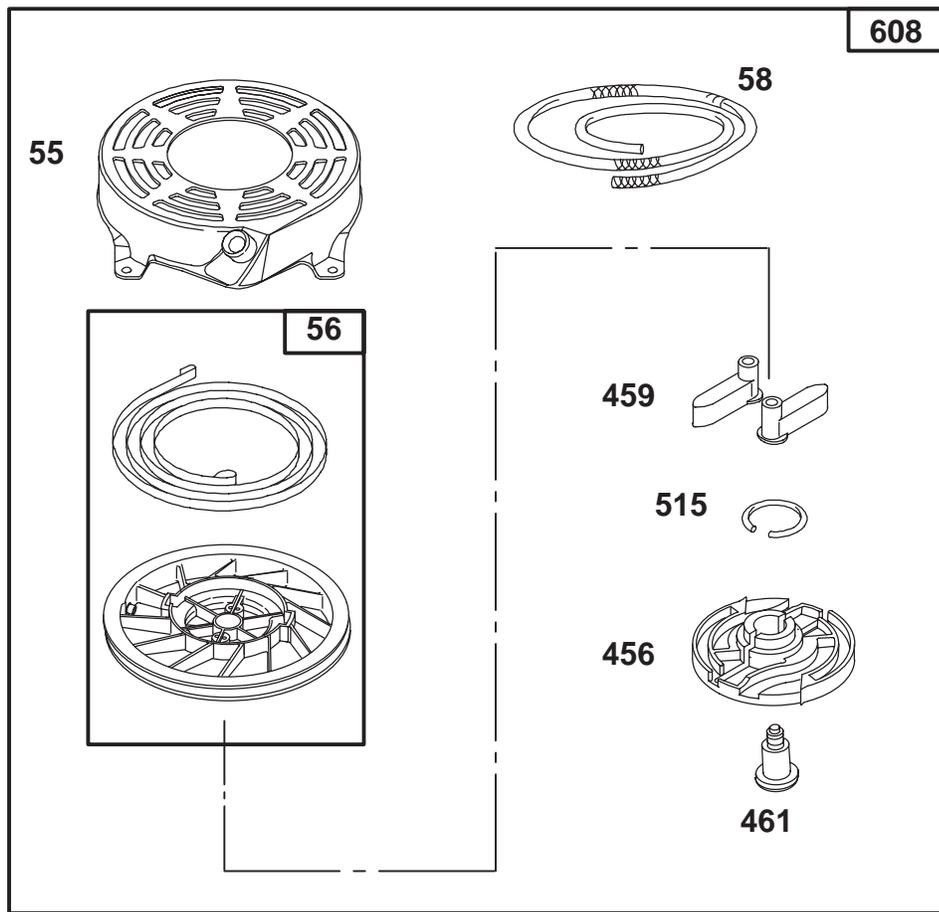


Assemblies include all parts shown in frames.

### ENGINE BRIGGS & STRATTON MODEL 12V802-0625-01

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Rewind Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1
59	224467	Insert – Starter Grip	1
60	493926	Handle – Rewind Starter	1
456	281503	Retainer – Rewind Starter	1
459	281505	Pawl – Starter	1

Ref. No.	Part No.	Description	No. Used
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter Assy. – Rewind <b>Includes:</b> 94128 Screw – Hex. Head 92987 Nut – Hex.	1 1 1

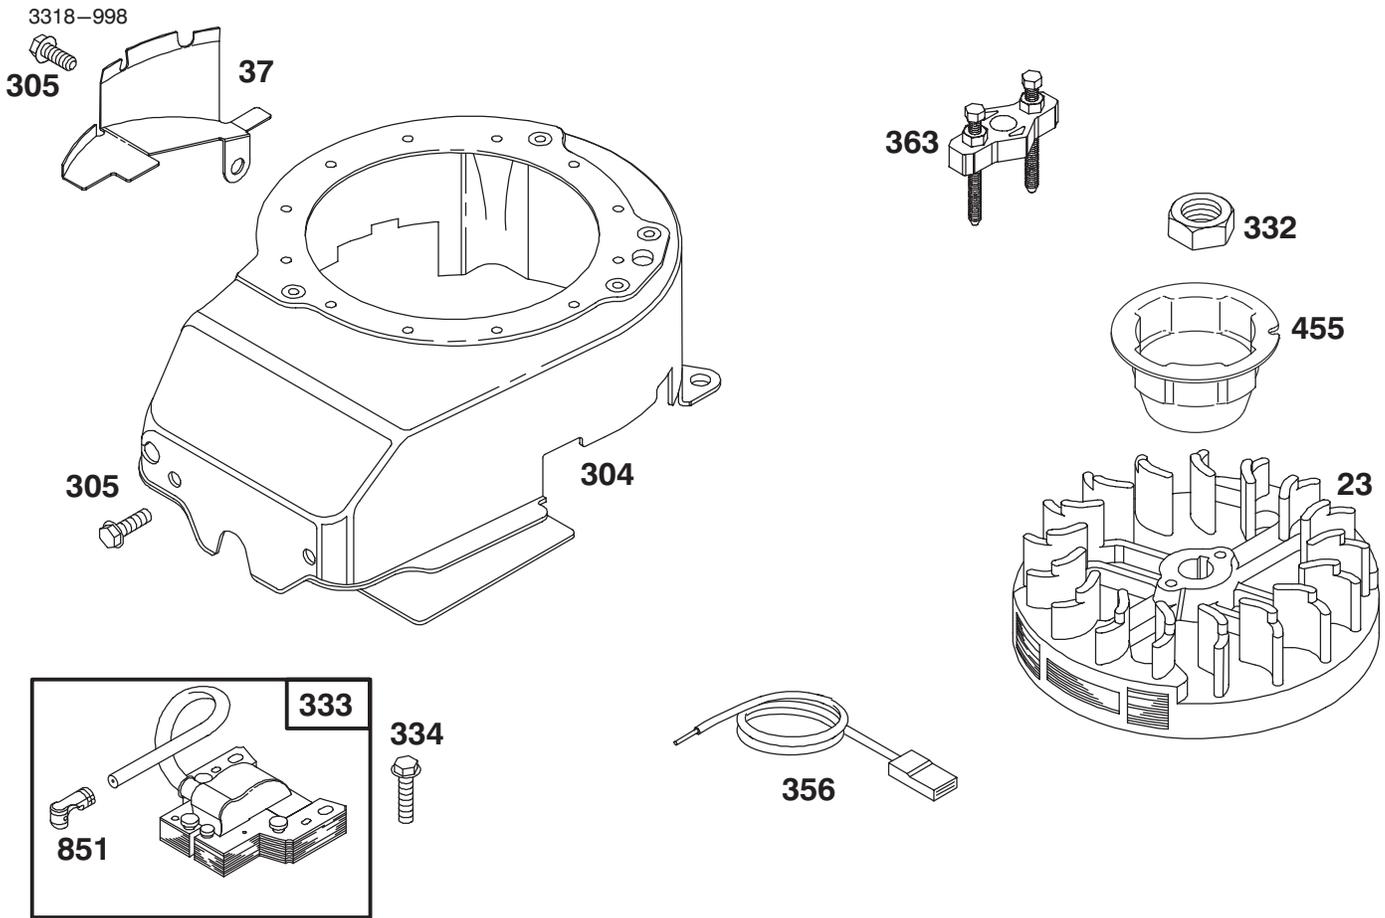


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12V802-0625-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
304	493293	Housing – Blower	1
305	94744	Screw – Sem	1
332	92284	Nut – Flywheel	1
333	802574	Armature – Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw – Sem	1
356	398808	Wire – Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup – Starter	1
851	493880	Terminal – Ignition Cable	1

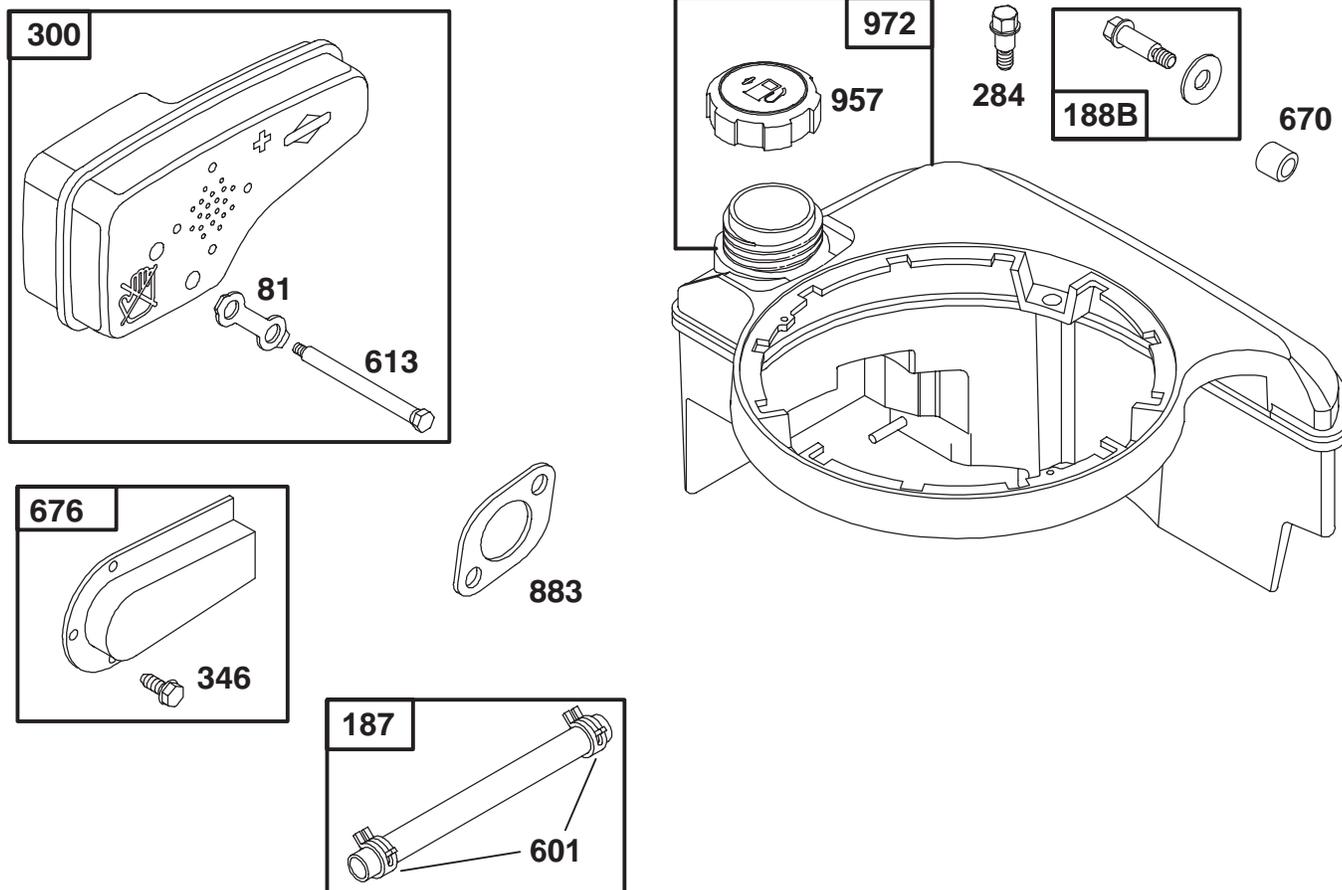




Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12V802-0625-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188B	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93053	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

★ Included in Gasket Set—Part No. 497316.

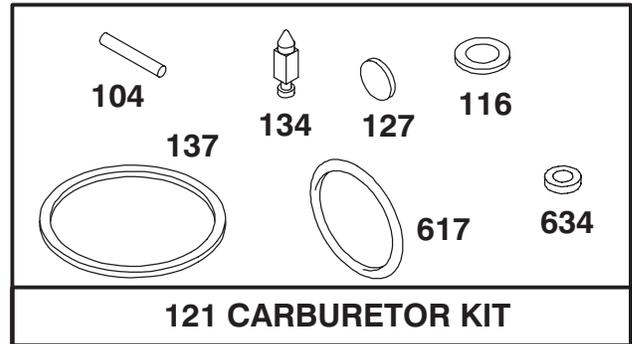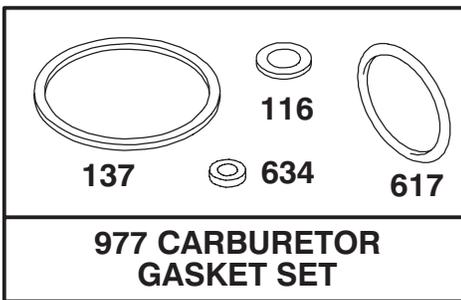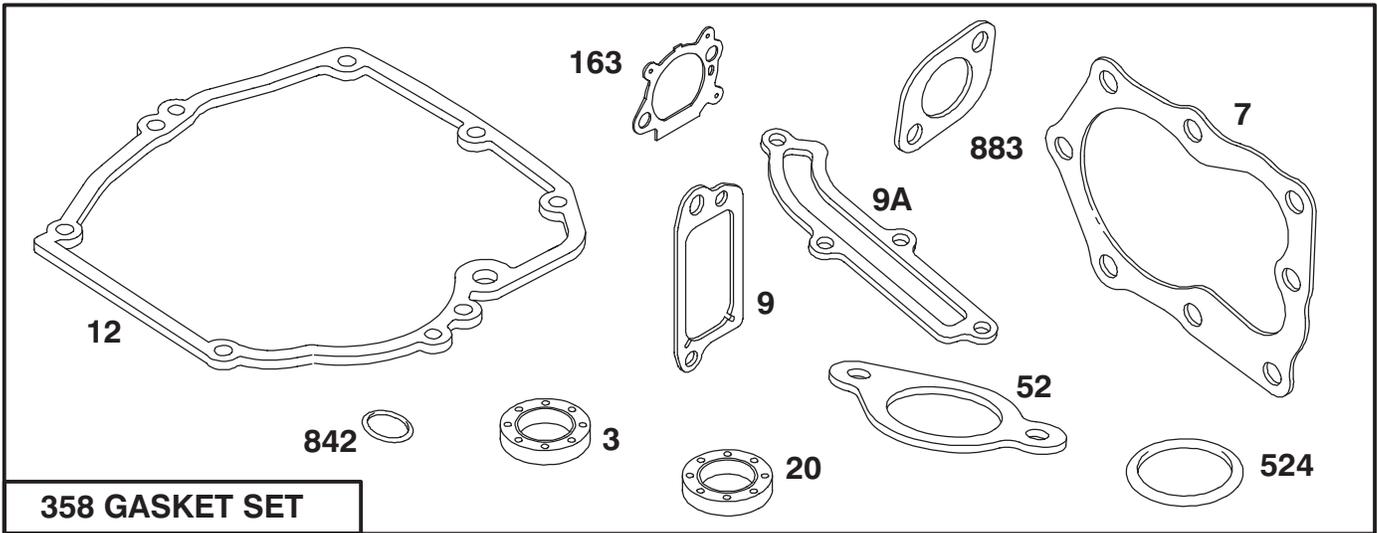

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12V802-0625-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
◆116		Gasket – Sealing (Sold in Kit Only)	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
◆◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
◆◆617	270344	Seal – Fuel Intake Tube	1
◆◆634		Washer – Shaft (Sold in Kit Only)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	498261	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

# Lawn-Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
*	6	6	1	Bag Assembly
605120	1	5	1	Grommet
607560	1	32	1	Plate-Cover
610358	2	13	2	Nut-Lock
612543	3	12	1	Blade-21" Whirl
613227	3	11	1	Screw-Set
613455	4	27	1	Hanger-Wide
613455	6	8	1	Wide Hanger
613462	6	7	2	Hanger Clamp
613462	4	28	2	Hanger-Clamp
613765	1	11	1	Nut-Cage
614243	4	3	1	Knob
614426	2	19	2	Washer-Stepped
614447	2	9	2	Spacer-Axle Shaft
614589	6	2	1	Nut - Cap
614591	6	3	1	Chute Support
614596	5	18	1	Gear 34 Tooth
614637	1	17	2	Bracket-Wheel Height Adj
614643	4	19	1	Handle Section-Lower
614668	5	2	1	Cover - Gear Case
614669	5	12	2	Pulley - Half
614671	1	27	1	Cover-Drive
614672	1	21	2	Bolt-Shoulder
614677	1	9	2	Screw-Sems
614682	1	7	1	Knob-Cover Plate
614687	1	22	2	Spring Arm-Front
614696	5	4	1	Shaft - Intermediate
614697	4	2	2	Screw-Handle
614700	6	5	1	Tie Strap
677525	3	1	1	ASM-Plate & Collar
684727	6	4	1	Adaptor Assembly
684728	4	25	1	ASM-Bag & Adapter
684729	4	26	1	ASM-Chute & Support
684729	6	1	1	Chute & Support Assembly
684776	1	19	2	ASM-Wheel & Tire 6"
26-0671	3	8	1	Bolt-Blade
36-4780	5	17	2	Washer - Thrust
36-4791	5	5	2	Washer
38-7820	5	15	1	Bearing - Ball
39-5770	1	33	1	Decal-Danger
40-1940	1	18	2	Washer
49-2040	1	24	2	Screw-HH
55-3760	5	3	1	Pinion - 15 Tooth
60-8750	5	6	2	Bushing
60-8850	5	9	2	Bushing - Output
60-8890	5	16	1	Gear - Bevel Pinion
62-6660	5	11	1	Spacer
65-2720	2	3	4	Ring-Retaining
65-4710	2	7	2	Ring-Friction
65-4720	2	17	2	Spring-Compression
65-4730	2	14	2	Washer-Thrust
65-4740	2	4	4	Washer-Thrust
65-4750	2	16	2	Gear-Pinion
65-4760	2	15	2	Washer
66-6040	2	6	1	Key-Rocking
66-6050	2	5	1	Key-Rocking
82-8550	3	15	1	Shield-Muffler
92-1001	4	9	1	Bail-Sp Control
92-1004	2	12	2	ASM-Spring Arm
92-1008	1	23	4	Knob-Height Adjust
92-1024	3	4	1	Guide-Belt
92-1042	2	2	2	ASM-Whl
92-1057	2	1	2	Bolt-Shoulder

\*Not Illustrated

# Lawn-Boy Part Number Index (Cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-1097	1	34	1	Decal-Discharge
92-1099	1	20	2	Bolt-Shoulder 6" Wheel
92-1630	3	13	1	Fan-Mulching
92-2269	4	5	1	Screw-Handle
92-2914	1	2	2	Decal-HOC
92-2915	1	1	2	Decal-HOC
92-2919	6	9	1	Decal - Danger
92-4881	1	14	2	Plate-Height Adjust
92-4890	1	15	2	Washer
92-5412	4	8	1	Stop-Pivot
92-6542	3	2	1	Pulley-Engine
92-7723	1	30	1	ASM-Handle Bracket
92-7724	1	3	1	ASM-Handle Bracket
92-7725	1	35	1	ASM-Housing & Baffle
92-7727	5	10	1	Gearcase
92-7728	1	6	1	Guide-Transmission
92-7731	1	16	2	Plate-Baffle
92-7735	1	4	1	ASM-Gear Case
92-7746	2	8	2	ASM-Hgt Adj Arm
92-8630	1	8	1	Mulch Plate-21"
92-8647	1	38	1	Shield-Trailing
92-9665	1	26	1	Screw-Phil
93-0239	5	7	1	Shaft - Output
93-3653	4	31	1	Handle-Guard
93-4196	3	14	1	Shield-Grass
93-7250	1	28	1	Decal-Warning
93-7380	4	1	1	Anchor-Cable
93-7381	2	10	1	V-Belt
93-7383	4	16	1	Guide-Rope
94-1609	2	18	2	Cover-Wheel
94-1610	1	10	2	Grommet-Plastic
94-6085	3	6	1	ASM-Engine
94-6096	4	6	1	Anchor-Cable
94-6097	4	34	1	Stop-Bail
94-6099	4	12	1	Bail-Flywheel Brake
95-0656	3	25	1	Applique
95-1703	3	9	1	Decal-Recoil
95-1704	3	17	1	Shroud-Engine (P/W Eng)
95-1706	3	19	2	Screw-Shroud (P/W Eng)
95-1707	3	20	2	Screw-Air Cleaner (P/W)
95-1708	3	23	1	Decal - Primer
95-1709	3	18	1	Cover-Air Cleaner (P/W)
95-1712	3	22	1	Spacer-Blade
95-1713	4	13	1	Handle Section-Upper
95-1718	4	18	1	ASM-Brake Cable
95-1720	4	17	1	Cable-Throttle
95-1726	3	3	3	Screw-Engine Mount
95-5590	4	7	1	Cable-Traction
2210-316	3	7	1	Rope-Stop (P/W Eng)
321-50	4	15	1	Screw
322-3	1	39	6	Screw-HH
3253-22	3	21	1	Washer-Lock
3256-1	4	32	1	Washer - Flat
3256-24	5	13	1	Washer
3285-19	5	8	2	Pin - Groove
3296-5	5	14	1	Nut
3296-29	1	37	6	Nut-Lock
3296-73	4	4	2	Nut-Lock
32144-4	5	1	4	Screw - Taptite
32144-73	3	16	3	Screw-HWHTF
32144-85	2	11	2	Screw-HH

\*Not Illustrated