

LAWN-BOY®

SILVER SERIES 21" WALK-BEHIND MOWER

Model No. 10317-7900001 & Up
Model No. 10319-7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Engine Briggs & Stratton	
Rear Axle Assembly	2	Model No. 12V802-1741-A1	7-15
Engine Assembly	3	Lawn-Boy Part Number Index	16-17
Handle Assembly	4		
Gear Case Assembly	5		
Rear Catcher Assembly			
(Model No. 10319 Only)	6		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Shredder Kit	Model No. 89860
Rear Bagging Kit		Leaf Bag Kit w/Chute	Model No. 89811
(Model No. 10317 Only)	Model No. 89800	Mow & Feed	
Leaf Bag	Model No. 89804	Fertilizer Spreader	Model No. 52070

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head
ASM	assembly		thread forming
CARR	carriage	INC	incorporated
DEG	degrees	LH	left hand
FH	flat head	PH	pan head
GA	gauge	PPH	Phillips pan head
HF	hex flange	PTO	power take off
HFW	hex flange washer	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SH	square head
HHST	hex head self tapping	SHWH	slotted hex washer head
HJ	hex jam	SPH	slotted pan head
HOC	height-of-cut	STD	standard
HS	hex socket	TAP	self tapping
HSBH	hex socket button head	TH	truss head
HSFH	hex socket flat head	TTH	Torx truss head
HSH	hex socket head	WH	wing head
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

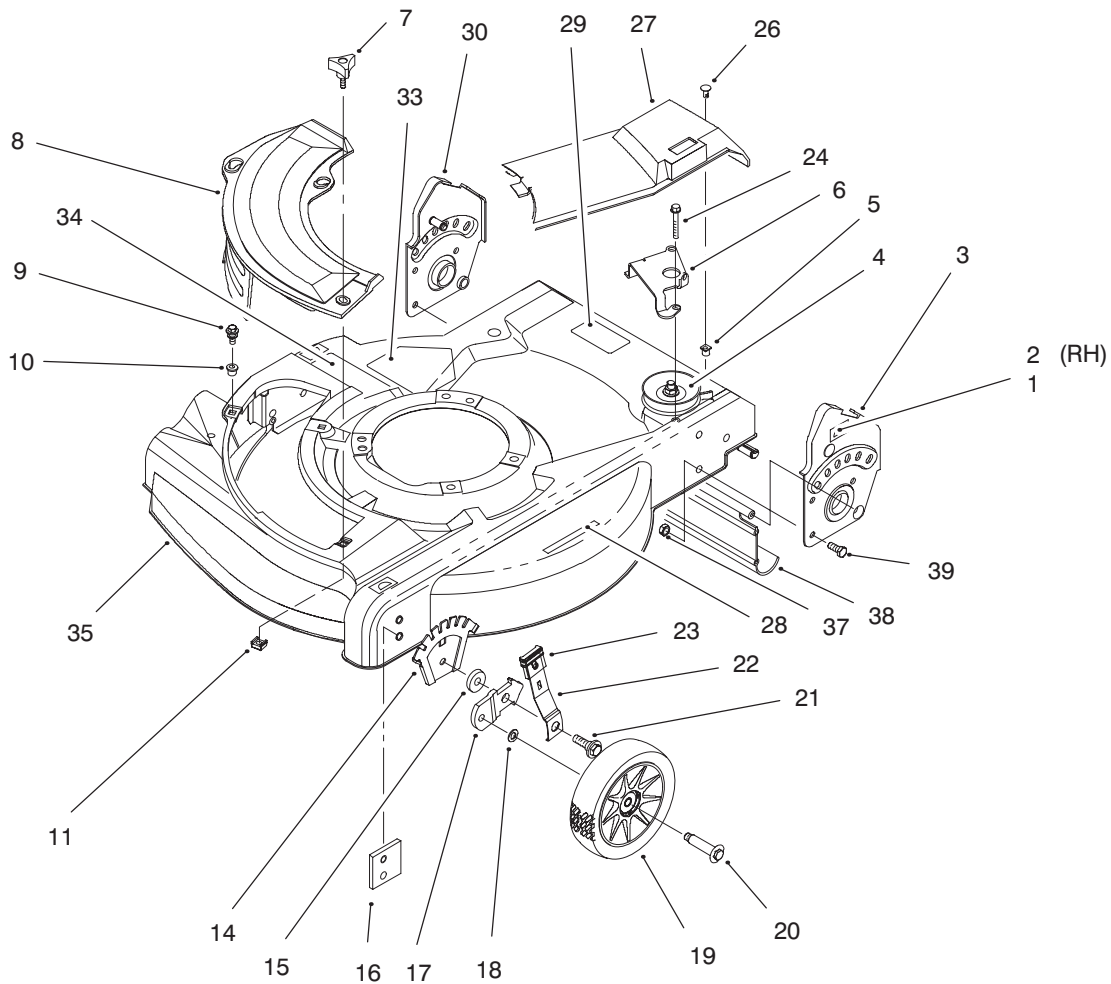


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92-2915	2	Decal-HOC
2	92-2914	2	Decal-HOC
3	92-7724	1	ASM-Handle Bracket
4	92-7735	1	ASM-Gear Case
5	605120	1	Grommet
6	92-7728	1	Guide-Transmission
7	614682	1	Knob-Cover Plate
8	92-8630	1	Mulch Plate-21"
9	614677	2	Screw-Sems
10	94-1610	2	Grommet-Plastic
11	613765	1	Nut-Cage
14	92-4881	2	Plate-Height Adjust
15	92-4890	2	Washer
16	92-7731	2	Plate-Baffle
17	614637	2	Bracket-Wheel Height Adj
18	40-1940	2	Washer
19	684776	2	ASM-Wheel & Tire 6"
20	92-1099	2	Bolt-Shoulder 6" Wheel
21	614672	2	Bolt-Shoulder
22	614687	2	Spring Arm-Front
23	92-1008	4	Knob-Height Adjust
24	49-2040	2	Screw-HH
26	92-9665	1	Screw-Phil
27	614671	1	Cover-Drive

Ref. No.	Part No.	Qty.	Description
28	93-7250	1	Decal-Warning
30	92-7723	1	ASM-Handle Bracket
32	607560	1	Plate-Cover
33	39-5770	1	Decal-Danger
34	92-1097	1	Decal-Discharge
35	16-4369	1	ASM-Housing & Baffle
37	3296-29	6	Nut-Lock
38	92-8647	1	Shield-Trailing
39	322-3	6	Screw-HH

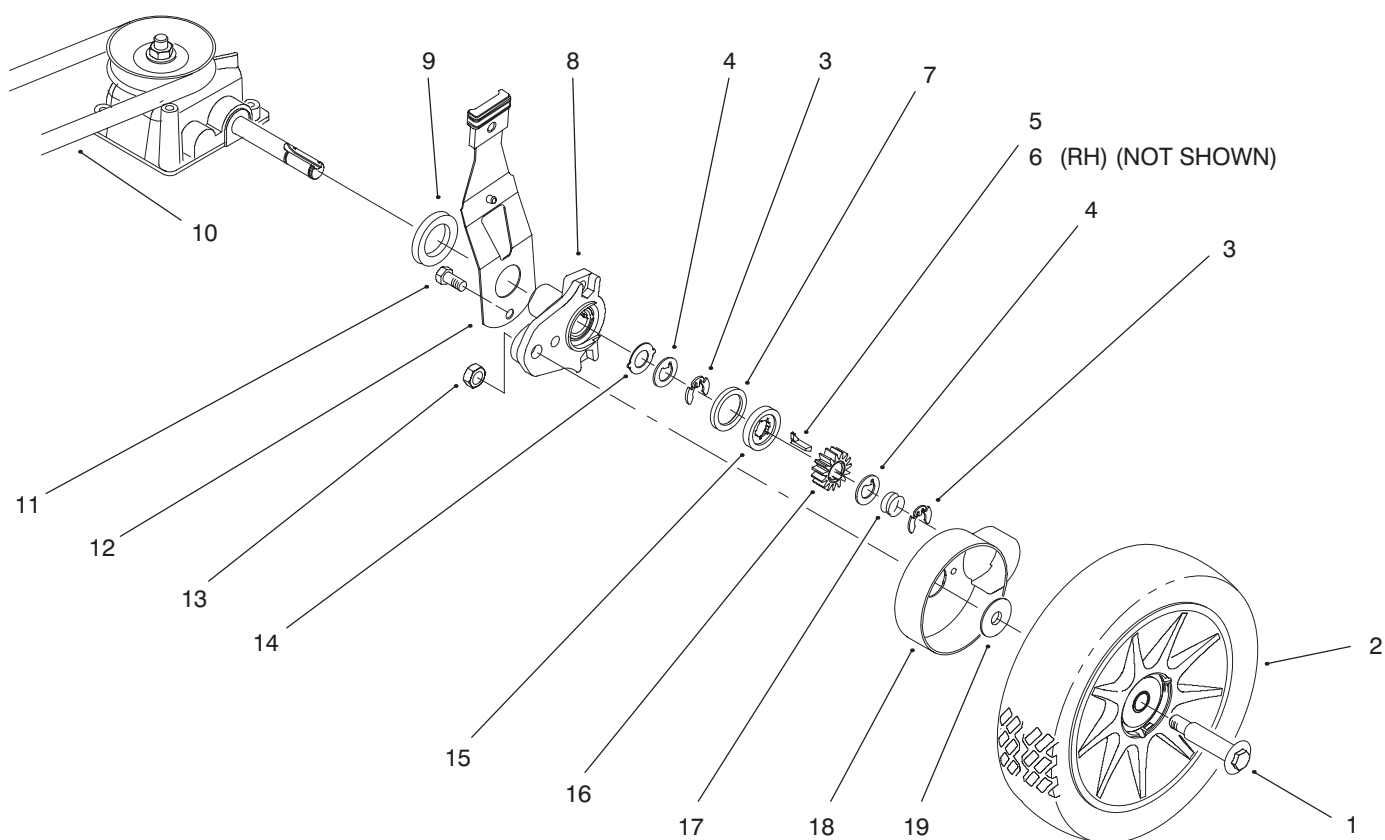 


Sheet No.:3

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	ASM-Whl
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking
6	66-6040	1	Key-Rocking
7	65-4710	2	Ring-Friction
8	92-7746	2	ASM-Hgt Adj Arm
9	614447	2	Spacer-Axle Shaft
10	93-7381	1	V-Belt
11	32144-85	2	Screw-HH
12	92-1004	2	ASM-Spring Arm
13	610358	2	Nut-Lock
14	65-4730	2	Washer-Thrust
15	65-4760	2	Washer
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped

Ref. No.	Part No.	Qty.	Description

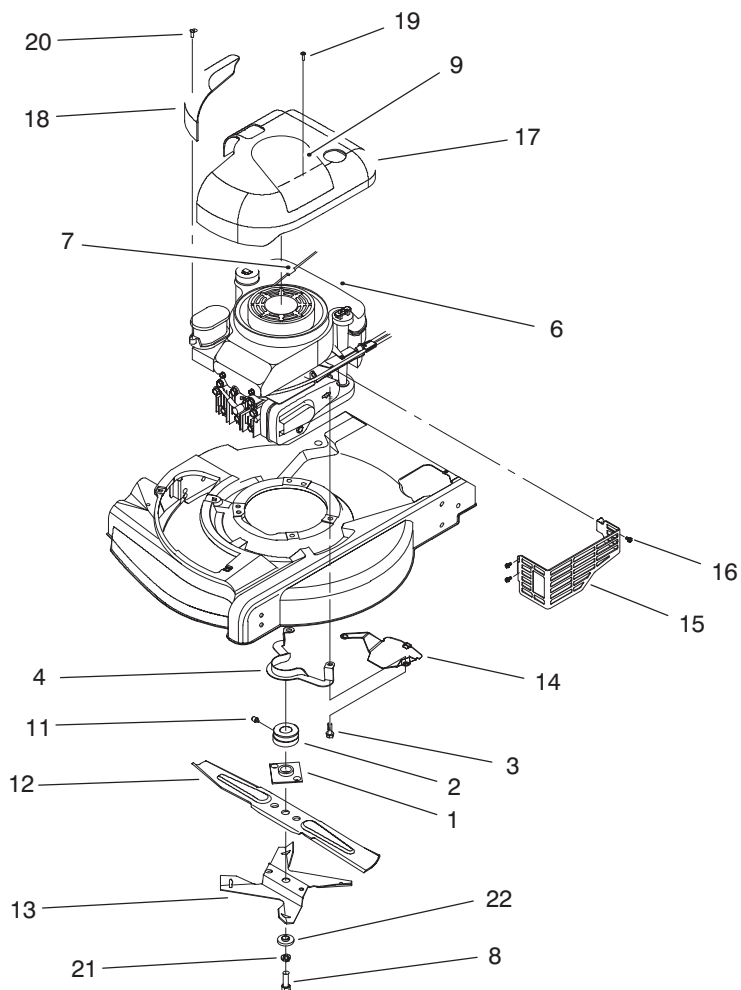 


Sheet No.:4

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	677525	1	ASM—Plate & Collar
2	92—6542	1	Pulley—Engine
3	95—1726	3	Screw—Engine Mount
4	92—1024	1	Guide—Belt
6	94—6084	1	ASM—Engine
7	2210—316	1	Rope—Stop (P/W Eng)
8	26—0671	1	Bolt—Blade
9	95—1703	1	Decal—Recoil
11	613227	1	Screw—Set
12	612543	1	Blade—21" Whirl
13	92—1630	1	Fan—Mulching
14	93—4196	1	Shield—Grass
15	82—8550	1	Shield—Muffler
16	32144—73	3	Screw—HWHTF
17	95—1704	1	Shroud—Engine (P/W Eng)
18	95—1705	1	Cover—Air Cleaner (P/W Eng)
19	95—1706	2	Screw—Shroud (P/W Eng)
20	95—1707	2	Screw—Air Cleaner (P/W Eng)
21	3253—22	1	Washer—Lock
22	95—1712	1	Spacer—Blade


Ref. No.	Part No.	Qty.	Description

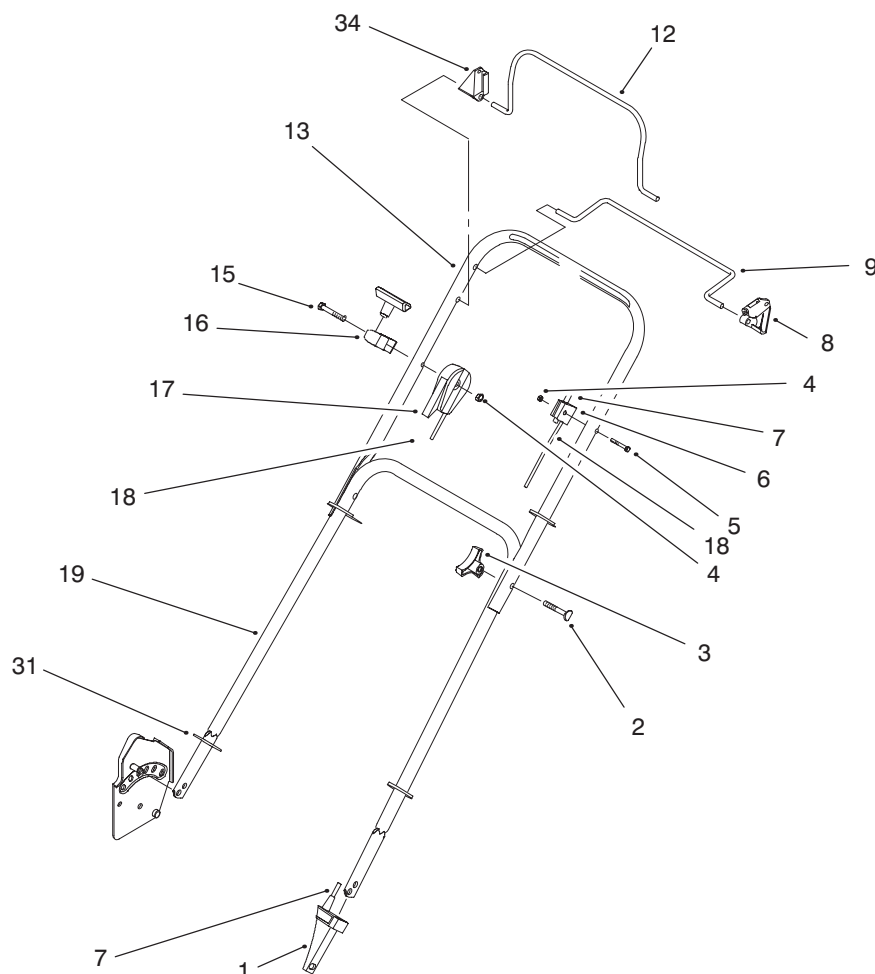 

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	93-7380	1	Anchor-Cable
2	614697	2	Screw-Handle
3	614243	2	Knob
4	3296-73	2	Nut-Lock
5	92-2269	1	Screw-Handle
6	94-6096	1	Anchor-Cable
7	92-7726	1	Cable-Traction
8	92-5412	1	Stop-Pivot
9	92-1001	1	Bail-Sp Control
11	94-6093	1	Card-Product Description
12	94-6099	1	Bail-Flywheel Brake
13	95-1713	1	Handle Section-Upper
15	321-50	1	Screw
16	93-7383	1	Guide-Rope
17	95-1720	1	Cable-Throttle
18	95-1718	1	ASM-Brake Cable
19	614643	1	Handle Section-Lower
31	93-3653	1	Handle-Guard
34	94-6097	1	Stop-Bail
35	95-0656	1	Applique-Shroud

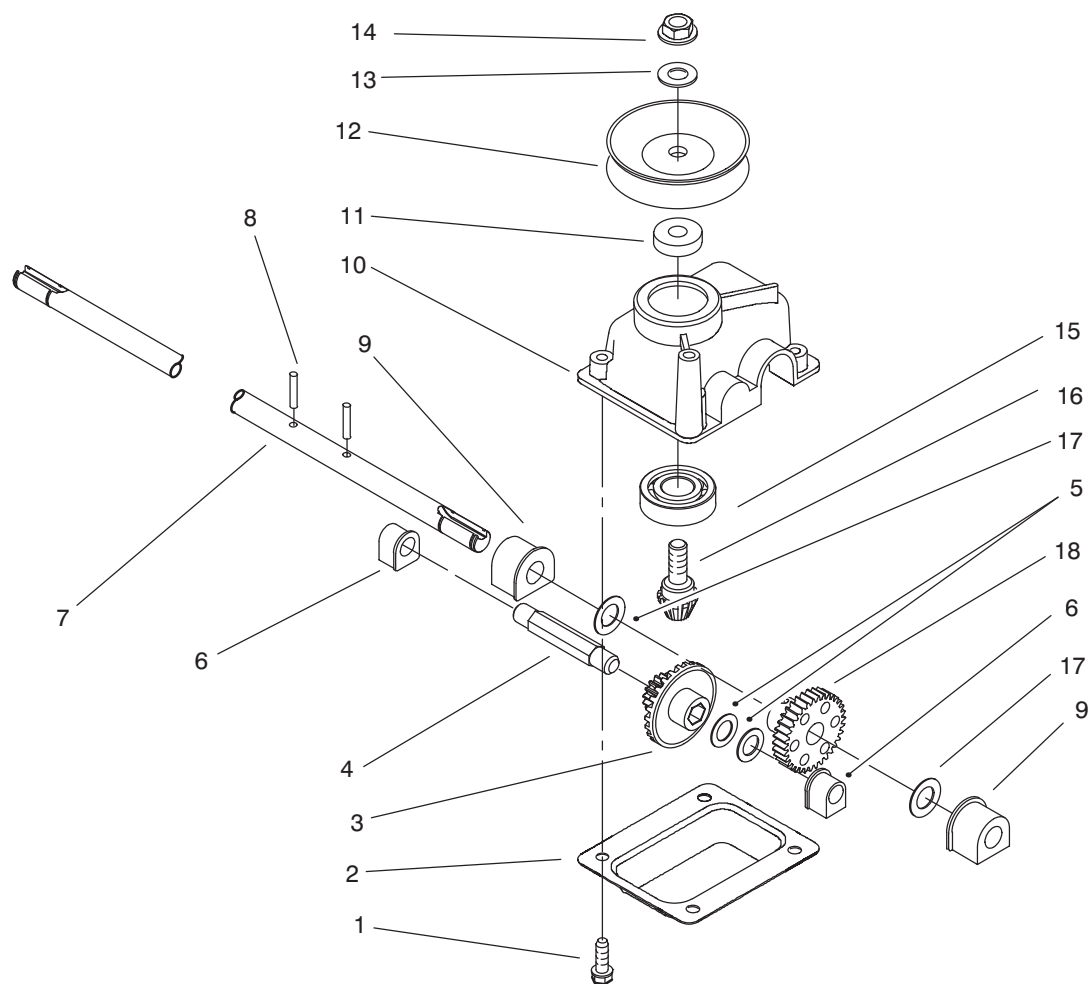 


Sheet No.:6

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-4	4	Screw – Taptite
2	614668	1	Cover – Gear Case
3	55-3760	1	Pinion – 15 Tooth
4	614696	1	Shaft – Intermediate
5	36-4791	2	Washer
6	60-8750	2	Bushing
7	93-0239	1	Shaft – Output
8	3285-19	2	Pin – Groove
9	60-8850	2	Bushing – Output
10	92-7727	1	Gearcase
11	62-6660	1	Spacer
12	614669	2	Pulley – Half
13	3256-24	1	Washer
14	3296-5	1	Nut
15	38-7820	1	Bearing – Ball
16	60-8890	1	Gear – Bevel Pinion
17	36-4780	2	Washer – Thrust
18	614596	1	Gear 34 Tooth

Ref. No.	Part No.	Qty.	Description

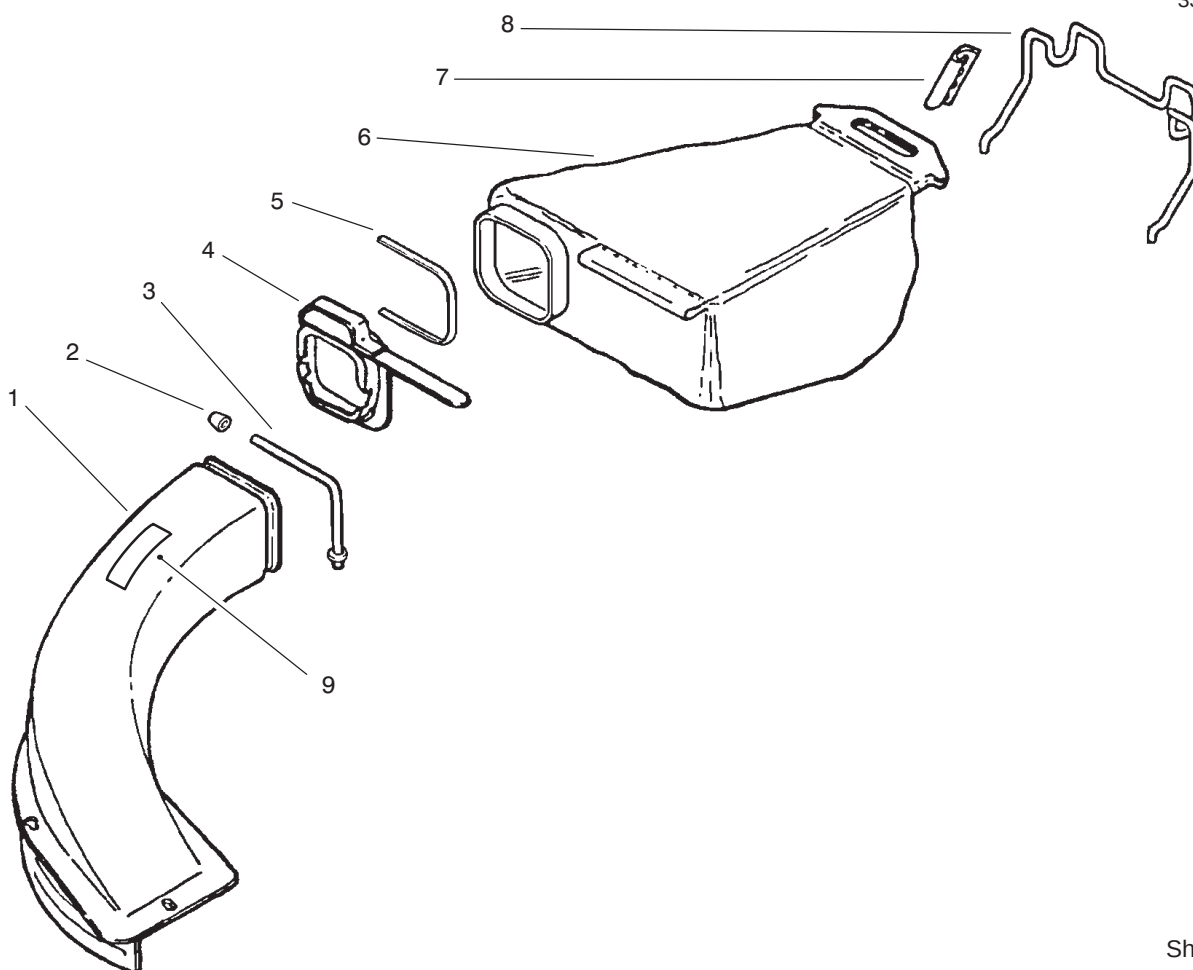 


Sheet No.:7

Rear Catcher Assembly (Model No. 10319 Only)

Ref. No.	Part No.	Qty.	Description
1	684729	1	Chute & Support Assembly (Incl. Ref. #2, 3, & 9)
2	614589	1	Nut – Cap
3	614591	1	Chute Support
4	684727	1	Adaptor Assembly
5	614700	1	Tie Strap
6	*	1	Bag Assembly
7	613462	2	Hanger Clamp
8	613455	1	Wide Hanger
9	92–2919	1	Decal – Danger

Ref. No.	Part No.	Qty.	Description

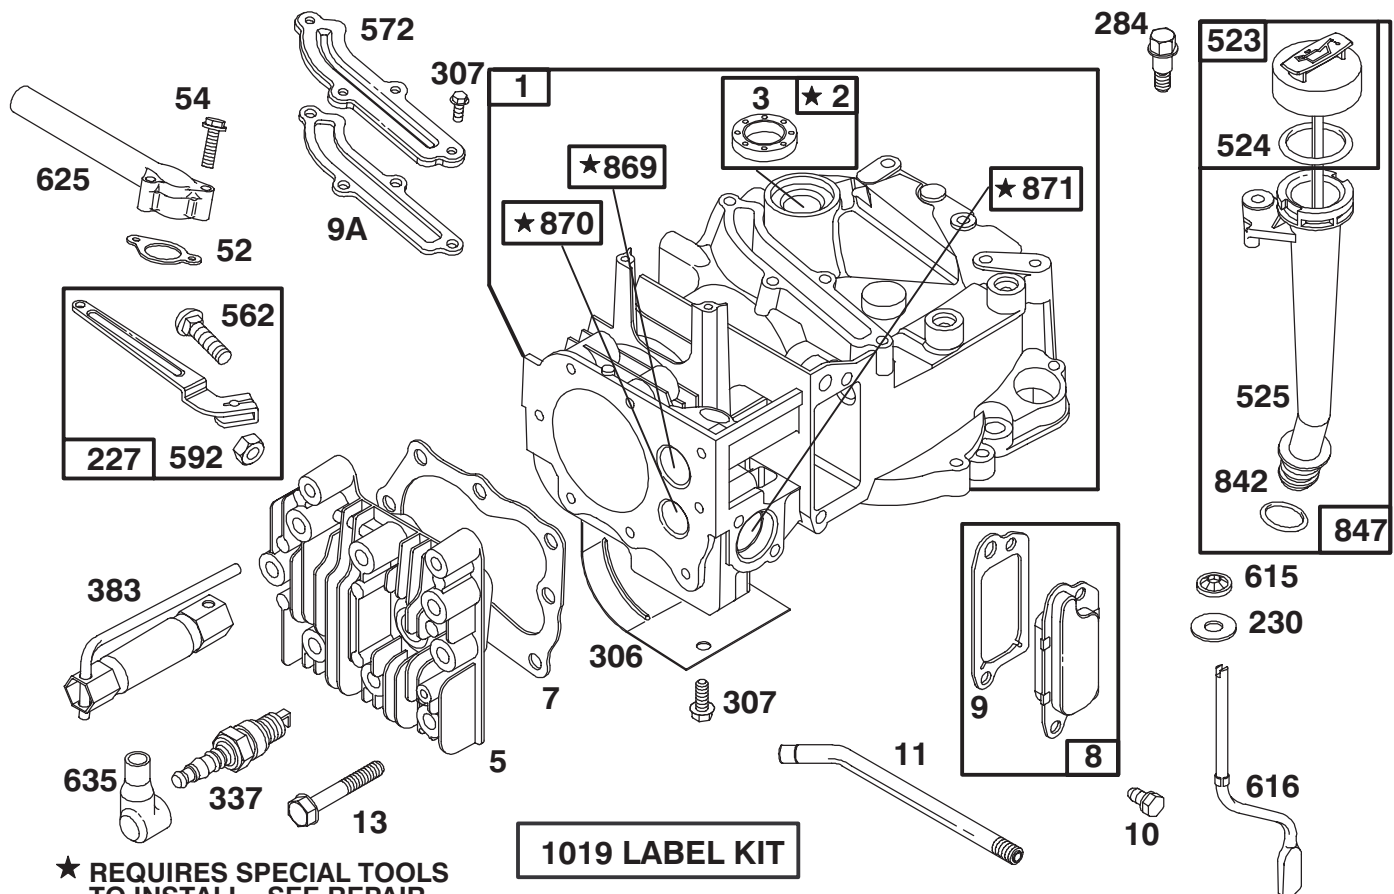 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-1741-A1

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214368	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Carriage	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	262578	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
		Note: 63709 Guide – Intake Valve	1
1019	494256	Label Kit	1

 ★ Included in Gasket Set—Part No. 497316.

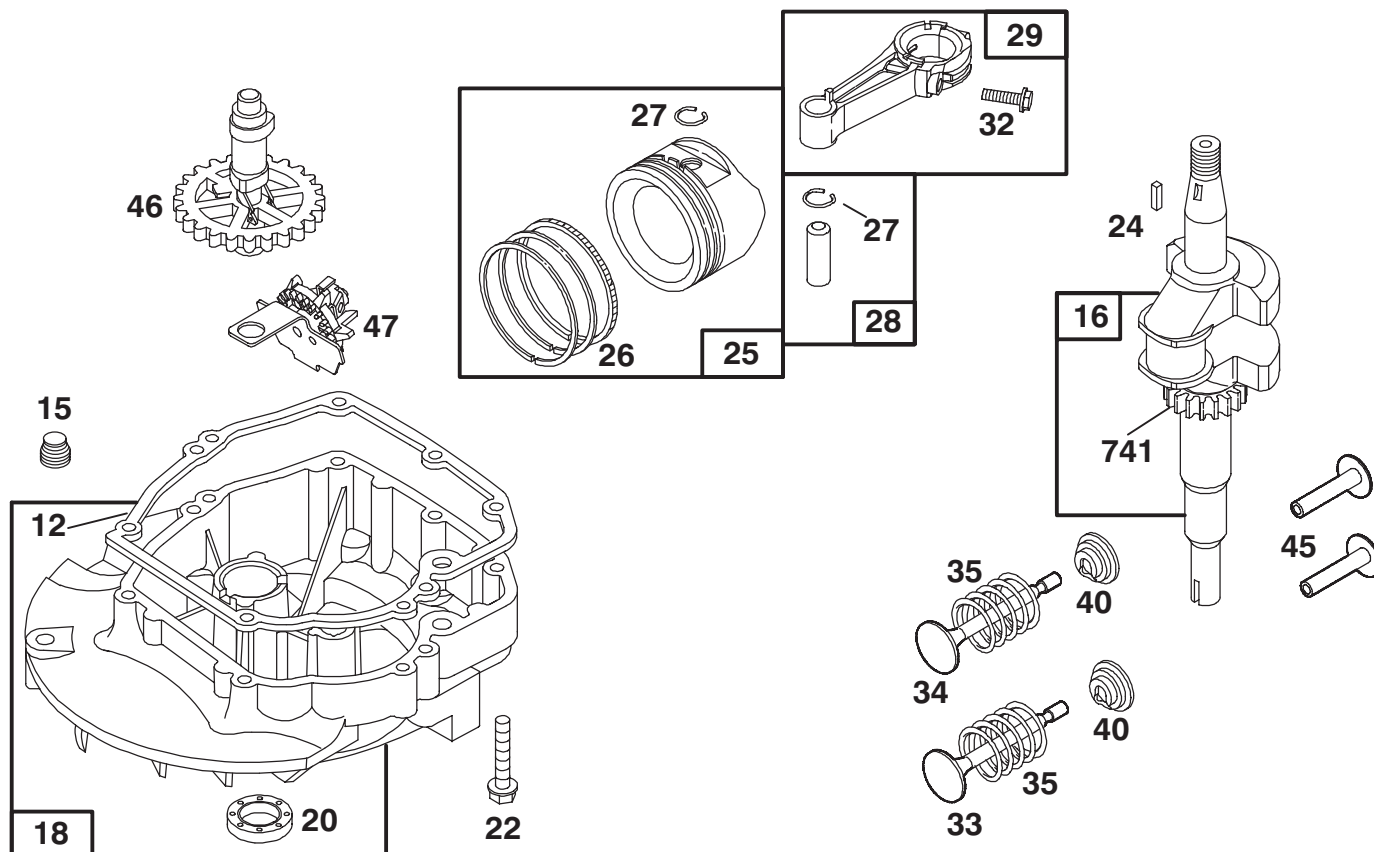


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-1741—A1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket — Crankcase	1	27	26026	Lock — Piston Pin	1
15	94720	Plug — Oil Drain	1	28	298909	Pin — Piston (Standard)	1
16	498878	Crankshaft			298908	Pin — Piston (.005" O.S.)	1
		Note: Order 94388 For Timing Gear Key.	1	29	490566	Rod Assembly — Connecting	1
18	493279	Sump — Engine	1			Note: For Conn. Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	1
★20	399781	Seal — Oil	1	32	94699	Screw — Connecting Rod	1
22	94220	Screw — Hex. Head	1	33	262651	Valve — Exhaust	1
		Note: 94612 Screw — Hex. Head (One Used in Hole Nearest Breather)	1	34	262652	Valve — Intake	1
24	222698	Key — Flywheel	1	35	262224	Spring — Valve	1
25	493262	Piston Assy. (Standard)	1	40	93312	Retainer — Valve Spring	1
	493385	Piston Assy. (.010" O.S.)	1	45	262204	Tappet — Valve	1
	493386	Piston Assy. (.020" O.S.)	1	46	498275	Gear — Cam	1
	493387	Piston Assy. (.030" O.S.)	1	47	493737	Slinger — Oil	1
26	493261	Ring Set (Standard)	1	741	262598	Gear — Timing	1
	493388	Ring Set (.010" O.S.)	1				
	493389	Ring Set (.020" O.S.)	1				
	493390	Ring Set (.030" O.S.)	1				

 ★ Included in Gasket Set—Part No. 497316.

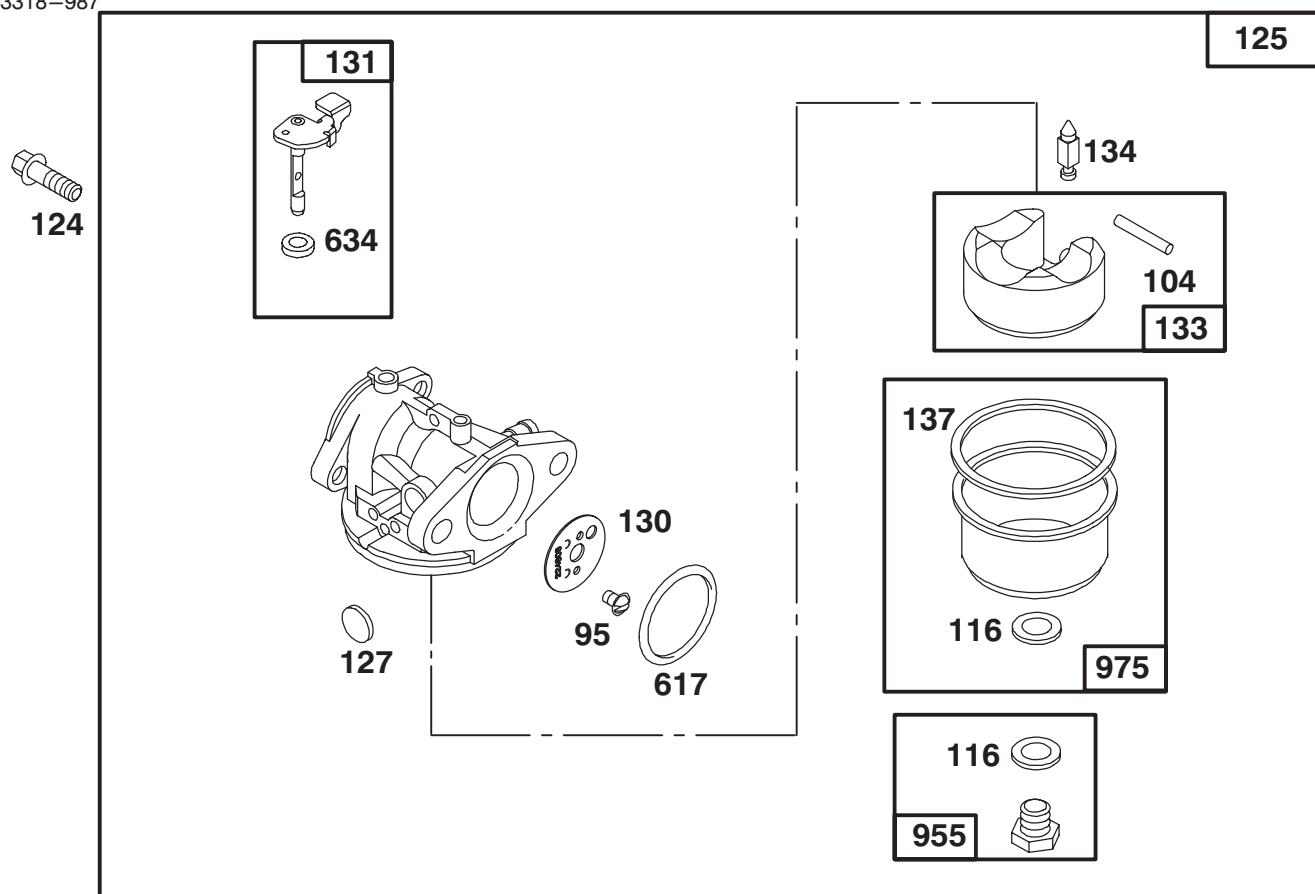

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12V802-1741-A1

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mtg.	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only)	1
124	94525	Screw – Carburetor Mtg.	1
125	498966	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only)	1
955	498975	Screw – Bowl Mtg. (Std.)	1
		Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

●Included in Carburetor Kit–Part No. 498260.

 ◆Included in Carburetor Gasket Set–Part No. 498261.

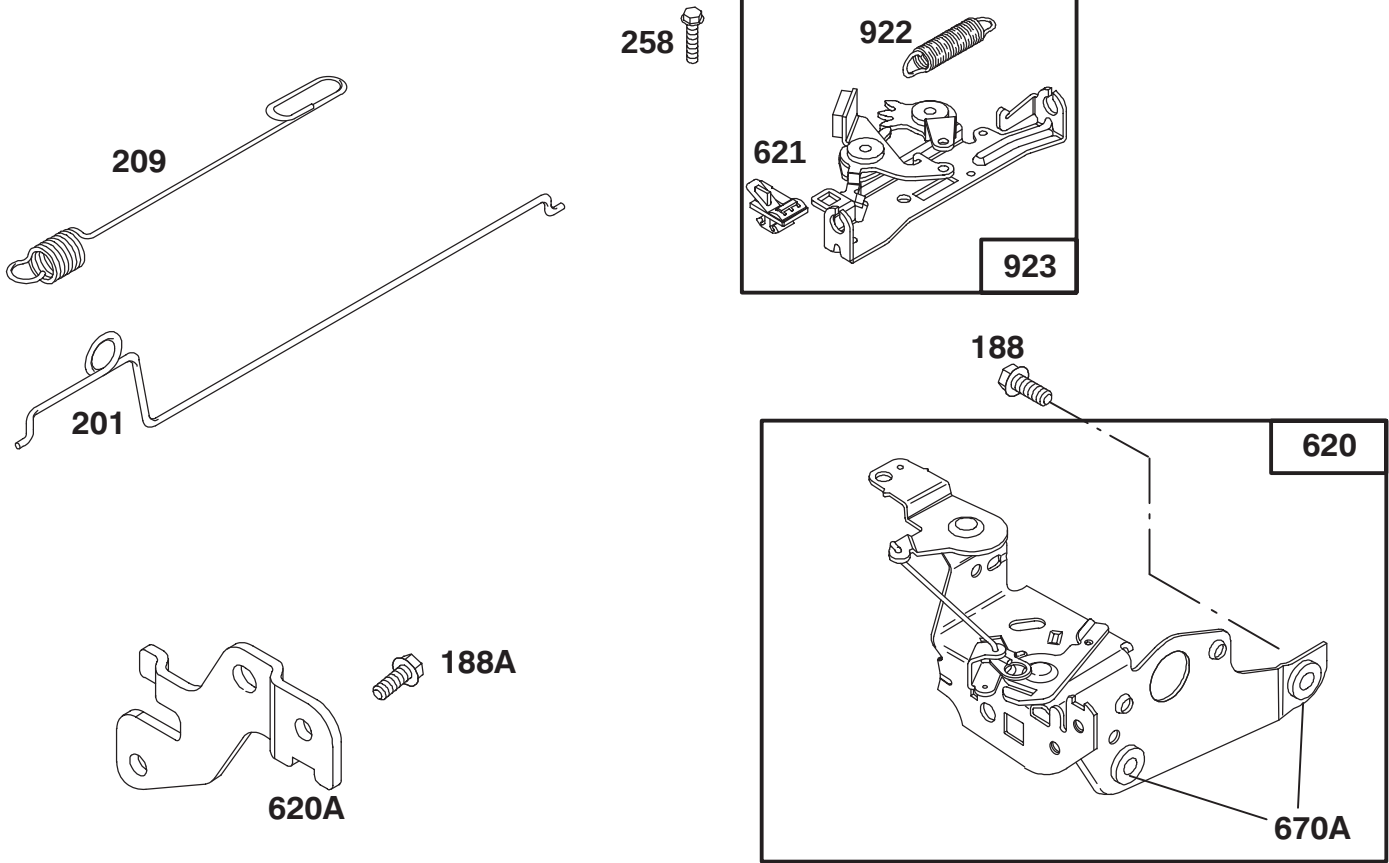


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-1741-A1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
188A	94602	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
670A	493823	Spacer – Bracket	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

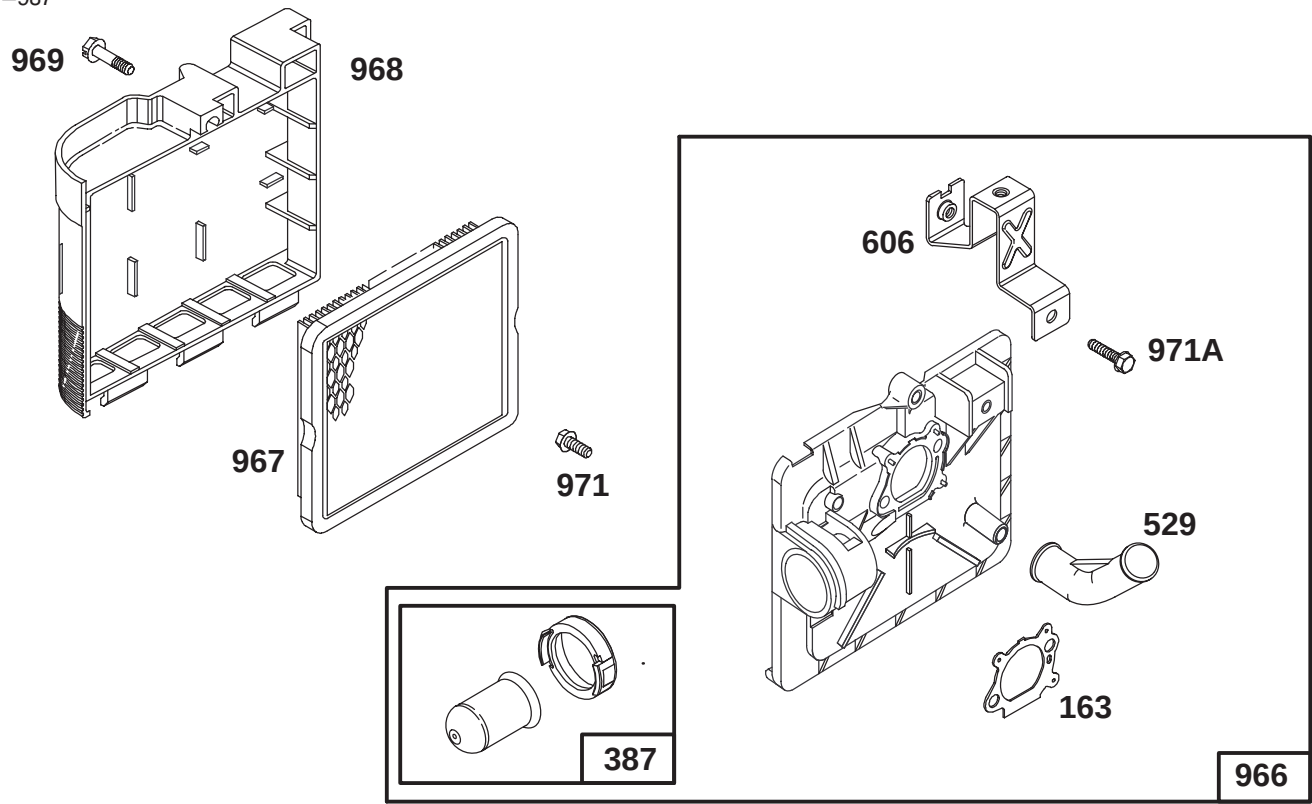 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-1741-A1

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
529	281299	Grommet — Breather	1
606	224815	Strap — Bracket	1
966	496116	Base — Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter — Air	1
968	281340	Cover — Air Cleaner	1
969	94120	Screw — Cover Mtg.	1
971	94121	Screw — Air Cleaner	1
971A	94749	Screw — Hex. Head	1

 
★ Included in Gasket Set—Part No. 497316.

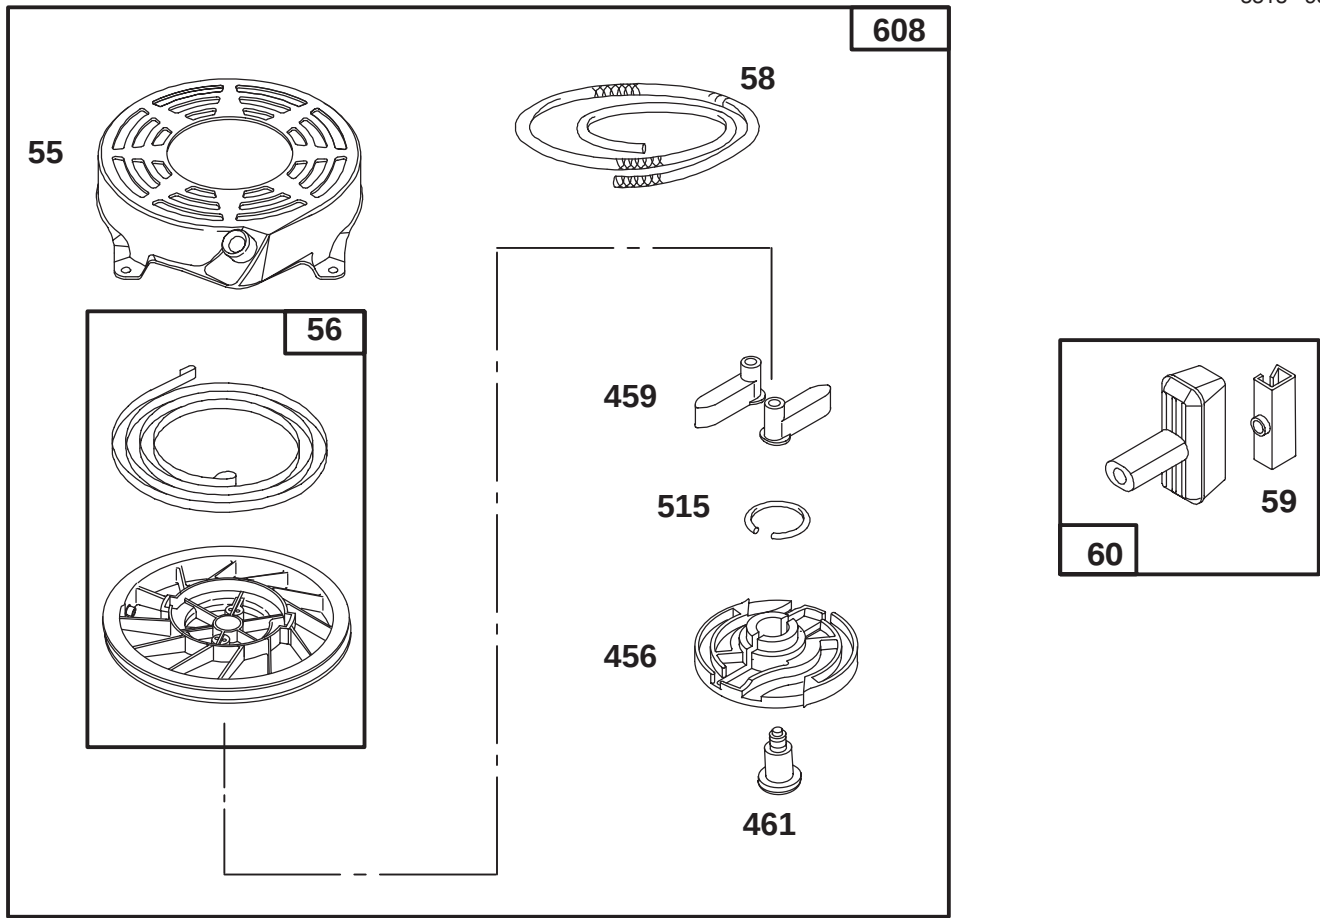

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-1741-A1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter		461	94943	Pin – Starter	
56	498144	Pulley – Rewind Starter		515	263073	Spring – Torsion	
58	280399	Rope – Rewind Starter (Cut to Required Length)		608	497680	Starter Assy. – Rewind	
59	224467	Insert – Starter Grip				Includes:	
60	493926	Handle – Rewind Starter				94128 Screw – Hex. Head	1
456	281503	Retainer – Rewind Starter				92987 Nut – Hex.	1
459	281505	Pawl – Starter					




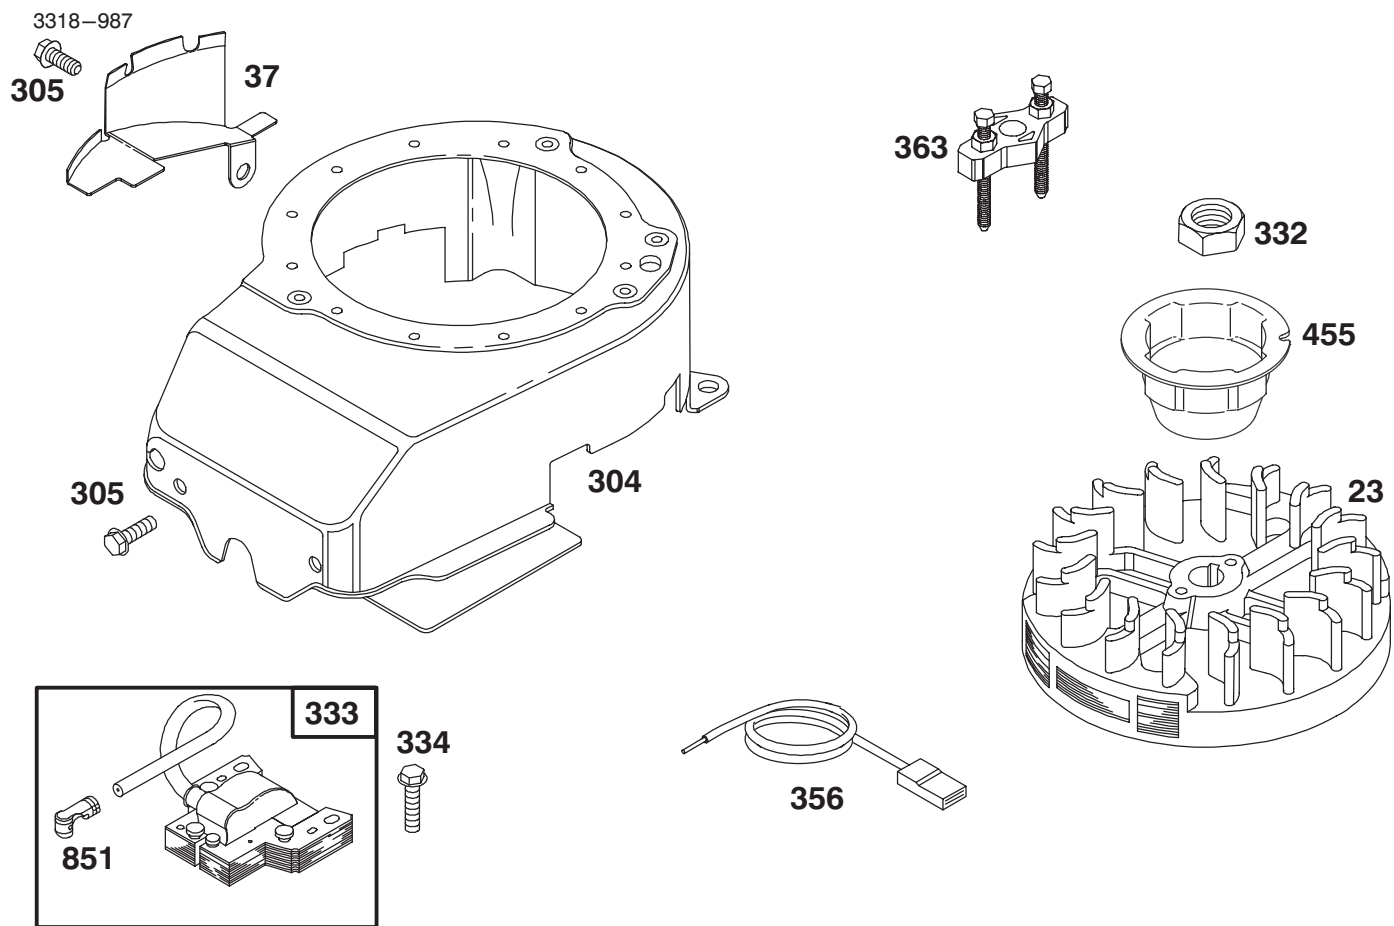 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-1741-A1

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
304	493293	Housing - Blower	1
305	94744	Screw - Sem	1
332	92284	Nut - Flywheel	1
333	802574	Armature - Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw - Sem	1
356	398808	Wire - Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1

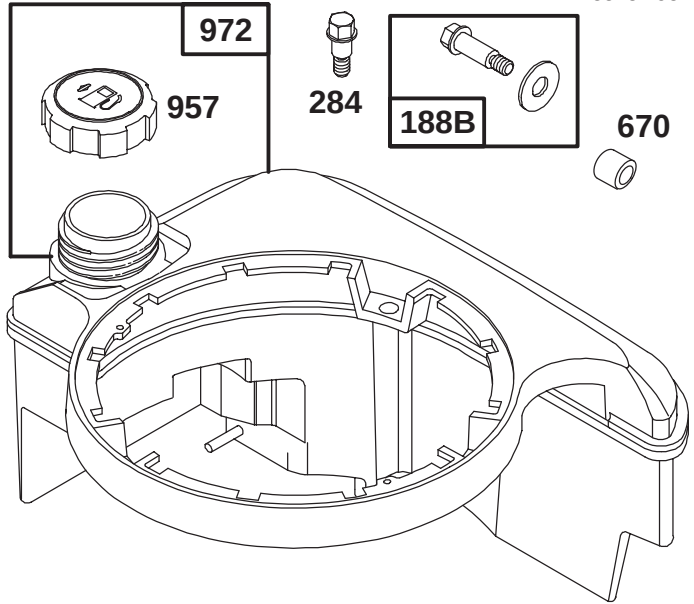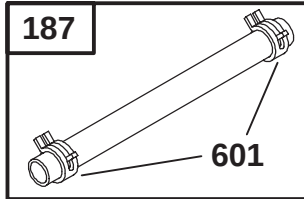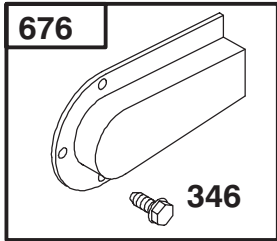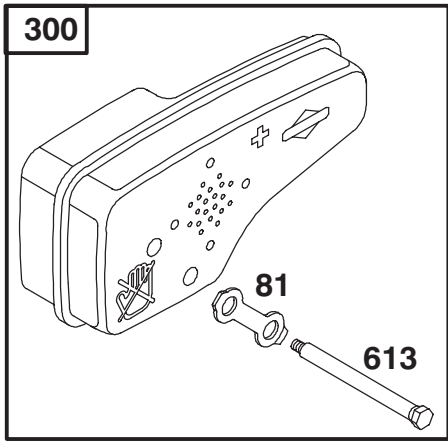    




Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-1741-A1

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188B	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93053	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

   ★ Included in Gasket Set—Part No. 497316.

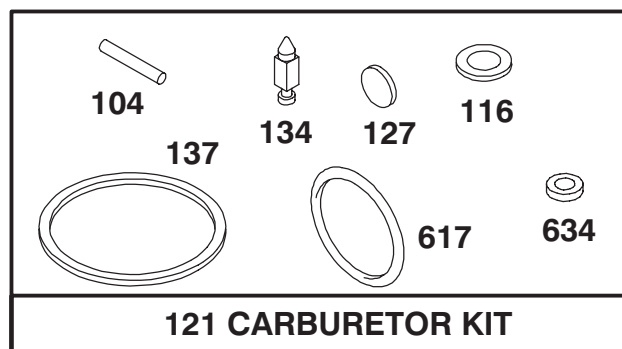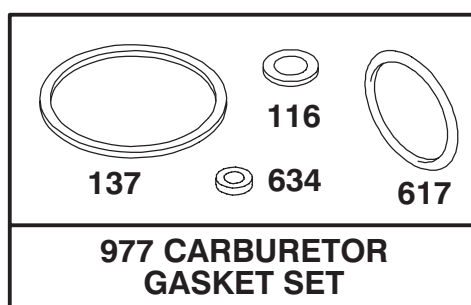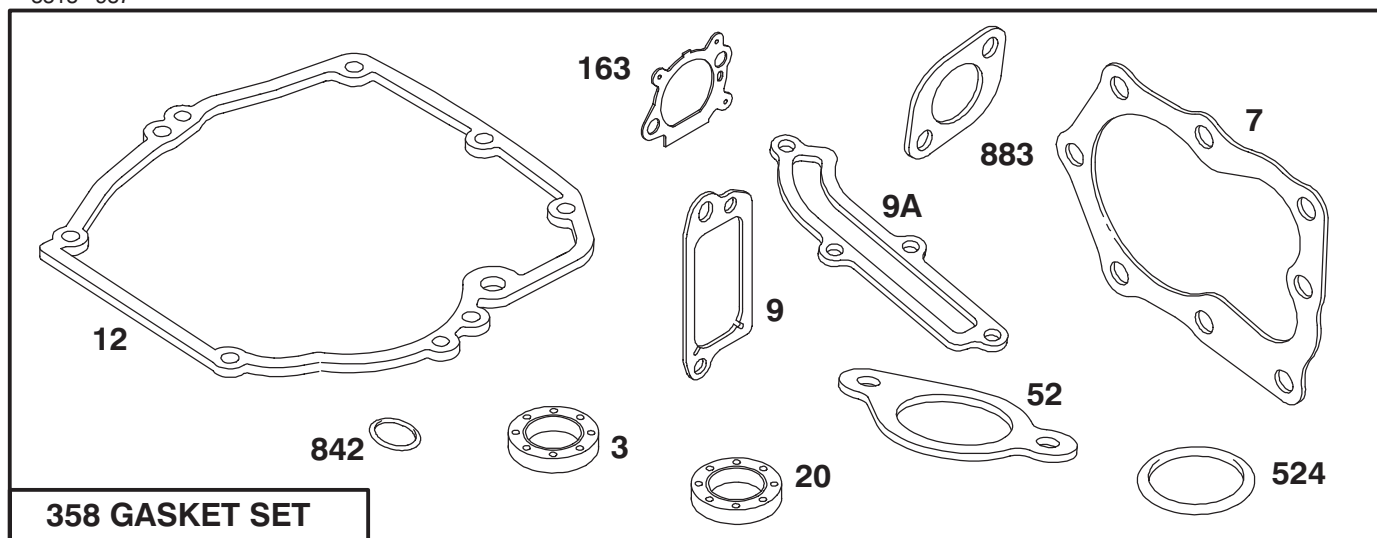

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-1741-A1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only)	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	498261	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

Lawn—Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
*	6	6	1	Bag Assembly
605120	1	5	1	Grommet
607560	1	32	1	Plate—Cover
610358	2	13	2	Nut—Lock
612543	3	12	1	Blade—21" Whirl
613227	3	11	1	Screw—Set
613455	6	8	1	Wide Hanger
613462	6	7	2	Hanger Clamp
613765	1	11	1	Nut—Cage
614243	4	3	2	Knob
614426	2	19	2	Washer—Stepped
614447	2	9	2	Spacer—Axle Shaft
614589	6	2	1	Nut — Cap
614591	6	3	1	Chute Support
614596	5	18	1	Gear 34 Tooth
614637	1	17	2	Bracket—Wheel Height Adj
614643	4	19	1	Handle Section—Lower
614668	5	2	1	Cover — Gear Case
614669	5	12	2	Pulley — Half
614671	1	27	1	Cover—Drive
614672	1	21	2	Bolt—Shoulder
614677	1	9	2	Screw—Sems
614682	1	7	1	Knob—Cover Plate
614687	1	22	2	Spring Arm—Front
614696	5	4	1	Shaft — Intermediate
614697	4	2	2	Screw—Handle
614700	6	5	1	Tie Strap
677525	3	1	1	ASM—Plate & Collar
684727	6	4	1	Adaptor Assembly
684729	6	1	1	Chute & Support Assembly
684776	1	19	2	ASM—Wheel & Tire 6"
16-4369	1	35	1	ASM—Housing & Baffle
26-0671	3	8	1	Bolt—Blade
36-4780	5	17	2	Washer — Thrust
36-4791	5	5	2	Washer
38-7820	5	15	1	Bearing — Ball
39-5770	1	33	1	Decal—Danger
40-1940	1	18	2	Washer
49-2040	1	24	2	Screw—HH
55-3760	5	3	1	Pinion — 15 Tooth
60-8750	5	6	2	Bushing
60-8850	5	9	2	Bushing — Output
60-8890	5	16	1	Gear — Bevel Pinion
62-6660	5	11	1	Spacer
65-2720	2	3	4	Ring—Retaining
65-4710	2	7	2	Ring—Friction
65-4720	2	17	2	Spring—Compression
65-4730	2	14	2	Washer—Thrust
65-4740	2	4	4	Washer—Thrust
65-4750	2	16	2	Gear—Pinion
65-4760	2	15	2	Washer
66-6040	2	6	1	Key—Rocking
66-6050	2	5	1	Key—Rocking
82-8550	3	15	1	Shield—Muffler
92-1001	4	9	1	Bail—Sp Control
92-1004	2	12	2	ASM—Spring Arm
92-1008	1	23	4	Knob—Height Adjust
92-1024	3	4	1	Guide—Belt
92-1042	2	2	2	ASM—Whl
92-1057	2	1	2	Bolt—Shoulder
92-1097	1	34	1	Decal—Discharge
92-1099	1	20	2	Bolt—Shoulder 6" Wheel

*Not Illustrated

Lawn–Boy Part Number Index (Cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–1630	3	13	1	Fan–Mulching
92–2269	4	5	1	Screw–Handle
92–2914	1	2	2	Decal–HOC
92–2915	1	1	2	Decal–HOC
92–2919	6	9	1	Decal – Danger
92–4881	1	14	2	Plate–Height Adjust
92–4890	1	15	2	Washer
92–5412	4	8	1	Stop–Pivot
92–6542	3	2	1	Pulley–Engine
92–7723	1	30	1	ASM–Handle Bracket
92–7724	1	3	1	ASM–Handle Bracket
92–7726	4	7	1	Cable–Traction
92–7727	5	10	1	Gearcase
92–7728	1	6	1	Guide–Transmission
92–7731	1	16	2	Plate–Baffle
92–7735	1	4	1	ASM–Gear Case
92–7746	2	8	2	ASM–Hgt Adj Arm
92–8630	1	8	1	Mulch Plate–21”
92–8647	1	38	1	Shield–Trailing
92–9665	1	26	1	Screw–Phil
93–0239	5	7	1	Shaft – Output
93–3653	4	31	1	Handle–Guard
93–4196	3	14	1	Shield–Grass
93–7250	1	28	1	Decal–Warning
93–7380	4	1	1	Anchor–Cable
93–7381	2	10	1	V–Belt
93–7383	4	16	1	Guide–Rope
94–1609	2	18	2	Cover–Wheel
94–1610	1	10	2	Grommet–Plastic
94–6084	3	6	1	ASM–Engine
94–6093	4	11	1	Card–Product Description
94–6096	4	6	1	Anchor–Cable
94–6097	4	34	1	Stop–Bail
94–6099	4	12	1	Bail–Flywheel Brake
95–0656	4	35	1	Applique–Shroud
95–1703	3	9	1	Decal–Recoil
95–1704	3	17	1	Shroud–Engine (P/W Eng)
95–1705	3	18	1	Cover–Air Cleaner (P/W Eng)
95–1706	3	19	2	Screw–Shroud (P/W Eng)
95–1707	3	20	2	Screw–Air Cleaner (P/W Eng)
95–1712	3	22	1	Spacer–Blade
95–1713	4	13	1	Handle Section–Upper
95–1718	4	18	1	ASM–Brake Cable
95–1720	4	17	1	Cable–Throttle
95–1726	3	3	3	Screw–Engine Mount
2210–316	3	7	1	Rope–Stop (P/W Eng)
321–50	4	15	1	Screw
322–3	1	39	6	Screw–HH
3253–22	3	21	1	Washer–Lock
3256–24	5	13	1	Washer
3285–19	5	8	2	Pin – Groove
3296–5	5	14	1	Nut
3296–29	1	37	6	Nut–Lock
3296–73	4	4	2	Nut–Lock
32144–4	5	1	4	Screw – Taptite
32144–73	3	16	3	Screw–HWHTF
32144–85	2	11	2	Screw–HH