

LAWN-BOY®

SILVER SERIES 2 CYCLE WALK-BEHIND MOWER

MODEL NO.10320-7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Housing Assembly	1	Engine Assembly	7-10
Cover Assembly	2	Recoil Starter Assembly	11
Gear Case Assembly	3	Carburetor Assembly	12
Rear Axle Assembly	4	Catcher Assembly	13
Engine Assembly	5	Lawn-Boy Part Number Index	14-15
Handle Assembly	6	Maintenance	16-18

Accessories

 
Description	Model / Parts No.	Description	Model / Parts No.
Rear Bagging Kit	Model No. 89800	Leaf Bag Kit w/Chute	Model No. 89811
Leaf Bag	Model No. 89804	Mow & Feed Fertilizer Spreader .	Model No. 52070
Leaf Shredder Kit	Model No. 89860		

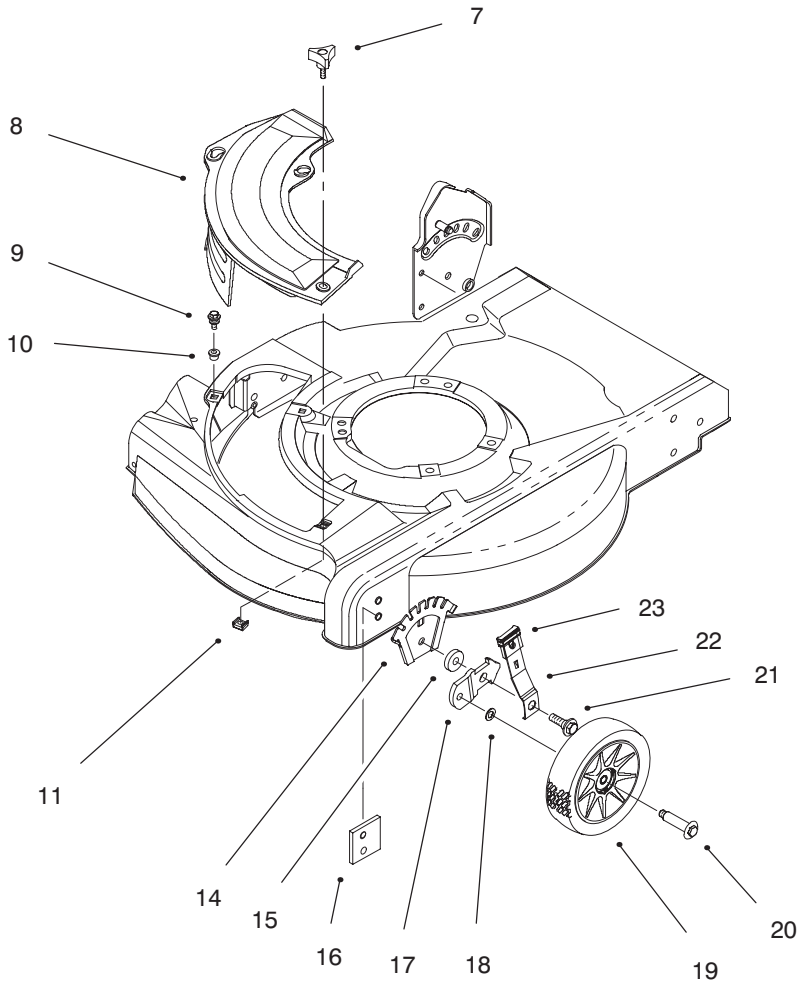

C-2494

Housing Assembly

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
7	614682	Knob – Cover Plate	1	17	614637	Bracket – Wheel Height Adj.	2
8	92-8630	Plate – Mulch 21"	1	18	40-1940	Washer	2
9	614677	Screw-Thread Forming	2	19	684776	Wheel & Tire ASM	2
10	94-1610	Grommet – Plastic	2	20	92-1099	Bolt – Shoulder	2
11	613765	Nut – Cage	1	21	614672	Bolt – Shoulder Height Adj.	2
14	92-4881	Plate – Height Adjust	2	22	614687	Front Spring Arm ASM	2
15	92-4890	Washer	2	23	92-1008	Knob – Height Adjust	4
16	92-7731	Plate – Baffle	2				

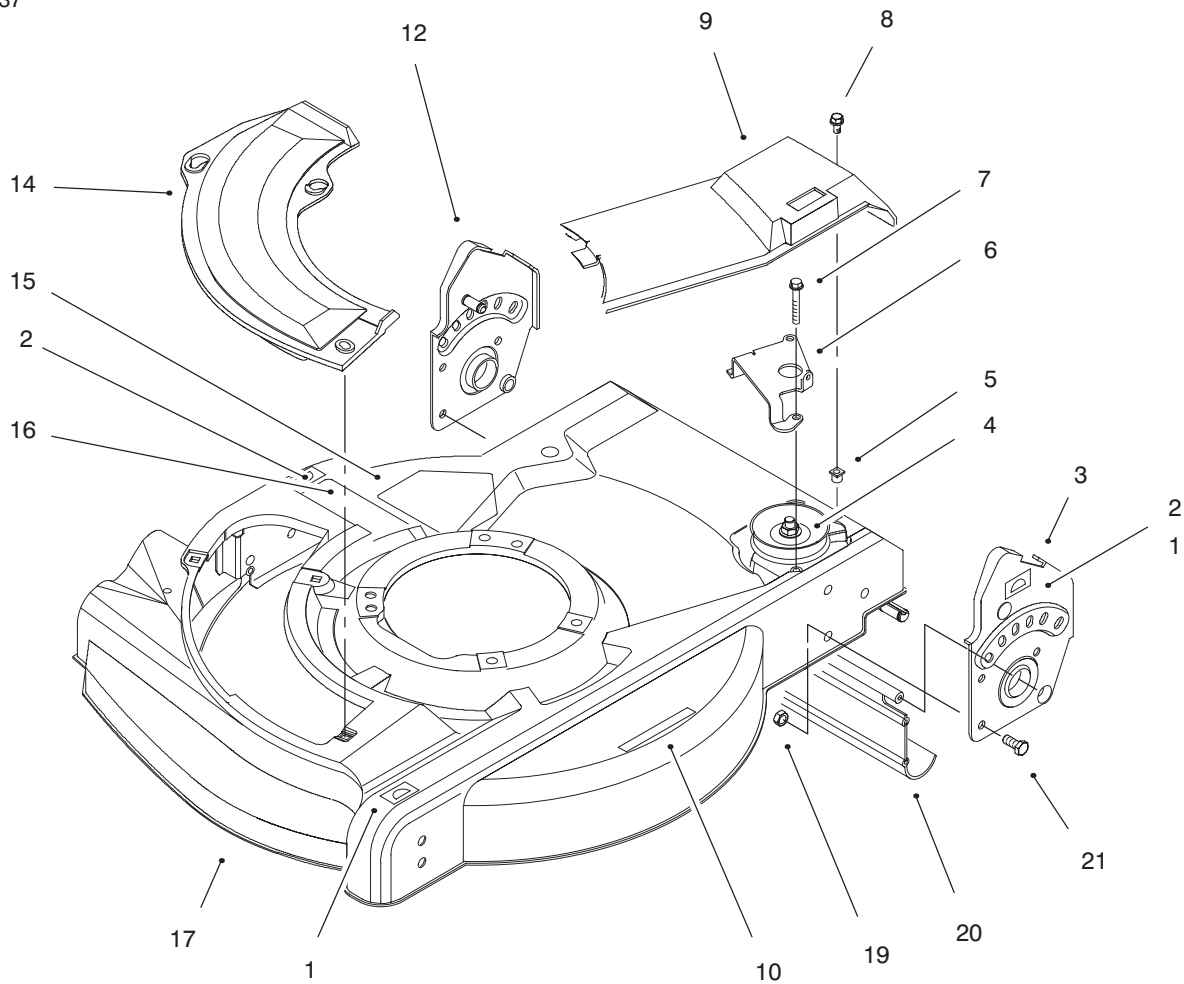 


C-2496

Cover Assembly

Ref. No.	Part No.	Description	No. Used
1	92-2915	Decal - H.O.C.	2
2	92-2914	Decal - H.O.C.	2
3	92-7724	Bracket - Handle L.H.	1
4	92-7735	Gear Case Assembly	1
5	605120	Grommet	1
6	92-7728	Guide - Transmission	1
7	49-2040	Screw - HH	2
8	92-9665	Screw - Phillips Hd.	1
9	614671	Cover - Drive	1


Ref. No.	Part No.	Description	No. Used
10	93-7250	Decal - Warning	1
12	92-7723	Bracket - Handle R.H.	1
14	607560	Plate - Cover	1
15	39-5770	Decal - Danger	1
16	92-1097	Decal - Discharge	1
17	16-4369	Housing Assembly	1
19	3296-29	Nut - Lock	6
20	92-8647	Shield - Trailing	1
21	322-3	Screw - HH	6

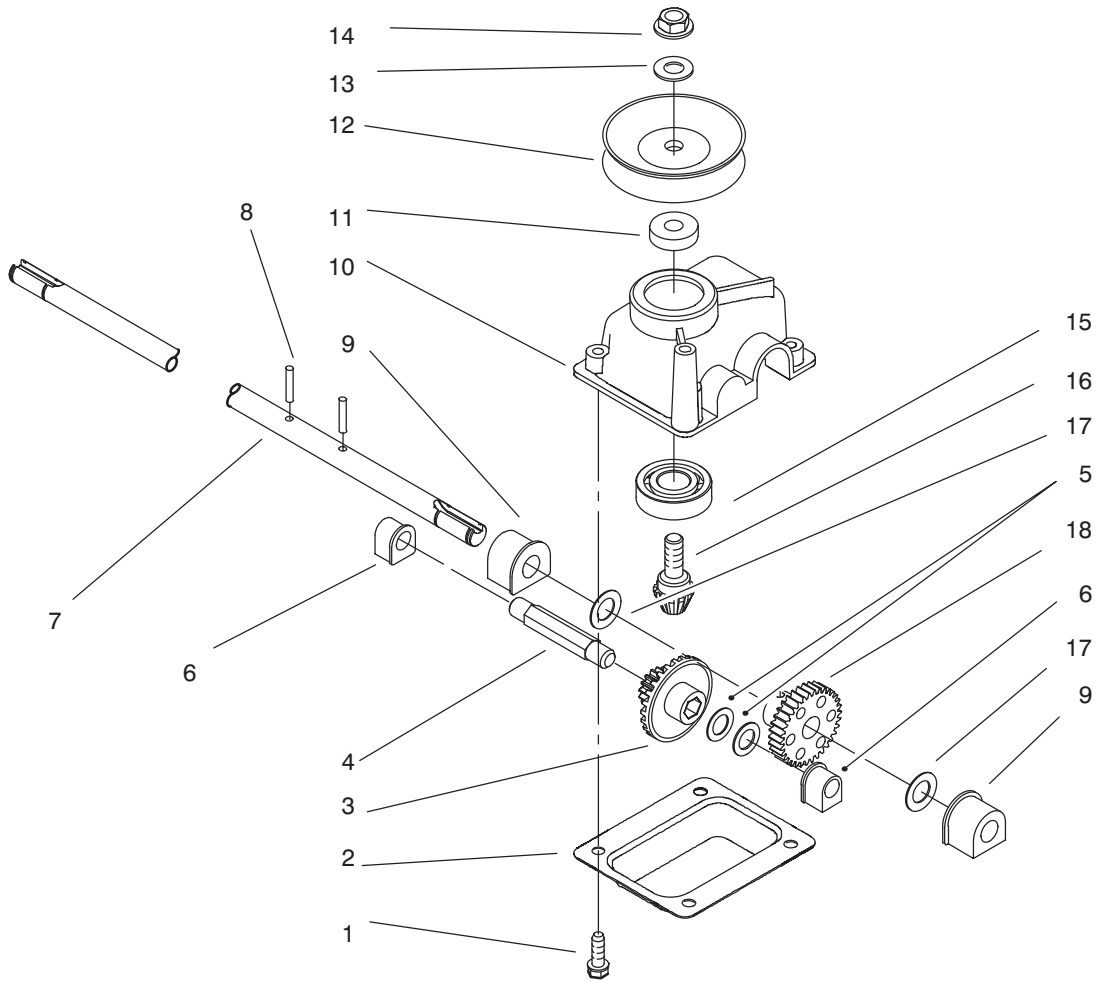 

C-1292

Gear Case Assembly

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Taptite	4	10	92-7727	Gearcase	1
2	614668	Cover - Gear Case	1	11	62-6660	Spacer	1
3	55-3760	Pinion - 15 Tooth	1	12	614669	Pulley - Half	2
4	614696	Shaft - Intermediate	1	13	3256-24	Washer	1
5	36-4791	Washer	2	14	3296-5	Nut	1
6	60-8750	Bushing	2	15	38-7820	Bearing - Ball	1
7	93-0239	Shaft - Output	1	16	60-8890	Gear - Bevel Pinion	1
8	3285-19	Pin - Groove	2	17	36-4780	Washer - Thrust	2
9	60-8850	Bushing - Output	2	18	614596	Gear 34 Tooth	1

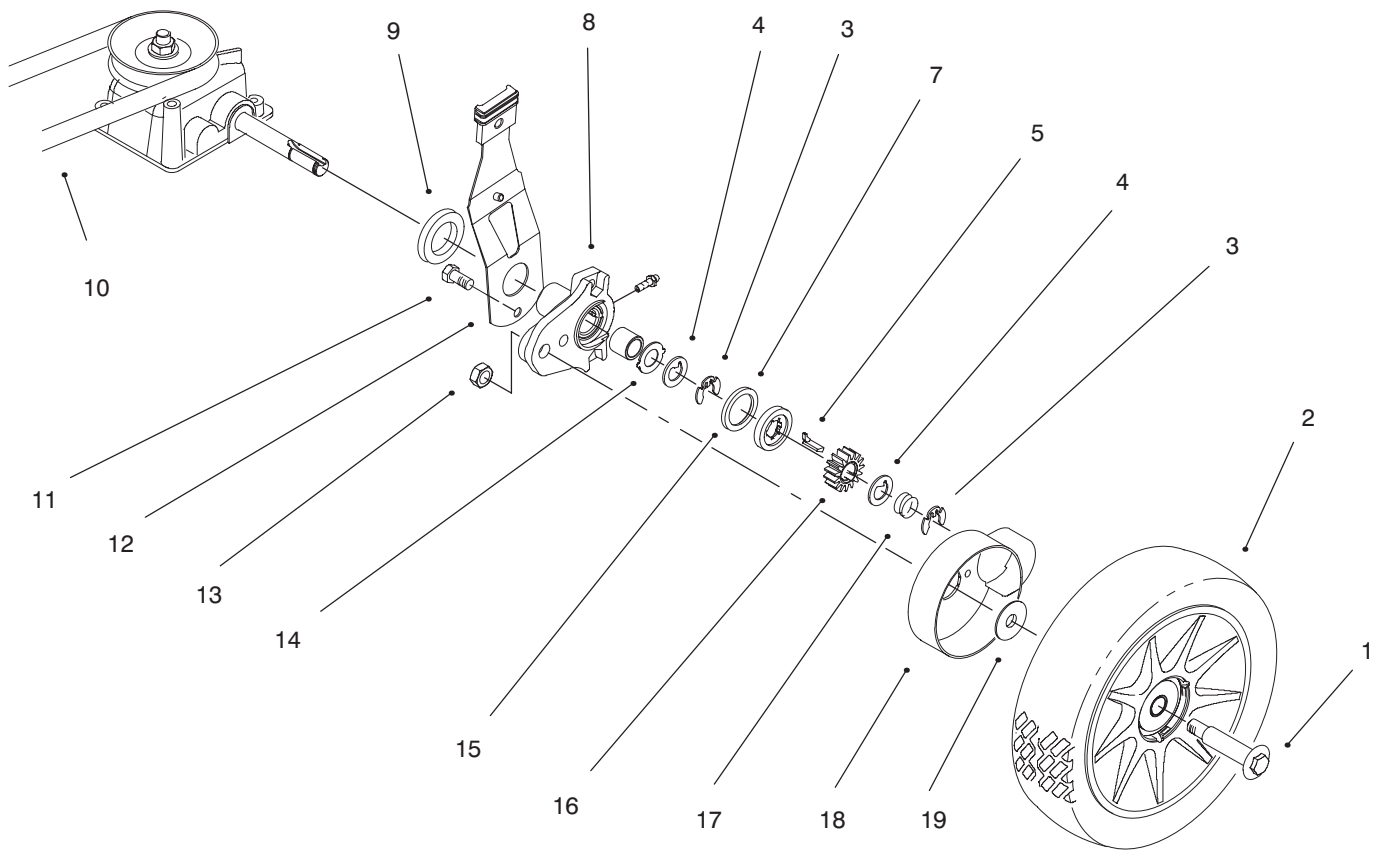 


C-2497

Rear Axle Assembly

Ref. No.	Part No.	Description	No. Used
1	92-1057	Bolt – Shoulder	2
2	92-1042	Wheel & Tire ASM	2
3	65-2720	Ring – Retaining	4
4	65-4740	Washer – Thrust Keyed	4
5	66-6050	Key – Rocking L.H.	1
*	66-6040	Key – Rocking R.H.	1
7	65-4710	Ring – Friction	2
8	92-7746	Height Adj. Arm – Rear	2
9	614447	Spacer – Axle Shaft	2
10	93-7381	V-Belt	1

Ref. No.	Part No.	Description	No. Used
11	32144-85	Screw – HH	2
12	92-1004	Spring Arm ASM	2
13	610358	Nut – Lock	2
14	65-4730	Washer – Thrust	2
15	65-4760	Washer	2
16	65-4750	Gear – Pinion	2
17	65-4720	Spring – Compression	2
18	94-1609	Cover – Wheel	2
19	614426	Washer – Stepped	2

 *Not Illustrated

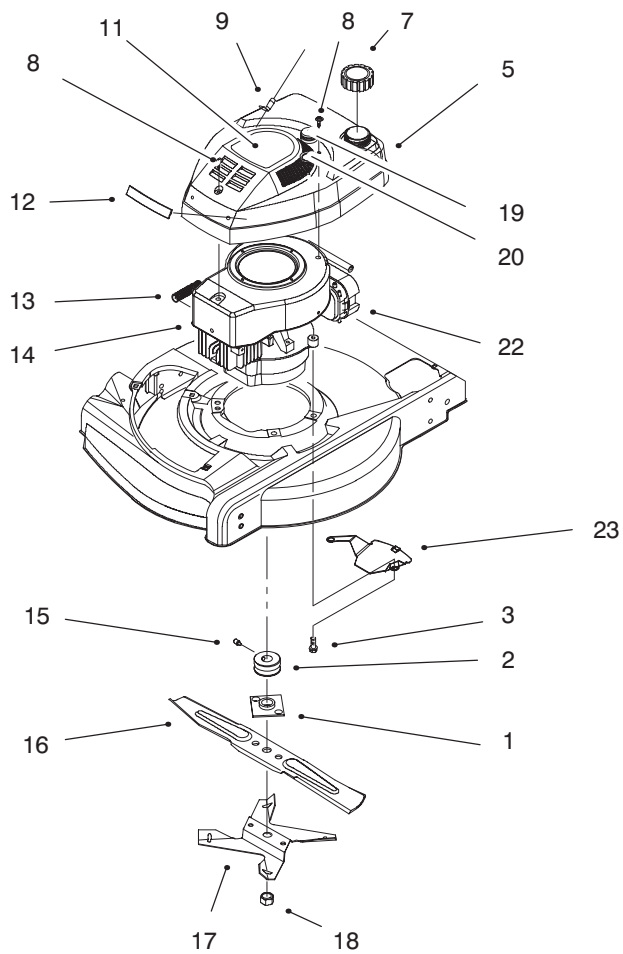


C-2606

Engine Assembly

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	677525	Plate & Collar Assembly	1	☆14		Engine Assembly	1
2	92-6542	Pulley - Engine	1	15	613227	Screw - Set	1
3	95-1726	Screw - Engine	3	16	612543	Blade - 21"	1
5	92-6380	Tank & Shroud Assembly	1	17	92-1630	Fan - Mulching	1
7	93-3660	Fuel/Oil Cap Assembly	1	18	603164	Nut - Blade	1
8	93-4302	Screw - Sems	3	19	66-7460	Bulb - Primer	1
9	92-1701	Rope - Stop	1	20	44-2750	Body - Primer	1
11	93-0294	Decal - Recoil	1	22	612782	Line - Gas	1
12	92-8615	Applique - Shroud	1	23	93-4196	Shield - Grass	1
13	93-4306	Spring - Compression	1				

 ☆ Not Serviced

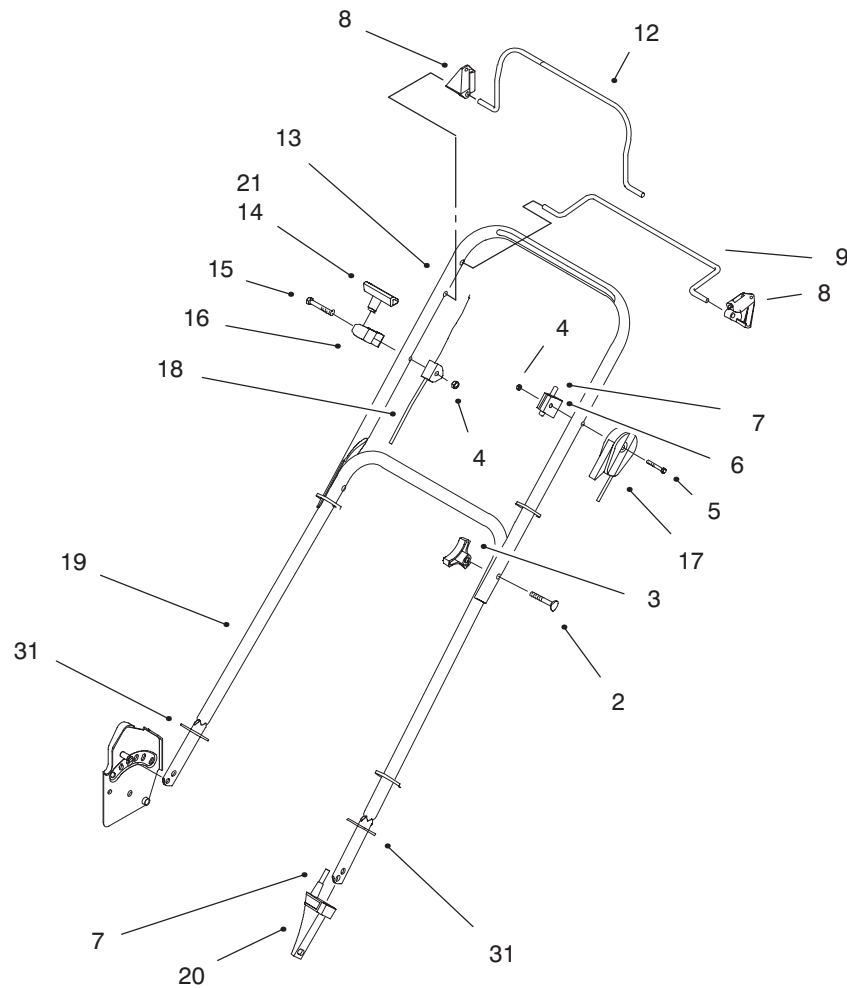


C-2607

Handle Assembly

Ref. No.	Part No.	Description	No. Used
2	614697	Screw – Handle	2
3	614243	Knob	2
4	3296-73	Nut – Lock	2
5	321-49	Screw – HH	1
6	92-7729	Anchor – Cable Upper	1
7	92-7726	Cable – Traction	1
8	92-5412	Stop – Pivot	2
9	92-1001	Bail – SP Control	1
12	93-4184	Bail – Flywheel Brake	1
13	95-1713	Handle – Section Upper	1

Ref. No.	Part No.	Description	No. Used
14	612825	Handle – Starter	1
15	321-50	Screw – HH	1
16	93-7383	Guide – Rope	1
17	92-7734	Cable – Throttle 2 Cycle	1
18	92-7738	Cable – Flywheel Brake	1
19	614673	Handle Section – Lower	1
20	93-7380	Anchor – Cable SP Lower	1
21	612824	Clip – Rope Insert	1
31	93-3653	Handle – Guard	1

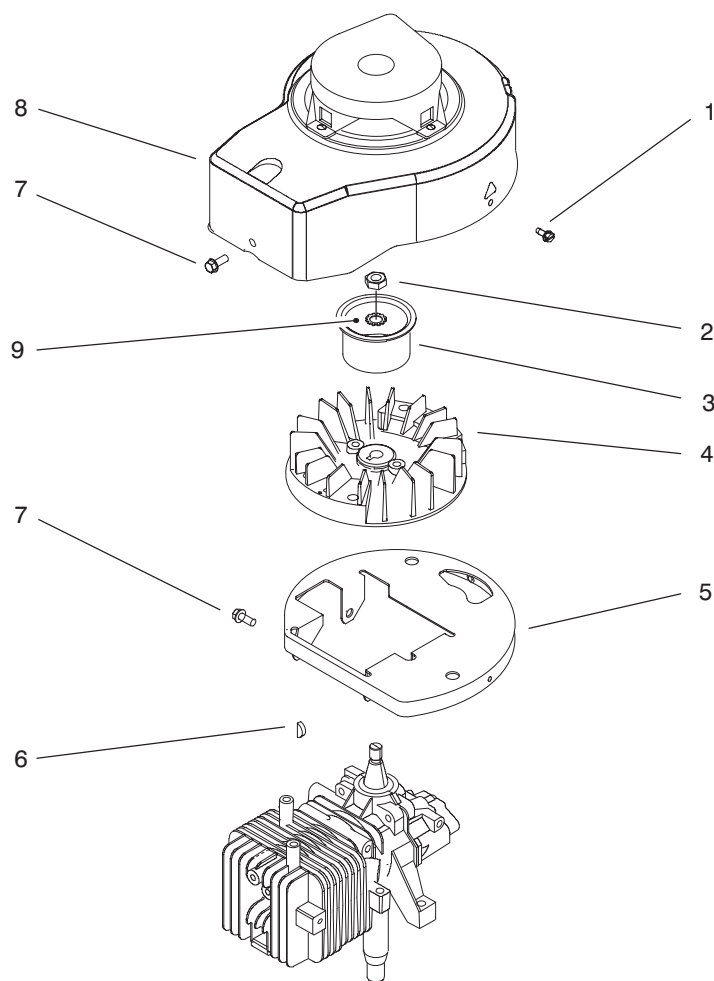 


C-2128A

Engine Assembly

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	130743	Nut	1
3	614640	Hub – Starter	1
4	684743	Flywheel	1
5	93–1216	Base – Shroud	1

Ref. No.	Part No.	Description	No. Used
6	607199	Key	1
7	614702	Screw	4
8	93–4304	Shroud Assembly	1
9	316959	Washer – Lock	1

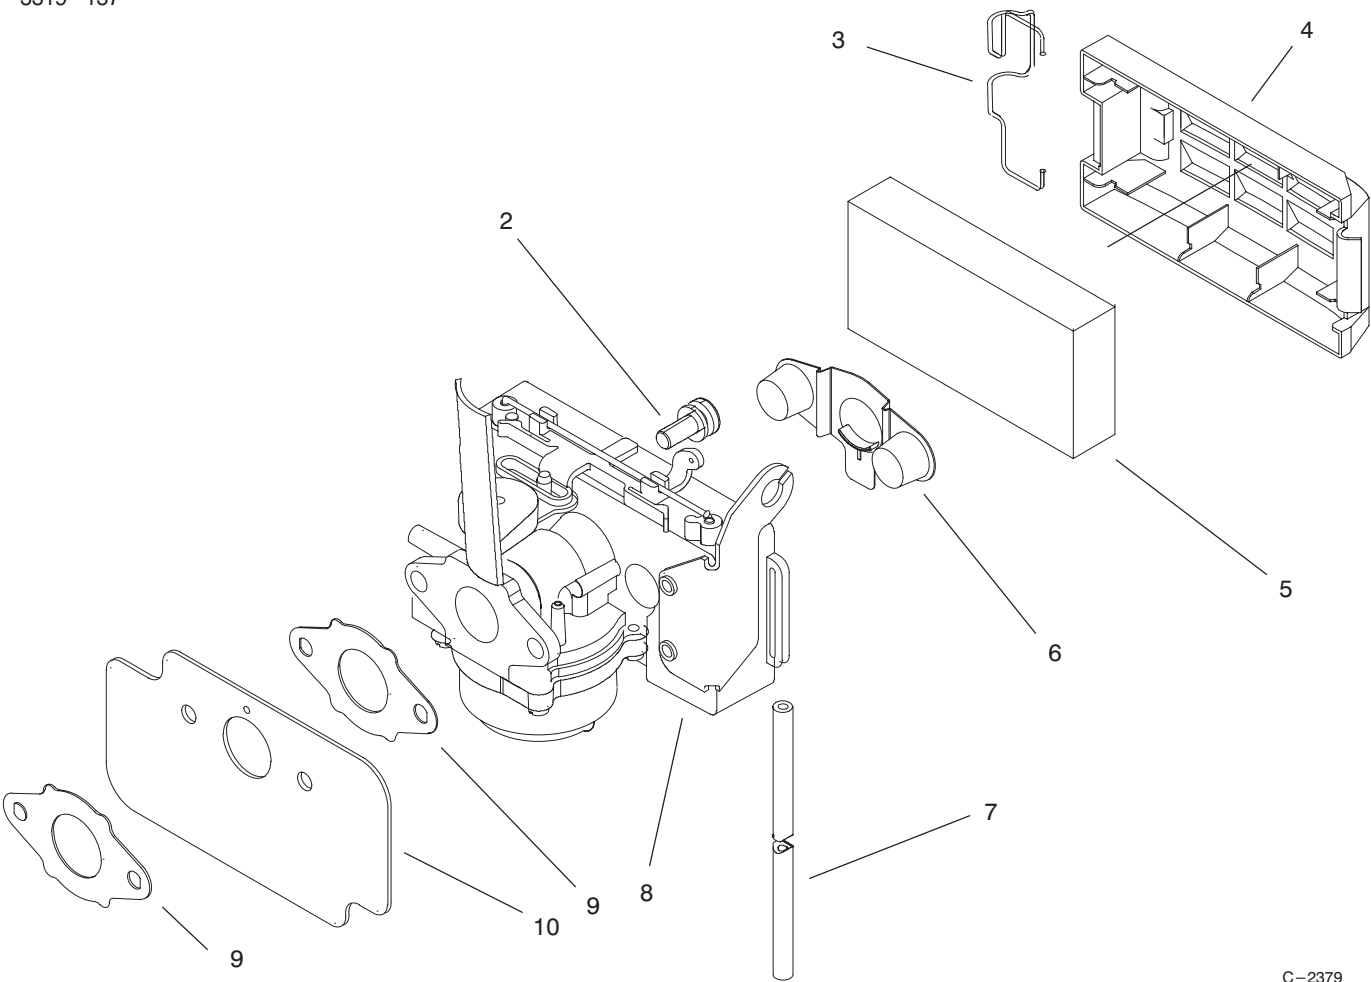 


C-2379

Engine Assembly (Continued)

Ref. No.	Part No.	Description	No. Used
2	609482	Screw	2
3	610383	Retainer – Filter	1
4	93-1231	Cover – Air Cleaner	1
5	609493	Element – Filter Air	1
6	93-4320	Shield – Fuel	1

Ref. No.	Part No.	Description	No. Used
7	44-3174	Hose – Primer	1
8	93-4331	Carburetor Assembly (Incl. Ref. #9)	1
9	92-4948	Gasket – Carburetor	2
10	93-1221	Shield – Carburetor	1

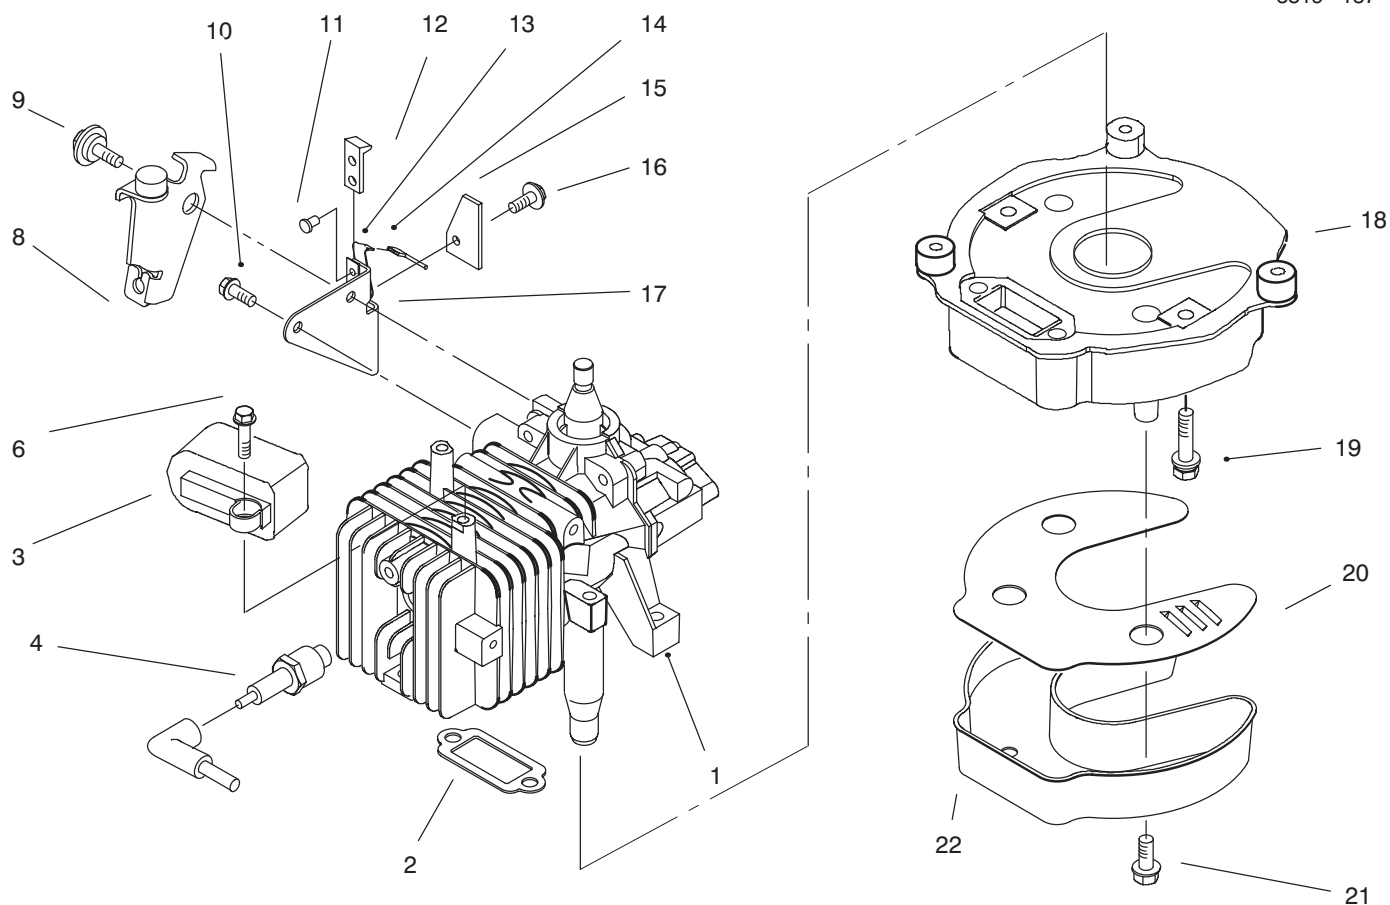 


C-1296A

Engine Assembly (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-5737	Short Block	1	13	60-9010	Strap - Ground	1
2	93-1233	Gasket - Exhaust	1	14	92-1156	Wire - Brake Switch Lead	1
3	684049	CD Ignition	1	15	53-4690	Stop - Ground Strap	1
4	614009	Plug - Spark	1	16	12-5450	Screw - Thread Forming	1
6	613208	Screw - HWH	2	17	84-7820	Mounting Plate	1
8	93-4312	Brake Plate Assembly	1	18	614654	Plate - Muffler	1
9	92-9698	Screw - Shoulder	1	19	607601	Screw	4
10	614702	Screw	1	20	93-4343	Baffle	1
11	3290-459	Rivet - Plastic	2	21	609471	Screw	3
12	92-2925	Strap - Insulation	1	22	614674	Cover - Muffler	1

 *Not Illustrated

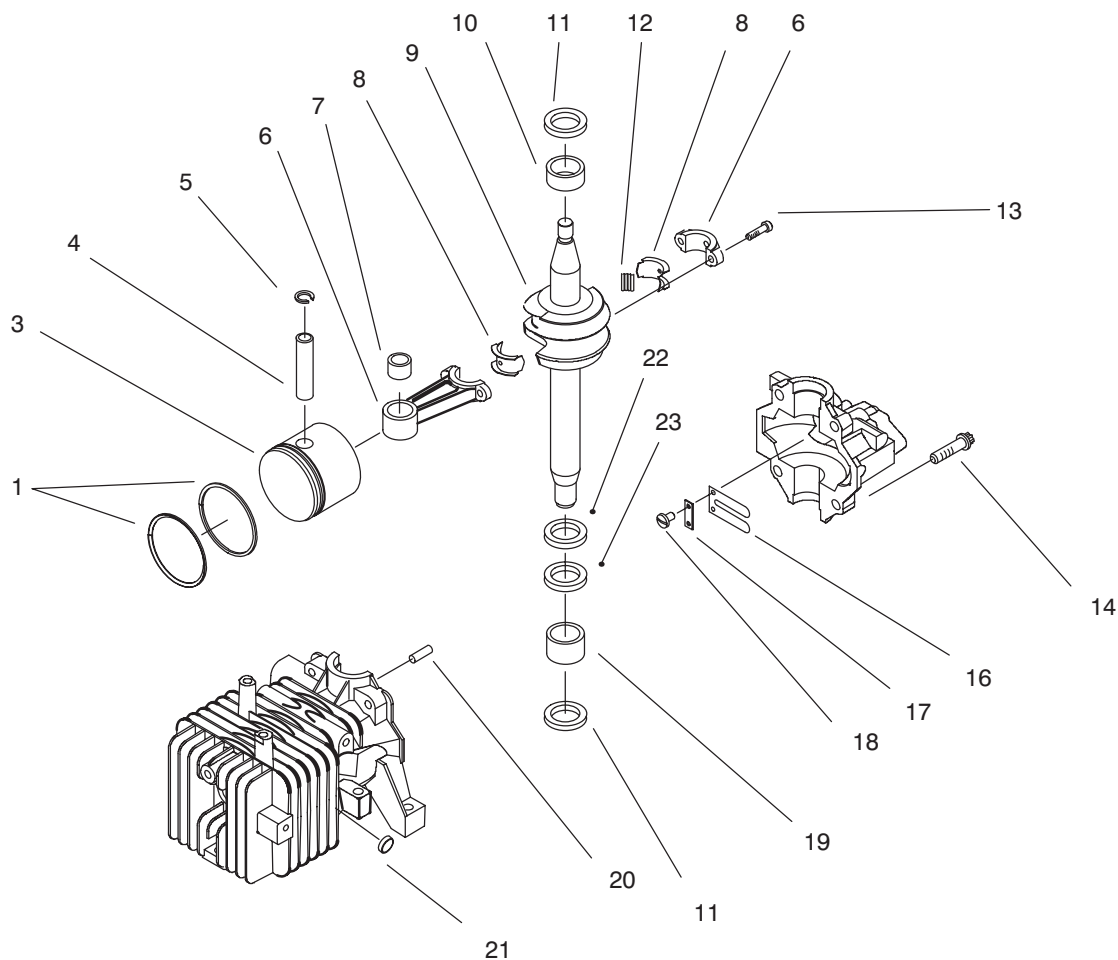


C-1295A

Engine Assembly (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	681737	Set – Ring	1	13	611393	Screw – HH	2
3	92-4923	Piston & Ring Set	1	14	614636	Screw – Torx. Washer Hd.	3
*	92-4925	Piston & Connecting Rod (Incl. Ref. #1-8, 12, & 13)	1	16	602588	Reed – Carburetor	1
4	606608	Pin – Wrist	1	17	602587	Reed – Backup Plate	1
5	303712	Ring – Retaining	2	18	612872	Screw	2
6	92-4921	Connecting Rod Assembly (Incl. Ref. #6-8, 12, & 13)	1	19	681831	Bearing – Needle	1
7	92-4927	Bearing	1	20	609629	Dowel	1
8	677982	Liner – Split (Set of 2)	1	21	609123	Plug – Core	4
9	94-5713	Crankshaft	1	22	252-76	Bearing – Thrust	1
10	681830	Bearing – Upper Main	1	23	252-80	Washer – Thrust	1
11	611396	Seal – Oil	2	*	684725	Cylinder & Crankcase ASM (Incl. Ref. #14, 16-18 & 20-21)	1
12	683911	Bearing – Needle	1	*	610372	Sealer	1

 *Not Illustrated

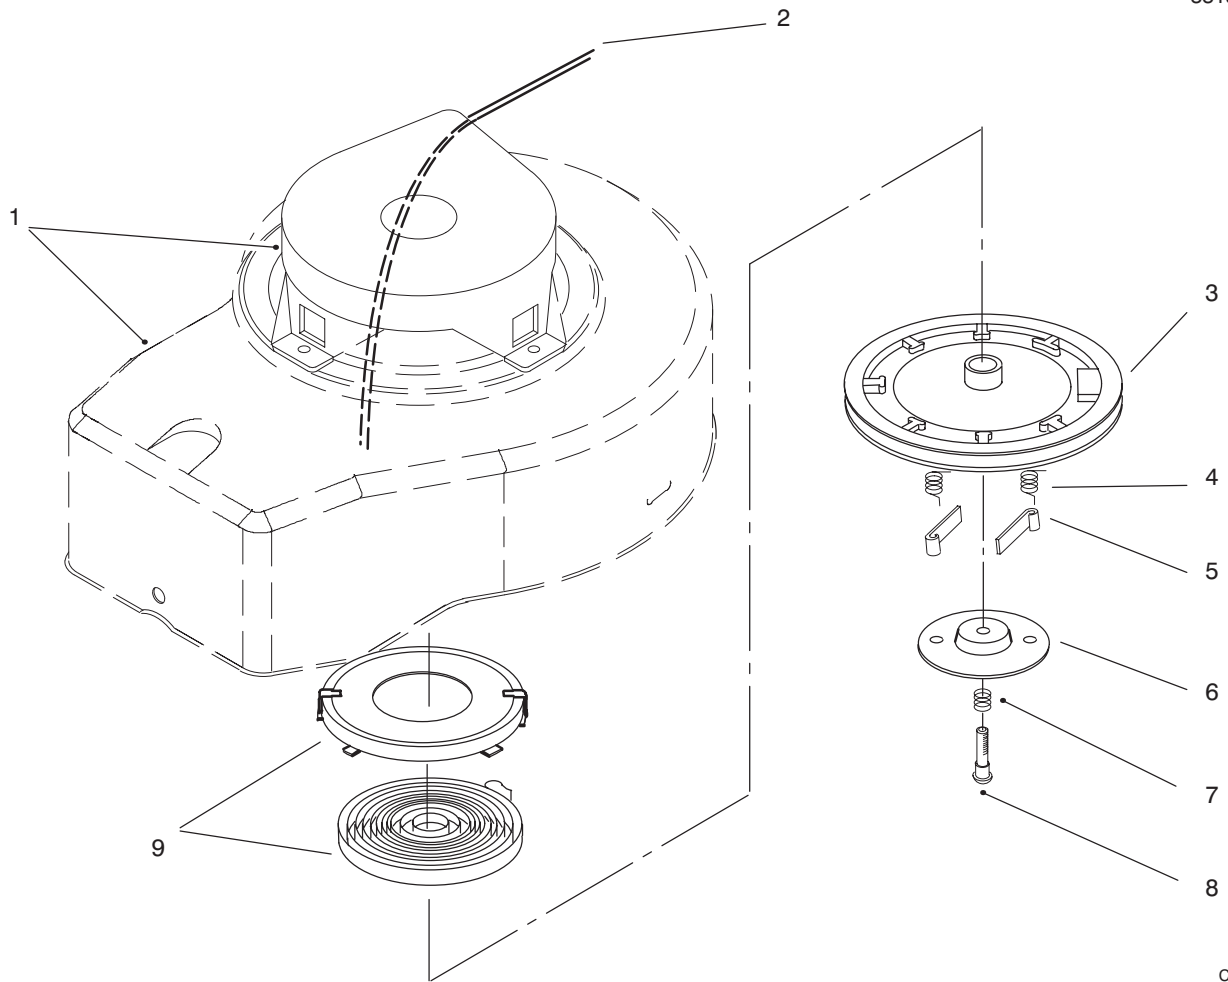


C-1309

Recoil Starter Assembly

Ref. No.	Part No.	Description	No. Used
1	93-4304	Housing Assembly	1
2	93-4305	Rope - Starter	1
3	92-4929	Pulley Assembly	1
4	92-4930	Spring - Dog	2
5	92-4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92-9692	Retainer	1
7	92-4933	Screw	1
8	92-4934	Spring	1
9	92-4935	Spring Keeper Assembly	1

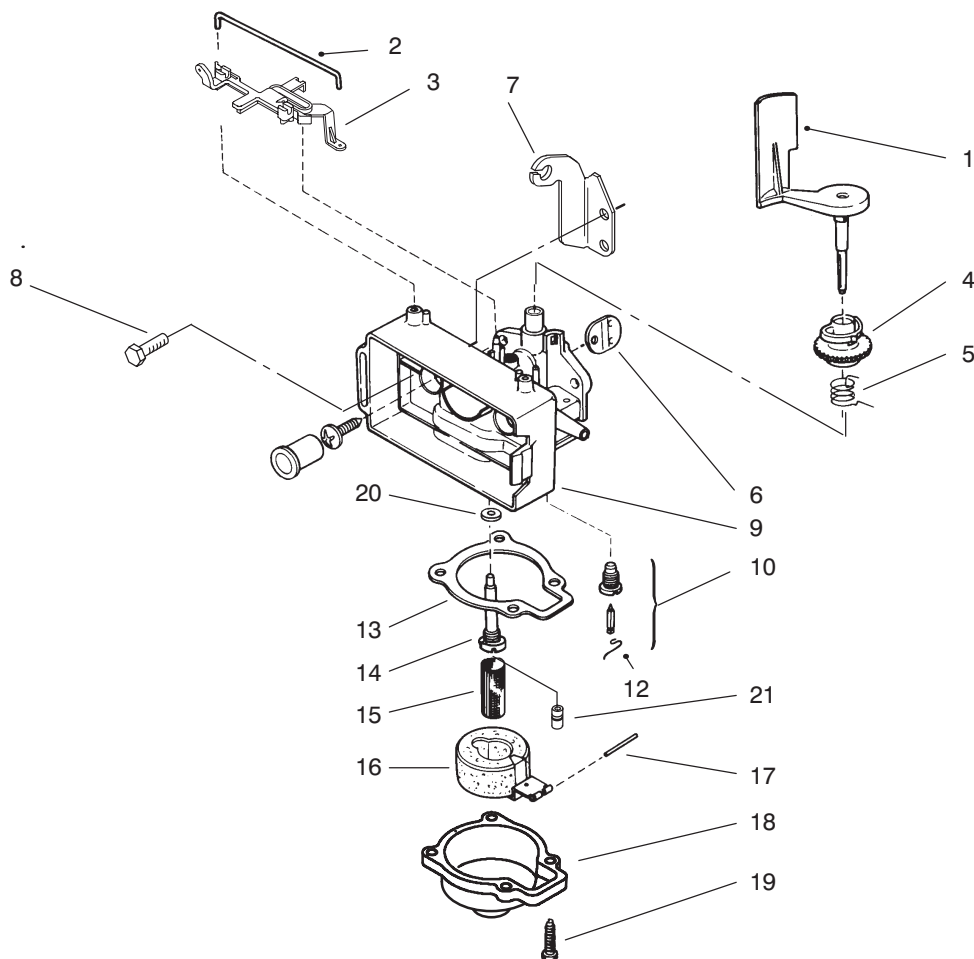 


C-2130A

Carburetor Assembly

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6376	Air Vane & Shaft	1	12	603145	Spring	1
2	610165	Retainer - Speed Control	1	13	602850	Gasket	1
3	93-1225	Lever - Speed Adjust	1	14	92-6371	Nozzle	1
4	610834	Collar - Air Vane	1	15	611071	Filter - Fuel	1
5	92-4944	Spring - Governor	1	16	678113	Float & Arm Assembly	1
6	92-6373	Disc - Throttle	1	17	92-6389	Pin	1
7	92-4949	Bracket - Throttle Control	1	18	92-9691	Float Chamber	1
8	613269	Screw	2	19	608850	Screw	4
9	93-4324	Carburetor Body	1	20	612383	Washer	1
10	92-9697	Kit - Float Valve, Body & Seat (Incl. Ref. #12)	1	21	92-6370	Main Jet	1
				*	92-6385	Jet - High Altitude	1
				*	93-4331	Carburetor Assembly	1

 *Not Illustrated

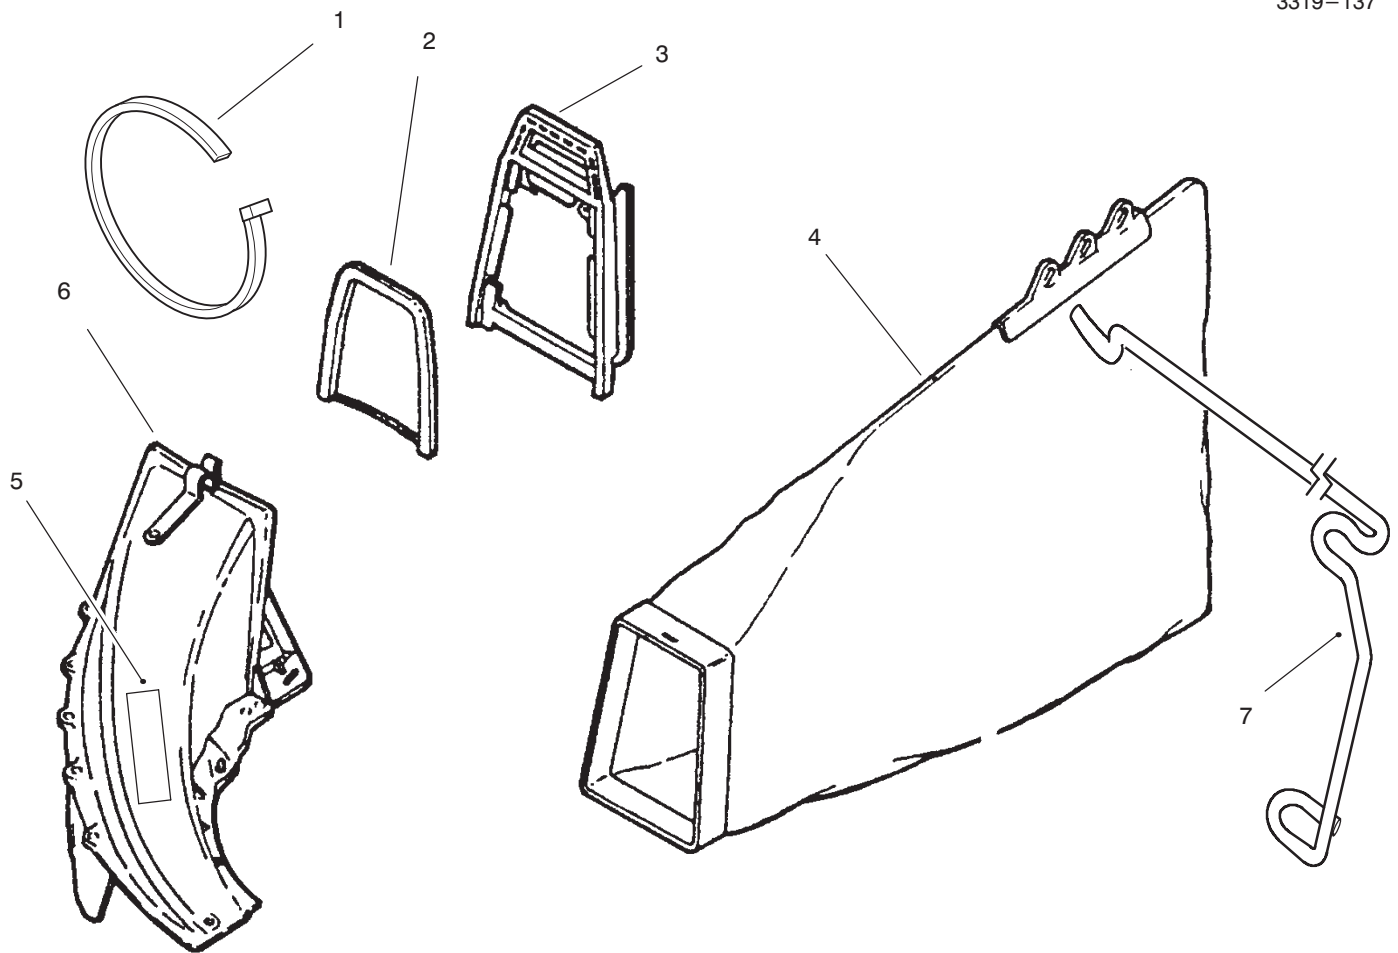

C-2608

Catcher Assembly

Ref. No.	Part No.	Description	No. Used
1	92-1039	Strap - Tie	1
2	612830	Brace - Chute	
3	612671	Adaptor - Chute	1
†4		Bag - Grass	1

Ref. No.	Part No.	Description	No. Used
5	92-2919	Decal - Danger	1
6	683743	Chute Assembly	1
7	93-3753	Rod - Grass Bag	1

† Obtain From Whole Goods Model No. 89816

MAINTENANCE RECORD

[illegible]

[illegible]

MAINTENANCE RECORD

[illegible]

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
130743	Nut	7 2 1	678113	Float & Arm Assembly	12 16 1
303712	Ring – Retaining	10 5 2	681737	Set – Ring	10 1 1
316959	Washer – Lock	7 9 1	681830	Bearing – Upper Main	10 10 1
602587	Reed – Backup Plate	10 17 1	681831	Bearing – Needle	10 19 1
602588	Reed – Carburetor	10 16 1	683743	Chute Assembly	13 6 1
602850	Gasket	12 13 1	683911	Bearing – Needle	10 12 1
603145	Spring	12 12 1	684049	CD Ignition	9 3 1
603164	Nut – Blade	5 18 1	684725	Cylinder & Crankcase Ass'y	10 * 1
605120	Grommet	2 5 1	684743	Flywheel	7 4 1
606608	Pin – Wrist	10 4 1	684776	Wheel & Tire Ass'y 6	1 19 2
607199	Key	7 6 1	12-5450	Screw – Thread Forming	9 16 1
607560	Plate – Cover	2 14 1	16-4369	Housing Assembly	2 17 1
607601	Screw	9 19 4	36-4780	Washer – Thrust	3 17 2
608850	Screw	12 19 4	36-4791	Washer	3 5 2
609123	Plug – Core	10 21 4	38-7820	Bearing – Ball	3 15 1
609471	Screw	9 21 3	39-5770	Decal – Danger	2 15 1
609482	Screw	8 2 2	40-1940	Washer	1 18 2
609493	Element – Filter Air	8 5 1	44-2750	Body – Primer	5 20 1
609629	Dowel	10 20 1	44-3174	Hose – Primer	8 7 1
610165	Retainer – Speed Control	12 2 1	49-2040	Screw – Hex Hd.	2 7 2
610358	Nut – Lock	4 13 2	53-4690	Stop – Ground Strap	9 15 1
610372	Sealer	10 * 1	55-3760	Pinion – 15 Tooth	3 3 1
610383	Retainer – Filter	8 3 1	60-8750	Bushing	3 6 2
610834	Collar – Air Vane	12 4 1	60-8850	Bushing – Output	3 9 2
611071	Filter – Fuel	12 15 1	60-8890	Gear – Bevel Pinion	3 16 1
611393	Screw – Hex. Hd.	10 13 2	60-9010	Strap – Ground	9 13 1
611396	Seal – Oil	10 11 2	62-6660	Spacer	3 11 1
612383	Washer	12 20 1	65-2720	Ring – Retaining	4 3 4
612543	Blade – 21	5 16 1	65-4710	Ring – Friction	4 7 2
612671	Adaptor – Chute	13 3 1	65-4720	Spring – Compression	4 17 2
612782	Line – Gas	5 22 1	65-4730	Washer – Thrust	4 14 2
612824	Clip – Rope Insert	6 21 1	65-4740	Washer – Thrust Keyed	4 4 4
612825	Handle – Starter	6 14 1	65-4750	Gear – Pinion	4 16 2
612830	Brace – Chute	13 2	65-4760	Washer	4 15 2
612872	Screw	10 18 2	66-6040	Key – Rocking R.H.	4 * 1
613208	Screw – Hex. Washer Hd.	9 6 2	66-6050	Key – Rocking L.H.	4 5 1
613227	Screw – Set	5 15 1	66-7460	Bulb – Primer	5 19 1
613269	Screw	12 8 2	84-7820	Mounting Plate	9 17 1
613765	Nut – Cage	1 11 1	92-1001	Bail – SP Control	6 9 1
614009	Plug – Spark	9 4 1	92-1004	Spring Arm Ass'y	4 12 2
614243	Knob	6 3 2	92-1008	Knob – Height Adjust	1 23 4
614426	Washer – Stepped	4 19 2	92-1039	Strap – Tie	13 1 1
614447	Spacer – Axle Shaft	4 9 2	92-1042	Wheel & Tire Ass'y 8	4 2 2
614596	Gear 34 Tooth	3 18 1	92-1057	Bolt – Shoulder	4 1 2
614636	Screw – Torx. Washer Hd.	10 14 3	92-1097	Decal – Discharge	2 16 1
614637	Bracket – Wheel Height Adj.	1 17 2	92-1099	Bolt – Shoulder	1 20 2
614640	Hub – Starter	7 3 1	92-1156	Wire – Brake Switch Lead	9 14 1
614654	Plate – Muffler	9 18 1	92-1630	Fan – Mulching	5 17 1
614668	Cover – Gear Case	3 2 1	92-1701	Rope – Stop	5 9 1
614669	Pulley – Half	3 12 2	92-2914	Decal – H.O.C.	2 2 2
614671	Cover – Drive	2 9 1	92-2915	Decal – H.O.C.	2 1 2
614672	Bolt – Shoulder Height Adj.	1 21 2	92-2919	Decal – Danger	13 5 1
614673	Handle Section – Lower	6 19 1	92-2925	Strap – Insulation	9 12 1
614674	Cover – Muffler	9 22 1	92-4881	Plate – Height Adjust	1 14 2
614677	Screw – Sem Thr'd Form	1 9 2	92-4890	Washer	1 15 2
614682	Knob – Cover Plate	1 7 1	92-4921	Connecting Rod Assembly	10 6 1
614687	Spring Arm Ass'y – Front	1 22 2	92-4923	Piston & Ring Set	10 3 1
614696	Shaft – Intermediate	3 4 1	92-4925	Piston & Connecting Rod	10 * 1
614697	Screw – Handle	6 2 2	92-4927	Bearing	10 7 1
614699	Screw	7 1 3	92-4929	Pulley Assembly	11 3 1
614702	Screw	7 7 4	92-4930	Spring – Dog	11 4 2
614702	Screw	9 10 1	92-4931	Dog	11 5 2
677525	Plate & Collar Assembly	5 1 1	92-4933	Screw	11 7 1
677982	Liner – Split (Set of 2)	10 8 1	92-4934	Spring	11 8 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-137

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-4935	Spring Keeper Assembly	11 9 1	93-3653	Handle - Guard	6 31 1
92-4944	Spring - Governor	12 5 1	93-3660	Fuel/Oil Cap Assembly	5 7 1
92-4948	Gasket - Carburetor	8 9 2	93-3753	Rod - Grass Bag	13 7 1
92-4949	Bracket - Throttle Control	12 7 1	93-4184	Bail - Flywheel Brake	6 12 1
92-5412	Stop - Pivot	6 8 2	93-4196	Shield - Grass	5 23 1
92-6370	Main Jet	12 21 1	93-4302	Screw - Sems	5 8 3
92-6371	Nozzle	12 14 1	93-4304	Housing Assembly	11 1 1
92-6373	Disc - Throttle	12 6 1	93-4304	Shroud Assembly	7 8 1
92-6376	Air Vane & Shaft	12 1 1	93-4305	Rope - Starter	11 2 1
92-6380	Tank & Shroud Assembly	5 5 1	93-4306	Spring - Compression	5 13 1
92-6385	Jet - High Altitude	12 * 1	93-4312	Brake Plate Assembly	9 8 1
92-6389	Pin	12 17 1	93-4320	Shield - Fuel	8 6 1
92-6542	Pulley - Engine	5 2 1	93-4324	Carburetor Body	12 9 1
92-7723	Bracket - Handle R.H.	2 12 1	93-4331	Carburetor Assembly	12 * 1
92-7724	Bracket - Handle L.H.	2 3 1	93-4331	Carburetor Assembly	8 8 1
92-7726	Cable - Traction	6 7 1	93-4343	Baffle	9 20 1
92-7727	Gearcase	3 10 1	93-7250	Decal - Warning	2 10 1
92-7728	Guide - Transmission	2 6 1	93-7380	Anchor - Cable SP Lower	6 20 1
92-7729	Anchor - Cable Upper	6 6 1	93-7381	V-Belt	4 10 1
92-7731	Plate - Baffle	1 16 2	93-7383	Guide - Rope	6 16 1
92-7734	Cable - Throttle 2 Cycle	6 17 1	94-1609	Cover - Wheel	4 18 2
92-7735	Gear Case Assembly	2 4 1	94-1610	Grommet - Plastic	1 10 2
92-7738	Cable - Flywheel Brake	6 18 1	94-5713	Crankshaft	10 9 1
92-7746	Height Adj. Arm - Rear	4 8 2	94-5737	Short Block	9 1 1
92-8615	Applique - Shroud	5 12 1	95-1713	Handle - Section Upper	6 13 1
92-8630	Plate - Mulch 21	1 8 1	95-1726	Screw - Engine	5 3 3
92-8647	Shield - Trailing	2 20 1	252-76	Bearing - Thrust	10 22 1
92-9665	Screw - Phillips Hd.	2 8 1	252-80	Washer - Thrust	10 23 1
92-9691	Float Chamber	12 18 1	321-49	Screw - Hex Hd. Cap	6 5 1
92-9692	Retainer	11 6 1	321-50	Screw - Hex Hd. Cap	6 15 1
92-9697	Kit - Float Valve, Body	12 10 1	322-3	Screw - Hex Hd. Cap	2 21 6
92-9698	Screw - Shoulder	9 9 1	3256-24	Washer	3 13 1
93-0239	Shaft - Output	3 7 1	3285-19	Pin - Groove	3 8 2
93-0294	Decal - Recoil	5 11 1	3290-459	Rivet - Plastic	9 11 2
93-1216	Base - Shroud	7 5 1	3296-5	Nut	3 14 1
93-1221	Shield - Carburetor	8 10 1	3296-29	Nut - Lock	2 19 6
93-1225	Lever - Speed Adjust	12 3 1	3296-73	Nut - Lock	6 4 2
93-1231	Cover - Air Cleaner	8 4 1	32144-4	Screw - Taptite	3 1 4
93-1233	Gasket - Exhaust	9 2 1	32144-85	Screw - Hex Hd.	4 11 2

*Not Illustrated