

LAWN-BOY®

21" GOLD SERIES WALK-BEHIND MOWER

Model No. 10519 – 7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Engine Briggs & Stratton	
Rear Axle & Wheel Assembly	2	12V802–0626–01	6–14
Engine Assembly	3	Lawn–Boy Part Number Index	15–17
Handle Assembly	4		
Gear Case Assembly	5		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Rear Bagging Kit	Model No. 89800	Leaf Bag Kit w/Chute	Model No. 89811
Side Bagging Kit	Model No. 89814	Mow & Feed	
Leaf Bag	Model No. 89804	Fertilizer Spreader	Model No. 52070
Leaf Shredder Kit	Model No. 89860		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

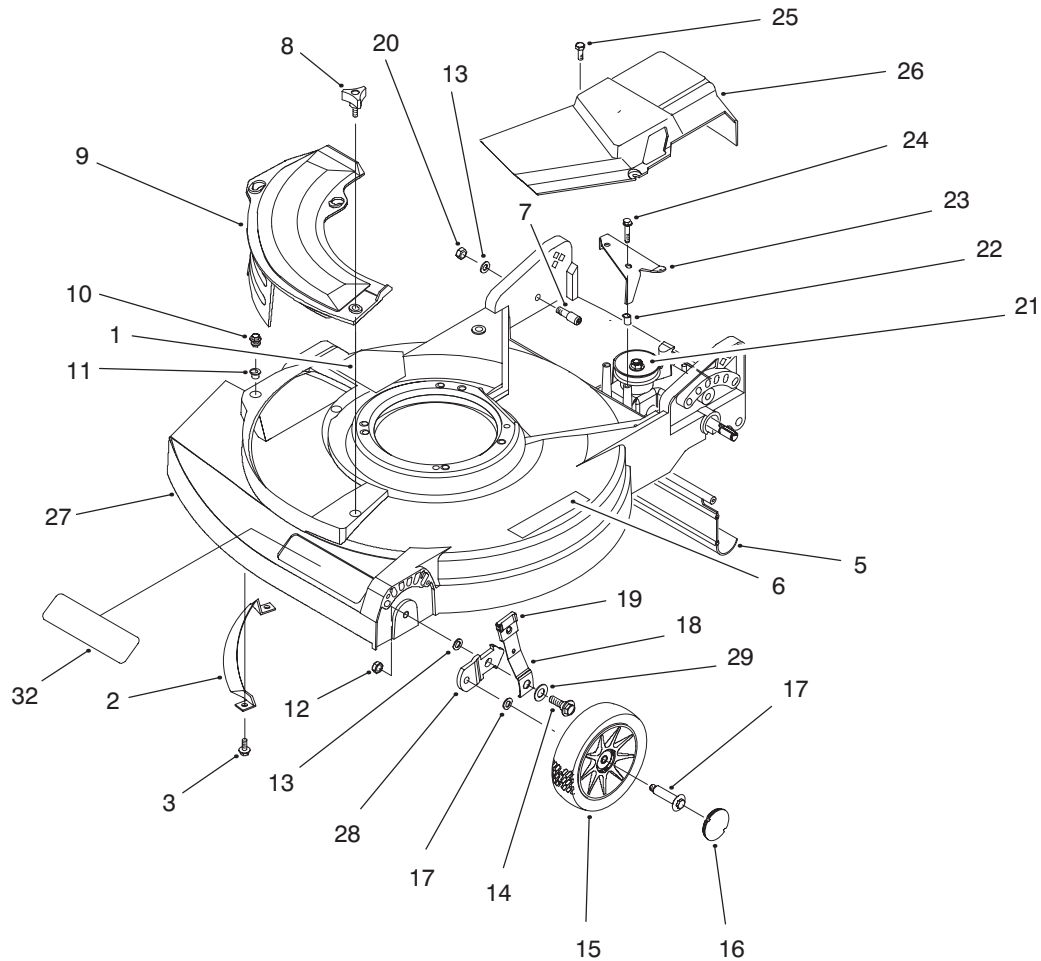


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	39-5770	1	Decal-Danger
2	608175	1	Toe Bar 21
3	46-6811	2	Screw-HWH
5	92-7736	1	Shield-Trailing
6	93-7250	1	Decal-Warning
7	92-9673	2	Bolt-Shoulder
8	614682	1	Knob-Cover Plate
9	92-8630	1	Mulch Plate-21"
10	614677	2	Screw-Sems
11	94-1610	3	Grommet-Plastic
12	3296-39	2	Nut-Lock
13	40-1940	6	Washer
14	92-4856	2	Bolt-Shoulder
15	684776	2	ASM-Wheel & Tire 6"
16	92-1604	4	Cap-Hub
17	92-1099	2	Bolt-Shoulder 6" Wheel
18	92-1006	2	ASM-Spring Arm
19	92-1008	4	Knob-Height Adjust
20	610358	2	Nut-Lock
21	92-7869	1	ASM-Gear Case
22	46-5551	2	Bushing-Spacer
23	92-7699	1	Bracket-Actuator
24	92-7748	2	Screw
25	12-5450	2	Screw-Thd Form
26	92-8852	1	Cover-Drive

Ref. No.	Part No.	Qty.	Description
27	16-5809	1	Housing-21" Sp (Incl. Ref. #1 & 6)
28	614637	2	Bracket-Wheel Height Adj
29	3290-413	2	Washer-Spring
31	607560	1	Plate-Cover
32	93-0290	1	Decal-Deck

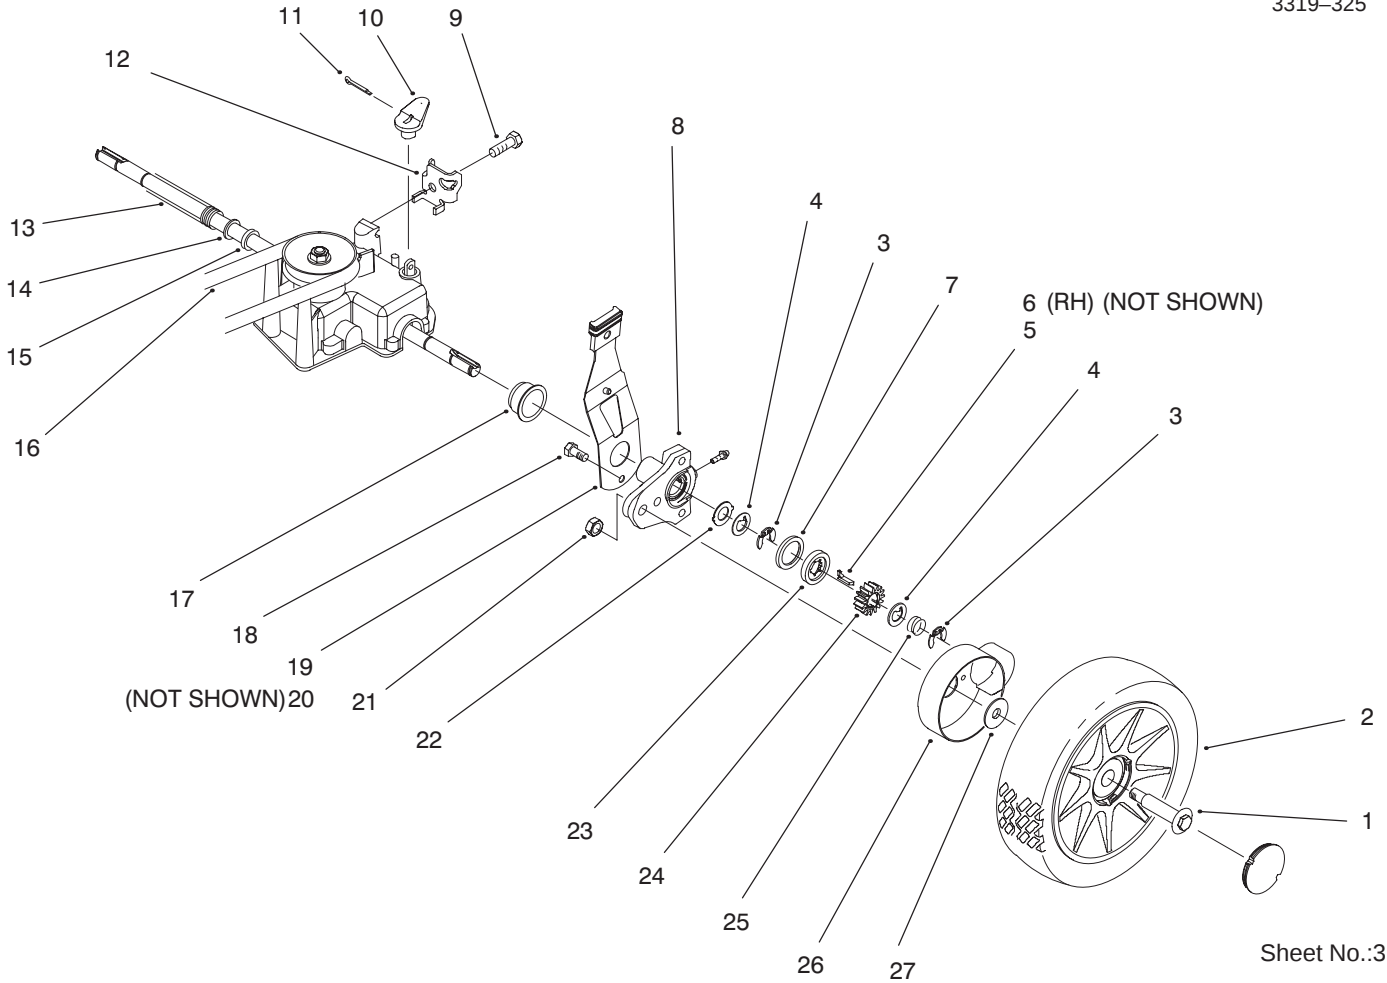 


Sheet No.:3

Rear Axle & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	ASM-Whl
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking
6	66-6040	1	Key-Rocking
7	65-4710	2	Ring-Friction
8	92-7746	2	ASM-Hgt Adj Arm
9	32144-70	1	Screw-TAP
10	60-8821	1	Lever-Shift
11	3272-10	1	Pin-Cotter
12	82-8780	1	Retainer-Cable
13	24-7920	1	Cover-Drive Shaft
14	303259	1	Washer
15	605255	1	Washer-Flat
16	92-1043	1	V-Belt
17	92-6535	2	Cap-End
18	32144-85	2	Screw-HH
19	92-6540	1	ASM-Spring Arm
20	92-6539	1	ASM-Spring Arm
21	610358	2	Nut-Lock
22	65-4730	2	Washer-Thrust
23	65-4760	2	Washer
24	65-4750	2	Gear-Pinion
25	65-4720	2	Spring-Compression

Ref. No.	Part No.	Qty.	Description
26	94-1609	2	Cover-Wheel
27	614426	2	Washer-Stepped

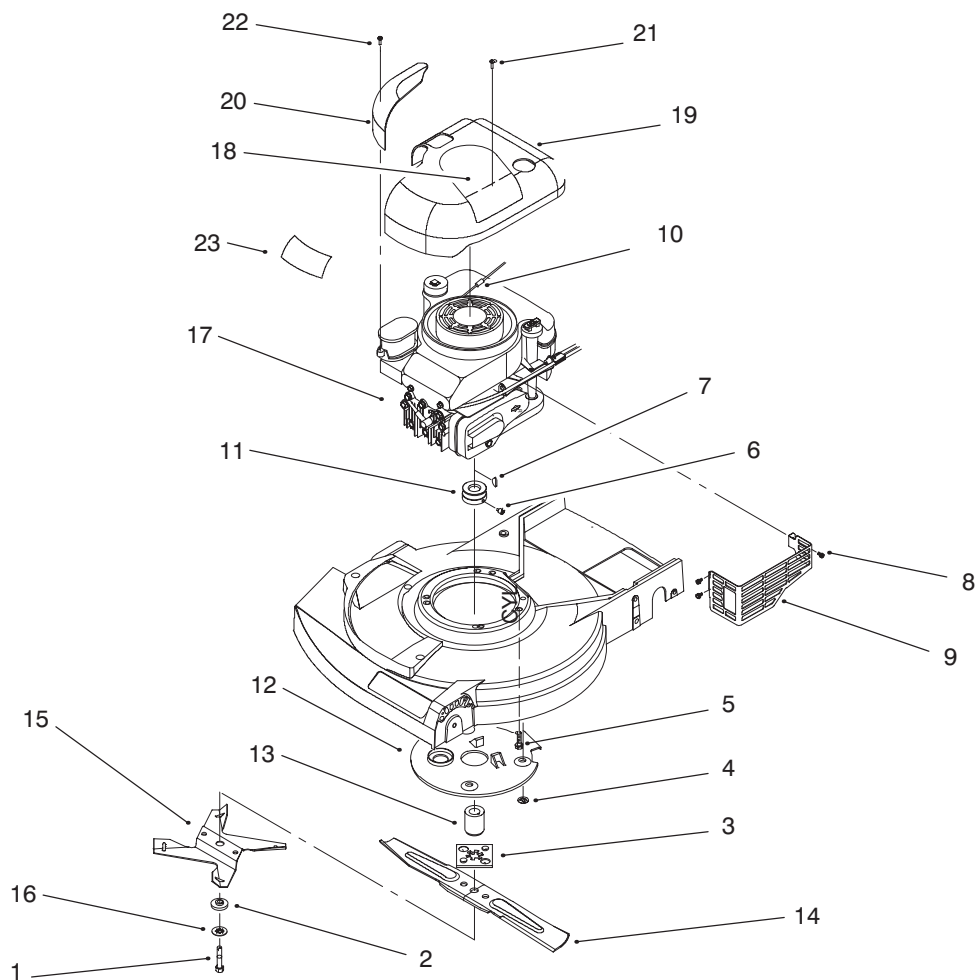 


Sheet No.:4

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	92-4879	1	Bolt-Blade
2	92-4857	1	Spacer
3	146046	1	Plate-Blade Driver
4	92-4877	3	Nut-Push
5	95-1727	3	Screw-Engine Mount
6	700029	1	Screw-Set
7	3257-3	1	Key-Woodruff
8	32144-73	3	Screw-HWHTF
9	82-8550	1	Shield-Muffler
10	2210-316	1	Rope-Stop (P/W Eng)
11	92-7653	1	Pulley-Engine
12	94-6065	1	Shield-Grass
13	146044	1	Hub-Blade Driver
14	612543	1	Blade-21" Whirl
15	92-1630	1	Fan-Mulching
16	605339	1	Washer-Lock
17		1	Engine-4 Cycle
18	95-1702	1	Decal-Recoil
19	95-1704	1	Shroud-Engine (P/W Eng)
20	95-1705	1	Cover-Air Cleaner (P/W)
21	95-1706	2	Screw-Shroud (P/W Eng)
22	95-1707	2	Screw-Air Cleaner (P/W)


Ref. No.	Part No.	Qty.	Description
23	95-0656	1	Applique

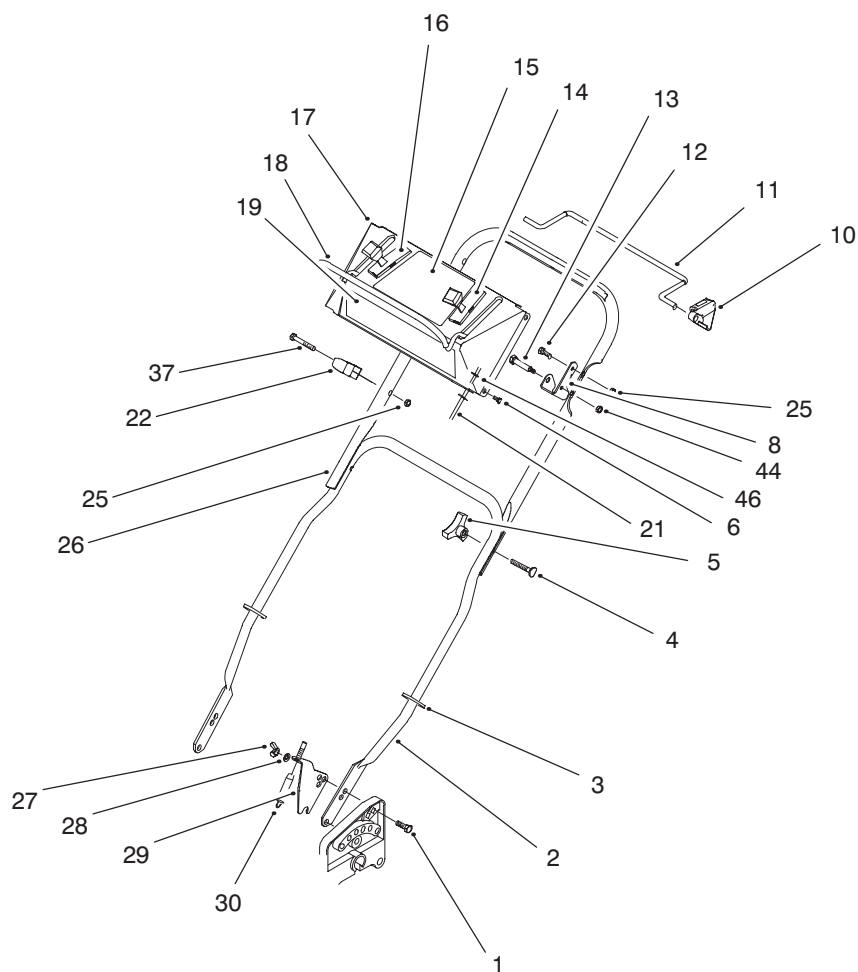 

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3230-29	2	Bolt-CARR.	37	321-51	1	Bolt-Hex
2	92-6537	1	Handle Section-Lower	44	3296-56	1	Nut-Lock
4	614697	2	Screw-Handle	46	3256-2	2	Washer-Flat
5	614243	2	Knob				
6	92-9665	4	Screw-Phil				
8	92-1094	1	Bail Stop Bracket				
10	92-5412	1	Stop-Pivot				
11	92-1617	1	Sp Control Bail				
12	321-4	1	Screw-HH				
13	613050	1	Bolt				
14	95-1719	1	Throttle-Control				
15	95-1701	1	Decal-Control Panel				
16	92-8926	1	Control-Speed				
17	95-5592	1	Panel-Control (Incl. Ref. #15)				
18	94-6098	1	Engine Control Bail				
19	92-2918	1	Decal-Front Console				
21	95-1717	1	Cable-Brake				
22	93-7383	1	Guide-Rope				
25	3296-73	2	Nut-Lock				
26	92-1092	1	Handle-Upper				
27	32103-29	2	Nut-Wing				
28	3253-33	2	Washer-Lock				
29	92-7899	1	Bracket-Traction Cable				
30	92-6518	1	ASM-Cable				

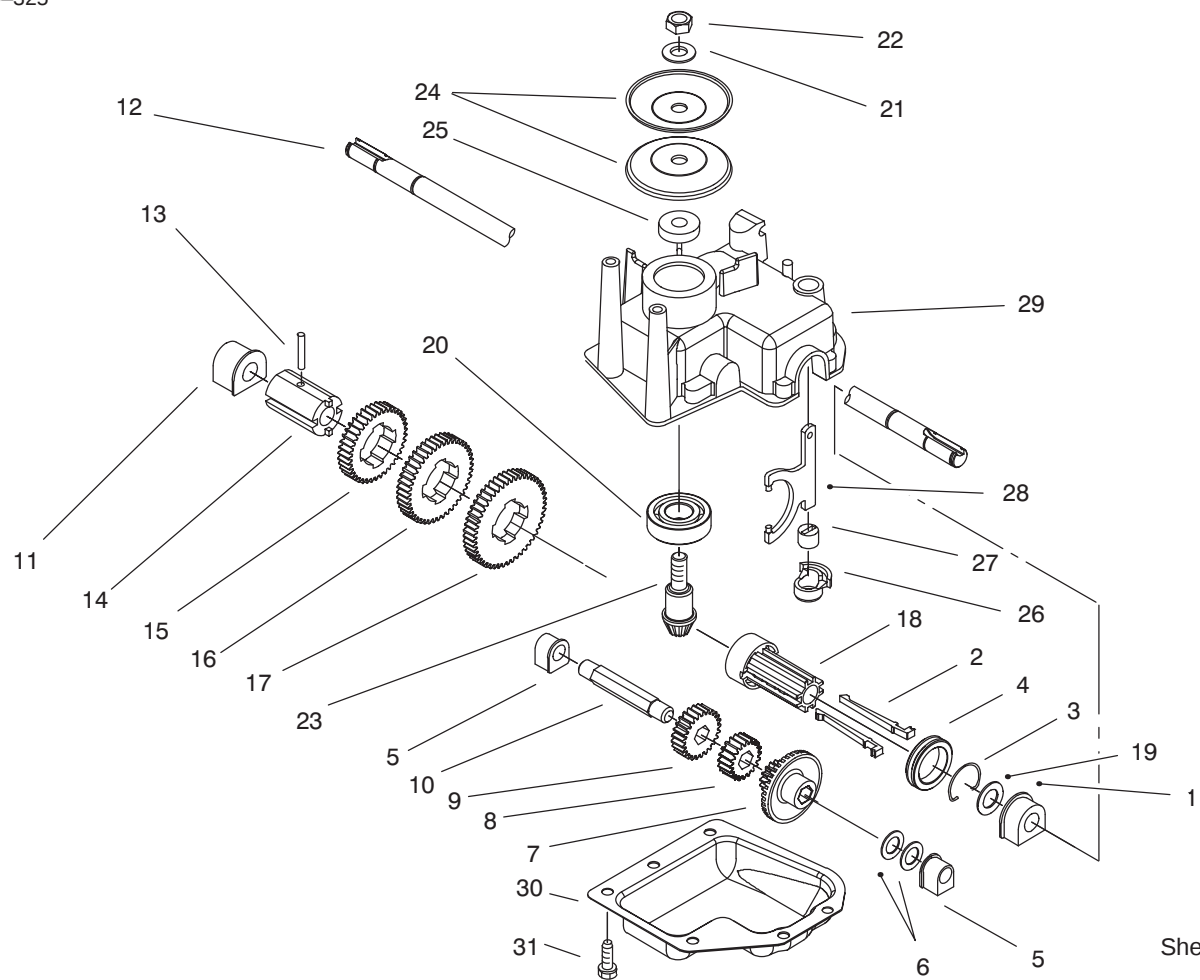 


Sheet No.:100

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	60-8770	1	Bushing-Output Shaft
2	76-0760	2	Key-Shift
3	65-5250	1	Clip-Spring
4	76-0770	1	Collar-Shift
5	60-8750	2	Bushing
6	36-4791	2	Washer-Thrust
7	55-3760	1	15 T Pinion
8	55-3780	1	Pinion 20t 2nd Gear
9	55-3800	1	Pinion 25t 3rd Gear
10	60-8800	1	Shaft-Intermediate
11	60-8850	1	Bushing-Output
12	65-4770	1	Shaft-Output
13	3285-19	1	Pin-Spirol
14	60-8790	1	Sleeve-Gear
15	55-3810	1	Gear 39t 3rd Gear
16	55-3790	1	Gear 44t 2nd Gear
17	55-3770	1	Gear 49t 1st Gear
18	76-0780	1	Sleeve-Shift Key
19	36-4780	1	Washer-Thrust
20	38-7820	1	Bearing-Ball
21	3256-24	1	Washer-Flat
22	3296-5	1	Nut-Lock
23	92-5790	1	Pinion-Bevel
24	60-8840	2	Pulley-Half
25	92-5791	1	Spacer-Pulley
26	60-8810	1	Retainer-Shift-Fork


Ref. No.	Part No.	Qty.	Description
27	29-9570	1	Bushing-Yoke
28	60-8870	1	Yoke-Shift
29	60-8710	1	Gearcase-Upper 3 Sp
30	60-8730	1	Cover-Gearcase
31	49-2040	6	Screw-HH

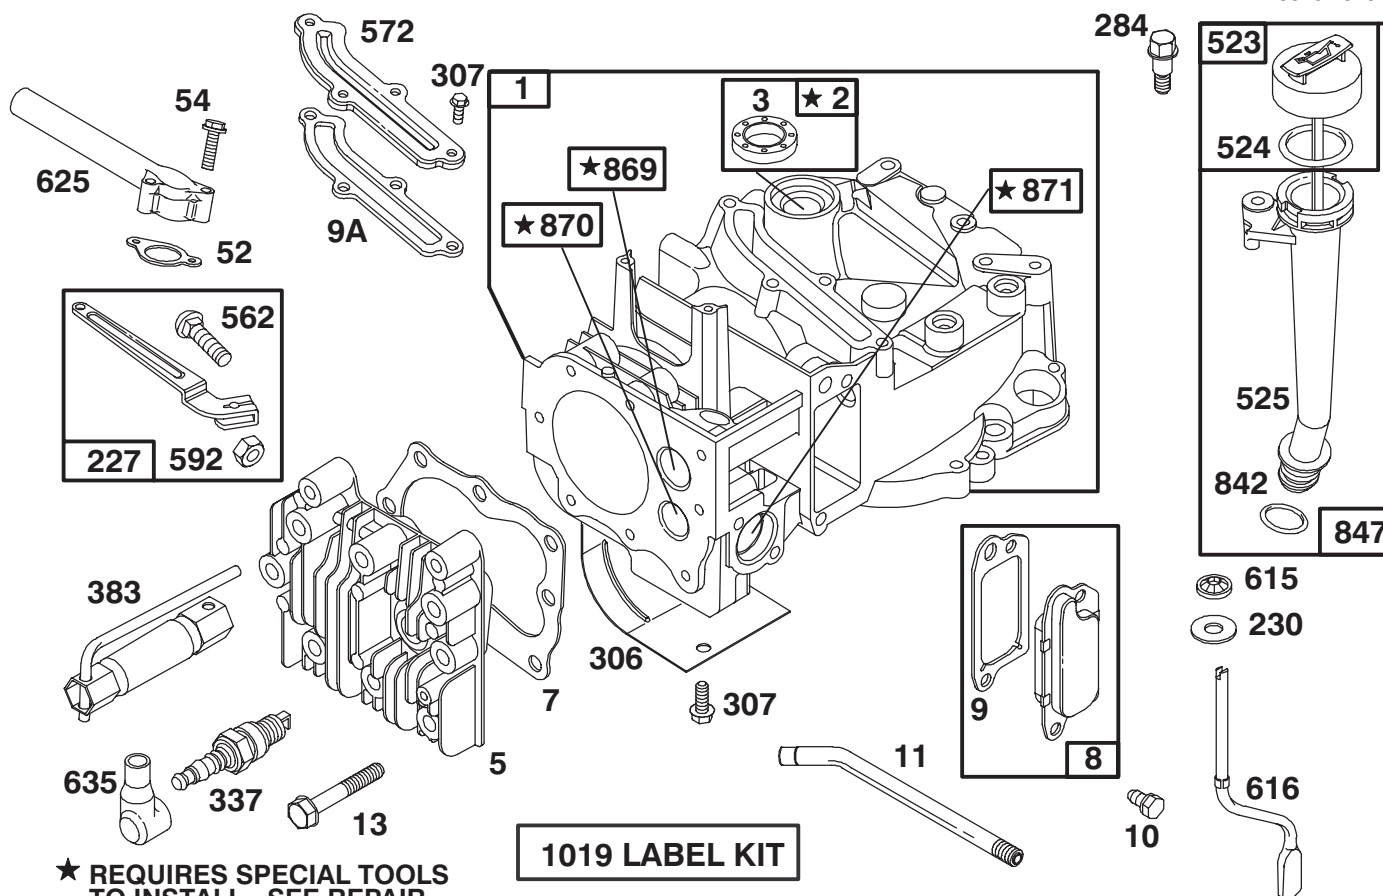 

ENGINE BRIGGS & STRATTON MODEL 12V802-0626—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1	383	89838	Wrench — Spark Plug	1
2	293708	Bushing — Cylinder	1	523	495264	Cap With Dipstick — Oil Filler	1
★3	299819	Seal — Oil	1	★524	280393	Seal — Filler Tube	1
5	214368	Head — Cylinder	1	525	495265	Tube — Oil Filler	1
★7	272916	Gasket — Cylinder Head	1	562	94852	Bolt — Carriage	1
8	495786	Breather — Valve Chamber	1	572	224328	Baffle — Cylinder	1
★9	272481	Gasket — Breather	1	592	231082	Nut — Hex.	1
★9A	272238	Gasket — Baffle Plate	1	615	94474	Fastener	1
10	94650	Screw — Breather Mtg.	1	616	263175	Crank — Governor	1
11	231933	Tube — Breather	1	625	497465	Tube — Fuel Intake	1
13	94547	Screw — Cylinder Head	1	635	66538	Elbow — Spark Plug	1
★52	272199	Gasket — Intake Elbow	1	★842	280966	Seal — O-Ring	1
54	94526	Screw — Intake Elbow Mtg.	1	847	495263	Oil Fill Tube Assy.	1
227	492349	Lever Assembly — Gov.	1	869	213512	Seat — Intake Valve	1
230	67072	Washer — Gov. Crank	1	870	213513	Seat — Exhaust Valve	1
284	94511	Screw — Hex. Head	1	871	262001	Guide — Exhaust Valve	1
306	224324	Shield — Cylinder	1			Note: 63709 Guide — Intake Valve	1
307	94515	Screw — Hex. Head	1			Label Kit	1
337	802592	Plug — Spark	1	1019	494256		

 ★ Included in Gasket Set—Part No. 497316.

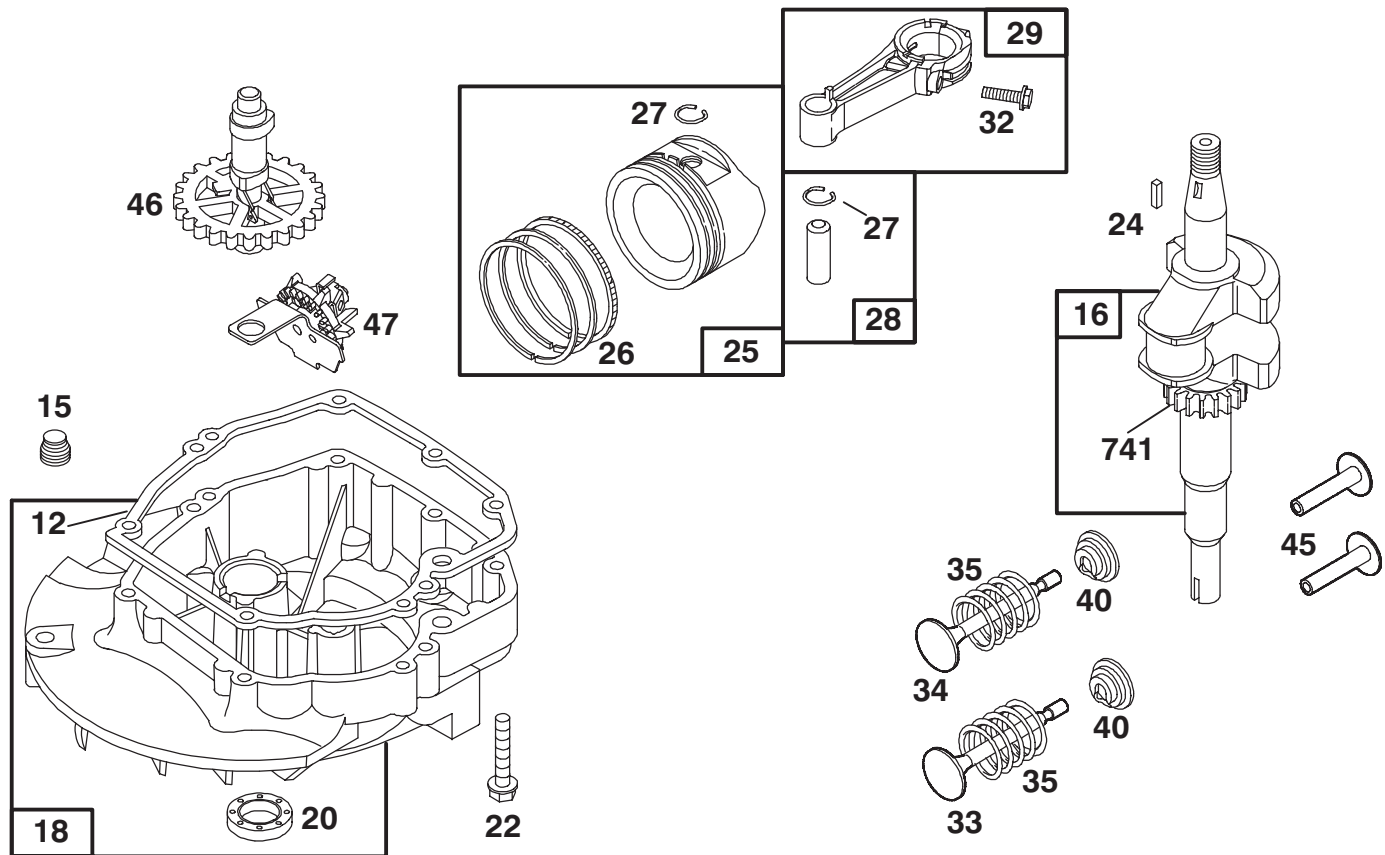


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-0626-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket — Crankcase	1
15	94720	Plug — Oil Drain	1
16	493362	Crankshaft	1
		Note: Order 94388 For Timing Gear Key.	
18	493279	Sump — Engine	1
★20	399781	Seal — Oil	1
22	94220	Screw — Hex. Head	1
		Note: 94612 Screw — Hex. Head (One Used in Hole Nearest Breather)	
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005" O.S.)	1
29	490566	Rod Assembly — Connecting	1
		Note: For Conn. Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	
32	94699	Screw — Conn. Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
40	93312	Retainer — Valve Spring	1
45	262204	Tappet — Valve	1
46	498275	Gear — Cam	1
47	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

 ★ Included in Gasket Set—Part No. 497316.

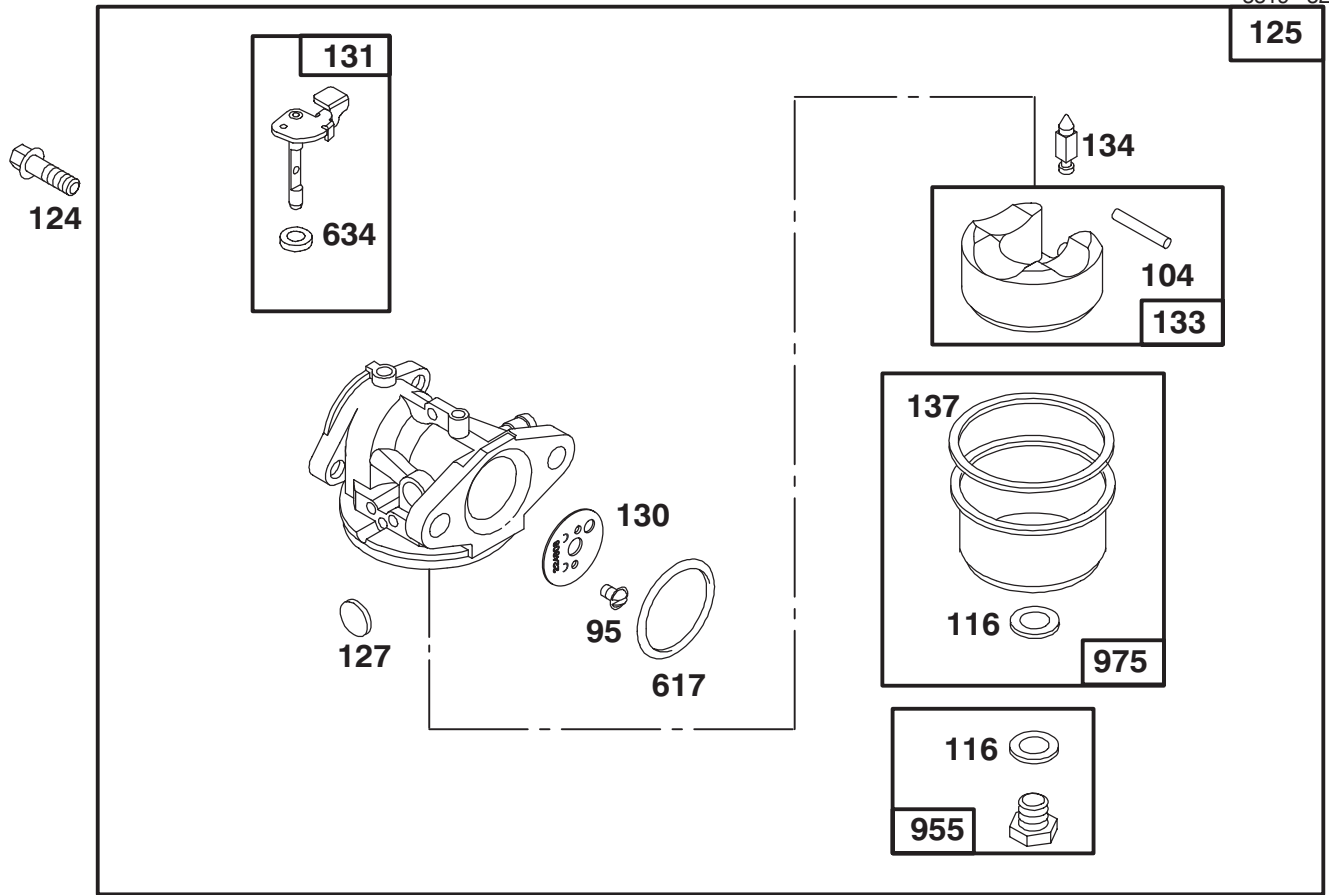


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-0626-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mtg.	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only)	1
124	94525	Screw – Carburetor Mtg.	1
125	498966	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only)	1
955	498975	Screw – Bowl Mtg. (Std.) Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

 ●Included in Carburetor Kit–Part No. 498260.
◆Included in Carburetor Gasket Set–Part No. 498261.

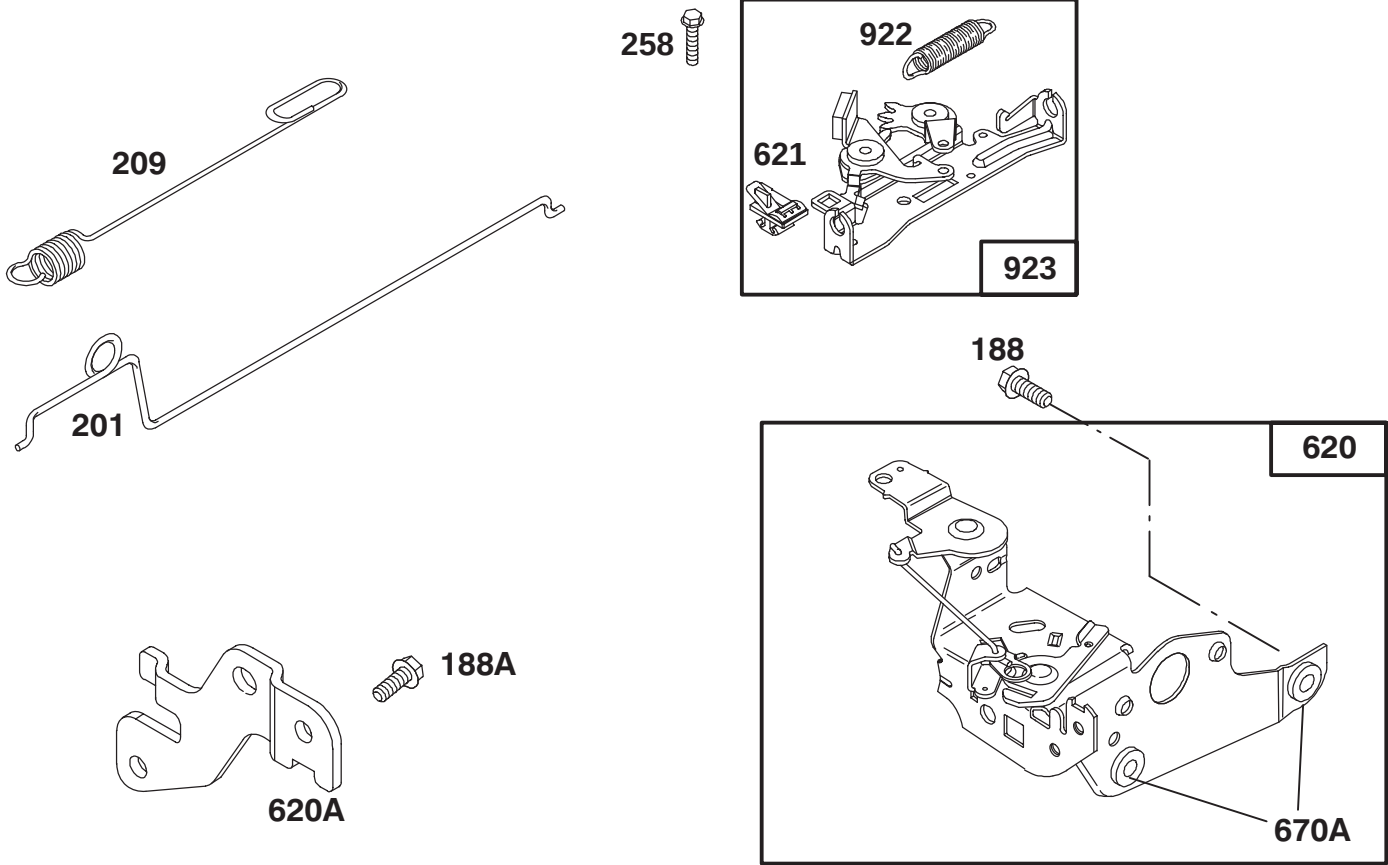


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-0626-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
188A	94602	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
670A	493823	Spacer – Bracket	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

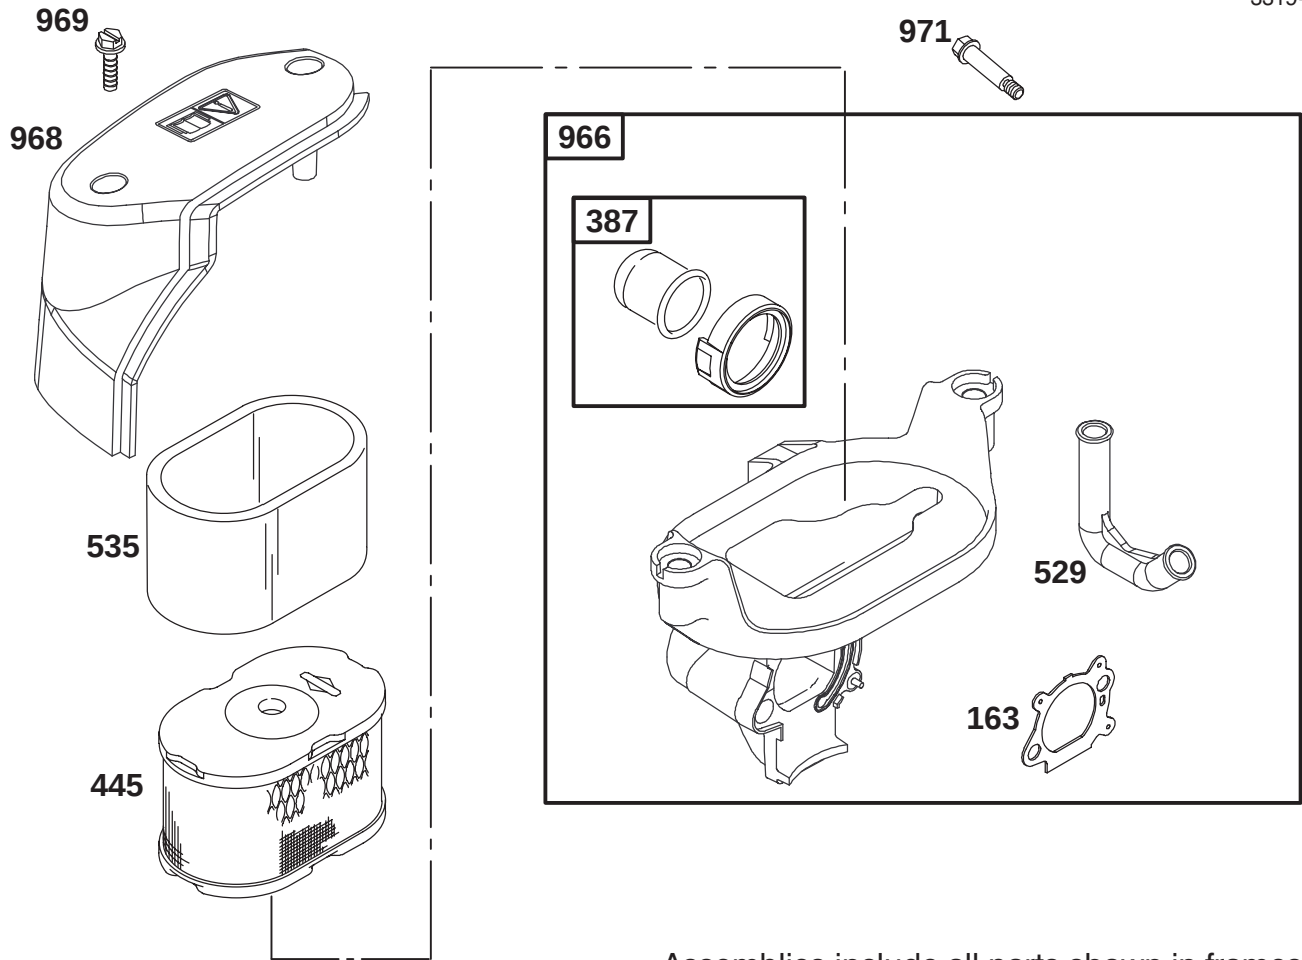 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-0626—01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
445	497725	Filter — Air	1
529	281556	Grommet — Breather	1
535	273185	Filter — Air	1

Ref. No.	Part No.	Description	No. Used
966	497915	Base — Air Cleaner	1
968	281340	Cover — Air Cleaner	1
969	94777	Screw — Cover Mtg.	1
971	94655	Screw — Air Cleaner	1

 ★ Included in Gasket Set—Part No. 497316.

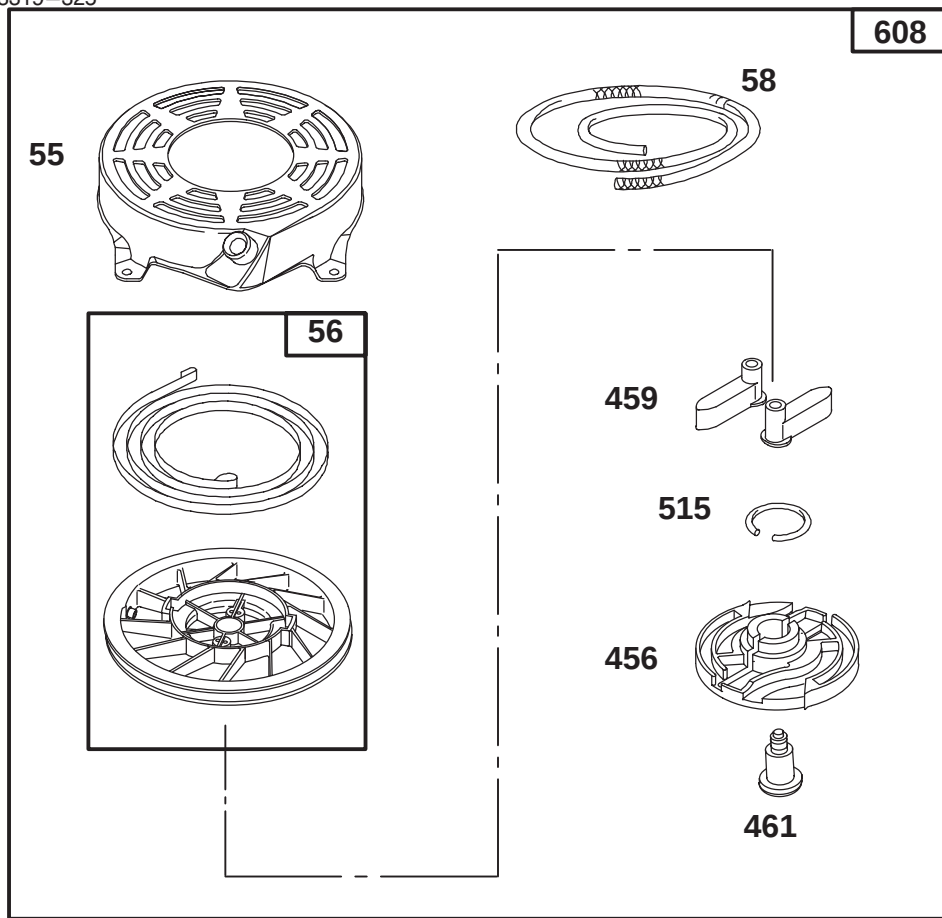


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-0626-01

Ref. No.	Part No.	Description	No. Used
55	497440	Housing — Rewind Starter	1
56	498144	Pulley — Rewind Starter	1
58	280399	Rope — Rewind Starter (Cut to Required Length)	1
59	224467	Insert — Starter Grip	1
60	493926	Handle — Rewind Starter	1
456	281503	Retainer — Rewind Starter	1
459	281505	Pawl — Starter	1

Ref. No.	Part No.	Description	No. Used
461	94943	Pin — Starter	1
515	263073	Spring — Torsion	1
608	497680	Starter Assy. — Rewind	1
Includes:			
		94128 Screw — Hex. Head	1
		92987 Nut — Hex.	1




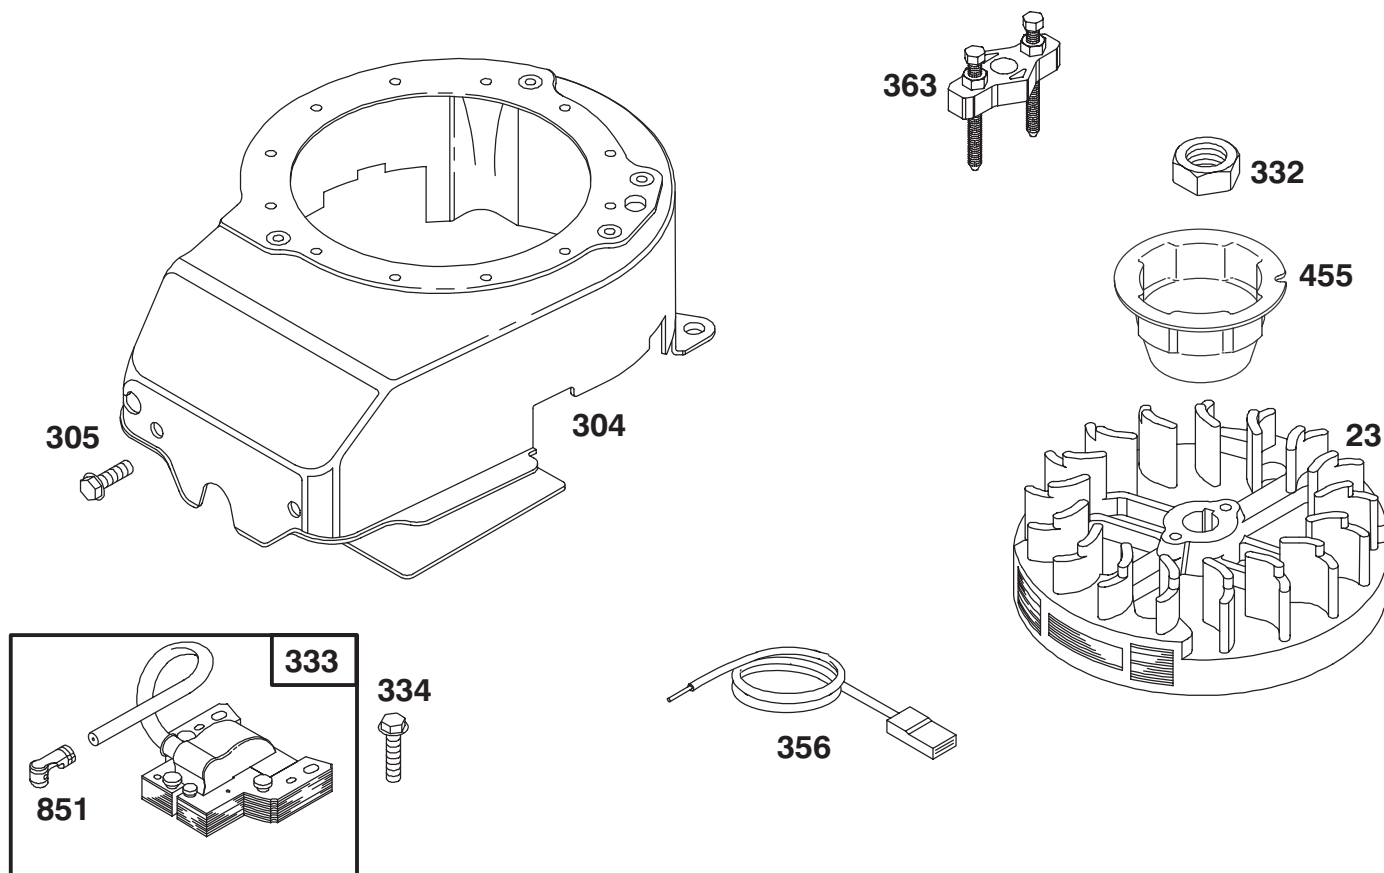 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-0626-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
304	493293	Housing – Blower	1
332	92284	Nut – Flywheel	1
333	802574	Armature – Magneto	1
334	94731	Screw – Sem	1

Ref. No.	Part No.	Description	No. Used
356	398808	Wire – Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup – Starter	1
851	493880	Terminal – Ignition Cable	1

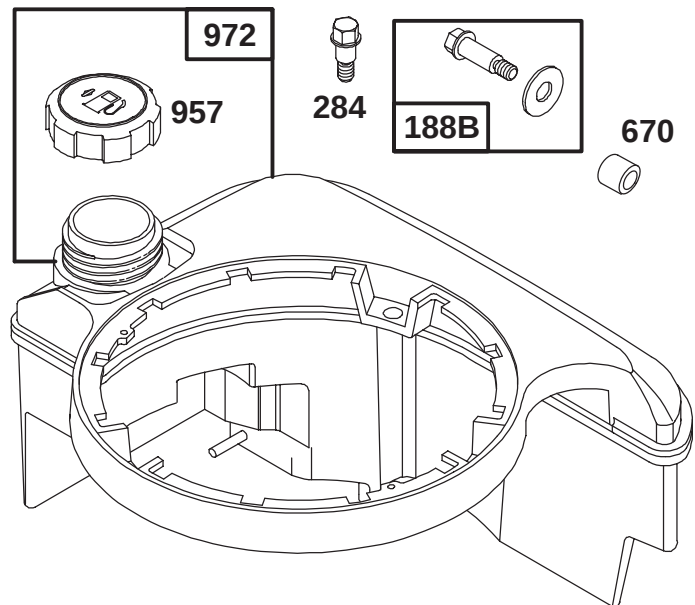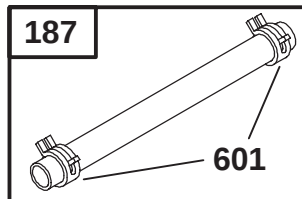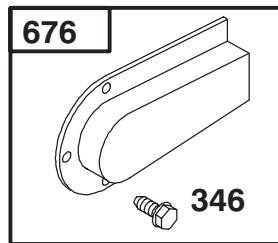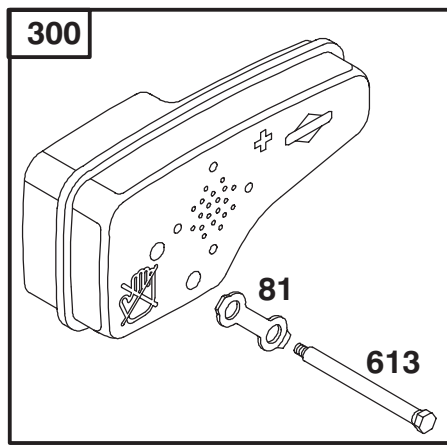    




Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-0626-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188B	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93053	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

   ★ Included in Gasket Set—Part No. 497316.

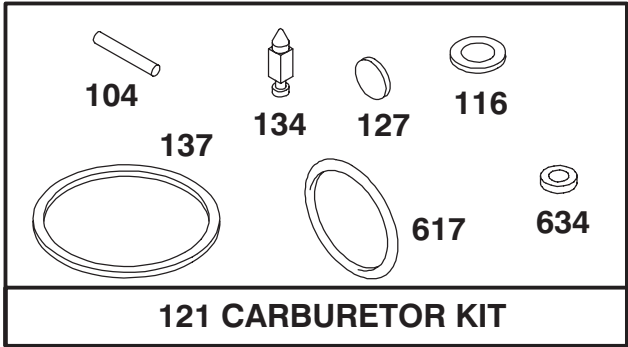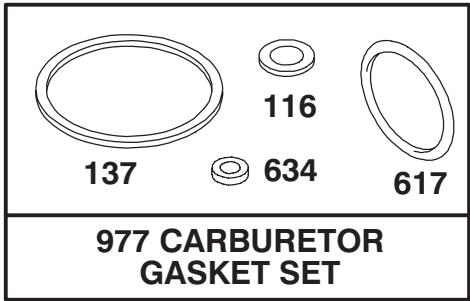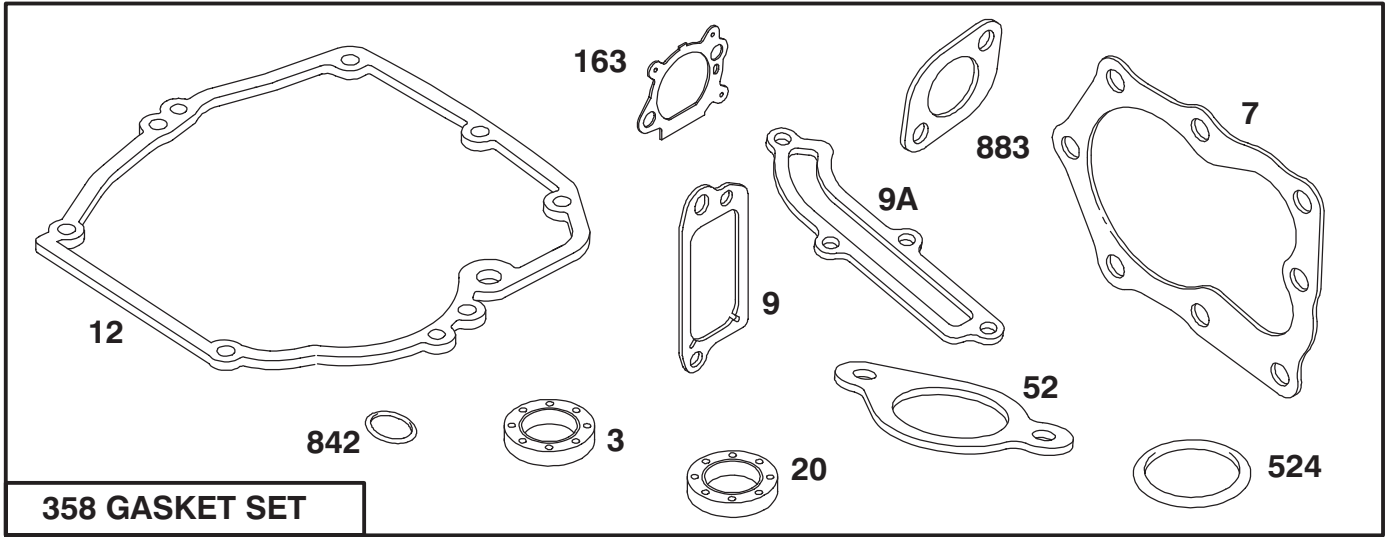

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-0626—01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal — Oil	1
★7	272916	Gasket — Cylinder Hd.	1
★9	272481	Gasket — Breather	1
★9A	272238	Gasket — Baffle Plate	1
★12	272198	Gasket — Crankcase	1
★20	399781	Seal — Oil	1
★52	272199	Gasket — Intake Elbow	1
●104	231371	Pin — Float Hinge	1
◆116		Gasket — Sealing (Sold in Kit Only)	1
121	498260	Carburetor Kit	1
●127		Plug — Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve — Inlet (Includes Seat)	1
◆137		Gasket — Bowl (Sold in Kit Only)	1
★163	272653	Gasket — Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal — Filler Tube	1
◆617	270344	Seal — Fuel Intake Tube	1
◆634		Washer — Shaft (Sold in Kit Only)	1
★842	280966	Seal — O-Ring	1
★883	272253	Gasket — Exhaust	1
977	498261	Gasket Set — Carburetor	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

Lawn—Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
146044	3	13	1	Hub—Blade Driver
146046	3	3	1	Plate—Blade Driver
303259	2	14	1	Washer
605255	2	15	1	Washer—Flat
605339	3	16	1	Washer—Lock
607560	1	31	1	Plate—Cover
608175	1	2	1	Toe Bar 21
610358	1	20	2	Nut—Lock
610358	2	21	2	Nut—Lock
612543	3	14	1	Blade—21" Whirl
613050	4	13	1	Bolt
614243	4	5	2	Knob
614426	2	27	2	Washer—Stepped
614637	1	28	2	Bracket—Wheel Height Adj
614677	1	10	2	Screw—Sems
614682	1	8	1	Knob—Cover Plate
614697	4	4	2	Screw—Handle
684776	1	15	2	ASM—Wheel & Tire 6"
700029	3	6	1	Screw—Set
12–5450	1	25	2	Screw—Thd Form
16–5809	1	27	1	Housing—21" Sp
24–7920	2	13	1	Cover—Drive Shaft
29–9570	5	27	1	Bushing—Yoke
36–4780	5	19	1	Washer—Thrust
36–4791	5	6	2	Washer—Thrust
38–7820	5	20	1	Bearing—Ball
39–5770	1	1	1	Decal—Danger
40–1940	1	13	6	Washer
46–5551	1	22	2	Bushing—Spacer
46–6811	1	3	2	Screw—HWH
49–2040	5	31	6	Screw—HH
55–3760	5	7	1	15 T Pinion
55–3770	5	17	1	Gear 49t 1st Gear
55–3780	5	8	1	Pinion 20t 2nd Gear
55–3790	5	16	1	Gear 44t 2nd Gear
55–3800	5	9	1	Pinion 25t 3rd Gear
55–3810	5	15	1	Gear 39t 3rd Gear
60–8710	5	29	1	Gearcase—Upper 3 Sp
60–8730	5	30	1	Cover—Gearcase
60–8750	5	5	2	Bushing
60–8770	5	1	1	Bushing—Output Shaft
60–8790	5	14	1	Sleeve—Gear
60–8800	5	10	1	Shaft—Intermediate
60–8810	5	26	1	Retainer—Shift—Fork
60–8821	2	10	1	Lever—Shift
60–8840	5	24	2	Pulley—Half
60–8850	5	11	1	Bushing—Output
60–8870	5	28	1	Yoke—Shift
65–2720	2	3	4	Ring—Retaining
65–4710	2	7	2	Ring—Friction
65–4720	2	25	2	Spring—Compression
65–4730	2	22	2	Washer—Thrust
65–4740	2	4	4	Washer—Thrust
65–4750	2	24	2	Gear—Pinion
65–4760	2	23	2	Washer
65–4770	5	12	1	Shaft—Output
65–5250	5	3	1	Clip—Spring
66–6040	2	6	1	Key—Rocking
66–6050	2	5	1	Key—Rocking
76–0760	5	2	2	Key—Shift
76–0770	5	4	1	Collar—Shift
76–0780	5	18	1	Sleeve—Shift Key

*Not Illustrated

Lawn—Boy Part Number Index (Cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
82-8550	3	9	1	Shield—Muffler
82-8780	2	12	1	Retainer—Cable
92-1006	1	18	2	ASM—Spring Arm
92-1008	1	19	4	Knob—Height Adjust
92-1042	2	2	2	ASM—Whl
92-1043	2	16	1	V—Belt
92-1057	2	1	2	Bolt—Shoulder
92-1092	4	26	1	Handle—Upper
92-1094	4	8	1	Bail Stop Bracket
92-1099	1	17	2	Bolt—Shoulder 6" Wheel
92-1604	1	16	4	Cap—Hub
92-1617	4	11	1	Sp Control Bail
92-1630	3	15	1	Fan—Mulching
92-2918	4	19	1	Decal—Front Console
92-4856	1	14	2	Bolt—Shoulder
92-4857	3	2	1	Spacer
92-4877	3	4	3	Nut—Push
92-4879	3	1	1	Bolt—Blade
92-5412	4	10	1	Stop—Pivot
92-5790	5	23	1	Pinion—Bevel
92-5791	5	25	1	Spacer—Pulley
92-6518	4	30	1	ASM—Cable
92-6535	2	17	2	Cap—End
92-6537	4	2	1	Handle Section—Lower
92-6539	2	20	1	ASM—Spring Arm
92-6540	2	19	1	ASM—Spring Arm
92-7653	3	11	1	Pulley—Engine
92-7699	1	23	1	Bracket—Actuator
92-7736	1	5	1	Shield—Trailing
92-7746	2	8	2	ASM—Hgt Adj Arm
92-7748	1	24	2	Screw
92-7869	1	21	1	ASM—Gear Case
92-7899	4	29	1	Bracket—Traction Cable
92-8630	1	9	1	Mulch Plate—21"
92-8852	1	26	1	Cover—Drive
92-8926	4	16	1	Control—Speed
92-9665	4	6	4	Screw—Phil
92-9673	1	7	2	Bolt—Shoulder
93-0290	1	32	1	Decal—Deck
93-7250	1	6	1	Decal—Warning
93-7383	4	22	1	Guide—Rope
94-1609	2	26	2	Cover—Wheel
94-1610	1	11	3	Grommet—Plastic
94-6065	3	12	1	Shield—Grass
94-6098	4	18	1	Engine Control Bail
95-0656	3	23	1	Applique
95-1701	4	15	1	Decal—Control Panel
95-1702	3	18	1	Decal—Recoil
95-1704	3	19	1	Shroud—Engine (P/W Eng)
95-1705	3	20	1	Cover—Air Cleaner (P/W)
95-1706	3	21	2	Screw—Shroud (P/W Eng)
95-1707	3	22	2	Screw—Air Cleaner (P/W)
95-1717	4	21	1	Cable—Brake
95-1719	4	14	1	Throttle—Control
95-1727	3	5	3	Screw—Engine Mount
95-5592	4	17	1	Panel—Control
2210-316	3	10	1	Rope—Stop (P/W Eng)
321-4	4	12	1	Screw—HH
321-51	4	37	1	Bolt—Hex
3230-29	4	1	2	Bolt—CARR.
3253-33	4	28	2	Washer—Lock
3256-2	4	46	2	Washer—Flat

*Not Illustrated

Lawn—Boy Part Number Index (Cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3256–24	5	21	1	Washer—Flat
3257–3	3	7	1	Key—Woodruff
3272–10	2	11	1	Pin—Cotter
3285–19	5	13	1	Pin—Spirol
3290–413	1	29	2	Washer—Spring
3296–5	5	22	1	Nut—Lock
3296–39	1	12	2	Nut—Lock
3296–56	4	44	1	Nut—Lock
3296–73	4	25	2	Nut—Lock
32103–29	4	27	2	Nut—Wing
32144–70	2	9	1	Screw—TAP
32144–73	3	8	3	Screw—HWHTF
32144–85	2	18	2	Screw—HH