

LAWN-BOY®

21" GOLD SERIES WALK-BEHIND MOWER

MODEL NO. 10546—7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Mulch Plate & Wheel Assembly	3	Carburetor Assembly	12
Housing Assembly	4	Air Filter Assembly	13
Gear Case & Wheel Assembly	5	Electric Motor Assembly	14
Engine, Fuel Tank & Blade Assembly	6	Gear Case Assembly	15
Starter Assembly	7	Lower Handle Assembly	16
Flywheel & Wire Harness Assembly	8	Upper Handle Assembly	17
Wiring Schematic Electric Start	9	Numeric Parts Index	18–20
Crankshaft & Cylinder Assembly	10–11		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Shredder Kit	Model No. 89860

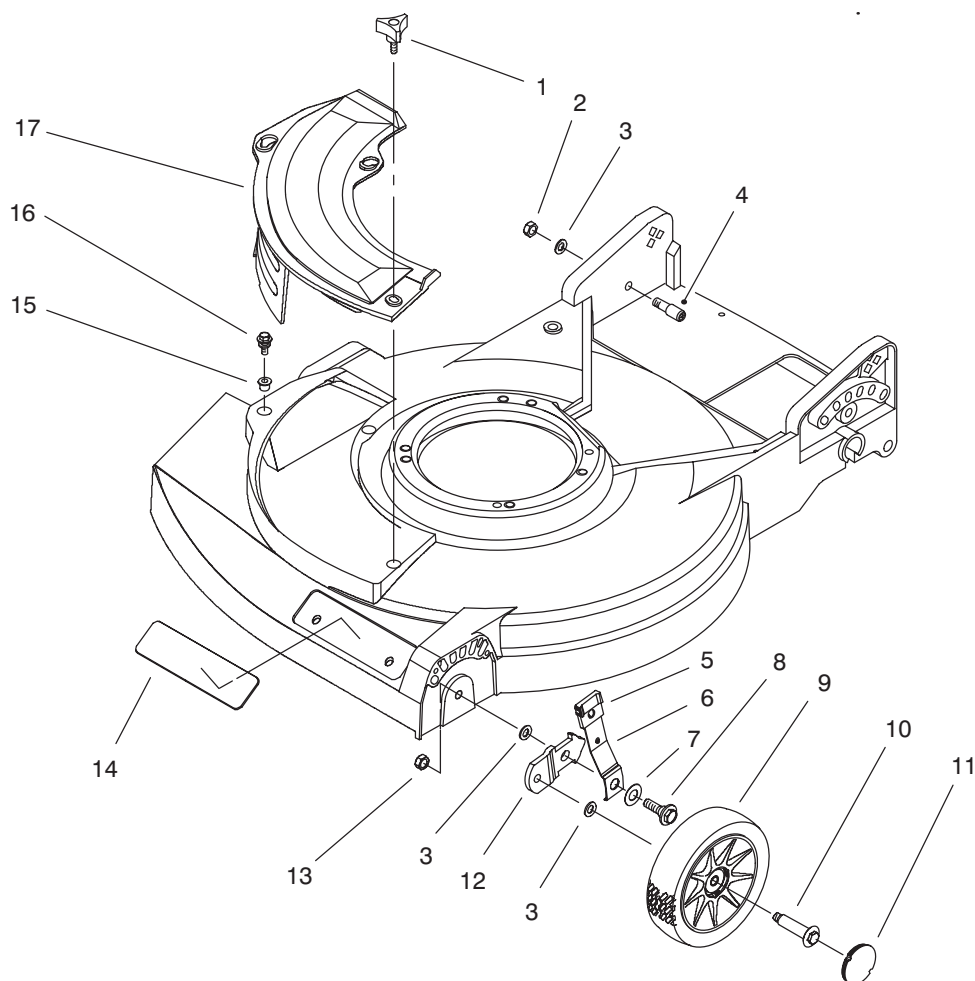


C-1917

MULCH PLATE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614682	Knob — Cover Plate	1
2	610358	Nut — Lock	2
3	40-1940	Washer	6
4	92-9673	Bolt — Shoulder	2
5	92-1008	Knob — Height Adjust	4
6	92-1006	Spring Arm Ass'y — Front	2
7	3290-413	Washer — Belleville	2
8	92-4856	Bolt — Shoulder	2
9	684776	Wheel & Tire Assembly 6"	2

Ref. No.	Part No.	Description	No. Used
10	92-1099	Bolt — Shoulder	2
11	92-1604	Cap — Hub	4
12	614637	Bracket — Wheel Height Adj.	2
13	3296-39	Nut — Lock	2
14	93-0290	Decal — Deck	1
15	94-1610	Grommet	3
16	614677	Screw — Sems Thr'd Form.	2
17	92-8630	Plate — Mulch	1

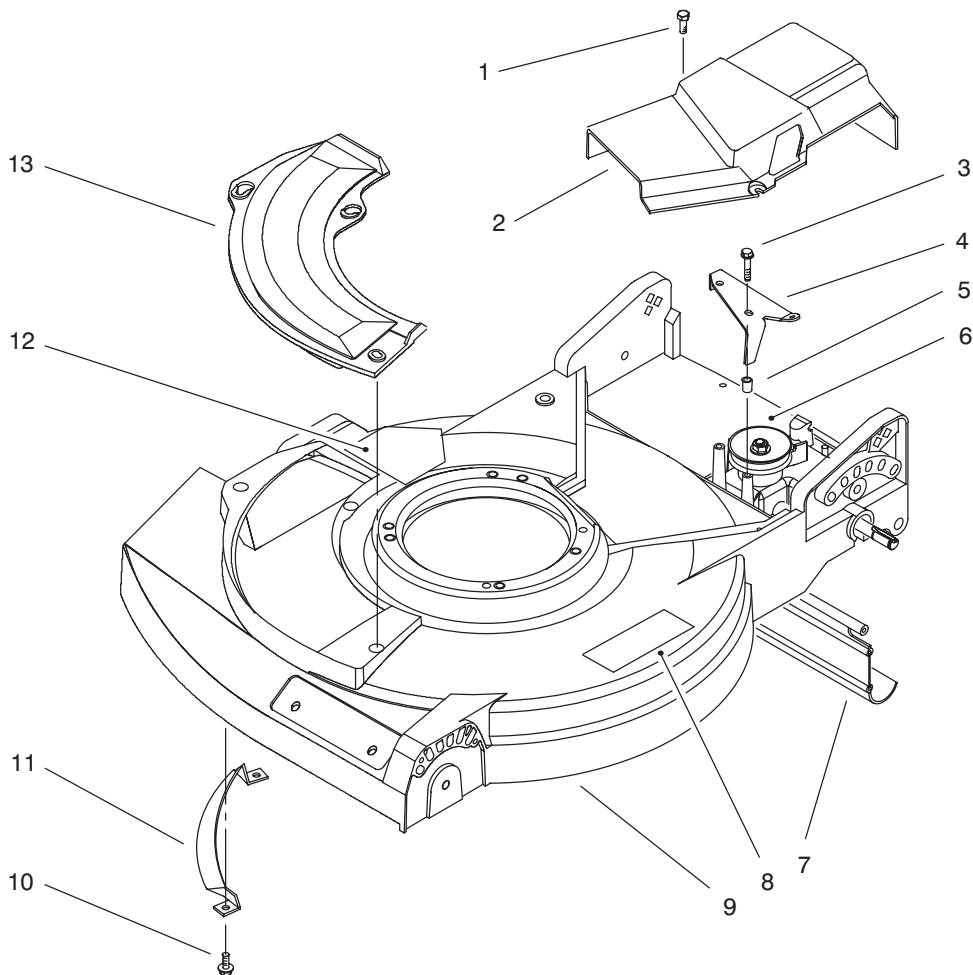


C-2183A

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	12-5450	Screw – Hex Washer Hd. Thread Forming	2
2	92-8853	Cover – Transmission	1
3	92-7748	Screw	2
4	92-7699	Bracket – Actuator	1
5	46-5551	Bushing – Spacer	2
6	92-7869	Gear Case Assembly	1
7	92-7736	Shield – Trailing	1

Ref. No.	Part No.	Description	No. Used
8	93-7250	Decal – Warning	1
9	17-1219	Housing – 21” (Incl. Ref. #8 & 12)	1
10	46-6811	Screw – Hex Washer Hd.	2
11	608175	Bar – Toe	1
12	39-5770	Decal – Danger	1
13	607560	Plate – Cover	1

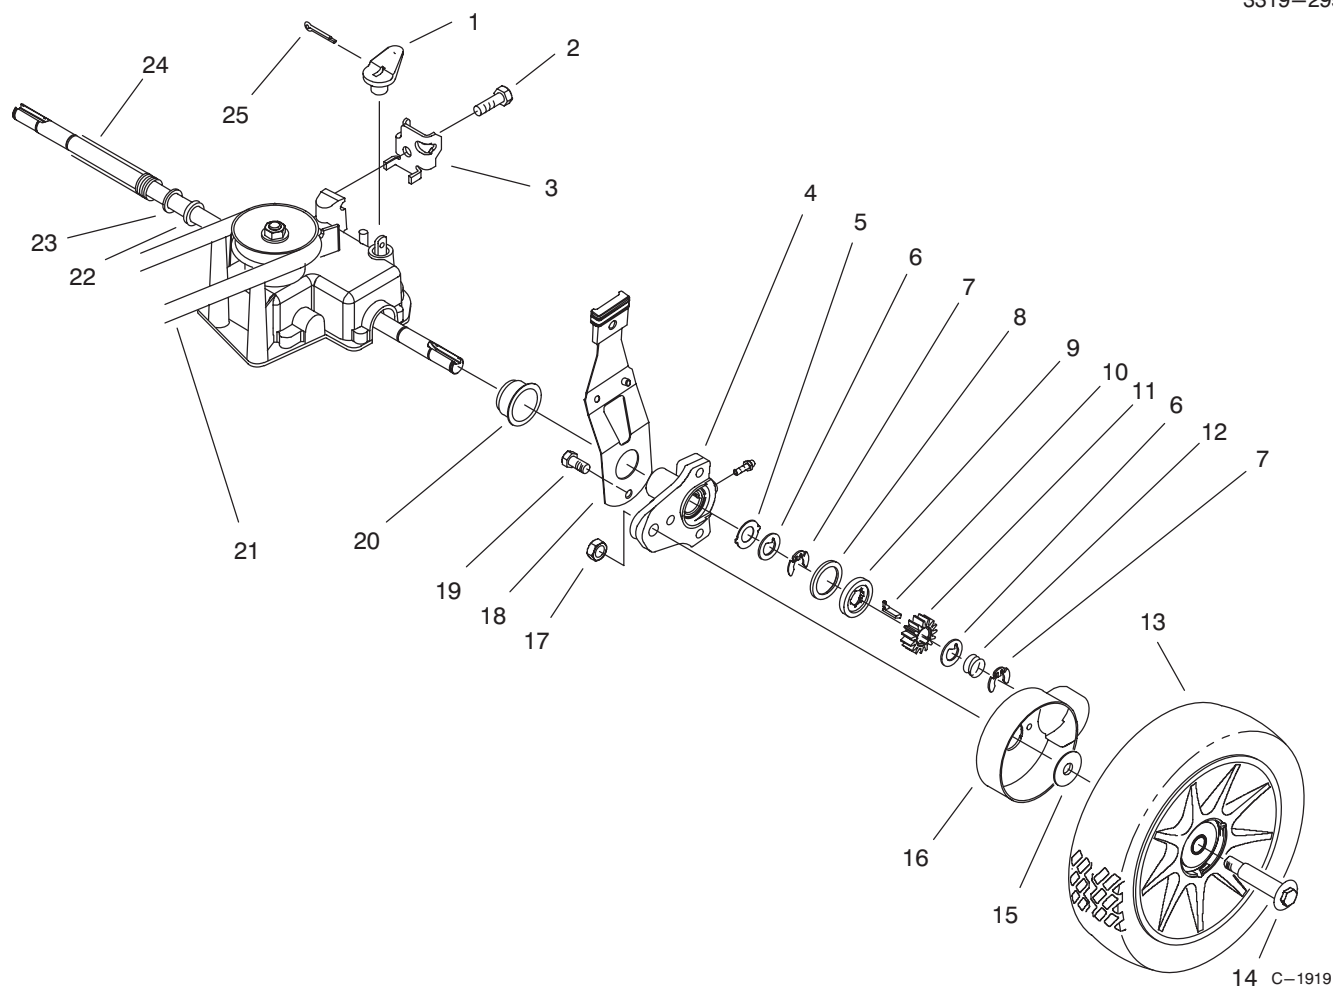


14 C-1919

GEAR CASE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	60-8821	Lever - Shift	1
2	32144-70	Screw - Tapping	1
3	82-8780	Retainer - Cable	1
4	92-7746	Arm - Rear Height Adjust.	2
5	65-4730	Washer - Thrust	2
6	65-4740	Washer - Thrust Keyed	4
7	65-2720	Ring - Retaining	4
8	65-4710	Ring - Friction	2
9	65-4760	Washer	2
10	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
11	65-4750	Gear - Pinion	2
12	65-4720	Spring - Compression	2
13	92-1042	Wheel & Tire Assembly	2

Ref. No.	Part No.	Description	No. Used
14	92-1057	Bolt - Shoulder	2
15	614426	Washer - Stepped	2
16	94-1609	Cover - Wheel	2
17	610358	Nut - Lock	2
18	92-6540	Spring Arm Assembly- L.H.	1
*	92-6539	Spring Arm Assembly - R.H.	1
19	32144-85	Screw - Hex Hd Tapping	2
20	92-6535	Cap - End	2
21	92-1043	V-Belt	1
22	605255	Washer - Flat	1
23	303259	Washer	1
24	24-7920	Cover - Drive Shaft	1
25	3272-10	Pin - Cotter	1

*Not Illustrated

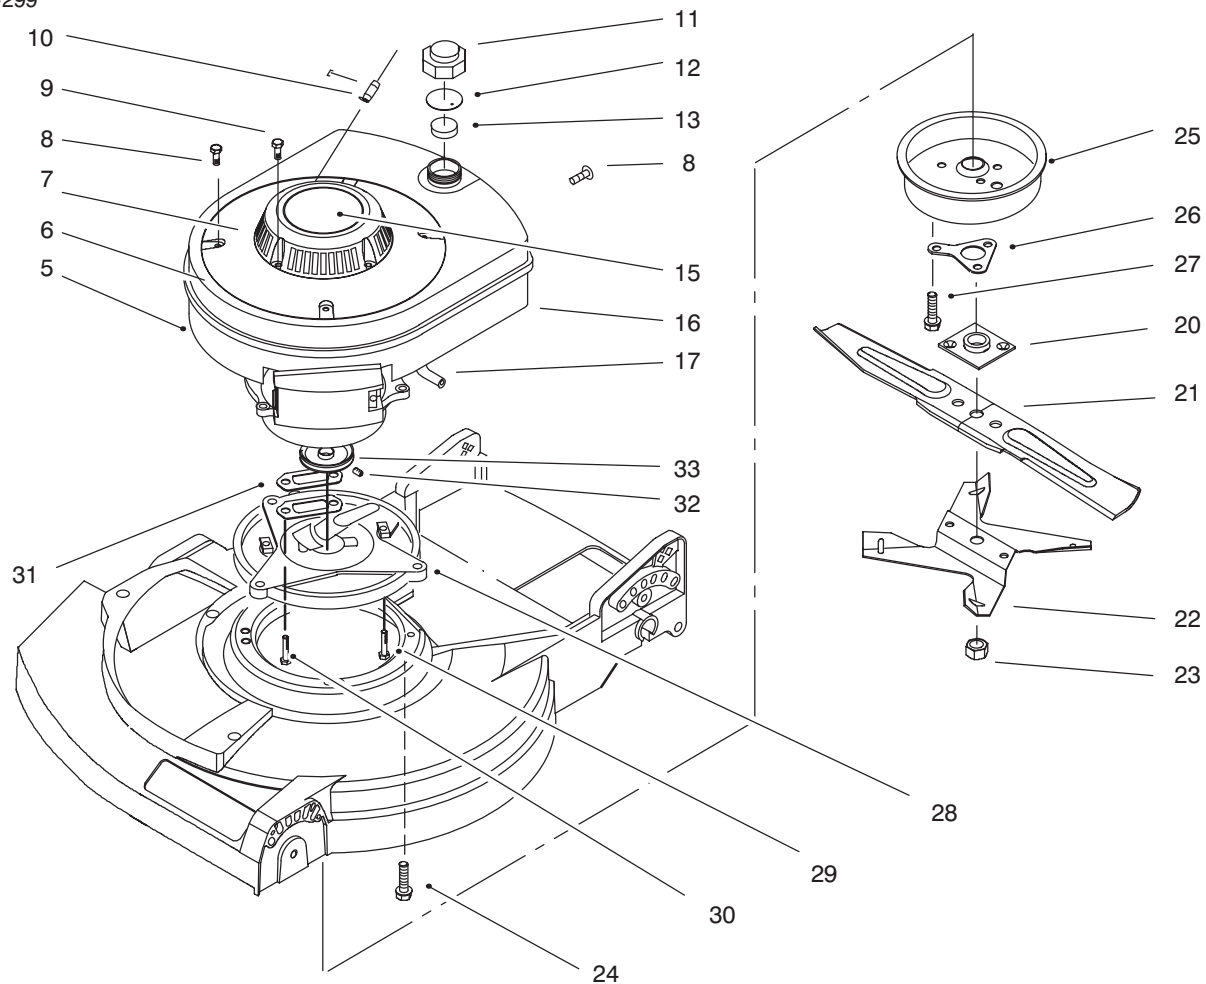


C-2176B

ENGINE, FUEL TANK & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
5	16-5539	Shroud & Tank Assembly	1
6	684301	Base - Starter	1
7	684622	Starter Assembly	1
8	32144-53	Screw - Self Tapping	5
9	612428	Screw	4
10	47-2480	Stop - Rope	1
11	611327	Cap - Fuel	1
12	607213	Gasket - Fuel Cap	1
13	609150	Baffle Fuel Cap	1
15	93-0293	Decal - Recoil	1
16		Engine Assembly	1
17	612783	Line - Fuel	1
20	677525	Plate & Collar Assembly	1

Ref. No.	Part No.	Description	No. Used
21	612543	Blade 21"	1
22	92-1630	Fan - Mulching	1
23	603164	Nut - Blade	1
24	95-1727	Screw - Engine	3
25	682876	Muffler Cover Assembly	1
26	609786	Support - Crankshaft	1
27	609471	Screw	3
28	92-6388	Plate - Muffler	1
29	613500	Screw	1
30	607601	Screw	3
31	93-1233	Gasket - Muffler	1
32	610345	Screw - Set	1
33	609976	Pulley	1

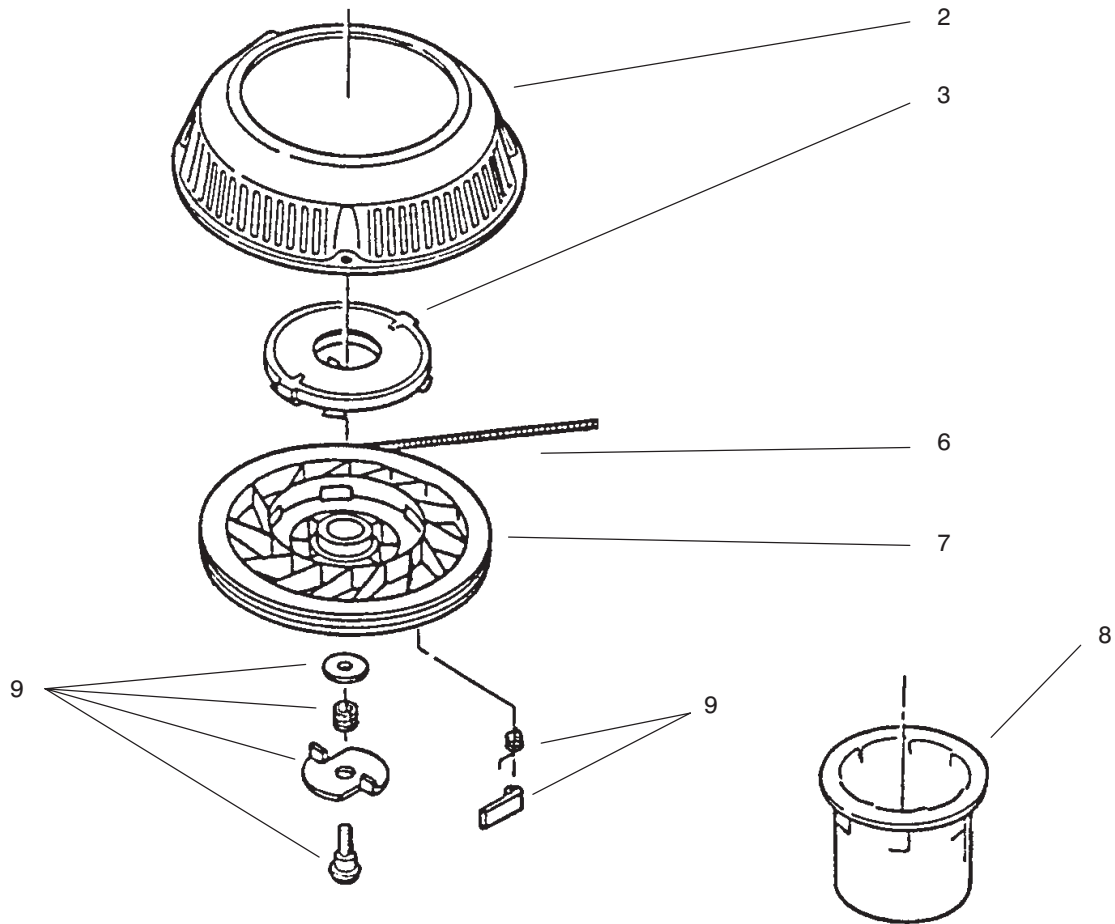


C-2187

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	684567	Starter Housing & Shaft	1
3	92—4935	Spring & Keeper	1
6	612432	Rope	1
7	612950	Pulley	1

Ref. No.	Part No.	Description	No. Used
8	612949	Hub — Starter	1
9	683899	Kit — Dog	1
*	684622	Starter Assembly (Incl. Ref. #2, 3, 6, 7, & 9)	1

*Not Illustrated

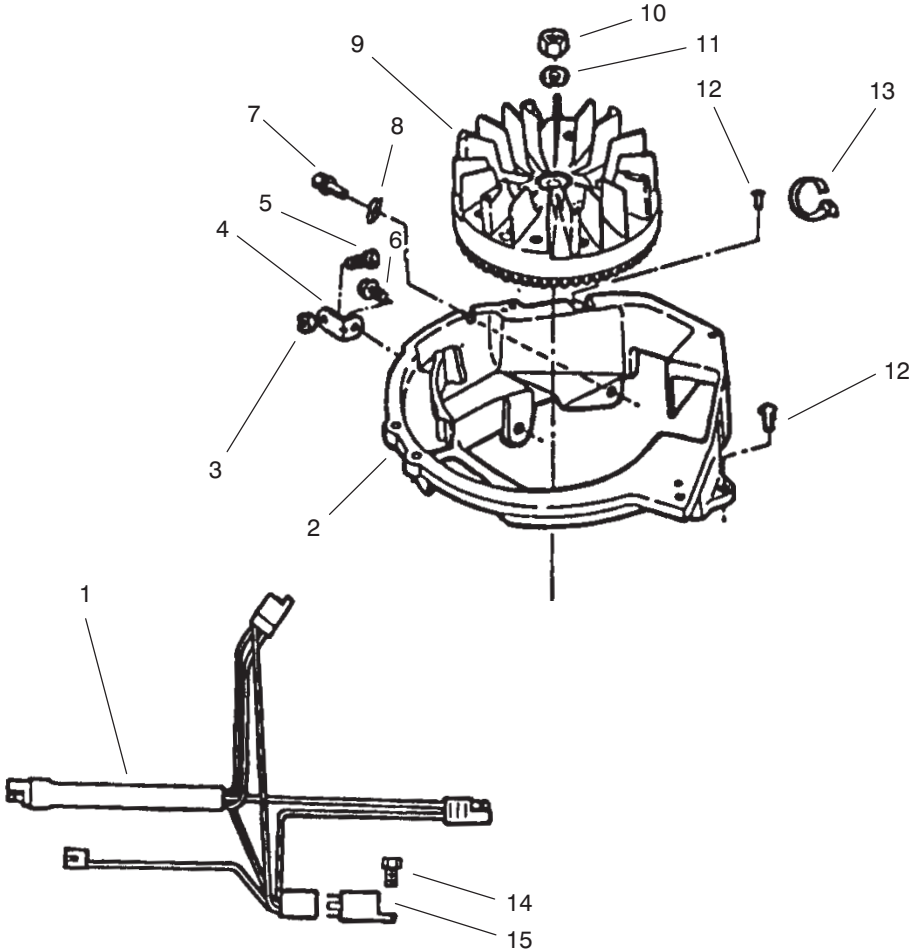


C-1925

FLYWHEEL & WIRE HARNESS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4300	Harness - Wire	1
2	611215	Base - Shroud	1
3	608311	Nut	1
4	611512	Brace - Alternator	1
5	603014	Bolt	1
6	614343	Screw	1
7	609947	Screw	3
8	611191	Clip - J	1

Ref. No.	Part No.	Description	No. Used
9	683580	Flywheel	1
10	130743	Nut - Flywheel	1
11	316959	Washer - Lock	1
12	609808	Screw	1
13	317893	Strap - Tie	1
14	606537	Screw	1
15	682776	Relay	1

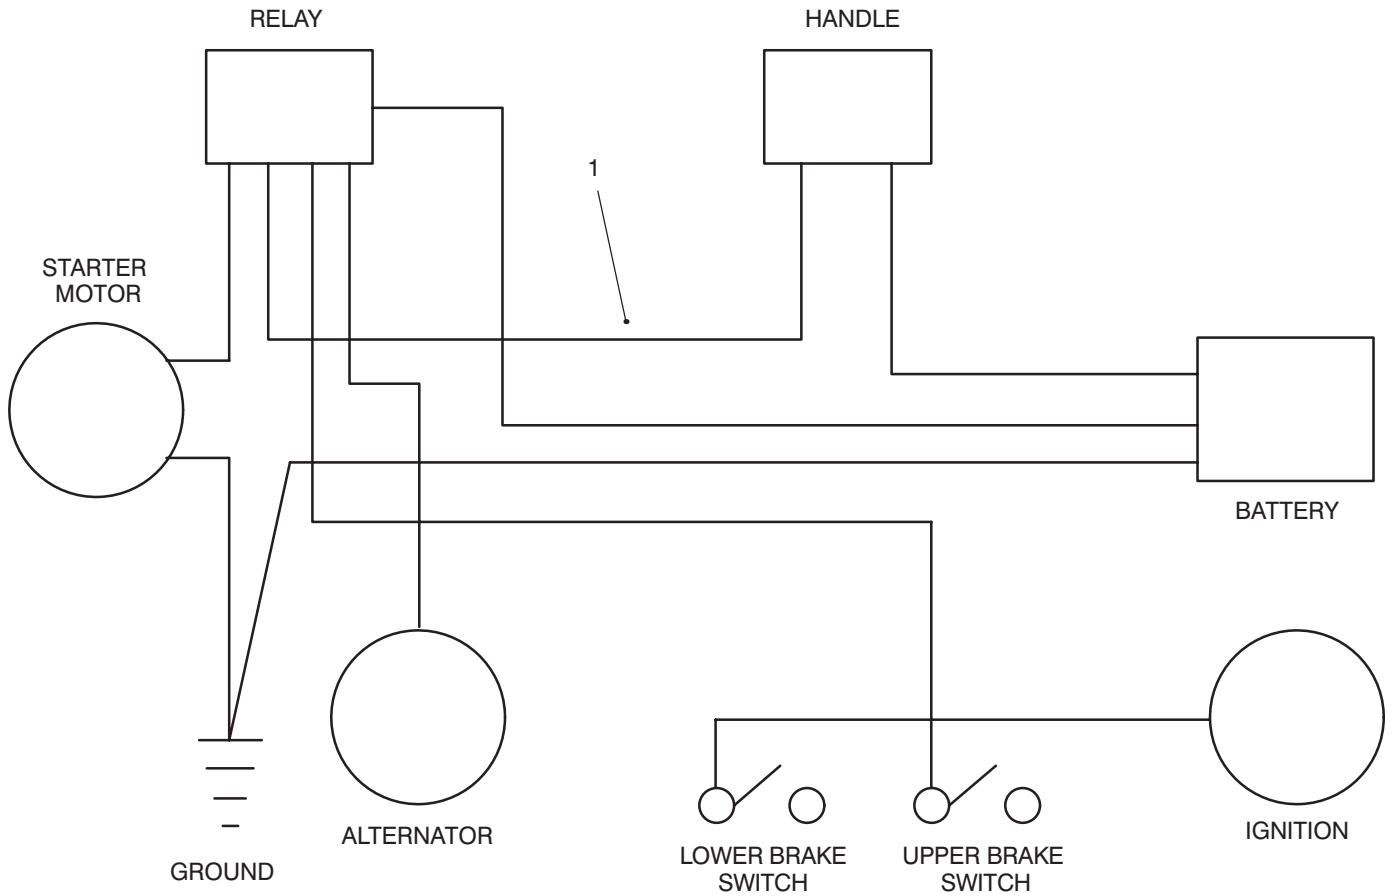


C-2674

WIRING SCHEMATIC ELECTRIC START

Ref. No.	Part No.	Description	No. Used
1	93-4300	Wire Harness - Lower	1

Ref. No.	Part No.	Description	No. Used

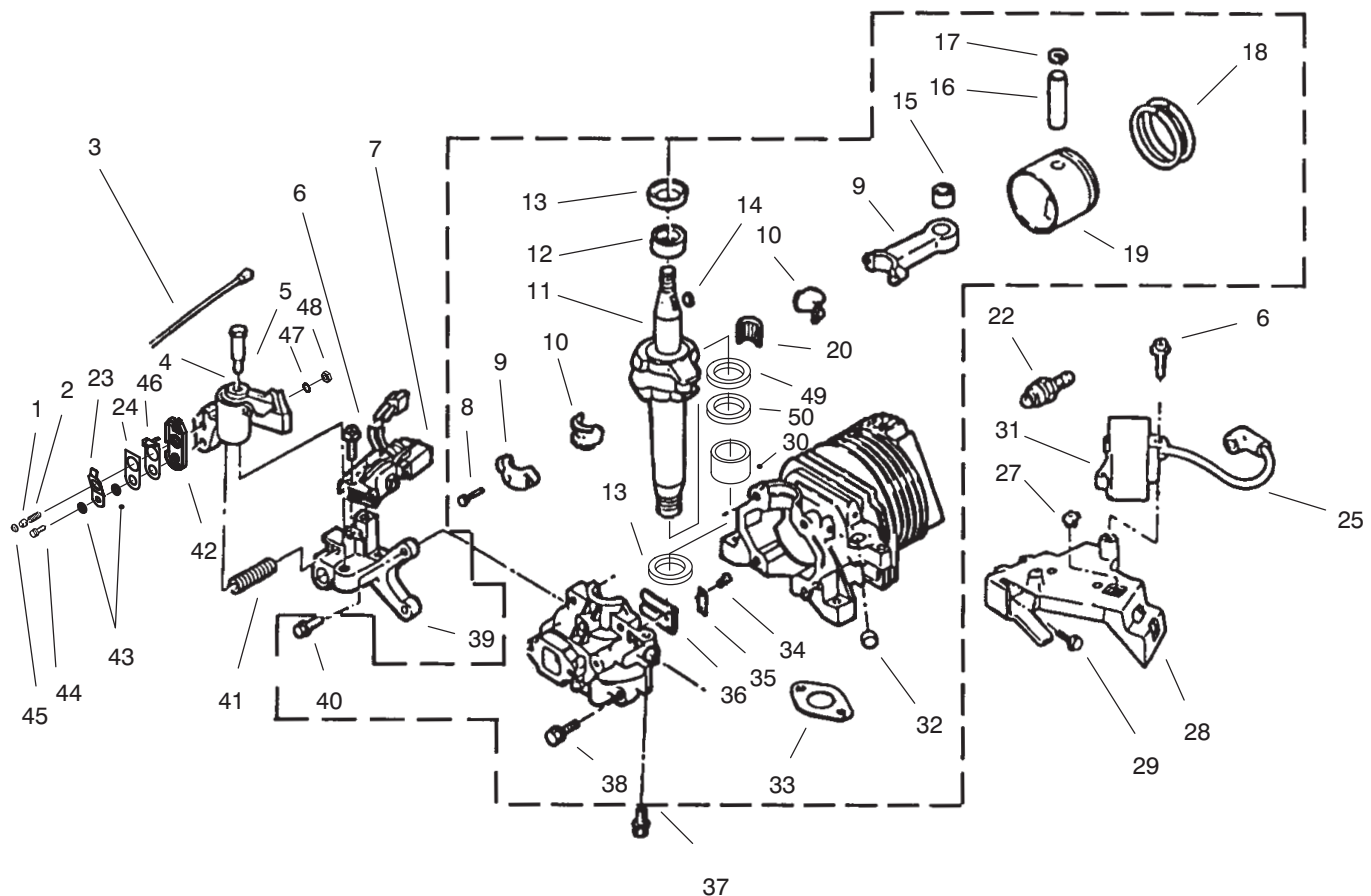


37

C-2172B

CRANKSHAFT & CYLINDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611509	Actuator — Brake Lever	1
2	611214	Spring — Cable Return	1
3	683821	Lead	1
4	682683	Brake Assembly	1
5	613529	Bolt — Shoulder	1
6	607526	Screw — C.D. Mounting	4
7	683964	Alternator Assembly	1
8	611393	Screw — Cap	2
9	92-4921	Connecting Rod Assembly (Incl. Ref. #8, 10, & 20)	1
10	677982	Liner — Split (1 pair)	1
11	94-5713	Crankshaft	1
12	681830	Bearing — Upper Main	1
13	611396	Seal — Upper Oil	2
14	607199	Key — Flywheel	1
15	92-4927	Bearing Assembly	1
16	606608	Pin — Wrist	1
17	303712	Ring — Retaining	2
18	681737	Ring Set	1
19	92-4925	Piston & Ring Set (Incl. Ref. #16-18)	1
20	609754	Strip — Roller	1

Ref. No.	Part No.	Description	No. Used
22	614009	Plug — Spark	1
23	93-1239	Spring — Contact	1
24	612842	Shield	1
25	681678	Lead — High Tension	1
27	605120	Grommet	1
28	613073	Bracket — C.D. Mounting	1
29	614343	Screw	2
30	681831	Bearing	1
31	683215	Module — C.D. Ignition & Lead	1
32	609123	Plug	4
33	93-1233	Gasket — Exhaust	1
34	612872	Screw — Reed To Cover	2
35	602587	Plate — Reed Hold Down	1
36	602588	Reed	1
37	611073	Screw — Set	1
38	613110	Screw — Cover to Crankcase	1
39	611337	Bracket	1
40	613233	Screw — Brake Mtg. Brkt.	2
41	611211	Spring — Brake	1
42	93-4301	Case Assembly	1

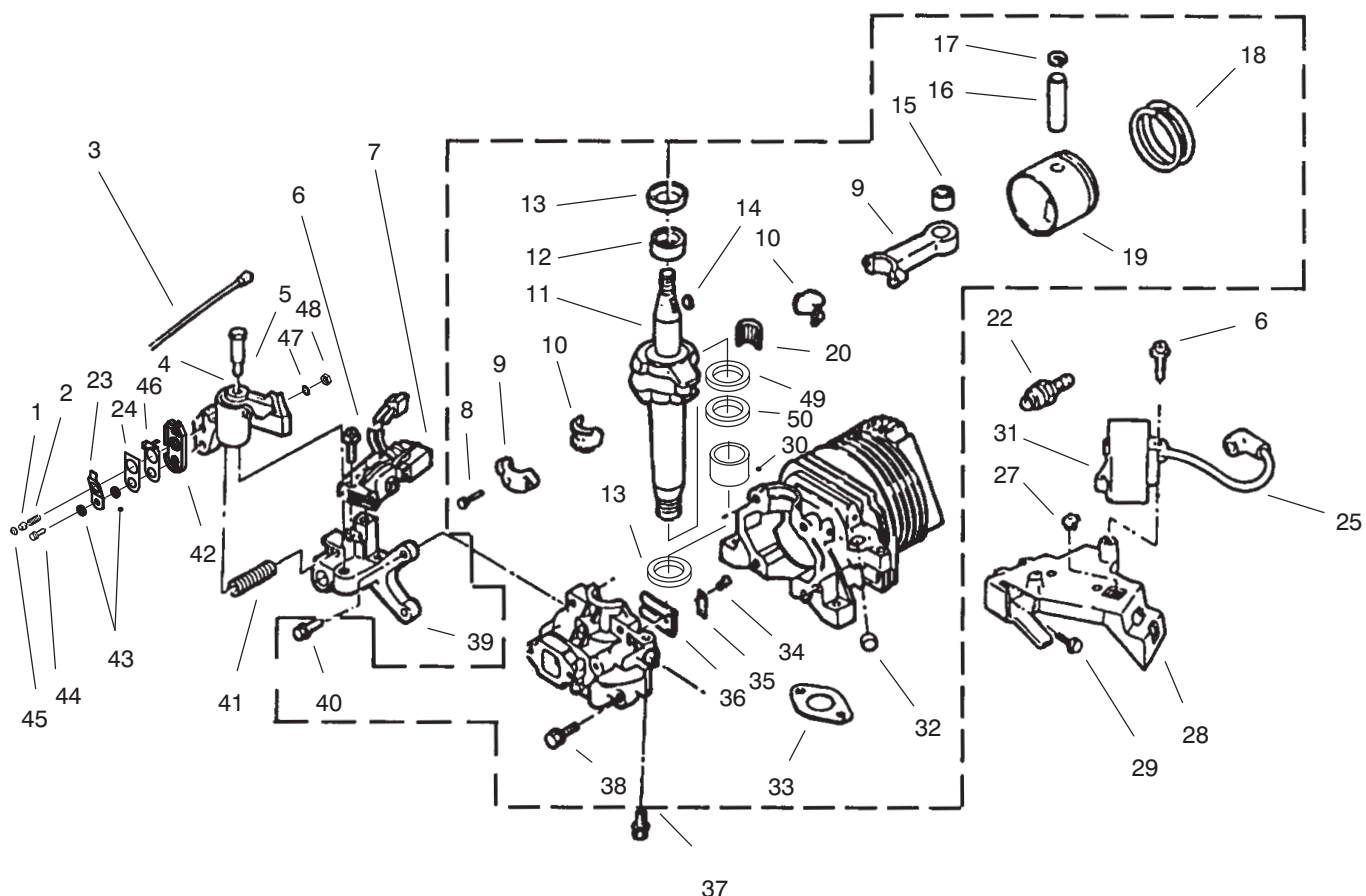


C-2172B

CRANKSHAFT & CYLINDER ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
43	306407	Washer	2	48	146254	Nut	2
44	321-6	Screw - Hex Hd. Cap	1	49	252-76	Bearing - Thrust	1
45	611213	Retainer	1	50	252-80	Washer - Thrust	1
46	612841	Plate - Contact	1	*	94-5734	Short Block	1
47	3255-7	Washer - Ext. Tooth Lock	1				

*Not Illustrated

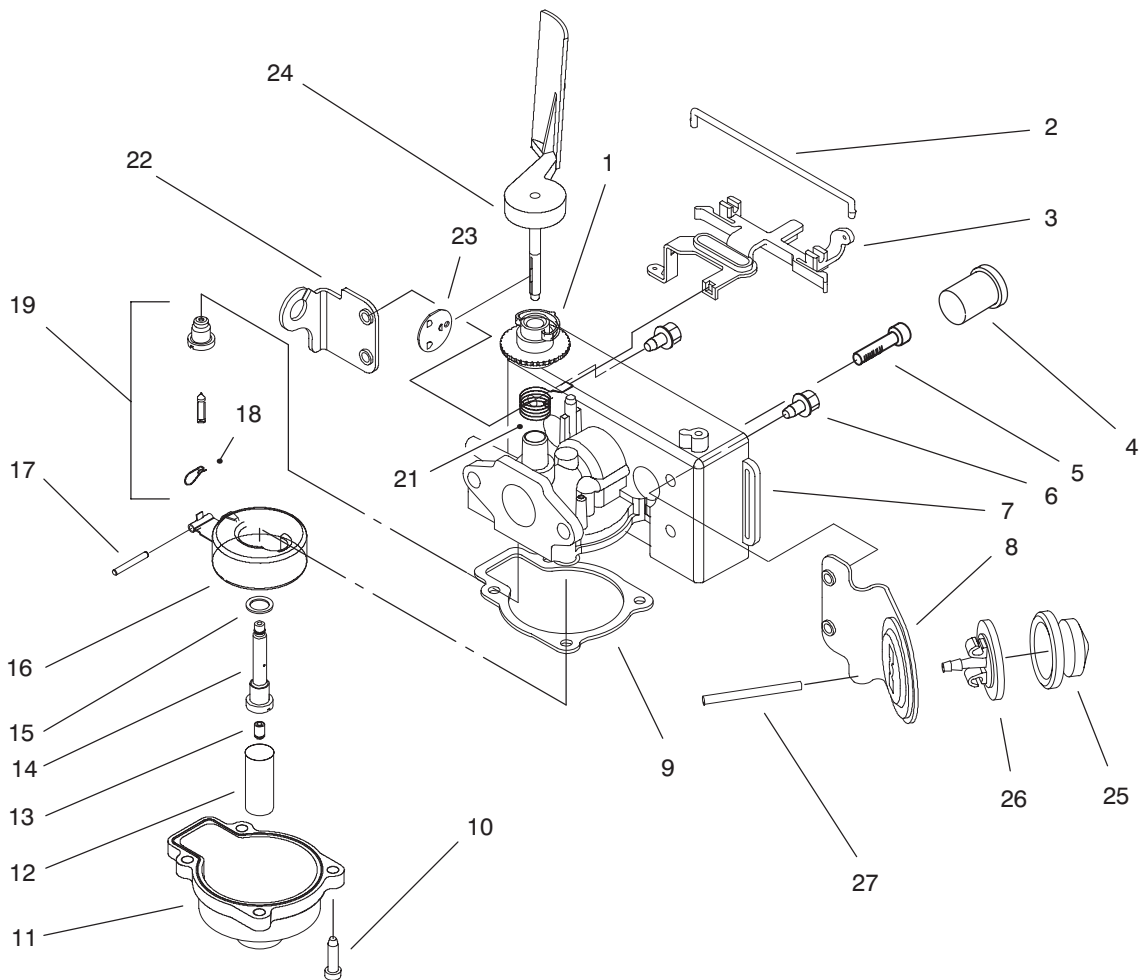


C-2182A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar — Adjustment	1
2	610165	Retainer	1
3	93-1225	Lever — Speed Adjust	1
4	93-4320	Plug	2
5	609482	Screw — Pan Hd. Sems	2
6	613269	Screw	4
7	93-4341	Body — Carburetor	1
8	93-1232	Bracket — Primer	1
9	602850	Gasket — Float Chamber	1
10	608850	Screw	4
11	92-9691	Float Chamber	1
12	611071	Filter — Fuel	1
13	94-5710	Main Jet	1
14	92-6371	Nozzle	1

Ref. No.	Part No.	Description	No. Used
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92-6389	Pin	1
18	603145	Clip	1
19	678278	Float, Valve, & Body Ass'y	1
21	92-4944	Spring — Governor	1
22	93-1226	Bracket — Throttle Control	1
23	94-5704	Disc — Throttle	1
24	92-6376	Air Vane & Shaft	1
25	66-7460	Bulb — Primer	1
26	44-2750	Body — Primer	1
27	44-3172	Hose — Primer	1
*	94-5738	Carburetor Complete	1

*Not Illustrated

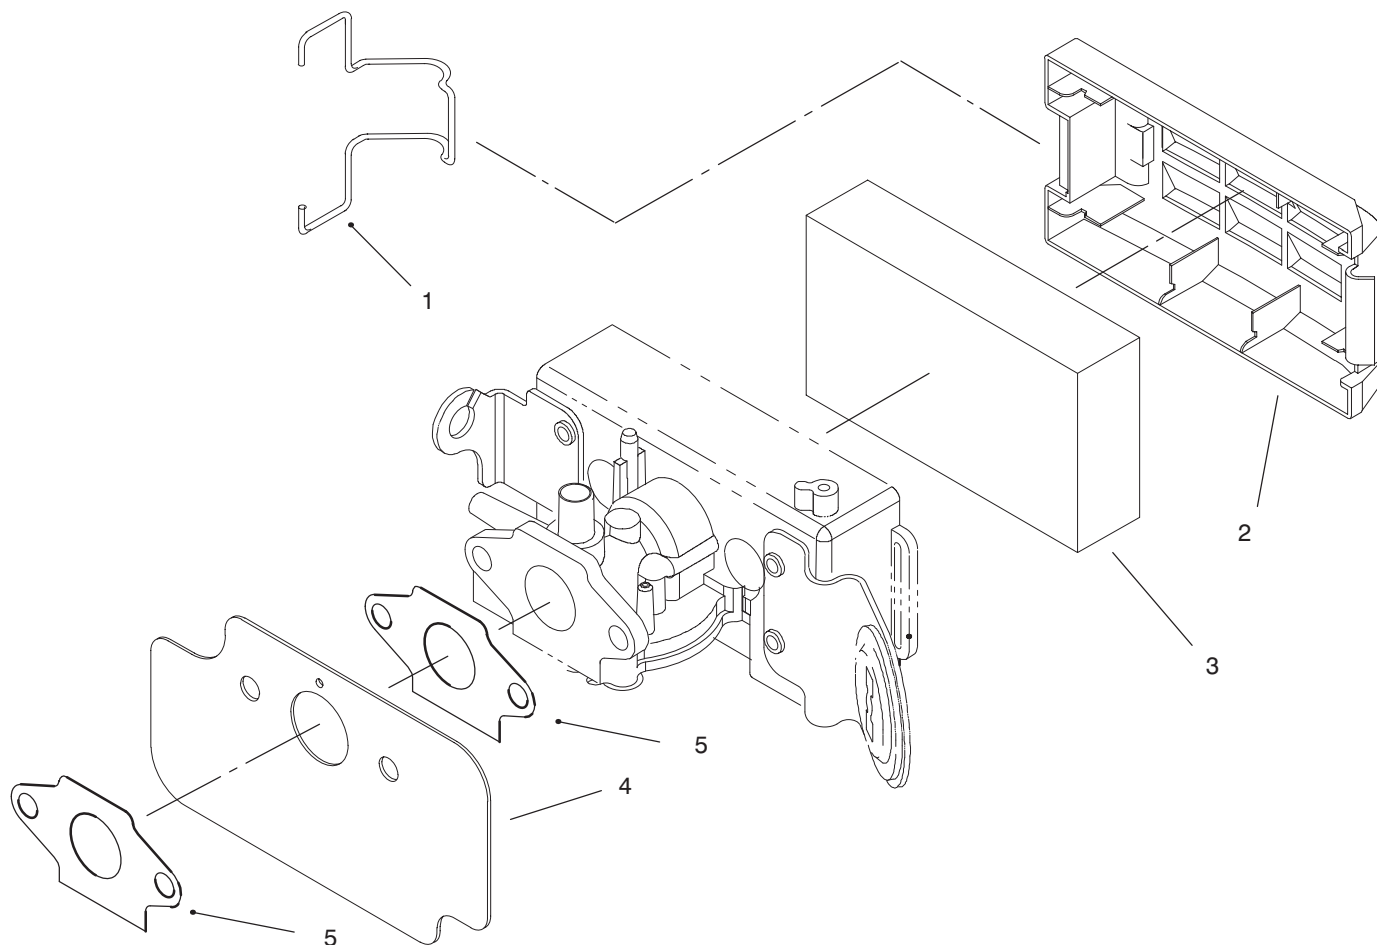

C-2184A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer – Cover	1
2	93–1231	Cover – Air Filter	1
3	609493	Element – Air Filter	1


Ref. No.	Part No.	Description	No. Used
4	93-1221	Shield - Heat	1
5	92-4948	Gasket	2

This diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor component. The parts are numbered 1 through 19. The assembly includes a main housing (1), a drive shaft (2) with a pin (3), a gear (4) mounted on the shaft, and a timing gear (12) on a separate shaft (13). A timing belt (14) is shown engaging with the gears. A bracket (5) is mounted on the housing, and a cover (11) fits over the gear mechanism. A mounting bracket (7) is secured with a bolt (6) and a nut (9). A pin (8) is used to secure the bracket. A small component (15) is shown at the top left, and a pin (16) is shown at the bottom left. A small component (17) is shown at the bottom right, and a small component (18) is shown at the bottom right.

ELECTRIC MOTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
11	609229	Spring – Drag	1
12	610258	Pinion	1
13	610257	Spring – Pinion Return	1
14	613451	Washer – Pinion Stop	1
15	608622	Ring – Retaining	1
16	609572	Sleeve	1
17	306992	Washer – Lock	1
18	328712	Nut	1
19	306407	Washer	2
*	682806	Electric Starter Assembly (Incl. Ref. #1–6)	1

14

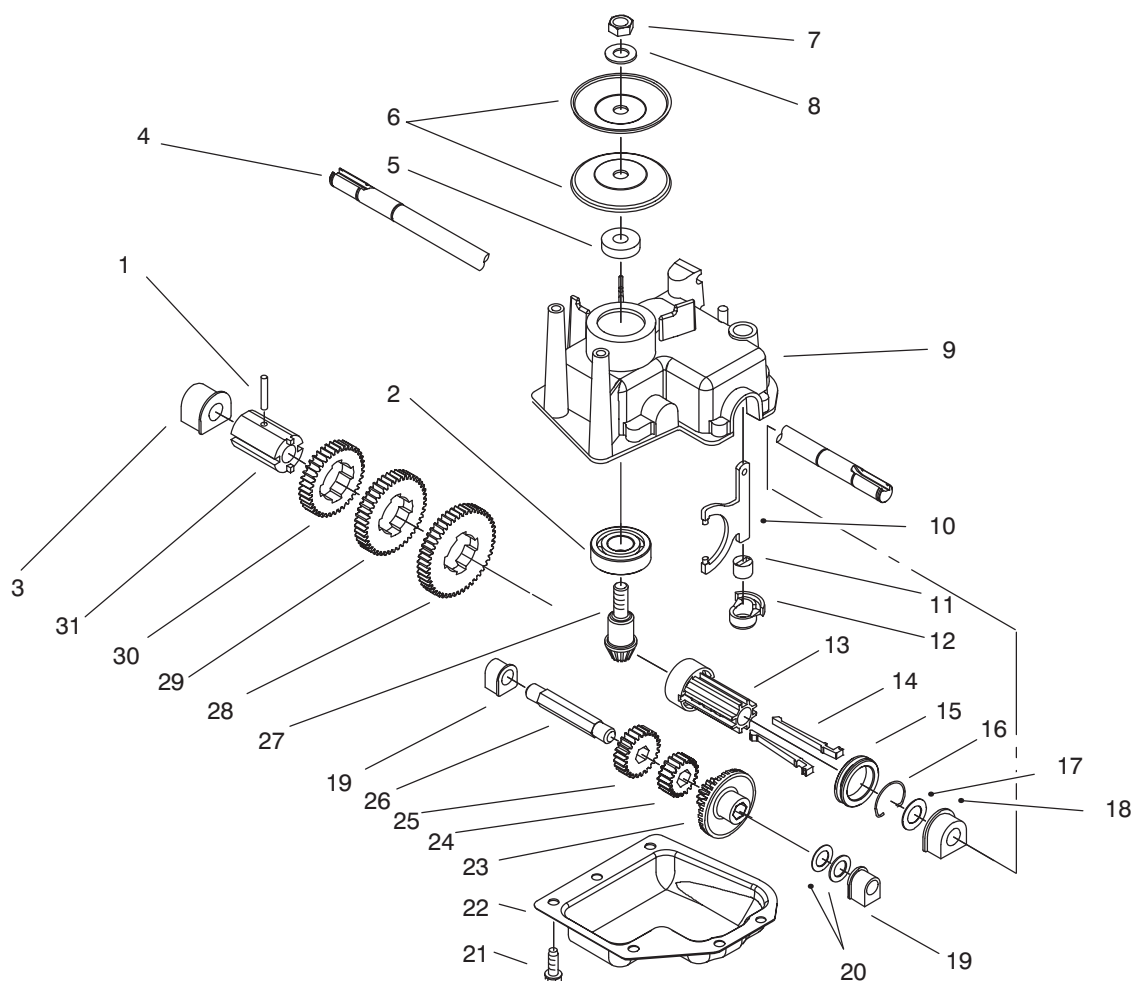


C-1322

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3285-19	Pin - Groove	1	18	60-8770	Bushing - Output	1
2	38-7820	Bearing - Ball	1	19	60-8750	Bushing - Inter. Shaft	2
3	60-8850	Bushing - Output	1	20	36-4791	Washer - Thrust	2
4	65-4770	Shaft - Output	1	21	49-2040	Screw	6
5	92-5791	Spacer	1	22	60-8730	Gear Case Cover	1
6	60-8840	Pulley - Half	2	23	55-3760	Pinion - 15 Tooth	1
7	3296-5	Nut	1	24	55-3780	Pinion - 20 Tooth	1
8	3256-24	Washer	1	25	55-3800	Pinion - 25 Tooth	1
9	60-8710	Gearcase - Upper	1	26	60-8800	Shaft - Intermediate	1
10	60-8870	Yoke - Shift	1	27	92-5790	Pinion - Bevel	1
11	29-9570	Bushing - Yoke	1	28	55-3770	Gear - 49 Tooth	1
12	60-8810	Retainer - Shift Fork	1	29	55-3790	Gear - 44 Tooth	1
13	76-0780	Sleeve - Shift Key	1	30	55-3810	Gear - 39 Tooth	1
14	76-0760	Key - Shift	2	31	60-8790	Sleeve - Gear	1
15	76-0770	Collar - Shift	1	*	92-7869	Gear Case Assembly Complete	1
16	65-5250	Clip - Spring	1				
17	36-4780	Washer	1				

*Not Illustrated

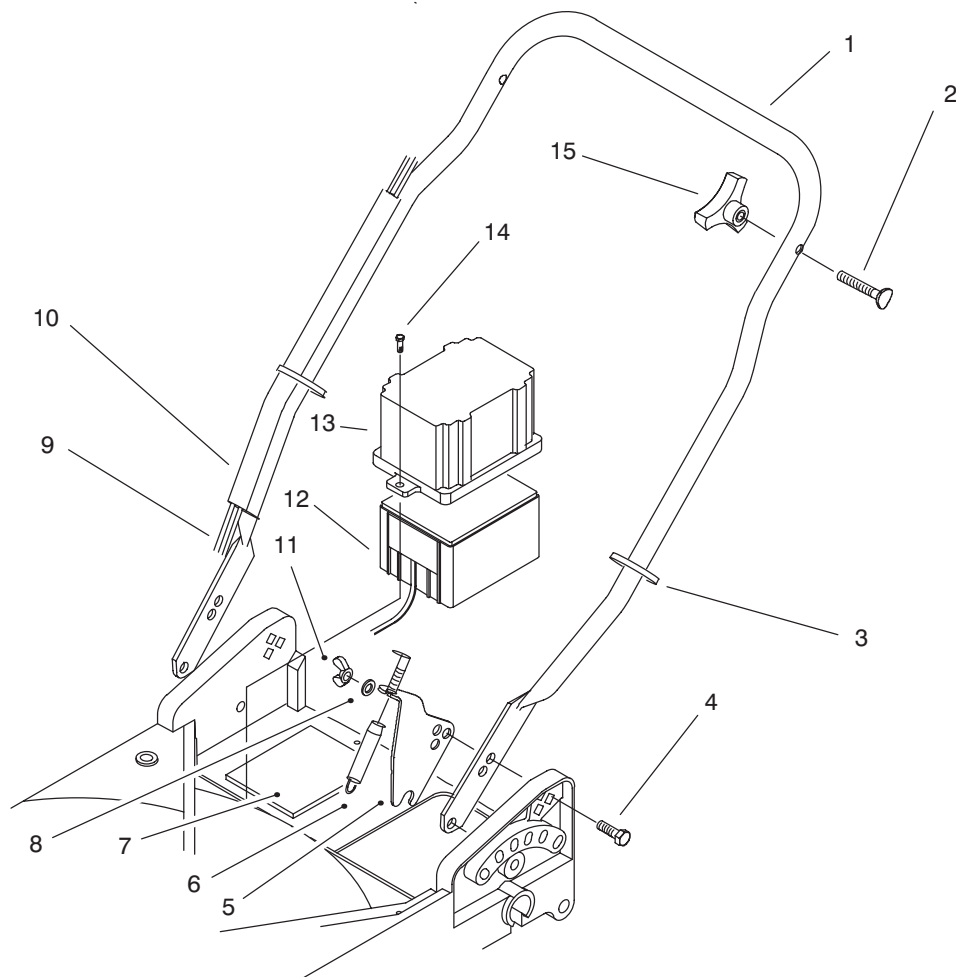


C-1921

LOWER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6537	Handle - Lower	1	10	92-8917	Cover - Controls	1
2	614697	Screw - Handle	2	11	32103-29	Nut - Wing	2
3	614249	Tie - Strap	2	12	55-7520	Pack - Battery	1
4	3230-29	Bolt - Carriage	2	13	612690	Case - Battery	1
5	92-7899	Bracket - Traction Cable	1	14	12-5450	Screw - Hex Washer Hd. Thread Forming	2
6	92-6518	Cable - Traction	1	15	614243	Knob	2
7	612510	Pad - Battery	1	*	94-9164	Charger - Battery	1
8	3253-33	Washer - Lock	2				
9	94-6059	Wire Assembly	1				

*Not Illustrated

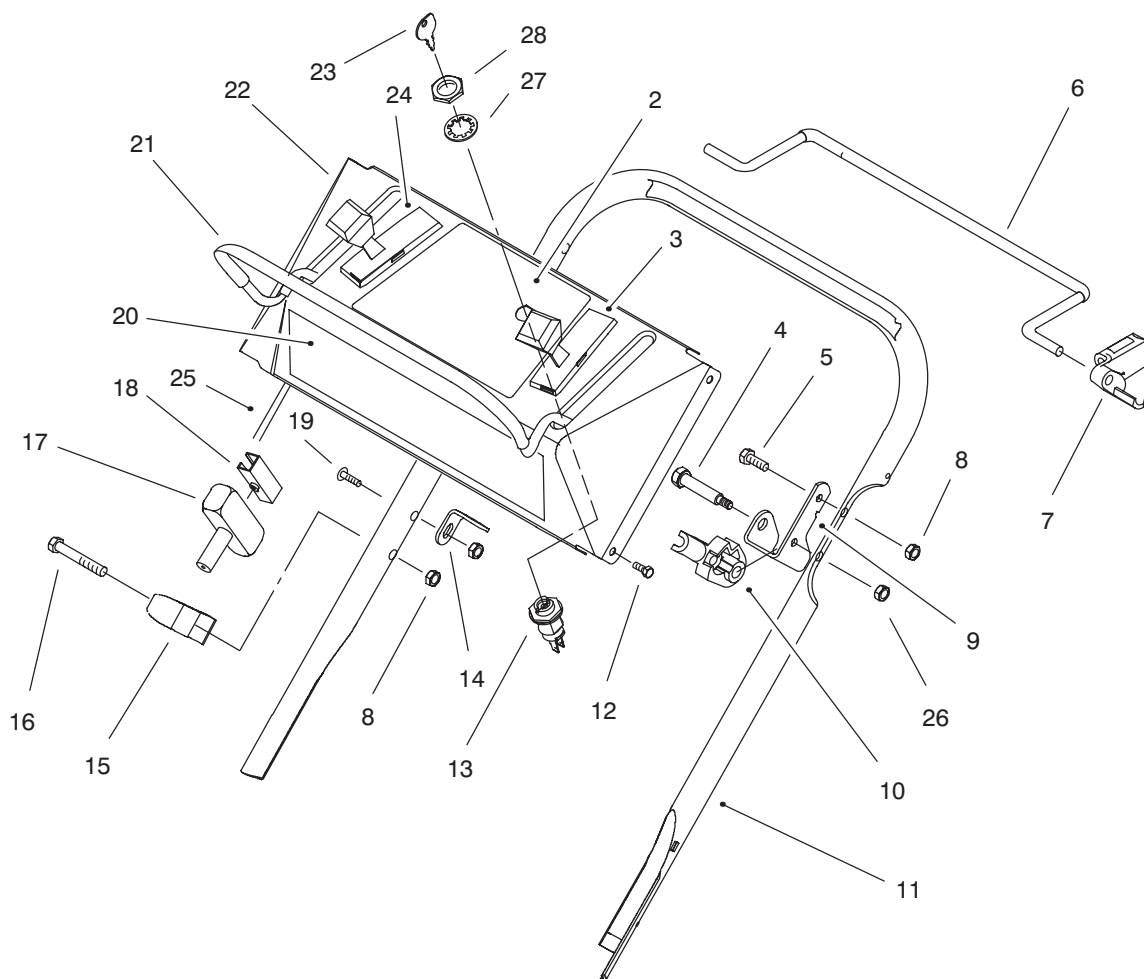

C-1922B

UPPER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	94-1615	Decal - Warning	1	16	321-51	Screw - Hex Hd. Cap	1
3	93-3683	Cable - Throttle	1	17	612825	Handle - Starter	1
4	613050	Bolt	1	18	612824	Clip - Rope Insert	1
5	321-4	Screw - Hex Hd. Cap	1	19	92-2268	Screw - Handle	1
6	92-1617	Bail - Control S.P.	1	20	92-9561	Decal - Console Front	1
7	92-5412	Stop - Pivot	1	21	92-1093	Bail - Engine Control	1
8	3296-73	Nut - Lock	3	22	17-4539	Panel - Control (Incl. Ref. #2, & 20)	1
9	92-1094	Bail - Stop Bracket	1	23	700918	Key	1
10	92-1078	Cam - Brake	1	24	92-8926	Control - Ground Speed	1
11	92-1092	Handle - Upper	1	25	93-3248	Cable - Control	1
12	92-9665	Screw - Phillips Hd.	4	26	3296-56	Nut - Lock	1
13	46-5780	Switch - Starter	1	27	3254-5	Washer - Star	1
14	92-2928	Bracket - Cable Anchor	1	28	218-461	Nut	1
15	93-7383	Guide - Rope	1				

LAWN-BOY PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
130743	Nut — Flywheel	8 10 1	611509	Actuator — Brake Lever	10 1 1
146254	Nut	11 48 2	611512	Brace — Alternator	8 4 1
303259	Washer	5 23 1	612383	Washer	12 15 1
303712	Ring — Retaining	10 17 2	612428	Screw	6 9 4
306407	Washer	14 19 2	612432	Rope	7 6 1
306407	Washer	11 43 2	612510	Pad — Battery	16 7 1
306992	Washer — Lock	14 17 1	612543	Blade 21	6 21 1
316959	Washer — Lock	8 11 1	612661	Bracket — Starter Mounting	14 7 1
317893	Strap — Tie	8 13 1	612690	Case — Battery	16 13 1
328712	Nut	14 18 1	612783	Line — Fuel	6 17 1
602587	Plate — Reed Hold Down	10 35 1	612824	Clip — Rope Insert	17 18 1
602588	Reed	10 36 1	612825	Handle — Starter	17 17 1
602850	Gasket — Float Chamber	12 9 1	612841	Plate — Contact	11 46 1
603014	Bolt	8 5 1	612842	Shield	10 24 1
603145	Clip	12 18 1	612872	Screw — Reed To Cover	10 34 2
603164	Nut — Blade	6 23 1	612949	Hub — Starter	7 8 1
605120	Grommet	10 27 1	612950	Pulley	7 7 1
605255	Washer — Flat	5 22 1	613050	Bolt	17 4 1
606537	Screw	8 14 1	613073	Bracket — C.D. Mounting	10 28 1
606608	Pin — Wrist	10 16 1	613075	Screw	14 9 2
607199	Key — Flywheel	10 14 1	613110	Screw — Cover to	10 38 1
607213	Gasket — Fuel Cap	6 12 1	613233	Screw — Brake Mtg. Brkt.	10 40 2
607526	Screw — C.D. Mounting	10 6 4	613269	Screw	12 6 4
607560	Plate — Cover	4 13 1	613451	Washer — Pinion Stop	14 14 1
607601	Screw	6 30 3	613500	Screw	6 29 1
608175	Bar — Toe	4 11 1	613517	Plate — Gear Cover	14 5 1
608311	Nut	8 3 1	613529	Bolt — Shoulder	10 5 1
608622	Ring — Retaining	14 15 1	614009	Plug — Spark	10 22 1
608850	Screw	12 10 4	614243	Knob	16 15 2
609123	Plug	10 32 4	614249	Tie — Strap	16 3 2
609130	Screw	14 6 3	614343	Screw	8 6 1
609150	Baffle Fuel Cap	6 13 1	614343	Screw	10 29 2
609229	Spring — Drag	14 11 1	614426	Washer — Stepped	5 15 2
609471	Screw	14 8 1	614637	Bracket — Wheel Height Adj.	3 12 2
609471	Screw	6 27 3	614677	Screw — Sems Thr'd Form.	3 16 2
609482	Screw — Pan Hd. Sems	12 5 2	614682	Knob — Cover Plate	3 1 1
609493	Element — Air Filter	13 3 1	614697	Screw — Handle	16 2 2
609572	Sleeve	14 16 1	677525	Plate & Collar Assembly	6 20 1
609754	Strip — Roller	10 20 1	677982	Liner — Split (1 pair)	10 10 1
609786	Support — Crankshaft	6 26 1	678113	Float & Arm Assembly	12 16 1
609808	Screw	8 12 1	678278	Float, Valve, & Body Ass'y	12 19 1
609947	Screw	8 7 3	681678	Lead — High Tension	10 25 1
609976	Pulley	6 33 1	681737	Ring Set	10 18 1
610165	Retainer	12 2 1	681830	Bearing — Upper Main	10 12 1
610257	Spring — Pinion Return	14 13 1	681831	Bearing	10 30 1
610258	Pinion	14 12 1	682683	Brake Assembly	10 4 1
610345	Screw — Set	6 32 1	682776	Relay	8 15 1
610358	Nut — Lock	3 2 2	682806	Electric Starter Assembly	14 * 1
610358	Nut — Lock	5 17 2	682807	Motor Housing & Pin Ass'y	14 3 1
610383	Retainer — Cover	13 1 1	682809	Pinion — Spring & Clutch	14 10 1
610834	Collar — Adjustment	12 1 1	682876	Muffler Cover Assembly	6 25 1
611071	Filter — Fuel	12 12 1	683215	Module — C.D. Ignition	10 31 1
611073	Screw — Set	10 37 1	683580	Flywheel	8 9 1
611191	Clip — J	8 8 1	683821	Lead	10 3 1
611211	Spring — Brake	10 41 1	683899	Kit — Dog	7 9 1
611213	Retainer	11 45 1	683964	Alternator Assembly	10 7 1
611214	Spring — Cable Return	10 2 1	684301	Base — Starter	6 6 1
611215	Base — Shroud	8 2 1	684567	Starter Housing & Shaft	7 2 1
611327	Cap — Fuel	6 11 1	684622	Starter Assembly	7 * 1
611337	Bracket	10 39 1	684622	Starter Assembly	6 7 1
611385	Pinion — Motor shaft	14 2 1	684776	Wheel & Tire Assembly 6	3 9 2
611386	Gear — Driven	14 1 1	700918	Key	17 23 1
611393	Screw — Cap	10 8 2	12-5450	Screw — Hex Washer Hd.	4 1 2
611396	Seal — Upper Oil	10 13 2	12-5450	Screw — Hex Washer Hd.	16 14 2

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
16-5539	Shroud & Tank Assembly	6 5 1	92-2268	Screw - Handle	17 19 1
17-1219	Housing - 21	4 9 1	92-2928	Bracket - Cable Anchor	17 14 1
17-4539	Panel - Control	17 22 1	92-4856	Bolt - Shoulder	3 8 2
24-7920	Cover - Drive Shaft	5 24 1	92-4921	Connecting Rod Assembly	10 9 1
29-9570	Bushing - Yoke	15 11 1	92-4925	Piston & Ring Set	10 19 1
36-4780	Washer	15 17 1	92-4927	Bearing Assembly	10 15 1
36-4791	Washer - Thrust	15 20 2	92-4935	Spring & Keeper	7 3 1
38-7820	Bearing - Ball	15 2 1	92-4944	Spring - Governor	12 21 1
39-5770	Decal - Danger	4 12 1	92-4948	Gasket	13 5 2
40-1940	Washer	3 3 6	92-5412	Stop - Pivot	17 7 1
44-2750	Body - Primer	12 26 1	92-5790	Pinion - Bevel	15 27 1
44-3172	Hose - Primer	12 27 1	92-5791	Spacer	15 5 1
46-5551	Bushing - Spacer	4 5 2	92-6371	Nozzle	12 14 1
46-5780	Switch - Starter	17 13 1	92-6376	Air Vane & Shaft	12 24 1
46-6811	Screw - Hex Washer Hd.	4 10 2	92-6388	Plate - Muffler	6 28 1
47-2480	Stop - Rope	6 10 1	92-6389	Pin	12 17 1
49-2040	Screw	15 21 6	92-6518	Cable - Traction	16 6 1
55-3760	Pinion - 15 Tooth	15 23 1	92-6535	Cap - End	5 20 2
55-3770	Gear - 49 Tooth	15 28 1	92-6537	Handle - Lower	16 1 1
55-3780	Pinion - 20 Tooth	15 24 1	92-6539	Spring Arm Assembly - R.H.	5 * 1
55-3790	Gear - 44 Tooth	15 29 1	92-6540	Spring Arm Assembly - L.H.	5 18 1
55-3800	Pinion - 25 Tooth	15 25 1	92-7699	Bracket - Actuator	4 4 1
55-3810	Gear - 39 Tooth	15 30 1	92-7736	Shield - Trailing	4 7 1
55-7520	Pack - Battery	16 12 1	92-7746	Arm - Rear Height Adjust.	5 4 2
60-8710	Gearcase - Upper	15 9 1	92-7748	Screw	4 3 2
60-8730	Gear Case Cover	15 22 1	92-7869	Gear Case Assembly	15 * 1
60-8750	Bushing - Inter. Shaft	15 19 2	92-7869	Gear Case Assembly	4 6 1
60-8770	Bushing - Output	15 18 1	92-7899	Bracket - Traction Cable	16 5 1
60-8790	Sleeve - Gear	15 31 1	92-8630	Plate - Mulch	3 17 1
60-8800	Shaft - Intermediate	15 26 1	92-8853	Cover - Transmission	4 2 1
60-8810	Retainer - Shift Fork	15 12 1	92-8917	Cover - Controls	16 10 1
60-8821	Lever - Shift	5 1 1	92-8926	Control - Ground Speed	17 24 1
60-8840	Pulley - Half	15 6 2	92-9561	Decal - Console Front	17 20 1
60-8850	Bushing - Output	15 3 1	92-9665	Screw - Phillips Hd.	17 12 4
60-8870	Yoke - Shift	15 10 1	92-9673	Bolt - Shoulder	3 4 2
65-2720	Ring - Retaining	5 7 4	92-9691	Float Chamber	12 11 1
65-4710	Ring - Friction	5 8 2	93-0290	Decal - Deck	3 14 1
65-4720	Spring - Compression	5 12 2	93-0293	Decal - Recoil	6 15 1
65-4730	Washer - Thrust	5 5 2	93-1221	Shield - Heat	13 4 1
65-4740	Washer - Thrust Keyed	5 6 4	93-1225	Lever - Speed Adjust	12 3 1
65-4750	Gear - Pinion	5 11 2	93-1226	Bracket - Throttle Control	12 22 1
65-4760	Washer	5 9 2	93-1231	Cover - Air Filter	13 2 1
65-4770	Shaft - Output	15 4 1	93-1232	Bracket - Primer	12 8 1
65-5250	Clip - Spring	15 16 1	93-1233	Gasket - Exhaust	10 33 1
66-6040	Key - Rocking R.H.	5 * 1	93-1233	Gasket - Muffler	6 31 1
66-6050	Key - Rocking L.H.	5 10 1	93-1239	Spring - Contact	10 23 1
66-7460	Bulb - Primer	12 25 1	93-3248	Cable - Control	17 25 1
76-0760	Key - Shift	15 14 2	93-3683	Cable - Throttle	17 3 1
76-0770	Collar - Shift	15 15 1	93-4300	Harness - Wire	8 1 1
76-0780	Sleeve - Shift Key	15 13 1	93-4300	Wire Harness - Lower	9 1 1
82-8780	Retainer - Cable	5 3 1	93-4301	Case Assembly	10 42 1
92-1006	Spring Arm Ass'y - Front	3 6 2	93-4320	Plug	12 4 2
92-1008	Knob - Height Adjust	3 5 4	93-4341	Body - Carburetor	12 7 1
92-1042	Wheel & Tire Assembly	5 13 2	93-7250	Decal - Warning	4 8 1
92-1043	V-Belt	5 21 1	93-7383	Guide - Rope	17 15 1
92-1057	Bolt - Shoulder	5 14 2	94-1609	Cover - Wheel	5 16 2
92-1078	Cam - Brake	17 10 1	94-1610	Grommet	3 15 3
92-1092	Handle - Upper	17 11 1	94-1615	Decal - Warning	17 2 1
92-1093	Bail - Engine Control	17 21 1	94-5704	Disc - Throttle	12 23 1
92-1094	Bail - Stop Bracket	17 9 1	94-5710	Main Jet	12 13 1
92-1099	Bolt - Shoulder	3 10 2	94-5713	Crankshaft	10 11 1
92-1604	Cap - Hub	3 11 4	94-5734	Short Block	11 * 1
92-1617	Bail - Control S.P.	17 6 1	94-5738	Carburetor Complete	12 * 1
92-1630	Fan - Mulching	6 22 1	94-6059	Wire Assembly	16 9 1

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-9164	Charger - Battery	16 * 1	3256-24	Washer	15 8 1
95-1727	Screw - Engine	6 24 3	3272-10	Pin - Cotter	5 25 1
218-461	Nut	17 28 1	3285-19	Pin - Groove	15 1 1
252-76	Bearing - Thrust	11 49 1	3290-413	Washer - Belleville	3 7 2
252-80	Washer - Thrust	11 50 1	3296-5	Nut	15 7 1
252-98	Washer	14 4 1	3296-39	Nut - Lock	3 13 2
321-4	Screw - Hex Hd. Cap	17 5 1	3296-56	Nut - Lock	17 26 1
321-6	Screw - Hex Hd. Cap	11 44 1	3296-73	Nut - Lock	17 8 3
321-51	Screw - Hex Hd. Cap	17 16 1	32103-29	Nut - Wing	16 11 2
3230-29	Bolt - Carriage	16 4 2	32144-53	Screw - Self Tapping	6 8 5
3253-33	Washer - Lock	16 8 2	32144-70	Screw - Tapping	5 2 1
3254-5	Washer - Star	17 27 1	32144-85	Screw - Hex Hd Tapping	5 19 2
3255-7	Washer - Ext. Tooth Lock	11 47 1			