

LAWN-BOY®

53cm SIDE DISCHARGE WALK—BEHIND MOWER

MODEL NO. 10800 — 7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Housing Assembly	3	Engine Assembly	6–9
Engine Assembly	4	Recoil Starter Assembly	10
Handle Assembly	5	Carburetor Assembly	11

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Bag Kit w/Chute	Model No. 89811

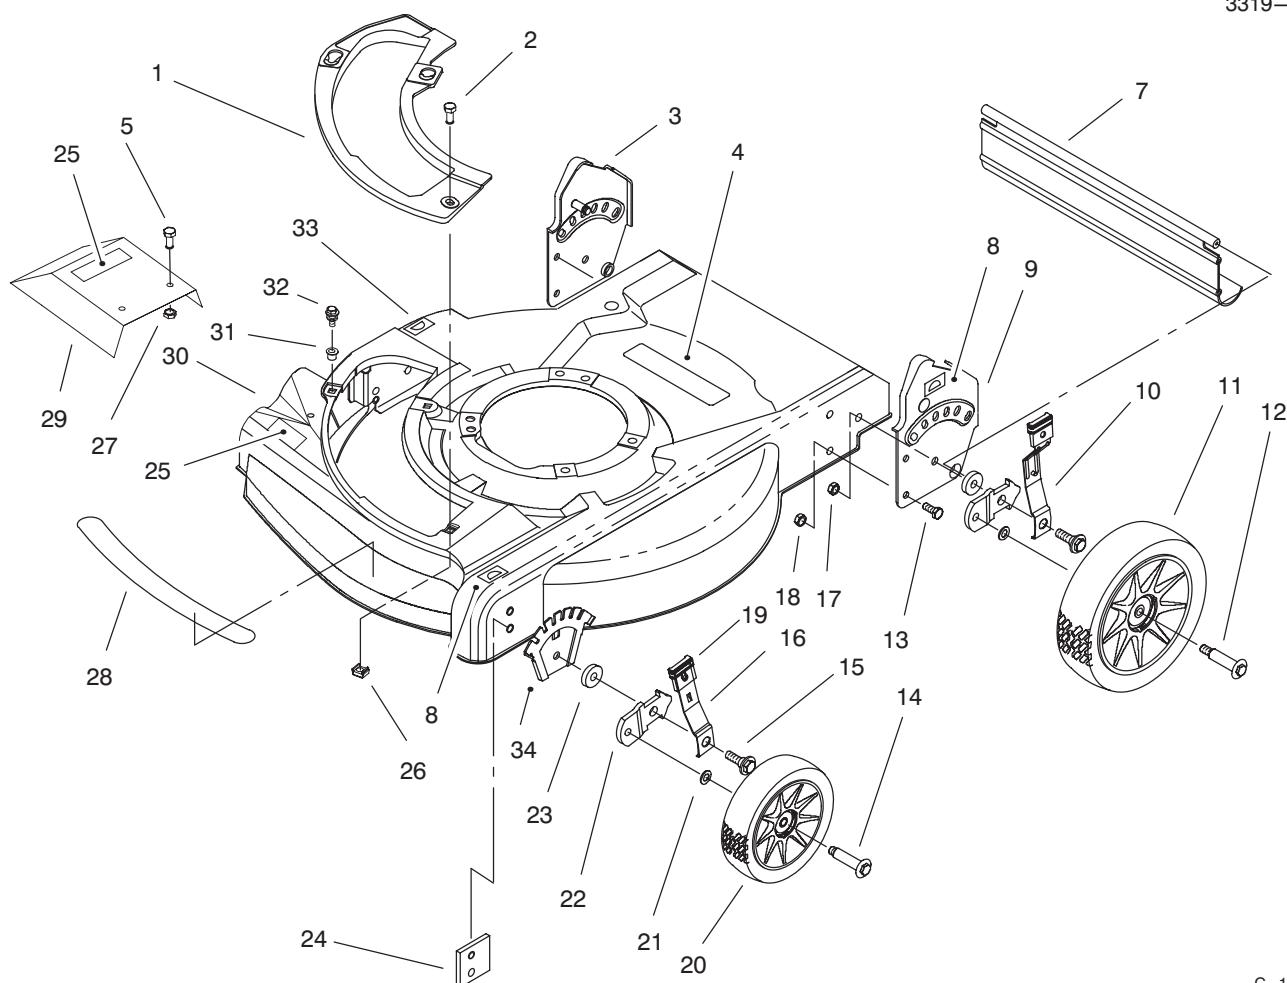


C-1927B

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	607560	Plate – Cover	1
2	49–2040	Screw	1
3	92–7742	Handle Brkt. Ass'y – R.H.	1
4	93–6657	Decal – Danger	1
5	32105–15	Screw	2
7	92–8647	Shield – Trailing	1
8	93–6671	Decal – H.O.C. L.H.	2
9	92–7743	Handle Brkt. Ass'y – L.H.	1
10	92–1005	Spring Arm Ass'y	2
11	92–8887	Wheel & Tire Assembly	2
12	614650	Bolt – Shoulder	2
13	322–3	Screw – Hex Hd. Cap	4
14	92–1099	Bolt – Shoulder	2
15	614672	Bolt – Shoulder Height Adj.	4
16	614687	Spring Arm Ass'y	2
17	3296–39	Nut – Lock	2
18	3296–29	Nut – Lock	4


Ref. No.	Part No.	Description	No. Used
19	92–1008	Knob – Height Adjust	4
20	92–8885	Wheel & Tire Assembly	2
21	40–1940	Washer	4
22	614637	Bracket – Wheel Height Adj.	4
23	92–4890	Washer	4
24	92–7731	Plate – Baffle	2
25	93–6667	Decal – Warning	2
26	613765	Nut – Cage	1
27	3296–42	Nut – Lock	2
28	92–8833	Decal – Deck 345VP	1
29	93–7415	Guard – Plate	1
30	16–5659	Housing	1
31	604604	Grommet – Plastic	2
32	614677	Screw – Sems Thr'd Form	2
33	93–6670	Decal – H.O.C. R.H.	2
34	92–4881	Plate – Height Adjust	2

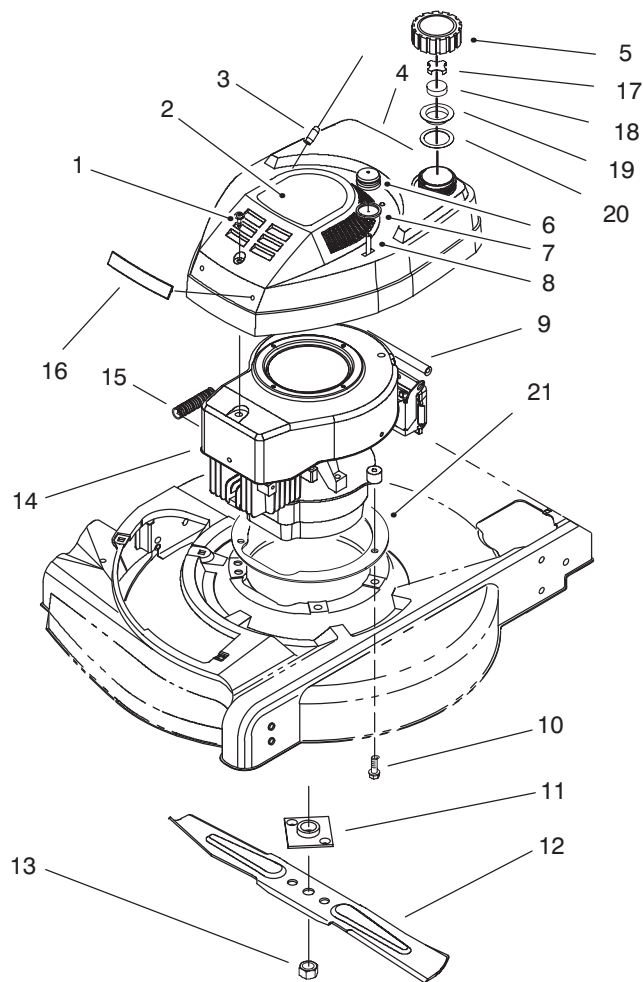

C-1928A

ENGINE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4302	Screw – Sems	3	11	677525	Plate & Collar Assembly	1
2	92-8828	Decal – Shroud	1	12	612543	Blade – 21”	1
3	92-1701	Rope – Stop	1	13	603164	Nut – Blade	1
4	92-8619	Tank & Shroud Assembly	1	14		Engine	1
5	93-3660	Gas Cap Assembly (Incl. Ref. #17-20)	1	15	66-5370	Spring – Compression	1
6	66-7460	Bulb – Primer	1	16	92-8615	Applique – Shroud	1
7	44-2750	Body – Primer	1	17	93-3175	Baffle	1
8	44-3174	Hose – Primer	1	18	609150	Baffle – Foam	1
9	612782	Line – Gas	1	19	93-1230	Cover	1
10	95-1726	Screw – Engine	3	20	613311	Gasket	1
				21	93-7152	Plate – Engine	1

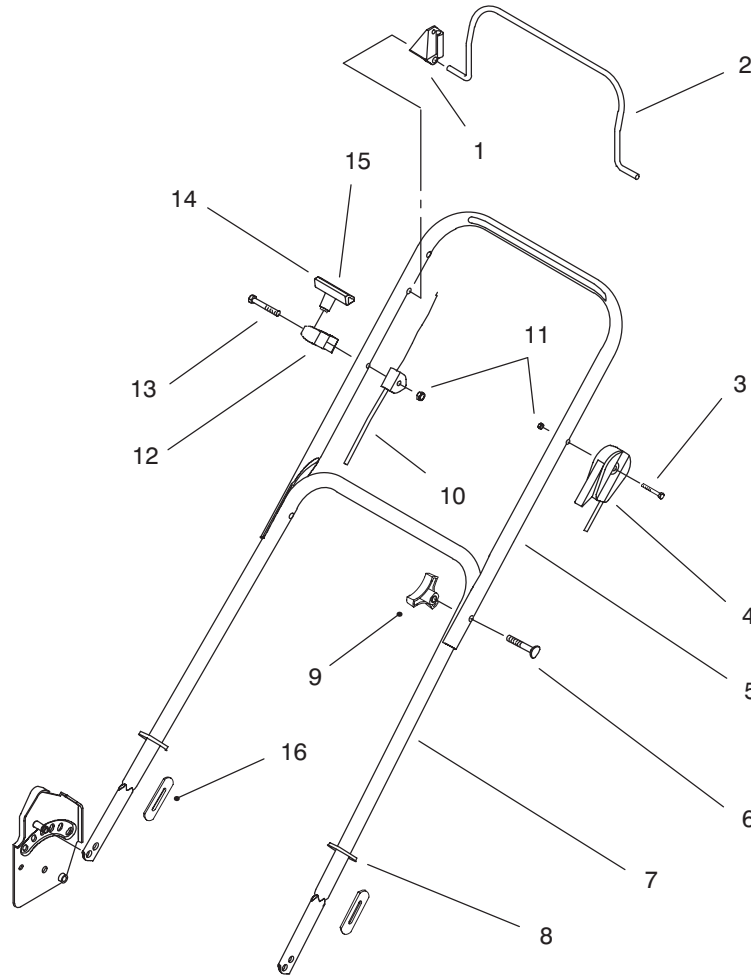

C-1929A

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-5412	Stop - Pivot	1	9	614243	Knob	2
2	92-1002	Bail - Flywheel Brake	1	10	92-7738	Cable - Flywheel Brake	1
3	321-14	Screw - Hex Hd. Cap	1	11	3296-73	Nut - Lock	2
4	92-9326	Cable - Throttle	1	12	93-7383	Guide - Rope	1
5	92-7737	Handle - Upper	1	13	321-53	Screw - Hex Hd Cap	1
6	614697	Screw - Handle	2	14	612825	Handle - Starter	1
7	614643	Handle - Lower	1	15	612824	Clip - Rope Insert	1
8	3290-378	Tie - Cable	2	16	93-3653	Guard - Handle	2

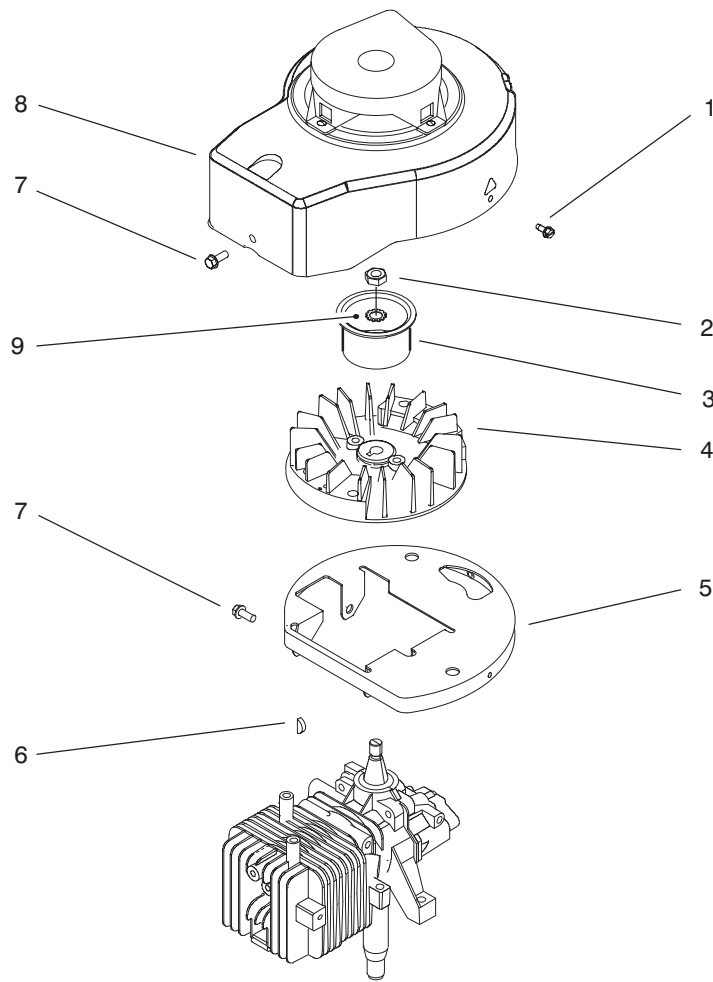


C-2128A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	130743	Nut	1
3	614640	Hub — Starter	1
4	684743	Flywheel	1
5	93—1216	Base — Shroud	1


Ref. No.	Part No.	Description	No. Used
6	607199	Key	1
7	614702	Screw	4
8	93—4304	Shroud Assembly	1
9	316959	Washer — Lock	1

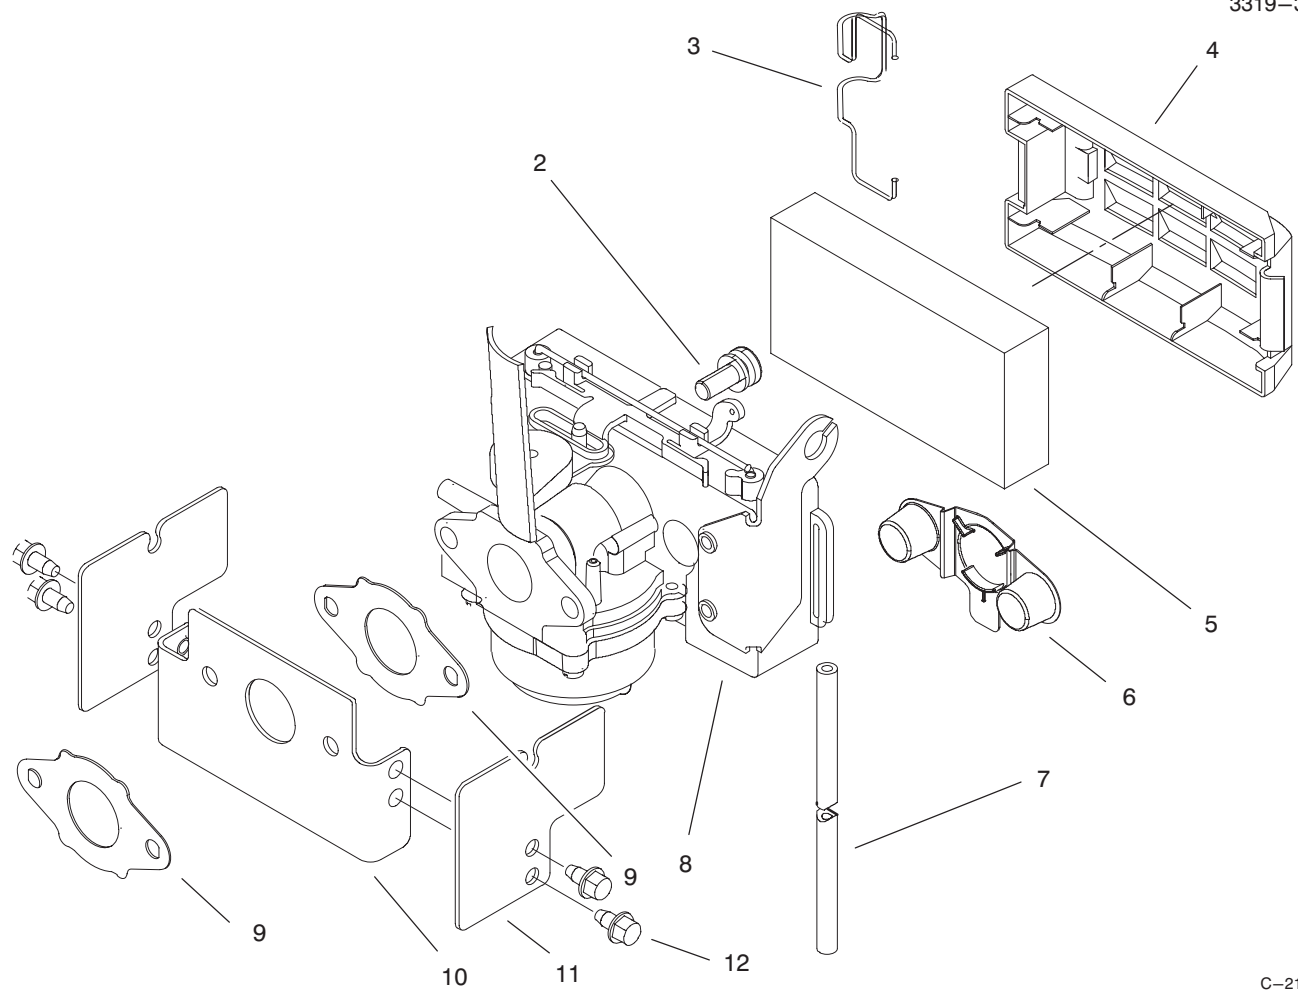

C-2129B

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	609482	Screw	2	8	93-4331	Carburetor Assembly (Incl. Ref. #9)	1
3	610383	Retainer - Filter	1	9	612574	Gasket - Carburetor	2
4	93-1231	Cover - Air Cleaner	1	10	93-4315	Shield - Carburetor (Intl.)	1
5	609493	Element - Filter Air	1	11	93-4316	Shield - Governor V (Intl.)	2
6	93-4320	Shield - Fuel	1	12	613269	Screw	4
7	44-3174	Hose - Primer	1				

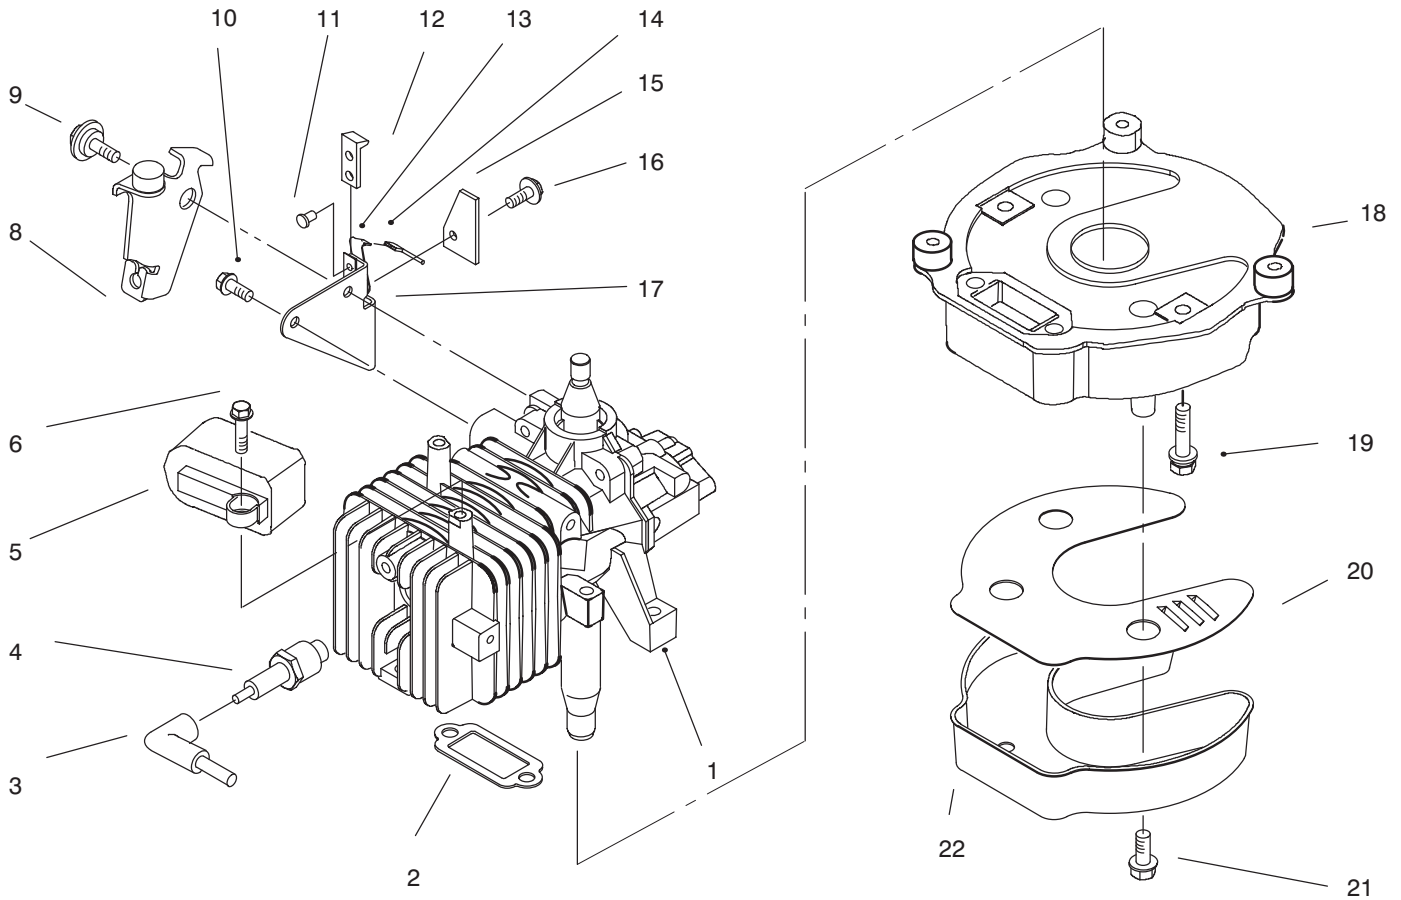


C-1296A

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	94-5737	Short Block (Incl. Ref. #2, Ref. #9 pg. 8)	1
2	93-1233	Gasket - Exhaust	1
3		CD Ignition	1
*	681678	Cover & Terminal	1
4	614009	Plug - Spark	1
5	684049	CD Ignition (Incl. Ref. #3)	1
6	613208	Screw - Hex. Washer Hd.	2
8	66-5380	Brake Plate Assembly	1
9	92-9698	Screw - Shoulder	1
10	614702	Screw	1
11	3290-459	Rivet - Plastic	2

Ref. No.	Part No.	Description	No. Used
12	92-2925	Strap - Insulation	1
13	60-9010	Strap - Ground	1
14	92-1156	Wire - Brake Switch Lead	1
15	53-4690	Stop - Ground Strap	1
16	12-5450	Screw - Thread Forming	1
17		Mounting Plate (Incl. Ref. #11-13)	1
18	614654	Plate - Muffler	1
19	607601	Screw	4
20	93-4343	Baffle	1
21	609471	Screw	3
22	614674	Cover - Muffler	1


*Not Illustrated

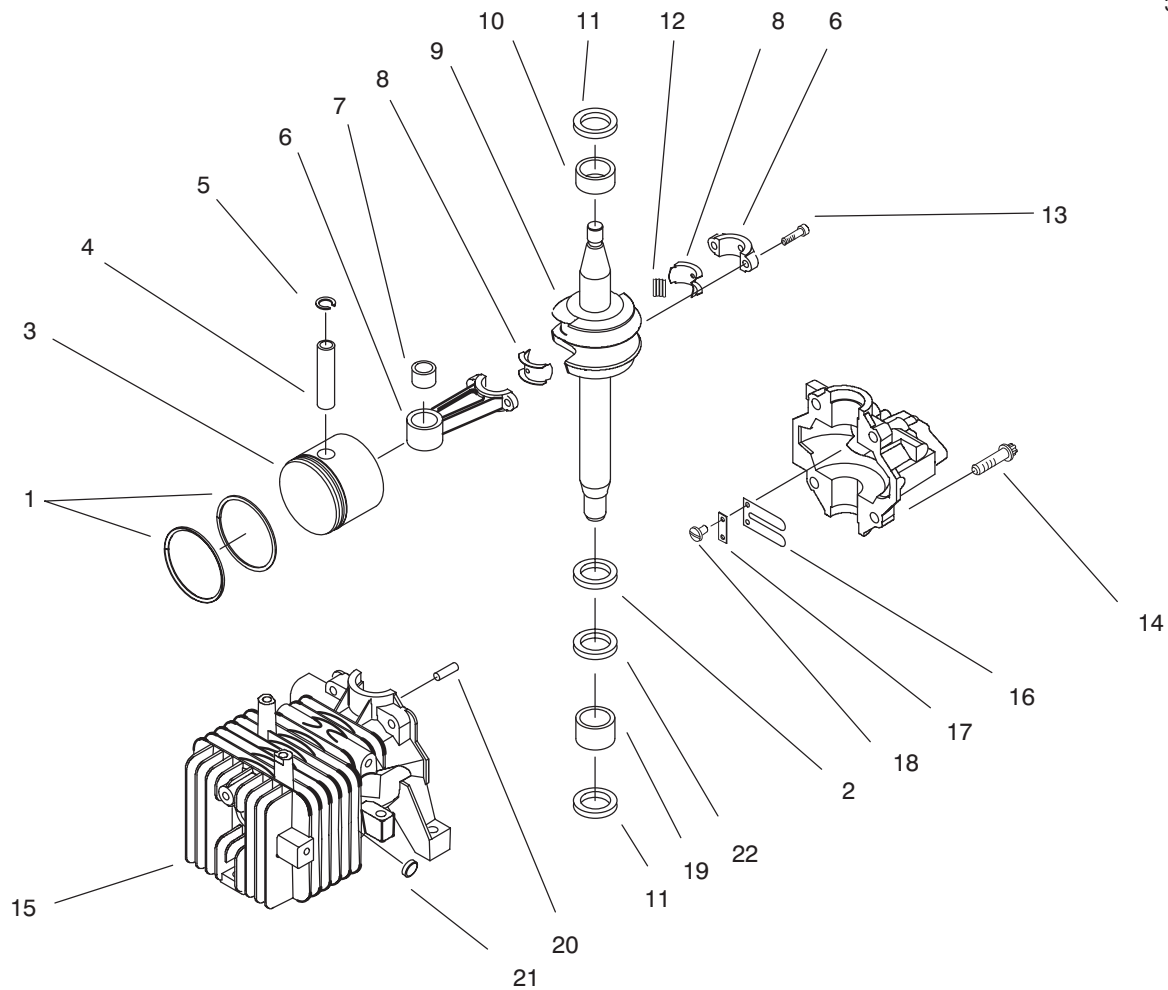

C-2489A

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	681737	Set – Ring	1	10	681830	Bearing – Upper Main	1
2	252–76	Bearing – Thrust	1	11	611396	Seal – Oil	2
3	92–4925	Piston & Connecting Rod (Incl. Ref. #1–2, 4–8, 12, & 13)	1	12	609754	Bearing – Needle	1
4	606608	Pin – Wrist	1	13	611393	Screw – Hex. Hd.	2
5	303712	Ring – Retaining	2	14	614636	Screw – Torx. Washer Hd.	4
6	92–4921	Connecting Rod Assembly (Incl. Ref. #6–8, 12, & 13)	1	16	602588	Reed – Carburetor	1
7	92–4927	Bearing	1	17	602587	Reed – Backup Plate	1
8	677982	Liner – Split (Set of 2)	1	18	612872	Screw	2
9	94–5713	Crankshaft	1	19	681831	Bearing – Needle	1
				20	609629	Dowel	1
				21	609123	Plug – Core	4
				22	252–80	Washer – Thrust	1

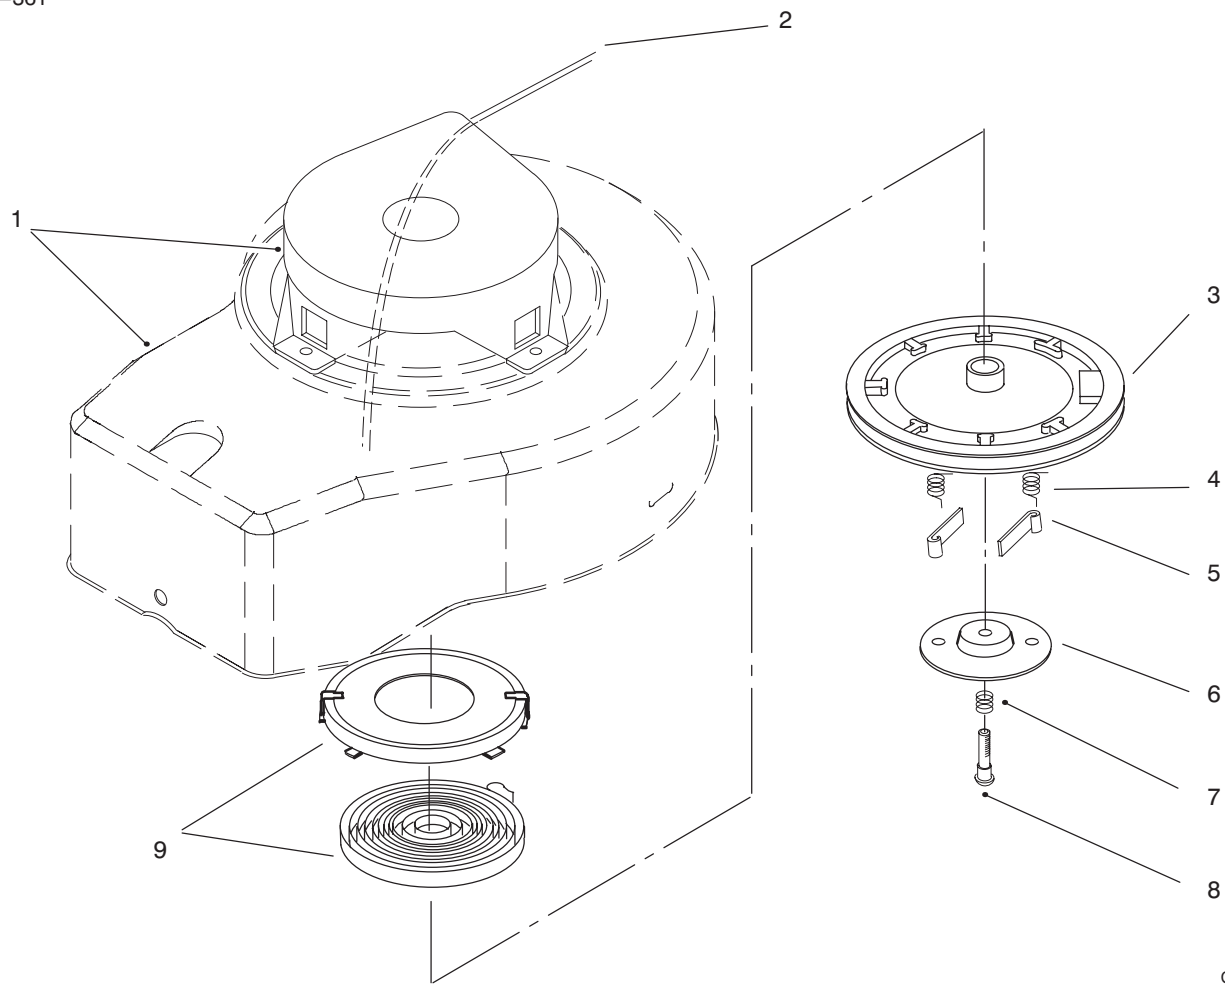


C-1309

RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4304	Shroud Assembly	1
2	93-4305	Rope - Starter	1
3	92-4929	Pulley Assembly	1
4	92-4930	Spring - Dog	2
5	92-4931	Dog	2
6	92-9692	Retainer	1

Ref. No.	Part No.	Description	No. Used
7	92-4933	Screw	1
8	92-4934	Spring	1
9	92-4935	Spring Keeper Assembly	1
*	93-1236	Recoil Assembly (Incl. Ref. #2-9)	1

* Not Illustrated

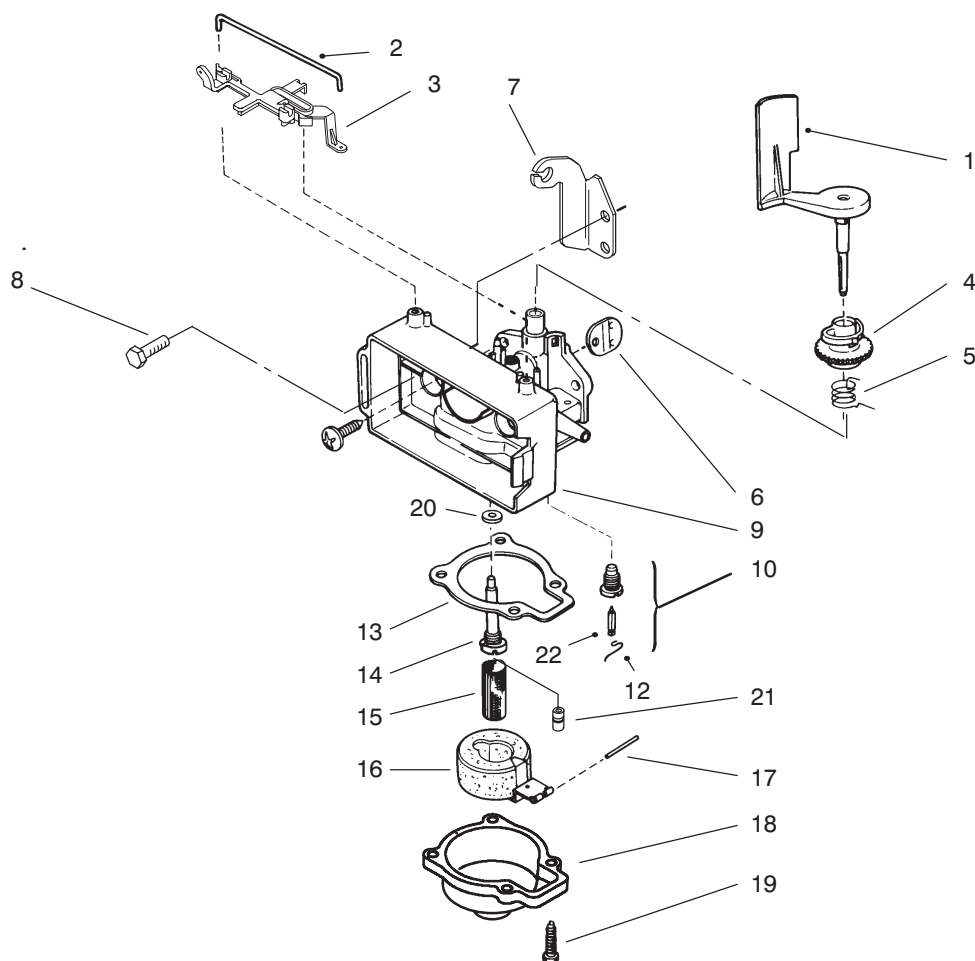

C-2130C

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6376	Air Vane & Shaft	1	13	602850	Gasket	1
2	610165	Retainer - Speed Control	1	14	92-6371	Nozzle	1
3	93-1225	Lever - Speed Adjust	1	15	611071	Filter - Fuel	1
4	610834	Collar - Air Vane	1	16	678113	Float & Arm Assembly	1
5	92-4944	Spring - Governor	1	17	92-6389	Pin	1
6	92-6373	Disc - Throttle	1	18	92-9691	Float Chamber	1
7	92-4949	Bracket - Throttle Control	1	19	608850	Screw	4
8	613269	Screw	2	20	612383	Washer	1
9	93-4324	Carburetor Body	1	21	92-6370	Main Jet	1
10	92-9697	Kit - Float Valve, Body & Seat (Incl. Ref. #12 & 22)	1	22	678278	Valve - Float	1
12	603145	Spring	1	*	92-6385	Jet - High Altitude	1
				*	93-4331	Carburetor Assembly	1

*Not Illustrated

LAWN—BOY PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
	CD Ignition	8 3 1	684049	CD Ignition	8 5 1
130743	Nut	6 2 1	684743	Flywheel	6 4 1
303712	Ring — Retaining	9 5 2	12—5450	Screw — Thread Forming	8 16 1
316959	Washer — Lock	6 9 1	16—5659	Housing	3 30 1
602587	Reed — Backup Plate	9 17 1	40—1940	Washer	3 21 4
602588	Reed — Carburetor	9 16 1	44—2750	Body — Primer	4 7 1
602850	Gasket	11 13 1	44—3174	Hose — Primer	7 7 1
603145	Spring	11 12 1	44—3174	Hose — Primer	4 8 1
603164	Nut — Blade	4 13 1	49—2040	Screw	3 2 1
604604	Grommet — Plastic	3 31 2	53—4690	Stop — Ground Strap	8 15 1
606608	Pin — Wrist	9 4 1	60—9010	Strap — Ground	8 13 1
607199	Key	6 6 1	66—5370	Spring — Compression	4 15 1
607560	Plate — Cover	3 1 1	66—5380	Brake Plate Assembly	8 8 1
607601	Screw	8 19 4	66—7460	Bulb — Primer	4 6 1
608850	Screw	11 19 4	92—1002	Bail — Flywheel Brake	5 2 1
609123	Plug — Core	9 21 4	92—1005	Spring Arm Ass'y	3 10 2
609150	Baffle — Foam	4 18 1	92—1008	Knob — Height Adjust	3 19 4
609471	Screw	8 21 3	92—1099	Bolt — Shoulder	3 14 2
609482	Screw	7 2 2	92—1156	Wire — Brake Switch Lead	8 14 1
609493	Element — Filter Air	7 5 1	92—1701	Rope — Stop	4 3 1
609629	Dowel	9 20 1	92—2925	Strap — Insulation	8 12 1
609754	Bearing — Needle	9 12 1	92—4881	Plate — Height Adjust	3 34 2
610165	Retainer — Speed Control	11 2 1	92—4890	Washer	3 23 4
610383	Retainer — Filter	7 3 1	92—4921	Connecting Rod Assembly	9 6 1
610834	Collar — Air Vane	11 4 1	92—4925	Piston & Connecting Rod	9 3 1
611071	Filter — Fuel	11 15 1	92—4927	Bearing	9 7 1
611393	Screw — Hex. Hd.	9 13 2	92—4929	Pulley Assembly	10 3 1
611396	Seal — Oil	9 11 2	92—4930	Spring — Dog	10 4 2
612383	Washer	11 20 1	92—4931	Dog	10 5 2
612543	Blade — 21	4 12 1	92—4933	Screw	10 7 1
612574	Gasket — Carburetor	7 9 2	92—4934	Spring	10 8 1
612782	Line — Gas	4 9 1	92—4935	Spring Keeper Assembly	10 9 1
612824	Clip — Rope Insert	5 15 1	92—4944	Spring — Governor	11 5 1
612825	Handle — Starter	5 14 1	92—4949	Bracket — Throttle Control	11 7 1
612872	Screw	9 18 2	92—5412	Stop — Pivot	5 1 1
613208	Screw — Hex. Washer Hd.	8 6 2	92—6370	Main Jet	11 21 1
613269	Screw	11 8 2	92—6371	Nozzle	11 14 1
613269	Screw	7 12 4	92—6373	Disc — Throttle	11 6 1
613311	Gasket	4 20 1	92—6376	Air Vane & Shaft	11 1 1
613765	Nut — Cage	3 26 1	92—6385	Jet — High Altitude	11 * 1
614009	Plug — Spark	8 4 1	92—6389	Pin	11 17 1
614243	Knob	5 9 2	92—7731	Plate — Baffle	3 24 2
614636	Screw — Torx. Washer Hd.	9 14 4	92—7737	Handle — Upper	5 5 1
614637	Bracket — Wheel Height Adj.	3 22 4	92—7738	Cable — Flywheel Brake	5 10 1
614640	Hub — Starter	6 3 1	92—7742	Handle Brkt. Ass'y — R.H.	3 3 1
614643	Handle — Lower	5 7 1	92—7743	Handle Brkt. Ass'y — L.H.	3 9 1
614650	Bolt — Shoulder	3 12 2	92—8615	Applique — Shroud	4 16 1
614654	Plate — Muffler	8 18 1	92—8619	Tank & Shroud Assembly	4 4 1
614672	Bolt — Shoulder Height Adj.	3 15 4	92—8647	Shield — Trailing	3 7 1
614674	Cover — Muffler	8 22 1	92—8828	Decal — Shroud	4 2 1
614677	Screw — Sems Thr'd Form	3 32 2	92—8833	Decal — Deck 345VP	3 28 1
614687	Spring Arm Ass'y	3 16 2	92—8885	Wheel & Tire Assembly	3 20 2
614697	Screw — Handle	5 6 2	92—8887	Wheel & Tire Assembly	3 11 2
614699	Screw	6 1 3	92—9326	Cable — Throttle	5 4 1
614702	Screw	6 7 4	92—9691	Float Chamber	11 18 1
614702	Screw	8 10 1	92—9692	Retainer	10 6 1
677525	Plate & Collar Assembly	4 11 1	92—9697	Kit — Float Valve, Body	11 10 1
677982	Liner — Split (Set of 2)	9 8 1	92—9698	Screw — Shoulder	8 9 1
678113	Float & Arm Assembly	11 16 1	93—1216	Base — Shroud	6 5 1
678278	Valve — Float	11 22 1	93—1225	Lever — Speed Adjust	11 3 1
681678	Cover & Terminal	8 * 1	93—1230	Cover	4 19 1
681737	Set — Ring	9 1 1	93—1231	Cover — Air Cleaner	7 4 1
681830	Bearing — Upper Main	9 10 1	93—1233	Gasket — Exhaust	8 2 1
681831	Bearing — Needle	9 19 1	93—1236	Recoil Assembly	10 * 1

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-3175	Baffle	4 17 1	93-7383	Guide - Rope	5 12 1
93-3653	Guard - Handle	5 16 2	93-7415	Guard - Plate	3 29 1
93-3660	Gas Cap Assembly	4 5 1	94-5713	Crankshaft	9 9 1
93-4302	Screw - Sems	4 1 3	94-5737	Short Block	8 1 1
93-4304	Shroud Assembly	6 8 1	95-1726	Screw - Engine	4 10 3
93-4304	Shroud Assembly	10 1 1	252-76	Bearing - Thrust	9 2 1
93-4305	Rope - Starter	10 2 1	252-80	Washer - Thrust	9 22 1
93-4315	Shield - Carburetor (Intl.)	7 10 1	321-14	Screw - Hex Hd. Cap	5 3 1
93-4316	Shield - Governor V (Intl.)	7 11 2	321-53	Screw - Hex Hd Cap	5 13 1
93-4320	Shield - Fuel	7 6 1	322-3	Screw - Hex Hd. Cap	3 13 4
93-4324	Carburetor Body	11 9 1	3290-378	Tie - Cable	5 8 2
93-4331	Carburetor Assembly	11 * 1	3290-459	Rivet - Plastic	8 11 2
93-4331	Carburetor Assembly	7 8 1	3296-29	Nut - Lock	3 18 4
93-4343	Baffle	8 20 1	3296-39	Nut - Lock	3 17 2
93-6657	Decal - Danger	3 4 1	3296-42	Nut - Lock	3 27 2
93-6667	Decal - Warning	3 25 2	3296-73	Nut - Lock	5 11 2
93-6670	Decal - H.O.C. R.H.	3 33 2	32105-15	Screw	3 5 2
93-6671	Decal - H.O.C. L.H.	3 8 2			
93-7152	Plate - Engine	4 21 1			

MAINTENANCE RECORD

[illegible]

[illegible]

MAINTENANCE RECORD

[illegible]