

LAWN-BOY®

48cm REAR BAGGING MOWER

MODEL NO. 10900—7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS


The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

 
Description	Page	Description	Page
Housing Assembly	3	Handle Assembly	7
Engine Assembly	4	Bag Assembly	8
Blade Assembly	5	Engine Breakdown	9-17
Rear Axle Assembly	6	Numeric Parts Index	18

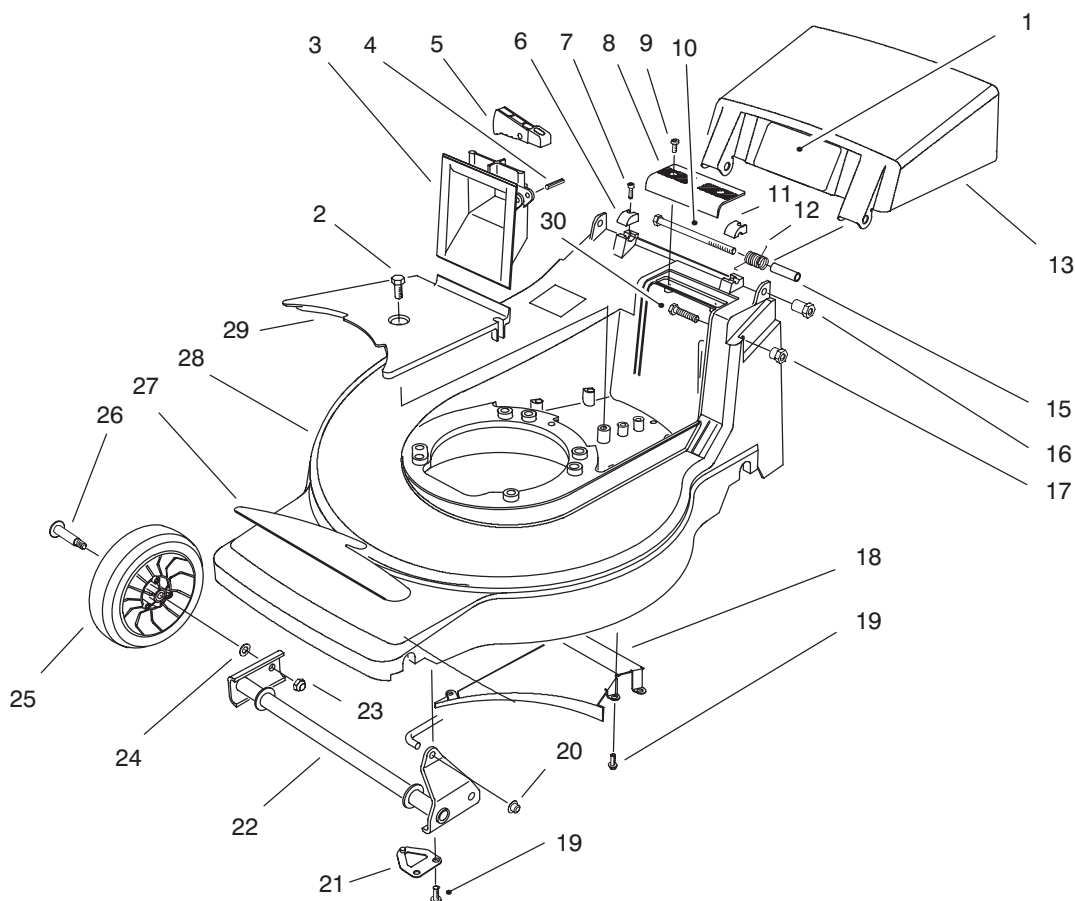

C-2211

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4105	Decal - Danger	1	17	93-7162	Spacer - Handle	2
2	32144-70	Screw - Tapping	1	18	71-7990	Ramp - Discharge	1
3	71-7870	Grip - Lower	1	19	32144-4	Screw - Tapping	8
4	3284-5	Pin - Groove	1	20	32112-1	Nut - Push	1
5	71-7930	Trigger - HOC	1	21	71-8830	Retainer - Shaft	2
6	71-7910	Cap - R.H. Hinge Bolt	1	22	92-9304	Pivot - Front	1
7	65-5210	Screw - Thread Forming	2	23	92-8819	Nut - Lock	2
8	71-7860	Grip - Upper	1	24	40-1940	Washer	2
9	32144-97	Screw - Pan Hd. Phillips	2	25	92-8810	Wheel & Tire Assembly	2
10	92-8806	Screw - Hex Hd. Cap	2	26	92-8811	Bolt - Wheel	2
11	71-7900	Cap - L.H. Hinge Bolt	1	27	92-8834	Decal - Deck 400XP	1
12	71-9840	Spring - Door	2	28	16-8889	Housing (Incl. Ref. #27)	1
13	17-1569	Door - Discharge (Incl. Ref. # 1)	1	29	71-7920	Cover - Belt	1
15	92-9313	Spacer - Door	2	30	92-8818	Screw - Hex Hd. Cap	2
16	93-7161	Spacer - Handle	2				

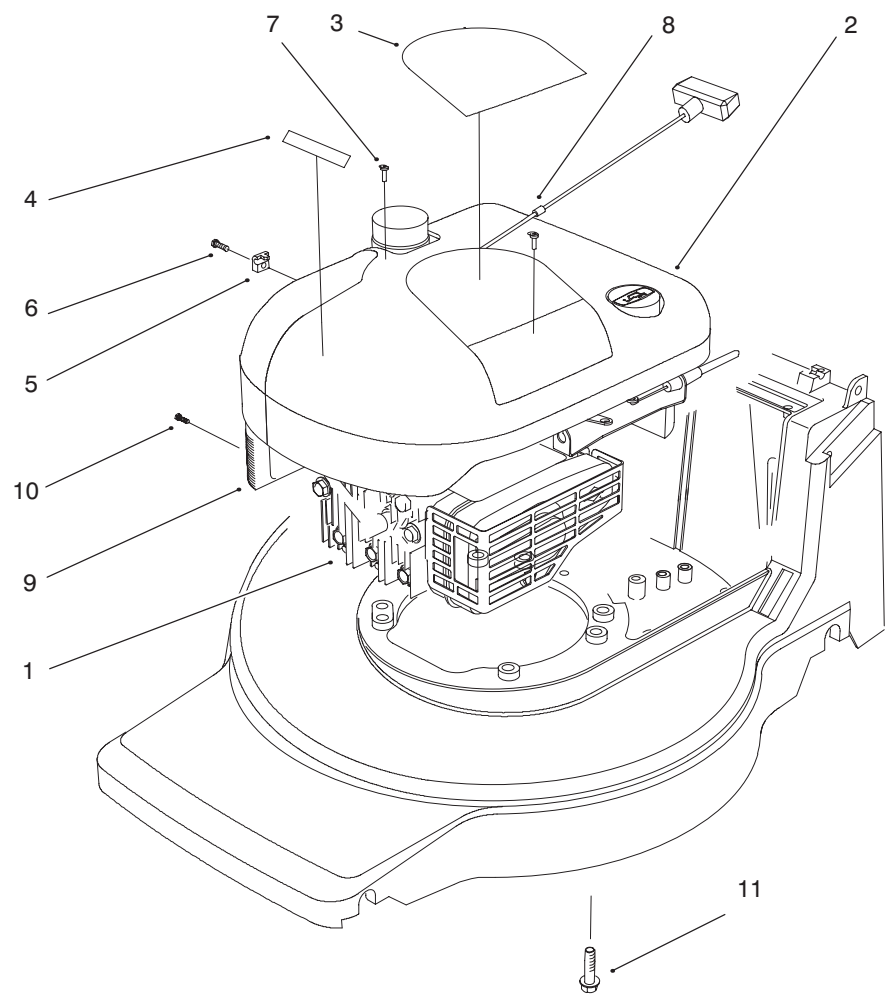 

C-2668

ENGINE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Engine	1	7	92-7887	Screw - Mtg	2
2	95-1704	Shroud - Engine	1	8	2210-316	Rope - Stop	1
3	95-5910	Decal - Recoil	1	9	95-1709	Cover	1
4	95-0656	Applique - Shroud	1	10	95-1707	Screw - Air Cleaner	3
5	2210-249	Clamp - Casing	1	11	32144-102	Screw	3
6	93-8470	Screw - Clamp	1				

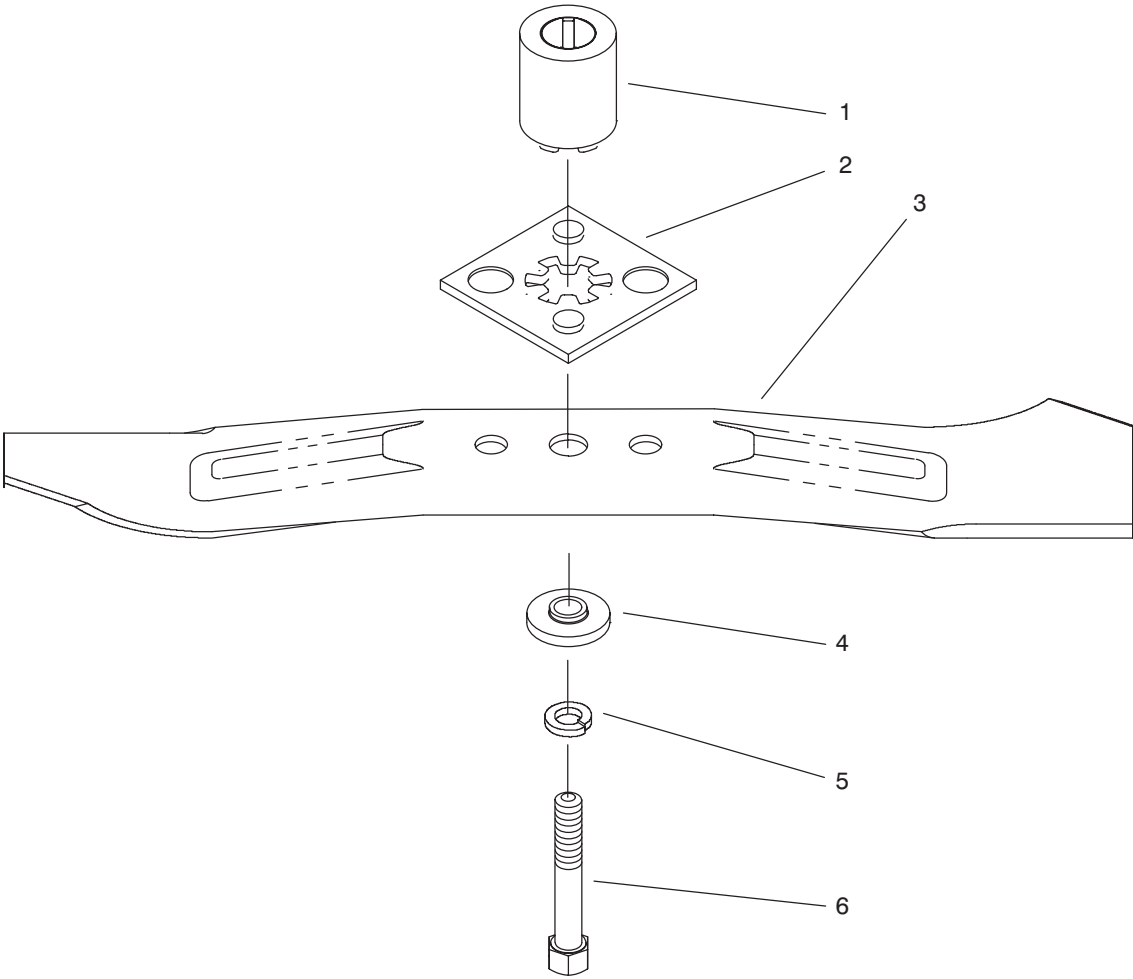 

C-1887

BLADE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-8807	Hub - Blade Driver	1	4	92-8626	Spacer - Blade	1
2	146046	Plate - Blade Driver	1	5	3253-22	Washer - Lock	1
3	612079	Blade - 48cm	1	6	26-0670	Bolt - Blade	1

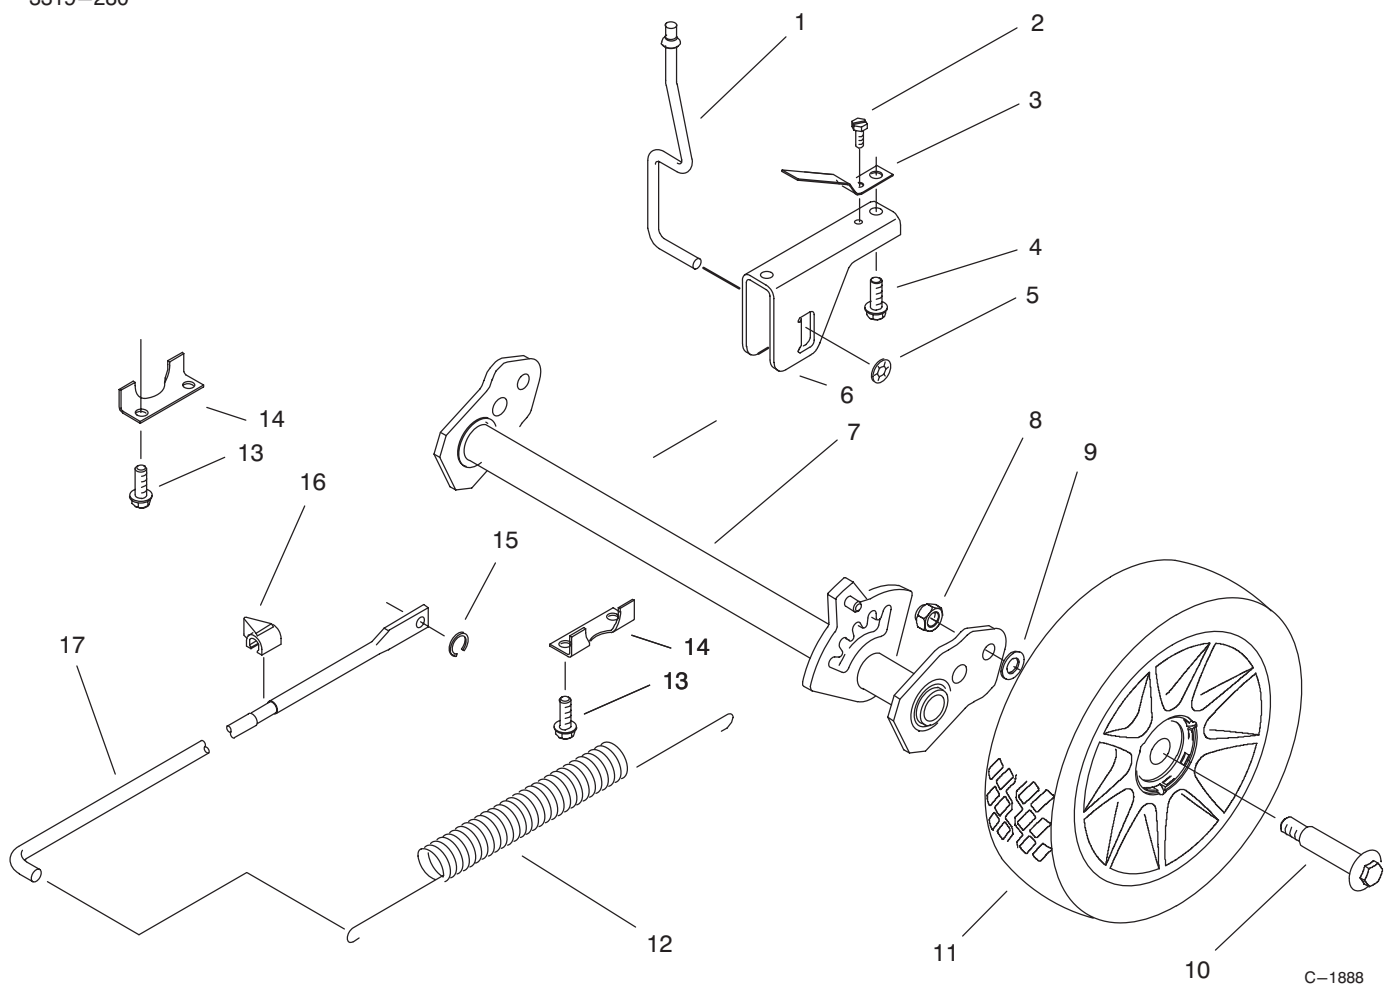 

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-7840	Rod - Trigger	1
2	32144-31	Screw - Tapping	1
3	71-8060	Spring - Trigger Retainer	2
4	63-8590	Screw	2
5	32112-13	Nut - Push	1
6	71-8080	Saddle - H.O.C.	1
7	92-9305	Arm - Pivot	1
8	3296-59	Nut - Lock	2
9	40-1940	Washer	2

Ref. No.	Part No.	Description	No. Used
10	92-1057	Bolt - Shoulder	2
11	92-8887	Wheel & Tire Assembly	2
12	92-9300	Spring - Counterbalance	1
13	32144-4	Screw - Tapping	4
14	71-7770	Plate - Securing Rear	2
15	32151-93	Ring - Grip	1
16	71-7980	Indicator - H.O.C.	1
17	92-9301	Rod - Link	1

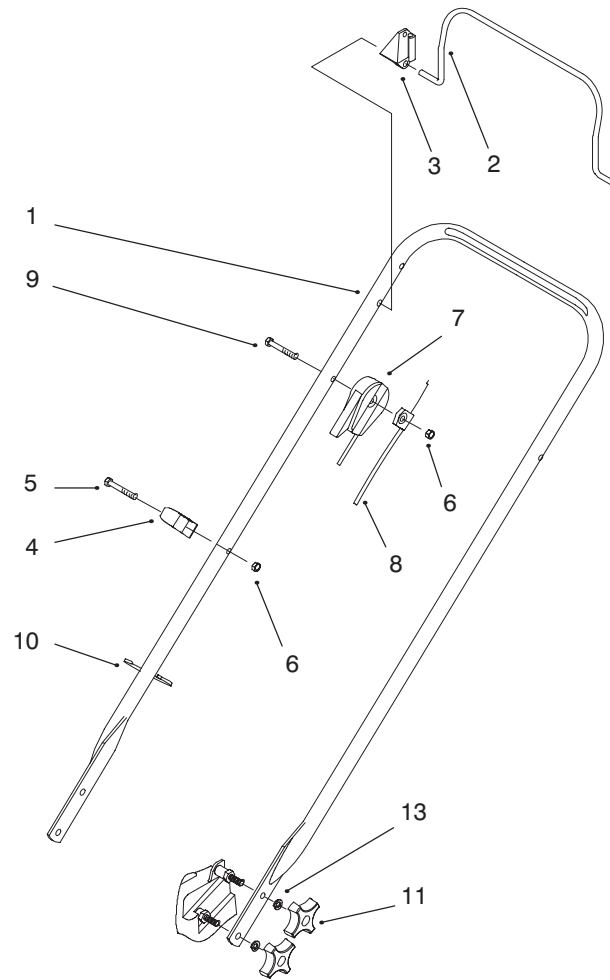 


C-2684

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-8800	Handle	1
2	92-1002	Bail - Flywheel Brake	1
3	92-5412	Stop - Pivot	1
4	93-7383	Guide - Rope	1
5	321-53	Screw - HH	1
6	3296-73	Nut - Lock Insert	2

Ref. No.	Part No.	Description	No. Used
7	93-4379	Cable Throttle	1
8	92-9315	Cable - Flywheel Brake	1
9	321-49	Screw - HH	1
10	3290-378	Tie - Cable	1
11	93-7159	Knob	4
13	3253-33	Washer - Lock	4

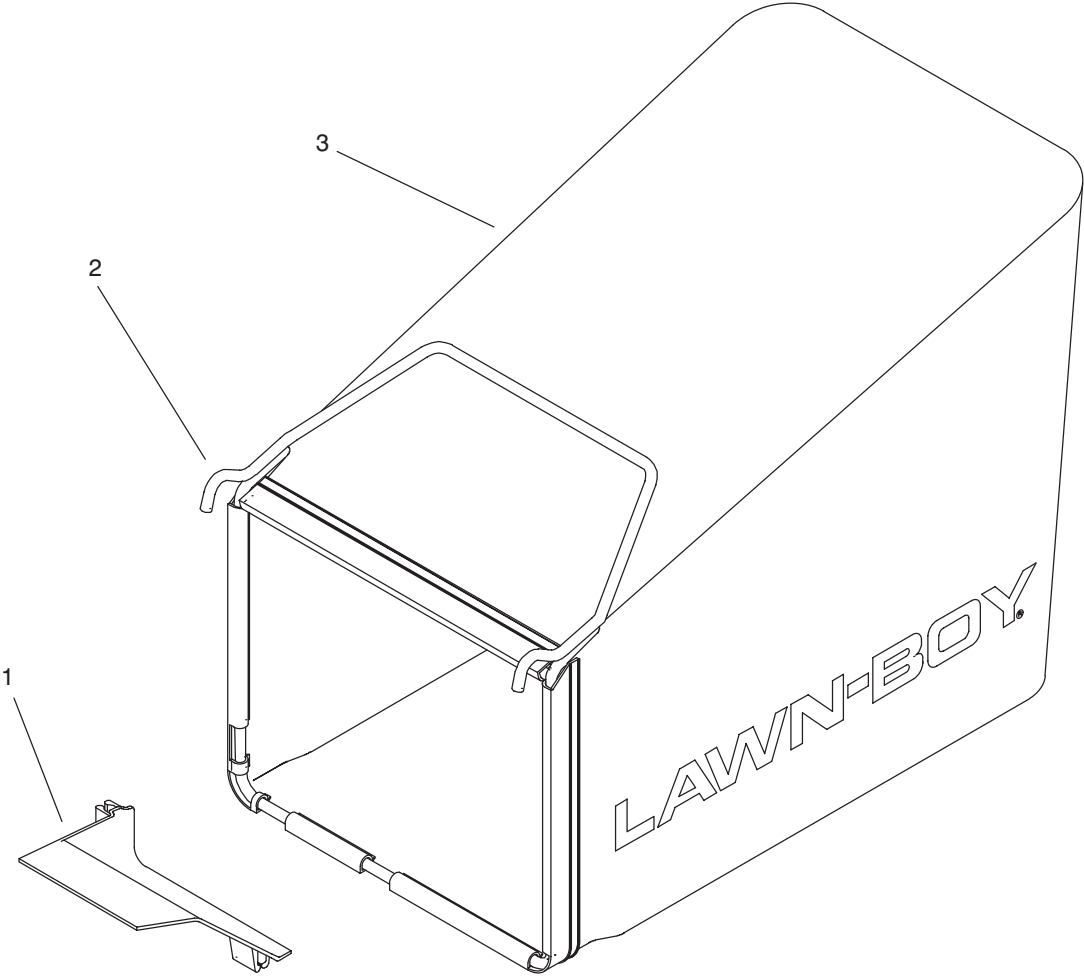 


C-1890

BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-3750	Ramp – Grass Bag	1
2	71-8180	Frame	1

Ref. No.	Part No.	Description	No. Used
3	92-8890	Bag – Grass	1

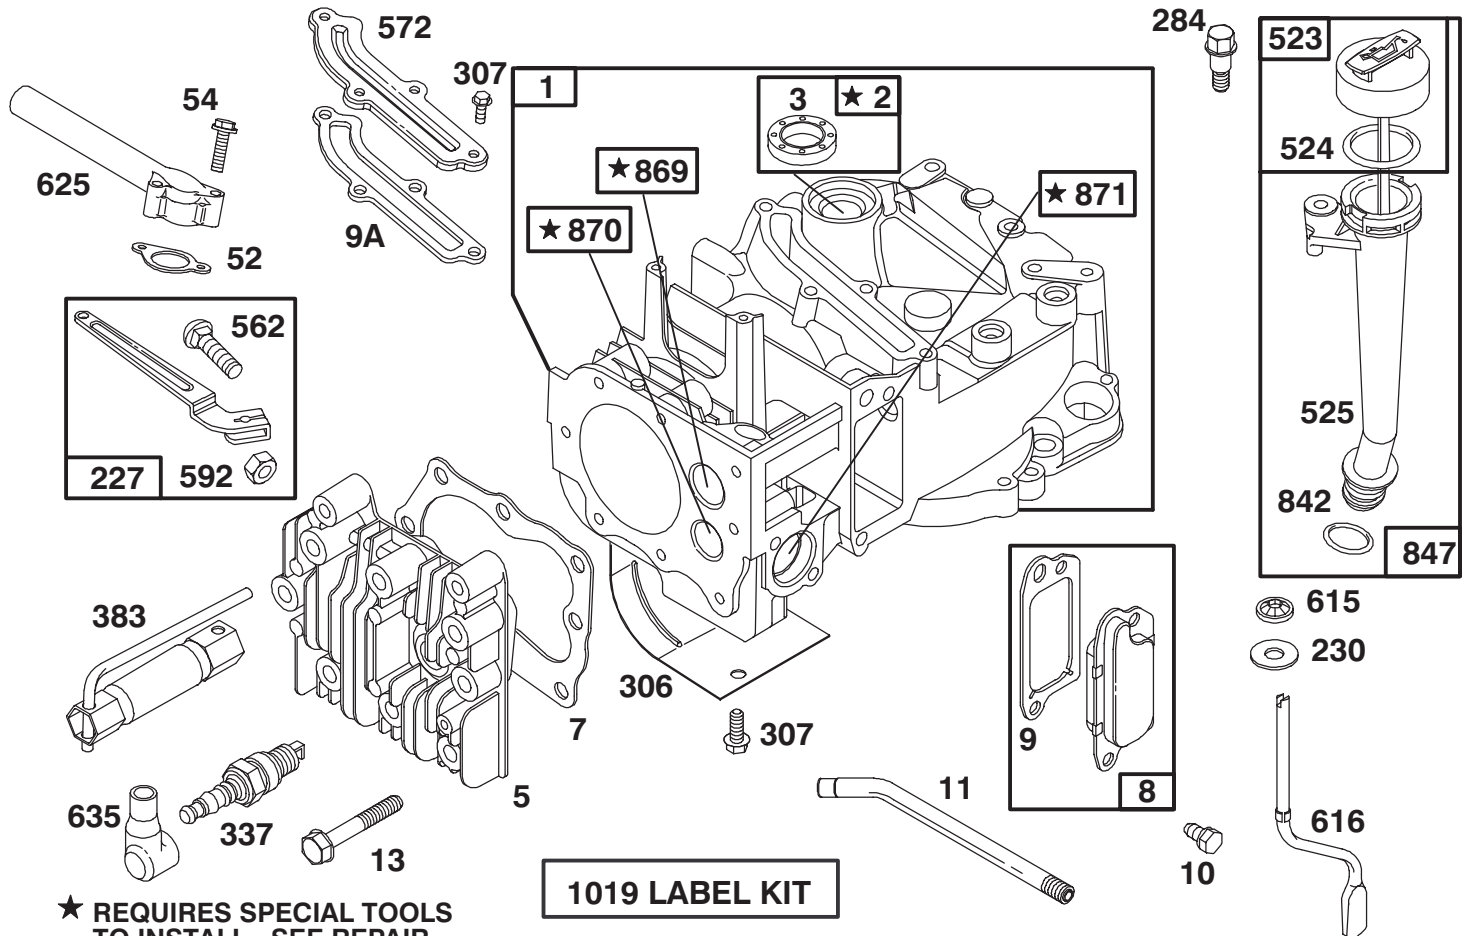 


ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214626	Head – Cylinder	1
★Ø7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★Ø9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg.	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Carriage	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
		Note: 63709 Guide–Intake Valve	1
1019	494256	Label Kit	1

★ Included in Gasket Set—Part No. 497316.

 Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

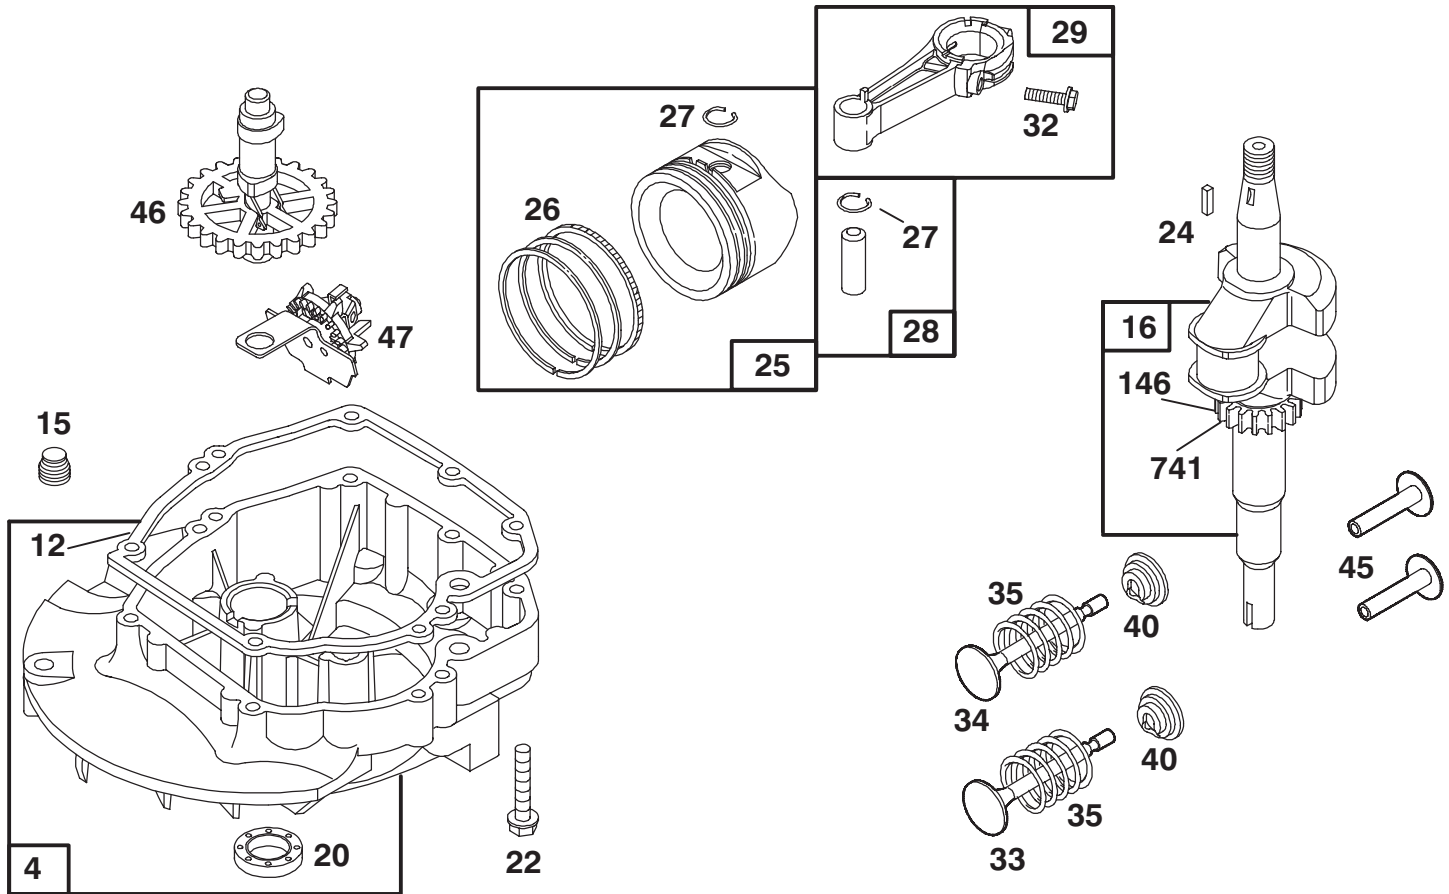


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1
★12	272198	Gasket – Crankcase	1
15	94720	Plug – Oil Drain	1
16	496809	Crankshaft	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex. Head	1
		Note: 94612 Screw – Hex. Head (One Used in Hole Nearest Breather)	1
24	222698	Key – Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock – Piston Pin	1
28	298909	Pin – Piston (Standard)	1
	298908	Pin – Piston (.005" O.S.)	1
29	490566	Rod Assembly–Connecting	
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	498275	Gear – Cam	1
47	493737	Slinger – Oil	1
146	94388	Key – Timing	1
741	262598	Gear – Timing	1

 ★ Included in Gasket Set–Part No. 497316.

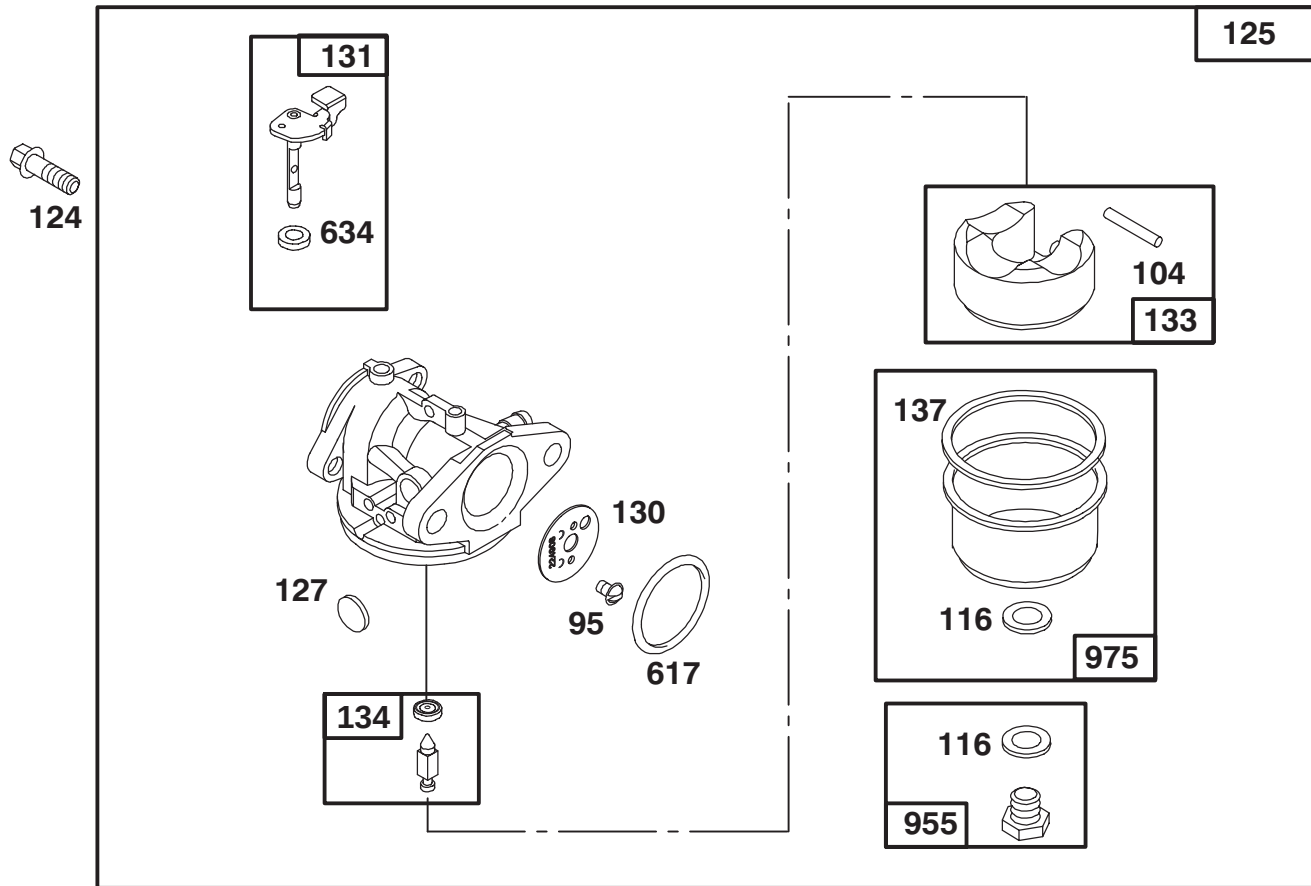

Assemblies include all parts shown in frames.




ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
95	T94098	Screw — Throttle Valve Mtg.	1
●104	T231371	Pin — Float Hinge	1
●◆116		Gasket—Sealing (Sold in Kit Only)	1
124	94525	Screw — Carburetor Mtg.	1
125	498966	Carburetor	1
●127		Plug — Welch (Sold in Kit Only)	1
130	224908	Valve — Throttle	1
131	T493267	Shaft — Throttle	1
133	398187	Float Assy. — Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	T398188	Valve — Inlet (Includes Seat)	1
●◆137		Gasket — Bowl (Sold in Kit Only)	1
●◆617	270344	Seal — Fuel Intake Tube	1
●◆634		Washer — Shaft (Sold in Kit Only)	1
955	498975	Screw — Bowl Mtg. (Std.) Note: 496495 Screw — Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. — Carburetor	1

●Included in Carburetor Kit—Part No. 498260.

   ◆Included in Carburetor Gasket Set—Part No. 498261.

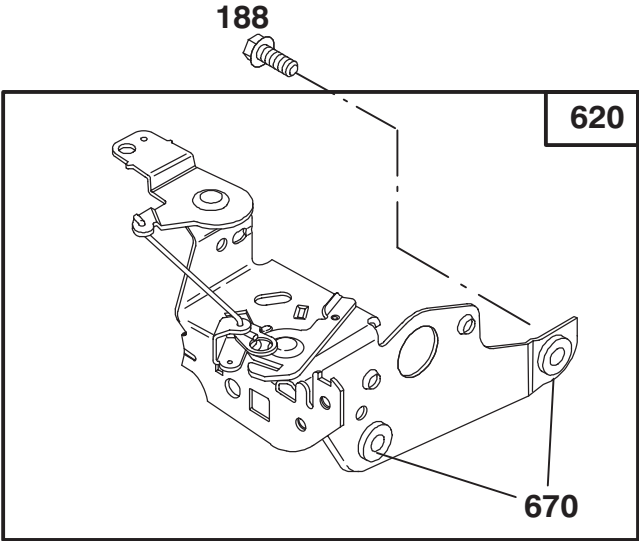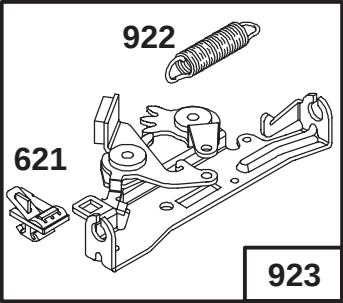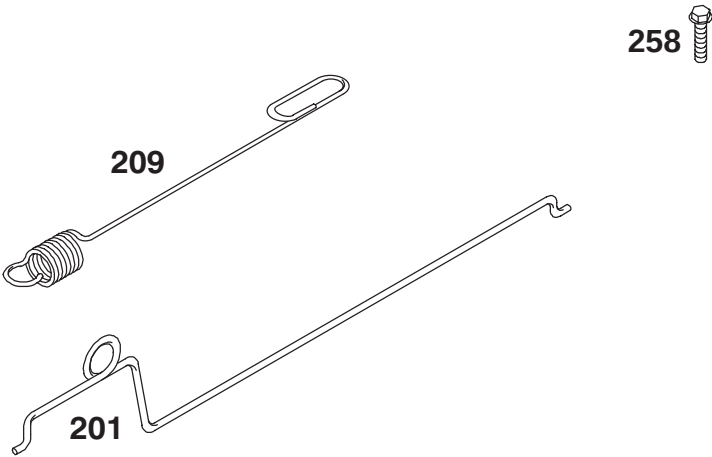


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633–01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497837	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket	2
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

 ★ Included in Gasket Set–Part No. 497316.

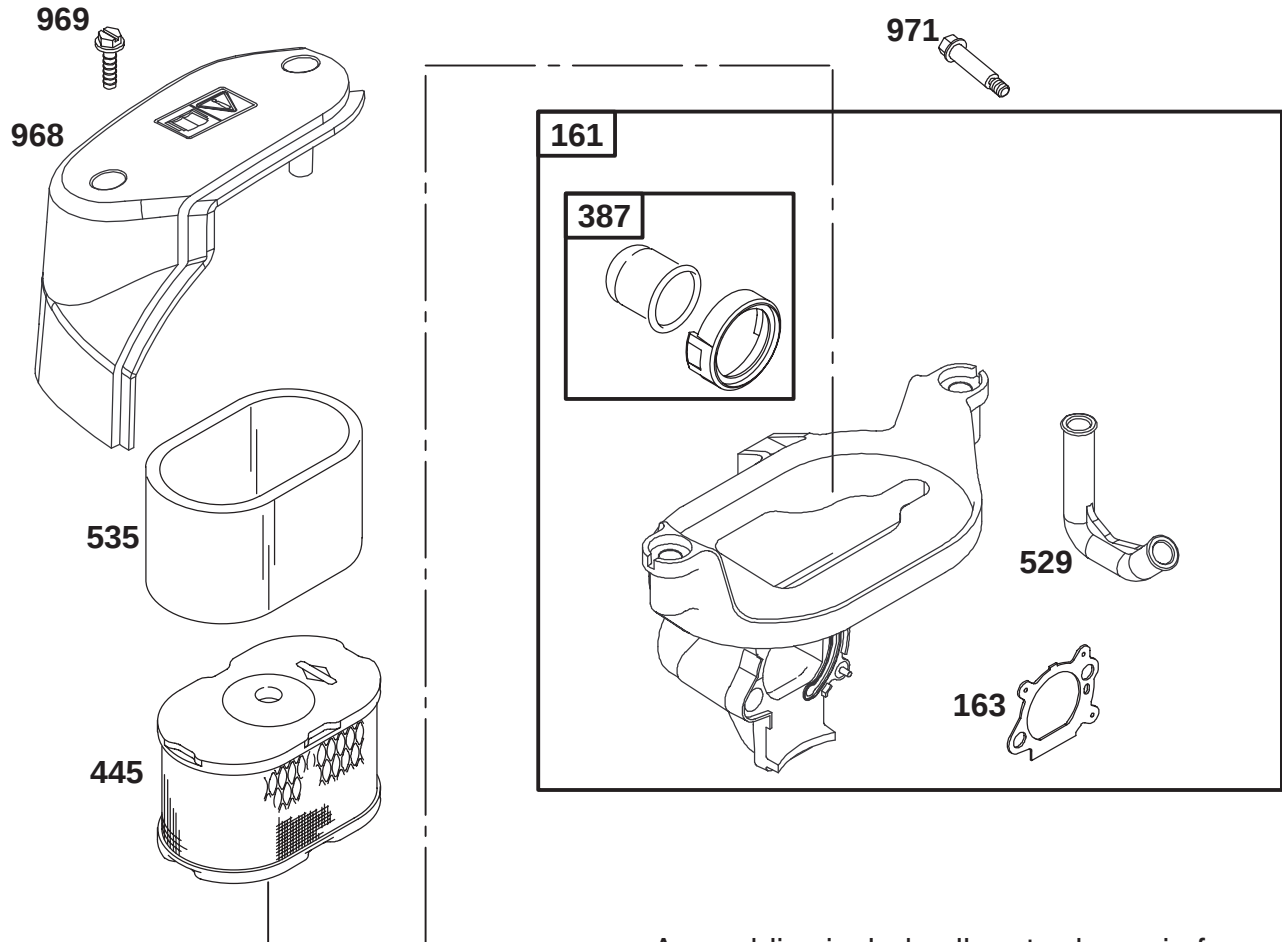

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
161	497915	Base — Air Cleaner	1
★●163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
445	497725	Filter — Air	1
529	281556	Grommet — Breather	1


Ref. No.	Part No.	Description	No. Used
535	273185	Filter — Air	1
968	281535	Cover — Air Cleaner	1
969	94777	Screw — Cover Mtg.	1
971	94655	Screw — Air Cleaner	1

★ Included in Gasket Set—Part No. 497316.

● Included in Carburetor Kit—Part No. 498260.


3319-280

 OBTAIN PARTS FROM BRIGGS & STRATTON

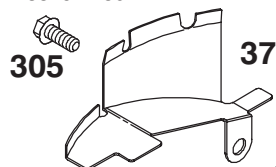

305

 
304

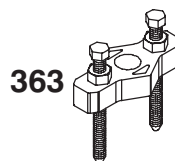


363



 
332

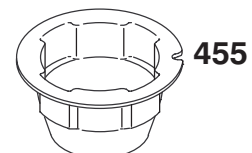

455

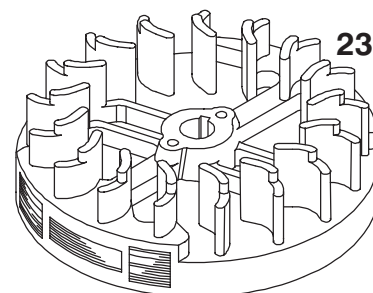 


23

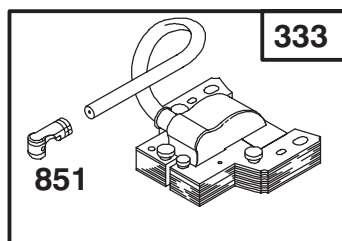 

851

333

 334




356

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
304	493293	Housing – Blower	1
305	94744	Screw – Sem	1
332	92284	Nut – Flywheel	1
333	802574	Armature – Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw – Sem	1
356	398808	Wire – Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup – Starter	1
851	493880	Terminal – Ignition Cable	1

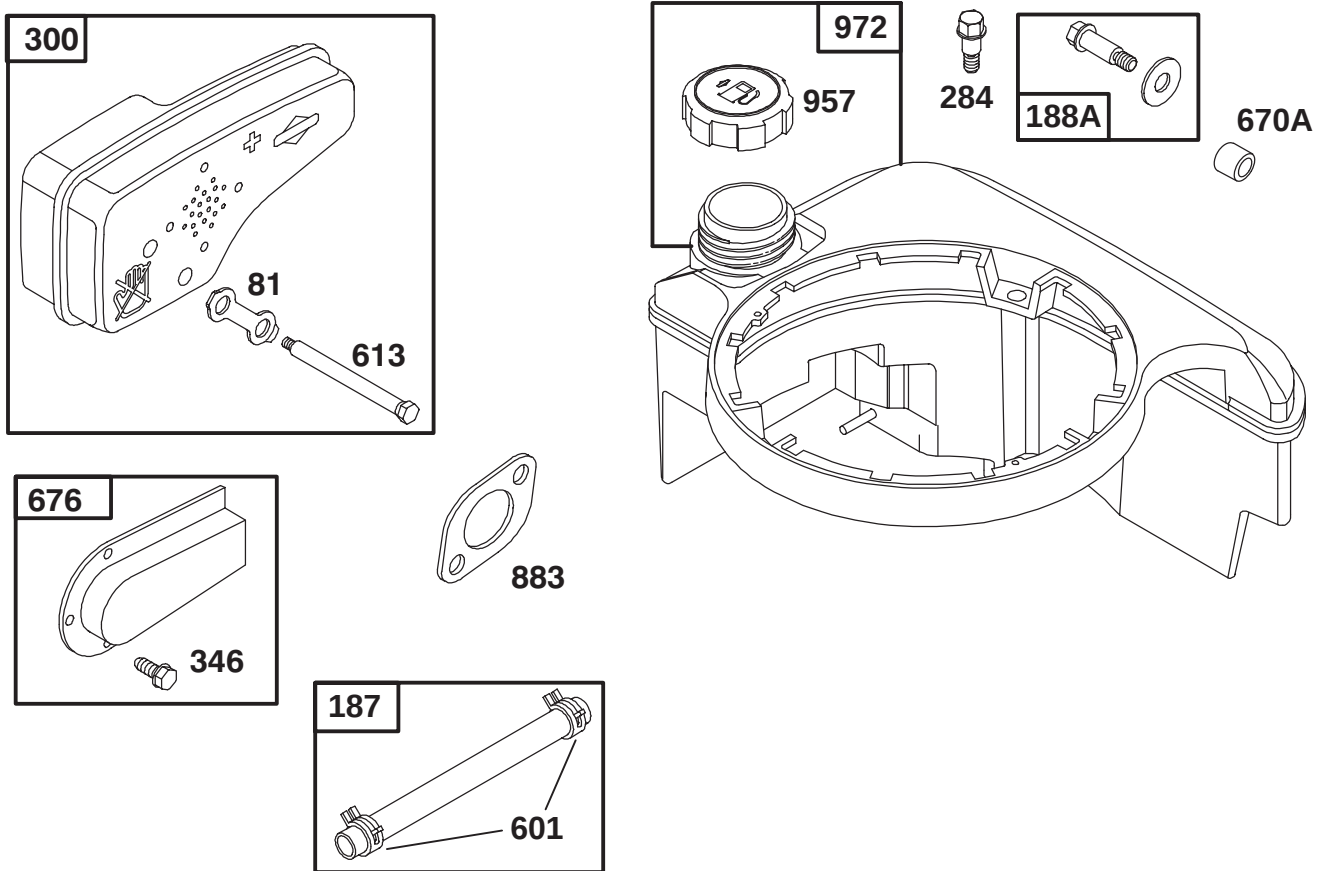 

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188A	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	94896	Screw – Hex. Head	1
601	93053	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★Ø883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

★ Included in Gasket Set—Part No. 497316.

 Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

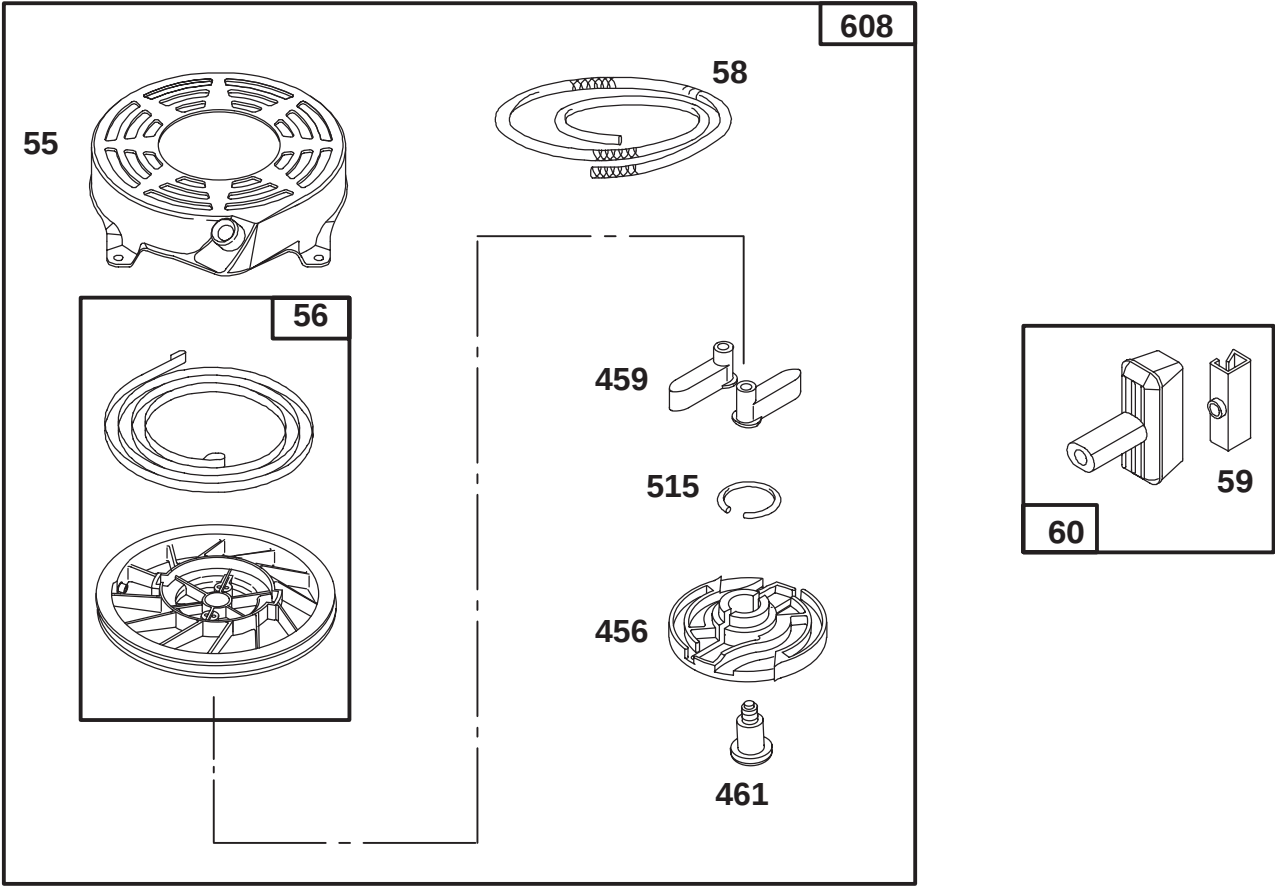


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Rewind Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1
59	T224467	Insert – Starter Grip	1
60	T493926	Handle – Rewind Starter	1
456	281503	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	281505	Pawl – Starter	1
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter Assy. – Rewind Includes: 94904 Screw – Hex. Head 94908 Nut – Hex.	1 1 1

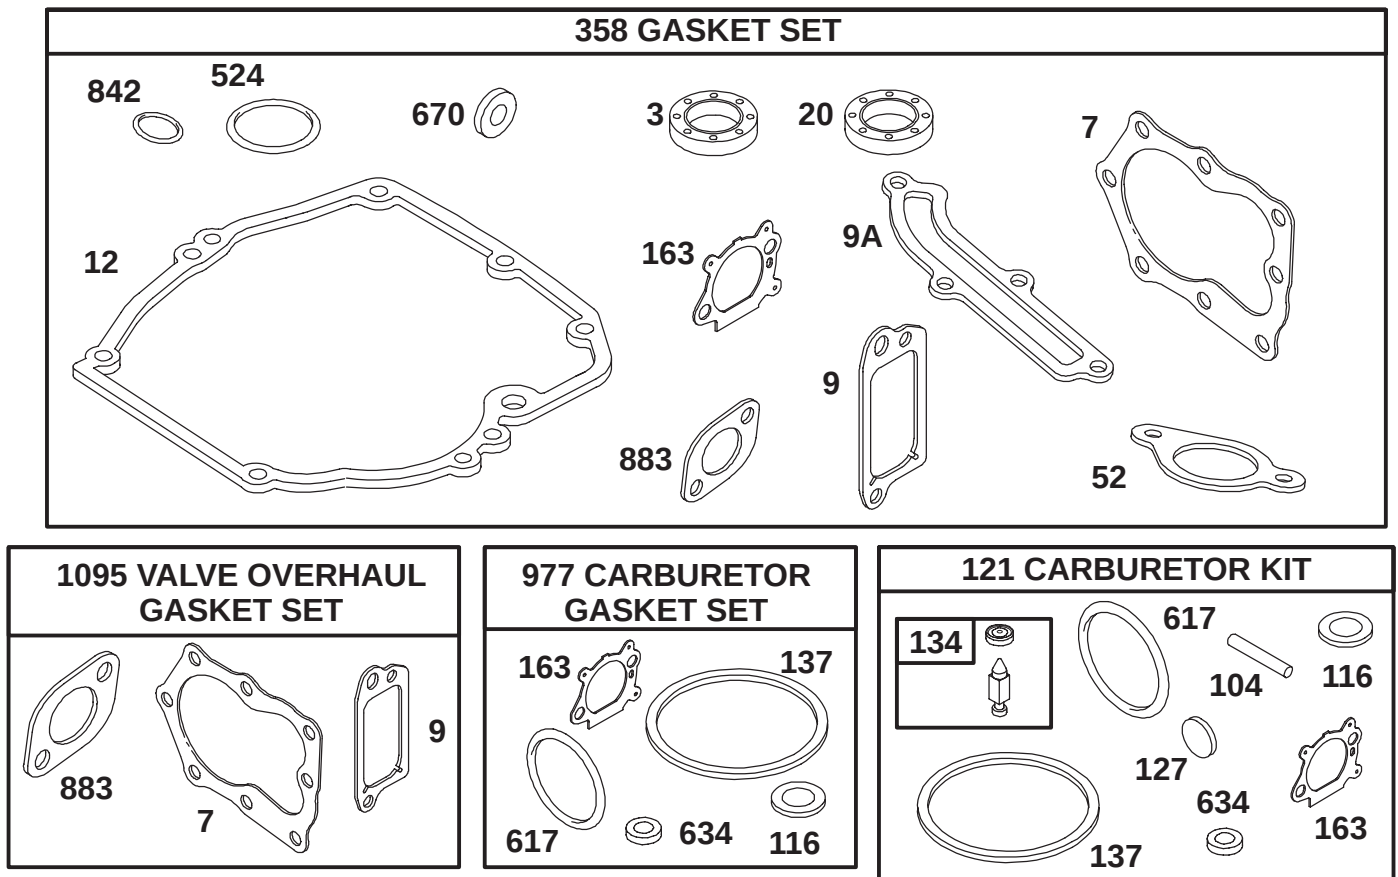 

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★Ø7	272916	Gasket – Cylinder Hd.	1
★Ø9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only)	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1
●134	T398188	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★●◆163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★670	493823	Spacer – Bracket	2
★842	280966	Seal – O-Ring	1
★Ø883	272253	Gasket – Exhaust	1
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
146046	Plate – Blade Driver	5 2 1	92–8890	Bag – Grass	8 3 1
612079	Blade – 48cm	5 3 1	92–9300	Spring – Counterbalance	6 12 1
16–8889	Housing	3 28 1	92–9301	Rod – Link	6 17 1
17–1569	Door – Discharge	3 13 1	92–9304	Pivot – Front	3 22 1
26–0670	Bolt – Blade	5 6 1	92–9305	Arm – Pivot	6 7 1
40–1940	Washer	6 9 2	92–9313	Spacer – Door	3 15 2
40–1940	Washer	3 24 2	92–9315	Cable – Flywheel Brake	7 8 1
63–8590	Screw	6 4 2	93–4105	Decal – Danger	3 1 1
65–5210	Screw – Thread Forming	3 7 2	93–4379	Cable Throttle	7 7 1
71–3750	Ramp – Grass Bag	8 1 1	93–7159	Knob	7 11 4
71–7770	Plate – Securing Rear	6 14 2	93–7161	Spacer – Handle	3 16 2
71–7840	Rod – Trigger	6 1 1	93–7162	Spacer – Handle	3 17 2
71–7860	Grip – Upper	3 8 1	93–7383	Guide – Rope	7 4 1
71–7870	Grip – Lower	3 3 1	93–8470	Screw – Clamp	4 6 1
71–7900	Cap – L.H. Hinge Bolt	3 11 1	95–0656	Applique – Shroud	4 4 1
71–7910	Cap – R.H. Hinge Bolt	3 6 1	95–1704	Shroud – Engine	4 2 1
71–7920	Cover – Belt	3 29 1	95–1707	Screw – Air Cleaner	4 10 3
71–7930	Trigger – HOC	3 5 1	95–1709	Cover	4 9 1
71–7980	Indicator – H.O.C.	6 16 1	95–5910	Decal – Recoil	4 3 1
71–7990	Ramp – Discharge	3 18 1	2210–249	Clamp – Casing	4 5 1
71–8060	Spring – Trigger Retainer	6 3 2	2210–316	Rope – Stop	4 8 1
71–8080	Saddle – H.O.C.	6 6 1	321–49	Screw – HH	7 9 1
71–8180	Frame	8 2 1	321–53	Screw – HH	7 5 1
71–8830	Retainer – Shaft	3 21 2	3253–22	Washer – Lock	5 5 1
71–9840	Spring – Door	3 12 2	3253–33	Washer – Lock	7 12 4
92–1002	Bail – Flywheel Brake	7 2 1	3284–5	Pin – Groove	3 4 1
92–1057	Bolt – Shoulder	6 10 2	3290–378	Tie – Cable	7 10 1
92–5412	Stop – Pivot	7 3 1	3296–59	Nut – Lock	6 8 2
92–7887	Screw – Mtg	4 7 2	3296–73	Nut – Lock Insert	7 6 2
92–8626	Spacer – Blade	5 4 1	32112–1	Nut – Push	3 20 1
92–8800	Handle	7 1 1	32112–13	Nut – Push	6 5 1
92–8806	Screw – Hex Hd. Cap	3 10 2	32144–4	Screw – Tapping	6 13 4
92–8807	Hub – Blade Driver	5 1 1	32144–4	Screw – Tapping	3 19 8
92–8810	Wheel & Tire Assembly	3 25 2	32144–31	Screw – Tapping	6 2 1
92–8811	Bolt – Wheel	3 26 2	32144–70	Screw – Tapping	3 2 1
92–8818	Screw – Hex Hd. Cap	3 30 2	32144–97	Screw – Pan Hd. Phillips	3 9 2
92–8819	Nut – Lock	3 23 2	32144–102	Screw	4 11 3
92–8834	Decal – Deck 400XP	3 27 1	32151–93	Ring – Grip	6 15 1
92–8887	Wheel & Tire Assembly	6 11 2			

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.