

LAWN-BOY®

48cm REAR BAGGING MOWER

MODEL NO. 10910—7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.


To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

 
Description	Page	Description	Page
Housing Assembly	3	Handle Assembly	8
Engine Assembly	4	Bag Assembly	9
Blade Assembly	5	Engine Breakdown	10–18
Rear Axle Assembly	6	Numeric Parts Index	19
Gear Case Assembly	7		

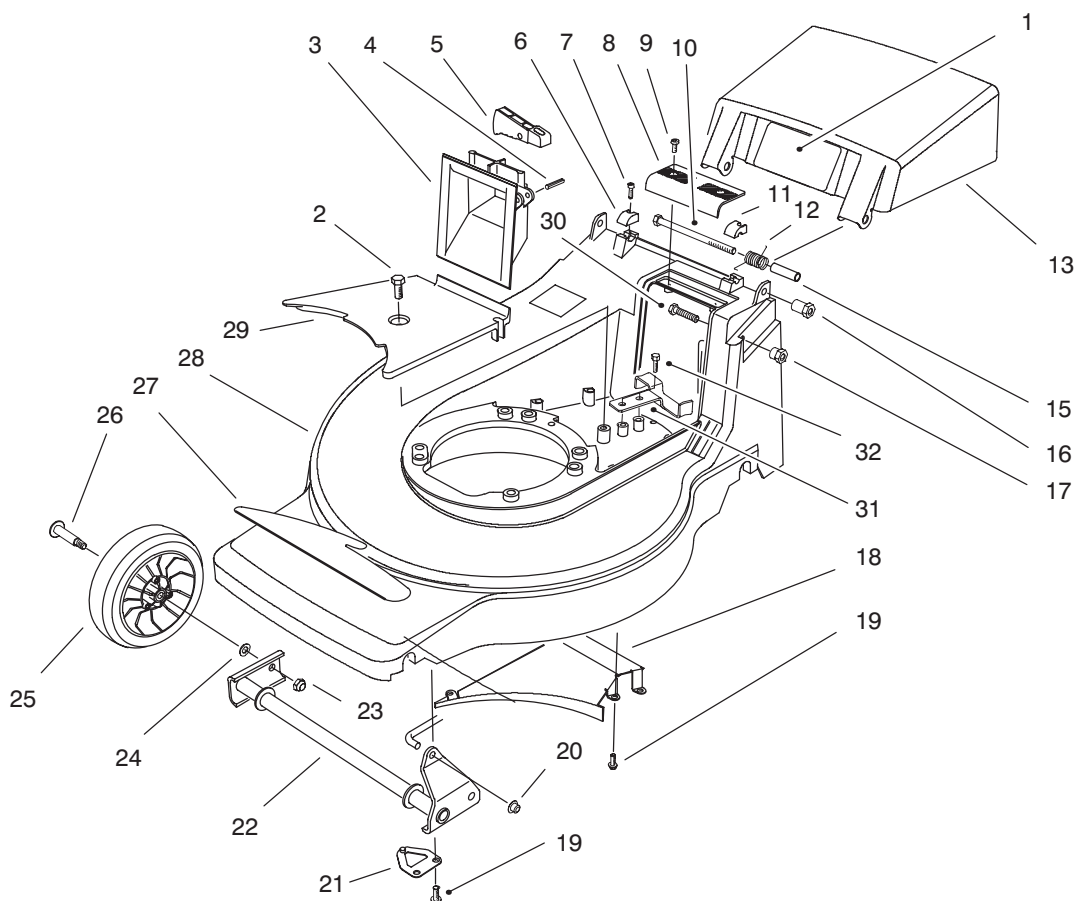

C-2667

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4105	Decal - Danger	1	18	71-7990	Ramp - Discharge	1
2	32144-70	Screw - Tapping	1	19	32144-4	Screw - Tapping	8
3	71-7870	Grip - Lower	1	20	32112-1	Nut - Push	1
4	3284-5	Pin - Groove	1	21	71-8830	Retainer - Shaft	2
5	71-7930	Trigger - HOC	1	22	92-9304	Pivot - Front	1
6	71-7910	Cap - R.H. Hinge Bolt	1	23	92-8819	Nut - Lock	2
7	65-5210	Screw - Thread Forming	2	24	40-1940	Washer	2
8	71-7860	Grip - Upper	1	25	92-8810	Wheel & Tire Assembly	2
9	32144-97	Screw - Pan Hd. Phillips	2	26	92-8811	Bolt - Wheel	2
10	92-8806	Screw - Hex Hd. Cap	2	27	92-8835	Decal - Deck 400XP	1
11	71-7900	Cap - L.H. Hinge Bolt	1	28	16-8889	Housing (Incl. Ref. #27)	1
12	71-9840	Spring - Door	2	29	71-7920	Cover - Belt	1
13	17-1569	Door - Discharge (Incl. Ref. # 1)	1	30	92-8818	Screw - Hex Hd. Cap	2
15	92-9313	Spacer - Door	2	31	71-7890	Guide - Belt Rear	1
16	93-7161	Spacer - Handle	2	32	32144-4	Screw - HH	2
17	93-7162	Spacer - Handle	2				

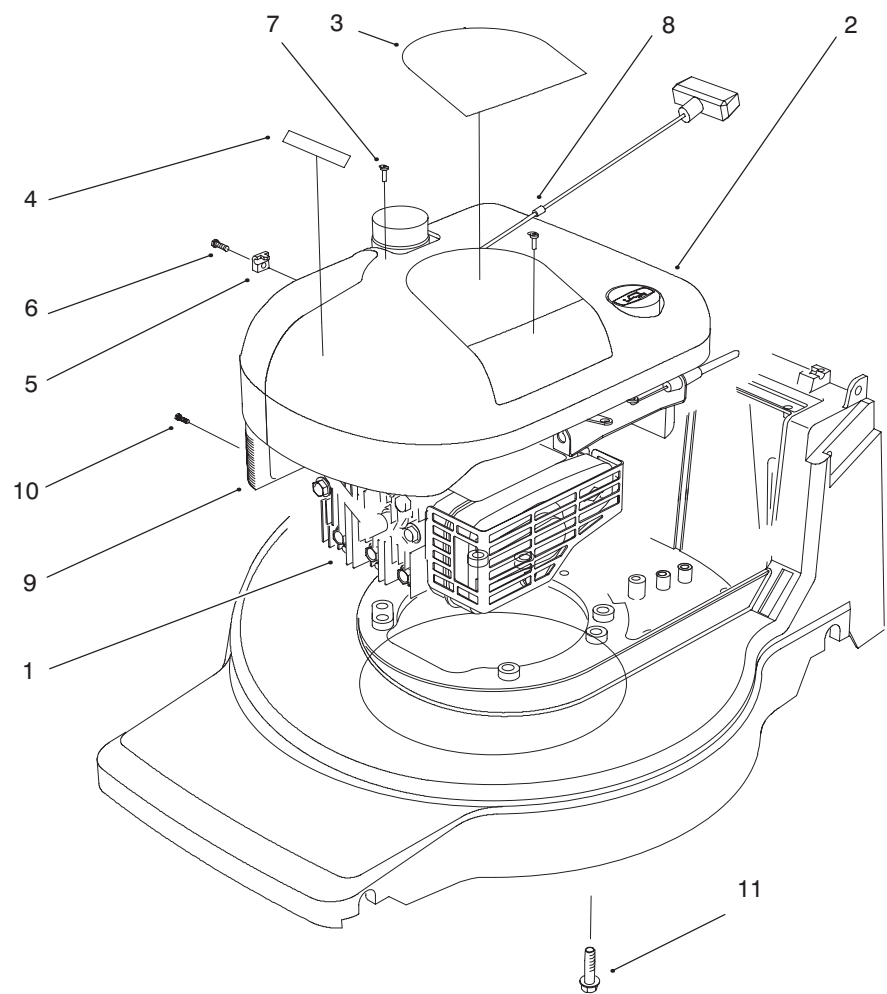 


C-2668

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine	1
2	95-1704	Shroud - Engine	1
3	95-5910	Decal - Recoil	1
4	95-0656	Applique - Shroud	1
5	2210-249	Clamp - Casing	1
6	93-8470	Screw - Clamp	1


Ref. No.	Part No.	Description	No. Used
7	92-7887	Screw - Mtg	2
8	2210-316	Rope - Stop	1
9	95-1709	Cover	1
10	95-1707	Screw - Air Cleaner	3
11	32144-102	Screw	3

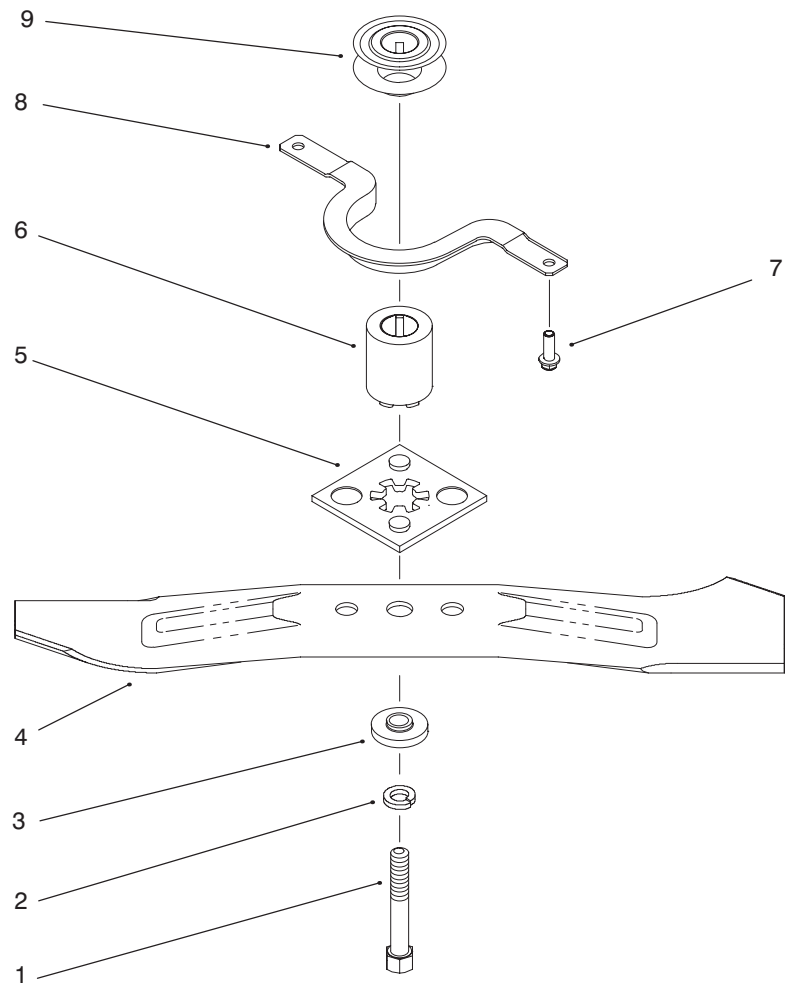 

C-2685

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	26-0670	Bolt – Blade	1	6	92-8807	Hub – Blade Driver	1
2	3253-22	Washer – Lock	1	7	32144-4	Screw – HH Tap	2
3	92-8626	Spacer – Blade	1	8	71-7960	Guide – Belt Engine	1
4	612079	Blade 19"	1	9	93-0278	Pulley – Driver	1
5	146046	Plate – Blade Driver	1				

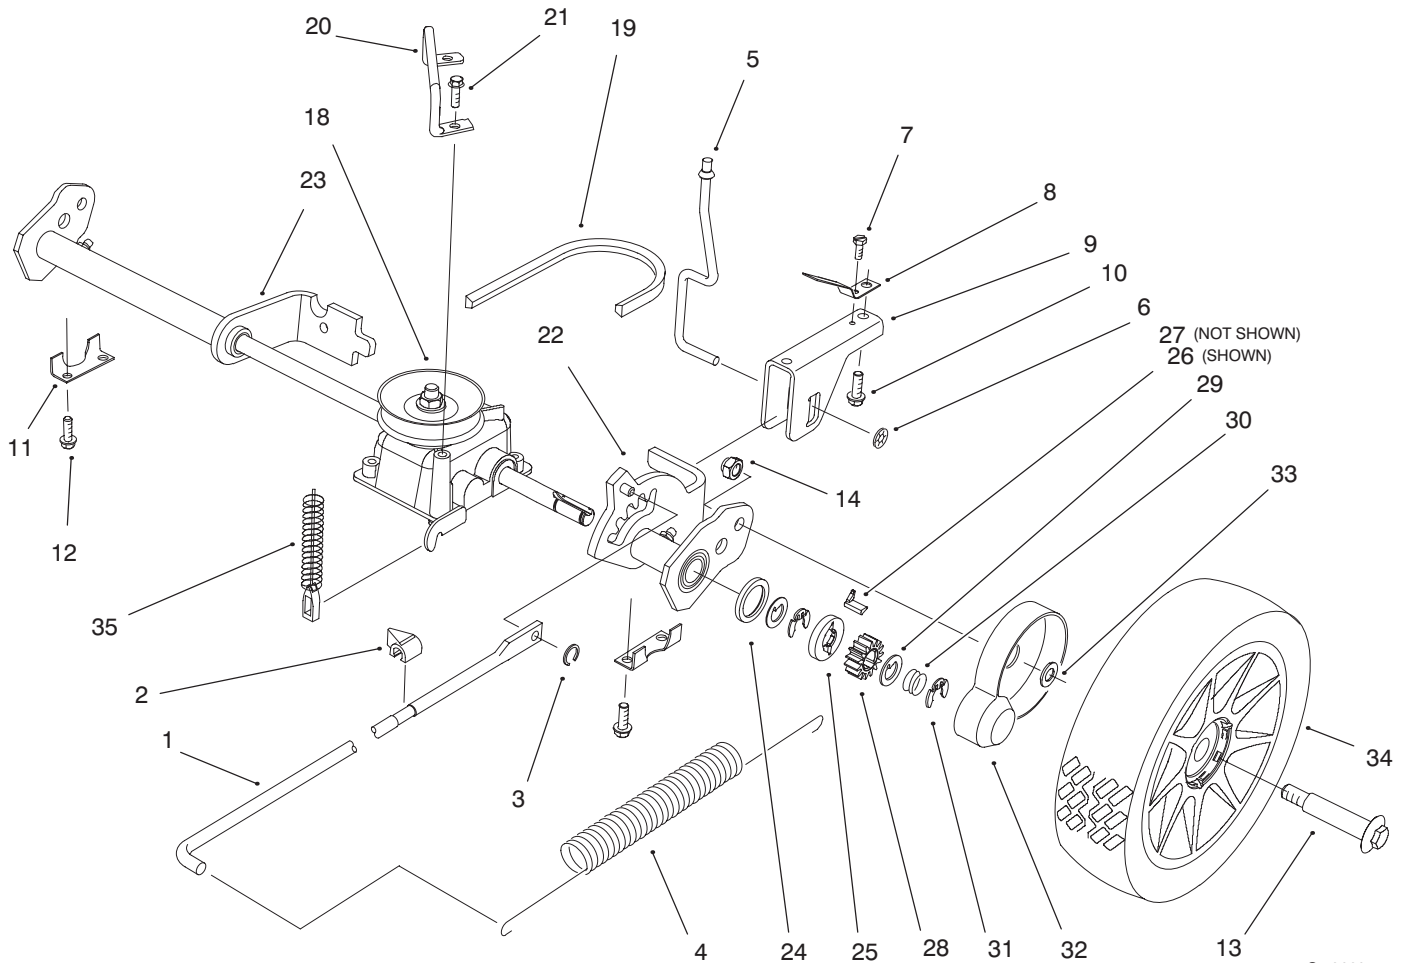 


C-2669

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-9301	Rod -Link	1
2	71-7980	Indicator - HOC	1
3	32151-93	Ring - Grip	1
4	92-9300	Spring - Counterbalance	1
5	71-7840	Rod -Trigger	1
6	32112-13	Nut - Push	1
7	32144-31	Screw	1
8	71-8060	Spring - Trigger Retainer	2
9	71-8080	Saddle - HOC	1
10	63-8590	Screw	2
11	71-7770	Plate - Securing	2
12	32144-4	Screw-HH Tap	4
13	92-1057	Bolt - Shoulder	2
14	3296-59	Nut-Lock	2
18	71-9600	Gear Case Assembly	1
19	71-9450	V-Belt	1

Ref. No.	Part No.	Description	No. Used
20	95-2740	Retainer - Belt	1
21	32144-4	Screw - HH Tap	2
22	92-9311	Pivot Arm Assembly LH	1
23	92-9310	Pivot Arm Assembly RH	1
24	65-4710	Ring - Friction	2
25	65-4760	Washer	2
26	66-6050	Key - Rocking LH	1
27	66-6040	Key - Rocking RH	1
28	65-4750	Gear - Pinion	2
29	65-4740	Washer - Thrust	4
30	65-4720	Spring - Compression	2
31	65-2720	Ring - Retaining	4
32	74-1660	Cover - Wheel	2
33	74-1670	Spacer - Wheel	2
34	92-9318	Wheel & Tire Assembly	2
35	71-8310	Spring - Compression	1

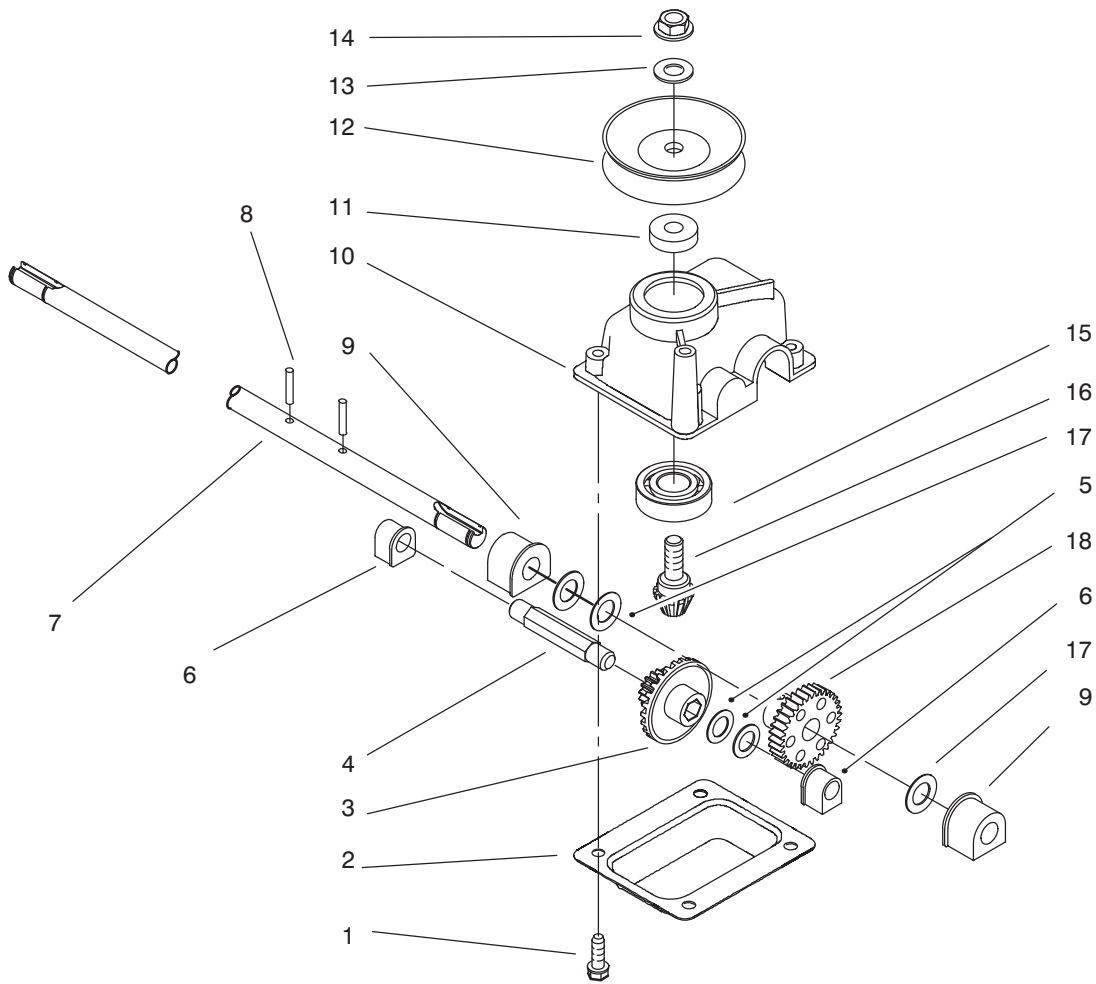 


C-1292

GEAR CASE ASSEMBLY #71-9600

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	71-9620	Shaft - Output	1
8	32121-114	Pin - Groove	2
9	60-8850	Bushing - Output	2
10	614578	Cover - Gear Case	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
1*	71-9600	Gear Case Ass'y Complete	1

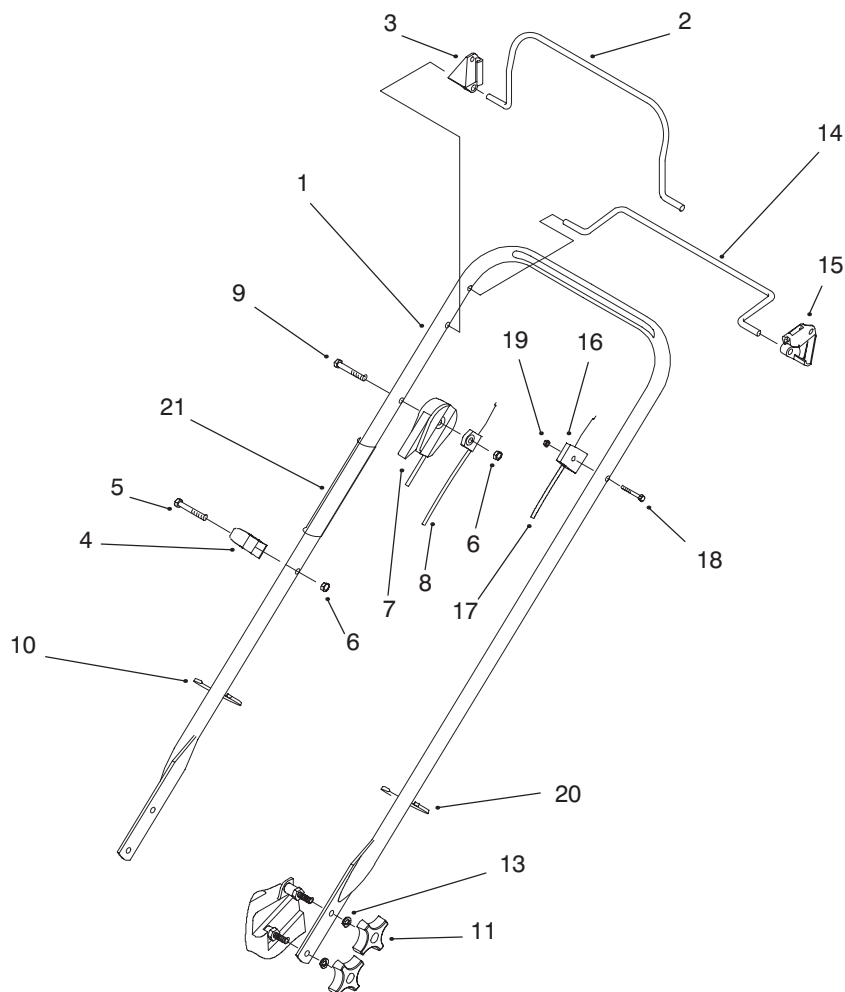 


C-2670

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-8800	Handle	1
2	92-1002	Bail - Flywheel Brake	1
3	92-5412	Stop - Pivot	1
4	93-7383	Guide - Rope	1
5	321-53	Screw - HH	1
6	3296-73	Nut - Lock Insert	2
7	93-4379	Cable Throttle	1
8	92-9315	Cable - Flywheel Brake	1
9	321-49	Screw - HH	1
10	3290-378	Tie - Cable	1

Ref. No.	Part No.	Description	No. Used
11	93-7159	Knob	4
13	3253-33	Washer - Lock	4
14	92-1001	Bail - Control	1
15	92-5412	Stop - Pivot	1
16	92-7729	Anchor - Cable	1
17	92-9316	Cable Traction	1
18	321-48	Screw - HH	1
19	3296-73	Nut - Lock (Insert)	1
20	3290-378	Tie - Cable	1
21	93-7266	Decal - Operation	1

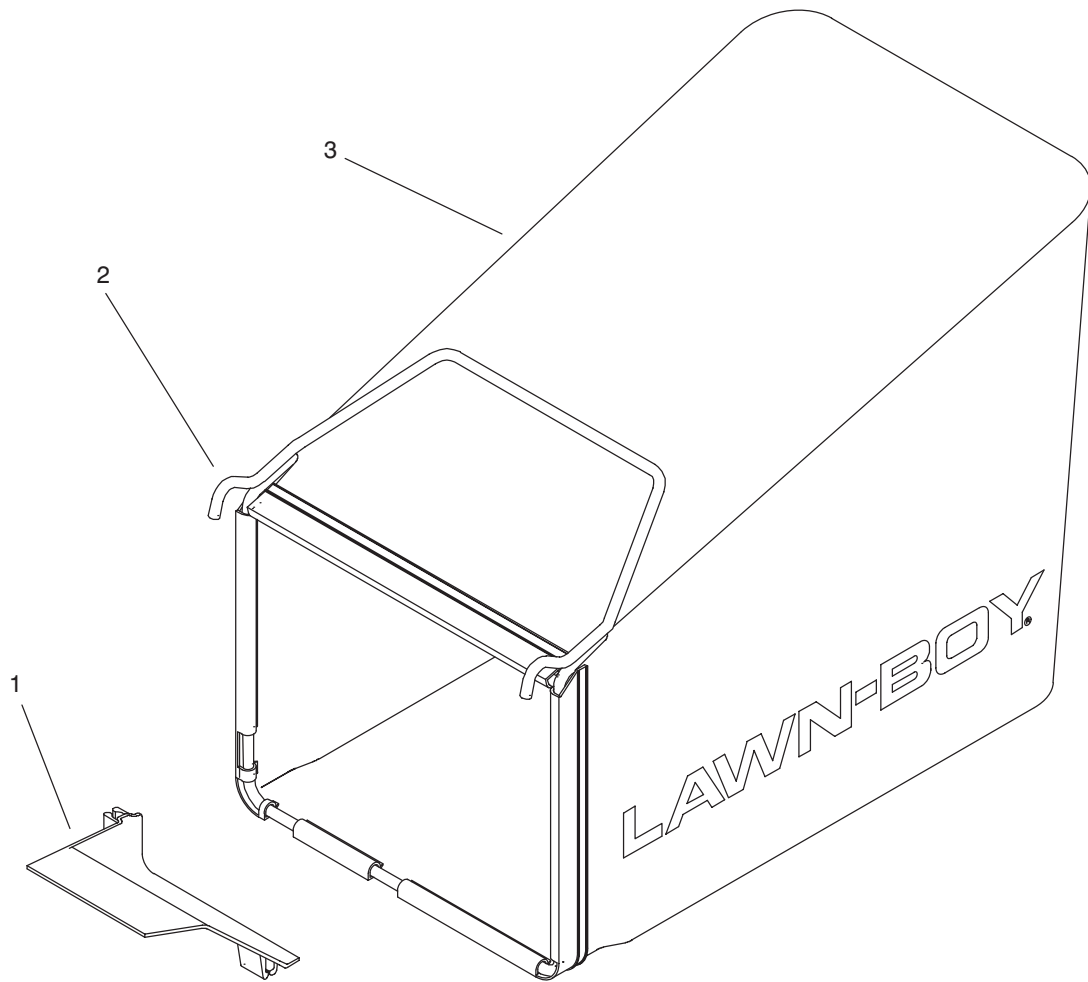 


C-1890

BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-3750	Ramp - Grass Bag	1
2	71-8180	Frame	1

Ref. No.	Part No.	Description	No. Used
3	92-8890	Bag - Grass	1

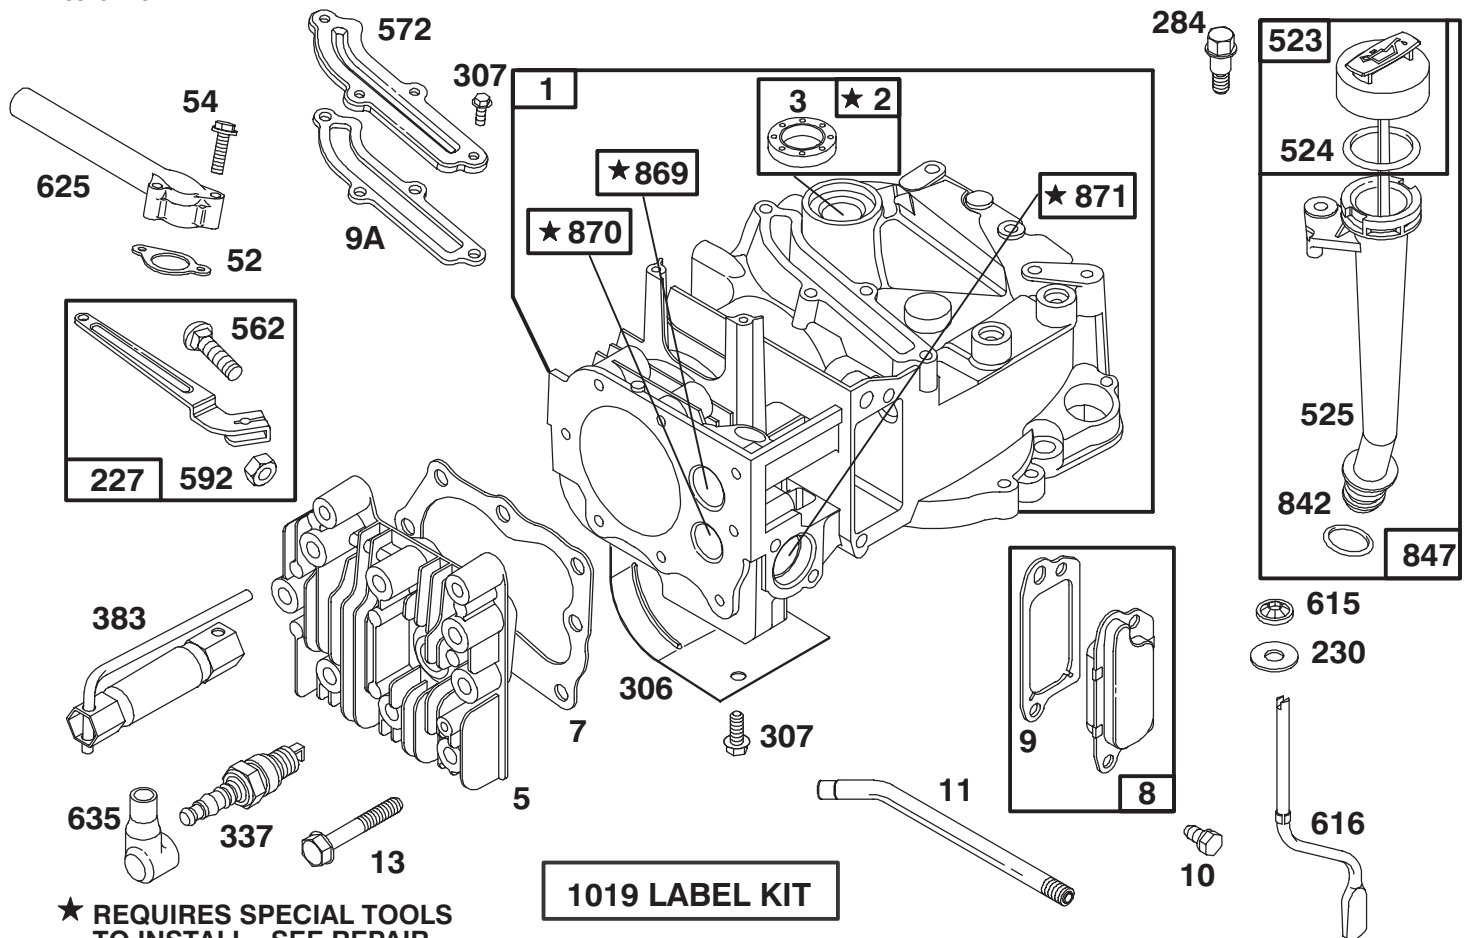 

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

1019 LABEL KIT

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing — Cylinder	1
★3	299819	Seal — Oil	1
5	214626	Head — Cylinder	1
★Ø7	272916	Gasket — Cylinder Head	1
8	495786	Breather — Valve Chamber	1
★Ø9	272481	Gasket — Breather	1
★9A	272238	Gasket — Baffle Plate	1
10	94650	Screw — Breather Mtg.	1
11	231933	Tube — Breather	1
13	94547	Screw — Cylinder Head	1
★52	272199	Gasket — Intake Elbow	1
54	94526	Screw — Intake Elbow Mtg.	1
227	492349	Lever Assembly — Gov.	1
230	67072	Washer — Gov. Crank	1
284	94511	Screw — Hex. Head	1
306	224324	Shield — Cylinder	1
307	94515	Screw — Hex. Head	1
337	802592	Plug — Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench — Spark Plug	1
523	495264	Cap With Dipstick — Oil Filler	1
★524	280393	Seal — Filler Tube	1
525	495265	Tube — Oil Filler	1
562	94852	Bolt — Carriage	1
572	224328	Baffle — Cylinder	1
592	231082	Nut — Hex.	1
615	94474	Fastener	1
616	263175	Crank — Governor	1
625	497465	Tube — Fuel Intake	1
635	66538	Elbow — Spark Plug	1
★842	280966	Seal — O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat — Intake Valve	1
870	213513	Seat — Exhaust Valve	1
871	262001	Guide — Exhaust Valve	1
Note: 63709 Guide—Intake Valve			1
1019	494256	Label Kit	1

★ Included in Gasket Set—Part No. 497316.

 Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

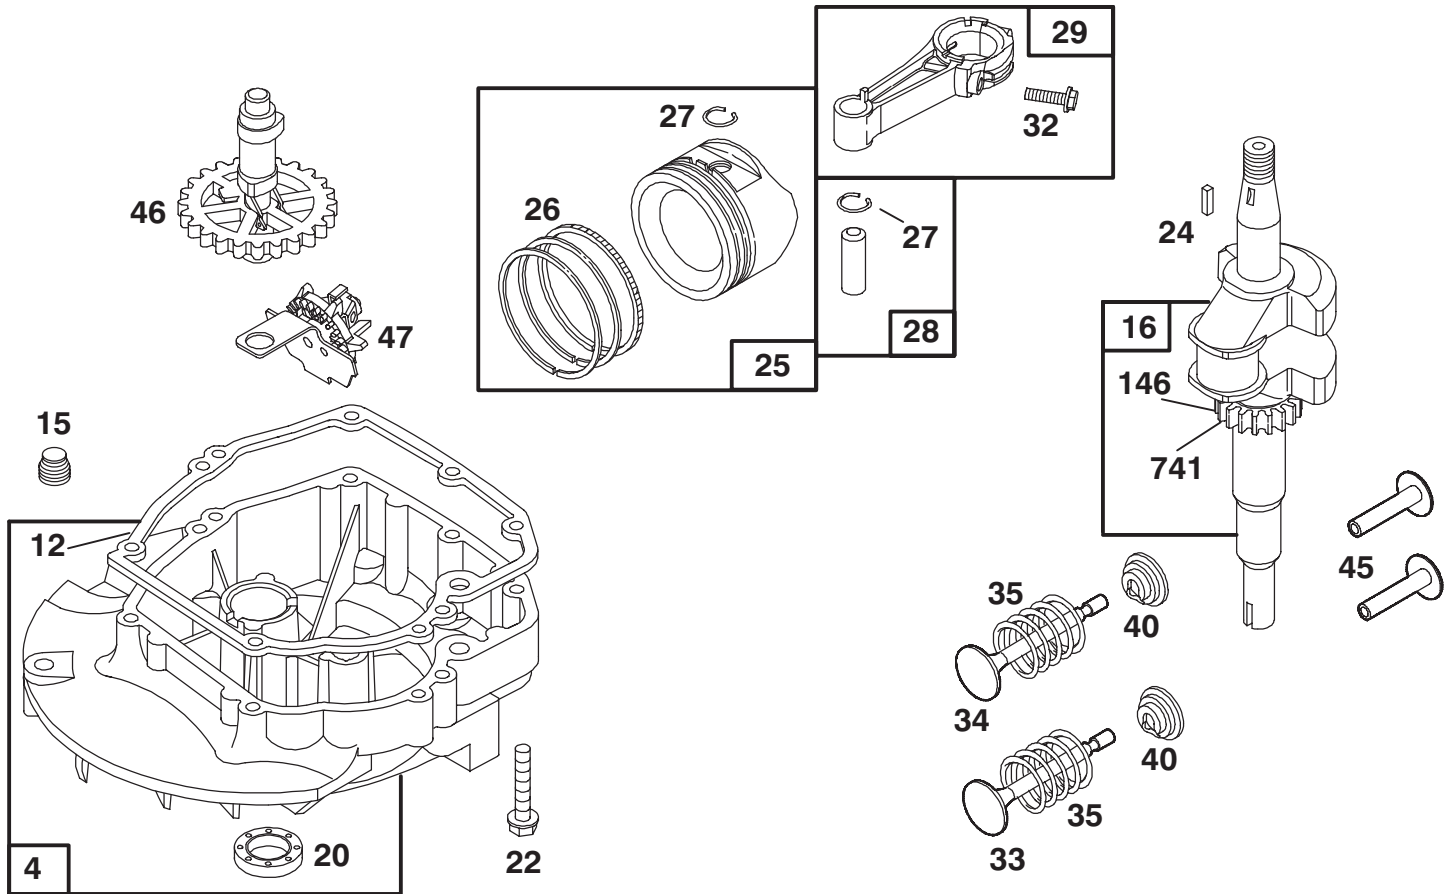


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1	27	26026	Lock – Piston Pin	1
★12	272198	Gasket – Crankcase	1	28	298909	Pin – Piston (Standard)	1
15	94720	Plug – Oil Drain	1		298908	Pin – Piston (.005" O.S.)	1
16	496809	Crankshaft	1	29	490566	Rod Assembly–Connecting	1
★20	399781	Seal – Oil	1			Note: For Connecting Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	1
22	94220	Screw – Hex. Head	1	32	94699	Screw – Connecting Rod	1
		Note: 94612 Screw – Hex. Head (One Used in Hole Nearest Breather)	1	33	262651	Valve – Exhaust	1
24	222698	Key – Flywheel	1	34	262652	Valve – Intake	1
25	493262	Piston Assy. (Standard)	1	35	262224	Spring – Valve	1
	493385	Piston Assy. (.010" O.S.)	1	40	93312	Retainer – Valve Spring	1
	493386	Piston Assy. (.020" O.S.)	1	45	262204	Tappet – Valve	1
	493387	Piston Assy. (.030" O.S.)	1	46	498275	Gear – Cam	1
26	493261	Ring Set (Standard)	1	47	493737	Slinger – Oil	1
	493388	Ring Set (.010" O.S.)	1	146	94388	Key – Timing	1
	493389	Ring Set (.020" O.S.)	1	741	262598	Gear – Timing	1
	493390	Ring Set (.030" O.S.)	1				

 ★ Included in Gasket Set–Part No. 497316.

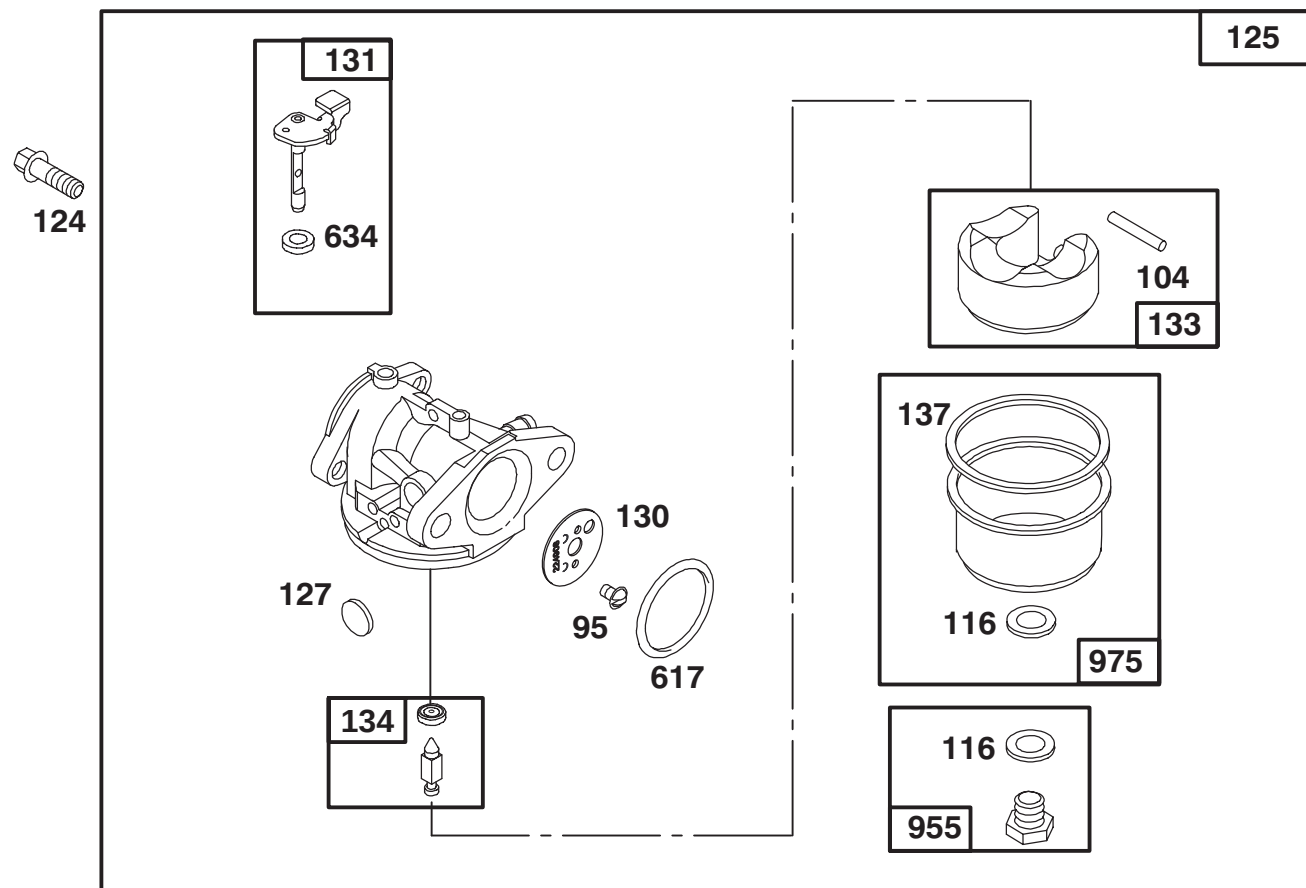


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
95	T94098	Screw – Throttle Valve Mtg.	1
●104	T231371	Pin – Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only)	1
124	94525	Screw – Carburetor Mtg.	1
125	498966	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1
131	T493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	T398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
955	498975	Screw – Bowl Mtg. (Std.) Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

 - Included in Carburetor Kit—Part No. 498260.
- ◆ Included in Carburetor Gasket Set—Part No. 498261.

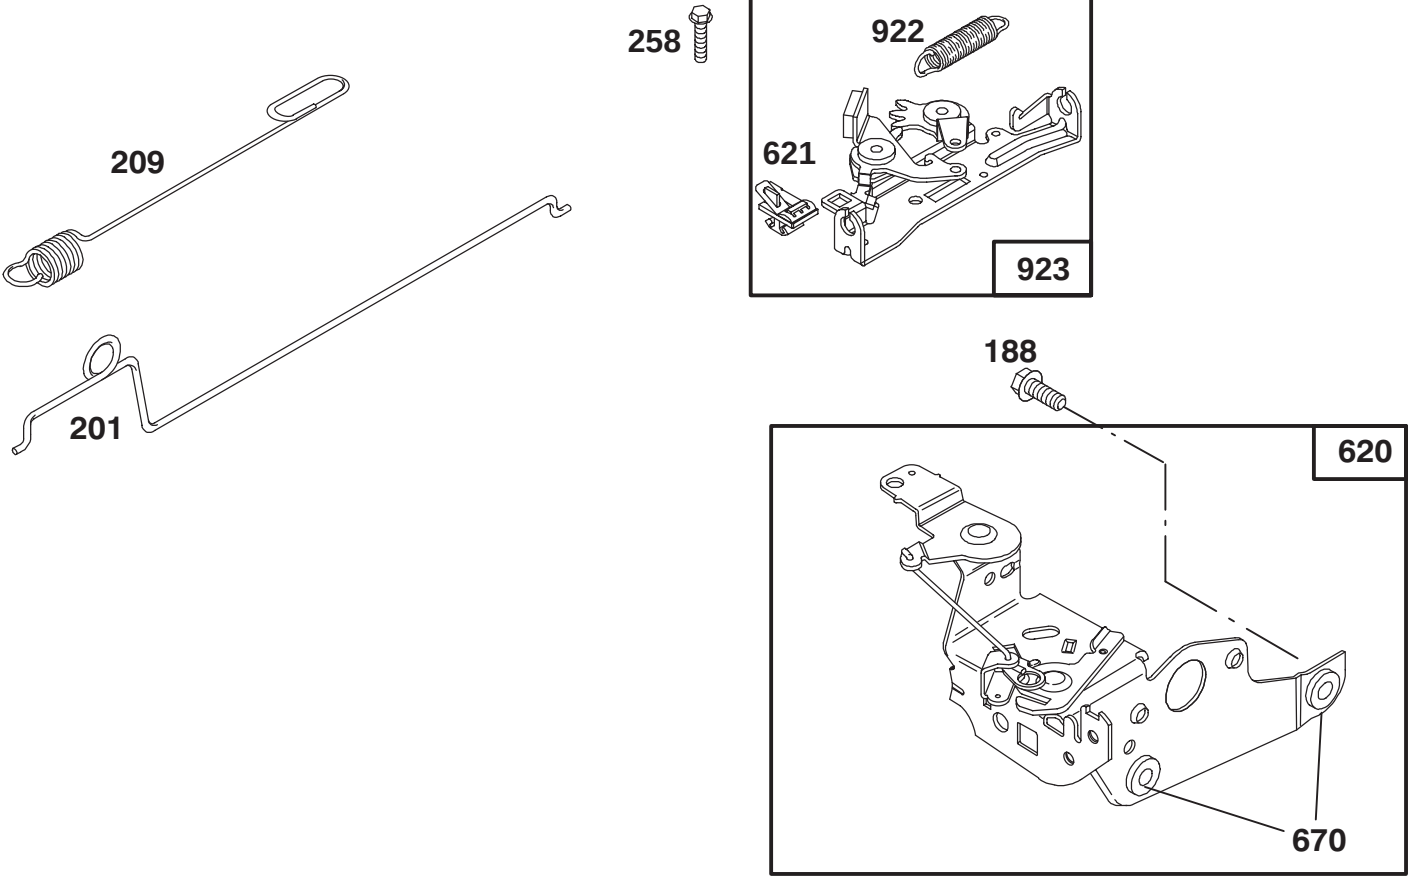


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497837	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket	2
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

 ★ Included in Gasket Set–Part No. 497316.

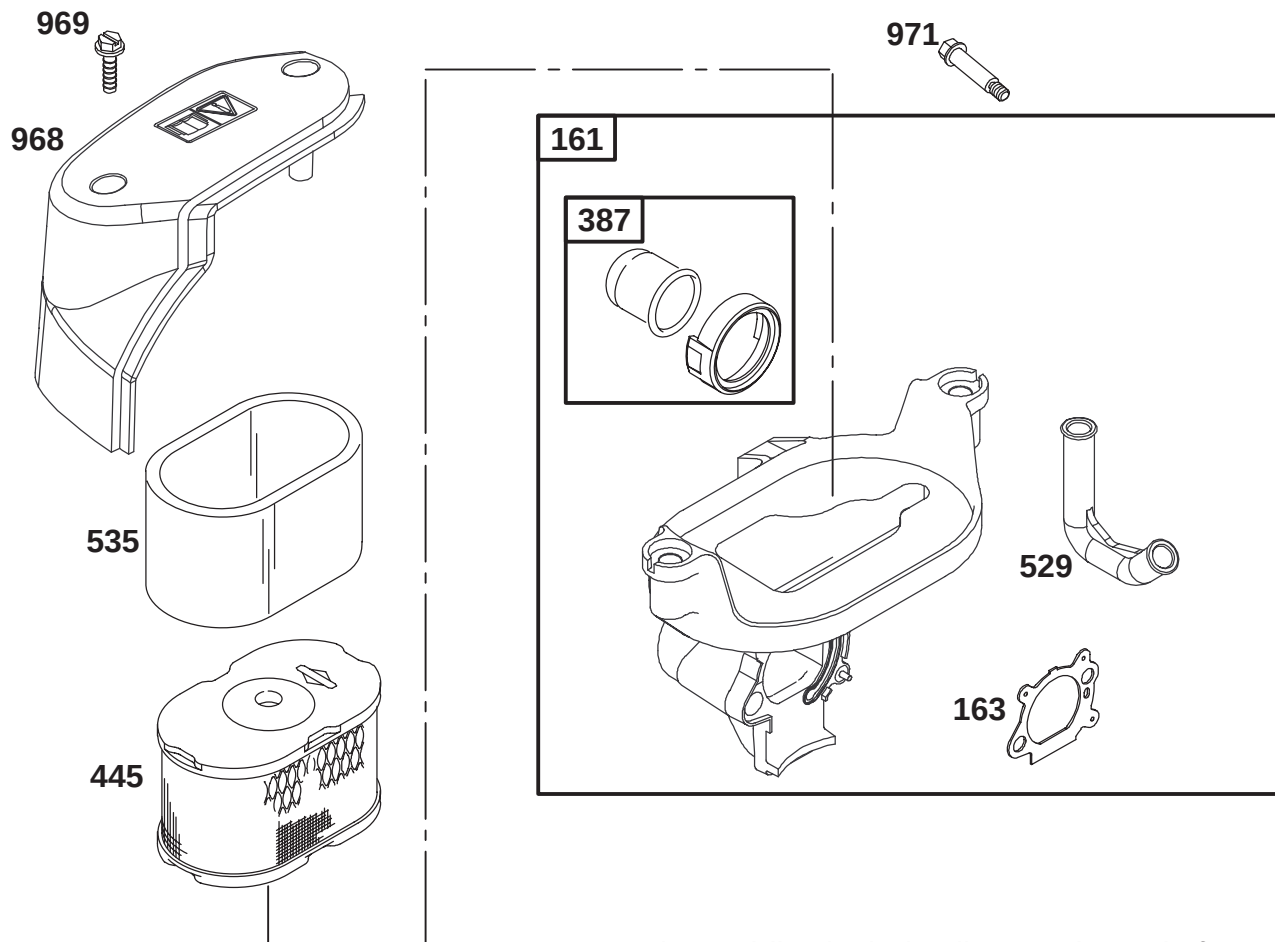

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
161	497915	Base - Air Cleaner	1
★●163	272653	Gasket - Air Cleaner	1
387	496115	Primer-Carburetor	1
445	497725	Filter - Air	1
529	281556	Grommet - Breather	1

Ref. No.	Part No.	Description	No. Used
535	273185	Filter - Air	1
968	281535	Cover - Air Cleaner	1
969	94777	Screw - Cover Mtg.	1
971	94655	Screw - Air Cleaner	1

★ Included in Gasket Set-Part No. 497316.

 ● Included in Carburetor Kit-Part No. 498260.

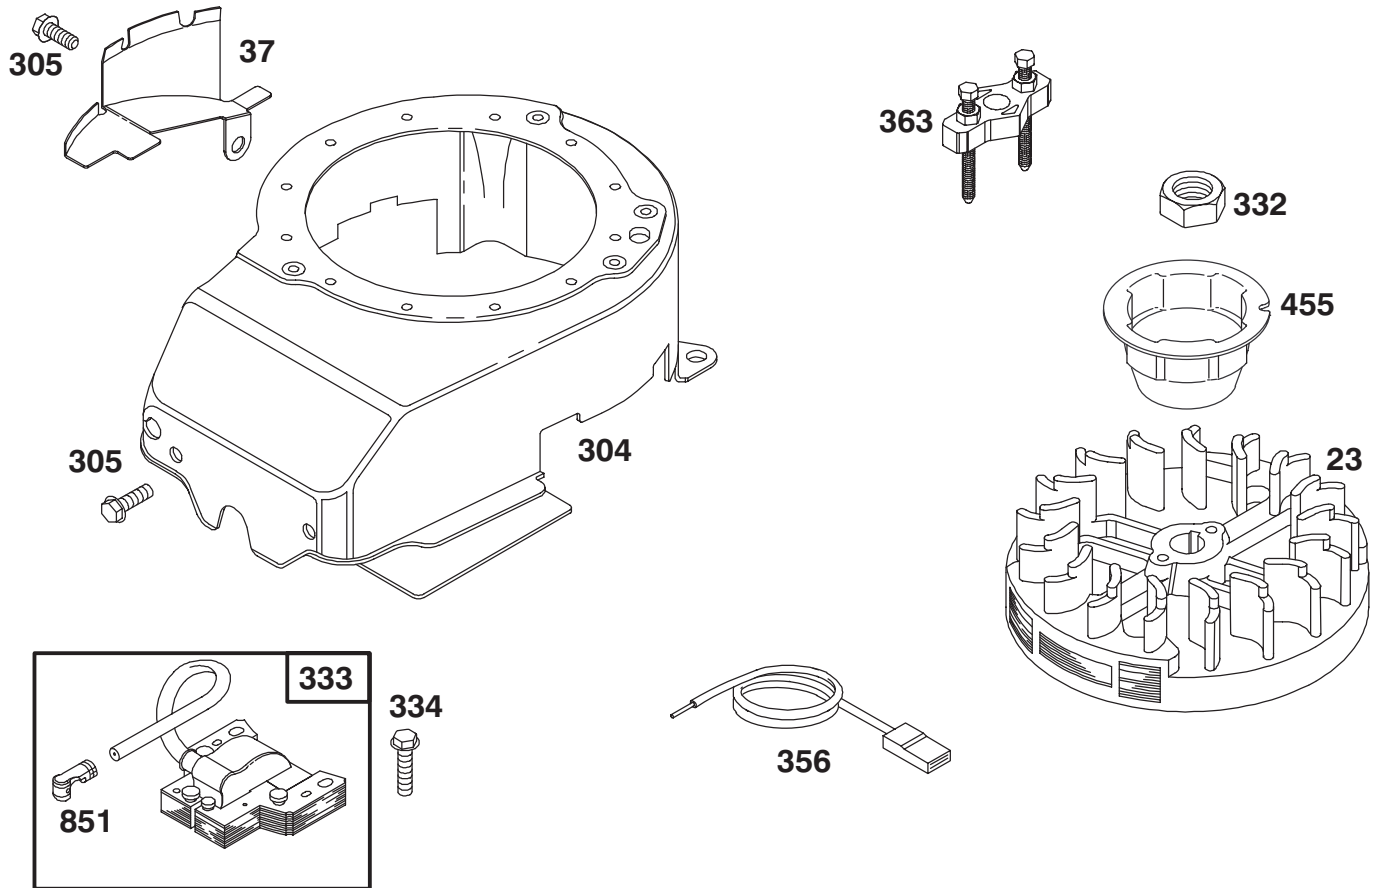


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
304	493293	Housing - Blower	1
305	94744	Screw - Sem	1
332	92284	Nut - Flywheel	1
333	802574	Armature - Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw - Sem	1
356	398808	Wire - Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1

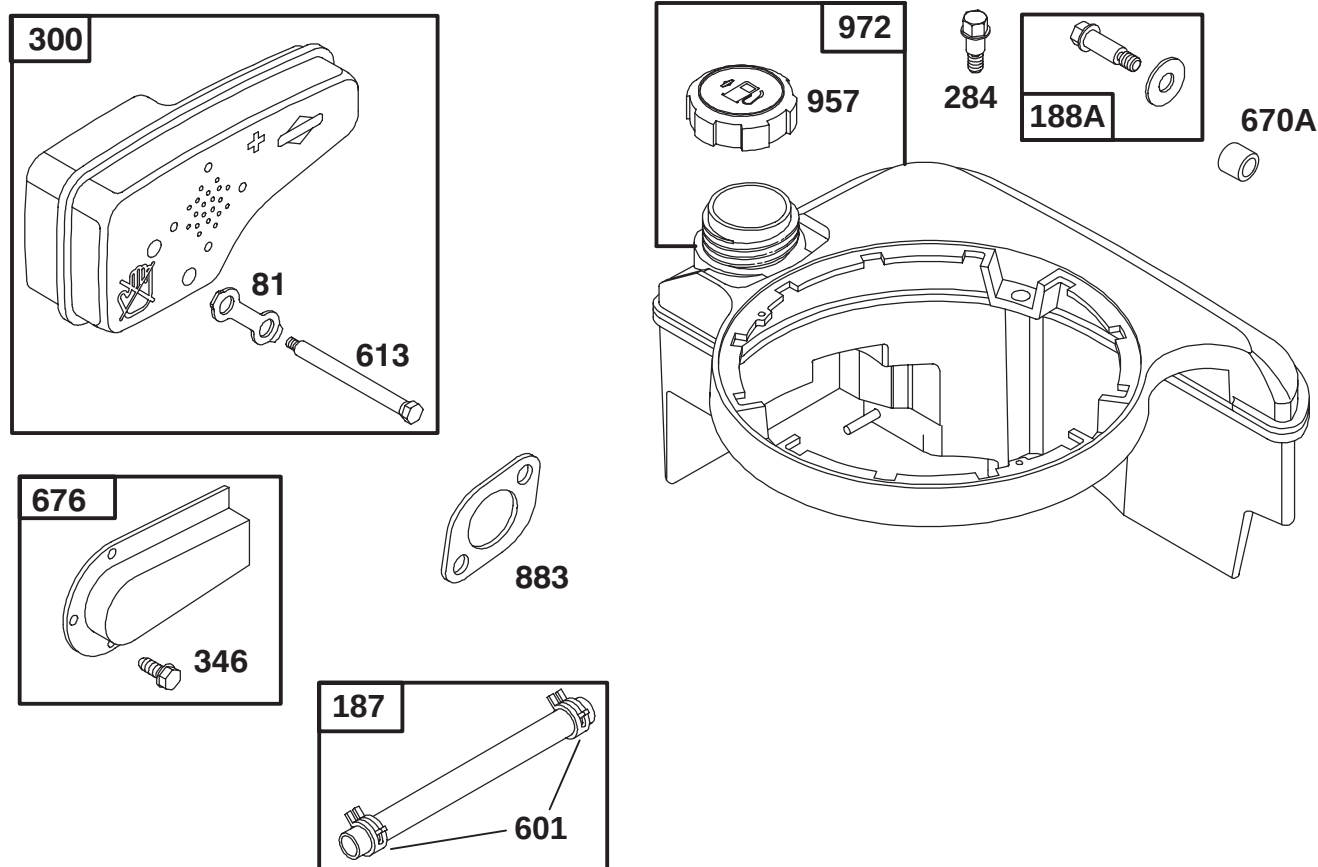 

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188A	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	94896	Screw – Hex. Head	1
601	93053	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★Ø883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

★ Included in Gasket Set—Part No. 497316.

 
Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

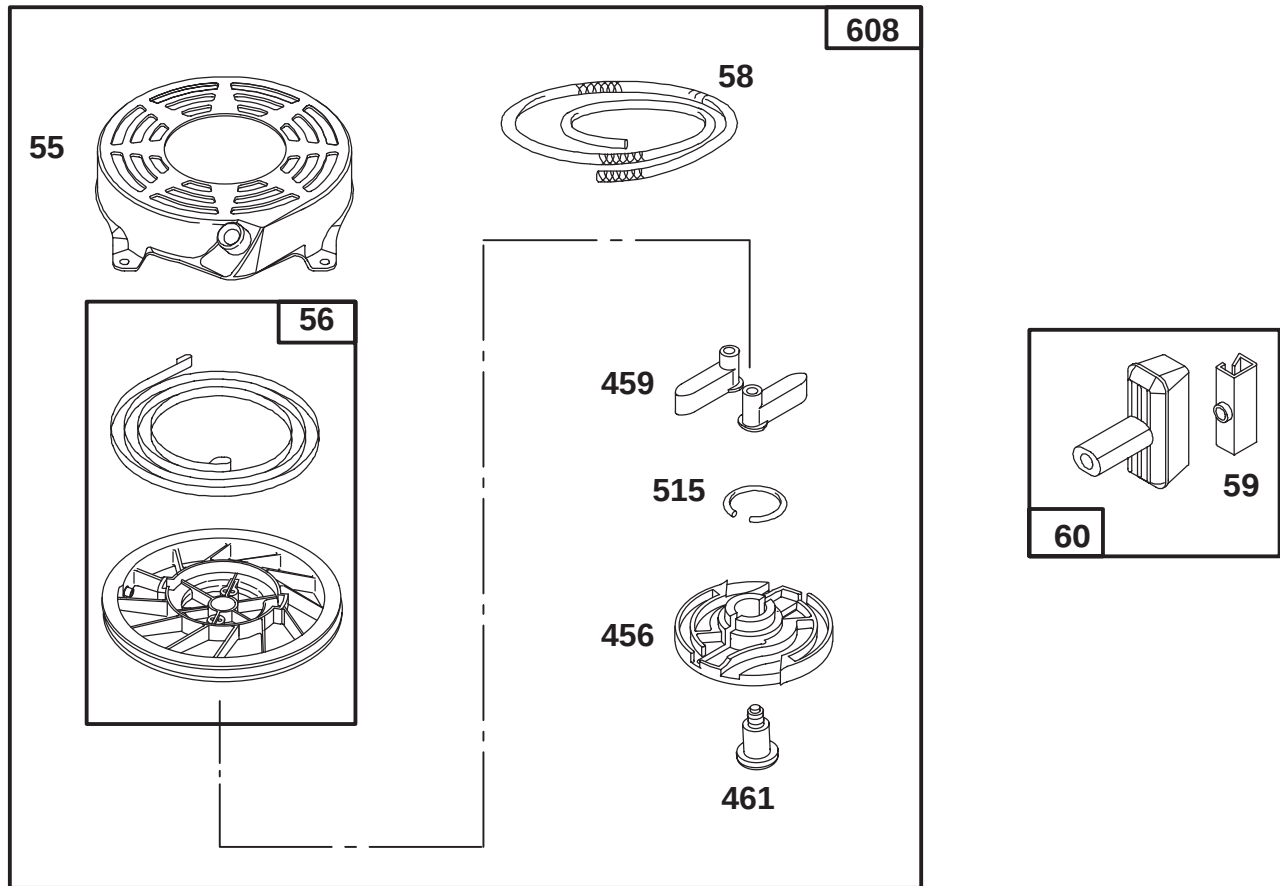

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1	459	281505	Pawl – Starter	1
56	498144	Pulley – Rewind Starter	1	461	94943	Pin – Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1	515	263073	Spring – Torsion	1
59	T224467	Insert – Starter Grip	1	608	497680	Starter Assy. – Rewind	1
60	T493926	Handle – Rewind Starter	1	Includes:			
456	281503	Retainer – Rewind Starter	1			94904 Screw – Hex. Head	1
						94908 Nut – Hex.	1

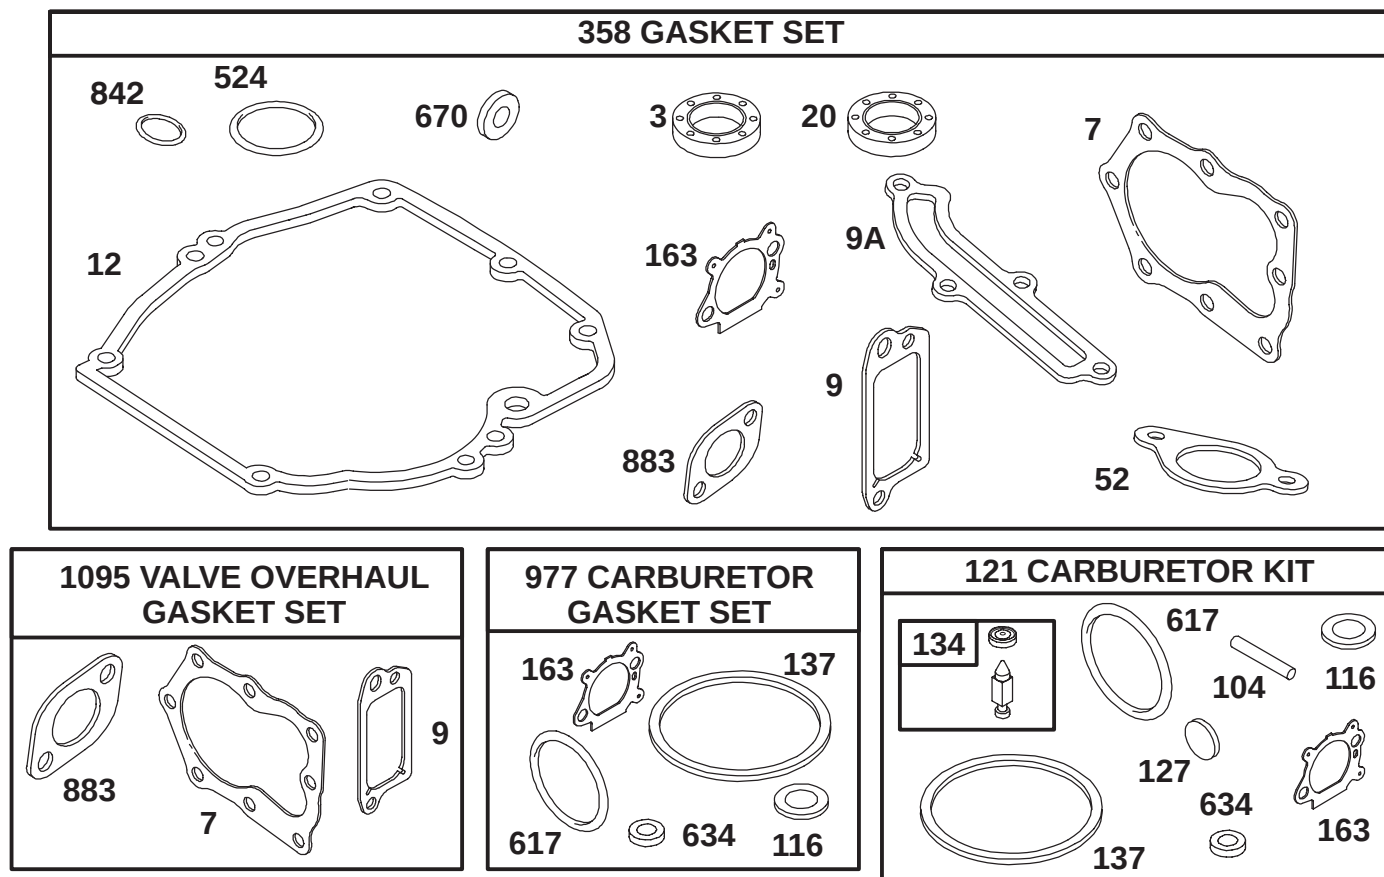 

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0633-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★Ø7	272916	Gasket – Cylinder Hd.	1
★Ø9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only)	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1
●134	T398188	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★◆163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★670	493823	Spacer – Bracket	2
★842	280966	Seal – O-Ring	1
★Ø883	272253	Gasket – Exhaust	1
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

TORO PART NUMBER INDEX

3319—281

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
146046	Plate — Blade Driver	5 5 1	92—8800	Handle	8 1 1
612079	Blade 19	5 4 1	92—8806	Screw — Hex Hd. Cap	3 10 2
614578	Cover — Gear Case	7 10 1	92—8807	Hub — Blade Driver	5 6 1
614596	Gear 34 Tooth	7 18 1	92—8810	Wheel & Tire Assembly	3 25 2
614668	Cover — Gear Case	7 2 1	92—8811	Bolt — Wheel	3 26 2
614696	Shaft — Intermediate	7 4 1	92—8818	Screw — Hex Hd. Cap	3 30 2
16—8889	Housing	3 28 1	92—8819	Nut — Lock	3 23 2
17—1569	Door — Discharge	3 13 1	92—8835	Decal — Deck 400XP	3 27 1
26—0670	Bolt — Blade	5 1 1	92—8890	Bag — Grass	9 3 1
36—4780	Washer — Thrust	7 17 3	92—9300	Spring — Counterbalance	6 4 1
36—4791	Washer	7 5 2	92—9301	Rod —Link	6 1 1
38—7820	Bearing — Ball	7 15 1	92—9304	Pivot — Front	3 22 1
40—1940	Washer	3 24 2	92—9310	Pivot Arm Assembly RH	6 23 1
49—2040	Screw — Taptite	7 1 4	92—9311	Pivot Arm Assembly LH	6 22 1
55—3760	Pinion — 15 Tooth	7 3 1	92—9313	Spacer — Door	3 15 2
60—8750	Bushing	7 6 2	92—9315	Cable — Flywheel Brake	8 8 1
60—8850	Bushing — Output	7 9 2	92—9316	Cable Traction	8 17 1
60—8890	Gear — Bevel Pinion	7 16 1	92—9318	Wheel & Tire Assembly	6 34 2
62—6660	Spacer	7 11 1	93—0278	Pulley — Driver	5 9 1
63—8590	Screw	6 10 2	93—4105	Decal — Danger	3 1 1
65—2720	Ring — Retaining	6 31 4	93—4379	Cable Throttle	8 7 1
65—4710	Ring — Friction	6 24 2	93—7159	Knob	8 11 4
65—4720	Spring — Compression	6 30 2	93—7161	Spacer — Handle	3 16 2
65—4740	Washer — Thrust	6 29 4	93—7162	Spacer — Handle	3 17 2
65—4750	Gear — Pinion	6 28 2	93—7266	Decal — Operation	8 21 1
65—4760	Washer	6 25 2	93—7383	Guide — Rope	8 4 1
65—5210	Screw — Thread Forming	3 7 2	93—8470	Screw — Clamp	4 6 1
66—6040	Key — Rocking RH	6 27 1	95—0656	Applique — Shroud	4 4 1
66—6050	Key — Rocking LH	6 26 1	95—1704	Shroud — Engine	4 2 1
71—3750	Ramp — Grass Bag	9 1 1	95—1707	Screw — Air Cleaner	4 10 3
71—7770	Plate — Securing	6 11 2	95—1709	Cover	4 9 1
71—7840	Rod —Trigger	6 5 1	95—2740	Retainer — Belt	6 20 1
71—7860	Grip — Upper	3 8 1	95—5910	Decal — Recoil	4 3 1
71—7870	Grip — Lower	3 3 1	2210—249	Clamp — Casing	4 5 1
71—7890	Guide — Belt Rear	3 31 1	2210—316	Rope — Stop	4 8 1
71—7900	Cap — L.H. Hinge Bolt	3 11 1	321—48	Screw — HH	8 18 1
71—7910	Cap — R.H. Hinge Bolt	3 6 1	321—49	Screw — HH	8 9 1
71—7920	Cover — Belt	3 29 1	321—53	Screw — HH	8 5 1
71—7930	Trigger — HOC	3 5 1	3253—22	Washer — Lock	5 2 1
71—7960	Guide — Belt Engine	5 8 1	3253—33	Washer — Lock	8 13 4
71—7980	Indicator — HOC	6 2 1	3256—24	Washer	7 13 1
71—7990	Ramp — Discharge	3 18 1	3284—5	Pin — Groove	3 4 1
71—8060	Spring — Trigger Retainer	6 8 2	3290—378	Tie — Cable	8 10 1
71—8080	Saddle — HOC	6 9 1	3290—378	Tie — Cable	8 20 1
71—8180	Frame	9 2 1	3296—5	Nut	7 14 1
71—8310	Spring — Compression	6 35 1	3296—59	Nut—Lock	6 14 2
71—8830	Retainer — Shaft	3 21 2	3296—73	Nut — Lock (Insert)	8 19 1
71—9450	V—Belt	6 19 1	3296—73	Nut — Lock Insert	8 6 2
71—9600	Gear Case Ass'y Complete	7 1* 1	32112—1	Nut — Push	3 20 1
71—9600	Gear Case Assembly	6 18 1	32112—13	Nut — Push	6 6 1
71—9610	Pulley — Half	7 12 2	32121—114	Pin — Groove	7 8 2
71—9620	Shaft — Output	7 7 1	32144—4	Screw — HH	3 32 2
71—9840	Spring — Door	3 12 2	32144—4	Screw — HH Tap	5 7 2
74—1660	Cover — Wheel	6 32 2	32144—4	Screw — HH Tap	6 21 2
74—1670	Spacer — Wheel	6 33 2	32144—4	Screw — Tapping	3 19 8
92—1001	Bail — Control	8 14 1	32144—4	Screw—HH Tap	6 12 4
92—1002	Bail — Flywheel Brake	8 2 1	32144—31	Screw	6 7 1
92—1057	Bolt — Shoulder	6 13 2	32144—70	Screw — Tapping	3 2 1
92—5412	Stop — Pivot	8 3 1	32144—97	Screw — Pan Hd. Phillips	3 9 2
92—5412	Stop — Pivot	8 15 1	32144—102	Screw	4 11 3
92—7729	Anchor — Cable	8 16 1	32151—93	Ring — Grip	6 3 1
92—7887	Screw — Mtg	4 7 2			
92—8626	Spacer — Blade	5 3 1			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.