 


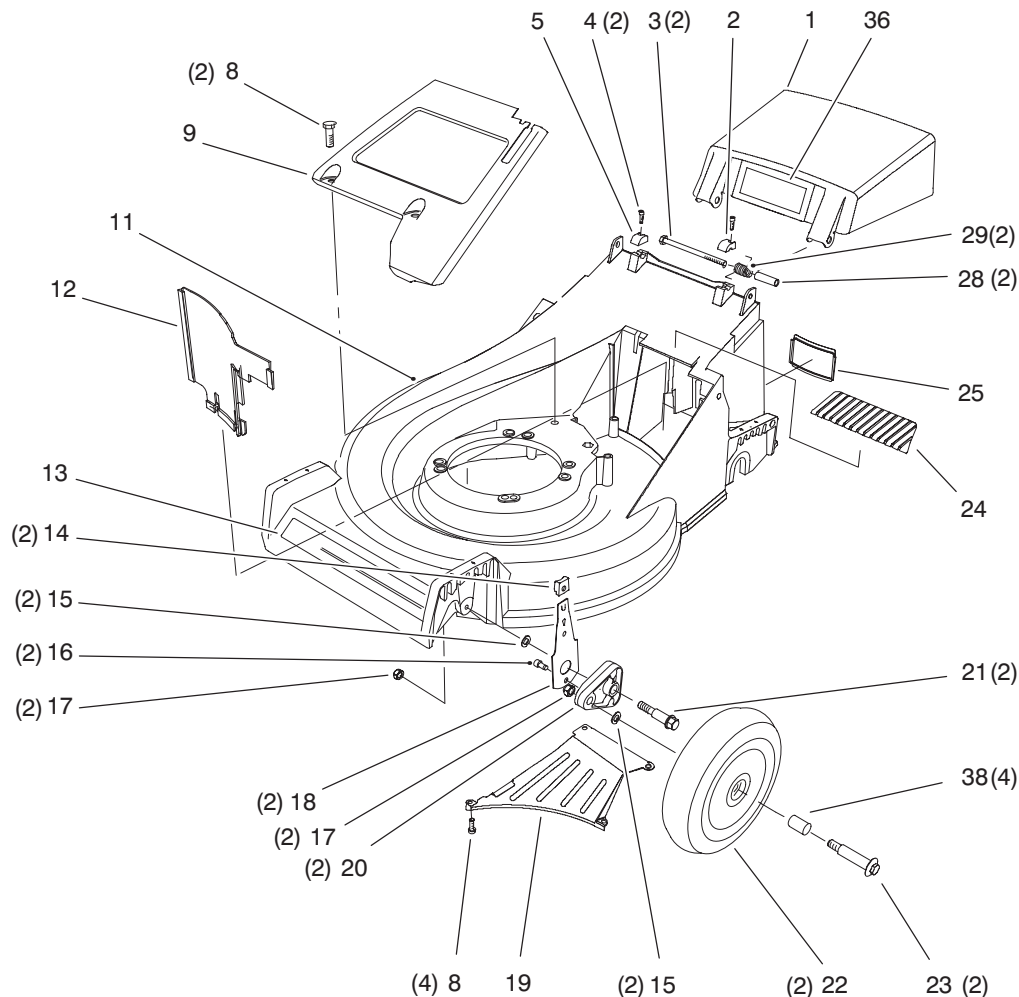


MODEL NO. 26633-7900001 & UP

**PARTS
CATALOG**
53cm REAR BAGGING MOWER


C-2481

DECK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	17-1569	Door - Discharge (Incl. Ref.#36)	1	17	3296-6	Nut - Lock	4
2	71-7900	Cap-Bolt, Hinge LH	1	18	66-0540	Asm - Spring Arm, Front	2
3	322-29	Screw - Hex Head	2	19	71-9640	Ramp - Discharge	1
4	65-5210	Screw	2	20	66-0580	Arm - Pivot	2
5	71-7910	Cap - Bolt, Hinge RH	1	21	66-0560	Screw - Shoulder	2
8	32144-70	Screw - Tap	6	22	14-9949	Asm - Wheel & Tire, 8" (Incl. Ref. #38)	2
9	65-5660	Panel - Screen	1	23	27-6231	Bolt - Wheel	2
11	16-1769	Housing (Incl. Ref.# 13)	1	24	71-9920	Cover - Top	1
12	66-0020	Panel - Vertical	1	25	71-9650	Access - Cover	1
13	71-9870	Decal - Deck	1	28	71-8580	Spacer - Door	2
14	25-7740	Knob - Arm	2	29	71-9840	Spring - Door	2
15	40-1940	Washer	4	36	93-4105	Decal - Bag Door	1
16	65-5220	Screw	2	38	27-6250	Bushing - Wheel	4

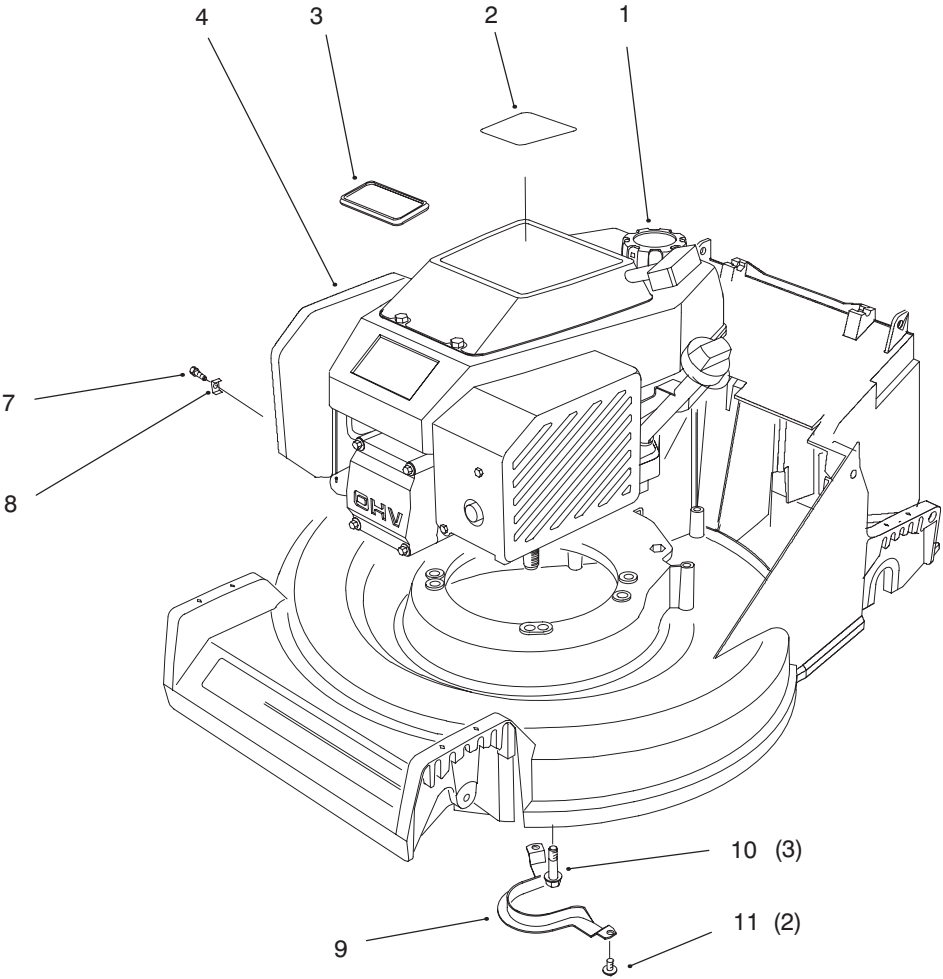 


C-2482

GTS 150 ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-7198	Asm - Cap, Gas	1
2	93-4355	Decal - Engine	1
3	92-2289	Plate - Logo, Toro	1
4	94-1605	Engine - GTS 150 BBC (Complete)	1

Ref. No.	Part No.	Description	No. Used
7	86-7990	Screw - Clamp	1
8	2210-249	Clamp - Casting	1
9	66-0570	Guide - Belt	1
10	32144-102	Screw	3
11	32144-70	Screw - Tap	2

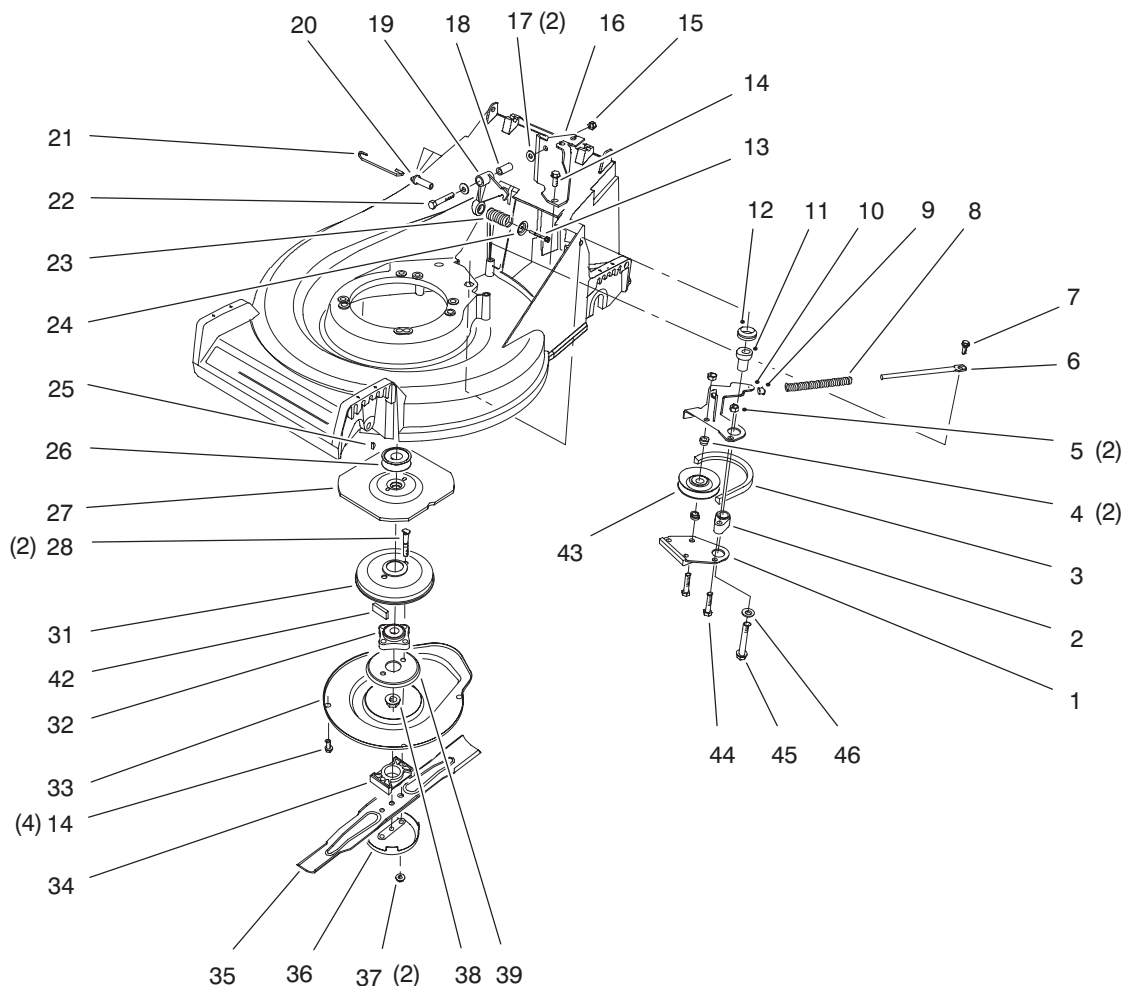 


C-2483

BLADE AND BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-5780	Shoe - Brake	1
2	65-5070	Hub - Plate	1
3	65-5740	V-Belt	1
4	65-5130	Hub - Pulley	2
5	3296-42	Nut - Lock	2
6	65-5320	Rod - Spring	1
7	65-5670	Bolt - Shoulder	1
8	71-3640	Spring - Compression	1
9	66-0350	Bushing - Flange	1
10	66-0090	Lever - Brake	1
11	65-5720	Bushing	1
12	253-151	Seal - Ring	1
13	46-7040	Screw - Hex Washer Hd.	1
14	32144-70	Screw-Tap	5
15	32128-44	Nut - Flange	1
16	66-0030	Bracket - Cable Support	1
17	3256-23	Washer - Flat	2
18	65-5690	Bushing - Bellcrank	1
19	65-5700	Crank	1
20	71-3660	Pin-Spring	1
21	71-3650	Link - Control	1


Ref. No.	Part No.	Description	No. Used
22	322-21	Screw - Hex Hd.	1
23	71-3630	Spring - Compression	1
24	65-5280	Retainer - Spring	1
25	3257-17	Key - Woodruff	1
26	62-7560	Pulley - Driver	1
27	65-5300	Flywheel - BBC	1
28	42-3190	Bolt - Blade	2
31	62-3890	Drum - Brake	1
32	42-6890	Asm - Hub	1
33	65-5200	Shield - BBC	1
34	62-4280	Spacer - Blade	1
35	62-7700	Blade - 21"	1
36	80-2770	Cup - Anti Scalp	1
37	54-9190	Nut - Lock	2
38	3296-33	Nut - Lock, Nylon	1
39	65-5330	Screen - BBC	1
42	52-3480	Damper - Vibration	2
43	46-5650	Pulley - Idler	1
44	321-13	Screw - Hex Hd.	2
45	11-0580	Screw	1
46	65-5380	Washer - Flat	1

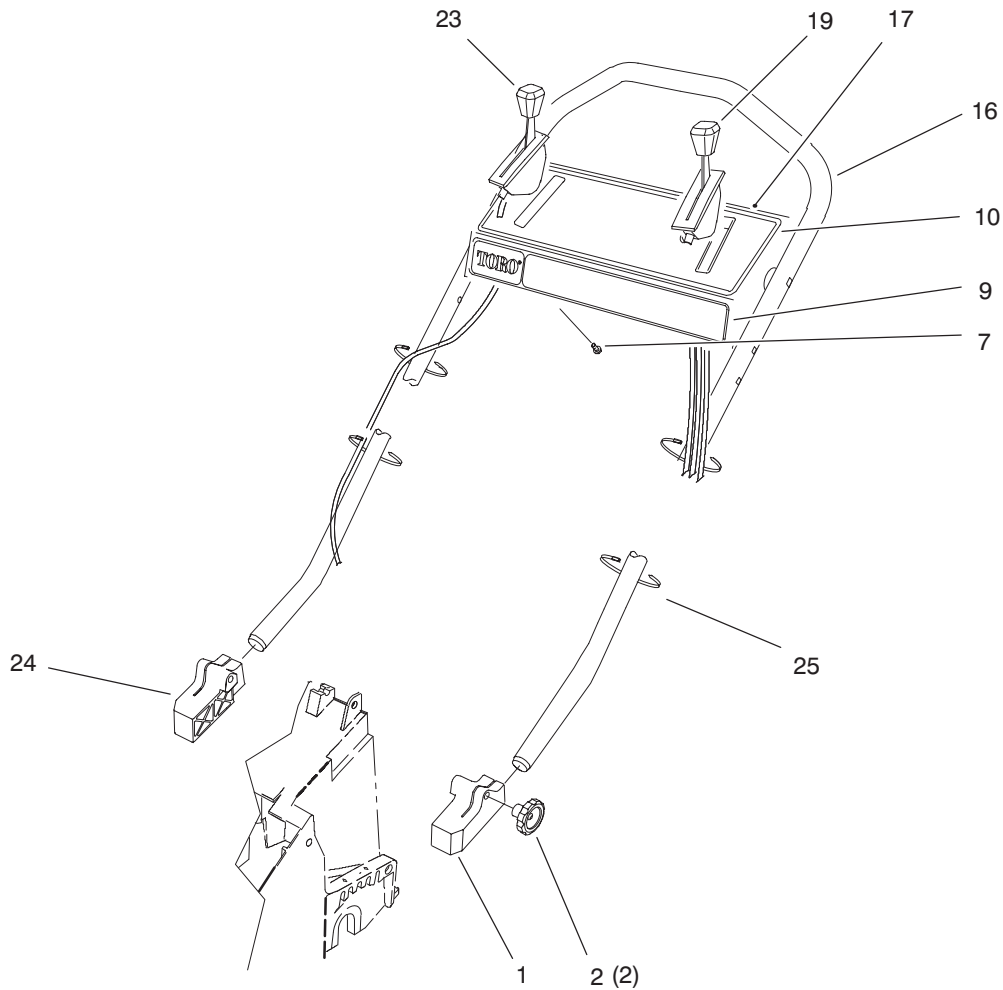 

C-2484

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-8090	Mount - Handle LH	1	17	16-8969	Panel - Control (Incl. Ref.#9 & 10)	1
2	19-4050	Knob	2	19	93-6630	Control - Throttle	1
7	92-9665	Screw	4	23	93-6632	Control - Speed	1
9	71-9872	Decal - Panel	1	24	71-8100	Mount - Handle RH	1
10	93-6656	Decal - Instruction	1	25	3290-378	Tie - Cable	5
16	94-4910	Handle	1				

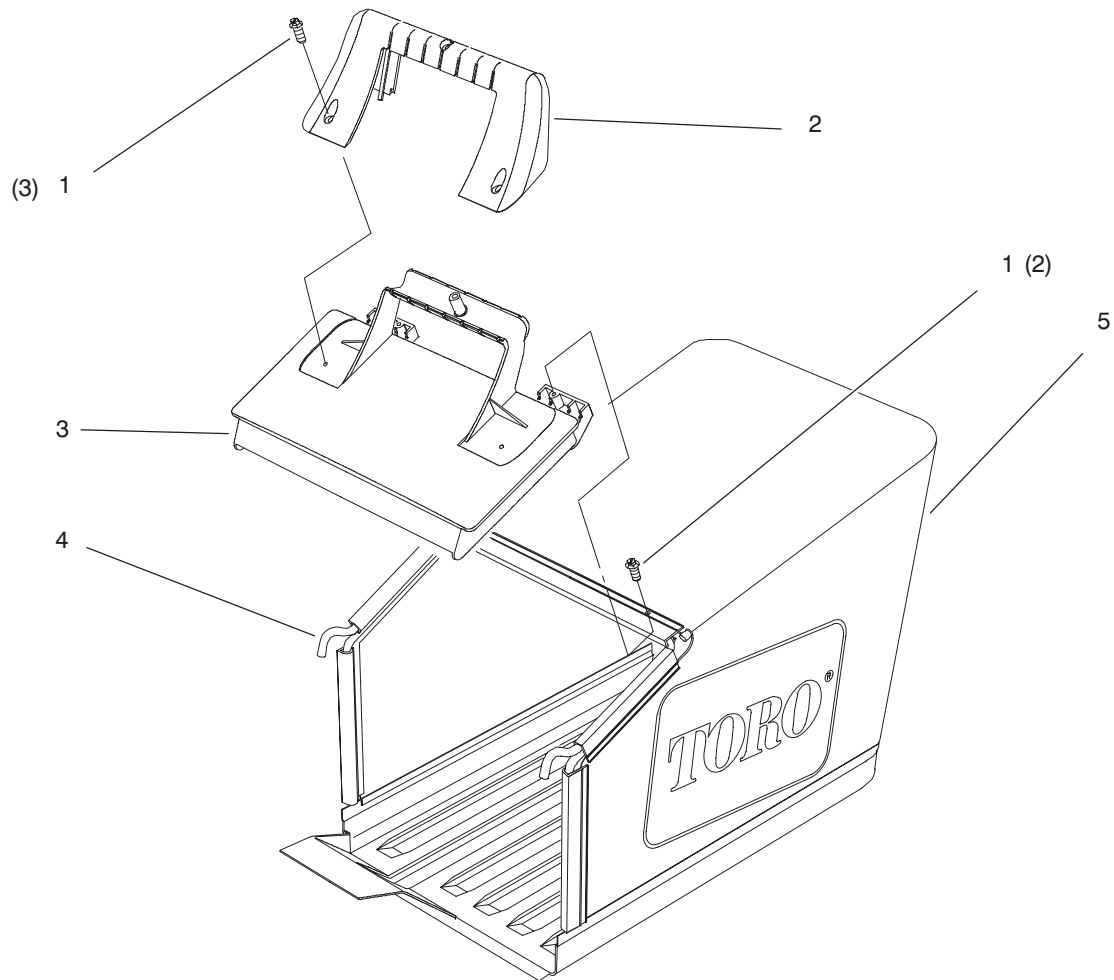 


C-2485

BAG COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw – Phillips Pan Hd.	5
2	71-9480	Handle – Door	1
3	71-9470	Door – Bag	1

Ref. No.	Part No.	Description	No. Used
4	71-9930	Frame	1
5	71-9680	Bag – Grass	1

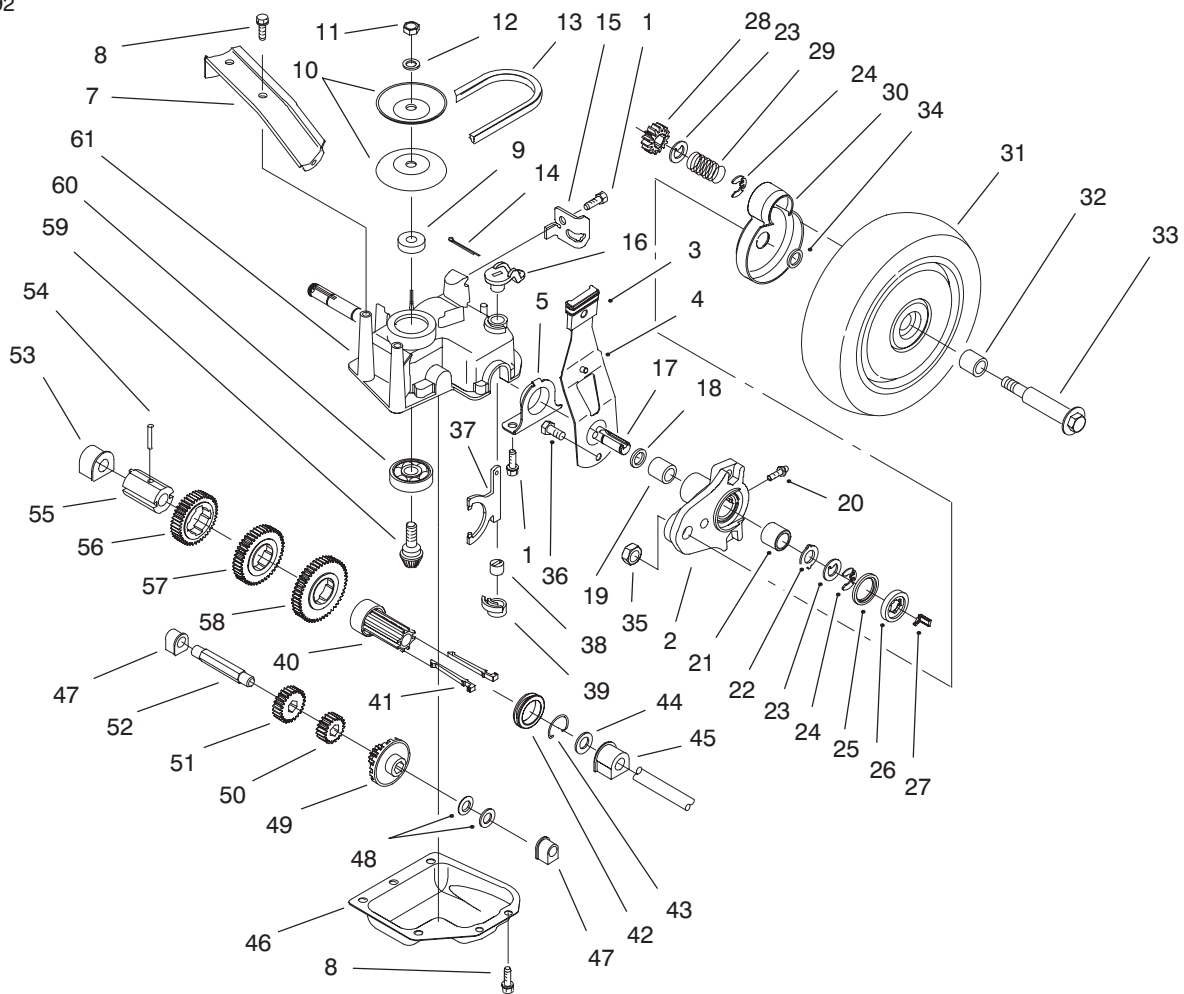 


C-2486

DECK SUSPENSION & GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	5
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	36-8070	V-Belt	1
14	3272-5	Pin - Cotter	1
15	76-2930	Retainer - Cable	1
16	76-0920	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - "O"Ring	2
19	70-9760	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	74-1660	Cover - Wheel	2
31	14-9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	74-1670	Spacer - Wheel Cover	2
35	3296-6	Nut - Lock	2
36	65-5220	Screw - Socket Hd. Cap	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	76-0780	Sleeve - Shift Key	1
41	76-0760	Key - Shift	2
42	76-0770	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

 *Not Illustrated

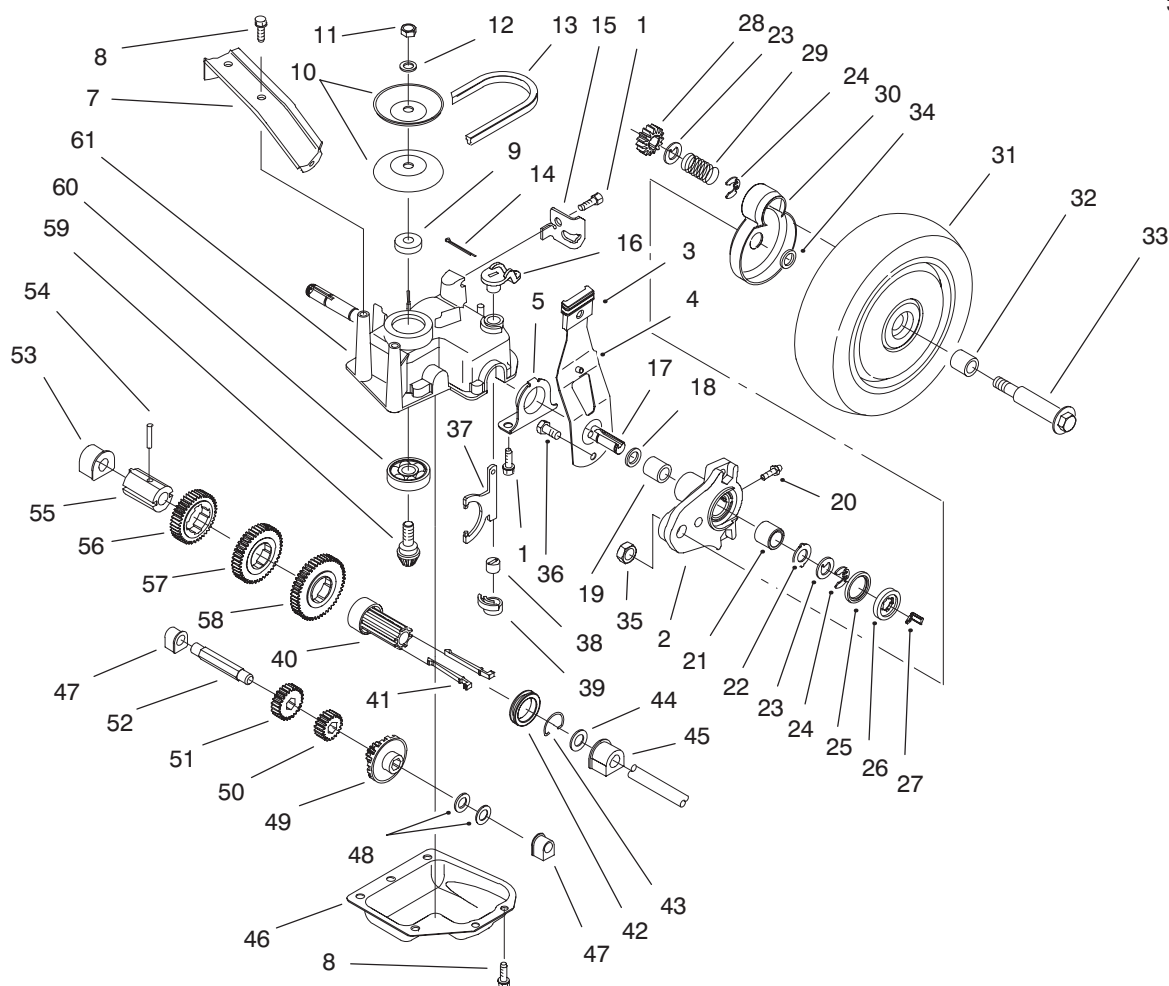


C-2486

DECK SUSPENSION & GEAR CASE ASSEMBLY (CONT.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing – Output Shaft	1	54	32121-120	Pin – Coil	1
46	60-8730	Cover – Gear Case	1	55	60-8790	Sleeve – Gear	1
47	60-8750	Bushing – Intrmdt. Shaft	2	56	55-3810	Gear – 39T (3rd Gear)	1
48	36-4791	Washer – Thrust	2	57	55-3790	Gear – 44T (2nd Gear)	1
49	55-3760	Gear – Pinion 15T	1	58	55-3770	Gear – 49T (1st Gear)	1
50	55-3780	Gear – Pinion 20T	1	59	60-8890	Pinion – Bevel	1
51	55-3800	Gear – Pinion 25T	1	60	38-7820	Bearing – Ball	1
52	60-8800	Shaft – Intermediate	1	61	60-8710	Case – Gear (Upper)	1
53	60-8850	Bushing – Output Shaft	1	*	62-6673	Gear Case Assy. Complete	1

 *Not Illustrated

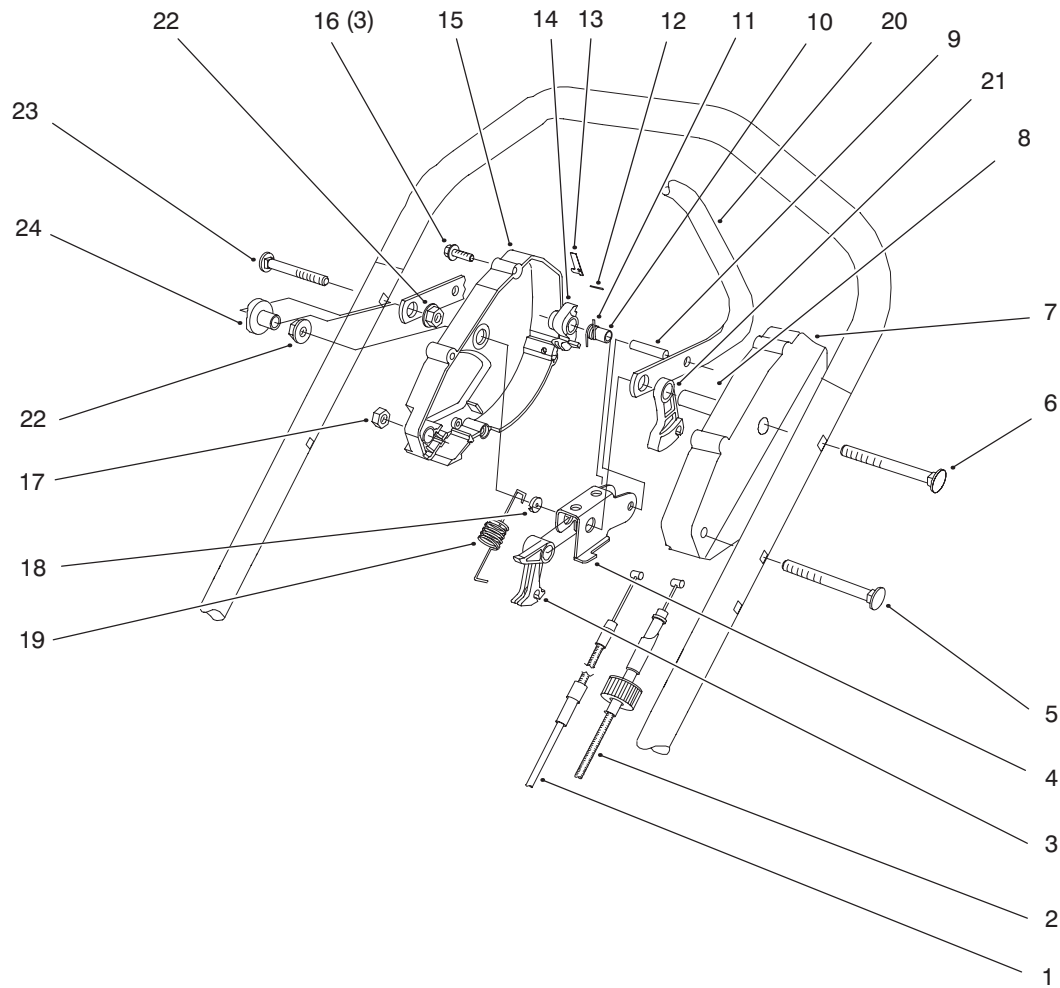


C-2487

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-6629	Asm - Cable	1
2	93-6633	Cable - Traction	1
3	46-5540	Lever - Cable	1
4	66-0180	Rocker	1
5	46-6431	Screw - Handle	1
6	17-9425	Screw - Handle	1
7	46-5460	Housing - Control LH	1
8	46-5590	Spacer	1
9	32121-9	Pin - Roll	1
10	46-5550	Bushing	1
11	46-5510	Spring - Torsion	1
12	57-6290	Pin - Insert	1

Ref. No.	Part No.	Description	No. Used
13	52-7410	Spring - Leaf	1
14	46-5530	Hook - Control	1
15	66-0160	Housing - Control RH	1
16	46-7040	Screw - Hex Washer Hd.	3
17	3296-8	Nut - Lock	1
18	66-0170	Washer - Nylon	1
19	66-0190	Spring - Detent	1
20	52-7430	Bar - Control	1
21	46-5520	Lever - Traction	1
22	3296-58	Nut - Flange	2
23	17-9426	Screw	1
24	66-0330	Spacer - Support	1

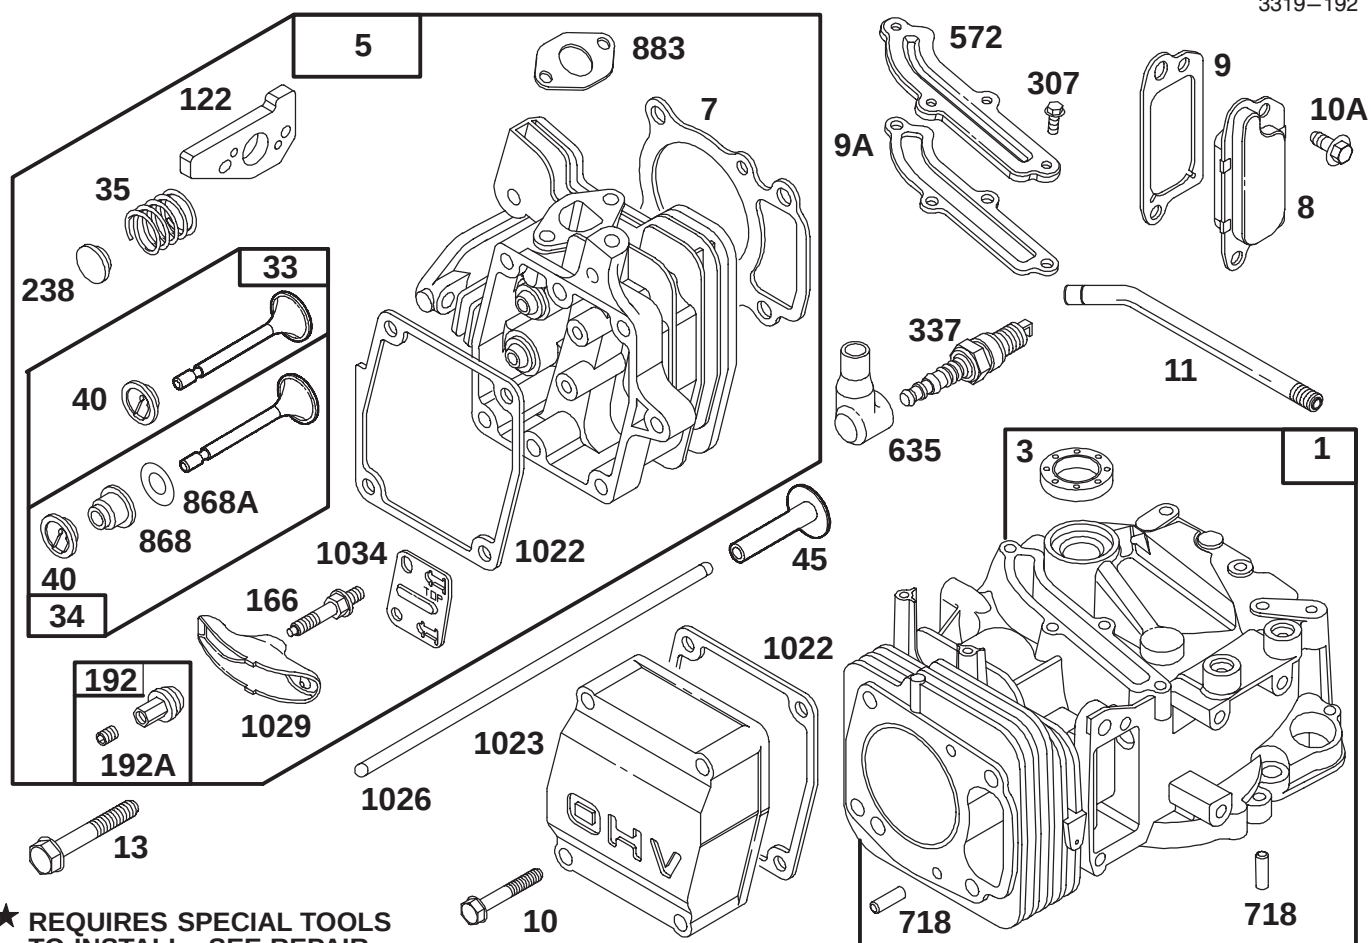 


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Assy	1	192	77-7910	Ball & Screw – Rocker Arm	1
†3	77-9060	Seal – Oil	1	192A	77-9560	Screw – Set	1
5	77-7730	Head – Cylinder	1	238	77-7800	Cap – Valve	1
†7	77-7740	Gasket – Cylinder Head	1	307	77-7420	Screw – Cover Mtg (Breather Cover)	1
8	77-9260	Breather Assy	1	337	77-7330	Plug – Spark	1
†9	77-9250	Gasket – Breather	1	572	77-7400	Cover – Breather	1
†9A	77-7410	Gasket – Breather	1	635	77-7340	Elbow – Spark Plug	1
10	77-7360	Screw – Hex Head (Valve Cover)	1	718	77-7600	Pin – Dowel	1
10A	77-9200	Screw – Hex Head	1	†868	77-7890	Seal Assy – Valve	1
11	77-9410	Tube – Breather	1	†868A	77-7900	Gasket – Valve	1
13	77-7630	Screw – Cylinder Head	1	†883	77-7760	Gasket – Exhaust	1
33	77-7860	Valve – Exhaust	1	†1022	77-7320	Gasket – Rocker Cover	1
34	77-7880	Valve – Intake	1	1023	77-9320	Cover – Valve	1
35	77-7810	Spring – Valve	1	1026	77-7620	Rod – Push	1
40	77-7870	Retainer – Spring	1	1029	77-7790	Arm – Rocker	1
45	77-7610	Tappet – Valve	1	1034	77-7770	Guide – Push Rod	1
†122	77-7820	Adapter Assy	1				
166	77-7780	Stud – Rocker Arm	1				

† Included in Gasket Set – Part No. 77-8900

 ‡ Included in Carburetor Overhaul Kit – Part No. 77-9580

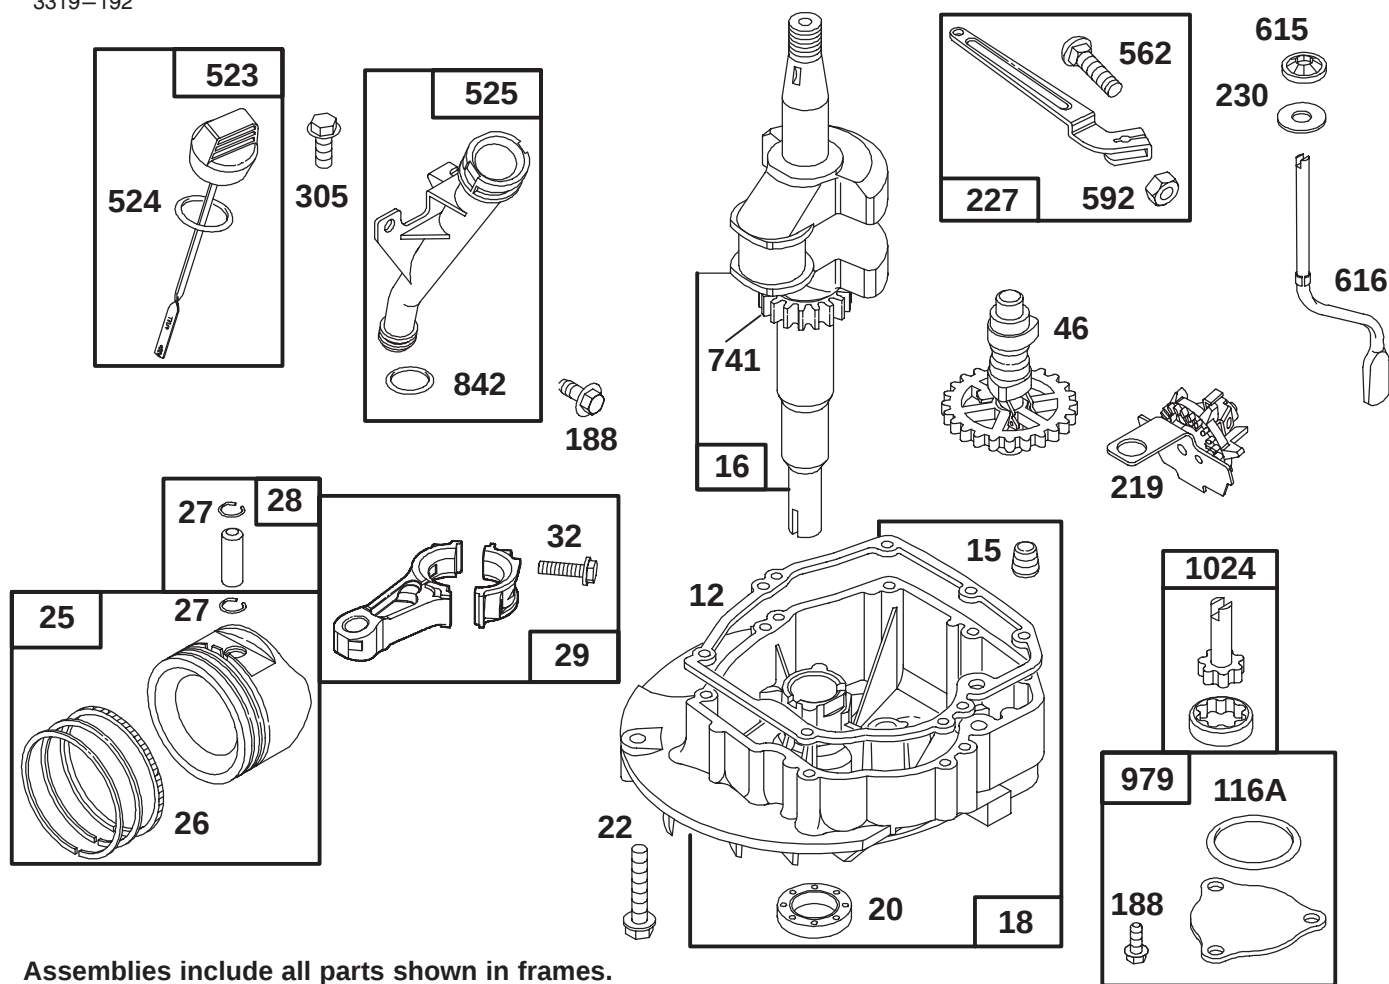


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
†12	77-7550	Gasket – Engine Base	1
15	94-1665	Plug – Pipe	1
16	77-7510	Crankshaft	
		Note: Order Part No. 77-7540 For Timing Gear Key	1
18	77-7560	Base – Engine	1
†20	77-7570	Seal – Oil	1
22	77-9070	Screw – Engine Base	1
25	77-7690	Piston Assy (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock – Piston Pin	1
28	77-9340	Pin Assembly – Piston	1
29	77-7690	Rod – Connecting	1
32	77-7680	Screw – Connecting Rod	1
46	77-7490	Gear – Cam	1
†116A	77-7660	O-Ring	1

Ref. No.	Part No.	Description	No. Used
188	94-1652	Screw - Hex Head	1
219	77-7500	Gear - Governor	1
227	77-7370	Lever Assembly - Governor	1
230	77-7470	Washer	1
305	77-8310	Screw - Hex Head	1
523	77-7260	Dipstick - Oil	1
†524	77-7270	Seal - O-Ring	1
525	77-7280	Tube - Oil Fill	1
562	77-7380	Bolt - Governor Lever	1
592	77-7390	Nut - Hex	1
615	77-7480	Push Nut	1
616	77-7460	Crank - Governor	1
741	77-7530	Gear - Timing	1
†842	77-7300	Seal - O-Ring	1
979	77-7650	Cover - Oil Pump	1
1024	77-7640	Pump - Oil	1

 † Included in Gasket Set — Part No. 77-8900

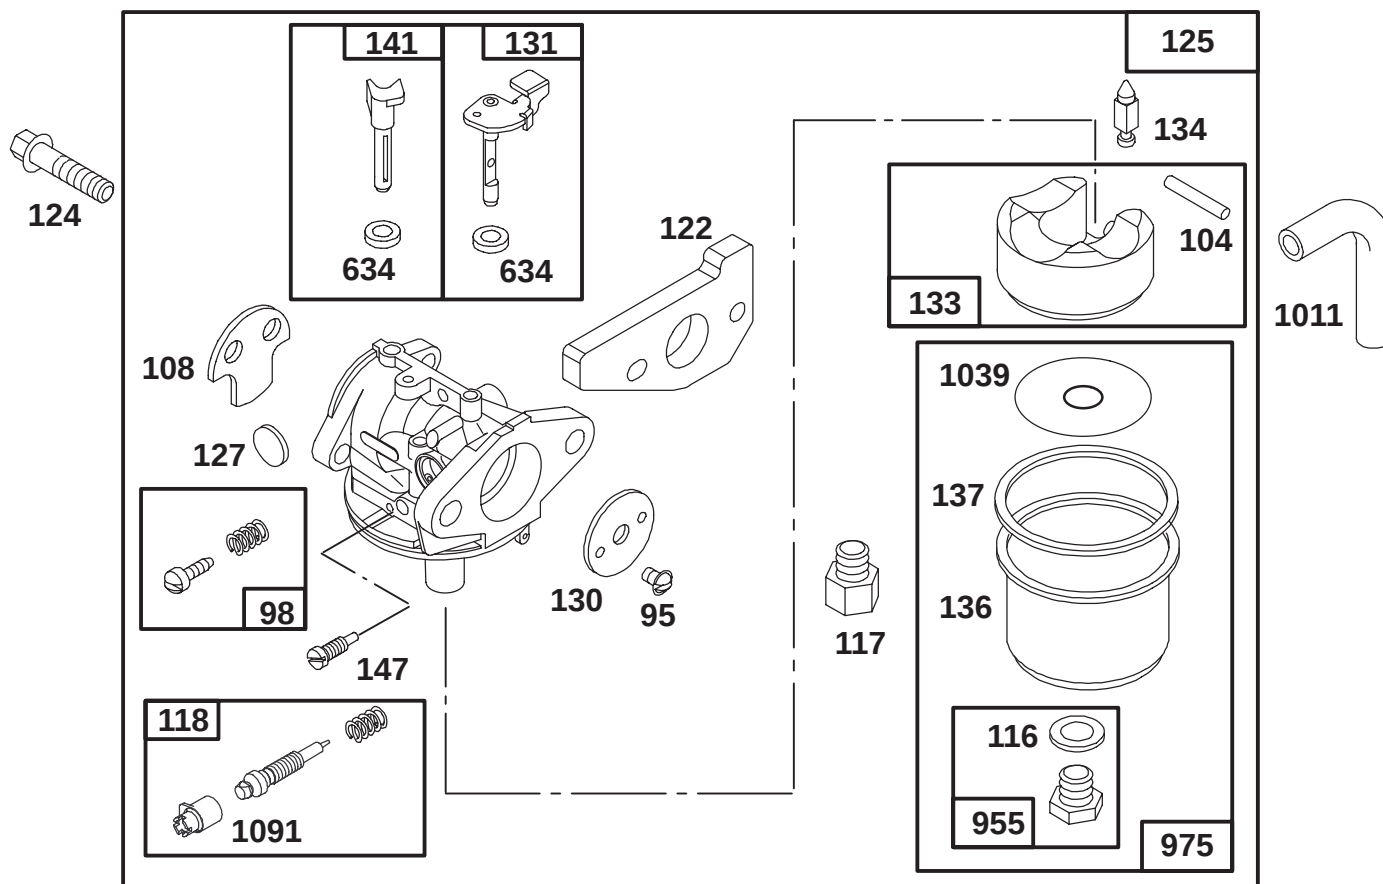

Assemblies include all parts shown in frames.


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw – Valve Mtg	1
98	77-8240	Screw – Idle Adj.	1
‡104	77-8180	Pin – Float Hinge	1
108	77-9600	Valve – Choke	1
‡*116	77-8210	Gasket – Sealing	1
‡117	77-9610	Jet – Main	1
		Note: For High Altitude Jet, Order Part No. 94-1650	1
‡118	77-9620	Valve & Spring – Needle	1
‡122	77-7820	Adapter Assy	1
124	77-7970	Screw – Hex Head (Carb. Mtg.)	1
125	77-9630	Carburetor Assy	1
‡127	77-8100	Plug – Welch	1

Ref. No.	Part No.	Description	No. Used
130	77-8080	Valve – Throttle	1
131	77-8160	Shaft – Throttle	1
133	77-8170	Float – Carburetor	1
‡134	77-8110	Valve – Inlet (Includes Seat)	1
136	77-7240	Bowl – Fuel	1
‡*137	77-8200	Gasket – Float Bowl	1
141	77-8130	Shaft – Choke	1
147	77-9640	Jet – Pilot	1
*634	77-8150	Washer – Seal	1
955	77-8220	Screw – Hex Head	1
975	77-8190	Bowl Assy – Carburetor	1
1011	77-8040	Tube – Vent	1
‡1039	77-7250	Limit – Float	1
‡1091	77-9650	Cap – Limiter	1

‡ Included in Gasket Set – Part No. 77-9580

 * Included in Gasket Set – Part No. 77-8930

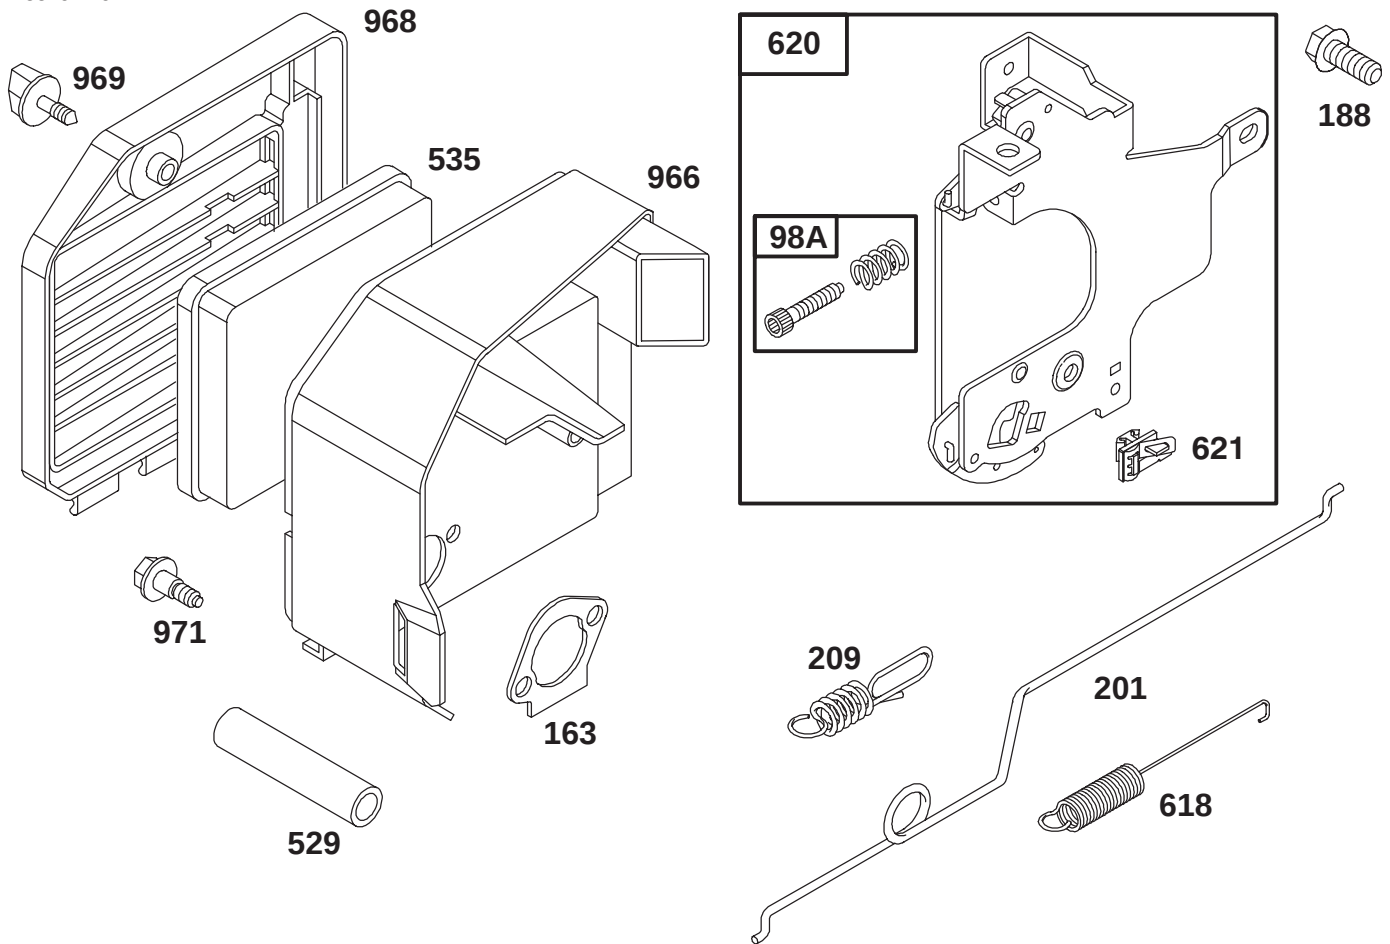


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
98A	77-8020	Screw Assy - Speed Adj.	1
†163	77-7960	Gasket - Air Cleaner	1
188	94-1652	Screw - Hex Head	1
201	77-7980	Link - Governor	1
209	77-7990	Spring - Governor	1
529	77-8030	Tube - Breather	1
535	77-7950	Element - Filter	1

Ref. No.	Part No.	Description	No. Used
618	77-8140	Spring - Choke	1
620	77-8000	Bracket - Carburetor	1
621	77-8010	Switch - Stop	1
966	77-7940	Base - Air Cleaner	1
968	77-7040	Cover - Air Cleaner	1
969	77-7920	Screw - Air Cleaner	1
971	77-7930	Screw - Air Cleaner	1

 † Included in Gasket Set - Part No. 77-8900

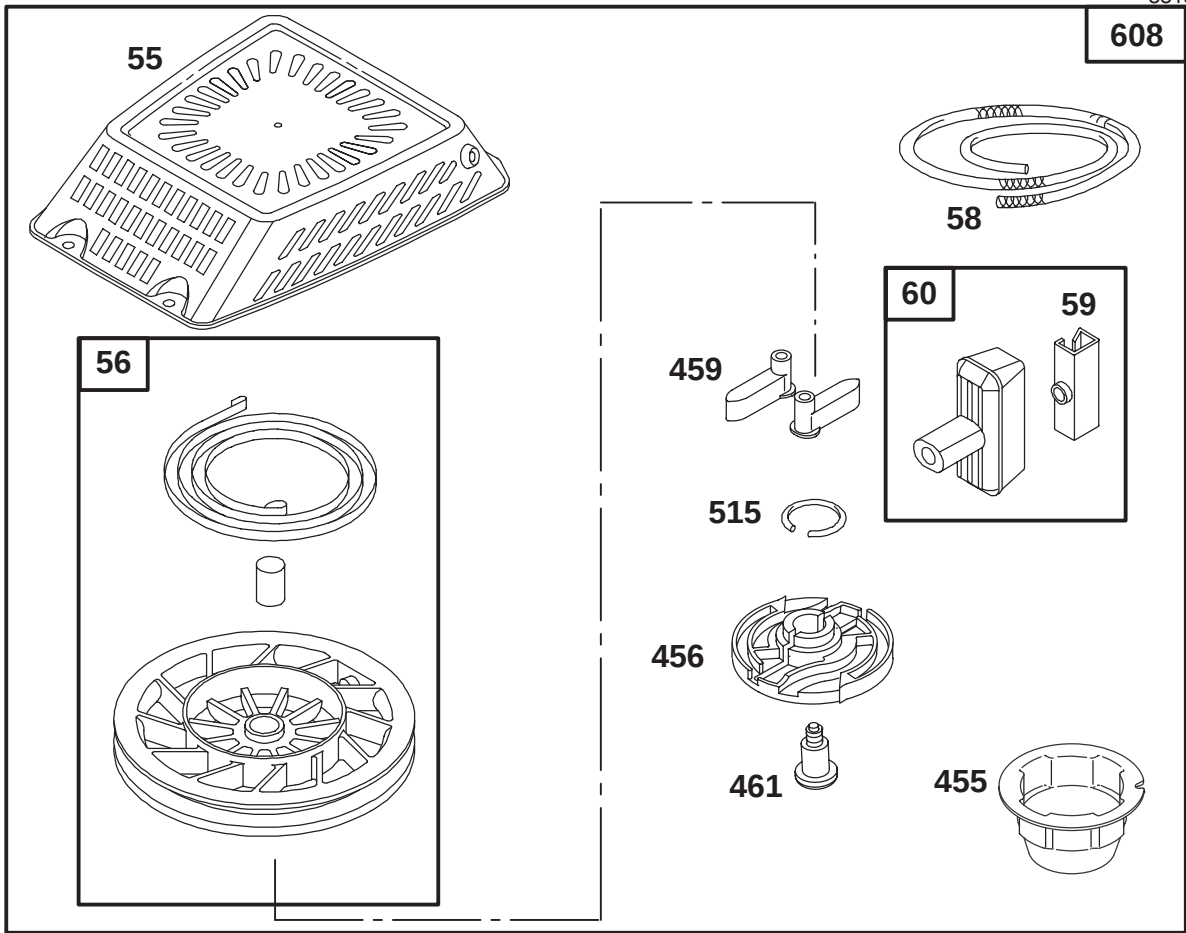


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	77-8460	Housing – Rewind Starter	1
56	94-1657	Pulley – Rewind Starter	1
58	94-1668	Rope – Starter (Cut To Suit)	1
59	77-7210	Insert – Rewind Handle	1
60	77-8510	Handle – Rewind Starter	1
65	77-8300	Screw – Hex Head	1

Ref. No.	Part No.	Description	No. Used
455	94-1653	Cup – Starter	1
456	94-1659	Retainer – Rewind Starter	1
459	94-1654	Pawl – Starter	1
461	94-1660	Screw – Rewind Starter	1
515	94-1655	Spring – Torsion	1
608	94-1661	Starter Assy – Rewind	1

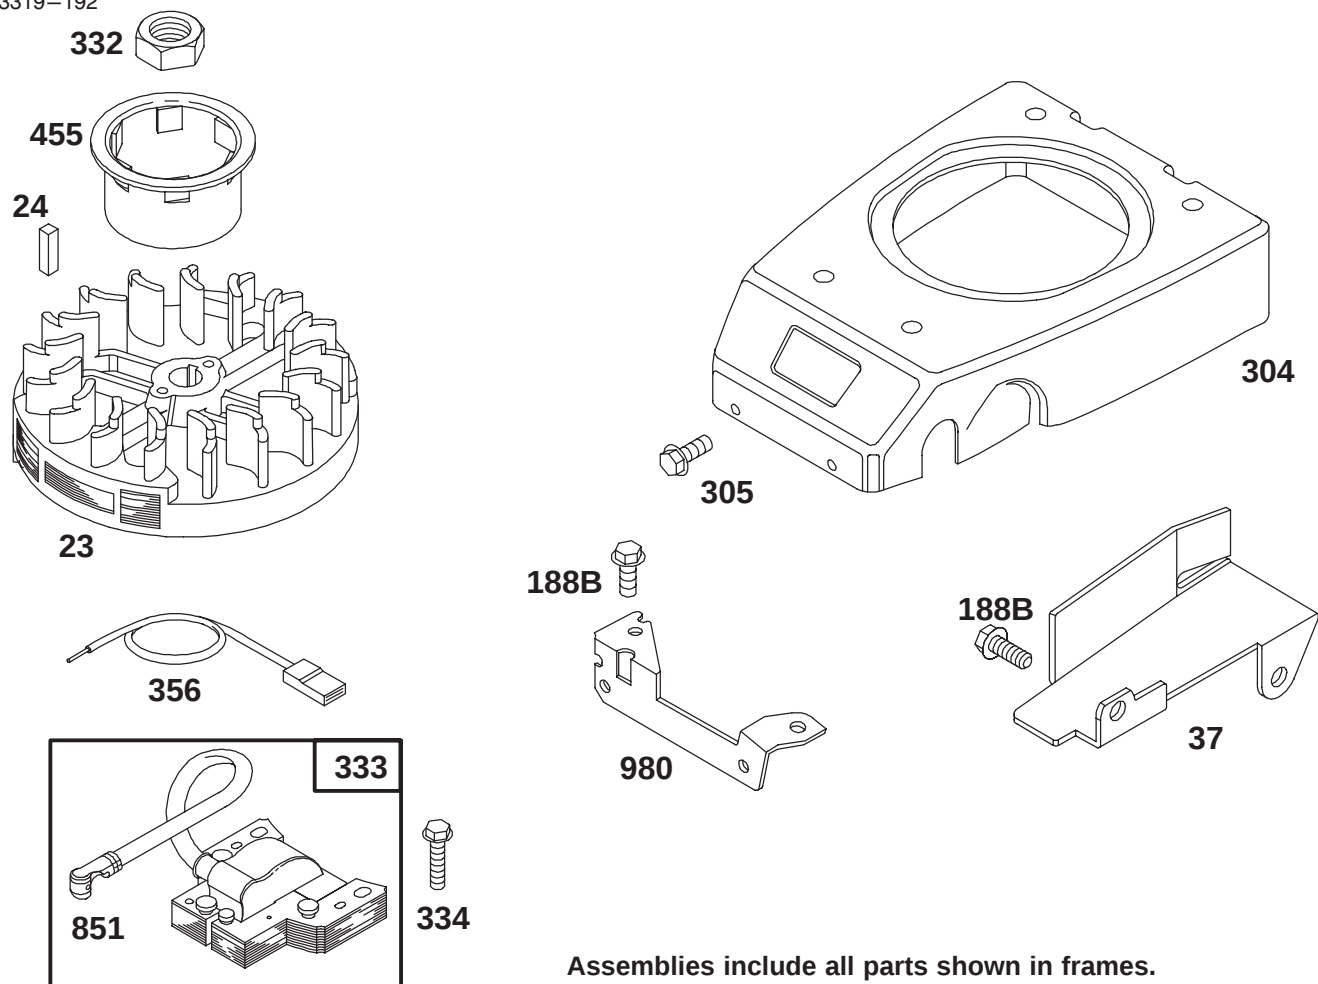 


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
23	77-8330	Flywheel - Magneto	1
24	77-8340	Key - Flywheel	1
37	77-7190	Guard - Flywheel	1
188B	77-7450	Screw - Hex Head	1
304	94-1680	Housing - Blower	1
305	77-8310	Screw - Hex Head	1
332	77-8360	Nut - Flywheel	1

Ref. No.	Part No.	Description	No. Used
333	77-8420	Armature - Magneto	1
334	77-9420	Screw - Armature Mtg.	1
356	77-8400	Wire - Ground	1
455	94-1653	Cup - Starter	1
851	77-9450	Terminal - Spark Plug	1
980	77-7140	Bracket - Blower Housing	1

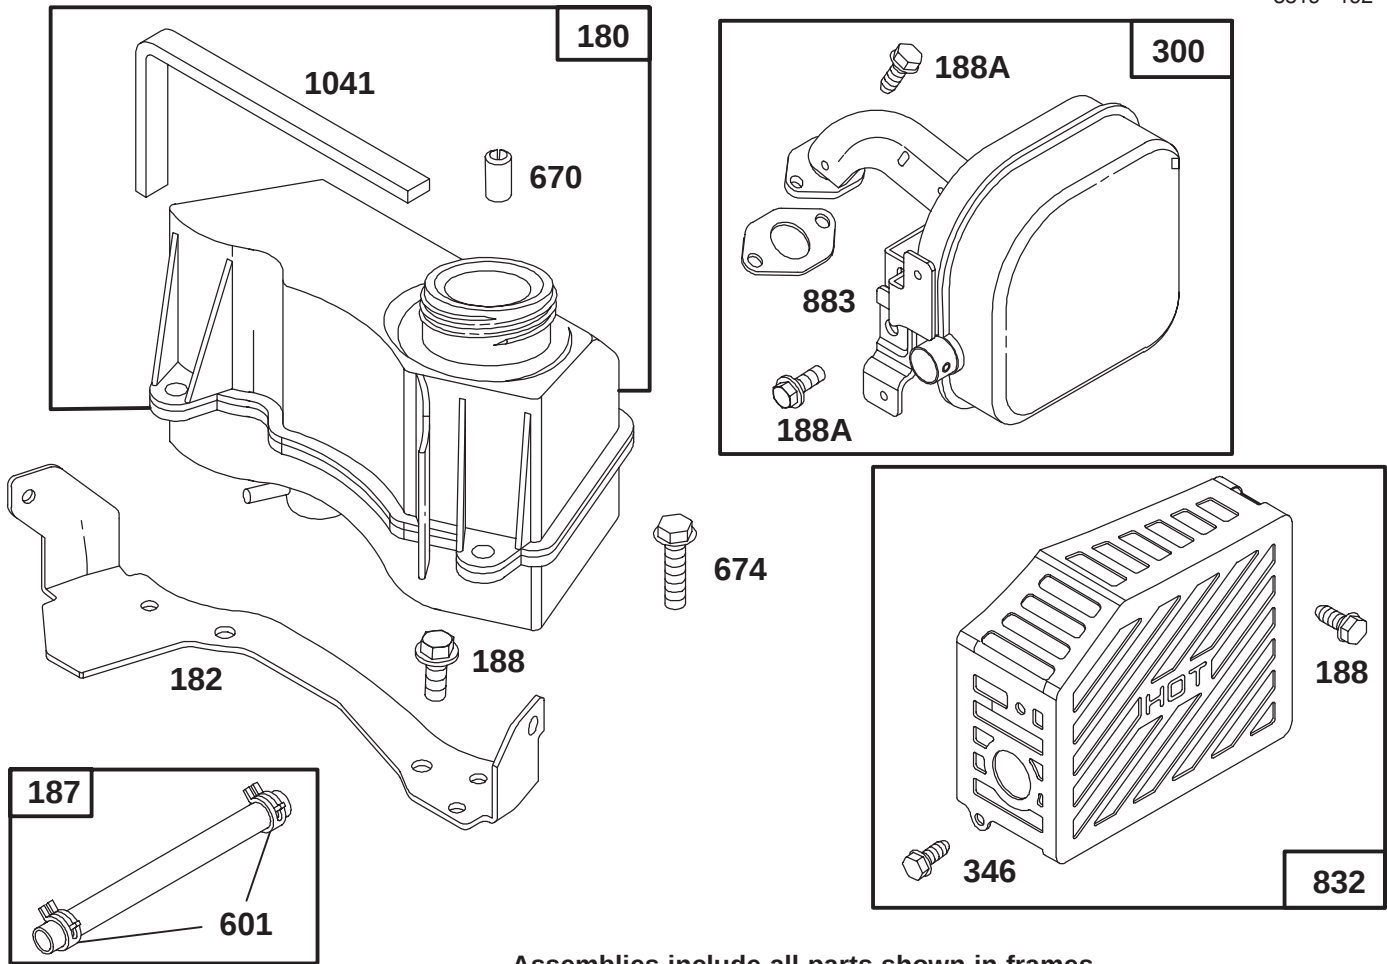 




Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
180	77-8580	Tank Assy - Fuel	1
182	77-7170	Bracket - Fuel Tank	1
187	78-4100	Hose - Fuel (Cut To Suit)	1
188	94-1652	Screw - Cap	1
188A	94-1676	Screw - Hex Head	1
300	77-8640	Muffler - Exhaust	1

Ref. No.	Part No.	Description	No. Used
346	77-9430	Screw - Hex Head	1
601	78-4690	Clamp - Hose	1
670	77-9030	Spacer - Fuel Tank	1
674	77-8600	Screw - Tank Mtg.	1
†832	77-9290	Guard - Muffler	1
†883	77-7760	Gasket - Exhaust	1
†1041	77-8590	Seal - Foam	1

   † Included in Gasket Set - Part No. 77-8900

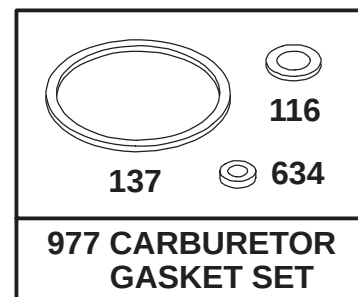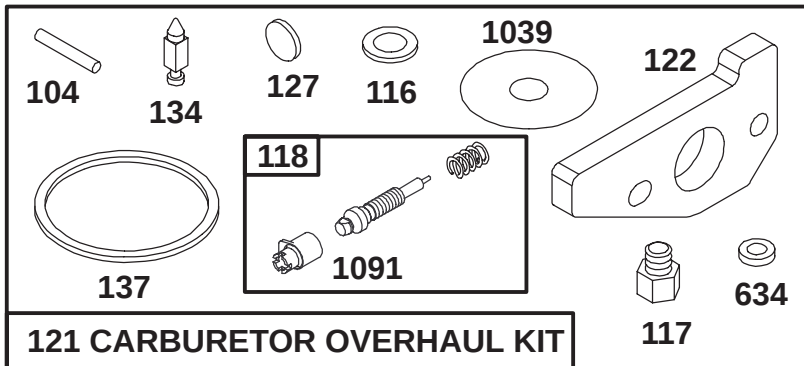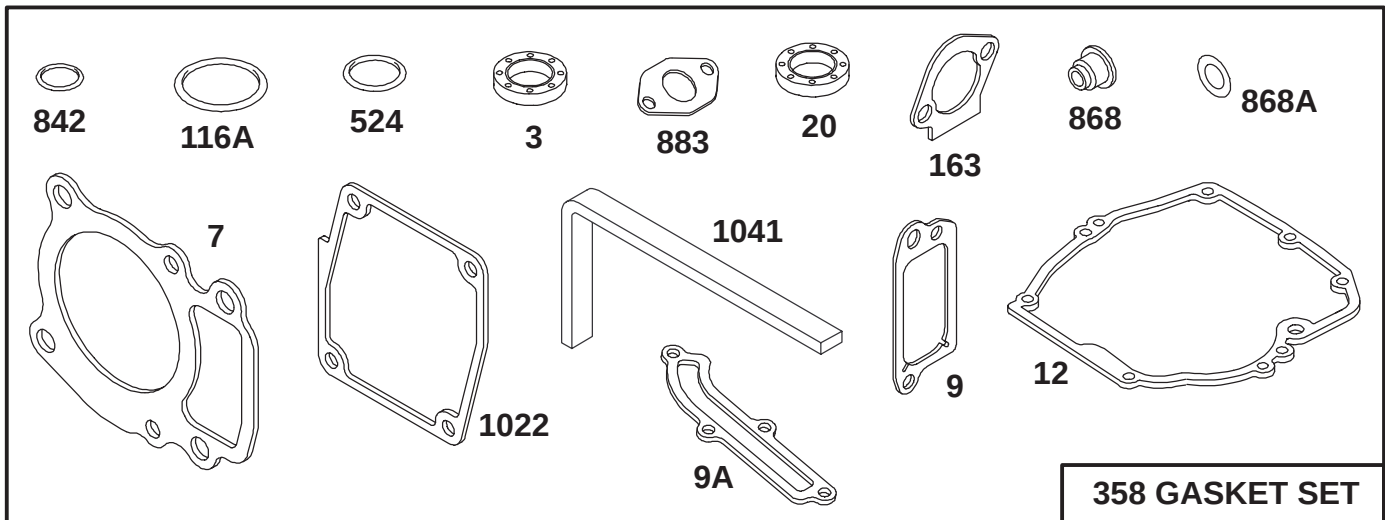

Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
†3	77-9060	Seal – Oil (Upper)	1
†7	77-7740	Gasket – Cylinder Head	1
†9	77-9250	Gasket – Breather	1
†9A	77-7410	Gasket – Breather Cover	1
†12	77-7550	Gasket – Engine Base	1
†20	77-7570	Seal – Oil (Lower)	1
‡104	77-8180	Pin – Float Hinge	1
‡*116	77-8210	Washer – Bowl	1
†116A	77-7660	Seal – O-Ring	1
‡117	77-9610	Jet – Main	1
‡118	77-9620	Valve & Spring – Needle	1
121	77-9580	Overhaul Kit – Carburetor	1
‡122	77-7820	Adapter Assy	1
‡127	94-1651	Plug – Welch	1
‡134	77-8110	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
‡*137	77-8200	Gasket – Float Bowl	1
†163	77-7960	Gasket – Air Cleaner	1
358	77-8900	Gasket Set	1
†524	77-7270	Seal – O-Ring (Oil Fill Cap)	1
*634	77-8150	Washer – Seal	1
†842	77-7300	Seal – O-Ring (Oil Fill Tube)	1
†868	77-7890	Seal Assy – Valve	1
†868A	77-7900	Seal – Valve	1
†883	77-7760	Gasket – Exhaust	1
977	77-8930	Carburetor Gasket Set	1
†1022	77-7320	Gasket – Rocker Cover	1
‡1039	77-7250	Limiter – Float	1
†1041	77-8590	Seal – Foam (Fuel Tank)	1
‡1091	77-9650	Cap – Limiter	1

‡ Incl. in Carburetor Overhaul Kit – Part No. 77-9580

*Incl. in Carburetor Gasket Set – Part No. 77-8930

† Included in Gasket Set – Part No. 77-8900

TORO PART NUMBER INDEX

3319-192

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
11-0580	Screw	3 45 1	65-2720	Ring - Retaining	6 24 4
14-9949	Asm - Wheel & Tire, 8	1 22 2	65-4710	Ring - Friction	6 25 2
14-9959	Wheel Tire & Gear Assy.	6 31 2	65-4720	Spring - Compression	6 29 2
16-1769	Housing	1 11	65-4730	Washer - Thrust (Inner)	6 22 2
16-8969	Panel - Control	4 17	65-4740	Washer - Thrust (Keyed)	6 23 4
17-1569	Door - Discharge	1 1	65-4750	Pinion	6 28 2
17-9425	Screw - Handle	8 6 1	65-4760	Washer - Clutch	6 26 2
17-9426	Screw	8 23 1	65-4770	Shaft - Output	6 17 1
19-4050	Knob	4 2 2	65-5042	Pivot Arm Assembly	6 2 2
25-7740	Knob - Arm	6 3 2	65-5070	Hub - Plate	3 2 1
25-7740	Knob - Arm	1 14 2	65-5130	Hub - Pulley	3 4 2
27-6231	Bolt - Wheel	1 23 2	65-5190	Bracket - Belt Guide	6 7 1
27-6231	Bolt - Wheel	6 33 2	65-5200	Shield - BBC	3 33 1
27-6250	Bushing - Wheel	6 32 4	65-5210	Screw	1 4 2
27-6250	Bushing - Wheel	1 38 4	65-5220	Screw	1 16 2
29-9570	Bushing - Yoke	6 38 1	65-5220	Screw - Socket Hd. Cap	6 36 2
36-4780	Washer - Thrust	6 44 1	65-5250	Clip - Spring	6 43 1
36-4791	Washer - Thrust	7 48 2	65-5280	Retainer - Spring	3 24 1
36-8070	V-Belt	6 13 1	65-5300	Flywheel - BBC	3 27 1
38-7820	Bearing - Ball	7 60 1	65-5320	Rod - Spring	3 6 1
40-1940	Washer	1 15 4	65-5330	Screen - BBC	3 39 1
42-3190	Bolt - Blade	3 28 2	65-5380	Washer - Flat	3 46 1
42-6890	Asm - Hub	3 32 1	65-5440	Spring Arm Assembly	6 4 2
46-5460	Housing - Control LH	8 7 1	65-5660	Panel - Screen	1 9 1
46-5510	Spring - Torsion	8 11 1	65-5670	Bolt - Shoulder	3 7 1
46-5520	Lever - Traction	8 21 1	65-5690	Bushing - Bellcrank	3 18 1
46-5530	Hook - Control	8 14 1	65-5700	Crank	3 19 1
46-5540	Lever - Cable	8 3 1	65-5720	Bushing	3 11 1
46-5550	Bushing	8 10 1	65-5740	V-Belt	3 3 1
46-5590	Spacer	8 8 1	65-5780	Shoe - Brake	3 1 1
46-5650	Pulley - Idler	3 43 1	66-0020	Panel - Vertical	1 12 1
46-6431	Screw - Handle	8 5 1	66-0030	Bracket - Cable Support	3 16 1
46-7040	Screw - Hex Washer Hd.	3 13 1	66-0090	Lever - Brake	3 10 1
46-7040	Screw - Hex Washer Hd.	8 16 3	66-0160	Housing - Control RH	8 15 1
48-2060	Bearing - Needle	6 21 2	66-0170	Washer - Nylon	8 18 1
49-2040	Screw - Self Tapping	6 8 8	66-0180	Rocker	8 4 1
52-3480	Damper - Vibration	3 42 2	66-0190	Spring - Detent	8 19 1
52-7410	Spring - Leaf	8 13 1	66-0330	Spacer - Support	8 24 1
52-7430	Bar - Control	8 20 1	66-0350	Bushing - Flange	3 9 1
54-9190	Nut - Lock	3 37 2	66-0360	Cap - End	6 5 2
55-3760	Gear - Pinion 15T	7 49 1	66-0540	Asm - Spring Arm, Front	1 18 2
55-3770	Gear - 49T (1st Gear)	7 58 1	66-0560	Screw - Shoulder	1 21 2
55-3780	Gear - Pinion 20T	7 50 1	66-0570	Guide - Belt	2 9 1
55-3790	Gear - 44T (2nd Gear)	7 57 1	66-0580	Arm - Pivot	1 20 2
55-3800	Gear - Pinion 25T	7 51 1	66-6040	Key - Rocking (R.H.)	6 * 1
55-3810	Gear - 39T (3rd Gear)	7 56 1	66-6050	Key - Rocking (L.H.)	6 27 1
57-6290	Pin - Insert	8 12 1	70-9760	Bushing - Sleeve	6 19 2
60-8710	Case - Gear (Upper)	7 61 1	71-3630	Spring - Compression	3 23 1
60-8730	Cover - Gear Case	7 46 1	71-3640	Spring - Compression	3 8 1
60-8750	Bushing - Intrmdt. Shaft	7 47 2	71-3650	Link - Control	3 21 1
60-8770	Bushing - Output Shaft	7 45 1	71-3660	Pin-Spring	3 20 1
60-8790	Sleeve - Gear	7 55 1	71-7900	Cap-Bolt, Hinge LH	1 2 1
60-8800	Shaft - Intermediate	7 52 1	71-7910	Cap - Bolt, Hinge RH	1 5 1
60-8810	Retainer - Shift Fork	6 39 1	71-8090	Mount - Handle LH	4 1 1
60-8840	Pulley - Half	6 10 2	71-8100	Mount - Handle RH	4 24 1
60-8850	Bushing - Output Shaft	7 53 1	71-8580	Spacer - Door	1 28 2
60-8870	Yoke - Shift	6 37 1	71-9470	Door - Bag	5 3 1
60-8890	Pinion - Bevel	7 59 1	71-9480	Handle - Door	5 2 1
62-3890	Drum - Brake	3 31 1	71-9640	Ramp - Discharge	1 19 1
62-4280	Spacer - Blade	3 34 1	71-9650	Access - Cover	1 25 1
62-6660	Spacer	6 9 1	71-9680	Bag - Grass	5 5 1
62-6673	Gear Case Assy. Complete	7 * 1	71-9840	Spring - Door	1 29 2
62-7560	Pulley - Driver	3 26 1	71-9870	Decal - Deck	1 13 1
62-7700	Blade - 53cm	3 35 1	71-9872	Decal - Panel	4 9 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
71-9920	Cover - Top	1 24 1	77-7740	Gasket - Cylinder Head	9 7 1
71-9930	Frame	5 4 1	77-7760	Gasket - Exhaust	16 883 1
74-1660	Cover - Wheel	6 30 2	77-7760	Gasket - Exhaust	9 883 1
74-1670	Spacer - Wheel Cover	6 34 2	77-7760	Gasket - Exhaust	15 883 1
76-0760	Key - Shift	6 41 2	77-7770	Guide - Push Rod	91034 1
76-0770	Collar - Shift	6 42 1	77-7780	Stud - Rocker Arm	9 166 1
76-0780	Sleeve - Shift Key	6 40 1	77-7790	Arm - Rocker	91029 1
76-0920	Lever - Shift	6 16 1	77-7800	Cap - Valve	9 238 1
76-2930	Retainer - Cable	6 15 1	77-7810	Spring - Valve	9 35 1
77-7040	Cover - Air Cleaner	12 968 1	77-7820	Adapter Assy	11 122 1
77-7140	Bracket - Blower Housing	14 980 1	77-7820	Adapter Assy	16 122 1
77-7170	Bracket - Fuel Tank	15 182 1	77-7820	Adapter Assy	9 122 1
77-7190	Guard - Flywheel	14 37 1	77-7860	Valve - Exhaust	9 33 1
77-7210	Insert - Rewind Handle	13 59 1	77-7870	Retainer - Spring	9 40 1
77-7240	Bowl - Fuel	11 136 1	77-7880	Valve - Intake	9 34 1
77-7250	Limiter - Float	111039 1	77-7890	Seal Assy - Valve	16 868 1
77-7250	Limiter - Float	161039 1	77-7890	Seal Assy - Valve	9 868 1
77-7260	Dipstick - Oil	10 523 1	77-7900	Gasket - Valve	9868A 1
77-7270	Seal - O-Ring	10 524 1	77-7900	Seal - Valve	16868A 1
77-7270	Seal - O-Ring	16 524 1	77-7910	Ball & Screw - Rocker Arm	9 192 1
77-7280	Tube - Oil Fill	10 525 1	77-7920	Screw - Air Cleaner	12 969 1
77-7300	Seal - O-Ring	10 842 1	77-7930	Screw - Air Cleaner	12 971 1
77-7300	Seal - O-Ring	16 842 1	77-7940	Base - Air Cleaner	12 966 1
77-7320	Gasket - Rocker Cover	161022 1	77-7950	Element - Filter	12 535 1
77-7320	Gasket - Rocker Cover	91022 1	77-7960	Gasket - Air Cleaner	12 163 1
77-7330	Plug - Spark	9 337 1	77-7960	Gasket - Air Cleaner	16 163 1
77-7340	Elbow - Spark Plug	9 635 1	77-7970	Screw - Hex Head	11 124 1
77-7360	Screw - Hex Head	9 10 1	77-7980	Link - Governor	12 201 1
77-7370	Lever Assembly - Governor	10 227 1	77-8000	Bracket - Carburetor	12 620 1
77-7380	Bolt - Governor Lever	10 562 1	77-8010	Switch - Stop	12 621 1
77-7390	Nut - Hex	10 592 1	77-8020	Screw Assy - Speed Adj.	12 98A 1
77-7400	Cover - Breather	9 572 1	77-8030	Tube - Breather	12 529 1
77-7410	Gasket - Breather	9 9A 1	77-8040	Tube - Vent	111011 1
77-7410	Gasket - Breather Cover	16 9A 1	77-8080	Valve - Throttle	11 130 1
77-7420	Screw - Cover Mtg	9 307 1	77-8090	Screw - Valve Mtg	11 95 1
77-7450	Screw - Hex Head	14 188 1	77-8100	Plug - Welch	11 127 1
77-7460	Crank - Governor	10 616 1	77-8110	Valve - Inlet	11 134 1
77-7470	Washer	10 230 1	77-8110	Valve - Inlet	16 134 1
77-7480	Push Nut	10 615 1	77-8130	Shaft - Choke	11 141 1
77-7490	Gear - Cam	10 46 1	77-8140	Spring - Choke	12 618 1
77-7500	Gear - Governor	10 219 1	77-8150	Washer - Seal	11*634 1
77-7510	Crankshaft	10 16 1	77-8150	Washer - Seal	16*634 1
77-7530	Gear - Timing	10 741 1	77-8160	Shaft - Throttle	11 131 1
77-7550	Gasket - Engine Base	10 12 1	77-8170	Float - Carburetor	11 133 1
77-7550	Gasket - Engine Base	16 12 1	77-8180	Pin - Float Hinge	11 104 1
77-7560	Base - Engine	10 18 1	77-8180	Pin - Float Hinge	16 104 1
77-7570	Seal - Oil	10 20 1	77-8190	Bowl Assy - Carburetor	11 975 1
77-7570	Seal - Oil	16 20 1	77-8200	Gasket - Float Bowl	11*137 1
77-7590	Cylinder Assy	9 1 1	77-8200	Gasket - Float Bowl	16*137 1
77-7600	Pin - Dowel	9 718 1	77-8210	Gasket - Sealing	11*116 1
77-7610	Tappet - Valve	9 45 1	77-8220	Screw - Hex Head	11 955 1
77-7620	Rod - Push	91026 1	77-8240	Screw - Idle Adj.	11 98 1
77-7630	Screw - Cylinder Head	9 13 1	77-8300	Screw - Hex Head	13 65 1
77-7640	Pump - Oil	101024 1	77-8310	Screw - Hex Head	10 305 1
77-7650	Cover - Oil Pump	10 979 1	77-8310	Screw - Hex Head	14 305 1
77-7660	O-Ring	10116A 1	77-8330	Flywheel - Magneto	14 23 1
77-7660	Seal - O-Ring	16116A 1	77-8340	Key - Flywheel	14 24 1
77-7680	Screw - Connecting Rod	10 32 1	77-8360	Nut - Flywheel	14 332 1
77-7690	Rod - Connecting	10 29 1	77-8400	Wire - Ground	14 356 1
77-7690	Piston Assy (Std.)	10 25 1	77-8420	Armature - Magneto	14 333 1
77-7700	Ring Set (Std.)	10 26 1	77-8460	Housing - Rewind Starter	13 55 1
77-7710	Lock - Piston Pin	10 27 1	77-8510	Handle - Rewind Starter	13 60 1
77-7730	Head - Cylinder	9 5 1	77-8580	Tank Assy - Fuel	15 180 1
77-7740	Gasket - Cylinder Head	16 7 1	77-8590	Seal - Foam	151041 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-192

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-8590	Seal - Foam	161041 1	94-1651	Plug - Welch	16 127 1
77-8600	Screw - Tank Mtg.	15 674 1	94-1652	Screw - Cap	15 188 1
77-8640	Muffler - Exhaust	15 300 1	94-1652	Screw - Hex Head	10 188 1
77-8900	Gasket Set	16 358 1	94-1652	Screw - Hex Head	12 188 1
77-8930	Carburetor Gasket Set	16 977 1	94-1653	Cup - Starter	13 455 1
77-9030	Spacer - Fuel Tank	15 670 1	94-1653	Cup - Starter	14 455 1
77-9060	Seal - Oil	16 3 1	94-1654	Pawl - Starter	13 459 1
77-9060	Seal - Oil	9 3 1	94-1657	Pulley - Rewind Starter	13 56 1
77-9070	Screw - Engine Base	10 22 1	94-1659	Retainer - Rewind Starter	13 456 1
77-9200	Screw - Hex Head	9 10A 1	94-1660	Screw - Rewind Starter	13 461 1
77-9250	Gasket - Breather	16 9 1	94-1661	Starter Assy - Rewind	13 608 1
77-9250	Gasket - Breather	9 9 1	94-1655	Spring - Torsion	13 515 1
77-9260	Breather Assy	9 8 1	94-1665	Plug - Pipe	10 15 1
77-9290	Guard - Muffler	15 832 1	94-1668	Rope - Starter	13 58 1
77-9320	Cover - Valve	9 1023 1	94-1676	Screw - Hex Head	15 188A 1
77-9340	Pin Assembly - Piston	10 28 1	94-1680	Housing - Blower	14 304 1
77-9410	Tube - Breather	9 11 1	94-4910	Handle	4 16 1
77-9420	Screw - Armature Mtg.	14 334 1	2210-249	Clamp - Casting	2 8 1
77-9430	Screw - Hex Head	15 346 1	237-153	Seal - ORing	6 18 2
77-9450	Terminal - Spark Plug	14 851 1	253-151	Seal - Ring	3 12 1
77-9560	Screw - Set	9 192A 1	302-56	Fitting - Grease	6 20 2
77-9580	Overhaul Kit - Carburetor	16 121 1	321-13	Screw - Hex Hd.	3 44 2
77-9600	Valve - Choke	11 108 1	322-21	Screw - Hex Hd.	3 22 1
77-9610	Jet - Main	11 117 1	322-29	Screw - Hex Head	1 3 2
77-9610	Jet - Main	16 117 1	3256-23	Washer - Flat	3 17 2
77-9620	Valve & Spring - Needle	11 118 1	3256-24	Washer - Flat	6 12 1
77-9620	Valve & Spring - Needle	16 118 1	3257-17	Key - Woodruff	3 25 1
77-9630	Carburetor Assy	11 125 1	3272-5	Pin - Cotter	6 14 1
77-9640	Jet - Pilot	11 147 1	3290-378	Tie - Cable	4 25 5
77-9650	Cap - Limiter	11 1091 1	3296-5	Nut - Lock	6 11 1
77-9650	Cap - Limiter	16 1091 1	3296-6	Nut - Lock	1 17 4
78-4100	Hose - Fuel	15 187 1	3296-6	Nut - Lock	6 35 2
78-4690	Clamp - Hose	15 601 1	3296-8	Nut - Lock	8 17 1
80-2770	Cup - Anti Scalp	3 36 1	3296-33	Nut - Lock, Nylon	3 38 1
86-7990	Screw - Clamp	2 7 1	3296-42	Nut - Lock	3 5 2
92-2289	Plate - Logo, Toro	2 3 1	3296-58	Nut - Flange	8 22 2
92-9665	Screw	4 7 4	32121-9	Pin - Roll	8 9 1
93-4105	Decal - Bag Door	1 36 1	32121-120	Pin - Coil	7 54 1
93-4355	Decal - Engine	2 2 1	32128-44	Nut - Flange	3 15 1
93-6629	Asm - Cable	8 1 1	32144-70	Screw - Hex. Washer Hd.	6 1 5
93-6630	Control - Throttle	4 19 1	32144-70	Screw - Tap	1 8 6
93-6632	Control - Speed	4 23 1	32144-70	Screw - Tap	2 11 2
93-6633	Cable - Traction	8 2 1	32144-70	Screw - Tap	3 14 5
93-6656	Decal - Instruction	4 10 1	32144-102	Screw	2 10 3
93-7198	Asm - Cap, Gas	2 1 1	32144-111	Screw - Phillips Pan Hd.	5 1 5
94-1605	Engine - GTS 150	2 4			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]