 


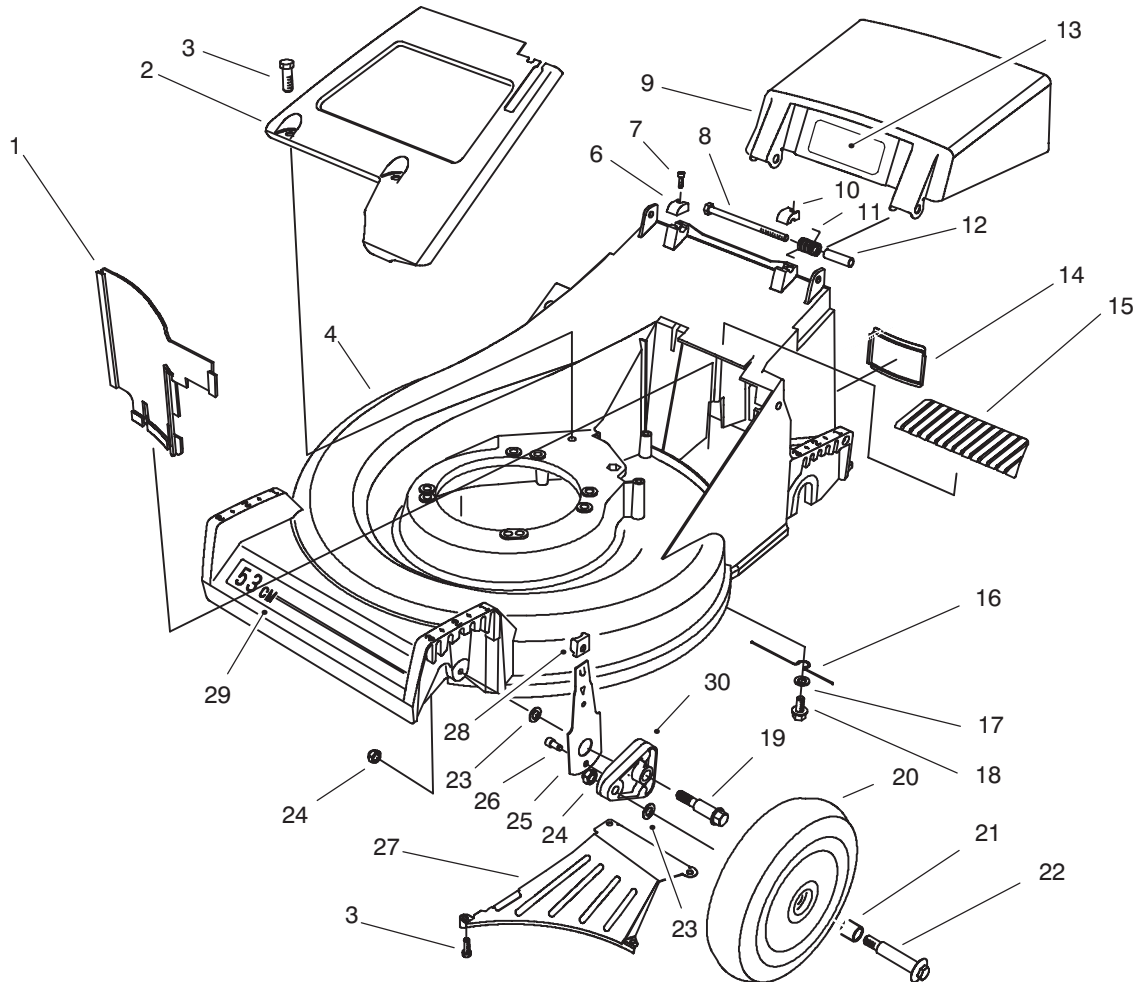

MODEL NO. 26636-7900001 & UP


**PARTS
CATALOG**
53cm KEY-LECTRIC®
 Rear Bagging Mower


C-2215

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1
2	65-5660	Panel - Screen	1
3	32144-70	Screw - Cap Hex. Hd.	6
4	16-1769	Housing - 53cm (Incl. Ref. #29)	1
6	71-7910	Cap - Hinge Bolt R.H.	1
7	65-5210	Screw - Thread Forming	2
8	322-29	Screw - Hex Hd. Cap	2
9	17-1569	Door - Discharge (Incl. Ref. #13)	1
10	71-7900	Cap - Hinge Bolt L.H.	1
11	71-9840	Spring - Door	2
12	71-8580	Spacer - Door	2
13	93-4105	Decal - Danger	1
14	71-9650	Access - Cover	1

Ref. No.	Part No.	Description	No. Used
15	71-9920	Cover - Top	1
16	66-0620	Retainer - Belt	1
17	3256-24	Washer - Flat	1
18	32144-15	Screw - Hex Flange Hd.	1
19	66-0560	Screw - Shoulder	2
20	14-9949	Wheel & Tire Assembly (Incl. Ref. #21)	2
21	27-6250	Bushing - Wheel	4
22	27-6231	Bolt - Wheel	2
23	40-1940	Washer - Wheel Bolt	4
24	3296-6	Nut - Lock	4
25	66-0540	Arm - Spring Front	2
26	65-5220	Screw - Cap Socket Hd.	2
27	71-9640	Ramp - Discharge	1
28	25-7740	Knob - Arm	2

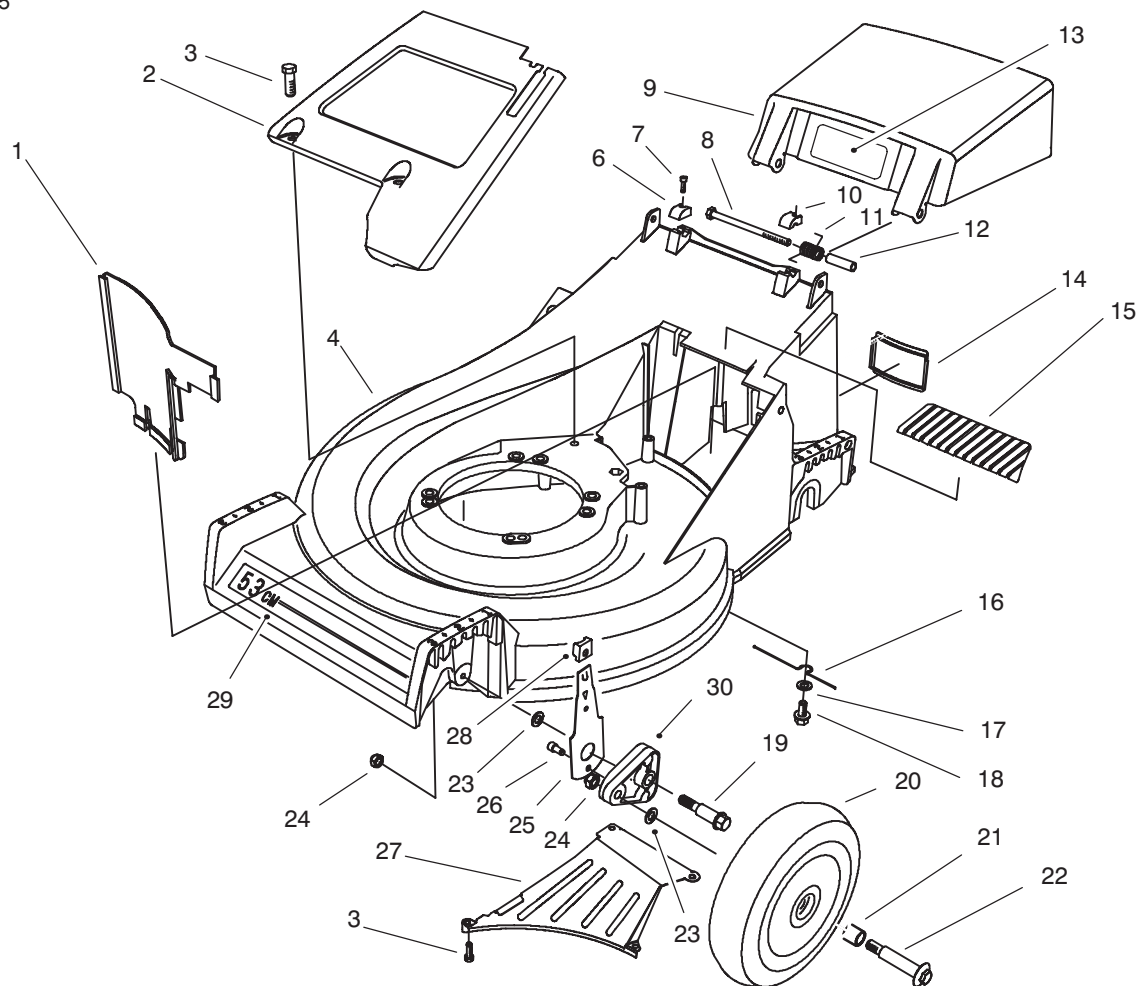 


C-2215

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	71-9870	Decal - Deck 53cm	1
30	66-0580	Arm - Pivot	2

 *Not Illustrated

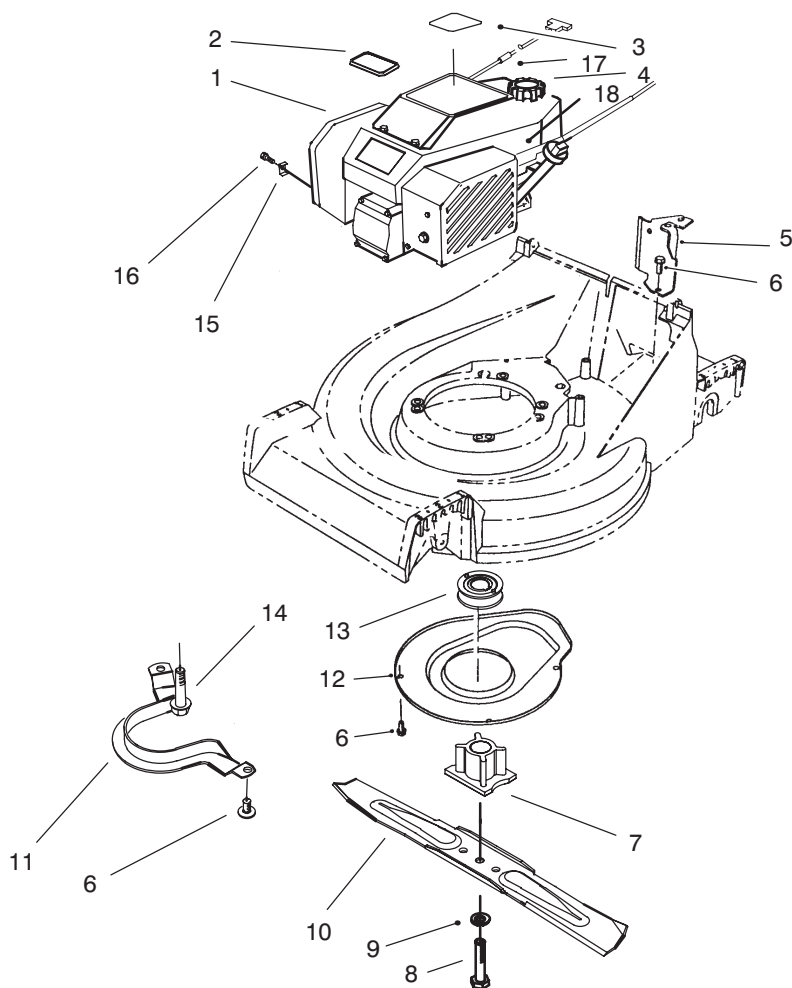


C-2084

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-8953	Engine	1
2	92-2289	Plate - TORO Logo	1
3	93-4355	Decal - Recoil	1
4	93-7198	Gas Cap Assembly	1
5	66-0030	Bracket - Cable Support	1
6	32144-70	Screw - Hex Hd. Cap	7
7	62-7540	Retainer - Blade	1
8	26-0670	Bolt - Blade	1
9	3253-22	Washer - Blade	1

Ref. No.	Part No.	Description	No. Used
10	62-7700	Blade - 53cm	1
11	66-0570	Guide - Belt	1
12	65-5200	Cover	1
13	62-7550	Pulley - Engine	1
14	32144-102	Screw - Thread Forming	3
15	2210-249	Clamp - Throttle	1
16	86-7990	Screw - Clamp	1
17	2210-316	Stop - Rope	1
18	77-9550	Cover - Brake	1

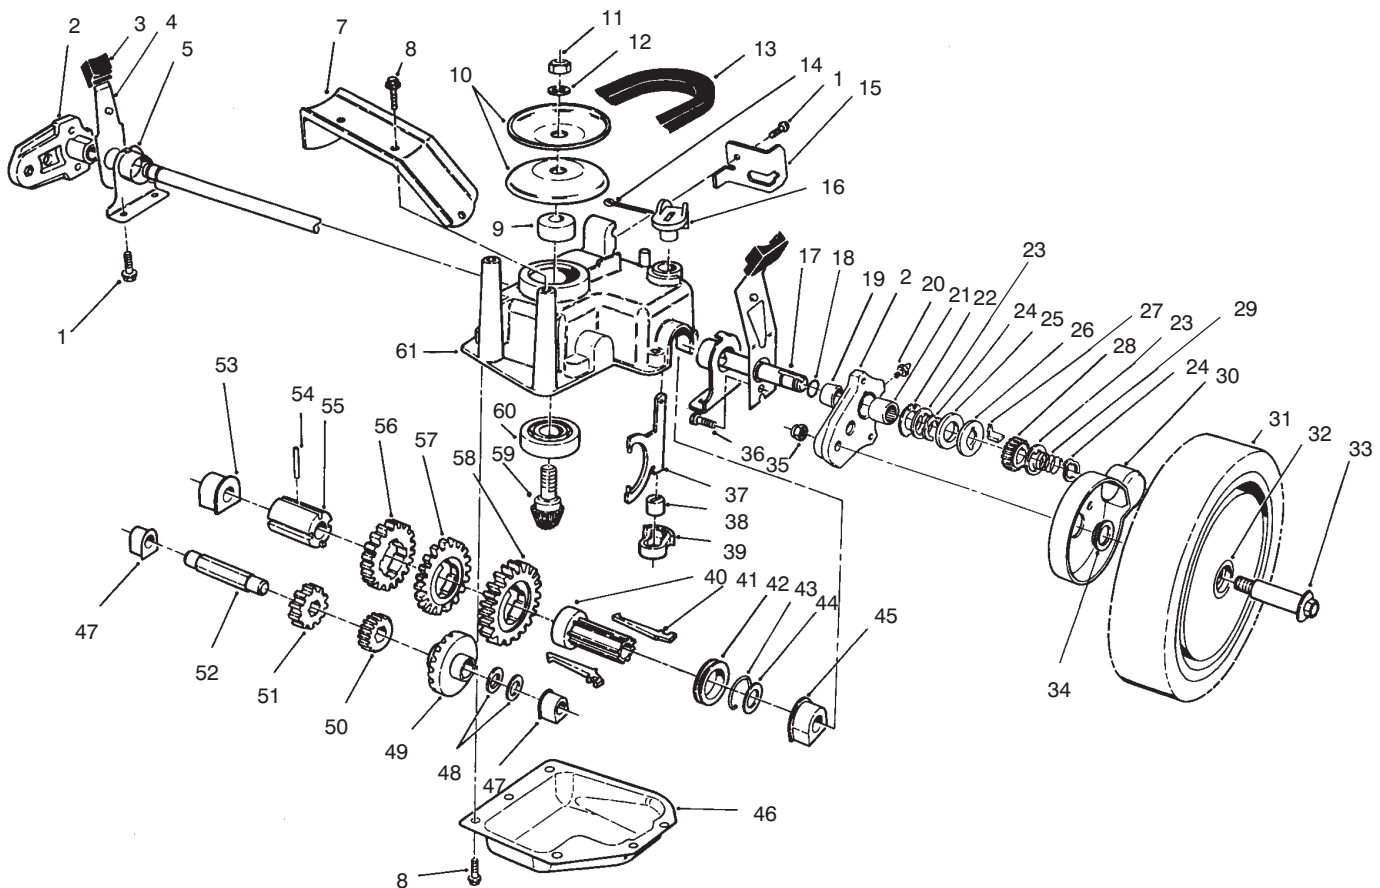 


C-1555

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	5	24	65-2720	Ring - Retaining	4
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2	25	65-4710	Ring - Friction	2
3	25-7740	Knob - Arm	2	26	65-4760	Washer - Clutch	2
4	65-5440	Spring Arm Assembly	2	27	66-6050	Key - Rocking (L.H.)	1
5	66-0360	Cap - End	2	*	66-6040	Key - Rocking (R.H.)	1
7	65-5190	Bracket - Belt Guide	1	28	65-4750	Pinion	2
8	49-2040	Screw - Self Tapping	8	29	65-4720	Spring - Compression	2
9	62-6660	Spacer	1	30	74-1660	Cover - Wheel	2
10	60-8840	Pulley - Half	2	31	14-9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
11	3296-5	Nut - Lock	1	32	27-6250	Bushing - Wheel	4
12	3256-24	Washer - Flat	1	33	27-6231	Bolt - Wheel	2
13	36-8070	V-Belt	1	34	74-1670	Spacer - Wheel Cover	2
14	3272-5	Pin - Cotter	1	35	3296-6	Nut - Lock	2
15	76-2930	Retainer - Cable	1	36	65-5220	Screw - Socket Hd. Cap	2
16	76-0920	Lever - Shift	1	37	60-8870	Yoke - Shift	1
17	65-4770	Shaft - Output	1	38	29-9570	Bushing - Yoke	1
18	237-153	Seal - "O" Ring	2	39	60-8810	Retainer - Shift Fork	1
19	70-9760	Bushing - Sleeve	2	40	76-0780	Sleeve - Shift Key	1
20	302-56	Fitting - Grease	2	41	76-0760	Key - Shift	2
21	48-2060	Bearing - Needle	2	42	76-0770	Collar - Shift	1
22	65-4730	Washer - Thrust (Inner)	2	43	65-5250	Clip - Spring	1
23	65-4740	Washer - Thrust (Keyed)	4	44	36-4780	Washer - Thrust	1

 *Not Illustrated

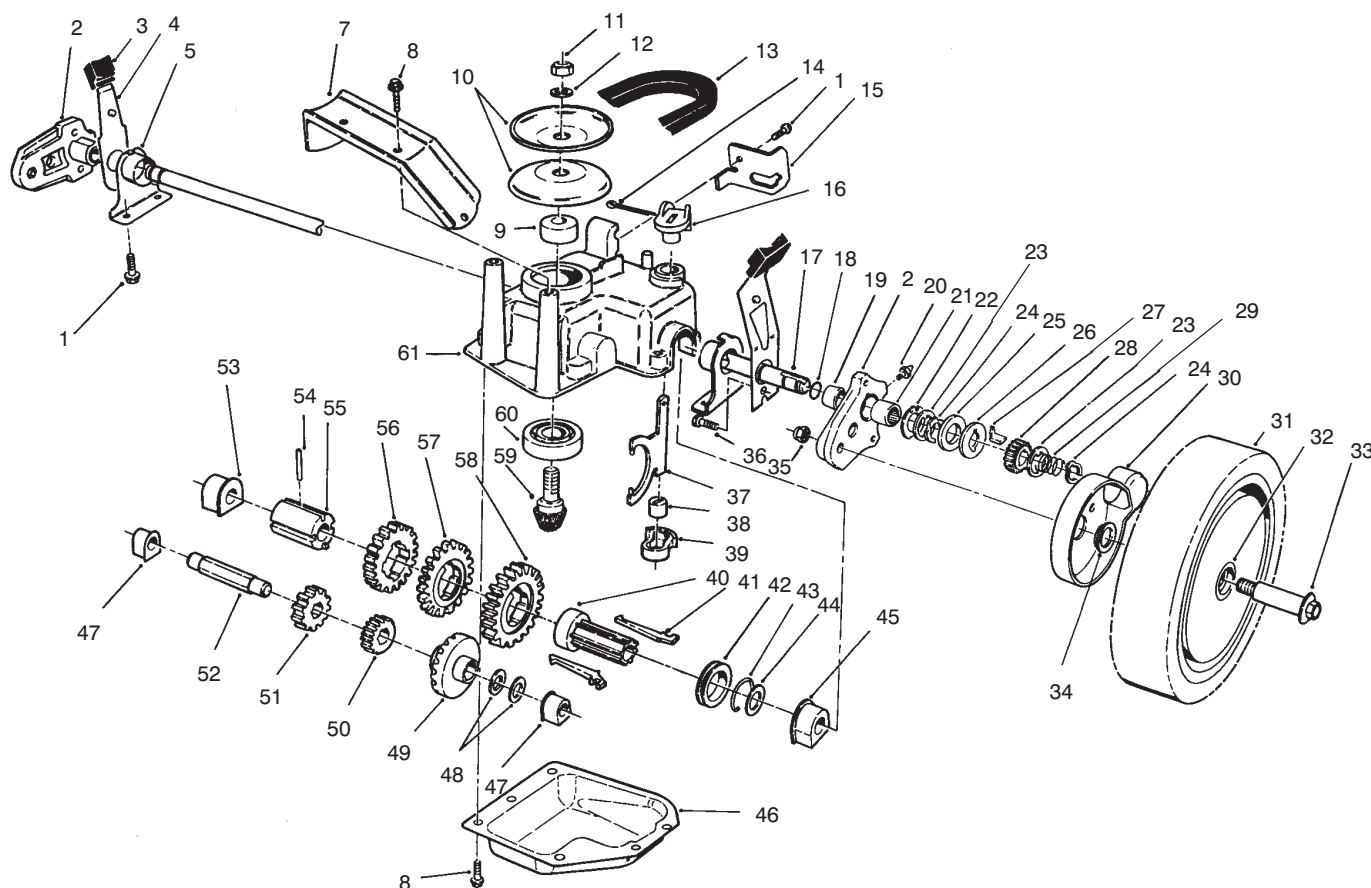


C-1555

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing - Output Shaft	1	54	32121-120	Pin - Coil	1
46	60-8730	Cover - Gear Case	1	55	60-8790	Sleeve - Gear	1
47	60-8750	Bushing - Intrmdt. Shaft	2	56	55-3810	Gear - 39T (3rd Gear)	1
48	36-4791	Washer - Thrust	2	57	55-3790	Gear - 44T (2nd Gear)	1
49	55-3760	Gear - Pinion 15T	1	58	55-3770	Gear - 49T (1st Gear)	1
50	55-3780	Gear - Pinion 20T	1	59	60-8890	Pinion - Bevel	1
51	55-3800	Gear - Pinion 25T	1	60	38-7820	Bearing - Ball	1
52	60-8800	Shaft - Intermediate	1	61	60-8710	Case - Gear (Upper)	1
53	60-8850	Bushing - Output Shaft	1	*	62-6673	Gear Case Assy. Complete	1

 *Not Illustrated

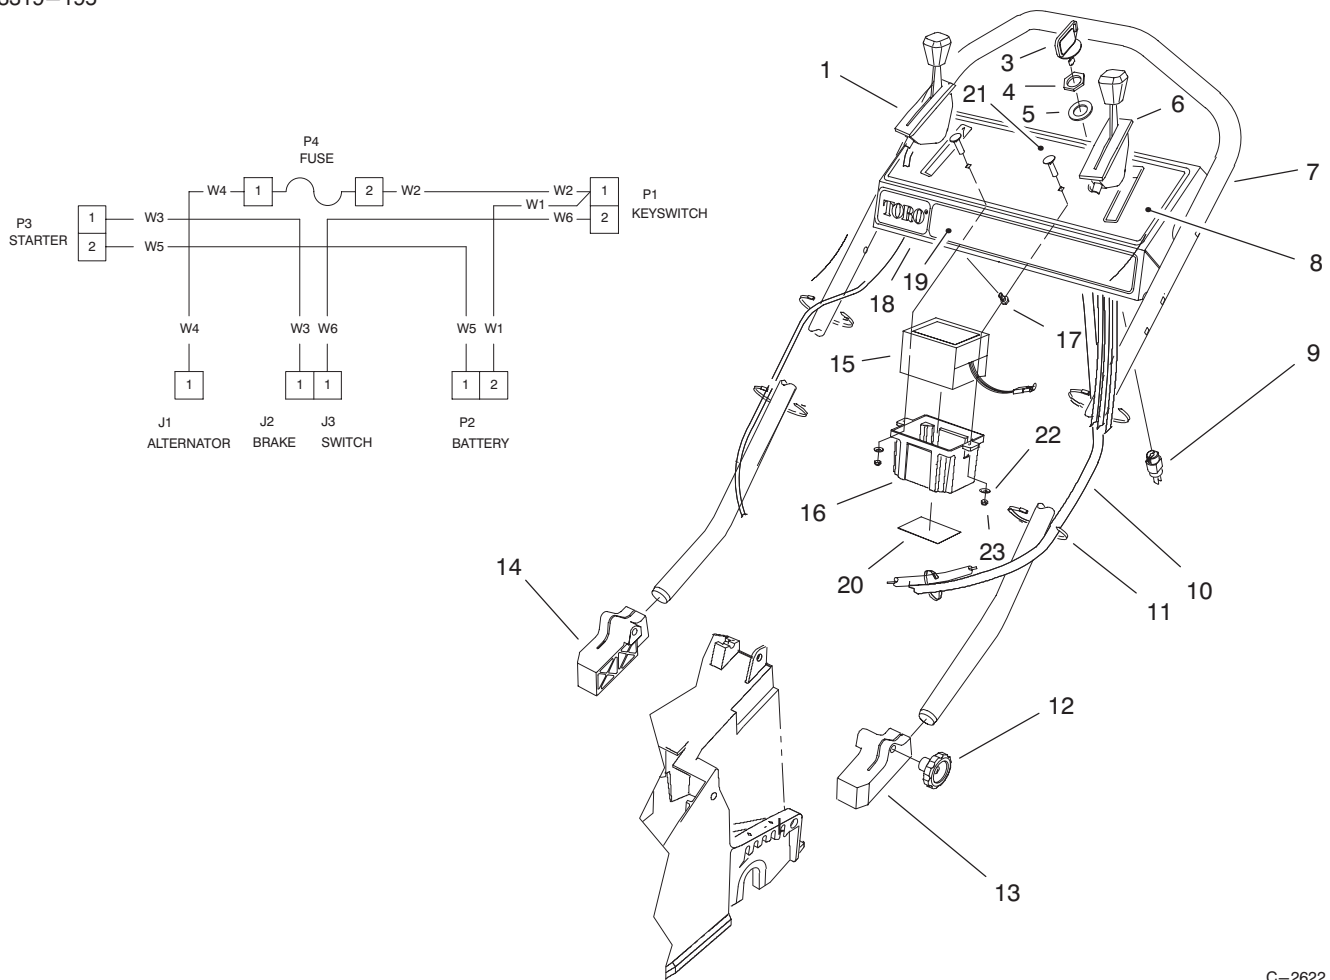


C-2622

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-6632	Control - Ground Speed	1
3	63-8360	Key - Ignition	1
4	218-461	Nut - Lock	1
5	3254-5	Washer - Lock	1
6	93-6631	Control - Throttle	1
7	94-4910	Handle	1
8	95-3014	Decal - Instruction	1
9	46-5780	Switch - Starter (Incl. Ref. #4 & 5)	1
10	80-4795	Harness - Wire	1
11	3290-378	Tie - Cable	5
12	19-4050	Knob - Handle Release	2
13	71-8090	Mount - Handle L.H.	1

Ref. No.	Part No.	Description	No. Used
14	71-8100	Mount - Handle R.H.	1
15	55-7520	Battery	1
16	95-3017	Cover - Battery	1
17	92-9665	Screw - Self Tapping	5
18	95-6133	Panel - Control (Incl. Ref. #8 & 19)	1
19	71-9871	Decal - TORO	1
20	93-6668	Decal - Battery	1
21	3229-34	Bolt - Carriage	2
22	3256-14	Washer - Flat	2
23	3296-2	Nut - Lock	2
*	22-4710	Charger - Battery (220V)	1
*	94-1682	Fuse - 5 Amp	1

 *Not Illustrated

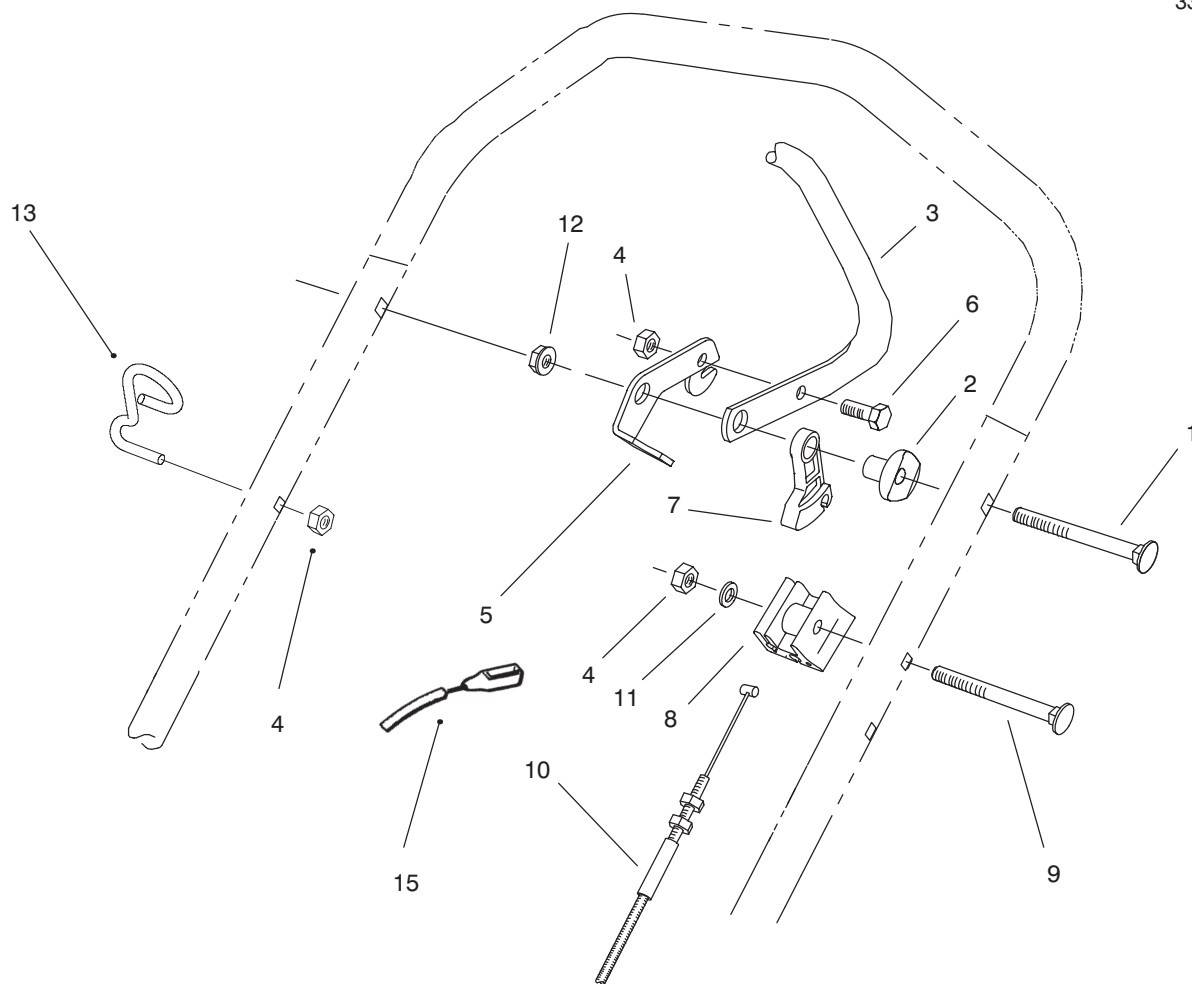


C-2217A

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9426	Screw – Handle	2
2	66-0330	Support – Spacer	2
3	52-7430	Control Bar Assembly	1
4	3296-42	Nut – Lock	3
5	66-5350	Lever – Control	1
6	321-3	Screw – Cap Hex. Hd.	1
7	46-5520	Lever – Traction	1

Ref. No.	Part No.	Description	No. Used
8	71-0960	Support – Cable	1
9	46-6432	Screw – Handle	1
10	93-6634	Cable – Traction	1
11	3256-22	Washer – Flat	1
12	3296-58	Nut – Lock	2
13	95-4478	Guide – Rope	1
15	93-6628	Cable – Brake	1

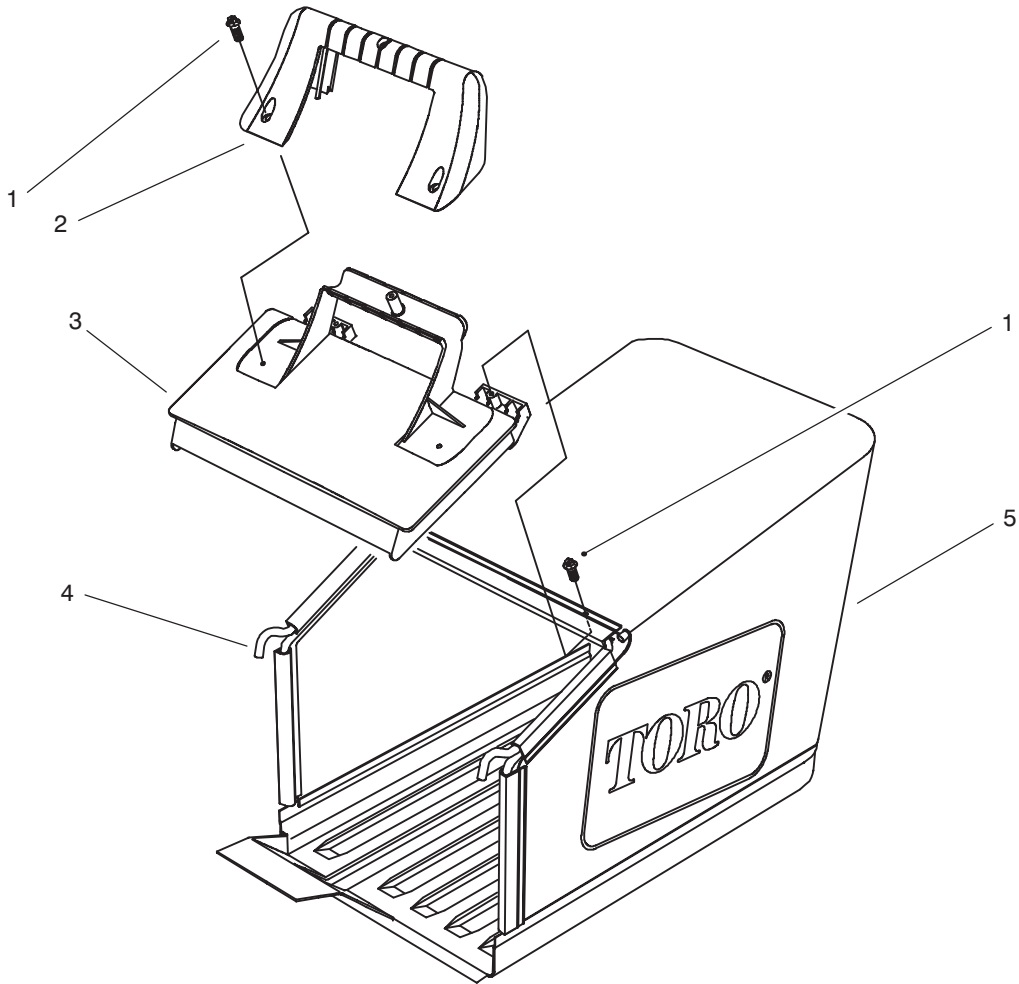 


C-1570

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Index Hex Washer Head	5
2	71-9480	Handle - Door	1

Ref. No.	Part No.	Description	No. Used
3	71-9470	Door - Bag	1
4	71-9930	Frame - Grass Bag	1
5	71-9680	Bag - Grass 53cm	1

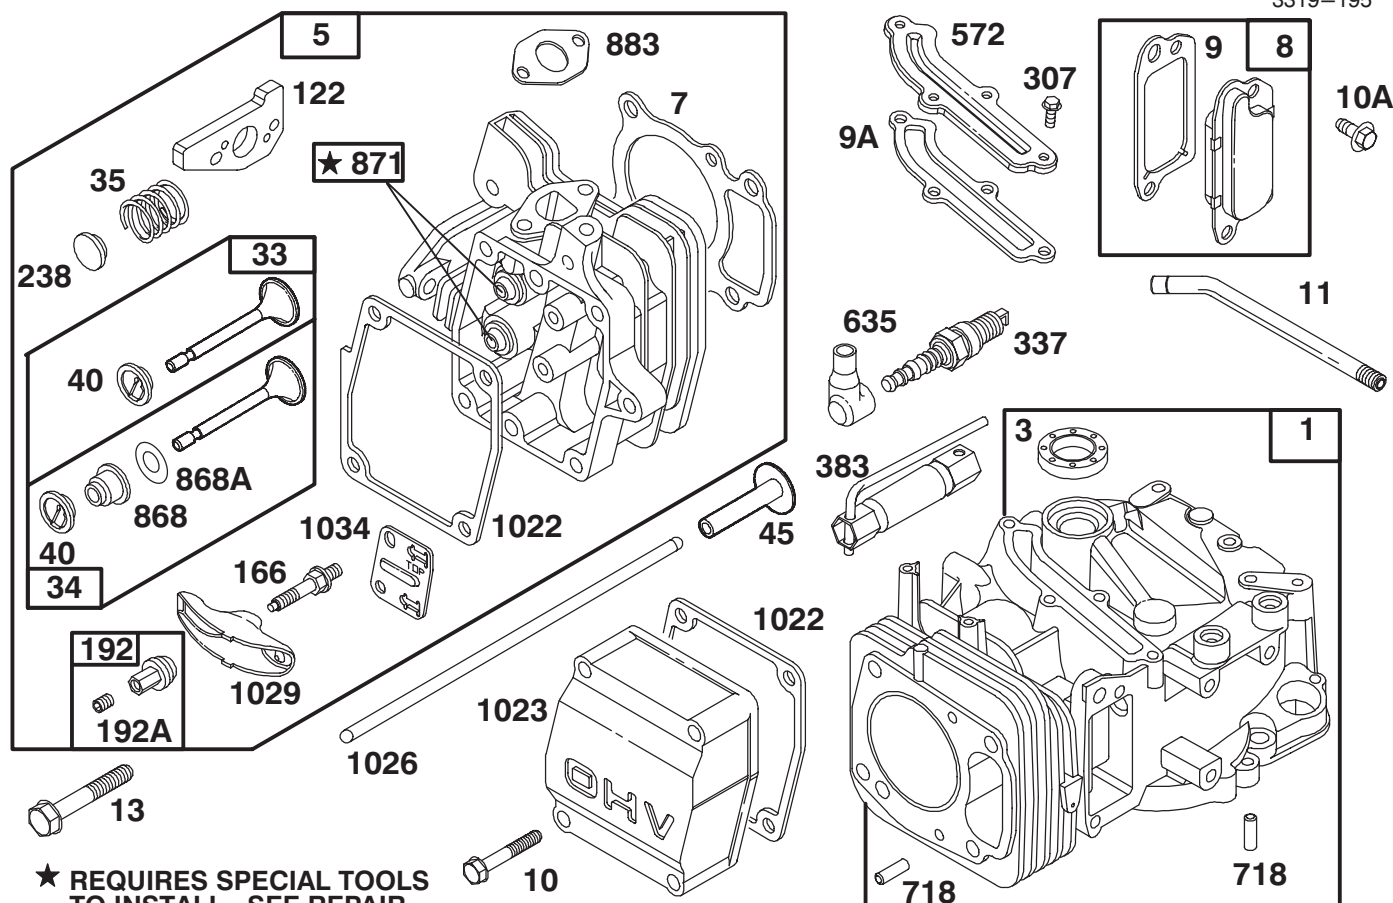 


ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Ass'y	1
★3	77-9060	Seal - Oil	1
5	77-7730	Head - Cylinder	1
★7	77-7740	Gasket - Cylinder Head	1
8	77-9300	Breather Ass'y	1
★9	77-9250	Gasket - Breather	1
★9A	77-7410	Gasket - Breather	1
10	77-7360	Screw - Hex Head (Valve Cover)	1
10A	77-9200	Screw - Hex Head	1
11	77-9410	Tube - Breather	1
13	77-7630	Screw - Cylinder Head	1
33	77-7860	Valve - Exhaust	1
34	77-7880	Valve - Intake	1
35	77-7810	Spring - Valve	1
40	77-7870	Retainer - Spring	1
45	77-7610	Tappet - Valve	1
●122	77-7820	Adapter Ass'y	1
166	77-7780	Stud - Rocker Arm	1
192	77-7910	Ball & Screw - Rocker Arm	1

Ref. No.	Part No.	Description	No. Used
192A	77-9310	Screw - Set	1
238	77-7800	Cap - Valve	1
307	77-7420	Screw - Breather Cover Mtg.	1
337	77-7330	Plug - Spark	1
383	94-1664	Wrench - Spark Plug	1
572	77-7400	Cover - Breather	1
635	77-7340	Elbow - Spark Plug	1
718	77-7600	Pin - Cylinder	1
★868	77-7890	Seal Ass'y - Valve	1
★868A	77-7900	Gasket - Valve	1
★883	77-7760	Gasket - Exhaust	1
★1022	77-7320	Gasket - Rocker Cover	1
1023	77-9320	Cover - Valve	1
1026	77-7620	Rod - Push	1
1029	77-7790	Arm - Rocker	1
1034	77-7770	Guide - Push Rod	1
	77-9020	Short Block	1

★ Included in Gasket Set-Part No. 77-8900

 ● Included in Carburetor Overhaul Kit-Part No. 77-9580

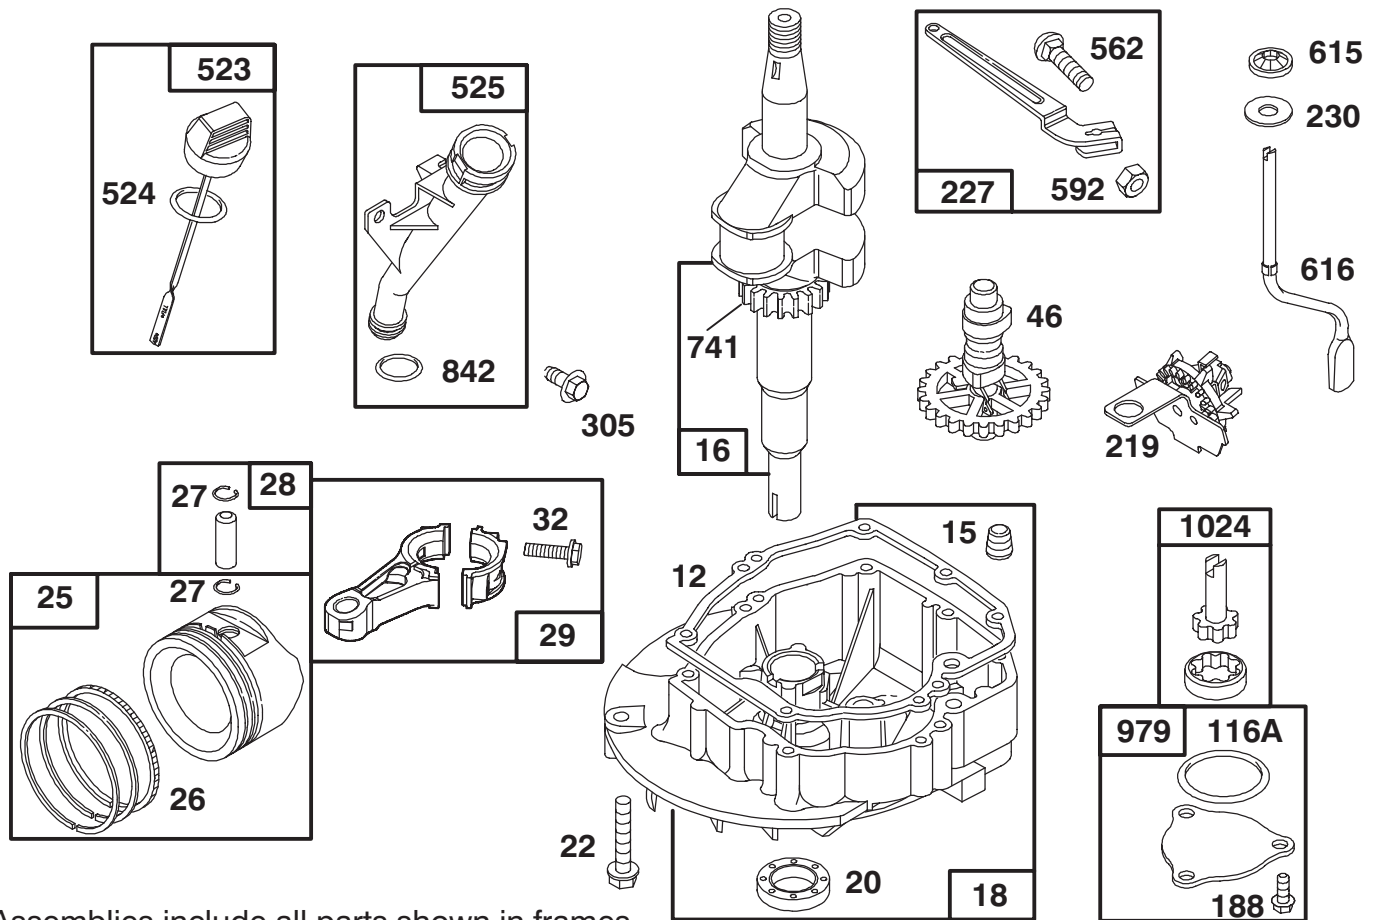


Assemblies include all parts shown in frames.

ENGINE GTS—150

Ref. No.	Part No.	Description	No. Used
★12	77-7550	Gasket — Engine Base	1
15	77-9240	Plug — Pipe	1
16	77-9330	Crankshaft	1
	Note: Order Part No. 77-7540 For Timing Gear Key		1
18	77-7560	Base — Engine	1
★20	77-7570	Seal — Oil	1
22	77-9070	Screw — Engine Base	1
	Note: 77-9080 Screw—Engine Base (Used in Hole Nearest Breather)		1
25	77-7690	Piston Ass'y (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock — Piston Pin	1
28	77-9340	Pin Ass'y — Piston	1
29	77-7670	Rod — Connecting	1
32	77-9350	Screw — Conn. Rod	1
46	77-7490	Gear — Cam	1

Ref. No.	Part No.	Description	No. Used
★116A	77-7660	O-Ring	1
188	94-1665	Screw — Hex Head	1
219	77-7500	Gear — Governor	1
227	77-7370	Lever Ass'y — Governor	1
230	77-7470	Washer	1
305	77-8310	Screw — Hex Head	1
523	77-7260	Dipstick — Oil	1
★524	77-7270	Seal — O-Ring	1
525	77-7280	Tube — Oil Filler	1
562	77-7380	Bolt — Governor Lever	1
592	77-7390	Nut — Hex	1
615	77-7480	Pushnut	1
616	77-7460	Crank — Governor	1
741	77-7530	Gear — Timing	1
★842	77-7300	Seal — O-Ring	1
979	77-7650	Cover — Oil Pump	1
1024	77-7640	Pump — Oil	1

 ★ Included in Gasket Set—Part No. 77-8900

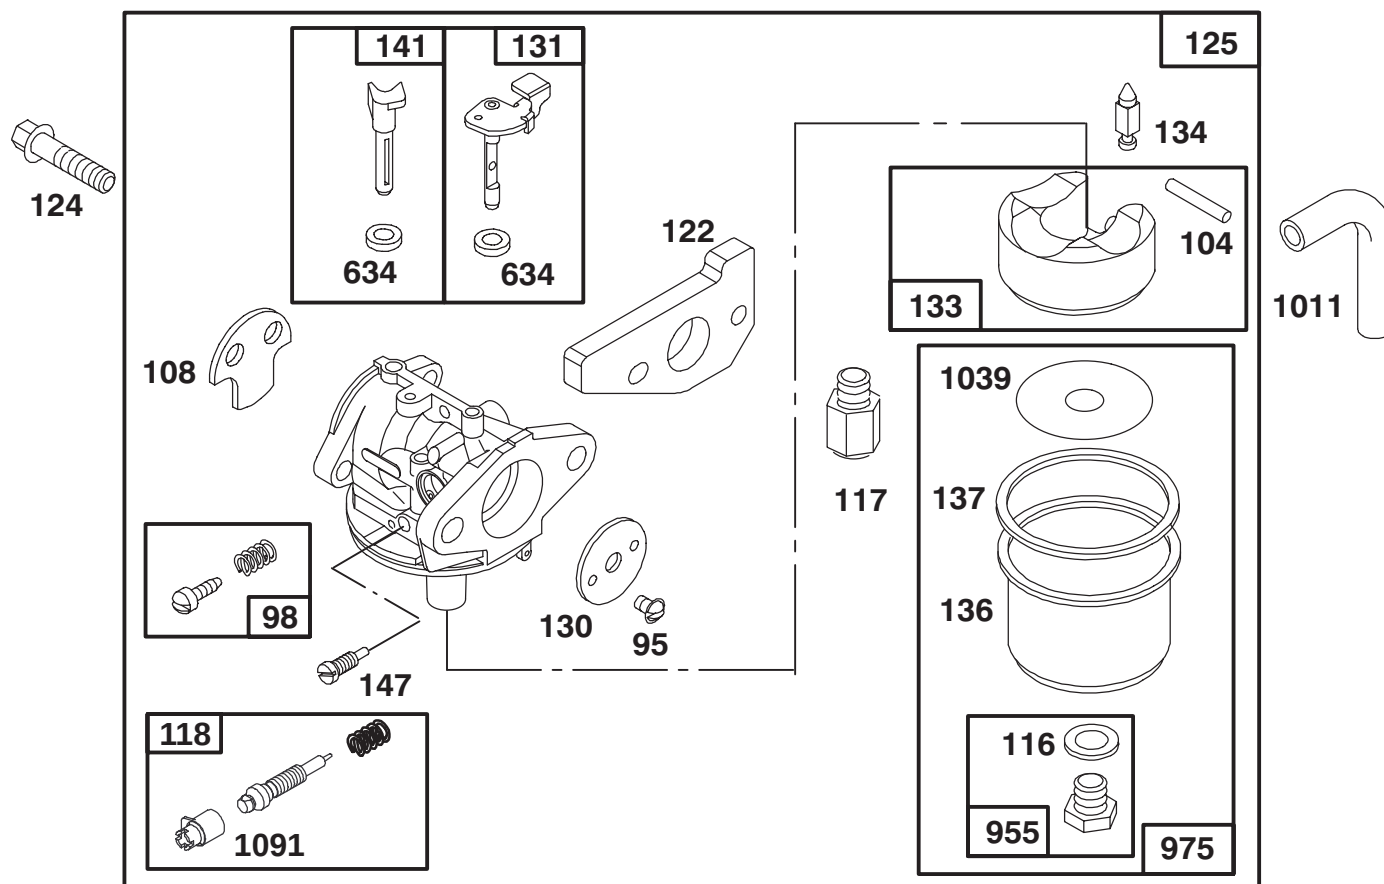

Assemblies include all parts shown in frames.


ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw - Valve Mtg.	1
98	77-8240	Screw - Idle Adj.	1
●104	77-8180	Pin - Float Hinge	1
108	77-9600	Valve - Choke	1
◆116	77-8210	Sealing - Gasket	1
117	77-9610	Jet - Main	1
		Note: 94-1650 Jet - Main (High Altitude)	1
●118	77-9620	Valve & Spring - Needle	1
●122	77-7820	Adapter Ass'y	1
124	77-7970	Screw - Hex Head (Carb. Mtg.)	1
125	77-9630	Carburetor Ass'y	1
130	77-8080	Valve - Throttle	1
131	77-8160	Shaft - Throttle	1

Ref. No.	Part No.	Description	No. Used
133	77-8170	Float - Carburetor	1
●134	77-8110	Valve - Inlet (Includes Seat)	1
136	77-7240	Bowl - Fuel	1
◆137	77-8200	Gasket - Float Bowl	1
141	77-8130	Shaft - Choke	1
147	77-9640	Adapter - Jet	1
◆634	77-8150	Washer - Seal	1
955	77-8220	Screw - Hex Head	1
975	77-8190	Bowl Ass'y - Carburetor	1
1011	77-8040	Tube - Vent	1
●1039	77-7250	Limiter - Float	1
●1091	77-9650	Cap - Limiter	1

● Incl. in Carburetor Overhaul Kit-Part No. 77-9580

 ◆ Included in Carburetor Gasket Set-Part No. 77-8930

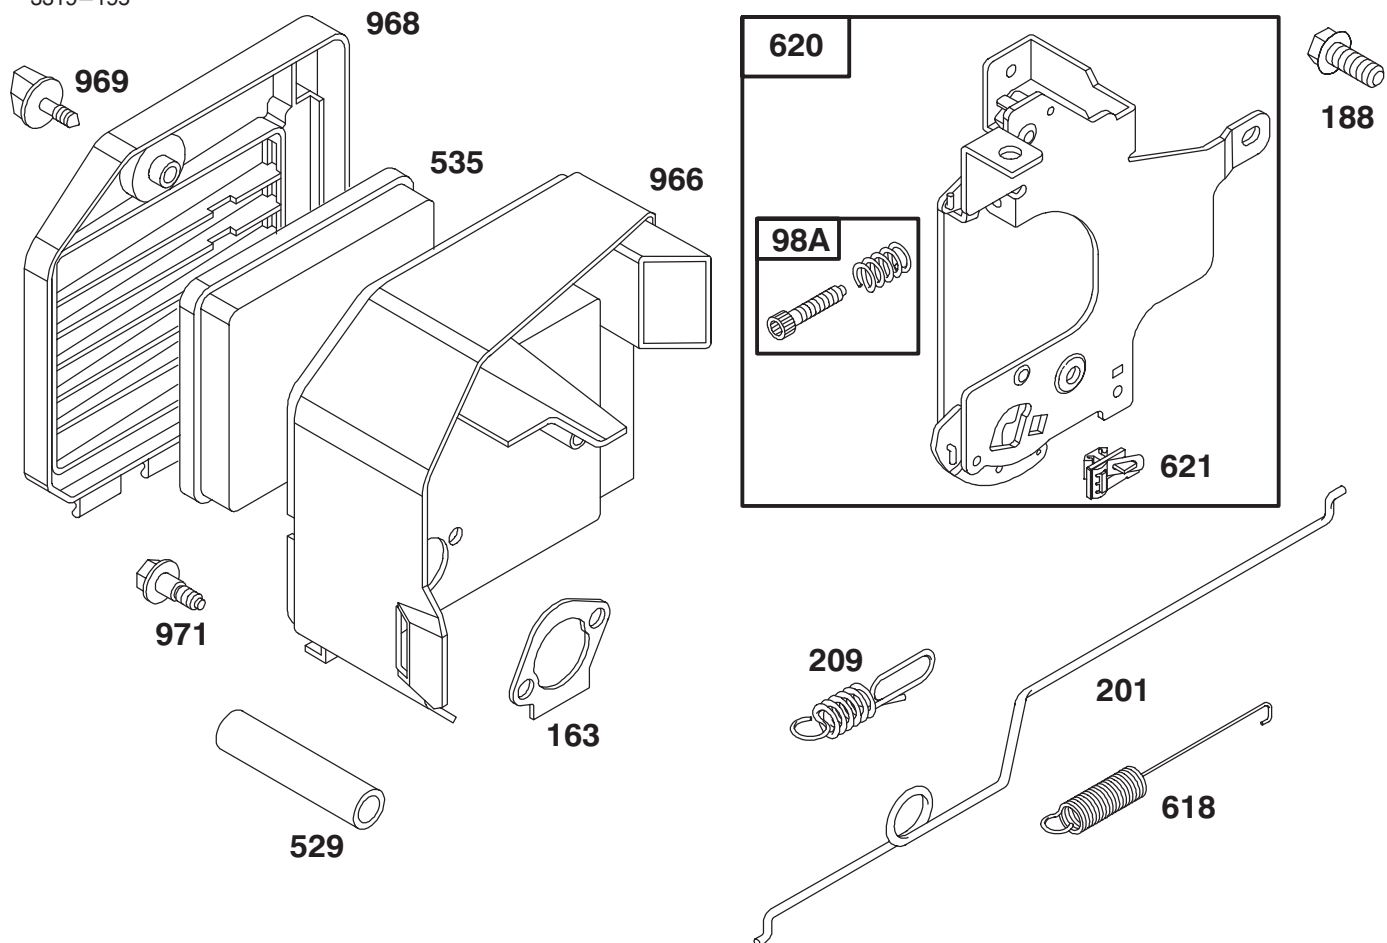

Assemblies include all parts shown in frames.


ENGINE GTS—150

Ref. No.	Part No.	Description	No. Used
98A	77-8020	Screw Ass'y — Speed Adj.	1
★163	77-7960	Gasket — Air Cleaner	1
188	94-1665	Screw — Hex. Head	1
201	77-7980	Link — Governor	1
209	77-7990	Spring — Governor	1
529	77-9470	Tube — Breather	1
535	77-7950	Element — Filter	1

Ref. No.	Part No.	Description	No. Used
618	77-8140	Spring — Choke	1
620	77-8000	Bracket — Carburetor	1
621	77-8010	Switch — Stop	1
966	77-7940	Base — Air Cleaner	1
968	77-7040	Cover — Air Cleaner	1
969	77-7920	Screw — Air Cleaner	1
971	77-7930	Screw — Air Cleaner	1

★ Included in Gasket Set—Part No. 77-8900

 65

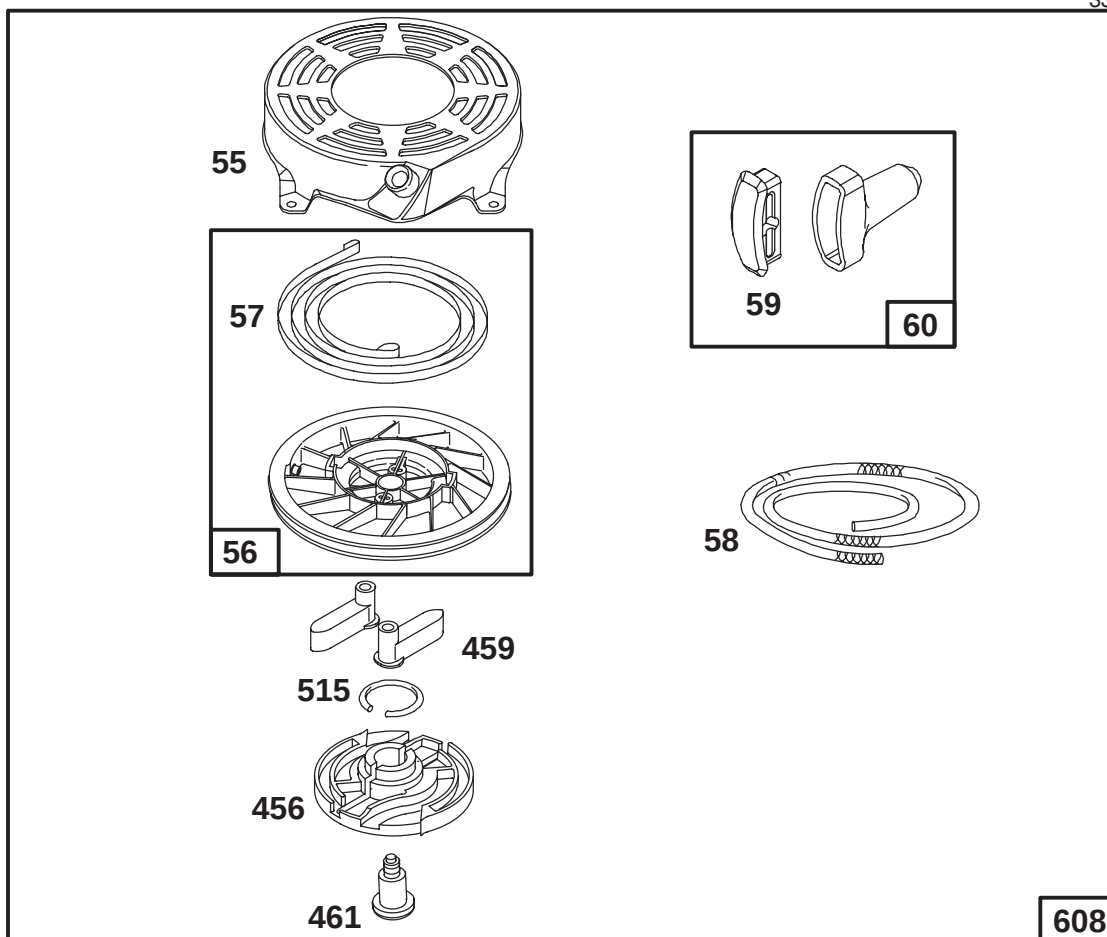


Assemblies include all parts shown in frames.

ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
55	94-1666	Housing - Rewind Starter	1
56	94-1657	Pulley - Rewind Starter	1
57	94-1667	Spring - Rewind	1
58	94-1658	Rope - Starter (Cut To Suit)	1
59	77-7210	Insert - Rewind Handle	1
60	77-8520	Handle - Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
65	77-8300	Screw - Hex Head	1
456	94-1659	Retainer - Rewind Starter	1
459	94-1654	Pawl - Starter	1
461	94-1660	Screw - Rewind Starter	1
515	94-1655	Spring - Torsion	1
608	77-8450	Starter Ass'y - Rewind	1

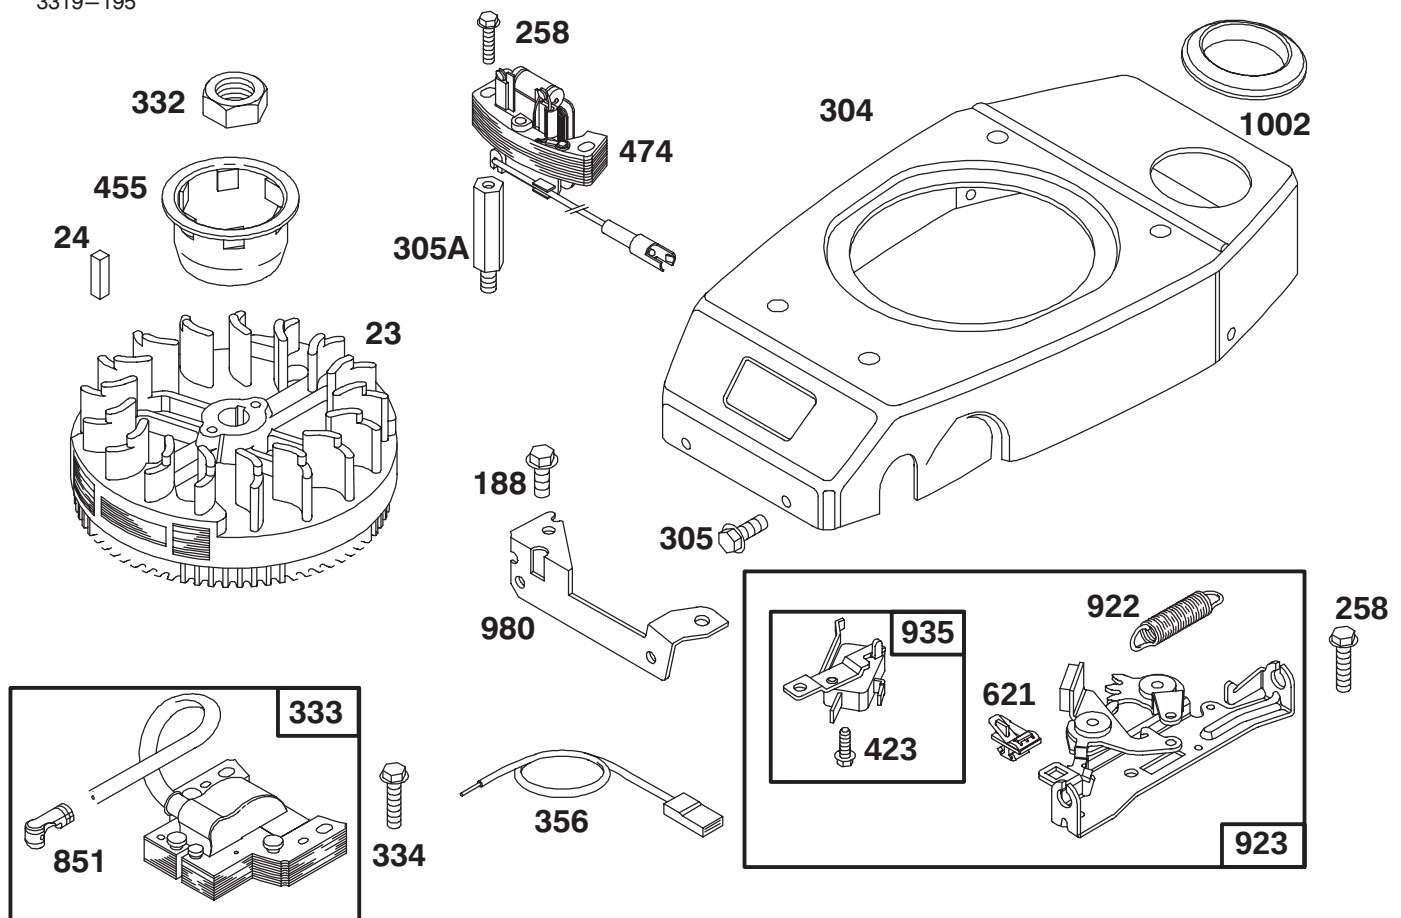 


Assemblies include all parts shown in frames.

ENGINE GTS—150

Ref. No.	Part No.	Description	No. Used
23	77-8320	Flywheel	1
24	77-8340	Key — Flywheel	1
188	94-1665	Screw — Hex Head	1
258	77-8870	Screw — Hex Head	1
304	77-9480	Housing — Blower	1
305	77-8310	Screw — Hex Head	1
305A	77-8390	Stud	1
332	77-8360	Nut — Flywheel	1
333	77-8420	Armature — Magneto	1
334	77-7420	Screw — Armature Mtg.	1
356	77-8400	Wire — Ground	1

Ref. No.	Part No.	Description	No. Used
423	77-9520	Screw — Hex Head	1
455	94-1653	Cup — Starter	1
474	77-8370	Alternator	1
621	77-8010	Switch — Stop	1
851	77-9450	Terminal — Spark Plug	1
922	77-8860	Spring — Brake	1
923	77-9460	Brake Ass'y	1
935	77-9530	Switch — Starter	1
980	77-7140	Bracket — Blower Housing	1
1002	77-7180	Grommet	1

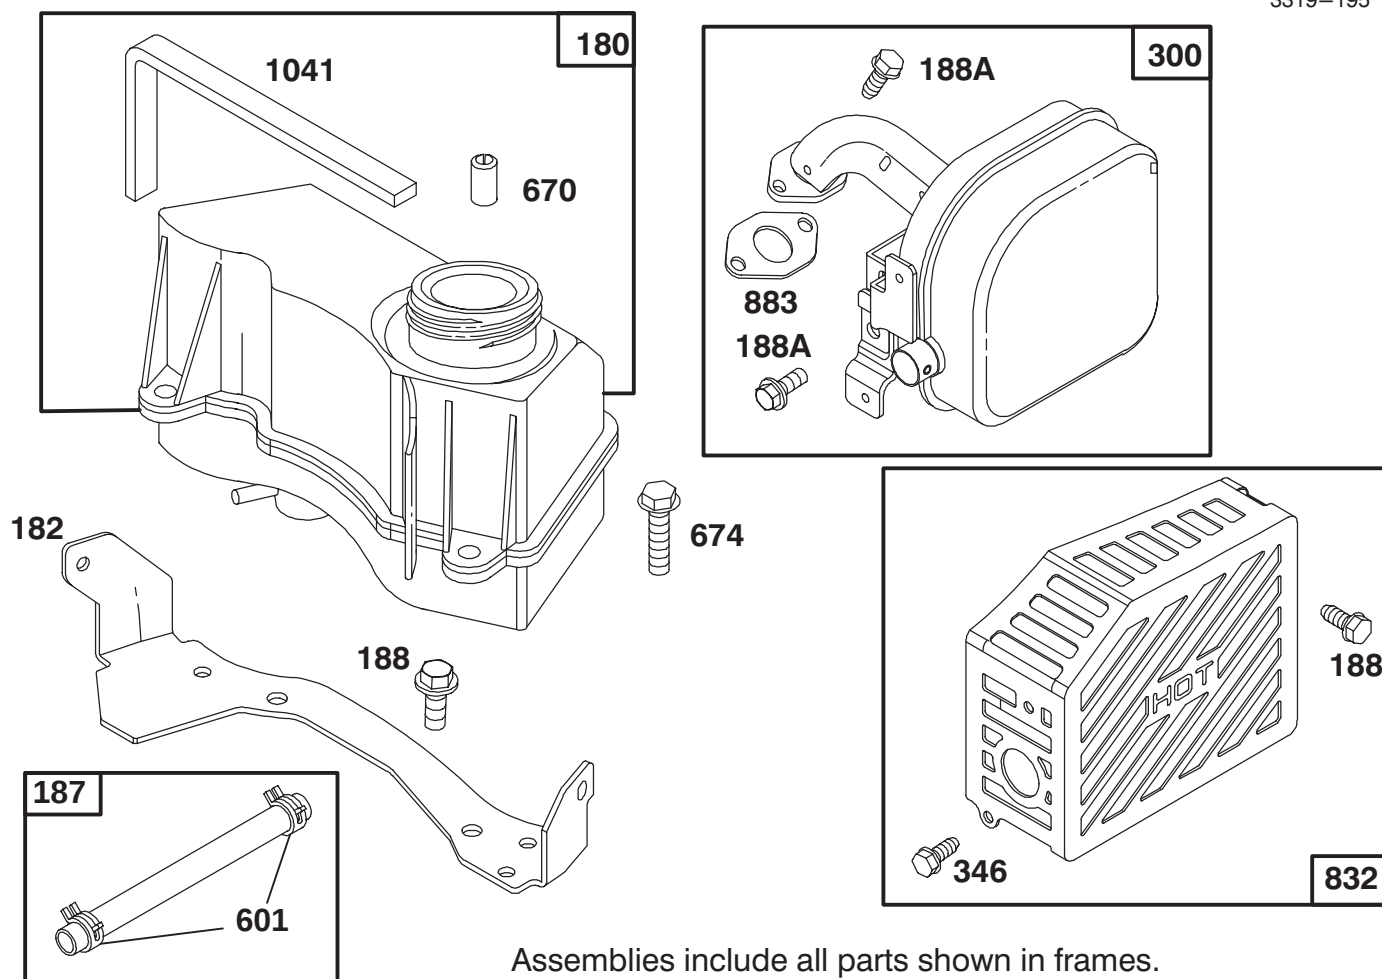 

Assemblies include all parts shown in frames.


ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
180	77-7580	Tank Ass'y - Fuel	1
182	77-7170	Bracket - Fuel Tank	1
187	78-4100	Hose - Fuel (Cut To Suit)	1
188	94-1665	Screw - Hex Head	1
188A	94-1652	Screw - Hex.	1
300	77-8640	Muffler - Exhaust	1
346	77-8650	Screw - Hex	1

Ref. No.	Part No.	Description	No. Used
601	78-4690	Clamp - Fuel Hose	1
670	77-9030	Spacer - Fuel Tank (Includes 2)	1
674	77-8600	Screw - Tank Mtg.	1
832	77-9290	Guard - Muffler	1
★883	77-7760	Gasket - Exhaust	1
★1041	77-8590	Seal - Foam	1

* Included in Gasket Set—Part No. 77-8900

 
3319-195

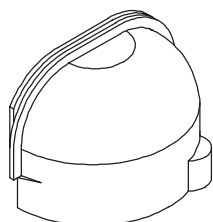

925



 22A

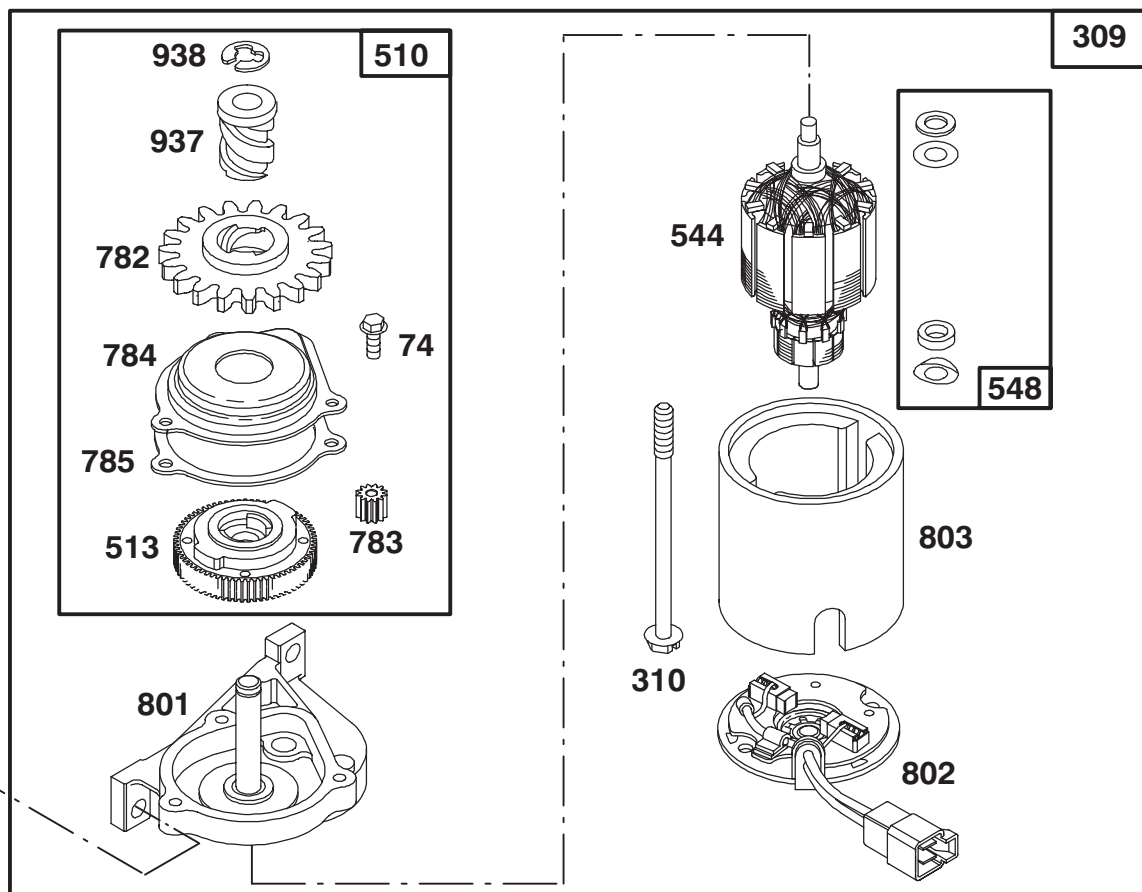




Assemblies include all parts shown in frames.

ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
22A	77-8720	Screw-Hex Head	1
74	77-8800	Screw-Hex Head	1
309	77-8670	Motor-Starter	1
310	77-8710	Screw-Hex Head	1
510	77-8910	Drive Kit	1
513	77-8770	Clutch Assembly	1
544	77-8730	Armature Assembly	1
548	77-8740	Washer Set	1
782	77-8810	Pinion-Starter	1

Ref. No.	Part No.	Description	No. Used
783	77-9540	Gear - Pinion	1
784	77-8780	Cover-Gear	1
785	77-8790	Gasket-Cover	1
801	77-8680	Bracket Assembly	1
802	77-8690	Head Assembly	1
803	77-8700	Shell and Magnet Ass'y	1
925	77-7200	Cover-Starter	1
937	77-8820	Spline-Starter	1
938	77-8830	Retainer-Lock	1

   ★ Included in Gasket Set-Part No. 77-8900

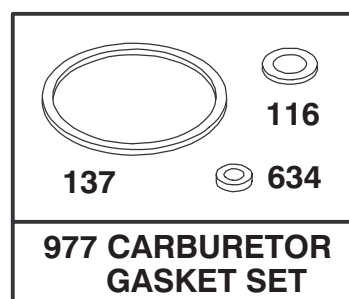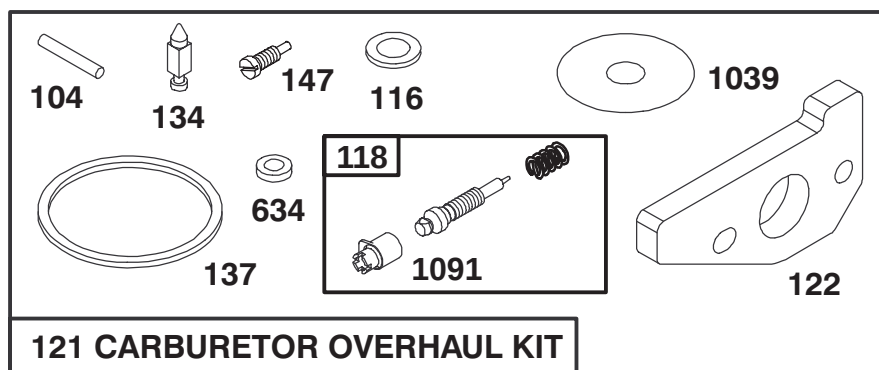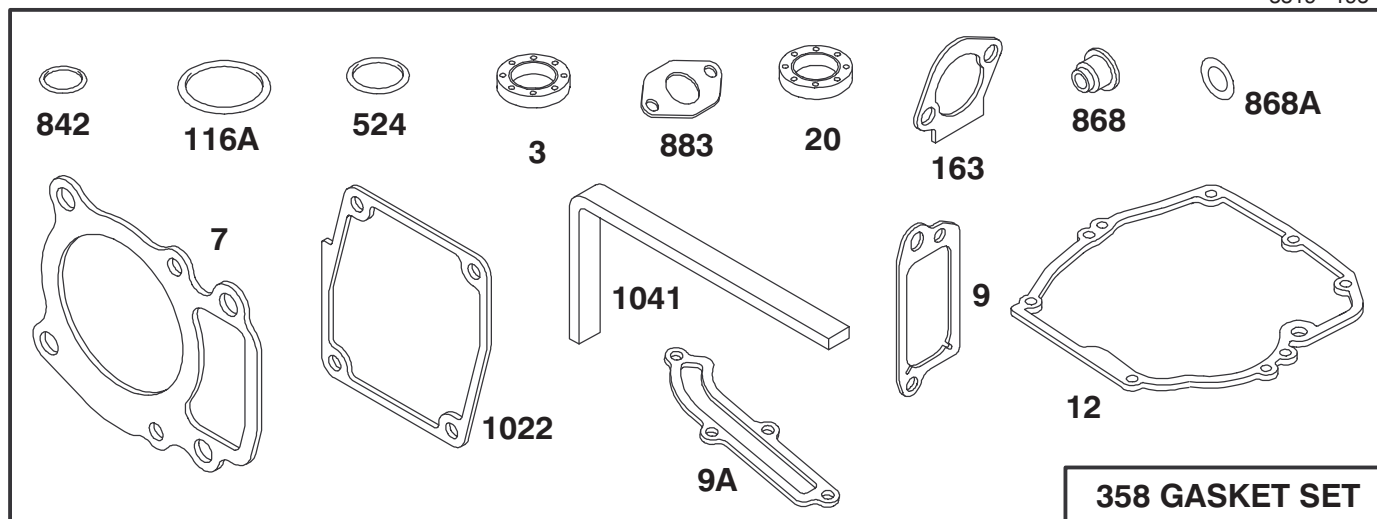

Assemblies include all parts shown in frames.

ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
★3	77-9060	Seal – Oil	1
★7	77-7740	Gasket – Cylinder Head	1
★9	77-9250	Gasket – Breather	1
★9A	77-7410	Gasket – Breather	1
★12	77-7550	Gasket – Engine Base	1
★20	77-7570	Seal – Oil	1
●104	77-8180	Pin – Float Hinge	1
●◆116	77-7660	Gasket – Sealing	1
★116A	77-8210	O-Ring	1
●118	77-9620	Valve and Spring – Needle	1
121	77-9580	Carburetor Kit	1
●122	77-7820	Adapter Assembly	1
●134	77-8110	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137	77-8200	Gasket – Float Bowl	1
●147	77-9640	Jet – Pilot	1
★163	77-7960	Gasket – Air Cleaner	1
358	77-8900	Gasket Set	1
★524	77-7270	Seal – O-Ring	1
◆634	77-8150	Washer – Seal	1
★842	77-7300	Seal – O-Ring	1
★868	77-7890	Seal Assy. – Valve	1
★868A	77-7900	Seal – Valve	1
★883	77-7760	Gasket – Exhaust	1
977	77-8930	Carburetor Gasket Set	1
★1022	77-7320	Gasket – Rocker Cover	1
●1039	77-7250	Limiter – Float	1
★1041	77-8590	Seal – Foam	1
●1091	77-9650	Cap – Limiter	1

● Included in Carburetor Kit—Part No. 77-9580
 ◆ Incl. in Carburetor Gasket Set—Part No. 77-8930

★ Included in Gasket Set—Part No. 77-8900

TORO PART NUMBER INDEX

Part No.	Description	Pg.	Ref.	No.	Qty.	Part No.	Description	Pg.	Ref.	No.	Qty.
14-9949	Wheel & Tire Assembly	1	20	2		65-5250	Clip - Spring	4	43	1	
14-9959	Wheel Tire & Gear Assy.	4	31	2		65-5440	Spring Arm Assembly	4	4	2	
16-1769	Housing - 53cm	1	4	1		65-5660	Panel - Screen	1	2	1	
17-1569	Door - Discharge	1	9	1		66-0020	Panel - Vertical	1	1	1	
17-9426	Screw - Handle	7	1	2		66-0030	Bracket - Cable Support	3	5	1	
19-4050	Knob - Handle Release	6	12	2		66-0330	Support - Spacer	7	2	2	
22-4710	Charger - Battery (220V)	6	*	1		66-0360	Cap - End	4	5	2	
25-7740	Knob - Arm	4	3	2		66-0540	Arm - Spring Front	1	25	2	
25-7740	Knob - Arm	1	28	2		66-0560	Screw - Shoulder	1	19	2	
26-0670	Bolt - Blade	3	8	1		66-0570	Guide - Belt	3	11	1	
27-6231	Bolt - Wheel	1	22	2		66-0580	Arm - Pivot	2	30	2	
27-6231	Bolt - Wheel	4	33	2		66-0620	Retainer - Belt	1	16	1	
27-6250	Bushing - Wheel	1	21	4		66-5350	Lever - Control	7	5	1	
27-6250	Bushing - Wheel	4	32	4		66-6040	Key - Rocking (R.H.)	4	*	1	
29-9570	Bushing - Yoke	4	38	1		66-6050	Key - Rocking (L.H.)	4	27	1	
36-4780	Washer - Thrust	4	44	1		70-9760	Bushing - Sleeve	4	19	2	
36-4791	Washer - Thrust	5	48	2		71-0960	Support - Cable	7	8	1	
36-8070	V-Belt	4	13	1		71-7900	Cap - Hinge Bolt L.H.	1	10	1	
38-7820	Bearing - Ball	5	60	1		71-7910	Cap - Hinge Bolt R.H.	1	6	1	
40-1940	Washer - Wheel Bolt	1	23	4		71-8090	Mount - Handle L.H.	6	13	1	
46-5520	Lever - Traction	7	7	1		71-8100	Mount - Handle R.H.	6	14	1	
46-5780	Switch - Starter	6	9	1		71-8580	Spacer - Door	1	12	2	
46-6432	Screw - Handle	7	9	1		71-9470	Door - Bag	8	3	1	
48-2060	Bearing - Needle	4	21	2		71-9480	Handle - Door	8	2	1	
49-2040	Screw - Self Tapping	4	8	8		71-9640	Ramp - Discharge	1	27	1	
52-7430	Control Bar Assembly	7	3	1		71-9650	Access - Cover	1	14	1	
55-3760	Gear - Pinion 15T	5	49	1		71-9680	Bag - Grass 53cm	8	5	1	
55-3770	Gear - 49T (1st Gear)	5	58	1		71-9840	Spring - Door	1	11	2	
55-3780	Gear - Pinion 20T	5	50	1		71-9870	Decal - Deck 53cm	2	29	1	
55-3790	Gear - 44T (2nd Gear)	5	57	1		71-9871	Decal - TORO	6	19	1	
55-3800	Gear - Pinion 25T	5	51	1		71-9920	Cover - Top	1	15	1	
55-3810	Gear - 39T (3rd Gear)	5	56	1		71-9930	Frame - Grass Bag	8	4	1	
55-7520	Battery	6	15	1		74-1660	Cover - Wheel	4	30	2	
60-8710	Case - Gear (Upper)	5	61	1		74-1670	Spacer - Wheel Cover	4	34	2	
60-8730	Cover - Gear Case	5	46	1		76-0760	Key - Shift	4	41	2	
60-8750	Bushing - Intrmdt. Shaft	5	47	2		76-0770	Collar - Shift	4	42	1	
60-8770	Bushing - Output Shaft	5	45	1		76-0780	Sleeve - Shift Key	4	40	1	
60-8790	Sleeve - Gear	5	55	1		76-0920	Lever - Shift	4	16	1	
60-8800	Shaft - Intermediate	5	52	1		76-2930	Retainer - Cable	4	15	1	
60-8810	Retainer - Shift Fork	4	39	1		77-7040	Cover - Air Cleaner	12	968	1	
60-8840	Pulley - Half	4	10	2		77-7140	Bracket - Blower Housing	14	980	1	
60-8850	Bushing - Output Shaft	5	53	1		77-7170	Bracket - Fuel Tank	15	182	1	
60-8870	Yoke - Shift	4	37	1		77-7180	Grommet	14	1002	1	
60-8890	Pinion - Bevel	5	59	1		77-7200	Cover - Starter	16	925	1	
62-6660	Spacer	4	9	1		77-7210	Insert - Rewind Handle	13	59	1	
62-6673	Gear Case Assy. Complete	5	*	1		77-7240	Bowl - Fuel	11	136	1	
62-7540	Retainer - Blade	3	7	1		77-7250	Limiter - Floater	11	1039	1	
62-7550	Pulley - Engine	3	13	1		77-7250	Limiter - Floater	17	1039	1	
62-7700	Blade - 53cm	3	10	1		77-7260	Dipstick - Oil	10	523	1	
63-8360	Key - Ignition	6	3	1		77-7270	Seal - O-Ring	10	524	1	
65-2720	Ring - Retaining	4	24	4		77-7270	Seal - O-Ring	17	524	1	
65-4710	Ring - Friction	4	25	2		77-7280	Tube - Oil Filler	10	525	1	
65-4720	Spring - Compression	4	29	2		77-7300	Seal - O-Ring	10	842	1	
65-4730	Washer - Thrust (Inner)	4	22	2		77-7300	Seal - O-Ring	17	842	1	
65-4740	Washer - Thrust (Keyed)	4	23	4		77-7320	Gasket - Rocker Cover	9	1022	1	
65-4750	Pinion	4	28	2		77-7320	Gasket - Rocker Cover	17	1022	1	
65-4760	Washer - Clutch	4	26	2		77-7330	Plug - Spark	9	337	1	
65-4770	Shaft - Output	4	17	1		77-7340	Elbow - Spark Plug	9	635	1	
65-5042	Pivot Arm Assembly	4	2	2		77-7360	Screw - Hex Head	9	10	1	
65-5190	Bracket - Belt Guide	4	7	1		77-7370	Lever Ass'y - Governor	10	227	1	
65-5200	Cover	3	12	1		77-7380	Bolt - Governor Lever	10	562	1	
65-5210	Screw - Thread Forming	1	7	2		77-7390	Nut - Hex	10	592	1	
65-5220	Screw - Cap Socket Hd.	1	26	2		77-7400	Cover - Breather	9	572	1	
65-5220	Screw - Socket Hd. Cap	4	36	2		77-7410	Gasket - Breather	17	9A	1	

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319–195

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-7410	Gasket – Breather	9 9A 1	77-8080	Valve – Throttle	11 130 1
77-7420	Screw – Armature Mtg.	14 334 1	77-8090	Screw – Valve Mtg.	11 95 1
77-7420	Screw – Breather	9 307 1	77-8110	Valve – Inlet	11 134 1
77-7460	Crank – Governor	10 616 1	77-8110	Valve – Inlet	17 134 1
77-7470	Washer	10 230 1	77-8130	Shaft – Choke	11 141 1
77-7480	Pushnut	10 615 1	77-8140	Spring – Choke	12 618 1
77-7490	Gear – Cam	10 46 1	77-8150	Washer – Seal	11 634 1
77-7500	Gear – Governor	10 219 1	77-8150	Washer – Seal	17 634 1
77-7530	Gear – Timing	10 741 1	77-8160	Shaft – Throttle	11 131 1
77-7550	Gasket – Engine Base	10 12 1	77-8170	Float – Carburetor	11 133 1
77-7550	Gasket – Engine Base	17 12 1	77-8180	Pin – Float Hinge	11 104 1
77-7560	Base – Engine	10 18 1	77-8180	Pin – Float Hinge	17 104 1
77-7570	Seal – Oil	10 20 1	77-8190	Bowl Ass'y – Carburetor	11 975 1
77-7570	Seal – Oil	17 20 1	77-8200	Gasket – Float Bowl	11 137 1
77-7580	Tank Ass'y – Fuel	15 180 1	77-8200	Gasket – Float Bowl	17 137 1
77-7590	Cylinder Ass'y	9 1 1	77-8210	Sealing – Gasket	11 116 1
77-7600	Pin – Cylinder	9 718 1	77-8210	O–Ring	17 116 1
77-7610	Tappet – Valve	9 45 1	77-8220	Screw – Hex Head	11 955 1
77-7620	Rod – Push	9 1026 1	77-8230	Valve & Spring – Needle	11 118 1
77-7630	Screw – Cylinder Head	9 13 1	77-8240	Screw – Idle Adj.	11 98 1
77-7640	Pump – Oil	10 1024 1	77-8300	Screw – Hex Head	13 65 1
77-7650	Cover – Oil Pump	10 979 1	77-8310	Screw – Hex Head	10 305 1
77-7660	O–Ring	10 116A 1	77-8310	Screw – Hex Head	14 305 1
77-7660	Gasket – Sealing	17 116 1	77-8320	Flywheel	14 23 1
77-7670	Rod – Connecting	10 29 1	77-8340	Key – Flywheel	14 24 1
77-7690	Piston Ass'y (Std.)	10 25 1	77-8360	Nut – Flywheel	14 332 1
77-7700	Ring Set (Std.)	10 26 1	77-8370	Alternator	14 474 1
77-7710	Lock – Piston Pin	10 27 1	77-8390	Stud	14 305A 1
77-7730	Head – Cylinder	9 5 1	77-8400	Wire – Ground	14 356 1
77-7740	Gasket – Cylinder Head	17 7 1	77-8420	Armature – Magneto	14 333 1
77-7740	Gasket – Cylinder Head	9 7 1	77-8450	Starter Ass'y – Rewind	13 608 1
77-7760	Gasket – Exhaust	9 883 1	77-8520	Handle – Rewind Starter	13 60 1
77-7760	Gasket – Exhaust	15 883 1	77-8590	Seal – Foam	15 1041 1
77-7760	Gasket – Exhaust	17 883 1	77-8590	Seal – Foam	17 1041 1
77-7770	Guide – Push Rod	9 1034 1	77-8600	Screw – Tank Mtg.	15 674 1
77-7780	Stud – Rocker Arm	9 166 1	77-8640	Muffler – Exhaust	15 300 1
77-7790	Arm – Rocker	9 1029 1	77-8650	Screw – Hex	15 346 1
77-7800	Cap – Valve	9 238 1	77-8670	Motor–Starter	16 309 1
77-7810	Spring – Valve	9 35 1	77-8680	Bracket Assembly	16 801 1
77-7820	Adapter Ass'y	11 122 1	77-8690	Head Assembly	16 802 1
77-7820	Adapter Assembly	17 122 1	77-8700	Shell and Magnet Ass'y	16 803 1
77-7820	Adapter Ass'y	9 122 1	77-8710	Screw–Hex Head	16 310 1
77-7860	Valve – Exhaust	9 33 1	77-8720	Screw–Hex Head	16 22A 1
77-7870	Retainer – Spring	9 40 1	77-8730	Armature Assembly	16 544 1
77-7880	Valve – Intake	9 34 1	77-8740	Washer Set	16 548 1
77-7890	Seal Ass'y – Valve	9 868 1	77-8770	Clutch Assembly	16 513 1
77-7890	Seal Ass'y – Valve	17 868 1	77-8780	Cover–Gear	16 784 1
77-7900	Gasket – Valve	9 868 1	77-8790	Gasket–Cover	16 785 1
77-7900	Seal – Valve	17 868 1	77-8800	Screw–Hex Head	16 74 1
77-7910	Ball & Screw –	9 192 1	77-8810	Pinion–Starter	16 782 1
77-7920	Screw – Air Cleaner	12 969 1	77-8820	Spline–Starter	16 937 1
77-7930	Screw – Air Cleaner	12 971 1	77-8830	Retainer–Lock	16 938 1
77-7940	Base – Air Cleaner	12 966 1	77-8860	Spring –Brake	14 922 1
77-7950	Element – Filter	12 535 1	77-8870	Screw – Hex Head	14 258 1
77-7960	Gasket – Air Cleaner	12 163 1	77-8900	Gasket Set	17 358 1
77-7960	Gasket – Air Cleaner	17 163 1	77-8910	Drive Kit	16 510 1
77-7970	Screw – Hex Head	11 124 1	77-8930	Carburetor Gasket Set	17 977 1
77-7980	Link – Governor	12 201 1	77-8953	Engine	3 1 1
77-7990	Spring – Governor	12 209 1	77-9020	Short Block	9 1 1
77-8000	Bracket – Carburetor	12 620 1	77-9030	Spacer – Fuel Tank	15 670 1
77-8010	Switch – Stop	12 621 1	77-9060	Seal – Oil	9 3 1
77-8010	Switch – Stop	14 621 1	77-9060	Seal – Oil	17 3 1
77-8020	Screw Ass'y –	12 98A 1	77-9070	Screw – Engine Base	10 22 1
77-8040	Tube – Vent	11 1011 1	77-9200	Screw – Hex Head	9 10A 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-9240	Plug - Pipe	10 15 1	94-1657	Pulley - Rewind Starter	13 56 1
77-9250	Gasket - Breather	9 9 1	94-1658	Rope - Starter	13 58 1
77-9250	Gasket - Breather	17 9 1	94-1659	Retainer - Rewind Starter	13 456 1
77-9290	Guard - Muffler	15 832 1	94-1660	Screw - Rewind Starter	13 461 1
77-9300	Breather Ass'y	9 8 1	94-1664	Wrench - Spark Plug	9 383 1
77-9310	Screw - Set	9 192A 1	94-1665	Screw - Hex Hd.	10 188 1
77-9320	Cover - Valve	9 1023 1	94-1665	Screw - Hex Hd.	12 188 1
77-9330	Crankshaft	10 16 1	94-1665	Screw - Hex Hd.	14 188 1
77-9340	Pin Ass'y - Piston	10 28 1	94-1665	Screw - Hex Hd.	15 188 1
77-9350	Screw - Conn. Rod	10 32 1	94-1666	Housing - Rewind Starter	13 55 1
77-9410	Tube - Breather	9 11 1	94-1667	Spring - Rewind	13 57 1
77-9450	Terminal - Spark Plug	14 851 1	94-1682	Fuse - 5 Amp	6 * 1
77-9460	Brake Ass'y	14 923 1	94-4910	Handle	6 7 1
77-9470	Tube - Breather	12 529 1	95-3014	Decal - Instructions	6 8 1
77-9480	Housing - Blower	14 304 1	95-3017	Cover - Battery	6 16 1
77-9520	Screw - Hex Head	14 423 1	95-4478	Guide - Rope	7 13 1
77-9530	Switch - Starter	14 935 1	95-6133	Panel Control	6 18 1
77-9540	Gear - Pinion	16 783 1	218-461	Nut - Lock	6 4 1
77-9550	Cover - Brake	3 18 1	2210-249	Clamp - Throttle	3 15 1
77-9580	Carburetor Kit	17 121 1	2210-316	Stop - Rope	3 17 1
77-9600	Valve - Choke	11 108 1	237-153	Seal - ORing	4 18 2
77-9610	Jet - Main	11 117 1	302-56	Fitting - Grease	4 20 2
77-9620	Valve & Spring - Needle	17 118 1	321-3	Screw - Cap Hex. Hd.	7 6 1
77-9630	Carburetor Ass'y	11 125 1	322-29	Screw - Hex Hd. Cap	1 8 2
77-9640	Jet - Pilot	17 147 1	3229-34	Bolt - Carrigae	6 21 2
77-9640	Adapter - Jet	11 147 1	3253-22	Washer - Blade	3 9 1
77-9650	Cap - Limiter	11 1091 1	3254-5	Washer - Lock	6 5 1
77-9650	Cap - Limiter	17 1091 1	3256-14	Washer - Flat	6 22 2
78-4100	Hose - Fuel	15 187 1	3256-22	Washer - Flat	7 11 1
78-4690	Clamp - Fuel Hose	15 601 1	3256-24	Washer - Flat	4 12 1
80-4795	Harness - Wire	6 10 1	3256-24	Washer - Flat	1 17 1
86-7990	Screw - Clamp	3 16 1	3272-5	Pin - Cotter	4 14 1
92-2289	Plate - TORO Logo	3 2 1	3290-378	Tie - Cable	6 11 5
92-9665	Screw - Self Tapping	6 17 5	3296-2	Nut - Lock	6 23 2
93-4105	Decal - Danger	1 13 1	3296-5	Nut - Lock	4 11 1
93-4355	Decal - Recoil	3 3 1	3296-6	Nut - Lock	1 24 4
93-6628	Cable - Brake	7 15 1	3296-6	Nut - Lock	4 35 2
93-6631	Control - Throttle	6 6 1	3296-42	Nut - Lock	7 4 3
93-6632	Control - Ground Speed	6 1 1	3296-58	Nut - Lock	7 12 2
93-6634	Cable - Traction	7 10 1	32121-120	Pin - Coil	5 54 1
93-6668	Decal - Battery	6 20 1	32144-15	Screw - Hex Flange Hd.	1 18 1
93-7198	Gas Cap Assembly	3 4 1	32144-70	Screw - Cap Hex. Hd.	1 3 6
94-1652	Screw - Hex	15 187A 1	32144-70	Screw - Hex Hd. Cap	3 6 7
94-1653	Cup - Starter	14 455 1	32144-70	Screw - Hex. Washer Hd.	4 1 5
94-1654	Pawl - Starter	13 459 1	32144-102	Screw - Thread Forming	3 14 3
94-1655	Spring - Torsion	13 515 1	32144-111	Screw - Index Hex Washer	8 1 5