




1338XL LAWN TRACTOR

Model No. 71208 – 7900001 & Up

Parts Catalog

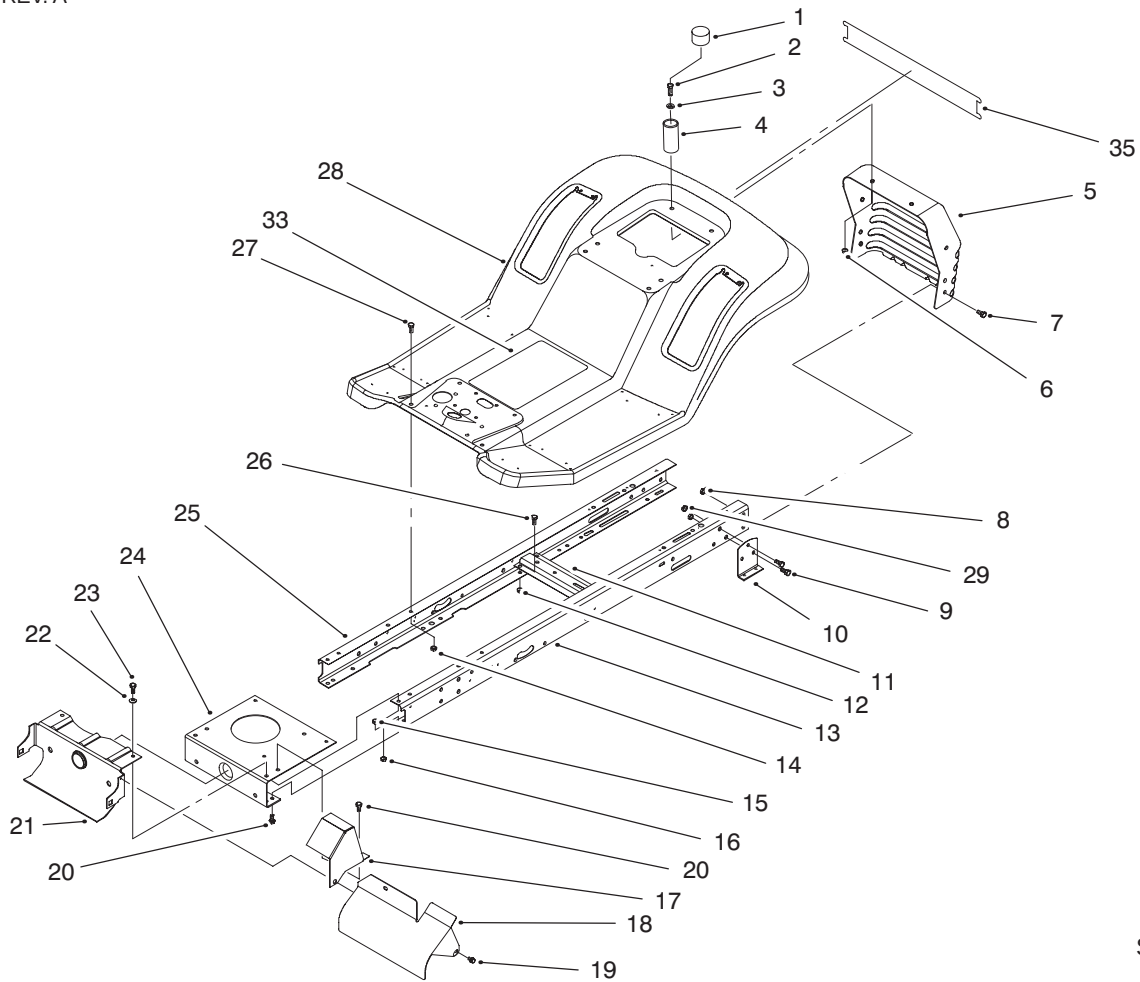


Sheet No.:2

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap-Protector
2	322-5	2	Screw-HH
3	3256-23	2	Washer-Flat
4	88-6220	2	Spring - Compression
5	88-3940-03	1	Panel - Rear
6	3296-29	2	Nut-Lock
7	322-3	4	Screw-HH
8	3296-29	4	Nut-Lock
9	322-3	4	Screw-HH
10	88-5260-03	2	Bracket-Transaxle Mounting
11	88-4620-03	1	Bracket - Idler Pivot
12	3296-29	4	Nut-Lock
13	94-1999-03	1	Frame Rail-LH
14	3296-29	2	Nut-Lock
15	3296-29	6	Nut-Lock
16	3296-29	2	Nut-Lock
17	88-4960-03	1	Shield - Exh. Pipe
18	88-6290-03	1	Shield - Muffler
19	32104-76	1	Screw-Self TAP
20	322-3	6	Screw-HH
21	88-5120-03	1	Support - Front Axle
22	3256-23	2	Washer-Flat
23	322-3	2	Screw-HH
24	88-4630-03	1	Plate - Engine Mounting


Ref. No.	Part No.	Qty.	Description
25	94-1998-03	1	Frame Rail-RH
26	322-3	4	Screw-HH
27	322-3	2	Screw-HH
28	88-3840	1	Body - Rear
29	3296-29	4	Nut-Lock
33	93-6675	1	Decal-Instruct
35	93-4144	1	Decal-Rear Body

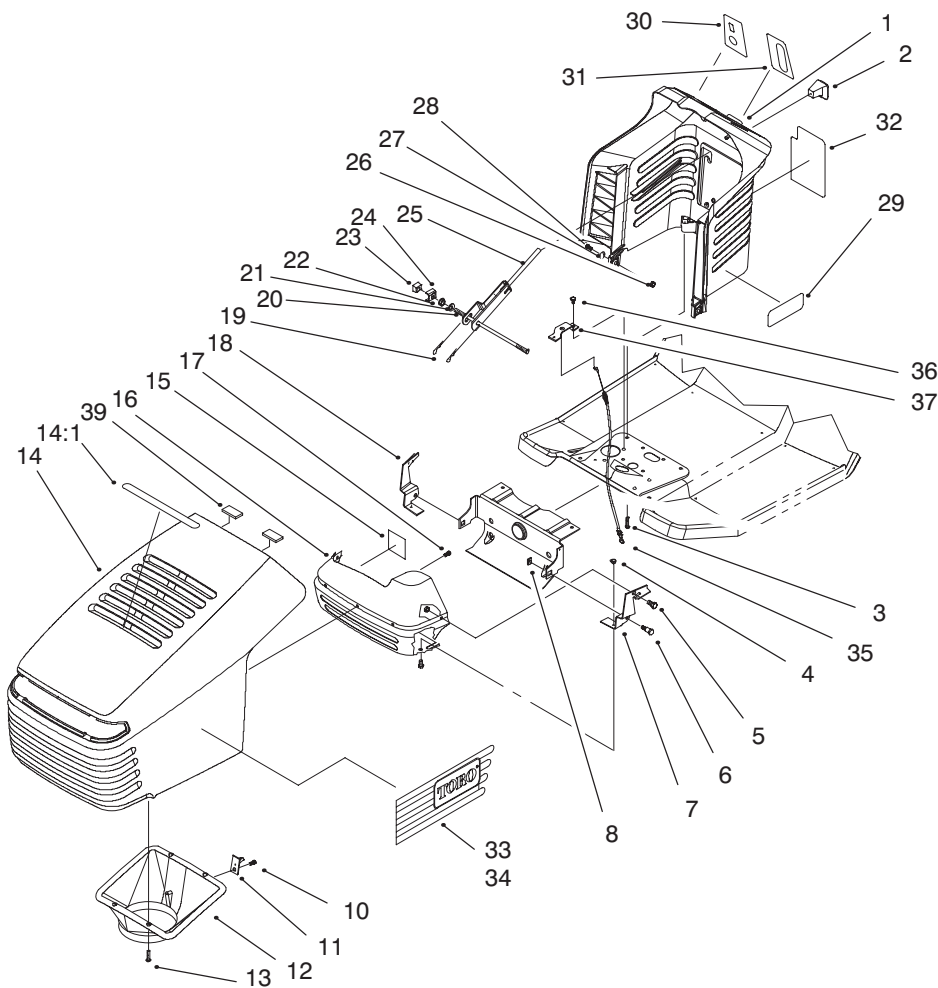

Sheet No.:3

Hood Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-0303	1	Tower-Steering Toro	26	3296-29	2	Nut-Lock
2	94-5565	1	Knob - Control	27	3256-23	2	Washer-Flat
3	46-8091	2	Screw-Tapping	28	322-3	2	Screw-HH
4	3296-42	4	Nut-Lock	29	93-4145	2	Decal - Tower
5	321-2	4	Screw-HH	30	92-5731	1	Decal-Ign/Lights
6	28-0540	2	Bolt-Shoulder	31	92-5730	1	Decal - Throttle
7	88-6050-03	1	Bracket - Hinge	32	93-6673	1	Decal - Deck Engage
8	3290-496	2	Nut - Retained	33	92-2468	1	Decal - Hood Left
10	46-8091	1	Screw-Tapping	34	92-2467	1	Decal - Hood Right
11	94-1984	1	Pin-Latch	35	94-4293	1	Cable ASM-Deck Engage
12	88-4050	1	Duct - Hood Air	36	9266714	2	Screw-HWHTF
13	46-8090	4	Screw-Tapping	37	93-3849	1	Brkt-Cable
14	92-8650	1	Hood-Toro	39	94-1980	2	Foam-Hood
14:1	92-5748	1	Decal - Air Duct				
15	92-5782	1	Patch - Heat Tape				
16	88-3930-03	1	Shield - Heat				
17	46-8090	3	Screw-Tapping				
18	88-6040-03	1	Bracket - Hinge				
19	3290-307	2	Pin-Cotter				
20	88-4170	1	Rod - Pivot				
21	3256-24	2	Washer-Flat				
22	32128-43	2	Nut-Flange				
23	88-4140	2	Nut - Wedge				
24	88-4160	2	Clamp - Pivot Rod				
25	88-5190-03	1	Lever W.a. - Deck Engage				

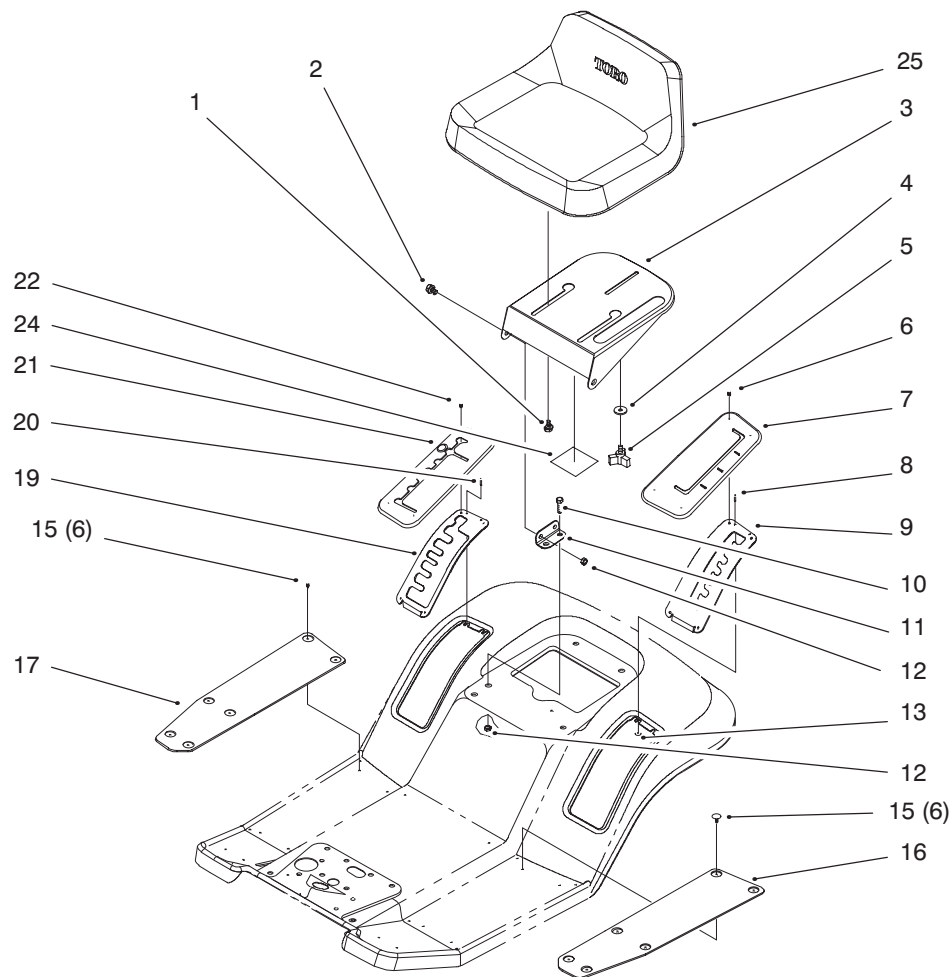


Sheet No.:4

Seat Assembly

Ref. No.	Part No.	Qty.	Description
1	37-8770	2	Bolt-Shldr
2	37-8770	2	Bolt-Shldr
3	88-4910-03	1	Support - Seat
4	5-4460	1	Washer-Fender
5	92-9674	1	Knob-Studded
6	3290-479	4	Fastener-Panel
7	93-7657	1	Cover - HOC
8	3290-282	2	Pop Rivet
9	88-5030-03	1	Gate - HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket - Seat Hinge
12	3296-29	6	Nut-Lock
15	3290-479	12	Fastener-Panel
16	88-5240	1	Foot Mat
17	88-5220	1	Foot Mat
19	88-5020-03	1	Plate - Shift Gate
20	3290-282	2	Pop Rivet
21	93-7656	1	Cover - Shift Gate
22	3290-479	4	Fastener-Panel
24	114621	1	Decal-Noise
25	88-3950	1	Seat


Ref. No.	Part No.	Qty.	Description

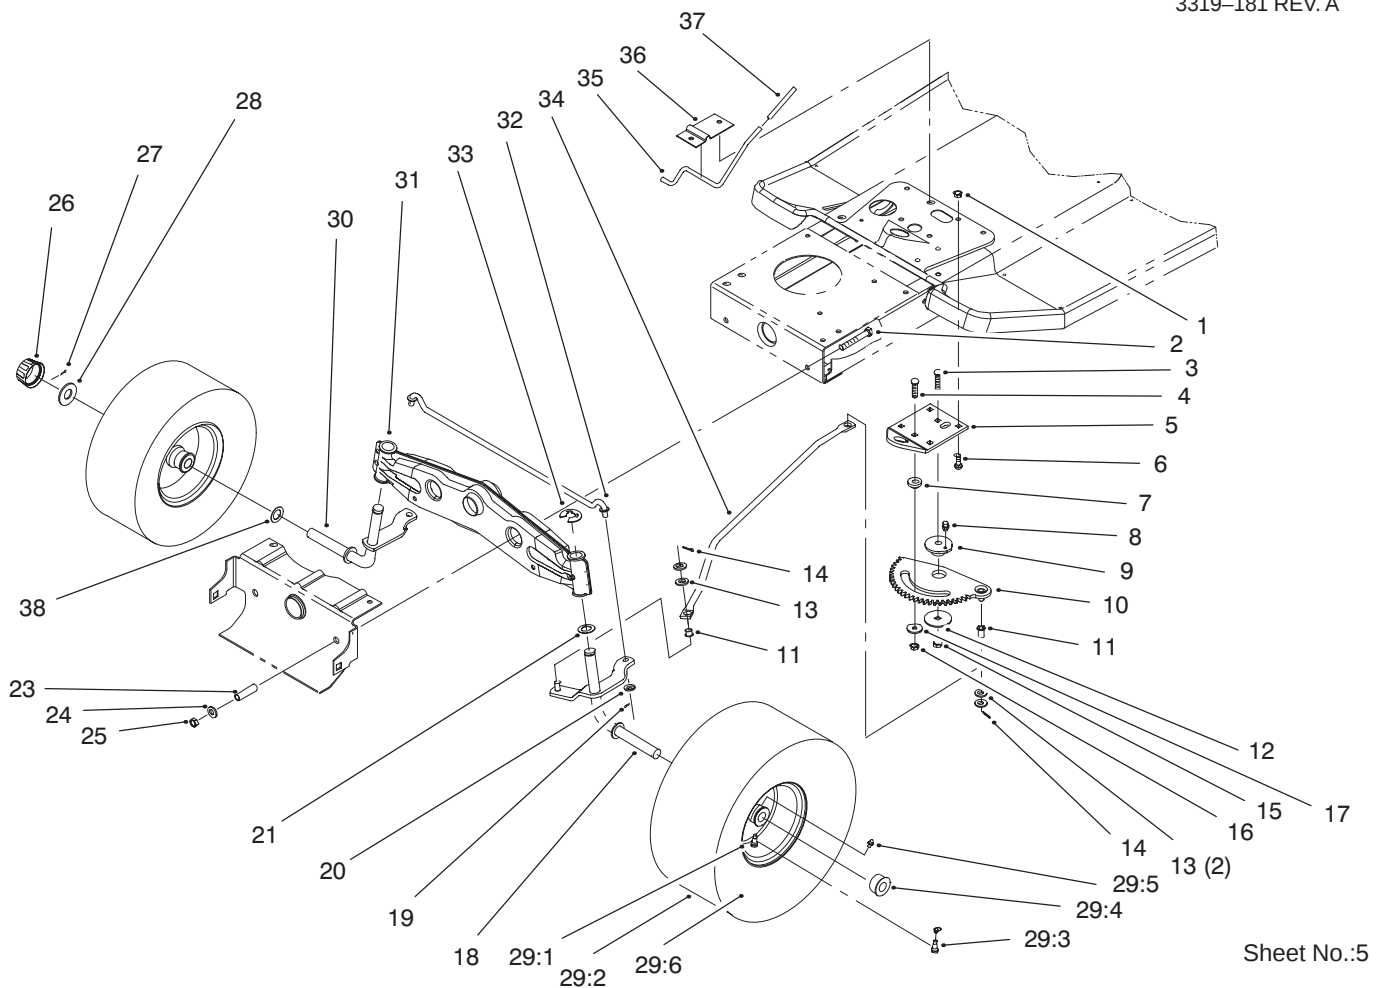

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	4	Nut-Lock
2	323-13	2	Screw-HH
3	3231-4	1	Bolt-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket - Steering Rack
6	3230-1	4	Bolt-CARR
7	88-5010	1	Spacer - Steering Rack
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing - Eccentric
10	88-5200	1	Steering Rack W.a.
11	52-2891	2	Bushing - Steering Links
12	111419	1	Washer-Bearing
13	3256-25	4	Washer-Flat
14	3272-10	2	Pin-Cotter
15	3296-39	1	Nut-Lock
16	3296-29	1	Nut-Lock
17	5-4460	1	Washer-Fender
18	92-7890-03	1	Spindle Wa-LH
19	3272-10	2	Pin-Cotter
20	3256-24	2	Washer-Flat
21	3-6498	2	Washer-Thrust
23	88-5470	2	Spacer - Front Axle
24	3256-24	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description
25	3296-39	2	Nut-Lock
26	61-9780	2	Hubcap
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer-Flat
29:1	88-4370	2	Rim ASM-15" Front
29:2	88-4070	2	Tire 15x6.00-6
29:3	232-27	2	Valve Stem & Cap Assembly
29:4	88-4400	2	Bearing-Wheel
29:5	302-5	2	Fitting-Grease
29:6	232-39	2	Tube-Inner 15x6-6
30	92-7889-03	1	Spindle Wa-RH
31	94-1962-03	1	Front Axle Wa
32	88-5380	1	Tie Rod - Steering
33	32151-48	2	Ring-Retaining
34	88-4830	1	Link - Drag
35	88-5510	1	Rod-Parking Brake
36	88-5520-03	1	Bracket-Parking Brake
37	88-0890	1	Grip - Parking Brake
38	3-6498	4	Washer-Thrust

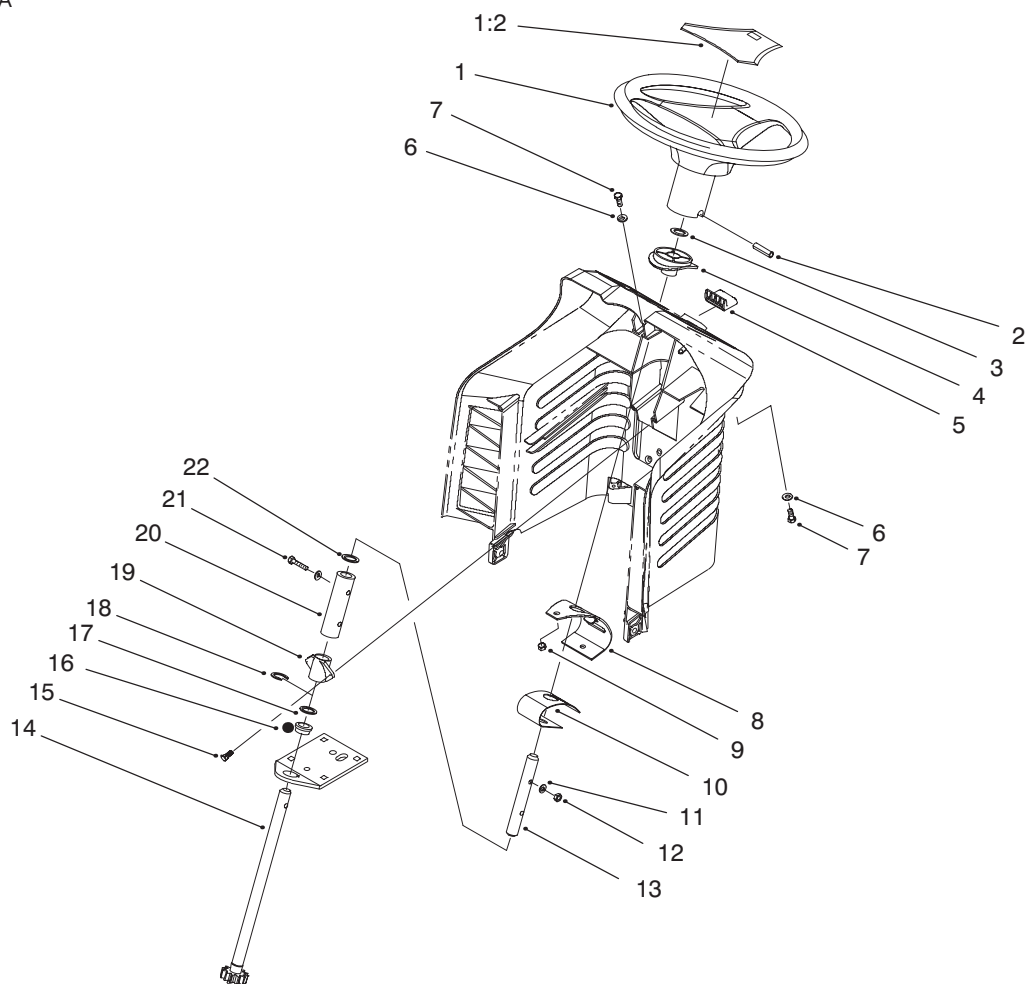


Sheet No.:6

Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	88-3850	1	Steering Wheel
1:2	88-3870	1	Cover-Steering Wheel
2	32121-111	1	Pin-Spiral
3	32151-81	1	Retaining Ring Push-On
4	88-4190	1	Bushing - Sliding
5	88-4180	1	Button - Release
6	3256-22	2	Washer-Flat
7	321-4	2	Screw-HH
8	88-5180-01	1	Bracket - Backup
9	3296-42	2	Nut-Lock
10	88-4890	1	Spring - Leaf
11	3-7501	4	Washer-Curved
12	3296-42	2	Nut-Lock
13	88-6300	1	Shaft - Steering
14	88-6370	1	Shaft W.a. - Steering
15	27-0220	2	Screw-Special HWH
16	88-5150	1	Bushing - Flange
17	3-6498	1	Washer-Thrust
18	32151-48	1	Ring-Retaining
19	88-4210	1	Bushing - Stationary
20	88-6090	1	Coupling - Steering
21	321-9	2	Screw-HH
22	3-6498	1	Washer-Thrust


Ref. No.	Part No.	Qty.	Description

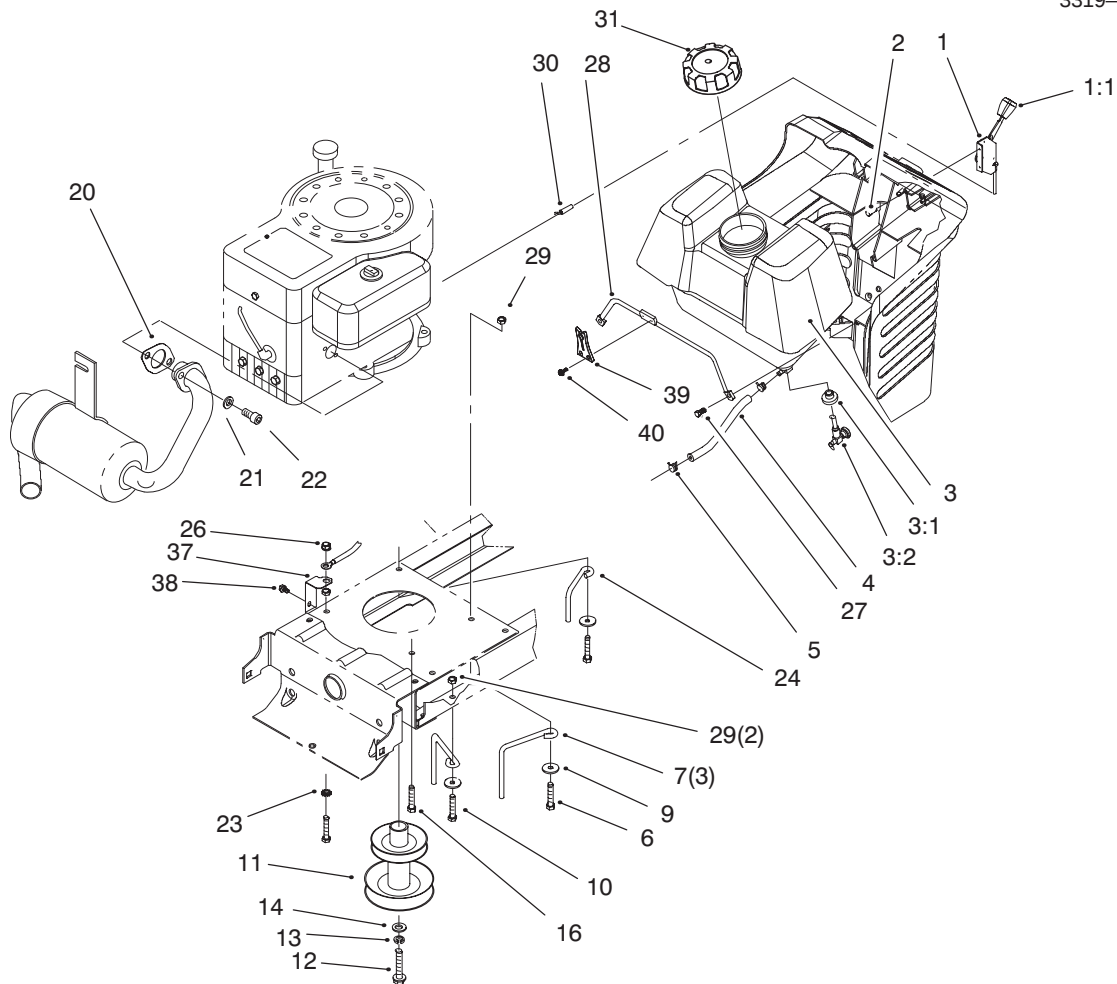

Sheet No.:8

Gas Tank & Engine Pulley Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	88-4340	1	Throttle Control ASM	30	88-4350	1	Cable ASM-Throttle
1:	66-0120	1	Knob	31	88-3980	1	Gas Cap ASM
2	27-0220	2	Screw-Special HWH	37	93-3809	1	Bracket-Ground
3	88-3880	1	Gas Tank Assembly	38	9266714	1	Screw-HWHTF
3:1	104047	1	Bushing	39	94-1951	1	Latch-Hood
3:2	104048	1	Assembly-Valve	40	32144-112	2	Screw-Thd Form
4	47-2963	1	Fuel Line				
5	2412-98	2	Clamp-Hose				
6	322-9	3	Screw-HH				
7	93-3854	3	Belt Guide - Engine				
9	5-4460	4	Washer-Fender				
10	322-5	2	Screw-HH				
11	94-1963	1	Pulley Assy-Engine				
12	26-0671	1	Bolt-Blade				
13	3253-22	1	Washer-Lock				
14	3256-25	1	Washer-Flat				
16	9267154	1	Screw				
20	88-4410	1	Gasket - Muffler				
21	3253-4	2	Washer-Lock				
22	3274-10	2	Screw-Sckt Hd				
23	3255-8	1	Washer-Lock				
24	93-3855	1	Belt Guide - R.h.				
26	32149-1	2	Nut-Keps				
27	27-0220	2	Screw-Special HWH				
28	94-1952	1	Rod-Gas Tank				
29	3296-29	4	Nut-Lock				

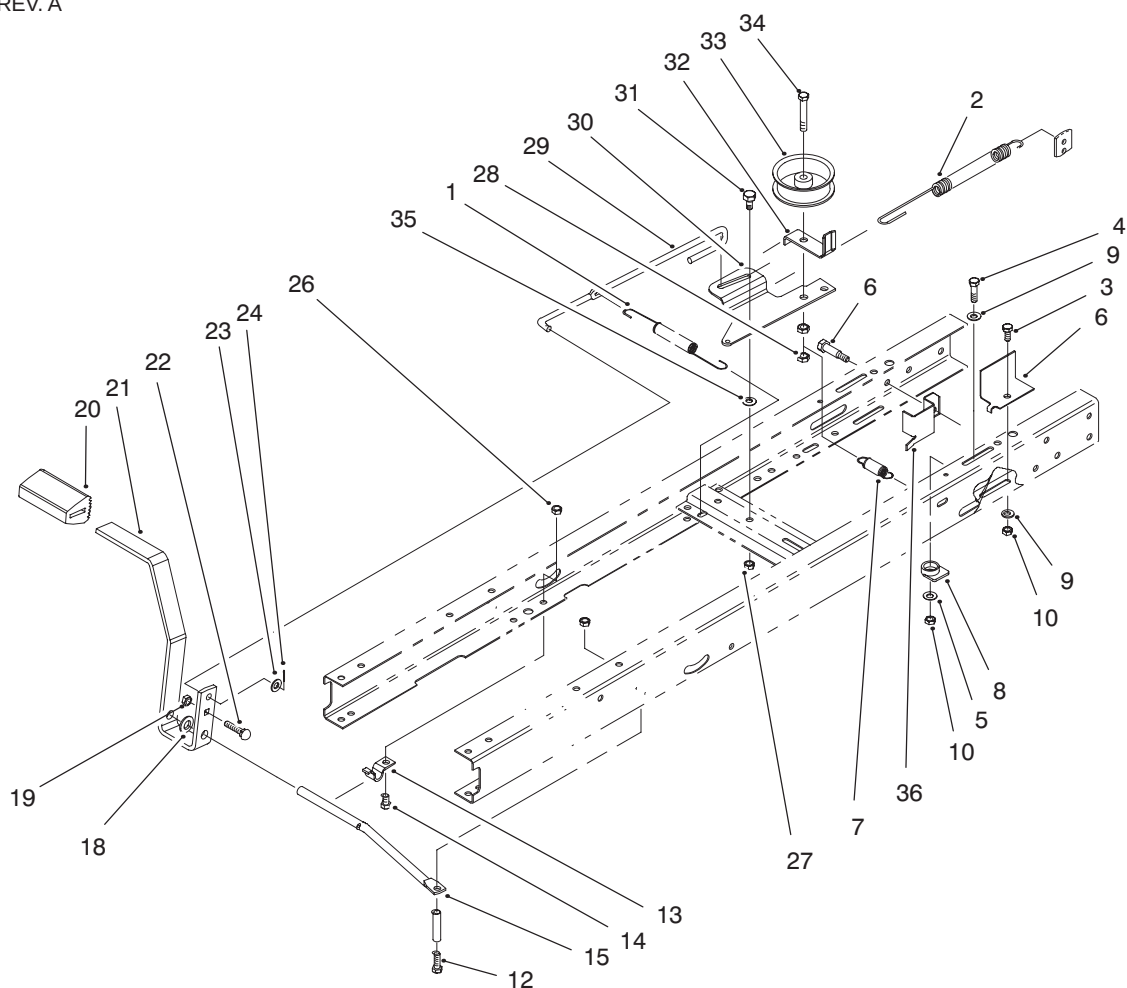


Sheet No.:9

Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	27-8890	1	Spring – Pedal Return
2	94-4294	1	Spring-Brake
3	322-3	1	Screw-HH
4	322-6	1	Screw-HH
5	5-4460	1	Washer-Fender
6	94-5433	1	Bracket-Belt Guide
7	88-6330	1	Spring – Extension
8	84-5610	1	Guide-Cable
9	3256-23	2	Washer-Flat
10	3296-29	2	Nut-Lock
13	88-4810	1	Clamp – Shift Pivot
14	322-3	2	Screw-HH
15	88-5500	1	Rod – Pedal Pivot
18	3256-26	1	Washer-Flat
19	3296-29	1	Nut-Lock
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal – Clutch/Brake
22	3230-3	1	Screw-CARR
23	3256-23	1	Washer-Flat
24	3272-10	1	Pin-Cotter
26	3296-29	2	Nut-Lock
27	3296-29	1	Nut-Lock
28	3296-59	2	Nut-Lock
29	88-5270	1	Rod – Clutch/Brake
30	88-6070	1	Arm –Idler
31	37-8770	1	Bolt-Shldr


Ref. No.	Part No.	Qty.	Description
32	88-5560	1	Belt Guide – Idler
33	88-5680	1	Idler Pulley
34	323-11	1	Screw
35	5-4460	1	Washer-Fender
36	94-4926	1	Bracket-Belt Guide

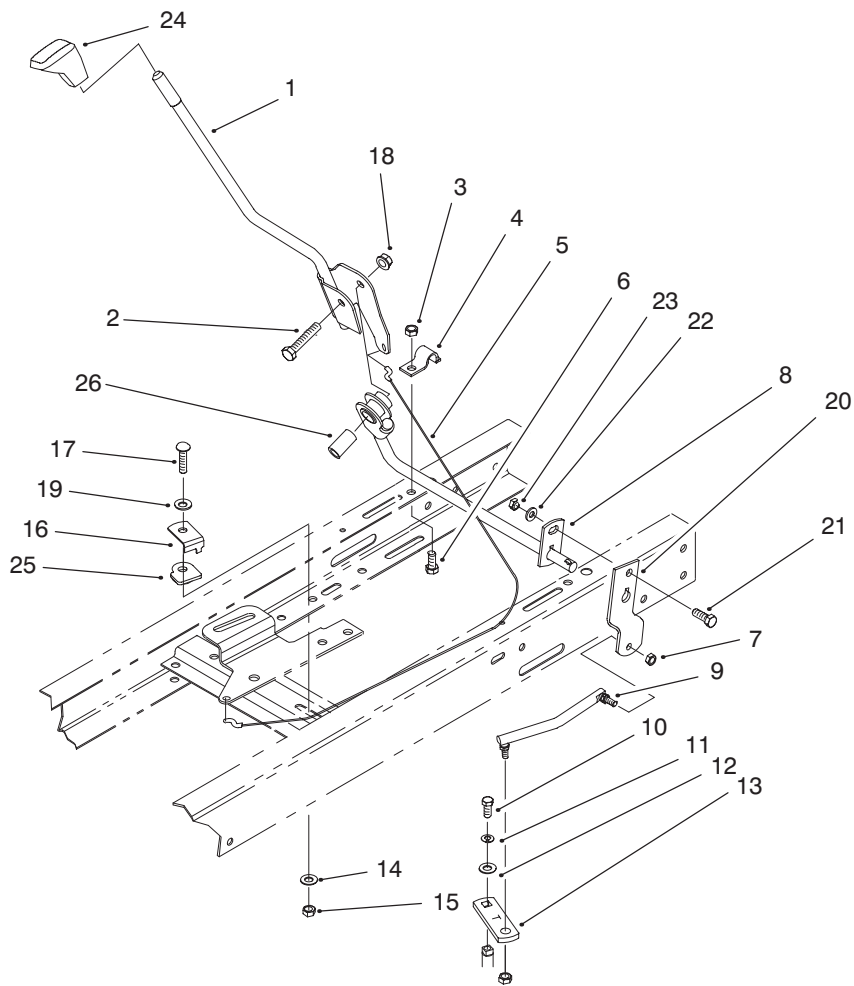

Sheet No.:10

Shift Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-1991-03	1	Shift Lever Wa	25	84-5610	1	Guide-Cable
2	323-10	1	Screw-HH	26	94-1997	1	Bushing-Shift Lever
3	3296-29	2	Nut-Lock				
4	88-4810	2	Clamp - Shift Pivot				
5	55-9321	1	Cable-Clutch				
6	322-3	2	Screw-HH				
7	3296-3	2	Nut-Lock				
8	94-1993-03	1	Shift Pivot Wa				
9	94-5431	1	Link-Shift				
10	329-23	1	Screw				
11	3253-3	1	Washer-Lock				
12	7-5461	1	Spacer-Transmission				
13	88-5340	1	Lever - Shift (Transaxle				
14	3256-23	1	Washer-Flat				
15	3296-29	1	Nut-Lock				
16	88-5930	1	Keeper - Cable				
17	3230-3	1	Screw-CARR				
18	3296-39	1	Nut-Lock				
19	3256-25	1	Washer-Flat				
20	94-1968	1	Lever-Shift Pivot				
21	322-3	1	Screw-HH				
22	3256-23	1	Washer-Flat				
23	3296-29	1	Nut-Lock				
24	94-5565	1	Knob - Control				

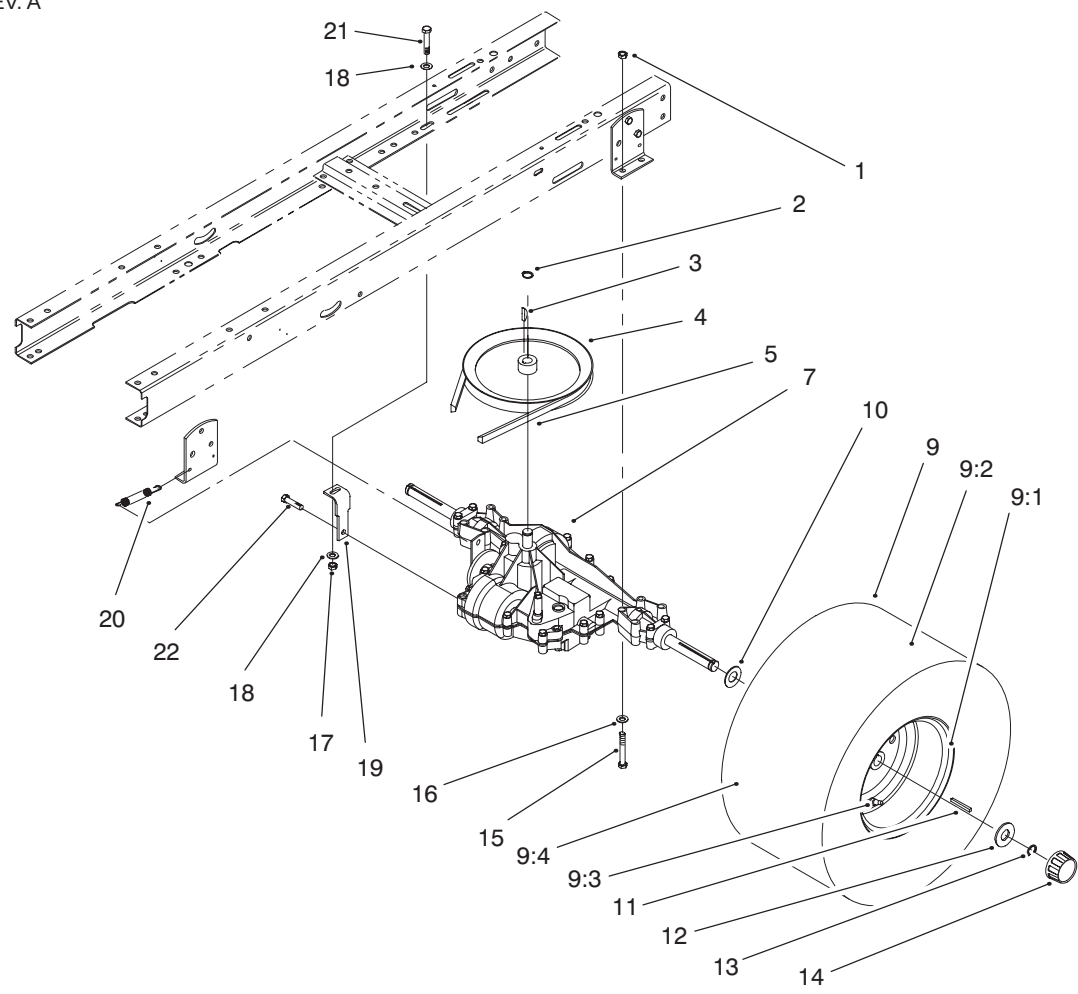


Sheet No.:11

Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	4	Nut-Lock
2	32120-64	1	Ring-Retaining
3	3257-23	1	Key-Woodruff
4	88-4840	1	Pulley - Transmission
5	88-6270	1	V-Belt
7	94-6022	1	Transaxle - Peerless 931
9	88-4300	2	Rear Wheel & Tire ASM
9:1	88-4390	2	Rim ASM-18" Rear
9:2	88-4090	2	Tire 18x9.50-8
9:3	232-27	2	Valve Stem & Cap Assembly
9:4	232-41	2	Tube-Inner 18x9.50-8
10	3-6498	2	Washer-Thrust
11	7-0036	2	Key-Square
12	28-2480	2	Washer-Flat
13	32151-48	2	Ring-Retaining
14	61-9780	2	Hubcap
15	322-12	4	Screw HH
16	3256-23	4	Washer-Flat
17	3296-29	2	Nut-Lock
18	3256-23	4	Washer-Flat
19	94-1969	2	Strap-Torque
20	26-6701	1	Spring - Extension


Ref. No.	Part No.	Qty.	Description
21	322-3	2	Screw-HH
22	32144-14	2	Screw-HWH

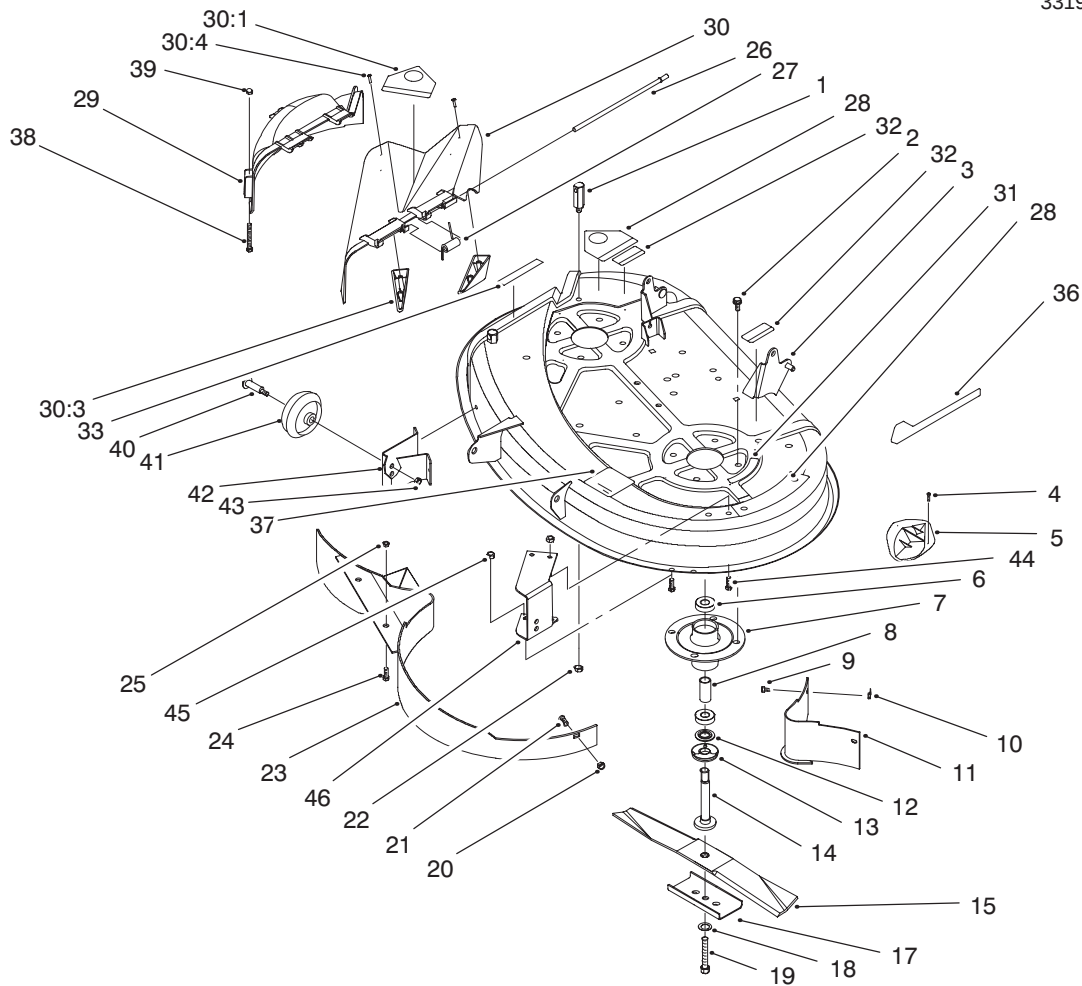

Sheet No.:16

Deck Assembly (38" Cutting Unit)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	57-4360	1	Pivot Post – Rear	27	57-6950	1	Spring–Torsion Deflector
2	32144-41	8	Screw–HWHTF	28	93-7010	2	Decal–Danger
3	94-1949-01	1	Deck Wa–38"	29	88-4430	1	Recycler Cover ASM
4	32144-111	8	Screw – PPH	30	93-7695	1	ASM.–38" Deflector
5	76-2160	4	Plate–Kicker	30:1	93-7010	1	Decal–Danger
6	38-7820	4	Bearing–Ball	30:3	93-7696	2	Kicker – Ce
7	88-4510	2	Spindle – Diecast Alum.	30:4	93-0231	4	Screw–Plastite
8	62-3661	2	Spacer – Bearing	31	93-6677	1	Decal – Shield Danger
9	321-4	2	Screw–HH	32	93-6674	2	Decal–Warning
10	3296-42	2	Nut–Lock	33	93-7009	1	Decal–Deflector Danger
11	79-1640-03	1	Wa–Baffle	36	92-9520	1	Decal–Deck
12	80-4380	2	Spacer – Hardened	37	93-6679	1	Decal – Belt Routing
13	80-4360	2	Shield – Bearing	38	321-15	2	Screw–HH
14	80-4341	2	Shaft – Spindle	39	32111-7	2	Nut–Cap
15	79-3061	2	Blade–19.32 Recycler	40	56-6591	2	Wheel Bolt
17	80-0510	2	Stiffener – Blade	41	701756	2	Wheel – Deck
18	3290-465	2	Washer–Spring	42	88-5740-03	1	Bracket–Deck Wheel RH
19	26-0671	2	Bolt–Blade	43	3296-39	2	Nut–Lock
20	3296-29	1	Nut–Lock	44	322-3	6	Screw–HH
21	3230-1	1	Bolt–CARR	45	3296-29	6	Nut–Lock
22	3296-39	1	Nut–Lock	46	93-3896-03	1	Bracket–Deck Wheel LH
23	79-1600-03	1	Wa–Baffle				
24	323-5	2	Screw–HH				
25	3296-39	2	Nut–Lock				
26	57-4380	1	Rod– Hinge Deflector				

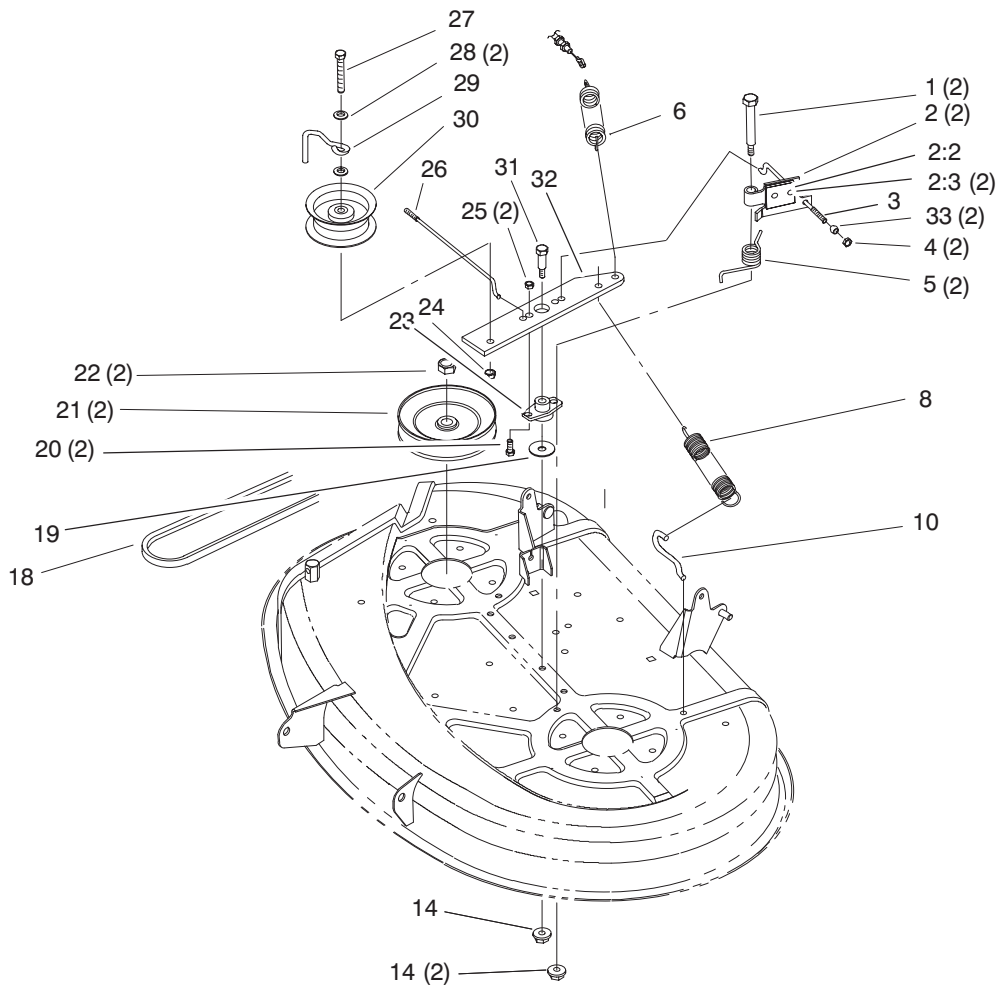

Sheet No.:17


Pulley & Belt Assembly (38" Cutting Unit)

Ref. No.	Part No.	Qty.	Description
1	88-4590	2	Bolt-Shoulder
2	88-6100	2	ASM. - Deck Brake
2:2	56-9830	2	Brake Pad
2:3	3290-282	4	Pop Rivet
3	88-5550	1	Rod -LH Deck Brake
4	3296-42	2	Nut-Lock
5	88-5910	2	Spring - Torsion
6	88-6130	1	Spring - Deck Engage
8	92-8934	1	Spring - Extension
10	88-5970	1	Hook - Return Spring
14	3296-58	3	Nut-Flange
18	88-6250	1	V-Belt
19	3256-68	1	Washer-Flt
20	322-5	2	Screw-HH
21	88-5330	2	Pulley - Deck
22	3219-6	2	Nut-Hex
23	88-4980	1	Bushing - Idler Arm
24	3296-39	1	Nut-Lock
25	3296-29	2	Nut-Lock
26	88-5540	1	Rod -RH Deck Brake
27	323-12	1	Screw
28	3256-24	2	Washer-Flat
29	88-5070	1	Belt Guide - Idler
30	88-5630	1	Pulley - Idler
31	7-0030	1	Shoulder Bolt

Ref. No.	Part No.	Qty.	Description
32	88-4870-03	1	Arm - Idler
33	67-0710	2	Ball - Swivel

Suspension Assembly (38" Cutting Unit)

Ref. No.	Part No.	Qty.	Description

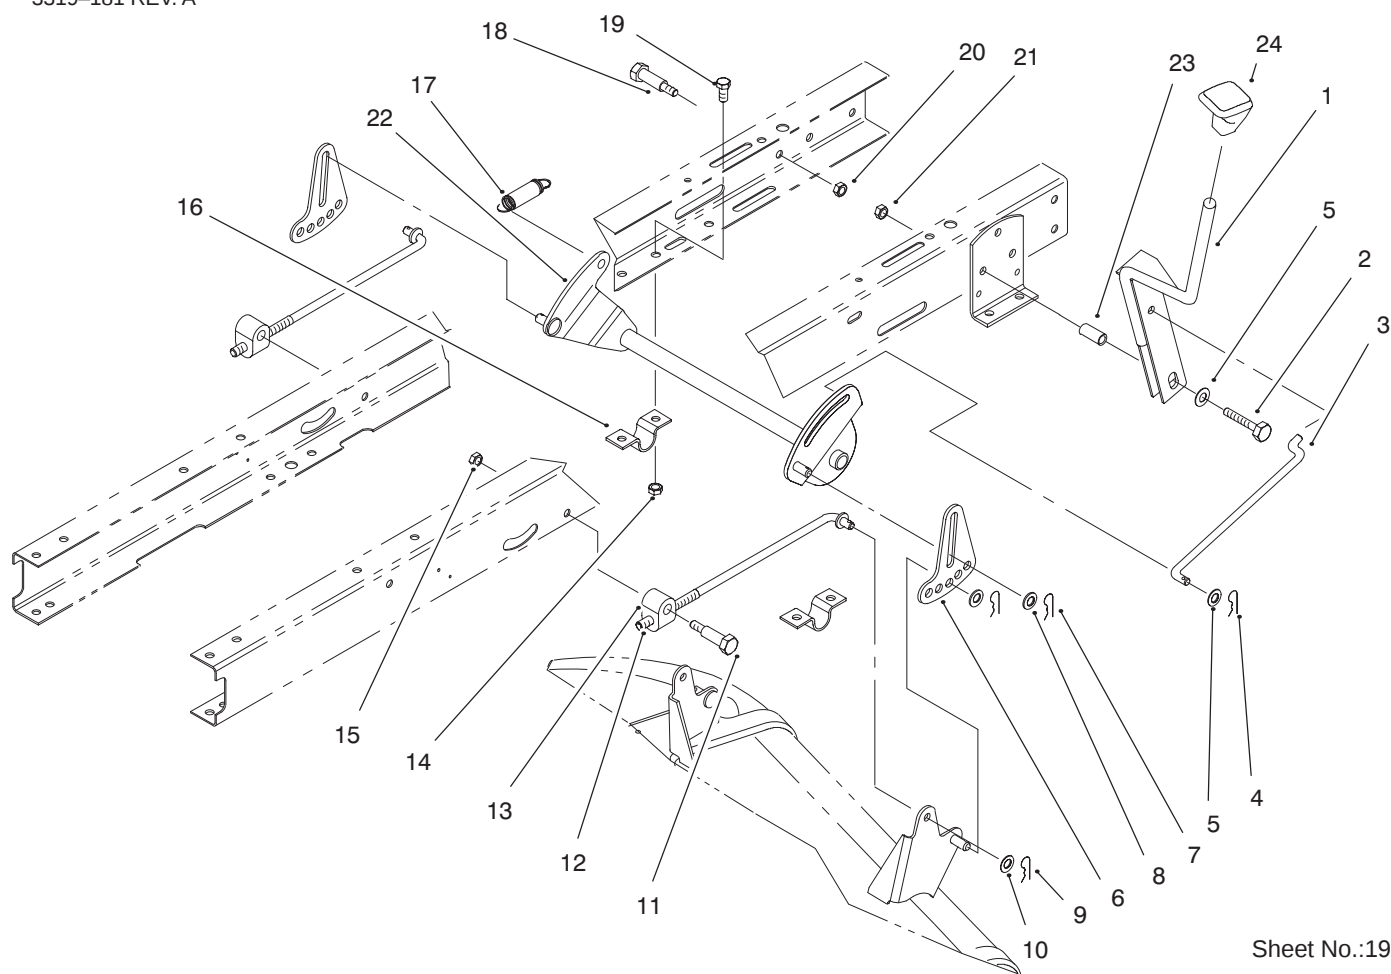


Sheet No.:19

Height of Cut Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3822-03	1	Lever-HOC
2	322-9	1	Screw-HH
3	88-5900	1	Link - HOC
4	3290-307	1	Pin-Cotter
5	3256-24	2	Washer-Flat
6	88-5570-03	2	Link-Adjusting HOC
7	3290-307	4	Pin-Cotter
8	80-6990	4	Washer-Hardened
9	3290-307	2	Pin-Cotter
10	3256-24	2	Washer-Flat
11	7-0030	2	Shoulder Bolt
12	88-5450	2	Rod - Hanger
13	88-4230	2	Trunnion - HOC
14	3296-29	4	Nut-Lock
15	3296-29	2	Nut-Lock
16	88-4730	2	Clamp - HOC Pivot
17	88-6460	1	Spring - Extension
18	7-0030	1	Shoulder Bolt
19	322-3	4	Screw-HH
20	3296-29	1	Nut-Lock
21	3296-29	1	Nut-Lock
22	88-5110-03	1	Pivot W.a. (H.o.c.)
23	65-7210	1	Spacer
24	94-5565	1	Knob - Control

Ref. No.	Part No.	Qty.	Description

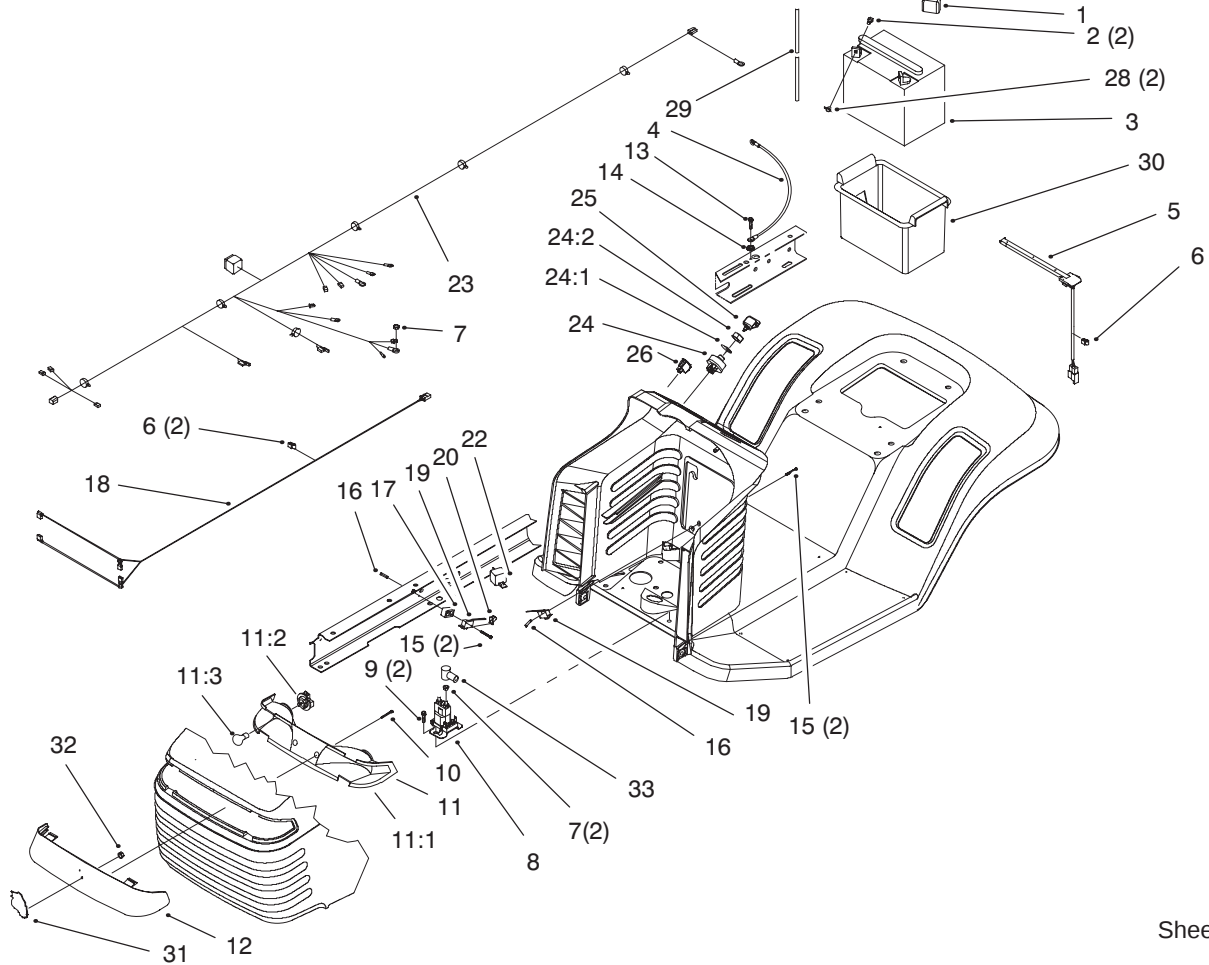


Sheet No.:20

Electrical Assembly

Ref. No.	Part No.	Qty.	Description
1	28-8080	1	Boot-Battery Terminal
2	321-4	2	Screw-HH
3	80-2600	1	Battery - 7 Plate
4	44-8110	1	Battery Cable -Neg
5	38-1420	1	Switch-Seat
6	702366	1	Clip-Wire Retainer
6	702366	2	Clip-Wire Retainer
7	32149-2	3	Nut-Hex Lock
8	92-9845	1	Solenoid
9	9266714	2	Screw-HWHTF
10	32144-32	2	Screw-Plastic
11	88-3970	1	Reflector-Lamp
11:1	93-8741	1	Reflector - Headlight
11:2	111686	2	Socket Assembly
11:3	7228	2	Bulb - Light
12	88-3960	1	Lense - Headlights
13	9266714	1	Screw-HWHTF
14	3255-7	1	Washer-Lock
15	93-0539	4	Screw-PPH
16	3290-354	2	Nut-Speed
17	88-4880	1	Spacer - Microswitch
18	88-4320	1	Harness-Wire
19	88-9932	2	Switch - Micro
20	93-3240	1	Seal-Plunger
22	116397	1	Relay
23	93-3810	1	Wire Harness

Ref. No.	Part No.	Qty.	Description
24	88-9830	1	Switch-Ignition
24:1	3254-5	1	Washer-Lock
24:2	218-461	1	Nut-HH (F/W Sw)
25	63-8360	1	Key-Ignition
26	92-8875	1	Switch-Rocker
28	32103-22	2	Nut-Wing
29	56-2540	1	Tube-Vent Use w/80-2600
30	88-4040	1	Battery Box
31	80-2240	1	Plate-Name Grille
32	3290-299	1	Nut - Tinnerman
33	94-5362	1	Boot-Terminal Insulator

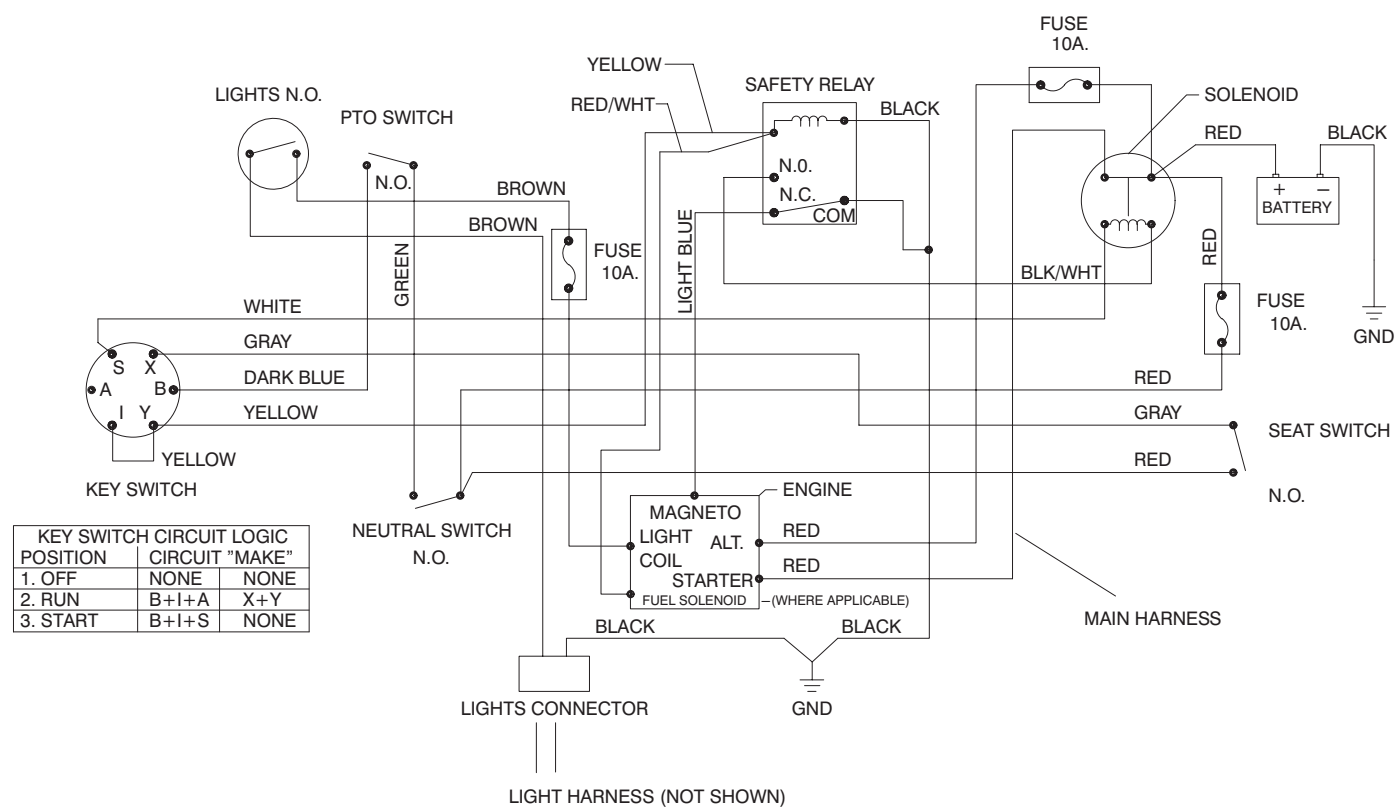

Sheet No.:21


Electrical Schematic

Ref. No.	Part No.	Qty.	Description
*	218-578	3	Fuse – 10 Amp

Ref. No.	Part No.	Qty.	Description

* Not Illustrated


PEERLESS TRANSAXLE MODEL MST 205-509A

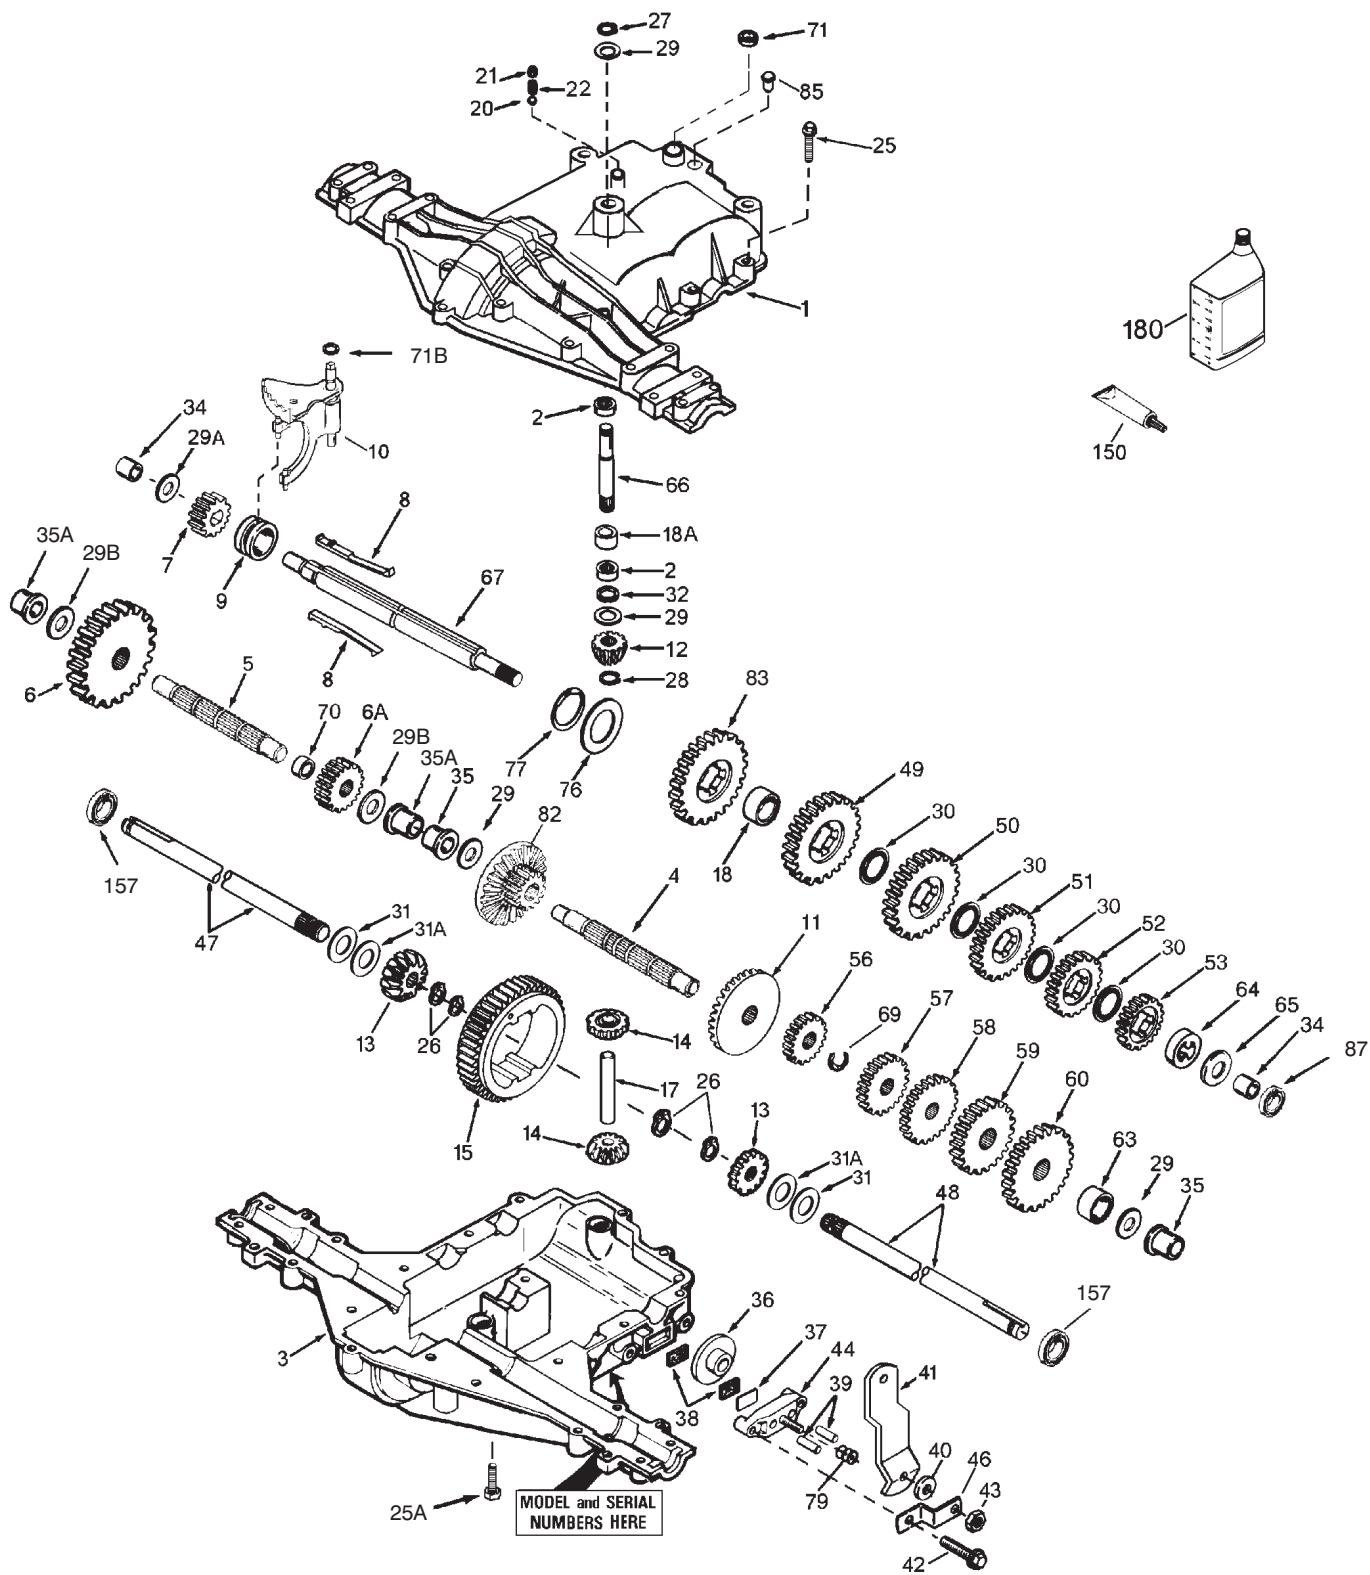

PEERLESS TRANSAXLE MODEL MST 205—509A

Ref. No.	Part No.	Description	No. Used
1	772144	Transaxle Cover	1
2	780086A	Needle Bearing	2
3	770128	Transaxle Case	1
4	776395	Countershaft	1
5	776409	Output Shaft	1
6	778364	Spur Gear (38 teeth)	1
6A	778365	Spur Gear (15 teeth—steel)	1
7	778330	Spur Gear (11 teeth—steel)	1
8	792136A	Shift Key	2
9	784352	Shift Collar	1
10	784378	Shift Rod & Fork	1
11	778334	Bevel Gear (30 teeth)	1
12	778309	Input Bevel Pinion (13 teeth)	1
13	778327	Bevel Gear (16 teeth—steel)	2
		(Incl. 14)	
14	778327	Bevel Gear (16 teeth—steel)	2
		(Incl. 13)	
15	778312A	Ring Gear (43 teeth)	1
17	786139	Drive Pin	1
18	786102	Spacer	1
18A	786175	Spacer	1
20	792077	Ball 5/16" dia	1
21	792078	Set Screw	1
22	792079	Spring	1
25	792073A	Screw	18
26	792125	Retaining Ring (pkg of 2)	4
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	6
29A	780160	Washer	1
30	780108	Washer	4
31	780001	Washer (.056 wide)	
		(USE AS NEEDED)	2
31A	780195	Flat Washer (.062 wide)	2
32	788083	Oil Seal	1
34	780194	Bushing	2
35	780193	Flanged Bushing	2
35A	780197	Flanged Bushing	2
36	790075	Brake Disk	1
37	790007	Brake Pad Plate	1

Ref. No.	Part No.	Description	No. Used
38	799021	Brake Pad (pkg of 2)	2
39	786026	Dowel Pin	2
40	792076A	Flat Washer	1
41	790080	Brake Lever	1
42	792073A	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774690	Axle (11—15/16" long)	1
48	774691	Axle (16—1/2" long)	1
49	778356	Spur Gear (29 teeth—steel)	1
50	778354	Spur Gear (23 teeth—steel)	1
51	778344	Spur Gear (20 teeth)	1
52	778350	Spur Gear (16 teeth—steel)	1
53	778346	Spur Gear (15 teeth—steel)	1
56	778355	Spur Gear (11 teeth—steel)	1
57	778353	Spur Gear (17 teeth—steel)	1
58	778343	Spur Gear (20 teeth)	1
59	778349	Spur Gear (24 teeth—steel)	1
60	778345	Spur Gear (25 teeth)	1
63	786071	Countershaft Spacer	1
64	786072	Brake Shaft Spacer	1
65	780189	Washer	1
66	776394	Input Shaft	1
67	776396	Shifter & Brake Shaft	1
69	792170	Retaining Ring	1
70	786178	Spacer	1
71	788069	Square Cut Ring	1
71A	788092	"O" Ring	1
76	780090	Washer	1
77	788078A	Inverted Retaining Ring	1
79	792144	Spring	1
82	778333	Bevel & Spur Gear (30 & 13 teeth)	1
83	778338	Spur Gear (27 Teeth)	1
85	792154	Pipe Plug	1
87	788089	Oil Seal	1
150	788093	Liquid Gasket RTV Silicone	1
157	778088	Oil Seal	2
180	730229A	Gear Oil 80W90	1

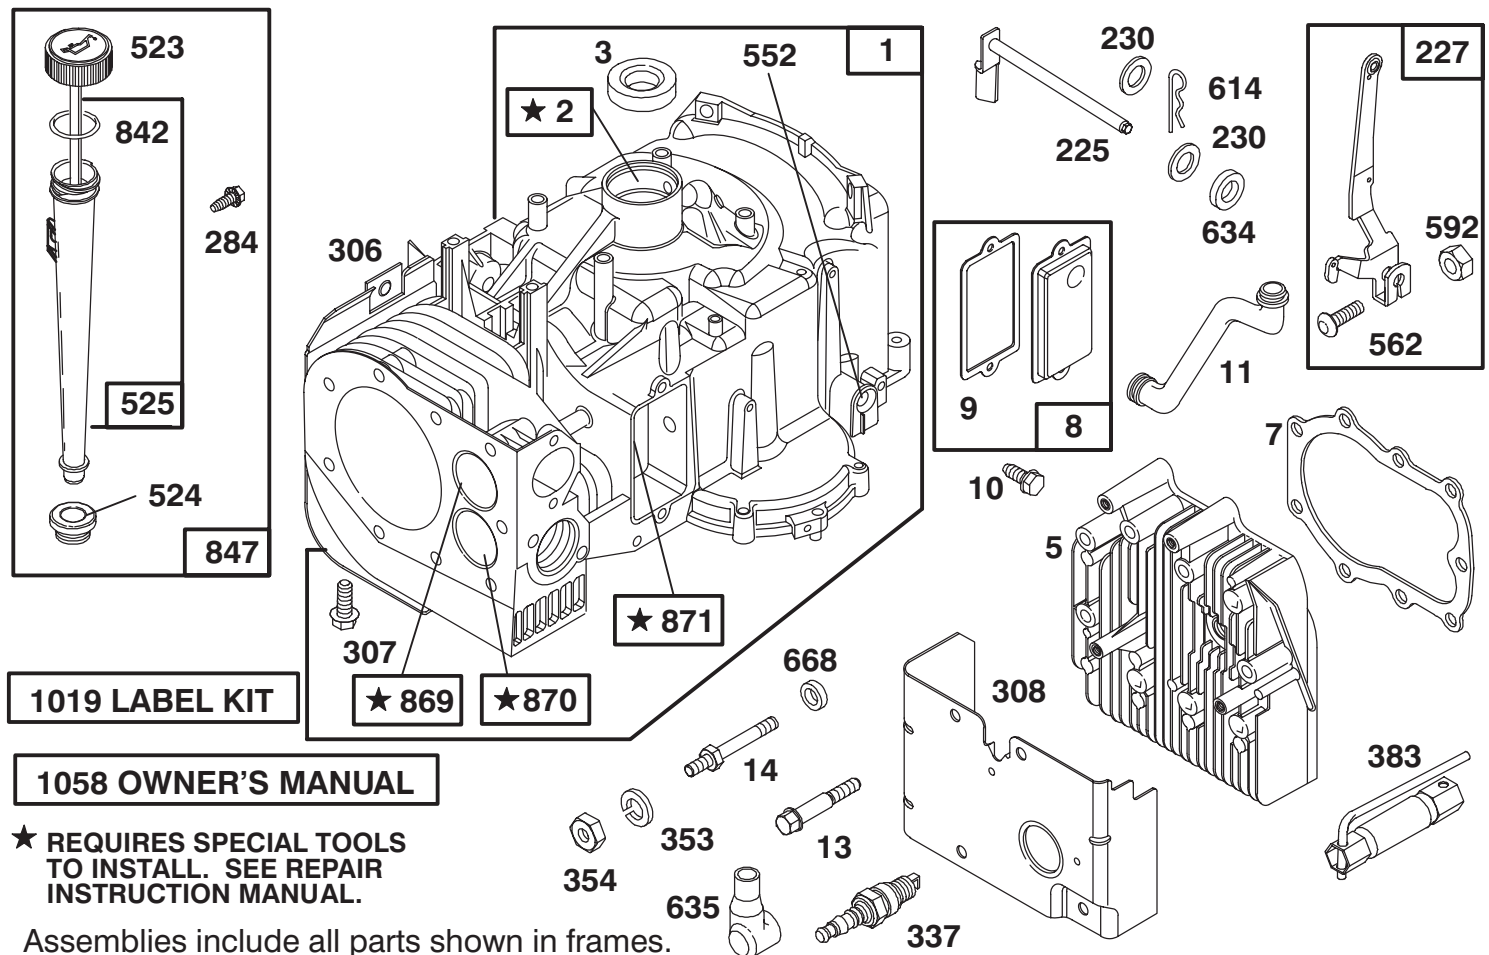

ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01


Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bearing—Cylinder	1
★3	391086	Seal—Oil	1
5	494240	Head—Cylinder	1
★7	271866	Gasket—Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket—Valve Cover	1
10	94621	Screw—Sem	1
11	281246	Tube—Breather	1
13	94622	Screw—Cylinder Head	1
14	94776	Stud—Cyl. Head	1
225	495157	Crank—Governor	1
227	493935	Lever Assy.—Governor	1
230	94742	Washer—Gov. Crank	1
284	94073	Screw—Hex Head	1
306	224545	Shield—Cylinder	1
307	94623	Screw—Cyl. Shield Mtg.	1
308	491490	Cover—Cylinder Head	1
337	802592	Plug—Spark	1
353	94315	Washer—Lock	1
354	94314	Nut—Hex.	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench—Spark Plug	1
523	495230	Cap—Oil Fill	1
★524	281370	Seal—Fill Tube	1
525	496113	Tube—Oil Fill	1
552	231597	Bushing—Gov. Crank	1
562	92613	Bolt—Carriage	1
592	231082	Nut—Hex.	1
614	93306	Pin—Cotter	1
★634	491323	Seal—Governor	1
635	66538	Elbow—Spark Plug	1
668	231109	Spacer	1
★842	270920	Seal—Oil Fill Cap	1
847	496415	Fill Group—Oil	1
869	261463	Seat—Intake Valve	1
870	213316	Seat—Exhaust Valve	1
871	261961	Guide—Exhaust Valve	1
		Note: 231218 Guide—Intake Valve	1
1019	491255	Label Kit	1
1058	272697	Owner's Manual	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

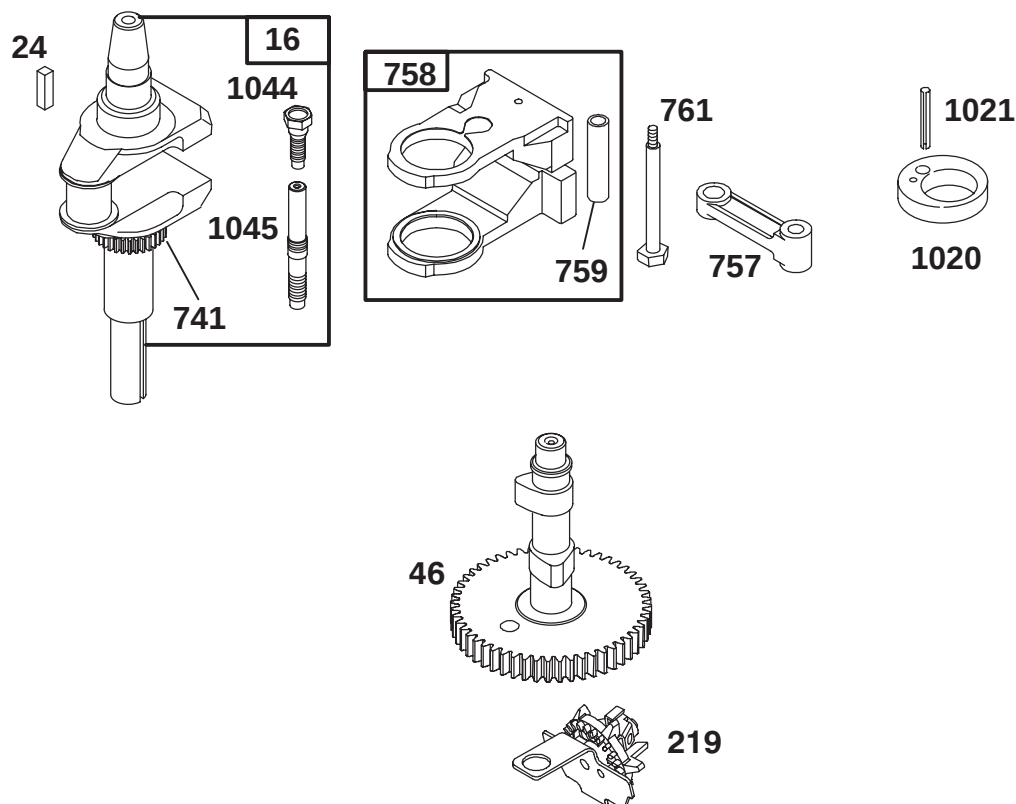

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
16	495162	Crankshaft	1	758	399891	Counterweight Assy.	1
	94196	Key—Timing Gear	1	759	298909	Pin—Counterweight	1
24	222698	Key—Flywheel	1	761	94593	Screw—Counterweight	1
46	213720	Gear—Cam	1	1020	262243	Eccentric	1
219	490815	Oil Slinger, Gov. Gear Assy.	1	1021	94160	Pin—Eccentric	1
741	262932	Gear—Timing	1	1044	94673	Screw—Shoulder	1
757	213998	Link—Counterweight	1	1045	231828	Extension—Crankshaft	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

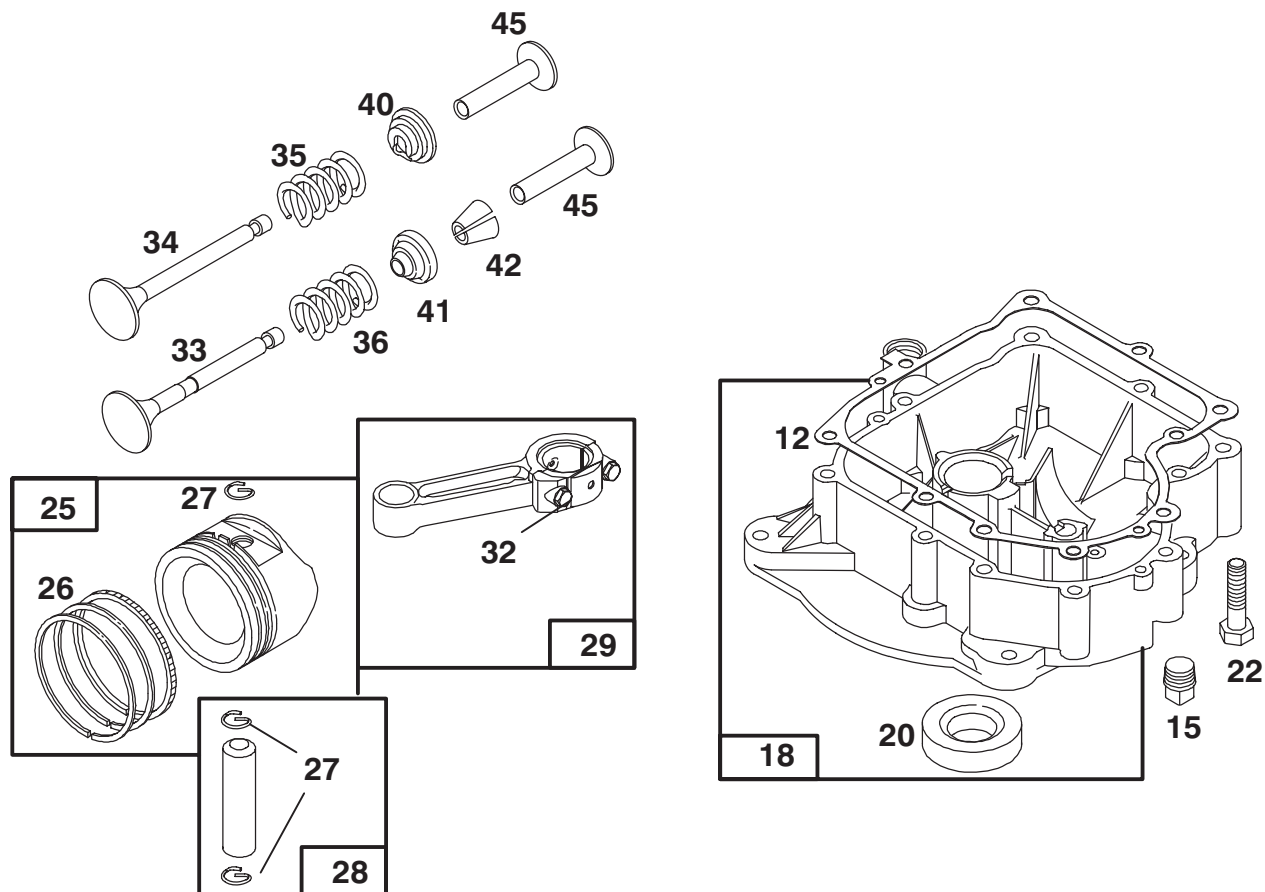

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01


Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crankcase (.015" Thick)	1
★	271997	Gasket—Crankcase (.005" Thick)	1
★	271996	Gasket—Crankcase (.009" Thick)	1
15	94239	Plug—Oil Drain	1
18	494238	Base—Engine	1
★20	291675	Seal—Oil	1
22	94624	Screw—Base Mtg. Sem	1
25	497518	Piston Assy. (Std.)	1
	497519	Piston Assy. (.010" O.S.)	1
	497520	Piston Assy. (.020" O.S.)	1
	497521	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set—Piston (Std.)	1
	391781	Ring Set—Piston (.010" O.S.)	1
	391782	Ring Set—Piston (.020" O.S.)	1
	391783	Ring Set—Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	260924	Lock—Piston Pin	1
28	299691	Pin Assy.—Piston (Standard)	1
	391286	Pin Assy.—Piston (.005" O.S.)	1
29	490348	Rod Assembly—Connecting	1
	490469	Rod—Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw—Connecting Rod	1
33	262246	Valve—Exhaust	1
34	262247	Valve—Intake	1
35	65906	Spring—Intake Valve	1
36	26828	Spring—Exhaust Valve	1
40	221596	Retainer—Intake Valve	1
41	292260	Rotocoil—Exhaust Valve	1
42	93630	Retainer—Ex. Valve Rotocoil	1
45	262248	Tappet—Valve	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

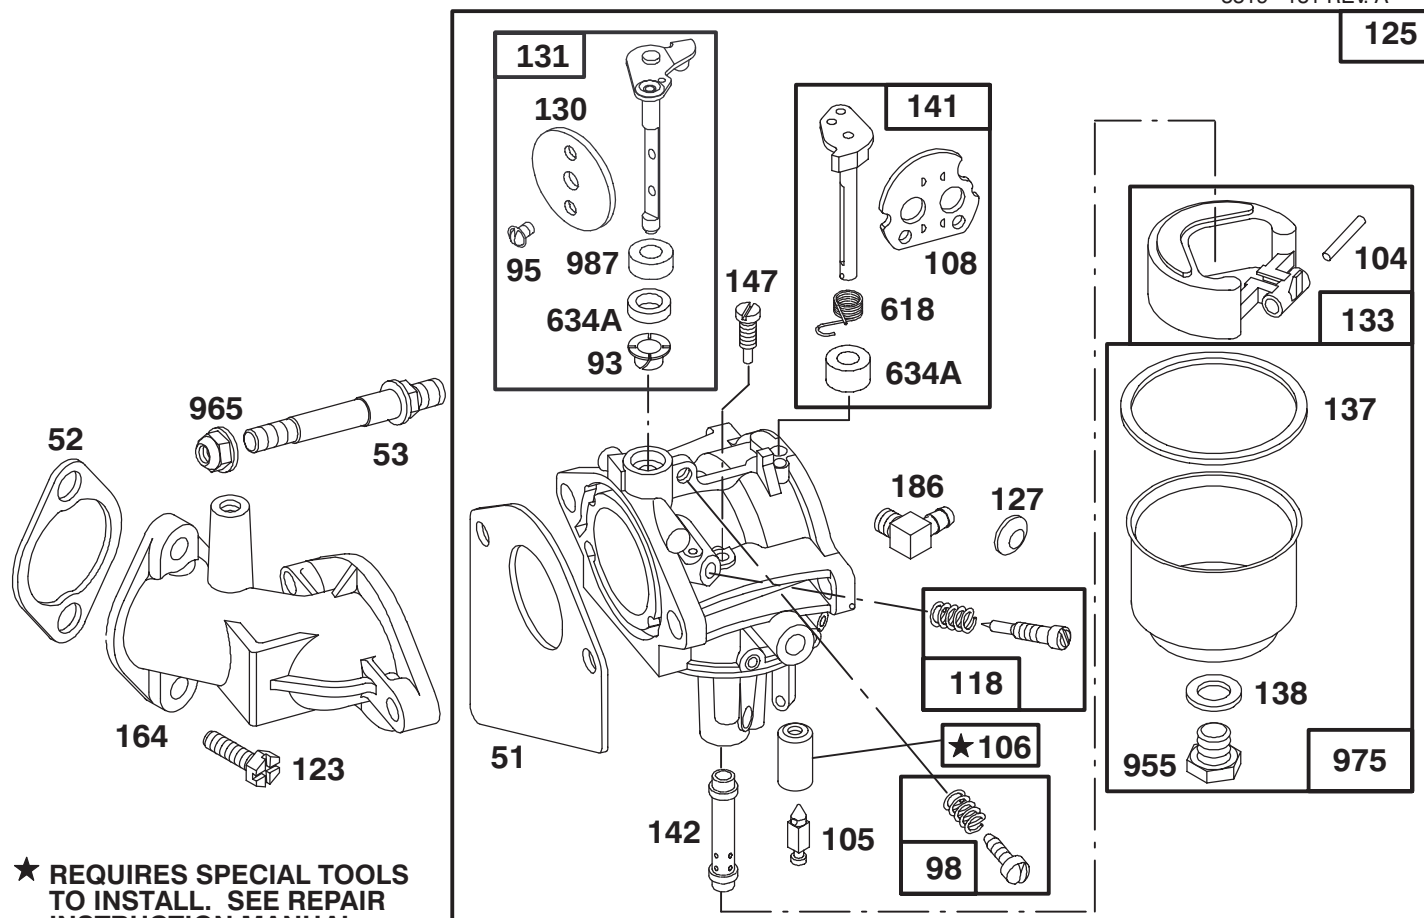

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01


Ref. No.	Part No.	Description	No. Used
◆51	272465	Gasket—Carburetor (Carb. to Manifold)	1
★52	272554	Gasket—Carburetor (Manifold to Cylinder)	1
53	94637	Stud—Carb. Mtg.	1
●93	281346	Bushing—Throttle Shaft	1
●95	94098	Screw—Throttle	1
98	495800	Screw—Idle Speed	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve—Choke	1
118	494383	Valve—Needle	1
121	495799	Carburetor Kit	1
123	94616	Screw—Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug—Welch (Sold in Kit Only)	1
130	224539	Valve—Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft—Throttle	1
133	494381	Float—Carburetor	1
◆137	281165	Gasket—Float Bowl	1
◆138	281164	Washer—Float Bowl Screw	1
141	495931	Shaft—Choke	1
●142	497566	Nozzle—Carburetor	1
●147	231984	Pilot—Jet	1
164	213819	Manifold—Intake	1
186	493496	Connector—Fuel	1
618	262803	Spring—Choke Return	1
●634A	281168	Seal—Choke Shaft	1
●634B	398970	Washer—Throttle Shaft	1
955	94642	Screw—Fuel Bowl	1
965	94010	Nut—Hex.	1
975	494378	Bowl Assy.—Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal—Throttle Shaft	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

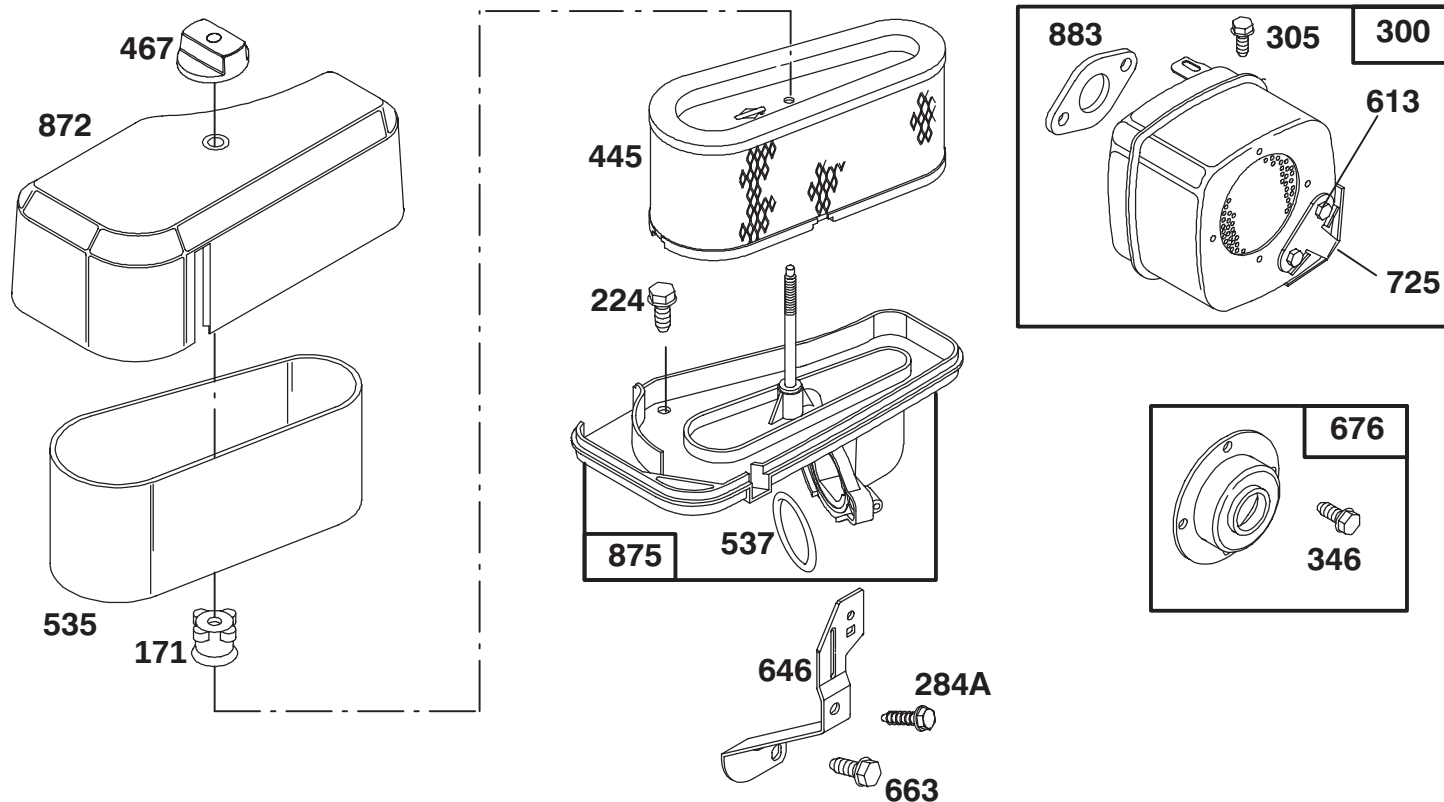

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01


Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	1
224	94729	Screw—Air Cleaner Sem	1
284A	94704	Screw Hex. Head	1
300	491413	Muffler—Exhaust	1
305	94786	Screw—Hex. Head	1
346	93705	Screw—Hex. Head	1
445	496894	Cartridge—Air Cleaner	1
467	493903	Knob—Air Cleaner	1
535	272403	Element—Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring—Air Cleaner	1
613	93927	Screw—Hex. Head	1
646	224546	Brace—Air Cleaner	1
663	94620	Screw—Hex. Hd.	1
676	396903	Deflector—Muffler	1
725	223023	Shield—Muffler	1
872	281361	Cover—Air Cleaner	1
875	494237	Body—Air Cleaner	1
★883	272293	Gasket—Exhaust	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

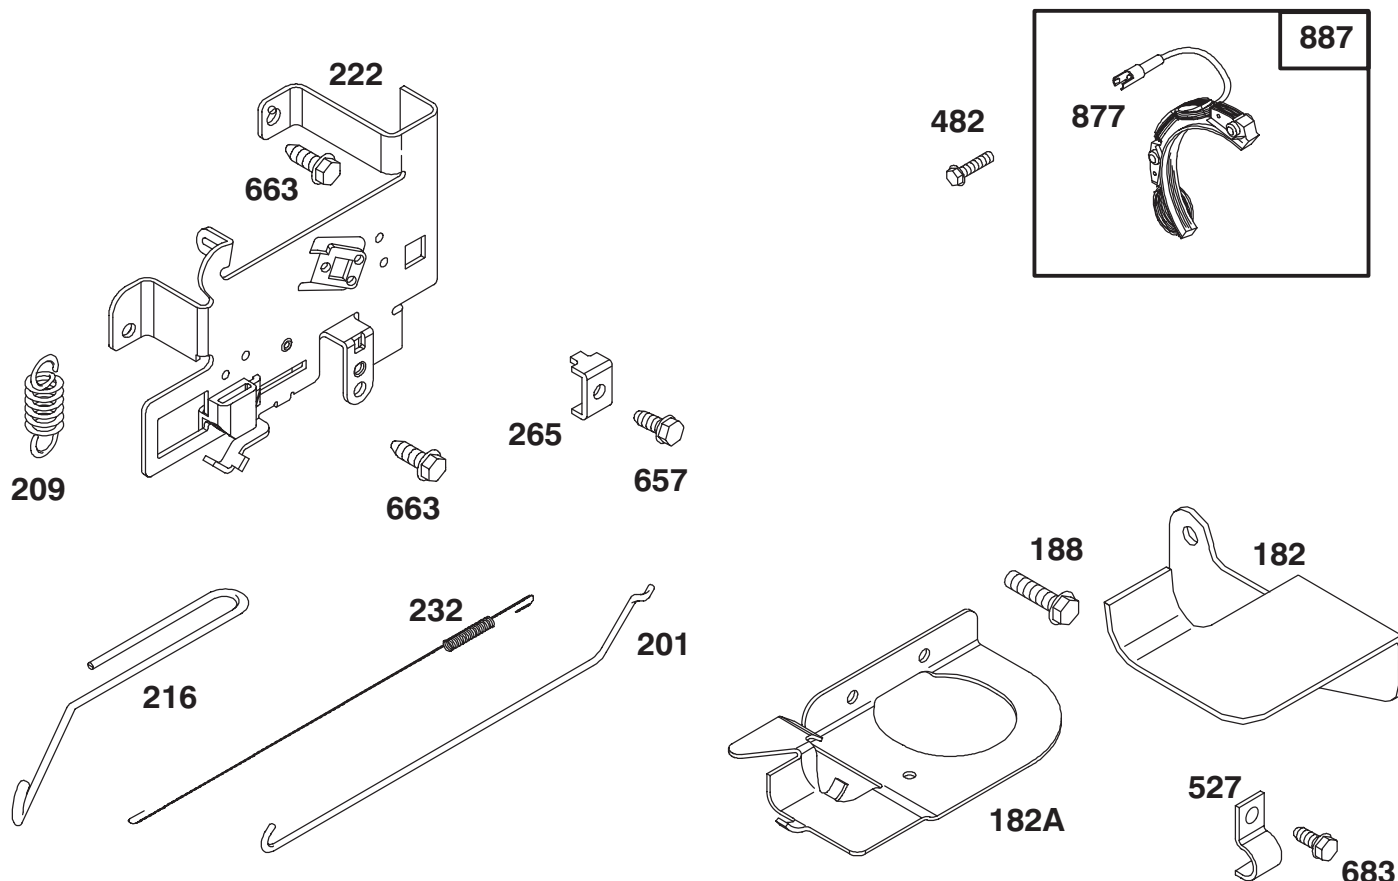

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01


Ref. No.	Part No.	Description	No. Used
182	223925	Bracket—Fuel Tank	1
182A	223866	Bracket—Fuel Tank	1
188	94480	Screw—Sem	1
201	262767	Link—Governor	1
209	260871	Spring—Governor	1
216	262766	Link—Choke	1
222	495611	Plate—Governor Control	1
232	262785	Spring—Governor Link	1

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp—Casing	1
482	93621	Screw—Sem	1
527	221428	Clamp	1
657	93496	Screw—Sem	1
663	94620	Screw—Hex. Head	1
683	94602	Screw—Hex. Head	1
877	393814	Diode and Connector Assy.	1
887	391529	Alternator	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

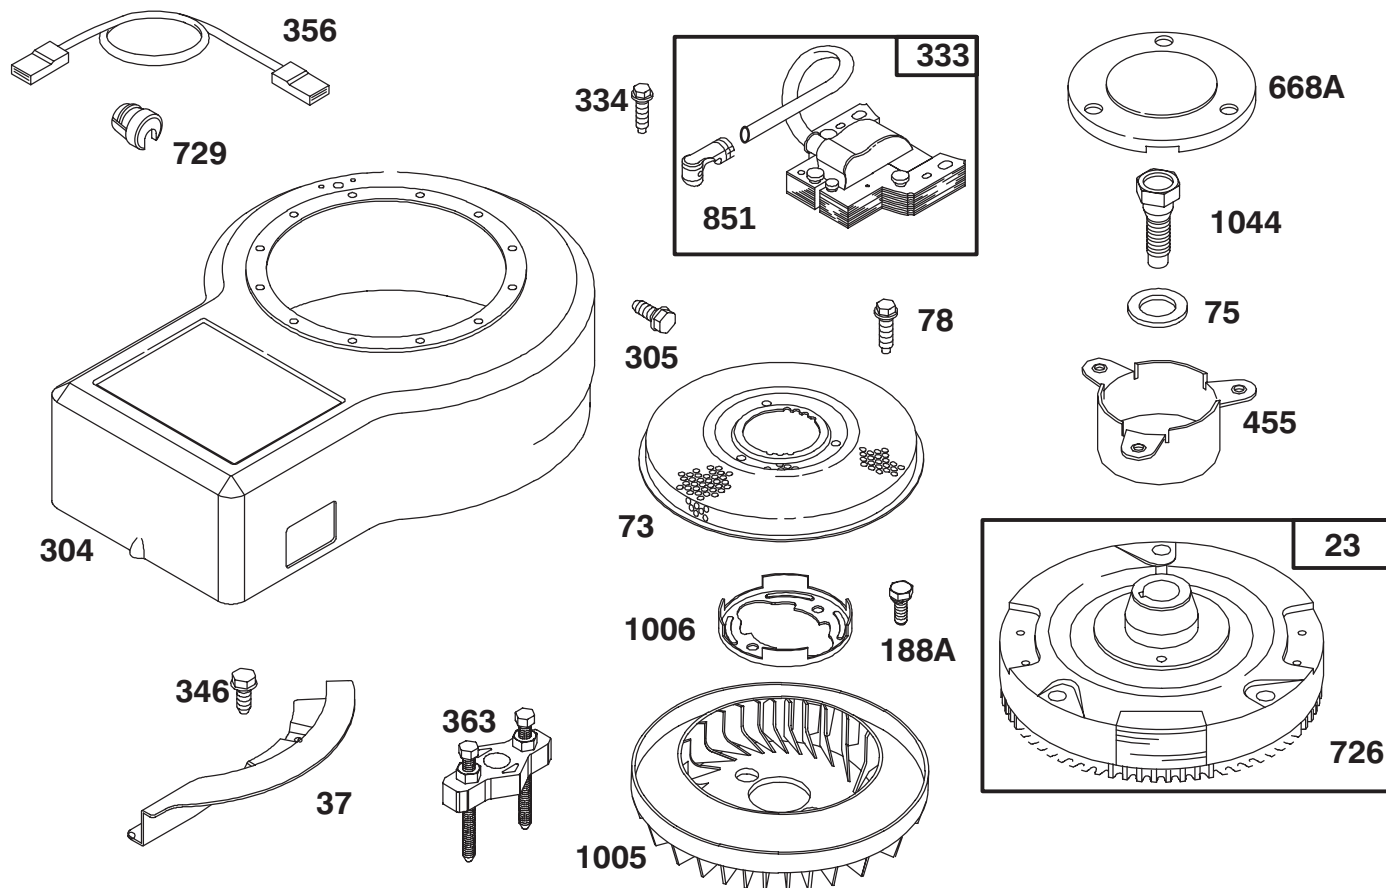

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01


Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	1
37	224502	Guard—Flywheel	1
73	224948	Screen—Rotating	1
75	224061	Washer—Spring	1
78	94626	Screw—Sem	1
188A	94627	Screw—Sem	1
304	496431	Housing—Blower	1
305	94786	Screw—Hex.	1
333	492341	Armature—Magneto	1
334	93381	Screw—Hex.	1
346	93705	Screw—Hex. Head	1

Ref. No.	Part No.	Description	No. Used
356	494328	Wire Assembly	1
363	19203	Puller—Flywheel	1
455	222561	Cup—Screen Mounting	1
668A	280848	Spacer	1
726	392134	Gear—Ring (Includes Mtg Hardware)	1
729	281159	Clip—Lead Wire	1
851	493880	Terminal—Ignition Cable	1
1005	281355	Fan—Flywheel	1
1006	224413	Retainer—Fan	1
1044	94673	Screw—Shoulder	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

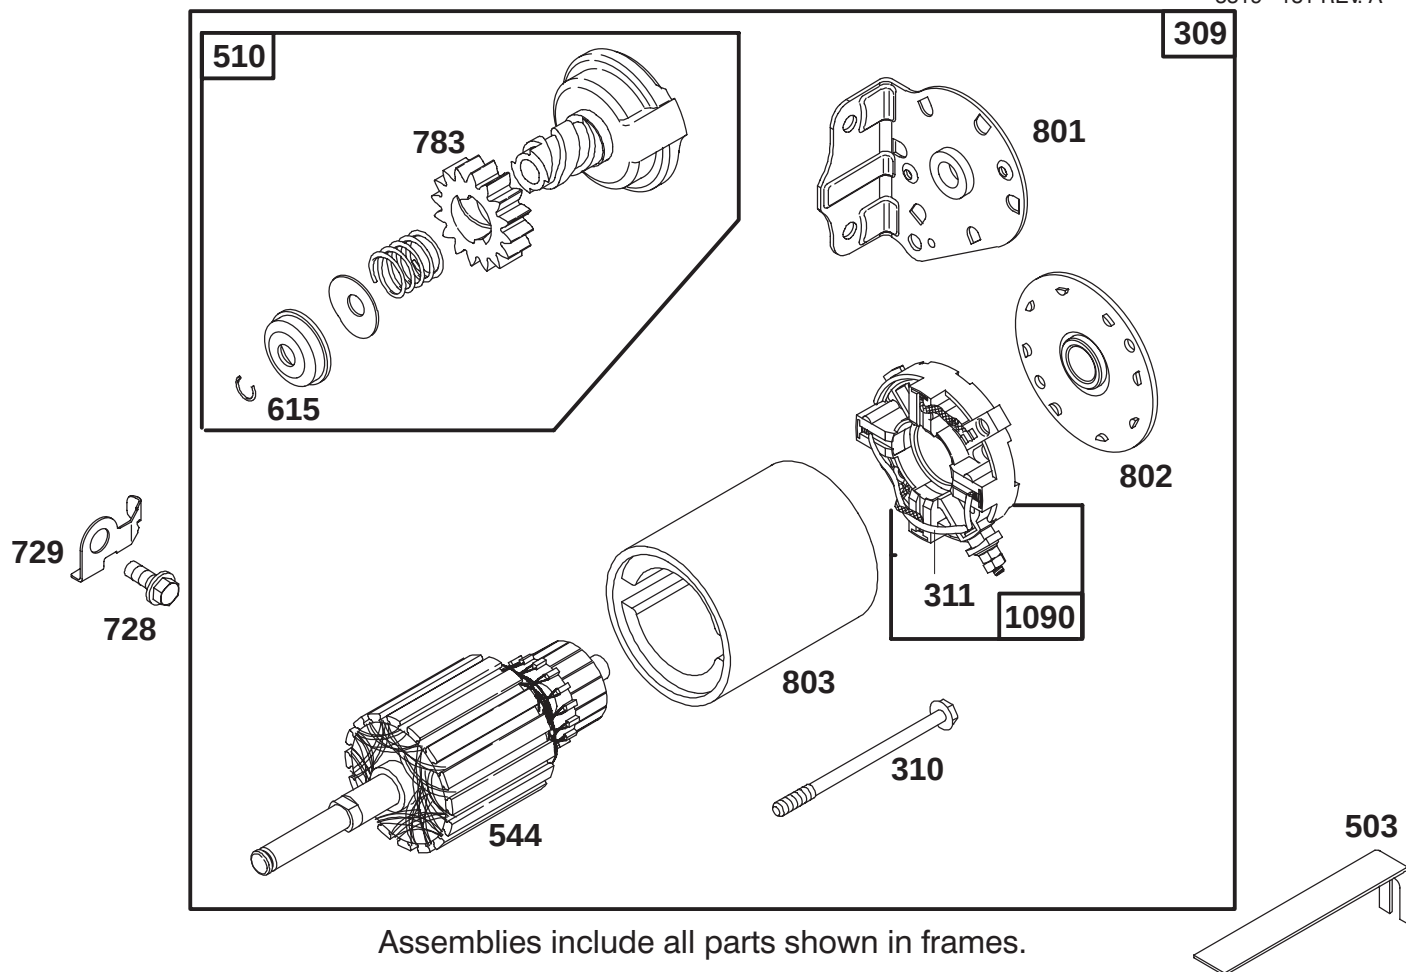

ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01




Ref. No.	Part No.	Description	No. Used
309	497595	Motor—Starter	1
310	94003	Bolt—Thru	1
311	497608	Brush Set	1
503	806000	Strap—Starter	1
510	497606	Drive—Starter	1
544	497603	Armature—Starter	1
615	263080	Retainer	1

Ref. No.	Part No.	Description	No. Used
728	94627	Screw—Hex. Head	1
729	225170	Clip—Wire	1
783	280104	Gear—Starter	1
801	394856	Cap—Drive	1
802	497607	Plate—Cover	1
803	497604	Housing—Starter	1
1090	497605	Cap—End	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

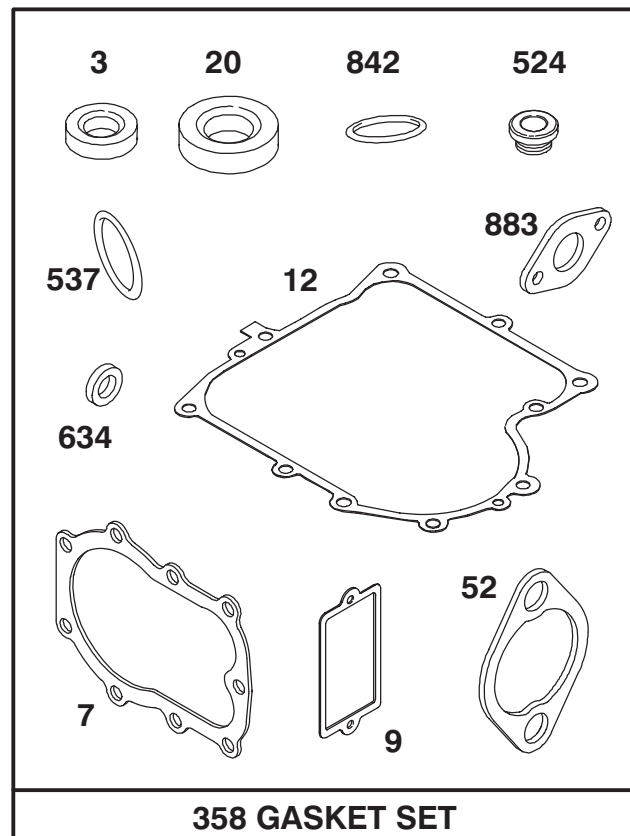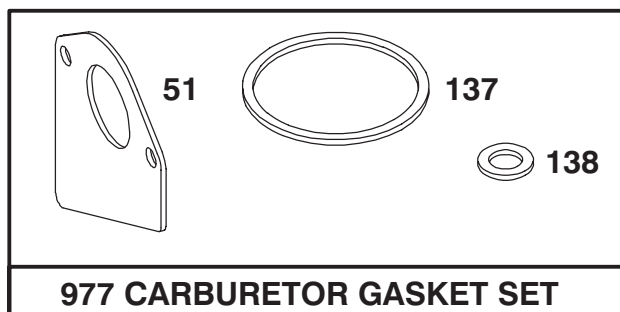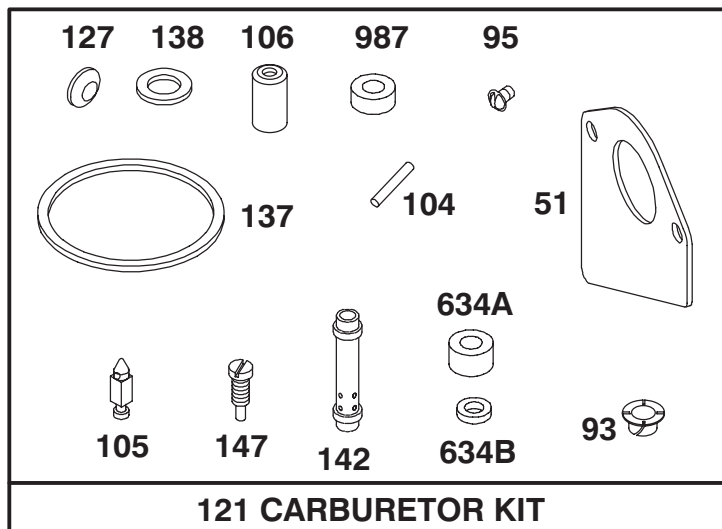

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0127-01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★7	271866	Gasket—Cylinder Head	1
★9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase (.015" Thick)	1
★	271997	Gasket—Crankcase (.005" Thick)	1
★	271996	Gasket—Crankcase (.009" Thick)	1
★20	291675	Seal—Oil	1
◆★51	272465	Gasket—Carburetor (Carb. to Manifold)	1
★52	272554	Gasket—Carburetor (Manifold to Cylinder)	1
●93	281346	Bushing—Throttle Shaft	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	497535	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only)	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer—Float Bowl Screw	1
●142	494566	Nozzle—Carburetor	1
●147	231984	Pilot—Jet	1
358	494241	Gasket Set	1
★524	281370	Seal—Fill Tube	1
★537	281106	O-Ring—Air Cleaner	1
★634	491323	Seal—Governor	1
●634A	281168	Seal—Choke Shaft	1
●634B	398970	Washer—Throttle Shaft	1
★842	270920	Seal—Oil Fill Cap	1
★883	272293	Gasket—Exhaust	1
977	494385	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497535.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
7228	14	11:3	2	Bulb — Light
104047	6	3:1	1	Bushing
104048	6	3:2	1	Assembly—Valve
111419	4	12	1	Washer—Bearing
111686	14	11:2	2	Socket Assembly
114621	3	24	1	Decal—Noise
116397	14	22	1	Relay
701178	1	1	2	Cap—Protector
701756	10	41	2	Wheel — Deck
702366	14	6	1	Clip—Wire Retainer
702366	14	6	2	Clip—Wire Retainer
9266714	2	36	2	Screw—HWHTF
9266714	6	38	1	Screw—HWHTF
9266714	14	9	2	Screw—HWHTF
9266714	14	13	1	Screw—HWHTF
9267154	6	16	1	Screw
3—6498	4	21	2	Washer—Thrust
3—6498	4	38	4	Washer—Thrust
3—6498	5	17	1	Washer—Thrust
3—6498	5	22	1	Washer—Thrust
3—6498	9	10	2	Washer—Thrust
3—7501	5	11	4	Washer—Curved
5—4460	3	4	1	Washer—Fender
5—4460	4	17	1	Washer—Fender
5—4460	6	9	4	Washer—Fender
5—4460	7	5	1	Washer—Fender
5—4460	7	35	1	Washer—Fender
7—0030	11	31	1	Shoulder Bolt
7—0030	13	11	2	Shoulder Bolt
7—0030	13	18	1	Shoulder Bolt
7—0036	9	11	2	Key—Square
7—5461	8	12	1	Spacer—Transmission
26—0671	6	12	1	Bolt—Blade
26—0671	10	19	2	Bolt—Blade
26—6701	9	20	1	Spring — Extension
27—0220	5	15	2	Screw—Special HWH
27—0220	6	2	2	Screw—Special HWH
27—0220	6	27	2	Screw—Special HWH
27—8890	7	1	1	Spring — Pedal Return
28—0540	2	6	2	Bolt—Shoulder
28—2480	4	28	2	Washer—Flat
28—2480	9	12	2	Washer—Flat
28—8080	14	1	1	Boot—Battery Terminal
37—8770	3	1	2	Bolt—Shldr
37—8770	3	2	2	Bolt—Shldr
37—8770	7	31	1	Bolt—Shldr
38—1420	14	5	1	Switch—Seat
38—7820	10	6	4	Bearing—Ball
44—8110	14	4	1	Battery Cable —Neg
46—6290	12	21	1	O—Ring
46—8090	2	13	4	Screw—Tapping
46—8090	2	17	3	Screw—Tapping
46—8091	2	3	2	Screw—Tapping
46—8091	2	10	1	Screw—Tapping
47—2963	6	4	1	Fuel Line
52—2891	4	11	2	Bushing — Steering Links
55—9321	8	5	1	Cable—Clutch
56—2540	14	29	1	Tube—Vent Use w/80—2600
56—6591	10	40	2	Wheel Bolt
56—9830	11	2:2	2	Brake Pad
57—4360	10	1	1	Pivot Post — Rear
57—4380	10	26	1	Rod— Hinge Deflector

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
57-6950	10	27	1	Spring—Torsion Deflector
61-9780	4	26	2	Hubcap
61-9780	9	14	2	Hubcap
61-9980	12	8	2	Screw—Adjusting
62-3661	10	8	2	Spacer — Bearing
63-8360	14	25	1	Key—Ignition
65-2920	7	20	1	Pad—Pedal
65-7210	13	23	1	Spacer
66-0120	6	1:	1	Knob
67-0710	11	33	2	Ball — Swivel
76-2160	10	5	4	Plate—Kicker
79-1600-03	10	23	1	Wa—Baffle
79-1640-03	10	11	1	Wa—Baffle
79-3061	10	15	2	Blade—19.32 Recycler
80-0510	10	17	2	Stiffener — Blade
80-2240	14	31	1	Plate—Name Grille
80-2600	14	3	1	Battery — 7 Plate
80-4341	10	14	2	Shaft — Spindle
80-4360	10	13	2	Shield — Bearing
80-4380	10	12	2	Spacer — Hardened
80-6990	12	9	4	Washer—Hardened
80-6990	13	8	4	Washer—Hardened
84-5610	7	8	1	Guide—Cable
84-5610	8	25	1	Guide—Cable
88-0890	4	37	1	Grip — Parking Brake
88-3840	1	28	1	Body — Rear
88-3850	5	1	1	Steering Wheel
88-3870	5	1:2	1	Cover—Steering Wheel
88-3880	6	3	1	Gas Tank Assembly
88-3930-03	2	16	1	Shield — Heat
88-3940-03	1	5	1	Panel — Rear
88-3950	3	25	1	Seat
88-3960	14	12	1	Lense — Headlights
88-3970	14	11	1	Reflector—Lamp
88-3980	6	31	1	Gas Cap ASM
88-4020	12	7	1	Belt Guide — Deck
88-4030	12	2	1	Belt Guide — Deck
88-4040	14	30	1	Battery Box
88-4050	2	12	1	Duct — Hood Air
88-4070	4	29:2	2	Tire 15x6.00-6
88-4090	9	9:2	2	Tire 18x9.50-8
88-4140	2	23	2	Nut — Wedge
88-4160	2	24	2	Clamp — Pivot Rod
88-4170	2	20	1	Rod — Pivot
88-4180	5	5	1	Button — Release
88-4190	5	4	1	Bushing — Sliding
88-4210	5	19	1	Bushing — Stationary
88-4230	13	13	2	Trunnion — HOC
88-4300	9	9	2	Rear Wheel & Tire ASM
88-4320	14	18	1	Harness—Wire
88-4340	6	1	1	Throttle Control ASM
88-4350	6	30	1	Cable ASM—Throttle
88-4370	4	29:1	2	Rim ASM—15" Front
88-4390	9	9:1	2	Rim ASM—18" Rear
88-4400	4	29:4	2	Bearing—Wheel
88-4410	6	20	1	Gasket — Muffler
88-4430	10	29	1	Recycler Cover ASM
88-4510	10	7	2	Spindle — Diecast Alum.
88-4590	11	1	2	Bolt—Shoulder
88-4620-03	1	11	1	Bracket — Idler Pivot
88-4630-03	1	24	1	Plate — Engine Mounting
88-4670	4	9	1	Bushing — Eccentric

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
88-4730	13	16	2	Clamp — HOC Pivot
88-4810	7	13	1	Clamp — Shift Pivot
88-4810	8	4	2	Clamp — Shift Pivot
88-4820-03	3	11	2	Bracket — Seat Hinge
88-4830	4	34	1	Link — Drag
88-4840	9	4	1	Pulley — Transmission
88-4870-03	11	32	1	Arm — Idler
88-4880	14	17	1	Spacer — Microswitch
88-4890	5	10	1	Spring — Leaf
88-4910-03	3	3	1	Support — Seat
88-4960-03	1	17	1	Shield — Exh. Pipe
88-4980	11	23	1	Bushing — Idler Arm
88-5000-03	7	21	1	Pedal — Clutch/Brake
88-5010	4	7	1	Spacer — Steering Rack
88-5020-03	3	19	1	Plate — Shift Gate
88-5030-03	3	9	1	Gate — HOC
88-5070	11	29	1	Belt Guide — Idler
88-5110-03	13	22	1	Pivot W.a. (H.o.c.)
88-5120-03	1	21	1	Support — Front Axle
88-5130-03	4	5	1	Bracket — Steering Rack
88-5150	5	16	1	Bushing — Flange
88-5180-01	5	8	1	Bracket — Backup
88-5190-03	2	25	1	Lever W.a. — Deck Engage
88-5200	4	10	1	Steering Rack W.a.
88-5220	3	17	1	Foot Mat
88-5240	3	16	1	Foot Mat
88-5260-03	1	10	2	Bracket—Transaxle Mounti
88-5270	7	29	1	Rod — Clutch/Brake
88-5330	11	21	2	Pulley — Deck
88-5340	8	13	1	Lever — Shift (Transaxle
88-5380	4	32	1	Tie Rod — Steering
88-5450	13	12	2	Rod — Hanger
88-5470	4	23	2	Spacer — Front Axle
88-5500	7	15	1	Rod — Pedal Pivot
88-5510	4	35	1	Rod—Parking Brake
88-5520-03	4	36	1	Bracket—Parking Brake
88-5540	11	26	1	Rod —RH Deck Brake
88-5550	11	3	1	Rod —LH Deck Brake
88-5560	7	32	1	Belt Guide — Idler
88-5570-03	13	6	2	Link—Adjusting HOC
88-5630	11	30	1	Pulley — Idler
88-5680	7	33	1	Idler Pulley
88-5740-03	10	42	1	Bracket—Deck Wheel RH
88-5900	13	3	1	Link — HOC
88-5910	11	5	2	Spring — Torsion
88-5930	8	16	1	Keeper — Cable
88-5970	11	10	1	Hook — Return Spring
88-6040-03	2	18	1	Bracket — Hinge
88-6050-03	2	7	1	Bracket — Hinge
88-6070	7	30	1	Arm —Idler
88-6090	5	20	1	Coupling — Steering
88-6100	11	2	2	ASM. — Deck Brake
88-6130	11	6	1	Spring — Deck Engage
88-6220	1	4	2	Spring — Compression
88-6250	11	18	1	V—Belt
88-6270	9	5	1	V—Belt
88-6290-03	1	18	1	Shield — Muffler
88-6300	5	13	1	Shaft — Steering
88-6330	7	7	1	Spring — Extension
88-6370	5	14	1	Shaft W.a. — Steering
88-6460	13	17	1	Spring — Extension
88-6480	16	6	1	Muffler W.a.

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
88-9830	14	24	1	Switch—Ignition
88-9932	14	19	2	Switch — Micro
92-2467	2	34	1	Decal — Hood Right
92-2468	2	33	1	Decal — Hood Left
92-5730	2	31	1	Decal — Throttle
92-5731	2	30	1	Decal—Ign/Lights
92-5748	2	14:1	1	Decal — Air Duct
92-5782	2	15	1	Patch — Heat Tape
92-7889-03	4	30	1	Spindle Wa—RH
92-7890-03	4	18	1	Spindle Wa—LH
92-8650	2	14	1	Hood—Toro
92-8757	16	9	1	Decal — Engine
92-8875	14	26	1	Switch—Rocker
92-8934	11	8	1	Spring — Extension
92-9520	10	36	1	Decal—Deck
92-9674	3	5	1	Knob—Studded
92-9845	14	8	1	Solenoid
93-0231	10	30:4	4	Screw—Plastite
93-0303	2	1	1	Tower—Steering Toro
93-0539	14	15	4	Screw—PPH
93-3240	14	20	1	Seal—Plunger
93-3809	6	37	1	Bracket—Ground
93-3810	14	23	1	Wire Harness
93-3822-03	13	1	1	Lever—HOC
93-3849	2	37	1	Brkt—Cable
93-3854	6	7	3	Belt Guide — Engine
93-3855	6	24	1	Belt Guide — R.h.
93-3881-03	12	4	1	Pan — Front Deck Suspens
93-3896-03	10	46	1	Bracket—Deck Wheel LH
93-4144	1	35	1	Decal—Rear Body
93-4145	2	29	2	Decal — Tower
93-6673	2	32	1	Decal — Deck Engage
93-6674	10	32	2	Decal—Warninig
93-6675	1	33	1	Decal—Instruct
93-6677	10	31	1	Decal — Shield Danger
93-6679	10	37	1	Decal — Belt Routing
93-7009	10	33	1	Decal—Deflector Danger
93-7010	10	28	2	Decal—Danger
93-7010	10	30:1	1	Decal—Danger
93-7656	3	21	1	Cover — Shift Gate
93-7657	3	7	1	Cover — HOC
93-7695	10	30	1	ASM.—38" Deflector
93-7696	10	30:3	2	Kicker — Ce
93-8741	14	11:1	1	Reflector — Headlight
93-9847	12	12	2	Spacer
94-1949-01	10	3	1	Deck Wa—38"
94-1951	6	39	1	Latch—Hood
94-1952	6	28	1	Rod—Gas Tank
94-1962-03	4	31	1	Front Axle Wa
94-1963	6	11	1	Pulley Assy—Engine
94-1968	8	20	1	Lever—Shift Pivot
94-1969	9	19	2	Strap—Torque
94-1970-03	12	14	1	Bracket—Deck Susp
94-1971-03	12	6	1	Bracket—Deck Susp
94-1980	2	39	2	Foam—Hood
94-1984	2	11	1	Pin—Latch
94-1991-03	8	1	1	Shift Lever Wa
94-1993-03	8	8	1	Shift Pivot Wa
94-1997	8	26	1	Bushing—Shift Lever
94-1998-03	1	25	1	Frame Rail—RH
94-1999-03	1	13	1	Frame Rail—LH
94-4293	2	35	1	Cable ASM—Deck Engage

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-4294	7	2	1	Spring—Brake
94-4926	7	36	1	Bracket—Belt Guide
94-5362	14	33	1	Boot—Terminal Insulator
94-5431	8	9	1	Link—Shift
94-5433	7	6	1	Bracket—Belt Guide
94-5565	2	2	1	Knob — Control
94-5565	8	24	1	Knob — Control
94-5565	13	24	1	Knob — Control
94-5823	12	5	2	Bolt—Shoulder
94-6022	9	7	1	Transaxle — Peerless 931
95-2747	12	20	1	Fitting—Washout
218-578	15	*	3	Fuse — 10 Amp
218-461	14	24:2	1	Nut—HH (F/W Sw)
232-27	4	29:3	2	Valve Stem & Cap Assembly
232-27	9	9:3	2	Valve Stem & Cap Assembly
232-39	4	29:6	2	Tube—Inner 15x6—6
232-41	9	9:4	2	Tube—Inner 18x9.50—8
2412-98	6	5	2	Clamp—Hose
302-5	4	29:5	2	Fitting—Grease
302-26	4	8	1	Fitting—Grease
321-2	2	5	4	Screw—HH
321-4	5	7	2	Screw—HH
321-4	10	9	2	Screw—HH
321-4	14	2	2	Screw—HH
321-4	16	7	1	Screw—HH
321-9	5	21	2	Screw—HH
321-15	10	38	2	Screw—HH
322-3	1	7	4	Screw—HH
322-3	1	9	4	Screw—HH
322-3	1	20	6	Screw—HH
322-3	1	23	2	Screw—HH
322-3	1	26	4	Screw—HH
322-3	1	27	2	Screw—HH
322-3	2	28	2	Screw—HH
322-3	3	10	4	Screw—HH
322-3	7	3	1	Screw—HH
322-3	7	14	2	Screw—HH
322-3	8	6	2	Screw—HH
322-3	8	21	1	Screw—HH
322-3	9	21	2	Screw—HH
322-3	10	44	6	Screw—HH
322-3	13	19	4	Screw—HH
322-5	1	2	2	Screw—HH
322-5	6	10	2	Screw—HH
322-5	11	20	2	Screw—HH
322-6	7	4	1	Screw—HH
322-9	6	6	3	Screw—HH
322-9	13	2	1	Screw—HH
322-12	9	15	4	Screw HH
322-12	12	16	2	Screw HH
323-5	10	24	2	Screw—HH
323-9	12	13	2	Screw—HH
323-10	8	2	1	Screw—HH
323-11	7	34	1	Screw
323-12	11	27	1	Screw
323-13	4	2	2	Screw—HH
329-23	8	10	1	Screw
3219-6	11	22	2	Nut—Hex
3229-1	12	22	2	Bolt—CARR.
3230-1	4	6	4	Bolt—CARR
3230-1	10	21	1	Bolt—CARR
3230-3	4	4	1	Screw—CARR

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3230-3	7	22	1	Screw—CARR
3230-3	8	17	1	Screw—CARR
3231-4	4	3	1	Bolt—CARR
3253-3	8	11	1	Washer—Lock
3253-3	16	8	1	Washer—Lock
3253-4	6	21	2	Washer—Lock
3253-22	6	13	1	Washer—Lock
3254-5	14	24:1	1	Washer—Lock
3255-7	14	14	1	Washer—Lock
3255-8	6	23	1	Washer—Lock
3256-1	12	19	2	Washer—Flat
3256-22	5	6	2	Washer—Flat
3256-22	12	10	2	Washer—Flat
3256-23	1	3	2	Washer—Flat
3256-23	1	22	2	Washer—Flat
3256-23	2	27	2	Washer—Flat
3256-23	7	9	2	Washer—Flat
3256-23	7	23	1	Washer—Flat
3256-23	8	14	1	Washer—Flat
3256-23	8	22	1	Washer—Flat
3256-23	9	16	4	Washer—Flat
3256-23	9	18	4	Washer—Flat
3256-24	2	21	2	Washer—Flat
3256-24	4	20	2	Washer—Flat
3256-24	4	24	2	Washer—Flat
3256-24	11	28	2	Washer—Flat
3256-24	13	5	2	Washer—Flat
3256-24	13	10	2	Washer—Flat
3256-25	4	13	4	Washer—Flat
3256-25	6	14	1	Washer—Flat
3256-25	8	19	1	Washer—Flat
3256-26	7	18	1	Washer—Flat
3256-68	11	19	1	Washer—Flt
3257-23	9	3	1	Key—Woodruff
3272-10	4	14	2	Pin—Cotter
3272-10	4	19	2	Pin—Cotter
3272-10	7	24	1	Pin—Cotter
3272-12	4	27	2	Pin—Cotter
3274-10	6	22	2	Screw—Sckt Hd
3290-282	3	8	2	Pop Rivet
3290-282	3	20	2	Pop Rivet
3290-282	11	2:3	4	Pop Rivet
3290-299	14	32	1	Nut — Tinnerman
3290-307	2	19	2	Pin—Cotter
3290-307	13	4	1	Pin—Cotter
3290-307	13	7	4	Pin—Cotter
3290-307	13	9	2	Pin—Cotter
3290-354	14	16	2	Nut—Speed
3290-465	10	18	2	Washer—Spring
3290-479	3	6	4	Fastener—Panel
3290-479	3	15	12	Fastener—Panel
3290-479	3	22	4	Fastener—Panel
3290-496	2	8	2	Nut — Retained
3296-3	8	7	2	Nut—Lock 1/4—28 Unf
3296-16	12	18	2	Nut—Lock
3296-23	12	17	2	Nut—Lock
3296-29	1	6	2	Nut—Lock
3296-29	1	8	4	Nut—Lock
3296-29	1	12	4	Nut—Lock
3296-29	1	14	2	Nut—Lock
3296-29	1	15	6	Nut—Lock
3296-29	1	16	2	Nut—Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296—29	1	29	4	Nut—Lock
3296—29	2	26	2	Nut—Lock
3296—29	3	12	6	Nut—Lock
3296—29	4	1	4	Nut—Lock
3296—29	4	16	1	Nut—Lock
3296—29	6	29	4	Nut—Lock
3296—29	7	10	2	Nut—Lock
3296—29	7	19	1	Nut—Lock
3296—29	7	26	2	Nut—Lock
3296—29	7	27	1	Nut—Lock
3296—29	8	3	2	Nut—Lock
3296—29	8	15	1	Nut—Lock
3296—29	8	23	1	Nut—Lock
3296—29	9	1	4	Nut—Lock
3296—29	9	17	2	Nut—Lock
3296—29	10	20	1	Nut—Lock
3296—29	10	45	6	Nut—Lock
3296—29	11	25	2	Nut—Lock
3296—29	12	15	2	Nut—Lock
3296—29	13	14	4	Nut—Lock
3296—29	13	15	2	Nut—Lock
3296—29	13	20	1	Nut—Lock
3296—29	13	21	1	Nut—Lock
3296—39	4	15	1	Nut—Lock
3296—39	4	25	2	Nut—Lock
3296—39	8	18	1	Nut—Lock
3296—39	10	22	1	Nut—Lock
3296—39	10	25	2	Nut—Lock
3296—39	10	43	2	Nut—Lock
3296—39	11	24	1	Nut—Lock
3296—39	12	3	2	Nut—Lock
3296—42	2	4	4	Nut—Lock
3296—42	5	9	2	Nut—Lock
3296—42	5	12	2	Nut—Lock
3296—42	10	10	2	Nut—Lock
3296—42	11	4	2	Nut—Lock
3296—42	12	11	2	Nut—Lock
3296—58	11	14	3	Nut—Flange
3296—59	7	28	2	Nut—Lock
32103—22	14	28	2	Nut—Wing
32104—76	1	19	1	Screw—Self TAP
32104—76	12	1	5	Screw—Self TAP
32111—7	10	39	2	Nut—Cap
32120—64	9	2	1	Ring—Retaining
32121—111	5	2	1	Pin—Spiral
32128—43	2	22	2	Nut—Flange
32144—14	9	22	2	Screw—HWH
32144—32	14	10	2	Screw—Plastic
32144—41	10	2	8	Screw—HWHTF
32144—111	10	4	8	Screw — PPH
32144—112	6	40	2	Screw—Thd Form
32149—1	6	26	2	Nut—Keps
32149—2	14	7	3	Nut—Hex Lock
32151—48	4	33	2	Ring—Retaining
32151—48	5	18	1	Ring—Retaining
32151—48	9	13	2	Ring—Retaining
32151—81	5	3	1	Retaining Ring Push—On

*Not Illustrated

35

[illegible]

[illegible]