



Lawn & Garden Tractor

Model No. 72046 — 7900001 & Up

Model No. 72064 — 7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Hood and Grill	1	Ignition / Electrical	24
Dash	2	Blower Housing & Baffles	25
Steering Wheel and Tilt	3	Starting System	26
Lower Steering	4	Fuel System	27
Front Axle	5	Engine Controls	28
Seat	6	Air Intake / Filtration	29
Fender and Footrest	7	Exhaust	30
Fuel Tank and Hydro Reservoir	8	Transaxle Case	31
Single Cylinder Engine, Muffler, and P.T.O.	9	Center Case	32
Clutch	10	Pump Shaft	33
Battery	11	Motor Shaft	34
Hoodstand and Firewall	12	Range Shift	35
Lift Lever and Height of Cut	13	Bypass Return	36
Frame	14	Lever Damper	37
Hydro Drive Components	15	N-Centering	38
Hydro Brake	16	Brake Interlock	39
Hydro Control	17	Differential Gear	40
Hydro Transaxle	18	Final Pinion	41
Rear Wheel	19	Axle Shaft	42
Crankshaft	20	Brake	43
Crankcase	21	Electric Schematic Single Cylinder Hydro Drive ..	44
Oil Pan / Lubrication	22	Wire Harness Routing — Single Cylinder Engine	45
Cylinder Head / Valve / Breather	23		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
.. 38" Side Discharge Mower	78216	.. 48" Snow Blade	79252
38" Recycler Mower	78226	42" Snow Thrower	79263
42" Side Discharge Mower	78231	36" Tiller	79271
48" Side Discharge Mower	78260	Hour Meter Kit	92–6898
52" Side Discharge Mower	78280	Indicator Light	92–6897
52" Recycler Mower	78285	Inner Tube, Front	100079
38" Twin Bagger	79202	Inner Tube, Rear	7007
48" Vacuum Bagger	79203		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	ASM	assembly

CARR	carriage	HWHTF	hex washer head
DEG	degrees		thread forming
FH	flat head	INC	incorporated
GA	gauge	LH	left hand
HF	hex flange	PH	pan head
HFW	hex flange washer	PPH	Phillips pan head
HH	hex head	PTO	power take off
HHF	hex head flange	RH	right hand
HHST	hex head self tapping	SFH	slotted fillister head
HJ	hex jam	SH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TH	truss head
HWH	hex washer head	TTH	Torx truss head
		WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y*. *X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

 
Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y)*. *X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

This Page Intentionally Left Blank

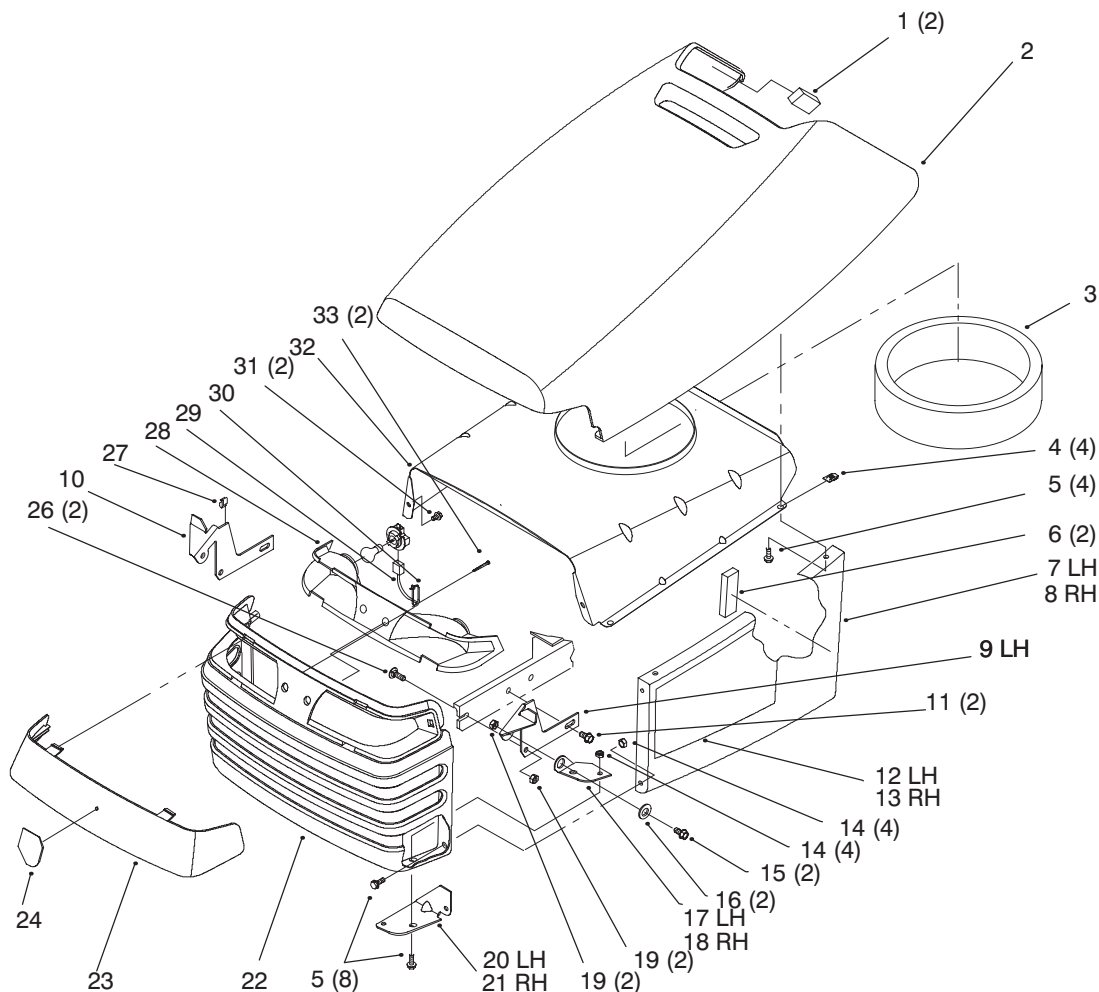


Sheet No.: 2

Hood and Grill

Ref. No.	Part No.	Qty.	Description
1	94-1980	2	Foam-Hood
2	93-0490	1	Hood
3	92-7077	1	Inlet-Seal Air
4	92-7006	4	Nut
5	32105-15	12	Screw-HH
6	92-7148	2	Foam-Sidepanel
7	93-0491	1	Sidepanel-LH Hood
8	93-0492	1	Sidepanel-RH Hood
9	92-6918-03	1	Bracket-Hinge LH
10	92-6917-03	1	Bracket-Hinge RH
11	32144-14	2	Screw-HWH
12	92-6728	1	Decal-Hood LH
13	92-6729	1	Decal-Hood RH
14	32128-10	8	Nut-Lock HHF
15	322-3	2	Screw-HH
16	105503	2	Bushing
17	92-6997-03	1	Hinge-Hood LH
18	92-6996-03	1	Hinge-Hood RH
19	3296-29	4	Nut-Lock
20	92-7049-03	1	Bracket-Hood Hinge LH
21	92-7048-03	1	Bracket-Hood Hinge RH
22	93-0494	1	Grille & Screen ASM
23	92-6656	1	Lens-Headlight
24	92-6987	1	Decal-Horsehead

Ref. No.	Part No.	Qty.	Description
26	3230-1	2	Bolt-CARR
27	702366	1	Clip-Wire Retainer
28	88-3970	1	Reflector-Lamp
29	88-4320	1	Harness-Wire
31	46-8093	2	Screw-TAP
32	92-6914-03	1	Baffle-Hood Upper
33	32144-32	2	Screw-Plastic

 
3318-933

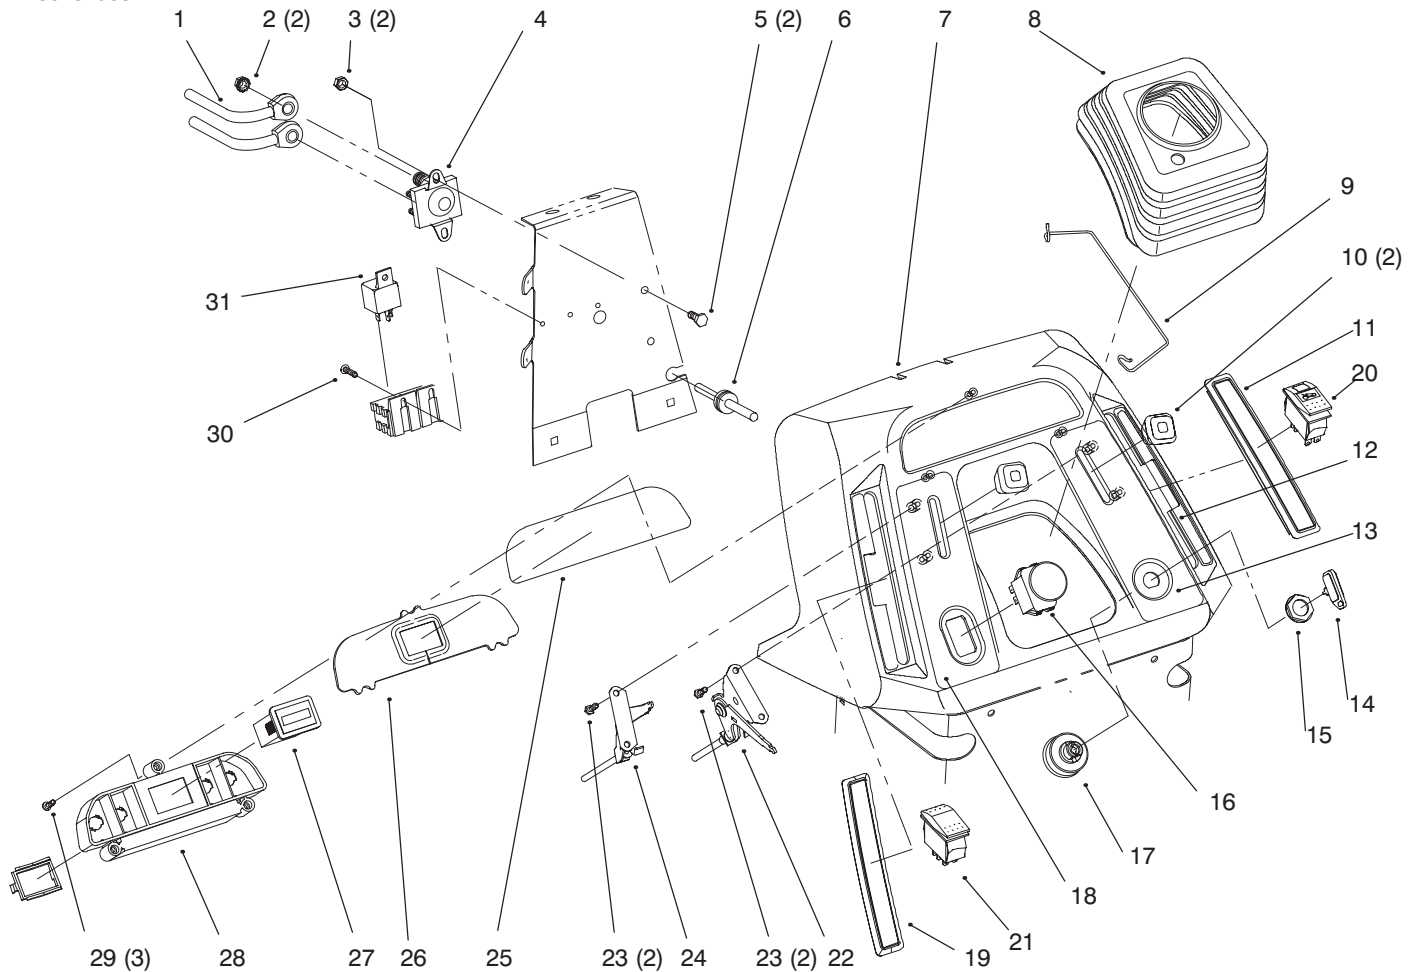

Dash

Ref. No.	Part No.	Qty.	Description
1	92-6989	1	Cable-Battery Red
2	32149-2	2	Nut-Hex Lock
3	3296-42	2	Nut-Lock
4	92-9845	1	Solenoid
5	321-4	2	Screw-HH
6	237-141	1	Grommet
7	94-1894	1	Dash-Hydro
8	92-6680	1	Boot-Steering
9	94-2966	1	Clip-Boot
10	66-0120	2	Knob
11	92-6796	1	Cover-Slot RH
13	92-6721	1	Decal-Throttle/Ignition (Only On: 72046)
13	93-7255	1	Decal-Dash (Only On: 72064)
14	62-7770	1	Key-Ignition
15	700919	1	Nut
16	93-9998	1	Switch-PTO
17	92-6785	1	Switch-Ignition
18	92-6720	1	Decal-Choke/PTO (Only On: 72046)
18	93-7256	1	Decal-Dash (Only On: 72064)
19	92-6797	1	Cover-Slot LH
22	92-6782	1	Control-Throttle
23	32144-32	4	Screw-Plastic


Ref. No.	Part No.	Qty.	Description
24	92-6781	1	Control-Choke
25	92-6975	1	Decal-Dash Lens (Only On: 72064)
25	94-1248	1	Decal-Dash Lens (Only On: 72046)
26	92-6705	1	Lens-Dash
27	94-4208	1	Hourmeter
28	92-6709	1	Light-Indicator (Only On: 72046)
28	92-6732	1	Housing-Indicator Light (Only On: 72064)
29	94-6961	3	Screw
30	32144-8	2	Screw-PPH
31	116397	2	Relay

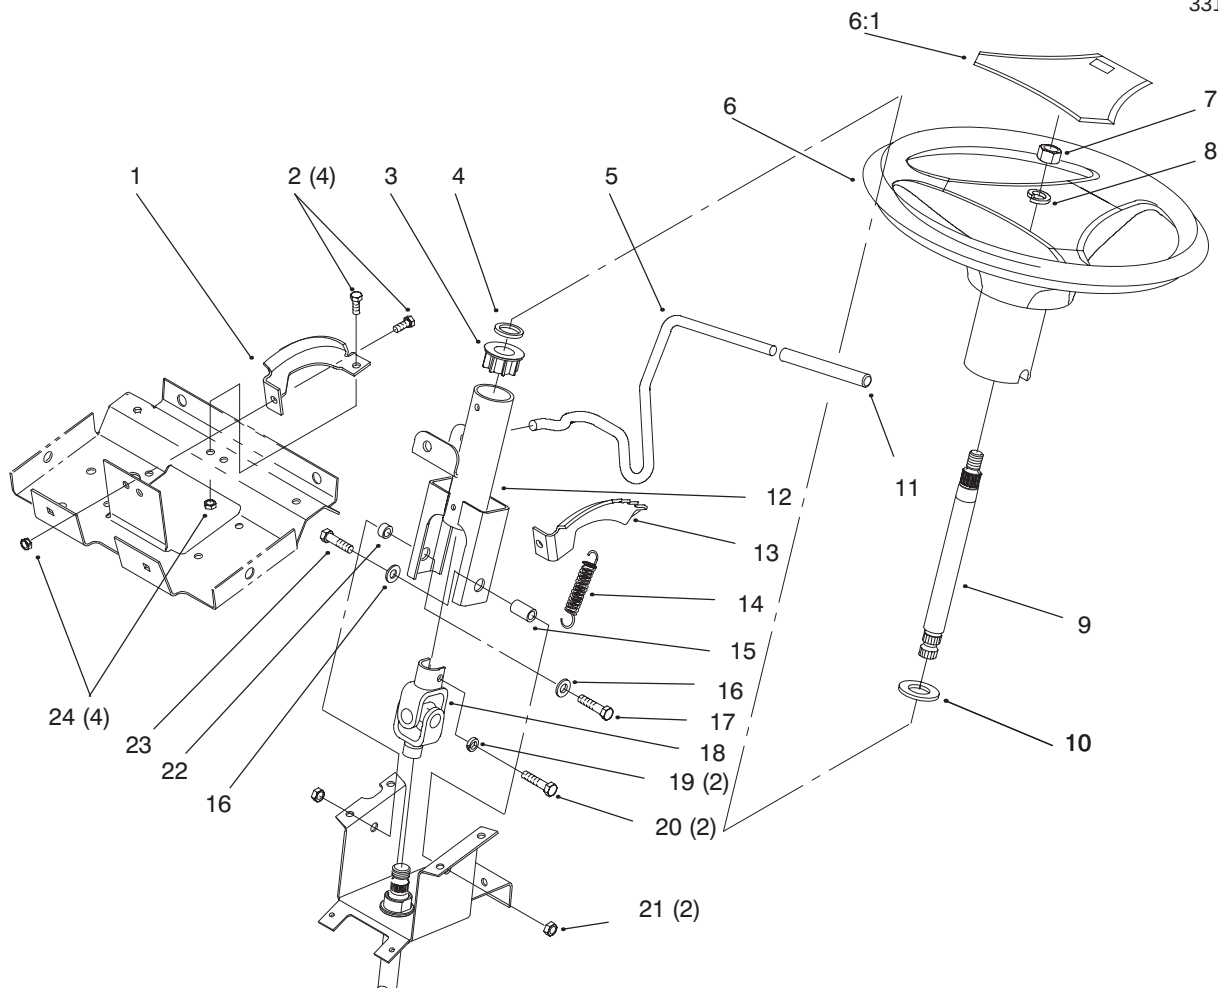 

Steering Wheel and Tilt

Ref. No.	Part No.	Qty.	Description
1	92-6777-03	1	Bracket-Support
2	321-4	4	Screw-HH
3	93-1146	1	Bushing-Steering
4	7896	1	Washer-Bowed
5	92-6971	1	Lever-Tilt
6	94-3500	1	Steering Wheel-14"
6	94-3501	1	Wheel-Steering (Only On: 72046)
6:1	88-3870	1	Cover-Steering Wheel
7	3217-9	1	Nut-HH
8	3253-7	1	Washer-Lock
9	94-2874	1	Shaft-Ster Upper
10	3256-28	1	Washer-Flat
11	92-6798	1	Cap-Rod
12	93-1148-03	1	Column
13	92-6776	1	Bracket-Detent
14	93-1357	1	Spring-Extension
15	92-6999	1	Spacer-Yoke
16	3256-23	2	Washer-Flat
17	322-3	1	Screw-HH
18	92-6717	1	U-Joint-Steering
19	3253-4	2	Washer-Lock
20	48-7730	2	Screw-HH
21	3296-29	2	Nut-Lock
22	92-6998	1	Spacer-Yoke

Ref. No.	Part No.	Qty.	Description
23	322-17	1	Screw-HH
24	3296-8	4	Nut-Lock

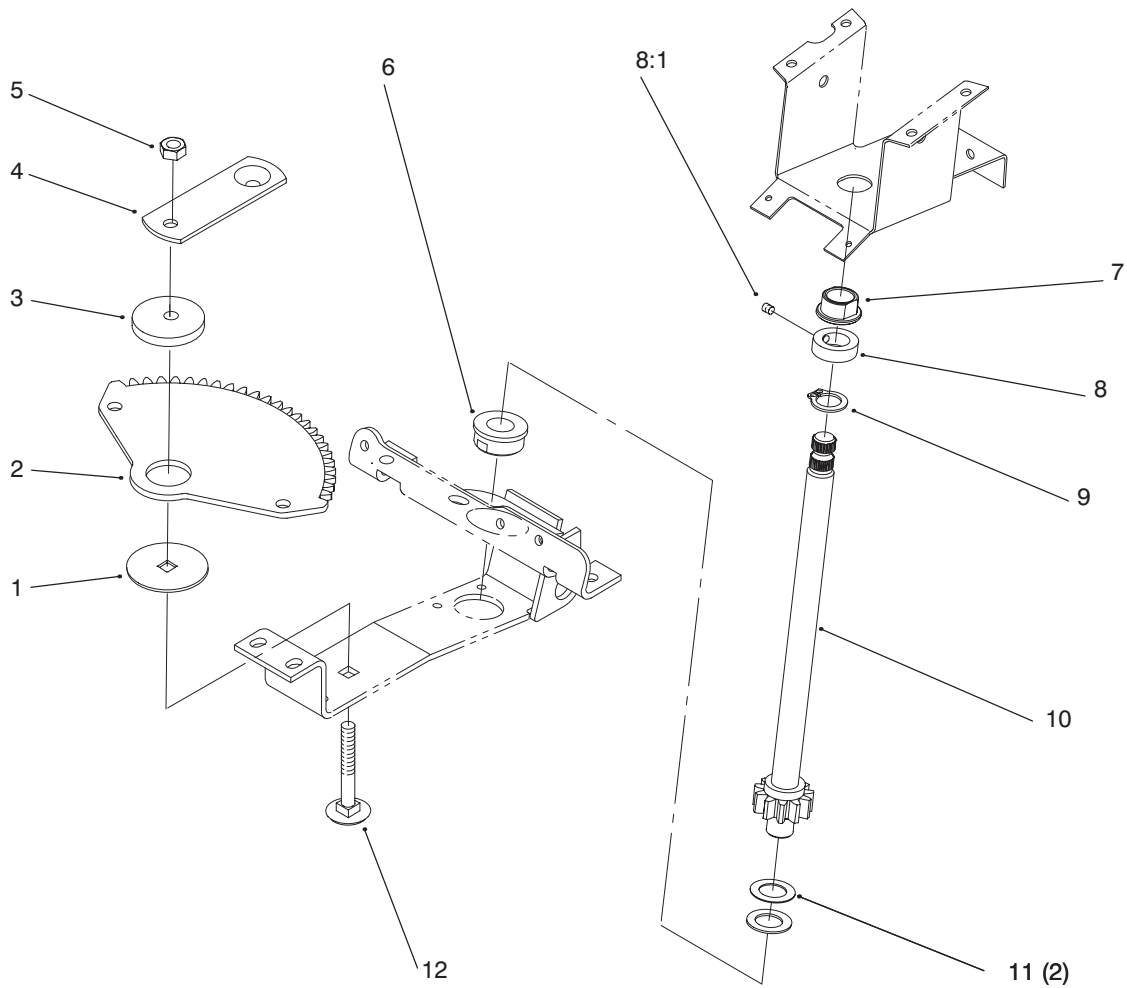 


Sheet No.: 8

Lower Steering

Ref. No.	Part No.	Qty.	Description
1	111419	1	Washer-Bearing
2	78-2610	1	Gear-Sector
3	111418	1	Bushing
4	78-9150-03	1	Plate
5	108881	1	Nut-Hex
6	110391	1	Bearing-Wheel
7	109189	1	Bearing-Flange
8	111383	1	Collar w/Set Screw
8:1	3245-32	1	Screw-Set
9	111646	1	Grip Ring
10	92-6702	1	Shaft-Steering Lower
11	1278	2	Washer-Shim
12	3231-4	1	Bolt-CARR

Ref. No.	Part No.	Qty.	Description

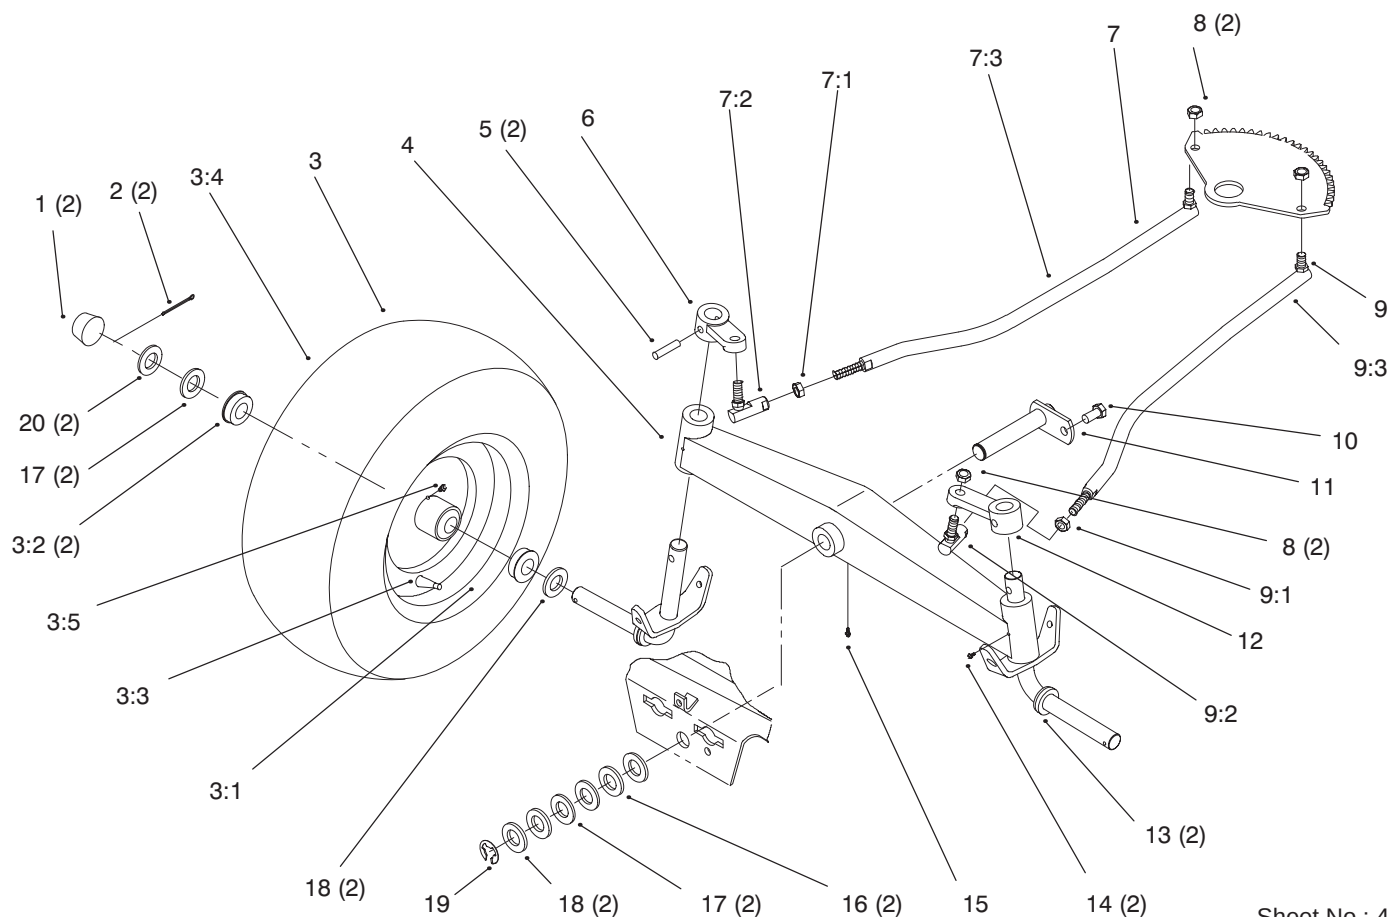 

Sheet No.: 4

Front Axle


Ref. No.	Part No.	Qty.	Description
1	61-9780	2	Hubcap
2	3272-17	2	Pin-Cotter
☆3	93-9800	2	ASM-Wheel & Tire
3:1	93-9801	2	ASM-Wheel w/Zerk
3:2	110513	4	Bearing-Wheel
3:3	5108	2	Valve-Tire Tubeless
3:4	117127	2	Tire
3:6	109500	2	Fitting-Grease
4	78-7960-01	1	Axle-Front
5	933270	2	Pin-Roll
6	78-1950-01	1	Arm-Front Spindle LH
7	92-6883	1	Steering Link RH
☆7:1		1	Nut-Hex Jam
7:2	78-2920	1	Joint-Ball
7:3	78-5801	1	Joint-Ball RH w/ Jam Nut
8	9150026	4	Nut-Lock
9	92-6884	1	Steering Link LH
☆9:1		1	Nut-Hex Jam
9:2	78-2920	1	Joint-Ball
9:3	78-5811	1	Joint-Ball LH
10	9267154	1	Screw
11	92-7057-03	1	Pin-Front
12	78-1940-01	1	Arm-Front Spindle RH
13	78-2601-01	2	Spindle
14	302-5	2	Fitting-Grease

Ref. No.	Part No.	Qty.	Description
15	302-11	1	Fitting-Grease
16	9202324	2	Washer-10 GA
17	1278	4	Washer-Shim
18	5210	4	Washer-Shim
19	5618	1	Ring-Retaining
20	28-2480	2	Washer-Flat

☆ Not serviced



Ref. No.	Part No.	Qty.	Description

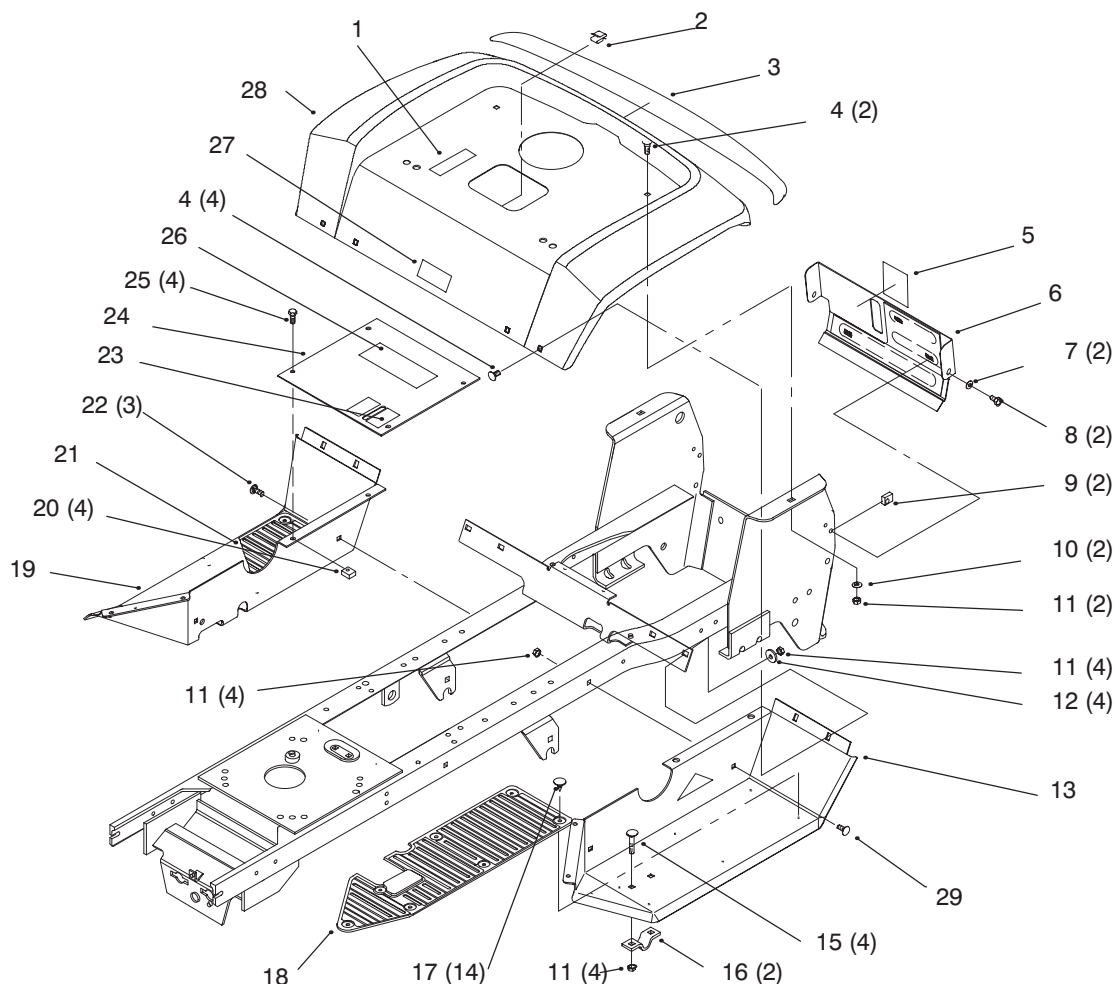 

Fender and Footrest

Ref. No.	Part No.	Qty.	Description
*1		1	Decal-Model/Serial Ce (Only On: 72064)
2	702366	1	Clip-Wire Retainer
3	92-6730	1	Decal-Rear Fender
4	3230-31	6	Screw-CARR
5	92-6727	1	Decal-Fuel Level
6	94-1717-03	1	Panel-Rear
7	3256-22	2	Washer-Flat
8	321-4	2	Screw-HH
9	609900	2	Nut-Speed
10	3256-23	2	Washer-Flat
11	3296-29	14	Nut-Lock
12	94-2869	4	Washer-Flat
13	92-6746-01	1	Footrest-LH
15	3230-20	4	Bolt-CARR
16	106288	2	Clamp
17	3290-479	14	Fastener-Panel
18	92-6688	1	Mat-Foot LH
19	92-6747-01	1	Footrest-RH
20	107069	4	Nut-Retainer
21	92-6687	1	Mat-Foot RH
22	3230-23	3	Bolt-CARR
23	92-6725	1	Decal-HOC (Only On: 72046)
23	92-7092	1	Decal-HOC (Only On: 72064)

Ref. No.	Part No.	Qty.	Description
24	93-0489-01	1	Plate-Footerest w/Decal (Only On: 72046)
24	94-4243-01	1	Plate-Footerest w/Decal (Only On: 72064)
25	92-7020	4	Screw-TTH
26	92-8946	1	Decal-Danger (Only On: 72046)
26	93-7314	1	Decal-Danger (Only On: 72064)
27	76-1340	1	Decal-USA (Only On: 72046)
28	92-6795-01	1	Fender
29	3230-23	1	Bolt-CARR

* Not illustrated



Ref. No.	Part No.	Qty.	Description
2	88-3980	1	Gas Cap ASM
3	94-6928	1	Tank-Gas
3:1	104047	1	Bushing
3:2	104048	1	Assembly-Valve
4	2412-98	2	Clamp-Hose
5	92-6754	1	Hose-Fuel Line
6	93-1144	2	Spacer-Fuel Tank
7	321-4	2	Screw-HH
8	92-6737	1	Hose
9	2412-129	2	Clamp-Hose
10	79-3500	1	Reservoir
12	3256-22	4	Washer-Flat
13	3296-42	2	Nut-Lock
14	32144-14	2	Screw-HWH (Only On: 72064)
15	93-9275	1	Guard-Fan (Only On: 72064)
16	32104-96	2	Screw-HHST

Ref. No.	Part No.	Qty.	Description



Ref. No.	Part No.	Qty.	Description




Ref. No.	Part No.	Qty.	Description
1	92-3014	3	Nut & Spring ASM
2	92-3015	1	Rotor ASM w/Bearing (Only On: 72064)
2	94-4930	1	Rotor & Armature ASM (Only On: 72046)
3	92-3016	1	Field ASM w/Bearing
4	114064	2	Bearing-Elec Clutch

10



Ref. No.	Part No.	Qty.	Description
1	92-6990	1	Cable-Battery Red
2	117316	1	Rod-Battery Hold Down
3	321-4	2	Screw-HH
4	32103-22	4	Nut-Wing
5	111078	1	Cable-Battery Black
6	106948	1	Tray-Battery
7	78-6820-03	1	Plate-Battery
8	109547	2	Hook-Battery
9	114720	1	Tube-Battery Drain
10	94-2862	1	Harness-Wire
10:1	120930	1	Fuse Holder
10:2	110928	1	Fuse-5A
10:2	218-578	1	Fuse-10A
10:2	109102	1	Fuse-25A
10:2	NN10277	1	Fuse-30A
11	32144-14	1	Screw-HWH
12	105842	1	Battery
13	93-6668	1	Decal-Instruct (Only On: 72064)
14	93-7276	1	Decal-Danger (Only On: 72064)
15	28-8080	1	Boot-Battery Terminal

 3318-933

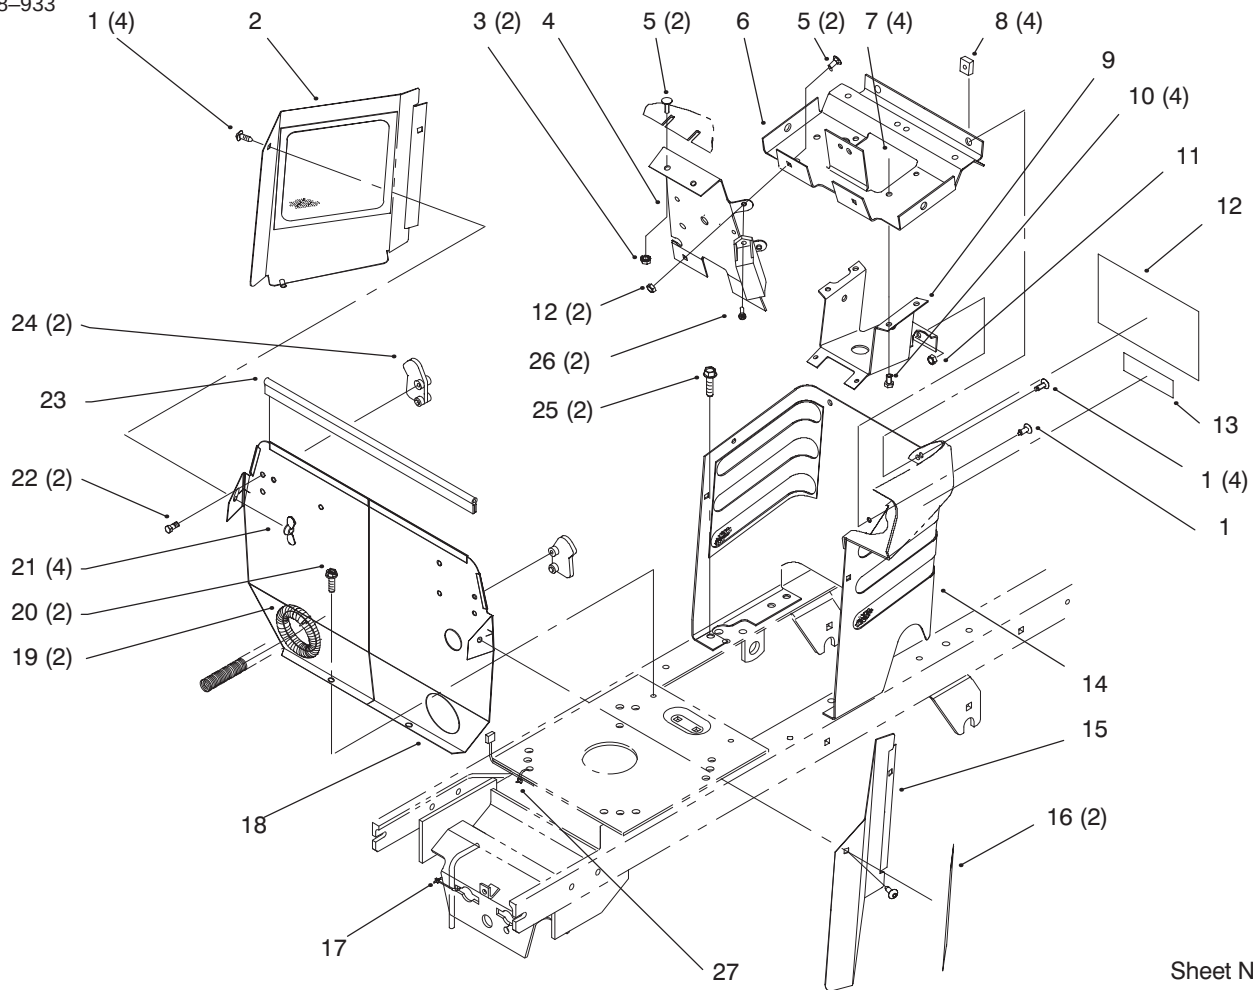


Sheet No.: 10

Hoodstand and Firewall

Ref. No.	Part No.	Qty.	Description
1	92-7020	9	Screw-TTH
2	92-6937-03	1	Cover-Side RH
3	32149-2	2	Nut-Hex Lock
4	94-1712-03	1	Panel-Support
5	3229-11	4	Bolt-CARR
6	92-6859-03	1	Support-Dash
7	3296-8	4	Nut-Lock
8	92-6860	4	Nut-Retainer
9	92-6778-03	1	Support-Column
10	321-4	4	Screw-HH
11	3296-42	3	Nut-Lock
12	93-0302	1	Decal-Slope/Park Brake (Only On: 72046)
12	93-7313	1	Decal-Danger (Only On: 72064)
13	83-6620	1	Decal-Instruction
14	93-0486-03	1	Hoodstand w/Decals (Only On: 72046)
14	93-0488-03	1	Hoodstand w/Decals (Only On: 72064)
15	92-6936-03	1	Cover-Side LH
16	94-2973	2	Decal-265-H
18	94-1749-03	1	Firewall
19	24-7924	2	Cover-Drive Shaft
20	32144-4	2	Screw-TAP

Ref. No.	Part No.	Qty.	Description
21	32103-22	4	Nut-Wing
22	46-8093	2	Screw-TAP
23	93-1131	1	Trim-Seal
24	92-6960	2	Latch-Hood
25	32144-14	2	Screw-HWH
26	32144-8	2	Screw-PPH

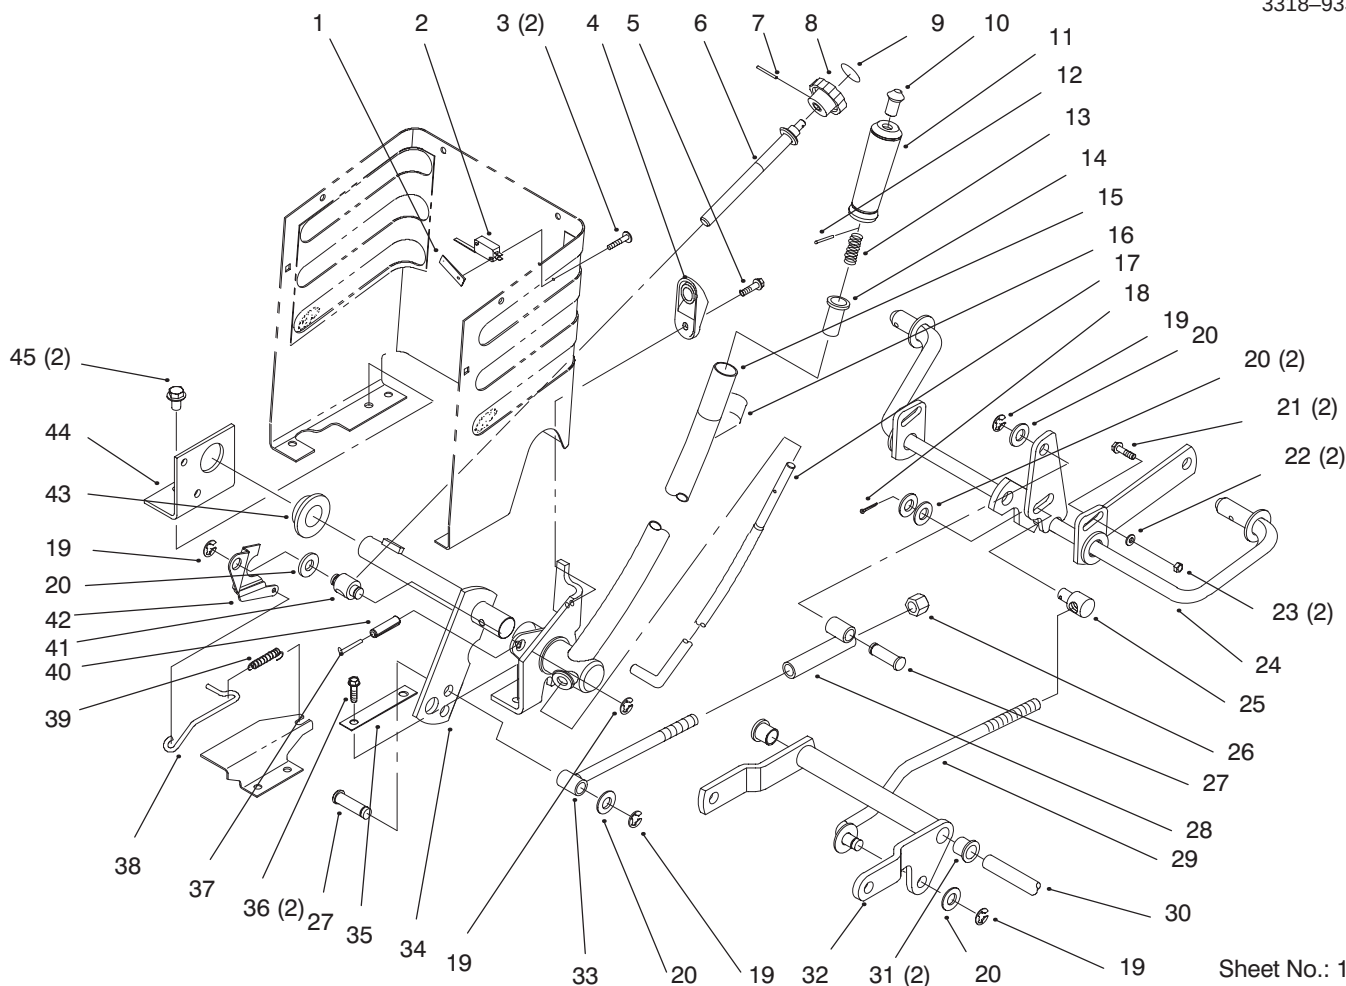 

Sheet No.: 11

Lift Lever and Height of Cut

Ref. No.	Part No.	Qty.	Description
1	3290-354	1	Nut-Speed
2	88-9930	1	Switch-Micro
3	95-3003	2	Screw
4	92-6794	1	Wedge-HOC Adjust
5	32144-4	1	Screw-TAP
6	92-6965	1	Rod-HOC
7	933141	1	Pin-Spirol
8	115593	1	Knob
9	78-9740	1	Decal-HOC Knob
10	92-6711	1	Tip-Rod
11	92-6710	1	Grip-Handle
12	933148	1	Pin-Spirol
13	3624	1	Spring-Compression
14	8130	1	Retainer-Spring
15	94-3761-03	1	Lift Lever Wa
16	112168	1	Decal-Lift (Only On: 72046)
16	93-7323	1	Decal-Lift (Only On: 72064)
17	92-6977-03	1	Rod-Lift Lever
18	3272-6	1	Pin-Cotter
19	32120-47	5	Ring-Retaining
20	3256-26	6	Washer-Flat
21	3231-25	2	Screw-CARR
22	3256-24	2	Washer-Flat
23	3296-39	2	Nut-Lock

Ref. No.	Part No.	Qty.	Description
24	79-3401-03	1	Gage Shaft
25	8870	1	Trunnion
26	3296-23	1	Nut-Lock
27	79-1250	2	Pin
28	78-7390	1	Link
29	78-2431	1	Rod
30	94-4944	1	Shaft
31	256-90	2	Bushing-Flange
32	92-6855-03	1	Arm
33	78-7360	1	Rod
34	94-3552-03	1	Lift Arm
35	78-6810-03	1	Plate
36	32144-14	2	Screw-HWH
37	32121-103	1	Pin-Spring
38	92-6978	1	Rod-HOC Indicator
39	92-7007	1	Spring-Extension
40	32121-25	1	Pin-Roll
41	78-2140	1	Trunnion
42	92-6979	1	Plate-HOC Gage
43	106269	1	Bearing-Flange
44	93-0523-03	1	Bracket-Pivot Linkage
45	32144-14	2	Screw-HWH



Frame


Ref. No.	Part No.	Qty.	Description
1	3296-29	2	Nut-Lock
2	3256-23	2	Washer-Flat
3	3230-2	2	Screw-CARR
4	92-6868-03	1	Bracket-Idler
5	32144-14	6	Screw-HWH
6	92-6964-03	1	Bracket-HOC
7	92-6674-03	1	Support-Fender
8	322-5	1	Screw-HH
9	3296-29	1	Nut-Lock
10	94-2668	1	Frame
12	92-6992-03	1	Bracket-Steering
13	93-7324	2	Decal-Installation (Only On: 72064)
14	92-8747	2	Decal-Attach A Matic
15	78-2491-03	1	Stop-PTO
16	8830	1	Retainer-"J"

Ref. No.	Part No.	Qty.	Description




Ref. No.	Part No.	Qty.	Description
1	2534	2	Clip-Spring
2	323-10	3	Screw-HH
3	3296-29	3	Nut-Lock
4	88-4590	1	Bolt-Shoulder
5	111419	1	Washer-Bearing
6	3256-24	7	Washer-Flat
7	92-6900	1	Arm-Idler
8	92-7101	1	Pulley-Flat
9	79-7530	1	Spring-Extension
10	3296-59	4	Nut-Lock
11	111418	1	Bushing
12	93-3658	2	Spacer
13	92-7102	2	Pulley-Idler
14	322-5	2	Screw-HH
15	3256-23	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description

 


Ref. No.	Part No.	Qty.	Description
1	93-3167	1	Rod-Park Brake
2	92-7009	1	Grip-Parking Brake
3	32144-14	4	Screw-HWH
4	92-7000-03	1	Bracket-Park Brake
5	92-6968	1	Trunnion-Brake
6	3272-6	2	Pin-Cotter
7	3256-23	1	Washer-Flat
8	92-6988	1	Rod-Brake
9	93-0540	1	Spring-Extension
10	94-1722-03	1	Lever-Brake
11	32121-69	1	Pin-Spring
12	256-90	2	Bushing-Flange
13	3256-24	1	Washer-Flat
14	92-6982	1	Spacer-Brake
15	94-4233-03	1	Pedal-Brake
16	65-2920	1	Pad-Pedal
16	92-6949	1	Tube-Brake
16	94-1720	1	Lever-Brake
17	147665	2	Screw
18	88-9932	1	Switch - Micro
19	3290-354	1	Nut-Speed
20	93-3240	1	Seal-Plunger
21	93-0520-03	1	Bracket-Switch
22	92-7004-03	1	Support-Park Brake

 16



Ref. No.	Part No.	Qty.	Description
1	92-6903	1	Pad-Pedal Reverse
2	92-6913-03	1	Pedal-Hydro
3	3220-3	2	Nut-Hex Jam
4	92-7018	1	Rod
5	3296-39	1	Nut-Lock
6	3256-24	5	Washer-Flat
7	92-6962	1	Bushing
8	94-1588	1	Rod-Bypass
9	3272-2	1	Pin-Cotter
10	323-10	1	Screw-HH
11	94-6875	1	Washer
12	94-4945	1	Spacer
13	323-7	1	Screw-HH
14	3253-5	1	Washer-Lock
15	92-7008	2	Rod End
16	302-26	1	Fitting-Grease
17	92-6966	1	Spacer-Hydro Pedal
18	92-6902	1	Pad-Pedal Forward
19	9202154	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description

 


Ref. No.	Part No.	Qty.	Description
1	322-6	1	Screw-HH
2	92-6769	2	U-Bolt
3	92-6726	1	Decal-Hydro Valve (Only On: 72046)
3	92-7090	1	Decal-Bypass (Only On: 72064)
4	94-4205	1	Transaxle-Hydro
5	3256-23	5	Washer-Flat
6	3296-29	6	Nut-Lock
7	322-12	1	Screw HH
8	93-0546-03	1	Strap-Torque
9	92-6954	1	Belt
10	92-6686	1	Pulley
11	3245-32	1	Screw-Set
12	936118	2	Snap Ring
13	92-6943	1	Spacer-Fan
14	92-6742	1	Fan
15	49-2040	3	Screw-HH

18



Ref. No.	Part No.	Qty.	Description
☆1		2	Wheel & Tire ASM
1:1	78-1221	2	Wheel
1:2	5108	2	Valve-Tire Tubeless
1:3	116744	2	Tire
2	93-3659-03	2	Hub-Wheel
3	3243-5	4	Screw-Set
4	3218-3	4	Nut-HJ
5	5-1336	2	Key
6	83-2720	10	Bolt-Lug

 19

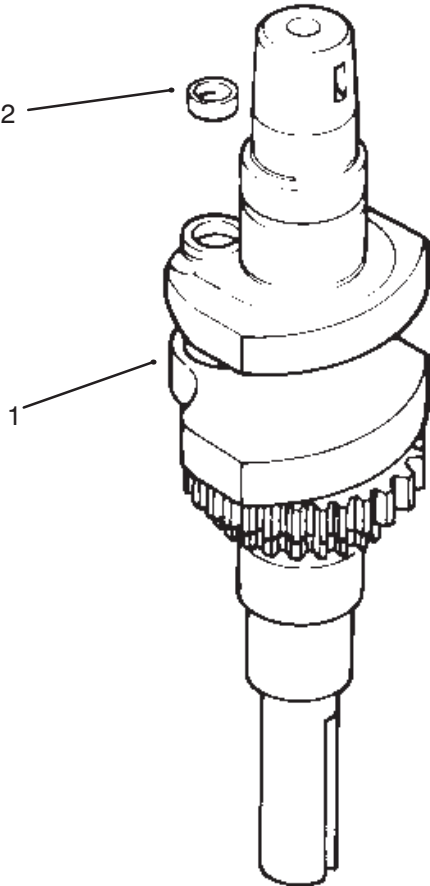


Sheet No.: 101
C-1948

Crankshaft

Ref. No.	Part No.	Qty.	Description
1	12 014 37	1	Crankshaft
2	12 139 01	1	Plug-Cup

Ref. No.	Part No.	Qty.	Description

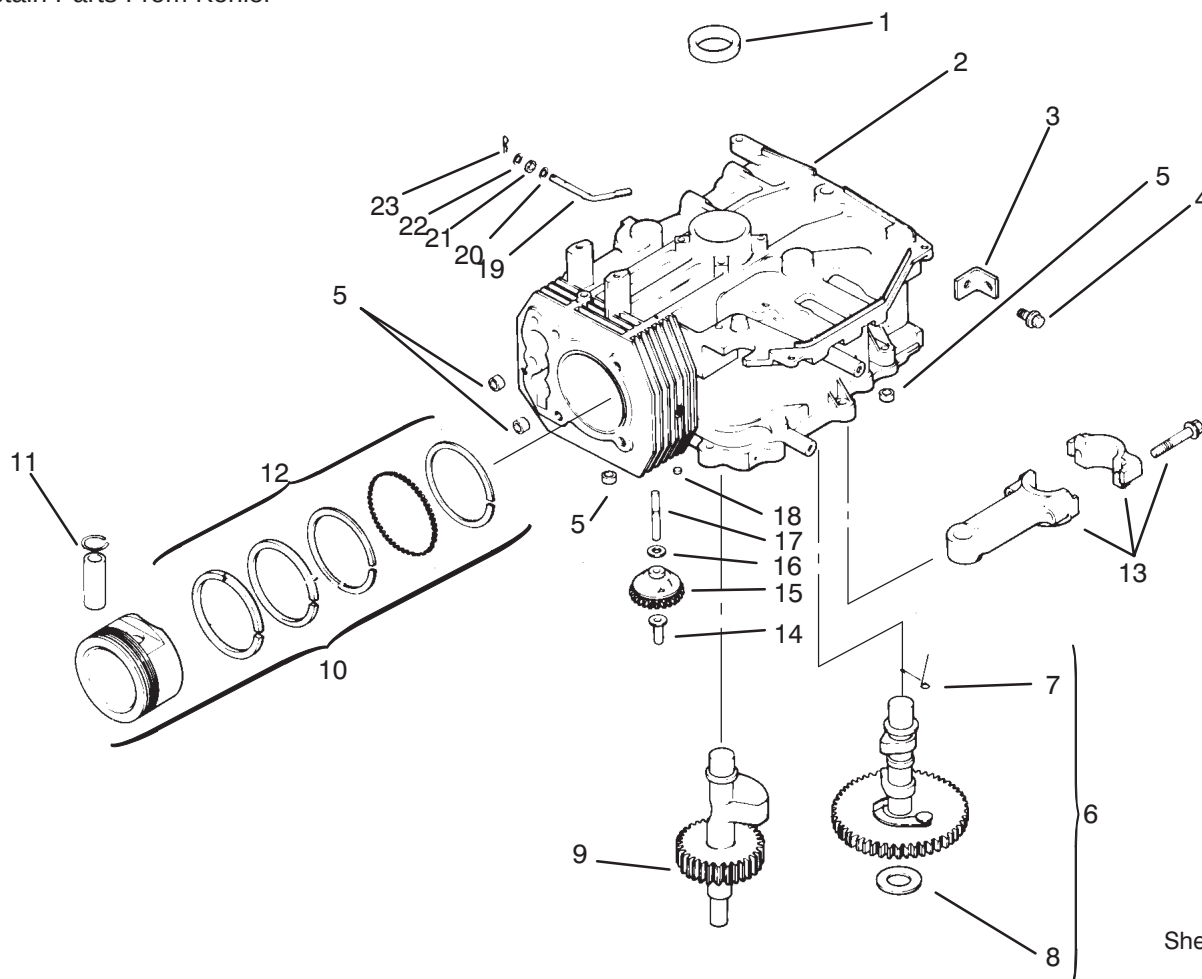 

Sheet No.: 102
C-1949


Crankcase

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 032 03	1	Seal-Crankshaft	12	12 018 09	1	Ring Set .50
2	12 522 18	1	Block-Short	13	12 067 05	1	Rod Connecting STD
3	12 445 02	1	Strap-Lifting	13	12 067 06	1	Rod Connecting .25
4	M-0839025	1	Screw M8x1.25x22	14	12 380 01	1	Pin-Governor Regulating
5	12 380 03	4	Dowel-Locating	15	12 043 05	1	Gear-Governor ASM
6	12 755 49	1	Kit-Camshaft INC 7-8	16	M-0631005	1	Washer-Governor
†7	12 089 18	1	Spring-Actuating	17	12 144 02	1	Shaft-Governor Gear
†8	12 422 07	1	Shim-Camshaft A/R	18	52 139 09	1	Plug-Cup
†8	12 422 08	1	Shim-Camshaft A/R	19	12 755 64	1	Shaft-Governor Cross
†8	12 422 09	1	Shim-Camshaft A/R	20	M-0631015	1	Washer-Governor Shaft
†8	12 422 10	1	Shim-Camshaft A/R	21	12 032 01	1	Seal-Governor Shaft
†8	12 422 11	1	Shim-Camshaft A/R	22	X-25-102	1	Washer-Flat
†8	12 422 12	1	Shim-Camshaft A/R	23	12 154 05	1	Pin-Governor Hitch
†8	12 422 13	1	Shim-Camshaft A/R	*	12 722 59	1	Gasket Set
9	12 144 27	1	Shaft-Balance				
10	12 874 07	1	Piston ASM STD Incl 11-2				
10	12 874 08	1	Piston ASM .25 Incl 11-2				
10	12 874 09	1	Piston ASM .50 Incl 11-2				
†11	12 018 02	2	Retainer-Piston Pin				
12	12 018 07	1	Ring Set STD				
12	12 018 08	1	Ring Set .25				

* Not illustrated

† Included in a service kit or in an assembly

 3318-933

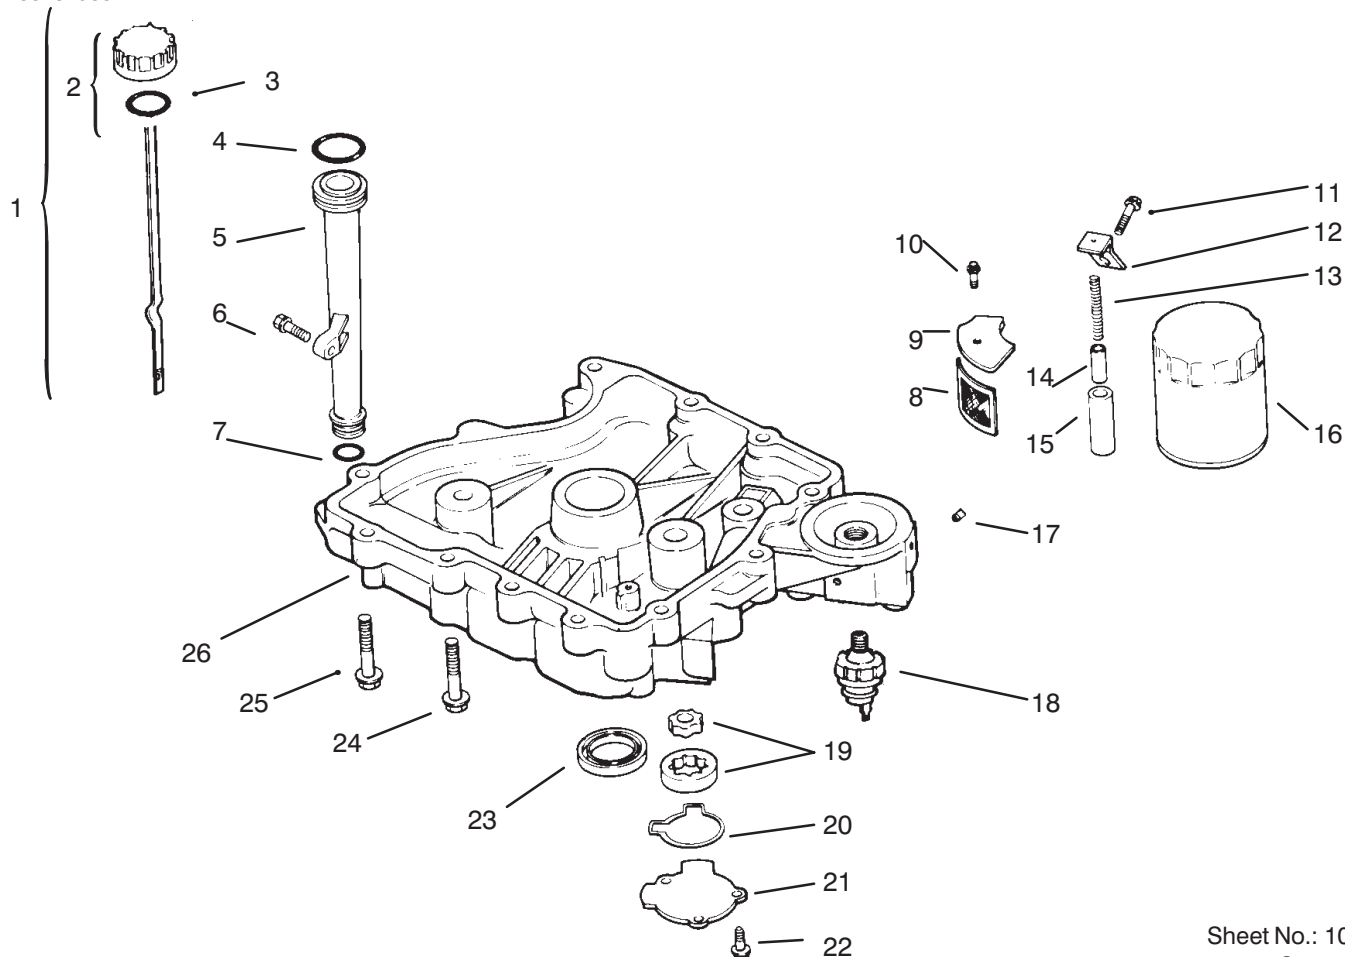

Sheet No.: 103

C-1950


Oil Pan / Lubrication

Ref. No.	Part No.	Qty.	Description
1	12 038 01	1	Dipstick INC 2-3
†2	25 755 13	1	Kit-Oil Cap INC 3
†3	12 153 03	1	O Ring-Fill Cap
4	12 153 02	1	O Ring-Upper Fill Tube
5	12 123 04	1	Tube-Oil Fill
6	M-0545020	1	Screw M5x0.8x20
7	12 153 01	1	O Ring-Lower Fill Tube
8	12 162 07	1	Screen-Oil Pickup
9	12 096 03	1	Cover-Oil Pickup Screen
10	M-0545016	1	Screw M5x0.8x16
11	M-1039025	1	Screw M10x1.5x25
12	12 126 02	1	Bracket-Oil Pump Relief
13	12 089 03	1	Spring-Oil Relief Valve
14	12 462 01	1	Piston-Oil Relief Valve
15	12 208 01	1	Body-Oil Relief Valve
16	12 050 01	1	Filter-Oil
17	X-75-10	2	Plug-SH 3/8 NPTF
18	52 099 06	1	Switch-Oil Pressure
19	12 393 01	1	Pump-Oil
20	12 032 04	1	O Ring-Oil Pump Cover
21	12 096 02	1	Cover-Oil Pump

Ref. No.	Part No.	Qty.	Description
22	M-0545016	3	Screw M5x0.8x16
23	12 032 03	1	Seal-Crankshaft
24	24 086 16	11	Screw M8x1.25x45
25	24 086 17	1	Screw M8x1.25x45
26	12 199 21	1	Pan-Oil
*	52 518 21	1	Lead-Oil Switch w/Tabs

† Included in a service kit or in an assembly

 * Not illustrated

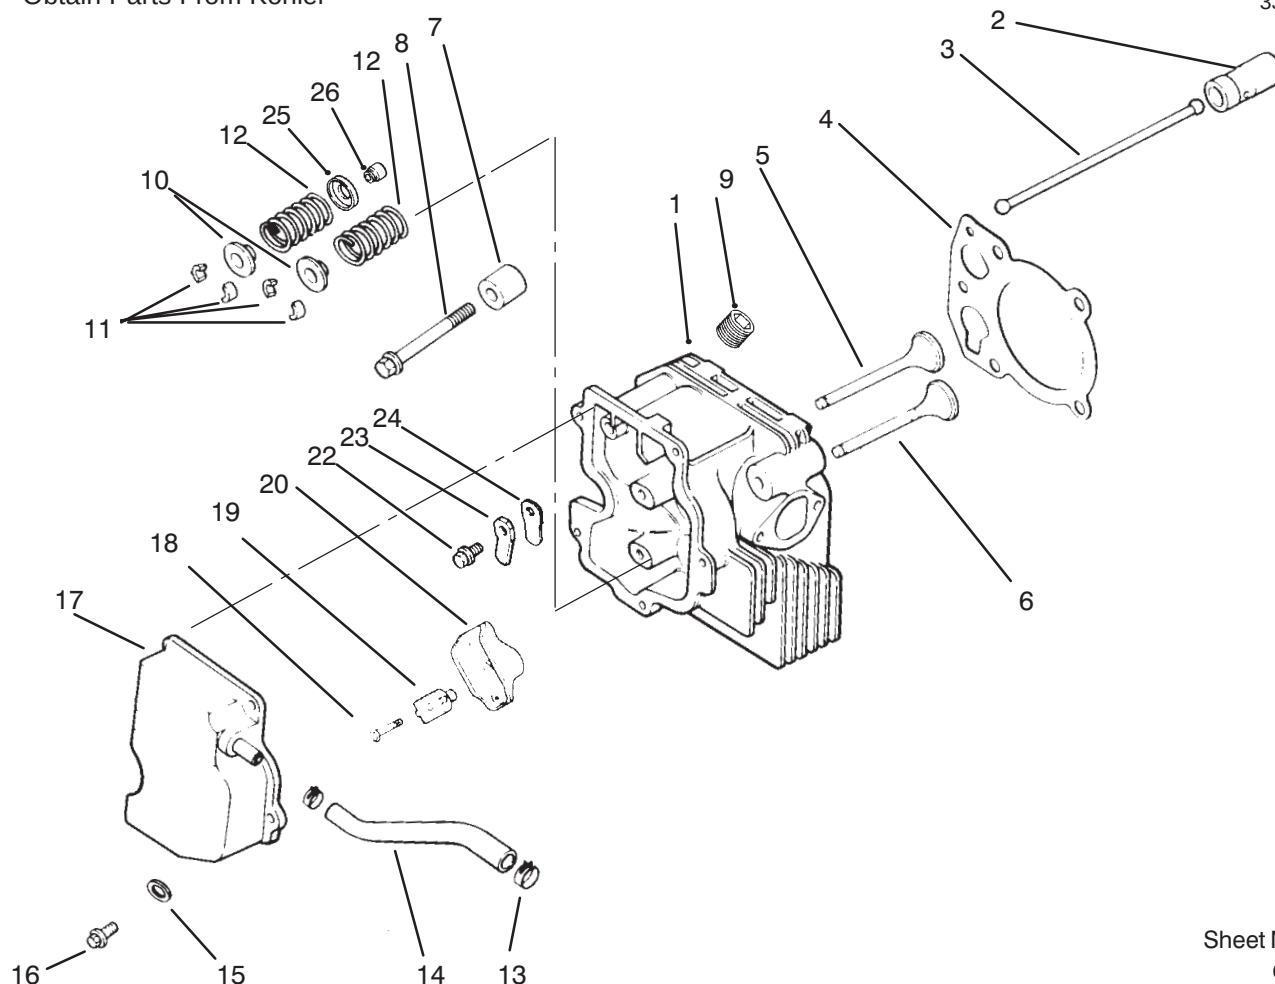

Sheet No.: 104


C-1951

Cylinder Head / Valve / Breather

Ref. No.	Part No.	Qty.	Description
1	12 318 15	1	Cylinder Head
2	12 351 20	1	Lifter-Valve
3	12 411 01	2	Rod-Push
4	12 041 10	1	Gasket-Cylinder Head
5	12 017 01	1	Valve-Intake STD
5	12 017 02	1	Valve-Intake .25
6	12 016 01	1	Valve-Exhaust STD
6	12 016 02	1	Valve-Exhaust .25
7	12 112 13	1	Spacer-Head Bolt Exhaust
8	12 086 15	5	Screw M10x1.5x80
9	X-75-23	1	Plug
10	12 173 01	2	Cap-Valve Spring
11	12 755 03	2	Kit-Retainer
12	12 089 01	2	Spring-Valve
13	X-426-9	2	Clamp-Hose
14	12 326 03	1	Hose-Breather
15	12 468 05	1	Washer-Flat
16	M-0645020	5	Screw-HH M6x1.0x20
17	12 096 07	1	Cover-Valve w/Nipple
18	M-0640034	2	Screw M6x1.0x34
19	12 599 03	2	Pivot-Rocket Arm
20	25 186 01	2	Arm-Rocker
22	M-0545010	1	Screw M5x0.8x10
23	12 018 01	1	Retainer-Breather Reed

Ref. No.	Part No.	Qty.	Description
24	24 402 02	1	Reed-Breather
25	235011	2	Retainer-Spring
26	24 032 05	2	Seal-Valve Stem
*	12 755 63	1	Kit-Cylinder Head (Incl. 3-12,17-20 25 & 26)

 *Not Illustrated

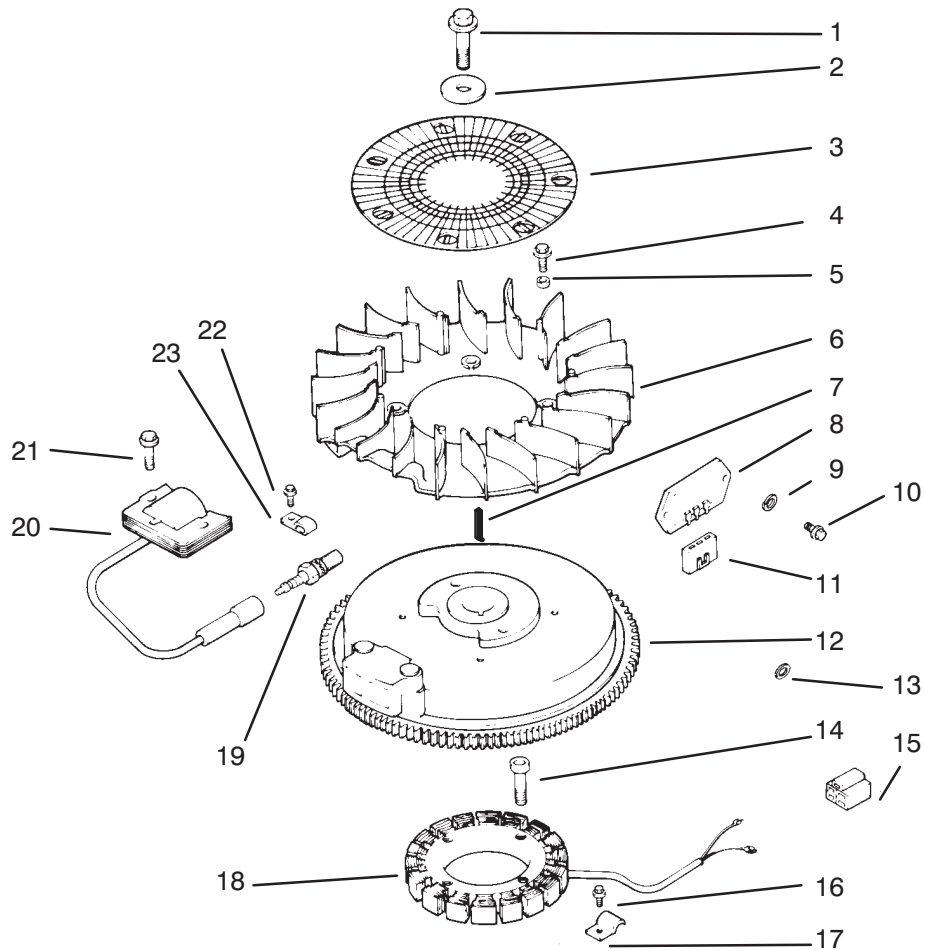
Sheet No.: 105
C-1952

Ignition / Electrical

Ref. No.	Part No.	Qty.	Description
1	12 086 14	1	Screw-Flywheel Mounting
2	12 468 03	1	Washer-Flywheel Screw
3	24 162 03	1	Screen-Grass
4	M-0639016	4	Screw M6x1.0x16
5	12 112 01	4	Spacer-Fan
6	12 157 02	1	Fan
7	X-42-15	1	Key
8	41 403 09	1	Rectifier-Regulator
9	X-22-11	1	Washer-Lock
10	M-0639016	2	Screw M6x1.0x16
11	236602	1	Connector-Regulator
12	12 025 15	1	Flywheel ASM
13	X-25-5	1	Washer-Flat
14	M-0548025	4	Screw M5x0.8x25
15	48 155 01	1	Connector-5 Contact
16	M-0545010	1	Screw M5x0.8x10
17	12 154 02	1	Clip-Stator Harness
18	24 085 01	1	Stator-15 Amp
19	12 132 02	1	Spark Plug
20	12 584 01	1	Module-Ignition
21	M-0545020	2	Screw M5x0.8x20
22	M-0545010	1	Screw M5x0.8x10
23	X-728-1	1	Clip-Kill Lead
*	12 518 01	1	Lead-White

Ref. No.	Part No.	Qty.	Description
*	25 518 05	1	Lead-Black
*	25 518 29	1	Lead-Black

 * Not illustrated

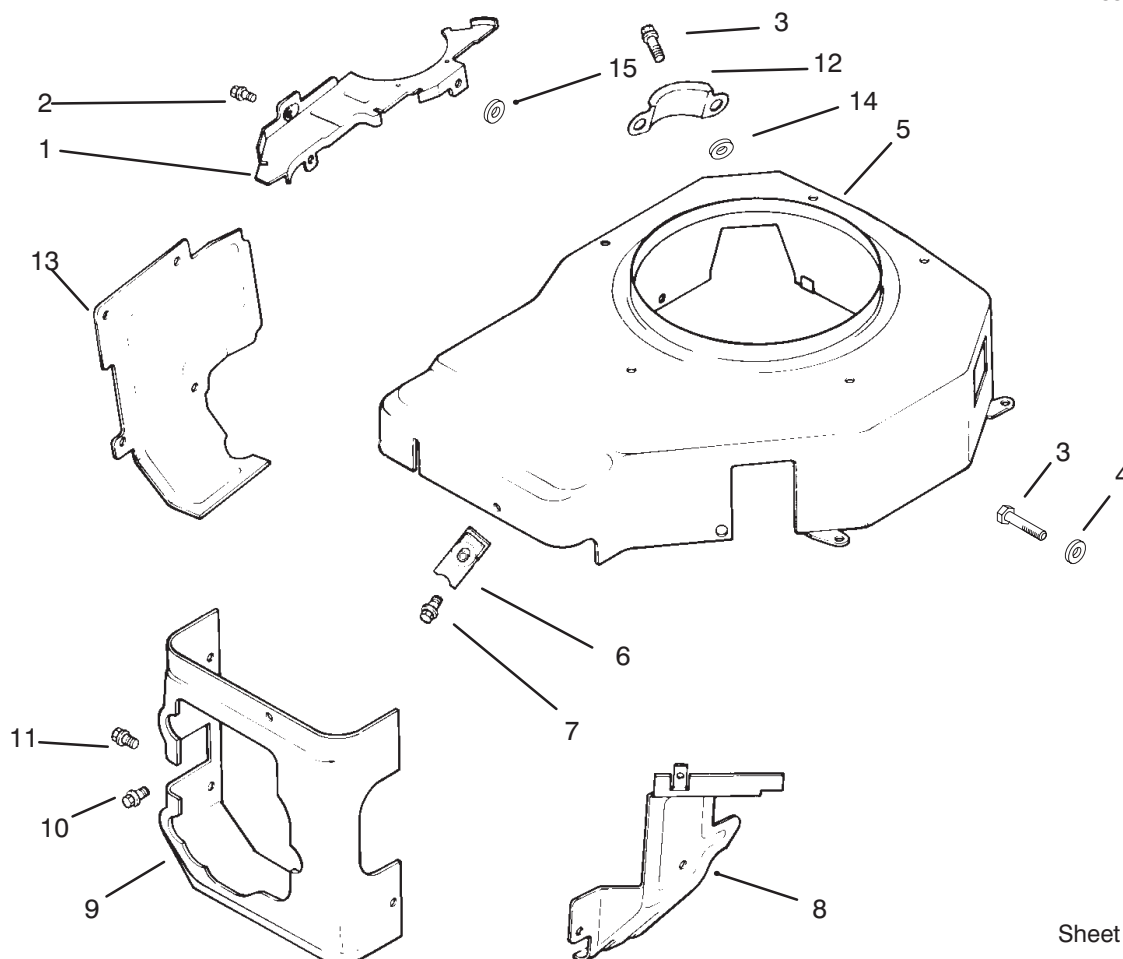


Sheet No.: 106
C-1953

Blower Housing & Baffles

Ref. No.	Part No.	Qty.	Description
1	12 146 07	1	Plate—Blower Housing
2	M—0545010	8	Screw M5x0.8x10
3	24 086 18	2	Screw—Phillips
4	X—25—92	2	Washer—Flat
5	12 027 32	1	Housing—Blower
6	25 154 02	3	Clip
7	M—0545020	3	Screw M5x0.8x20
8	12 063 05	1	Baffle—Carburetor
9	12 063 08	1	Baffle—Cylinder Head
10	M—0645016	2	Screw—HH M6x1.0x16
11	M—0645020	1	Screw—HH M6x1.0x20
12	24 096 05	1	Cover—Pinion
13	12 063 01	1	Baffle—Cylinder Barrel
14	220534	2	Washer Plain 5/16
15	24 468 10	1	Washer Plain 1/4


Ref. No.	Part No.	Qty.	Description

 

Ref. No.	Part No.	Qty.	Description
1	M0839070	2	Screw M8x1.25x70
2	12 098 13	1	Starter ASM Incl 3–8
†3	12 211 01	2	Bolt
†4	12 227 13	1	Cap–Commutator Incl 5
†5	12 221 01	1	Kit–Brush And Spring
†6	12 170 05	1	Armature–Starter
†8	12 755 53	1	Kit–Drive
*	52 357 01	1	Lubricant–Starter

Ref. No.	Part No.	Qty.	Description

 26

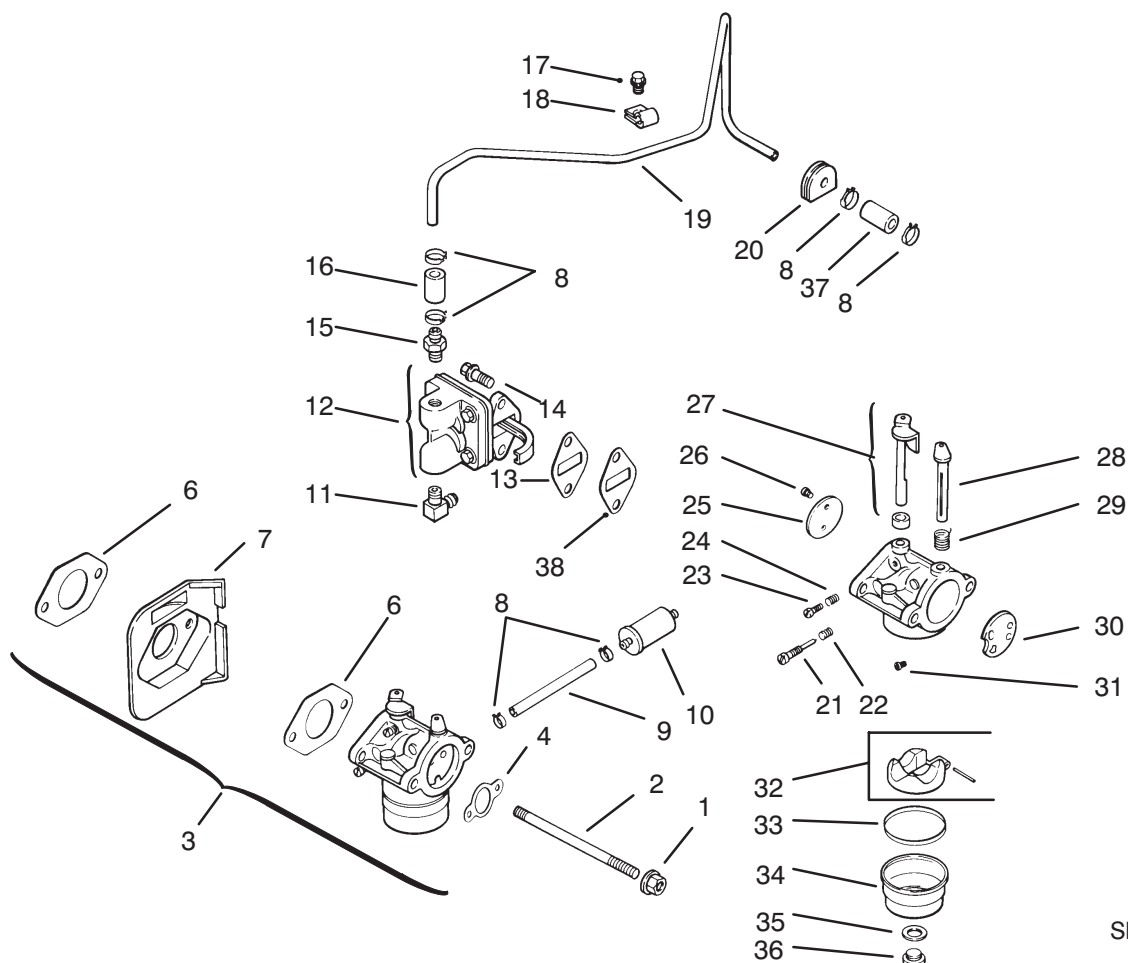


Sheet No.: 108
C-

Fuel System

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-0641060	2	Nut M6x1.0	†23	12 086 04	1	Screw-Idle Speed Adjust
2	M-0629122	2	Stud M6x1.0x110	†24	12 089 09	1	Spring-Idle Fuel
3	12 853 57	1	Kit-Carburetor w/Gasket Incl 4-6	†25	12 146 03	1	Plate-Throttle
†4	12 041 02	1	Gasket-Air Cleaner	†26	25 086 27	1	Screw-Throttle Plate
†5	12 053 57	1	Carurator ASM Incl 21-36	†27	12 144 09	1	Shaft-w/Lever & Seal
†6	12 041 01	2	Gasket-Carburetor	†28	12 144 08	1	Shaft-Choke
7	12 265 04	1	Deflector-Heat	†29	12 089 10	1	Spring-Choke Return
8	X-426-9	1	Clamp-Hose	†30	12 146 02	1	Plate-Choke
9	12 353 10	1	Line-Fuel	†31	12 337 03	1	Jet-Main
10	25 050 02	1	Filter-Fuel	†32	12 757 02	1	Kit-Float
11	25 155 02	1	Connector-90°	†33	12 041 05	1	Gasket-Bowl
12	12 559 01	1	Kit-Pump INC 13-14	†34	12 104 01	1	Bowl-Fuel
†13	25 041 09	1	Gasket-Fuel Pump	†35	12 041 06	1	Gasket-Bowl Screw
†14	M-0645020	2	Screw-HH M6x1.0x20	†36	12 086 05	1	Screw-Fuel Bowl
15	X-380-1	1	Connector-Straight	37	25 353 02	1	Line-Fuel 3"
16	12 353 01	1	Line-Fuel 1.25 Inch	38	12 112 05	1	Spacer-Fuel Pump
17	M-0545010	1	Screw M5x0.8x10	*	12 041 01	1	Gasket-Carburetor
18	12 154 01	1	Clamp-Fuel Line	*	12 757 03	1	Kit-Carburetor Repair
19	12 123 19	1	Line-Fuel				
20	12 313 01	1	Grommet				
†21	12 368 05	1	Needle-Idle Fuel Adjust				
†22	12 089 09	1	Spring-Idle Fuel				

† Included in a service kit or in an assembly

 
* Not illustrated



Ref. No.	Part No.	Qty.	Description
1	12 079 07	1	Linkage—Choke
2	12 237 01	2	Clamp—Cable
3	M—0664020	2	Screw Socket
4	M—0545016	2	Screw M5x0.8x16
5	12 536 02	1	Control—ASM INC 6—7
†6	M—0401030	1	Screw—HHF M4x0.7x28
†7	M—0446030	1	Nut—Hex M4x0.7
8	52 089 07	1	Spring—Governor
9	M—0641060	1	Nut M6x1.0
10	Sm—0642025	1	Screw M6x1.0x25
11	12 090 05	1	Lever—Governor
12	25 158 11	1	Bushing—Linkage
13	12 079 01	1	Linkage—Throttle
14	25 158 08	1	Bushing—Linkage

Ref. No.	Part No.	Qty.	Description

 
28

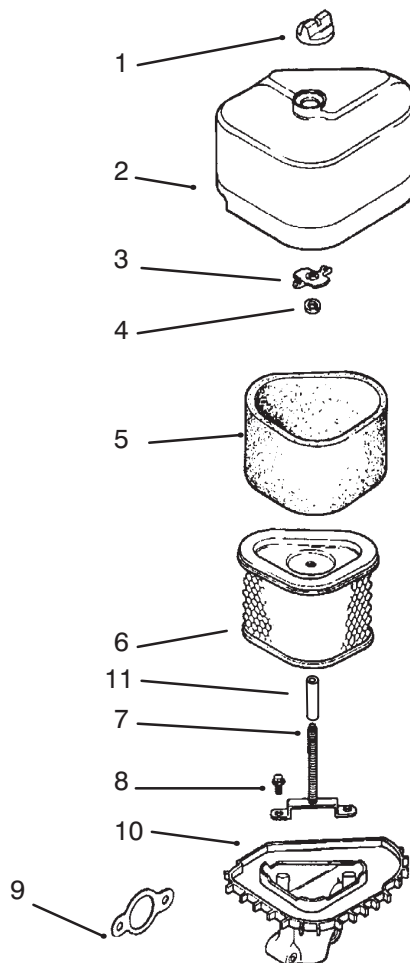

Air Intake / Filtration


Ref. No.	Part No.	Qty.	Description
1	25 341 03	1	Knob–Air Cleaner Cover
2	12 096 45	1	Cover–Air Cleaner
3	12 100 01	1	Nut–Wing
4	X–25–63	1	Washer–Flat
5	12 083 05	1	Element–Air Cleaner Incl 11
6	12 083 08	1	Precleaner–Element
7	12 072 05	1	Stud–Mounting Plate
8	12 086 01	1	Screw–Mounting Plate
9	12 041 02	1	Gasket–Air Cleaner
10	12 094 05	1	Base–Air Cleaner Incl 7
11	12 032 10	1	Seal
*	12 113 04	1	Decal–Air Cleaner
*	12 743 04	1	Kit–Air Cleaner Incl 1–11

 29



Ref. No.	Part No.	Qty.	Description
1	M-0829033	2	Stud M8x1.25x20
2	12 455 06	1	Strap-Lifting
3	12 041 03	1	Gasket-Exhaust Manifold
4	M-0645025	1	Screw-Valve Cover

 30

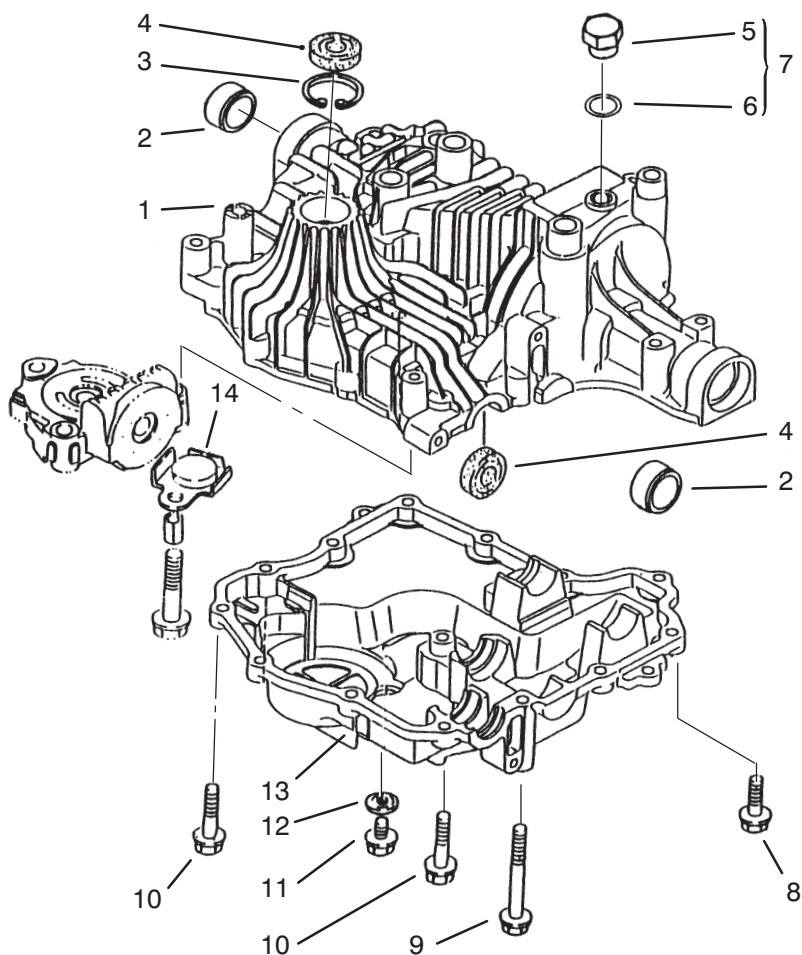


Sheet No.: 401

c-1860

Transaxle Case

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-4206	1	Upper Case ASM INC				
†2		2	Bushing				
†3	93-0360	1	Ring				
†4	93-0361	2	Seal				
†5		1	Plug				
†6		1	Packing				
7	93-0356	1	Plug/Packing INC 5-6				
8	93-0363	11	Screw-TAP				
9	93-0354	1	Bolt				
10	93-0364	2	Screw-TAP				
11	93-0362	1	Bolt				
12	93-0359	1	Washer-Seal				
13	94-4207	1	Case-Lower				
14	93-0355	1	Magnet				

 † Included in a service kit or in an assembly

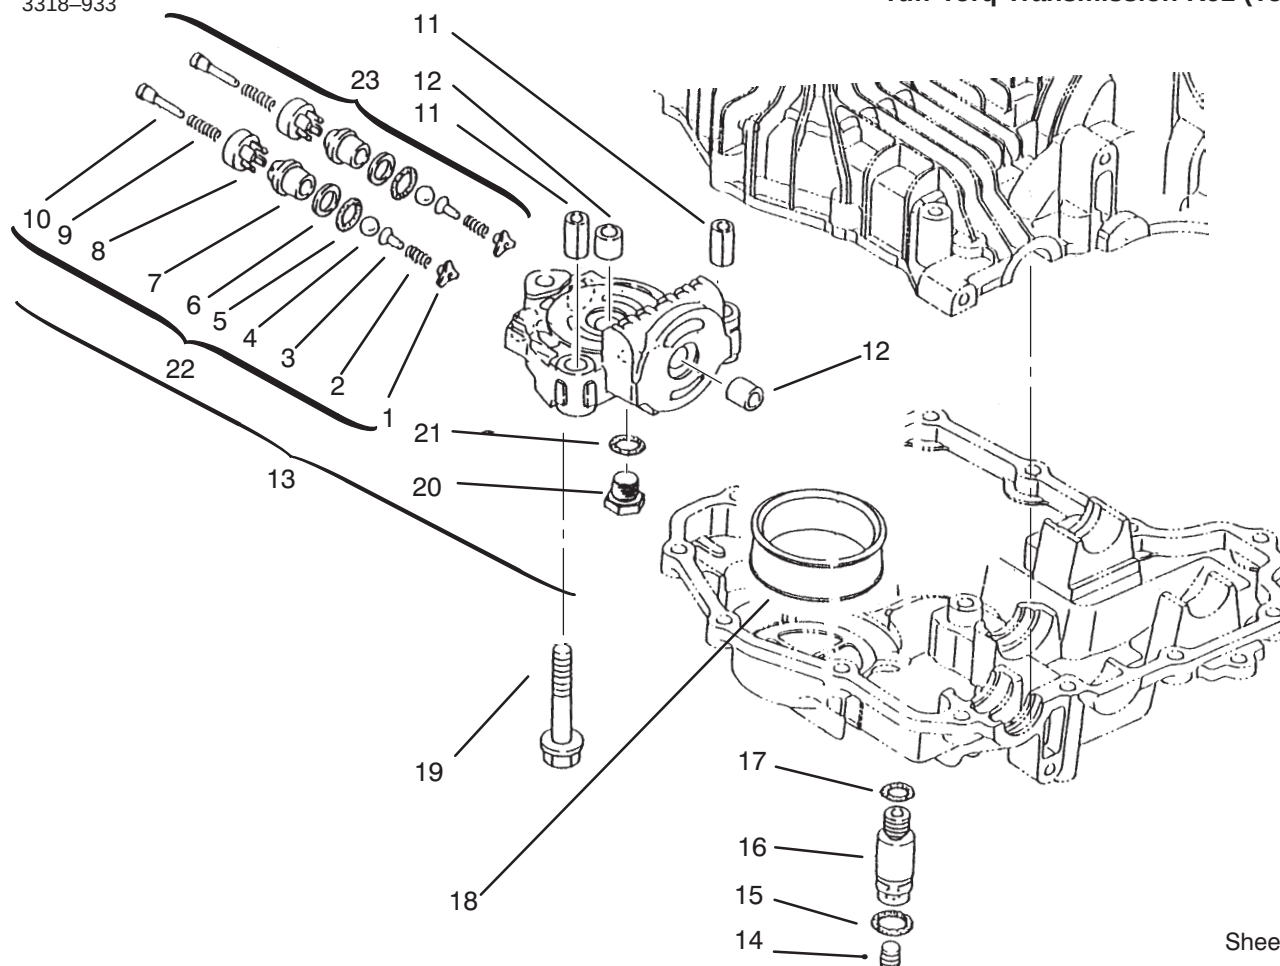

Sheet No.: 402


C-1877

Center Case

Ref. No.	Part No.	Qty.	Description
†1	93-0461	2	Holder-Bypass
†2		2	Spring
†3		2	Holder-Ball
†4		1	Ball
†5	93-0465	2	Packing
†6	93-0466	2	Ring-Back Up
†7		1	Sleeve A1
†8		2	Valve B
†9		2	Spring
†10		2	Pin-Push
†11	93-0471	2	Pin-Knock
†12	93-0472	2	Bushing
13	93-0484	1	Case INC 11-12 & 20-23
14	93-0474	1	Plug
15	93-0475	1	Packing
16	93-0476	1	Connector
17	93-0481	1	Packing
18	93-0478	1	Filter
19	93-0479	3	Bolt
20	93-0480	1	Plug
21	93-0481	1	Packing
22	93-0482	1	Valve ASM A1 INC 1-10
23	93-0483	1	Valve ASM A2

Ref. No.	Part No.	Qty.	Description

 † Included in a service kit or in an assembly

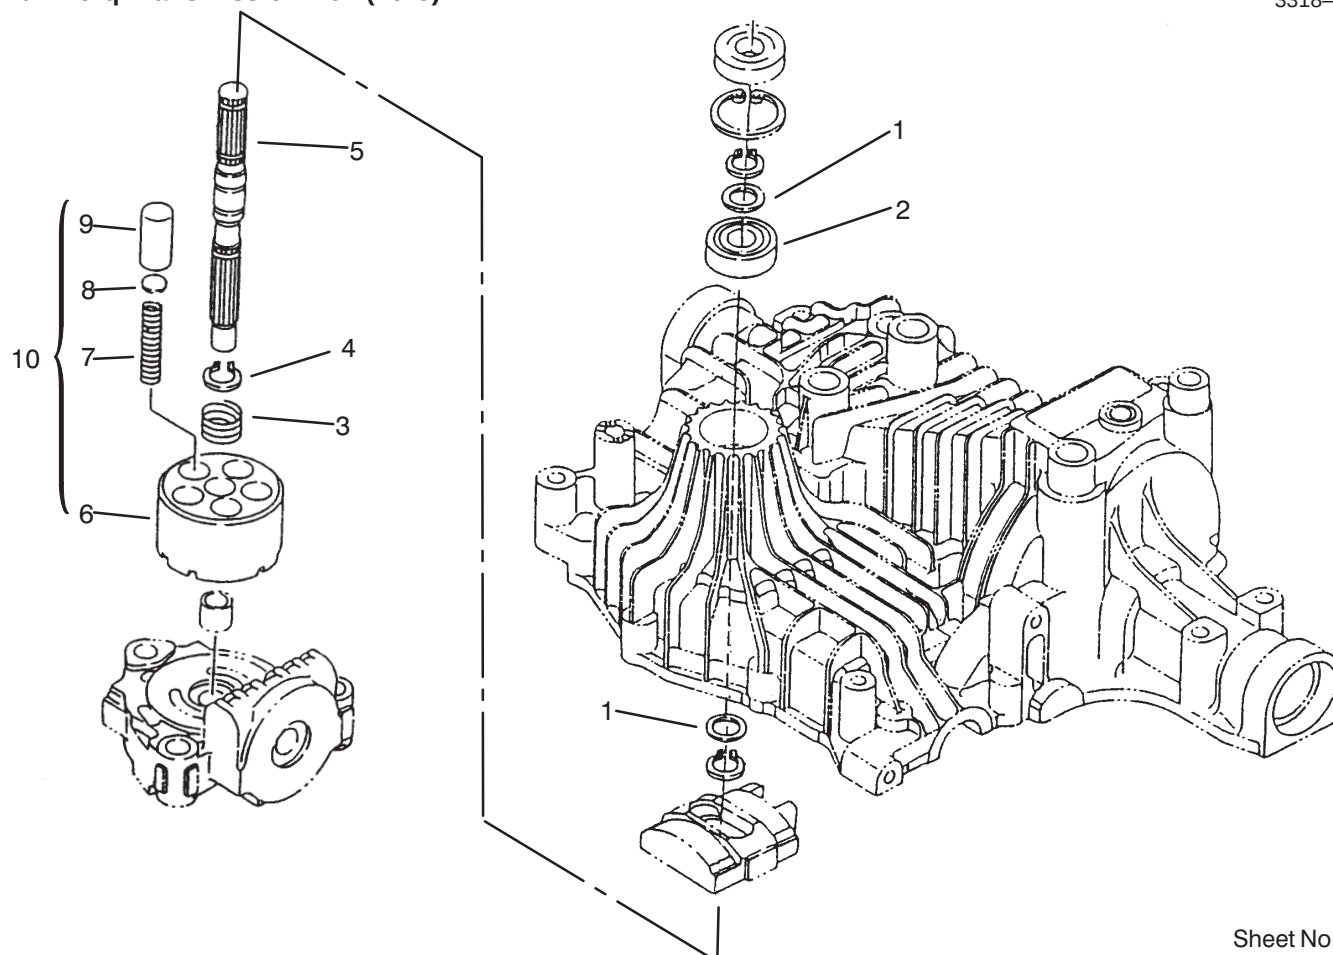

Sheet No.: 403


C-1861

Pump Shaft

Ref. No.	Part No.	Qty.	Description
1	93-0371	2	Washer
2	93-0374	1	Bearing-Ball
3	93-0370	1	Spring
4	93-0373	3	Ring-Snap
5	93-0372	1	Shaft-Pump
†6		1	Block-Cylinder
†7		5	Spring
†8		5	Washer
†9		5	Piston
10	93-0365	1	Cylinder ASM INC 6-9

Ref. No.	Part No.	Qty.	Description

 † Included in a service kit or in an assembly

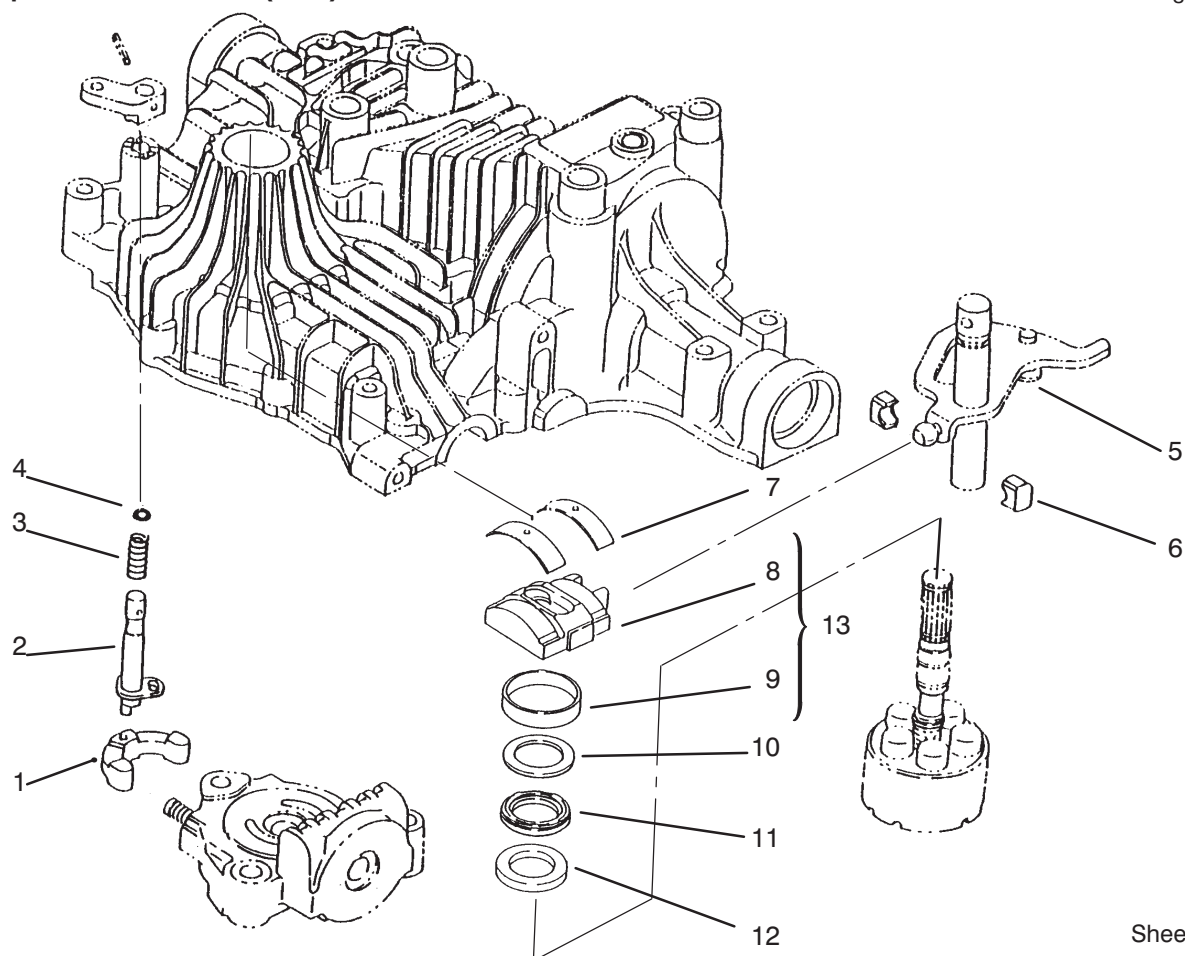

Sheet No.: 405


c-1863

Range Shift

Ref. No.	Part No.	Qty.	Description
1	93-0395	1	Arm
2	93-0397	1	Shaft-Bypass
3	93-0396	1	Spring
4	93-0400	1	Packing
5	93-0398	1	Block Set INC 6
†6		1	Block-Shift
7	93-0388	2	Thrust Metal
†8		1	Plate-Swash
†9		1	Bushing-Swashplate
10	93-0394	1	Plate-Thrust
11	93-0392	1	Bearing
12	93-0393	1	Plate-Thrust
13	93-0389	1	Swash Plate INC 8-9

Ref. No.	Part No.	Qty.	Description

 † Included in a service kit or in an assembly

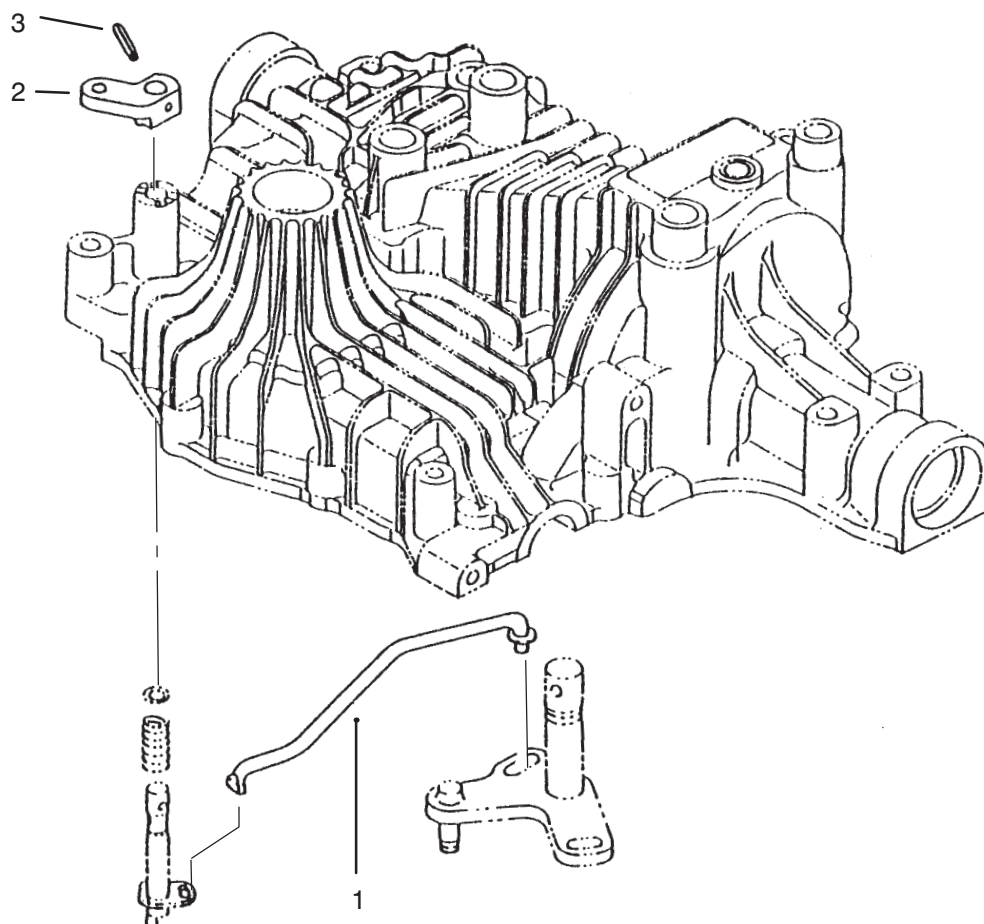


Sheet No.: 406

c-1864

Bypass Return

Ref. No.	Part No.	Qty.	Description
1	93-0401	1	Rod-Bypass
2	93-0402	1	Arm-Valve Release
3	93-0403	1	Pin-Roll

Ref. No.	Part No.	Qty.	Description

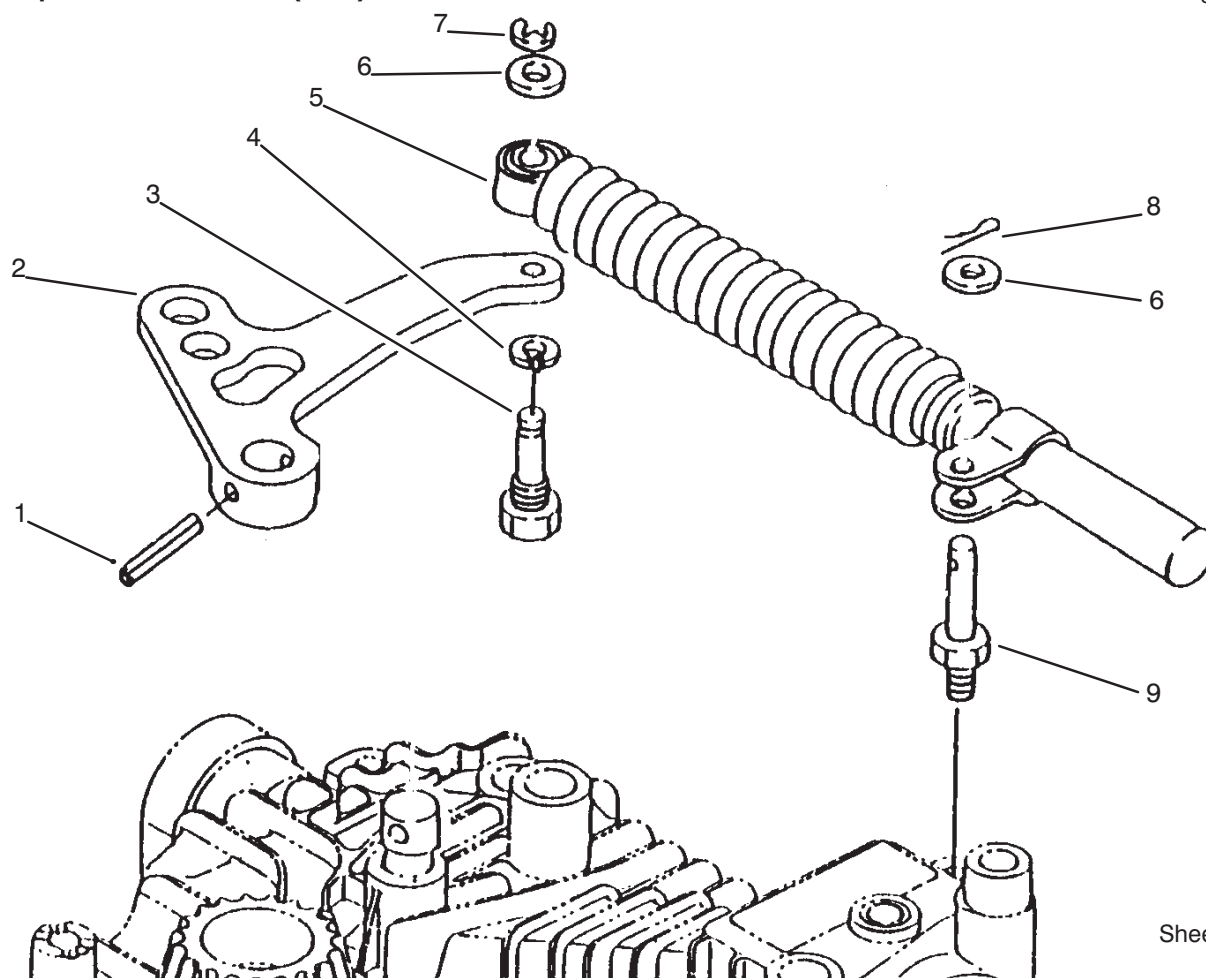 


Sheet No.: 407

C-1865

Lever Damper

Ref. No.	Part No.	Qty.	Description
1	93-0411	1	Pin-Roll
2	93-0404	1	Arm
3	93-0407	1	Bolt
4	93-0409	1	Washer
5	93-0405	1	Shock Absorber
6	93-0408	2	Washer
7	93-0410	1	Ring
8	93-0412	1	Pin-Cotter
9	93-0406	1	Stud

Ref. No.	Part No.	Qty.	Description

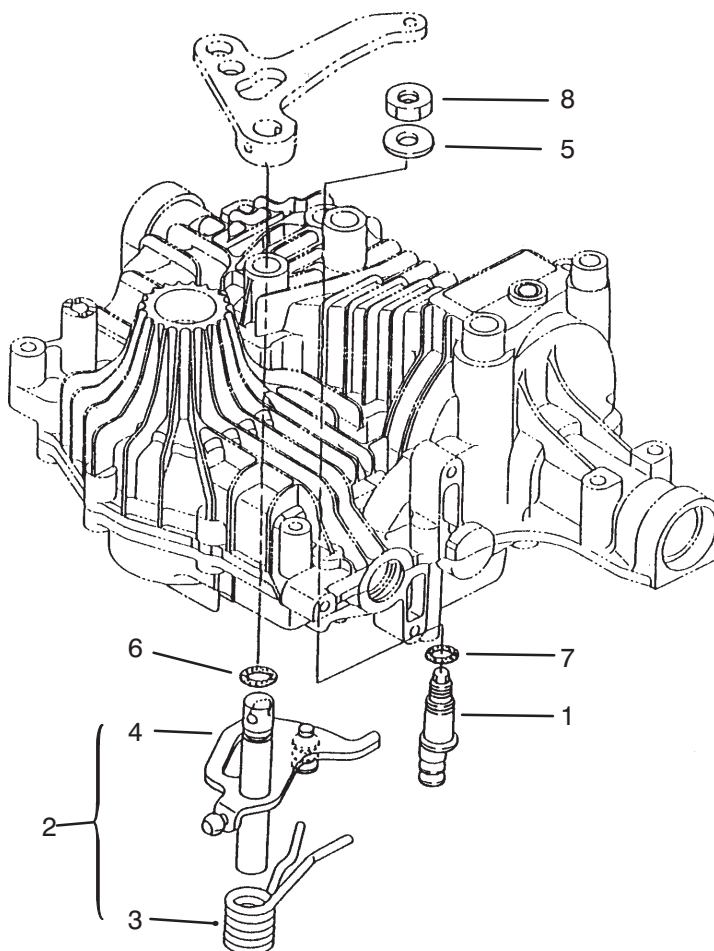 

Sheet No.: 408


C-1866

N-Centering

Ref. No.	Part No.	Qty.	Description
1	93-0413	1	Fulcrum
2	93-0414	1	Shaft ASM INC 3-4
†3		1	Spring
†4		1	Shaft-Control
5	93-0417	1	Washer
6	93-0418	1	Packing
7	93-0419	1	Packing
8	93-0420	1	Nut

Ref. No.	Part No.	Qty.	Description

 † Included in a service kit or in an assembly

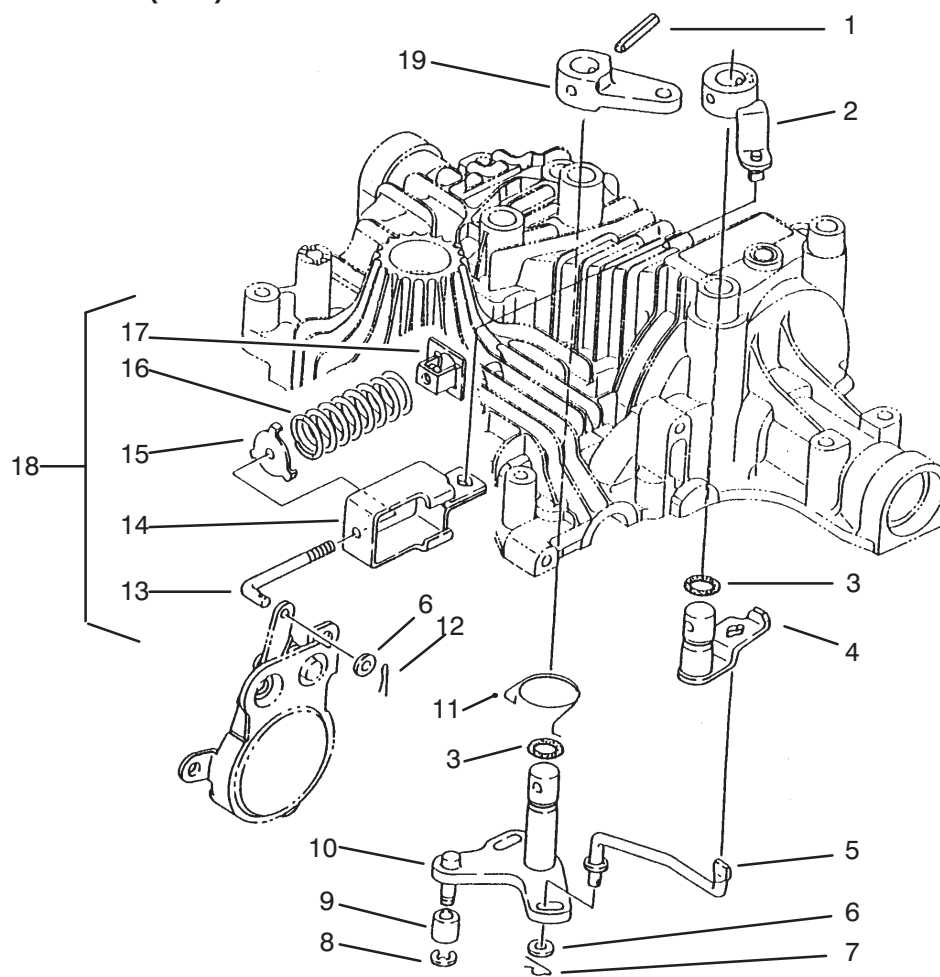

Sheet No.: 409


C-1867

Brake Interlock

Ref. No.	Part No.	Qty.	Description
1	93-0411	2	Pin-Roll
2	93-0433	1	Arm-Brake B
3	93-0418	2	Packing
4	93-0432	1	Arm-Brake A
5	93-0431	1	Rod-Brake
6	93-0435	2	Washer
7	93-0434	1	Pin-Snap
8	93-0410	1	Ring
9	93-0421	1	Bushing
10	93-0430	1	Shaft-Brake
11	93-0422	1	Return-Brake
12	93-0412	1	Pin-Cotter
†13	93-0428	1	Rod-Adjuster
†14	93-0426	1	Holder-Spring
†15	93-0425	1	Guide-Spring
†16	93-0427	1	Spring
†17	93-0424	1	Adjuster
18	93-0423	1	Rod ASM INC 13-17
19	93-0429	1	Arm-Brake

Ref. No.	Part No.	Qty.	Description

 † Included in a service kit or in an assembly

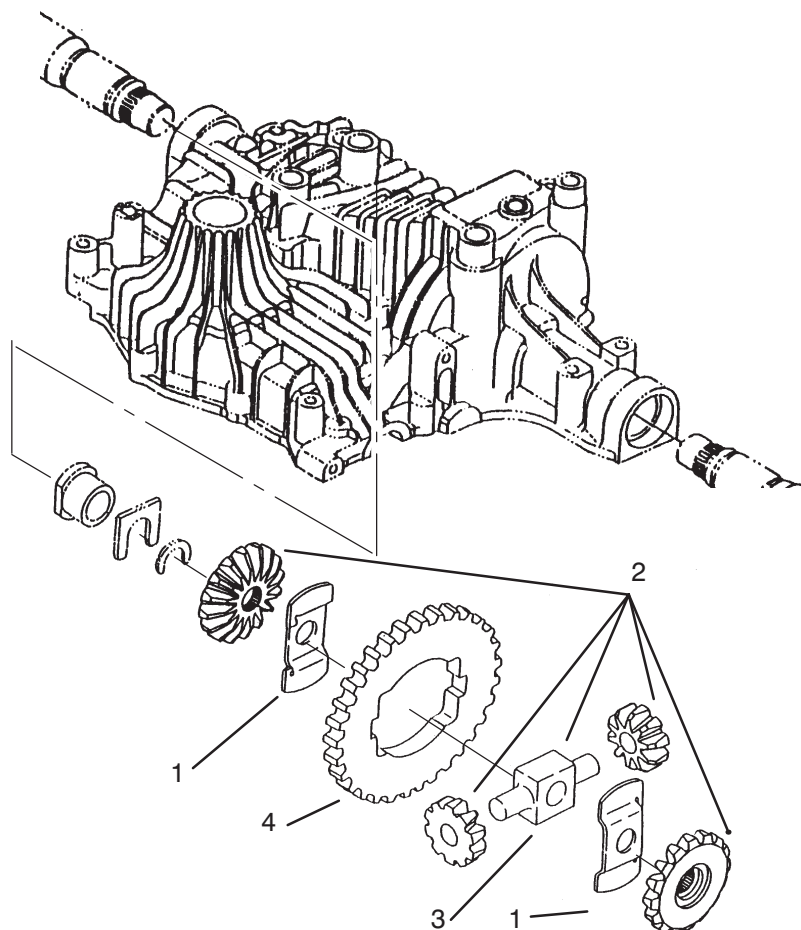


Sheet No.: 410

c-1868

Differential Gear

Ref. No.	Part No.	Qty.	Description
1	93-0444	2	Washer-Thrust
2	95-7871	1	Kit-Gear ASM (Used before Ser. Nos. 15132)
2	95-7872	1	Kit-Gear ASM (Used after Ser. Nos. 15131 & UP)
3	93-0443	1	Shaft-Pinion
4	93-0445	1	Gear-Final

Ref. No.	Part No.	Qty.	Description

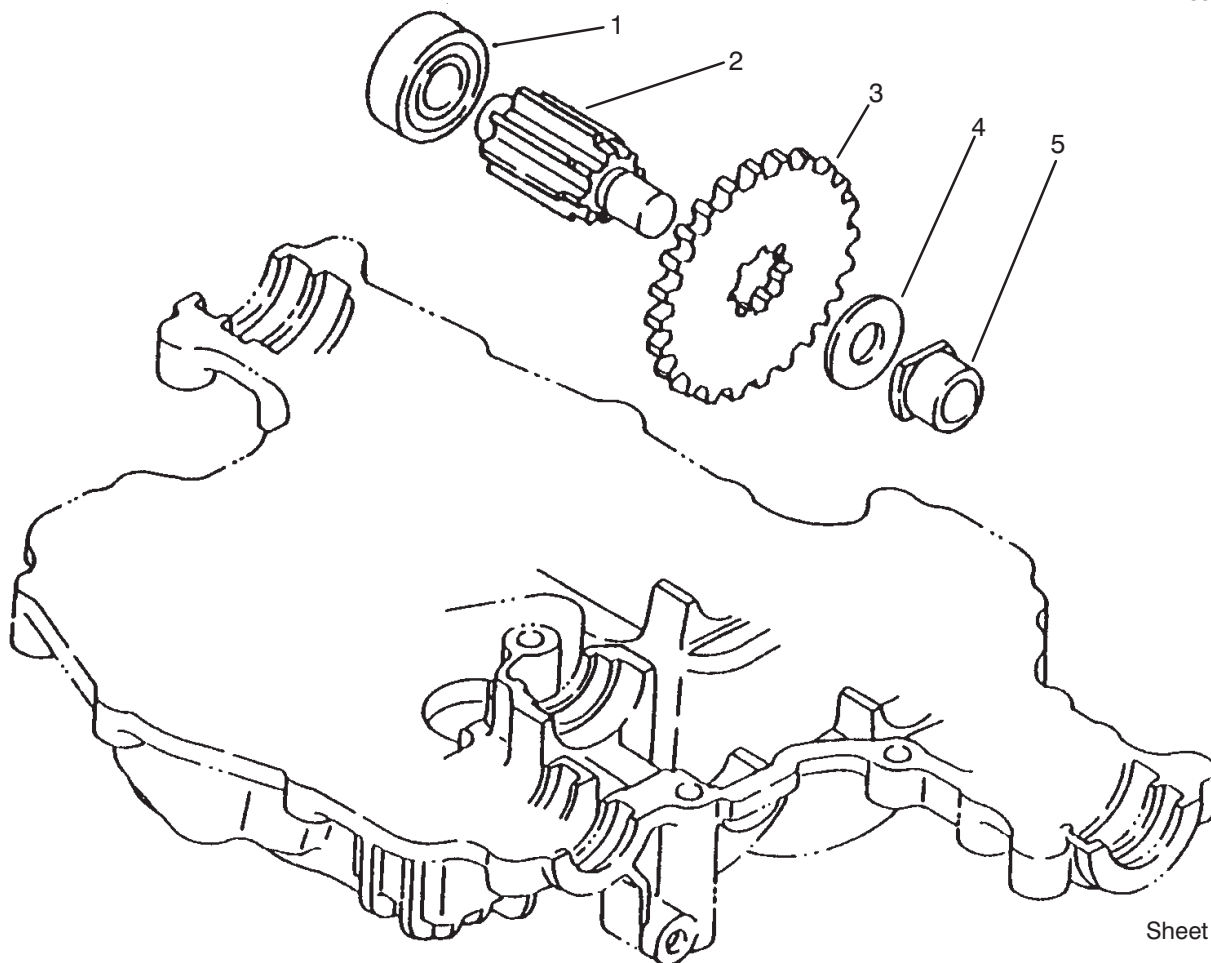 


Sheet No.: 411

C-1869

Final Pinion

Ref. No.	Part No.	Qty.	Description
1	93-0446	1	Bearing
2	93-0447	1	Shaft-Final Pinion
3	93-0448	1	Gear-Final Shaft
4	93-0449	1	Washer
5	93-0450	1	Bushing

Ref. No.	Part No.	Qty.	Description

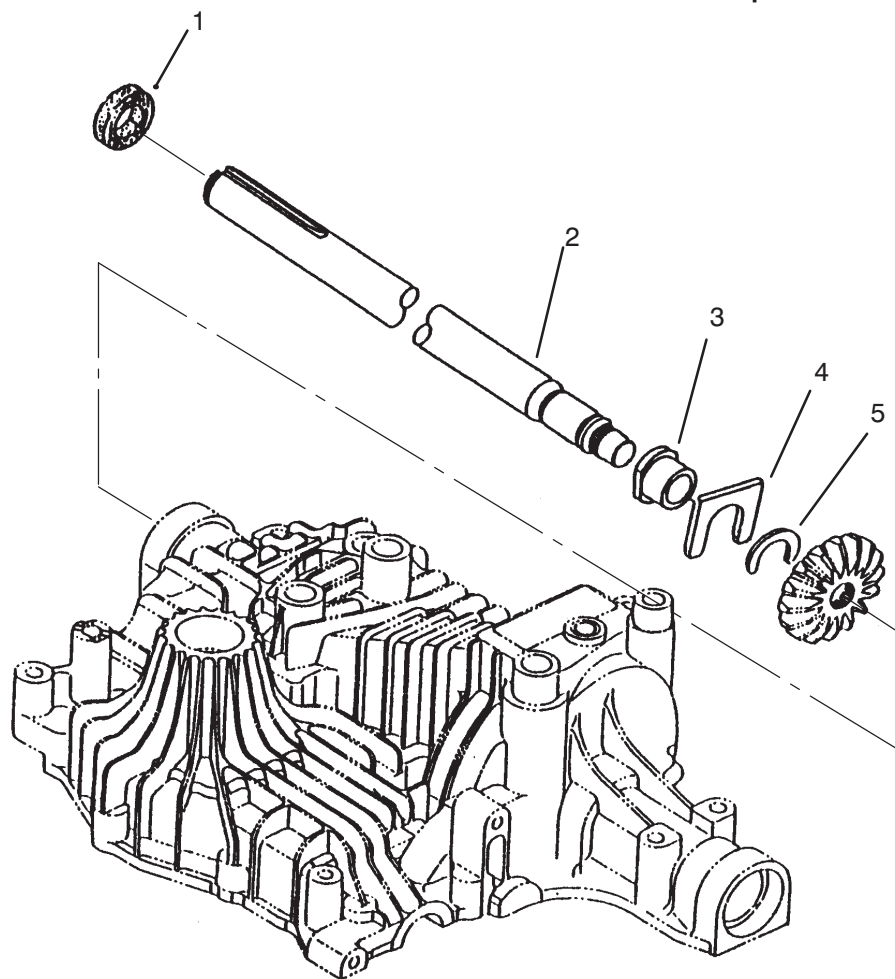 

Sheet No.: 412


C-1870

Axle Shaft

Ref. No.	Part No.	Qty.	Description
1	93-0451	2	Seal
2	93-0452	1	Shaft-Axle Right
3	93-0454	2	Bushing
4	93-0455	2	Washer-Thrust
5	93-0456	2	Ring
*	93-0453	1	Shaft-Axle Left

Ref. No.	Part No.	Qty.	Description

 
* Not illustrated



Ref. No.	Part No.	Qty.	Description
1	93-0457	3	Bolt w/Washer
2	93-0458	1	Band-Brake Interlock
3	93-0373	1	Ring-Snap
4	93-0460	1	Drum-Brake

Electric Schematic Single Cylinder Hydro Drive

 3318—933

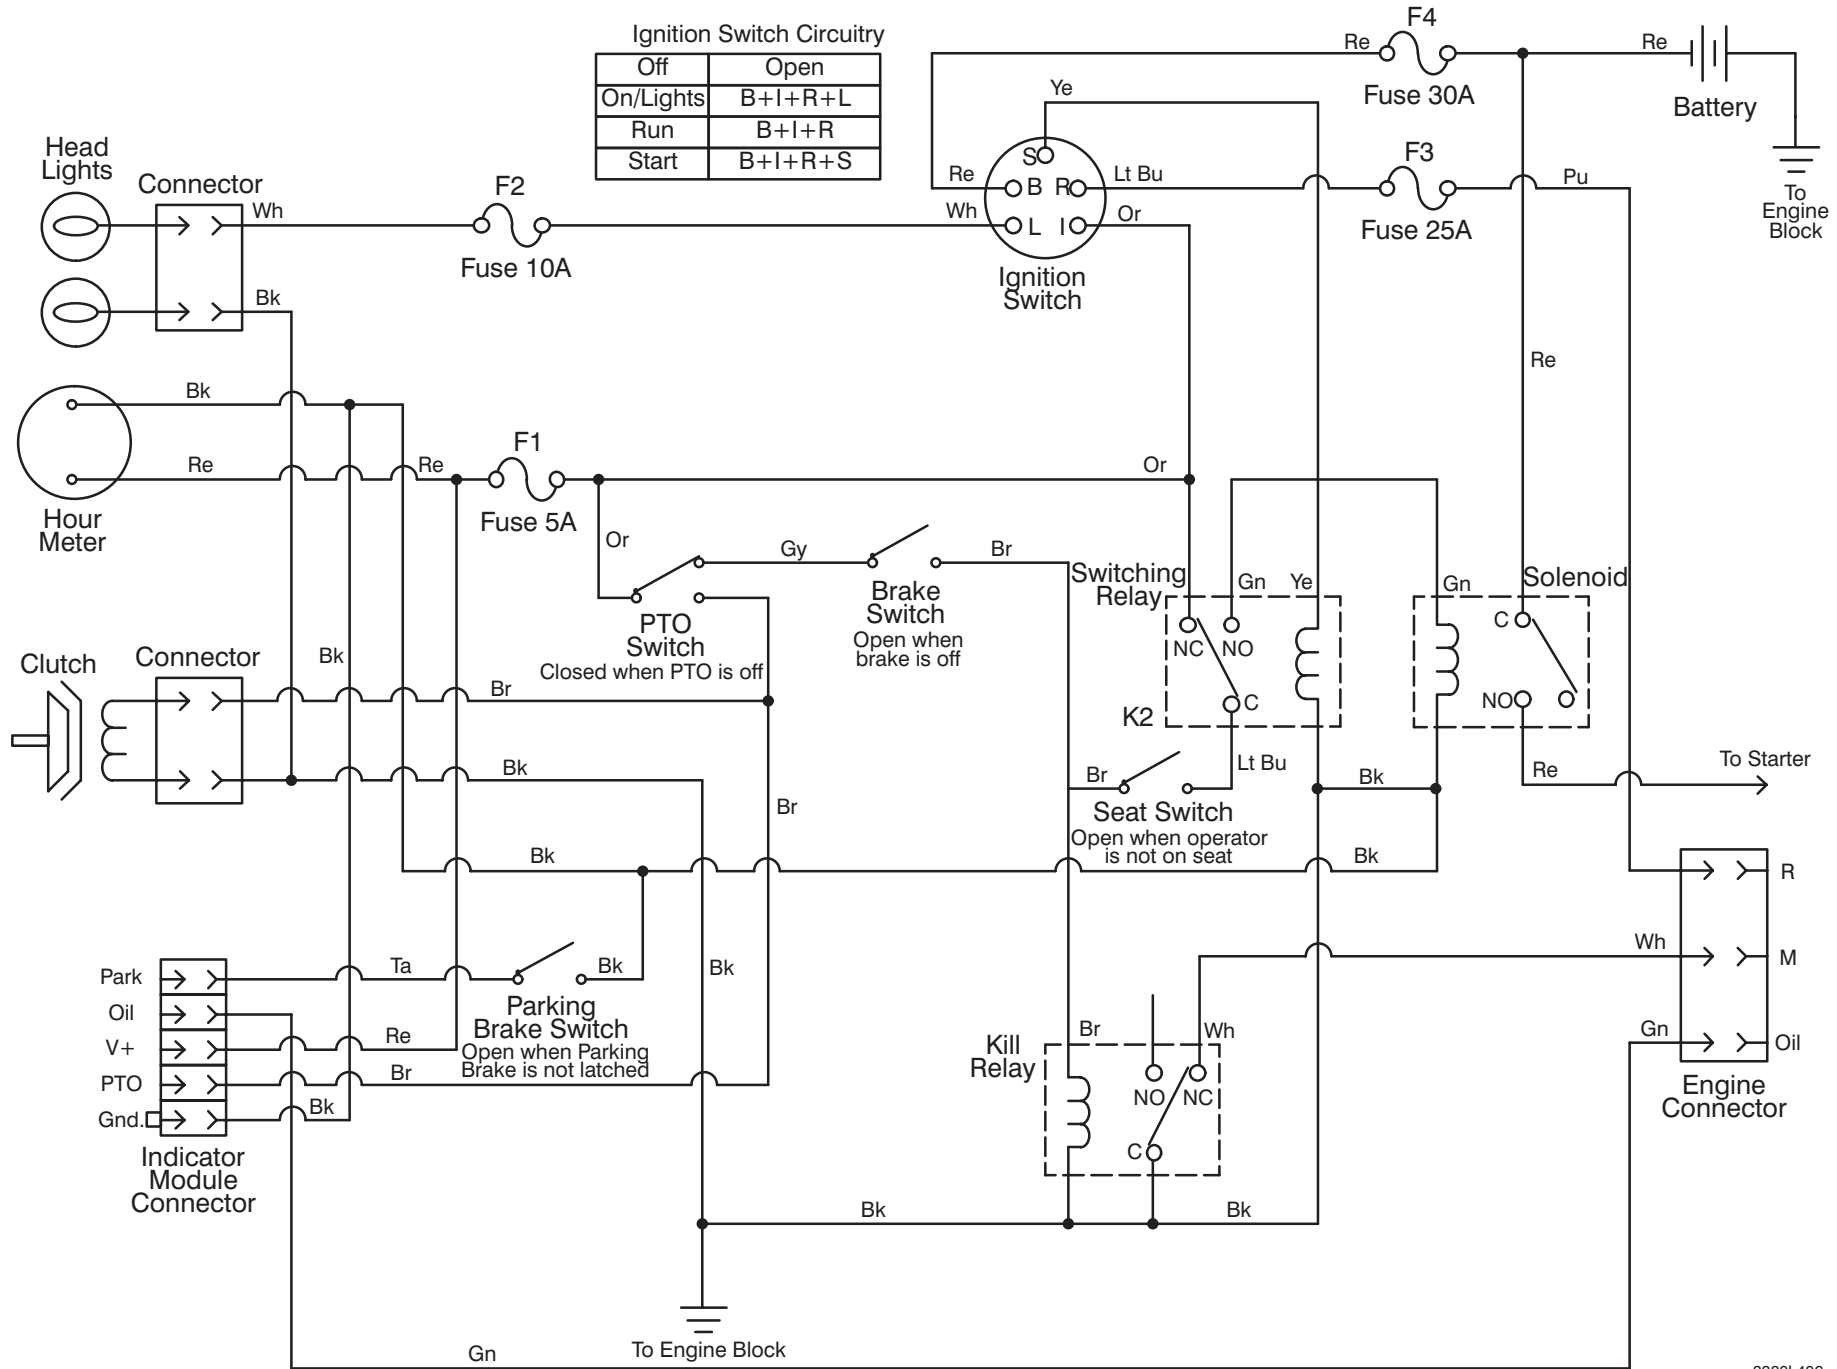


C-1944

3380L406

Wire Harness Routing — Single Cylinder Engine

 3318-933

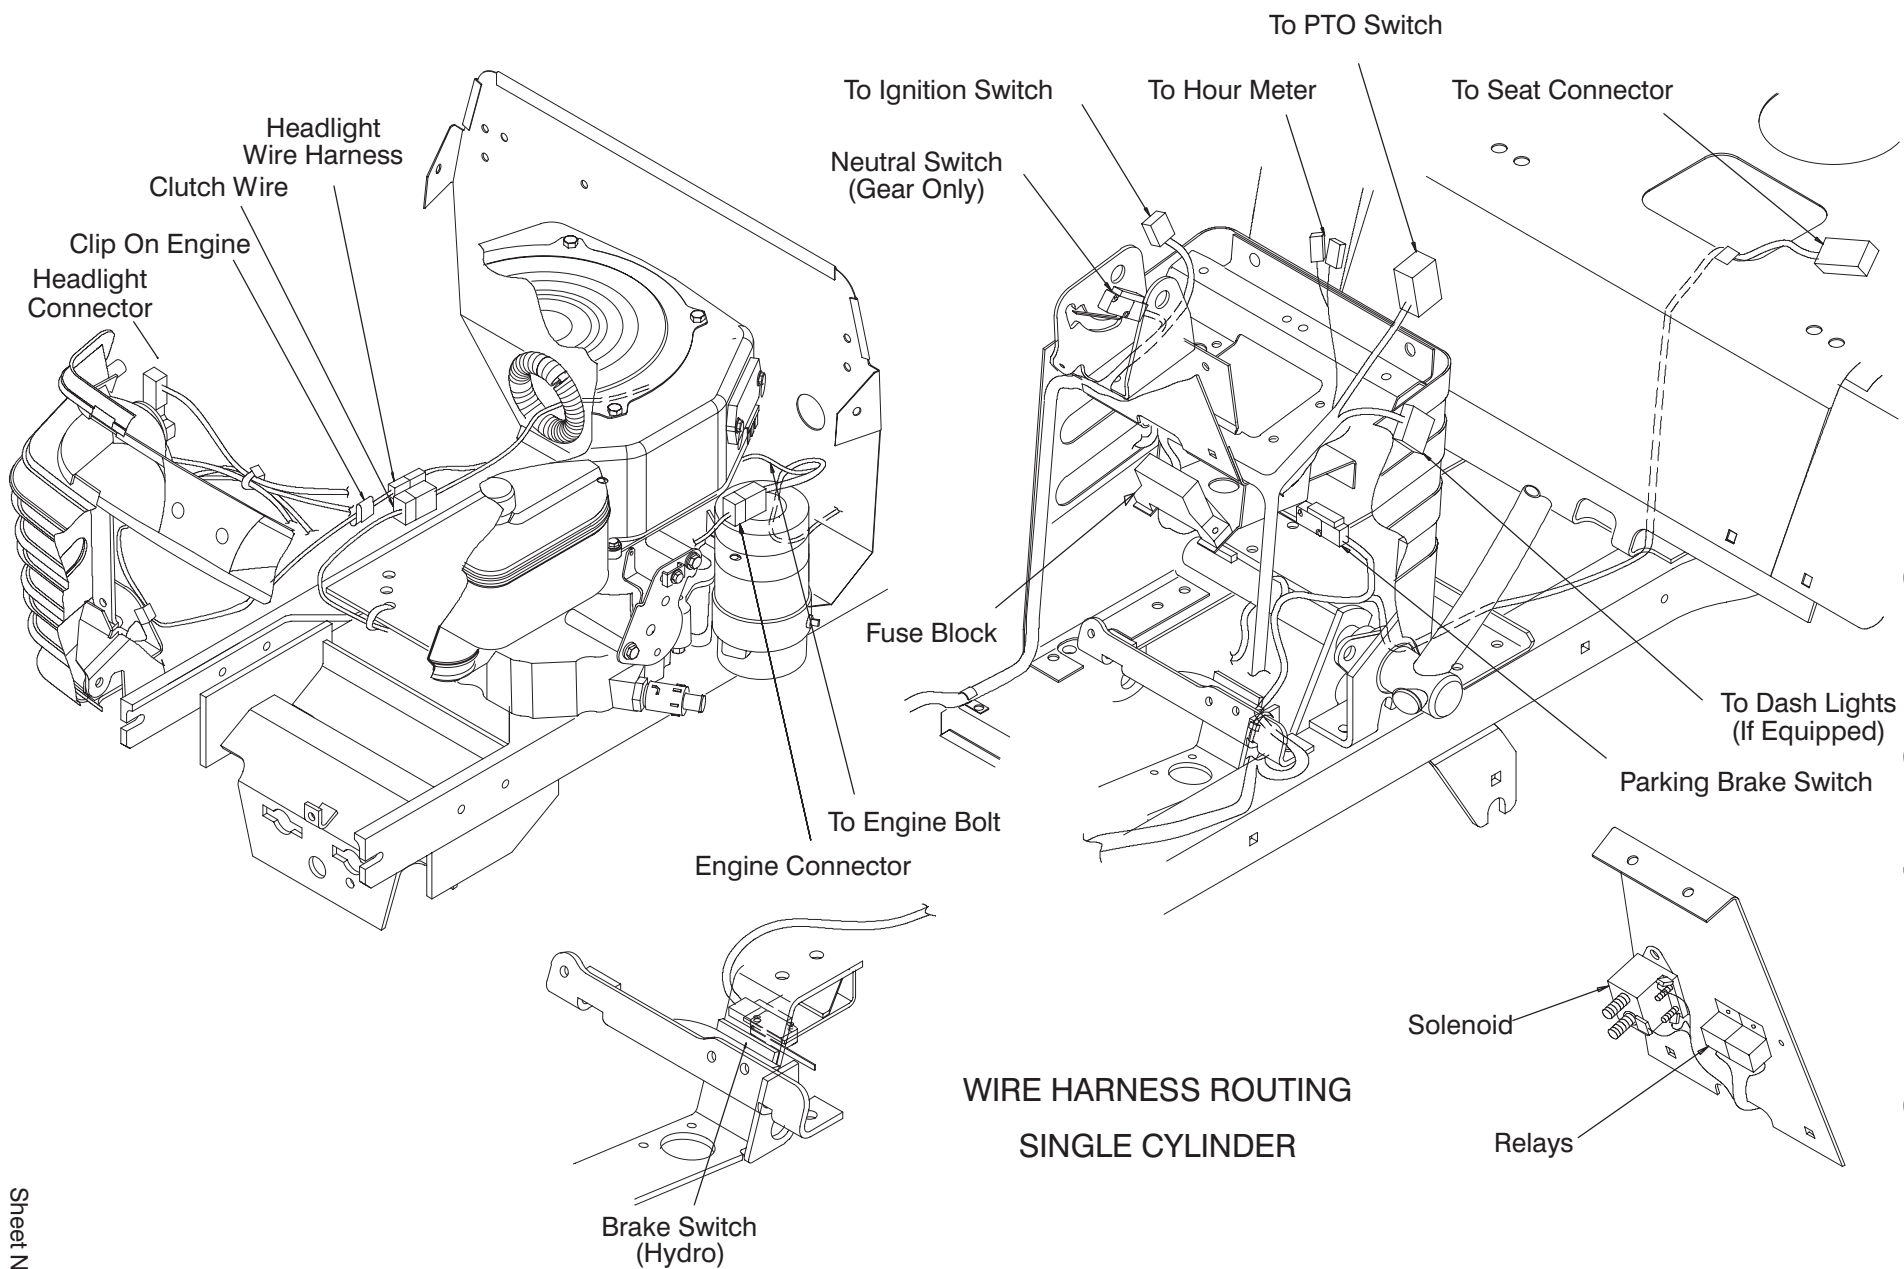

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1278	4	11	2	Washer—Shim
1278	5	17	4	Washer—Shim
2534	15	1	2	Clip—Spring
3624	13	13	1	Spring—Compression
5108	5	3:3	2	Valve—Tire Tubeless
5108	19	1:2	2	Valve—Tire Tubeless
5210	5	18	4	Washer—Shim
5618	5	19	1	Ring—Retaining
7896	3	4	1	Washer—Bowed
8130	13	14	1	Retainer—Spring
8830	14	16	1	Retainer—"J"
8870	13	25	1	Trunnion
104047	8	3:1	1	Bushing
104048	8	3:2	1	Assembly—Valve
105503	1	16	2	Bushing
105503	6	14	2	Bushing
105842	11	12	1	Battery
106269	13	43	1	Bearing—Flange
106288	7	16	2	Clamp
106557	6	12	2	Reflector
106948	11	6	1	Tray—Battery
107069	7	20	4	Nut—Retainer
108881	4	5	1	Nut—Hex
109189	4	7	1	Bearing—Flange
109500	5	3:6	2	Fitting—Grease
109547	11	8	2	Hook—Battery
109989	6	21	2	Spacer
110391	4	6	1	Bearing—Wheel
110513	5	3:2	4	Bearing—Wheel
111078	11	5	1	Cable—Battery Black
111383	4	8	1	Collar w/Set Screw
111418	4	3	1	Bushing
111418	15	11	1	Bushing
111419	4	1	1	Washer—Bearing
111419	15	5	1	Washer—Bearing
111646	4	9	1	Grip Ring
112168	13	16	1	Decal—Lift (Only On: 72046)
112843	9	8	1	Washer—PTO
114064	10	4	2	Bearing—Elec Clutch
114621	6	6	1	Decal—Noise (Only On: 72064)
114720	11	9	1	Tube—Battery Drain
115593	13	8	1	Knob
116397	2	31	2	Relay
116744	19	1:3	2	Tire
117127	5	3:4	2	Tire
117316	11	2	1	Rod—Battery Hold Down
120930	11	10:1	1	Fuse Holder
147665	16	17	2	Screw
609900	7	9	2	Nut—Speed
700806	6	18	2	Knob
700919	2	15	1	Nut
701178	6	10	2	Cap—Protector
702366	1	27	1	Clip—Wire Retainer
702366	7	2	1	Clip—Wire Retainer
702366	9	2	1	Clip—Wire Retainer
933141	13	7	1	Pin—Spirol
933148	13	12	1	Pin—Spirol
933270	5	5	2	Pin—Roll
936118	18	12	2	Snap Ring
9114466	9	9	1	Screw HH
9150026	5	8	4	Nut—Lock
9202154	17	19	2	Washer—Flat

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
9202324	5	16	2	Washer-10 GA
9267154	5	10	1	Screw
5-1336	19	5	2	Key
24-7924	12	19	2	Cover-Drive Shaft
28-2480	5	20	2	Washer-Flat
28-8080	11	15	1	Boot-Battery Terminal
38-1420	6	2	1	Switch-Seat
46-8093	1	31	2	Screw-TAP
46-8093	12	22	2	Screw-TAP
48-7730	3	20	2	Screw-HH
48-7730	9	13	4	Screw-HH
49-2040	18	15	3	Screw-HH
61-9780	5	1	2	Hubcap
62-7770	2	14	1	Key-Ignition
65-2920	16	16	1	Pad-Pedal
66-0120	2	10	2	Knob
76-1340	7	27	1	Decal-USA (Only On: 72046)
78-1221	19	1:1	2	Wheel
78-1940-01	5	12	1	Arm-Front Spindle RH
78-1950-01	5	6	1	Arm-Front Spindle LH
78-2140	13	41	1	Trunnion
78-2431	13	29	1	Rod
78-2491-03	14	15	1	Stop-PTO
78-2601-01	5	13	2	Spindle
78-2610	4	2	1	Gear-Sector
78-2920	5	7:2	1	Joint-Ball
78-2920	5	9:2	1	Joint-Ball
78-5801	5	7:3	1	Joint-Ball RH w/ Jam Nut
78-5811	5	9:3	1	Joint-Ball LH
78-6810-03	13	35	1	Plate
78-6820-03	11	7	1	Plate-Battery
78-7360	13	33	1	Rod
78-7390	13	28	1	Link
78-7960-01	5	4	1	Axle-Front
78-9150-03	4	4	1	Plate
78-9740	13	9	1	Decal-HOC Knob
79-0950-03	6	17	1	Bracket-Pivot RH
79-0970-03	6	15	1	Bracket-Pivot LH
79-1250	13	27	2	Pin
79-3401-03	13	24	1	Gage Shaft
79-3500	8	10	1	Reservoir
79-7530	15	9	1	Spring-Extension
83-2720	19	6	10	Bolt-Lug
83-6620	12	13	1	Decal-Instruction
88-3870	3	6:1	1	Cover-Steering Wheel
88-3950	6	1	1	Seat (Only On: 72046)
88-3970	1	28	1	Reflector-Lamp
88-3980	8	2	1	Gas Cap ASM
88-4320	1	29	1	Harness-Wire
88-4590	15	4	1	Bolt-Shoulder
88-9930	13	2	1	Switch-Micro
88-9932	16	18	1	Switch - Micro
92-3014	10	1	3	Nut & Spring Asm
92-3015	10	2	1	Rotor ASM w/Bearing (Only On: 72064)
92-3016	10	3	1	Field ASM w/Bearing
92-6511	6	1	1	Seat (Only On: 72064)
92-6656	1	23	1	Lens-Headlight
92-6674-03	14	7	1	Support-Fender
92-6680	2	8	1	Boot-Steering
92-6686	18	10	1	Pulley
92-6687	7	21	1	Mat-Foot RH
92-6688	7	18	1	Mat-Foot LH

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–6702	4	10	1	Shaft–Steering Lower
92–6705	2	26	1	Lens–Dash
92–6709	2	28	1	Light–Indicator (Only On: 72046)
92–6710	13	11	1	Grip–Handle
92–6711	13	10	1	Tip–Rod
92–6716	9	20	1	Gasket–Exhaust
92–6717	3	18	1	U–Joint–Steering
92–6720	2	18	1	Decal–Choke/PTO (Only On: 72046)
92–6721	2	13	1	Decal–Throttle/Ignition (Only On: 72046)
92–6725	7	23	1	Decal–HOC (Only On: 72046)
92–6726	18	3	1	Decal–Hydro Valve (Only On: 72046)
92–6727	7	5	1	Decal–Fuel Level
92–6728	1	12	1	Decal–Hood LH
92–6729	1	13	1	Decal–Hood RH
92–6730	7	3	1	Decal–Rear Fender
92–6732	2	28	1	Housing–Indicator Light (Only On: 72064)
92–6737	8	8	1	Hose
92–6742	18	14	1	Fan
92–6746–01	7	13	1	Footrest–LH
92–6747–01	7	19	1	Footrest–RH
92–6750	6	3	2	Spacer–Nylon
92–6754	8	5	1	Hose–Fuel Line
92–6769	18	2	2	U–Bolt
92–6776	3	13	1	Bracket–Detent
92–6777–03	3	1	1	Bracket–Support
92–6778–03	12	9	1	Support–Column
92–6780	9	18	2	Nut–HHF
92–6781	2	24	1	Control–Choke
92–6782	2	22	1	Control–Throttle
92–6785	2	17	1	Switch–Ignition
92–6794	13	4	1	Wedge–HOC Adjust
92–6795–01	7	28	1	Fender
92–6796	2	11	1	Cover–Slot RH
92–6797	2	19	1	Cover–Slot LH
92–6798	3	11	1	Cap–Rod
92–6855–03	13	32	1	Arm
92–6859–03	12	6	1	Support–Dash
92–6860	12	8	4	Nut–Retainer
92–6867–01	9	17	1	Shield–Muffler
92–6868–03	14	4	1	Bracket–Idler
92–6877	9	5	1	Valve–Oil Drain
92–6878–03	9	21	1	Baffle–Muffler
92–6883	5	7	1	Steering Link RH
92–6884	5	9	1	Steering Link LH
92–6885	9	7	1	Clutch–PTO (Only On: 72064)
92–6888	9	6	1	Pulley
92–6900	15	7	1	Arm–Idler
92–6902	17	18	1	Pad–Pedal Forward
92–6903	17	1	1	Pad–Pedal Reverse
92–6913–03	17	2	1	Pedal–Hydro
92–6914–03	1	32	1	Baffle–Hood Upper
92–6917–03	1	10	1	Bracket–Hinge RH
92–6918–03	1	9	1	Bracket–Hinge LH
92–6936–03	12	15	1	Cover–Side LH
92–6937–03	12	2	1	Cover–Side RH
92–6943	18	13	1	Spacer–Fan
92–6949	16	16	1	Tube–Brake
92–6954	18	9	1	Belt
92–6960	12	24	2	Latch–Hood
92–6962	17	7	1	Bushing
92–6964–03	14	6	1	Bracket–HOC
92–6965	13	6	1	Rod–HOC

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-6966	17	17	1	Spacer—Hydro Pedal
92-6968	16	5	1	Trunnion—Brake
92-6971	3	5	1	Lever—Tilt
92-6972-03	6	5	1	Support—Seat
92-6975	2	25	1	Decal—Dash Lens (Only On: 72064)
92-6977-03	13	17	1	Rod—Lift Lever
92-6978	13	38	1	Rod—HOC Indicator
92-6979	13	42	1	Plate—HOC Gage
92-6982	16	14	1	Spacer—Brake
92-6986	6	8	2	Bolt—Shoulder
92-6987	1	24	1	Decal—Horsehead
92-6988	16	8	1	Rod—Brake
92-6989	2	1	1	Cable—Battery Red
92-6990	11	1	1	Cable—Battery Red
92-6992-03	14	12	1	Bracket—Steering
92-6996-03	1	18	1	Hinge—Hood RH
92-6997-03	1	17	1	Hinge—Hood LH
92-6998	3	22	1	Spacer—Yoke
92-6999	3	15	1	Spacer—Yoke
92-7000-03	16	4	1	Bracket—Park Brake
92-7004-03	16	22	1	Support—Park Brake
92-7006	1	4	4	Nut
92-7007	13	39	1	Spring—Extension
92-7008	17	15	2	Rod End
92-7009	16	2	1	Grip—Parking Brake
92-7018	17	4	1	Rod
92-7020	7	25	4	Screw—TTH
92-7020	12	1	9	Screw—TTH
92-7048-03	1	21	1	Bracket—Hood Hinge RH
92-7049-03	1	20	1	Bracket—Hood Hinge LH
92-7054	6	7	2	Spring—Compression
92-7057-03	5	11	1	Pin—Front
92-7077	1	3	1	Inlet—Seal Air
92-7090	18	3	1	Decal—Bypass (Only On: 72064)
92-7092	7	23	1	Decal—HOC (Only On: 72064)
92-7101	15	8	1	Pulley—Flat
92-7102	15	13	2	Pulley—Idler
92-7148	1	6	2	Foam—Sidepanel
92-8747	14	14	2	Decal—Attach A Matic
92-8946	7	26	1	Decal—Danger (Only On: 72046)
92-9845	2	4	1	Solenoid
93-0302	12	12	1	Decal—Slope/Park Brake (Only On: 72046)
93-0354	31	9	1	Bolt
93-0355	31	14	1	Magnet
93-0356	31	7	1	Plug/Packing INC 5-6
93-0359	31	12	1	Washer—Seal
93-0360	31	3	1	Ring
93-0361	31	4	2	Seal
93-0362	31	11	1	Bolt
93-0363	31	8	11	Screw—TAP
93-0364	31	10	2	Screw—TAP
93-0365	33	10	1	Cylinder ASM INC 6-9
93-0365	34	13	1	Cylinder ASM INC 6-9
93-0370	33	3	1	Spring
93-0371	33	1	2	Washer
93-0371	34	7	1	Washer
93-0372	33	5	1	Shaft—Pump
93-0373	33	4	3	Ring—Snap
93-0373	34	6	2	Ring—Snap
93-0373	43	3	1	Ring—Snap
93-0374	33	2	1	Bearing—Ball
93-0374	34	8	1	Bearing—Ball

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93–0375	34	5	1	Housing
93–0376	34	11	1	Bearing–Thrust
93–0386	34	9	1	Shaft–Motor
93–0387	34	10	1	E Ring
93–0388	35	7	2	Thrust Metal
93–0389	35	13	1	Swash Plate INC 8–9
93–0392	35	11	1	Bearing
93–0393	35	12	1	Plate–Thrust
93–0394	35	10	1	Plate–Thrust
93–0395	35	1	1	Arm
93–0396	35	3	1	Spring
93–0397	35	2	1	Shaft–Bypass
93–0398	35	5	1	Block Set INC 6
93–0400	35	4	1	Packing
93–0401	36	1	1	Rod–Bypass
93–0402	36	2	1	Arm–Valve Release
93–0403	36	3	1	Pin–Roll
93–0404	37	2	1	Arm
93–0405	37	5	1	Shock Absorber
93–0406	37	9	1	Stud
93–0407	37	3	1	Bolt
93–0408	37	6	2	Washer
93–0409	37	4	1	Washer
93–0410	37	7	1	Ring
93–0410	39	8	1	Ring
93–0411	37	1	1	Pin–Roll
93–0411	39	1	2	Pin–Roll
93–0412	37	8	1	Pin–Cotter
93–0412	39	12	1	Pin–Cotter
93–0413	38	1	1	Fulcrum
93–0414	38	2	1	Shaft ASM INC 3–4
93–0417	38	5	1	Washer
93–0418	38	6	1	Packing
93–0418	39	3	2	Packing
93–0419	38	7	1	Packing
93–0420	38	8	1	Nut
93–0421	39	9	1	Bushing
93–0422	39	11	1	Return–Brake
93–0423	39	18	1	Rod ASM INC 13–17
93–0424	39	17	1	Adjuster
93–0425	39	15	1	Guide–Spring
93–0426	39	14	1	Holder–Spring
93–0427	39	16	1	Spring
93–0428	39	13	1	Rod–Adjuster
93–0429	39	19	1	Arm–Brake
93–0430	39	10	1	Shaft–Brake
93–0431	39	5	1	Rod–Brake
93–0432	39	4	1	Arm–Brake A
93–0433	39	2	1	Arm–Brake B
93–0434	39	7	1	Pin–Snap
93–0435	39	6	2	Washer
93–0443	40	3	1	Shaft–Pinion
93–0444	40	1	2	Washer–Thrust
93–0445	40	4	1	Gear–Final
93–0446	41	1	1	Bearing
93–0447	41	2	1	Shaft–Final Pinion
93–0448	41	3	1	Gear–Final Shaft
93–0449	41	4	1	Washer
93–0450	41	5	1	Bushing
93–0451	42	1	2	Seal
93–0452	42	2	1	Shaft–Axle Right
93–0453	42		1	Shaft–Axle Left

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93-0454	42	3	2	Bushing
93-0455	42	4	2	Washer—Thrust
93-0456	42	5	2	Ring
93-0457	43	1	3	Bolt w/Washer
93-0458	43	2	1	Band—Brake Interlock
93-0460	43	4	1	Drum—Brake
93-0461	32	1	2	Holder—Bypass
93-0465	32	5	2	Packing
93-0466	32	6	2	Ring—Back Up
93-0471	32	11	2	Pin—Knock
93-0472	32	12	2	Bushing
93-0474	32	14	1	Plug
93-0475	32	15	1	Packing
93-0476	32	16	1	Connector
93-0478	32	18	1	Filter
93-0479	32	19	3	Bolt
93-0480	32	20	1	Plug
93-0481	32	17	1	Packing
93-0481	32	21	1	Packing
93-0482	32	22	1	Valve ASM A1 INC 1-10
93-0483	32	23	1	Valve ASM A2
93-0484	32	13	1	Case INC 11-12 & 20-23
93-0486-03	12	14	1	Hoodstand w/Decals (Only On: 72046)
93-0488-03	12	14	1	Hoodstand w/Decals (Only On: 72064)
93-0489-01	7	24	1	Plate—Footrest w/Decal (Only On: 72046)
93-0490	1	2	1	Hood
93-0491	1	7	1	Sidepanel—LH Hood
93-0492	1	8	1	Sidepanel—RH Hood
93-0494	1	22	1	Grille & Screen ASM
93-0520-03	16	21	1	Bracket—Switch
93-0523-03	13	44	1	Bracket—Pivot Linkage
93-0540	16	9	1	Spring—Extension
93-0546-03	18	8	1	Strap—Torque
93-1131	12	23	1	Trim—Seal
93-1144	8	6	2	Spacer—Fuel Tank
93-1146	3	3	1	Bushing—Steering
93-1148-03	3	12	1	Column
93-1357	3	14	1	Spring—Extension
93-3167	16	1	1	Rod—Park Brake
93-3240	16	20	1	Seal—Plunger
93-3658	15	12	2	Spacer
93-3659-03	19	2	2	Hub—Wheel
93-6668	11	13	1	Decal—Instruct (Only On: 72064)
93-7255	2	13	1	Decal—Dash (Only On: 72064)
93-7256	2	18	1	Decal—Dash (Only On: 72064)
93-7276	11	14	1	Decal—Danger (Only On: 72064)
93-7313	12	12	1	Decal—Danger (Only On: 72064)
93-7314	7	26	1	Decal—Danger (Only On: 72064)
93-7323	13	16	1	Decal—Lift (Only On: 72064)
93-7324	14	13	2	Decal—Installation (Only On: 72064)
93-9275	8	15	1	Guard—Fan (Only On: 72064)
93-9800	5	3	2	ASM—Wheel & Tire
93-9801	5	3:1	2	ASM—Wheel w/Zerk
93-9998	2	16	1	Switch—PTO
94-1248	2	25	1	Decal—Dash Lens (Only On: 72046)
94-1588	17	8	1	Rod—Bypass
94-1712-03	12	4	1	Panel—Support
94-1717-03	7	6	1	Panel—Rear
94-1720	16	16	1	Lever—Brake
94-1722-03	16	10	1	Lever—Brake
94-1749-03	12	18	1	Firewall
94-1894	2	7	1	Dash—Hydro

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94–1980	1	1	2	Foam–Hood
94–2514	9	7	1	Clutch–Electric PTO (Only On: 72046)
94–2668	14	10	1	Frame Wa
94–2862	11	10	1	Harness–Wire
94–2869	6	20	2	Washer–Flat
94–2869	7	12	4	Washer–Flat
94–2874	3	9	1	Shaft–Steer Upper
94–2966	2	9	1	Clip–Boot
94–2970	9	3	1	Decal–Toro Power Plus 15
94–2973	12	16	2	Decal–265–H
94–3500	3	6	1	Steering Wheel–14” (Only On: 72046)
94–3501	3	6	1	Wheel–Steering (Only On: 72064)
94–3552–03	13	34	1	Lift Arm
94–3761–03	13	15	1	Lift Lever Wa
94–4205	18	4	1	Transaxle–Hydro
94–4206	31	1	1	Upper Case ASM INC 2–6
94–4207	31	13	1	Case–Lower
94–4208	2	27	1	Hourmeter
94–4233–03	16	15	1	Pedal–Brake
94–4243–01	7	24	1	Plate–Footrest w/Decal (Only On: 72064)
94–4909	6	1:1	1	Trim–Seat (Only On: 72064)
94–4930	10	2	1	Rotor & Armature ASM (Only On: 72046)
94–4944	13	30	1	Shaft
94–4945	17	12	1	Spacer
94–6875	17	11	1	Washer
94–6928	8	3	1	Tank–Gas
94–6961	2	29	3	Screw
95–1663	9	19	1	Muffler
95–3003	13	3	2	Screw
95–3041	9	4	1	Engine–Kohler (Only On: 72046)
95–3042	9	4	1	Engine–Kohler (Only On: 72064)
95–7871	40	2	1	Kit–Gear Asm Before Ser Nos 15132
95–7872	40	2	1	Kit–Gear Asm After Ser. Nos 15131
237–141	2	6	1	Grommet
2412–98	8	4	2	Clamp–Hose
2412–129	8	9	2	Clamp–Hose
256–90	13	31	2	Bushing–Flange
256–90	16	12	2	Bushing–Flange
302–5	5	14	2	Fitting–Grease
302–11	5	15	1	Fitting–Grease
302–26	17	16	1	Fitting–Grease
321–4	2	5	2	Screw–HH
321–4	3	2	4	Screw–HH
321–4	7	8	2	Screw–HH
321–4	8	7	2	Screw–HH
321–4	11	3	2	Screw–HH
321–4	12	10	4	Screw–HH
322–3	1	15	2	Screw–HH
322–3	3	17	1	Screw–HH
322–5	6	4	4	Screw–HH
322–5	14	8	1	Screw–HH
322–5	15	14	2	Screw–HH
322–6	18	1	1	Screw–HH
322–12	18	7	1	Screw HH
322–17	3	23	1	Screw–HH
323–7	17	13	1	Screw–HH
323–10	15	2	3	Screw–HH
323–10	17	10	1	Screw–HH
3217–9	3	7	1	Nut–HH
3218–3	19	4	4	Nut–HJ
3220–3	17	3	2	Nut–Hex Jam
3229–11	12	5	4	Bolt–CARR

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3230-1	1	26	2	Bolt-CARR
3230-2	6	19	4	Screw-CARR
3230-2	14	3	2	Screw-CARR
3230-20	7	15	4	Bolt-CARR
3230-23	7	22	3	Bolt-CARR
3230-23	7	29	1	Bolt-CARR
3230-31	7	4	6	Screw-CARR
3231-4	4	12	1	Bolt-CARR
3231-25	9	14	2	Screw-CARR
3231-25	13	21	2	Screw-CARR
3243-5	19	3	4	Screw-Set
3245-32	4	8:1	1	Screw-Set
3245-32	18	11	1	Screw-Set
3253-4	3	19	2	Washer-Lock
3253-4	9	12	4	Washer-Lock
3253-5	17	14	1	Washer-Lock
3253-7	3	8	1	Washer-Lock
3256-22	7	7	2	Washer-Flat
3256-22	8	12	4	Washer-Flat
3256-23	3	16	2	Washer-Flat
3256-23	7	10	2	Washer-Flat
3256-23	14	2	2	Washer-Flat
3256-23	15	15	2	Washer-Flat
3256-23	16	7	1	Washer-Flat
3256-23	18	5	5	Washer-Flat
3256-24	9	15	2	Washer-Flat
3256-24	13	22	2	Washer-Flat
3256-24	15	6	7	Washer-Flat
3256-24	16	13	1	Washer-Flat
3256-24	17	6	5	Washer-Flat
3256-24	17	6	5	Washer-Flat (Only On: 72046)
3256-26	13	20	6	Washer-Flat
3256-28	3	10	1	Washer-Flat
3256-49	6	13	4	Washer-Flat
3272-2	17	9	1	Pin-Cotter
3272-6	13	18	1	Pin-Cotter
3272-6	16	6	2	Pin-Cotter
3272-17	5	2	2	Pin-Cotter
3290-282	6	11	4	Pop Rivet
3290-354	13	1	1	Nut-Speed
3290-354	16	19	1	Nut-Speed
3290-479	7	17	14	Fastener-Panel
3296-8	3	24	4	Nut-Lock
3296-8	12	7	4	Nut-Lock
3296-23	13	26	1	Nut-Lock
3296-29	1	19	4	Nut-Lock
3296-29	3	21	2	Nut-Lock
3296-29	6	16	6	Nut-Lock
3296-29	7	11	14	Nut-Lock
3296-29	14	1	2	Nut-Lock
3296-29	14	9	1	Nut-Lock
3296-29	15	3	3	Nut-Lock
3296-29	18	6	6	Nut-Lock
3296-39	9	16	2	Nut-Lock
3296-39	13	23	2	Nut-Lock
3296-39	17	5	1	Nut-Lock
3296-42	2	3	2	Nut-Lock
3296-42	8	13	2	Nut-Lock
3296-42	12	11	3	Nut-Lock
3296-58	6	9	2	Nut-Flange
3296-59	15	10	4	Nut-Lock
32103-22	11	4	4	Nut-Wing

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
32103-22	12	21	4	Nut-Wing
32104-96	8	16	2	Screw-HHST
32105-15	1	5	12	Screw-HH
32120-47	13	19	5	Ring-Retaining
32121-25	13	40	1	Pin-Roll
32121-69	16	11	1	Pin-Spring
32121-103	13	37	1	Pin-Spring
32128-10	1	14	8	Nut-Lock HHF
32144-4	12	20	2	Screw-TAP
32144-4	13	5	1	Screw-TAP
32144-8	2	30	2	Screw-PPH
32144-8	12	26	2	Screw-PPH
32144-14	1	11	2	Screw-HWH
32144-14	9	1	3	Screw-HWH
32144-14	11	11	1	Screw-HWH
32144-14	12	25	2	Screw-HWH
32144-14	13	36	2	Screw-HWH
32144-14	13	45	2	Screw-HWH
32144-14	14	5	6	Screw-HWH
32144-14	16	3	4	Screw-HWH
32144-14	8	14	2	Screw-HWH (Only On: 72064)
32144-32	1	33	2	Screw-Plastic
32144-32	2	23	4	Screw-Plastic
32149-2	2	2	2	Nut-Hex Lock
32149-2	12	3	2	Nut-Hex Lock

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]