



Lawn & Garden Tractor

Model No. 72102 — 7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Hood and Grill	1	Blower Housing & Baffles	27
Dash	2	Starting System	28
Steering Wheel and Tilt	3	Fuel System	29
Lower Steering	4	Engine Controls	30
Front Axle	5	Air Intake / Filtration	31
Seat	6	Exhaust	32
Fender and Footrest	7	Transaxle Case	33
Twin Cylinder Engine, Muffler, and P.T.O.	8	Center Case	34
Clutch 92-6885	9	Pump Shaft	35
Battery	10	Motor Shaft	36
Hoodstand and Firewall	11	Range Shift	37
Fuel Tank and Hydro Reservoir	12	Bypass Return	38
Lift Lever and Height of Cut	13	Lever Damper	39
Frame	14	N-Centering	40
Hydro Drive Components	15	Brake Interlock	41
Hydro Brake	16	Differential Gear	42
Hydro Control	17	Final Pinion	43
Hydro Transaxle	18	Axle Shaft	44
Cruise Control	19	Brake	45
Power Lift	20	Pump Assembly	46
Rear Wheel	21	Electric Schematic Twin Cyl. Hydro Drive, Cruise w/Lift	47
Crankshaft	22	Wire Harness Routing — Twin Cylinder Engine ..	48
Crankcase	23	Wire Harness Routing — Hydro/wCruise	49
Oil Pan / Lubrication	24		
Head / Valve / Breather	25		
Ignition / Electrical	26		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
38" Side Discharge Mower	78216	48" Vacuum Bagger	79203
38" Recycler Mower	78226	48" Snow Blade	79252
42" Side Discharge Mower	78231	42" Snow Thrower	79263
48" Side Discharge Mower	78260	36" Tiller	79271
52" Side Discharge Mower	78280	Hour Meter Kit	92-6898
52" Recycler Mower	78285	Indicator Light	92-6897
38" Twin Bagger	79202		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y*. *X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

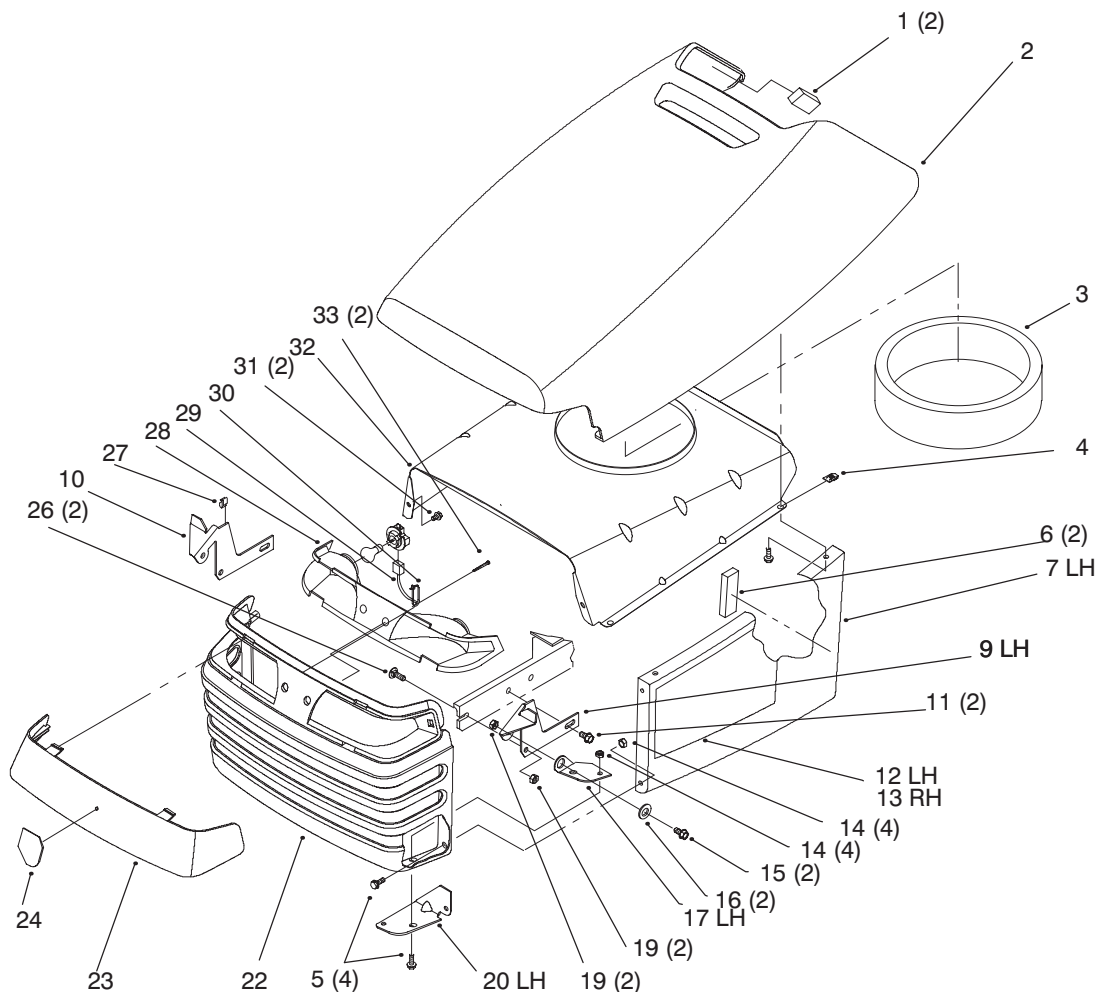

Hood and Grill

Ref. No.	Part No.	Qty.	Description
1	94-1980	2	Foam-Hood
2	93-0490	1	Hood
3	92-7076	1	Inlet-Seal Air
4	92-7006	4	Nut
5	32105-15	12	Screw-HH
6	92-7148	2	Foam-Sidepanel
7	93-0491	1	Sidepanel-LH Hood
8	93-0492	1	Sidepanel-RH Hood
9	92-6918-03	1	Bracket-Hinge LH
10	92-6917-03	1	Bracket-Hinge RH
11	32144-14	2	Screw-HWH
12	92-6728	1	Decal-Hood LH
13	92-6729	1	Decal-Hood RH
14	32128-10	8	Nut-Lock HHF
15	322-3	2	Screw-HH
16	105503	2	Bushing
17	92-6997-03	1	Hinge-Hood LH
18	92-6996-03	1	Hinge-Hood RH
19	3296-29	4	Nut-Lock
20	92-7049-03	1	Bracket-Hood Hinge LH
21	92-7048-03	1	Bracket-Hood Hinge RH
22	93-0494	1	Grille & Screen ASM
23	92-6656	1	Lens-Headlight
24	92-6987	1	Decal-Horsehead

Ref. No.	Part No.	Qty.	Description
26	3230-1	2	Bolt-CARR
27	702366	1	Clip-Wire Retainer
28	88-3970	1	Reflector-Lamp
29	88-4320	1	Harness-Wire
31	46-8093	2	Screw-TAP
32	92-6914-03	1	Baffle-Hood Upper
33	32144-32	2	Screw-Plastic



Ref. No.	Part No.	Qty.	Description




Ref. No.	Part No.	Qty.	Description



Ref. No.	Part No.	Qty.	Description
1	111419	1	Washer-Bearing
2	78-2610	1	Gear-Sector
3	111418	1	Bushing
4	78-9150-03	1	Plate
5	108881	1	Nut-Hex
6	110391	1	Bearing-Wheel
7	109189	1	Bearing-Flange
8	111383	1	Collar w/Set Screw
8:1	3245-32	1	Screw-Set
9	111646	1	Grip Ring
10	92-6702	1	Shaft-Steering Lower
11	1278	2	Washer-Shim
12	3231-4	1	Bolt-CARR

Ref. No.	Part No.	Qty.	Description

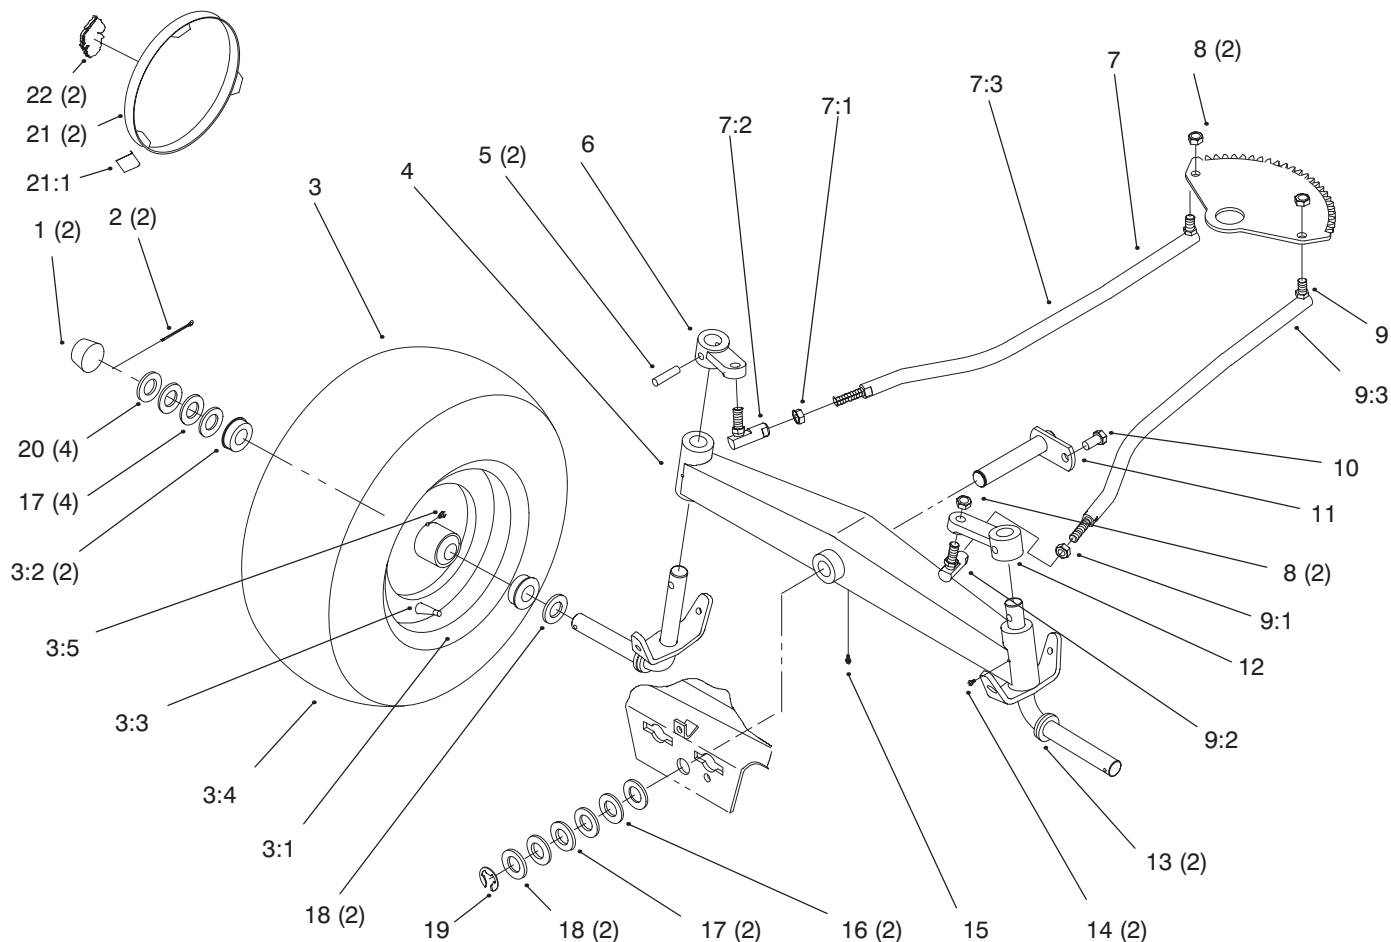

Front Axle


Ref. No.	Part No.	Qty.	Description
1	61-9780	2	Hubcap
2	3272-17	2	Pin-Cotter
☆3		2	ASM-Wheel & Tire
3:1	93-9801	2	ASM-Wheel w/Zerk
3:2	110513	4	Bearing-Wheel
3:3	5108	2	Valve-Tire Tubeless
3:4	117127	2	Tire
3:5	109500	2	Fitting-Grease
4	78-7960-01	1	Axle-Front
5	933270	2	Pin-Roll
6	78-1950-01	1	Arm-Front Spindle LH
7	92-6883	1	Steering Link RH
☆7:1		1	Nut-Hex Jam
7:2	78-2920	1	Joint-Ball
7:3	78-5801	1	Joint-Ball RH w/ Jam Nut
8	9150026	4	Nut-Lock
9	92-6884	1	Steering Link LH
☆9:1		1	Nut-Hex Jam
9:2	78-2920	1	Joint-Ball
9:3	78-5811	1	Joint-Ball LH
10	9267154	1	Screw
11	92-7057-03	1	Pin-Front
12	78-1940-01	1	Arm-Front Spindle RH
13	78-2601-01	2	Spindle
14	302-5	2	Fitting-Grease

Ref. No.	Part No.	Qty.	Description
15	302-11	1	Fitting-Grease
16	9202324	2	Washer-10 GA
17	1278	4	Washer-Shim
18	5210	4	Washer-Shim
19	5618	1	Ring-Retaining
20	28-2480	2	Washer-Flat
21	94-3717	2	ASM-Hubcap
22	94-3730	2	Hubcap-8"
	94-3736	2	Horsehead Logo

☆ Not serviced



Ref. No.	Part No.	Qty.	Description

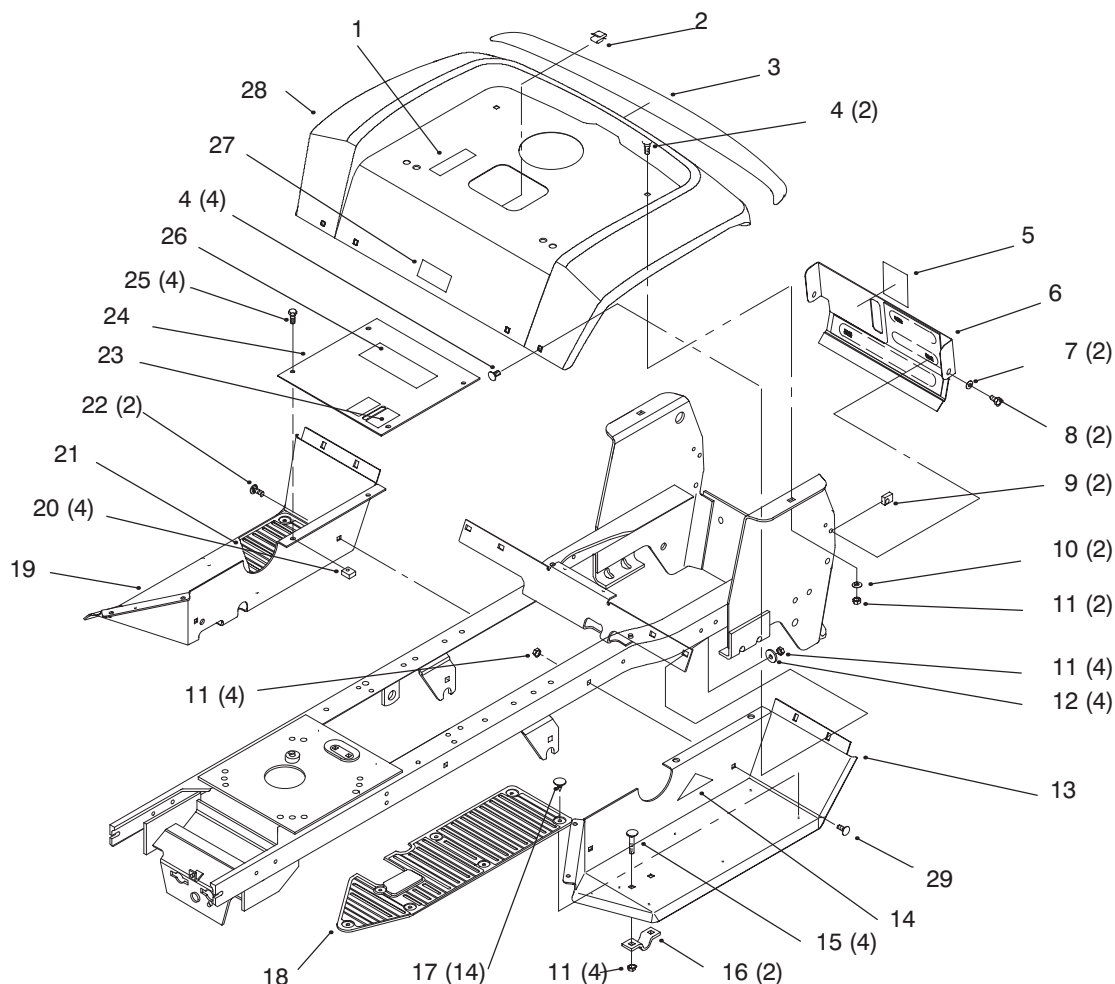

Fender and Footrest

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	702366	1	Clip-Wire Retainer	28	92-6795-01	1	Fender
3	92-6730	1	Decal-Rear Fender	29	3230-23	1	Bolt-CARR
4	3230-31	6	Screw-CARR				
5	92-6727	1	Decal-Fuel Level				
6	94-1717-03	1	Panel-Rear				
7	3256-22	2	Washer-Flat				
8	321-4	2	Screw-HH				
9	609900	2	Nut-Speed				
10	3256-23	2	Washer-Flat				
11	3296-29	14	Nut-Lock				
12	94-2869	4	Washer-Flat				
13	94-1711-01	1	Footrest-LH				
15	3230-20	4	Bolt-CARR				
16	106288	2	Clamp				
17	3290-479	14	Fastener-Panel				
18	92-6688	1	Mat-Foot LH				
19	92-6747-01	1	Footrest-RH				
20	107069	4	Nut-Speed				
21	92-6687	1	Mat-Foot RH				
22	3230-23	3	Bolt-CARR				
23	92-6725	1	Decal-HOC				
24	93-0489-01	1	Plate-Footrest w/Decal				
25	92-7020	4	Screw-TTH				
26	92-8946	1	Decal-Danger				
27	76-1340	1	Decal-USA				



Ref. No.	Part No.	Qty.	Description
1	94-6950-03	1	Muffler Baffle ASM
2	702366	1	Clip-Wire Retainer
3	32144-14	3	Screw-HWH
4	94-9409	1	Muffler
5	92-6780	4	Nut-HHF
6	93-0350	2	Gasket-Exhaust
7	94-3514	1	Engine-Kohler 19
8	94-3389	1	Decal-Toro Power Plus 19
9	92-6877	1	Valve-Oil Drain
10	32144-118	2	Screw-PPH
11	3296-29	4	Nut-Lock
12	92-6888	1	Pulley
13	94-2514	1	Clutch-Electric PTO
14	112843	1	Washer-PTO
15	9114466	1	Screw HH
16	322-9	4	Screw-HH
17	3231-25	2	Screw-CARR
18	92-6867-01	1	Shield-Muffler
19	3256-24	2	Washer-Flat
20	3296-39	2	Nut-Lock

8



Clutch 92-6885


Ref. No.	Part No.	Qty.	Description
1	92-3014	3	Nut & Spring ASM
2	94-4930	1	Rotor & Armature ASM
3	92-3016	1	Field ASM w/Bearing
4	114064	2	Bearing-Elec Clutch

Ref. No.	Part No.	Qty.	Description



Ref. No.	Part No.	Qty.	Description
1	92-6989	1	Cable-Battery Red
2	117316	1	Rod-Battery Hold Down
3	321-4	2	Screw-HH
4	32103-22	4	Nut-Wing
5	93-0324	1	Cable-Battery Black
6	106948	1	Tray-Battery
7	78-6820-03	1	Plate-Battery
8	109547	2	Hook-Battery
9	114720	1	Tube-Battery Drain
10	94-1735	1	Harness-Wire
10:1	120930	1	Fuse Holder
11	32144-14	1	Screw-HWH
12	115877	1	Battery
15	109553	1	Boot-Battery Cable
16	93-3190	1	Boot-Terminal Insulator

10

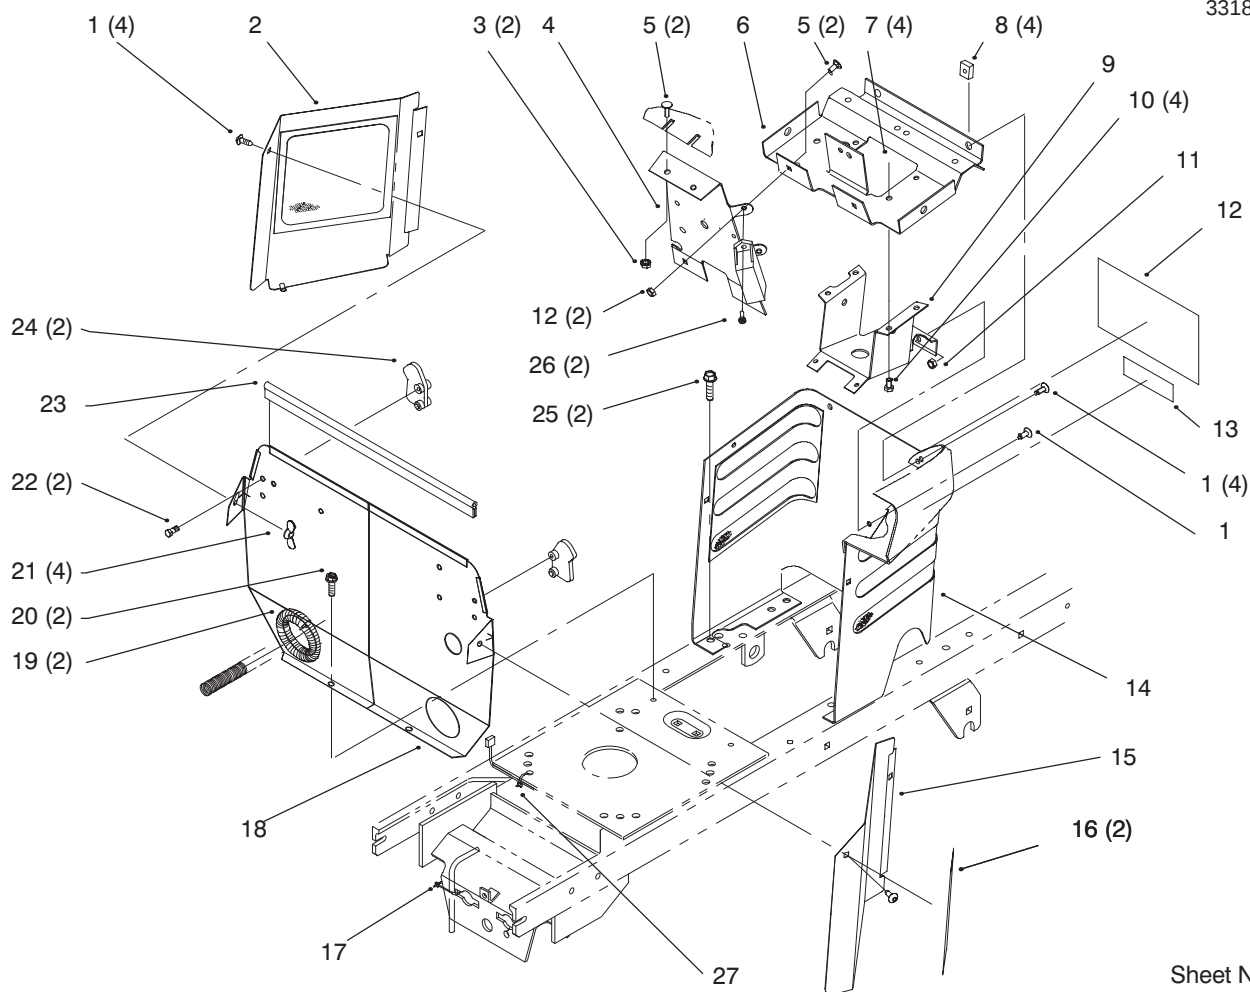


Sheet No.: 10

Hoodstand and Firewall

Ref. No.	Part No.	Qty.	Description
1	92-7020	9	Screw-TTH
2	92-6937-03	1	Cover-Side RH
3	32149-2	2	Nut-Hex Lock
4	94-1712-03	1	Panel-Support
5	3229-11	4	Bolt-CARR
6	92-6859-03	1	Support-Dash
7	3296-8	4	Nut-Lock
8	92-6860	4	Nut-Retainer
9	92-6778-03	1	Support-Column
10	321-4	4	Screw-HH
11	3296-42	3	Nut-Lock
12	93-0302	1	Decal-Slope/Park Brake
13	83-6620	1	Decal-Instruction
14	93-0486-03	1	Hoodstand w/Decals
15	92-6936-03	1	Cover-Side LH
16	94-3387	2	Decal-269-H
18	94-1749-03	1	Firewall
19	24-7924	2	Cover-Drive Shaft
20	32144-4	2	Screw-TAP
21	32103-22	4	Nut-Wing
22	46-8093	2	Screw-TAP
23	93-1131	1	Trim-Seal
24	92-6960	2	Latch-Hood
25	32144-14	2	Screw-HWH

Ref. No.	Part No.	Qty.	Description
26	32144-8	2	Screw-PPH
27	250-7	1	Tie-Cable

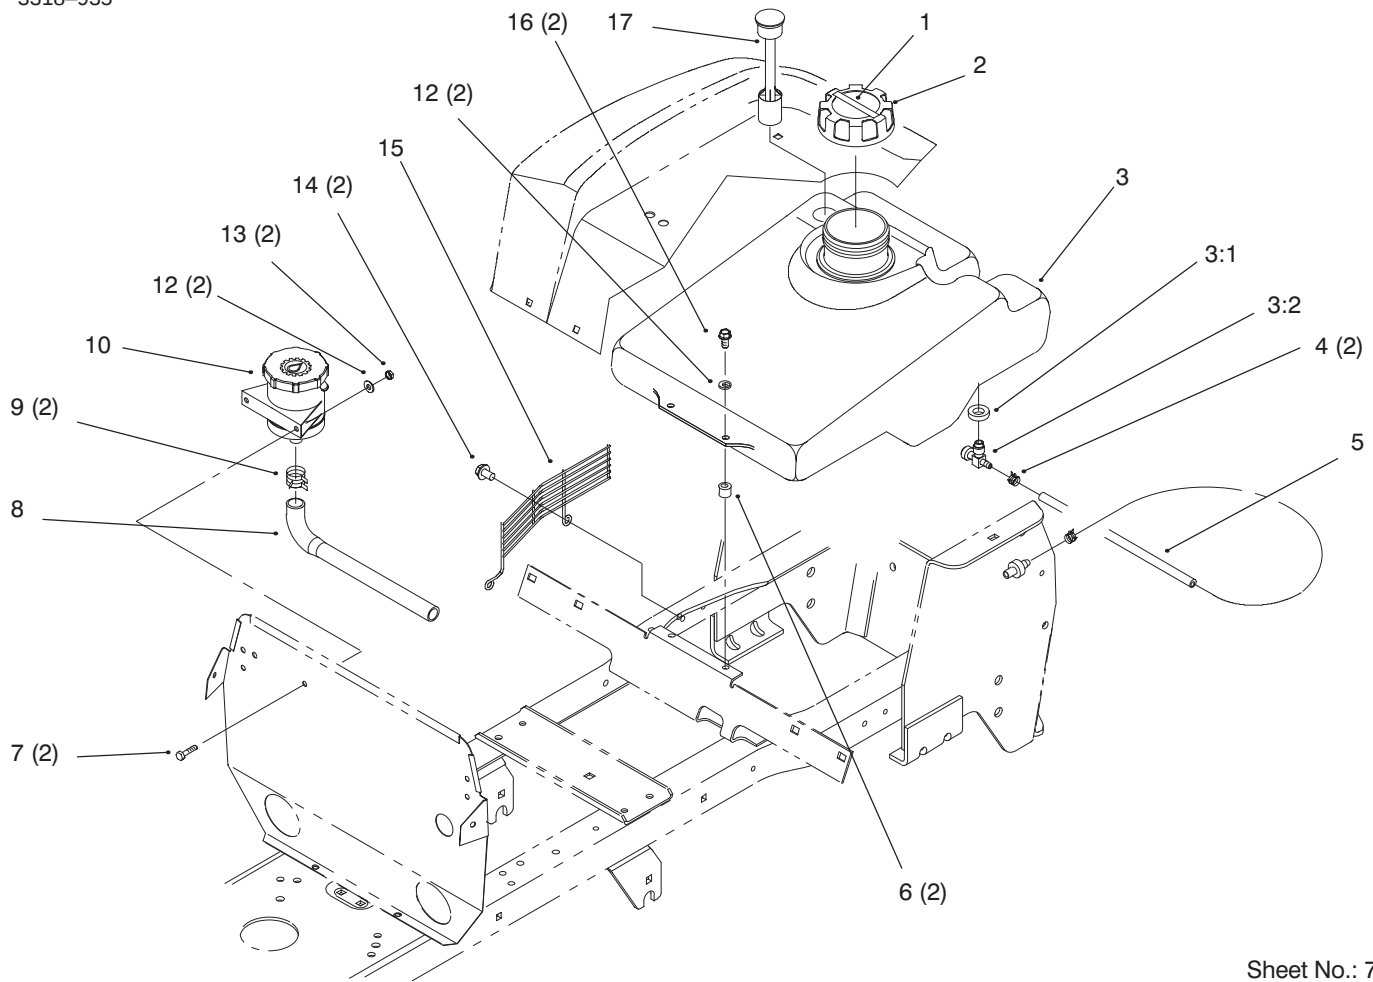


Sheet No.: 7

Fuel Tank and Hydro Reservoir

Ref. No.	Part No.	Qty.	Description
2	88-3980	1	Gas Cap ASM
3	94-6927	1	Tank-Gas
4	2412-98	2	Clamp-Hose
5	93-1627	1	Hose-Fuel Line
6	93-1144	2	Spacer-Fuel Tank
7	321-4	2	Screw-HH
8	92-6737	1	Hose
9	2412-129	2	Clamp-Hose
10	79-3500	1	Reservoir
12	3256-22	4	Washer-Flat
13	3296-42	2	Nut-Lock
16	32104-96	2	Screw-HHST
17	94-1716	1	Fuel Level Sensor ASM
17:1	94-3347	1	Seal-Fuel Sensor
17:2	94-3348	1	Sensor-Fuel Level

Ref. No.	Part No.	Qty.	Description

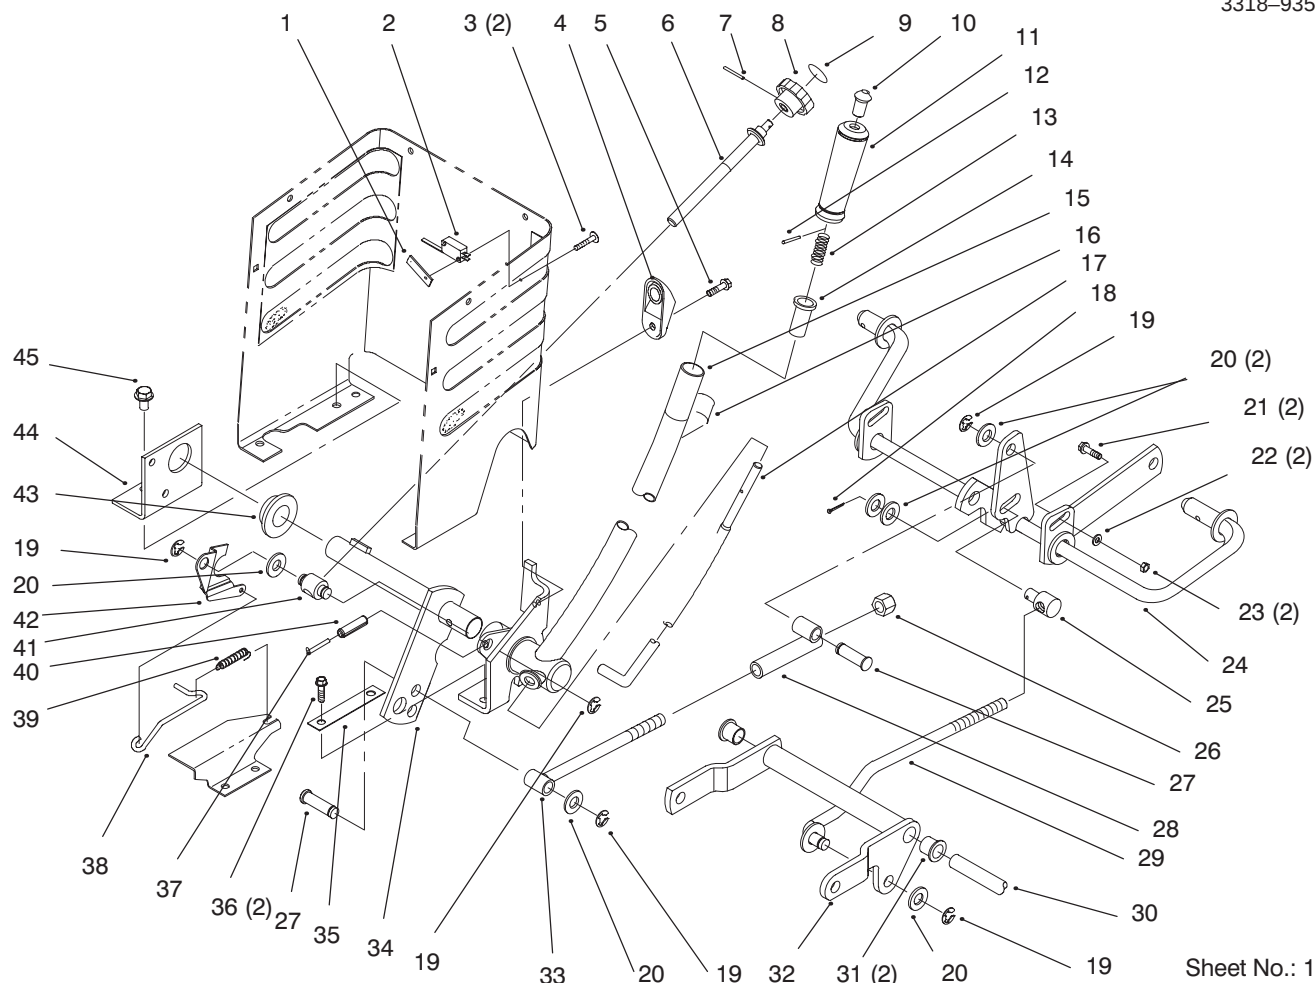

Sheet No.: 11

Lift Lever and Height of Cut

Ref. No.	Part No.	Qty.	Description
1	3290-354	1	Nut-Speed
2	88-9930	1	Switch-Micro
3	95-3003	2	Screw
4	92-6794	1	Wedge-HOC Adjust
5	32144-4	1	Screw-TAP
6	92-6965	1	Rod-HOC
7	933141	1	Pin-Spirol
8	115593	1	Knob
9	78-9740	1	Decal-HOC Knob
18	3272-6	1	Pin-Cotter
19	32120-47	5	Ring-Retaining
20	3256-26	6	Washer-Flt
21	3231-25	2	Screw-CARR
22	3256-24	2	Washer-Flat
23	3296-39	2	Nut-Lock
24	79-3401-03	1	Gage Shaft
25	8870	1	Trunnion
26	3296-23	1	Nut-Lock
27	79-1250	2	Pin
28	78-7390	1	Link
29	78-2431	1	Rod
30	94-4944	1	Shaft
31	256-90	2	Bushing-Flange
32	92-6855-03	1	Arm
33	78-7360	1	Rod
34	94-3552-03	1	Lift Arm

Ref. No.	Part No.	Qty.	Description
35	78-6810-03	1	Plate
36	32144-14	2	Screw-HWH
37	32121-103	1	Pin-Spring
38	92-6978	1	Rod-HOC Indicator
39	92-7007	1	Spring-Extension
40	32121-25	1	Pin-Roll
41	78-2140	1	Trunnion
42	92-6979	1	Plate-HOC Gage
43	106269	1	Bearing-Flange
44	93-0523-03	1	Bracket-Pivot Linkage
45	32144-14	2	Screw-HWH




Ref. No.	Part No.	Qty.	Description
1	3296-29	2	Nut-Lock
2	3256-23	2	Washer-Flat
3	3230-2	2	Screw-CARR
4	92-6868-03	1	Bracket-Idler
5	32144-14	6	Screw-HWH
6	92-6964-03	1	Bracket-HOC
7	92-6674-03	1	Support-Fender
8	322-5	1	Screw-HH
9	3296-29	1	Nut-Lock
10	94-2668	1	Frame Wa
12	92-6992-03	1	Bracket-Steering
14	92-8747	2	Decal-Attach A Matic
15	78-2491-03	1	Stop-PTO
16	8830	1	Retainer-"J"

Ref. No.	Part No.	Qty.	Description



15


Ref. No.	Part No.	Qty.	Description

 

Hydro Brake

Ref. No.	Part No.	Qty.	Description
1	93-3167	1	Rod-Park Brake
2	92-7009	1	Grip-Parking Brake
3	32144-14	4	Screw-HWH
4	92-7000-03	1	Bracket-Park Brake
5	92-6968	1	Trunnion-Brake
6	3272-6	2	Pin-Cotter
7	3256-23	1	Washer-Flat
8	92-6988	1	Rod-Brake
9	93-0540	1	Spring-Extension
10	94-1722-03	1	Lever-Brake
11	32121-69	1	Pin-Spring
12	256-90	2	Bushing-Flange
13	3256-24	1	Washer-Flat
14	92-6982	1	Spacer-Brake
15	94-4233-03	1	Pedal-Brake
16	65-2920	1	Pad-Pedal
17	93-0539	2	Screw-PPH
18	88-9932	2	Switch - Micro
19	3290-354	1	Nut-Speed
20	93-3240	2	Seal-Plunger
21	93-0520-03	1	Bracket-Switch
22	92-7004-03	1	Support-Park Brake


Ref. No.	Part No.	Qty.	Description

 

Ref. No.	Part No.	Qty.	Description
1	92-6903	1	Pad-Pedal Reverse
2	92-6913-03	1	Pedal-Hydro
3	3220-3	2	Nut-Hex Jam
4	92-7018	1	Rod
5	3296-39	1	Nut-Lock
6	3256-24	4	Washer-Flat
7	92-6962	1	Bushing
8	94-1588	1	Rod-Bypass
9	3272-2	1	Pin-Cotter
10	323-10	1	Screw-HH
11	94-6875	1	Washer
12	94-4945	1	Spacer
13	323-7	1	Screw-HH
14	3253-5	1	Washer-Lock
15	92-7008	2	Rod End
16	302-26	1	Fitting-Grease
17	92-6966	1	Spacer-Hydro Pedal
18	92-6902	1	Pad-Pedal Forward
19	9202154	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description

3318-935

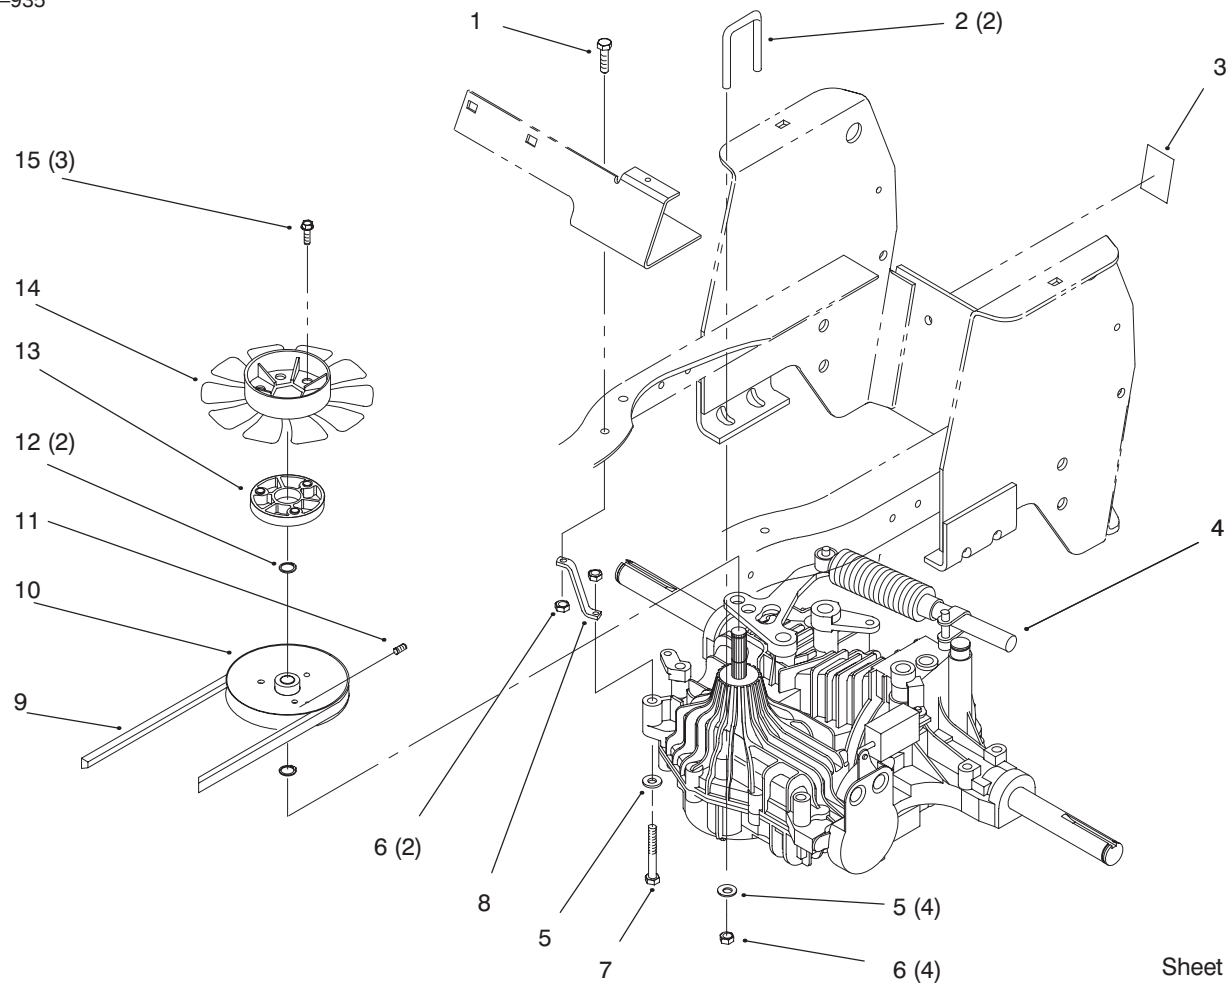

Sheet No.: 15


Hydro Transaxle

Ref. No.	Part No.	Qty.	Description
1	322-6	1	Screw-HH
2	92-6769	2	U-Bolt
3	92-6726	1	Decal-Hydro Valve
4	94-4205	1	Transaxle-Hydro
5	3256-23	5	Washer-Flat
6	3296-29	6	Nut-Lock
7	322-12	1	Screw HH
8	93-0546-03	1	Strap-Torque
9	92-6954	1	Belt
10	92-6686	1	Pulley
11	3245-32	1	Screw-Set
12	936118	2	Snap Ring
13	92-6943	1	Spacer-Fan
14	92-6742	1	Fan
15	49-2040	3	Screw-HH

Ref. No.	Part No.	Qty.	Description



Ref. No.	Part No.	Qty.	Description

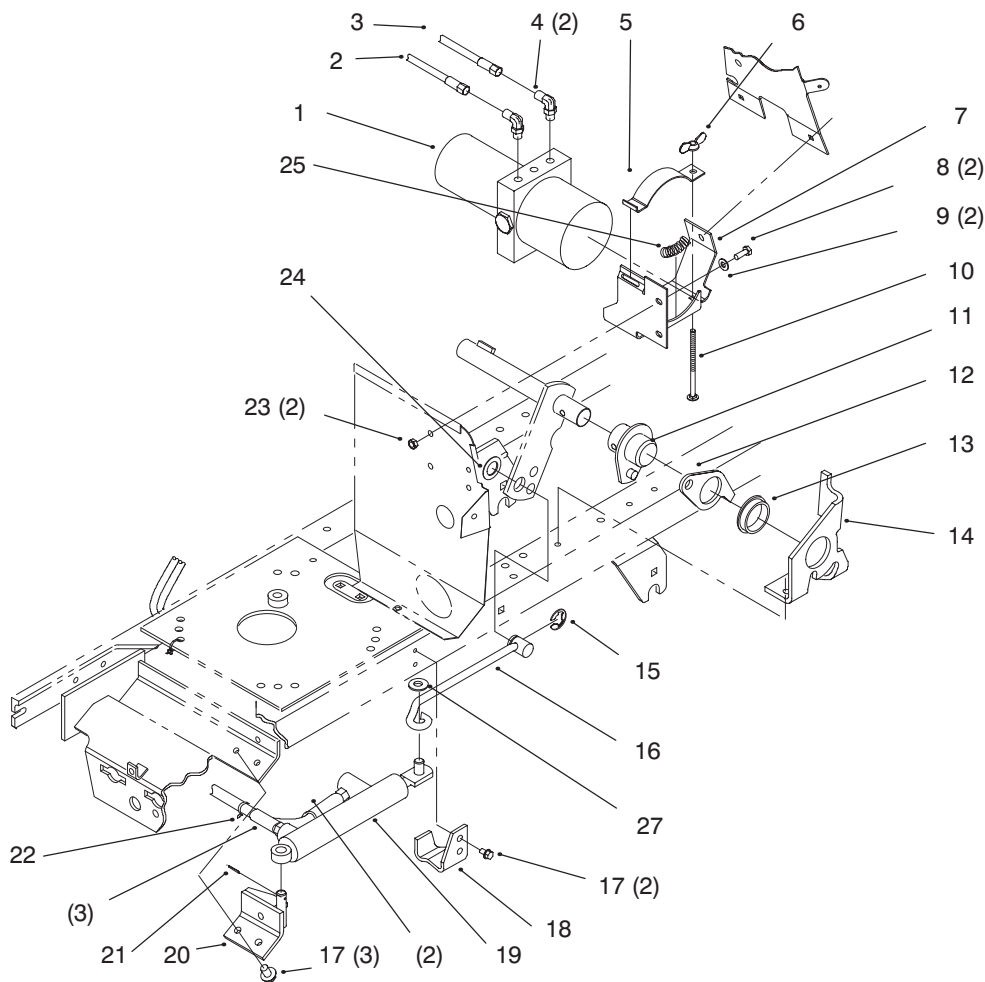


Sheet No.: 26

Power Lift


Ref. No.	Part No.	Qty.	Description
1	94-1700	1	Pump ASM-Hydraulic
2	94-3344	1	Hose Assy
3	94-1713	1	Hose ASM
4	94-3561	2	Fitting-O Ring
5	94-1748-03	1	Clamp-Hydraulic
6	32103-22	1	Pump
7	94-1747-03	1	Nut-Wing
8	321-4	2	Bracket-Mounting
9	3256-22	2	Screw-HH
10	3229-33	2	Washer-Flat
11	94-3553-03	1	Screw-CARR
12	94-4927	1	Cap-End
13	92-6869	1	Arm-HOC
14	94-4928	1	Bushing
15	5618	1	Bracket-Lift Arm
16	94-1708	1	Ring-Retaining
17	32144-14	1	Wa-Rod
18	94-1709-03	5	Screw-HWH
19	94-1701	1	Bracket-Support
20	94-1705-03	1	Cylinder
21	3272-6	1	ASM-Hydraulic
22	614249	1	Bracket-Cyl Mtg
23	3296-8	1	Pin-Cotter
24	1278	1	Tie-Cable
		2	Nut-Lock
		1	Washer-Shim

Ref. No.	Part No.	Qty.	Description
25	94-1743	1	Tubing
27	95-3260	1	Nut-Push

 


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
☆1		2	Wheel & Tire ASM				
			Rear				
1:1	78-1221	2	Wheel				
1:2	5108	2	Valve-Tire Tubeless				
1:3	116971	2	Tire				
2	93-3659-03	2	Hub-Wheel				
3	3243-5	4	Screw-Set				
4	3218-3	4	Nut-HJ				
5	5-1336	2	Key				
6	83-2720	10	Bolt-Lug				
7	94-3718	2	ASM-Hubcap				
7	94-3731	2	Hubcap-12"				
8	94-3736	2	Horsehead Logo				

 21



Ref. No.	Part No.	Qty.	Description
1	24 014 42	1	Crankshaft
2	52 139 09	1	Plug-Cup
	24 703 01	1	Kit-High Temp Cutout

22

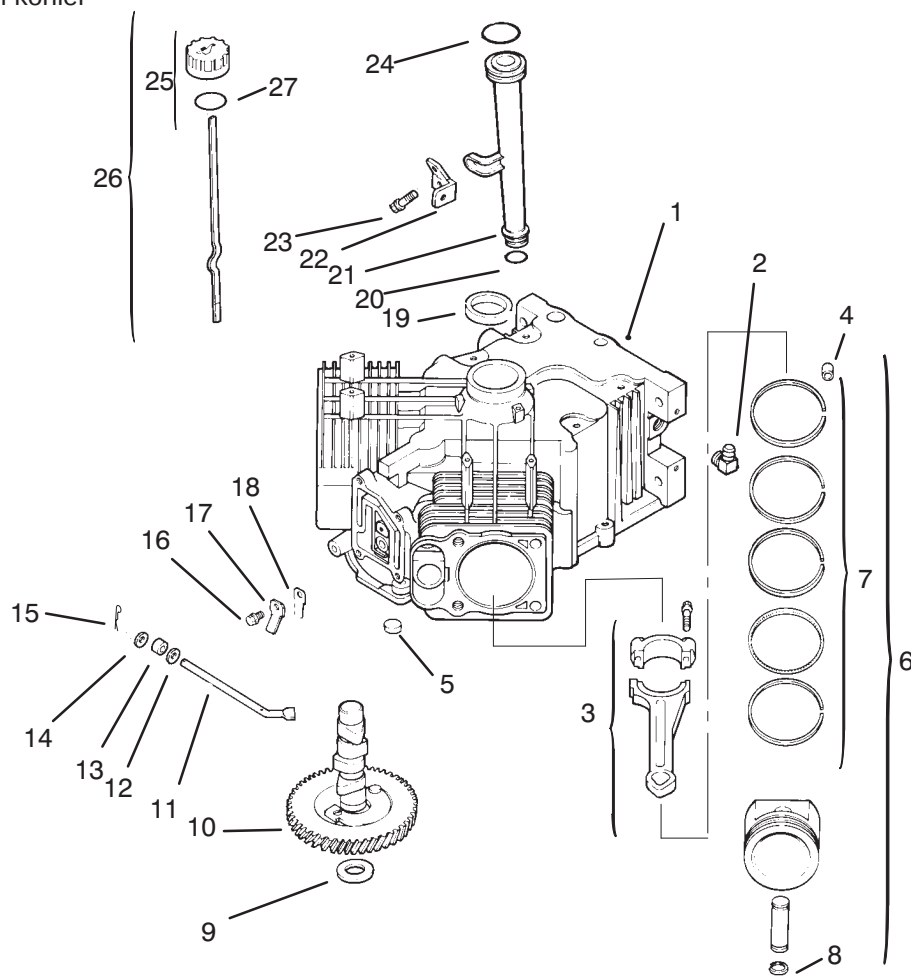

Sheet No.: 202
C-1960

Crankcase

Ref. No.	Part No.	Qty.	Description
1	24 522 09	1	Short Block
2	25 155 02	1	Connector-90 DEG
3	24 067 05	2	Connecting Rod STD
3	24 067 06	2	Connecting Rod .25
†4	12 380 03	6	Dowel-Locating
5	52 139 09	1	Plug-Cup
6	24 874 01	2	Piston ASM STD INC 4/7/8
6	24 874 02	2	Piston ASM .25 INC 4/7/8
6	24 874 03	2	Piston ASM .50 INC 4/7/8
†7	24 108 01	2	Ring Set STD INC 4/8
7	24 108 02	2	Ring Set .25 INC 4/8
7	24 108 03	2	Ring Set .50 INC 4/8
†8	24 018 01	4	Retainer-Piston Pin
9	12 422 07	1	Shim-Camshaft A/R
9	12 422 08	1	Shim-Camshaft A/R
9	12 422 09	1	Shim-Camshaft A/R
9	12 422 10	1	Shim-Camshaft A/R
9	12 422 11	1	Shim-Camshaft A/R
9	12 422 12	1	Shim-Camshaft A/R
9	12 422 13	1	Shim-Camshaft A/R
10	24 012 05	1	Camshaft
11	24 144 01	1	Shaft-Governor Cross
12	X-25-63	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description
13	12 032 01	1	Seal-Governor Shaft
14	X-25-102	1	Washer-Flat
15	12 380 04	1	Pin-Governor Hitch
16	M-0545010	2	Screw M5x0.8x10
17	24 018 04	2	Retainer-Reed
18	24 402 05	2	Beed-Breather
19	24 032 01	1	Seal-Oil
20	12 153 01	1	O Ring-Lower Fill Tube
21	12 123 04	1	Tube-Oil Fill
22	24 126 19	1	Bracket-Oil Fill Tube
23	M-0545016	1	Screw M5x0.8x16
24	12 153 02	1	O Ring-Upper Fill Tube
25	24 038 04	1	Dipstick INC 26-27
†26	25 755 13	1	Kit-Oil Cap INC 3
†27	12 153 03	1	O Ring-Fill Cap
*	24 755 03	1	Gasket Set


† Included in a service kit or in an assembly

* Not illustrated



Ref. No.	Part No.	Qty.	Description

* Not illustrated

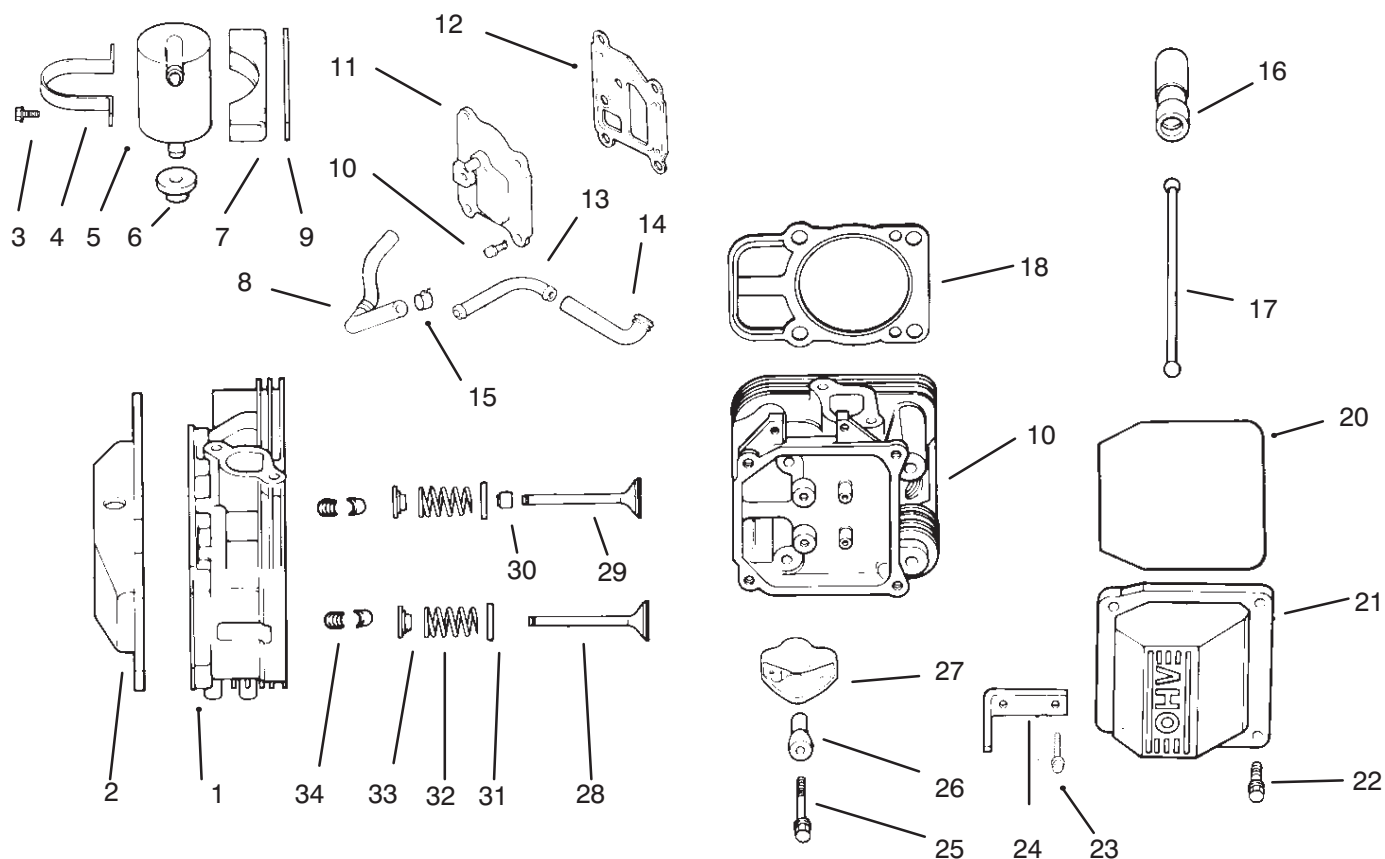


Sheet No.: 204

Head / Valve / Breather

Ref. No.	Part No.	Qty.	Description
1	24 318 11	1	Head ASM-#1
2	24 755 76	1	Kit-Valve Incl 6 20-22
3	M-0545016	2	Screw M5x0.8x16
4	24 445 02	1	Strap-Breather
5	24 755 57	1	Kit-Breather Incl 3-9
6	25 313 02	1	Grommet-Rubber
7	24 126 44	1	Bracket-Breather Sep
8	24 326 13	1	Hose-Breather
9	24 112 12	1	Spacer
10	M-0645020	4	Screw-HH M6x1.0x20
11	24 096 15	1	Cover-Breather
12	24 041 23	1	Gasket-Breather
13	24 294 06	1	Fitting
14	24 326 14	1	Hose-Breather
15	X-426-9	2	Clamp-Hose
16	12 351 01	4	Lifter-Valve
17	24 411 05	4	Rod-Push
18	24 041 08	2	Gasket-Cylinder Head
19	24 318 12	1	Head ASM-#2
20	24 153 12	1	O-Ring
21	24 755 74	1	Kit Valve Incl 20-22
22	24 086 32	4	Screw-Shoulder
23	12 086 16	8	Screw M10x1.5x91
24	24 445 01	1	Strap-Lifting

Ref. No.	Part No.	Qty.	Description
25	M-0640034	4	Screw M6x1.0x34
26	24 599 01	4	Pivot-Rocker Arm
27	25 186 01	4	Arm-Rocker
28	24 016 01	2	Valve-Exhaust
28	24 016 02	2	Valve-Exhaust (.25)
29	24 017 01	2	Valve-Intake
29	24 017 02	2	Valve-Intake (.25)
30	24 032 05	2	Seal-Valve Stem
31	235011	4	Retainer-Spring
32	24 089 02	4	Spring-Valve
33	12 173 01	4	Cap-Valve Spring
34	12 755 03	4	Kit-Retainer
	24 033 03	1	Kit-Breather Incl 11-12
	24 755 66	1	Kit-Valve Incl 17 26-27

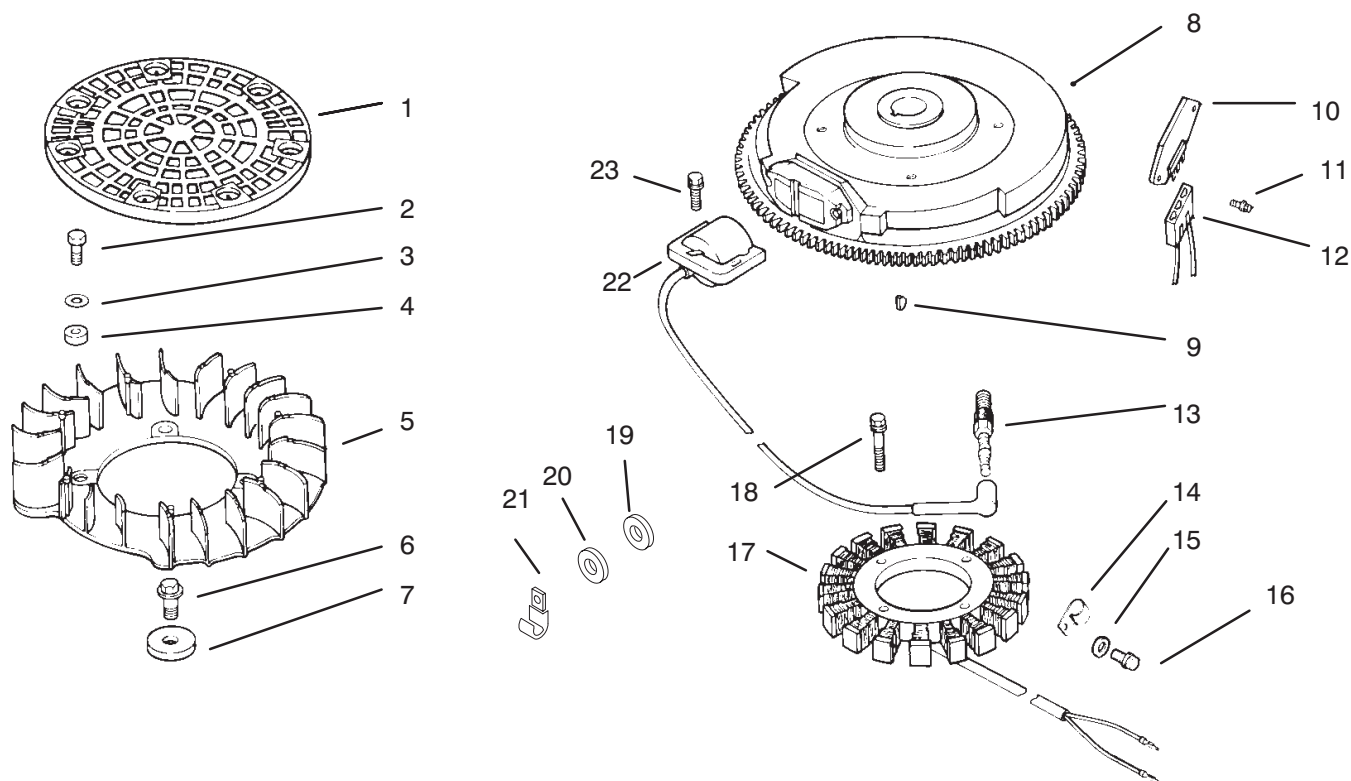
Sheet No.: 205
C-1963

Ignition / Electrical

Ref. No.	Part No.	Qty.	Description
1	24 162 17	1	Screen-Grass
2	M-0403025	4	Screw M4x0.7x25
3	X-25-92	4	Washer-Flat
4	24 112 04	1	Spacer-Fan
5	24 157 03	1	Fan
6	M-0639016	4	Screw M6x1.0x16
7	12 112 01	4	Spacer-Fan
8	24 025 04	1	Flywheel ASM
9	X-42-15	1	Key
10	25 403 03	1	Rectifier-Regulator
11	24 086 18	2	Screw-Phillips
12	236602	1	Connector-Regulator
13	12 132 02	2	Spark Plug
14	48 154 02	1	Clip-Stator Harness
15	12 468 03	1	Washer-Flywheel
16	12 086 14	1	Screw-Flywheel Mounting
17	24 085 01	1	Stator-15 Amp
18	M-0548025	2	Screw M5x0.8x25
19	X-25-63	2	Washer-Flat
20	X-25-92	2	Washer-Flat
21	235173	1	Clip-Cable
22	24 584 01	1	Module-Ignition
23	M-0545020	4	Screw M5x0.8x20
*	24 113 18	1	Decal-Grass Screen

Ref. No.	Part No.	Qty.	Description
	24 176 40	1	Harness-Wire
	24 518 28	1	Lead-Black

* Not illustrated

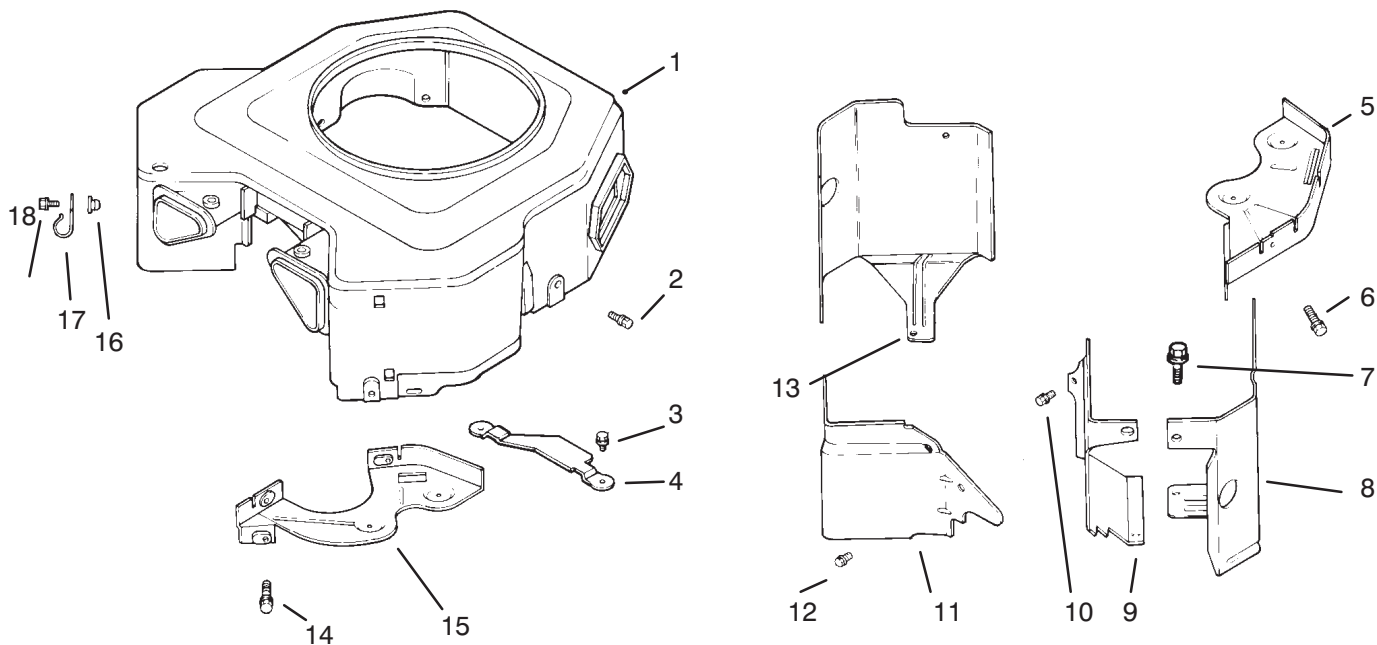


Sheet No.: 206
C-1964

Blower Housing & Baffles

Ref. No.	Part No.	Qty.	Description
1	24 027 20	1	Housing—Blower ASM
2	M—0549016	3	Screw M5x0.8x16
3	M—0645016	4	Screw—HH M6x1.0x16
4	24 314 05	1	Guard—Flywheel
5	24 146 02	1	Plate—Backing #2 Side
6	M—0545020	2	Screw M5x0.8x20
7	M—0551016	1	Screw M5x0.8x14
8	24 063 20	1	Baffle—Cylinder #2 Side
9	24 063 23	1	Baffle—Valley #1 Side
10	M—0549010	2	Screw M5x0.8x10
11	24 063 14	1	Baffle—Valley #2 Side
12	M—0549016	2	Screw M5x0.8x16
13	24 063 30	1	Baffle—Cylinder #1 Side
14	M—0649016	2	Screw M6x1.0x16
15	24 146 08	1	Plate—Backing #1
16	24 100 01	4	Nut—Plastic
17	47 154 01	1	Clip—Cable
18	24 086 12	1	Screw—Cable Clip
*	24 100 02	2	Nut INC W/Blower Hsng
*	24 113 10	1	Decal—Horsepower
*	244 113 01	1	Decal—Horsepower
*	25 139 16	1	Plug INC W/Blower Hsng

* Not illustrated

Ref. No.	Part No.	Qty.	Description

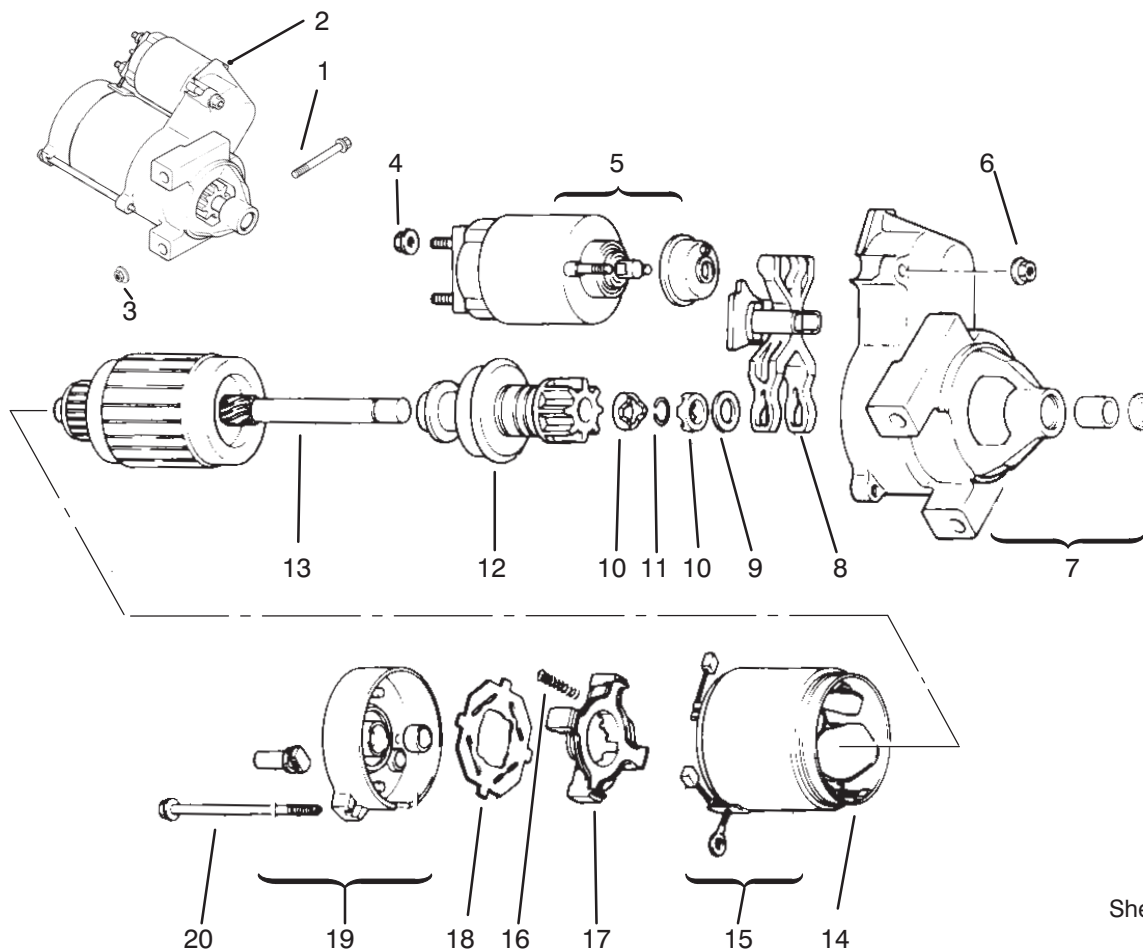


Sheet No.: 207
C-1965

Starting System

Ref. No.	Part No.	Qty.	Description
1	M-0839080	2	Screw M8x1.25x80
2	12 098 03	1	Starter INC 4-20
3	M-0841080	1	Nut M8x1.25
†4	52 100 09	1	Nut-Starter
†5	52 435 02	1	Solenoid
†6	52 100 10	2	Nut Starter
†7	12 081 02	1	Cap-Drive End
†8	12 090 10	1	Lever Starter Drive
†9	42 468 14	1	Washer-Thrust
†10	52 100 08	2	Nut-Stop Collar
†11	52 141 03	1	Ring-Retainer
†12	12 239 01	1	Drive-Pinion
†13	12 170 03	1	Armature-Starter
†14	12 471 01	1	Frame
†15	52 221 01	1	Kit-Brush INC 16
†16	52 089 09	4	Spring-Brush
†17	52 323 03	1	Holder-Brush
†18	52 168 01	1	Insulator
†19	12 301 01	1	Cap-Commutator End
†20	52 211 05	2	Bolt
	24 755 84	1	Kit-Starter Repair

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

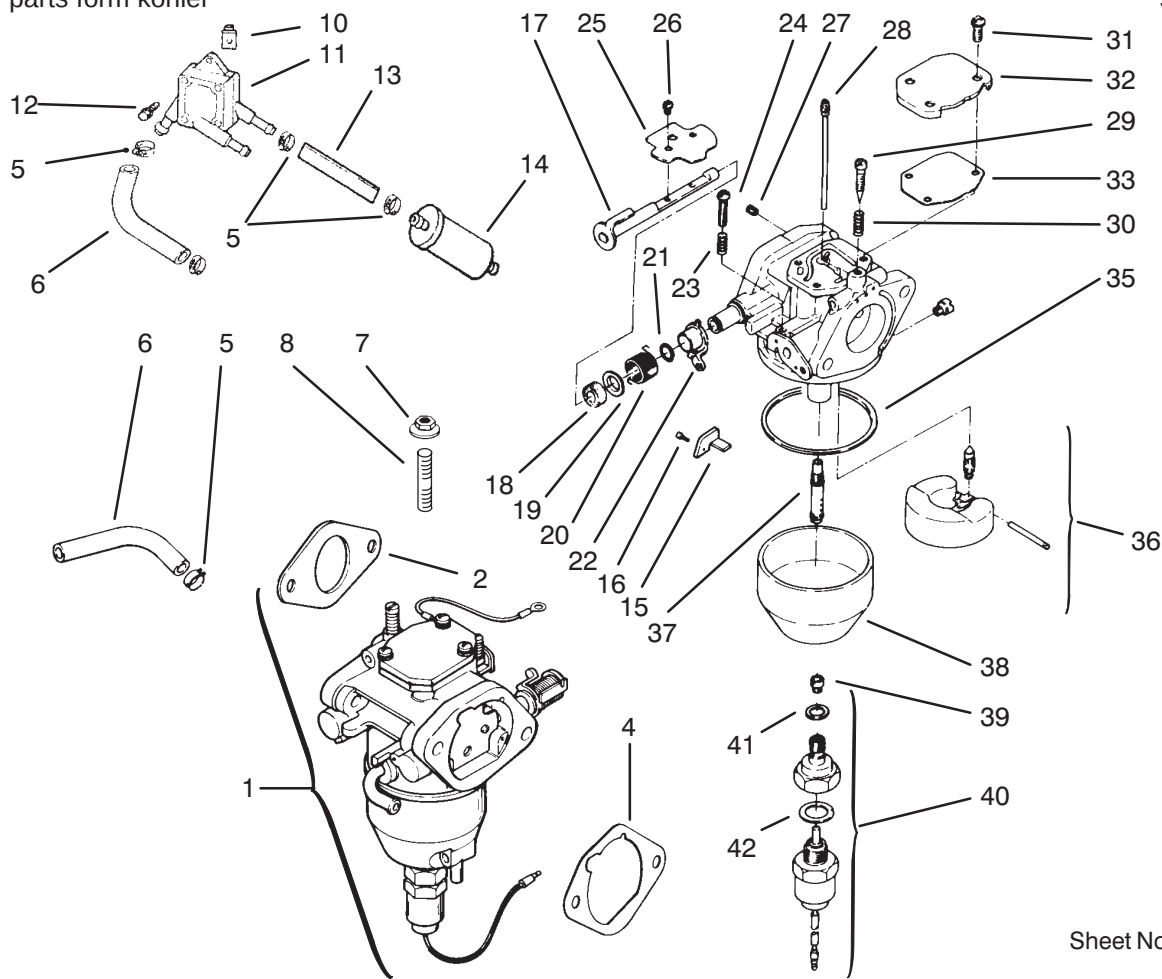

Sheet No.: 208


Fuel System

Ref. No.	Part No.	Qty.	Description
†2	24 041 15	1	Gasket-Carburetor
†4	24 041 14	1	Gasket-A/C Base
5	X-426-9	6	Clamp-Hose
6	24 353 03	2	Line-Fuel 10 1/2"
7	M-0641060	2	Nut M6x1.0
8	M-0629095	2	Stud M6x1.0x95
10	24 100 01	2	Nut-Plastic
11	24 393 04	1	Pump-Fuel
12	24 086 12	2	Screw-Cable Clip
13	25 353 15	1	Line-Fuel 3 1/2"
14	25 050 02	1	Filter-Fuel
†15	24 126 29	1	Bracket-Throttle Stop
†16	M-0259006	1	Screw M2.5x45x5.5
†17	24 144 15	1	Shaft-Choke
†18	24 468 05	1	Washer
†19	24 241 01	1	Collar-Choke
†20	24 089 22	1	Spring-Choke Return
†21	24 141 04	1	Ring-Choke Lever
†22	24 090 10	1	Lever-Choke
†23	24 089 24	1	Spring-Throttle Screw
†24	24 086 19	1	Screw-Throttle Adjust
25	24 146 13	1	Valve-Choke
†26	24 086 20	4	Screw-Throttle Shaft
†27	24 337 27	1	Jet-Air Bleed
†28	24 337 11	1	Jet-Slow
†29	24 086 22	1	Screw-Idle Adjust

Ref. No.	Part No.	Qty.	Description
†30	24 089 23	1	Spring-Idle Adjust Screw
†31	24 086 21	3	Screw
†32	24 096 13	1	Cover-Passage
†33	24 041 18	1	Gasket-Passage Cover
†35	24 041 19	1	Gasket-Float Chamber
†36	24 757 05	1	Kit-Float Repair
†37	24 369 01	1	Nozzle-Main
†38	24 234 01	1	Chamber-Float
†39	24 337 20	1	Jet-Main
†40	24 755 15	1	Kit-Solenoid INC 41-42
†41	24 041 21	1	Gasket-Chamber Screw
†42	24 041 20	1	Gasket-Solenoid
*	24 041 15	1	Gasket-Carburetor
*	24 063 22	1	Baffle-Carburetor
*	24 755 25	1	Kit-Hi Alt 1500-3000 M
*	24 755 26	1	Kit-Hi Alt Over 3000 M
*	24 757 06	1	Kit-Carburetor Repair

† Included in a service kit or in an assembly

* Not illustrated

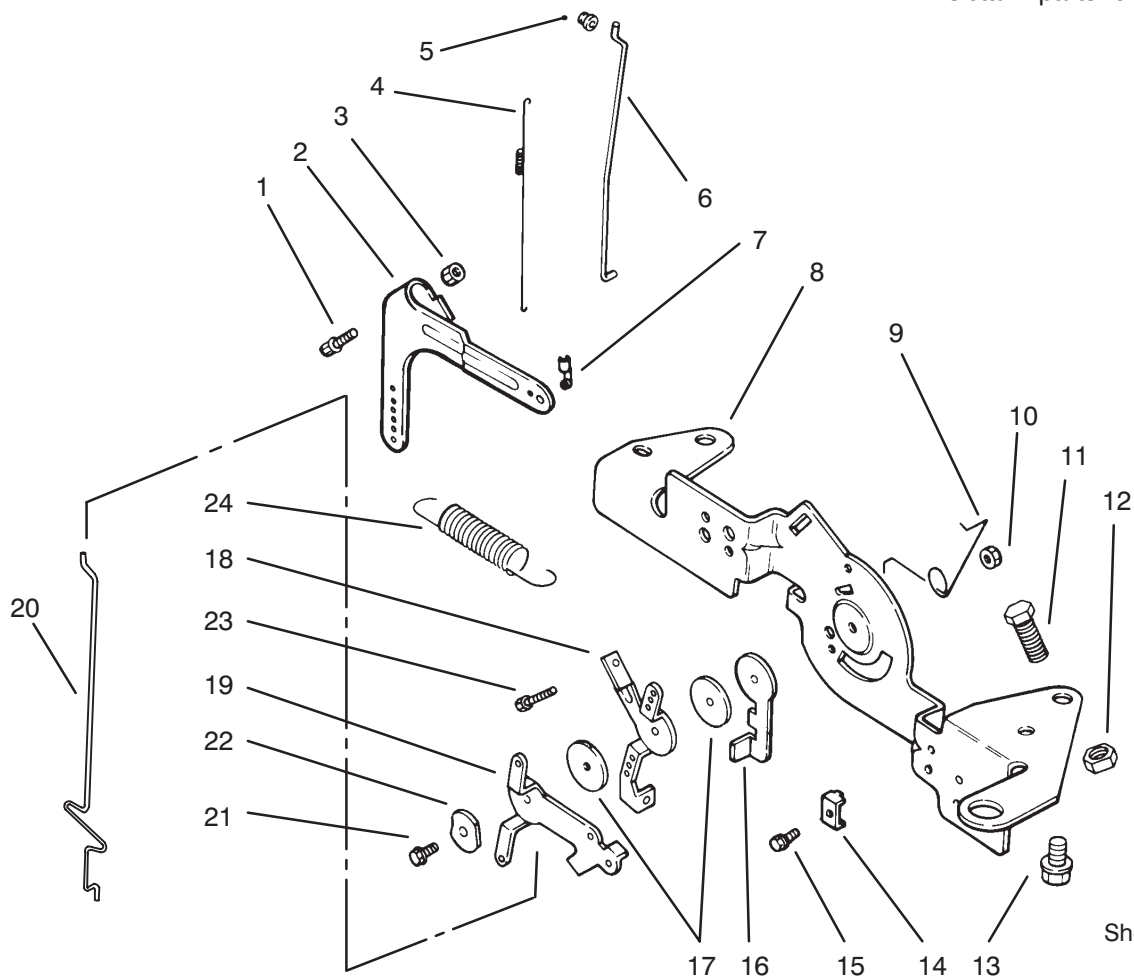


Sheet No.: 209
C-1967

Engine Controls

Ref. No.	Part No.	Qty.	Description
1	Sm-0642025	1	Screw M6x1.0x25
2	24 090 14	1	Lever-Governor
3	M-0641060	1	Nut M6x1.0
4	24 089 01	1	Spring-Linkage
5	25 158 08	1	Bushing-Linkage
6	24 079 04	1	Linkage-Throttle
7	25 158 11	1	Bushing-Linkage
8	24 126 13	1	Bracket-Control
9	24 089 03	1	Spring-Choke Return
10	M-0547050	1	Nut M5x0.8
11	Sm-0545016	1	Screw M5x0.8x16
12	M-0446030	1	Nut-Hex M4x0.7
13	Sm-0645016	4	Screw M6x1.0x16
14	12 237 01	2	Clamp-Cable
15	Sm-0545016	2	Screw M5x0.8x16
16	24 090 07	1	Lever-Throttle Actuator
17	24 468 01	3	Washer
18	24 090 03	1	Lever-Throttle Control
19	24 090 05	1	Lever-Choke
20	24 079 05	1	Linkage-Choke
21	Sm-0545020	1	Screw M5x0.8x20
22	41 468 03	1	Washer-Wave
23	M-0403025	1	Screw M4x0.7x25
24	24 089 15	1	Spring-Governor

Ref. No.	Part No.	Qty.	Description

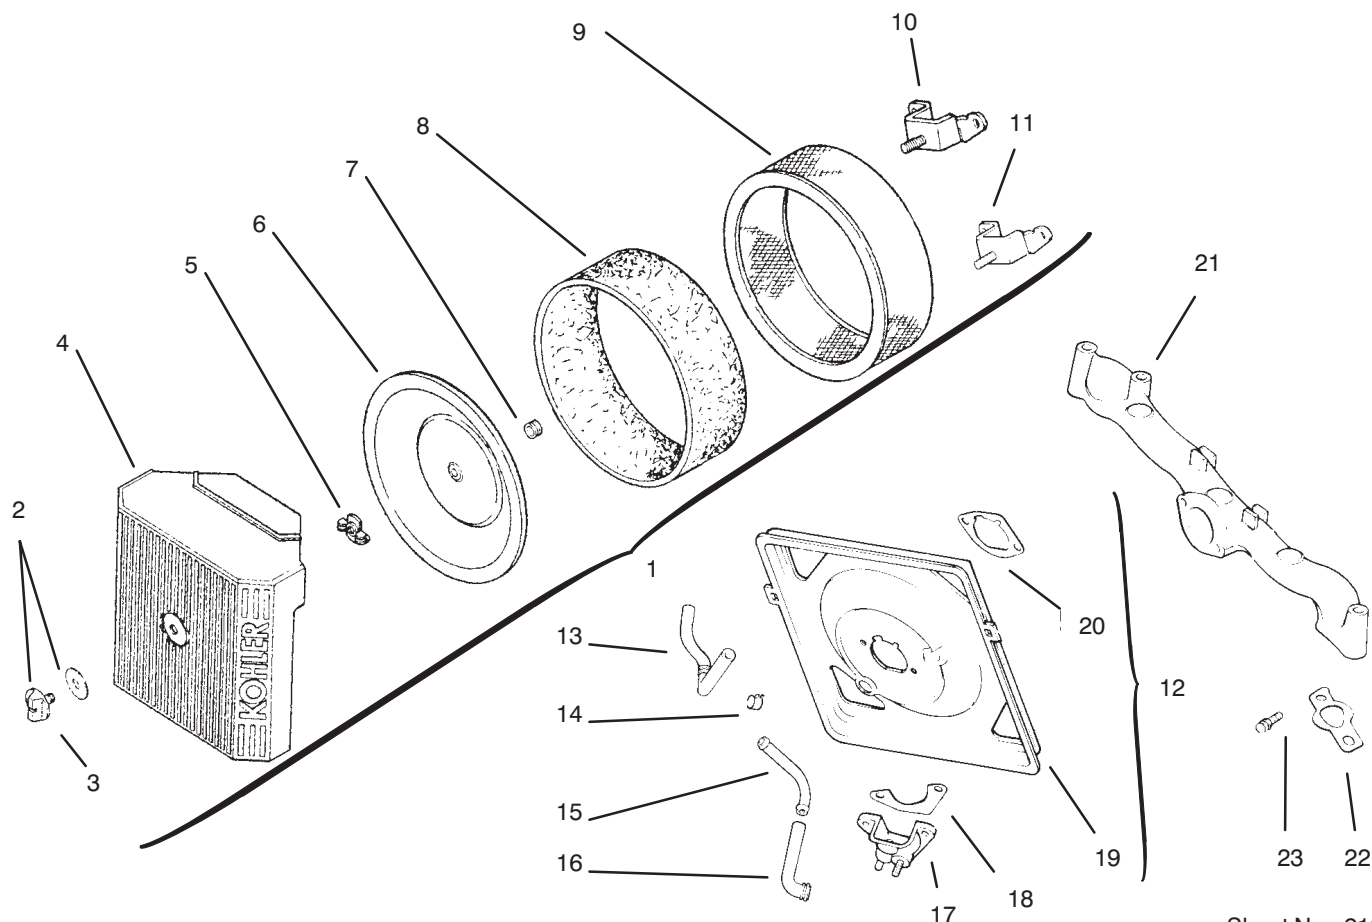

Sheet No.: 210

Air Intake / Filtration


Ref. No.	Part No.	Qty.	Description
1	24 743 05	1	Kit-Air Cleaner Cover
2	24 755 91	1	Kit-Knob W/Gasket
3	25 341 02	1	Knob-Cover
4	24 096 24	1	Cover-Air Cleaner
5	12 100 01	1	Nut-Wing
6	24 096 01	1	Cover-Inner Air Cleaner
7	24 032 03	1	Seal-Air Intake
8	24 083 02	1	Element-Precleaner
9	47 083 03	1	Element-Air Cleaner
10	24 126 21	1	Bracket-Air Cleaner Base
11	24 126 43	1	Bracket-Air Cleaner
12	24 755 86	1	Kit-Air Cleaner Base
13	24 326 13	1	Hose-Breather
14	X-426-9	2	Clamp-Hose
15	24 294 06	1	Fitting
16	24 326 14	1	Hose-Breather
17	24 109 06	1	Cup-Fuel Spitback
18	24 041 13	1	Gasket-Fuel Spitback Cup
19	24 094 14	1	Base-Air Cleaner
20	24 041 14	1	Gasket-A/C Base
21	24 164 06	1	Manifold-Intake
22	24 041 01	2	Gasket-Intake

Ref. No.	Part No.	Qty.	Description
23	M-0651055	4	Manifold Screw



C-1969

Ref. No.	Part No.	Qty.	Description

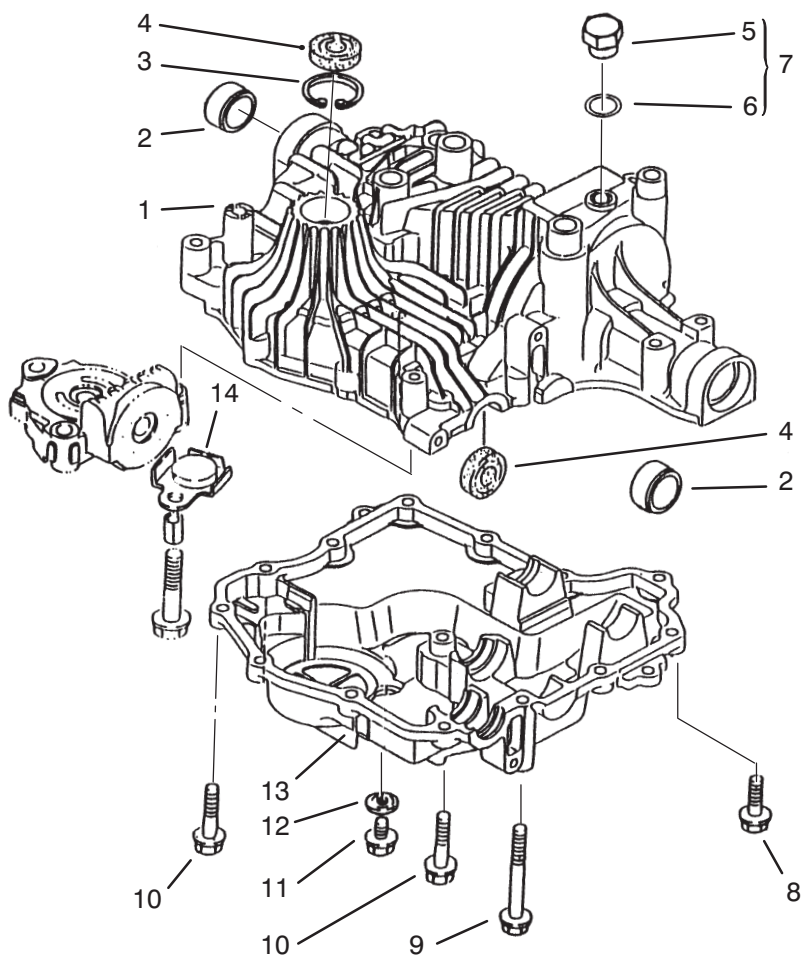


c-1860

Transaxle Case

Ref. No.	Part No.	Qty.	Description
1	94-4206	1	Upper Case ASM INC 2-6
†2		2	Bushing
†3	93-0360	1	Ring
†4	93-0361	2	Seal
†5		1	Plug
†6		1	Packing
7	93-0356	1	Plug/Packing INC 5-6
8	93-0363	11	Screw-TAP
9	93-0354	1	Bolt
10	93-0364	2	Screw-TAP
11	93-0362	1	Bolt
12	93-0359	1	Seal
13	94-4207	1	Case-Lower
14	93-0355	1	Magnet

† Included in a service kit or in an assembly

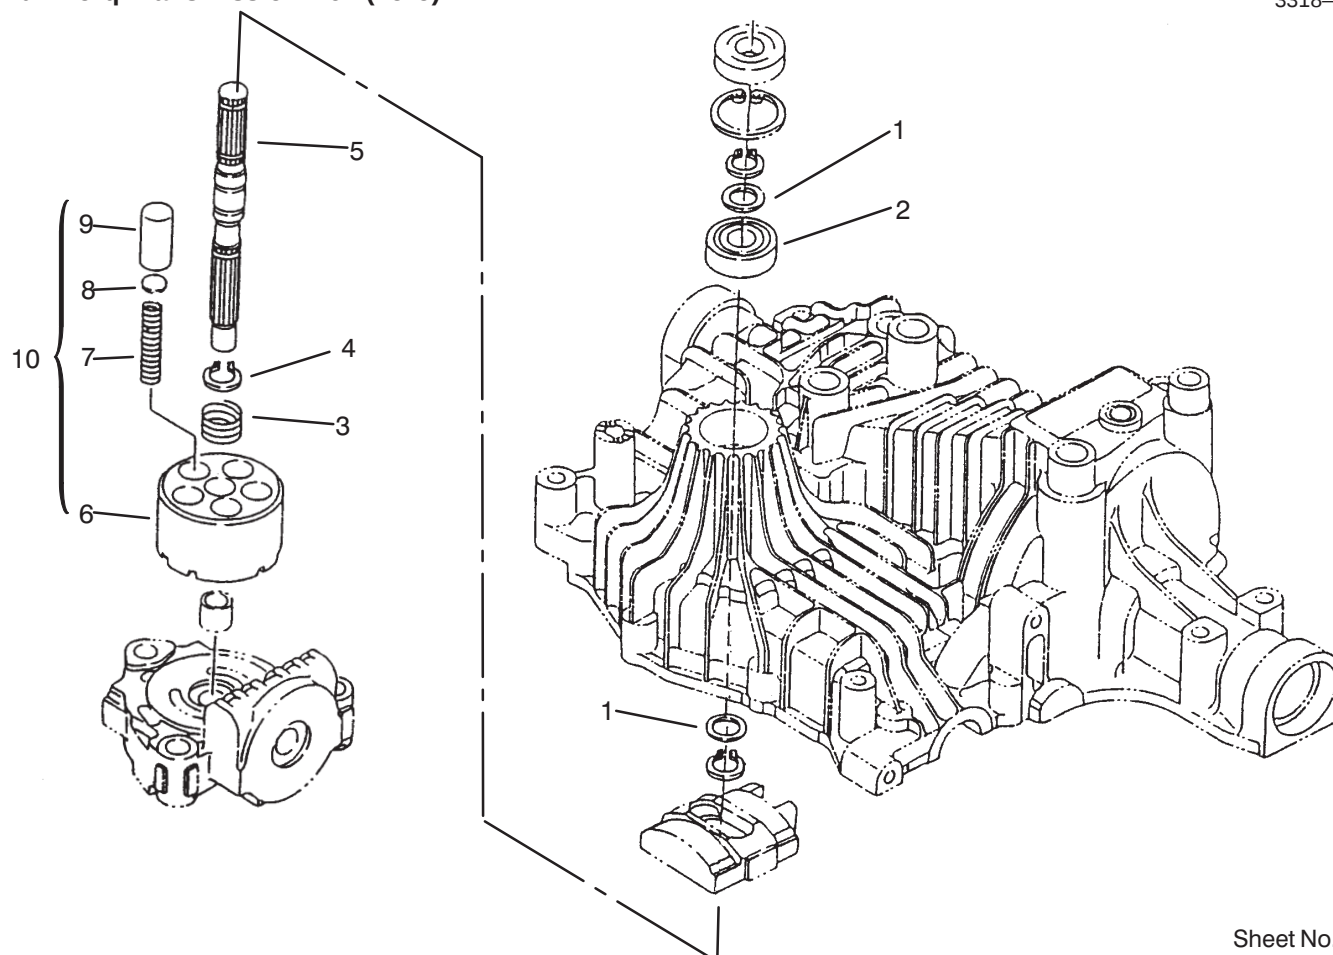


Sheet No.: 403
C-1861

Pump Shaft

Ref. No.	Part No.	Qty.	Description
1	93-0371	2	Washer
2	93-0374	1	Bearing-Ball
3	93-0370	1	Spring
4	93-0373	3	Ring-Snap
5	93-0372	1	Shaft-Pump
†6		1	Block-Cylinder
†7		5	Spring
†8		5	Washer
†9		5	Piston
10	93-0365	1	Cylinder ASM INC 6-9

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

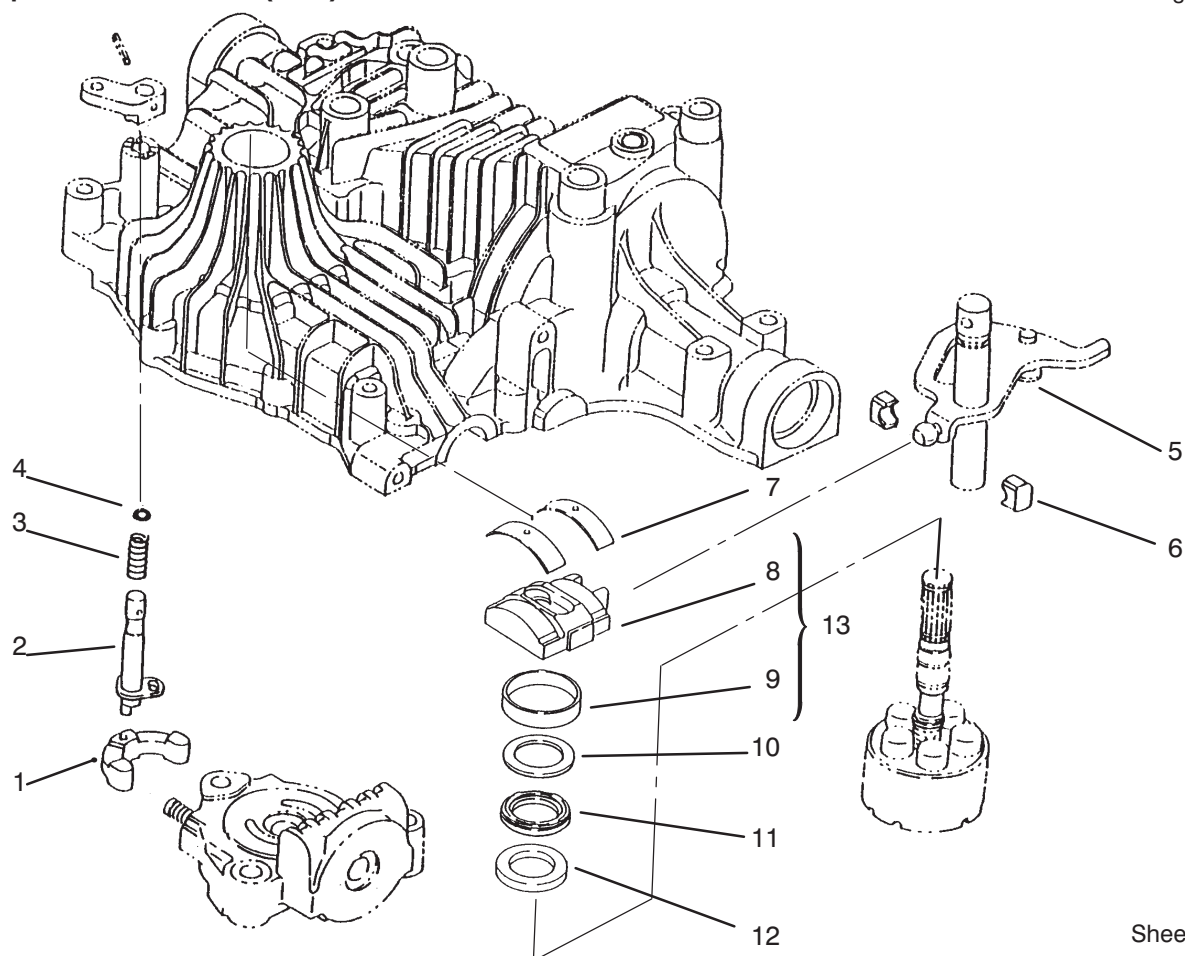

Sheet No.: 405


c-1863

Range Shift

Ref. No.	Part No.	Qty.	Description
1	93-0395	1	Arm
2	93-0397	1	Shaft-Bypass
3	93-0396	1	Spring
4	93-0400	1	Packing
5	93-0398	1	Block Set INC 6
†6		1	Block-Shift
7	93-0388	2	Thrust Metal
†8		1	Plate-Swash
†9		1	Bushing-Swashplate
10	93-0394	1	Plate-Thrust
11	93-0392	1	Bearing
12	93-0393	1	Plate-Thrust
13	93-0389	1	Swash Plate INC 8-9

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

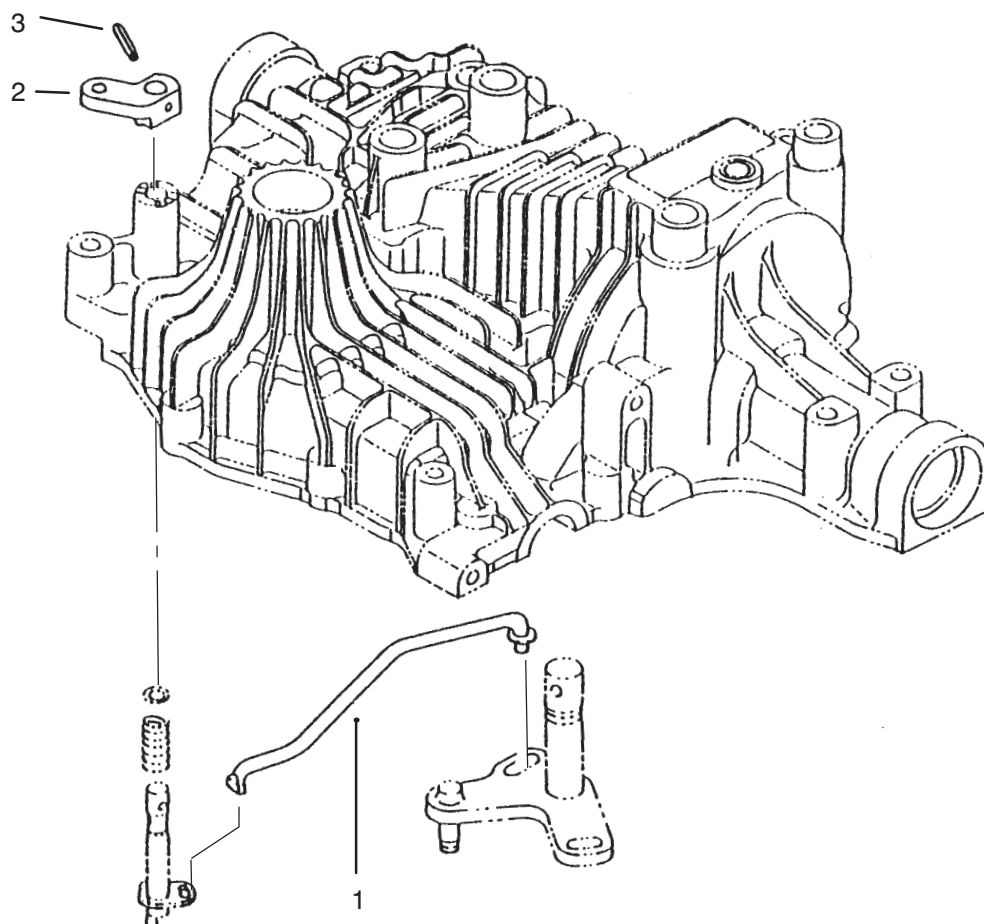


Sheet No.: 406

c-1864

Bypass Return

Ref. No.	Part No.	Qty.	Description
1	93-0401	1	Rod-Bypass
2	93-0402	1	Arm-Valve Release
3	93-0403	1	Pin-Roll

Ref. No.	Part No.	Qty.	Description

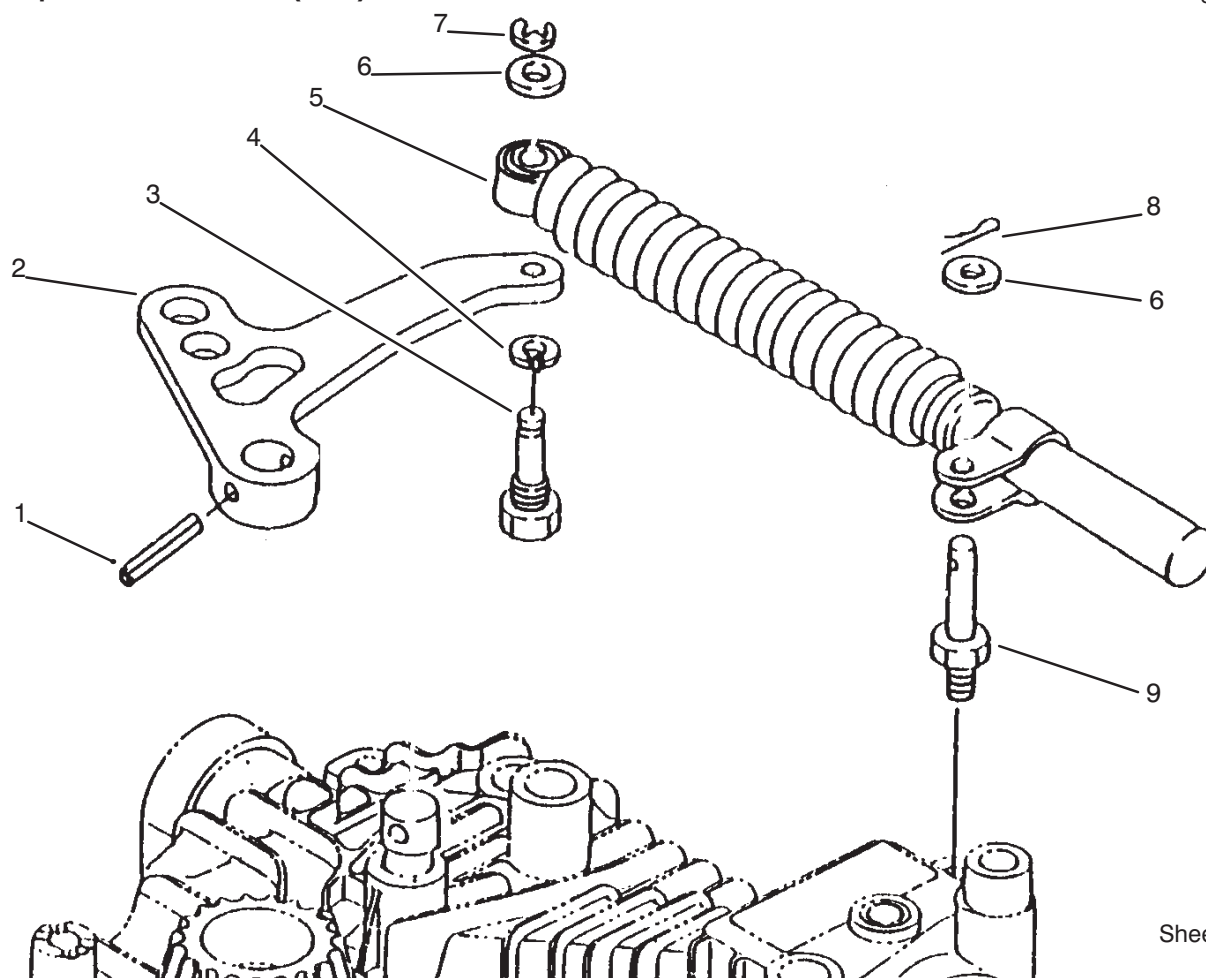


Sheet No.: 407

C-1865

Lever Damper

Ref. No.	Part No.	Qty.	Description
1	93-0411	1	Pin-Roll
2	93-0404	1	Arm
3	93-0407	1	Bolt
4	93-0409	1	Washer
5	93-0405	1	Shock Absorber
6	93-0408	2	Washer
7	93-0410	1	Ring
8	93-0412	1	Pin-Cotter
9	93-0406	1	Stud

Ref. No.	Part No.	Qty.	Description

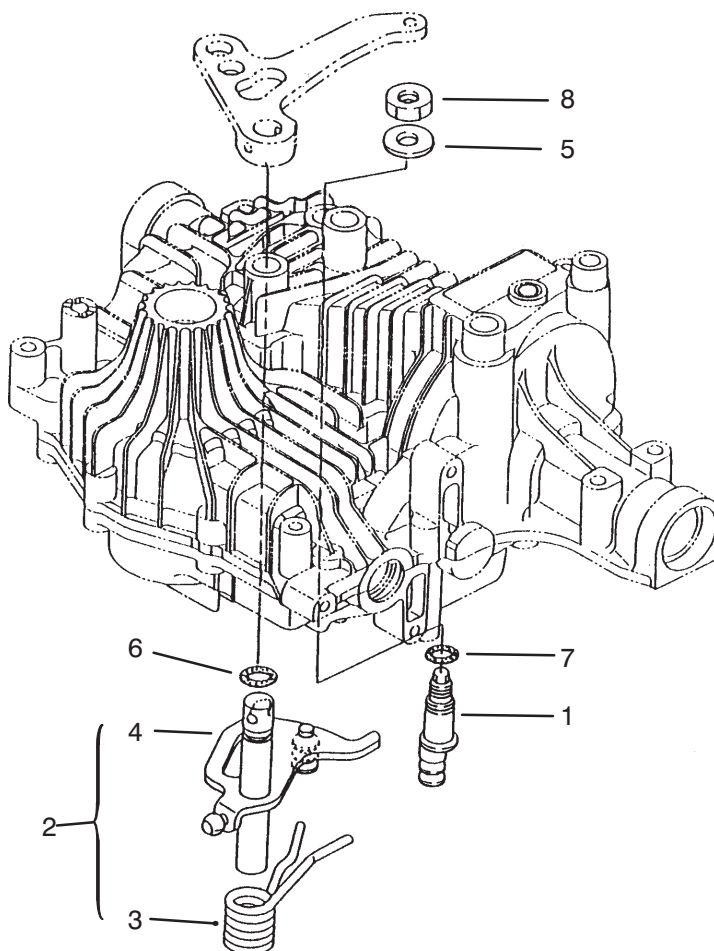

Sheet No.: 408


C-1866

N-Centering

Ref. No.	Part No.	Qty.	Description
1	93-0413	1	Fulcrum
2	93-0414	1	Shaft ASM INC 3-4
†3		1	Spring
†4		1	Shaft-Control
5	93-0417	1	Washer
6	93-0418	1	Packing
7	93-0419	1	Packing
8	93-0420	1	Nut

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

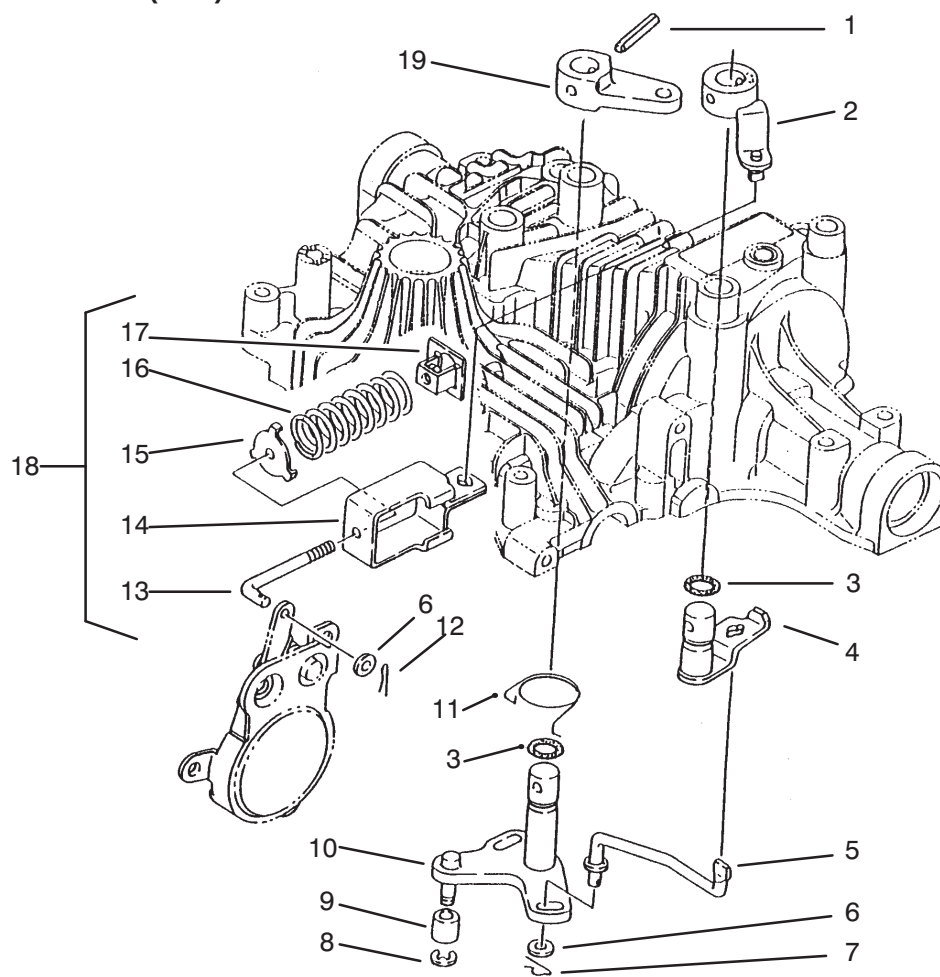

Sheet No.: 409


C-1867

Brake Interlock

Ref. No.	Part No.	Qty.	Description
1	93-0411	2	Pin-Roll
2	93-0433	1	Arm-Brake B
3	93-0418	2	Packing
4	93-0432	1	Arm-Brake A
5	93-0431	1	Rod-Brake
6	93-0435	2	Washer
7	93-0434	1	Pin-Snap
8	93-0410	1	Ring
9	93-0421	1	Bushing
10	93-0430	1	Shaft-Brake
11	93-0422	1	Return-Brake
12	93-0412	1	Pin-Cotter
†13	93-0428	1	Rod-Adjuster
†14	93-0426	1	Holder-Spring
†15	93-0425	1	Guide-Spring
†16	93-0427	1	Spring
†17	93-0424	1	Adjuster
18	93-0423	1	Rod ASM INC 13-17
19	93-0429	1	Arm-Brake

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

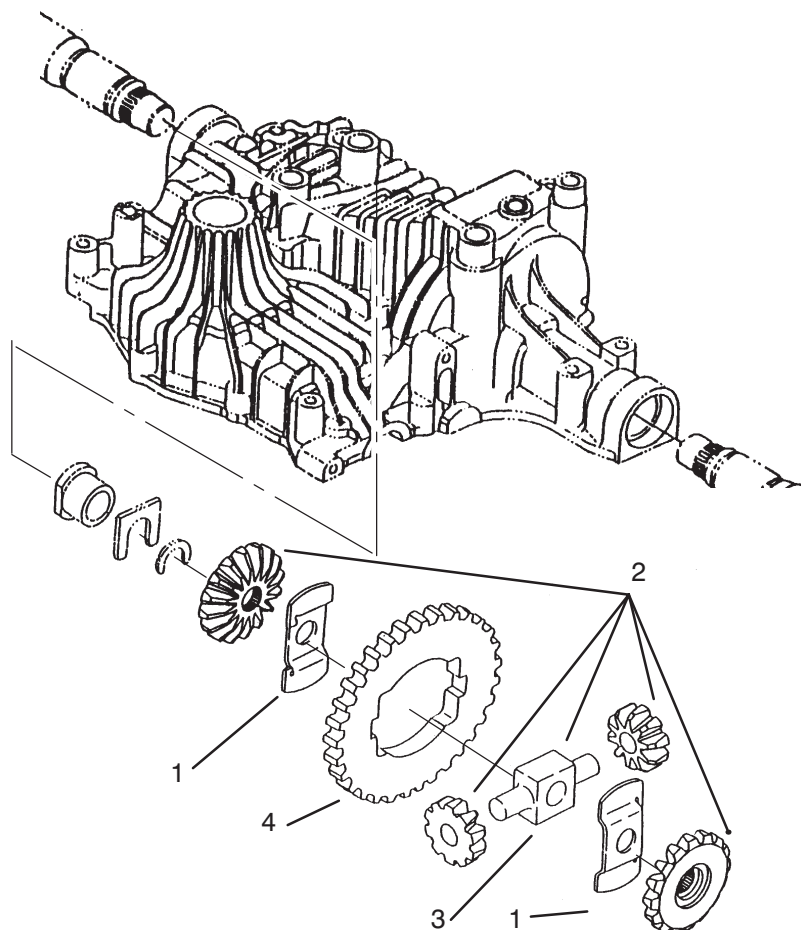


Sheet No.: 410

c-1868

Differential Gear

Ref. No.	Part No.	Qty.	Description
1	93-0444	2	Washer-Thrust
2	93-0440	1	Differential Gear ASM
3	93-0443	1	Shaft-Pinion
4	93-0445	1	Gear-Final

Ref. No.	Part No.	Qty.	Description

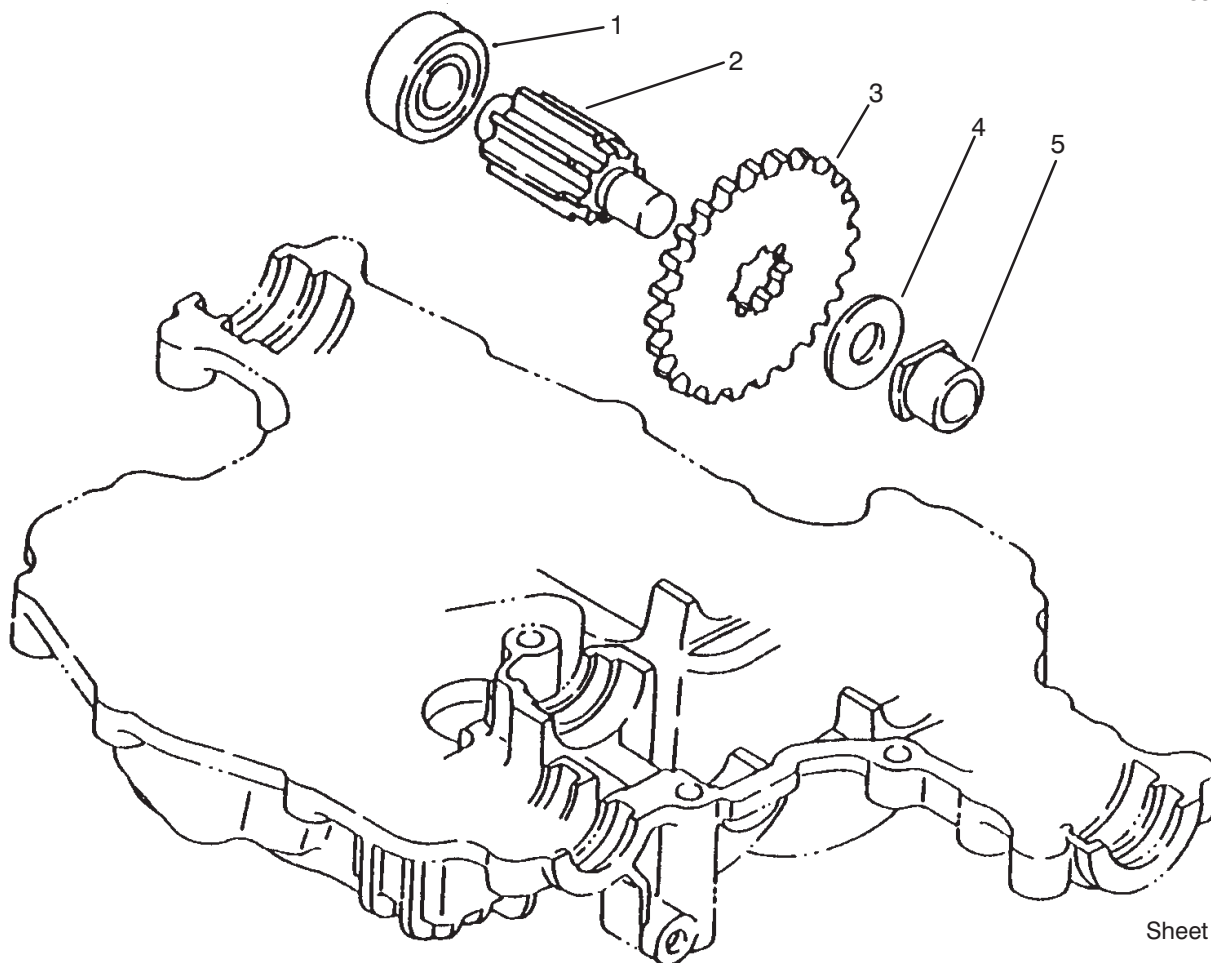


Sheet No.: 411

C-1869

Final Pinion

Ref. No.	Part No.	Qty.	Description
1	93-0446	1	Bearing
2	93-0447	1	Shaft-Final Pinion
3	93-0448	1	Gear-Final Shaft
4	93-0449	1	Washer
5	93-0450	1	Bushing

Ref. No.	Part No.	Qty.	Description

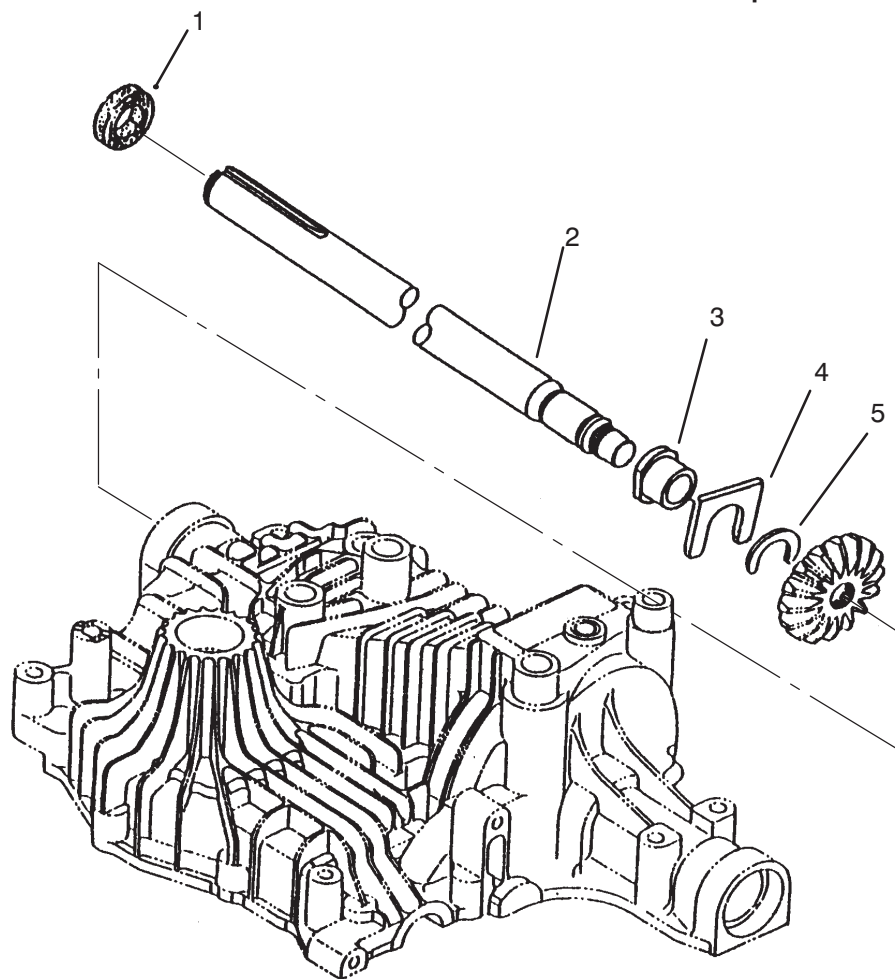

Sheet No.: 412


C-1870

Axle Shaft

Ref. No.	Part No.	Qty.	Description
1	93-0451	2	Seal
2	93-0452	1	Shaft-Axle Right
3	93-0454	2	Bushing
4	93-0455	2	Washer-Thrust
5	93-0456	2	Ring
*	93-0453	1	Shaft-Axle Left

Ref. No.	Part No.	Qty.	Description

 * Not illustrated



Ref. No.	Part No.	Qty.	Description
1	93-0457	3	Bolt W/Washer
2	93-0458	1	Band-Brake Interlock
3	93-0373	1	Ring-Snap
4	93-0460	1	Drum-Brake




Pump Assembly


Ref. No.	Part No.	Qty.	Description
1	94-9724	1	Motor
2	94-9725	1	Adapter
3	94-9726	1	Reservoir
*	94-1700	1	Pump-Hydraulic (ref)


Ref. No.	Part No.	Qty.	Description

Electric Schematic Twin Cyl. Hydro Drive, Cruise w/Lift

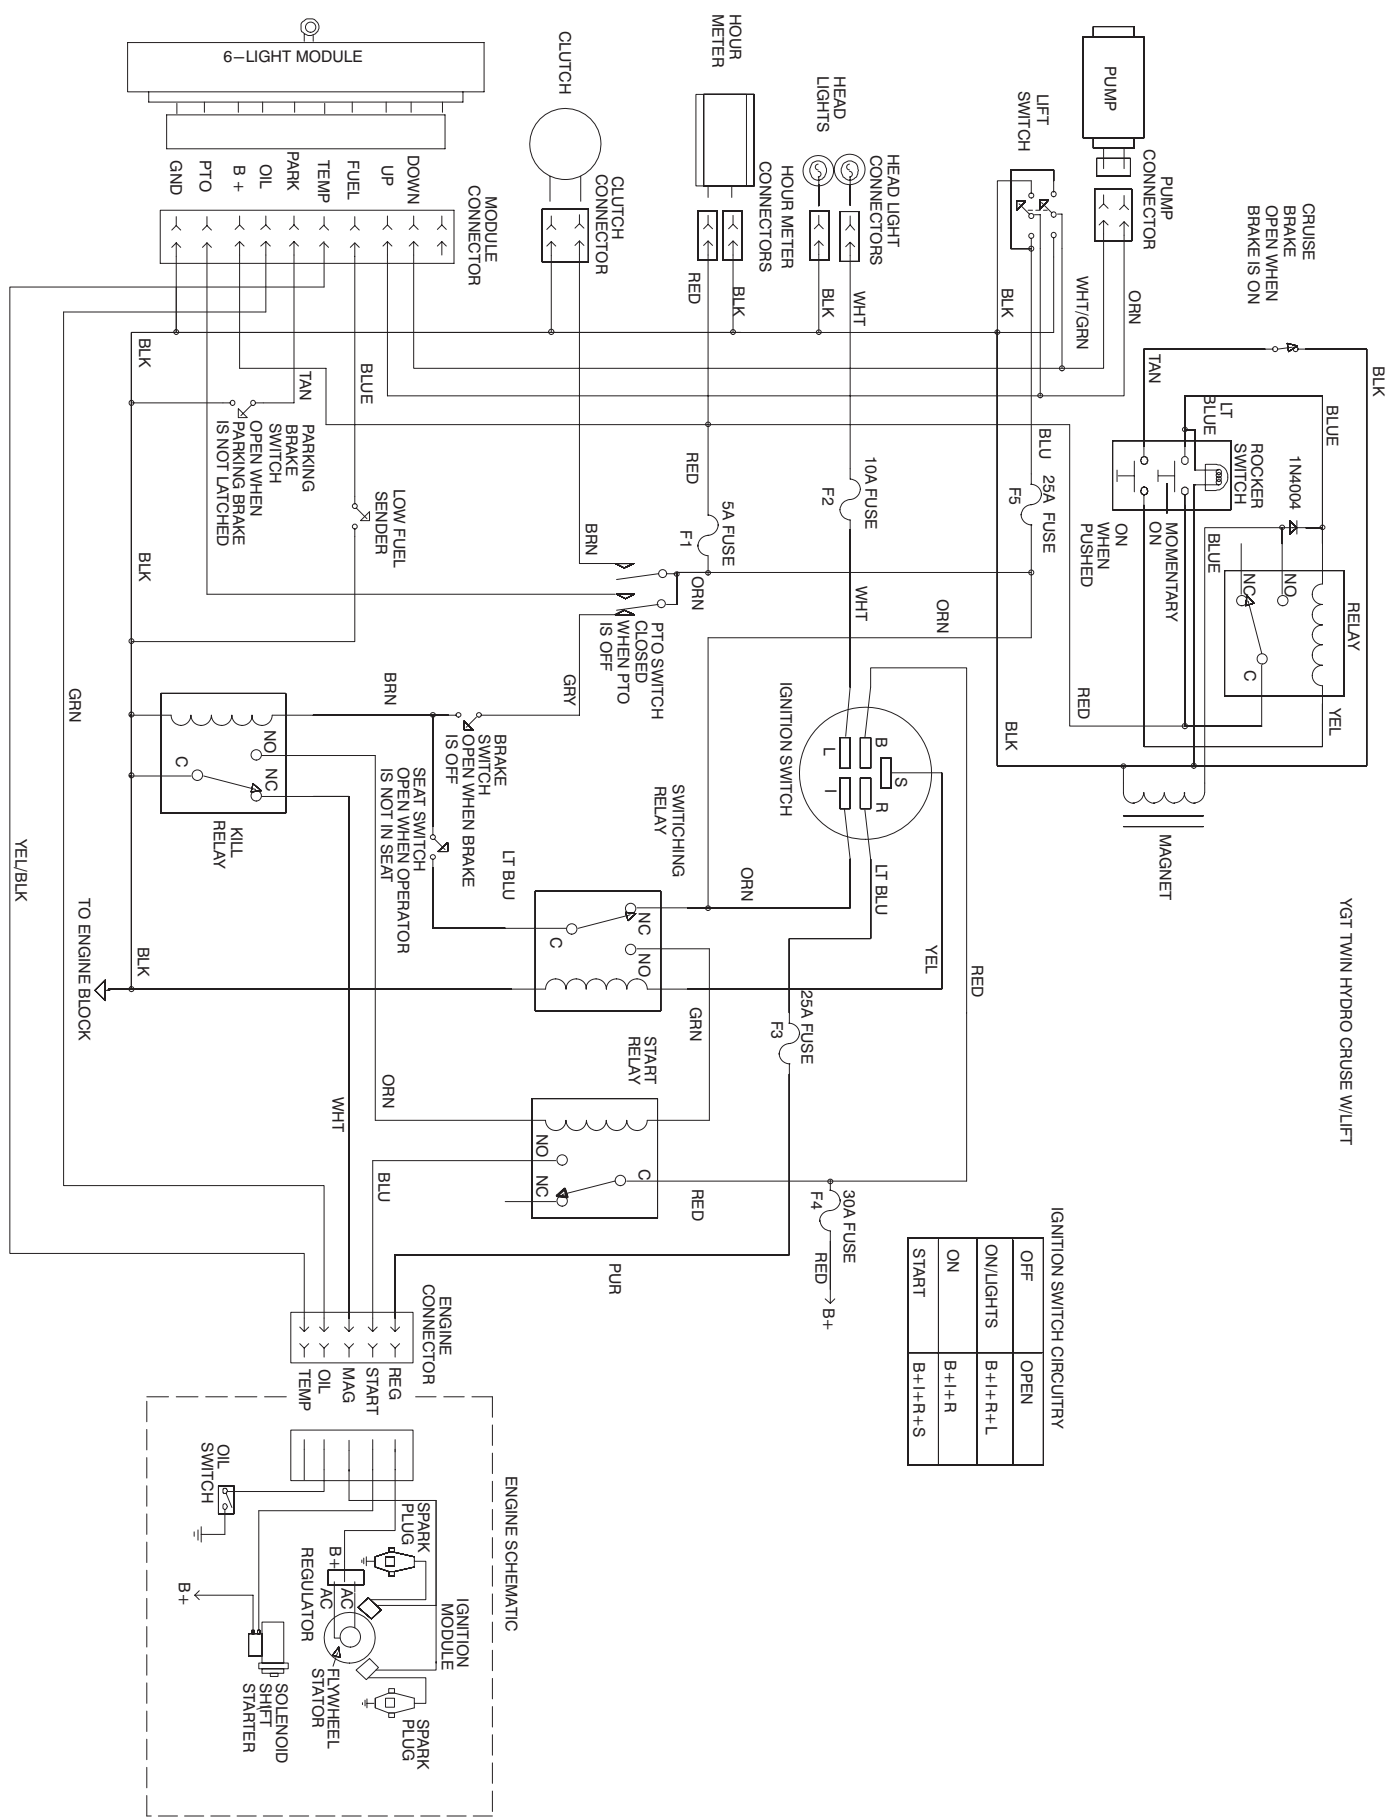

Wire Harness Routing — Twin Cylinder Engine

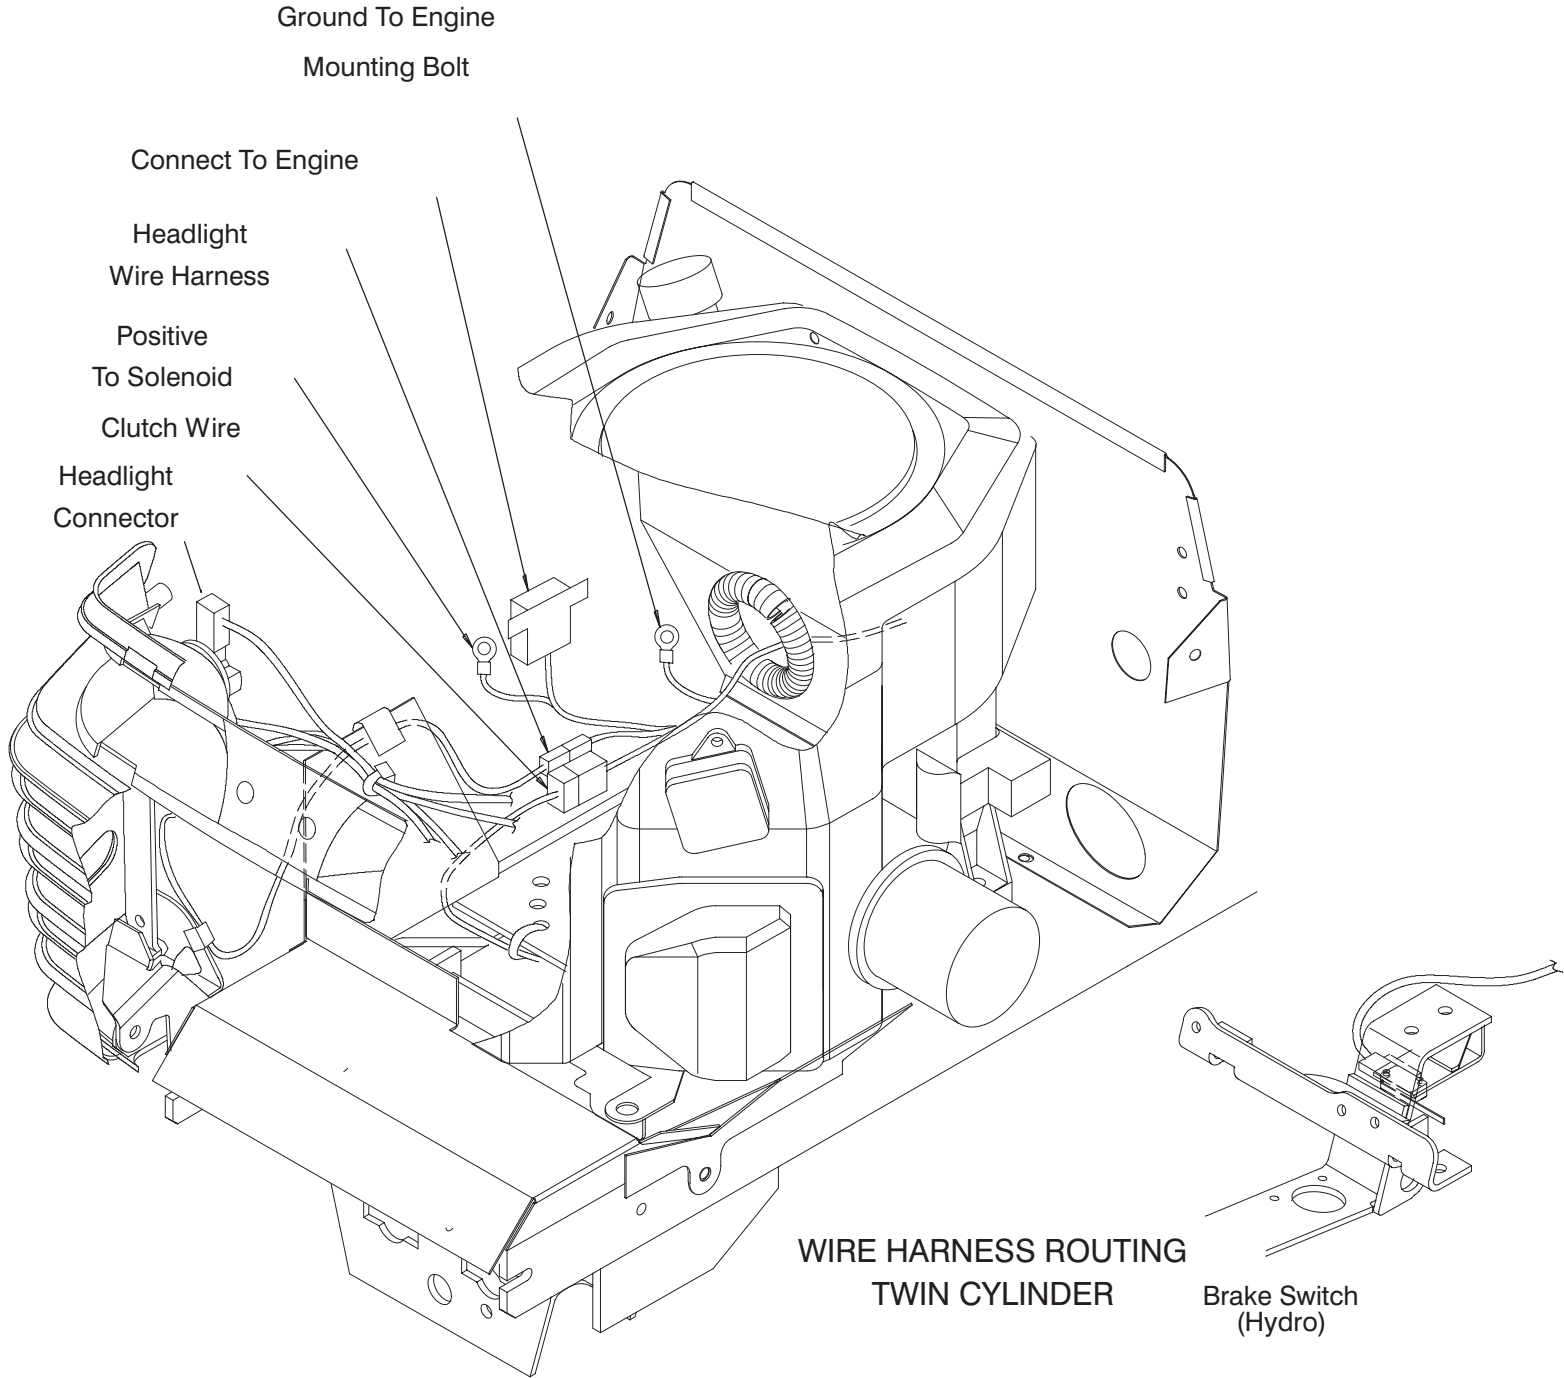

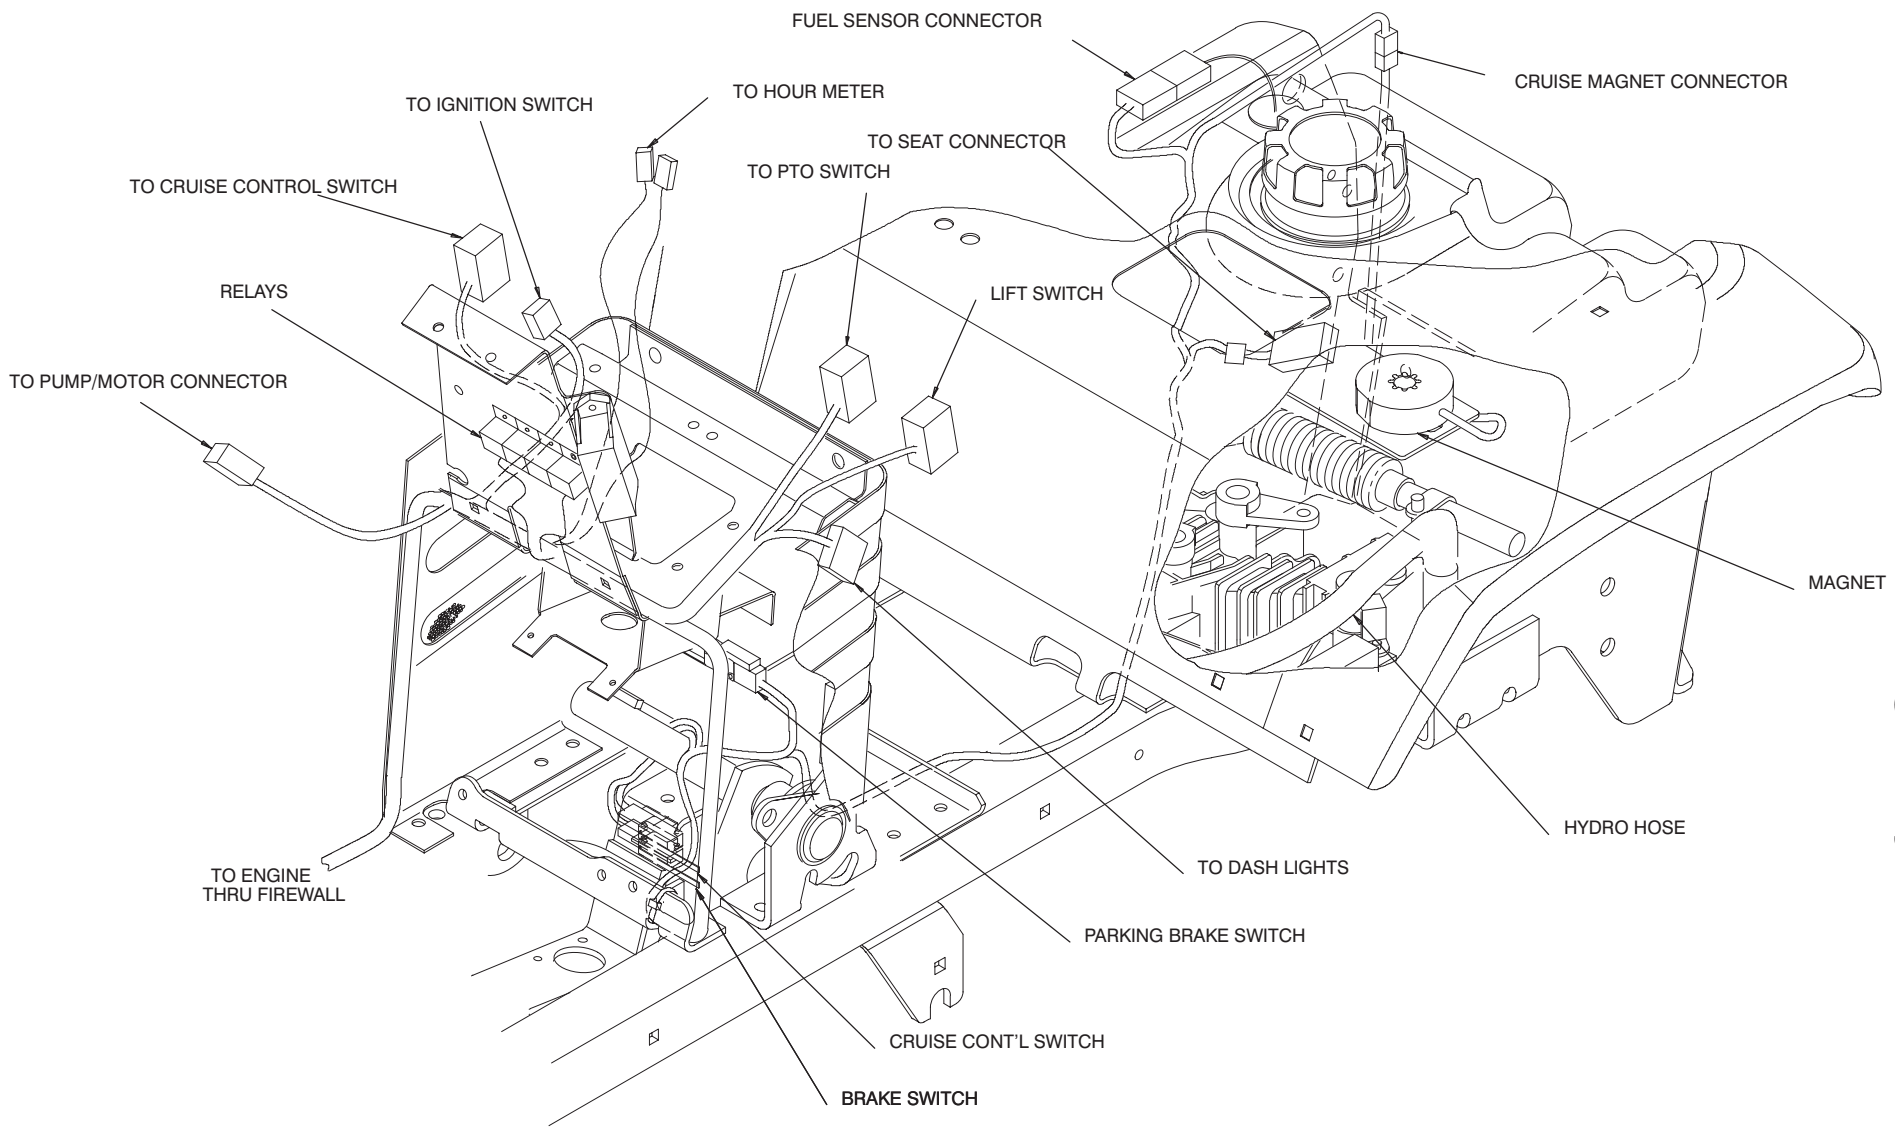

WIRE HARNESS ROUTING
TWIN CYLINDER HYDRO
W/CRUISE AND POWER LIFT

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1278	4	11	2	Washer—Shim
1278	5	17	4	Washer—Shim
1278	20	24	1	Washer—Shim
2534	15	1	2	Clip—Spring
5108	5	3:3	2	Valve—Tire Tubeless
5108	21	1:2	2	Valve—Tire Tubeless
5210	5	18	4	Washer—Shim
5618	5	19	1	Ring—Retaining
5618	20	15	1	Ring—Retaining
7896	3	4	1	Washer—Bowed
8830	14	16	1	Retainer—"J"
8870	13	25	1	Trunnion
105503	1	16	2	Bushing
105503	6	14	2	Bushing
106269	13	43	1	Bearing—Flange
106288	7	16	2	Clamp
106557	6	12	2	Reflector
106948	10	6	1	Tray—Battery
107069	7	20	4	Nut—Speed
108881	4	5	1	Nut—Hex
109189	4	7	1	Bearing—Flange
109547	10	8	2	Hook—Battery
109553	10	15	1	Boot—Battery Cable
109989	6	21	2	Spacer
110391	4	6	1	Bearing—Wheel
110513	5	3:2	4	Bearing—Wheel
111383	4	8	1	Collar w/Set Screw
111418	4	3	1	Bushing
111418	15	11	1	Bushing
111419	4	1	1	Washer—Bearing
111419	15	5	1	Washer—Bearing
111646	4	9	1	Grip Ring
112843	8	14	1	Washer—PTO
114064	9	4	2	Bearing—Elec Clutch
114720	10	9	1	Tube—Battery Drain
115593	13	8	1	Knob
115877	10	12	1	Battery
116397	2	31	4	Relay
116971	21	1:3	2	Tire
117127	5	3:4	2	Tire
117316	10	2	1	Rod—Battery Hold Down
120930	10	10:1	1	Fuse Holder
609900	7	9	2	Nut—Speed
700806	6	18	2	Knob
700919	2	15	1	Nut
701178	6	10	2	Cap—Protector
702366	1	27	1	Clip—Wire Retainer
702366	7	2	1	Clip—Wire Retainer
702366	8	2	1	Clip—Wire Retainer
933141	13	7	1	Pin—Spirol
933270	5	5	2	Pin—Roll
936118	18	12	2	Snap Ring
9114466	8	15	1	Screw HH
9150026	5	8	4	Nut—Lock
9202154	17	19	2	Washer—Flat
9202324	5	16	2	Washer—10 GA
9267154	5	10	1	Screw
5–1336	21	5	2	Key
24–7924	11	19	2	Cover—Drive Shaft
28–2480	5	20	2	Washer—Flat
38–1420	6	2	1	Switch—Seat
46–8093	1	31	2	Screw—TAP

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
46-8093	11	22	2	Screw-TAP
48-7730	3	20	2	Screw-HH
49-2040	18	15	3	Screw-HH
61-9780	5	1	2	Hubcap
62-7770	2	14	1	Key-Ignition
65-2920	16	16	1	Pad-Pedal
66-0120	2	10	2	Knob
76-1340	7	27	1	Decal-USA
78-1221	21	1:1	2	Wheel
78-1940-01	5	12	1	Arm-Front Spindle RH
78-1950-01	5	6	1	Arm-Front Spindle LH
78-2140	13	41	1	Trunnion
78-2431	13	29	1	Rod
78-2491-03	14	15	1	Stop-PTO
78-2601-01	5	13	2	Spindle
78-2610	4	2	1	Gear-Sector
78-2920	5	7:2	1	Joint-Ball
78-2920	5	9:2	1	Joint-Ball
78-5801	5	7:3	1	Joint-Ball RH w/ Jam Nut
78-5811	5	9:3	1	Joint-Ball LH
78-6810-03	13	35	1	Plate
78-6820-03	10	7	1	Plate-Battery
78-7360	13	33	1	Rod
78-7390	13	28	1	Link
78-7960-01	5	4	1	Axle-Front
78-9150-03	4	4	1	Plate
78-9740	13	9	1	Decal-HOC Knob
79-0950-03	6	17	1	Bracket-Pivot RH
79-0970-03	6	15	1	Bracket-Pivot LH
79-1250	13	27	2	Pin
79-3401-03	13	24	1	Gage Shaft
79-3500	12	10	1	Reservoir
79-7530	15	9	1	Spring-Extension
83-2720	21	6	10	Bolt-Lug
83-6620	11	13	1	Decal-Instruction
88-3870	3	6:1	1	Cover-Steering Wheel
88-3970	1	28	1	Reflector-Lamp
88-3980	12	2	1	Gas Cap ASM
88-4320	1	29	1	Harness-Wire
88-4590	15	4	1	Bolt-Shoulder
88-9930	13	2	1	Switch-Micro
88-9932	16	18	2	Switch - Micro
92-3014	9	1	3	Nut & Spring ASM
92-3016	9	3	1	Field ASM w/Bearing
92-6511	6	1	1	Seat
92-6656	1	23	1	Lens-Headlight
92-6674-03	14	7	1	Support-Fender
92-6680	2	8	1	Boot-Steering
92-6686	18	10	1	Pulley
92-6687	7	21	1	Mat-Foot RH
92-6688	7	18	1	Mat-Foot LH
92-6702	4	10	1	Shaft-Steering Lower
92-6705	2	26	1	Lens-Dash
92-6717	3	18	1	U-Joint-Steering
92-6720	2	18	1	Decal-Choke/PTO
92-6721	2	13	1	Decal-Throttle/Ignition
92-6725	7	23	1	Decal-HOC
92-6726	18	3	1	Decal-Hydro Valve
92-6727	7	5	1	Decal-Fuel Level
92-6728	1	12	1	Decal-Hood LH
92-6729	1	13	1	Decal-Hood RH
92-6730	7	3	1	Decal-Rear Fender

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–6737	12	8	1	Hose
92–6742	18	14	1	Fan
92–6747–01	7	19	1	Footrest–RH
92–6750	6	3	2	Spacer–Nylon
92–6769	18	2	2	U–Bolt
92–6776	3	13	1	Bracket–Detent
92–6777–03	3	1	1	Bracket–Support
92–6778–03	11	9	1	Support–Column
92–6780	8	5	4	Nut–HHF
92–6783	2	24	1	Control–Choke
92–6784	2	22	1	Control–Throttle
92–6785	2	17	1	Switch–Ignition
92–6794	13	4	1	Wedge–HOC Adjust
92–6795–01	7	28	1	Fender
92–6798	3	11	1	Cap–Rod
92–6855–03	13	32	1	Arm
92–6859–03	11	6	1	Support–Dash
92–6860	11	8	4	Nut–Retainer
92–6867–01	8	18	1	Shield–Muffler
92–6868–03	14	4	1	Bracket–Idler
92–6869	20	13	1	Bushing
92–6877	8	9	1	Valve–Oil Drain
92–6883	5	7	1	Steering Link RH
92–6884	5	9	1	Steering Link LH
92–6888	8	12	1	Pulley
92–6900	15	7	1	Arm–Idler
92–6902	17	18	1	Pad–Pedal Forward
92–6903	17	1	1	Pad–Pedal Reverse
92–6913–03	17	2	1	Pedal–Hydro
92–6914–03	1	32	1	Baffle–Hood Upper
92–6917–03	1	10	1	Bracket–Hinge RH
92–6918–03	1	9	1	Bracket–Hinge LH
92–6936–03	11	15	1	Cover–Side LH
92–6937–03	11	2	1	Cover–Side RH
92–6943	18	13	1	Spacer–Fan
92–6949	16	16	1	Tube–Brake
92–6954	18	9	1	Belt
92–6960	11	24	2	Latch–Hood
92–6962	17	7	1	Bushing
92–6964–03	14	6	1	Bracket–HOC
92–6965	13	6	1	Rod–HOC
92–6966	17	17	1	Spacer–Hydro Pedal
92–6968	16	5	1	Trunnion–Brake
92–6971	3	5	1	Lever–Tilt
92–6972–03	6	5	1	Support–Seat
92–6978	13	38	1	Rod–HOC Indicator
92–6979	13	42	1	Plate–HOC Gage
92–6982	16	14	1	Spacer–Brake
92–6986	6	8	2	Bolt–Shoulder
92–6987	1	24	1	Decal–Horsehead
92–6988	16	8	1	Rod–Brake
92–6989	10	1	1	Cable–Battery Red
92–6992–03	14	12	1	Bracket–Steering
92–6996–03	1	18	1	Hinge–Hood RH
92–6997–03	1	17	1	Hinge–Hood LH
92–6998	3	22	1	Spacer–Yoke
92–6999	3	15	1	Spacer–Yoke
92–7000–03	16	4	1	Bracket–Park Brake
92–7004–03	16	22	1	Support–Park Brake
92–7006	1	4	4	Nut
92–7007	13	39	1	Spring–Extension
92–7008	17	15	2	Rod End

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-7009	16	2	1	Grip-Parking Brake
92-7018	17	4	1	Rod
92-7020	7	25	4	Screw-TTH
92-7020	11	1	9	Screw-TTH
92-7048-03	1	21	1	Bracket-Hood Hinge RH
92-7049-03	1	20	1	Bracket-Hood Hinge LH
92-7054	6	7	2	Spring-Compression
92-7057-03	5	11	1	Pin-Front
92-7076	1	3	1	Inlet-Seal Air
92-7101	15	8	1	Pulley-Flat
92-7102	15	13	2	Pulley-Idler
92-7148	1	6	2	Foam-Sidepanel
92-8747	14	14	2	Decal-Attach A Matic
92-8946	7	26	1	Decal-Danger
93-0302	11	12	1	Decal-Slope/Park Brake
93-0324	10	5	1	Cable-Battery Black
93-0350	8	6	2	Gasket-Exhaust
93-0486-03	11	14	1	Hoodstand w/Decals
93-0489-01	7	24	1	Plate-Footrest w/Decal
93-0490	1	2	1	Hood
93-0491	1	7	1	Sidepanel-LH Hood
93-0492	1	8	1	Sidepanel-RH Hood
93-0494	1	22	1	Grille & Screen ASM
93-0511	19	7	1	Arm-Cruise
93-0512-03	19	2	1	Cruise Bracket
93-0515	19	10	1	Clamp-Cruise
93-0516	2	11	1	Cover-Cruise
93-0520-03	16	21	1	Bracket-Micro Sw
93-0523-03	13	44	1	Bracket-Pivot Linkage
93-0527	2	20	1	Switch-Cruise
93-0539	16	17	2	Screw-PPH
93-0540	16	9	1	Spring-Extension
93-0546-03	18	8	1	Strap-Torque
93-1131	11	23	1	Trim-Seal
93-1144	12	6	2	Spacer-Fuel Tank
93-1146	3	3	1	Bushing-Steering
93-1148-03	3	12	1	Column
93-1357	3	14	1	Spring-Extension
93-1627	12	5	1	Hose-Fuel Line
93-3167	16	1	1	Rod-Park Brake
93-3190	10	16	1	Boot-Terminal Insulator
93-3240	16	20	2	Seal-Plunger
93-3658	15	12	2	Spacer
93-3659-03	21	2	2	Hub-Wheel
93-4366	19	3	1	Magnet Assembly
93-7308	2	25	1	Decal-Dash Lens
93-8452	2	28	1	ASM-Housing
93-9800	5	3	2	ASM-Wheel & Tire
93-9801	5	3:1	2	ASM-Wheel w/Zerk
93-9998	2	16	1	Switch-PTO
94-1588	17	8	1	Rod-Bypass
94-1700	20	1	1	Pump ASM-Hydraulic
94-1701	20	19	1	Cylinder ASM-Hydraulic
94-1705-03	20	20	1	Wa-Cylinder Mtg Brkt
94-1708	20	16	1	Wa-Rod
94-1709-03	20	18	1	Bracket-Support
94-1710	2	19	1	Cover-Lift
94-1711-01	7	13	1	Footrest-LH
94-1712-03	11	4	1	Panel-Support
94-1713	20	3	1	Hose ASM
94-1714	2		1	Housing-Light
94-1716	12	17	1	Fuel Level Sensor ASM

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-1717-03	7	6	1	W.a.—Rear Panel
94-1720	16	16	1	Lever—Brake
94-1722-03	16	10	1	Lever—Brake
94-1735	10	10	1	Harness—Wire
94-1742	2	21	1	Switch—Lift
94-1743	20	25	1	Tubing
94-1747-03	20	7	1	Bracket—Mounting
94-1748-03	20	5	1	Clamp—Hydraulic Pump
94-1749-03	11	18	1	Firewall
94-1894	2	7	1	Dash—Hydro
94-1980	1	1	2	Foam—Hood
94-2514	8	13	1	Clutch—Electric PTO
94-2668	14	10	1	Frame Wa
94-2869	6	20	2	Washer—Flat
94-2869	7	12	4	Washer—Flat
94-2874	3	9	1	Shaft—Steer Upper
94-2966	2	9	1	Clip—Boot
94-3344	20	2	1	Hose Assy
94-3347	12	17:1	1	Seal—Fuel Sensor
94-3348	12	17:2	1	Sensor—Fuel Level
94-3387	11	16	2	Decal—269—H
94-3389	8	8	1	Decal—Toro Power Plus 19
94-3501	3	6	1	Wheel—Steering
94-3514	8	7	1	Engine—Kohler 19
94-3552-03	13	34	1	Lift Arm W.a.
94-3553-03	20	11	1	End Cap W.a
94-3561	20	4	2	Fitting—O Ring/Jic 90deg
94-3717	5	21	2	ASM—Hubcap
94-3718	21	7	2	ASM—Hubcap
94-3730	5	21	2	Hubcap—8"
94-3731	21	7	2	Hubcap—12"
94-3736	5	22	2	Horsehead Logo
94-3736	21	8	2	Horsehead Logo
94-4205	18	4	1	Transaxle—Hydro
94-4208	2	27	1	Hourmeter
94-4233-03	16	15	1	Brake Pedal Wa
94-4909	6	1:1	1	Trim—Seat (Service)
94-4927	20	12	1	Arm—HOC
94-4928	20	14	1	Bracket—Lift Arm
94-4930	9	2	1	Rotor & Armature ASM
94-4944	13	30	1	Shaft
94-4945	17	12	1	Spacer
94-6875	17	11	1	Washer
94-6927	12	3	1	Tank—Gas
94-6950-03	8	1	1	Muffler Baffle ASM
94-6961	2	29	3	Screw—M4.2—2.25 X .50
94-9409	8	4	1	Muffler
95-3003	13	3	2	Screw
95-3260	20	27	1	Pushnut .50 Stud
2412-98	12	4	2	Clamp—Hose
2412-129	12	9	2	Clamp—Hose
250-7	11	27	1	Tie—Cable
256-90	13	31	2	Bushing—Flange
256-90	16	12	2	Bushing—Flange
302-5	5	14	2	Fitting—Grease
302-11	5	15	1	Fitting—Grease
302-26	17	16	1	Fitting—Grease
321-4	3	2	4	Screw—HH
321-4	7	8	2	Screw—HH
321-4	10	3	2	Screw—HH
321-4	11	10	4	Screw—HH
321-4	12	7	2	Screw—HH

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
321-4	20	8	2	Screw-HH
322-3	1	15	2	Screw-HH
322-3	3	17	1	Screw-HH
322-5	6	4	4	Screw-HH
322-5	14	8	1	Screw-HH
322-5	15	14	2	Screw-HH
322-5	19	8	2	Screw-HH
322-6	18	1	1	Screw-HH
322-9	8	16	4	Screw-HH
322-12	18	7	1	Screw HH
322-17	3	23	1	Screw-HH
323-6	19	1	2	Screw-HH
323-7	17	13	1	Screw-HH
323-10	15	2	3	Screw-HH
323-10	17	10	1	Screw-HH
3217-9	3	7	1	Nut-HH
3218-3	21	4	4	Nut-HJ
3220-3	17	3	2	Nut-Hex Jam
3229-11	11	5	4	Bolt-CARR
3229-33	20	10	1	Screw-CARR
3230-1	1	26	2	Bolt-CARR
3230-2	6	19	4	Screw-CARR
3230-2	14	3	2	Screw-CARR
3230-20	7	15	4	Bolt-CARR
3230-23	7	22	3	Bolt-CARR
3230-23	7	29	1	Bolt-CARR
3230-31	7	4	6	Screw-CARR
3231-4	4	12	1	Bolt-CARR
3231-25	8	17	2	Screw-CARR
3231-25	13	21	2	Screw-CARR
3243-5	21	3	4	Screw-Set
3245-32	4	8:1	1	Screw-Set
3245-32	18	11	1	Screw-Set
3253-4	3	19	2	Washer-Lock
3253-5	17	14	1	Washer-Lock
3253-7	3	8	1	Washer-Lock
3256-22	7	7	2	Washer-Flat
3256-22	12	12	4	Washer-Flat
3256-22	20	9	2	Washer-Flat
3256-23	3	16	2	Washer-Flat
3256-23	7	10	2	Washer-Flat
3256-23	14	2	2	Washer-Flat
3256-23	15	15	2	Washer-Flat
3256-23	16	7	1	Washer-Flat
3256-23	18	5	5	Washer-Flat
3256-24	8	19	2	Washer-Flat
3256-24	13	22	2	Washer-Flat
3256-24	15	6	7	Washer-Flat
3256-24	16	13	1	Washer-Flat
3256-24	17	6	4	Washer-Flat
3256-26	13	20	6	Washer-Flt
3256-28	3	10	1	Washer-Flat
3256-49	6	13	4	Washer-Flt
3272-2	17	9	1	Pin-Cotter
3272-6	13	18	1	Pin-Cotter
3272-6	16	6	2	Pin-Cotter
3272-6	20	21	1	Pin-Cotter
3272-17	5	2	2	Pin-Cotter
3290-282	6	11	4	Pop Rivet
3290-354	13	1	1	Nut-Speed
3290-354	16	19	1	Nut-Speed
3290-479	7	17	14	Fastener-Panel

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296-8	3	24	4	Nut-Lock
3296-8	11	7	4	Nut-Lock
3296-8	20	23	2	Nut-Lock
3296-23	13	26	1	Nut-Lock
3296-29	1	19	4	Nut-Lock
3296-29	3	21	2	Nut-Lock
3296-29	6	16	6	Nut-Lock
3296-29	7	11	14	Nut-Lock
3296-29	8	11	4	Nut-Lock
3296-29	14	1	2	Nut-Lock
3296-29	14	9	1	Nut-Lock
3296-29	15	3	3	Nut-Lock
3296-29	18	6	6	Nut-Lock
3296-29	19	9	2	Nut-Lock
3296-39	8	20	2	Nut-Lock
3296-39	13	23	2	Nut-Lock
3296-39	17	5	1	Nut-Lock
3296-39	19	4	2	Nut-Lock
3296-42	11	11	3	Nut-Lock
3296-42	12	13	2	Nut-Lock
3296-58	6	9	2	Nut-Flange
3296-59	15	10	4	Nut-Lock
32103-22	10	4	4	Nut-Wing
32103-22	11	21	4	Nut-Wing
32103-22	20	6	1	Nut-Wing
32104-96	12	16	2	Screw-HHST
32105-15	1	5	12	Screw-HH
32120-47	13	19	5	Ring-Retaining
32121-25	13	40	1	Pin-Roll
32121-69	16	11	1	Pin-Spring
32121-103	13	37	1	Pin-Spring
32128-10	1	14	8	Nut-Lock HHF
32144-4	11	20	2	Screw-TAP
32144-4	13	5	1	Screw-TAP
32144-8	2	30	2	Screw-PPH
32144-8	11	26	2	Screw-PPH
32144-14	1	11	2	Screw-HWH
32144-14	8	3	3	Screw-HWH
32144-14	10	11	1	Screw-HWH
32144-14	11	25	2	Screw-HWH
32144-14	13	36	2	Screw-HWH
32144-14	13	45	2	Screw-HWH
32144-14	14	5	6	Screw-HWH
32144-14	16	3	4	Screw-HWH
32144-14	20	17	5	Screw-HWH
32144-32	1	33	2	Screw-Plastic
32144-32	2	23	4	Screw-Plastic
32144-118	8	10	2	Screw-PPH
32149-2	11	3	2	Nut-Hex Lock
505-136	20	26	1.4	Oil-Transaxle