



21" Recycler[®] Mower

Model No. 20445 – 7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing & Wheel Assembly	1	Engine Briggs & Stratton	
Engine & Blade Assembly	2	Model 12F802–1750–A1	6–14
Handle Assembly	3	Toro Part Number Index	15–16
Discharge Chute Assembly	4	Maintenance	17
Discharge Plug Assembly	5		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Discharge Chute	Model No. 59198		
Bag Kit	Model No. 59297		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

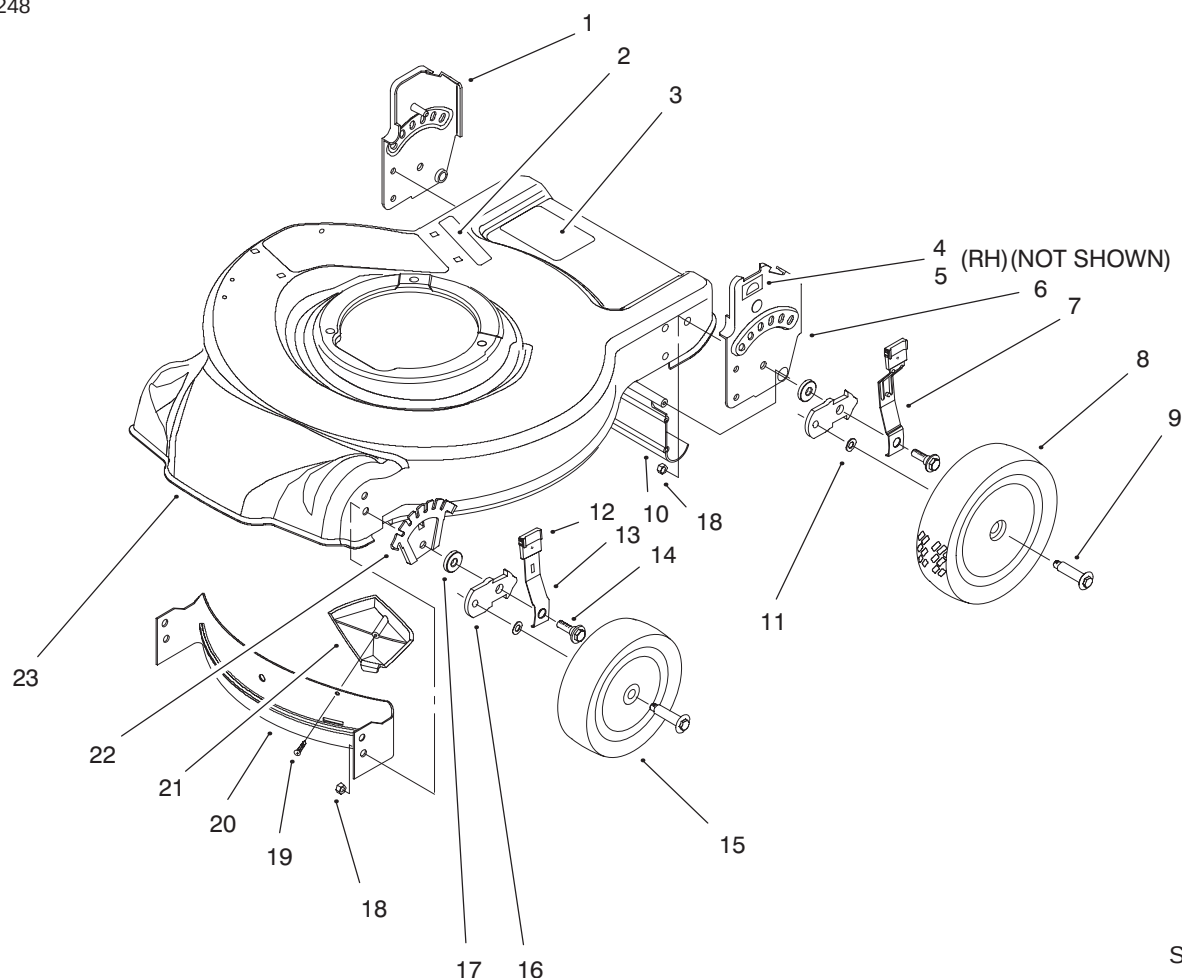


Sheet No.:2

Housing & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	93-0236	1	ASM – Brkt
2	93-0262	1	Decal–Warning
3	93-0248	1	Decal–Warning
4	92-2915	1	Decal–HOC L.h.
5	92-2914	1	Decal–HOC R.h.
6	93-0235	1	ASM – Brkt
7	92-1005	2	ASM–Spring Arm
8	92-9592	2	ASM–Wheel
9	614650	4	Bolt–Shoulder
10	92-8647	1	Shield–Trailing
11	40-1940	4	Washer
12	92-1008	4	Knob–Height Adjust
13	614687	2	Spring Arm–Front
14	614672	4	Bolt–Shoulder
15	92-9591	2	ASM–Wheel
16	614637	4	Bracket–Wheel Height Adj
17	92-4890	4	Washer
18	3296-39	4	Nut–Lock
19	93-0231	1	Screw–Plastite
20	93-0222	1	Baffle–Front
21	93-0216	1	Kicker–Front
22	92-4881	2	Plate–Height Adjust
23	16-9259	1	Deck–21in Steel (Incl. Ref. #2 & 3 pg. 1) (Incl. Ref. #29 pg. 2)


Ref. No.	Part No.	Qty.	Description

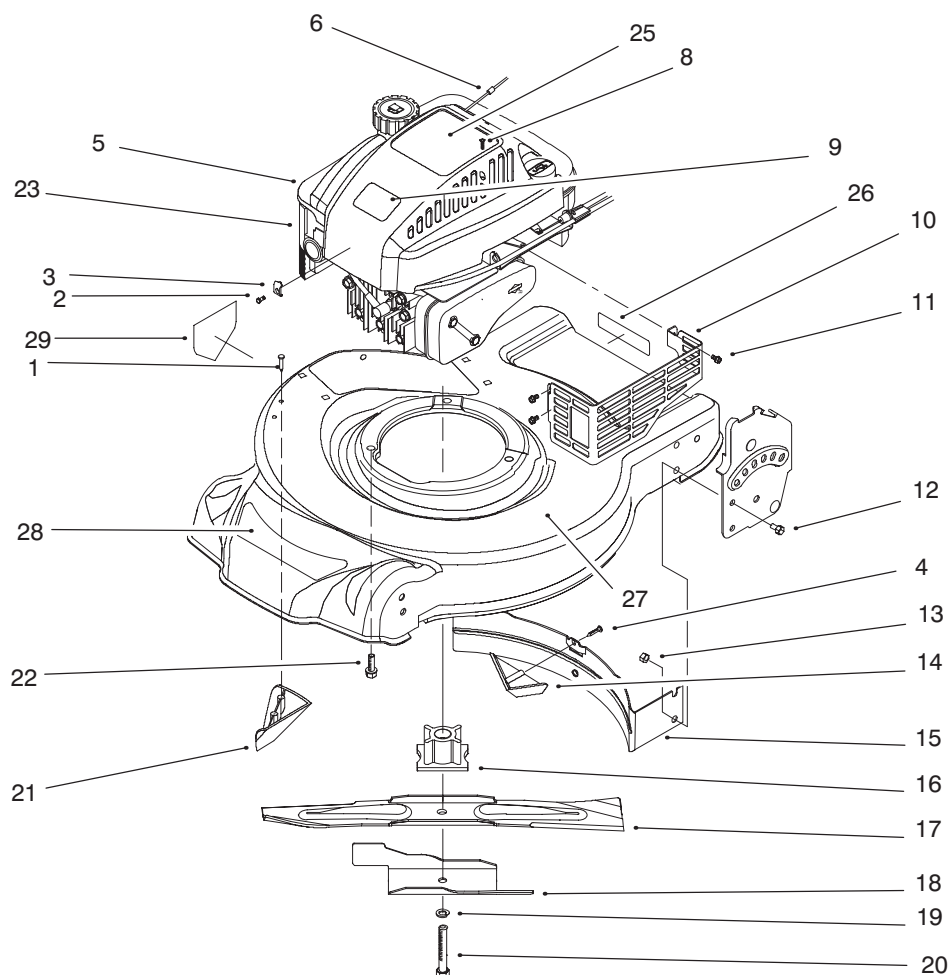

Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32144-111	2	Screw – PPH	28	93-0245	1	Decal-Deck
2	93-8470	1	Screw-Clamp (P/W Eng)	29	39-5770	1	Decal-Danger
3	2210-249	1	Clamp-Casing (P/W Eng)				
4	93-0231	1	Screw-Plastite				
5	93-0243	1	Shroud-Qt Wedge				
6	2210-316	1	Rope-Stop (P/W Eng)				
8	32144-121	2	Screw				
9	92-2289	1	Plate-Logo				
10	82-8550	1	Shield-Muffler				
11	32144-73	3	Screw-HWHTF				
12	322-3	4	Screw-HH				
13	3296-29	4	Nut-Lock				
14	93-0217	1	Kicker-Rear				
15	93-0223	1	Baffle-Rear				
16	62-7540	1	Retainer-Blade				
17	93-0241	1	Blade-Steel Deck				
18	93-0219	1	Accelerator				
19	3253-22	1	Washer-Lock				
20	26-0670	1	Bolt-Blade				
21	93-0218	1	Kicker-Side				
22	92-1624	3	Screw-Engine				
23		1	Engine-Quantum 5.0 Carb				
25	95-1652	1	Decal-Recoil				

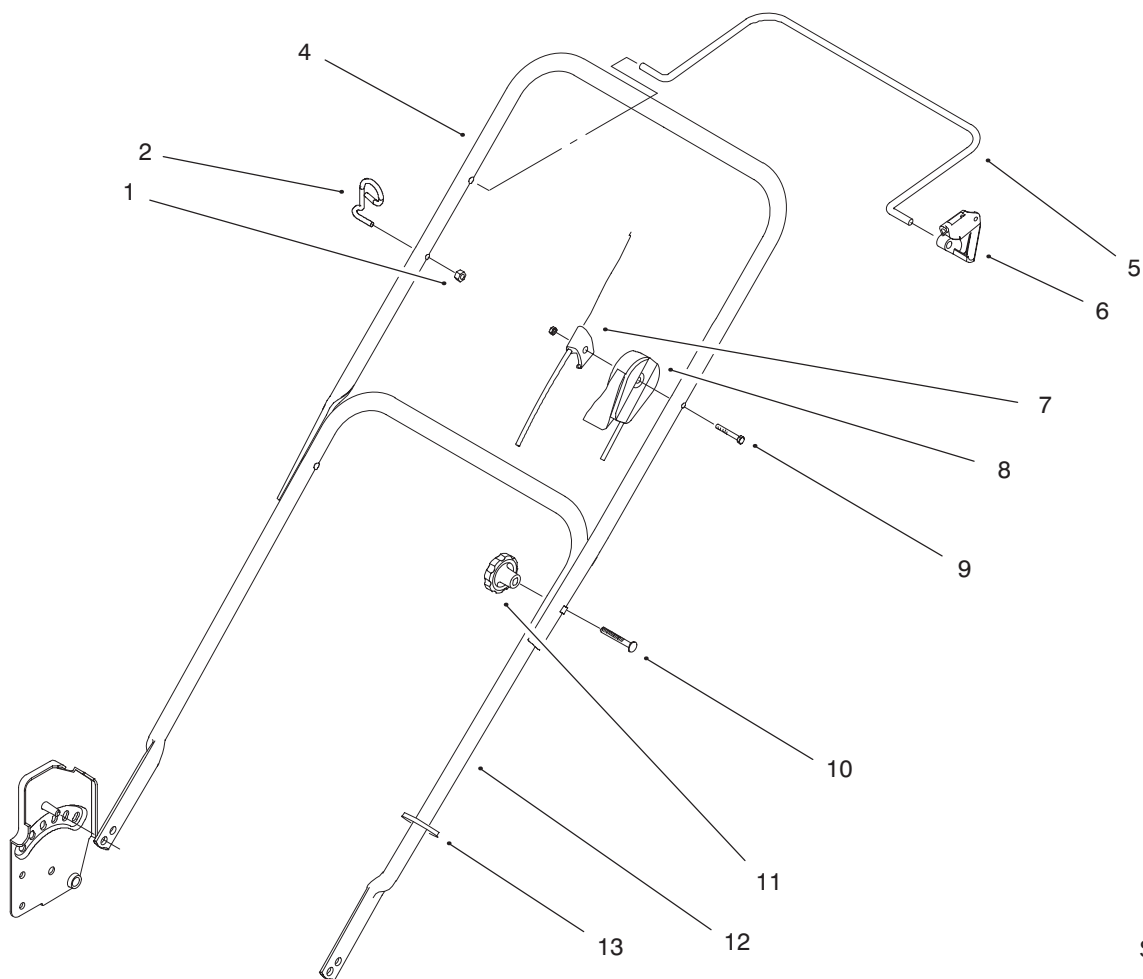


Sheet No.:4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-73	2	Nut-Lock
2	86-9671	1	Guide-Rope
4	93-0237	1	Handle-Upper
5	92-3134	1	Bar-Control
6	92-5412	1	Stop-Pivot
7	93-0253	1	Cable-Brake
8	93-0252	1	Cable-Throttle
9	92-2269	1	Screw-Handle
10	92-2260	2	Screw-Handle
11	19-4050	2	Knob
12	93-0238	1	Handle-Lower
13	3290-378	1	Tie-Cable

Ref. No.	Part No.	Qty.	Description

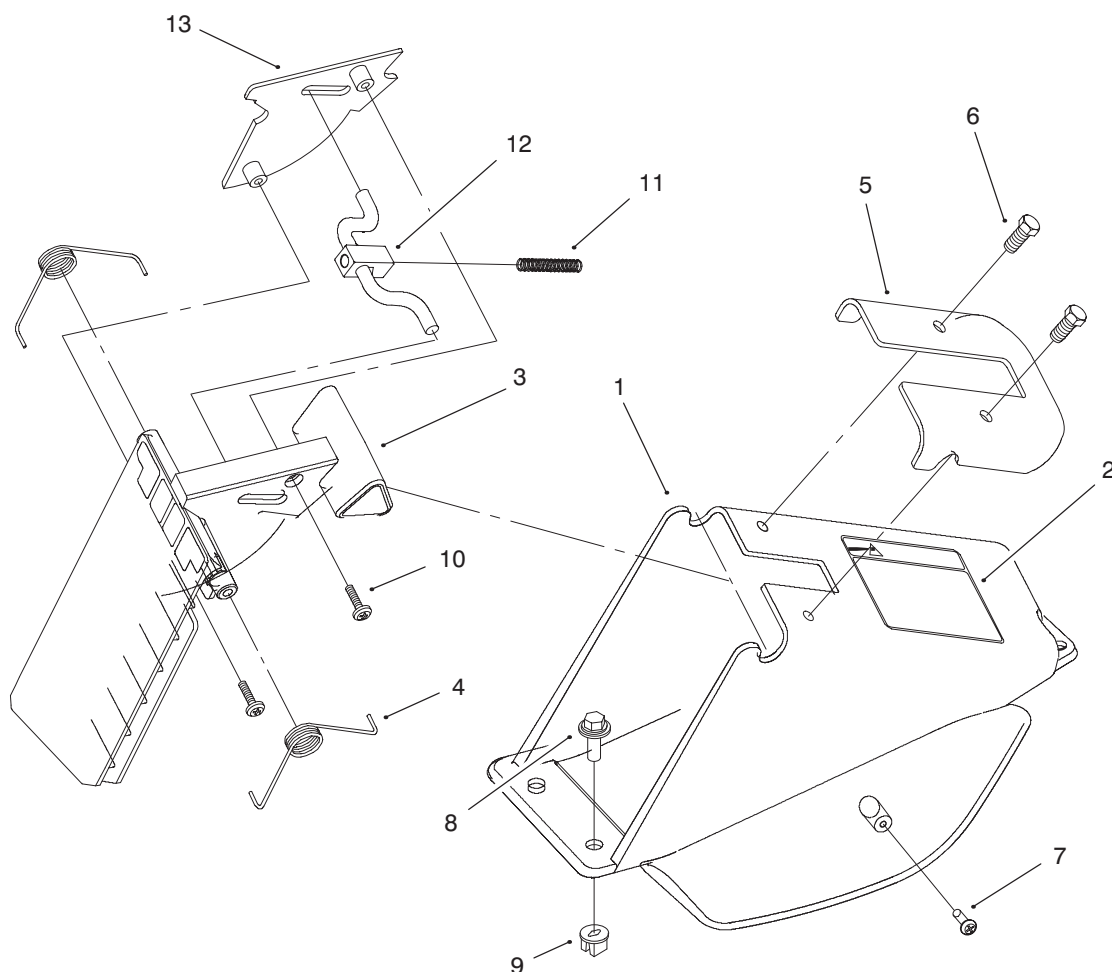


Sheet No.:5

Discharge Chute Assembly

Ref. No.	Part No.	Qty.	Description
1	94-1683	1	Chute-Discharge
2	88-3360	1	Decal-Caution Door
3	93-0264	1	Door-Discharge
4	88-1090	2	Spring-Door
5	93-0267	1	Plate-Discharge Chute
6	46-8090	2	Screw-Tapping
7	32144-111	1	Screw - PPH
8	46-6811	4	Screw-HWH
9	93-0242	4	Grommet
10	32144-32	2	Screw-Plastic
11	33-0450	1	Spring-Door
12	88-1800	1	Latch-Door
13	33-0441	1	Cover-Door

Ref. No.	Part No.	Qty.	Description

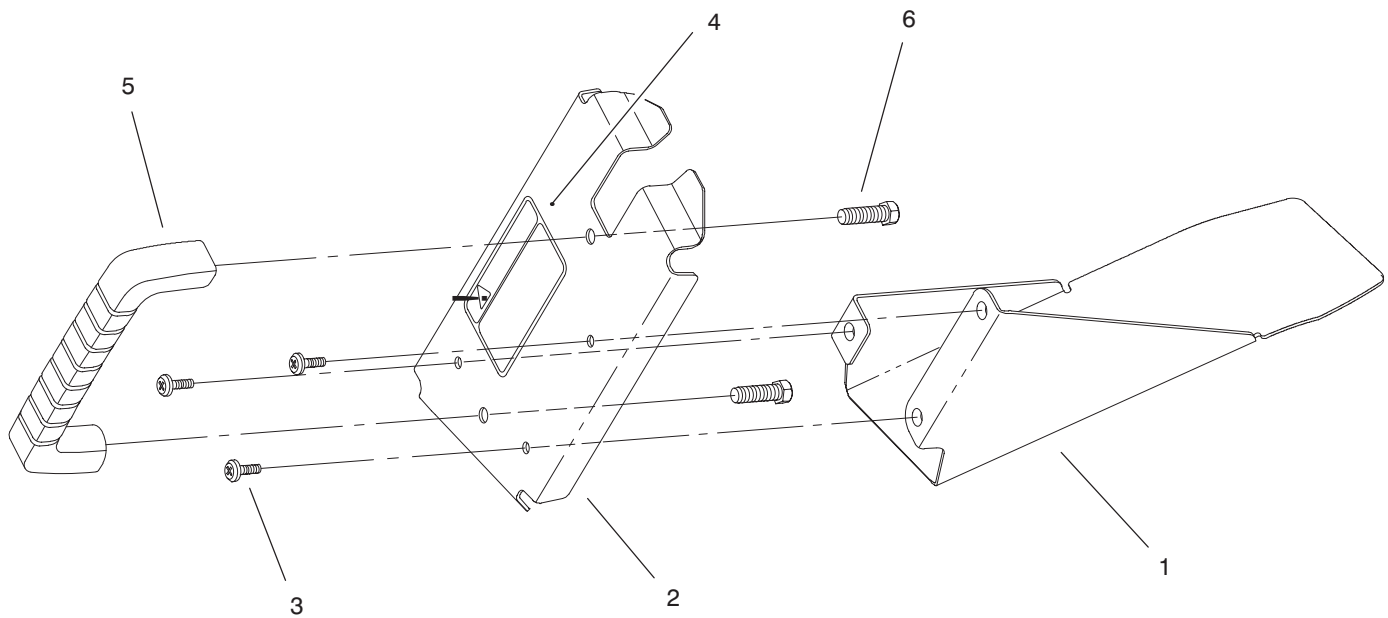


Sheet No.:6

Discharge Plug Assembly

Ref. No.	Part No.	Qty.	Description
1	93-0279	1	Shield-Discharge Plug
2	93-0280	1	Cover-Discharge Plug
3	32104-122	3	Screw-PH PH
4	88-6930	1	Decal - Warning
5	65-5100	1	Handle - Wood
6	46-8091	2	Screw-Tapping


Ref. No.	Part No.	Qty.	Description

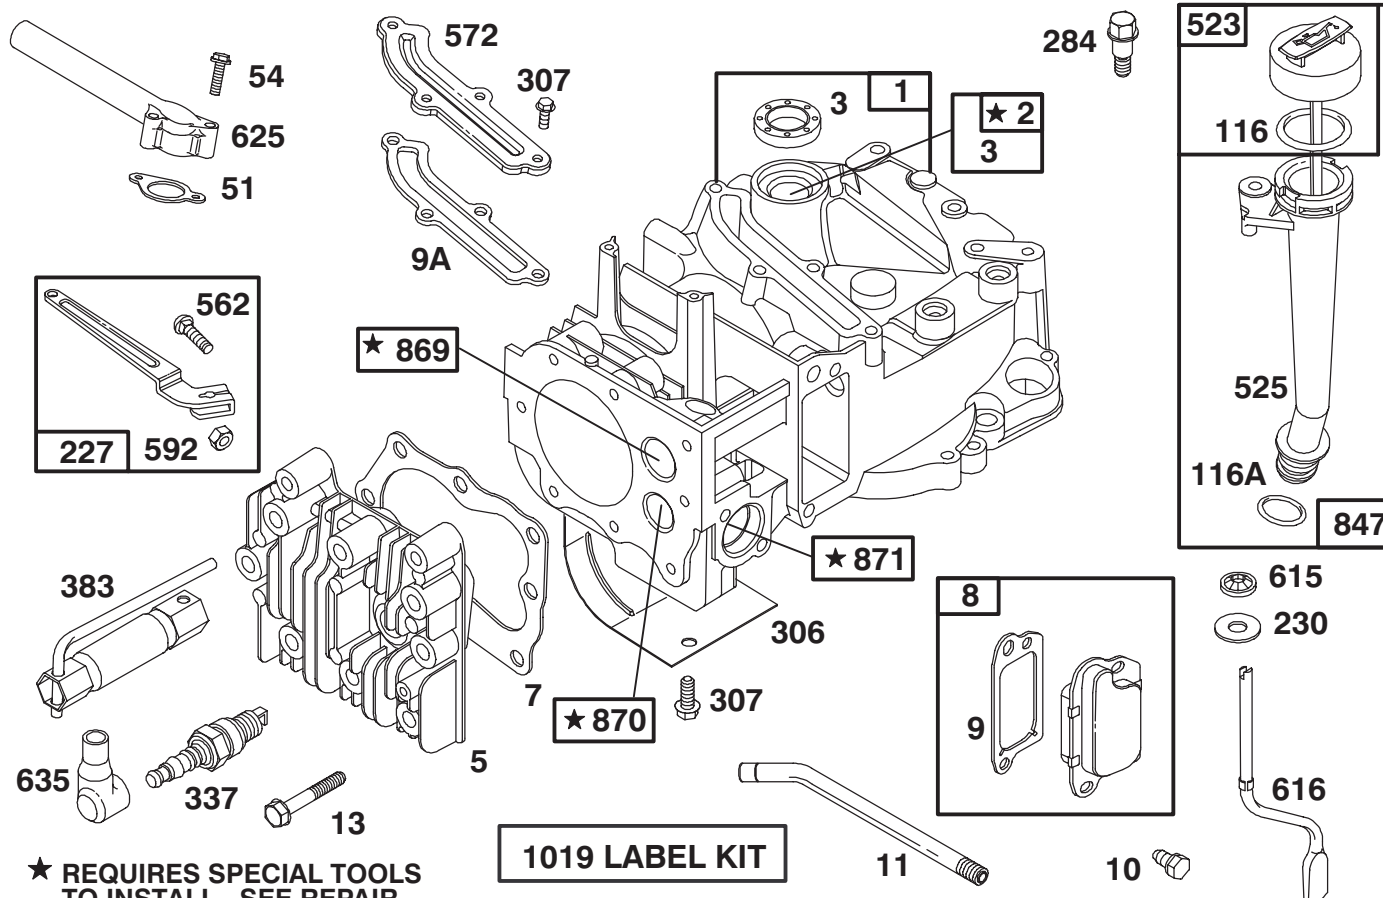

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-A1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1	337	802592	Plug — Spark	1
2	293708	Bushing	1	383	89838	Wrench — Spark Plug	1
★3	299819	Seal — Oil	1	523	495264	Dipstick	1
5	214626	Head — Cylinder	1	525	495265	Tube — Oil Filler	1
★7	272916	Gasket — Cylinder Head	1	562	94582	Screw — Hex.	1
8	495786	Breather Assy.	1	572	224328	Baffle — Cylinder	1
★9	272481	Gasket — Breather	1	592	231082	Nut — Hex.	1
★9A	272238	Gasket — Breather	1	615	94474	Fastener	1
10	94650	Screw — Hex.	1	616	263175	Crank — Governor	1
11	231933	Tube — Breather	1	625	497465	Tube — Fuel Intake	1
13	94876	Screw — Hex.	1	635	66538	Elbow — Spark Plug	1
★51	272199	Gasket — Intake Elbow	1	847	495263	Dipstick/Tube Assy.	1
54	94526	Screw — Hex	1	869	213512	Seat — Valve (Intake)	1
★116	280393	Seal — O Ring	1	870	213513	Seat — Valve (Exhaust)	1
★116A	280966	Seal — O Ring	1	871	262001	Bushing — Guide (Exhaust)	1
227	492349	Lever Assembly — Gov.	1			Note: 63709 Bushing — Guide (Intake)	1
230	67072	Washer — Gov. Crank	1	1019	494256	Label Kit	1
284	94511	Screw — Hex.	1				
306	224324	Shield — Cylinder	1				
307	94515	Screw — Hex.	1				

★ Included in Gasket Set—Part No. 497316.

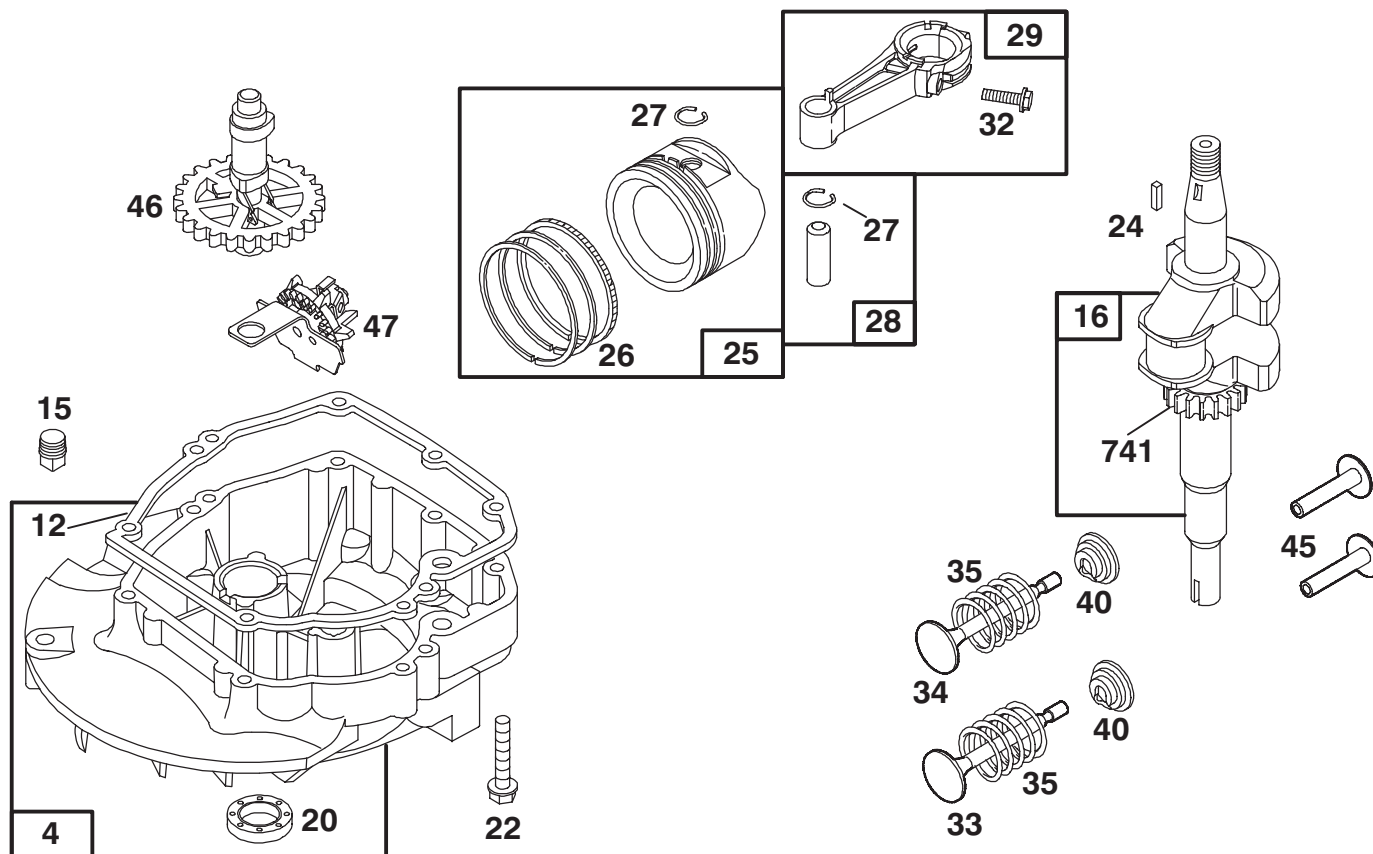


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-A1

Ref. No.	Part No.	Description	No. Used
4	493279	Sump — Engine	1
★12	272198	Gasket — Crankcase	1
15	94880	Plug — Oil Drain	1
16	494546	Crankshaft	1
		Note: For Timing Gear Key Order 94388.	
★20	399781	Seal — Oil	1
22	94220	Screw — Hex.	1
		Note: 94612 Screw — Hex.	
		(One (1) Used in Hole Nearest Breather.)	1
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005" O.S.)	1
29	490566	Rod Assembly — Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	
32	94699	Screw — Connecting Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
40	93312	Retainer — Valve Spring	1
45	262204	Tappet — Valve	1
46	498275	Gear — Cam	1
47	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

★ Included in Gasket Set—Part No. 497316.

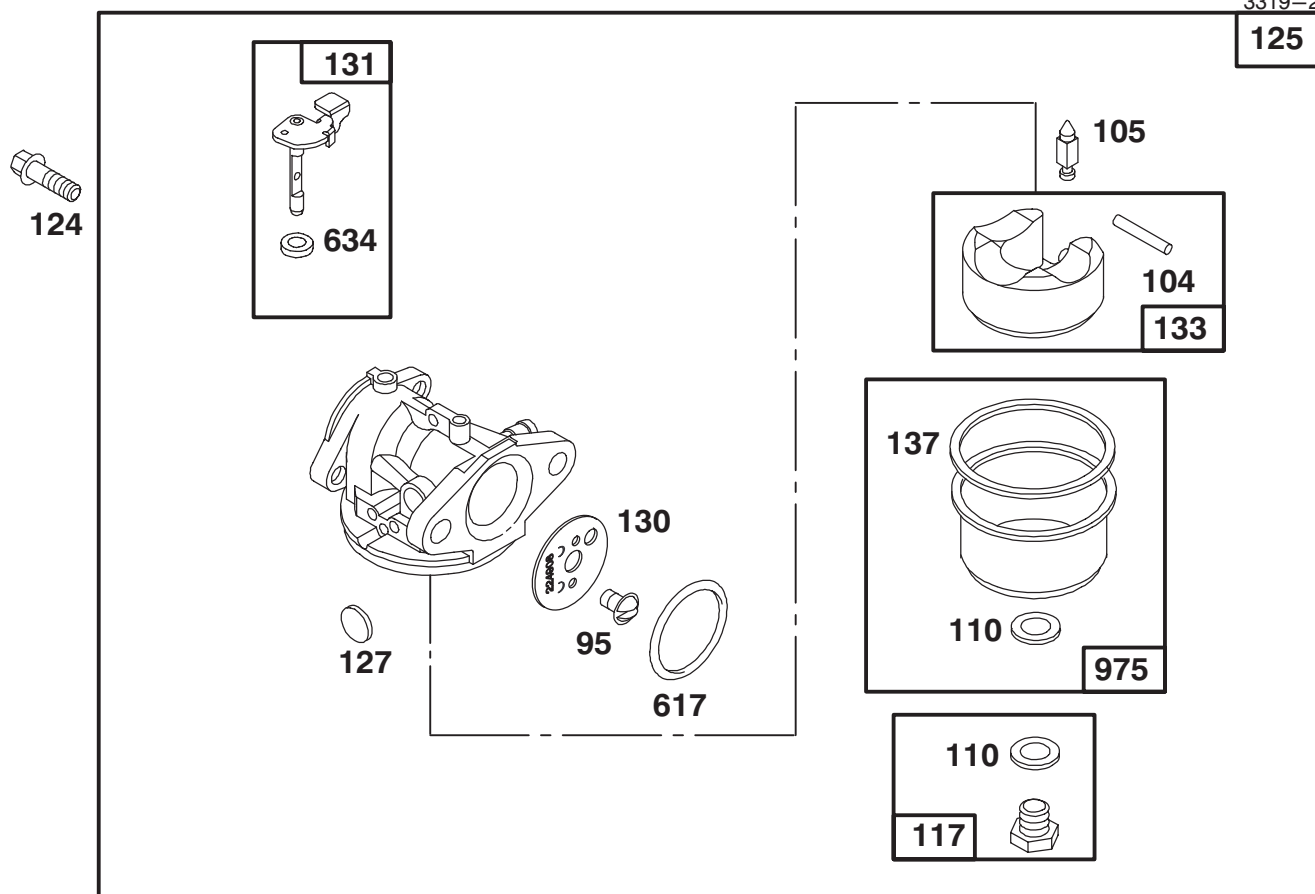

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12F802-1750-A1

Ref. No.	Part No.	Description	No. Used
95	94098	Screw — Slotted	1
●104	231371	Pin — Float Hinge	1
●105	398188	Valve — Needle (Includes Seat)	1
◆110		Washer — Bowl (Sold in Kit Only).	1
117	494870	Jet — Main (Std.) Note: 497315 Jet — Main (High Altitude)	1
124	94840	Screw — Hex	1
125	498170	Carburetor	1

Ref. No.	Part No.	Description	No. Used
●127		Plug — Welch (Sold in Kit Only).	1
130	224908	Valve — Throttle	1
131	493267	Shaft — Throttle	1
133	398187	Float — Carburetor	1
◆137		Gasket — Bowl (Sold in Kit Only).	1
◆617	270344	Seal — Intake Manifold	1
◆634		Washer — Foam (Sold in Kit Only).	1
975	493640	Bowl — Float	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

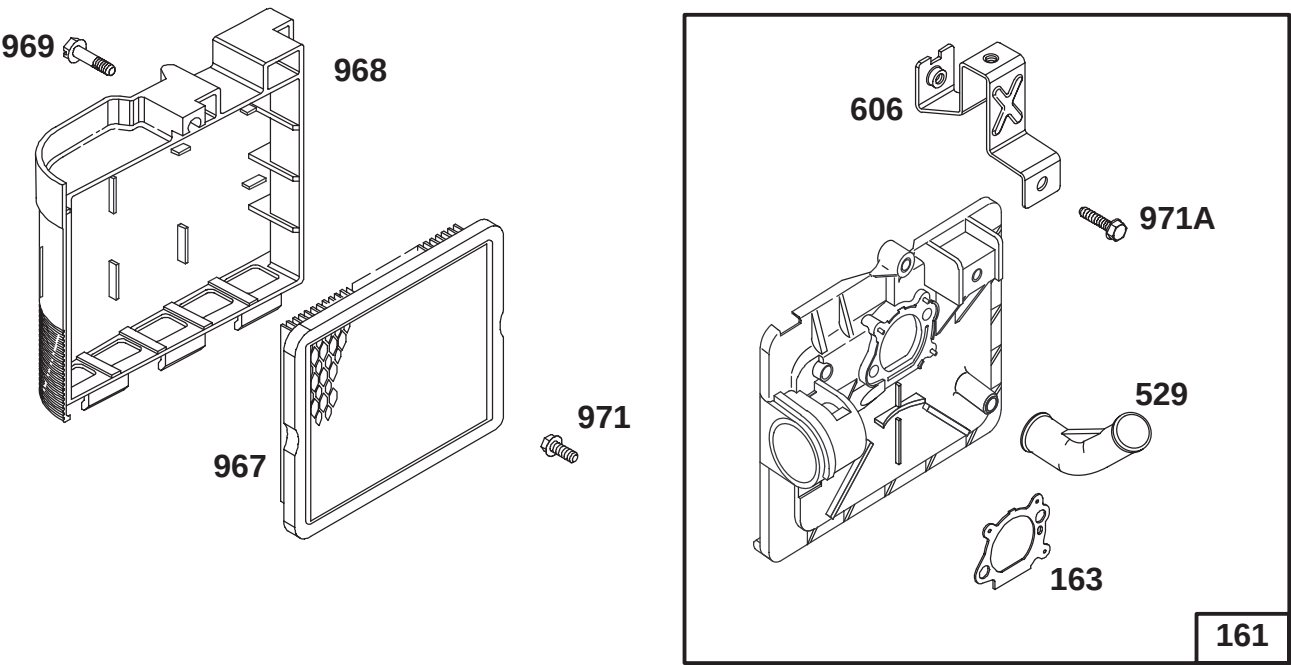


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-A1

Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet	1
606	224815	Bracket – Support	1
967	491588	Filter – Air	1

Ref. No.	Part No.	Description	No. Used
968	281340	Cover – Air Cleaner	1
969	94872	Screw – Slotted Hex.	1
971	94873	Screw – Hex.	1
971A	94749	Screw – Hex.	1

★ Included in Gasket Set—Part No. 497316.

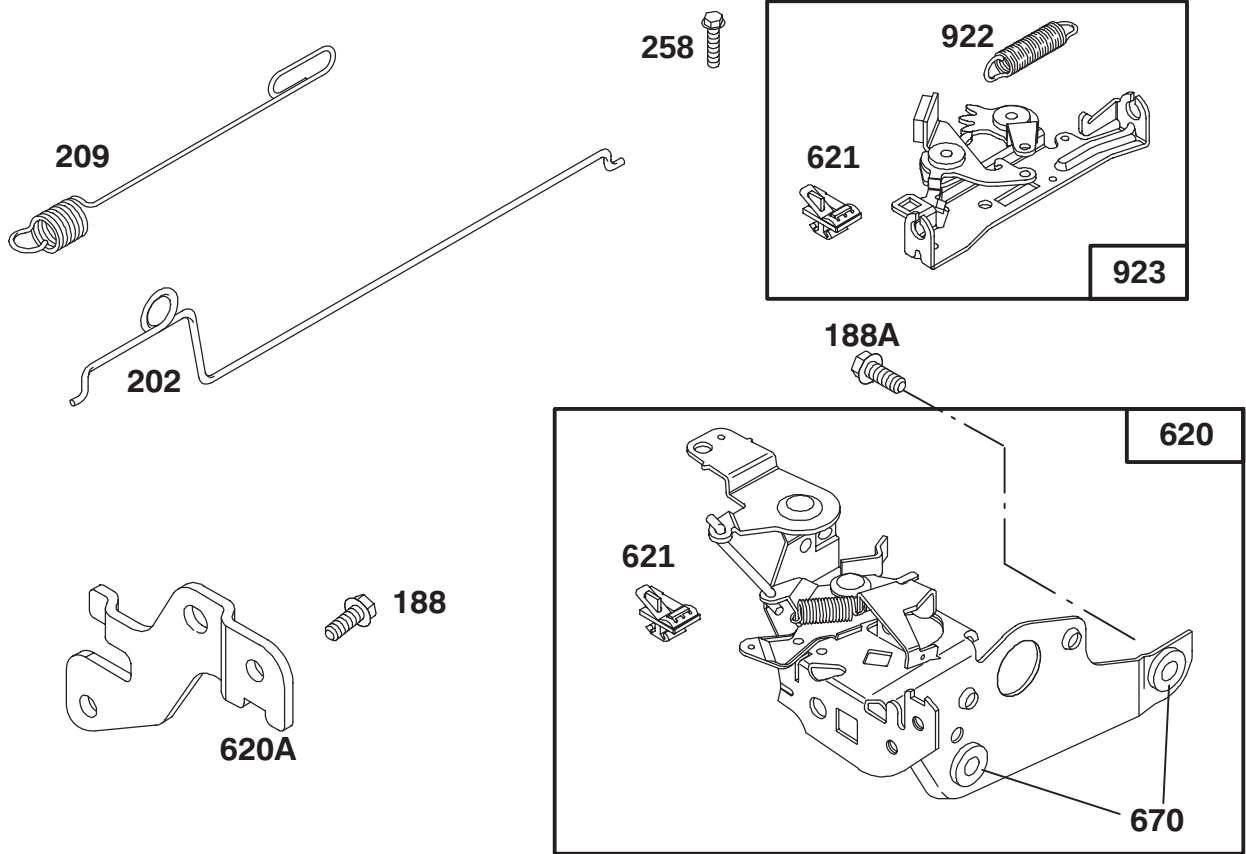




Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750—A1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw — Hex.	1
188A	94874	Screw — Hex.	1
202	262579	Link — Governor	1
209	263046	Spring — Governor	1
258	94512	Screw — Hex.	1
620	497203	Bracket — Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket — Control	1
621	396847	Switch — Stop	1
★670	493823	Spacer — Bracket	1
922	262640	Spring — Brake	1
923	493442	Brake Assembly	1


★ Included in Gasket Set—Part No. 497316.

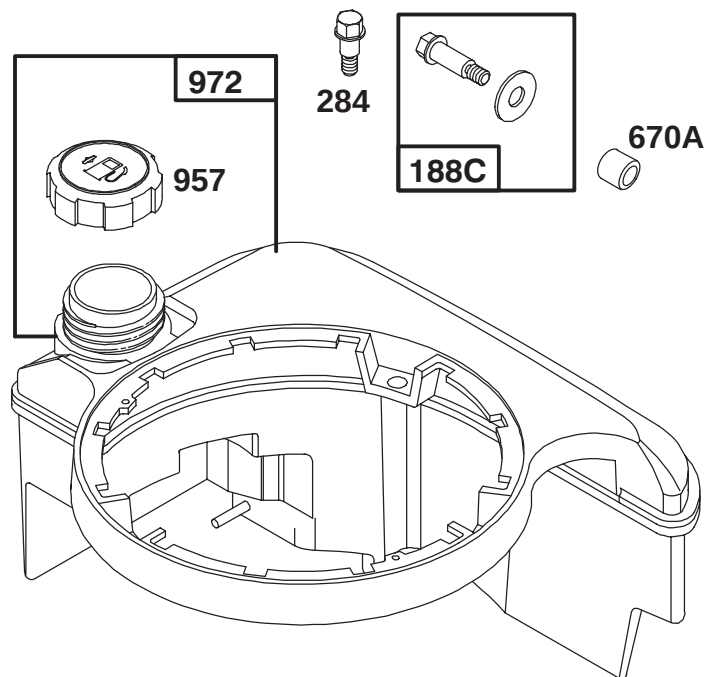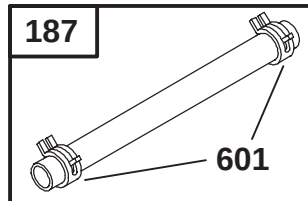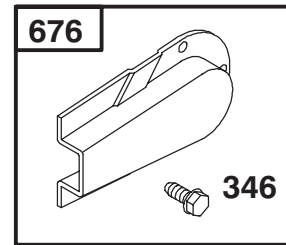

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-A1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap – Fuel Tank	1
972	495224	Tank – Fuel	1

11

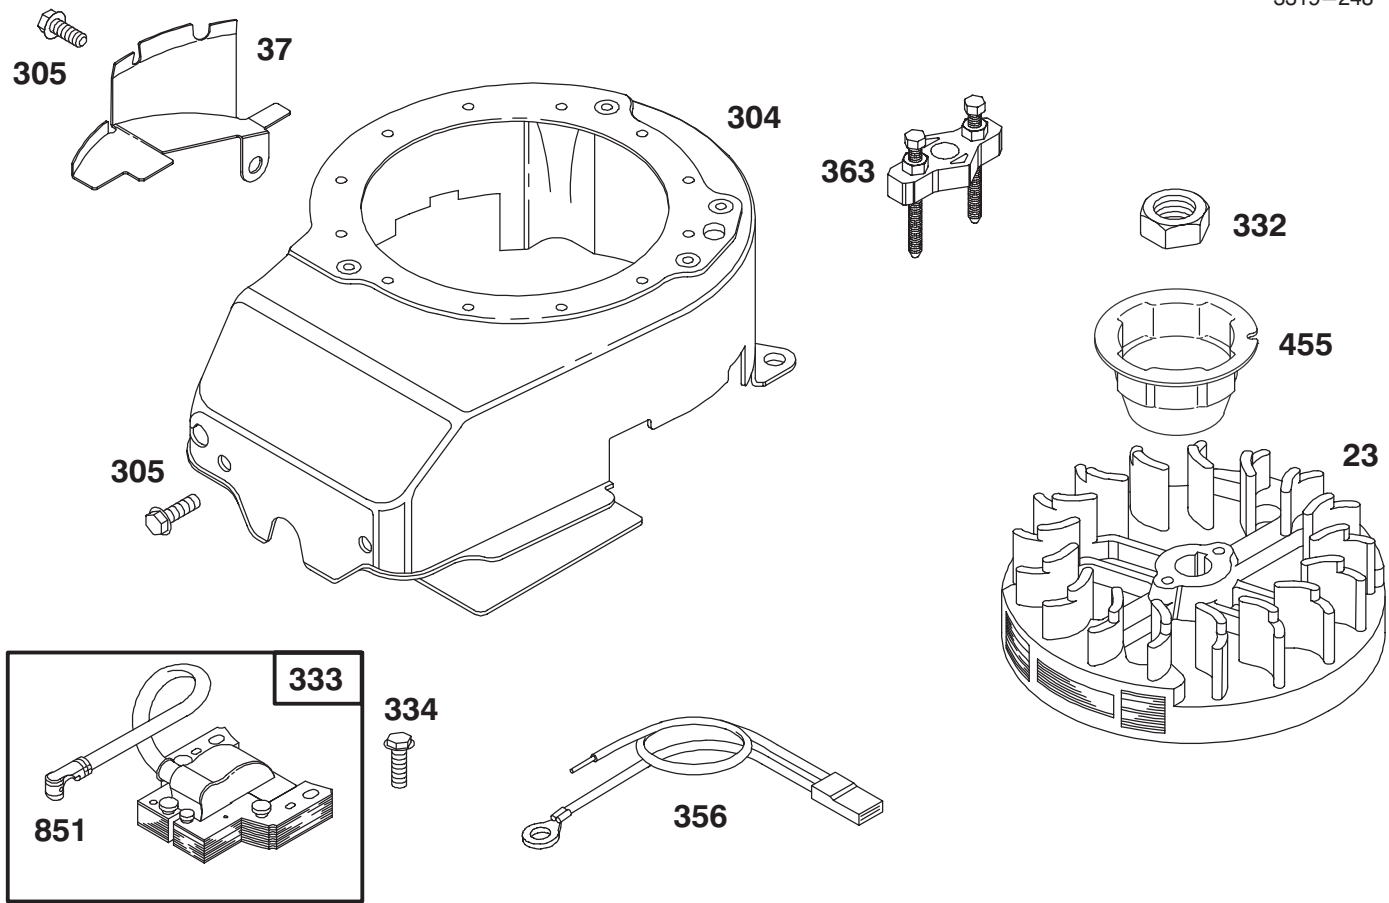


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750—A1

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard — Flywheel	1
304	493293	Housing — Blower	1
305	94744	Screw — Hex.	1
332	94877	Nut — Flywheel	1
333	802574	Armature — Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw — Hex.	1
356	398808	Wire — Stop	1
363	19069	Puller — Flywheel	1
455	225121	Cup — Flywheel	1
851	493880	Terminal — Cable	1



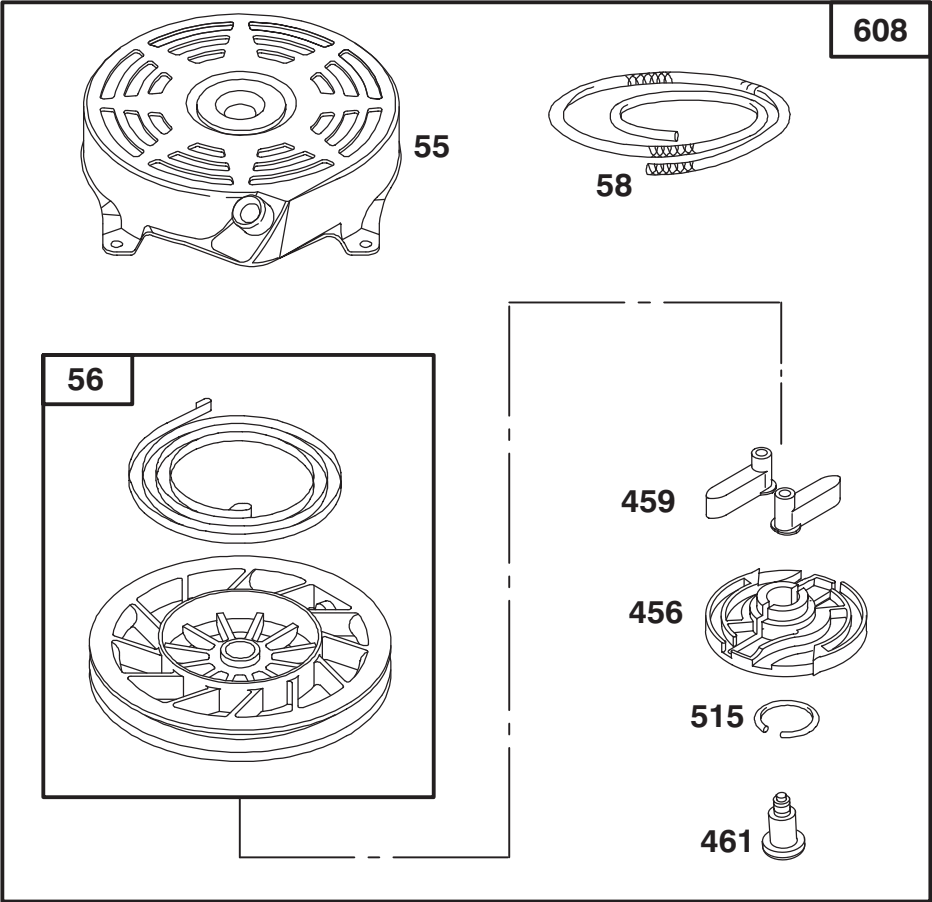


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750-A1

Ref. No.	Part No.	Description	No. Used
55	497440	Housing — Rewind Starter	1
56	498144	Pulley — Starter	1
58	280399	Rope — Starter	1
59	224467	Insert — Starter Grip	1
60	493926	Grip — Starter Rope	1
456	281503	Retainer — Spring	1
459	281505	Pawl — Ratchet	1

Ref. No.	Part No.	Description	No. Used
461	94943	Screw — Shoulder	1
515	263073	Spring — Friction	1
608	497680	Starter — Rewind	1
		Includes:	
		94904 Screw — Hex.	1
		94908 Nut — Hex.	

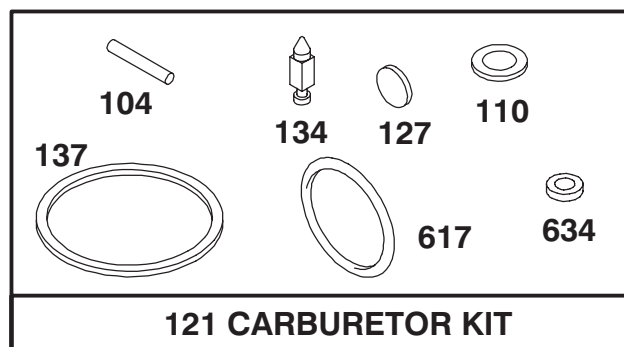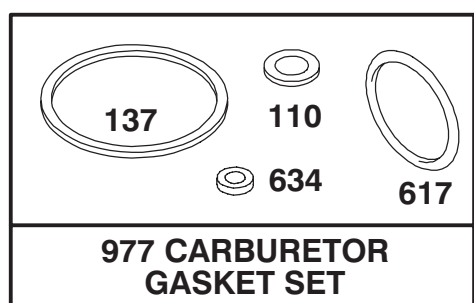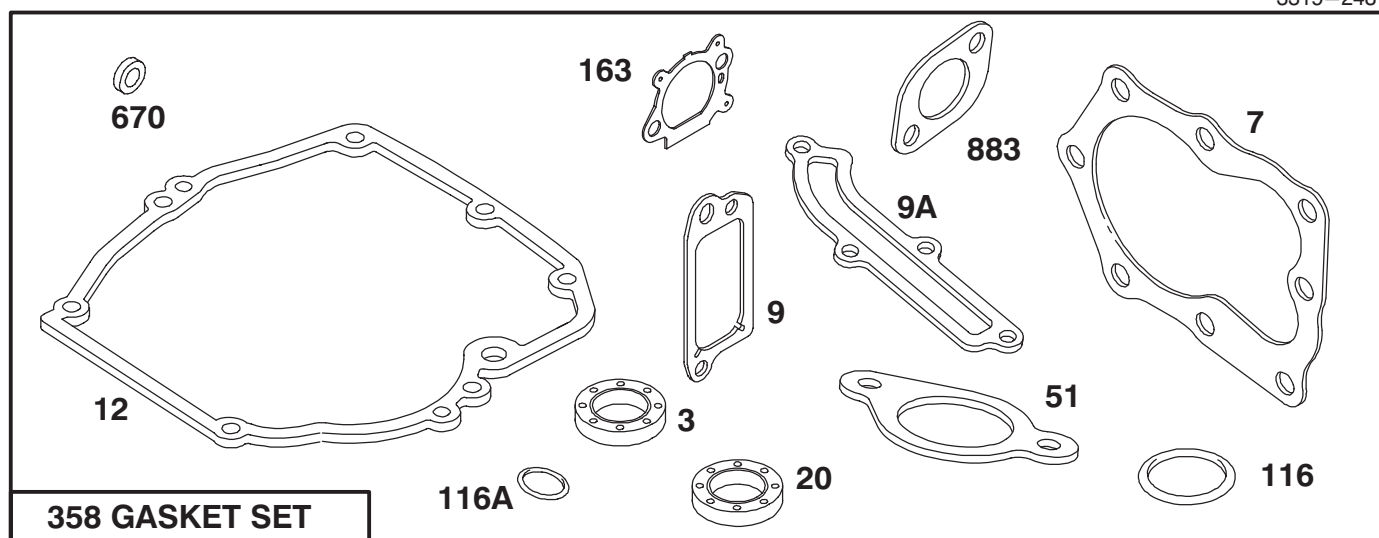

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1750—A1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal — Oil	1
★7	272916	Gasket — Cylinder Head	1
★9	272481	Gasket — Breather	1
★9A	272238	Gasket — Breather	1
★12	272198	Gasket — Crankcase	1
★20	399781	Seal — Oil	1
★51	272199	Gasket — Intake	1
●104	231371	Pin — Float Hinge	1
◆◆110		Washer — Bowl (Sold in Kit Only).	1
★116	280393	Seal — O Ring	1
★116A	280966	Seal — O Ring	1
121	498260	Carburetor Kit	1
●127		Plug — Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve — Needle (Includes Seat)	1
◆◆137		Gasket — Bowl (Sold in Kit Only).	1
★163	272653	Gasket — Air Cleaner	1
358	497316	Gasket Set	1
◆◆617	270344	Seal — Intake Manifold	1
◆◆634		Washer — Foam (Sold in Kit Only).	1
★670	493823	Spacer — Bracket Note: Includes Two.	1
★883	272253	Gasket — Exhaust	1
977	498261	Gasket Set — Carburetor	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
614637	1	16	4	Bracket—Wheel Height Adj
614650	1	9	4	Bolt—Shoulder
614672	1	14	4	Bolt—Shoulder
614687	1	13	2	Spring Arm—Front
16–9259	1	23	1	Deck—21in Steel
19–4050	3	11	2	Knob
26–0670	2	20	1	Bolt—Blade
33–0441	4	13	1	Cover—Door
33–0450	4	11	1	Spring—Door
39–5770	2	29	1	Decal—Danger
40–1940	1	11	4	Washer
46–6811	4	8	4	Screw—HWH
46–8090	4	6	2	Screw—Tapping
46–8091	5	6	2	Screw—Tapping
62–7540	2	16	1	Retainer—Blade
65–5100	5	5	1	Handle — Wood
82–8550	2	10	1	Shield—Muffler
86–9671	3	2	1	Guide—Rope
88–1090	4	4	2	Spring—Door
88–1800	4	12	1	Latch—Door
88–3360	4	2	1	Decal—Caution Door
88–6930	5	4	1	Decal — Warning
92–1005	1	7	2	ASM—Spring Arm
92–1008	1	12	4	Knob—Height Adjust
92–1624	2	22	3	Screw—Engine
92–2260	3	10	2	Screw—Handle
92–2269	3	9	1	Screw—Handle
92–2289	2	9	1	Plate—Logo
92–2914	1	5	1	Decal—HOC R.h.
92–2915	1	4	1	Decal—HOC L.h.
92–3134	3	5	1	Bar—Control
92–4881	1	22	2	Plate—Height Adjust
92–4890	1	17	4	Washer
92–5412	3	6	1	Stop—Pivot
92–8647	1	10	1	Shield—Trailing
92–9591	1	15	2	ASM—Wheel
92–9592	1	8	2	ASM—Wheel
93–0216	1	21	1	Kicker—Front
93–0217	2	14	1	Kicker—Rear
93–0218	2	21	1	Kicker—Side
93–0219	2	18	1	Accelerator
93–0222	1	20	1	Baffle—Front
93–0223	2	15	1	Baffle—Rear
93–0231	1	19	1	Screw—Plastite
93–0231	2	4	1	Screw—Plastite
93–0235	1	6	1	ASM — Brkt
93–0236	1	1	1	ASM — Brkt
93–0237	3	4	1	Handle—Upper
93–0238	3	12	1	Handle—Lower
93–0241	2	17	1	Blade—Steel Deck
93–0242	4	9	4	Grommet
93–0243	2	5	1	Shroud—Qt Wedge
93–0245	2	28	1	Decal—Deck
93–0248	1	3	1	Decal—Warning
93–0252	3	8	1	Cable—Throttle
93–0253	3	7	1	Cable—Brake
93–0262	1	2	1	Decal—Warning
93–0264	4	3	1	Door—Discharge
93–0267	4	5	1	Plate—Discharge Chute
93–0279	5	1	1	Shield—Discharge Plug
93–0280	5	2	1	Cover—Discharge Plug
93–8470	2	2	1	Screw—Clamp (P/W Eng)

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-1683	4	1	1	Chute-Discharge
95-1652	2	25	1	Decal-Recoil
2210-249	2	3	1	Clamp-Casing (P/W Eng)
2210-316	2	6	1	Rope-Stop (P/W Eng)
322-3	2	12	4	Screw-HH
3253-22	2	19	1	Washer-Lock
3290-378	3	13	1	Tie-Cable
3296-29	2	13	4	Nut-Lock
3296-39	1	18	4	Nut-Lock
3296-73	3	1	2	Nut-Lock
32104-122	5	3	3	Screw-PH PH
32144-32	4	10	2	Screw-Plastic
32144-73	2	11	3	Screw-HWHTF
32144-111	2	1	2	Screw - PPH
32144-111	4	7	1	Screw - PPH
32144-121	2	8	2	Screw

*Not Illustrated

[illegible]