



21" RECYCLER[®] MOWER

Model No. 20448 – 7900001 & Up

Model No. 20458 – 7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Gear Case Assembly	7
Engine Assembly	2	Engine Briggs & Stratton	
Gearcase & Wheel Assembly	3	Model 12H802–0658–01	8–16
Handle Assembly	4	Toro Part Number Index	17–19
Discharge Chute Assembly	5	Maintenance	20–21
Discharge Plug Assembly	6		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Discharge Chute Kit (Model No. 20458 Only)	Model No. 59198	Recycler Side Discharge Kit (Model No. 20448 Only)	Model No. 59291
Recycler Bagging Kit (Model No. 20448 Only)	Model No. 59290	Bag Kit (Model No. 20458 Only)	Model No. 59297

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

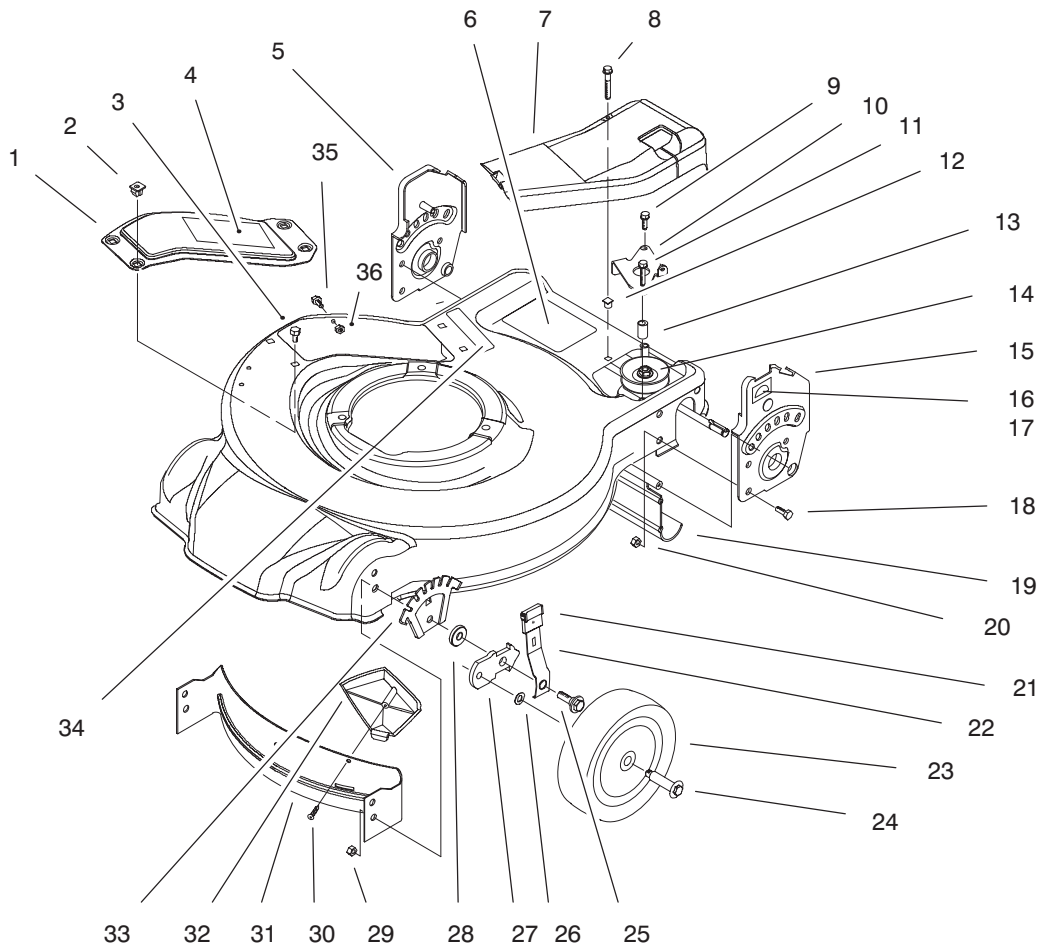


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	16-9269	1	Cover-Recycling (Model No. 20448 Only) (Incl. Ref. #4)
2	93-0242	4	Grommet (Model No. 20448 Only)
3	32144-4	4	Screw-TAP (Model No. 20448 Only)
4	85-7060	1	Decal-Danger (Model No. 20448 Only)
5	93-0234	1	ASM-Brkt Handle R.H.
6	93-0248	1	Decal-Warning
7	93-0209	1	Cover-Belt
8	32144-119	1	Screw-Thrd Frm
9	49-2040	1	Screw-HH
10	93-0228	1	Brkt-Belt Guide
11	92-1616	1	Screw
12	605120	1	Grommet
13	614673	1	Spacer
14	93-0240	1	ASM-Transmission
15	93-0233	1	ASM-Brkt. Handle L.H.
16	92-2915	1	Decal-HOC


Ref. No.	Part No.	Qty.	Description
17	92-2914	1	Decal-HOC
18	322-3	6	Screw-HH
19	92-8647	1	Shield-Trailing
20	3296-29	6	Nut-Lock
21	92-1008	4	Knob-Height Adjust
22	614687	2	Spring Arm-Front
23	92-9591	2	ASM-Wheel
24	614650	2	Bolt-Shoulder
25	614672	2	Bolt-Shoulder
26	40-1940	2	Washer
27	614637	2	Bracket-Wheel Height Adj
28	92-4890	2	Washer
29	3296-39	2	Nut-Lock
30	93-0231	2	Screw-Plastite
31	93-0222	1	Baffle-Front
32	93-0216	1	Kicker-Front
33	92-4881	2	Plate-Height Adjust
34	93-0262	1	Decal-Warning
35	32105-27	1	Screw-HWH (Model No. 20448 Only)
36	3296-2	1	Nut Lock (Model No. 20448 Only)

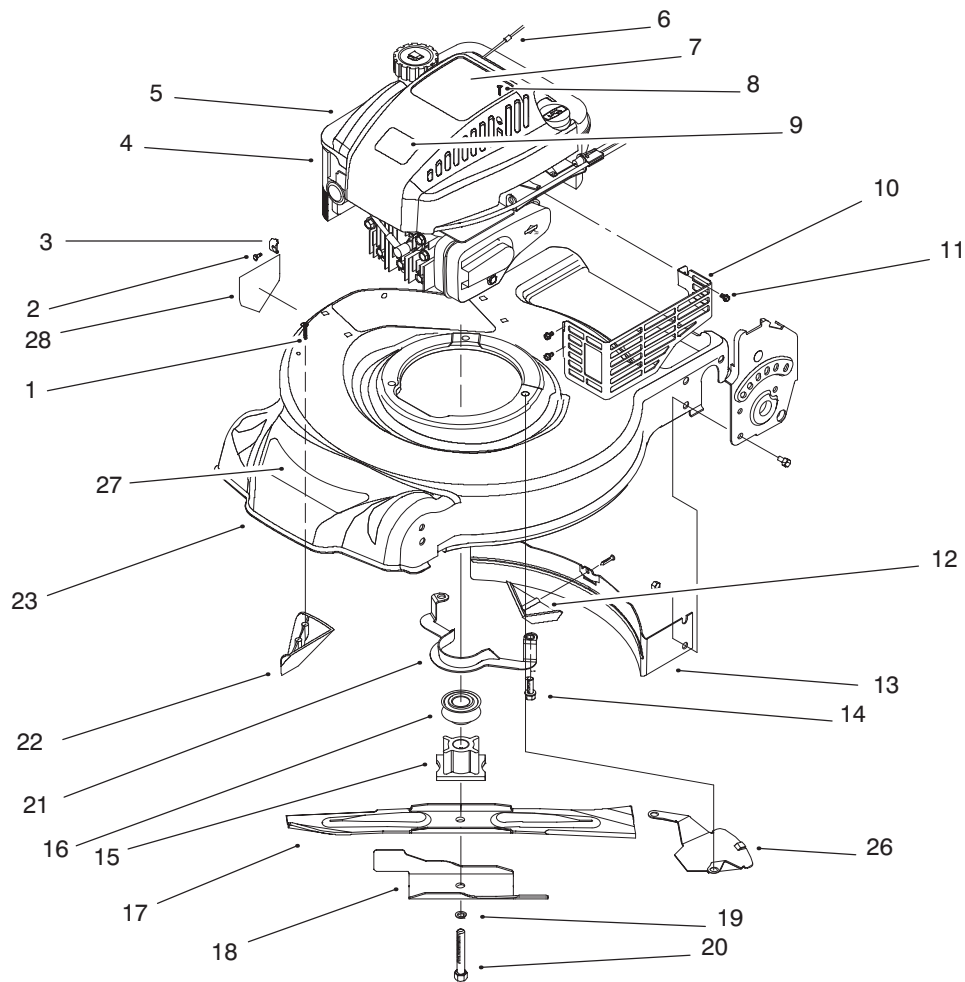

Sheet No.:3

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32144-111	2	Screw – PPH	26	93-4196	1	(Incl. Ref. #28) Shield-Grass
2	93-8470	1	Screw-Clamp (P/W Eng)	27	93-0245	1	Decal-Deck
3	2210-249	1	Clamp-Casing (P/W Eng)	28	39-5770	1	Decal-Danger
4		1	Engine-Quantum 6.0 Hp				
5	93-0243	1	Shroud-Qt Wedge				
6	2210-316	1	Rope-Stop (P/W Eng)				
7	95-1657	1	Decal-Recoil				
8	32144-121	2	Screw				
9	92-2289	1	Plate-Logo				
10	82-8550	1	Shield-Muffler				
11	32144-73	3	Screw-HWHTF				
12	93-0217	1	Kicker-Rear				
13	93-0223	1	Baffle-Rear				
14	92-1624	3	Screw-Engine				
15	62-7540	1	Retainer-Blade				
16	62-7550	1	Pulley-Driver				
17	93-0241	1	Blade-Steel Deck				
18	93-0219	1	Accelerator				
19	3253-22	1	Washer-Lock				
20	26-0670	1	Bolt-Blade				
21	93-0208	1	Guide-Belt				
22	93-0218	1	Kicker-Side				
23	16-9279	1	Deck-21in Steel Sp				

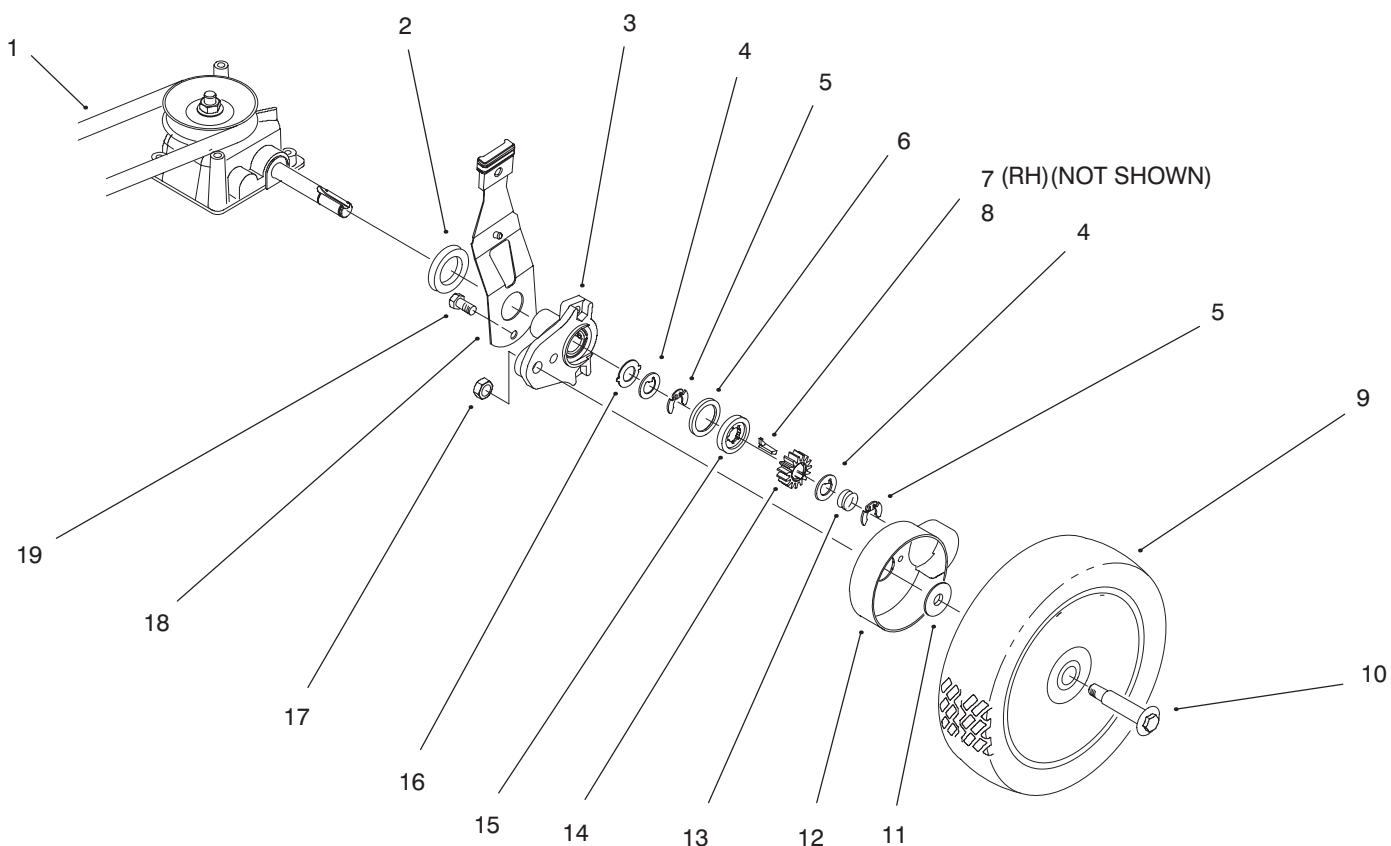


Sheet No.:4

Gearcase & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	93-0232	1	V-Belt
2	614447	2	Spacer-Axle Shaft
3	92-7746	2	ASM-Hgt Adj Arm
4	65-4740	4	Washer-Thrust
5	65-2720	4	Ring-Retaining
6	65-4710	2	Ring-Friction
7	66-6040	1	Key-Rocking
8	66-6050	1	Key-Rocking
9	92-9590	2	ASM-Wheel
10	92-1057	2	Bolt-Shoulder
11	614426	2	Washer-Stepped
12	94-1609	2	Cover-Wheel
13	65-4720	2	Spring-Compression
14	65-4750	2	Gear-Pinion
15	65-4760	2	Washer
16	65-4730	2	Washer-Thrust
17	610358	2	Nut-Lock
18	92-1004	2	ASM-Spring Arm
19	32144-85	2	Screw-HH


Ref. No.	Part No.	Qty.	Description

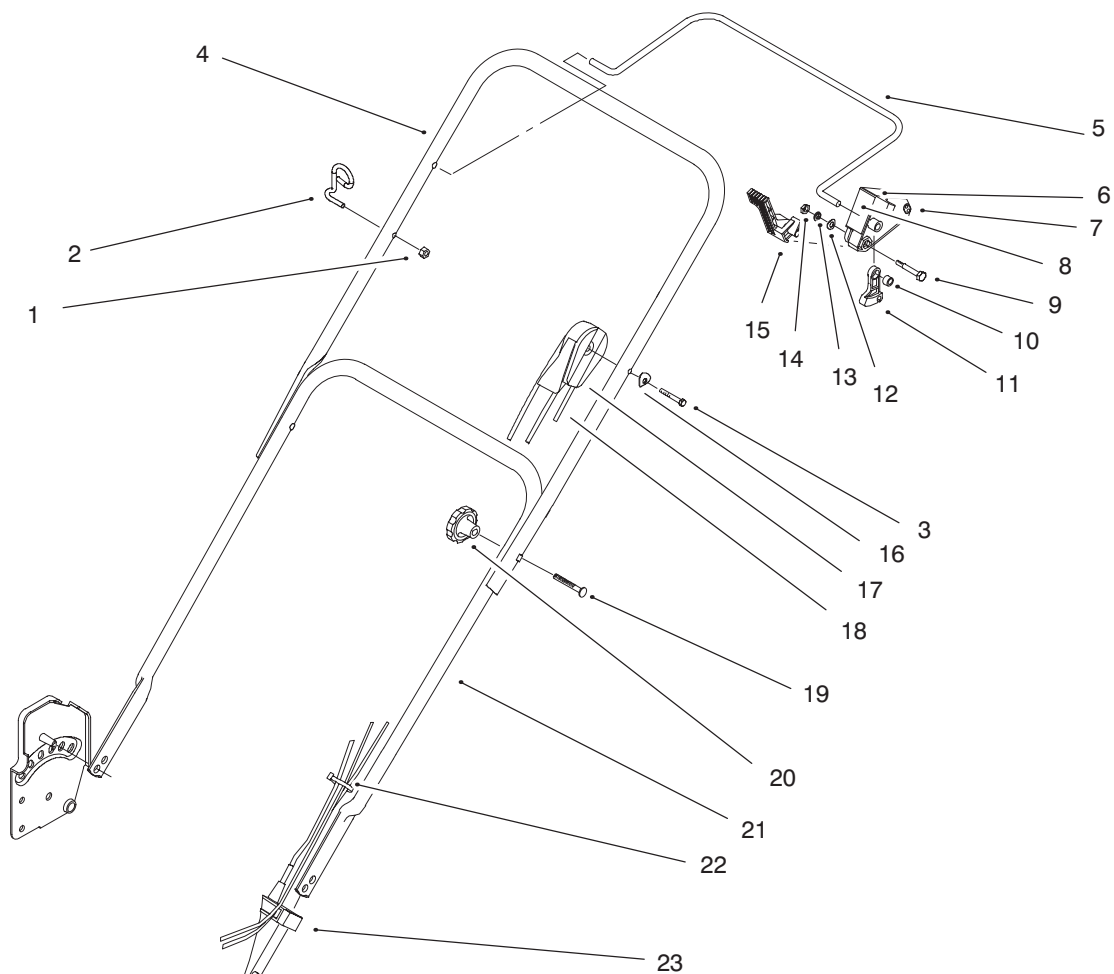

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-73	1	Nut-Lock
2	86-9671	1	Guide-Rope
3	321-51	1	Bolt-Hex .25
4	93-0237	1	Handle-Upper
5	92-3135	1	Bar-Control
6	92-2292	1	Decal-Instruction
7	93-0340	1	Stop-Pivot
8	92-2280	1	Decal-Instruction
9	92-3132	1	Bolt-Shoulder
10	92-3133	1	Spacer-Lever
11	46-5520	1	Lever-Traction
12	92-2298	1	Washer-Spring
13	3256-49	1	Washer-Flat
14	3296-2	1	Nut Lock
15	92-2299	1	Lever-Shift
16	93-0261	1	Curved Washer
17	93-0250	1	Cable-Throttle/Traction
18	93-0251	1	Cable-Brake
19	92-2260	2	Screw-Handle
20	19-4050	2	Knob
21	93-0238	1	Handle-Lower
22	3290-378	1	Tie-Cable
23	93-7380	1	Anchor-Cable

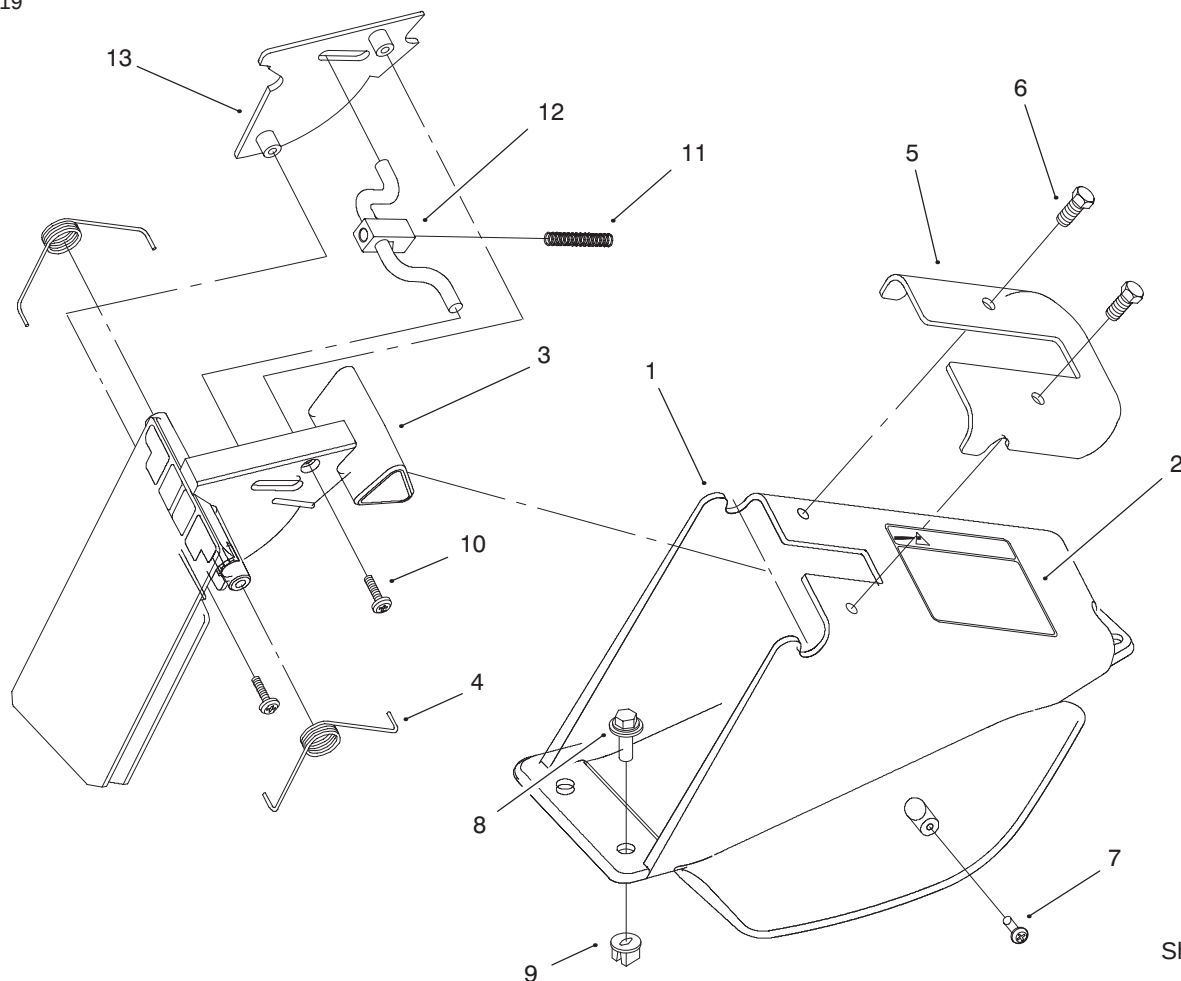


Sheet No.:6

Discharge Chute Assembly (Model No. 20458 Only)

Ref. No.	Part No.	Qty.	Description
1	94-1683	1	Chute – Discharge Ass'y (Incl. Ref. #2)
2	88-3360	1	Decal – Discharge
3	93-0264	1	Door – Discharge
4	88-1090	2	Spring – Door
5	93-0267	1	Plate – Discharge Chute
6	46-8090	2	Screw – Tapping
7	32144-111	1	Screw – PPH
8	46-6811	2	Screw – Hwh
9	93-0242	4	Grommet
10	32144-32	2	Screw – Plasic
11	33-0450	1	Spring – Door
12	88-1800	1	Latch – Door
13	33-0441	1	Cover – Door

Ref. No.	Part No.	Qty.	Description

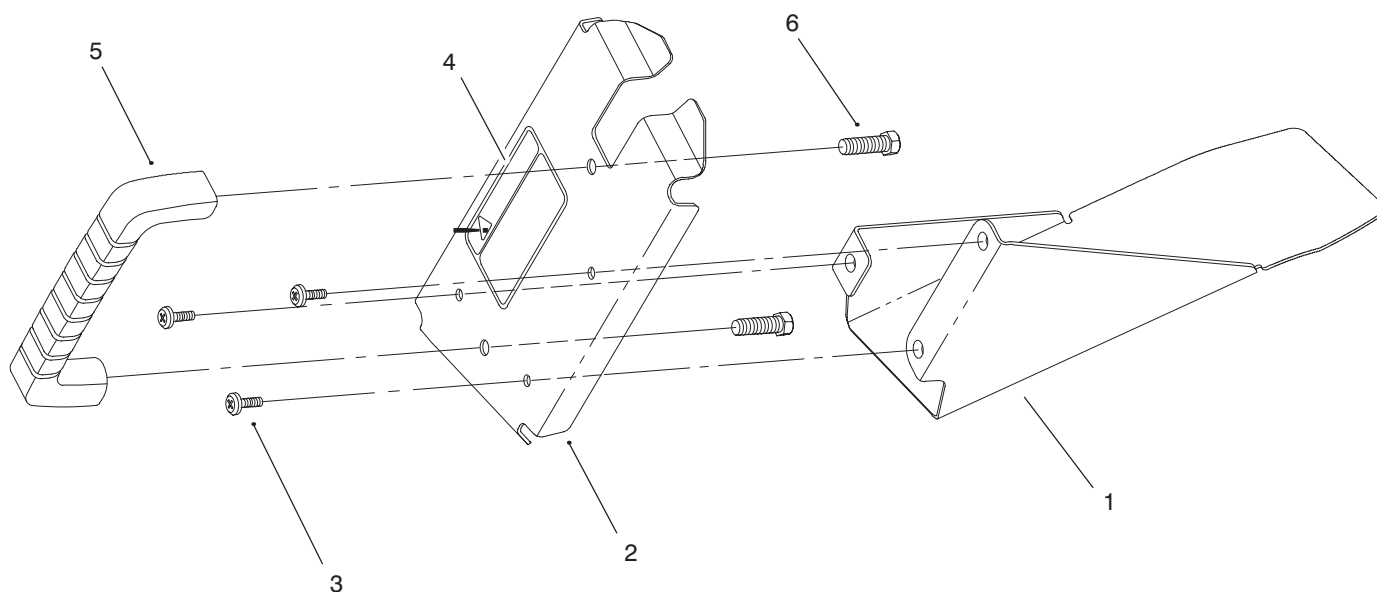


Sheet No.:7

Discharge Plug Assembly (Model No. 20458 Only)

Ref. No.	Part No.	Qty.	Description
1	93-0279	1	Shield – Discharge Plug
2	93-0280	1	Cover – Discharge Plug
3	32104-122	3	Screw – PH
4	88-6930	1	Decal – Warning
5	65-5100	1	Handle – Hood
6	46-8091	2	Screw – Tapping

Ref. No.	Part No.	Qty.	Description

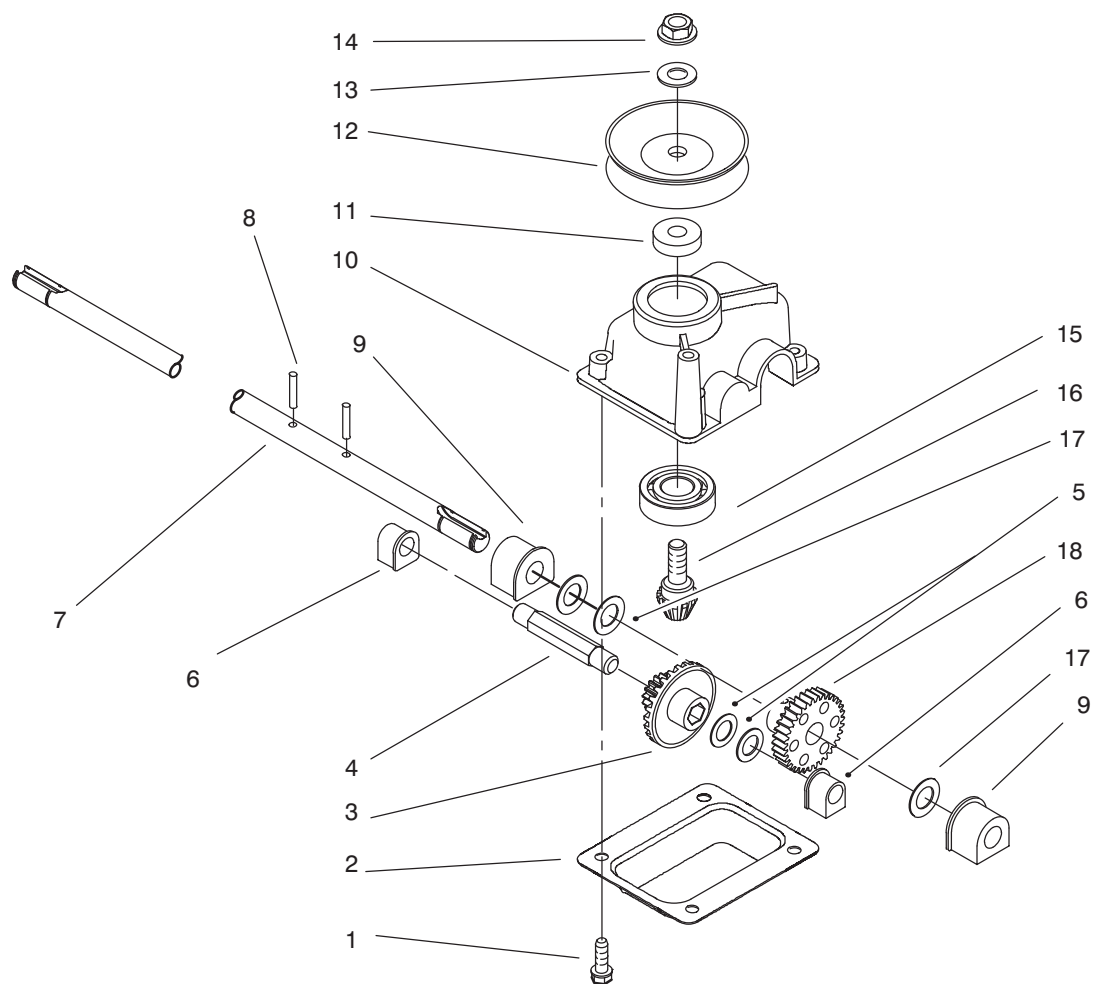


Sheet No.:8

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	49-2040	4	Screw – Taptite
2	614668	1	Cover – Gear Case
3	55-3760	1	Pinion –15 Tooth
4	614696	1	Shaft – Intermediate
5	36-4791	2	Washer
6	60-8750	2	Bushing
7	93-0239	1	Shaft – Output
8	3285-19	2	Pin – Groove
9	60-8850	2	Bushing – Output
10	92-7727	1	Gearcase
11	62-6660	1	Spacer
12	60-8840	2	Pulley – Half
13	3256-24	1	Washer
14	3296-5	1	Nut
15	38-7820	1	Bearing – Ball
16	60-8890	1	Gear – Bevel Pinion
17	36-4780	2	Washer – Thrust
18	614596	1	Gear – 34 Tooth
*	93-0240	1	Gearcase Ass'y Complete


Ref. No.	Part No.	Qty.	Description

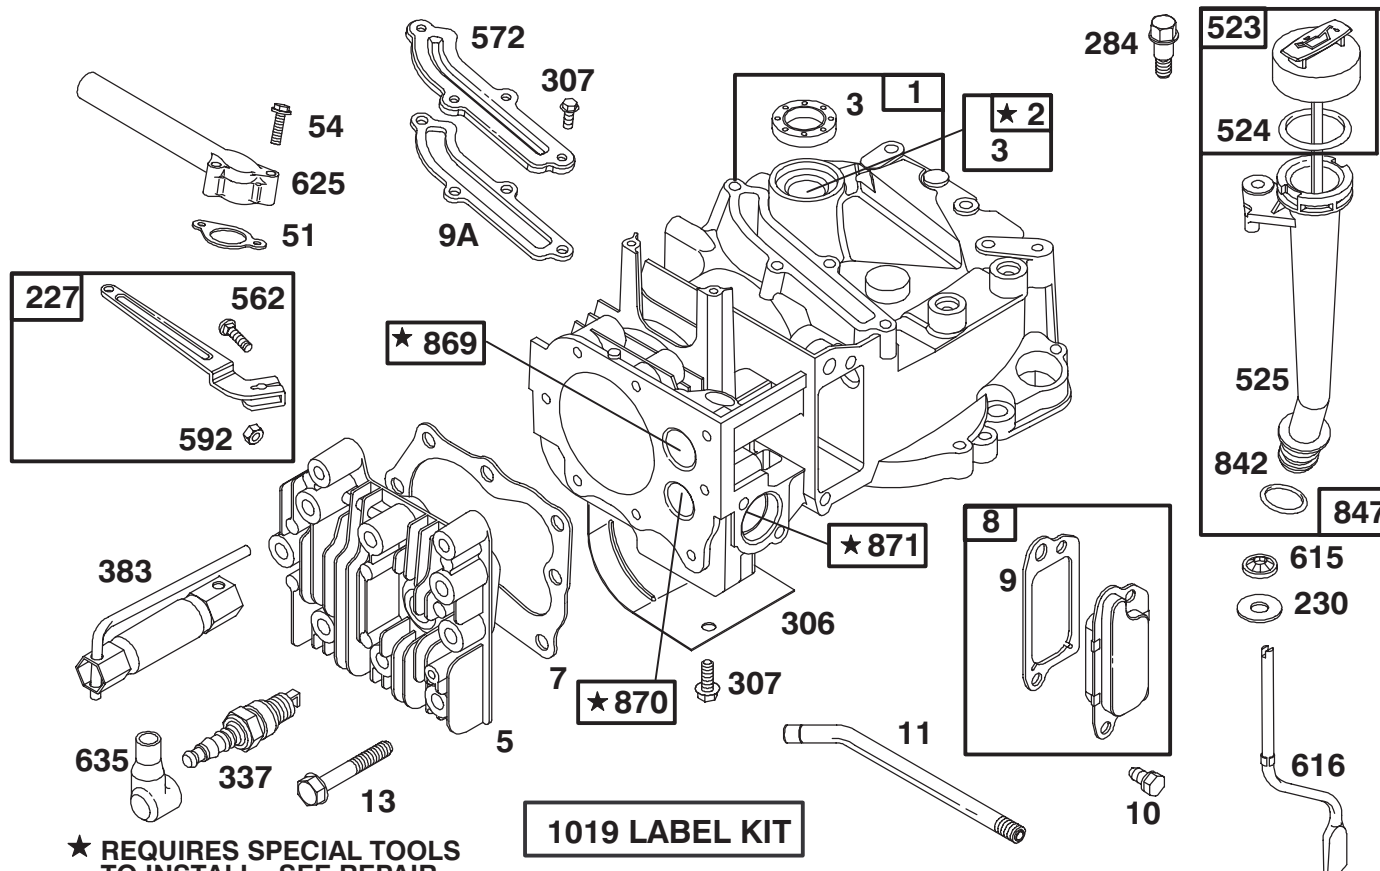

ENGINE BRIGGS & STRATTON MODEL 12H802-0658—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1	383	89838	Wrench — Spark Plug	1
2	293708	Bushing — Cylinder	1	523	495264	Cap With Dipstick — Oil Filler	1
★3	299819	Seal — Oil	1	★524	280393	Seal — Filler Tube	1
5	214368	Head — Cylinder	1	525	495265	Tube — Oil Filler	1
★7	272916	Gasket — Cylinder Head	1	562	94852	Bolt — Carriage	1
8	495786	Breather — Valve Chamber	1	572	224328	Baffle — Cylinder	1
★9	272481	Gasket — Breather	1	592	231082	Nut — Hex.	1
★9A	272238	Gasket — Baffle Plate	1	615	94474	Fastener	1
10	94650	Screw — Breather Mtg.	1	616	263175	Crank — Governor	1
11	231933	Tube — Breather	1	625	497465	Tube — Fuel Intake	1
13	94876	Screw — Cylinder Head	1	635	66538	Elbow — Spark Plug	1
★51	272199	Gasket — Intake Elbow	1	★842	280966	Seal — O-Ring	1
54	94526	Screw — Intake Elbow Mtg.	1	847	495263	Oil Fill Tube Assy.	1
227	492349	Lever Assembly — Gov.	1	869	213512	Seat — Intake Valve	1
230	67072	Washer — Gov. Crank	1	870	213513	Seat — Exhaust Valve	1
284	94511	Screw — Hex. Head	1	871	262001	Guide — Exhaust Valve	1
306	224324	Shield — Cylinder	1			Note: 63709 Guide — Intake Valve	1
307	94515	Screw — Hex. Head	1			Label Kit	1
337	802592	Plug — Spark	1	1019	494256		

★ Included in Gasket Set—Part No. 497316.

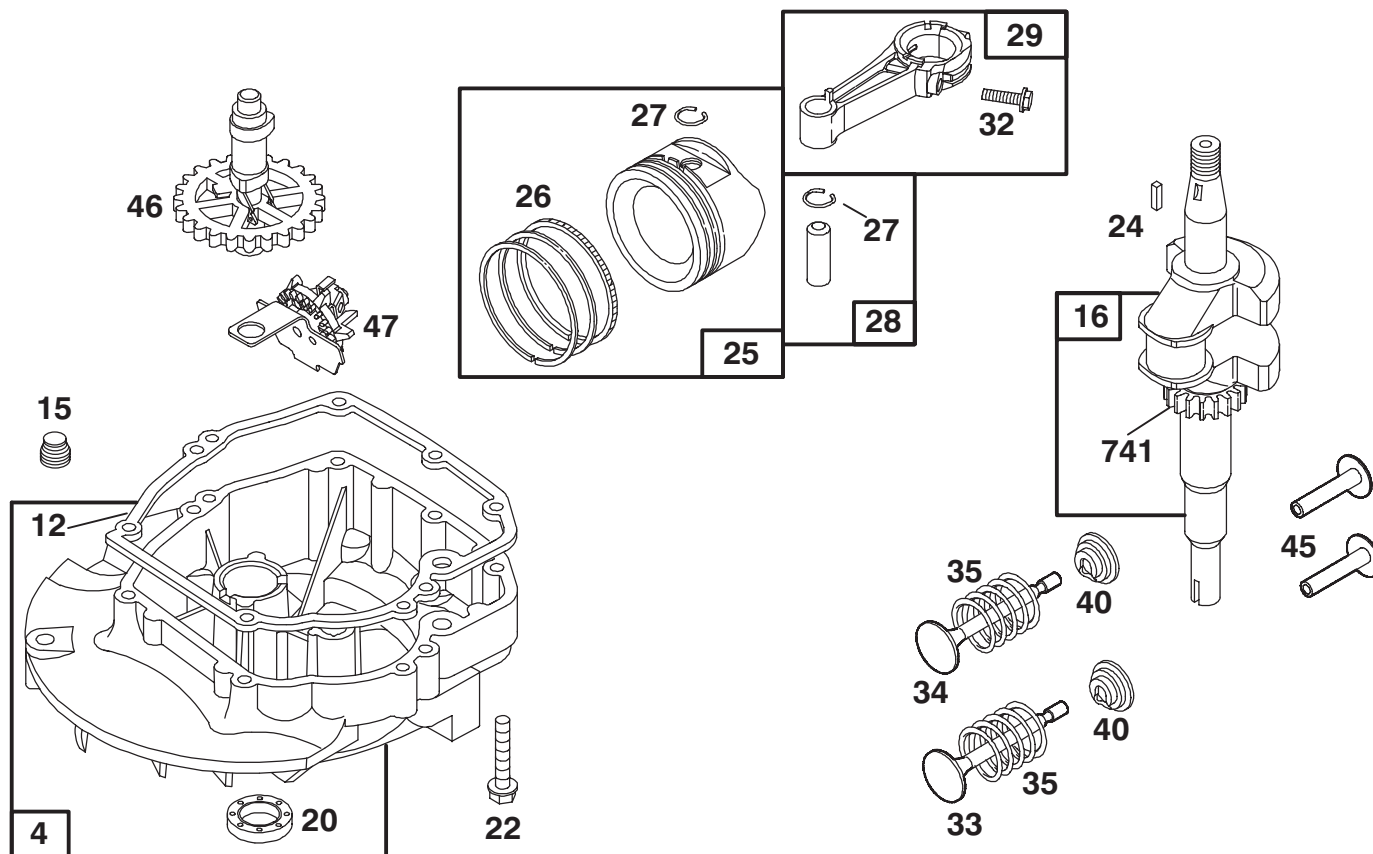


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-0658-01

Ref. No.	Part No.	Description	No. Used
4	493279	Sump — Engine	1
★12	272198	Gasket — Crankcase	1
15	94880	Plug — Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	1
★20	399781	Seal — Oil	1
22	94220	Screw — Hex. Head	1
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather)	1
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005" O.S.)	1
29	490566	Rod Assembly — Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	1
32	94699	Screw — Connecting Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
40	93312	Retainer — Valve Spring	1
45	262204	Tappet — Valve	1
46	498275	Gear — Cam	1
47	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

★ Included in Gasket Set—Part No. 497316.

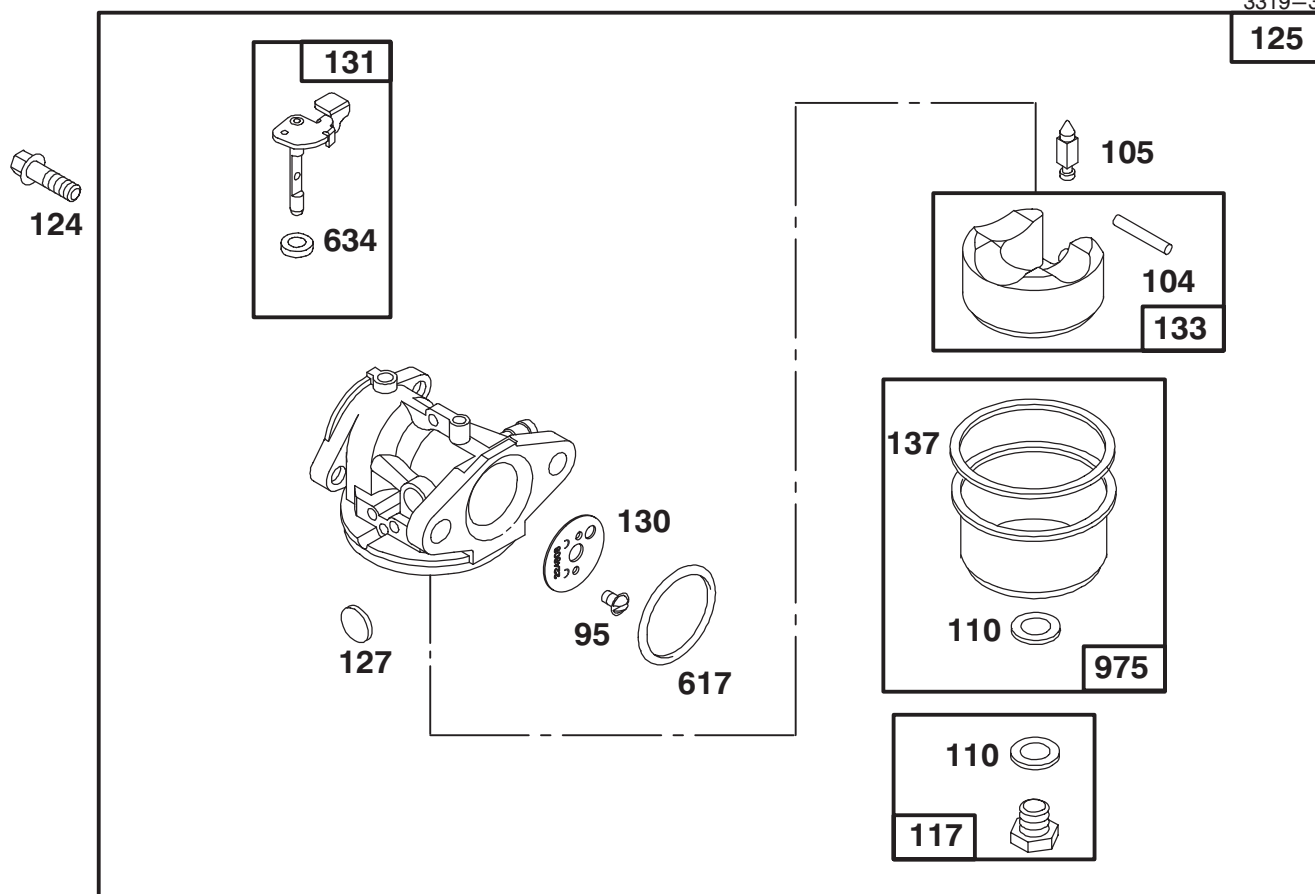


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-0658—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	94098	Screw — Throttle Valve Mtg.	1	●127		Plug — Welch (Sold in Kit Only)	1
●104	231371	Pin — Float Hinge	1	130	224908	Valve — Throttle	1
●105	398188	Valve — Inlet (Includes Seat)	1	131	493267	Shaft — Throttle	1
◆◆110		Gasket—Sealing (Sold in Kit Only)	1	133	398187	Float Assy. — Carburetor	1
117	494870	Jet — Main (Std.)	1	◆◆137		Gasket — Bowl (Sold in Kit Only)	1
		Note: 497315 Jet — Main (High Altitude)	1	◆◆617	270344	Seal — Fuel Intake Tube	1
124	94840	Screw — Carburetor Mtg.	1	◆◆634		Washer—Shaft (Sold in Kit Only)	1
125	498170	Carburetor	1	975	493640	Bowl Assy. — Carburetor	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

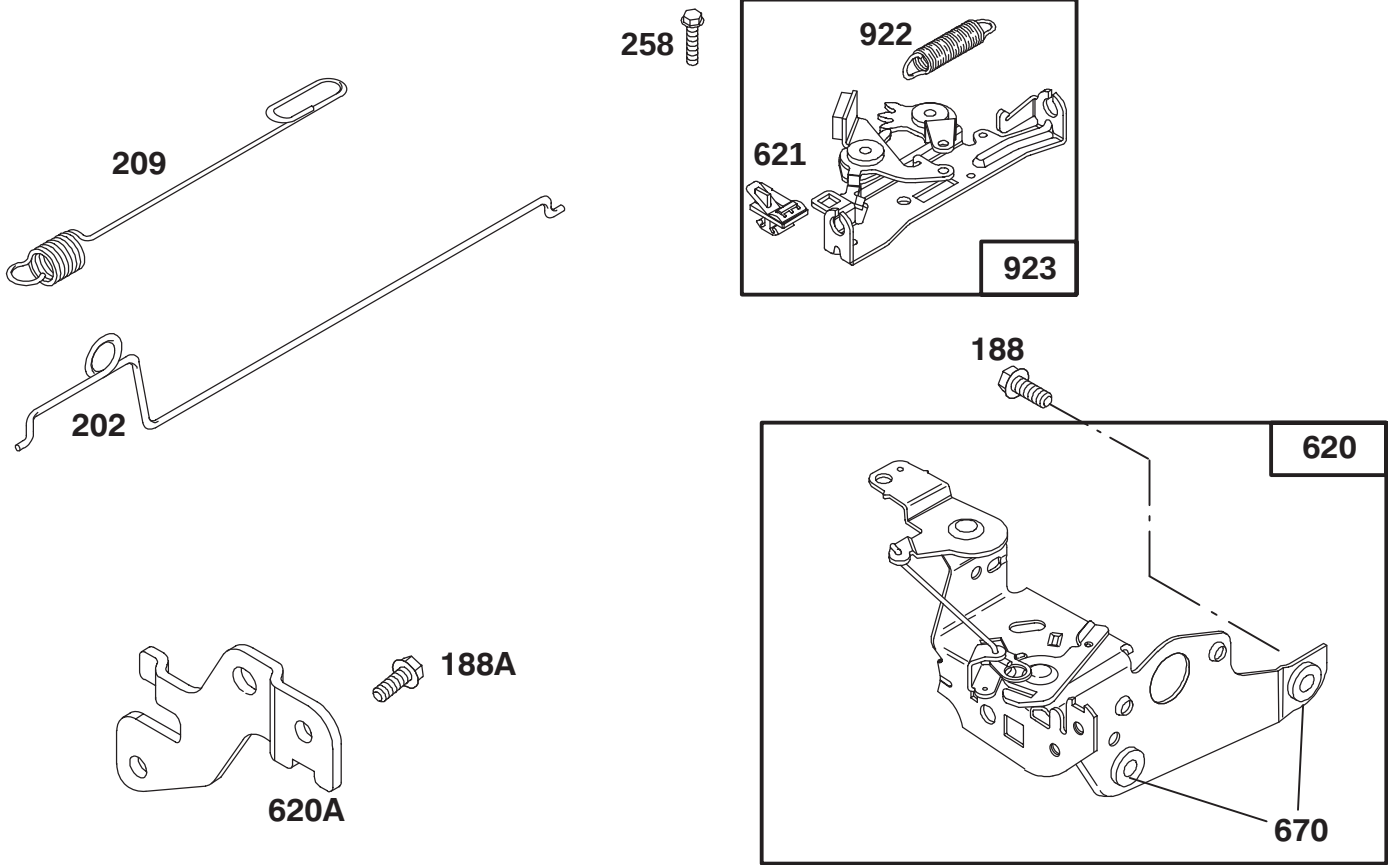


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-0658-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
188A	94874	Screw – Hex. Head	1
202	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket	1
		Note: Includes Two.	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

★ Included in Gasket Set–Part No. 497316.

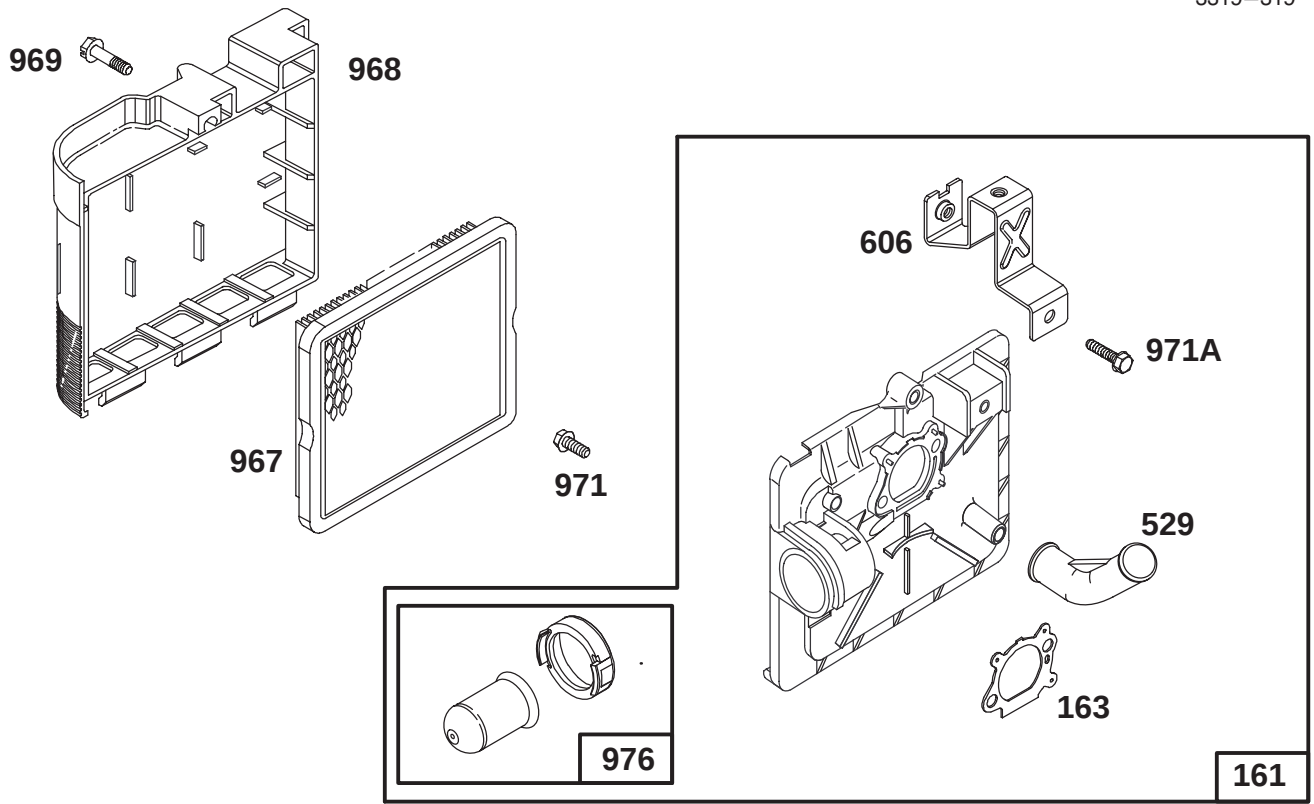


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-0658—01

Ref. No.	Part No.	Description	No. Used
161	496116	Base — Air Cleaner	1
★163	272653	Gasket — Air Cleaner	1
529	281299	Grommet — Breather	1
606	224815	Strap — Bracket	1
967	491588	Filter — Air	1

Ref. No.	Part No.	Description	No. Used
968	281340	Cover — Air Cleaner	1
969	94872	Screw — Cover Mtg.	1
971	94873	Screw — Air Cleaner	1
971A	94749	Screw — Hex. Head	1
976	496115	Primer—Carburetor	1

★ Included in Gasket Set—Part No. 497316.

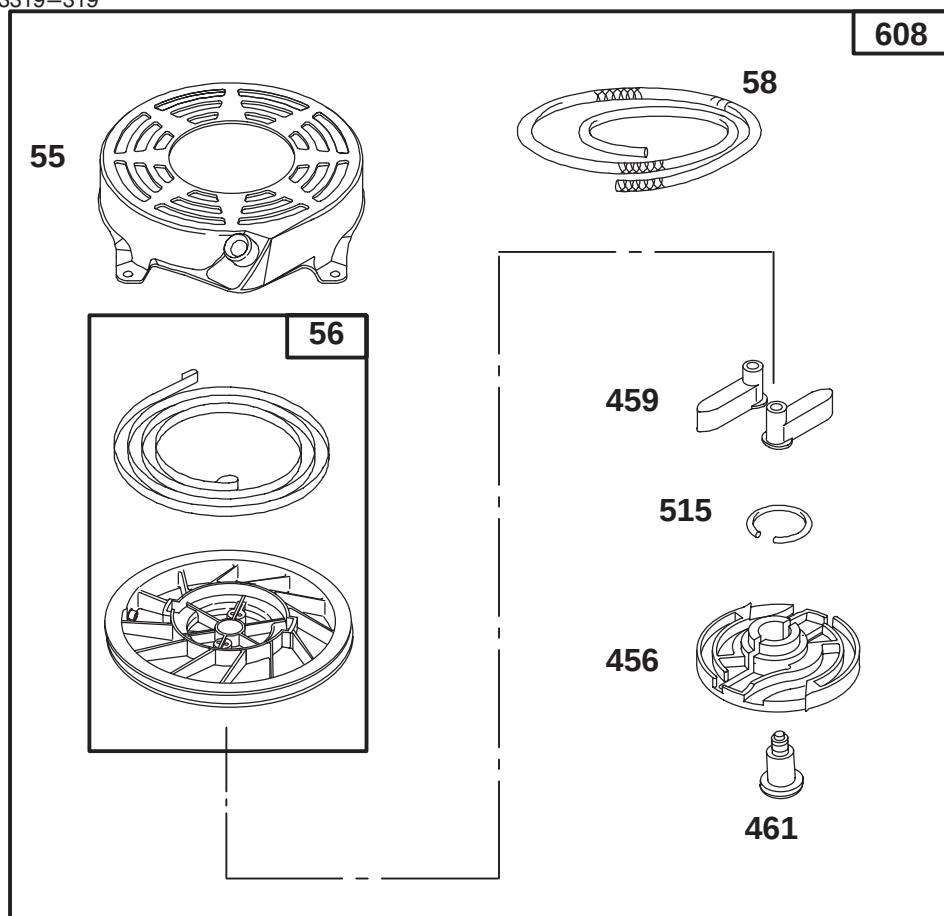


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-0658-01

Ref. No.	Part No.	Description	No. Used
55	497440	Housing — Rewind Starter	1
56	498144	Pulley — Rewind Starter	1
58	280399	Rope — Rewind Starter (Cut to Required Length)	1
59	224467	Insert — Starter Grip	1
60	493926	Handle — Rewind Starter	1
456	281503	Retainer — Rewind Starter	1
459	281505	Pawl — Starter	1

Ref. No.	Part No.	Description	No. Used
461	94943	Pin — Starter	1
515	263073	Spring — Torsion	1
608	497680	Starter Assy. — Rewind	1
Includes:			
		94904 Screw — Hex. Head	1
		94908 Nut — Hex.	1

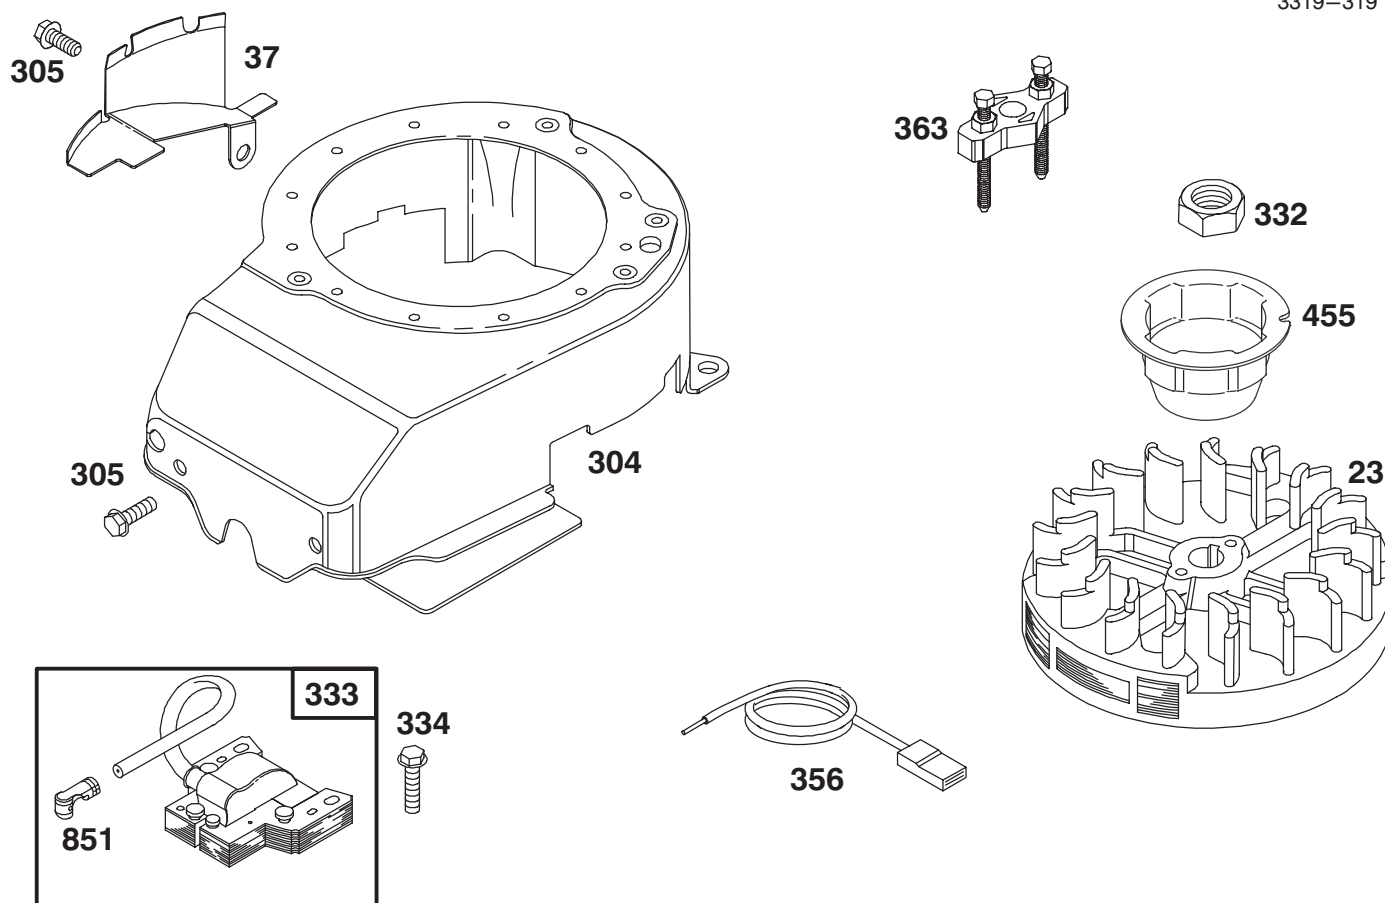


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-0658-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
304	493293	Housing – Blower	1
305	94744	Screw – Sem	1
332	94877	Nut – Flywheel	1
333	802574	Armature – Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw – Sem	1
356	398808	Wire – Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup – Starter	1
851	493880	Terminal – Ignition Cable	1

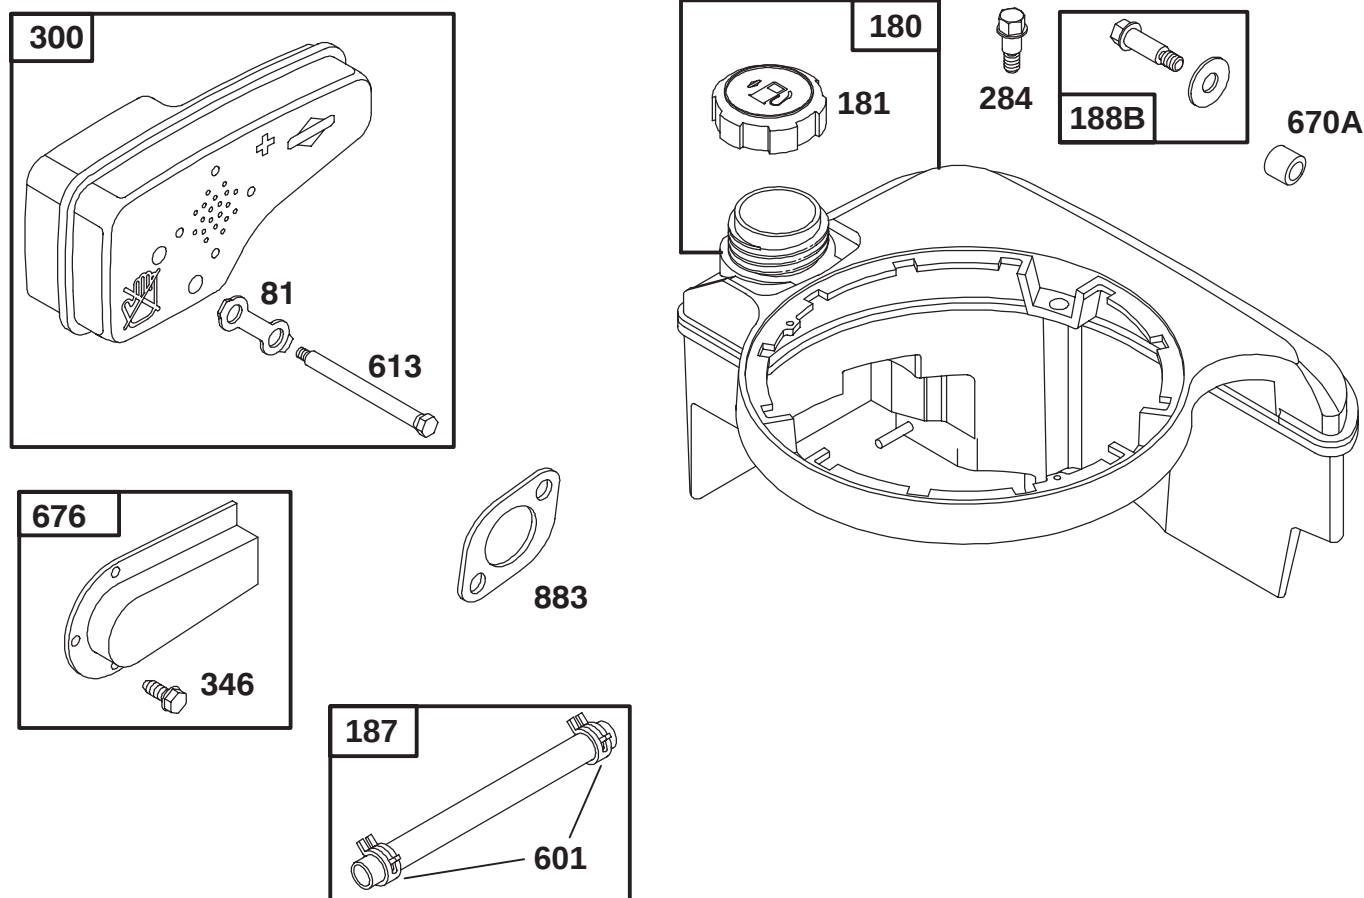


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-0658-01


Ref. No.	Part No.	Description	No. Used
81	223664	Lock — Muffler Screw	1
180	495224	Tank Assembly — Fuel	1
181	397974	Cap Assy. — Fuel	1
187	492790	Hose — Fuel	1
188B	398540	Screw — Tank Mounting	1
284	94511	Screw — Shoulder	1
300	496106	Muffler — Exhaust	1

Ref. No.	Part No.	Description	No. Used
346	94896	Screw — Hex. Head	1
601	93053	Clamp — Hose	1
613	94231	Screw — Shoulder	1
670A	280512	Spacer — Fuel Tank	1
676	493871	Deflector — Muffler	1
★883	272253	Gasket — Exhaust	1


★ Included in Gasket Set—Part No. 497316.

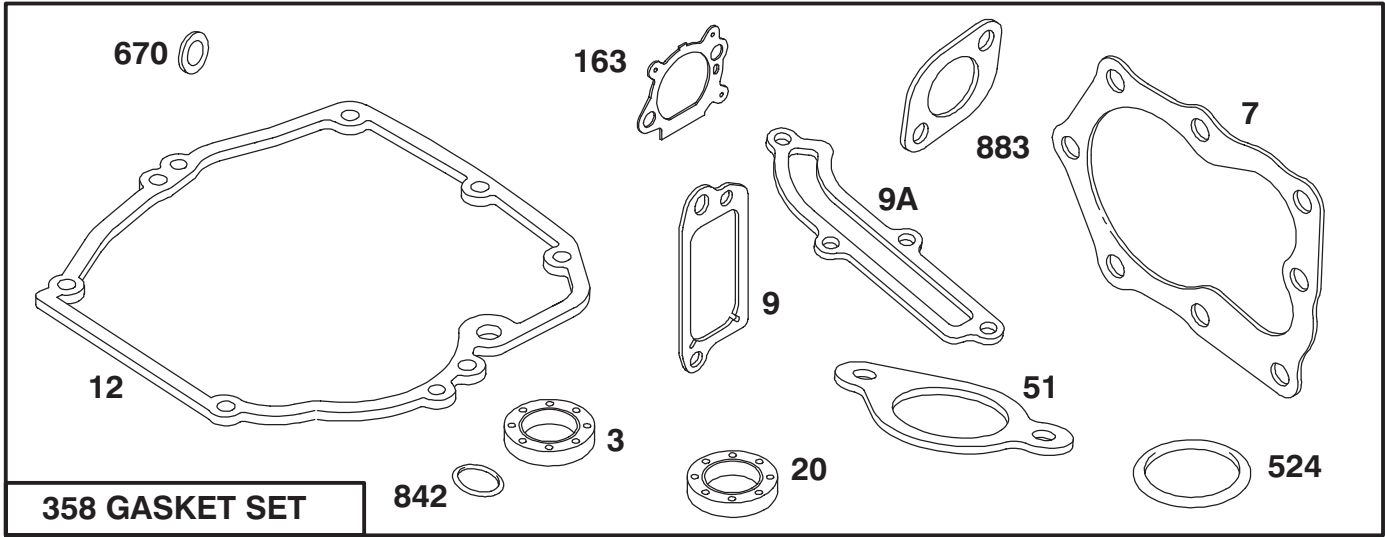

358 GASKET SET

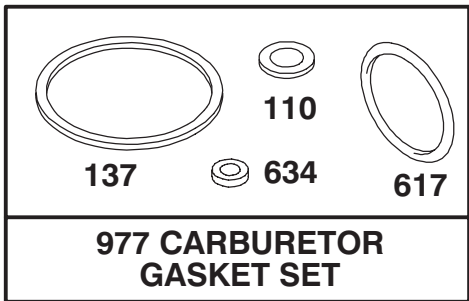

**977 CARBURETOR
GASKET SET**

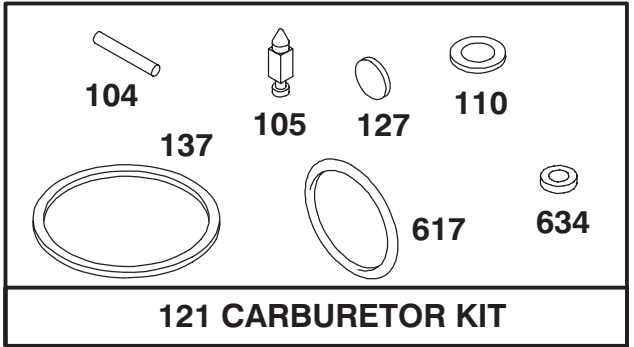

121 CARBURETOR KIT

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-0658—01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal — Oil	1
★7	272916	Gasket — Cylinder Hd.	1
★9	272481	Gasket — Breather	1
★9A	272238	Gasket — Baffle Plate	1
★12	272198	Gasket — Crankcase	1
★20	399781	Seal — Oil	1
★51	272199	Gasket — Intake Elbow	1
●104	231371	Pin — Float Hinge	1
●105	398188	Valve — Inlet (Includes Seat)	1
◆110		Gasket — Sealing (Sold in Kit Only)	1
121	498260	Carburetor Kit	1
●127		Plug — Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
◆137		Gasket — Bowl (Sold in Kit Only)	1
★163	272653	Gasket — Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal — Filler Tube	1
◆617	270344	Seal — Fuel Intake Tube	1
◆634		Washer — Shaft (Sold in Kit Only)	1
★670	493823	Spacer — Bracket Note: Includes Two.	1
★842	280966	Seal — O-Ring	1
★883	272253	Gasket — Exhaust	1
977	498261	Gasket Set — Carburetor	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
605120	1	12	1	Grommet
610358	3	17	2	Nut—Lock
614426	3	11	2	Washer—Stepped
614447	3	2	2	Spacer—Axle Shaft
614596	7	18	1	Gear — 34 Tooth
614637	1	27	2	Bracket—Wheel Height Adj
614650	1	24	2	Bolt—Shoulder
614668	7	2	1	Cover — Gear Case
614672	1	25	2	Bolt—Shoulder
614673	1	13	1	Spacer
614687	1	22	2	Spring Arm—Front
614696	7	4	1	Shaft — Intermediate
16–9269	1	1	1	Cover—Recycling
16–9279	2	23	1	Deck—21in Steel Sp
19–4050	4	20	2	Knob
26–0670	2	20	1	Bolt—Blade
33–0441	5	13	1	Cover — Door
36–4780	7	17	2	Washer — Thrust
36–4791	7	5	2	Washer
38–7820	7	15	1	Bearing — Ball
39–5770	2	28	1	Decal—Danger
40–1940	1	26	2	Washer
46–5520	4	11	1	Lever—Traction
46–8090	5	6	2	Screw — Tapping
46–8091	6	6	2	Screw — Tapping
49–2040	7	1	4	Screw — Taptite
49–2040	1	9	1	Screw—HH
55–3760	7	3	1	Pinion — 15 Tooth
60–8750	7	6	2	Bushing
60–8840	7	12	2	Pulley — Half
60–8850	7	9	2	Bushing — Output
60–8890	7	16	1	Gear — Bevel Pinion
62–6660	7	11	1	Spacer
62–7540	2	15	1	Retainer—Blade
62–7550	2	16	1	Pulley—Driver
65–2720	3	5	4	Ring—Retaining
65–4710	3	6	2	Ring—Friction
65–4720	3	13	2	Spring—Compression
65–4730	3	16	2	Washer—Thrust
65–4740	3	4	4	Washer—Thrust
65–4750	3	14	2	Gear—Pinion
65–4760	3	15	2	Washer
65–5100	6	5	1	Handle — Hood
66–6040	3	7	1	Key—Rocking
66–6050	3	8	1	Key—Rocking
82–8550	2	10	1	Shield—Muffler
85–7060	1	4	1	Decal—Danger
86–9671	4	2	1	Guide—Rope
88–1090	5	4	2	Spring — Door
88–1800	5	12	1	Latch — Door
88–3360	5	2	1	Decal — Discharge
92–1004	3	18	2	ASM—Spring Arm
92–1008	1	21	4	Knob—Height Adjust
92–1057	3	10	2	Bolt—Shoulder
92–1616	1	11	1	Screw
92–1624	2	14	3	Screw—Engine
92–2260	4	19	2	Screw—Handle
92–2280	4	8	1	Decal—Instruction
92–2289	2	9	1	Plate—Logo
92–2292	4	6	1	Decal—Instruction
92–2298	4	12	1	Washer—Spring
92–2299	4	15	1	Lever—Shift

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-2914	1	17	1	Decal-HOC
92-2915	1	16	1	Decal-HOC
92-3132	4	9	1	Bolt-Shoulder
92-3133	4	10	1	Spacer-Lever
92-3135	4	5	1	Bar-Control
92-4881	1	33	2	Plate-Height Adjust
92-4890	1	28	2	Washer
92-7727	7	10	1	Gearcase
92-7746	3	3	2	ASM-Hgt Adj Arm
92-8647	1	19	1	Shield-Trailing
92-9590	3	9	2	ASM-Wheel
92-9591	1	23	2	ASM-Wheel
93-0208	2	21	1	Guide-Belt
93-0209	1	7	1	Cover-Belt
93-0216	1	32	1	Kicker-Front
93-0217	2	12	1	Kicker-Rear
93-0218	2	22	1	Kicker-Side
93-0219	2	18	1	Accelerator
93-0222	1	31	1	Baffle-Front
93-0223	2	13	1	Baffle-Rear
93-0228	1	10	1	Brkt-Belt Guide
93-0231	1	30	2	Screw-Plastite
93-0232	3	1	1	V-Belt
93-0233	1	15	1	ASM-Brkt Handle L.H.
93-0234	1	5	1	ASM - Brkt. Handle R.H.
93-0237	4	4	1	Handle-Upper
93-0238	4	21	1	Handle-Lower
93-0239	7	7	1	Shaft - Output
93-0240	1	14	1	ASM-Transmission
93-0240	7	*	1	Gearcase Ass'y Complete
93-0241	2	17	1	Blade-Steel Deck
93-0242	5	9	4	Grommet
93-0242	1	2	4	Grommet
93-0243	2	5	1	Shroud-Qt Wedge
93-0245	2	27	1	Decal-Deck
93-0248	1	6	1	Decal-Warning
93-0250	4	17	1	Cable-Throttle/Traction
93-0251	4	18	1	Cable-Brake
93-0261	4	16	1	Curved Washer
93-0262	1	34	1	Decal-Warning
93-0264	5	3	1	Door - Discharge
93-0267	5	5	1	Plate - Discharge Chute
93-0279	6	1	1	Shield - Discharge Plug
93-0280	6	2	1	Cover - Discharge Plug
93-0340	4	7	1	Stop-Pivot
93-4196	2	26	1	Shield-Grass
93-7380	4	23	1	Anchor-Cable
93-8470	2	2	1	Screw-Clamp (P/W Eng)
94-1609	3	12	2	Cover-Wheel
94-1683	5	1	1	Chute - Discharge Ass'y
95-1657	2	7	1	Decal-Recoil
2210-249	2	3	1	Clamp-Casing (P/W Eng)
2210-316	2	6	1	Rope-Stop (P/W Eng)
321-51	4	3	1	Bolt-Hex
322-3	1	18	6	Screw-HH
3253-22	2	19	1	Washer-Lock
3256-24	7	13	1	Washer
3256-49	4	13	1	Washer-Flat
3285-19	7	8	2	Pin - Groove
3290-378	4	22	1	Tie-Cable
3296-2	4	14	1	Nut Lock
3296-2	1	36	1	Nut Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296–5	7	14	1	Nut
3296–29	1	20	6	Nut–Lock
3296–39	1	29	2	Nut–Lock
3296–73	4	1	1	Nut–Lock
32104–122	6	3	3	Screw – PH
32105–27	1	35	1	Screw–HWH
32144–4	1	3	4	Screw–TAP
32144–32	5	10	2	Screw – Plasitc
32144–73	2	11	3	Screw–HWHTF
32144–85	3	19	2	Screw–HH
32144–111	5	7	1	Screw – PPH
32144–111	2	1	2	Screw – PPH
32144–119	1	8	1	Screw–Thrd Frm
32144–121	2	8	2	Screw

[illegible]

MAINTENANCE RECORD

[illegible]