



21" RECYCLER[®]

Mower

Model No. 20478 – 7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Engine Briggs & Stratton	
Engine Assembly	2	Model 12H802–1758–A1	6–14
Rear Axle Assembly	3	Toro Part Number Index	15–17
Handle Assembly	4		
Gear Case Assembly	5		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Discharge Chute	Model No. 59199	Mow & Feed	Model No. 52070
Dethatcher Kit	Model No. 59131	Bag Kit	Model No. 59296

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

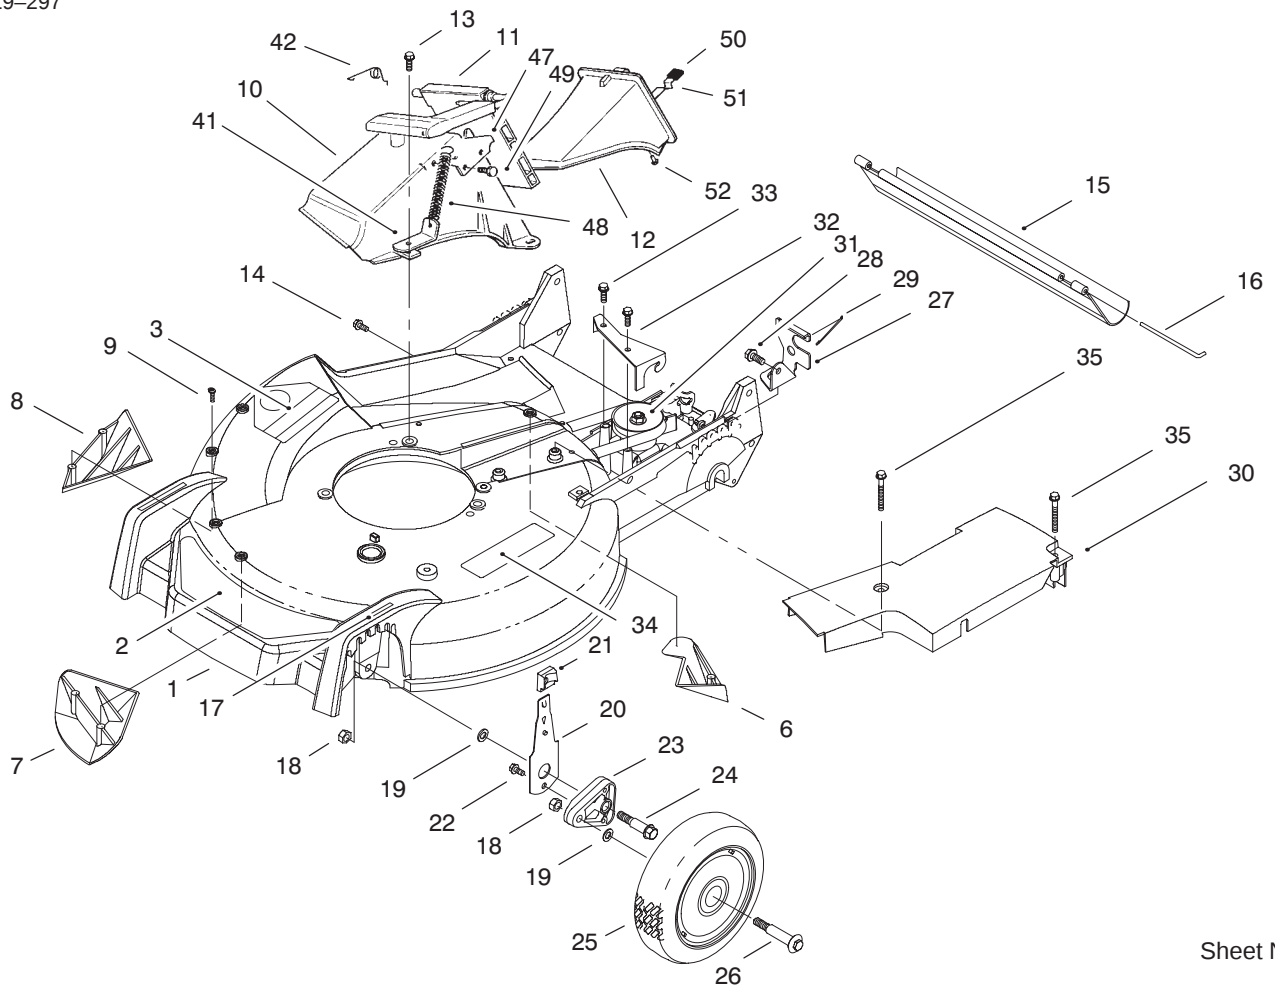


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	16-9489	1	Housing-Rwd (Incl. Ref. #3-9, 17, & 34)
2	93-3696	1	Decal-Deck
3	39-5770	1	Decal-Danger
6	92-1750	1	Plate-Kicker Rear
7	92-1720	1	Kicker-RH
8	92-1730	1	Kicker-LH
9	32144-111	6	Screw - PPH
10	82-9152	1	Chute-Discharge
11	93-7351	1	ASM-Door
12	77-0500	1	ASM-Plug
13	46-6811	3	Screw-HWH
14	46-6810	1	Screw HWH
15	44-0580	1	Shield-Trailing
16	33-3208	1	Rod-Shield
17	92-2279	4	Decal-HOC
18	3296-6	4	Nut-Lock
19	40-1940	4	Washer
20	66-0541	2	ASM-Spring Arm
21	25-7740	2	Knob-Arm
22	32144-85	2	Screw-HH
23	66-0580-03	2	Arm-Pivot
24	66-0560	2	Screw-Shoulder
25	14-9989	2	ASM-Wheel & Tire (Incl. Ref. #53)
26	27-6232	2	Bolt-Wheel HH


Ref. No.	Part No.	Qty.	Description
27	82-5680	1	Bracket-Adjustment
28	32144-70	1	Screw-TAP
29	46-7030	1	Retainer-Cable
30	93-4188	1	Cover-Belt
31	62-6673	1	ASM-Gearcase
32	62-4320	1	Bracket-Guide
33	49-2040	2	Screw-HH
34	93-0248	1	Decal-Warning
35	37-7260	2	Screw-TAP
41	71-9350	1	Spring-Bracket
42	80-3770	1	Retainer-Door
47	93-3154	1	Plate-Latch
48	76-4660	1	Spring-Extension
49	46-8090	2	Screw-Tapping
50	76-4650	1	Grip - Latch
51	76-4640	1	Latch - Discharge Plug
52	3295-35	1	Rivet
53	27-6250	4	Bushing - Wheel

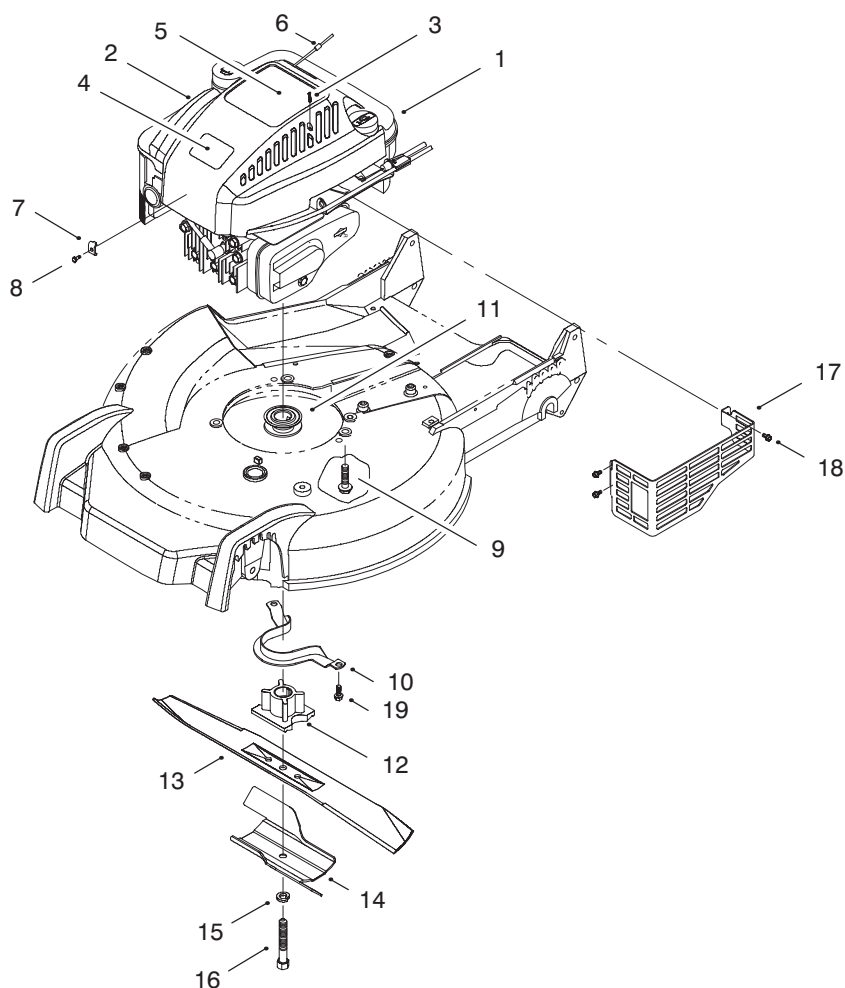

Sheet No.:3

Engine Assembly


Ref. No.	Part No.	Qty.	Description
1		1	Engine
2	93-0243	1	Shroud-Qt Wedge
3	32144-121	2	Screw
4	92-2289	1	Plate-Logo
5	95-1671	1	Decal-Engine
6	2210-316	1	Rope-Stop (P/W Eng)
7	2210-249	1	Clamp-Casing (P/W Eng)
8	93-8470	1	Screw-Clamp (P/W Eng)
9	32144-102	3	Screw
10	66-0570	1	Guide-Belt
11	62-7550	1	Pulley-Driver
12	93-4107	1	Retainer-Blade
13	93-4106	1	Blade-Generation Iii
14	94-1608	1	Stiffener-Blade
15	3253-22	1	Washer-Lock
16	26-0670	1	Bolt-Blade
17	82-8550	1	Shield-Muffler
18	32144-73	3	Screw-HWHTF
19	32144-70	2	Screw-TAP

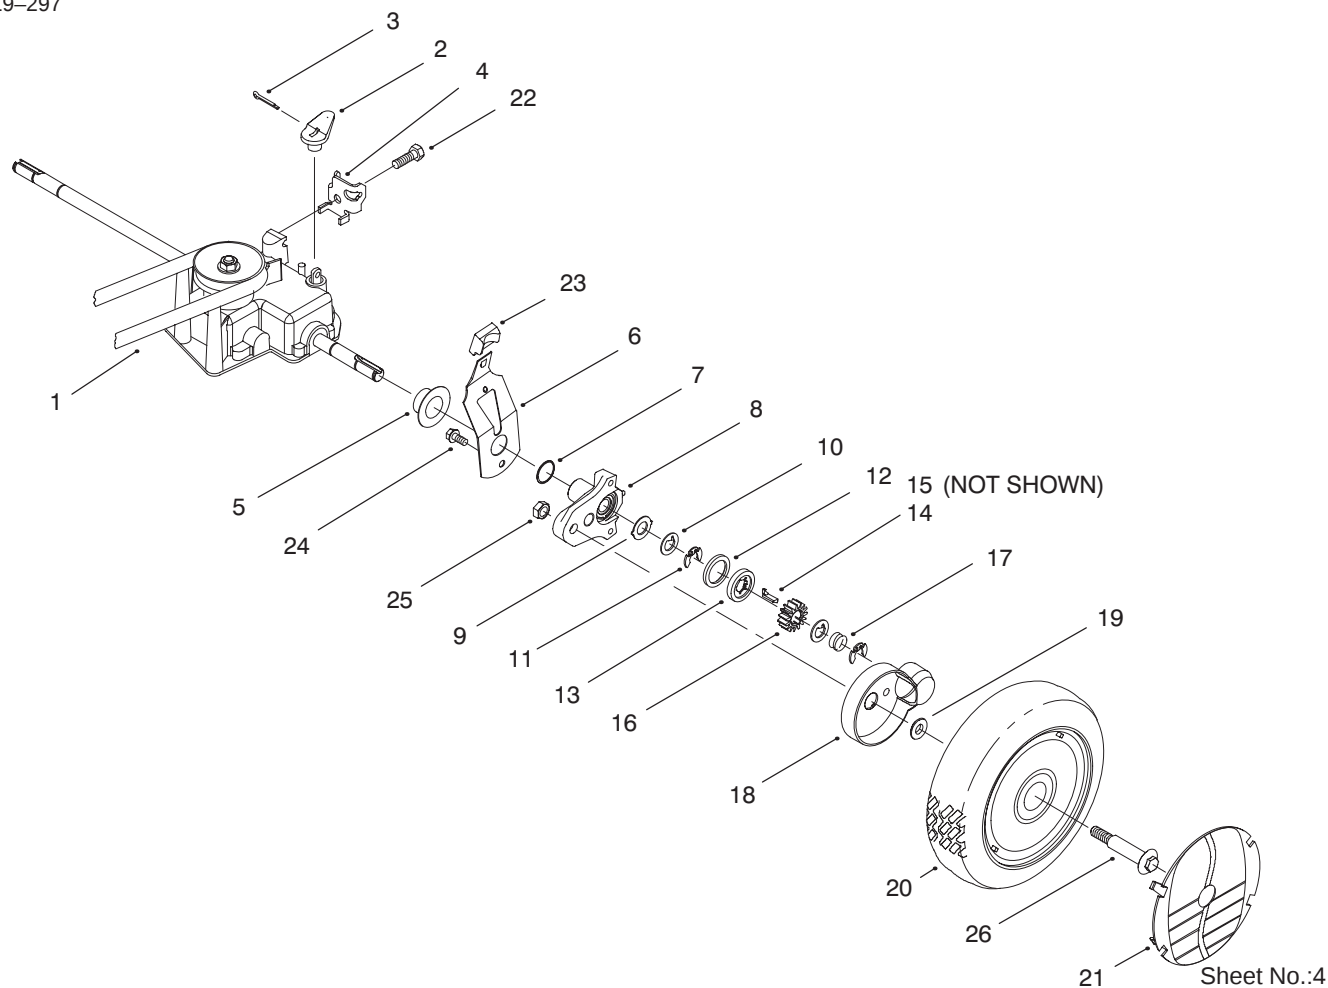

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	62-3900	1	V-Belt
2	60-8821	1	Lever-Shift
3	3272-10	1	Pin-Cotter
4	82-8780	1	Retainer-Cable
5	42-3520	2	Cap-End
6	63-8721	2	ASM-Arm Spring
7	237-153	2	O-Ring
8	63-8701-03	2	ASM - Pivot
9	65-4730	2	Washer-Thrust
10	65-4740	4	Washer-Thrust
11	65-2720	4	Ring-Retaining
12	65-4710	2	Ring-Friction
13	65-4760	2	Washer
14	66-6050	1	Key-Rocking
15	66-6040	1	Key-Rocking
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover
20	16-0029	2	ASM-Wheel Gear & Tire
21	91-2253	1	Cover-Wheel
22	32144-70	1	Screw-TAP
23	25-7740	2	Knob-Arm
24	32144-85	2	Screw-HH


Ref. No.	Part No.	Qty.	Description
25	3296-6	2	Nut-Lock
26	27-6232	2	Bolt-Wheel HH

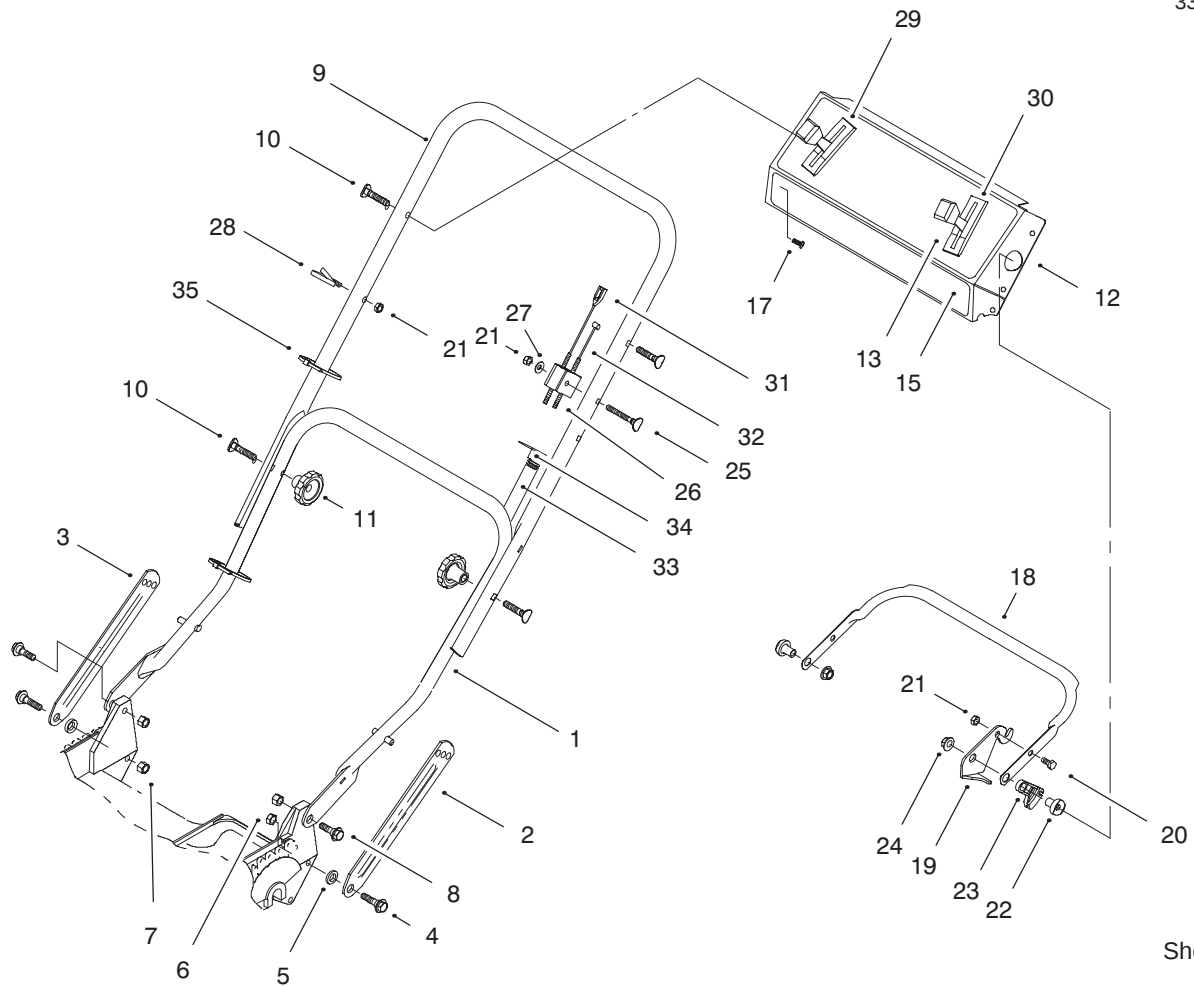

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	43-1362-05	1	ASM-Handle	28	86-9671	1	Guide-Rope
2	84-8361	1	Latch-Handle	29	76-2712	1	Control-Speed
3	84-8401	1	Latch-Handle	30	93-4186	1	Cable-Throttle
4	27-7210	2	Screw-Shoulder	31	93-4187	1	Cable-Brake
5	3-3287	2	Spacer	32	46-5481	1	Cable-Traction
6	3296-47	1	Nut-Lock	33	46-6440	1	Cover-Cables
7	3296-72	3	Nut-Lock	34	2412-50	4	Clip-Tubing
8	27-7211	2	Screw-Shoulder	35	3290-378	3	Tie-Cable
9	92-2278-05	1	Handle-Upper				
10	92-2260	4	Screw-Handle				
11	19-4050	2	Knob				
12	16-9499	1	Panel-Control (Incl. Ref. #13)				
13	93-4191	1	Decal-Instructions				
15	93-3697	1	Decal-Panel				
17	92-9665	5	Screw-Phil				
18	71-3080-05	1	Bar-Control				
19	66-5351	1	Lever-Control				
20	321-39	1	Screw-HH				
21	3296-73	3	Nut-Lock				
22	49-1630	2	Spacer-Support				
23	46-5520	1	Lever-Traction				
24	3296-74	2	Nut-Flange				
25	92-2269	1	Screw-Handle				
26	46-6980	1	Support-Cable				
27	3256-1	1	Washer-Flat				

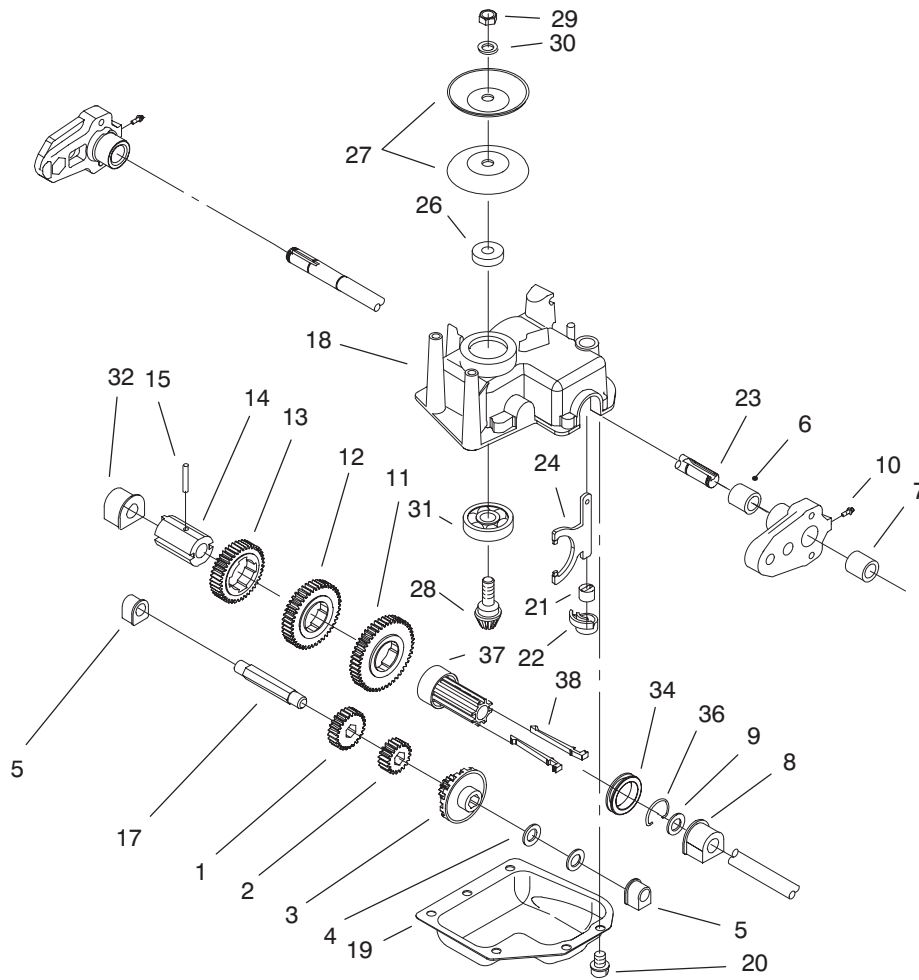


Sheet No.:1

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	55-3800	1	Pinion 25t 3rd Gear
2	55-3780	1	Pinion 20t 2nd Gear
3	55-3760	1	15 T Pinion
4	36-4791	2	Washer-Thrust
5	60-8750	2	Bushing
6	70-9760	2	Bushing
7	48-2060	2	Bearing – Needle
8	60-8770	1	Bushing-Output Shaft
9	36-4780	1	Washer-Thrust
10	302-56	2	Fitting – Grease
11	55-3770	1	Gear 49t 1st Gear
12	55-3790	1	Gear 44t 2nd Gear
13	55-3810	1	Gear 39t 3rd Gear
14	60-8790	1	Sleeve-Gear
15	32121-120	1	Pin-Coil
17	60-8800	1	Shaft-Intermediate
18	60-8710	1	Gearcase-Upper 3 Sp
19	60-8730	1	Cover-Gearcase
20	49-2040	6	Screw-HH
21	29-9570	1	Bushing-Yoke
22	60-8810	1	Retainer-Shift-Fork
23	65-4770	1	Shaft-Output
24	60-8870	1	Yoke-Shift
26	62-6660	1	Spacer-Pulley
27	60-8840	2	Pulley-Half
28	60-8890	1	Gear-Pinion

Ref. No.	Part No.	Qty.	Description
29	3296-5	1	Nut-Lock
30	3256-24	1	Washer-Flat
31	38-7820	1	Bearing-Ball
32	60-8850	1	Bushing-Output
34	76-0770	1	Collar-Shift
36	65-5250	1	Clip-Spring
37	76-0780	1	Sleeve-Shift Key
38	76-0760	2	Key-Shift

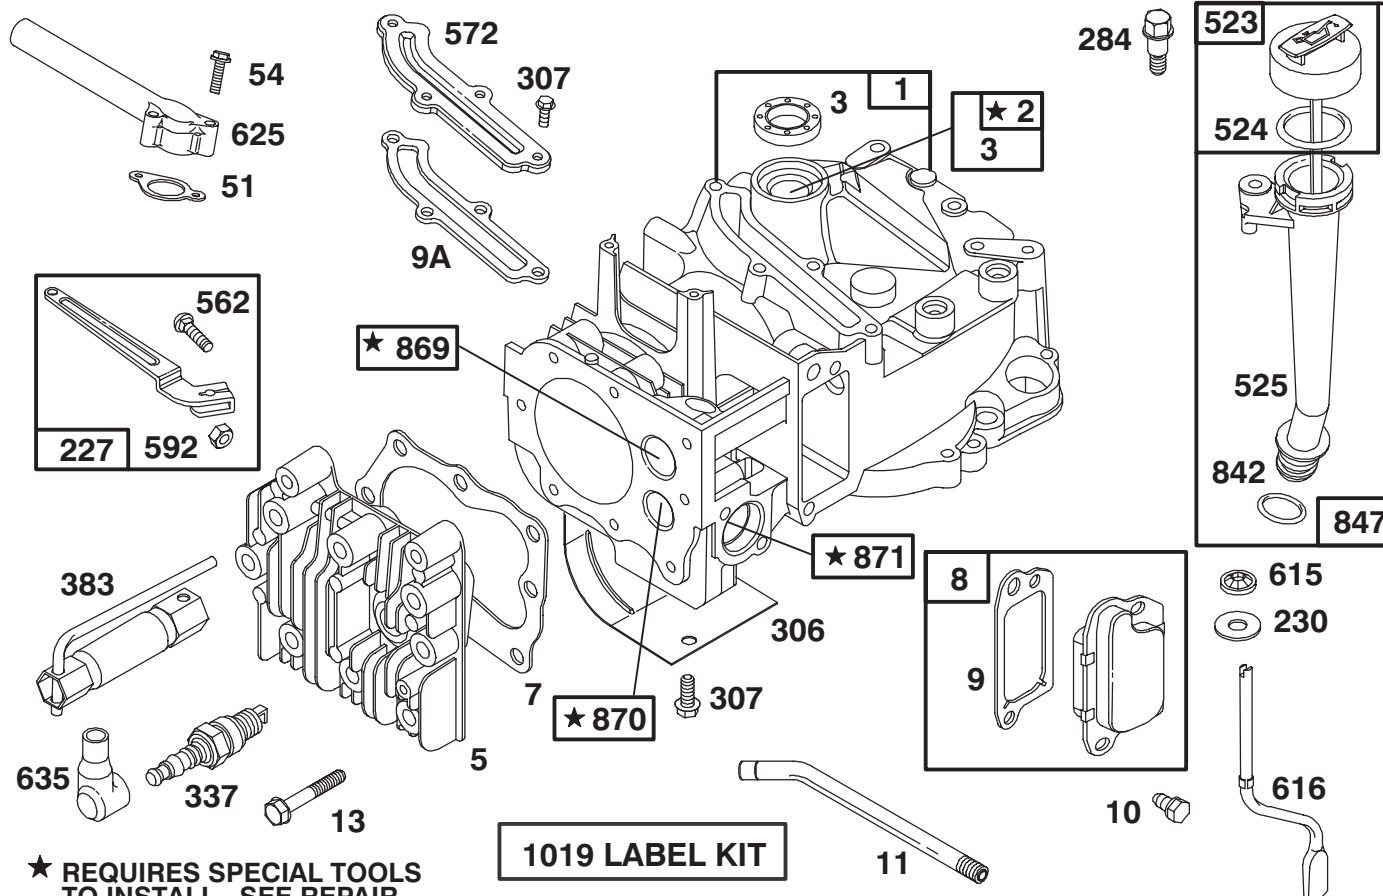

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


1019 LABEL KIT

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-A1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1	523	495264	Dipstick	1
2	293708	Bushing	1	★524	280393	Seal – O Ring	1
★3	299819	Seal – Oil	1	525	495265	Tube – Oil Filler	1
5	214368	Head – Cylinder	1	562	94582	Screw – Hex.	1
★7	272916	Gasket – Cylinder Head	1	572	224328	Baffle – Cylinder	1
8	495786	Breather Assy.	1	592	231082	Nut – Hex.	1
★9	272481	Gasket – Breather	1	615	94474	Fastener	1
★9A	272238	Gasket – Breather	1	616	263175	Crank – Governor	1
10	94650	Screw – Hex.	1	625	497465	Tube – Fuel Intake	1
11	231933	Tube – Breather	1	635	66538	Elbow – Spark Plug	1
13	94876	Screw – Hex.	1	★842	280966	Seal – O Ring	1
★51	272199	Gasket – Intake Elbow	1	847	495263	Dipstick/Tube Assy.	1
54	94526	Screw – Hex	1	869	213512	Seat – Valve (Intake)	1
227	492349	Lever Assembly – Gov.	1	870	213513	Seat – Valve (Exhaust)	1
230	67072	Washer – Gov. Crank	1	871	262001	Bushing – Guide (Exhaust)	1
284	94511	Screw – Hex.	1			Note: 63709 Bushing – Guide (Intake)	1
306	224324	Shield – Cylinder	1	1019	494256	Label Kit	1
307	94515	Screw – Hex.	1				
337	802592	Plug – Spark	1				
383	89838	Wrench – Spark Plug	1				

★ Included in Gasket Set—Part No. 497316.

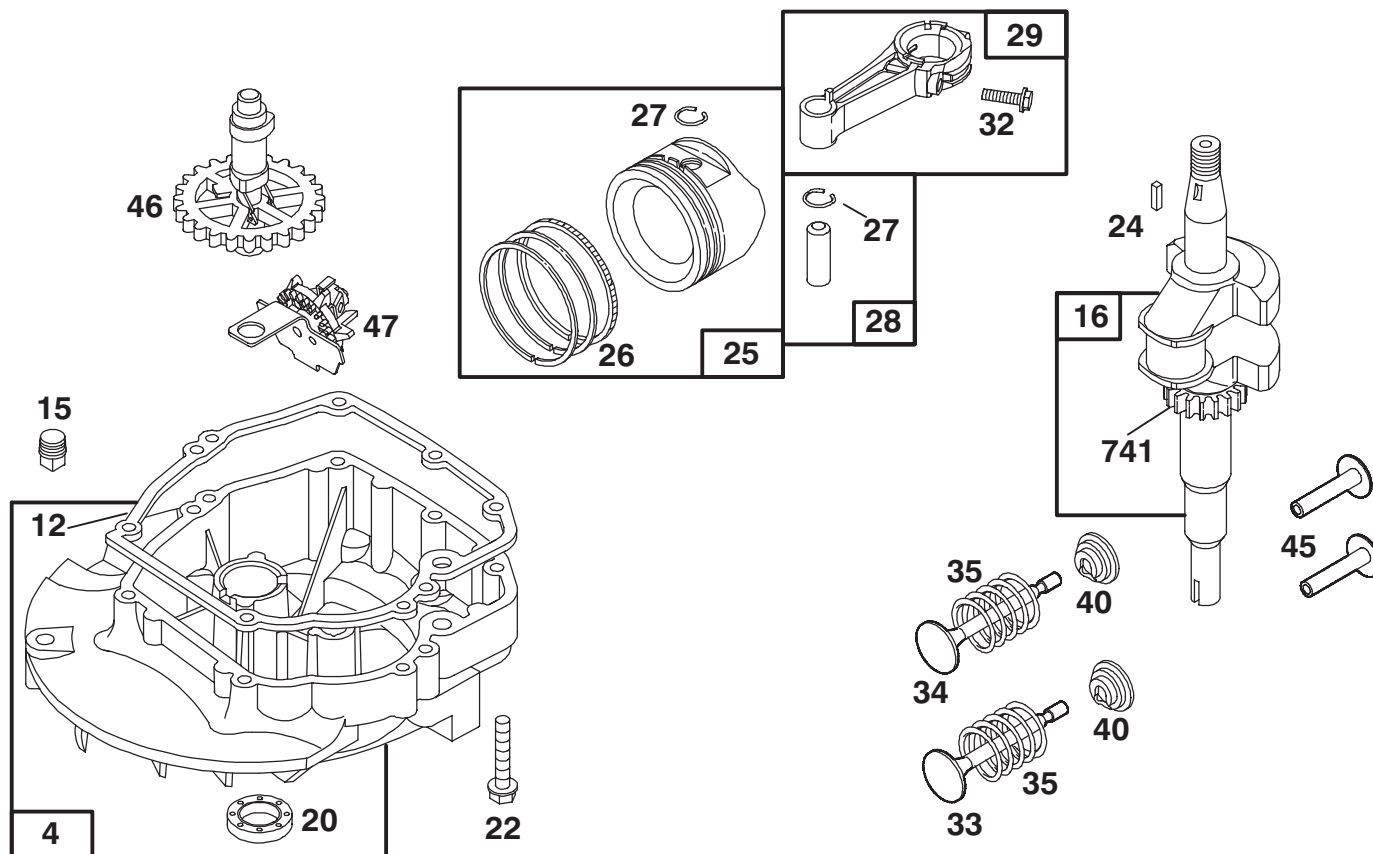


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-A1

Ref. No.	Part No.	Description	No. Used
4	493279	Sump — Engine	1
★12	272198	Gasket — Crankcase	1
15	94880	Plug — Oil Drain	1
16	494546	Crankshaft	1
		Note: For Timing Gear Key Order 94388.	
★20	399781	Seal — Oil	1
22	94220	Screw — Hex.	1
		Note: 94612 Screw — Hex. (One (1) Used in Hole Nearest Breather.)	1
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005" O.S.)	1
29	490566	Rod Assembly — Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	
32	94699	Screw — Connecting Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
40	93312	Retainer — Valve Spring	1
45	262204	Tappet — Valve	1
46	498275	Gear — Cam	1
47	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

★ Included in Gasket Set—Part No. 497316.

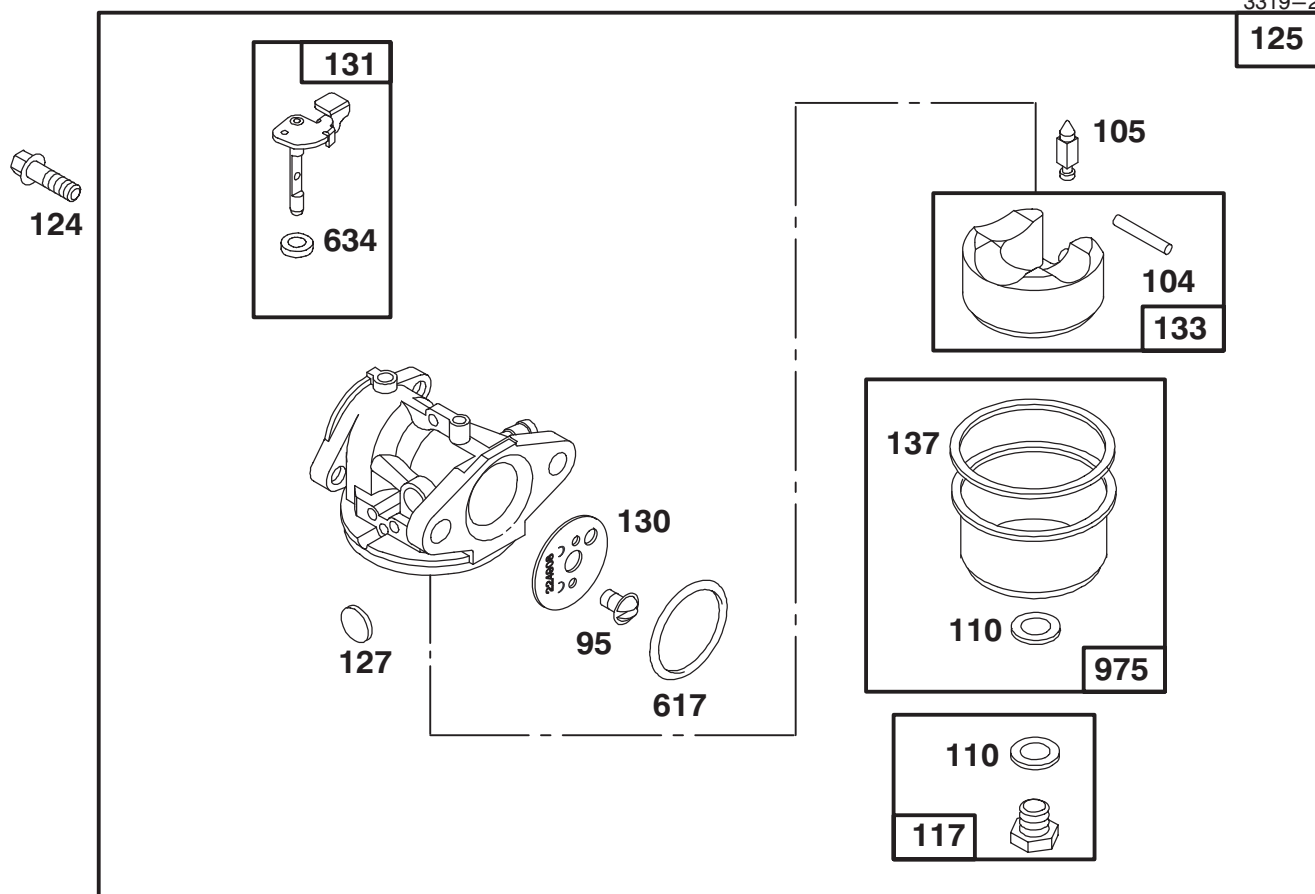


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-A1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Slotted	1	●127		Plug – Welch (Sold in Kit Only).	1
●104	231371	Pin – Float Hinge	1	130	224908	Valve – Throttle	1
●105	398188	Valve – Needle (Includes Seat)	1	131	493267	Shaft – Throttle	1
●◆110		Washer – Bowl (Sold in Kit Only).	1	133	398187	Float – Carburetor	1
117	494870	Jet – Main (Std.)	1	◆◆137		Gasket – Bowl (Sold in Kit Only).	1
		Note: 497315 Jet – Main (High Altitude)	1	◆◆617	270344	Seal – Intake Manifold	1
124	94840	Screw – Hex	1	◆◆634		Washer – Foam (Sold in Kit Only).	1
125	498170	Carburetor	1	975	493640	Bowl – Float	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

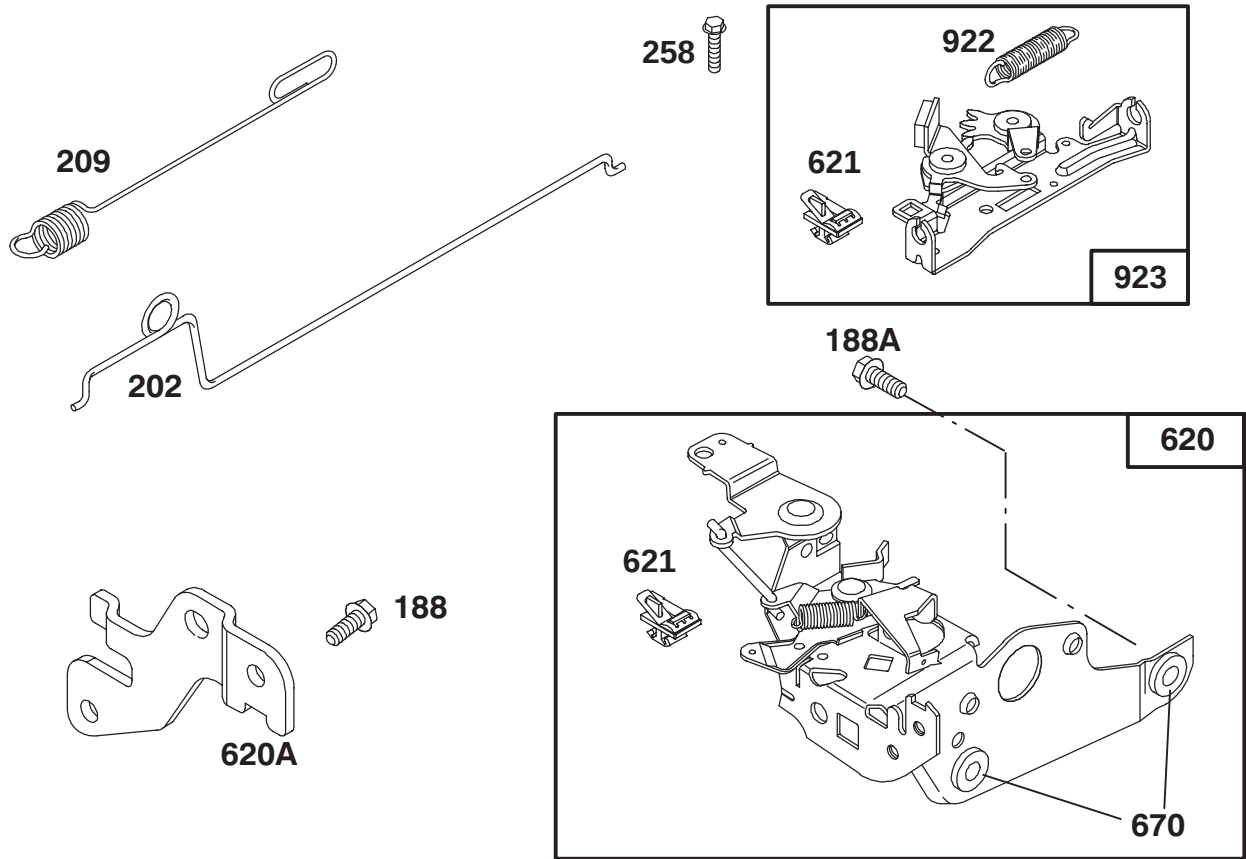


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-A1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1
188A	94874	Screw – Hex.	1
202	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw – Hex.	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket	1
922	262640	Spring – Brake	1
923	493442	Brake Assembly	1

★ Included in Gasket Set—Part No. 497316.

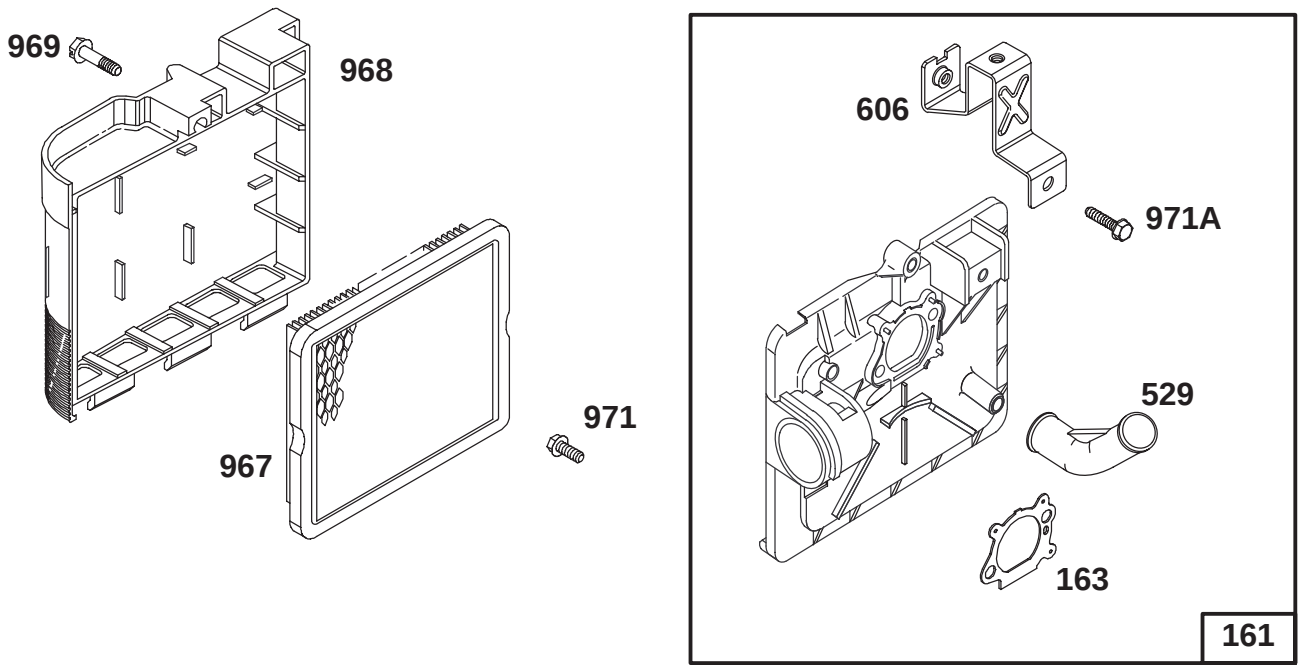


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758—A1

Ref. No.	Part No.	Description	No. Used
161	496116	Base — Air Cleaner	1
★163	272653	Gasket — Air Cleaner	1
529	281299	Grommet	1
606	224815	Bracket — Support	1
967	491588	Filter — Air	1

Ref. No.	Part No.	Description	No. Used
968	281340	Cover — Air Cleaner	1
969	94872	Screw — Slotted Hex.	1
971	94873	Screw — Hex.	1
971A	94749	Screw — Hex.	1

★ Included in Gasket Set—Part No. 497316.

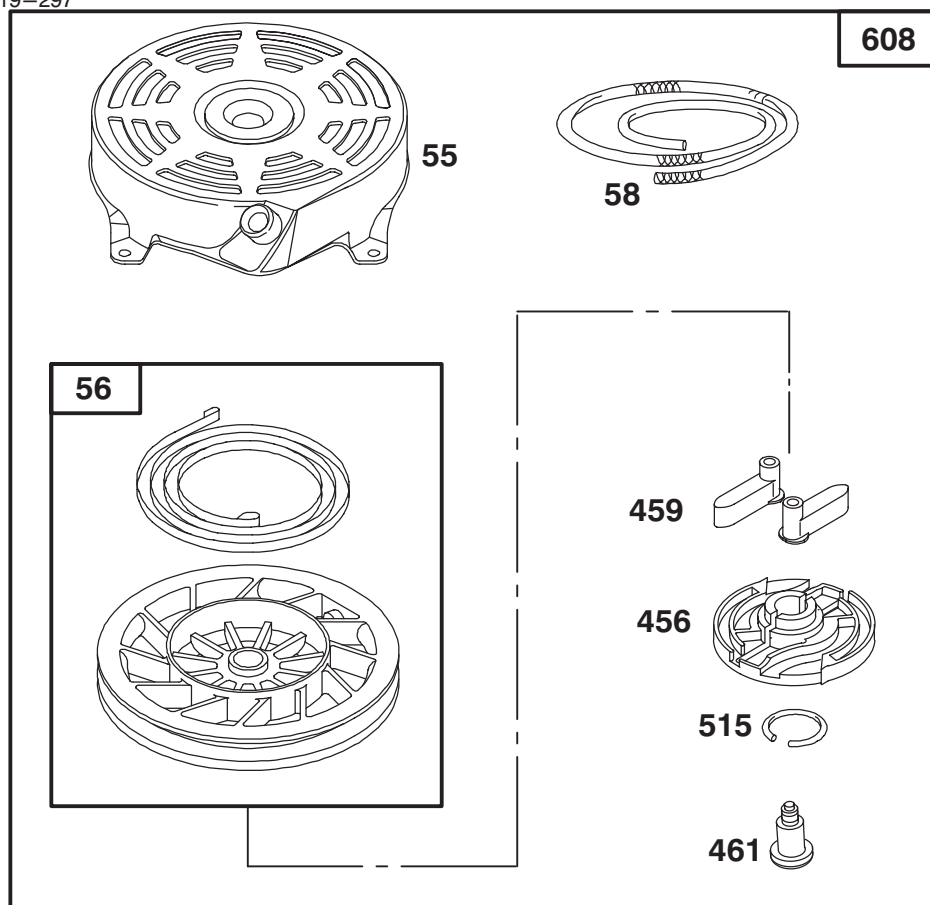


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-A1

Ref. No.	Part No.	Description	No. Used
55	497440	Housing — Rewind Starter	1
56	498144	Pulley — Starter	1
58	280399	Rope — Starter	1
59	224467	Insert — Starter Grip	1
60	493926	Grip — Starter Rope	1
456	281503	Retainer — Spring	1
459	281505	Pawl — Ratchet	1




Ref. No.	Part No.	Description	No. Used
461	94943	Screw — Shoulder	1
515	263073	Spring — Friction	1
608	497680	Starter — Rewind	1
		Includes:	
		94904 Screw — Hex.	1
		94908 Nut — Hex.	1

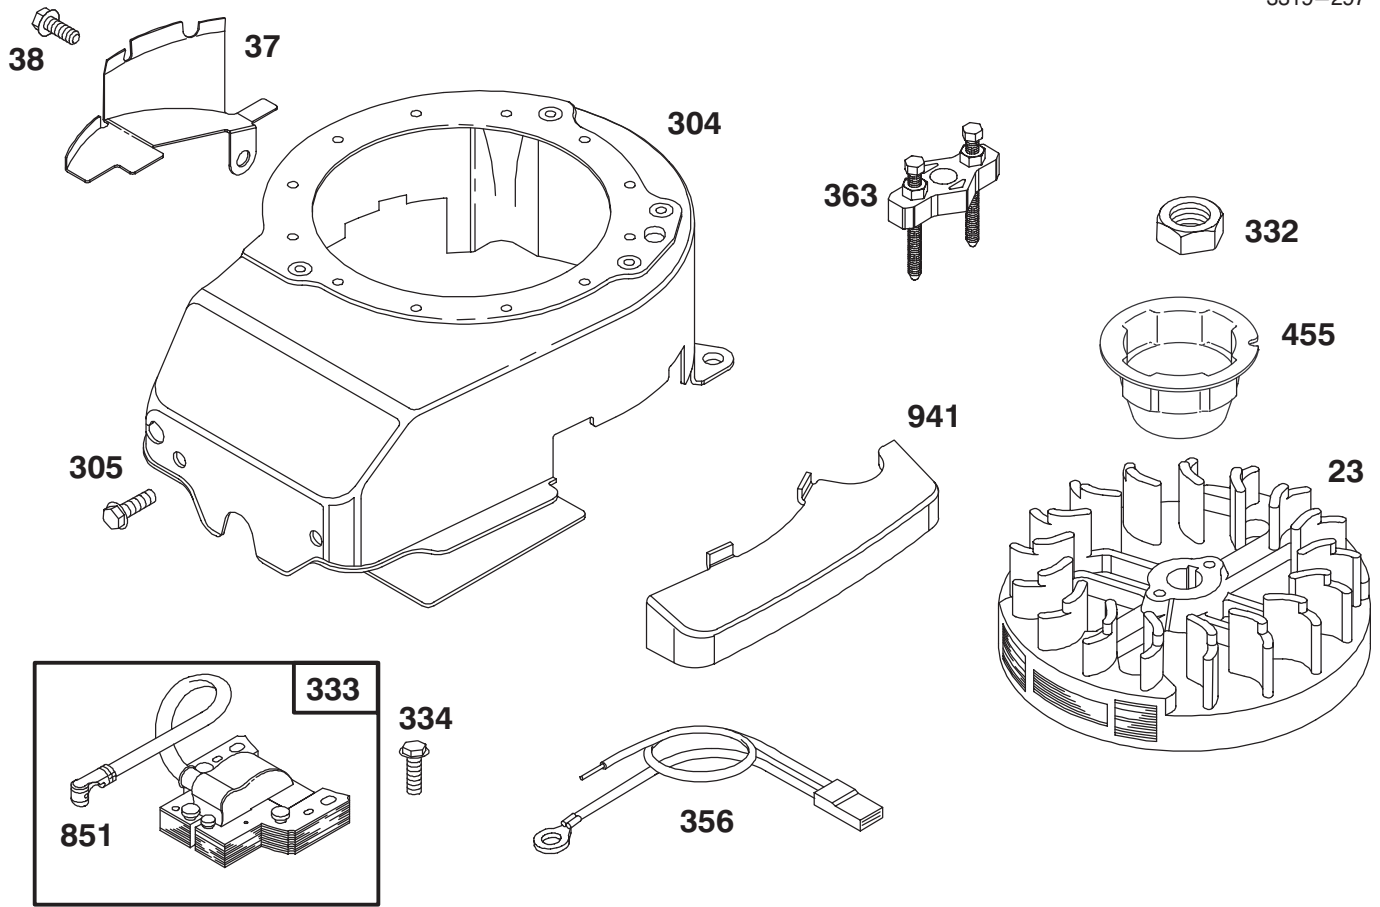

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758—A1




Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1	334	94731	Screw — Hex.	1
37	224511	Guard — Flywheel	1	356	398808	Wire — Stop	1
38	94786	Screw — Hex.	1	363	19069	Puller — Flywheel	1
304	493293	Housing — Blower	1	455	225121	Cup — Flywheel	1
305	94744	Screw — Hex.	1	851	493880	Terminal — Cable	1
332	94877	Nut — Flywheel	1	941	281145	Coverage — Linkage	1
333	802574	Armature — Magneto	1				

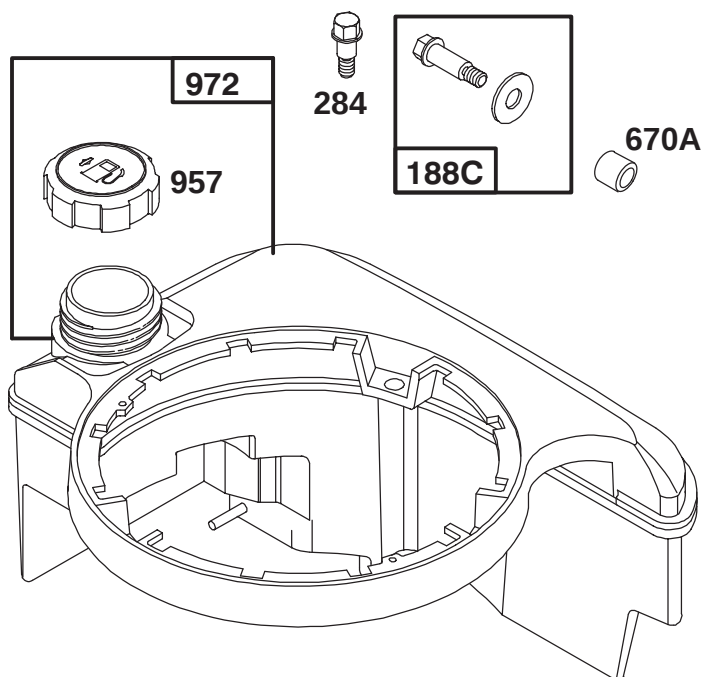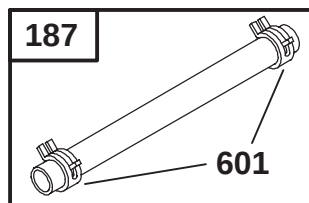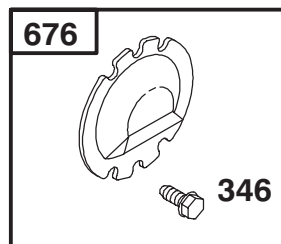

ENGINE BRIGGS & STRATTON MODEL 12H802-1758—A1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	393756	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap – Fuel Tank	1
972	495224	Tank – Fuel	1

13

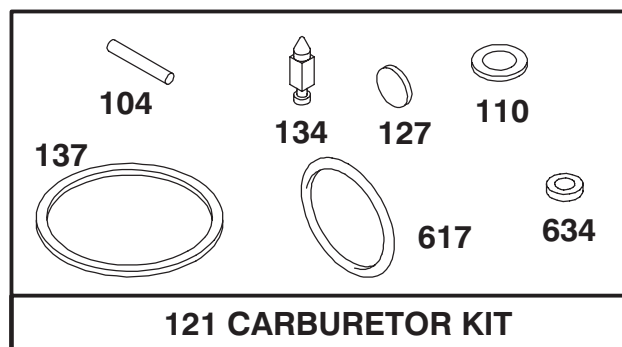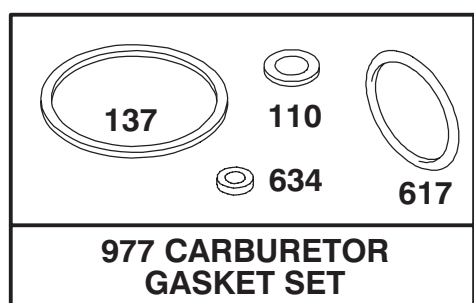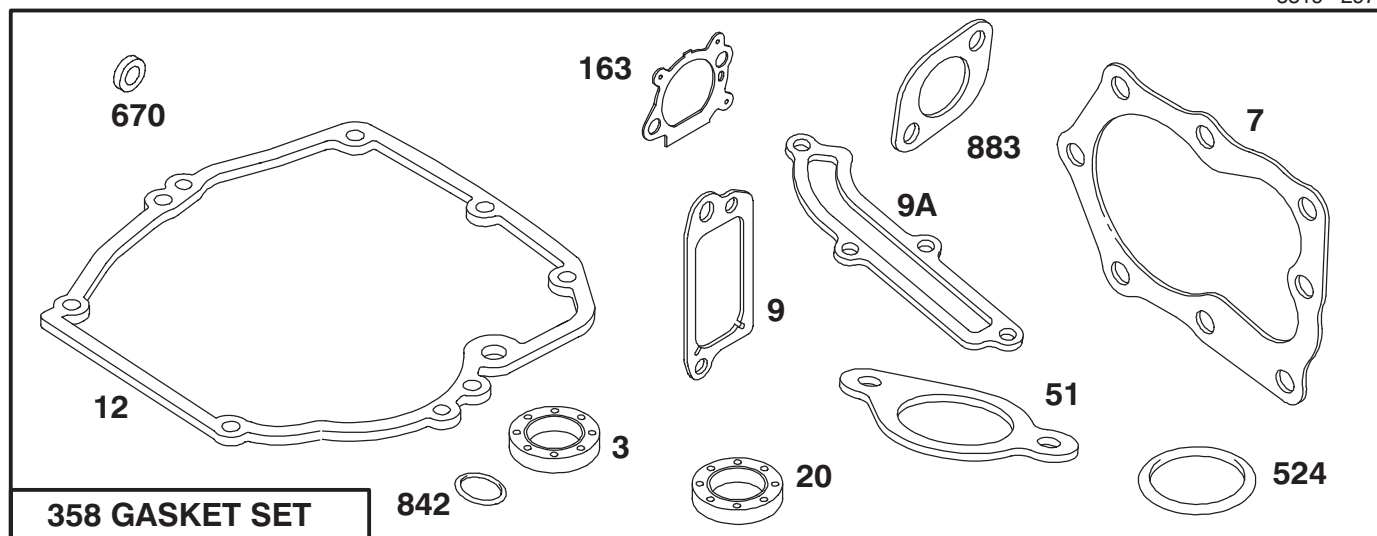

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-A1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Head	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Breather	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake	1
●104	231371	Pin – Float Hinge	1
◆110		Washer – Bowl (Sold in Kit Only).	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1
●134	398188	Valve – Needle (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
◆137		Gasket – Bowl (Sold in Kit Only).	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – O Ring	1
◆◆617	270344	Seal – Intake Manifold	1
◆◆634		Washer – Foam (Sold in Kit Only).	1
★670	493823	Spacer – Bracket Note: Includes Two.	1
★842	280966	Seal – O Ring	1
★883	272253	Gasket – Exhaust	1
977	498261	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
3-3287	4	5	2	Spacer
14-9989	1	25	2	ASM-Wheel & Tire
16-0029	3	20	2	ASM-Wheel Gear & Tire
16-9489	1	1	1	Housing-Rwd
16-9499	4	12	1	Panel-Control)
19-4050	4	11	2	Knob
25-7740	1	21	2	Knob-Arm
25-7740	3	23	2	Knob-Arm
26-0670	2	16	1	Bolt-Blade
27-6232	1	26	2	Bolt-Wheel HH
27-6232	3	26	2	Bolt-Wheel HH
27-6250	1	53	4	Bushing - Wheel
27-7210	4	4	2	Screw-Shoulder
27-7211	4	8	2	Screw-Shoulder
29-9570	5	21	1	Bushing-Yoke
33-3208	1	16	1	Rod-Shield
36-4780	5	9	1	Washer-Thrust
36-4791	5	4	2	Washer-Thrust
37-7260	1	35	2	Screw-TAP
38-7820	5	31	1	Bearing-Ball
39-5770	1	3	1	Decal-Danger
40-1940	1	19	4	Washer
42-3520	3	5	2	Cap-End
43-1362-05	4	1	1	ASM-Handle
44-0580	1	15	1	Shield-Trailing
46-5481	4	32	1	Cable-Traction
46-5520	4	23	1	Lever-Traction
46-6440	4	33	1	Cover-Cables
46-6810	1	14	1	Screw HWH
46-6811	1	13	3	Screw-HWH
46-6980	4	26	1	Support-Cable
46-7030	1	29	1	Retainer-Cable
46-8090	1	49	2	Screw-Tapping
48-2060	5	7	2	Bearing - Needle
49-1630	4	22	2	Spacer-Support
49-2040	1	33	2	Screw-HH
49-2040	5	20	6	Screw-HH
55-3760	5	3	1	15 T Pinion
55-3770	5	11	1	Gear 49t 1st Gear
55-3780	5	2	1	Pinion 20t 2nd Gear
55-3790	5	12	1	Gear 44t 2nd Gear
55-3800	5	1	1	Pinion 25t 3rd Gear
55-3810	5	13	1	Gear 39t 3rd Gear
60-8710	5	18	1	Gearcase-Upper 3 Sp
60-8730	5	19	1	Cover-Gearcase
60-8750	5	5	2	Bushing
60-8770	5	8	1	Bushing-Output Shaft
60-8790	5	14	1	Sleeve-Gear
60-8800	5	17	1	Shaft-Intermediate
60-8810	5	22	1	Retainer-Shift-Fork
60-8821	3	2	1	Lever-Shift
60-8840	5	27	2	Pulley-Half
60-8850	5	32	1	Bushing-Output
60-8870	5	24	1	Yoke-Shift
60-8890	5	28	1	Gear-Pinnion
62-3900	3	1	1	V-Belt
62-4320	1	32	1	Bracket-Guide
62-6660	5	26	1	Spacer-Pulley
62-6673	1	31	1	ASM-Gearcase
62-7550	2	11	1	Pulley-Driver
63-8701-03	3	8	2	ASM - Pivot
63-8721	3	6	2	ASM-Arm Spring

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
65-2720	3	11	4	Ring—Retaining
65-4710	3	12	2	Ring—Friction
65-4720	3	17	2	Spring—Compression
65-4730	3	9	2	Washer—Thrust
65-4740	3	10	4	Washer—Thrust
65-4750	3	16	2	Gear—Pinion
65-4760	3	13	2	Washer
65-4770	5	23	1	Shaft—Output
65-5250	5	36	1	Clip—Spring
66-0541	1	20	2	ASM—Spring Arm
66-0560	1	24	2	Screw—Shoulder
66-0570	2	10	1	Guide—Belt
66-0580-03	1	23	2	Arm—Pivot
66-5351	4	19	1	Lever—Control
66-6040	3	15	1	Key—Rocking
66-6050	3	14	1	Key—Rocking
70-9760	5	6	2	Bushing
71-3080-05	4	18	1	Bar—Control
71-9350	1	41	1	Spring—Bracket
74-1660	3	18	2	Cover—Wheel
74-1671	3	19	2	Spacer—Cover
76-0760	5	38	2	Key—Shift
76-0770	5	34	1	Collar—Shift
76-0780	5	37	1	Sleeve—Shift Key
76-2712	4	29	1	Control—Speed
76-4640	1	51	1	Latch — Discharge Plug
76-4650	1	50	1	Grip — Latch
76-4660	1	48	1	Spring—Extension
77-0500	1	12	1	ASM—Plug
80-3770	1	42	1	Retainer—Door
82-5680	1	27	1	Bracket—Adjustment
82-8550	2	17	1	Shield—Muffler
82-8780	3	4	1	Retainer—Cable
82-9152	1	10	1	Chute—Discharge
84-8361	4	2	1	Latch—Handle
84-8401	4	3	1	Latch—Handle
86-9671	4	28	1	Guide—Rope
91-2253	3	21	1	Cover—Wheel
92-1720	1	7	1	Kicker—RH
92-1730	1	8	1	Kicker—LH
92-1750	1	6	1	Plate—Kicker Rear
92-2260	4	10	4	Screw—Handle
92-2269	4	25	1	Screw—Handle
92-2278-05	4	9	1	Handle—Upper
92-2279	1	17	4	Decal—HOC
92-2289	2	4	1	Plate—Logo
92-9665	4	17	5	Screw—Phil
93-0243	2	2	1	Shroud—Qt Wedge
93-0248	1	34	1	Decal—Warning
93-3154	1	47	1	Plate—Latch
93-3696	1	2	1	Decal—Deck
93-3697	4	15	1	Decal—Panel
93-4106	2	13	1	Blade—Generation Iii
93-4107	2	12	1	Retainer—Blade
93-4186	4	30	1	Cable—Throttle
93-4187	4	31	1	Cable—Brake
93-4188	1	30	1	Cover—Belt
93-4191	4	13	1	Decal—Instructions
93-7351	1	11	1	ASM—Door
93-8470	2	8	1	Screw—Clamp (P/W Eng)
94-1608	2	14	1	Stiffener—Blade
95-1671	2	5	1	Decal—Engine

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
2210–249	2	7	1	Clamp–Casing (P/W Eng)
2210–316	2	6	1	Rope–Stop (P/W Eng)
237–153	3	7	2	O–Ring
2412–50	4	34	4	Clip–Tubing
302–56	5	10	2	Fitting – Grease
321–39	4	20	1	Screw–HH
3253–22	2	15	1	Washer–Lock
3256–1	4	27	1	Washer–Flat
3256–24	5	30	1	Washer–Flat
3272–10	3	3	1	Pin–Cotter
3290–378	4	35	3	Tie–Cable
3295–35	1	52	1	Rivet
3296–5	5	29	1	Nut–Lock
3296–6	1	18	4	Nut–Lock
3296–6	3	25	2	Nut–Lock
3296–47	4	6	1	Nut–Lock
3296–72	4	7	3	Nut–Lock
3296–73	4	21	3	Nut–Lock
3296–74	4	24	2	Nut–Flange
32121–120	5	15	1	Pin–Coil
32144–70	1	28	1	Screw–TAP
32144–70	2	19	2	Screw–TAP
32144–70	3	22	1	Screw–TAP
32144–73	2	18	3	Screw–HWHTF
32144–85	1	22	2	Screw–HH
32144–85	3	24	2	Screw–HH
32144–102	2	9	3	Screw
32144–111	1	9	6	Screw – PPH
32144–121	2	3	2	Screw