
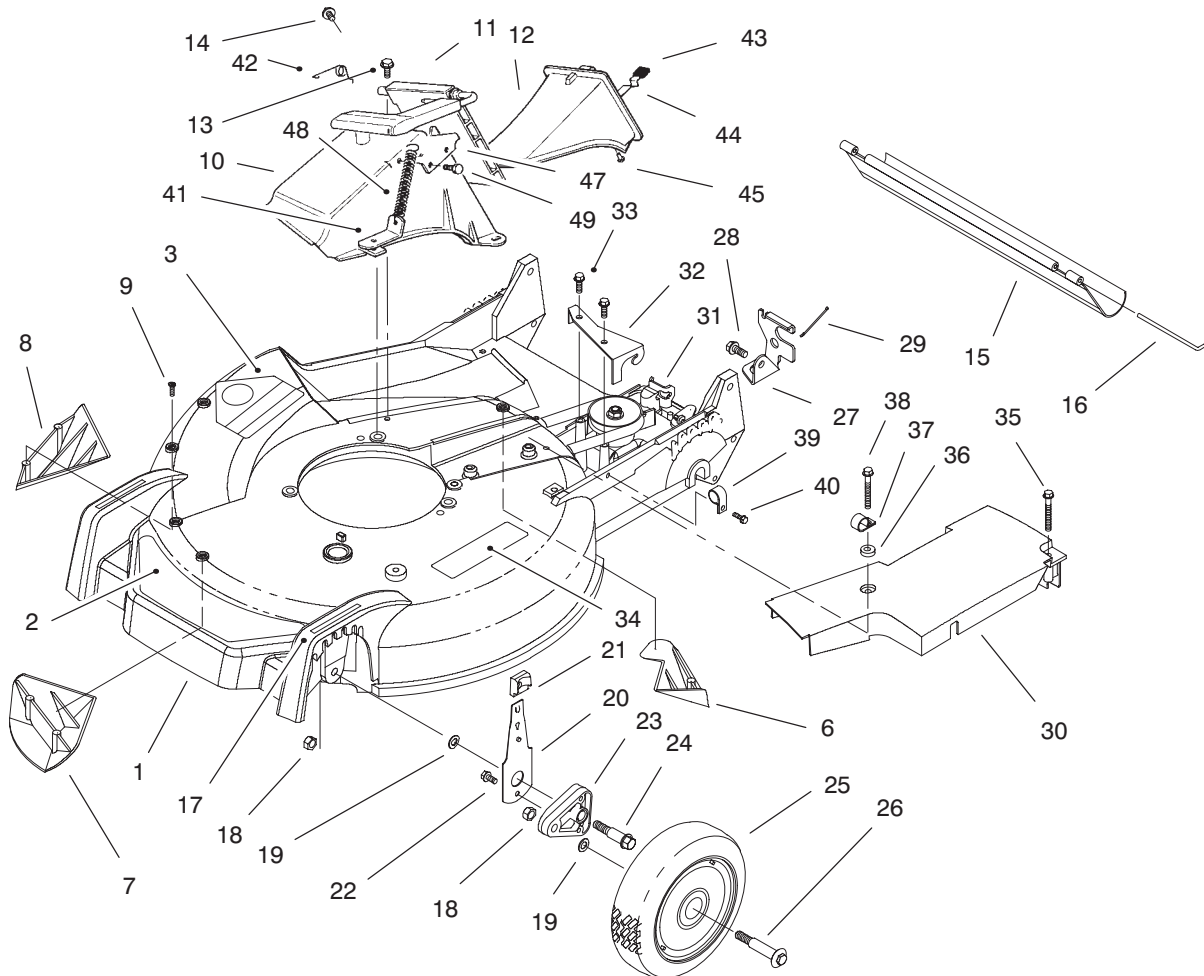


TORO®**MODEL NO. 20480-7900001 & UP****PARTS
CATALOG****21" RECYCLER®
Mower**

C-2631

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	16-9489	Housing - 21" (Incl. Ref. #3, 6-9, & 17 pg. 1 & 34 pg. 2)	1	16	33-3208	Rod - Shield	1
2	93-3696	Decal - Deck	1	17	92-2279	Decal - HOC	4
3	39-5770	Decal - Danger	1	18	3296-6	Nut - Lock	4
6	92-1750	Plate - Kicker Rear	1	19	40-1940	Washer	4
7	92-1720	Kicker - RH Front	1	20	66-0541	Spring Arm Ass'y - Front	2
8	92-1730	Kicker - LH Front	1	21	25-7740	Knob - Arm	2
9	32144-111	Screw - PPH	6	22	32144-85	Screw - Hex Hd.	2
10	82-9152	Chute - Discharge	1	23	66-0580-03	Arm - Pivot	2
11	93-7351	Door - Discharge	1	24	66-0560	Screw - Shoulder	2
12	77-0500	Plug - Discharge (Incl. Ref. #43-45)	1	25	14-9989	Wheel & Tire Assembly	2
13	46-6811	Screw - Hex Washer Hd.	3	26	27-6232	Bolt - Wheel	2
14	46-6810	Screw - Hex Washer Hd.	1	27	82-5680	Bracket - Adjustment Trac.	1
15	44-0580	Shield - Trailing	1	28	32144-70	Screw - Tapping	1
				29	46-7030	Retainer - Cable	1
				30	93-4188	Cover - Belt	1
				31	62-6673	Gear Case Assembly	1

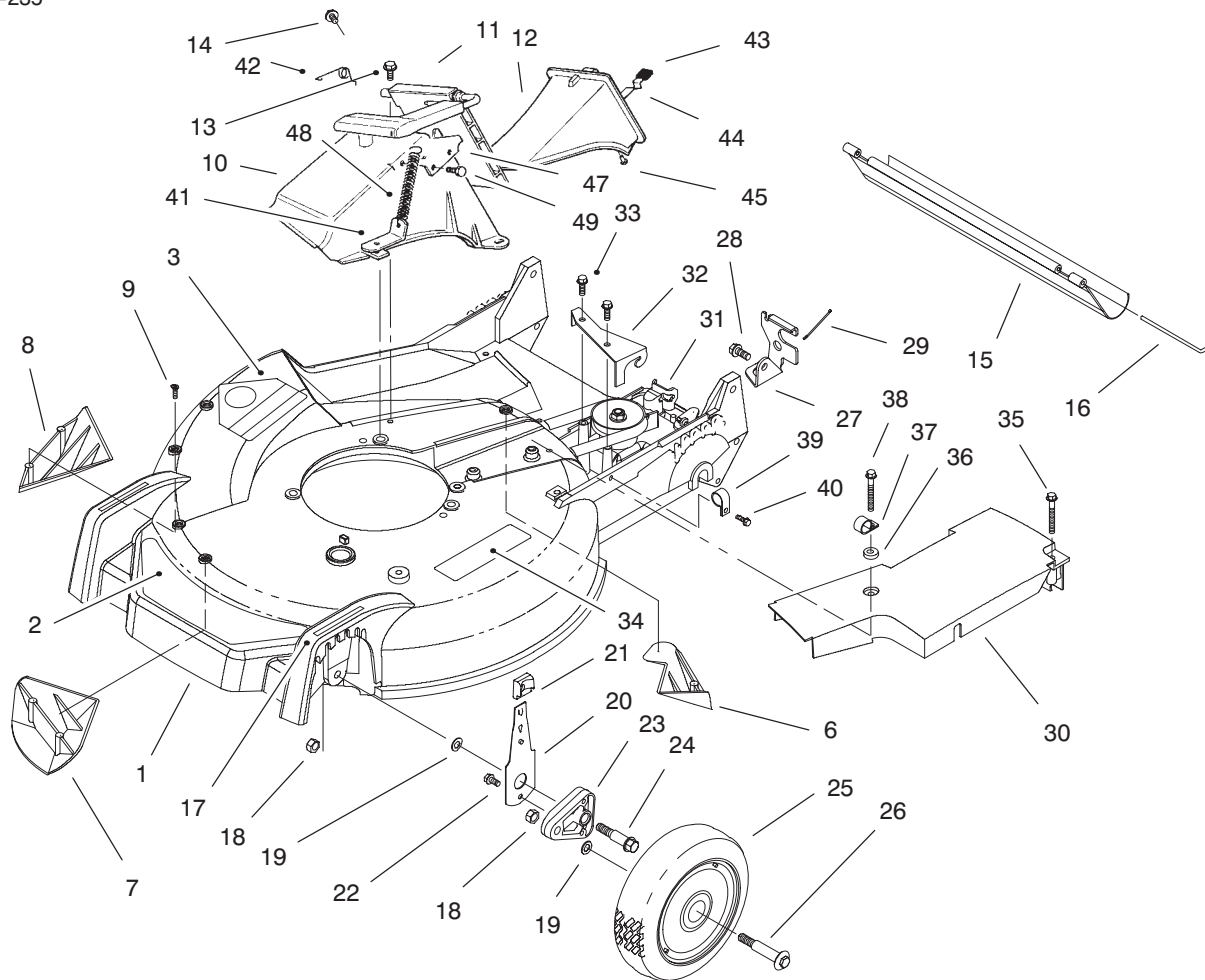


C-2631

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	62-4320	Bracket - Guide Belt	1
33	49-2040	Screw - Hex Hd.	2
34	93-0248	Decal - Warning	1
35	37-7260	Screw - Tapping	1
36	3-5792	Washer	1
37	2412-87	Clamp - Cable	1
38	37-7262	Screw - Special	1
39	2412-83	R-Clamp	1
40	32144-112	Screw - Thr'd Form	1


Ref. No.	Part No.	Description	No. Used
41	71-9350	Bracket - Spring	1
42	80-3770	Retainer - Door	1
43	76-4650	Grip - Latch	1
44	76-4640	Latch - Plug	1
45	3295-35	Rivet	1
47	93-3154	Plate - Latch	1
48	76-4660	Spring - Extension	1
49	46-8090	Screw - Tapping	2

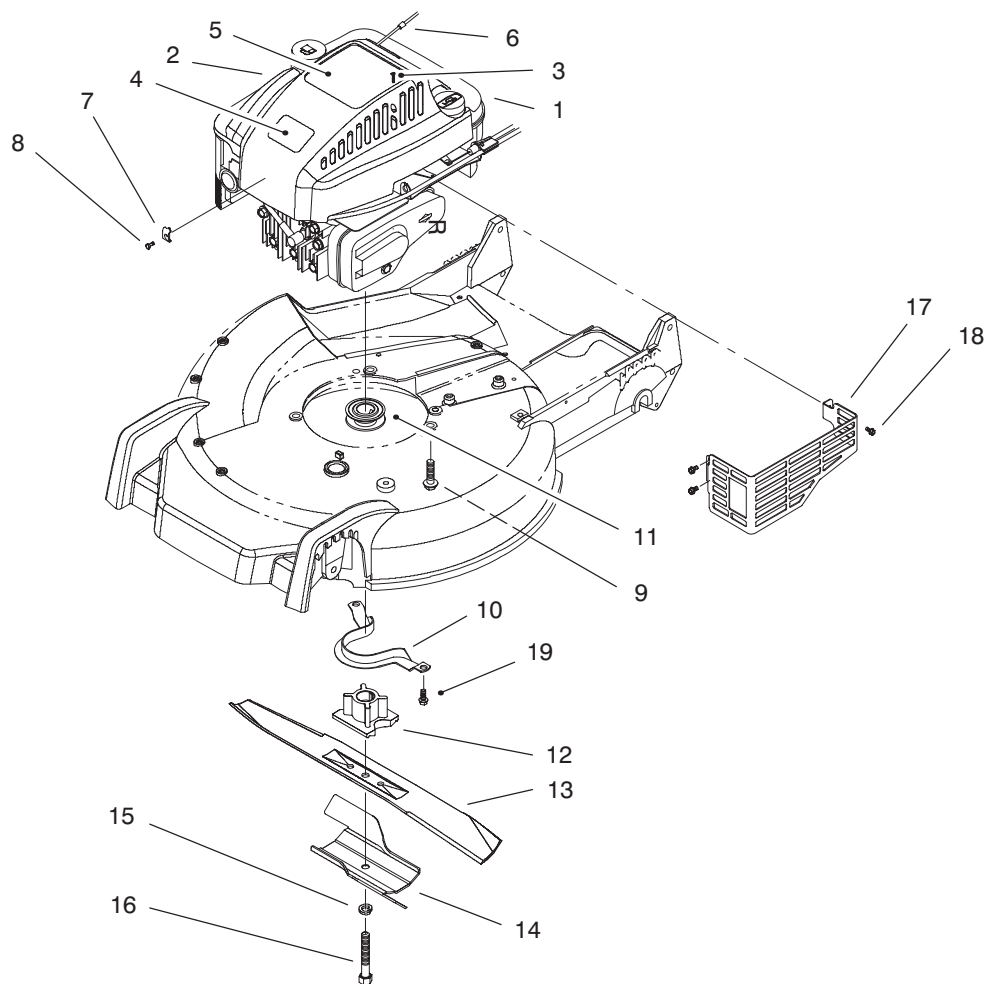

C-2417

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Engine Assembly	1	11	62-7550	Pulley – Driver	1
2	93-0243	Shroud – QT Wedge	1	12	93-4107	Retainer – Blade	1
3	32144-121	Screw	2	13	93-4106	Blade – 21"	1
4	92-2289	Plate – Logo Toro	1	14	94-1608	Stiffener – Blade	1
5	95-1671	Decal – Engine	1	15	3253-22	Washer – Lock	1
6	2210-316	Stop – Rope (P/W Eng.)	1	16	26-0670	Bolt – Blade	1
7	2210-249	Clamp – Casing (P/W Eng.)	1	17	82-8550	Shield – Muffler	1
8	93-8470	Screw – Clamp (P/W Eng.)	1	18	32144-73	Screw – Hex Washer Hd Thread Forming	3
9	32144-102	Screw	3	19	32144-70	Screw – Tapping	2
10	66-0570	Guide – Belt	1				

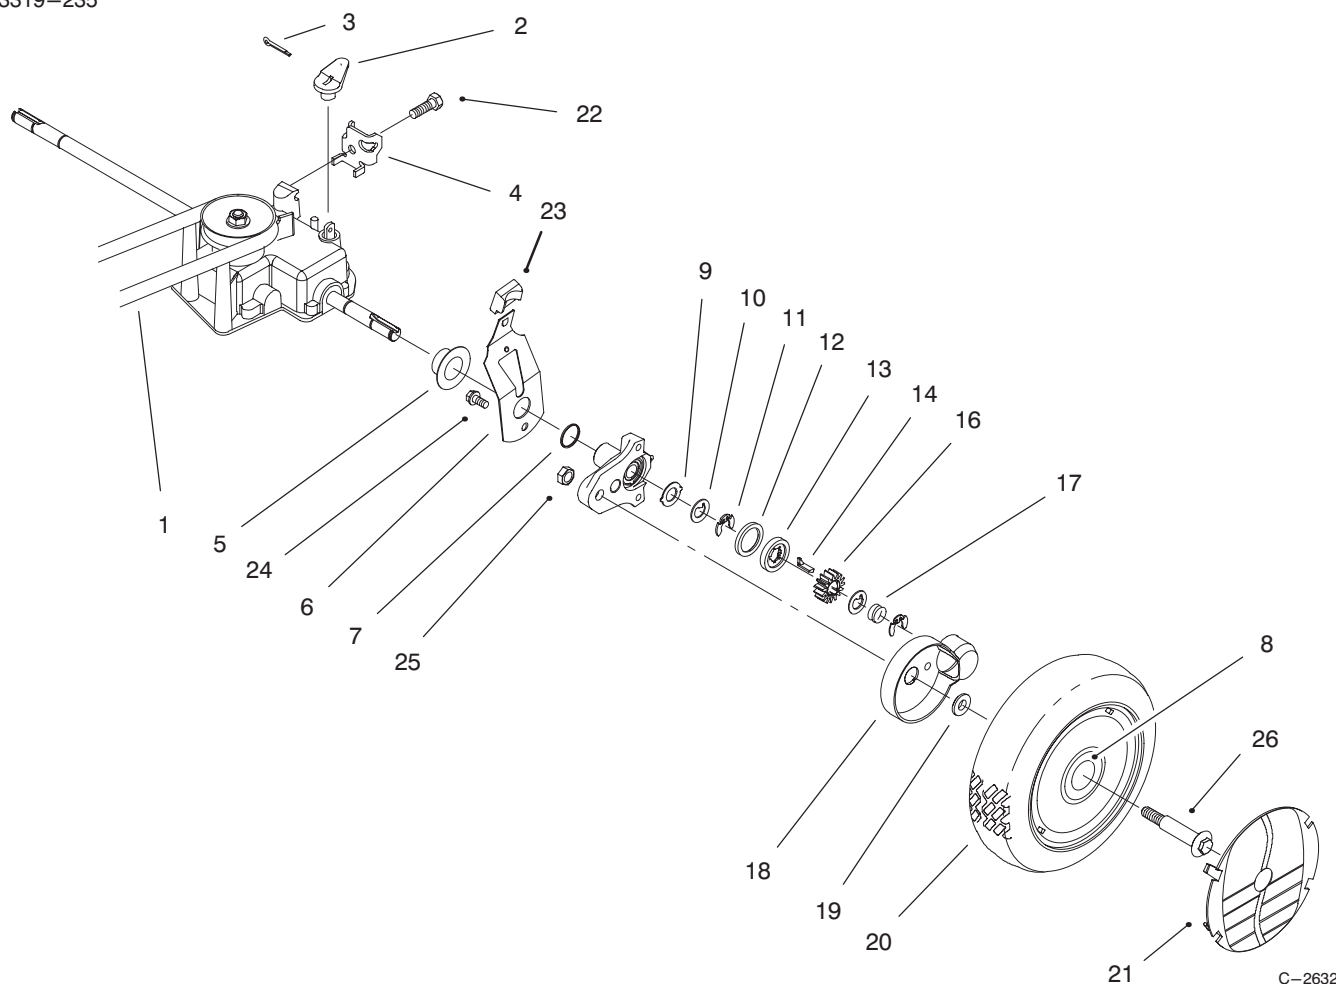


C-2632

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-3900	V-Belt	1
2	60-8821	Lever - Shift	1
3	3272-10	Pin - Cotter	1
4	82-8780	Retainer - Cable	1
5	42-3520	Cap - End	2
6	63-8721	Spring Arm Ass'y	2
7	237-153	O-Ring	2
8	27-6250	Bushing - Wheel	4
9	65-4730	Washer - Thrust	2
10	65-4740	Washer - Thrust Keyed	4
11	65-2720	Ring - Retaining	4
12	65-4710	Ring - Friction	2
13	65-4760	Washer	2
14	66-6050	Key - Rocking LH	1
*	66-6040	Key - Rocking RH	1

Ref. No.	Part No.	Description	No. Used
16	65-4750	Gear - Pinion	2
17	65-4720	Spring - Compression	2
18	74-1660	Cover - Wheel	2
19	74-1671	Spacer - Cover Wheel	2
20	16-0029	Wheel & Tire Assembly (Incl. Ref. #8)	2
21	91-2253	Cover - Wheel	1
22	32144-70	Screw - Thread Form	1
23	25-7740	Knob - Arm	2
24	32144-85	Screw	2
25	3296-6	Nut - Lock	2
26	27-6232	Bolt - Wheel	2

*Not Illustrated

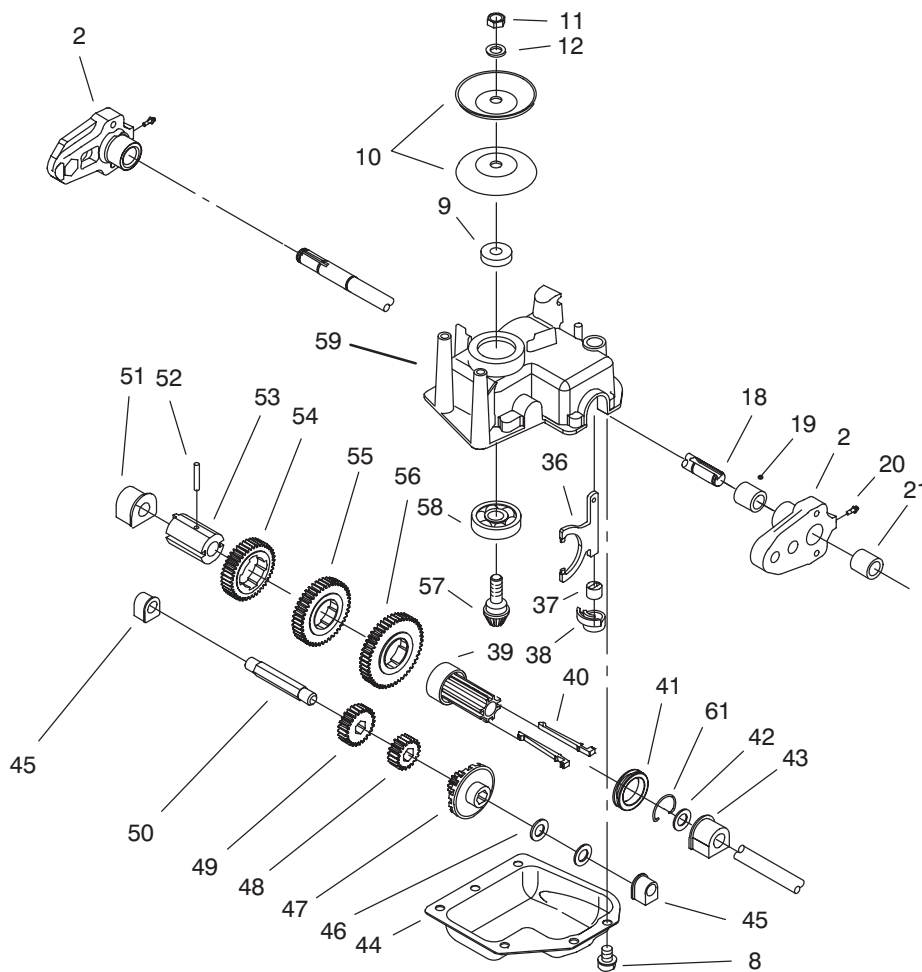


C-2395

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	63-8701-03	Pivot Arm Assembly (Incl. Ref # 19, 20, & 21)	2	44	60-8730	Cover - Gear Case	1
8	49-2040	Screw - Self Tapping	6	45	60-8750	Bushing - Int. Shaft	2
9	62-6660	Spacer	1	46	36-4791	Washer - Thrust	2
10	60-8840	Pulley - Half	2	47	55-3760	Gear - Pinion 15 Tooth	1
11	3296-5	Locknut	1	48	55-3780	Gear - Pinion 20 Tooth	1
12	3256-24	Washer - Flat	1	49	55-3800	Gear - Pinion	1
18	65-4770	Shaft - Output	1	50	60-8800	Shaft - Intermediate	1
19	70-9760	Bushing	2	51	60-8850	Bushing - Output Shaft	1
20	302-56	Fitting - Grease	2	52	32121-120	Pin - Coil	1
21	48-2060	Needle Bearing	2	53	60-8790	Sleeve - Gear	1
36	60-8870	Yoke - Shift	1	54	55-3810	Gear - 39 Tooth 3rd Gear	1
37	29-9570	Bushing - Yoke	1	55	55-3790	Gear - 44 Tooth 2nd Gear	1
38	60-8810	Retainer - Shift Fork	1	56	55-3770	Gear - 49 Tooth 1st Gear	1
39	76-0780	Sleeve - Shift Key	1	57	60-8890	Pinion - Bevel	1
40	76-0760	Key - Shift	2	58	38-7820	Bearing - Ball	1
41	76-0770	Collar - Shift	1	59	60-8710	Gear Case - Upper	1
42	36-4780	Washer - Thrust	1	61	65-5250	Clip - Spring	1
43	60-8770	Bushing - Output Shaft	1	*	62-6673	Gear Case Assembly	1

*Not Illustrated

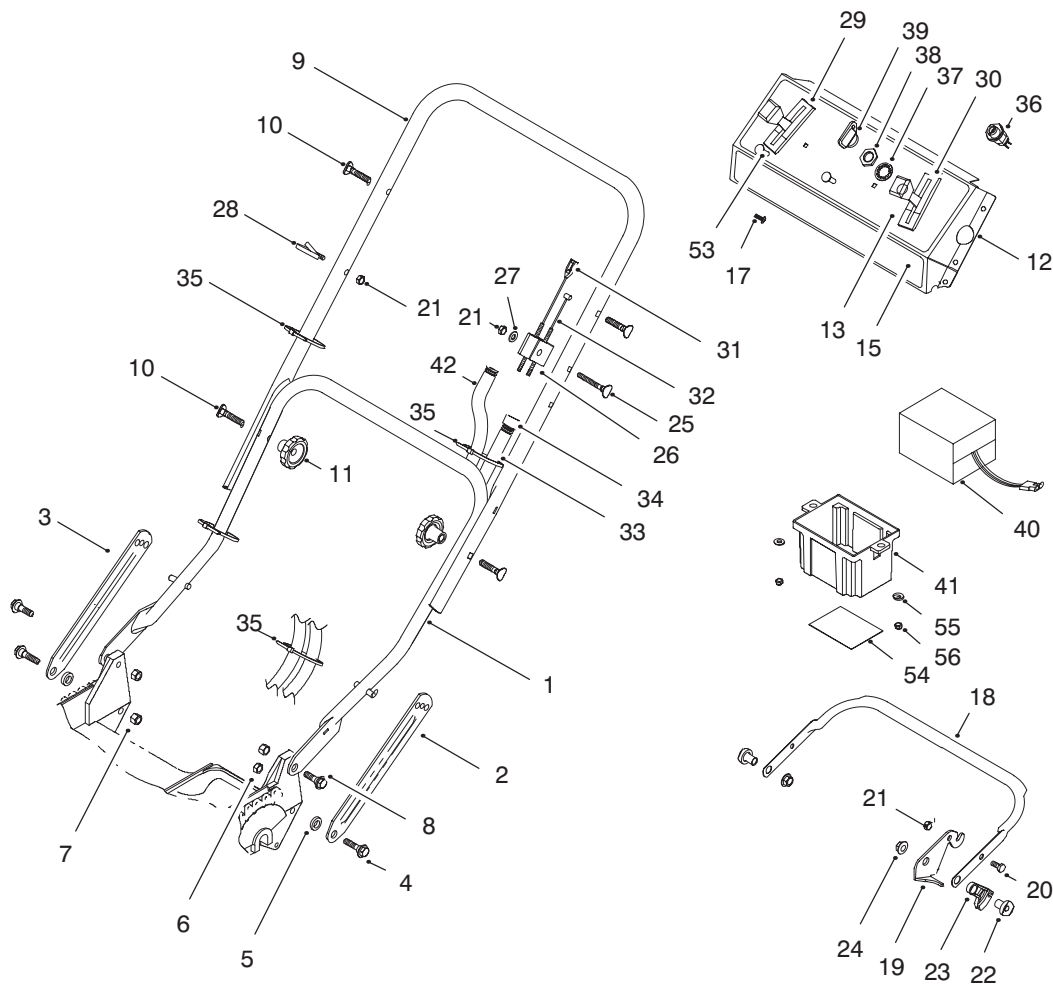


C-2633

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	43-1362	Handle – Lower	1
2	84-8361	Latch – Handle LH	1
3	84-8401	Latch – Handle RH	1
4	27-7210	Screw – Shoulder	2
5	3-3287	Spacer	2
6	3296-47	Nut – Lock	1
7	3296-72	Nut – Lock	1
8	27-7211	Screw – Shoulder	2
9	92-2278	Handle – Upper	1
10	92-2260	Screw – Handle	4
11	19-4050	Knob	2
12	95-5930	Panel – Control (Incl. Ref. #13)	1
13	95-3013	Decal – Instruction	1
15	93-3697	Decal – Panel Front	1
17	92-9665	Screw – Phillips Hd.	5
18	71-3080	Bar – Control	1
19	66-5351	Lever – Control	1
20	321-39	Screw – Hex Hd. Cap	1
21	3296-73	Nut – Lock	3
22	49-1630	Spacer – Support	2
23	46-5520	Lever – Traction	1
24	3296-74	Nut – Flange	2
25	92-2269	Screw – Handle	1

Ref. No.	Part No.	Description	No. Used
26	46-6980	Support – Cable	1
27	3256-1	Washer – Flat	1
28	86-9671	Guide – Rope	1
29	76-2712	Control – Speed Ground	1
30	93-4186	Cable – Throttle	1
31	93-4187	Cable – Brake	1
32	46-5481	Cable – Traction	1
33	46-6440	Cover – Cables Control	1
34	2412-50	Clip – Tubing Convuluted	4
35	3290-378	Tie – Cable	4
36	46-5780	Switch – Starter (Incl. Ref. #37 & 38)	1
37	3254-5	Washer – Lock	1
38	218-461	Nut – Hex	1
39	63-8360	Key – Ignition	1
40	55-7520	Battery Assembly	1
41	95-3017	Cover – Battery	1
42	80-3670	Harness – Wire	1
53	3229-34	Bolt – Carriage	2
54	92-8659	Decal – Battery Charging Instruction	1
55	3256-14	Washer – Glat	2
56	3296-2	Nut – Lock	2
*	92-1743	Charger – Battery	1

*Not Illustrated

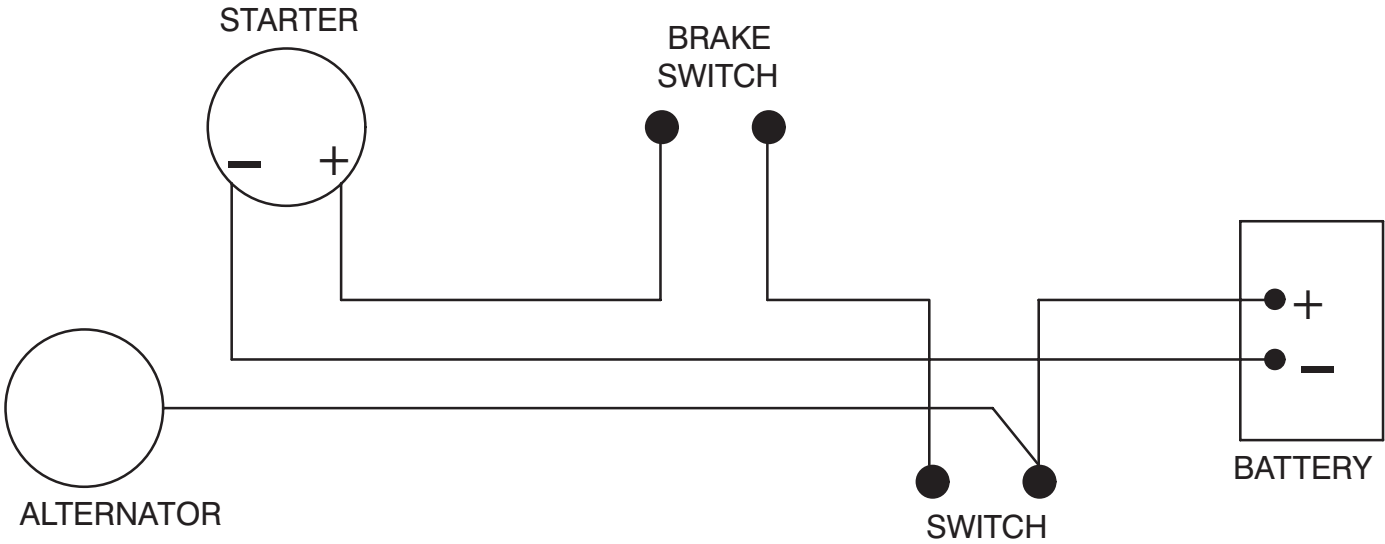


C-2634

WIRING SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

*Not Illustrated

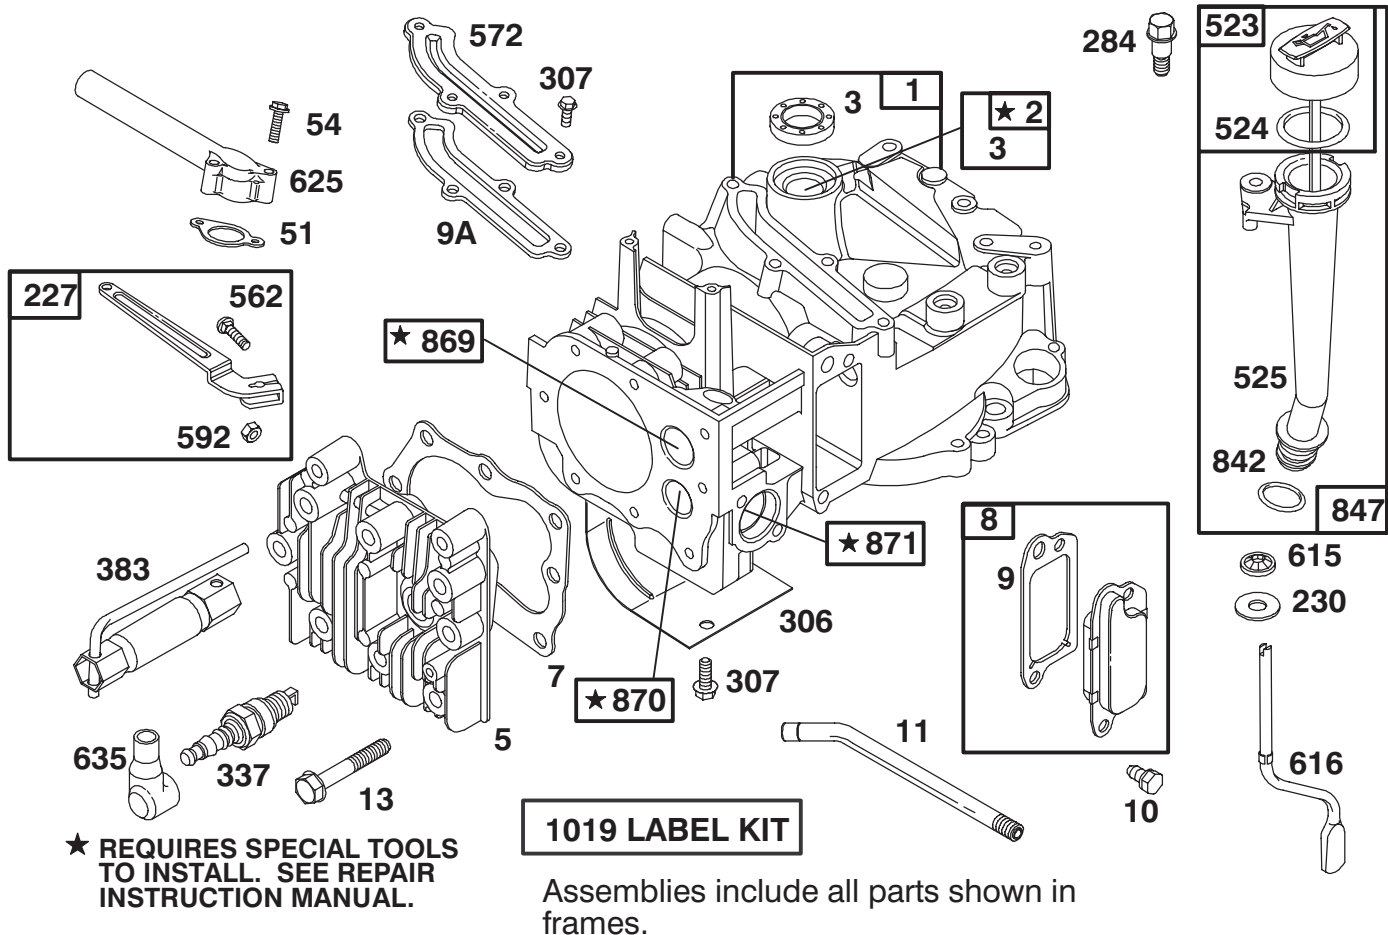


ENGINE BRIGGS & STRATTON MODEL 12H807-0660-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214368	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94876	Screw – Cylinder Head	1
★51	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg.	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Carriage	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
		Note: 63709 Guide – Intake Valve	1
1019	494256	Label Kit	1

★ Included in Gasket Set—Part No. 497316.

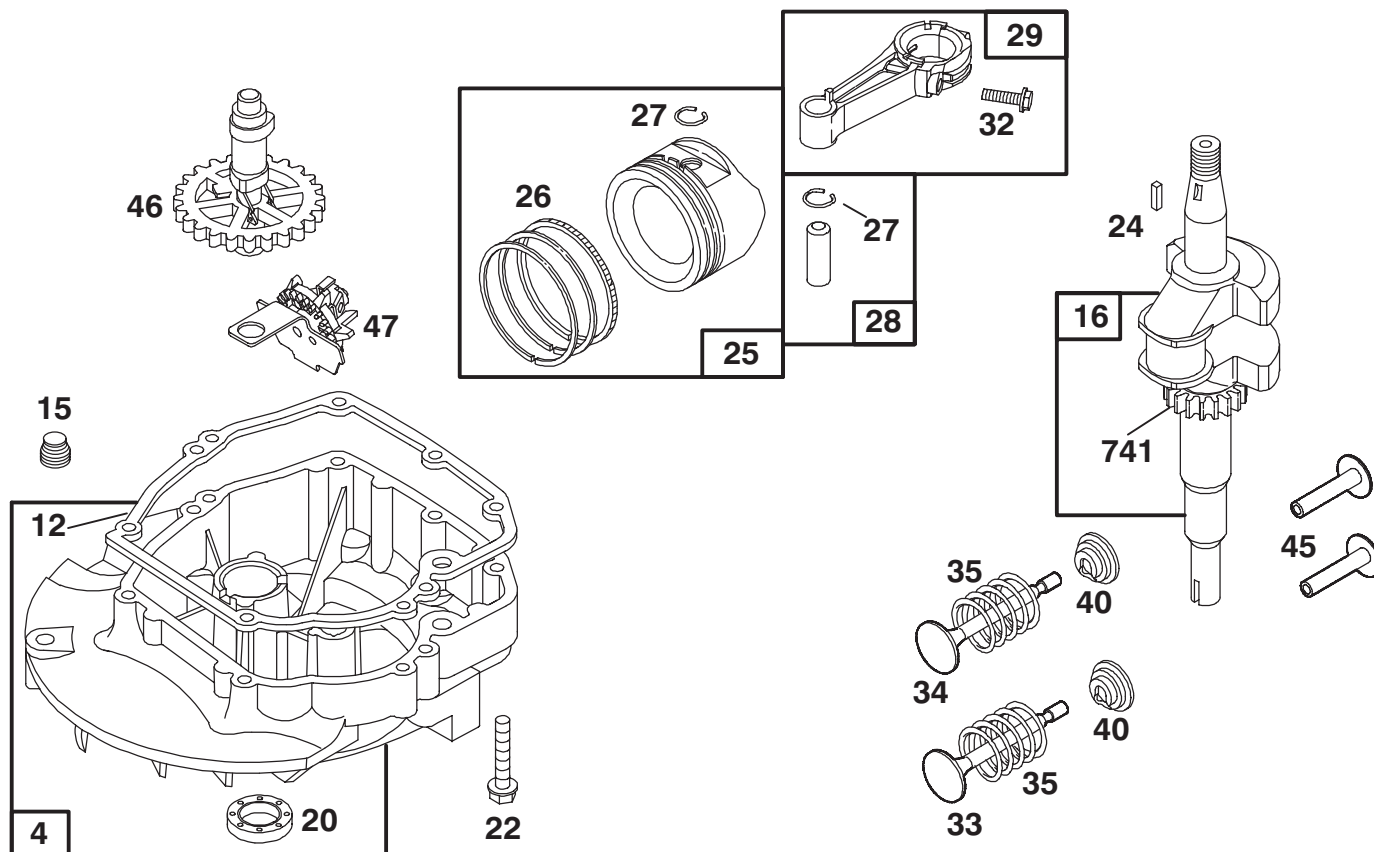


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H807-0660—01

Ref. No.	Part No.	Description	No. Used
4	493279	Sump — Engine	1
★12	272198	Gasket — Crankcase	1
15	94880	Plug — Oil Drain	1
16	494546	Crankshaft	1
		Note: Order 94388 For Timing Gear Key.	1
★20	399781	Seal — Oil	1
22	94220	Screw — Hex. Head	1
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather)	1
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005" O.S.)	1
29	490566	Rod Assembly — Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	1
32	94699	Screw — Connecting Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
40	93312	Retainer — Valve Spring	1
45	262204	Tappet — Valve	1
46	498275	Gear — Cam	1
47	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

★ Included in Gasket Set—Part No. 497316.

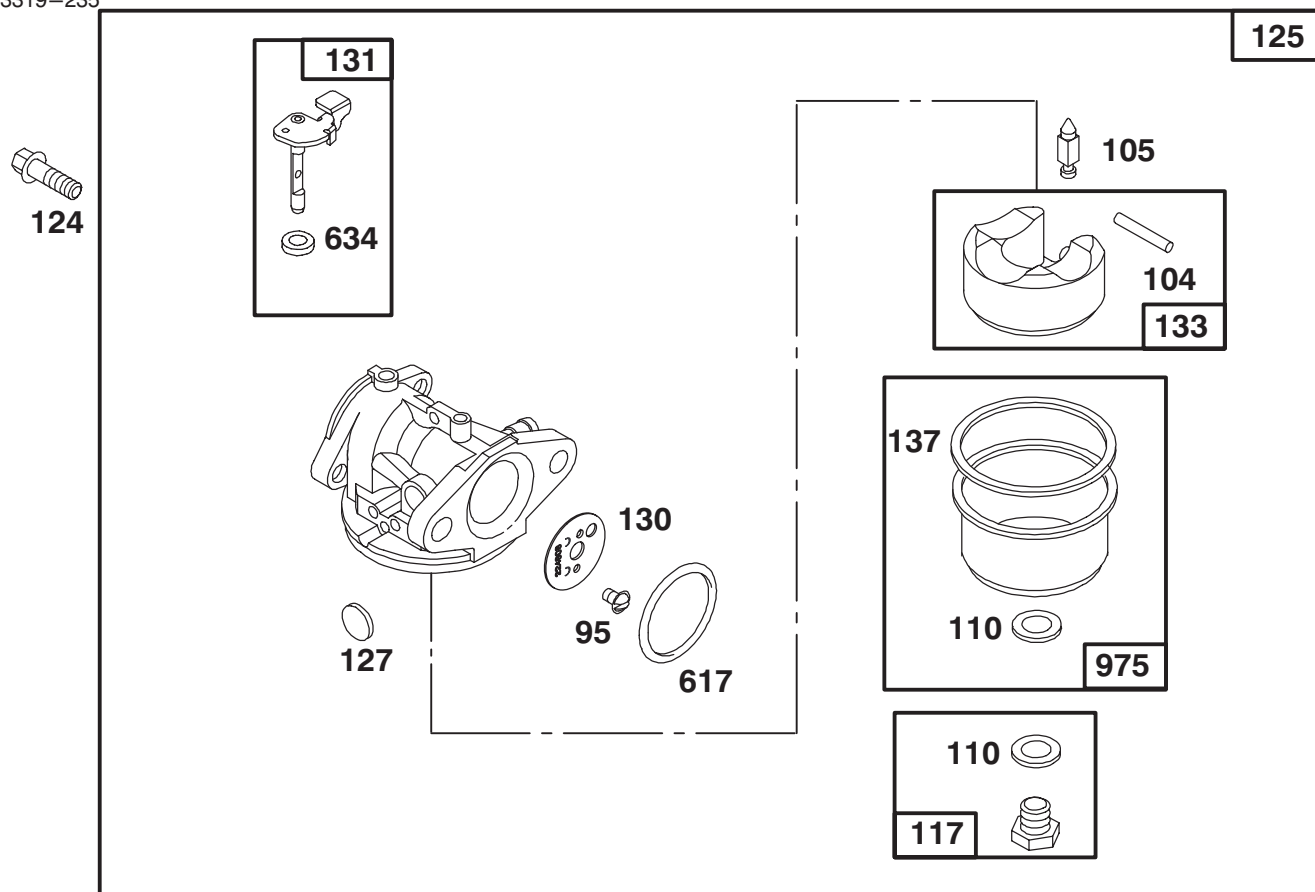

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12H807-0660-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw — Throttle Valve Mtg.	1
●104	231371	Pin — Float Hinge	1
●105	398188	Valve — Inlet (Includes Seat)	1
◆110		Gasket—Sealing (Sold in Kit Only)	1
117	494870	Jet — Main (Std.) Note: 497315 Jet — Main (High Altitude)	1
124	94840	Screw — Carburetor Mtg.	1
125	498170	Carburetor	1

Ref. No.	Part No.	Description	No. Used
●127		Plug — Welch (Sold in Kit Only)	1
130	224908	Valve — Throttle	1
131	493267	Shaft — Throttle	1
133	398187	Float Assy. — Carburetor	1
◆137		Gasket — Bowl (Sold in Kit Only)	1
◆617	270344	Seal — Fuel Intake Tube	1
◆634		Washer—Shaft (Sold in Kit Only)	1
975	493640	Bowl Assy. — Carburetor	1

●Included in Carburetor Kit—Part No. 498260.

◆Included in Carburetor Gasket Set—Part No. 498261.

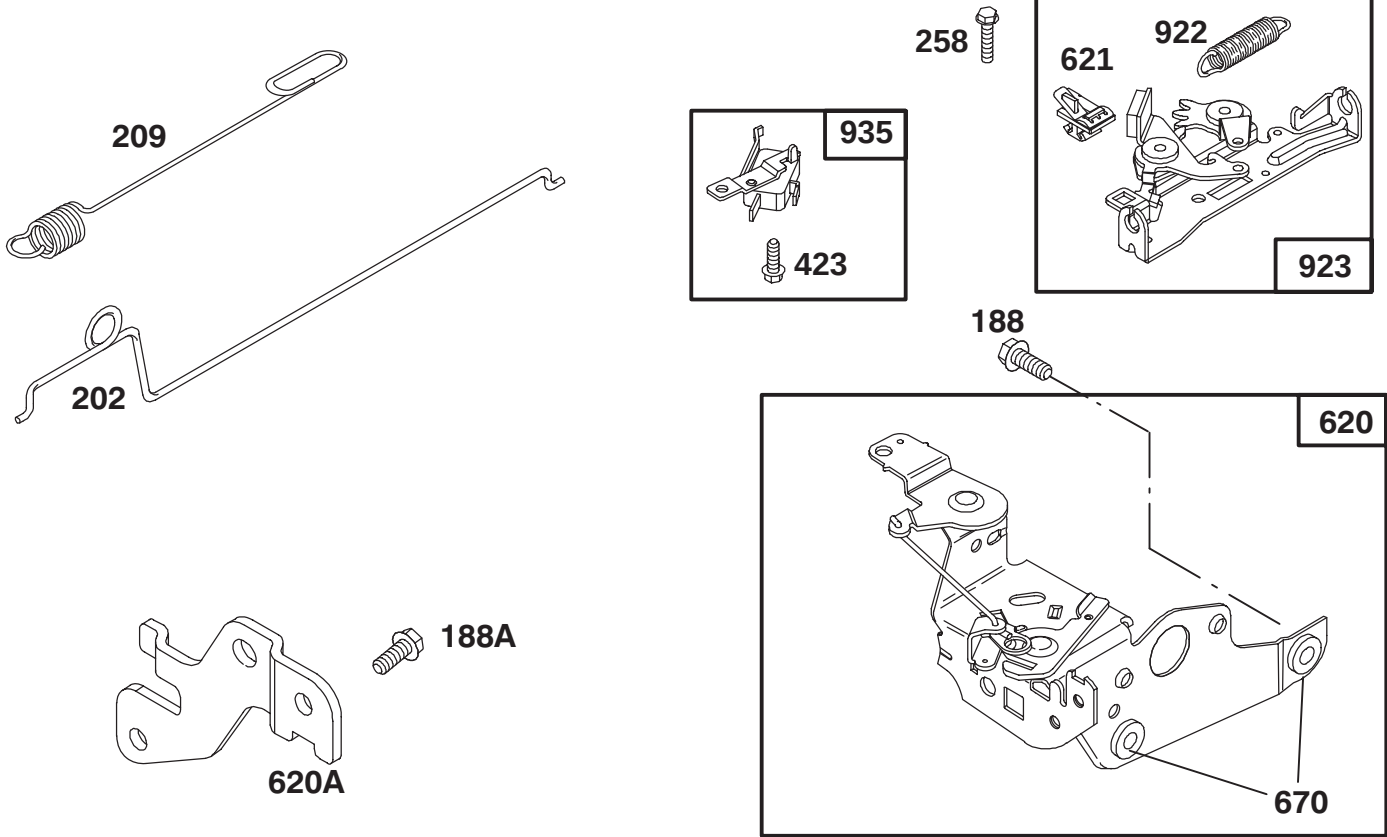


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H807-0660—01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw — Hex. Head	1
188A	94874	Screw — Hex. Head	1
202	262579	Link — Governor	1
209	263046	Spring — Governor	1
258	94512	Screw — Hex. Head	1
423	93758	Screw—Self Tapping	1
620	497203	Bracket — Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket — Control	1
621	396847	Switch — Stop	1
★670	493823	Spacer — Bracket	1
		Note: Includes Two.	
922	262640	Spring—Brake	1
923	493442	Brake	1
935	398758	Switch—Interlock	1

★ Included in Gasket Set—Part No. 497316.

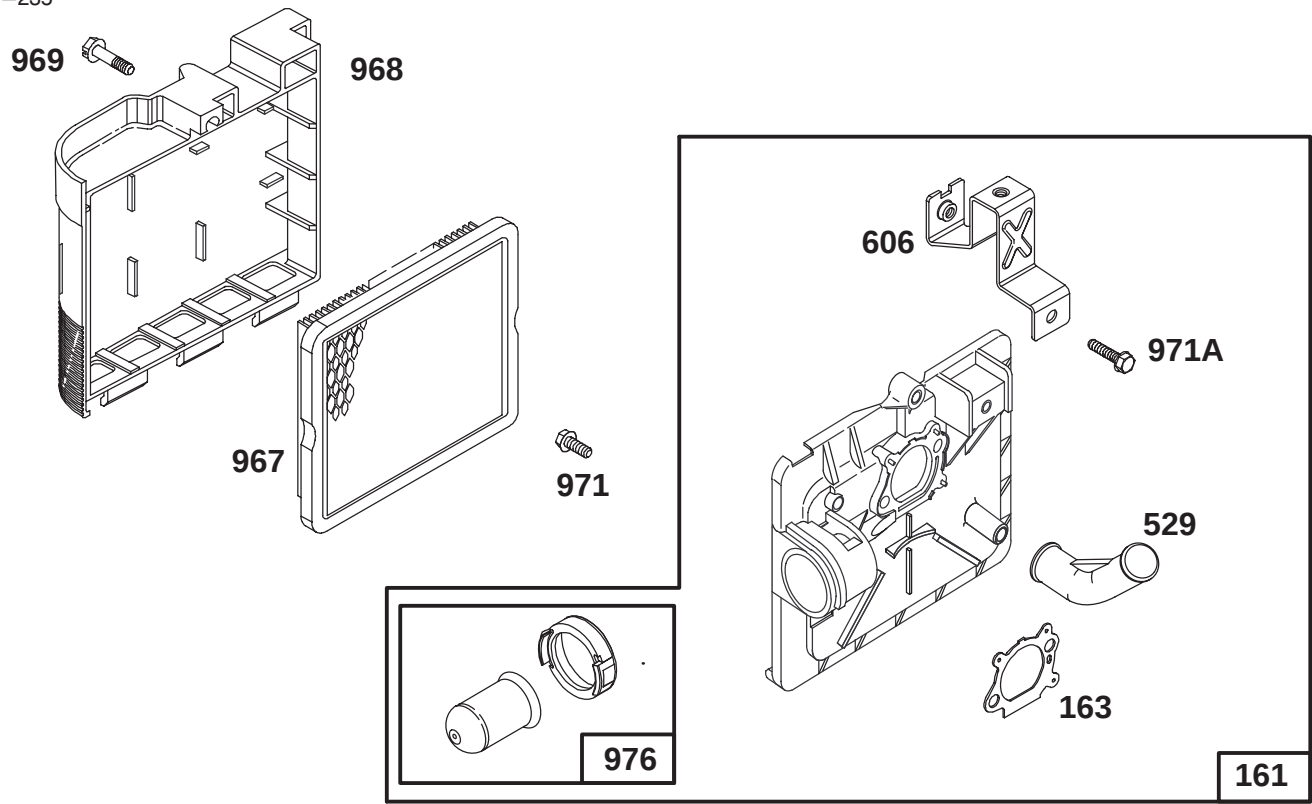


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H807-0660-01

Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet – Breather	1
606	224815	Strap – Bracket	1
967	491588	Filter – Air	1

Ref. No.	Part No.	Description	No. Used
968	281340	Cover – Air Cleaner	1
969	94872	Screw – Cover Mtg.	1
971	94873	Screw – Air Cleaner	1
971A	94749	Screw – Hex. Head	1
976	496115	Primer–Carburetor	1

★ Included in Gasket Set—Part No. 497316.




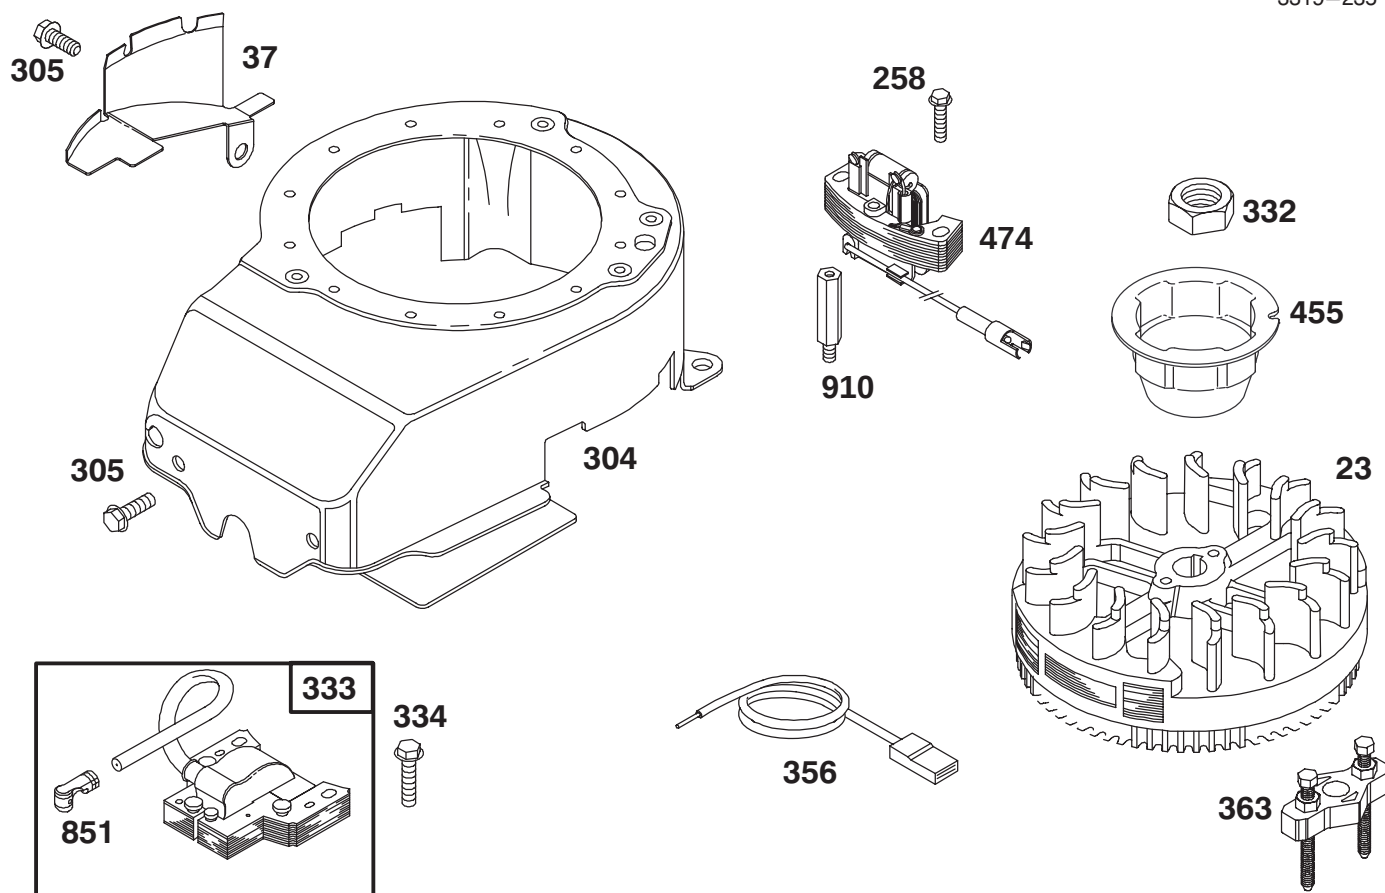


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H807-0660-01

Ref. No.	Part No.	Description	No. Used
23	492175	Flywheel	1
37	224511	Guard – Flywheel	1
258	94512	Screw – Hex. Hd.	1
304	493293	Housing – Blower	1
305	94744	Screw – Sem	1
332	94877	Nut – Flywheel	1
333	802574	Armature – Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw – Sem	1
356	398808	Wire – Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup – Starter	1
474	492841	Alternator	1
851	493880	Terminal – Ignition Cable	1
910	94510	Stud–Mounting	1

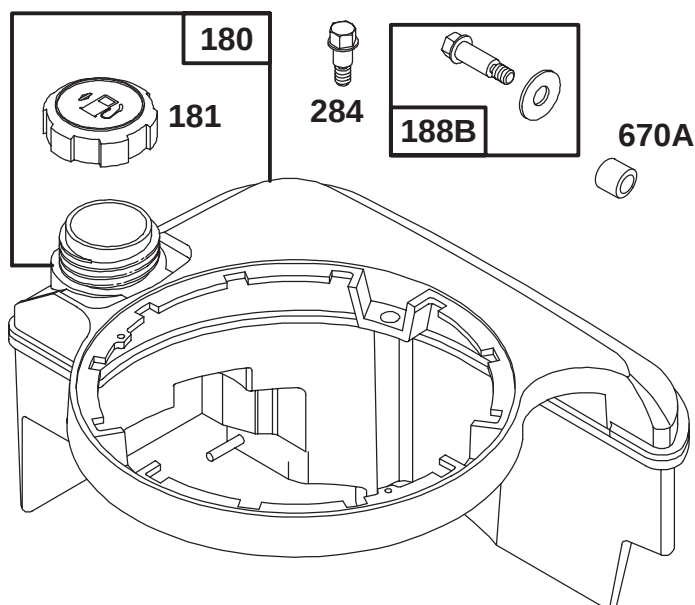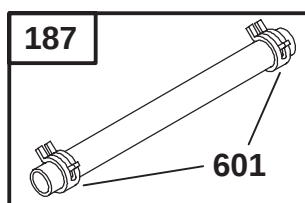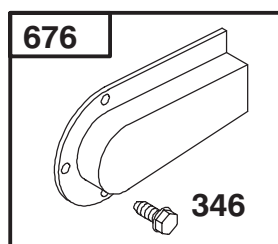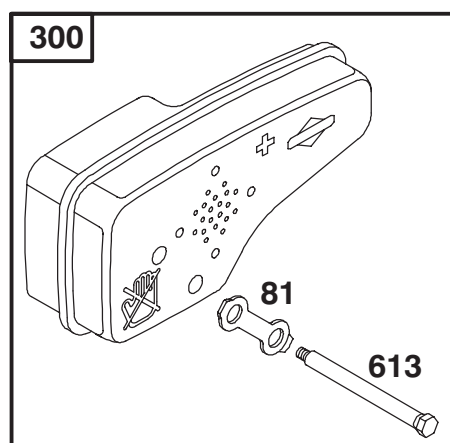


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H807-0660-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
180	495224	Tank Assembly – Fuel	1
181	397974	Cap Assy. – Fuel	1
187	492790	Hose – Fuel	1
188B	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	497838	Muffler – Exhaust	1

Ref. No.	Part No.	Description	No. Used
346	94896	Screw – Hex. Head	1
601	93053	Clamp – Hose	1
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1


★ Included in Gasket Set—Part No. 497316.

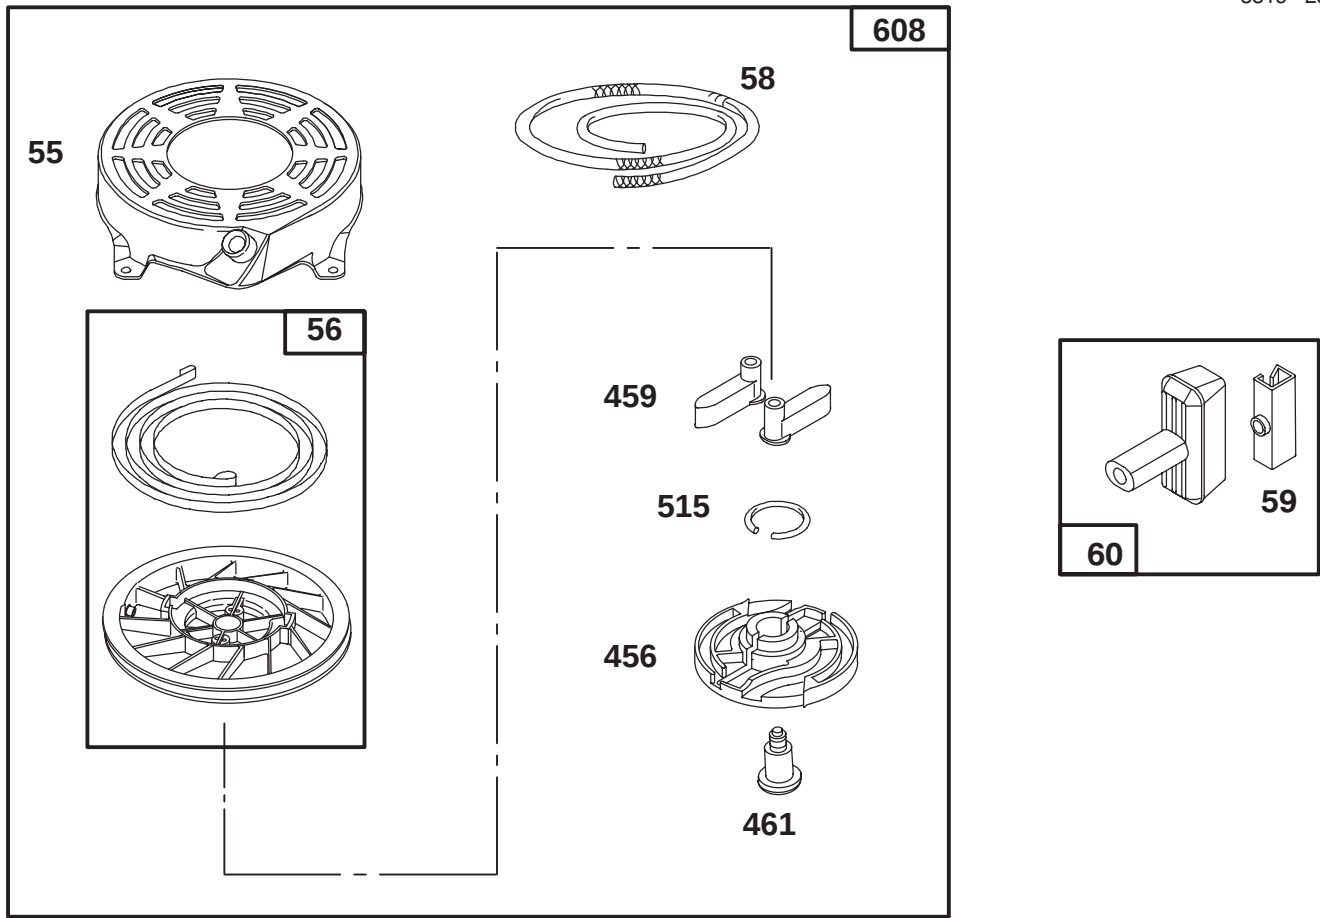

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H807-0660—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing — Rewind Starter	1	461	94943	Pin — Starter	1
56	498144	Pulley — Rewind Starter	1	515	263073	Spring — Torsion	1
58	280399	Rope — Rewind Starter (Cut to Required Length)	1	608	497680	Starter Assy. — Rewind	1
59	224467	Insert — Starter Grip	1			Includes:	
60	493926	Handle — Rewind Starter	1			94904 Screw — Hex.	1
456	281503	Retainer — Rewind Starter	1			Head	1
459	281505	Pawl — Starter	1			94908 Nut — Hex.	1



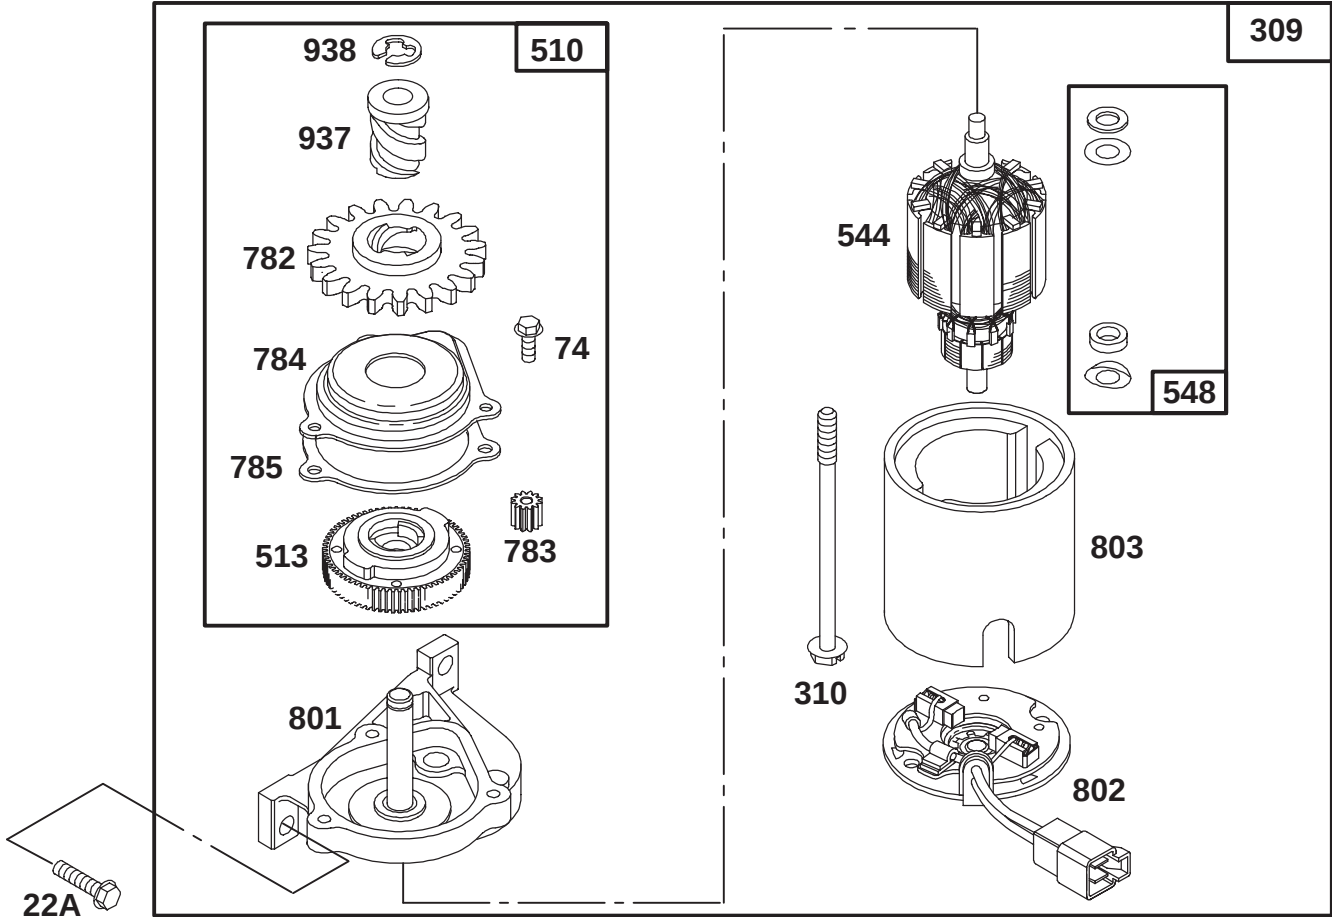


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H807-0660-01

Ref. No.	Part No.	Description	No. Used
22A	94974	Screw – Hex. Head	1
74	94680	Screw – Hex.	1
309	494233	Motor – Starter	1
310	94051	Bolt – Thru	1
510	494147	Drive – Starter	1
513	394815	Clutch – Drive	1
544	492921	Armature – Starter	1
548	492919	Washer Set – Starter	1
782	281127	Gear – Starter	1

Ref. No.	Part No.	Description	No. Used
783	261606	Gear – Pinion	1
784	224262	Cover – Gear	1
785	272201	Gasket – Gear Cover	1
801	492335	Cap – Drive	1
802	492922	Cap – End	1
803	492920	Housing – Starter	1
937	281125	Drive – Starter	1
938	93941	Retainer – Lock	1

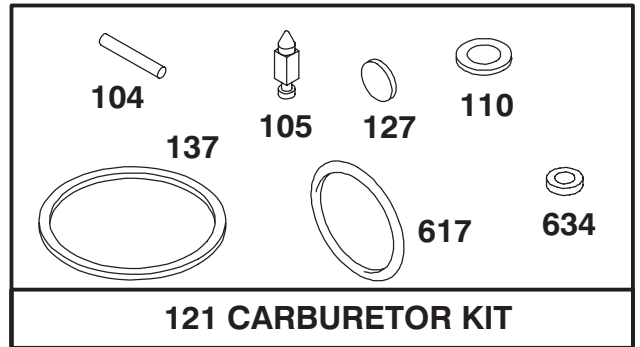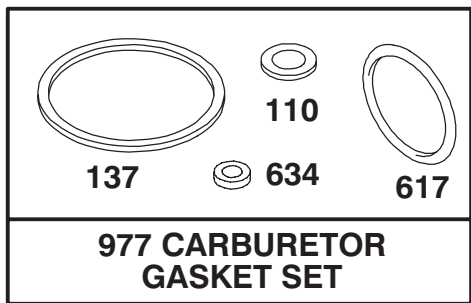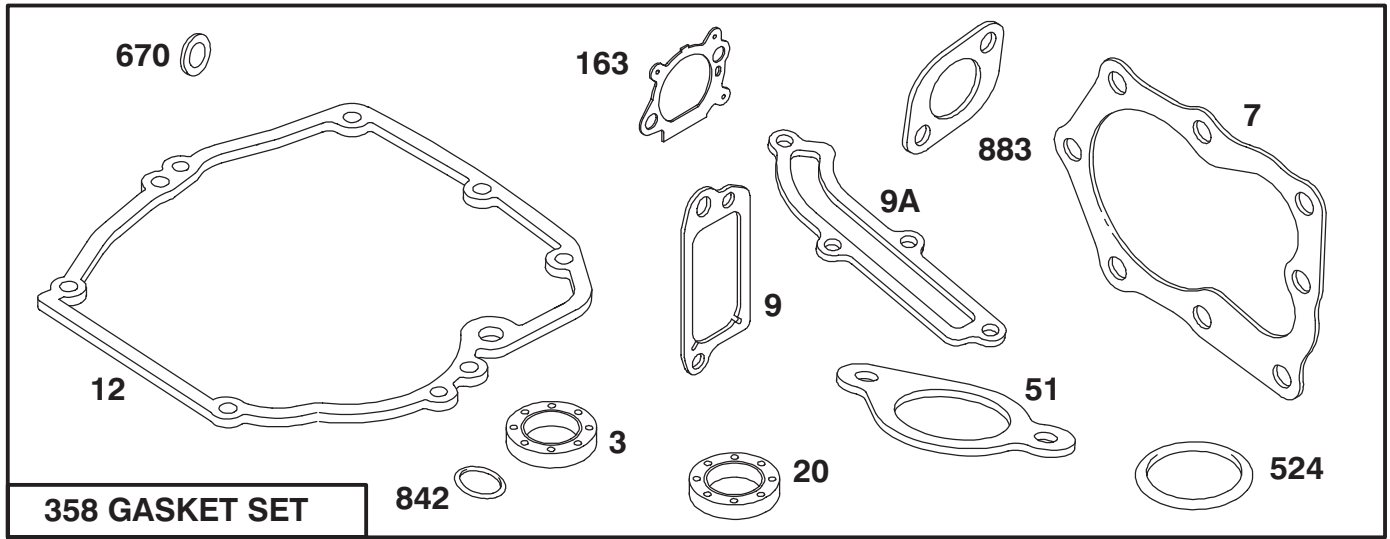

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H807-0660—01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal — Oil	1
★7	272916	Gasket — Cylinder Hd.	1
★9	272481	Gasket — Breather	1
★9A	272238	Gasket — Baffle Plate	1
★12	272198	Gasket — Crankcase	1
★20	399781	Seal — Oil	1
★51	272199	Gasket — Intake Elbow	1
●104	231371	Pin — Float Hinge	1
●105	398188	Valve — Inlet (Includes Seat)	1
◆110		Gasket — Sealing (Sold in Kit Only)	1
121	498260	Carburetor Kit	1
●127		Plug — Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
◆137		Gasket — Bowl (Sold in Kit Only)	1
★163	272653	Gasket — Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal — Filler Tube	1
◆617	270344	Seal — Fuel Intake Tube	1
◆634		Washer — Shaft (Sold in Kit Only)	1
★670	493823	Spacer — Bracket Note: Includes Two.	1
★842	280966	Seal — O-Ring	1
★883	272253	Gasket — Exhaust	1
977	498261	Gasket Set — Carburetor	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-3287	Spacer	6	5	2	63-8360	Key - Ignition	6	39	1
3-5792	Washer	2	36	1	63-8701-03	Pivot Arm Assembly	5	2	2
14-9989	Wheel & Tire Assembly	1	25	2	63-8721	Spring Arm Ass'y	4	6	2
16-0029	Wheel & Tire Assembly	4	20	2	65-2720	Ring - Retaining	4	11	4
16-9489	Housing - 21	1	1	1	65-4710	Ring - Friction	4	12	2
19-4050	Knob	6	11	2	65-4720	Spring - Compression	4	17	2
25-7740	Knob - Arm	1	21	2	65-4730	Washer - Thrust	4	9	2
25-7740	Knob - Arm	4	23	2	65-4740	Washer - Thrust Keyed	4	10	4
26-0670	Bolt - Blade	3	16	1	65-4750	Gear - Pinion	4	16	2
27-6232	Bolt - Wheel	1	26	2	65-4760	Washer	4	13	2
27-6232	Bolt - Wheel	4	26	2	65-4770	Shaft - Output	5	18	1
27-6250	Bushing - Wheel	4	8	4	65-5250	Clip - Spring	5	61	1
27-7210	Screw - Shoulder	6	4	2	66-0541	Spring Arm Ass'y - Front	1	20	2
27-7211	Screw - Shoulder	6	8	2	66-0560	Screw - Shoulder	1	24	2
29-9570	Bushing - Yoke	5	37	1	66-0570	Guide - Belt	3	10	1
33-3208	Rod - Shield	1	16	1	66-0580-03	Arm - Pivot	1	23	2
36-4780	Washer - Thrust	5	42	1	66-5351	Lever - Control	6	19	1
36-4791	Washer - Thrust	5	46	2	66-6040	Key - Rocking RH	4	*	1
37-7260	Screw - Tapping	2	35	1	66-6050	Key - Rocking LH	4	14	1
37-7262	Screw - Special	2	38	1	70-9760	Bushing	5	19	2
38-7820	Bearing - Ball	5	58	1	71-3080	Bar - Control	6	18	1
39-5770	Decal - Danger	1	3	1	71-9350	Bracket - Spring	2	41	1
40-1940	Washer	1	19	4	74-1660	Cover - Wheel	4	18	2
42-3520	Cap - End	4	5	2	74-1671	Spacer - Cover Wheel	4	19	2
43-1362	Handle - Lower	6	1	1	76-0760	Key - Shift	5	40	2
44-0580	Shield - Trailing	1	15	1	76-0770	Collar - Shift	5	41	1
46-5481	Cable - Traction	6	32	1	76-0780	Sleeve - Shift Key	5	39	1
46-5520	Lever - Traction	6	23	1	76-2712	Control - Speed Ground	6	29	1
46-5780	Switch - Starter	6	36	1	76-4640	Latch - Plug	2	44	1
46-6440	Cover - Cables Control	6	33	1	76-4650	Grip - Latch	2	43	1
46-6810	Screw - Hex Washer Hd.	1	14	1	76-4660	Spring - Extension	2	48	1
46-6811	Screw - Hex Washer Hd.	1	13	3	77-0500	Plug - Discharge	1	12	1
46-6980	Support - Cable	6	26	1	80-3670	Harness - Wire	6	42	1
46-7030	Retainer - Cable	1	29	1	80-3770	Retainer - Door	2	42	1
46-8090	Screw - Tapping	2	49	2	82-5680	Bracket - Adjustment Trac.	1	27	1
48-2060	Needle Bearing	5	21	2	82-8550	Shield - Muffler	3	17	1
49-1630	Spacer - Support	6	22	2	82-8780	Retainer - Cable	4	4	1
49-2040	Screw - Hex Hd.	2	33	2	82-9152	Chute - Discharge	1	10	1
49-2040	Screw - Self Tapping	5	8	6	84-8361	Latch - Handle LH	6	2	1
55-3760	Gear - Pinion 15 Tooth	5	47	1	84-8401	Latch - Handle RH	6	3	1
55-3770	Gear - 49 Tooth 1st Gear	5	56	1	86-9671	Guide - Rope	6	28	1
55-3780	Gear - Pinion 20 Tooth	5	48	1	91-2253	Cover - Wheel	4	21	1
55-3790	Gear - 44 Tooth 2nd Gear	5	55	1	92-1720	Kicker - RH Front	1	7	1
55-3800	Gear - Pinion	5	49	1	92-1730	Kicker - LH Front	1	8	1
55-3810	Gear - 39 Tooth 3rd Gear	5	54	1	92-1743	Charger - Battery	6	*	1
55-7520	Battery Assembly	6	40	1	92-1750	Plate - Kicker Rear	1	6	1
60-8710	Gear Case - Upper	5	59	1	92-2260	Screw - Handle	6	10	4
60-8730	Cover - Gear Case	5	44	1	92-2269	Screw - Handle	6	25	1
60-8750	Bushing - Int. Shaft	5	45	2	92-2278	Handle - Upper	6	9	1
60-8770	Bushing - Output Shaft	5	43	1	92-2279	Decal - HOC	1	17	4
60-8790	Sleeve - Gear	5	53	1	92-2289	Plate - Logo Toro	3	4	1
60-8800	Shaft - Intermediate	5	50	1	92-8659	Decal - Battery Charging	6	54	1
60-8810	Retainer - Shift Fork	5	38	1	92-9665	Screw - Phillips Hd.	6	17	5
60-8821	Lever - Shift	4	2	1	93-0243	Shroud - QT Wedge	3	2	1
60-8840	Pulley - Half	5	10	2	93-0248	Decal - Warning	2	34	1
60-8850	Bushing - Output Shaft	5	51	1	93-3154	Plate - Latch	2	47	1
60-8870	Yoke - Shift	5	36	1	93-3696	Decal - Deck	1	2	1
60-8890	Pinion - Bevel	5	57	1	93-3697	Decal - Panel Front	6	15	1
62-3900	V-Belt	4	1	1	93-4106	Blade - 21	3	13	1
62-4320	Bracket - Guide Belt	2	32	1	93-4107	Retainer - Blade	3	12	1
62-6660	Spacer	5	9	1	93-4186	Cable - Throttle	6	30	1
62-6673	Gear Case Assembly	5	*	1	93-4187	Cable - Brake	6	31	1
62-6673	Gear Case Assembly	1	31	1	93-4188	Cover - Belt	1	30	1
62-7550	Pulley - Driver	3	11	1	93-7351	Door - Discharge	1	11	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319—235

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93—8470	Screw — Clamp (P/W Eng.)	3 8 1	3296—6	Nut — Lock	1 18 4
94—1608	Stiffener — Blade	3 14 1	3296—6	Nut — Lock	4 25 2
95—1671	Decal — Engine	3 5 1	3296—47	Nut — Lock	6 6 1
95—3013	Decal — Instruction	6 13 1	3296—72	Nut — Lock	6 7 3
95—3017	Cover — Battery	6 41 1	3296—73	Nut — Lock	6 21 3
95—5930	Panel — Control	6 12 1	3296—74	Nut — Flange	6 24 2
218—461	Nut — Hex	6 38 1	32121—120	Pin — Coil	5 52 1
2210—249	Clamp — Casing (P/W Eng.)	3 7 1	32144—70	Screw — Tapping	3 19 2
2210—316	Stop — Rope (P/W Eng.)	3 6 1	32144—70	Screw — Tapping	1 28 1
237—153	O—Ring	4 7 2	32144—70	Screw — Thread Form	4 22 1
2412—50	Clip — Tubing Convolute	6 34 4	32144—73	Screw — Hex Washer Hd	3 18 3
2412—83	R—Clamp	2 39 1	32144—85	Screw	4 24 2
2412—87	Clamp — Cable	2 37 1	32144—85	Screw — Hex Hd.	1 22 2
302—56	Fitting — Grease	5 20 2	32144—102	Screw	3 9 3
321—39	Screw — Hex Hd. Cap	6 20 1	32144—111	Screw — PPH	1 9 6
3229—34	Bolt — Carriage	6 53 2	32144—112	Screw — Thr'd Form	2 40 1
3253—22	Washer — Lock	3 15 1	32144—121	Screw	3 3 2
3254—5	Washer — Lock	6 37 1			
3256—1	Washer — Flat	6 27 1			
3256—14	Washer — Glat	6 55 2			
3256—24	Washer — Flat	5 12 1			
3272—10	Pin — Cotter	4 3 1			
3290—378	Tie — Cable	6 35 4			
3295—35	Rivet	2 45 1			
3296—2	Nut — Lock	6 56 2			
3296—5	Locknut	5 11 1			

OPTIONAL EQUIPMENT

Side Discharge Chute	Model No. 59199
Dethatcher Kit	Model No. 59131
Mow & Feed	Model No. 52070
Bag Kit	Model No. 59296

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]