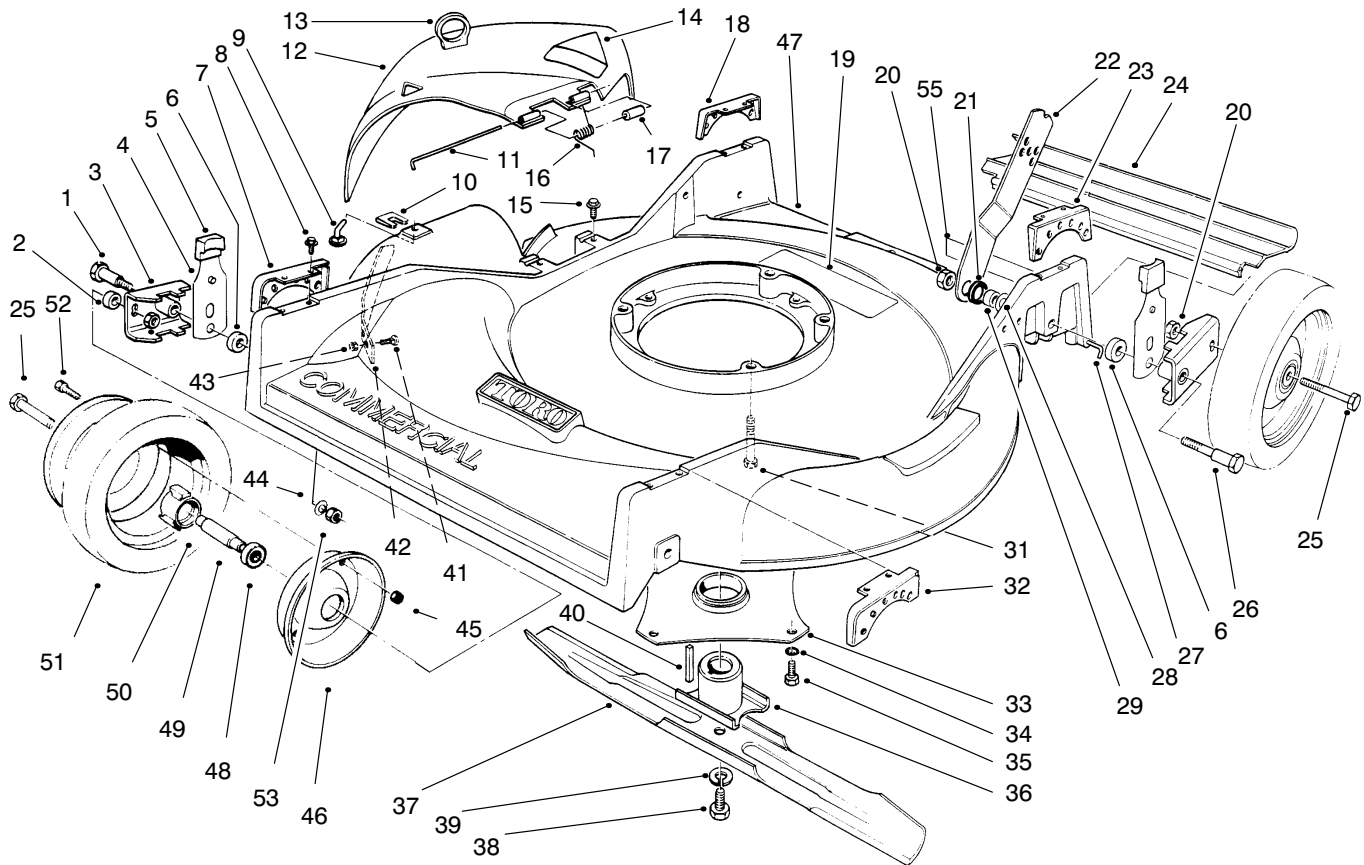


TORO®

MODEL NO. 22026-7900001 & UP


**PARTS
CATALOG****PROLINE 21"**
Side Discharge Mower

C-1012C

HOUSING & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-9180	Screw - Pivot	2
2	52-2480	Spacer - Wheel	4
3	49-9160	Pivot Arm Assembly	4
4	49-8800	Spring Arm Assembly	4
5	25-7740	Knob - Arm	4
6	53-7930	Spacer - Pivot Arm	4
7	52-2510	Quadrant - Front R.H.	1
8	49-2040	Screw - Thread Forming	8
9	28-3260	Pin - Chute	1
10	28-3250	Clip - Pin	1
11	52-2570	Pin - Deflector Hinge	1
12	12-4739	Deflector (Incl. Ref. #14)	1
13	28-1430	Loop - Lift	1
14	39-5770	Decal - Danger	1
15	46-6811	Screw/Washer Assembly	2
16	52-2560	Spring - Deflector	1
17	28-3270	Sleeve - Spring	1

Ref. No.	Part No.	Description	No. Used
18	52-2530	Quadrant - Rear R.H.	1
19	71-1280	Decal - Safety Instructions	1
20	3296-39	Nut - Lock	6
21	27-6510	Spacer - Latch, Handle	2
22	27-7071	Latch - Handle	2
23	52-2540	Quadrant - Rear L.H.	1
24	52-2640	Shield - Rear, Safety	1
25	323-12	Screw - Cap, Hex Hd.	4
26	52-2260	Screw - Pivot, Rear	2
27	33-3201	Rod - Shield	1
28	3290-340	Washer - Belleville	2
29	52-2360	Spacer - Handle, Brace	2
30	68-7410	Decal - Blade Warning	1
31	66-9303	Screw - Hex. Washer Hd.	4
32	52-2520	Quadrant - Front L.H.	1
33	52-2500	Crankshaft Protector	1
34	3254-6	Washer - Lock, Int. Tooth	4

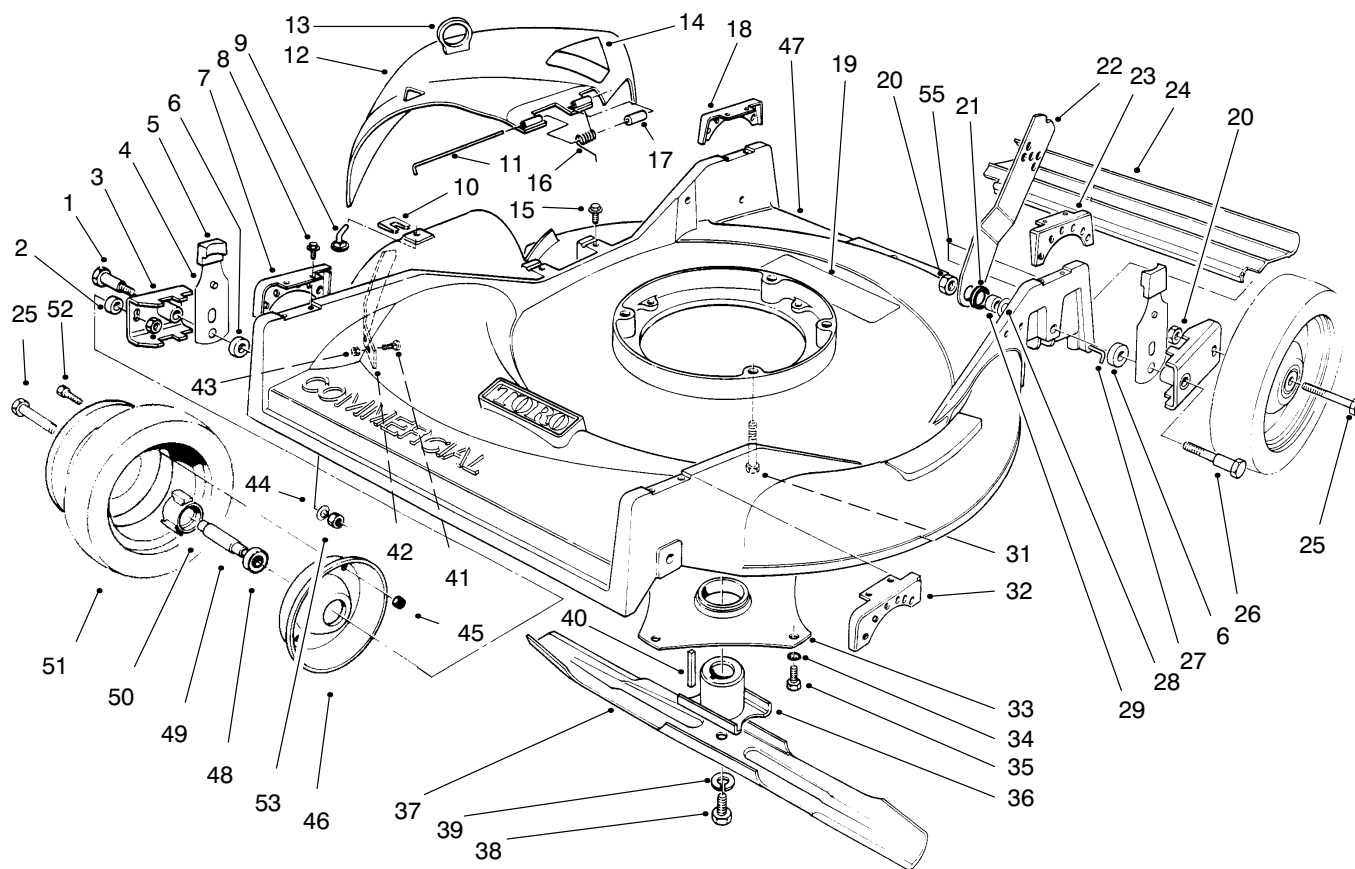


C-1012C

HOUSING & WHEEL ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used
35	32144-70	Screw – Thread Forming	4
36	52-2170	Retainer, Blade	1
37	8-5230	Blade 21"	1
38	26-0671	Screw – Blade	1
39	3253-22	Washer – Lock	1
40	27-8590	Key – Square	1
41	3230-16	Bolt – Carriage	2
42	52-2650	Bar – Safety	1
43	3296-29	Nut – Lock	2
44	3290-455	Washer – Belleville	2
45	3296-42	Nut – Lock	16
46	53-7780	Plate – Wheel Half	8

Ref. No.	Part No.	Description	No. Used
47	12-4729	Housing (Incl. Ref. #19, & 55)	1
48	52-2450	Bearing – Wheel	8
49	52-2440	Spacer – Bearing	4
50	52-2410	Hub	4
51	53-7740	Tire	4
52	321-2	Screw – Cap, Hex. Hd.	16
53	32152-2	Nut – Lock	2
54	71-8650	Decal – Danger	1
55	92-1779	Decal – Warning	1
*	53-7720	Tire & Wheel Assembly (Incl. Ref. #45, 46 & 48-52)	4

*Not Illustrated

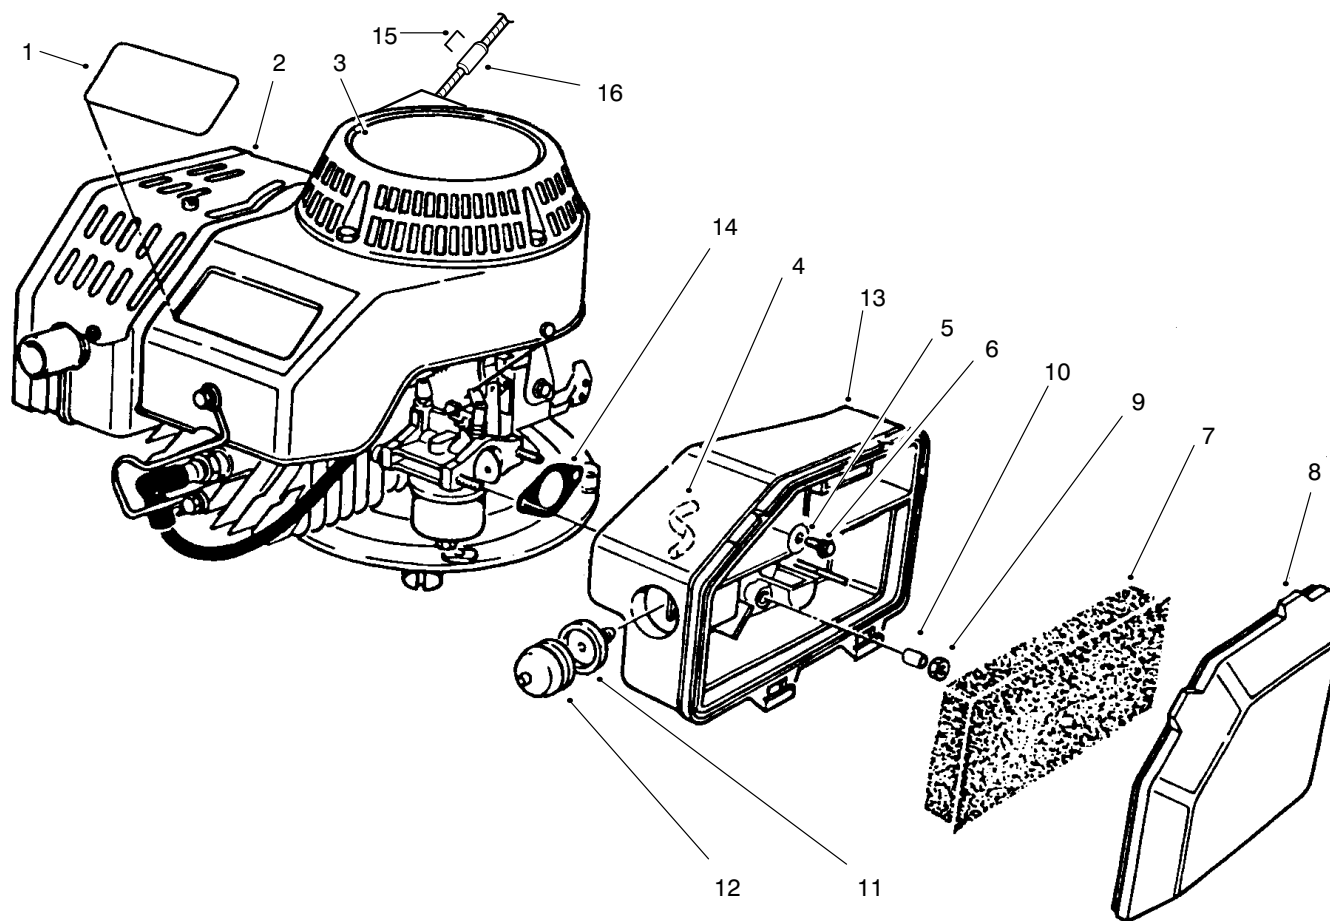


C-1013

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-1260	Decal – Pro Line	1
2	61-8062	Engine – Complete	1
3	77-0040	Decal – Recoil	1
4	44-3172	Hose – Primer	1
5	3256-16	Washer	1
6	51-2690	Screw – Hex. Flange Hd.	1
7	63-9380	Filter – Foam	1
8	63-9340	Cover – Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
9	50-7180	Nut	2
10	62-3980	Sleeve	2
11	44-2750	Body – Primer	1
12	66-7460	Bulb – Primer	1
13	63-9330	Body – Air Cleaner	1
14	81-0090	Gasket – Air Cleaner	1
†15		Staple	1
16	47-2480	Stop – Recoil	1

† Obtain Locally

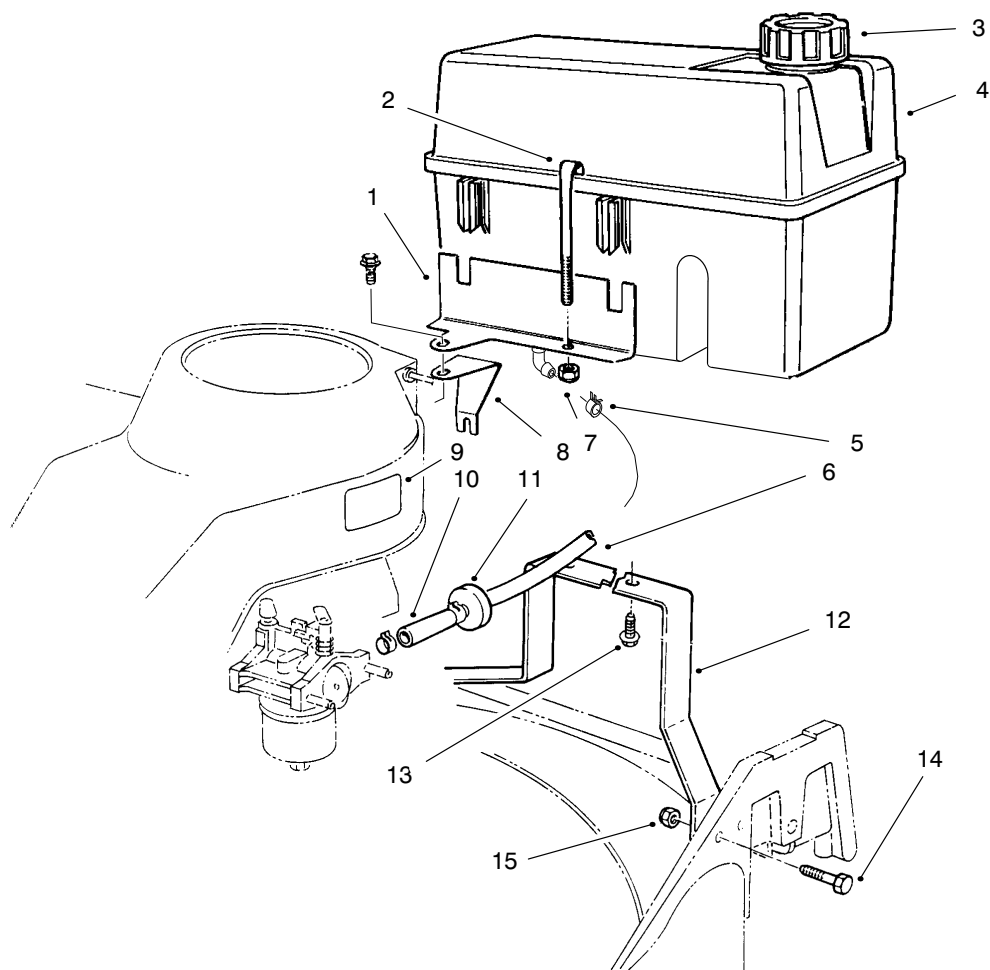


C-2421

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-2110	Bracket – Tank	1
2	77-2840	Retainer – Fuel Tank	1
3	55-3545	Gas Cap Assembly	1
4	94-5827	Fuel Tank Assembly	1
5	2412-95	Clamp – Fuel Line	4
6	68-3633	Hose – Fuel	1
7	3296-42	Nut – Lock	1
8	77-0520	Support – Bracket	1

Ref. No.	Part No.	Description	No. Used
9	62-7600	Decal – Fuel Mix	1
10	51-3211	Hose – Fuel	1
11	71-9280	Filter – Fuel	1
12	74-2020	Base – Tank, Fuel	1
13	46-8091	Screw – Hex. Washer Hd.	2
14	322-6	Screw – Cap, Hex. Hd.	2
15	3296-29	Nut – Lock	2

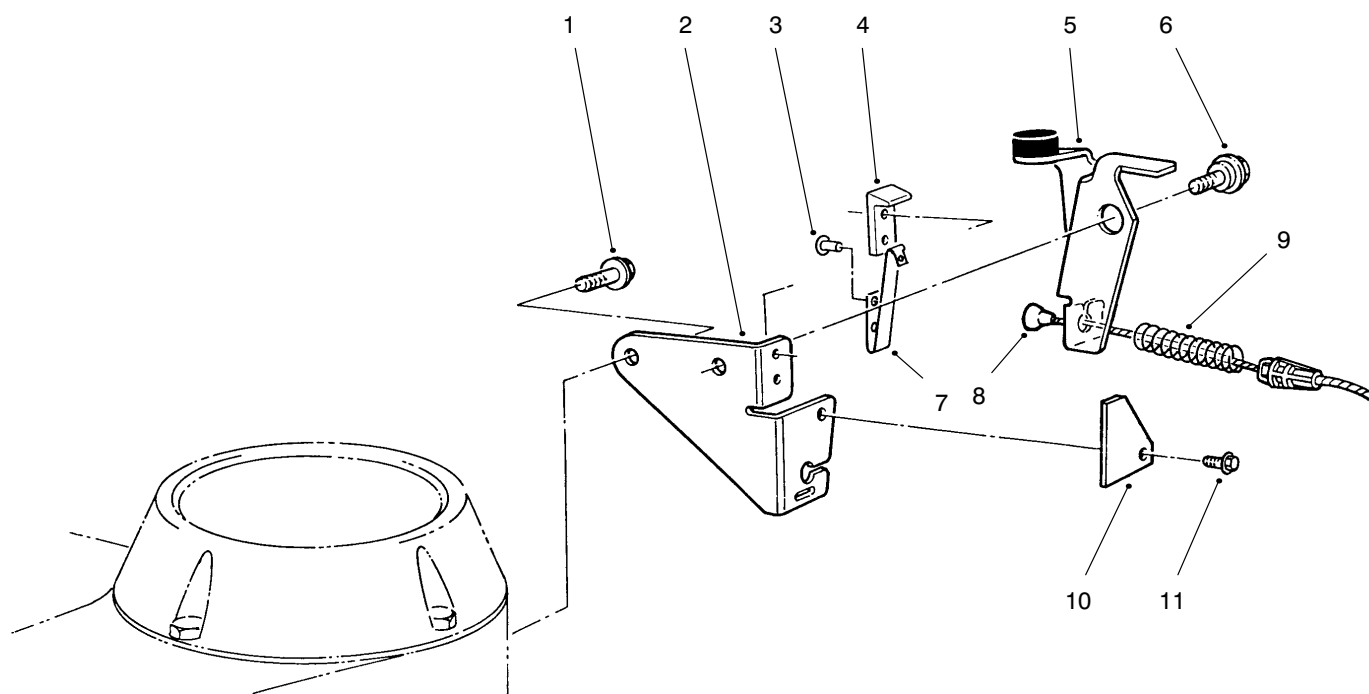


C-0531

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-10	Screw – Self Tapping	1
2	84-7820	Plate – Mounting	1
3	3290-459	Rivet	2
4	77-5260	Strap – Insulation	1
5	66-5380	Brake Plate Assembly	1
6	92-9698	Screw – Shoulder, Metric	1
7	60-9010	Strap – Ground	1

Ref. No.	Part No.	Description	No. Used
8	85-6870	Cable – Brake	1
9	66-5370	Spring – Compression	1
10	53-4690	Stop – Ground Strap	1
11	32144-112	Screw – Self Tapping	1
*	14-6009	Mounting Plate Assembly (Incl. Ref. #2-4, & 7)	1

* Not Illustrated

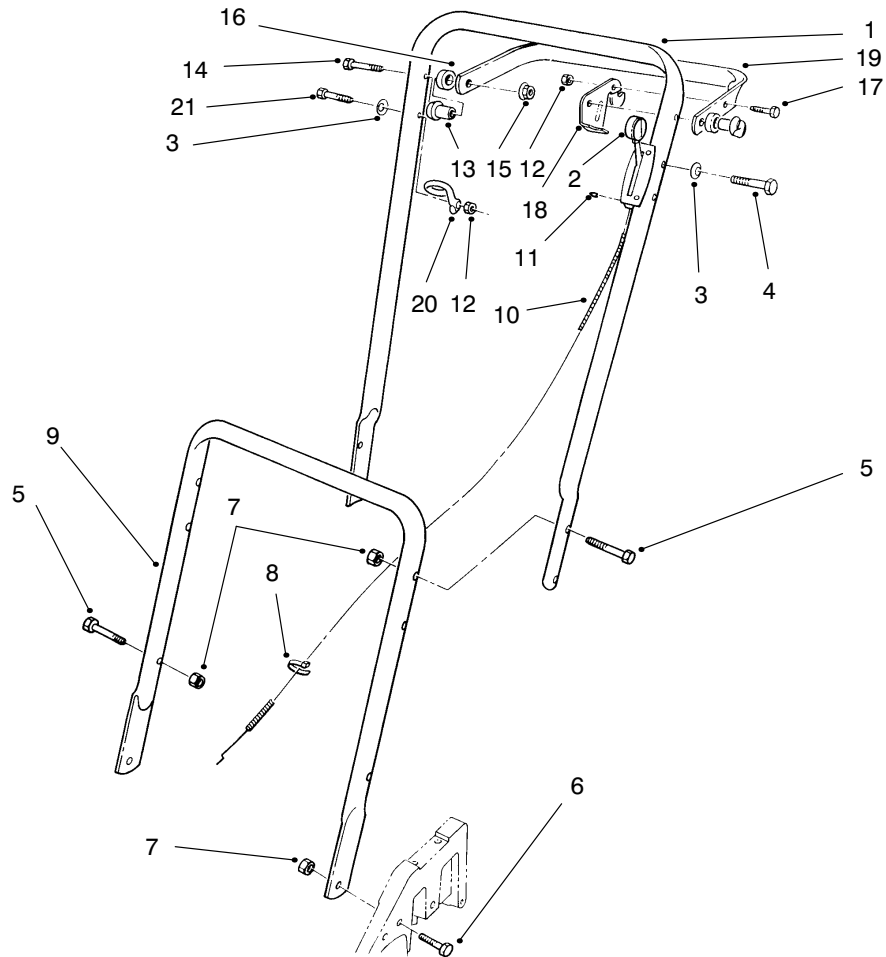


C-1015

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-2150	Handle – Upper	1
2	82-9950	Bracket – Throttle	1
3	3-7501	Washer – Curved	3
4	321-13	Screw – Cap, Hex. Hd.	2
5	322-7	Screw – Cap, Hex. Hd.	6
6	322-6	Screw – Cap, Hex. Hd.	2
7	3296-29	Nut – Lock	8
8	3290-378	Tie – Cable	1
9	52-2370	Handle – Lower	1
10	70-1062	Cable – Throttle	1
11	32151-86	Clip – Throttle	2

Ref. No.	Part No.	Description	No. Used
12	3296-42	Nut – Lock	2
13	49-1630	Support – Spacer	2
14	322-10	Screw – Hex Hd. Cap	2
15	3296-58	Nut – Lock	2
16	256-276	Spacer	1
17	321-4	Screw – Hex Hd. Cap	1
18	66-5350	Lever – Control	1
19	61-8270	Bar – Control	1
20	46-8081	Guide – Rope	1
21	321-9	Screw – Hex Hd. Cap	1

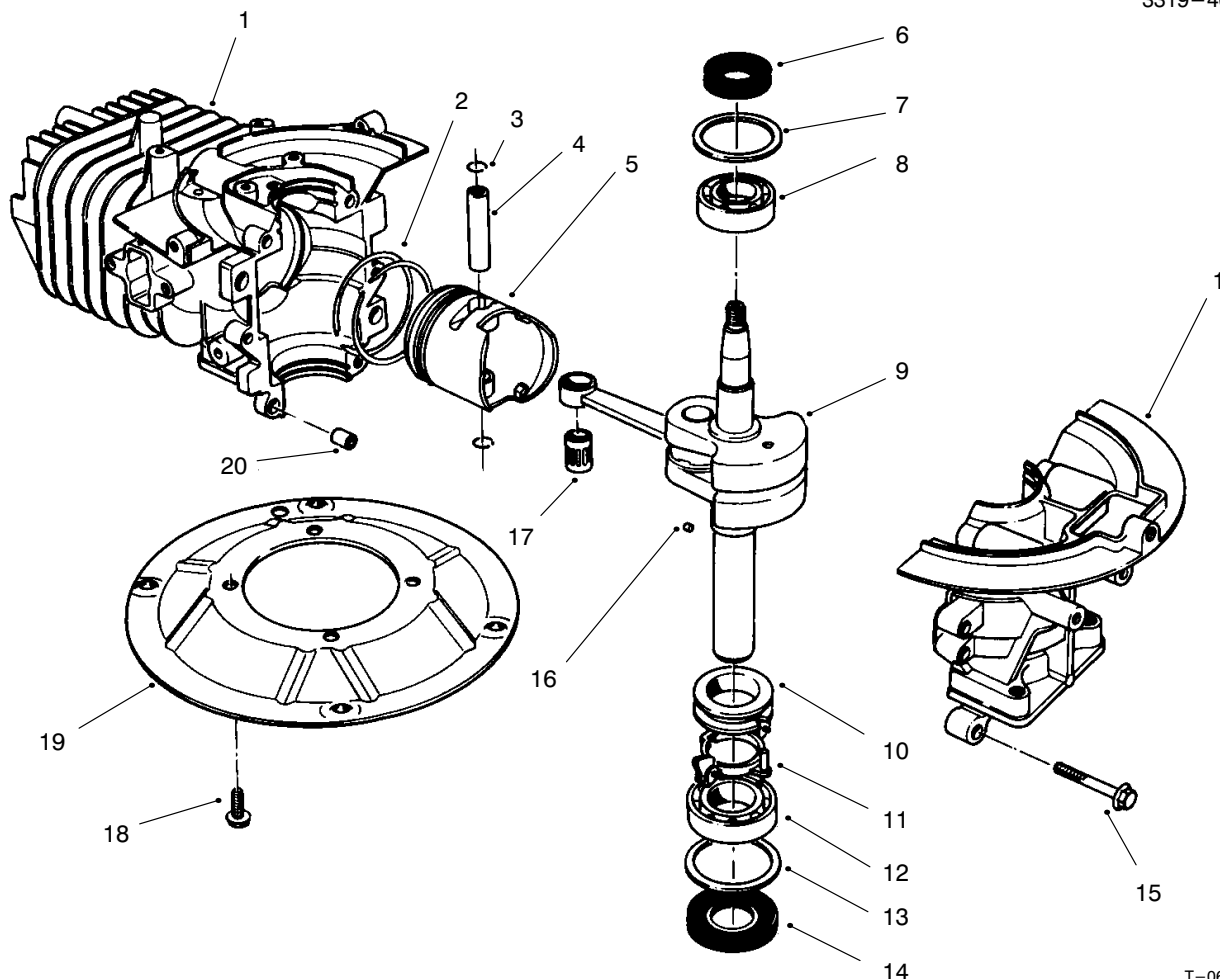


T-0663

CRANKSHAFT ASSEMBLY (Model No. 47PT6-3)

Ref. No.	Part No.	Description	No. Used
1	94-1685	Crankcase/Cylinder Assy.	1
2	81-0590	Piston Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Pin - Wrist	1
5	81-2140	Piston - 58mm	1
6	81-0720	Seal - Oil, Upper	1
7	81-0710	Washer - Thrust, Upper	1
8	81-0690	Bearing - Upper 20mm	1
9	81-4680	Crankshaft/Connecting Rod Assembly	1
10	81-0770	Spacer - Governor	1

Ref. No.	Part No.	Description	No. Used
11	81-0750	Bracket - Arm, Governor	1
12	81-0700	Bearing - Lower 25mm	1
13	81-0730	Washer - Thrust, Lower	1
14	81-0740	Seal - Oil, Lower	1
15	81-0540	Bolt 30mm Lg.	5
16	81-0760	Pin - Crankshaft	1
17	81-0610	Bearing - Wrist Pin	1
18	81-0570	Bolt	4
19	81-0560	Plate - Mounting	1
20	81-0520	Pin - Crankcase	2
*	12-8099	Short Block	1

*Not Illustrated

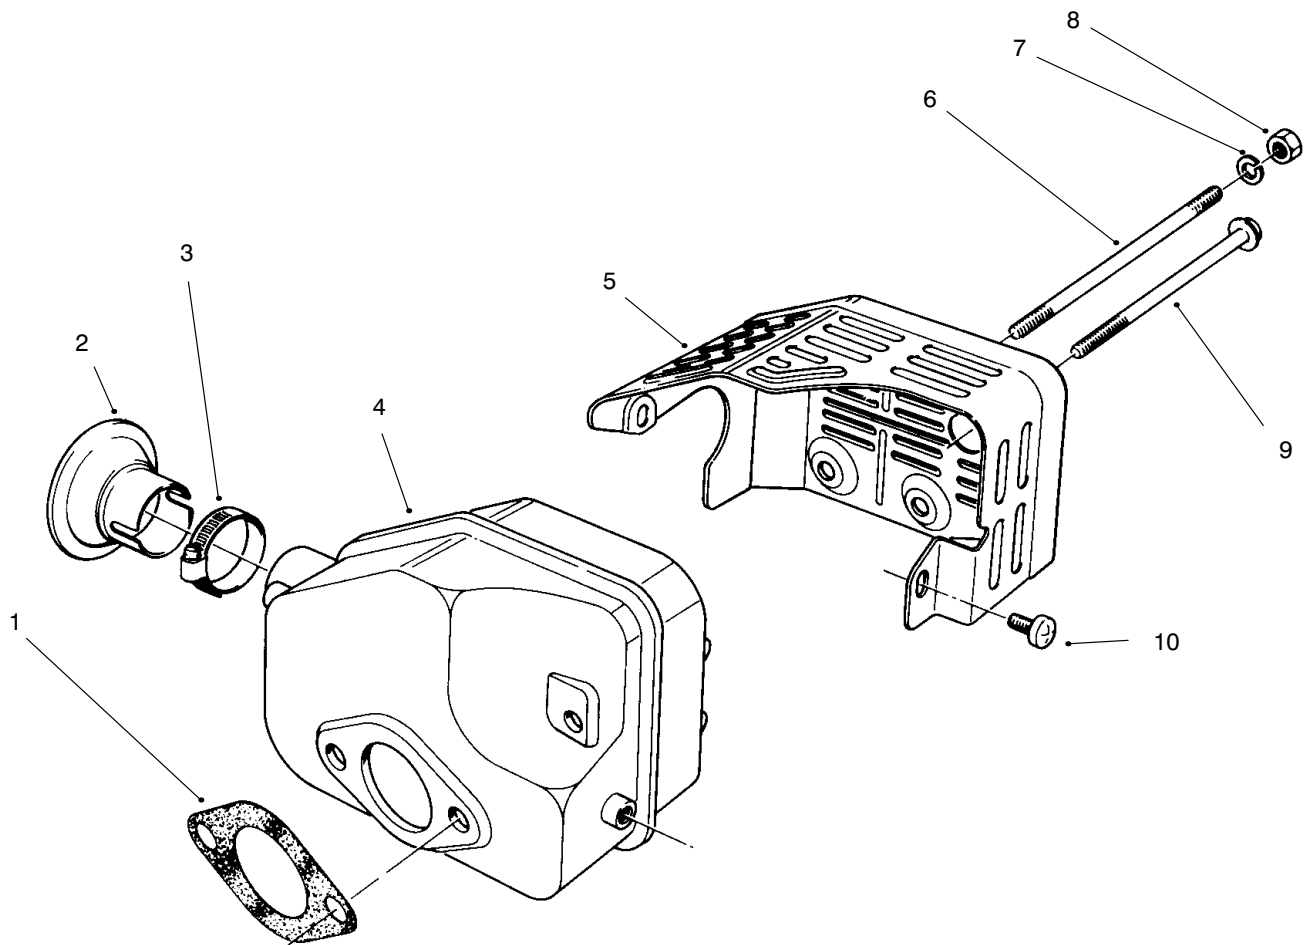


T-0667

**MUFFLER ASSEMBLY
(Model No. 47PT6-3)**

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket - Muffler	1
2	81-0200	Spark Arrester (Optional)	1
†3		Clamp	1
4	81-5690	Muffler	1
5	81-2450	Cover - Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81-1100	Bolt	2
7	81-1120	Washer - Lock	2
8	81-1110	Nut	2
9	81-1150	Bolt - Self Tapping	1
10	81-1140	Screw - Phillips Hd.	2

†Obtain Locally

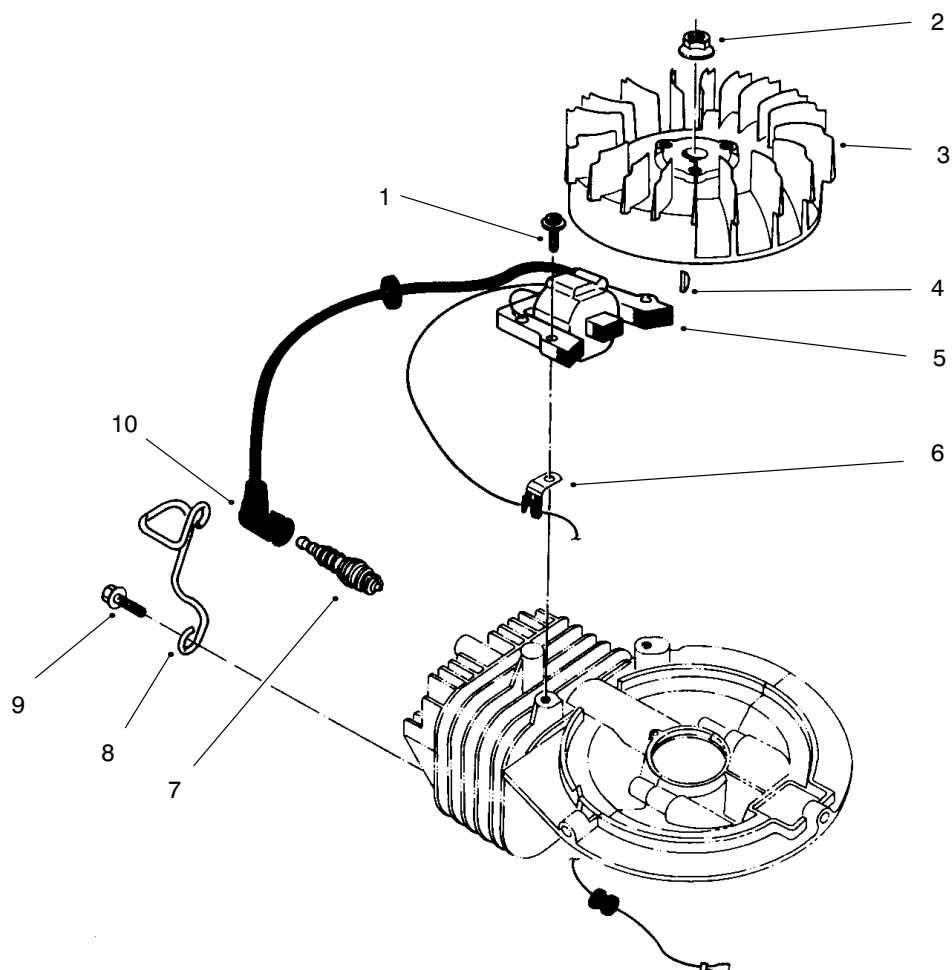


T-0664

IGNITION ASSEMBLY (Model No. 47PT6-3)

Ref. No.	Part No.	Description	No. Used
1	81-5680	Screw - Cap, Hex Hd.	2
2	81-1330	Nut	1
3	81-2810	Flywheel - Magneto	1
4	81-2370	Key - Flywheel	1
5	81-2820	Coil/Ignition Assembly	1
6	81-1480	Clamp	1

Ref. No.	Part No.	Description	No. Used
7	81-0181	Spark Plug	1
8	81-2120	Guard - Spark Plug	1
9	81-2350	Bolt - Self Tapping (20mm Lg.)	2
10	81-1500	Cap Assembly - Spark Plug	1
*	41-7650	Puller - Flywheel	1

*Not Illustrated

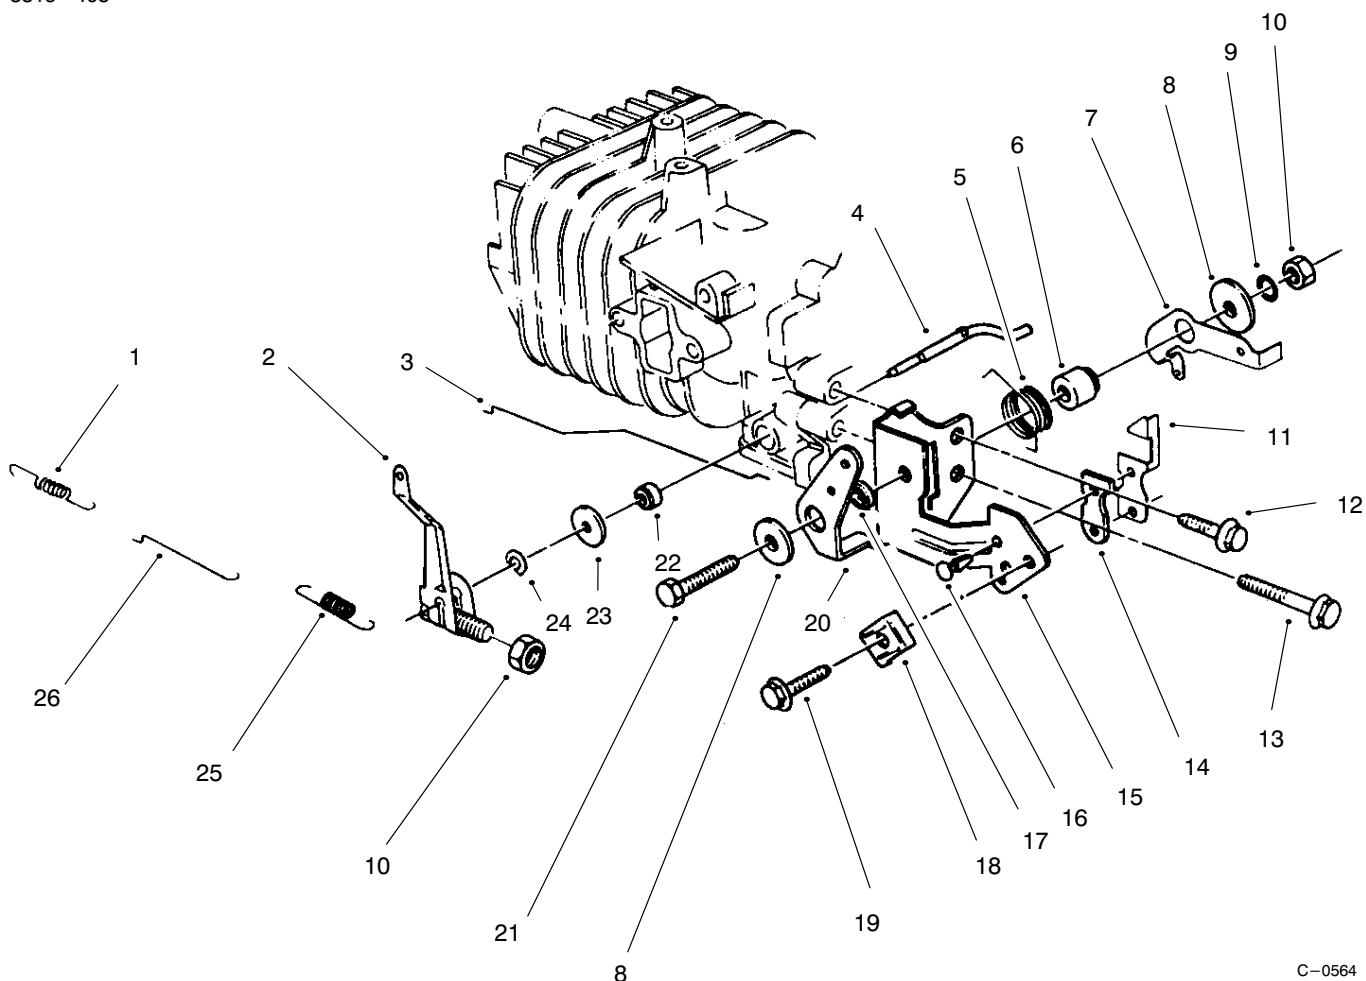


C-0564

GOVERNOR ASSEMBLY (Model No. 47PT6-3)

Ref. No.	Part No.	Description	No. Used
1	81-0920	Spring - Carburetor Rod	1
2	81-5420	Governor Arm/Bolt Assy.	1
3	81-5410	Rod - Choke	1
4	81-2880	Shaft - Governor	1
5	81-2460	Spring - Lever, Choke	1
6	81-1770	Spacer - Lever, Governor	1
7	81-2850	Lever - Governor	1
8	81-1750	Washer - Lever, Choke	2
9	81-1450	Washer - Lock	1
10	81-0900	Nut	2
11	81-1840	Terminal - Kill Switch	1
12	81-1170	Bolt - Self Tapping	1
13	81-0540	Bolt	1

Ref. No.	Part No.	Description	No. Used
14	81-1830	Insulator - Kill Switch	1
15	81-2420	Bracket - Throttle	1
16	81-4530	Rivet - Kill Switch	2
17	81-2470	Spacer - Lever, Choke	1
18	81-2430	Clamp - Cable	1
19	50-0130	Bolt - Clamp, Cable	1
20	81-1710	Lever - Choke	1
21	81-1730	Bolt - Bracket, Throttle	1
22	81-0850	Seal - Shaft, Governor	1
23	81-0860	Washer	1
24	81-0870	Ring - Retaining	1
25	81-2830	Spring - Governor	1
26	81-0910	Rod - Carburetor	1

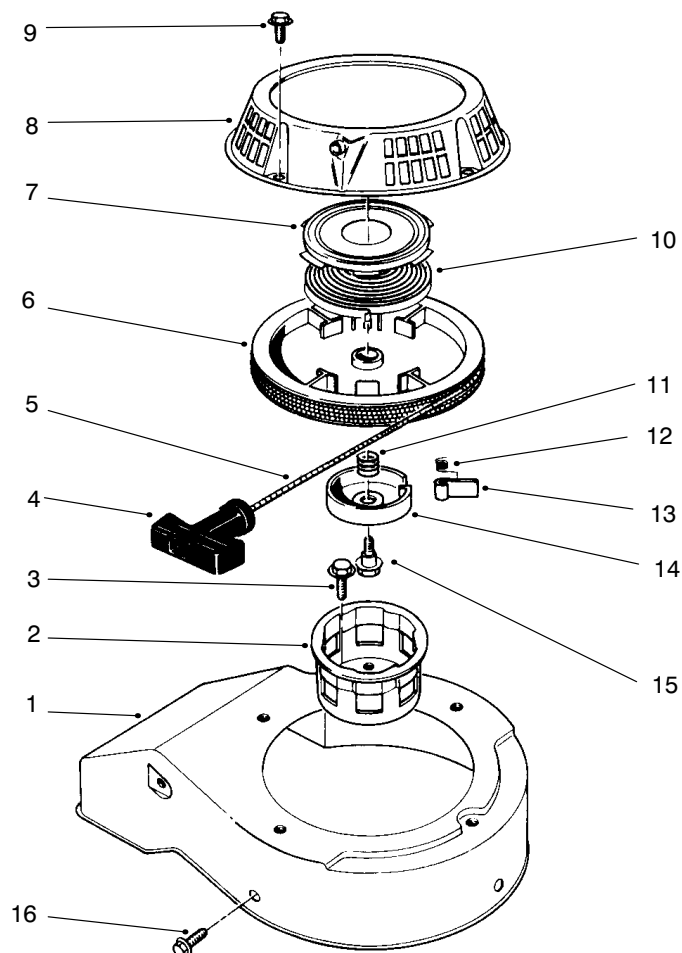


T-1102

RECOIL ASSEMBLY (Model No. 47PT6-3)

Ref. No.	Part No.	Description	No. Used
1	81-2080	Cover - Fan, Cooling	1
2	81-2170	Cup - Pulley, Starter	1
3	81-1300	Bolt	3
4	81-1630	Handle - Recoil	1
5	81-1270	Rope	1
6	81-1210	Pulley - Rope	1
7		Retainer - Spring, Recoil	1
8	81-2100	Case - Starter	1
9	81-1280	Bolt	4
10		Spring - Recoil	1
11	81-1240	Spring - Compression	1

Ref. No.	Part No.	Description	No. Used
12	81-1220	Spring - Dog	1
13	81-1230	Dog - Starter	1
14	81-1250	Retainer - Dog	1
15	81-1260	Bolt - Shoulder	1
16	53-1340	Bolt - Self Tapping (15mm Lg.)	3
*	81-5940	Starter Assembly (Incl. Ref. #4-15)	1
*	81-2300	Spring & Retainer Assembly (Incl. Ref. #7 & 10)	1

*Not Illustrated

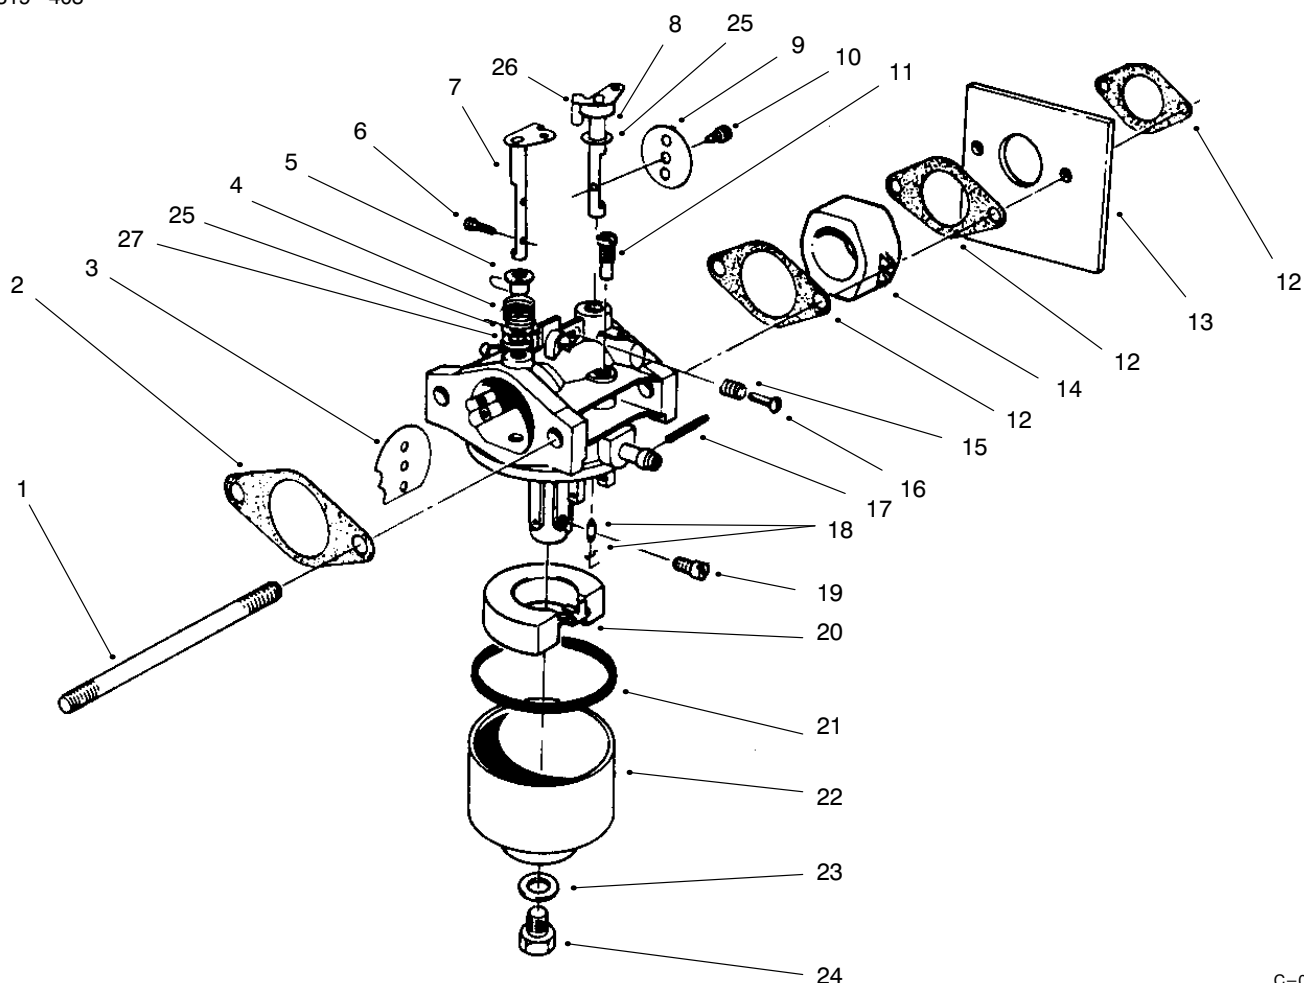

C-0563

CARBURETOR ASSEMBLY (Model No. 47PT6-3)

Ref. No.	Part No.	Description	No. Used
1	81-5450	Stud Bolt, Carburetor	2
2	81-0090	Gasket	1
3	81-0240	Valve - Choke	1
4	81-0230	Spring - Choke	1
5	81-0220	Bushing - Choke	1
6	81-2160	Screw - Choke Plate	2
7	81-1950	Shaft - Choke	1
8	81-0250	Shaft - Throttle	1
9	81-0260	Valve - Throttle	1
10	81-0270	Screw - Throttle	1
11	94-1684	Jet - Pilot #42.5	1
12	81-0780	Gasket - Carburetor	3
13	81-5490	Shield - Carburetor	1
14	81-5440	Insulator - Carburetor	1
15	81-2580	Spring - Idle Stop	1
16	50-0250	Screw - Idle Stop	1
17	81-2600	Pin - Float	1
18	81-4910	Needle Valve	1

19	81-1060	Jet - Main #75	1
*	81-2340	Jet - Main #72.5 High Alt. Above 6,000 Ft. (Optional)	A/R
20	81-0970	Float	1
21	81-1010	Gasket - Bowl, Float	1
22	81-5660	Bowl - Float	1
23	81-1020	Gasket - Capscrew, Bowl	1
24	81-5670	Capscrew - Bowl	1
25	81-2530	Seal	2
26	81-2540	Ring	1
27	81-2550	Packing	1
*	12-6379	Carburetor Kit (Incl. Ref. #2, 12, 18, 21 & 23)	1
*	81-2520	Carburetor Assy. Complete	1
*	81-5810	Seat Kit (Incl. Valve Seat & Ref. #18)	1
*	94-1687	Carburetor Ass'y w/Primer	1

*Not Illustrated

TORO PART NUMBER INDEX

3319-403

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-7501	Washer - Curved	6 3 3	63-9330	Body - Air Cleaner	3 13 1
8-5230	Blade 21	2 37 1	63-9340	Cover - Air Cleaner	3 8 1
12-4729	Housing	2 47 1	63-9380	Filter - Foam	3 7 1
12-4739	Deflector	1 12 1	66-5350	Lever - Control	6 18 1
12-6379	Carburetor Kit	12 * 1	66-5370	Spring - Compression	5 9 1
12-8099	Short Block	7 * 1	66-5380	Brake Plate Assembly	5 5 1
14-6009	Mounting Plate Assembly	5 * 1	66-7460	Bulb - Primer	3 12 1
25-7740	Knob - Arm	1 5 4	66-9303	Screw - Hex. Washer Hd.	1 31 4
26-0671	Screw - Blade	2 38 1	68-3633	Hose - Fuel	4 6 1
27-6510	Spacer - Latch, Handle	1 21 2	68-7410	Decal - Blade Warning	1 30 1
27-7071	Latch - Handle	1 22 2	70-1062	Cable - Throttle	6 10 1
27-8590	Key - Square	2 40 1	71-1260	Decal - Pro Line	3 1 1
28-1430	Loop - Lift	1 13 1	71-1280	Decal - Safety Instructions	1 19 1
28-3250	Clip - Pin	1 10 1	71-8650	Decal - Danger	2 54 1
28-3260	Pin - Chute	1 9 1	71-9280	Filter - Fuel	4 11 1
28-3270	Sleeve - Spring	1 17 1	74-2020	Base - Tank, Fuel	4 12 1
33-3201	Rod - Shield	1 27 1	74-2110	Bracket - Tank	4 1 1
39-5770	Decal - Danger	1 14 1	74-2150	Handle - Upper	6 1 1
41-7650	Puller - Flywheel	9 * 1	77-0040	Decal - Recoil	3 3 1
44-2750	Body - Primer	3 11 1	77-0520	Support - Bracket	4 8 1
44-3172	Hose - Primer	3 4 1	77-2840	Retainer - Fuel Tank	4 2 1
46-6811	Screw/Washer Assembly	1 15 2	77-5260	Strap - Insulation	5 4 1
46-8081	Guide - Rope	6 20 1	81-0090	Gasket	12 2 1
46-8091	Screw - Hex. Washer Hd.	4 13 2	81-0090	Gasket - Air Cleaner	3 14 1
47-2480	Stop - Recoil	3 16 1	81-0181	Spark Plug	9 7 1
49-1630	Support - Spacer	6 13 2	81-0200	Spark Arrester (Optional)	8 2 1
49-2040	Screw - Thread Forming	1 8 8	81-0220	Bushing - Choke	12 5 1
49-8800	Spring Arm Assembly	1 4 4	81-0230	Spring - Choke	12 4 1
49-9160	Pivot Arm Assembly	1 3 4	81-0240	Valve - Choke	12 3 1
49-9180	Screw - Pivot	1 1 2	81-0250	Shaft - Throttle	12 8 1
50-0130	Bolt - Clamp, Cable	10 19 1	81-0260	Valve - Throttle	12 9 1
50-0250	Screw - Idle Stop	12 16 1	81-0270	Screw - Throttle	12 10 1
50-7180	Nut	3 9 2	81-0520	Pin - Crankcase	7 20 2
51-2690	Screw - Hex. Flange Hd.	3 6 1	81-0540	Bolt	10 13 1
51-3211	Hose - Fuel	4 10 1	81-0540	Bolt 30mm Lg.	7 15 5
52-2170	Retainer, Blade	2 36 1	81-0560	Plate - Mounting	7 19 1
52-2260	Screw - Pivot, Rear	1 26 2	81-0570	Bolt	7 18 4
52-2360	Spacer - Handle, Brace	1 29 2	81-0590	Piston Ring Set	7 2 1
52-2370	Handle - Lower	6 9 1	81-0600	Pin - Wrist	7 4 1
52-2410	Hub	2 50 4	81-0610	Bearing - Wrist Pin	7 17 1
52-2440	Spacer - Bearing	2 49 4	81-0620	Circlip	7 3 2
52-2450	Bearing - Wheel	2 48 8	81-0690	Bearing - Upper 20mm	7 8 1
52-2480	Spacer - Wheel	1 2 4	81-0700	Bearing - Lower 25mm	7 12 1
52-2500	Crankshaft Protector	1 33 1	81-0710	Washer - Thrust, Upper	7 7 1
52-2510	Quadrant - Front R.H.	1 7 1	81-0720	Seal - Oil, Upper	7 6 1
52-2520	Quadrant - Front L.H.	1 32 1	81-0730	Washer - Thrust, Lower	7 13 1
52-2530	Quadrant - Rear R.H.	1 18 1	81-0740	Seal - Oil, Lower	7 14 1
52-2540	Quadrant - Rear L.H.	1 23 1	81-0750	Bracket - Arm, Governor	7 11 1
52-2560	Spring - Deflector	1 16 1	81-0760	Pin - Crankshaft	7 16 1
52-2570	Pin - Deflector Hinge	1 11 1	81-0770	Spacer - Governor	7 10 1
52-2640	Shield - Rear, Safety	1 24 1	81-0780	Gasket - Carburetor	12 12 3
52-2650	Bar - Safety	2 42 1	81-0850	Seal - Shaft, Governor	10 22 1
53-1340	Bolt - Self Tapping	11 16 3	81-0860	Washer	10 23 1
53-4690	Stop - Ground Strap	5 10 1	81-0870	Ring - Retaining	10 24 1
53-7720	Tire & Wheel Assembly	2 * 4	81-0900	Nut	10 10 2
53-7740	Tire	2 51 4	81-0910	Rod - Carburetor	10 26 1
53-7780	Plate - Wheel Half	2 46 8	81-0920	Spring - Carburetor Rod	10 1 1
53-7930	Spacer - Pivot Arm	1 6 4	81-0970	Float	12 20 1
55-3545	Gas Cap Assembly	4 3 1	81-1010	Gasket - Bowl, Float	12 21 1
60-9010	Strap - Ground	5 7 1	81-1020	Gasket - Capscrew, Bowl	12 23 1
61-8062	Engine - Complete	3 2 1	81-1060	Jet - Main #75	12 19 1
61-8270	Bar - Control	6 19 1	81-1080	Gasket - Muffler	8 1 1
62-3980	Sleeve	3 10 2	81-1100	Bolt	8 6 2
62-7600	Decal - Fuel Mix	4 9 1	81-1110	Nut	8 8 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
81-1120	Washer - Lock	8	7	2	81-5440	Insulator - Carburetor	12	14	1
81-1140	Screw - Phillips Hd.	8	10	2	81-5450	Stud Bolt, Carburetor	12	1	2
81-1150	Bolt - Self Tapping	8	9	1	81-5490	Shield - Carburetor	12	13	1
81-1170	Bolt - Self Tapping	10	12	1	81-5660	Bowl - Float	12	22	1
81-1210	Pulley - Rope	11	6	1	81-5670	Capscrew - Bowl	12	24	1
81-1220	Spring - Dog	11	12	1	81-5680	Screw - Cap, Hex Hd.	9	1	2
81-1230	Dog - Starter	11	13	1	81-5690	Muffler	8	4	1
81-1240	Spring - Compression	11	11	1	81-5810	Seat Kit	12	*	1
81-1250	Retainer - Dog	11	14	1	81-5940	Starter Assembly	11	*	1
81-1260	Bolt - Shoulder	11	15	1	82-9950	Bracket - Throttle	6	2	1
81-1270	Rope	11	5	1	84-7820	Plate - Mounting	5	2	1
81-1280	Bolt	11	9	4	85-6870	Cable - Brake	5	8	1
81-1300	Bolt	11	3	3	92-1779	Decal - Warning	2	55	1
81-1330	Nut	9	2	1	92-9698	Screw - Shoulder, Metric	5	6	1
81-1450	Washer - Lock	10	9	1	94-1684	Jet - Pilot #42.5	12	11	1
81-1480	Clamp	9	6	1	94-1685	Crankcase/Cylinder Assy.	7	1	1
81-1500	Cap Assembly - Spark Plug	9	10	1	94-1687	Carburetor Ass'y w/Primer	12	*	1
81-1630	Handle - Recoil	11	4	1	94-5827	Fuel Tank Assembly	4	4	1
81-1710	Lever - Choke	10	20	1	2412-95	Clamp - Fuel Line	4	5	4
81-1730	Bolt - Bracket, Throttle	10	21	1	256-276	Spacer	6	16	1
81-1750	Washer - Lever, Choke	10	8	2	321-2	Screw - Cap, Hex. Hd.	2	52	16
81-1770	Spacer - Lever, Governor	10	6	1	321-4	Screw - Hex Hd. Cap	6	17	1
81-1830	Insulator - Kill Switch	10	14	1	321-9	Screw - Hex Hd. Cap	6	21	1
81-1840	Terminal - Kill Switch	10	11	1	321-13	Screw - Cap, Hex. Hd.	6	4	2
81-1950	Shaft - Choke	12	7	1	322-6	Screw - Cap, Hex. Hd.	6	6	2
81-2080	Cover - Fan, Cooling	11	1	1	322-6	Screw - Cap, Hex. Hd.	4	14	2
81-2100	Case - Starter	11	8	1	322-7	Screw - Cap, Hex. Hd.	6	5	6
81-2120	Guard - Spark Plug	9	8	1	322-10	Screw - Hex Hd. Cap	6	14	2
81-2140	Piston - 58mm	7	5	1	323-12	Screw - Cap, Hex Hd.	1	25	4
81-2160	Screw - Choke Plate	12	6	2	3230-16	Bolt - Carriage	2	41	2
81-2170	Cup - Pulley, Starter	11	2	1	3253-22	Washer - Lock	2	39	1
81-2300	Spring & Retainer Assembly	11	*	1	3254-6	Washer - Lock, Int. Tooth	1	34	4
81-2340	Jet - Main #72.5 High Alt.	12	*	A/R	3256-16	Washer	3	5	1
81-2350	Bolt - Self Tapping	9	9	2	3290-340	Washer - Belleville	1	28	2
81-2370	Key - Flywheel	9	4	1	3290-378	Tie - Cable	6	8	1
81-2420	Bracket - Throttle	10	15	1	3290-455	Washer - Belleville	2	44	2
81-2430	Clamp - Cable	10	18	1	3290-459	Rivet	5	3	2
81-2450	Cover - Muffler	8	5	1	3296-29	Nut - Lock	6	7	8
81-2460	Spring - Lever, Choke	10	5	1	3296-29	Nut - Lock	4	15	2
81-2470	Spacer - Lever, Choke	10	17	1	3296-29	Nut - Lock	2	43	2
81-2520	Carburetor Assy. Complete	12	*	1	3296-39	Nut - Lock	1	20	6
81-2530	Seal	12	25	2	3296-42	Nut - Lock	4	7	1
81-2540	Ring	12	26	1	3296-42	Nut - Lock	6	12	2
81-2550	Packing	12	27	1	3296-42	Nut - Lock	2	45	16
81-2580	Spring - Idle Stop	12	15	1	3296-58	Nut - Lock	6	15	2
81-2600	Pin - Float	12	17	1	32144-10	Screw - Self Tapping	5	1	1
81-2810	Flywheel - Magneto	9	3	1	32144-70	Screw - Thread Forming	2	35	4
81-2820	Coil/Ignition Assembly	9	5	1	32144-112	Screw - Self Tapping	5	11	1
81-2830	Spring - Governor	10	25	1	32151-86	Clip - Throttle	6	11	2
81-2850	Lever - Governor	10	7	1	32152-2	Nut - Lock	2	53	2
81-2880	Shaft - Governor	10	4	1					
81-4530	Rivet - Kill Switch	10	16	2					
81-4680	Crankshaft/Connecting Rod	7	9	1					
81-4910	Needle Valve	12	18	1					
81-5410	Rod - Choke	10	3	1					
81-5420	Governor Arm/Bolt Assy.	10	2	1					

OPTIONAL EQUIPMENT

Bagging Kit Part No. 38-0050

Spark Arrestor Muffler Part No. 81-0200

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

[illegible]

MAINTENANCE RECORD

[illegible]