

RANGER

CODE

397S . 398S . 399S

(Push) (Auto Drive) (Auto Drive)
4 Speed

OWNER'S HANDBOOK

(English Version)

FROM SERIAL NO: 397S001001, 398S001001, 399S001001
ISSUE 6.07.99

HANDBOOK: 397011 (Rev.0)

CERTIFICATE OF CONFORMITY

I, the undersigned M.A. Wright, of:

HAYTER LIMITED, Spellbrook, Bishop's Stortford
Herts CM23 4BU
ENGLAND

certify that the lawnmowers:

1. Machine Type No.	CODE 397S	CODE 398S	CODE 399S
2. Category.	397S	398S	399S
3. Make.	Combustion Engine	Combustion Engine	Combustion Engine
4. Type.	Hayter	Hayter	Hayter
5. Engine - Manufacturer.	Rotary	Rotary	Rotary
- Type.	Briggs & Stratton	Briggs & Stratton	Briggs & Stratton
- Speed of rotation during test.	127802-1592-21	127802-1592-21	127802-1592-21
	2830rpm	2830rpm	3000rpm

Conforms to the specifications of Directive 84/538/EEC as adapted to technical progress by Directive 87/252/EEC and amended by Directive 88/180/EEC.

Guaranteed maximum sound power level. 96dB(A) 96dB(A) 100dB(A)

- Type of cutting device	Cutterbar	Cutterbar	Cutterbar
- Width of cutting device	48cm	48cm	53cm
- Speed of rotation of the cutting device	2830 rpm	2830 rpm	3000 rpm

TESTED AT SUDBURY,
SUFFOLK, ENGLAND

26/01/99

26/01/99

26/01/99

Signed



M.A. Wright
(Technical Director)

EC DECLARATION OF CONFORMITY

Company Name

HAYTER LIMITED

Company Address

Spellbrook
Bishop's Stortford
Herts. CM23 4BU
ENGLAND



Machine Type No..
Models

Code 397S

Code 398S

Code 399S

Directives complied with: 98/37/EC.

Essential Health & Safety Requirements Relating to the Design & Construction of Machinery and Safety Components.

84/538/EEC amended by 87/252/EEC and 88/180/EEC Permissible Sound Power Levels of Lawn Mowers
89/336/EEC amended by 92/31/EEC Electromagnetic Compatibility

Standards Used: EN292, EN836, and ENISO 14982.

I declare on behalf of Hayter Limited that these machines conform to the EC Essential Health & Safety Requirements.

Signed



Date: 6.07.99

M.A. Wright
(Technical Director)

VIBRATION INFORMATION

Lawnmower vibration information. RMS acceleration measured in 3 - axes at operators contact position on the handlebars. **CODE 397S, 398S = 6.8ms⁻² CODE 399s = 7.3⁻²**

CONTENTS	Page No.
INTRODUCTION.	1.3
WARRANTY.	1.4
SAFETY PRECAUTIONS.	1.5 - 1.8
Decals	1.8
SPECIFICATIONS.	1.9
ASSEMBLY INSTRUCTIONS.	1.10 - 1.12
General Assembly.	1.10
Assembling the Mower for the First Time.	1.11 - 1.12
STARTING THE ENGINE.	1.13 - 1.14
Before Starting the Engine.	1.13 - 1.14
To Start the Engine.	1.14
STOPPING THE ENGINE.	1.15
OPERATING THE MOWER.	1.16 - 1.21
Height of Cut.	1.16
Travel.	1.17
Turning the Mower.	1.17
Mowing with Grass Collection.	1.18
Mowing without Grass Collection.	1.19
Heavy Growth.	1.19
Moving the Mower Across Non-Grassed Areas.	1.19
Cutterbar Operation.	1.20
Mowing and Grass Care Tips.	1.20 - 1.21
MAINTENANCE.	1.22 - 1.29
Engine.	1.22
Oil Service	1.23
Air Cleaner Service	1.24
Grassbag	1.24
Deck Housing	1.24
Securing Nuts and Bolts	1.25
Lubrication	1.25
Speed Change Cable	1.25
Clutch Cable Adjustment	1.26
Cutterbar	1.26 - 1.27
Maintenance Schedule	1.28 - 1.29
- After First 5 Hours	1.28
- Every 5 Hours or Daily	1.28
- Every 25 Hours or Every Season	1.28
- Every 50 Hours or Every Season	1.29
- Every 100 Hours or Every Season	1.29

CONTENTS	Page No.
PREPARING THE MOWER FOR STORAGE.	1.30
FAULT FINDING.	1.31 - 1.33
397S, 398S, 399S PARTS LIST.	2.1 - 2.3
397S PARTS LIST DIAGRAM.	2.4
398S PARTS LIST DIAGRAM.	2.5
399S PARTS LIST DIAGRAM.	2.6
ENGINE ANCILLARY PARTS	2.7
ENGINE WARRANTY	2.8
NOTES	2.9
CUSTOMER INFORMATION	2.10

INTRODUCTION

Thank you for purchasing a **Hayter** mower. The following pages are designed to help you gain safe and efficient service from your machine.

IMPORTANT: This 'Owners Handbook' should be regarded as part of the machine as it gives essential information regarding machine safety, operation, maintenance and specifications. Read and understand this handbook prior to operating your machine for the first time. Make sure you are familiar with all the controls and points of regular maintenance. If you have any doubts, consult your **Hayter** authorised dealer who will be pleased to give you assistance.

IMPORTANT: This machine is designed solely for use in a domestic grass cutting environment. Use in any other way is considered as contrary to the intended use. Compliance with and strict adherence to the conditions of operation, service and repair as specified in this handbook also constitute essential elements of the intended use.

This machine should be operated, serviced and repaired only by persons who are familiar with its particular characteristics and who are acquainted with the relevant safety procedures.

The safety precautions listed here in and all other generally recognised regulations on safety must be observed at all times.

Any arbitrary modifications carried out to this machine may relieve Hayter Limited of liability for any resulting damage or injury.

All **Hayter** mowers are robustly constructed and designed for efficient economical performance under normal mowing conditions. Correct operation and maintenance will ensure a long and satisfactory service life. Prior to despatch from our factory every effort is made to ensure your machine arrives in perfect condition. Your dealer will carry out a pre-delivery inspection to ensure that there has been no transit damage prior to installation.

Please allow your dealer to familiarise you with the controls and safety features of the machine during installation.

Throughout this handbook all references to left hand and right hand are as viewed from behind the handlebar, facing in the direction of forward travel.

This owners handbook is based on information available at the time of publication.

HAYTER LIMITED reserve the right to make changes at any time without notice.

LIMITED WARRANTY

Hayter Limited warrants to the original user/purchaser that this unit shall be free from defects in material and workmanship under normal use and service for a period of **three years** from the date of purchase. The manufacturers of the engine and battery pack system (where applicable) furnish their own warranty and services are provided through their authorised network (Refer to "Engine/Battery Pack Warranty Statement"). To qualify for the full benefit of the warranty, the warranty registration card must be returned within 60 days of purchase. Subject to the conditions and exclusions noted in this limited warranty, we shall at our option, repair or replace any warranted part during the applicable period. If you are in doubt or experience any difficulty, please consult a Hayter Authorised Service Dealer for clarification.

To qualify for the extended warranty (second and third year) of the three year limited warranty the machine must have annual services carried out by an Authorised Hayter Service Dealer. These chargeable services should be carried out within 12 and 24 months of the date of purchase.

Excluded from the extended warranty period are those items which are subject to normal wear and tear e.g. tyres, wheels, cutterbars, cables, batteries and other consumable wearing parts.

All consumer machines which are fitted with a **genuine** Hayter friction disc as original equipment before use, are covered by a **Lifetime Warranty** against the engine crankshaft bending. **Note:** friction washers, blade brake units and other such devices are not applicable. Only machines fitted with a **genuine** Hayter friction disc, which are used in accordance with the recommended operating and maintenance procedures, are covered.

This warranty does not apply to any unit that has been tampered with, altered, misused, abused or used for hire, and will become invalid if non genuine Hayter parts are fitted. This warranty does not cover minor mechanical adjustments unless they are due to defective material or workmanship. Consult the Owner's Handbook or a Hayter Authorised Service Dealer for assistance when making these adjustments.

A warranty period of 90 days applies to machines used for commercial purposes.

To make a warranty claim, return the unit to a Hayter authorised dealer along with proof of purchase stating the machine serial number and date of purchase. The service receipt(s) or this Owners Handbook with the 1st/2nd year service boxes fully completed, must be produced as proof of entitlement to the extended warranty period. Subject to the conditions and exclusions in this limited warranty, the authorised dealer will, at our option, repair or replace any warranted part within the duration of the warranty period.

This limited warranty gives you specific legal rights and is in addition to any statutory rights to which you may be entitled and your statutory rights are not affected by this warranty. If you need additional information concerning this written warranty, or assistance in obtaining services, please write to : **HAYTER LIMITED, Service Department, Spellbrook, Bishop's Stortford, Hertfordshire CM23 4BU**

UK ONLY: Details of your local **Hayter** authorised dealer are contained in Yellow Pages or contact:- Freephone 0800 616298.

1st Year
Service
Record

DEALER STAMP

2nd Year
Service
Record

DEALER STAMP

Date.....

Date.....

Signed.....

Signed.....

SAFETY PRECAUTIONS

THIS SYMBOL MEANS BE ALERT! YOUR SAFETY IS INVOLVED. WHEN YOU SEE THIS SYMBOL BE ALERT TO THE POSSIBILITY OF INJURY. CAREFULLY READ THE MESSAGE THAT FOLLOWS AND INFORM OTHERS.

EXERCISE GREAT CARE AND FOLLOW THE ADVICE GIVEN TO AVOID POTENTIALLY HAZARDOUS SITUATIONS.

The Ranger is perfectly safe if used correctly. Failure to observe the following simple precautions may result in serious injury.

Training:

Read the instructions carefully. Ensure that you are familiar with the controls and the proper use of the equipment. Learn how to stop the mower quickly in an emergency.



Never allow children or people unfamiliar with these instructions to use the mower.



Never mow while people, especially children, or pets are nearby.



Keep in mind that the user is responsible for accidents or hazards occurring to other people or their property.

Preparation:

While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing sandals.



Thoroughly inspect the area where the mower is to be used and remove all objects which may be thrown by the machine.



WARNING: Petrol is highly flammable.

- Store fuel in containers specifically designed for this purpose.

- Refuel outdoors only and do not smoke while refuelling.

- Add fuel before starting the engine. Never remove the cap from the fuel tank or add petrol while the engine is running or when the engine is hot. Allow the engine to cool for at least 2 minutes before refuelling.

- If petrol is spilled, do not attempt to start the engine but move the mower away from the area of spillage. Avoid creating any source of ignition until petrol vapours have dissipated.

- Always use fresh fuel. Stale fuel can block the carburettor.

- Replace fuel tank caps and fuel container caps securely.



Replace faulty exhaust mufflers.

SAFETY PRECAUTIONS**Continued.**

-  Always ensure that the mower is in a safe operating condition. Frequently check all nuts, bolts and screws for tightness. Use only genuine **Hayter** replacement parts.
-  A damaged cutterbar or loose fixing bolt are major hazards. Before use, visually inspect the cutting mechanism to ensure that it is in good condition. A damaged cutterbar must be replaced immediately with a genuine **Hayter** replacement part. Cutterbars which are slightly worn can be resharpened. Ensure that both cutting edges are resharpened equally to maintain balance. An unbalanced cutterbar may cause serious damage to your machine. Refer to "Maintenance."

Operation:

-  Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.
-  Always pull starter cord slowly until resistance is felt. Then pull the cord rapidly to avoid kick-back and prevent hand or arm injury.
-  Mow only in daylight or good artificial light.
-  Avoid using the mower on wet grass, where feasible.
-  Always be sure of your footing on slopes.
-  Walk, never run.
-  Mow across the face of slopes, never up and down.
-  Exercise extreme caution when changing direction on slopes.
-  Do not mow excessively steep slopes.
-  Use extreme caution when reversing or pulling the mower towards you.
-  Stop the engine if the mower has to be tilted for transportation when crossing surfaces other than grass and when transporting the mower to and from the area to be mowed.
-  Never operate the mower unless the guards are securely in position and in good condition.
-  Do not change the engine governor settings or overspeed the engine.
-  Disengage the drive clutch before starting the engine. (Auto drive models only).

SAFETY PRECAUTIONS**Continued.****Operation continued:**

-  Start the engine carefully, with feet well away from the cutterbar.
-  Do not tilt the mower when starting the engine.
-  Do not put hands or feet near or under rotating parts.
-  Never pick up or carry a mower while the engine is running.
-  Stop the engine and disconnect the spark plug lead:
 - Before clearing blockages or unclogging the discharge chute.
 - Before cleaning/checking or working on the mower.
 - After striking a foreign object. Inspect the mower for damage and make repairs before restarting and operating the mower.
 - If the mower starts to vibrate abnormally (check immediately).
-  Stop the engine:
 - Whenever you leave the mower.
 - Before refuelling.
-  Never lift the deflector plate whilst the mower is in operation.

Maintenance and Storage:


-  Keep all nuts, bolts and screws tight to ensure that the equipment is in safe operating condition.
-  Frequently check fuel lines and fittings for cracks or leaks and replace if necessary.
-  Never check for a spark with the spark plug removed. (Use an approved tester).



WARNING: THE CUTTERBAR CAN CONTINUE TO ROTATE AFTER THE ENGINE IS SWITCHED OFF.

SAFETY PRECAUTIONS**Continued.**

-  Never crank the engine with the spark plug removed. If the engine is flooded, move the throttle to the 'fast' position and crank the engine until it starts.
-  Never strike the flywheel with a hammer or hard object as this may cause the flywheel to shatter in operation. Always use the correct tools to service the engine.
-  Never operate the engine without a muffler guard. Inspect the muffler periodically and replace if worn or leaking.
-  Never start the engine with the air-cleaner or air-cleaner cover removed.
-  Never store the mower with petrol in the tank within an enclosed area where fumes may reach an open flame or spark.
-  Allow the engine to cool before storing in any enclosure.
-  To reduce the fire hazard, keep the engine, muffler, cooling fins and petrol storage area free of grass, leaves, or excessive grease.
-  Replace worn or damaged parts for safety.
-  If the fuel tank has to be drained, it is essential that this be done outdoors.

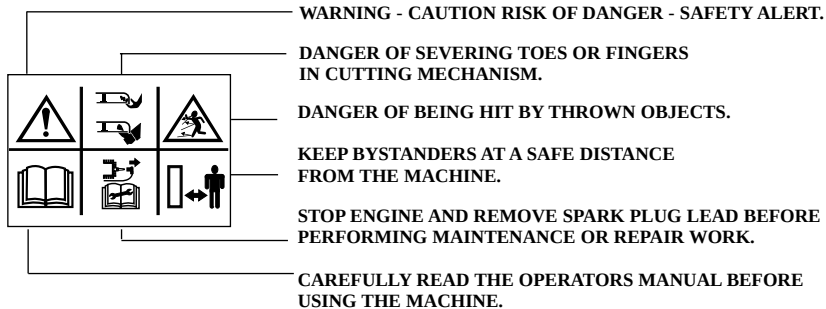DECALS**WARNING DECAL: Part No. 219189**

DECAL : HEIGHT OF CUT ADJUSTMENT
 Part No. 320006



DECAL: ENGINE STOP
 Part No. 331046

**THROTTLE CONTROL**

SPECIFICATIONS

 
MODELS	CODE 397S (Push)	CODE 398S (Auto-Drive)	CODE 399S (Auto Drive 4 - Speed)
Engine	Briggs & Stratton Quantum XTL 45		
Engine type	127802-1592-21		
Engine / cutterbar speed	2830rpm		3000rpm
Fuel type	Unleaded petrol.		
Fuel capacity	1.5 litres		
Oil type	SAE 30 engine oil		
Oil sump capacity	0.6 litres		
Cutting width	480mm		530mm
Cutting height	20 - 70mm		30 - 80mm
Overall dimensions	1070 x 530 x 1400mm		1080 x 570 x 1560mm
Dry Weight	33kg	33.5kg	37.5kg

ASSEMBLY INSTRUCTIONS

SAFETY NOTICE




Before using the mower, read this owners handbook carefully.
Pay particular attention to the safety precautions.



GENERAL ASSEMBLY

- 1 Spark Plug lead
- 2 Air Cleaner
- 3 Engine Cowl
- 4 Serial No. Label
- 5 Fuel Cap.
- 6 Height of Cut Adjuster.
- 7 Handlebar Securing Knob.
- 8 Engine Start-Grip.
- 9 Variable Speed Control (399S only)
- 10 Engine Stop lever.
- 11 Handlebar.
- 12 Ground Drive Clutch Lever (398S & 399S only)
- 13 Throttle Control
- 14 Grassbag Assembly.
- 15 Rear Deflector.
- 16 Handlebar Height Adjusting Knob.
- 17 Handlebar Height Adjusting Fixing Screw.
- 18 Oil Filler Cap and Dipstick
- 19 Muffler Guard

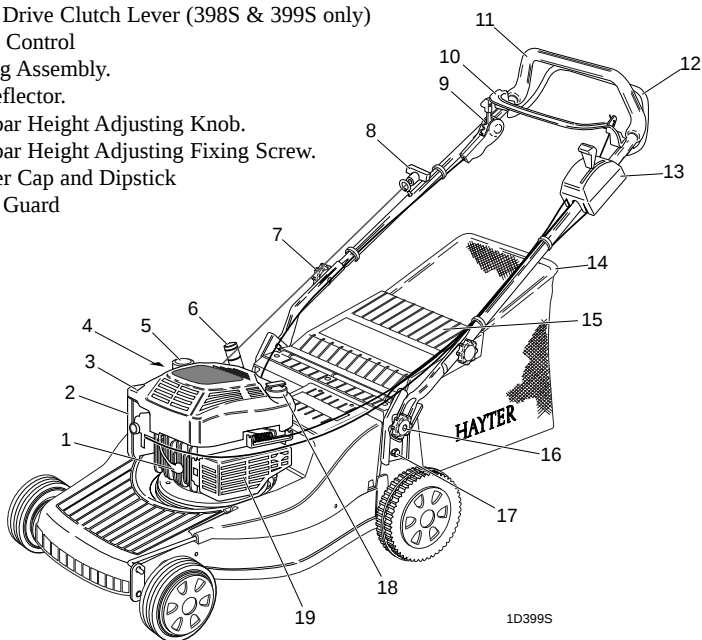


ASSEMBLING THE MOWER FOR THE FIRST TIME

Check that parts are delivered correctly: Remove the mower from the packaging and check that all loose items have been supplied correctly. Refer to the delivery checklist opposite and the general assembly. If any items are missing, contact your local authorised Hayter Dealer.

DELIVERY CHECKLIST


Description	Quantity
Grassbag	1
Owner's Handbook	1
Engine Handbook	1
Warranty Reg. Card	1

Assemble the handlebar: Unscrew the knobs securing the handlebar sufficiently to allow it to be pivoted. Move the engine stop lever away from the engine to avoid damage and unfold the handlebar to its operating position. Tighten the two knobs to secure the handlebar, ensure that the knobs are assembled to the outside of the handlebars.

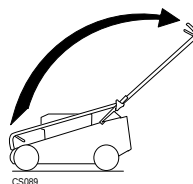

CAUTION - PREVENT DAMAGE : When unfolding the handlebar, take care to ensure that the controls and cables do not become damaged. Always replace damaged controls and cables before using the mower.

Adjust height of handlebars: Using a suitable spanner or socket. Loosen the 2 fixings at the base of the handlebars. Unscrew the 2 lower knobs sufficiently to allow handlebars to pivot. Set the required position and re-tighten the 2 lower knobs, check position and re-tighten the fixing screws at the base of the handlebar.

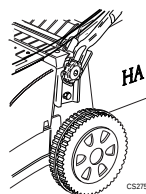


Assemble the grassbag: Identify the grassbag and remove the long ribbon label by cutting it off close to the grassbag. Discard the ribbon label.



WARNING - AVOID ENTANGLEMENT : Completely remove this ribbon before using the mower.

Raise the rear deflector and lower the grassbag through the handlebar aperture to connect onto the upper mounting points. Lower the grassbag to rest against the rear of the mower. Finally lower the rear deflector to rest against the top of the grassbag.

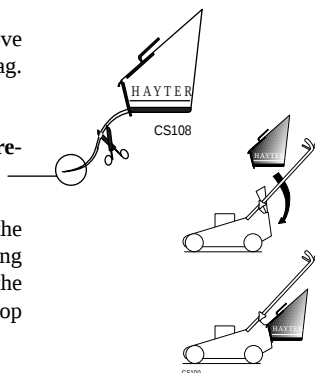


ASSEMBLING THE MOWER FOR THE FIRST TIME**Continued.**


Check that all fasteners are secure.



Check engine stop lever operation: Operate the engine stop lever several times. Ensure that the cable moves freely and that the lever returns automatically to the engine stop position when released.

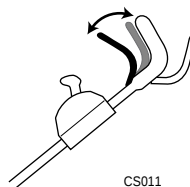


Check throttle lever operation: Operate the throttle lever several times and ensure that the cable moves freely whilst operating the engine throttle mechanism. Slight resistance should be felt when the lever moves to the '**choke**' position.

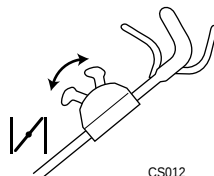

Auto Drive Models Only

Check clutch lever operation: Operate the clutch lever several times and ensure that the cable moves freely.

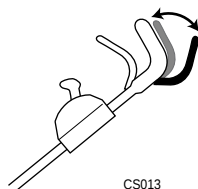

BEFORE STARTING THE ENGINE

IMPORTANT - PREVENT ENGINE DAMAGE: The engine is shipped without oil or petrol. The engine must be filled with the correct grade of oil and petrol before starting the engine.



Oil recommendations: Always use high quality detergent oil classified "For service SE, SF, SG" SAE 30 oil. Never use additives with recommended oils.


SAE 10W-30 multigrade oil may be used, but this will result in higher engine operating temperatures with consequential high oil consumption. It is imperative that the oil level is checked more frequently if this grade of oil is used in order to guard against serious engine damage.

Check oil level: Clean around the oil filler cap before removing. With the mower on a level surface, unscrew and remove the oil filler - dipstick. Wipe oil from it with a clean cloth. Screw the oil filler - dipstick back in place, then unscrew and remove it to check the oil level.

The oil level is correct when it is at the **full** mark on the dipstick. **DO NOT OVERFILL.**

Slowly fill with engine oil as necessary and replace the oil filler - dipstick.

IMPORTANT: The oil filler dipstick must be secured to prevent oil leakage during operation.

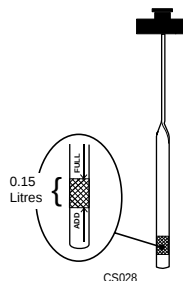


Fuel Recommendations: Always use clean, fresh unleaded petrol. Purchase fuel in quantities which can be used within 30 days. Never mix oil with petrol. For added engine protection Briggs & Stratton recommend the use of their fuel additive which is available from an authorised Briggs & Stratton service dealer.

Check fuel level: Clean around the fuel filler cap before removing and fill the fuel tank with clean unleaded petrol.

Do not overfill the fuel tank. Allow 6mm minimum of tank space for fuel expansion.

IMPORTANT: The fuel filler cap must be secured to prevent fuel leakage during operation.

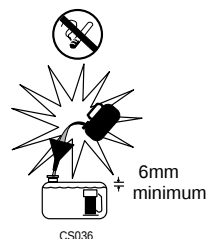


BEFORE STARTING THE ENGINE

Continued.


! WARNING - PREVENT ACCIDENTS: The cutterbar rotates when the engine is operating.

ALWAYS operate the engine stop lever several times and ensure the engine stop cable moves freely before starting the engine.


ALWAYS position the mower on a level stone free grass surface before starting the engine. Ensure that the cutterbar is set above grass height to prevent the engine being started under load.

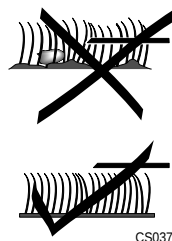**TO START THE ENGINE**


Operate the throttle control lever: Push the lever to 'choke' position before starting a cold engine. It should only be necessary to push the lever to the 'fast' position before starting a warm engine.

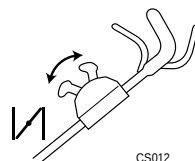

Operate the engine stop lever: Use one hand to hold the engine stop lever in the operating position firmly against the handlebar. To start and operate the engine the engine stop lever must be held in the operating position. If the engine stop lever is released the engine will stop.

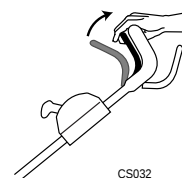

Operate the engine start - grip: Stand behind the mower and maintain a firm hold on the handlebar and the engine stop lever to prevent the mower moving towards you. Use your right hand to hold the engine start - grip and pull slowly until resistance is felt, then pull rapidly to crank the engine. When the engine starts carefully return the engine start - grip to the storage position. If the engine does not start after 5 attempts - refer to "Fault Finding".

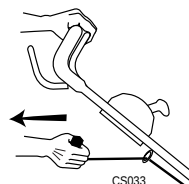

Allow the engine to warm up and return the throttle lever to the 'fast' position after starting a cold engine.

IMPORTANT - PREVENT ENGINE DAMAGE: Never pull the engine start - grip when the engine is running.


STOPPING THE ENGINE

Stopping the engine: Reduce the throttle setting and disengage the engine stop lever by releasing the lever.



CS023

Emergency stop: If the engine stop lever fails, move the throttle lever to the 'slow' position and disconnect the spark plug lead to stop the engine.

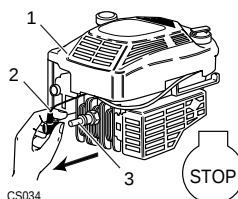


CS034

1. Engine
2. Spark Plug Lead
3. Spark plug

SAFETY NOTICE



WARNING - PREVENT ACCIDENTAL STARTING :
Always stop the engine and disconnect the spark plug lead before cleaning, inspecting or working on the machine.

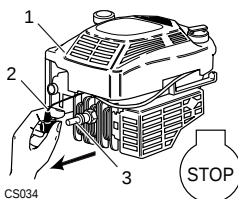

CS034

1. Engine
2. Spark Plug Lead
3. Spark plug

SAFETY NOTICE



WARNING - PREVENT ACCIDENTS: Before mowing, thoroughly inspect the area where the mower is to be used and remove all objects which when contacted by the mower cutterbar could become dangerous projectiles.


Inspect the area for hidden obstructions which when contacted by the cutterbar could risk health and safety. Remember the location of these obstructions and ensure that you mow around them.



CS031



IMPORTANT - PREVENT ENGINE DAMAGE : DO NOT use the mower on a slope greater than 20 degrees.

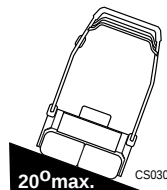


CS030

HEIGHT OF CUT

To adjust the height of cut: Grip the lever and pull sideways to disengage it from the locking notch, then push forwards to lower or pull backwards to raise the height of cut. Finally release the lever at the required position and ensure it locks firmly into one of the nine notch settings.

Always select a height of cut to suit operating conditions. Aim to prevent engine overloading and blockages by avoiding low cuts in long grass conditions. Be prepared to make two cuts when the grass is long.

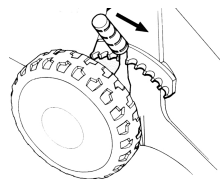

TRAVEL

Forward travel:

Push model - Hold and push against the handlebar with both hands to move the mower forwards.


Auto drive models - Hold the handlebar and operate the clutch lever to achieve forward travel.

Release the clutch lever to stop forward travel. When the clutch lever is disengaged the mower can be operated as a push model. This feature is useful when mowing in confined areas.

Reverse travel:

Push models - Hold and pull against the handlebar with both hands to reverse the mower towards you.

Auto drive model - Disengage the clutch lever. Hold and pull against the handlebar with both hands to reverse the mower towards you.

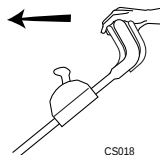


WARNING: PREVENT ACCIDENTS - Always reverse the mower carefully towards you. Always switch off the engine before walking backwards with the mower.

SPEED CHANGE (Code 399S only)

Travel Speed can be altered by selecting one of the four positions.

IMPORTANT: ONLY operate the speed control when the engine is running to avoid damage to the mechanism.

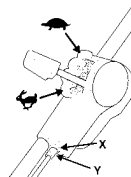

TURNING THE MOWER

To make a wide turn : Steer the mower with the handlebar whilst travelling forward.

To make a tight turn : Stop forward travel. Apply downward pressure on the handlebar to raise the front wheels of the mower just above ground level and steer the mower using the handlebar in the required direction.



WARNING: PREVENT ACCIDENTS - DO NOT raise the front of the mower excessively when making a turn. NEVER raise the rear of the mower when the engine is running.

MOWING WITH GRASS COLLECTION

The grassbag is designed to collect grass clippings.


To achieve best grass collection performance, mow in dry operating conditions.

Recognise that when the grassbag is full the airflow stops and the grassbag deflates.




WARNING: PREVENT ACCIDENTS - ALWAYS check the condition of the grassbag for signs of damage. Replace a damaged grassbag immediately. DO NOT operate the mower with a damaged grassbag. ALWAYS stop the engine and disconnect the spark plug lead before attempting to remove a grass blockage.

Grassbag attachment: Raise the rear deflector and lower the grassbag through the handlebar aperture to connect onto the upper mounting points. Lower the grassbag to rest against the rear of the mower. Finally lower the rear deflector to rest against the top of the grassbag.

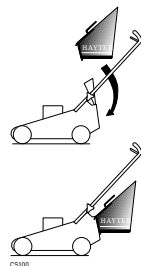


Grassbag removal: Raise the rear deflector and lift the grassbag through the handlebar aperture and away from the mower. Finally lower the rear deflector to rest against the rear of the mower.

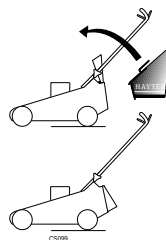

Grassbag emptying: To empty the grassbag, pour out the grass clippings and shake the grassbag vigorously to clean the airways. Good grass collection depends on good air flow through the grassbag. When collecting grass clippings it is important that the grassbag is emptied regularly to prevent blockages and engine overloading.

MOWING WITHOUT GRASS COLLECTION

 To mow without collecting the grass clippings, remove the grassbag and operate the mower with the rear deflector in its lowest position.



! WARNING - PREVENT ACCIDENTS: ALWAYS check the condition of the rear deflector for signs of damage and ensure it is positioned correctly on the rear of the mainframe. Replace a damaged rear deflector immediately. never operate the mower with a damaged rear deflector.

HEAVY GROWTH

Areas of heavy growth should be mown without grass collection. If grass collection is required first mow the area without grass collection at the maximum height of cut setting. Allow the grass clippings to dry out and then mow the area at the maximum height of cut setting with the grassbag fitted. Reduce the height of cut and mow the area again as necessary until the required finish is obtained.

MOVING THE MOWER ACROSS NON-GRASSED AREAS

Set the mower to its maximum height of cut to protect the cutting mechanism when moving the mower over surfaces other than grass.

! WARNING - PREVENT ACCIDENTS : ALWAYS stop the engine and push the mower carefully at slow walking speed.


CUTTERBAR OPERATION

The cutterbar rotates at the same speed as the engine. The cutterbar will stop within three seconds of the engine being switched off.



WARNING - PREVENT ACCIDENTS : DO NOT operate the mower if the cutterbar fails to stop within three seconds. Return the mower to your Hayter dealer for examination and repair.

The cutterbar is driven by the engine via a friction device to help prevent damage occurring to the cutting mechanism when a hidden obstruction or overload is encountered. When the obstruction or overload is removed the friction device will automatically reset.

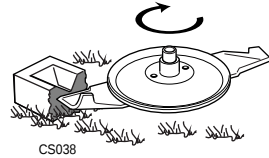

WARNING - PREVENT ACCIDENTS: ALWAYS stop the engine when a hidden obstruction or excessive vibration is encountered. Disconnect the spark plug lead and examine the cutting mechanism. ALWAYS replace a damaged cutterbar - refer to “Maintenance”.

MOWING AND GRASS CARE TIPS

In dry weather conditions leave the grass long to help retain ground moisture.

Aerate the lawn to stimulate soil organisms and root growth. In spring and late summer remove dead grass and aerate the lawn by raking or similar means.

Keep the cutterbar sharp. A blunt cutterbar will tear the grass and cause the tips to turn brown.

MOWING AND GRASS CARE TIPS**Continued.**

Prevent scalping. Plan your direction of travel to mow across hollows and humps.

Prevent grass damage. Stop forward travel when making a turn.

Prevent grass damage. **DO NOT** mow in wet conditions.

Brush the lawn surface to disperse worm casts before mowing.

Spike compacted lawn areas with a fork. Fill the holes with sand to improve aeration and drainage.

Mow lawns in a different direction to the previous cut.


As a general rule the grass clippings should be removed each time you mow. If weather conditions are dry and hot and the grass is weed free, leave the clippings on the lawn to help maintain ground moisture.

Mow lawns twice a week when the grass is growing vigorously in the summer.

Mow lawns once a week in spring, autumn and during prolonged dry weather in the summer.

Prevent grass damage - DO NOT remove more than one third of the grass height in one cut.

Recommended grass heights for lawns:-

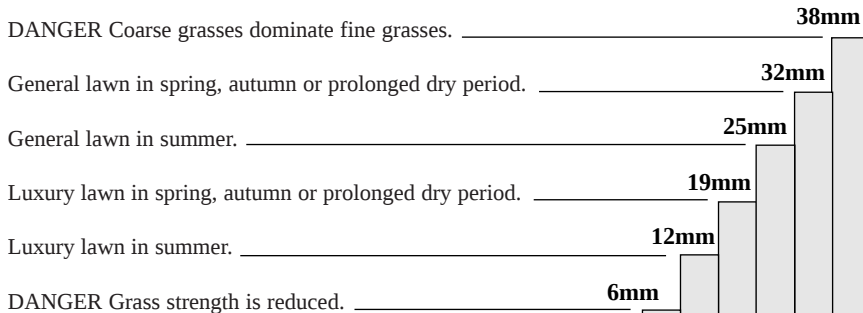


MAINTENANCE


WARNING - PREVENT ACCIDENTS: Stop the engine and disconnect the spark plug lead before attempting to carry out maintenance procedures on the mower.

ENGINE


1. Engine Cowl
2. Carburettor
3. Spark Plug / Lead
4. Muffler Guard
5. Muffler
6. Oil filler Cap/ Dipstick
7. Start Grip
8. Fuel Cap
9. Finger Guard
10. Air Cleaner

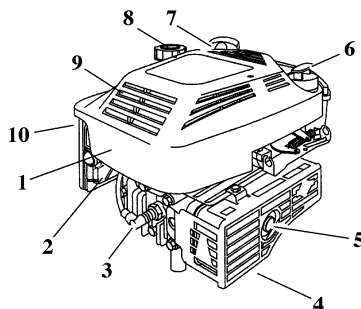

 Engine handbook: For details of engine maintenance refer to the engine operating and maintenance instructions handbook supplied with your mower.



IMPORTANT - Draining engine oil: To drain the engine oil, first drain fuel by operating the engine until the fuel tank is empty and the engine stops. Remove the spark plug lead and allow the engine to cool. Position the mower on its left hand side and ensure that the air cleaner side of the engine is kept uppermost. Remove the oil filler-dipstick to drain the oil.

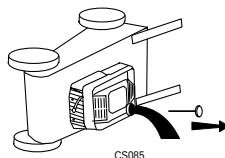

OIL SERVICE


Refer to the Maintenance Schedule at the end of this section and ensure that the recommendations are followed. More frequent service is required when operating in adverse conditions.

- Check the oil level every 5 hours or daily and ensure that the correct oil level is maintained. Refer to -'Before Starting the Engine Oil Recommendations' for oil checking procedure and filling instructions.
- Drain the engine oil after the first 5 hours of operation and thereafter at the end of every grass cutting season.
- Change the oil while the engine is warm. Refill with fresh clean oil of the recommended SAE viscosity grade. Refer to - 'Before Starting the Engine: Oil Recommendations'.

⚠ WARNING - PREVENT ACCIDENTS: Drain fuel by running the engine until the fuel tank is empty and the engine stops before attempting to tip the mower for oil draining purposes.

- Remove the spark plug lead and allow the engine to cool. Tip the mower over on to its left hand side thus ensuring that the air cleaner is kept uppermost to prevent engine damage. Remove the oil filler dipstick and drain the oil into a suitable container.


1. Engine
2. Spark Plug Lead
3. Spark plug

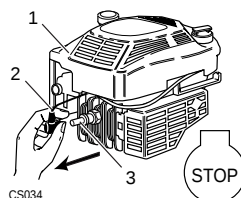

AIR CLEANER SERVICE

Refer to the Maintenance Schedule at the end of this section and ensure that the recommendations are followed. More frequent service is required when operating in adverse conditions.

- Gain access to the cartridge (3) by loosening screw (1) and tilting cover (2).
- Replace the cartridge if very dirty or damaged.
- Clean the cartridge by tapping gently on a flat surface. Do not use petroleum solvents during cleaning as this will cause the cartridge to deteriorate. Do not use pressurised air as this may damage the cartridge. Do not oil the cartridge.
- After servicing the cartridge re-install it in the cover. Insert the tabs on the bottom of the cover into the slots in the bottom of the base (4). Tilt the cover upwards and securely tighten the screw to the base.

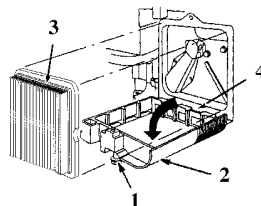


1. Screw
2. Cover
3. Cartridge
4. Base.

GRASSBAG

Remove grass debris from the grassbag immediately after use and check its condition for signs of damage.



WARNING - PREVENT ACCIDENTS: Replace a damaged grassbag immediately.

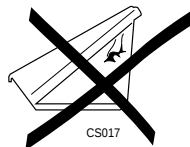

DECK HOUSING

Remove grass debris from the top and underside of the deck housing immediately after use.

IMPORTANT - PREVENT DAMAGE: Fertilisers and top dressings are particularly corrosive. Thoroughly clean the mower deck immediately after use on treated grass and store well away from corrosive materials.

SECURING NUTS AND BOLTS

 
Regularly check that all securing nuts and bolts are tight.
Replace missing or damaged items immediately.



LUBRICATION

Lubricate the wheels, pivot points and linkages with engine oil every 25 operating hours.

Apply a good quality medium grease to the inner control cables at the point of entry and exit from their outer casings.




SPEED CHANGE CABLE

(Code 399S only)

If the speed difference between the settings on the speed change control are judged to be too little or do not exist at all it may be necessary to adjust the cable.

1. Run the mower in the  position for a few minutes.
2. If there is any play in the cable by nipple Y the cable must be adjusted. Loosen the locking nut X and adjust the cable by screwing out the nipple Y until the play on the cable is taken up.
3. Tighten the locking nut X.

Note! Do not tension the cable more than necessary, it should just sit in the nipple Y without play. Too much cable tension will cause the drive belt to break or result in damage to other parts of the transmission. When adjusting after maintenance (e.g. fitting a new belt) always start with the nipple Y screwed in fully.

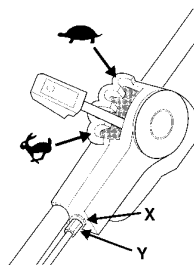


CLUTCH CABLE ADJUSTMENT

Check the clutch cable operation every 25 operating hours and adjust if necessary. The clutch cable is adjusted correctly when the belt drive just engages with the clutch lever positioned 32-38mm from the handlebar.

Unscrew the lock nuts (1) and screw the adjuster (2) in or out as necessary. Tighten the locknuts (1) when correctly adjusted.

IMPORTANT - PREVENT DAMAGE: ALWAYS operate the mower with the clutch cable correctly adjusted. ALWAYS replace damaged cables.

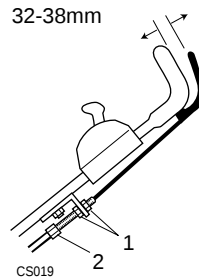

CUTTERBAR



WARNING: PREVENT ACCIDENTS - Never work on the cutterbar unless the spark plug lead has been removed. The cutterbar has sharp edges. **ALWAYS** wear strong gloves to protect your hands when working on the cutterbar. **DO NOT** operate tools towards the cutting edges to avoid the risk of injury should the tool slip. **ALWAYS** use genuine Hayter replacement parts.

The condition of the cutterbar and its mounting arrangement should be checked regularly for signs of wear or damage. Ensure that the cutterbar is not bent or cracked.

A damaged cutterbar that is out of balance will vibrate excessively and may break. **DO NOT** use an unbalanced cutterbar.


Regularly check that the bolt securing the cutterbar is tightened to the specified torque of 54Nm.

Replace the cutterbar every 2 years or sooner if excessively worn or damaged.

How to remove the cutterbar:


Drain the fuel by operating the engine until the fuel tank is empty and the engine stops. **Remove the spark plug lead** and allow the engine to cool. Turn the mower on its **left hand side** and ensure that the air cleaner side of the engine is uppermost.

Firmly grip the end of the cutterbar with the gloved hand and remove the bolt and washer securing the cutterbar with a 9/16" A/F spanner.

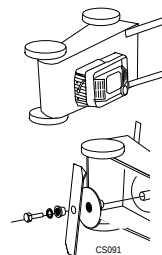


CUTTERBAR**Continued.**

How to sharpen and balance the cutterbar: A slightly worn cutterbar may be re-sharpened. Both cutting edges must be sharpened equally to ensure balance. Sharpen the cutterbar every 25 mowing hours or more frequently if conditions require. Remove the cutterbar from the mower and clean using a brush and water. Inspect the cutterbar for signs of damage.

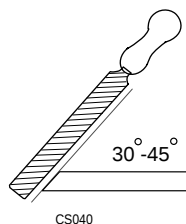


WARNING - PREVENT ACCIDENTS : DO NOT use a damaged or excessively worn cutterbar.

Sharpen both cutting edges with a flat file to restore the original cutting edge.

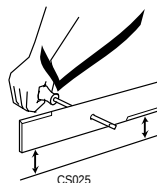

Ensure that the cutterbar is balanced. Use a screw driver with a round shaft to support the cutterbar through its centre hole. Hold the cutterbar horizontal and then release. A balanced cutterbar will remain horizontal. If the cutterbar is not balanced the heavy end will rotate downwards. Sharpen the heavy end until the cutterbar is correctly balanced.

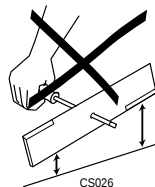

MAINTENANCE SCHEDULE

Follow the hourly or calendar intervals, whichever occurs first. More frequent service will be required if working for prolonged periods under dusty, dry conditions, or when airborne debris is present or after extensive operation cutting tall, dry grass.

AFTER FIRST 5 HOURS

- *Change engine oil*

EVERY 5 HOURS OR DAILY

- *Check oil level*
- *Remove grass debris from around engine, muffler/muffler guard and air ways in the top cowl.*
- *Remove grass debris from top and underside of deck housing.*
- *Remove grass debris from the grassbag and check for signs of damage.*
- *Check condition of guards and safety devices.*
- *Check condition of cutterbar.*

EVERY 25 HOURS OR EVERY SEASON

- *Change engine oil if continuously operating under heavy load or high ambient temperature.*
- *Service the air cleaning cartridge.*
- *Lubricate wheels, pivot points and linkages.*
- *Grease inner control cables at point of entry and exit from their outer casings.*
- *Check clutch cable adjustment.*
- *Sharpen cutterbar.*

MAINTENANCE SCHEDULE Continued**EVERY 50 HOURS OR EVERY SEASON**


- *Change engine oil.*

EVERY 100 HOURS OR EVERY SEASON

- *Clean engine cooling system. Clean more often under dusty conditions or when airborne debris is present or after prolonged operation whilst cutting tall, dry grass.*
- *Service the air cleaner cartridge.*
- *Replace spark plug.*

PREPARING THE MOWER FOR STORAGE

Handlebar storage: To lower the handlebar unscrew the 2 small securing knobs sufficiently to allow it to be pivoted forwards to rest against the mower. Take care to ensure that the control cables do not become snagged at the pivot point and depress the engine stop lever to prevent it being damaged through contact with the engine spark plug.

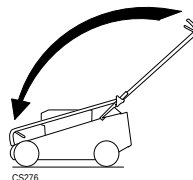

Storage for periods in excess of 30 days: Engines stored in excess of 30 days need to be protected with Briggs & Stratton fuel additive or drained of fuel to prevent gum from forming in the fuel system or on essential carburettor parts. To ensure your mower is maintained in good working order it is important that the following procedure is adopted. Refer to the Maintenance section as necessary.

Drain fuel from the engine by operating the engine until it stops.

Disconnect the spark plug lead.

Change the engine oil.

Remove the engine spark plug and pour 15ml of engine oil into the engine cylinder and replace the spark plug. Do not exceed the stated volume of oil as engine damage may occur on re-starting. **Do not replace the spark plug lead.** Slowly pull the engine start - grip once to crank the engine. This will distribute the oil and help prevent engine corrosion.

Clean grass and debris from the engine cylinder, cylinder head cooling fins, under top cowl, and around and behind muffler/muffler guard.

Clean all other areas of the mower and ensure that the grassbag is clean.

Lubricate the mower.

Treat metal parts with a water repellent anti-corrosion product.

Lower the handlebar, if desired.

Rest the mower deck on wooden blocks to remove the weight of the mower from its wheels/roller.

Cover the mower with a protective sheet and store it in a dry, ventilated area.

FAULT FINDING

PROBLEM	POSSIBLE FAULT	REMEDY
Engine will not turn over	Engine stop lever released Incorrect oil level Obstruction under deck	Operate engine stop lever Check oil level Remove obstruction
Engine smokes	Excess oil level Air cleaner cartridge oil soaked or plugged	Check oil level Service air cleaner
Engine runs then stops	Fuel starvation Fuel cap vent blocked	Fill fuel tank Clean fuel cap vent

FAULT FINDING

PROBLEM	POSSIBLE FAULT	REMEDY
Engine will not start.	Engine under load. Fuel starvation. Incorrect / contaminated fuel. Spark plug lead disconnected. Engine brake not released. Faulty spark plug.	Raise height of cut. Fill fuel tank. Drain fuel tank and fill with correct fuel. Connect spark plug lead. Operate engine stop lever. Clean and adjust gap or replace.
Engine runs rough.	Spark plug lead becoming disconnected in use. Faulty spark plug. Air cleaner element blocked. Incorrect / contaminated fuel.	Connect spark plug lead. Clean and adjust gap or replace. Replace air cleaner element. Drain fuel tank and fill with correct fuel.
Engine vibrates excessively.	Mounting bolts loose. Cutterbar bolt loose. Cutterbar out of balance.	Tighten bolts. Tighten bolt. Balance cutterbar.
Uneven cut.	Undulating ground contours. Cutterbar worn. Cutterbar out of balance. Wheels damaged.	Change direction of travel. Sharpen the cutterbar. Balance cutterbar. Inspect and replace as necessary.

FAULT FINDING**Continued.**

PROBLEM	POSSIBLE FAULT	REMEDY
Discharge chute blocks.	Grass is wet. Cut height too low. Grassbag full. No airflow through the grassbag.	Mow dry grass. Increase cut height. Empty grassbag. Clean the grassbag.
Mower is hard to push.	Height of cut too low. Wheels damaged.	Increase height of cut. Inspect and lubricate or replace as necessary.
Mower will not self propel. (Auto drive model only).	Clutch out of adjustment. Drive belt damaged.	Adjust clutch lever. Replace drive belt.
Poor grass collection.	No airflow through the grassbag. Discharge chute blocked. Wet grass. Grassbag full.	Clean the grassbag. Remove blockage. Mow dry grass. Empty grassbag.

PARTS LIST


ITEM NO.	DESCRIPTION	PART NO.	QTY.		
			397S	398S	399S
1	Mainframe - 48	397039V	1	1	0
	Mainframe - 53	399020V	0	0	1
2	Height Adjust Quadrant	397028	1	1	1
3	Cover - Black	397037	1	1	0
	Cover - Black	399019	0	0	1
4	Engine-B+S Quantum XTL45	397007	1	1	1
5	Decal - Engine	397008	1	1	0
	Decal - Engine	399008	0	0	1
6	Key Woodruff	1662	1	1	1
7	Nut-UNC 1/4" Plain	09197	2	2	2
8	Knob	397046	2	2	2
9	Washer	09475	2	2	2
10	Screw - Plastite	09765	10	10	11
11	Screw - Taptite	09596	16	16	18
12	Wheel Assembly	397021	2	2	0
	Wheel Assembly	399009	0	0	2
13	Handlebar - Lower RH	397004W	1	1	1
14	Handlebar - Lower LH	307003W	1	1	1
15	Knob - M8 Handlebar	480088	2	2	2
16	Guide Rope	305127	1	1	1
17	Bolt - Handlebar	226024	2	2	2
18	Plug - Tube	300160	2	2	2
19	Cable Tie	3966	3	3	3
20	Nut	09544	1	1	2
21	Washer - Plain	09472	1	1	1
22	Guide Rope	305093	1	1	1
23	Throttle Control & OPC Assemble	397010	1	1	0
	Throttle Control & OPC Assemble	480093	0	0	1
24	Screw - Detite Posi Pan	09600	2	2	2
25	Pin Pivot	340182	2	2	2
26	Lever Engine	340179	1	1	1
27	Washer - Nylon	09688	6	2	2
28	Screw - PT Pan Flange	09687	2	2	2
29	Upper Handlebar	340183W	1	1	0
	Upper Handlebar	399026W	0	0	1
30	Frame - Grassbag W/A	397007W	1	1	0
	Frame - Grassbag W/A	399005W	0	0	1
31	Fabric Grassbag	397006	1	1	0
	Fabric Grassbag	399006	0	0	1
32	Flap - Black	397024	1	1	1
33	Spring	397025	1	1	1


PARTS LIST**Continued.**


ITEM NO.	DESCRIPTION	PART NO.	QTY.		
			397S	398S	399S
34	Flap Attachment - Black	397026	1	1	1
35	Attachment - RH	397036	1	1	1
36	Attachment - LH	397035	1	1	1
37	Battery Holder	397034	1	1	1
38	Grip Fix	09773	2	0	0
39	Rear Attachment	397027	1	1	1
40	Bolt - Coach	09766	2	2	2
41	Attachment Plate	397018	2	2	2
42	Spring	397033	1	1	1
43	Handlebar Attachment	397017	2	2	2
44	Screw -Taptite	09546	2	2	2
45	Wheel Cover	397023	2	0	0
	Cover Plate	398003	0	2	2
46	Screw - M8 x 20	09368	2	2	2
47	Height Adjustment Lever	397031	1	1	1
48	Bushing	397016	2	2	2
49	Seal Shaft	397041	2	2	2
50	Screw - Taptite	09349	3	3	3
51	Friction Disc W/A	397042W	1	1	1
52	Cutterbar 19"	480149	1	1	0
	Cutterbar 21"	330032	0	0	1
53	Piece Cutterbar Distance	216008	1	1	0
	Piece Cutterbar Distance	4014	0	0	1
54	Washer - Spring	09273	1	1	1
55	Screw	09116	1	1	1
56	Front Axle	397029	1	1	1
57	Height Adjustment Rod	397038	1	1	0
	Height Adjustment Rod	399021	0	0	1
58	Rear Axle	397030	1	1	1
59	Grip Fix	09772	2	2	2
60	Retainer	397013	2	2	2
61	Lever Knob	397032	1	1	1
62	Spring	397012	2	2	2
63	Wheel Cover	397015	2	2	2
64	Bearing Kit	397045	4	4	2
65	Wheel Assembly - (Incl. item 64)	397014	2	2	2
66	Washer	09263	10	10	12
67	Spring	397019	2	2	2
68	Hub Cap - Black	397020	2	2	2
69	Hub Cap - Black	397022	2	2	0
	Hub Cap - Black	399010	0	0	2

PARTS LIST**Continued.**

ITEM NO.	DESCRIPTION	PART NO.	QTY.		
			397S	398S	399S
70	Shaft	397040	1	0	0
71	Transmission	398001	0	1	1
72	Washer	02575	0	4	4
73	Drive Key	398004	0	2	2
74	Pin	398002	0	2	2
75	Lock Washer	398005	0	2	2
76	Gear Wheel	398007	0	2	2
77	Support Washer	398006	0	2	2
78	Lever Clutch	306094	0	1	1
79	Clip E	09767	0	2	2
80	Tension Spring	398008	0	1	0
	Bracket	399022	0	0	1
81	V Belt	398011	0	1	0
	V Belt	399024	0	0	1
82	Belt Pulley	398010	0	1	0
	Variator Assy	399018	0	0	1
83	Pin Roll	09770	0	1	0
	Pin Roll	09771	0	0	1
84	Grubscrew	09769	0	1	1
85	Bush	398012	0	1	0
	Engine Spacer	399025W	0	0	1
86	Engine Belt Pulley	398009	0	1	0
	Engine Belt Pulley	399012	0	0	1
87	Bracket Cable Clutch	306108	0	1	1
88	Cable Clutch	397009	0	1	1
89	Ball Bearing	399027	0	0	2
90	Knob	399016	0	0	1
91	Screw Plastite	09768	0	0	2
92	Variator Control	399017	0	0	1
93	Attachment	399013	0	0	1
94	Screw Taptite	09764	0	0	1
95	Spacer	399011	0	0	1
96	Tension Roller	399015	0	0	1
97	Tension Arm	399023	0	0	1
98	Belt Pulley	399014	0	0	1
99	Bolt	09547	0	0	1
100	Decal - Hayter	533005	1	1	1
101	Decal - Engine Stop	331046	1	1	1
102	Decal - Height of Cut	320006	1	1	1
103	Decal - Caution	219189	1	1	1

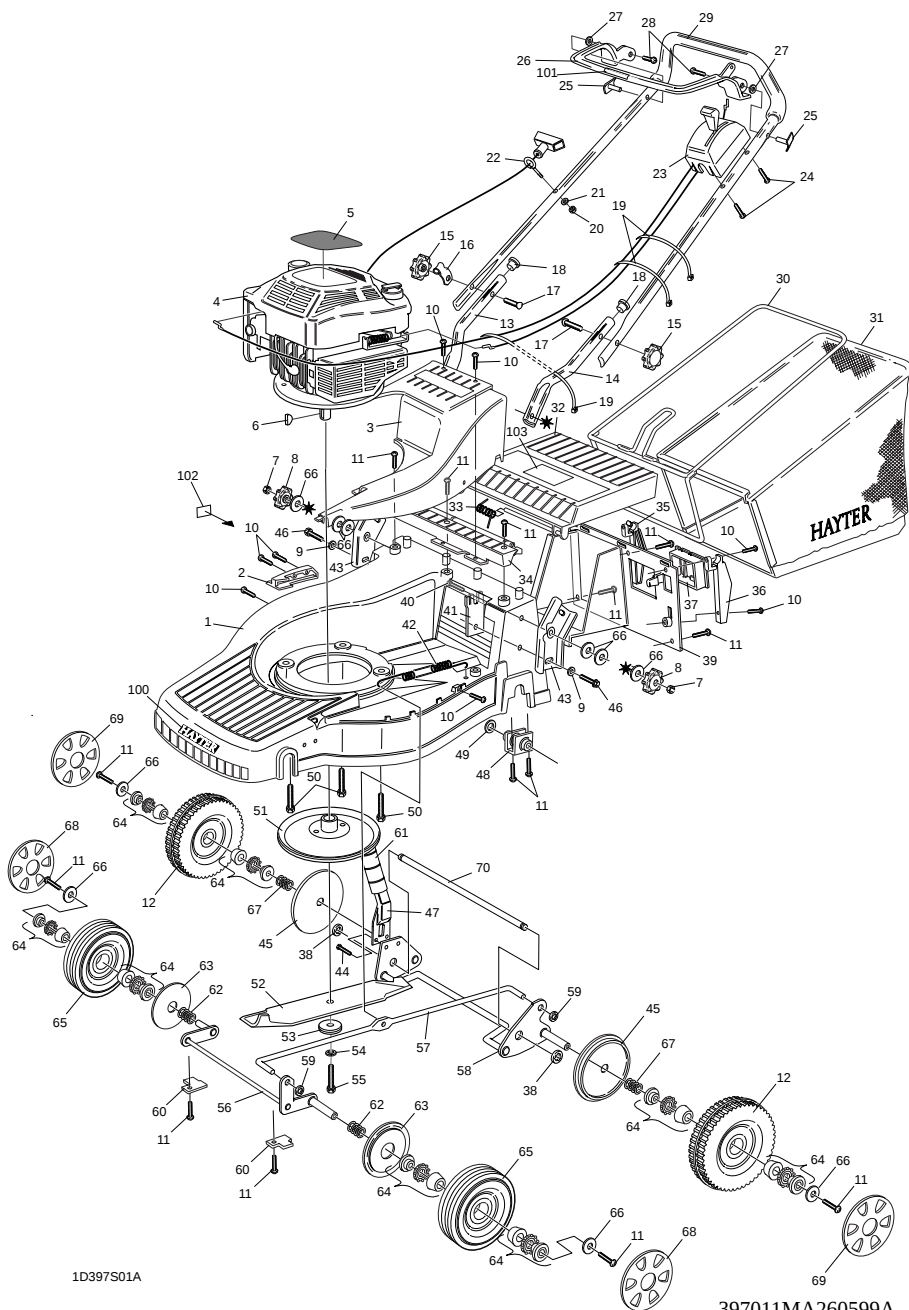

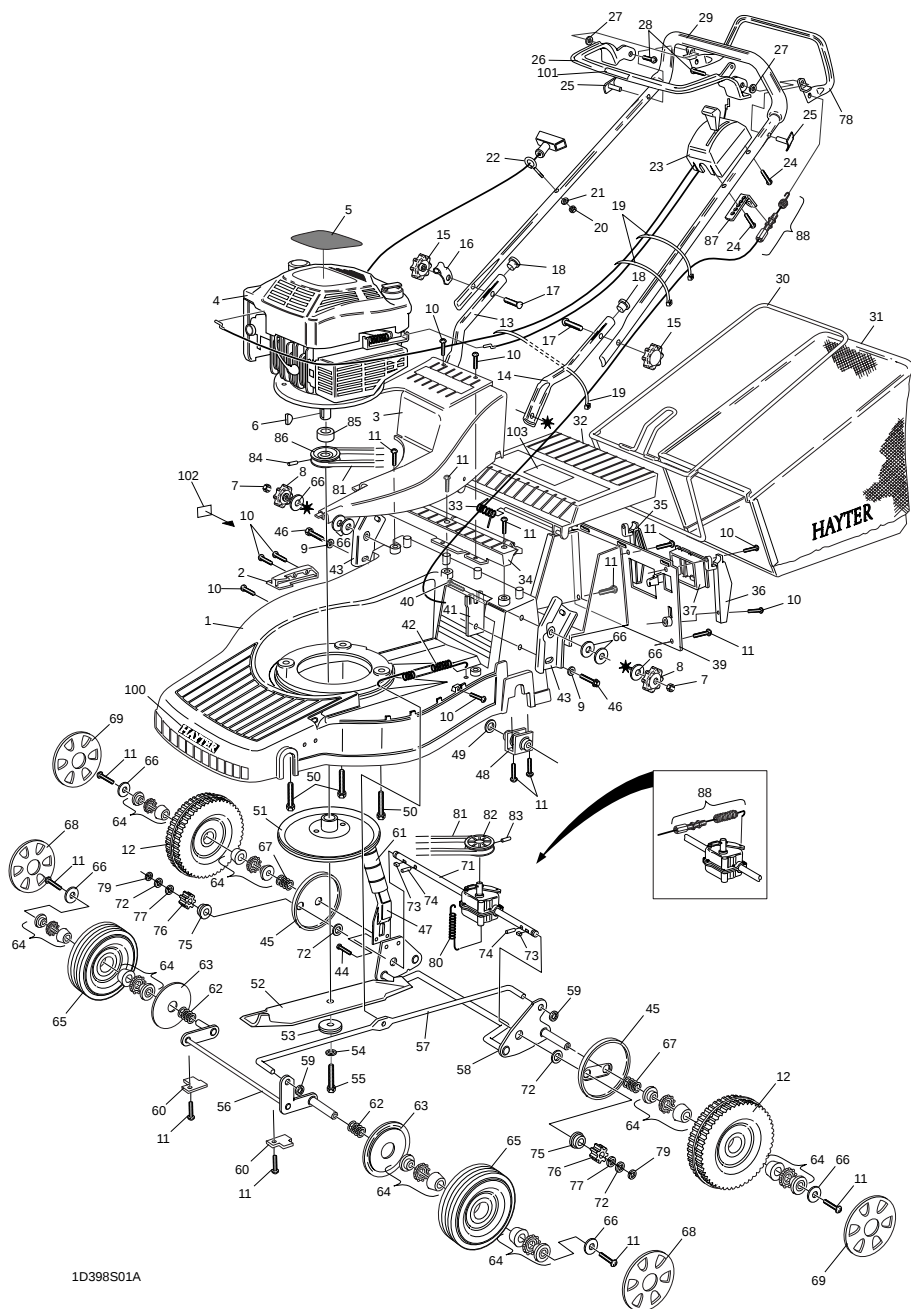

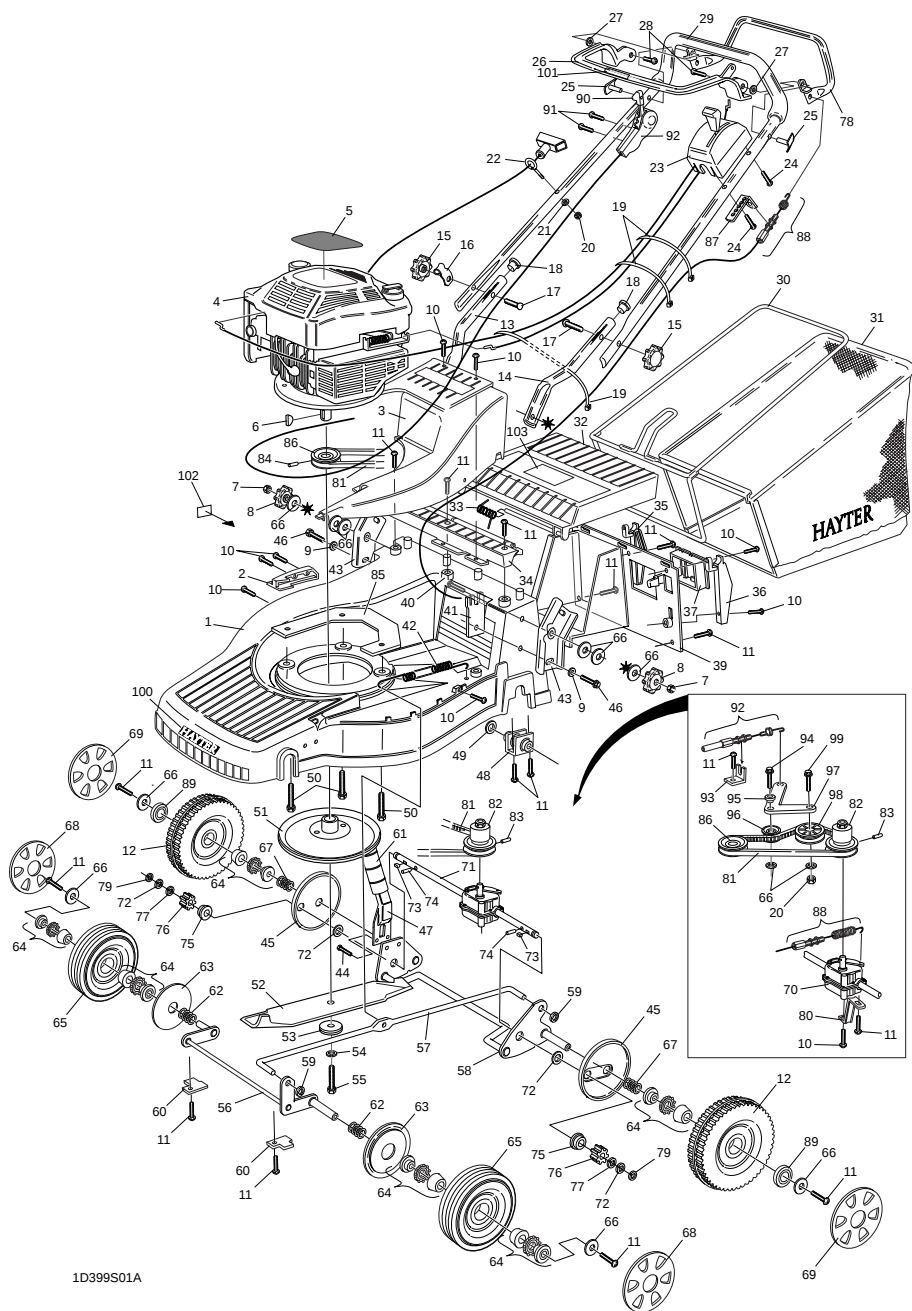

These parts are available through an authorised Briggs & Stratton dealer.




**P/N 5041
999005E**

FUEL ADDITIVE




992030

AIR CLEANER CARTRIDGE

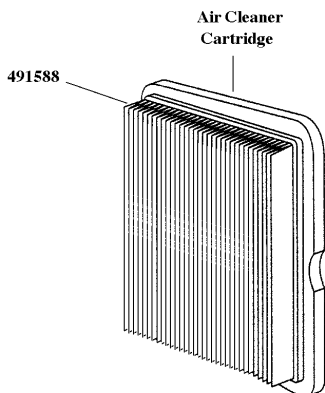


SPARK PLUG

 


802592E

SPARK PLUG WRENCH

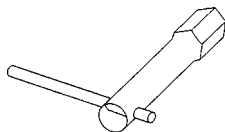

89838

SPARK PLUG TESTER

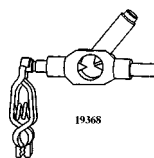

19368

About Your Engine Warranty

Briggs & Stratton welcomes warranty repair and apologizes to you for being inconvenienced. Any Authorized Service Dealer may perform warranty repairs. Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty would not apply if engine damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, warranty is void if the serial number of the engine has been removed or the engine has been altered or modified.

If a customer differs with the decision of the Service Dealer, an investigation will be made to determine whether the warranty applies. Ask the Service Dealer to submit all supporting facts to his Distributor or the Factory for review. If the Distributor or the Factory decides that the claim is justified, the customer will be fully reimbursed for those items that are defective. To avoid misunderstanding which might occur between the customer and the Dealer, listed below are some of the causes of engine failure that the warranty does not cover.

Improper maintenance:

The life of an engine depends upon the conditions under which it operates, and the care it receives. Some applications, such as tillers, pumps and rotary mowers, are very often used in dusty or dirty conditions, which can cause what appears to be premature wear. Such wear, when caused by dirt, dust, spark plug cleaning grit, or other abrasive material that has entered the engine because of improper maintenance, is not covered by warranty.

This warranty covers engine related defective material and/or workmanship only, and not replacement or refund of the equipment to which the engine may be mounted. Nor does the warranty extend to repairs required because of:

1. PROBLEMS CAUSED BY PARTS THAT ARE NOT ORIGINAL BRIGGS & STRATTON PARTS.
2. Equipment controls or installations that prevent starting, cause unsatisfactory engine performance, or shorten engine life. (Contact equipment manufacturer.)
3. Leaking carburetors, clogged fuel pipes, sticking valves, or other damage, caused by using contaminated or stale fuel. (Use clean, fresh, lead-free gasoline and Briggs & Stratton gasoline stabilizer, Part No. 5041.)
4. Parts which are scored or broken because an engine was operated with insufficient or contaminated lubricating oil, or an incorrect grade of lubricating oil (check oil level daily or after every 8 hours of operation. Refill when necessary and change at recommended intervals.) Read "Owner's Manual."
5. Repair or adjustment of associated parts or assemblies such as clutches, transmissions, remote controls, etc., which are not manufactured by Briggs & Stratton.
6. Damage or wear to parts caused by dirt, which entered the engine because of improper air cleaner maintenance, re-assembly, or use of a non-original air cleaner element or cartridge. (At recommended intervals, clean and re-oil the Oil

Foam® element or the foam pre-cleaner, and replace the cartridge.) Read "Owner's Manual."

7. Parts damaged by over-speeding, or overheating caused by grass, debris, or dirt, which plugs or clogs the cooling fins, or flywheel area, or damage caused by operating the engine in a confined area without sufficient ventilation. (Clean fins on the cylinder, cylinder head and flywheel at recommended intervals.) Read "Owner's Manual."
8. Engine or equipment parts broken by excessive vibration caused by a loose engine mounting, loose cutter blades, unbalanced blades or loose or unbalanced impellers, improper attachment of equipment to engine crankshaft, over-speeding or other abuse in operation.
9. A bent or broken crankshaft, caused by striking a solid object with the cutter blade of a rotary lawn mower, or excessive v-belt tightness.
10. Routine tune-up or adjustment of the engine.
11. Engine or engine component failure, i.e., combustion chamber, valves, valve seats, valve guides, or burned starter motor windings, caused by the use of alternate fuels such as, liquefied petroleum, natural gas, altered gasolines, etc.

Warranty is available only through service dealers which have been authorized by Briggs & Stratton Corporation. Your nearest Authorized Service Dealer is listed in the "Yellow Pages" of your telephone directory under "Engines, Gasoline" or "Gasoline Engines," "Lawn Mowers," or similar category.

Briggs & Stratton Engine Owner Warranty Policy

Effective February 1, 1994, replaces all undated Warranties and all Warranties dated before February 1, 1994

LIMITED WARRANTY

"Briggs & Stratton Corporation will repair or replace, free of charge, any part, or parts of the engine that are defective in material or workmanship or both. Transportation charges on parts submitted for repair or replacement under this Warranty must be borne by purchaser. This warranty is effective for the time periods and subject to the conditions provided for in this policy. For warranty service contact your nearest Authorized Service Dealer as listed in the "Yellow Pages" under "Engines, Gasoline," "Gasoline Engines," "Lawn Mowers" or similar category. THERE IS NO OTHER EXPRESS WARRANTY. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO ONE YEAR FROM PURCHASE. OR TO THE EXTENT PERMITTED BY LAW AND ALL IMPLIED WARRANTIES ARE EXCLUDED. LIABILITY FOR CONSEQUENTIAL DAMAGES UNDER ANY AND ALL WARRANTIES ARE EXCLUDED TO THE EXTENT PERMITTED BY LAW. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, AND SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU. This warranty gives you specific legal rights and you may also have other rights which vary from state to state."

Briggs & Stratton Corporation

F. P. Stratton, Jr.
F. P. Stratton, Jr.
Chairman and Chief Executive Officer

WARRANTY PERIOD

ENGINES	WITHIN U.S.A. AND CANADA		OUTSIDE U.S.A. AND CANADA	
	CONSUMER USE*	COMMERCIAL USE*	CONSUMER USE*	COMMERCIAL USE*
All Vanguard™ engines.	2 year - engine / Lifetime** - Magneton® Ignition			
All Diamond Plus®, Europa™, Industrial Plus™ and all VC®.	2 year	1 year	2 year	1 year
Quantum® and Diamond Power®.	2 year	90 days	2 year †	90 days
All standard 2 through 18 HP engines installed on lawn mowers, riders, edgers, chippers, shredders, tillers, and all Sno/Gard engines.	2 year	90 days	1 year	90 days
All other standard 2 through 18 HP engines.	1 year	90 days	1 year	90 days

* For purposes of this warranty policy, "consumer use" means personal residential household use by the original retail consumer. "Commercial use" means all other uses, including use for commercial, income producing or rental purposes. Once an engine has experienced commercial use, it shall thereafter be considered as a commercial use engine for purposes of this warranty. Engines used in competitive racing or on commercial or rental tracks are not warranted.

** Lifetime limited warranty of the Magneton® ignition covers parts and labor for the first five (5) years from the date of purchase; thereafter only parts. "Lifetime" means lifetime of the engine in the hands of the original purchaser.

† One (1) year in Australia, New Zealand, Middle East and Africa.

NO WARRANTY REGISTRATION CARD IS NECESSARY TO OBTAIN WARRANTY ON BRIGGS & STRATTON ENGINES.
YOU MUST SAVE THE PURCHASE RECEIPT. A PROOF OF PURCHASE DATE WILL BE REQUIRED TO OBTAIN WARRANTY.

Briggs & Stratton Engines Are Made Under One Or More Of The Following Patents: Design D-247,177 (Other Patents Pending)											
5,320,796	5,265,700	5,197,422	5,105,351	5,040,900	4,990,357	4,895,119	4,520,288	4,355,253	4,168,288	DES. 308,872	
5,271,383	5,243,878	5,191,864	5,086,890	5,016,588	4,977,879	4,819,593	4,453,507	4,270,509	DES. 309,458	DES. 308,871	
5,269,713	5,197,425	5,150,874	5,040,644	4,996,956	4,971,219	4,694,792	4,430,984	4,233,534	DES. 309,457		

Machine Serial No. :

Engine Serial No. :