

Harrier 48 BBC

CODE
493E
Auto Drive
(Variable Speed)

OWNER'S HANDBOOK

(English Version)


CODE FROM SERIAL NO:
493E 270000001
ISSUE 01.08.07

PART NUMBER: 111-1240 (A)

MAIN FEATURES / SPECIFICATIONS

Main Features

1. Spark Plug Lead.
2. Engine Cover.
3. Air Cleaner.
4. Fuel Filler Cap.
5. Oil Filler Cap and Dipstick.
6. Serial No. Label.
7. Handlebar Securing Knob.
8. Engine Start-Grip.
9. Throttle Control/Engine Stop
10. BBC Control Lever.
11. Handlebar.
12. Ground Drive Clutch Lever
13. Blade Brake Clutch Lever
14. Variable Speed Control (see note)
15. Grassbag Assembly.
16. Grassbag Cover.
17. Deflector.
18. Height of Cut Adjuster
19. Exhaust Guard

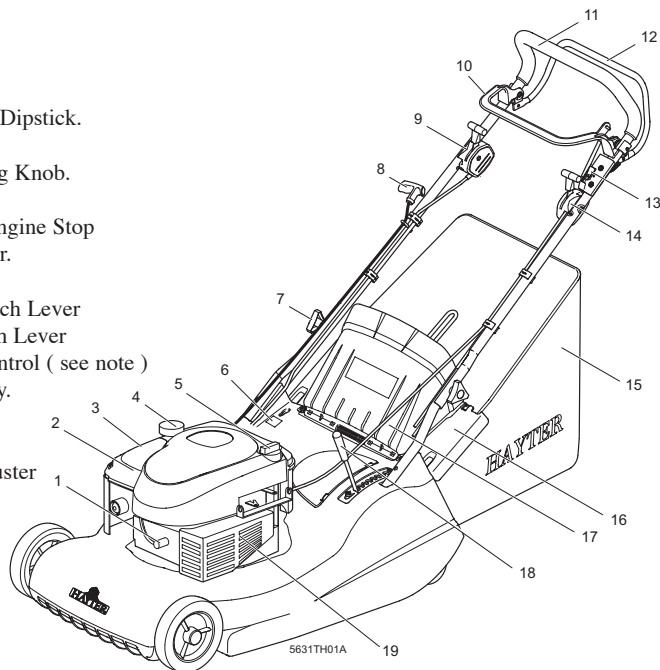

Note: Item 14 should only be operated whilst the engine is running or the cable will be damaged.

Specifications

Code	493E
Engine	Briggs & Stratton
Engine type	Series 650 124T02-0162-B1
Engine/Cutterblade speed	2800 rpm
Fuel type	Unleaded petrol
Fuel capacity	1.5 litres
Oil type	SAE 30 engine oil
Oil sump capacity	0.6 litres
Cutting width	480mm
Cutting height	13 - 60mm
Overall dimensions	1,510 x 590 x 1080mm
Dry Weight	49.5 Kg

HAYTER
MAKERS OF THE FINEST MOWERS

1ST Year (12 months)

We certify that this service has been
carried out by an Authorised Hayter
Service Dealer

Date: _____

DEALER STAMP

HAYTER
MAKERS OF THE FINEST MOWERS

1ST Year (12 months)

Owner's Name: _____

Serial Number: _____

Date: _____

DEALER STAMP

Note for dealer: Please retain this voucher for your records.

HAYTER
MAKERS OF THE FINEST MOWERS

2nd Year (24 months)

We certify that this service has been
carried out by an Authorised Hayter
Service Dealer

Date: _____

DEALER STAMP

HAYTER
MAKERS OF THE FINEST MOWERS

2nd Year (24 months)

 
 
 
 
Owner's Name: _____

Serial Number: _____

Date: _____

DEALER STAMP

Note for dealer: Please retain this voucher for your records.



CONTENTS

1.2 Main Features/Specifications

1.5 Contents

1.6 Introduction

1.7 Warranty

1.8 - 1.11 Safety Precautions

- 1.8 - *Training*
- 1.8 - 1.9 - *Preparation*
- 1.9 - 1.10 - *Operation*
- 1.10 - 1.11 - *Maintenance and Storage*
- 1.11 - *Safety Symbols*
- 1.11 - *Decal Symbols*

1.12 Assembling the Mower

- 1.12 - *Delivery Checklist*
- 1.12 - *Handlebar*
- 1.12 - *Grassbag Attachment*

1.13 Before Starting the Mower

- 1.13 - *Prevent Engine Damage*
- 1.13 - *Oil Type*
- 1.13 - *Check Oil Level*
- 1.13 - *Fuel Type*

1.14 - 1.19 Operating The Mower

- 1.14 - *Controls*
- 1.14 - *Starting*
- 1.15 - *Engaging Cutterblade Drive*
- 1.15 - *Forward Travel*
- 1.15 - *Turning*
- 1.15 - *Stopping*
- 1.16 - *Slopes*
- 1.16 - *Height of Cut*
- 1.16 - *Before Mowing*
- 1.16 - *Grassbag*
- 1.17 - *Without Grass Collection*
- 1.17 - *Heavy Growth*
- 1.17 - *Blade Brake Clutch*
- 1.17 - *Non-Grassed Areas*

1.18 - 1.19 - *Lawn Care Calendar - Guide Only*

- 1.19 - *Lawn Stripes*

1.20 Maintenance Schedule

1.21 - 1.28 Mower Maintenance

- 1.21 - *Engine*
- 1.21 - *Throttle Cable Adjustment*
- 1.21 - *Carburettor Adjustments*
- 1.22 - *Oil Service*
- 1.22 - *Air Cleaner Service*
- 1.23 - *Spark Plug Service*
- 1.23 - *Keeping Engine Clean*
- 1.23 - *Grassbag*
- 1.24 - *Deck Housing*
- 1.24 - *Securing Nuts and Bolts*
- 1.24 - *Clutch Cable Adjustment*
- 1.25 - *Lubrication*
- 1.25 - *Cutterblade Removal*
- 1.26 - *Cutterblade Assembly*
- 1.26 - *Cutterblade Sharpening*
- 1.27 - *Storage*

1.28 - 1.29 Trouble Shooting

1.31 Declaration of Conformity

1.32 - 1.36 Parts List

- 1.32 - *Parts List - Upper*
- 1.33 - *Exploded View - Upper*
- 1.34 - 1.35 - *Parts List - Lower*
- 1.36 - *Exploded View - Lower*

1.37 - 1.39 Notes

1.40 Customer Info/Notes

INTRODUCTION

Thank you for purchasing a **Hayter** mower. The following pages are designed to help you gain safe and efficient service from your machine.

IMPORTANT: This 'Owners Handbook' should be regarded as part of the mower as it gives essential information regarding mower safety, operation, maintenance and specifications. Read and understand this handbook prior to operating your mower for the first time. Make sure you are familiar with all the controls and points of regular maintenance. If you have any doubts, consult your local **Hayter** authorised dealer who will be pleased to give you assistance.

IMPORTANT: This mower is designed solely for use in a domestic grass cutting environment. Use in any other way is considered as contrary to the intended use. Compliance with and strict adherence to the conditions of operation, service and repair as specified in this handbook also constitute essential elements of the intended use.

This mower should be operated, serviced and repaired only by persons who are familiar with its particular characteristics and who are acquainted with the relevant safety procedures.

The safety precautions listed in this handbook and all other generally recognised regulations on safety must be observed at all times.

Any arbitrary modifications carried out to this machine may relieve Hayter Limited of liability for any resulting damage or injury.

Hayter mowers are robustly constructed and designed for efficient economical performance under normal mowing conditions. Correct operation and maintenance will ensure a long and satisfactory service life. Prior to despatch from our factory every effort is made to ensure that your mower is delivered in perfect condition.

Throughout this handbook all references to **left** and **right** are as viewed from behind the handlebar, in the direction of forward travel.

This handbook is based on information available at the time of publication.

HAYTER LIMITED reserve the right to amend product specifications without prior notification.

WARRANTY

LIMITED WARRANTY

Hayter Limited warrants to the original user/purchaser that this unit shall be free from defects in material and workmanship under normal use and service for a period of **three years** from the date of purchase. The manufacturer of major proprietary components ie. engines, gearbox / transaxle (where applicable) furnish their own warranty and services are provided through their authorised network. To qualify for the full benefit of the warranty, the warranty registration card **must** be returned within **14 days** of purchase. Subject to the conditions and exclusions noted in this limited warranty, we shall at our option, repair or replace any warranted part during the applicable period. If you are in doubt or experience any difficulty, please consult a Hayter Authorised Service Dealer for clarification.

To qualify for the extended warranty (second and third year) of the **three year limited warranty** the machine **must** have annual services carried out by an Authorised Hayter Service Dealer. These chargeable services should be carried out within 12 and 24 months of the date of purchase.

Excluded from the extended warranty period are those items which are subject to normal wear and tear e.g. tyres, wheels, cutterblades, belts, cables, grassbags, sweeper/brushes, batteries and other consumable wearing parts.

All consumer machines which are fitted with a **genuine** Hayter friction disc as original equipment before use, are covered by a **Lifetime Warranty** against the engine crankshaft bending. **Note:** friction washers, blade brake clutch (B.B.C) units and other such devices are not applicable. Only machines fitted with a **genuine** Hayter friction disc, which are used in accordance with the recommended operating and maintenance procedures, are covered.

This warranty does not apply to any unit that has been tampered with, altered, misused, abused or used for hire, and will become invalid if non genuine Hayter parts are fitted. This warranty does not cover minor mechanical adjustments unless they are due to defective material or workmanship. Consult the Owner's Handbook or a Hayter Authorised Service Dealer for assistance when making these adjustments.

A warranty period of 90 days applies to machines used for commercial purposes.

To make a warranty claim, return the unit to a Hayter authorised dealer along with proof of purchase stating the machine serial number and date of purchase. The service receipt(s) or this Owners Handbook with the 1st/2nd year service boxes fully completed, must be produced as proof of entitlement to the extended warranty period. Subject to the conditions and exclusions in this limited warranty, the authorised dealer will, at our option, repair or replace any warranted part within the duration of the warranty period.

This limited warranty gives you specific legal rights and is in addition to any statutory rights to which you may be entitled and your statutory rights are not affected by this warranty. If you need additional information concerning this written warranty, or assistance in obtaining services, please write to : **HAYTER LIMITED, Service Department, Spellbrook, Bishop's Stortford, Hertfordshire CM23 4BU**

UK ONLY: Details of your local **Hayter** authorised dealer are contained in Yellow Pages and the Hayter website www.hayter.co.uk or contact contact:- Freephone 0800 616298.

SAFETY PRECAUTIONS

Safety Alert Symbol



This safety alert symbol indicates important safety messages. When you see this symbol be alert to the possibility of injury. Carefully read the following and inform others.

Your mower is perfectly safe if used correctly. Failure to observe the following precautions may result in serious injury.

Training



Before using the mower read the owners handbook carefully. Pay particular attention to the safety precautions. Ensure that you are familiar with the controls and the proper use of the equipment. Learn how to stop the mower quickly in an emergency.

Never allow children or people unfamiliar with these instructions to use the mower.

Never mow while people, especially children, or pets are nearby.

Keep in mind that the user is responsible for accidents or hazards occurring to other people or their property.

Preparation



While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing sandals.

Thoroughly inspect the area where the mower is to be used and remove all objects which may be thrown by the machine.

WARNING: Petrol is highly flammable.

- Store fuel in containers specifically designed for this purpose.
- Before starting the engine add fuel outdoors only. Never remove the cap from the fuel tank or add petrol while the engine is running or when the engine is hot. Allow the engine to cool for at least two minutes before refuelling. Do not smoke while refueling.
- Do not attempt to start the engine if petrol is spilled or a smell of petrol is present. Move the mower away from the area of spillage and avoid creating any source of ignition until petrol vapours have dissipated.

Replace faulty silencers.

SAFETY PRECAUTIONS

Preparation

- Always use fresh fuel. Stale fuel can block the carburettor and cause leakage.
- Replace fuel tank and oil tank caps securely.

A damaged cutterblade or loose fixing bolt are major hazards. Before use, always visually inspect the cutting mechanism to ensure that it is in good condition. A damaged cutterblade must be replaced immediately with a genuine Hayter replacement part.



Operation

Do not operate the engine in a confined space where exhaust fumes (carbon monoxide) can collect. Refuel outdoors only and do not smoke while refuelling.

Always pull the starter cord slowly until resistance is felt. Then pull the cord rapidly to avoid kickback and prevent hand or arm injury.

Mow only in daylight or good artificial light.

Avoid using the mower on wet grass, where feasible.

Always be sure of your footing on slopes.

Walk, never run.

Mow across the face of slopes, never up and down.

Exercise extreme caution when changing direction on slopes.

Do not mow excessively steep slopes of more than 20 degrees.

Use extreme caution when reversing or pulling the mower towards you.

Stop the engine before moving the mower across areas other than grass.

Never operate the mower unless the guards are securely in position and in good condition.

Do not change the engine governor settings or overspeed the engine.

Disengage the rear roller drive clutch before starting the engine.

Start the engine carefully, with feet well away from the cutterblade.



SAFETY PRECAUTIONS

Operation



Do not tilt the mower when starting the engine.

Do not put hands or feet near or under rotating parts.

Never pick up or carry the mower while the engine is running.

Never lift the rear deflector while the engine is running.

Never touch the exhaust/exhaust guard or cooling fins when the engine is hot.

Stop the engine and disconnect the spark plug lead:

- Before clearing blockages or unclogging the discharge chute.
- Before cleaning/checking or working on the mower.
- After striking a foreign object. Inspect the mower for damage and ensure necessary repairs are made before re-starting.
- If the mower starts to vibrate abnormally (check immediately).

Stop the engine:

- Whenever you leave the mower.
- Before refuelling.
- Reduce throttle control setting during engine shutdown.

Maintenance & Storage



Keep all nuts, bolts and screws tight to ensure that the equipment is in safe operating condition.

Frequently check fuel lines and fittings for cracks or leaks and replace if necessary.

Never check for a spark when the spark plug is removed. (Use approved tester)

Inspect the exhaust periodically and replace if worn or leaking.

Never crank the engine with the spark plug removed.

Never start the engine with the air-cleaner or air-cleaner cover removed.

Never store the mower with petrol in the tank within an enclosed area where fumes may reach an open flame or spark.

1.10



Caution: Use extreme care when removing spring loaded components, Height of Cut Adjuster Mechanism, Two Piece Connecting Rod.

SAFETY**PRECAUTIONS****Maintenance & Storage**

Allow the engine to cool before storing in any enclosure. To reduce the fire hazard, keep the engine and the surrounding deck area free of grass, leaves, or excessive grease.

Check the rear deflector and grassbag frequently for wear or deterioration. Replace worn or damaged parts for safety.

If the fuel tank has to be drained, this should be done outdoors and when the engine is cool.

Wear strong work gloves when removing and reassembling the cutterblade.

Always replace worn or faulty parts with genuine Hayter parts.

This machine contains spring loaded assemblies which could cause a hazard when disassembled and reassembled. Maintenance should only be carried out by a Hayter authorised dealer.

**Safety Symbols**

Safety Alert - Be aware to the possibility of injury.




Carefully read the Owners Handbook before using the machine.



Danger of severing toes or fingers in cutting mechanism.




Stop engine and remove spark plug lead before working on the mower.

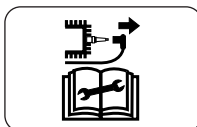

Danger of being hit by thrown objects.



Keep bystanders at a safe distance from the mower.

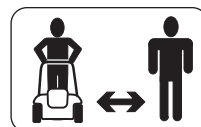**Information Symbols**

 
 
Cutterblade Engage

Cutterblade Disengage

Height of Cut Adjustment (Symbol)


Throttle Control (Symbols)

Variable Speed Control (Symbol)



ASSEMBLING THE MOWER

Delivery Checklist

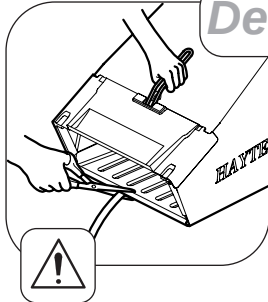


Remove the mower from the packaging and check that the following items have been supplied correctly. If any items are missing contact your local Hayter dealer.

1. Engine Handbook.
2. Grassbag.

To prevent accidents cut off the long ribbon attached to the grassbag and discard.


Handlebar

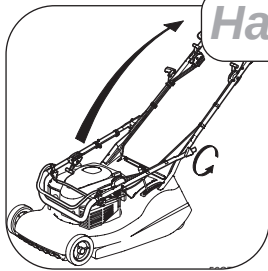

Unscrew the handlebar securing knobs sufficiently to allow the handlebar to pivot. Hold the engine stop lever in towards the handlebar and unfold the handlebar to the operating position, before releasing. Tighten both handlebar knobs to secure in position.

Take care to ensure that the control cables do not become snagged at the pivot point.

Grassbag Attachment

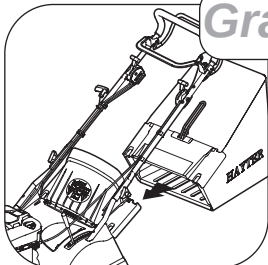

Raise the rear deflector, lower the grassbag and hook in position. Lower the deflector to rest on the grassbag.

BEFORE STARTING THE MOWER

Prevent Engine Damage


To prevent engine damage the engine is shipped without oil or petrol. The engine must be filled with the correct grade of oil and petrol before starting the engine.



Oil Type

Always use high quality detergent oil classified SAE 30 oil. Never use additives with recommended oil.


To prolong the life of your engine it is important that the oil is changed after the first 5 hours of use - refer to 'Maintenance Schedule'.

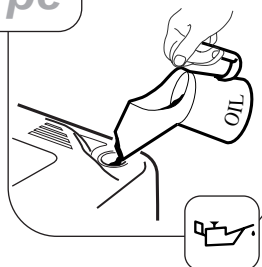

Check Oil Level

Clean around the oil filler cap before removing. With the mower on a level surface, unscrew and remove the oil filler - dipstick. Wipe oil from it with a clean cloth. Screw the oil filler - dipstick back in place, then unscrew and remove it to check the oil level.


The oil level is correct when it is at the **full** mark on the dipstick.
DO NOT OVERFILL.

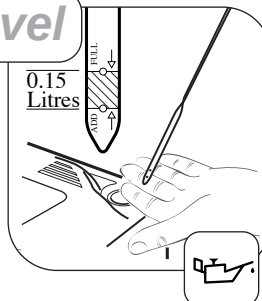

Fuel Type


Always use clean, fresh unleaded petrol. Purchase fuel in quantities that can be used within 30 days. Never mix oil with petrol. For added engine protection Briggs & Stratton recommend the use of their fuel additive which is available from an authorised Briggs & Stratton service dealer.

Fill to base of neck to allow for fuel expansion. Do not overfill the fuel tank.

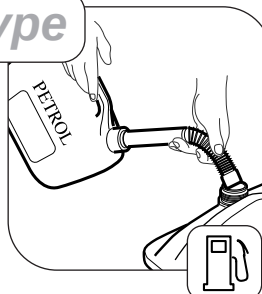

OPERATING THE MOWER


Controls

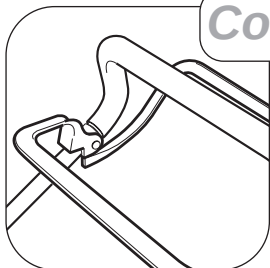

Operate all control levers several times and ensure that the cables move freely. Check that the cutterblade stop and ground drive clutch levers return freely to their rest position when released. Whilst operating the engine throttle mechanism slight resistance should be felt when moving the lever to the 'choke' position.


IMPORTANT: To avoid damage to the cable the Variable speed Control should only be operated whilst the engine is running.

Starting - Step 1

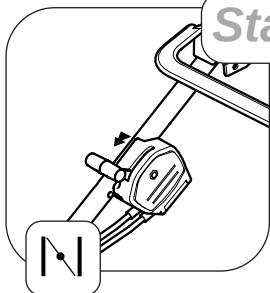

Move the throttle control lever to the 'choke' position before starting a cold engine. Move the throttle control lever to the 'fast' position before starting a warm engine.

Step 2

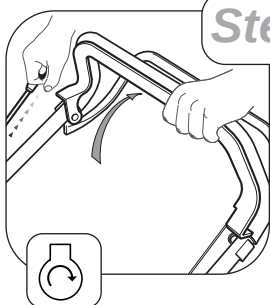

Stand behind the mower and hold the handlebar with your left hand. With your right hand hold the engine start - grip and pull slowly until resistance is felt, then pull rapidly to crank the engine. Carefully return the start grip to the storage position when the engine starts. If the engine does not start after 5 attempts - refer to "Trouble Shooting".

Note: The cutterblade is not engaged at this stage.


The engine stop lever must be held firmly against the handlebar to start and keep the engine running. If the engine stop lever is released the engine will stop.

OPERATING THE MOWER

Step 3

Allow the engine to warm up and move the throttle lever to the 'fast'  position after starting a cold engine.

To prevent damage never pull the engine start grip when the engine is running.

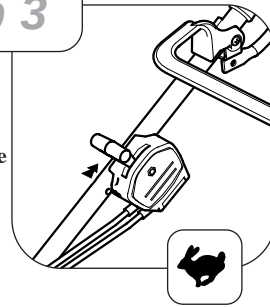

Engaging Cutterblade Drive

Always make sure the stop lever is fully forward.


- (1) To engage the (BBC) cutterblade first push the switch actuating lever downward.
- (2) Pull the stop lever back against the handlebar at the same time, and hold in position.

Disengage Cutterblade Drive.


- (1) Release the stop lever and it will return to its rest position.

Emergency Stop.

If the cutterblade drive mechanism fails stop the engine.

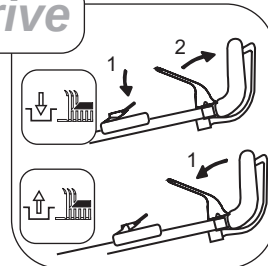

OPERATING THE MOWER

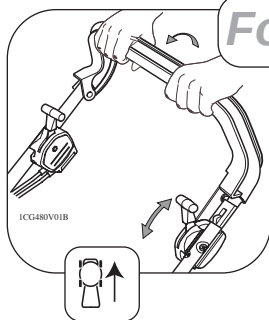

Forward Travel

Hold the handlebar and operate the ground drive clutch lever to power the mower in a forward direction.

When the ground drive clutch lever is disengaged the mower may be pushed. This feature is useful when mowing in confined areas.

Ground speed may be adjusted by operating the speed variator control. Push forward to slow down and pull back to speed up. Only operate the lever with the engine running to prevent damage.

If the cutterblade stop lever is released the cutterblade will stop.



Turning

To make a wide turn steer the mower with the handlebar in the direction required.

To make a tight turn release the ground drive clutch lever, apply downward pressure on the handlebar to raise the front wheels just above ground level and steer in the required direction.


To prevent accidents do not raise the front of the mower excessively when making a turn. Never raise the rear of the mower when the engine is running.

OPERATING THE MOWER

Stopping


Release both ground drive clutch lever and the cutterblade stop lever. Pull the throttle lever to the rear most position.

Emergency stop If the engine fails to stop, disconnect the spark plug lead.

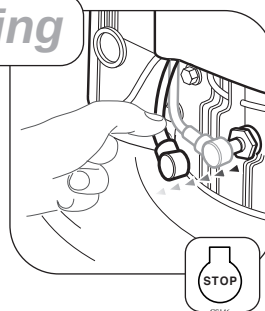

Slopes


To prevent engine damage do not use the mower on slopes greater than 20 degrees.

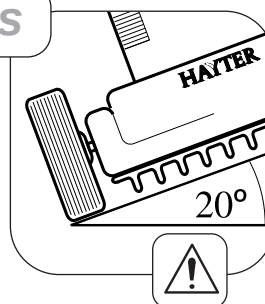

Height of Cut

To adjust the height of cut: Grip the lever and pull sideways to disengage it from the locking notch, then push forwards to lower or pull backwards to raise the height of cut. Finally release the lever at the required position and ensure it locks firmly into one of the eight setting notches.

Always select a height of cut to suit operating conditions. Aim to prevent engine overloading and blockages by avoiding low cuts in long grass conditions. Be prepared to make two cuts when the grass is long.

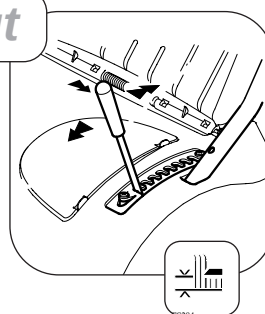


OPERATING THE MOWER

Before Mowing



To prevent accidents, thoroughly inspect the area and remove all objects which when contacted by the mower cutterblade could become dangerous projectiles. Inspect the area for hidden obstructions which when contacted by the cutterblade could risk health and safety or result in damage to the mower. Remember the location of these obstructions and ensure that you mow around them.


Grassbag

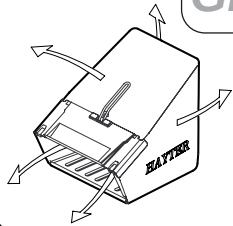

Raise the rear deflector and lift the grassbag and lower the rear deflector to rest against the rear of the mower.

To empty the grassbag, pour out the grass clippings and shake the grassbag vigorously to clean the airways. Good grass collection depends on good air flow through the grassbag. When collecting grass clippings it is important that the grassbag is emptied regularly to prevent blockages and engine overloading.

Without Grass Collection

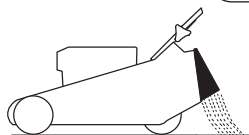

CS386


Remove the grassbag and operate the mower with the rear deflector in the closed position.

OPERATING THE MOWER

Heavy Growth

Areas of heavy growth should be mown without collecting the clippings. If collection is required, first mow the area without the grassbag at the maximum height of cut setting. Allow the grass clippings to dry out and then mow the area at the maximum height of cut setting with the grassbag fitted. Reduce the height of cut and mow the area again as necessary until the required finish is obtained.


To prevent damage to your lawn do not remove more than one third of grass height in one cut.

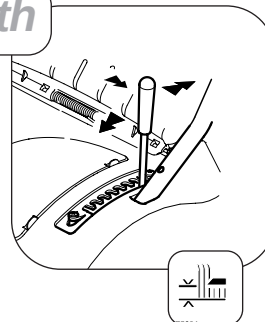

Blade Brake Clutch


A device in the blade brake/clutch helps minimise damage to the cutting mechanism when a hidden obstruction or overload is encountered. When the obstruction or overload is removed, the device will automatically reset.

Always stop the engine when a hidden obstruction or excessive vibration is encountered. Disconnect the spark plug lead and examine the cutting mechanism. ALWAYS replace a damaged cutterblade - refer to "Maintenance".

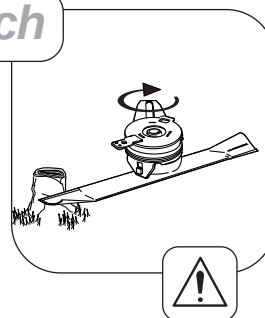

Non-Grassed Areas

When moving the mower across non-grassed areas, stop the cutterblade and set the mower to the maximum height of cut to protect the cutting mechanism.

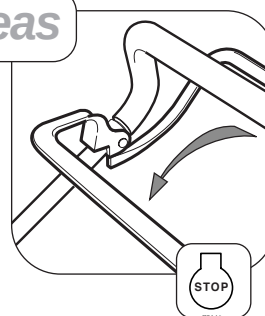

LAWN CARE CALENDAR

To be used as a guide only.

January

There is very little work to do this month apart from brushing away leaves. Keep off the grass if frozen or waterlogged.

February

Rake the grass thoroughly. Spike the lawn to aerate and stimulate soil organisms and root growth and apply lawn sand if necessary.

March

The yearly lawn work programme really starts this month. As soon as the ground conditions are suitable, the first cut can be made. The first cut should merely "top" the grass as close cutting at this stage could result in severe yellowing or browning. Two cuts are generally sufficient this month.

April

Mow often enough to stop grass growing away. Dig out patches of coarse grass or resistant weed. Re-seed bare patches.

May

Keep mowing increasing the frequency as required. Treat with selective weed killers or combined weed/feed preparations if you did not feed the lawn in April.

June

Summer mowing should now be under way. It should be necessary to mow the lawn twice a week. Raking before mowing is important this month as the combined action keeps runners of clover under control. Water the grass if necessary, and remember to soak thoroughly.

July

Treat the grass with the second application of fertiliser or weed killer/fertiliser. Water when necessary and rake occasionally. As a general rule the grass clippings should be removed each time you mow. If weather conditions are dry and hot and the grass is weed free, leave the clippings on the lawn to help maintain ground moisture.

LAWN CARE CALENDAR

August

Keep mowing regularly and watering as necessary. Fill any cracks caused by drought with a mixture of sharp sand and soil. In dry weather conditions leave the grass longer to help retain ground moisture.

September

Raise the height of cut to allow the grass to thicken and protect the roots from the winter frost and snow.

October

Rake out the thatch from the turf and spike the lawn to assist in drainage. Brush in peat and sharp sand.

November


Use a stiff broom to disperse worm casts before mowing. Keep turf free from leaves.

December

Apart from brushing away leaves, December is a slack end of a busy year. Keep off the lawn if it is very wet or frozen.

Lawn Stripes

The way to achieve a neat striped effect is for the lawn being cut in parallel stripes, alternate stripes being mown in opposite directions. A much more important routine is to cut at right angles to the line of the previous mowing. If the work has been carried in a north-south line, then the next cutting should be in an east-west direction. The cross-cutting keeps down the coarse weed grasses.

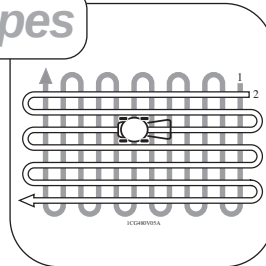

To prevent grass damage do not remove more than one third of the grass height in one cut.

MAINTENANCE SCHEDULE

Follow the hourly or calendar intervals, whichever occurs first. More frequent service will be required if working for prolonged periods under dusty, dry conditions, or when airborne debris is present or after extensive operation cutting tall, dry grass.

First 5Hrs

- After the very first five hours change the engine oil

Daily

- Check the oil level
- Remove grass debris from around the engine, exhaust/exhaust guard, air ways in the top cowl and underside of the deck housing.
- Remove grass debris from the grassbag and check for signs of damage.
- Check the condition of guards and safety devices.
- Check condition of cutterblade.

25Hrs or Every Season

- Change the engine oil if continuously operating under heavy load or high ambient temperature.
- Service the air cleaner.
- Lubricate wheels, pivot points and linkages and grease the inner control cables at point of entry and exit from their outer casing.
- Check the clutch cable adjustment.
- Sharpen the cutterblade.

50Hrs or Every Season

- Change the engine oil.

100Hrs or Every Season

- Clean the engine cooling system. Clean more often under dusty conditions or when airborne debris is present or after prolonged operation whilst cutting tall, dry grass.
- Replace the spark plug.


MOWER MAINTENANCE

To prevent accidents stop the engine and disconnect the spark plug lead before attempting to carry out maintenance procedures on the mower.




Engine

1. Air Cleaner
2. Fuel Cap
3. Start Grip
4. Cover
5. Oil fill/Dipstick
6. Exhaust Guard
7. Exhaust
8. Spark Plug / Lead
9. Carburettor

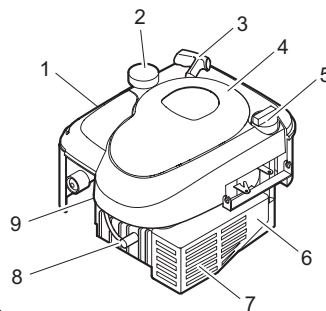

Throttle Cable Adjustment

Loosen casing clamp screw (1) and move the governor lever (2) in the direction of screw (1) as far as possible. Move the throttle control to the choke position. Tighten casing clamp screw.

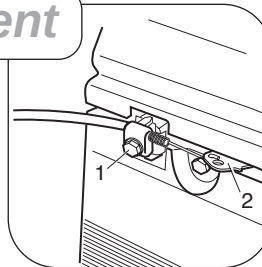


Carburettor Adjustments

Should only be made by an authorised Briggs & Stratton dealer. Under no circumstances should the engine be adjusted to run at a speed in excess of that shown on the Declaration of Conformity.

MOWER MAINTENANCE

Oil Service

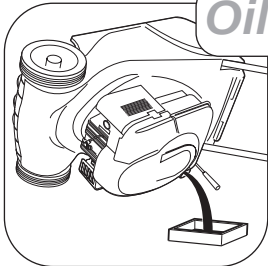


Check the oil level daily before starting the engine and ensure that the correct oil level is maintained. Refer to-'Before Starting the Mower' for oil checking and filling instructions.

Change the engine oil after the first 5 hours of operation and thereafter according to the 'Maintenance Schedule':-

1. Drain fuel by running the engine until the fuel tank is empty.
2. Remove the spark plug lead.
3. Allow the engine to cool.
4. Drain the oil while the engine is warm (not hot).
5. Tip the mower over on to its left hand side thus ensuring that the air cleaner is kept uppermost **to prevent engine damage.**
6. Remove the oil filler dipstick and drain the oil into a suitable container.
7. Refill with new oil of the recommended SAE viscosity grade. (Refer to-'Before Starting the Mower')

Air Cleaner Service

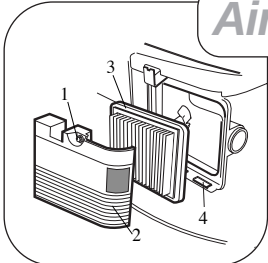

To service the air cleaner, loosen screw (1) and remove cover (2).

Remove cartridge (3) and clean by tapping gently on a flat surface. If very dirty, replace.

- Do not use petroleum solvents.
- Do not use pressurised air.
- Do not oil the cartridge.


After servicing, install the cartridge into the cover. Insert the tabs on the bottom of the cover into the slots in the bottom of the base (4). Tilt the cover upwards and securely tighten the screw to the base.

MOWER MAINTENANCE


Spark Plug Service

Use only Briggs & Stratton spark tester (1) to check for a spark as shown in the diagram.

Replace the spark plug every 100 hours or every season, whichever occurs first. A spark plug wrench is available from any authorised Briggs & Stratton service dealer.

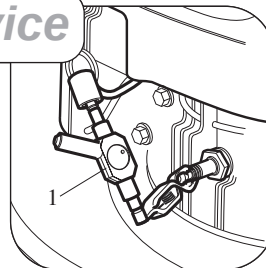


Check the spark plug gap with a feeler gauge and set at 0.76mm.

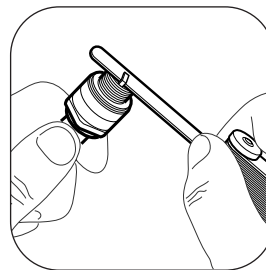

Keeping Engine Clean

Remove all grass and debris from the engine including the exhaust/exhaust guard, the air ways in the top cowl and the surrounding deck areas on a daily basis after use. Never spray the engine with water during cleaning. Water can contaminate the fuel. Always clean with a brush or compressed air.

Grass and debris may clog the engine's air cooling system especially after prolonged operation while cutting tall, dry grass. The internal cooling fins and surfaces may require cleaning to prevent overheating and engine damage. We recommended that this service be carried out by an authorised Hayter Service dealer.

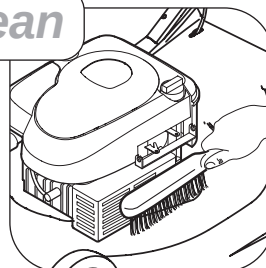

Grassbag

Remove grass debris from the grassbag immediately after use and check its condition for signs of damage.


To prevent accidents replace a damaged grassbag immediately.



1.25

MOWER MAINTENANCE

Deck Housing

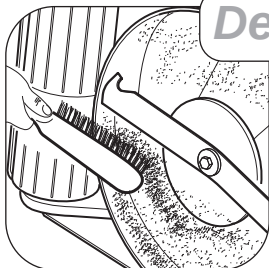

Remove grass debris from the top and underside of the deck housing immediately after use.


Fertilisers and top dressings are particularly corrosive. Thoroughly clean the mower deck immediately after use on treated grass and store well away from corrosive materials.

Securing Nuts & Bolts




Regularly check that all securing nuts and bolts are tight. Replace missing or damaged items immediately.

Clutch Cable Adjustment

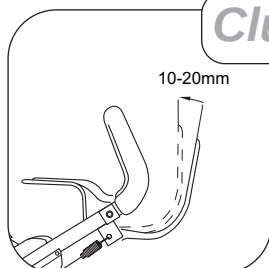

First slowly pull the mower backwards whilst doing this, gently start to move the clutch lever towards the handlebar by 10 - 20mm. If no resistance can be felt.

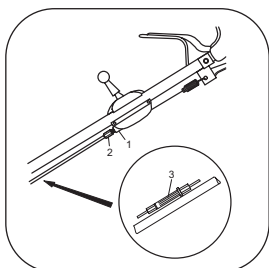


Unscrew the middle section of the black adjuster until the clutch lever is set correctly.

MOWER MAINTENANCE

Lubrication

Lubricate the wheels, pivot points and linkages with engine oil every 25 operating hours.

Apply a good quality medium grease to the inner control cables at the point of entry and exit from their outer casing.

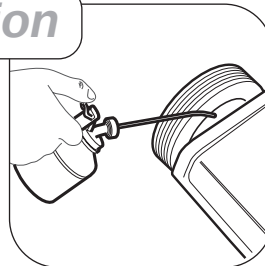


Cutterblade Removal

Drain the fuel by running the engine until the fuel tank is empty and the engine stops. **Remove the spark plug lead** and allow the engine to cool. Turn the mower on its left hand side and ensure that the air cleaner side of the engine is uppermost.

Firmly grip the end of the cutterblade with the gloved hand and remove the two fixing screws and the cutterblade.

To prevent accidents never work on the cutterblade unless the spark plug lead has been removed. The cutterblade has sharp edges. ALWAYS wear strong gloves to protect your hands when working on the cutterblade. DO NOT rotate tools towards the cutting edges to avoid the risk of injury should the tool slip. ALWAYS use genuine Hayter replacement parts.

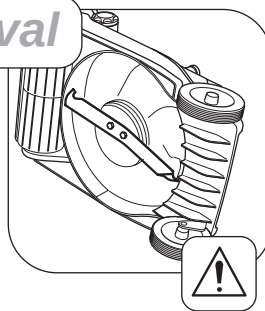

The condition of the cutterblade and its mounting arrangement should be checked regularly for signs of wear or damage. Ensure that the cutterblade is not bent or cracked.

A damaged cutterblade that is out of balance will vibrate excessively and may break. **DO NOT** use an unbalanced cutterblade.


Regularly check that the screws securing the cutterblade are tightened to the specified torque of 55Nm.

Replace the cutterblade every 2 years or sooner if excessively worn or damaged.

To prevent injury it is wise to seek assistance when turning the mower on its side.

MOWER MAINTENANCE


Cutterblade Assembly

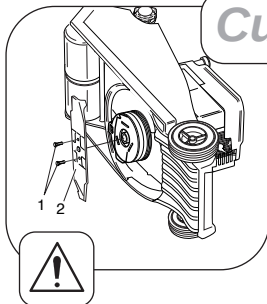


Assemble the cutterblade (2) with the turned up edges facing towards the engine. Secure the cutterblade using two new fixing screws and tighten to a torque of 55Nm.

To prevent accidents never reuse the fixing screws.


Cutterblade Sharpening

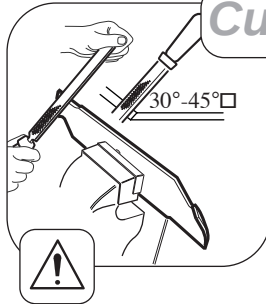

A slightly worn cutterblade may be re-sharpened. Both blade edges must be sharpened equally to ensure balance. Sharpen the cutterblade every 25 mowing hours or more frequently if conditions require. Remove the cutterblade from the mower and clean using a brush and water. Inspect the cutterblade for signs of damage. Sharpen both cutting edges with a flat file to restore performance.

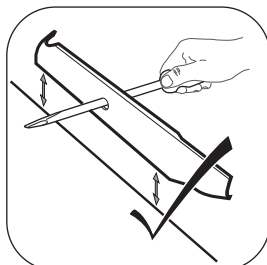


Ensure that the cutterblade is balanced. Use a screw driver with a round shaft to support the cutterblade through its centre hole. Hold the cutterblade horizontal and then release. A balanced cutterblade will remain horizontal.

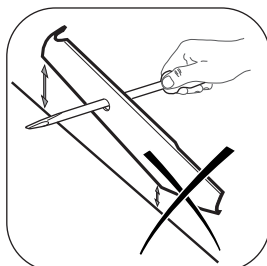

If the cutterblade is not balanced the heavy end will rotate downwards. Sharpen the heavy end until the cutterblade is correctly balanced.

MOWER MAINTENANCE

Storage

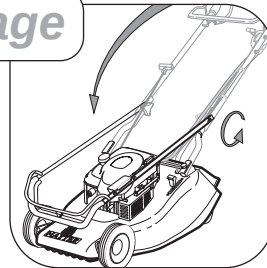

To store the handlebar unscrew the 2 small securing knobs sufficiently to allow it to be pivoted forwards to rest against the mower. Take care to ensure that the control cables do not become snagged at the pivot point and depress the engine stop lever to prevent it being damaged through contact with the engine.

Engines stored in excess of 30 days need to be protected with Briggs & Stratton fuel additive or drained of fuel to prevent gum from forming in the fuel system or on essential carburettor parts. To ensure your mower is maintained in good working order it is important that the following procedure is adopted. Refer to the Maintenance section as necessary.

Drain fuel from the engine by operating the engine until it stops.

Disconnect the spark plug lead.

Change the engine oil.

Remove the engine spark plug and pour 15ml of engine oil into the engine cylinder and replace the spark plug. Do not exceed the stated volume of oil as engine damage may occur on re-starting. **Do not replace the spark plug lead.** Slowly pull the engine start - grip once to crank the engine. This will distribute the oil and help prevent engine corrosion.

Clean grass and debris from the engine cylinder, cylinder head cooling fins, under top cowl, and around and behind exhaust/exhaust guard.

Clean all other areas of the mower and ensure that the grassbag is clean.

Lubricate the mower.

Treat metal parts with a water repellent anti-corrosion product.




Cover the mower with a protective sheet and store it in a dry, ventilated area.

TROUBLE SHOOTING

PROBLEM	POSSIBLE FAULT	REMEDY
Engine will not turn over	Engine stop lever released. Incorrect oil level. Obstruction under deck.	Operate engine stop lever. Check oil level. Remove obstruction.
Engine smokes	Excess oil level. Air cleaner cartridge oil soaked or blocked.	Check oil level. Service air cleaner.
Engine runs then stops	Fuel starvation. Fuel cap vent blocked.	Fill fuel tank. Clean fuel cap vent.
Engine will not start	Engine under load. Fuel starvation. Engine cold. Incorrect/contaminated fuel. Spark plug lead disconnected. Throttle setting incorrect. Engine brake not released. Faulty spark plug. Wiring fault.	Raise height of cut. Fill fuel tank. Set throttle to 'choke' position. Drain fuel tank and fill with correct fuel. Connect spark plug lead. Set throttle to 'fast' position. Operate engine brake lever. Clean and adjust gap or replace. Check wiring.
Engine runs rough	Spark plug lead becoming disconnected in use. Faulty spark plug. Air cleaner blocked. Incorrect/contaminated fuel.	Connect spark plug lead. Clean and adjust gap or replace. Service air cleaner. Drain tank and fill with correct fuel.
Cutterblade drive will not engage / disengage.	Engine stop lever not fully forward. Faulty blade brake clutch.	Push fully forward. Consult your dealer.

TROUBLE SHOOTING

PROBLEM	POSSIBLE FAULT	REMEDY
Engine vibrates excessively	Mounting bolts loose.	Tighten bolts
	Cutterblade screw loose.	Tighten screw
	Cutterblade out of balance.	Balance cutterblade
	Bent crankshaft.	Consult your dealer
Uneven cut	Undulating ground conditions	Change direction of travel
	Cutterblade worn	Sharpen the cutterblade
	Cutterblade out of balance	Balance the cutterblade
	Wheels / roller damaged	Inspect and replace as necessary
Discharge chute blocks	Grass is wet	Mow dry grass
	Cut height too low	Increase cut height
	Grassbag full	Empty grassbag
	Airflow through the grassbag is restricted	Clean the grassbag
	Engine speed too slow	Set throttle to fast position
Mower is hard to push	Cut height too low	Increase cut height
	Wheels / roller damaged	Inspect and lubricate or replace
Mower will not self propel	Clutch out of adjustment	Adjust clutch cable
	Drive belt damaged	Replace drive belt
Poor grass collection	Airflow through the grassbag is restricted	Clean the grassbag
	Discharge chute blocked	Remove blockage
	Wet grass	Mow in dryer conditions
	Grassbag full	Empty grassbag
	Engine speed too slow	Set throttle to fast position

   

DECLARATION OF CONFORMITY**EC DECLARATION OF CONFORMITY**

Manufacturer: HAYTER LIMITED,
Address: Spellbrook, Bishop's Stortford, Herts. CM23 4BU. ENGLAND



declare that the lawnmower:

Model name:	Harrier 48
Type:	BBC Autodrive V/S
Model No:	Pedestrian Rotary
Cutting width:	CODE 493E
Speed of rotation of the cutting device:	48 cm
Engine manufacturer:	2800 rpm
Speed of rotation of engine:	Briggs and Stratton
	2800 rpm

Complies with the provisions of Directive: 98/37/EC Essential Health & Safety Requirements Relating to the Design & Construction of Machinery and Safety Components, as amended and the regulations transposed into national law.

Also Directive 89/336/EEC Electromagnetic Compatibility, as amended and the regulations transposed into national law.

Also Directive 2000/14/EC Noise emission in the environment by equipment for use outdoors and the regulations transposed into national law.

Procedure applied for the conformity assessment: ANNEX VI, procedure 1.

Notified Body: Sound Research Laboratories Ltd. Holbrook House, Little Waldingfield,
Sudbury, Suffolk. CO10 0TH. ENGLAND

Notified body identification No: 1088

Measured sound power level:	95 dB(A)
Guaranteed sound power level:	96 dB(A)

Complies with harmonized standards: EN 292, EN 836 and EN ISO 14982

Signed

S.A. Maryniak
(Technical Director)

Date: March 2006
Declaration done and technical documentation kept at:
HAYTER LIMITED
Spellbrook, Bishop's Stortford,
Herts. CM23 4BU ENGLAND


VIBRATION INFORMATION

The vibration level at the operator contact positions, measured in accordance with European Standard EN 836

CODE 493E - 5ms^{-2}

UPPER MAINFRAME PARTS LIST

Item No.	Description	Part No.	Qty 493	Item Note
1	GRIP FIX EXT 5/16	04020	2	
2	CONNECTING ROD	111-0187	1	
3	BATTERY COVER	111-0595	1	
4	BOLT HANDLEBAR M8*45	HY226024	2	
5	CABLE BBC	111-0748	1	
6	CABLE GUIDE	410037	4	
7	CABLE_CLUTCH V/S	111-1083	1	
8	CAP FOR M8 NUT BLACK	HY234051	2	
9	HANDLEBAR CLAMP PLATE	340028	2	
10	FLAP_GRASSBAG	111-0196	1	
11	DEFLECTOR	111-0633	1	
12	ENGINE XT550 B&S	111-0204	1	
13	BBC CONTROL LEVER	340179	1	
14	FRAME_GRASSBAG	111-0194-03	1	
15	GRASSBAG	111-0952	1	
16	GUIDE_ROPE	305093	1	
17	HANDLEBAR LOWER	410034W	2	
18	HANDLEBAR UPPER MOULDED	111-0519	1	
19	LEVER CLUTCH	306094W	1	
20	BOLT COACH M8 x 45	09379	2	
21	NUT M6 NYLOC 'T' TYPE	09438	2	
22	NUT M8 NYL INSERT T TYPE	09441	2	
23	PIN PIVOT	340182	2	
24	RATCHET PLATE HOC	111-0201	1	
25	CONTROL LEVER MOULDING	111-0185	1	
26	ROD DEFLECTOR	560017	1	
27	SCREW TAPTITE M6*16	09365	4	
28	TOP MOULDING CONTROL	111-0183	1	
29	SCREW TAPTITE UNC 3/8"*1 1/4"	09349	1	
30	SCREW 06*20 PT PAN FLANGE	09687	2	
31	SETSCREW M6x55 POSI PAN Z&P	09780	2	
32	THROTTLE CONTROL BBC	111-0747	1	
33	SPRING DEFLECTOR	410030	1	
34	CABLE VARIATOR	111-1193	1	
35	KNOB M8 HANDWHEEL	480088	2	
36	WASHER NYLON 19*11*1.6	09688	2	
37	ACTUATOR MOULDING CONTROL	111-0186	1	
38	ANCHOR MOULDING CONTROL	111-0184	1	
39	PLUG TUBE 7/8*15G	300160	2	
40	DECAL HAYTER ROYAL WARRANT	410087	1	
41	DECAL SERIAL NUMBER	-----	1	
42	DECAL ENGINE HARRIER 48	111-0759	1	
43	STARLOCK PUSH-ON FASTENER 5MM	111-0718	1	
44	CABLE TIE	HY3966	3	
45	DECAL HEIGHT OF CUT	320006	1	
46	GRASSBAG ASSEMBLY	111-0764	1	INCLUDES 1,10,14,15
47	DECAL BBC	111-0745	1	
48	WASHER PLAIN M6*12*1.6	09472	1	
49	DECAL CAUTION	111-0083	1	
50	NUT M6 NYLOC P TYPE	09544	1	
51	BASE MOULDING CONTROL	111-0182	1	
52	SCREW 10*3/4 S.TAP	70-11-012	3	
53	MOULDING SECURING	111-1065	1	

 


LOWER MAINFRAME PARTS LIST

Item No.	Description	Part No.	Qty 493	Item Note
1	FRONT AXLE WELD ASSY	111-0588	1	
2	BAR SPRING TENSION	111-0672	1	
3	BEARING 6001-2RS	411027	2	
4	BEARING FRONT AXLE	410069	2	
5	BEARING HOUSING ROLLER	219102	2	
6	BELT VARIATOR 536	111-0771	1	
7	BOLT CENTRE BBC	343029	1	
8	BRACKET CABLE	HY412003	1	
9	BRACKET CONN ROD	111-0699	1	
10	BUSH DIA 6.3*DIA 9.5*7	340154	1	
11	BUSH PIVOT	411031	1	
12	PULLEY 51MM PCD	111-0822	1	
13	CHAIN 40 PITCHES 3/8" INC LINK"	411016	1	
14	SUPPORT BRACKET REAR ROLLER	111-0426	1	
15	ROD-CONNECTING	111-0202	1	
16	COVER DRIVE	411013	1	
17	CUTTERBAR BBC	485005	1	
18	SPRING CABLE ANCHOR	111-0527	1	
19	ROLLER FREEWHEEL ROCKET BRAND	340150	2	
20	WARNER BBC 5915-24	485007	1	
21	FRONT_FINS	111-0594	1	
22	GEARBOX	411002	1	
23	GRIP FIX EXT 5/16"	04020	1	
24	HOUSING PIVOT BEARING - LH	410048	2	
25	CAP HUB	111-1251	2	
26	KEY WOODRUFF No 505	1662	1	
27	KNOB HOC	480134	1	
28	LEVER HOC	480128	1	
29	LEVER VARIABLE PULLEY	411014	1	
30	LOCKNUT	340163	1	
31	NUT M6 LUG	410076	4	
32	MAINFRAME	111-0548-08	1	
33	NUT M6 NYLOC 'P' TYPE	09544	2	
34	NUT M8 NYL INSERT T TYPE	09441	1	
35	NUT UNF 1/2" NYLOC EXT THIN5/16"	HY4486	2	
36	SPACER	340157	1	
37	OILITE BUSH ROLLER	340129	2	
38	PIN ROLL DIA 3/16*3/4	03997	1	
39	PIN SELLOC SPRING 3/16*1 HD	HY03354	1	
40	PLATE SECURING	219037	1	
41	FRAME REAR ROLLER W/A	111-0585-03	1	
42	ROLLER SHELL ASSEMBLY	111-0592-03	2	
43	SPRING BLADE BRAKE TENSION	343011	1	
44	SCREW TAPTITE M6*16	09365	26	
45	SCREW TAPTITE M6*16 C/SK POZI	09545	4	
46	SCREW TAPTITE M6*20 W/HD	09575	9	
47	SCREW TAPTITE M8*25 HEX W/HD	09787	1	
48	SETSCREW M6*25	09364	2	

LOWER MAINFRAME PARTS LIST

Item No.	Description	Part No.	Qty 493	Item Note
49	SHAFT ROLLER WELDED	111-0589	1	
50	SHROUD-FREEWHEEL	340168	1	
51	SPRING COUNTER BALANCE	410050	1	
52	SPRING TORSION HOC GALV	480132	1	
53	SPRING VARIATOR	HY412004	1	
54	SPROCKET GEARBOX 10T*3/8	411011	1	
55	SPROCKET ROLLER 18T*3/8	411010	1	
56	THROWPLATE	111-0218	1	
57	UNDERDECK CHUTE	111-0131	1	
58	UNDERDECK COVER	111-0133	1	
59	PULLEY VARIATOR ASSY	411001	1	
60	WASHER PLAIN 5/16*1*16G	09270	1	
61	WASHER PLAIN M6	09472	2	
62	SCREW SOC SHOULDERED	ZIS8L030S	1	
63	WASHER STARLOCK 5/16"	0201086	2	
64	WHEEL WITH BEARINGS	111-1250	2	
65	NUT M6 NYLOC	09472	1	
66	CLUTCH LEVER	411020	1	
67	CLUTCH SPRING	411021	1	
68	PULLEY	411019	1	
69	PIN	411023	1	
70	BELT VARIATOR 450	411025	1	
71	BRACKET BBC W/A	111-0180-03	1	
72	SCREW SOC. HD BUTTON	111-0820	2	
73	SPACER CUTTERBAR BBC	111-0707	2	
74	SCREW TAPTITE UNC 3/8*1 1/4	09349	2	
75	NIPPLE SPLIT	510118	1	
76	SPACER CUTTERBAR BBC	111-0819	1	
77	BEARING	111-1252	4	2 PER WHEEL

LOWER MAINFRAME PARTS LIST

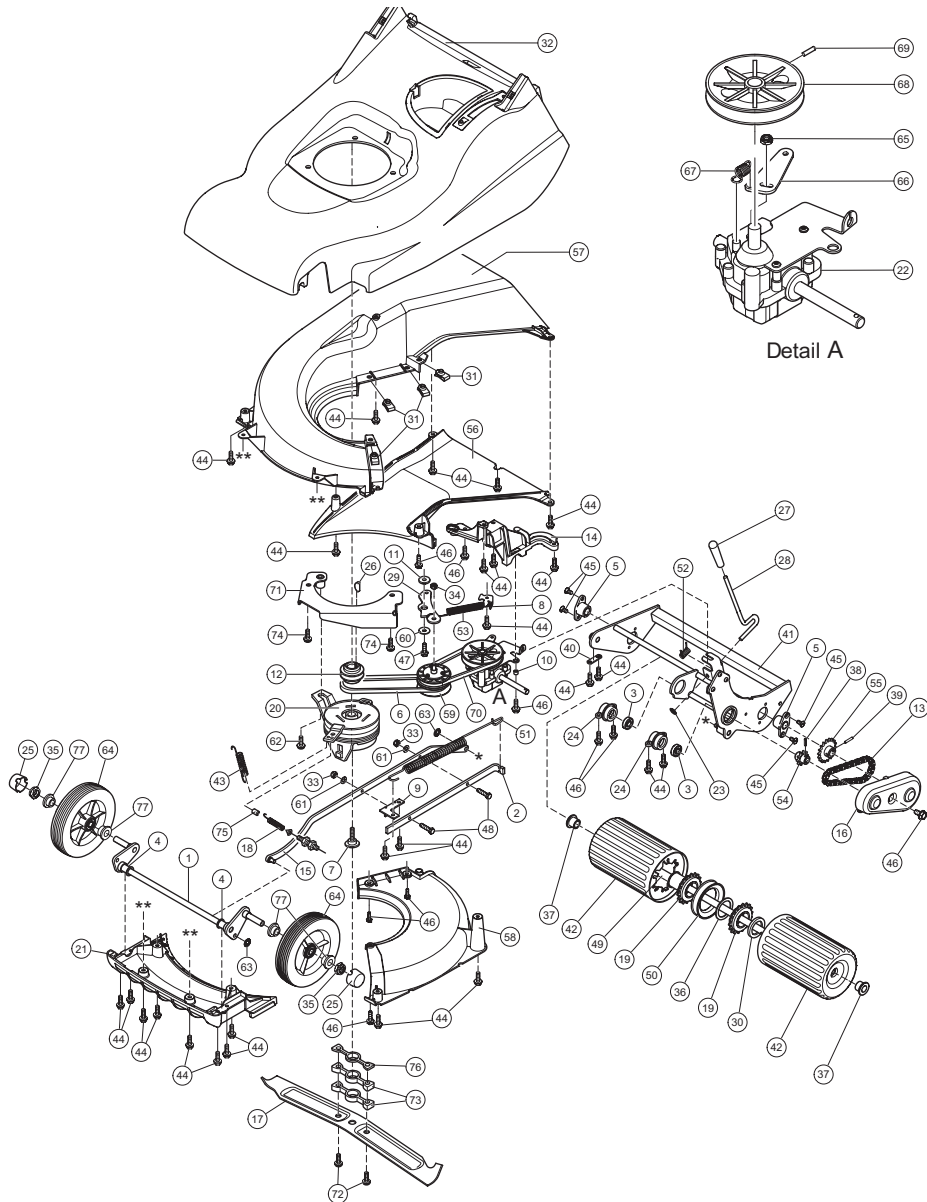

NOTES

NOTES

NOTES

CUSTOMER INFORMATION /NOTES

Serial No:

Engine Type:- Series 650 124T02-0162-B1 (493E) **Engine:-** Briggs & Stratton

Date of Sale:- _____

Your Local Dealer:-

DEALER STAMP

Notes:-