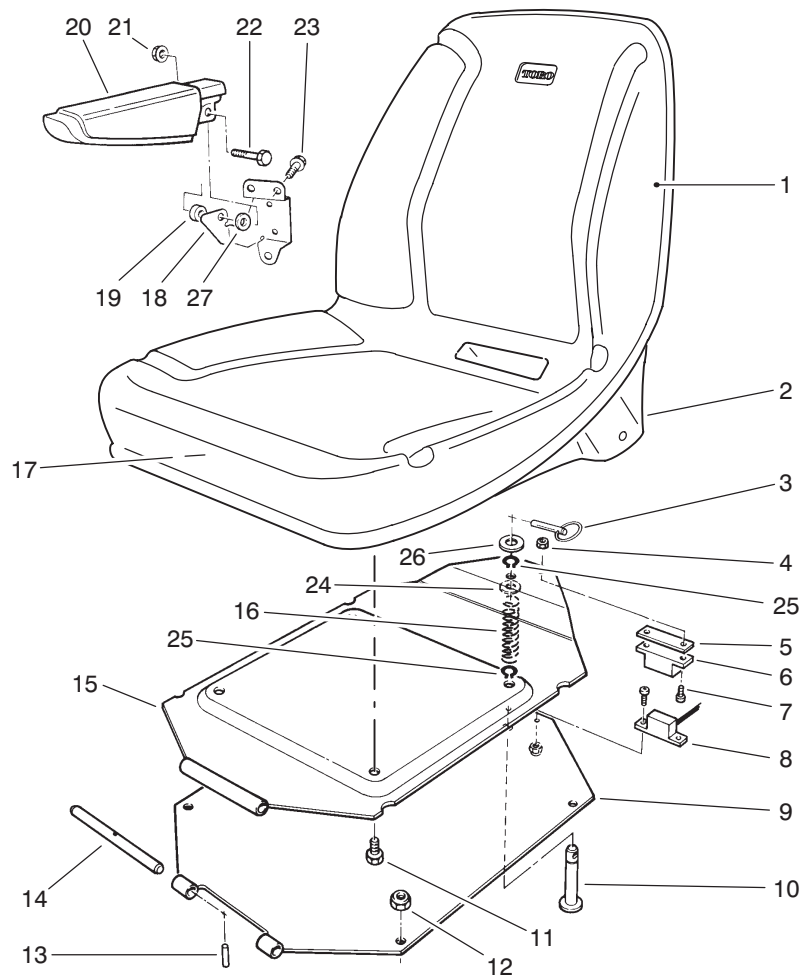


TORO®

MODEL NO. 30580-70001 & UP

**PARTS
CATALOG****GROUNDMASTER® 580-D
Traction Unit**


T-1278-1

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-1180	Assembly - Seat (Incl. Ref. #2)	1
2	67-9560	Shell - Seat	1
3	283-72	Pin - Lynch	1
4	3296-54	Nut - Lock	4
5	83-6630	Shim - Switch	2
6	92-8753	Catch - Magnetic	1
7	32122-53	Screw - Pan Head	4
8	83-6640	Sensor - Switch	1
9	83-6700	Plate - Suspension	1
10	85-6160	Pin - Spring	1
11	3234-5	Screw - Cap Hex. Hd.	4
12	3296-29	Nut - Lock	4
13	32121-4	Pin - Roll	1
14	27-4720	Pin - Pivot Seat	1

Ref. No.	Part No.	Description	No. Used
15	83-6690	Plate - Seat	1
16	85-6140	Spring	1
17	92-1179	Cushion - Seat	1
18	69-0770	Bracket - Arm Rest R.H.	1
*	69-0760	Bracket - Arm Rest L.H.	1
19	92-7301	Spacer	2
20	69-1180	Armrest	2
21	32128-19	Nut - Lock Flange Hd.	2
22	323-9	Screw - Cap Hex. Hd.	2
23	3234-14	Screw - Cap Hex. Hd.	6
24	3256-27	Washer - Flat	1
25	32120-64	Ring - Retaining	2
26	3256-7	Washer - Flat	1
27	3256-24	Washer - Flat	2

*Not Illustrated

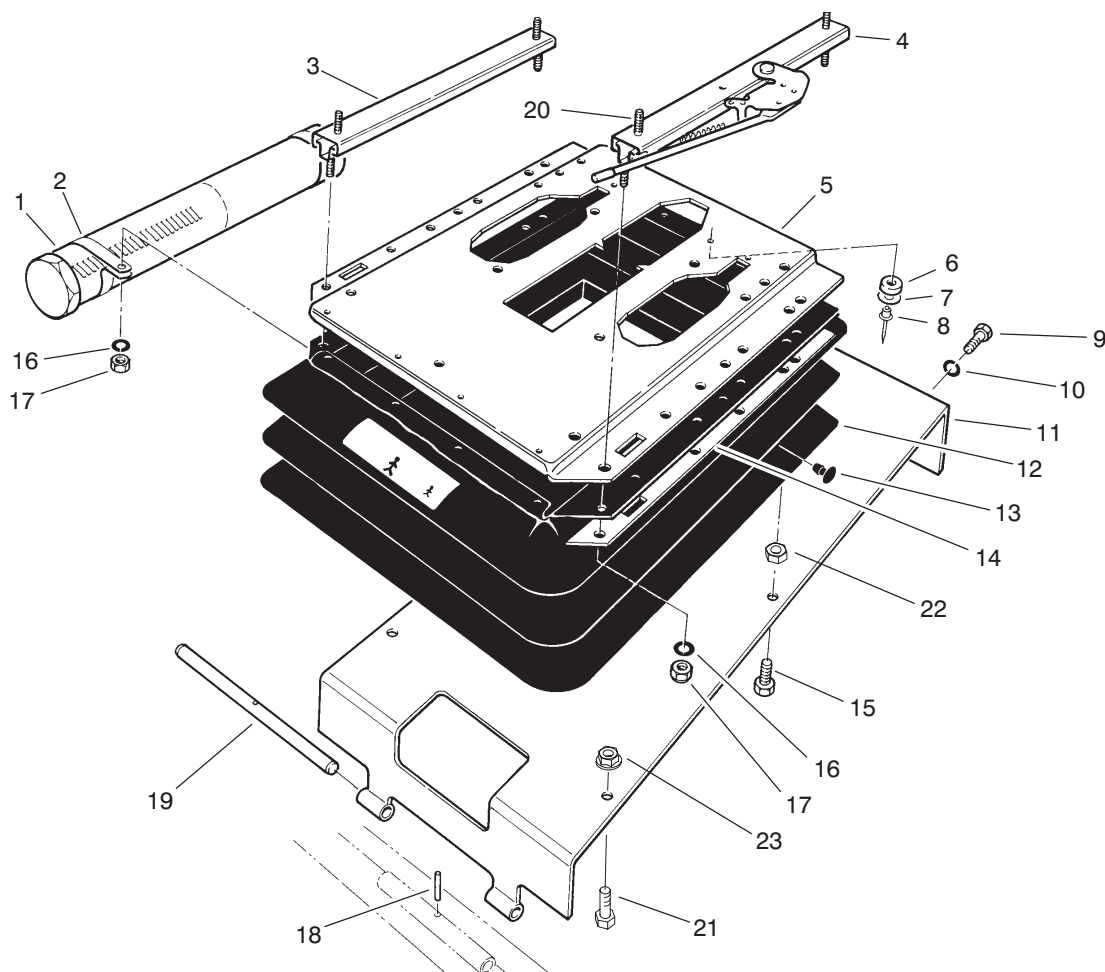


T-1279-1

SEAT PIVOT AND BELLOWS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-0720	Tube - Manual	1
2	2412-133	Clamp	2
3	66-8530	Track - Adjustment	1
4	82-9060	Track & Latch - Adjustment	1
5	71-2410	Plate - Upper Suspension (Incl. Ref. #6)	1
6	71-2400	Assembly - Bumper (Incl. Ref. #7 & 8)	2
7	71-2380	Washer	2
8	71-2390	Rivet - Pop	2
9	323-6	Screw - Cap Hex. Hd.	2
10	3253-21	Washer - Lock	2
11	83-6660	Support - Seat	1

Ref. No.	Part No.	Description	No. Used
12	71-2420	Bellows - Rubber	1
13	39-5710	Plug	21
14	40-3890	Trim	2
15	48-7780	Screw - Cap Hex. Hd.	2
16	3256-23	Washer - Flat	4
17	3296-29	Nut - Lock	4
18	32121-4	Pin - Roll	1
19	27-4720	Pin - Pivot, Seat	1
20	3230-22	Bolt - Carriage	1
21	33104-025	Screw - HHH	2
22	33015-00	Nut	2
23	33004-00	Nut - HWH	2

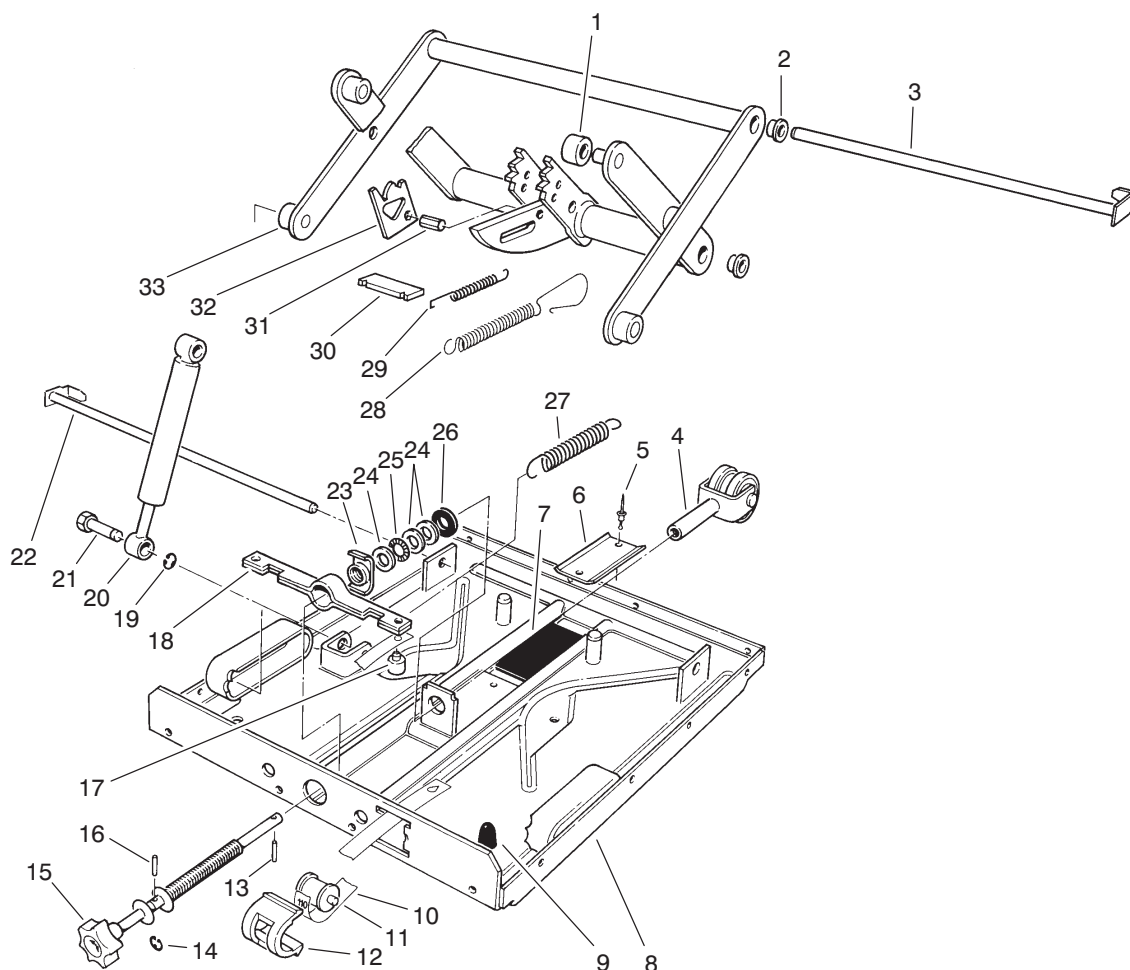


T-0483-1

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	40-4010	Roller	4	19	71-2330	Ring - Snap	2
2	71-2180	Bearing	4	20	71-2340	Absorber - Shock	1
3	71-2190	Pin	1	21	71-2320	Pin	2
4	71-2290	Bearing - Triple	1	22	71-2170	Pin	1
5	40-4090	Rivet - Pop	2	23	71-2270	Nut - Special	1
6	40-4080	Track - U	1	24	40-4070	Washer	3
7	40-4120	Plate - Rubber	1	25	40-4310	Bearing - Thrust Needle	1
8	71-2310	Plate - Lower Suspension (Incl. Ref. #5-7 & 9)	1	26	40-4060	Washer - Rubber	1
9	71-2300	Bumper	2	27	71-2260	Spring	2
10	71-2280	Band - Weight Indicator	1	28	40-4340	Spring - Extension	1
11	40-4150	Roller	1	29	40-4350	Spring - Extension	2
12	40-4160	Guide - Sleeve	1	30	40-4360	Plate	1
13	71-2210	Pin	1	31	40-4370	Bolt	1
14	71-2230	Ring - Snap	1	32	40-4380	Bracket - Release	2
15	71-2240	Knob Assembly (Incl. Ref. #13, 14 & 16)	1	33	71-2200	Bracket - Swing Arm (Incl. Ref. #1-3, 22 & 29-32)	1
16	71-2220	Pin	1	*	71-0480	Suspension Assembly (Incl. Ref. #1-33, & 6-8, 12 & 13, from page 2)	1
17	40-4230	Plug	1				
18	71-2250	Bracket - Spring	1				

*Not Illustrated

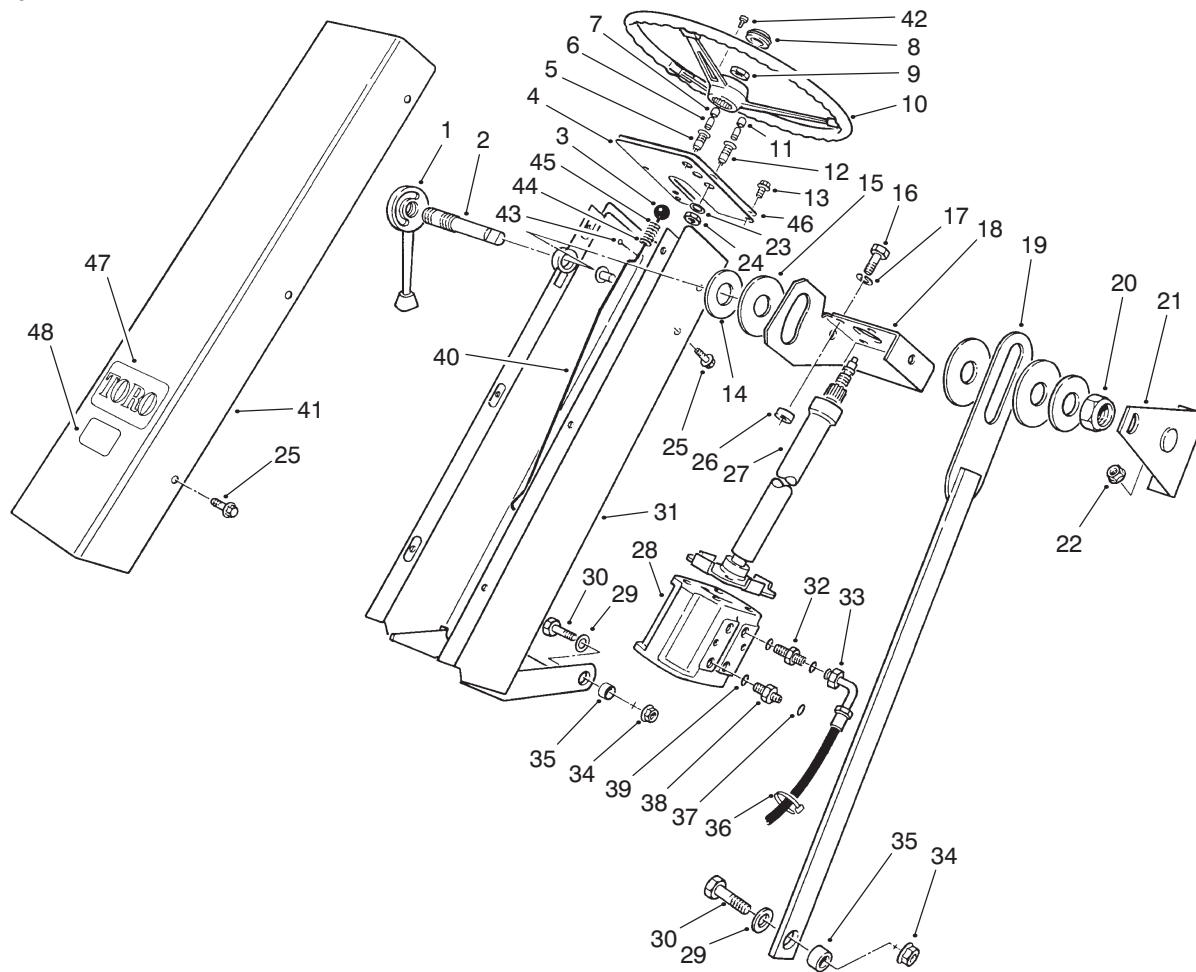


T-0338-3

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-1560	Lever - Lock	1
2	69-9230	Shaft - Steering Pivot	1
3	233-17	Knob	1
4	69-9440	Panel - Steering Tower	1
5	44-2210	Body - Indicator Light (Incl. Ref. #6-7 & 23-24)	1
†6		Bulb - Indicator Light (#1891)	3
7	218-533	Lens - Indicator Light (Red)	1
8	213-31	Cover - Steering Wheel	1
9	47-6990	Nut - Hex.	1
10	68-8080	Wheel - Steering	1
11	218-562	Lens - Indicator Light (Amber)	2
12	44-2212	Body - Indicator Light (Incl. Ref. #6, 11 & 23-24)	2
13	32144-64	Screw - Hex. Washer Hd.	4
14	20-9500	Spacer	2
15	31-0390	Washer - Friction	3
16	323-7	Screw - Cap Hex. Hd.	4
17	3253-21	Washer - Lock	4
18	69-9540	Bracket - Steering Gear	1
19	69-7760	Link - Steering Gear	1
20	3296-49	Nut - Lock	1
21	69-7740	Support - Steering Gear	1
22	32128-20	Nut - Flange Lock	2
23	218-536	Washer - Lock	3

Ref. No.	Part No.	Description	No. Used
24	218-535	Nut - Hex.	3
25	3234-14	Screw - Hex. Washer Hd.	8
26	46-1600	Spacer	4
27	71-0540	Column - Steering	1
28	92-9748	Valve - Power Steering	1
29	3256-26	Washer - Flat	3
30	325-5	Screw - Cap Hex. Hd.	3
31	69-8160	Tower - Steering	1
32	340-133	Fitting - Hydraulic Straight (Incl. Ref. #37 & 39)	3
33	69-5500	Hose - Hydraulic	4
34	32128-23	Nut - Flange Lock	3
35	28-0380	Spacer	3
36	3290-378	Tie-Cable	5
37	237-22	Seal - O-Ring	4
38	69-6980	Valve - Check (Incl. Ref. # 37 & 39)	1
39	237-79	Seal - O-Ring	4
40	71-4060	Rod - Brake Latch	1
41	69-8510	Cover - Steering Tower	1
42	32144-96	Screw - Mach. Round Hd.	3
43	3272-5	Pin - Cotter	1
44	3256-22	Washer - Flat	1
45	95-1821	Spring - Compression	1
46	95-0825	Panel - Control	1
47	62-5550	Decal	1
48	93-7252	Decal - CE	1

†Obtain Locally

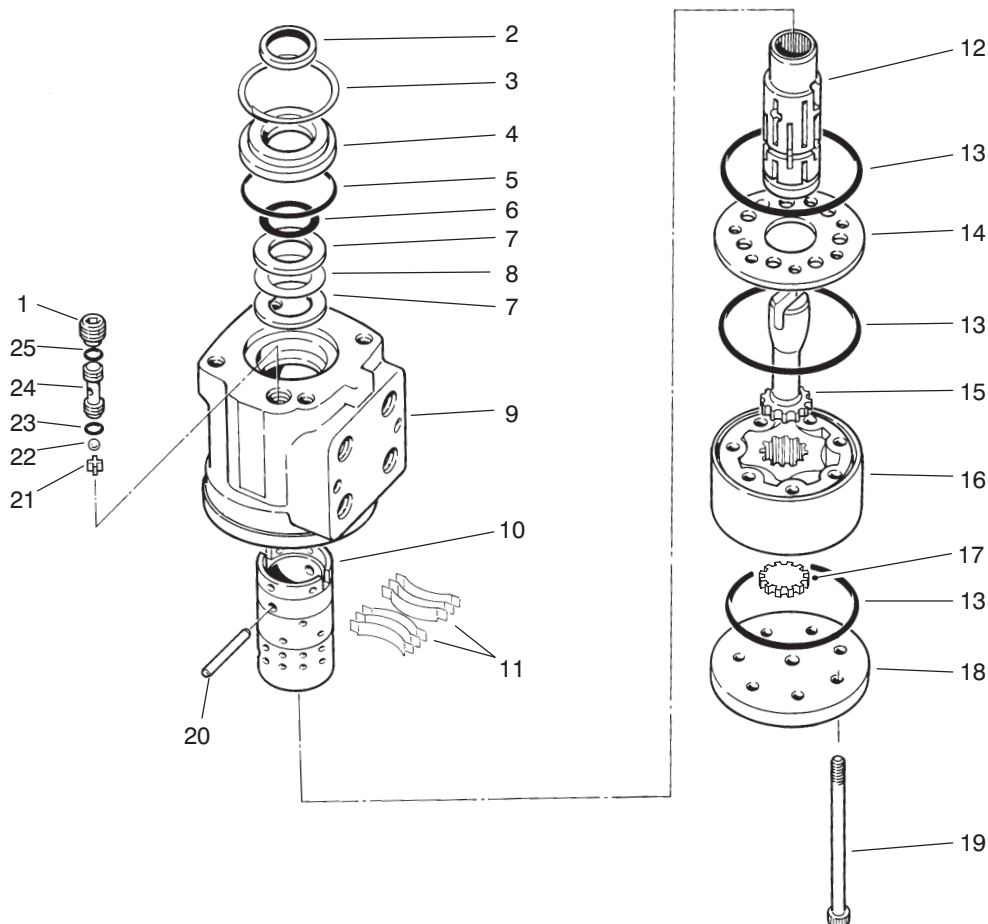


T-0383-1

POWER STEERING VALVE ASSEMBLY NO. 92-9748

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	52-9260	Screw - Set	1	16	69-1860	Gerotor	1
†2		Seal - 1" ID	1	17	69-1880	Spacer	1
3	52-9230	Ring - Retaining	1	18	92-9730	Cap - End	1
4	52-9240	Bushing - Gland Seal	1	19	92-9735	Screw - Cap	7
†5		Seal - 1.875" ID	1	20	59-6830	Kit - Centering Pin	1
†6		Seal - Quad Ring	1	21	52-9290	Retainer - Check Ball	1
7	59-6730	Race - Bearing	2	22	52-9280	Ball - Check	1
8	59-6740	Bearing - Needle Thrust	1	†23		Seal	1
†9		Housing	1	24	52-9270	Seat - Check Ball	1
†10		Sleeve - Control	1	†25		Seal	1
11	59-6820	Centering Spring Kit	1	*	52-9250	Needle Bearing Kit (Incl. Ref. #7-8)	1
†12		Spool - Control	1	*	92-9749	Seal Kit (Incl. Ref. #2, 5-6, 13, 23 & 25)	1
†13		Seal	3				
14	92-9732	Plate - Wear	1				
15	52-9320	Drive	1				

*Not Illustrated

†Not Serviceable Separately

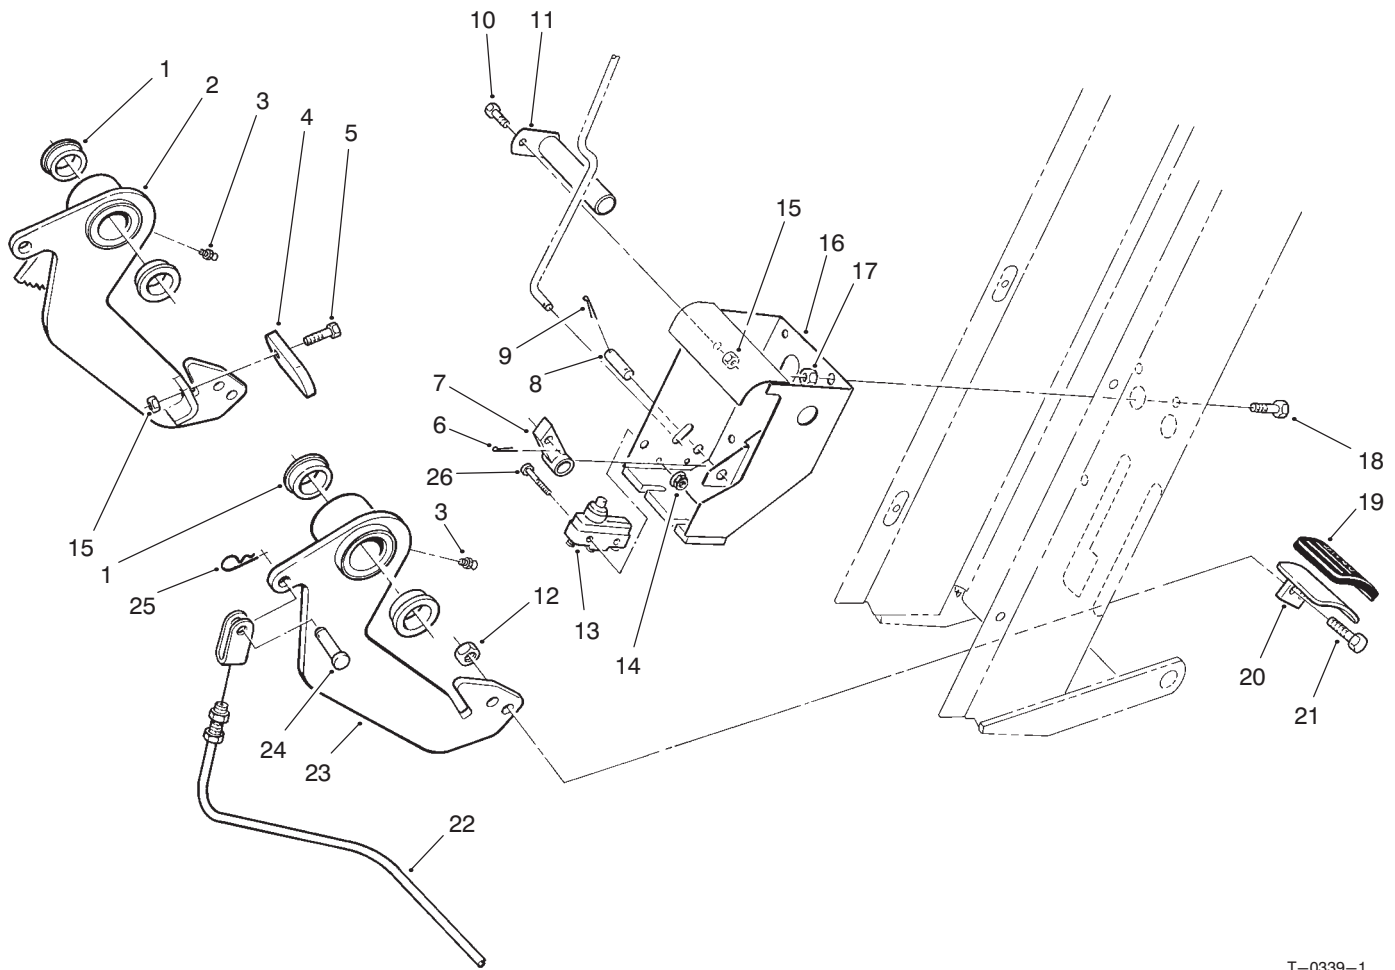


T-0339-1

STEERING BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	256-247	Bushing - Flange	4
2	69-7890	Arm - Brake R.H. (Incl. Ref. #1 & 3)	1
3	302-5	Fitting - Grease	2
4	69-9210	Lever - Brake Latch	1
5	321-4	Screw - Cap Hex. Hd.	1
6	3272-5	Pin - Cotter	1
7	69-7720	Pawl - Brake	1
8	69-9200	Pin - Brake Pawl	1
9	3272-6	Pin - Cotter	2
10	321-2	Screw - Cap Hex. Hd.	1
11	69-7790	Pin - Brake Arm	1
12	32152-1	Nut - Lock	4
13	29-6163	Switch - Micro	1
14	3296-9	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
15	32152-4	Nut - Lock	2
16	69-7840	Mount - Brake Arm	1
17	32128-20	Nut - Lock	3
18	3234-14	Screw - Cap Hex. Hd.	3
19	49-6171	Pad - Brake Pedal L.H.	1
*	49-6172	Pad - Brake Pedal R.H.	1
20	69-7700	Pedal - Brake	2
21	323-4	Screw - Cap Hex. Hd.	4
22	69-5670	Cable - Brake	2
23	69-7880	Arm - Brake L.H. (Incl. Ref. #1 & 3)	1
24	283-1	Pin - Clevis	2
25	3290-307	Pin - Cotter, Hair	2
26	3249-11	Screw - Machine	2
*	3290-378	Tie - Cable	3

*Not Illustrated

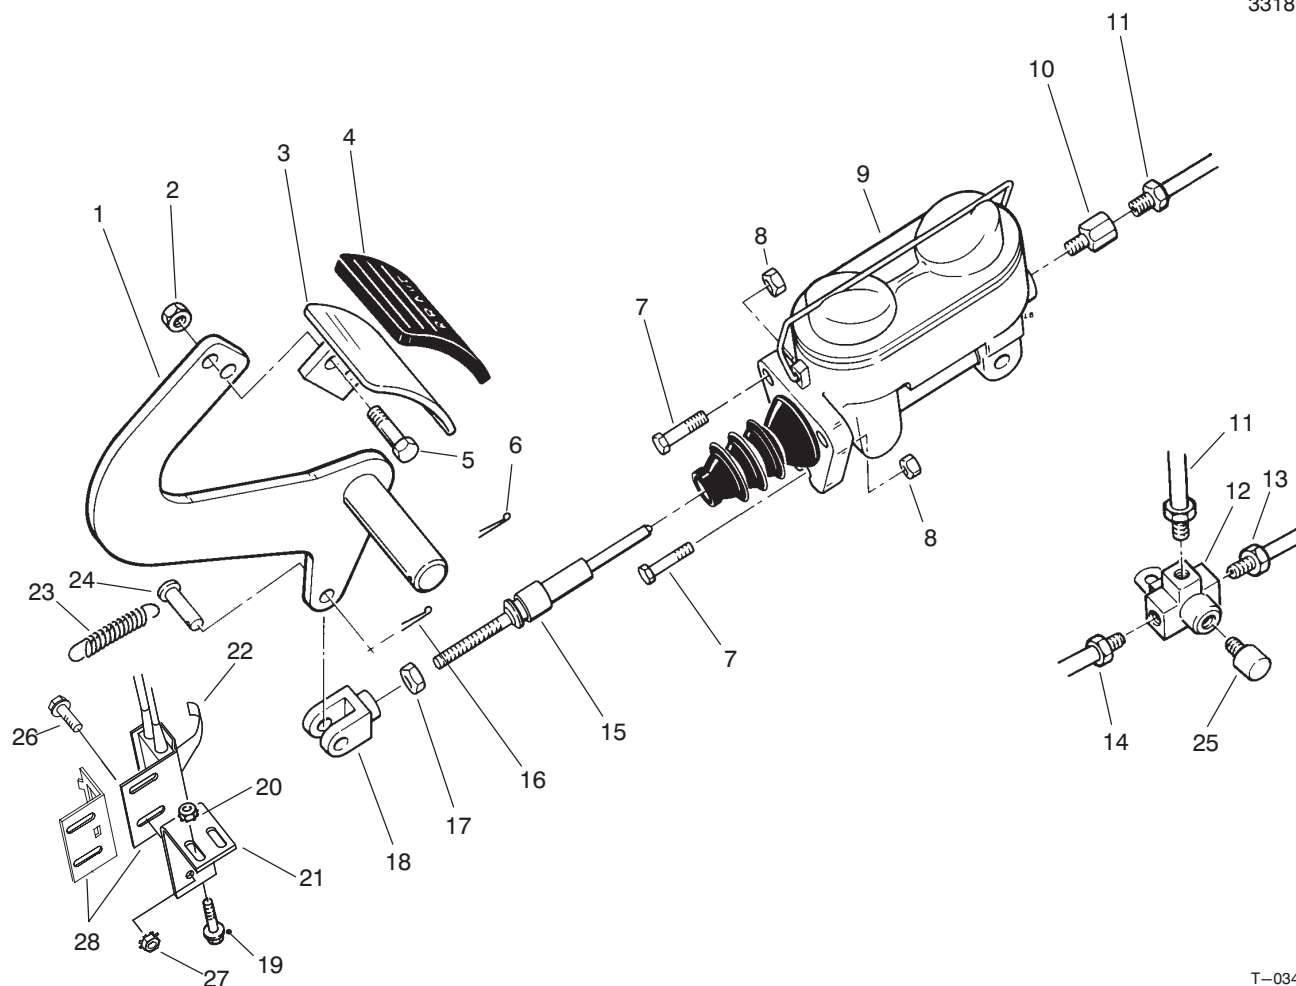


T-0341-1

SERVICE BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-8750	Arm - Brake	1	15	69-9340	Rod - Brake	1
2	32152-1	Nut - Lock	2	16	3272-10	Pin - Cotter	1
3	69-7700	Pedal - Brake	1	17	3220-2	Nut - Jam	1
4	49-6170	Pad - Brake	1	18	282-2	Clevis - Brake Rod	1
5	322-3	Screw - Cap Hex. Hd.	2	19	3234-13	Screw - Hex. Washer Hd.	2
6	3272-12	Pin - Cotter	1	20	32149-2	Nut - Keps	2
7	323-7	Screw - Cap Hex. Hd.	3	21	93-7039	Bracket - Service Brake	1
8	32128-21	Nut - Lock	3	22	93-7037	Switch	1
9	69-2640	Master Cylinder Assembly	1	23	21-1830	Spring - Extension	1
10	353-994	Adapter	1	24	283-1	Pin - Clevis	1
11	74-2530	Tube - Hydraulic	1	25	218-242	Switch - Brake	1
12	218-243	Fitting - Tee	1	26	32144-1	Screw - Hex. Hd.	2
13	74-2510	Tube - Hydraulic L.H.	1	27	32127-11	Nut - Flexlok	2
14	74-2520	Tube - Hydraulic R.H.	1	28	93-9337	Bracket - Switch	1

*Not Illustrated

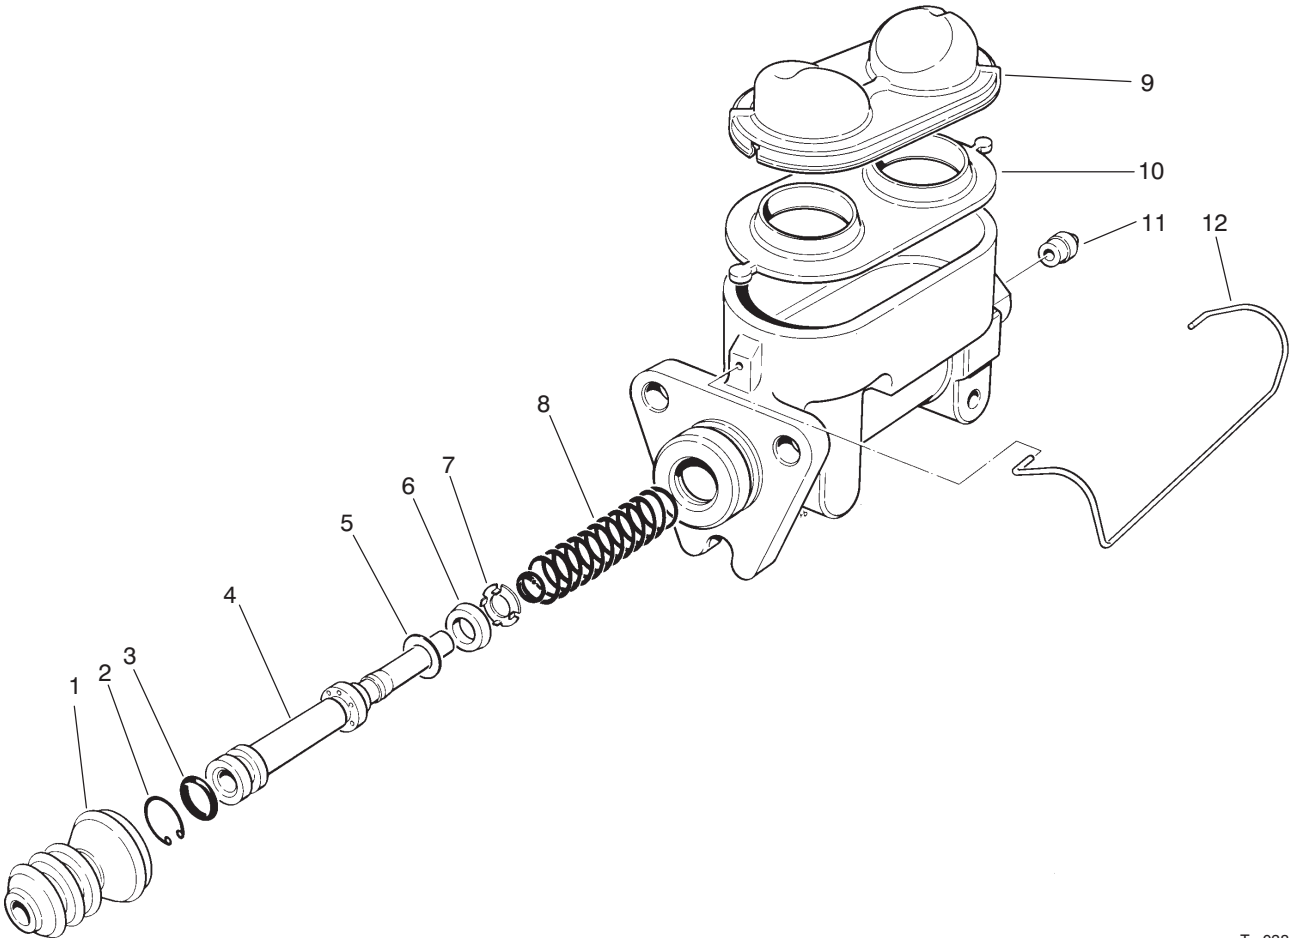


T-0384-1

BRAKE SYSTEM MASTER CYLINDER NO. 69-2640

Ref. No.	Part No.	Description	No. Used
1	69-2650	Boot - Rod	1
2	69-2660	Ring - Retaining	1
†3		Seal - Lip	1
†4		Piston	1
†5		Protector - Cup	1
†6		Cup - Pumping	1
†7		Retainer - Cup	1

Ref. No.	Part No.	Description	No. Used
†8		Spring - Piston Return	1
9	69-2750	Cover - Reservoir	1
10	69-2760	Gasket - Diaphragm	1
11	69-2770	Seat - Tube	1
12	69-2740	Bail - Cover	1
*	69-2730	Piston Assembly (Incl. Ref. #3-8)	1


*Not Illustrated
†Not serviceable separately.

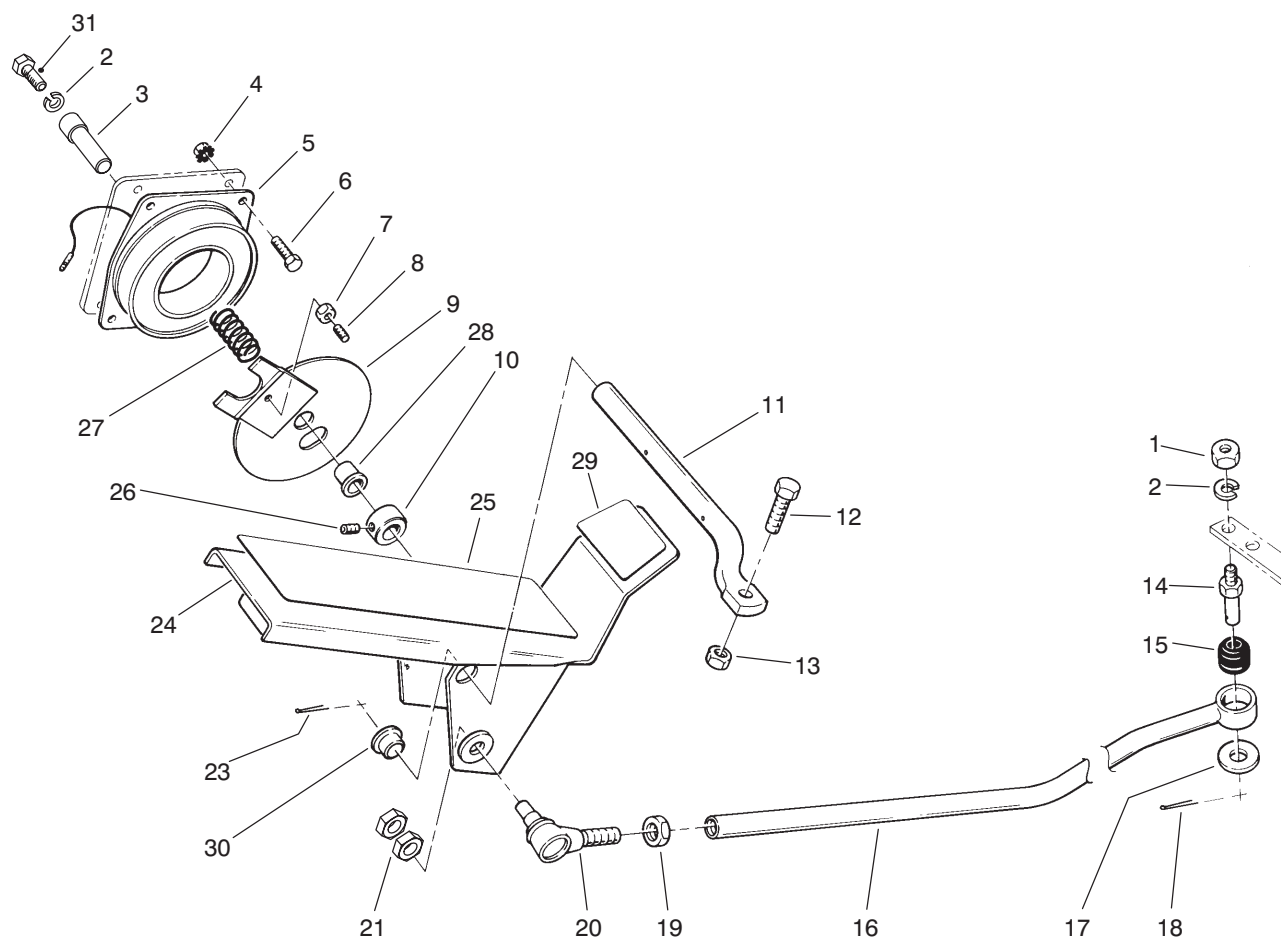

T-0351-1

TRACTION PEDAL & CRUISE CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3217-7	Nut - Lock	1	16	74-2700	Rod - Control	1
2	3253-21	Washer - Lock	2	17	3256-6	Washer - Flat	1
3	92-9701	Shaft - Cruise Control	1	18	3272-10	Pin - Cotter	1
4	32149-2	Nut - Keps	4	19	3220-5	Nut - Jam	1
5	42-1720	Field Core Coil Assembly	1	20	21-0141	Joint - Ball	1
6	321-3	Screw - Cap Hex. Hd.	4	21	3220-3	Nut - Jam	2
7	3217-26	Nut - Lock	1	23	3272-7	Pin - Cotter	2
8	3245-31	Screw - Set	1	24	69-7650	Pedal - Traction	1
9	43-6110	Plate - Clutch	1	25	71-0440	Abrasive - Pedal Front	1
10	43-6320	Collar - Locking	1	26	3245-32	Screw - Set	1
11	69-9390	Shaft - Pedal	1	27	43-6200	Spring - Compression	1
12	3234-14	Screw - Cap Hex. Hd.	1	28	256-273	Bushing - Flange	1
13	32128-20	Nut - Lock	1	29	71-0450	Abrasive - Pedal Rear	1
14	69-9030	Post - Neutral Device	1	30	256-156	Bushing - Flange	2
15	23-2270	Bushing - Rubber	1	31	323-6	Screw - Cap Hex. Hd.	1

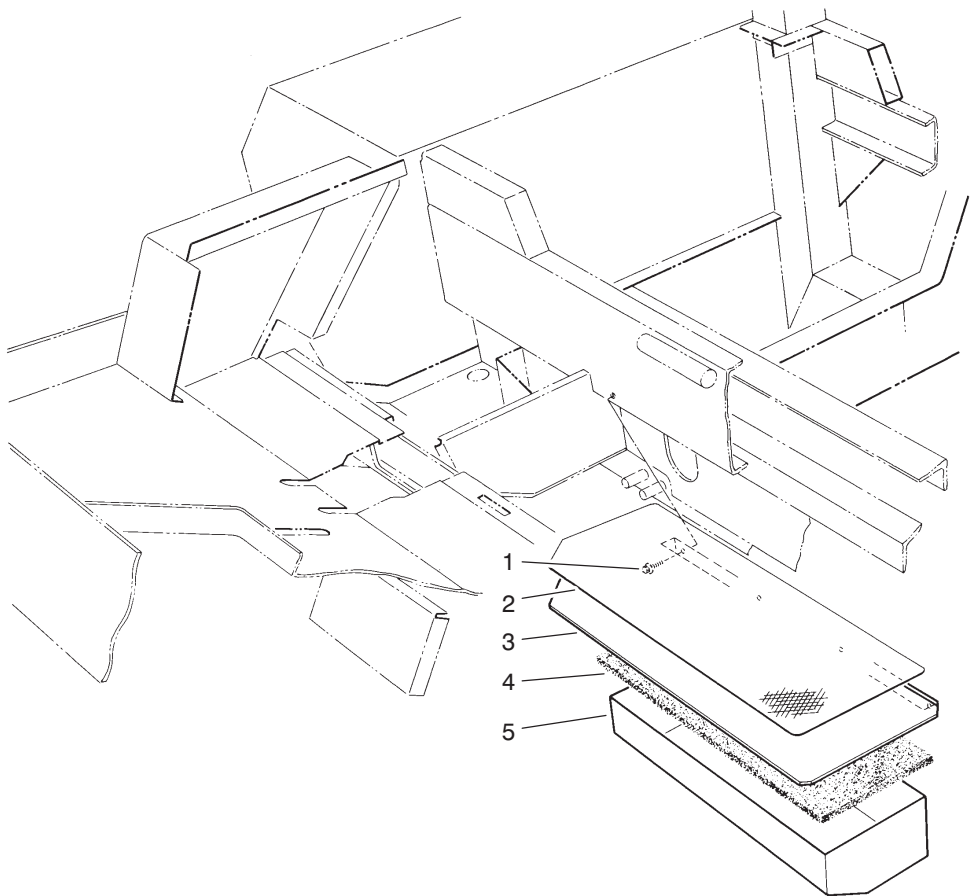


T-0876-1

TOOL BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234-14	Screw - Hex. Flange Hd.	4
2	71-0410	Cover - Abrasive	1
3	69-8080	Cover - Tool Box	1

Ref. No.	Part No.	Description	No. Used
4	69-9430	Foam - Tool Box	1
5	69-8110	Box - Tool	1

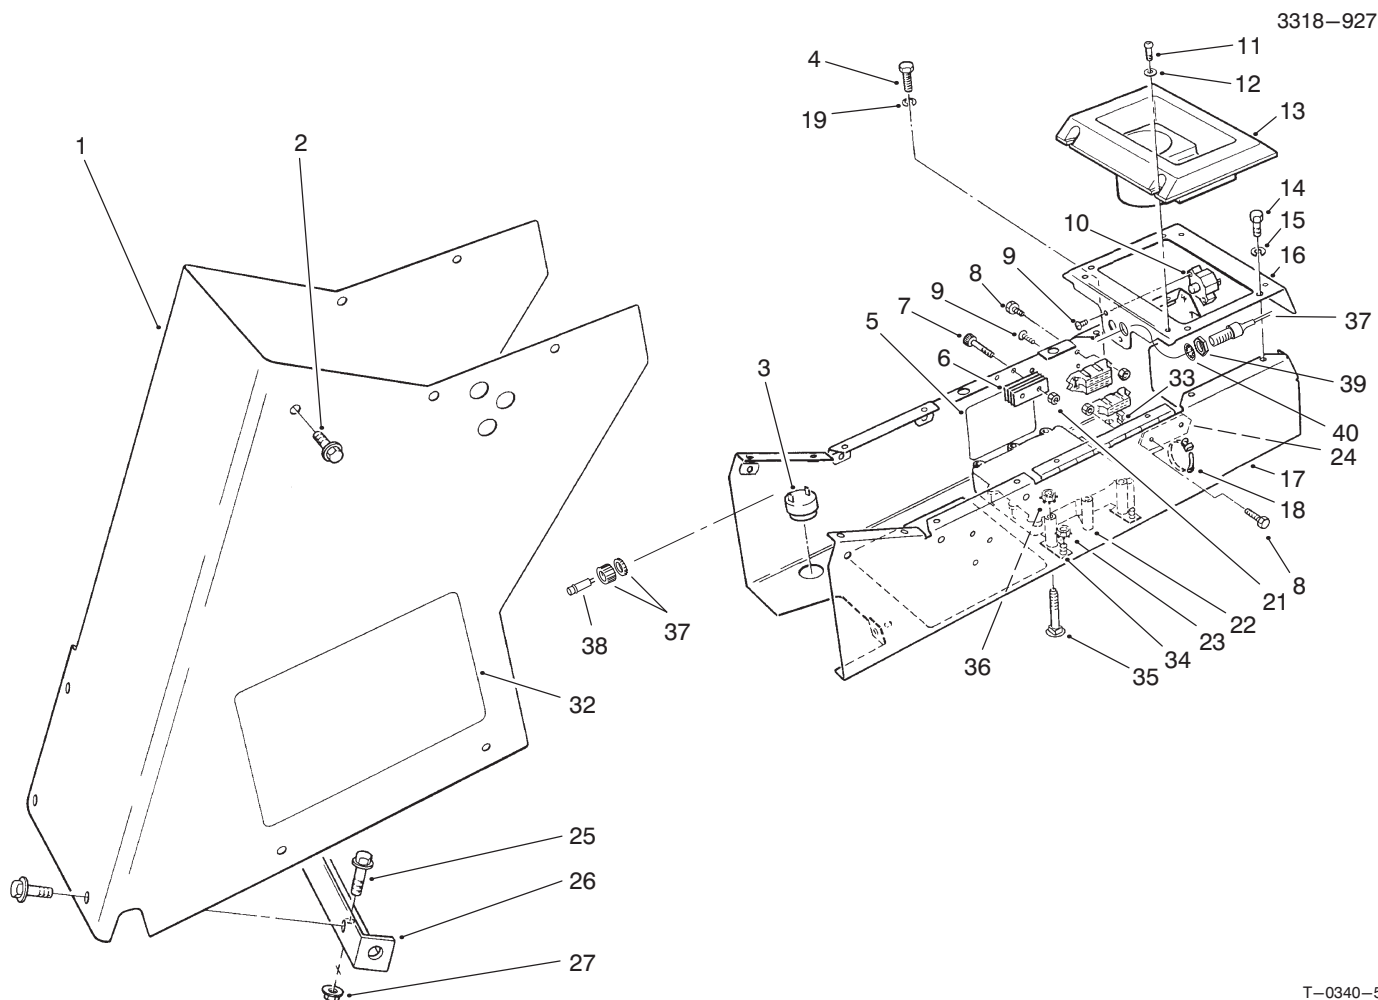


T-0340-5

CONTROL BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-9560	Housing - Control	1
2	3234-7	Screw - Hex. Washer Hd.	11
3	80-9330	Alarm - Audio	1
4	323-4	Screw - Cap Hex. Hd.	4
5	88-9430	Decal - Fuse	1
6	69-6260	Magnet	1
7	32105-12	Screw - Hex. Socket Hd.	2
8	32105-13	Screw - Hex. Hd.	4
9	32122-53	Screw - Phil. Truss Hd.	2
10	43-4000	Breaker - Circuit 40A	1
11	3290-133	Screw - Round Hd.	4
12	3256-22	Washer - Flat	4
13	69-7040	Holder - Cup	1
14	321-3	Screw - Cap Hex. Hd.	4
15	3253-3	Washer - Lock	4
16	71-2430	Plate - Rear	1
17	71-4130	Support - Control	1
18	3290-378	Tie - Cable	2
19	3253-21	Washer - Lock	4
21	3296-2	Nut - Lock	6

Ref. No.	Part No.	Description	No. Used
22	92-5720	Controller	1
23	32149-7	Nut - Keps	3
24	67-7160	Block - Fuse	4
25	3234-14	Screw - Cap Hex. Hd.	2
26	69-8210	Support - Cover	1
27	32128-20	Nut - Flange Lock	2
32	80-4890	Decal - Service	1
33	218-581	Fuse - 15A	6
34	92-8661	Tab	3
35	3229-8	Bolt - Carriage	3
36	32149-2	Nut - Keps	3
37	85-4491	Holder - Indicator, Light (Incl. Ref. #38-40)	1
38	219-19	Bulb	1
39	3220-24	Nut - Hex.	1
40	3254-6	Washer - Lock, Int. Tooth	1
*	88-9420	Wire Harness Assembly (Incl. Ref. #24)	1
*	218-573	Fuse - 5A	1
*	3290-378	Tie - Cable	25

*Not Illustrated

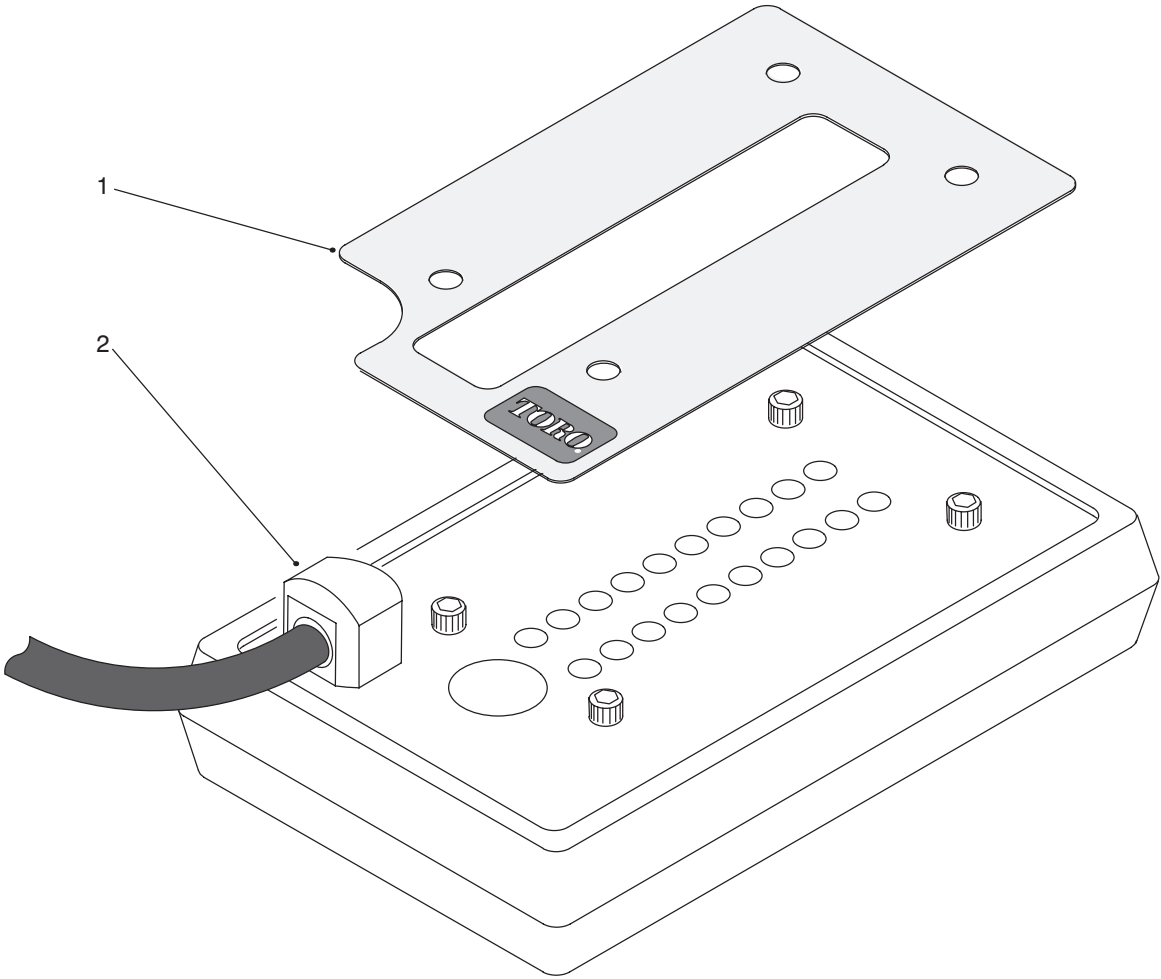


T-1458-1

DIAGNOSTIC DISPLAY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-4087	Decal – Diagnostic V2.0 GM 580D	1


Ref. No.	Part No.	Description	No. Used
2	85-4750	Display – Diagnostic	1

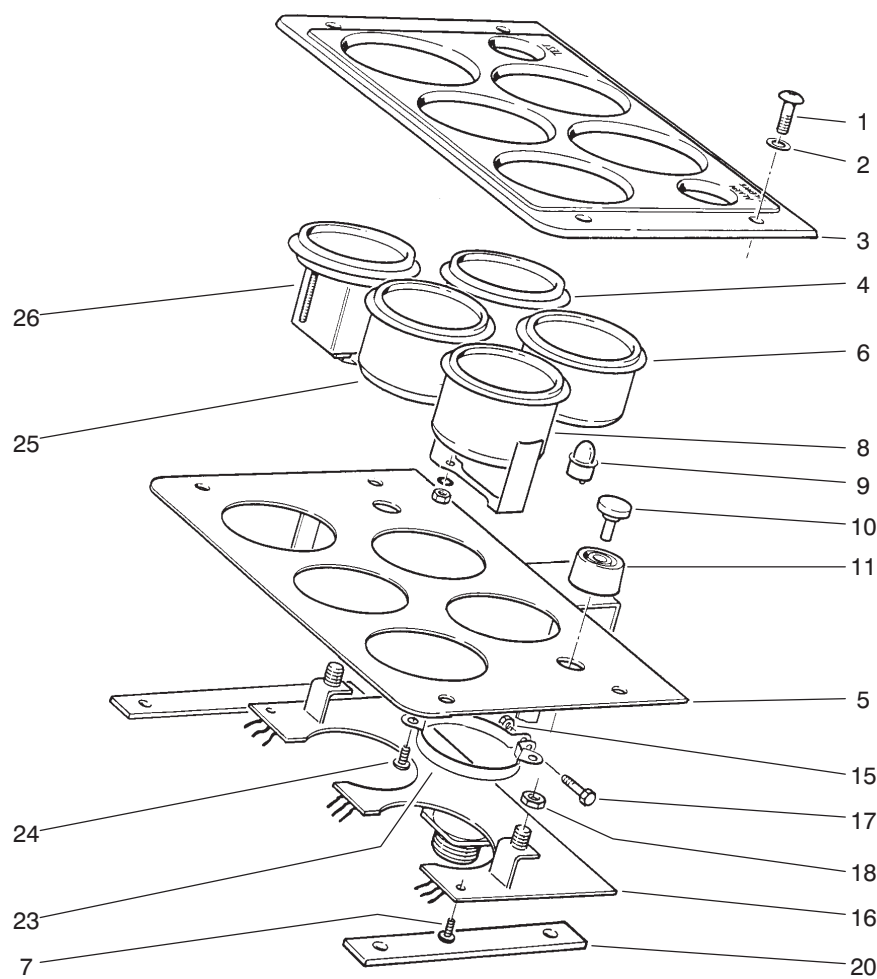

T-1448-1

UPPER CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-133	Screw - Round Hd.	4	11	43-6420	Bezel	2
2	3256-23	Washer	4	15	3296-2	Nut - Lock	2
3	95-0827	Panel	1	16	92-1771	Board - Instrument	1
4	71-4210	Cluster - Warning Light	1	17	32105-1	Screw - Cap Hex. Hd.	2
5	86-7410	Plate - Gage	1	18	218-498	Nut	2
6	71-4200	Cluster - Warning Light	1	20	71-4250	Spacer	2
7	32104-16	Screw - Tapping	4	23	69-4780	Clamp - Gauge	2
8	63-7430	Gauge - Temperature	1	24	32144-19	Screw - Round Hd.	4
9	219-17	Bulb - Light	8	25	66-2940	Gauge - Fuel	1
10	43-6280	Button	2	26	66-2950	Hourmeter	1

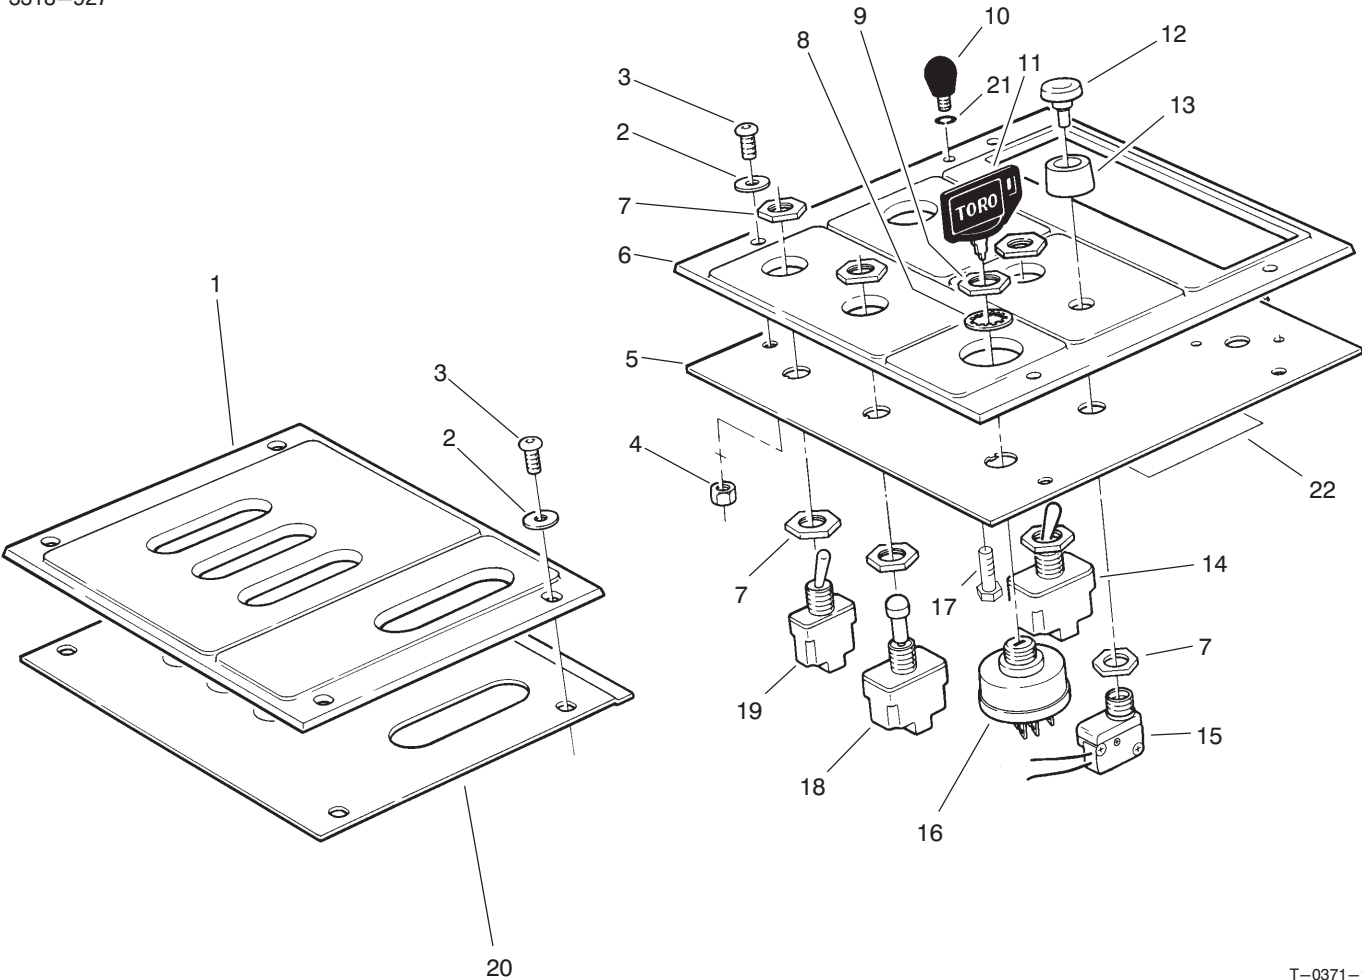


T-0371-1

LOWER CONTROL PANEL ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	95-0815	Panel - Lever	1
2	3256-22	Washer - Flat	8
3	3290-133	Screw - Round Hd.	8
4	3296-42	Nut - Lock	4
5	71-2460	Plate - Control	1
6	95-0826	Panel - Control	1
7	218-498	Nut - Hex	10
8	218-447	Washer - Lock	1
9	218-446	Nut - Hex	1
10	233-66	Knob	1
11	63-8360	Key - Ignition	1
12	43-6280	Button	2
13	43-6420	Bezel	2
14	69-9740	Switch - Toggle (Incl. Ref. #7)	1

Ref. No.	Part No.	Description	No. Used
15	72-9760	Switch (Incl. Ref. #7, 12 & 13)	2
16	27-2360	Switch - Ignition (Incl. Ref. #8 & 9)	1
17	3290-392	Screw - HH	1
18	69-9730	Switch - Toggle (Incl. Ref. #7)	1
19	71-4170	Switch - Toggle (Incl. Ref. #7)	1
20	69-9310	Plate - Lever	1
21	3253-15	Washer - Lock	A/R
22	95-0831	Decal - Fuse	1

ELECTRICAL SCHEMATIC

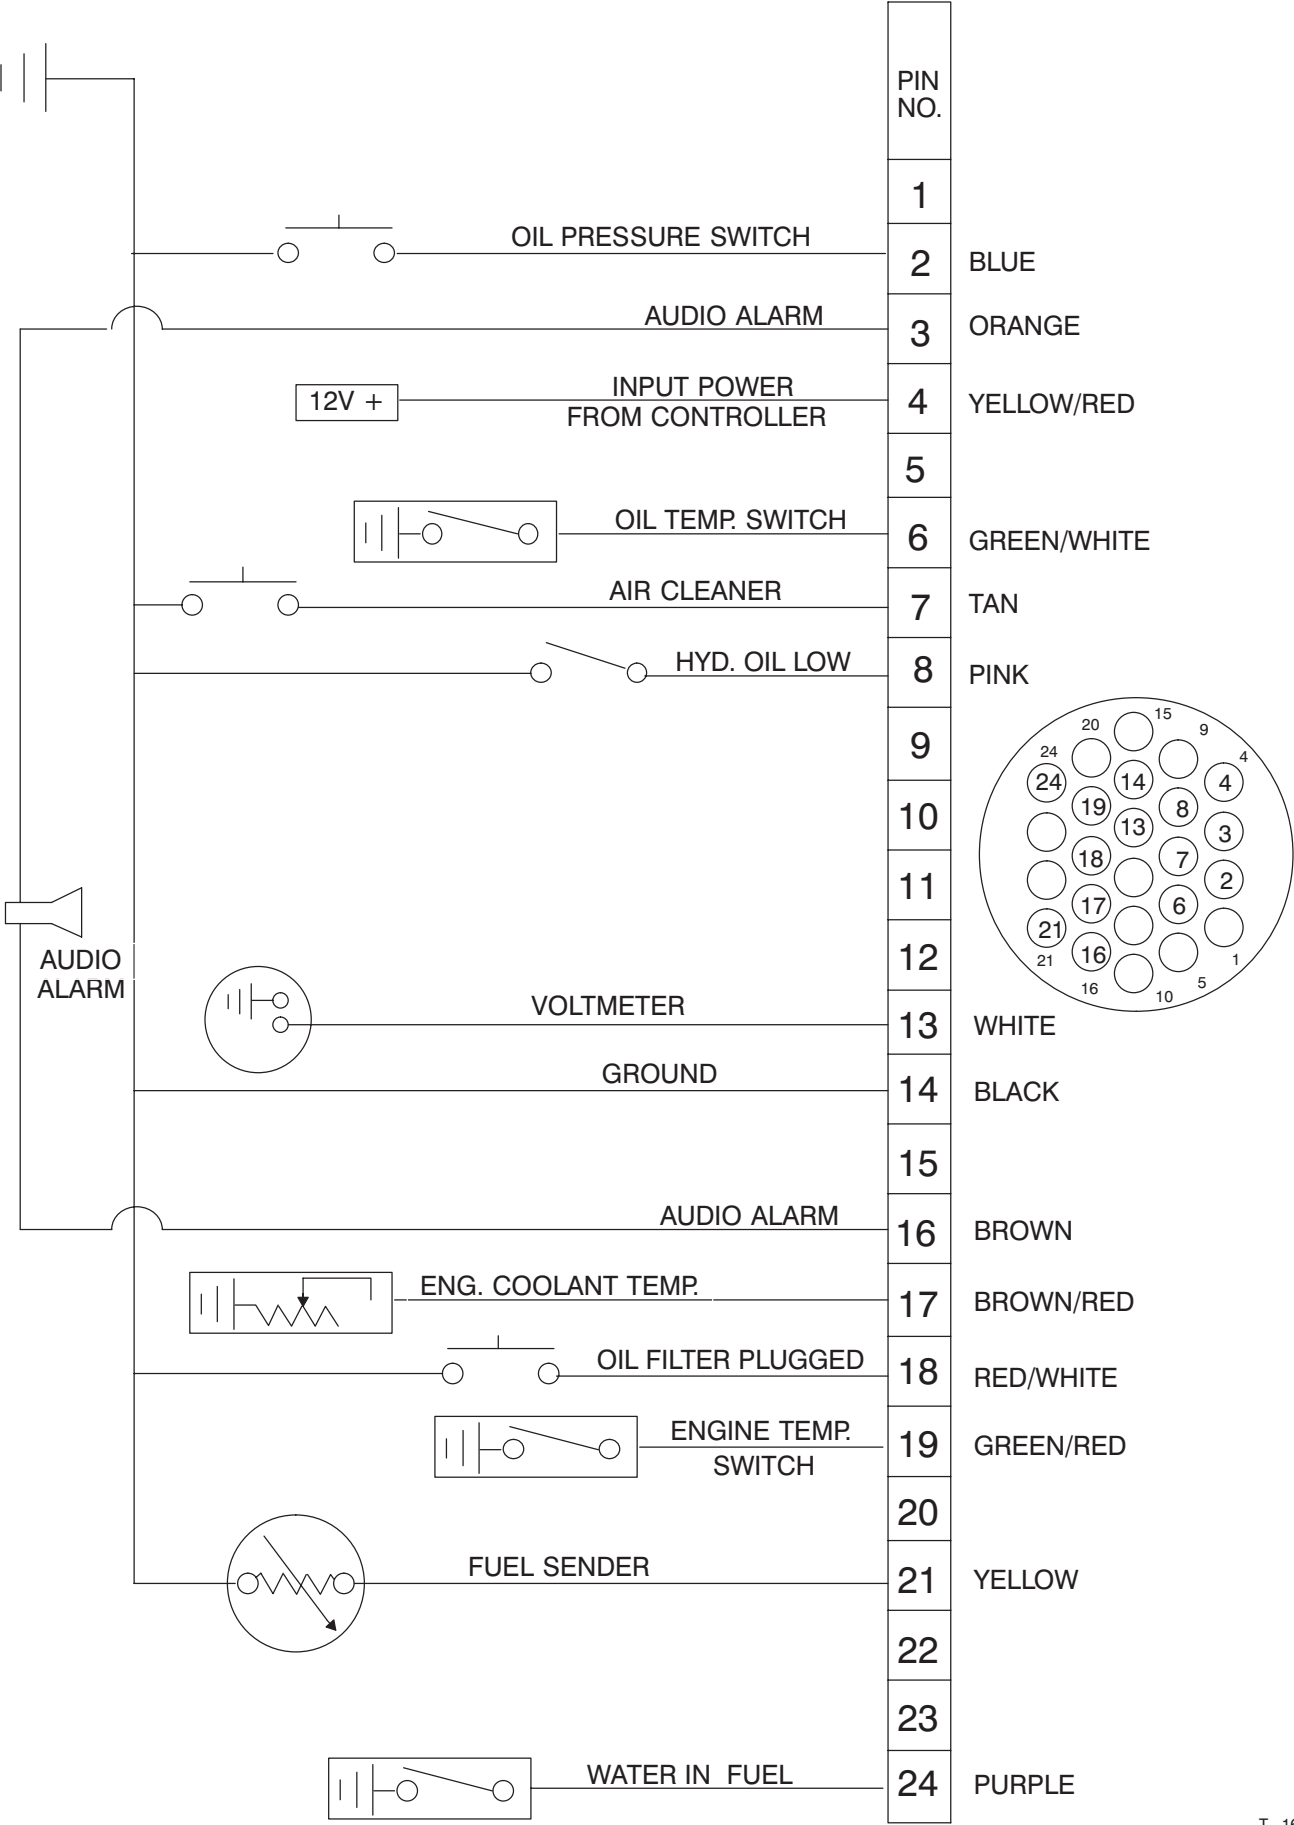


CONTROLLER ELECTRICAL SCHEMATIC

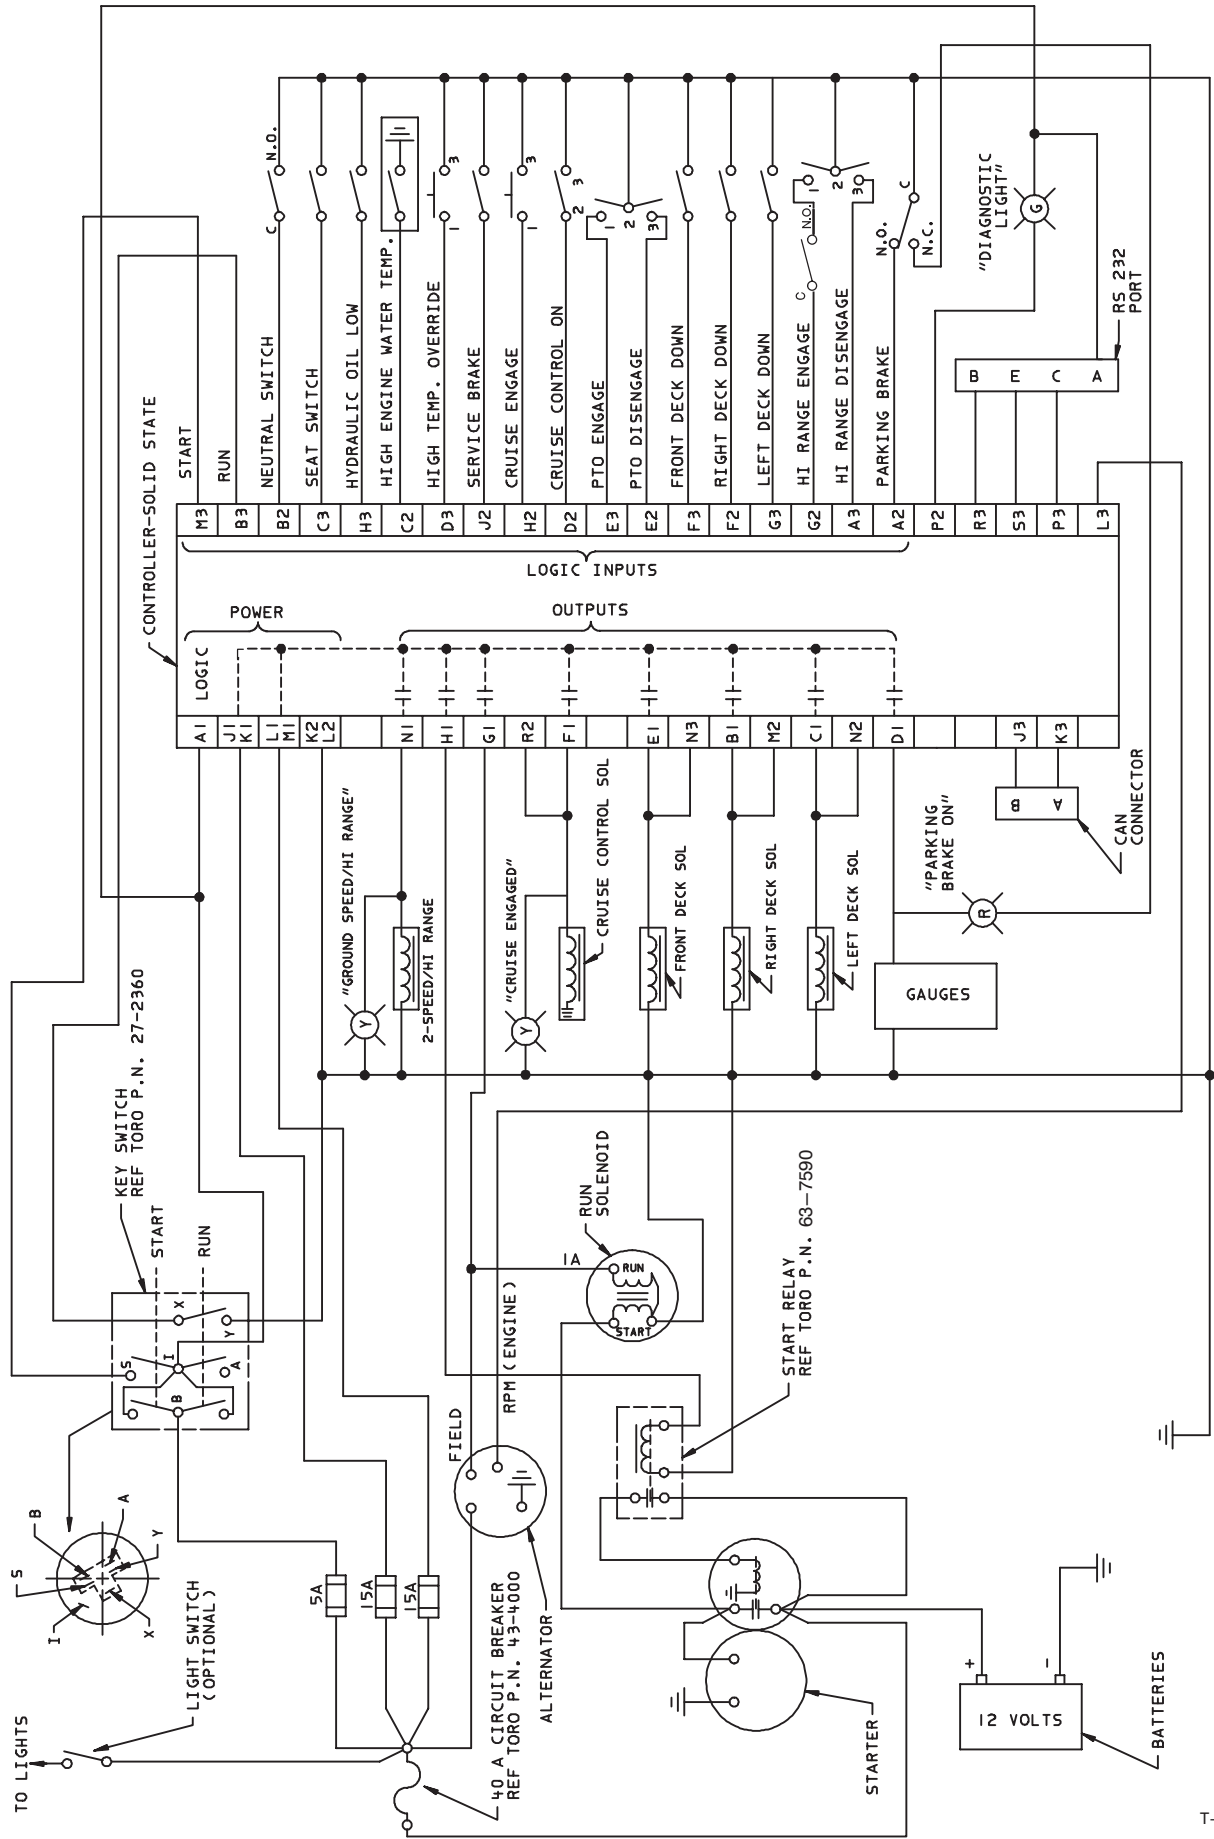


CONNECTION DIAGRAM

OPERATORS CONTROL PANEL ELECTRICAL SCHEMATIC

3318-927

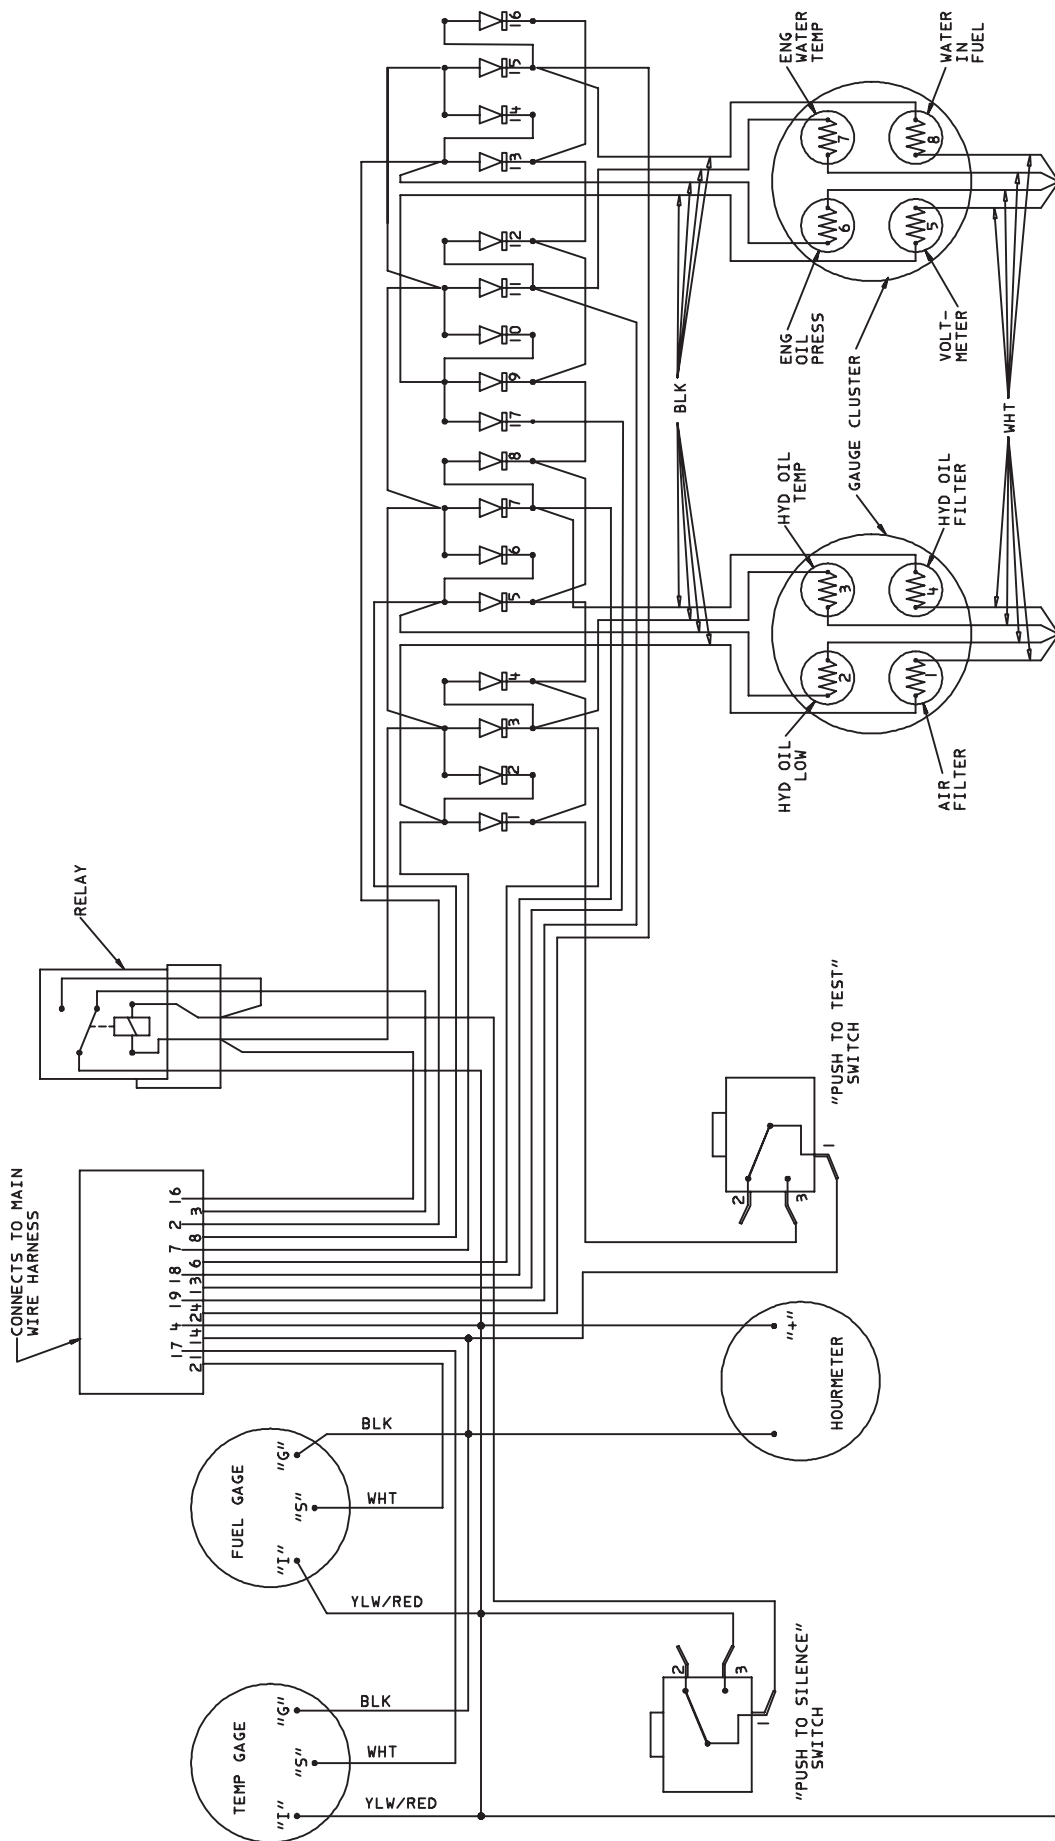

T-1655-1

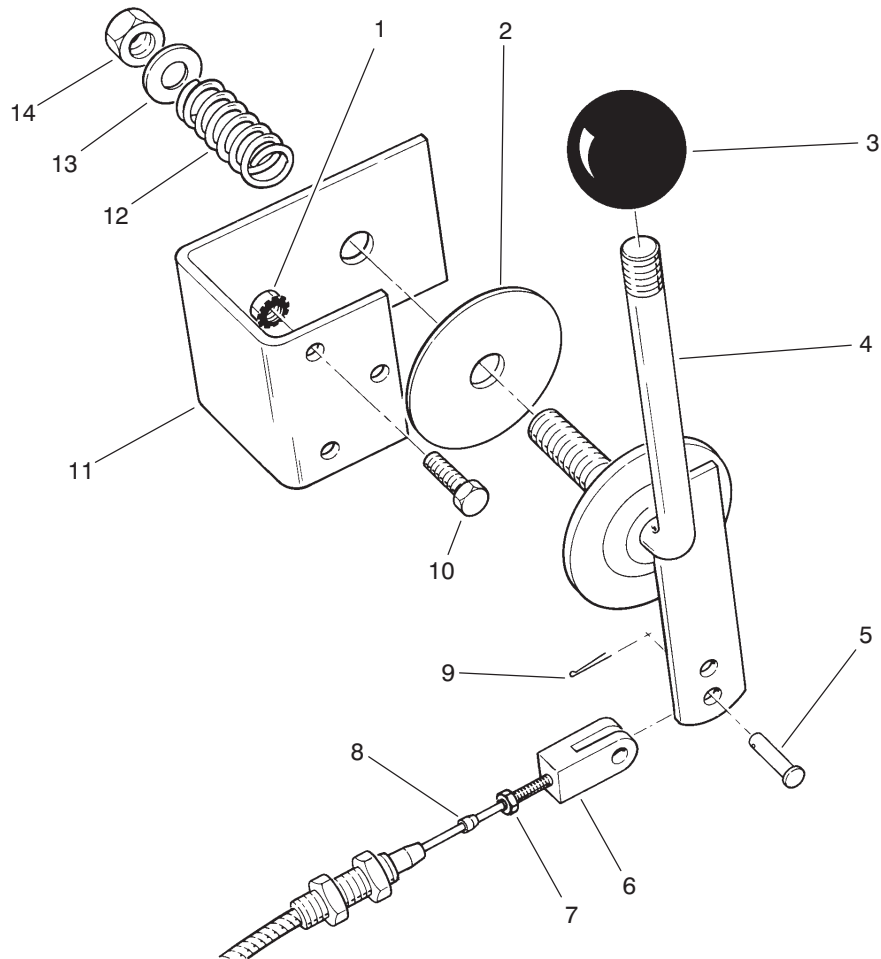


T-0352-1

THROTTLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut - Keps	3	8	77-2990	Cable - Throttle	1
2	3-2858	Disc - Friction	1	9	3272-1	Pin - Cotter	3
3	233-48	Knob	1	10	321-3	Screw - Cap Hex. Hd.	3
4	69-8040	Arm - Throttle	1	11	69-9130	Bracket - Throttle	1
5	283-67	Pin - Clevis Arm End	1	12	3-8596	Spring - Compression	1
*	69-0090	Pin - Clevis Engine End	1	13	3256-26	Washer - Flat	1
6	282-28	Clevis - Adjustable	2	14	3296-23	Nut - Lock	1
7	3219-14	Nut - Hex.	2				

*Not Illustrated

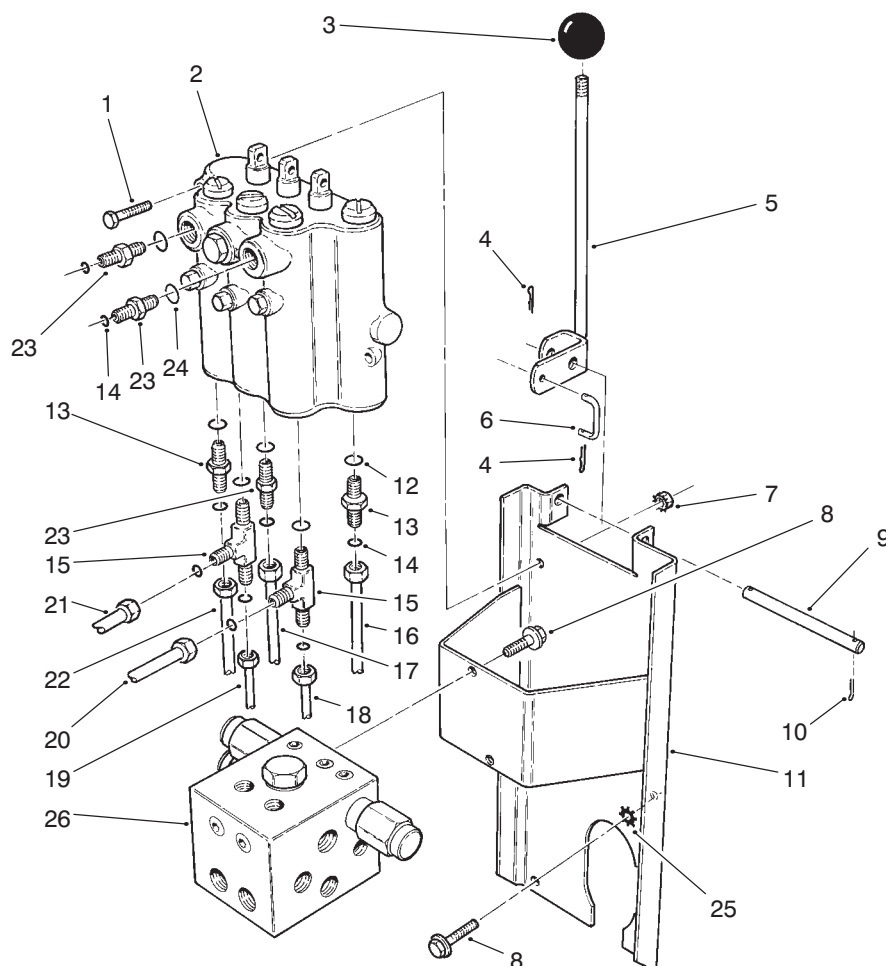


T-0355-1

LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	321-10	Screw - Cap Hex. Hd.	2	14	237-22	Seal - O-Ring	9
2	69-1780	Lift Valve Assembly	1	15	340-86	Fitting - Hydraulic Tee (Incl. Ref. #14 & 24)	2
3	233-42	Knob	3	16	69-5860	Tube - Hydraulic	1
4	3272-1	Pin - Cotter	6	17	69-5720	Tube - Hydraulic	1
5	69-7010	Lever - Valve L.H.	1	18	69-5700	Tube - Hydraulic	1
*	69-6990	Lever - Valve Mid.	1	19	69-5740	Tube - Hydraulic	1
*	69-7000	Lever - Valve R.H.	1	20	69-5680	Tube - Hydraulic	1
6	69-9140	Link - Valve Lever	3	21	69-5890	Tube - Hydraulic	1
7	32149-2	Nut - Keps	2	22	69-5870	Tube - Hydraulic	1
8	3234-14	Screw - Hex. Flange Hd.	6	23	340-2	Fitting - Hydraulic Straight (Incl. Ref. #14 & 24)	3
9	69-9150	Shaft - Valve Lever	1	24	237-42	Seal - O-Ring	5
10	3272-6	Pin - Cotter	2	25	3254-6	Washer - Lock	1
11	69-7810	Bracket - Valve	1	26	69-4060	Counterbalance Manifold Assembly	1
12	237-79	Seal - O-Ring	2				
13	340-3	Fitting - Hydraulic Straight (Incl. Ref. #12 & 14)	2				

*Not Illustrated

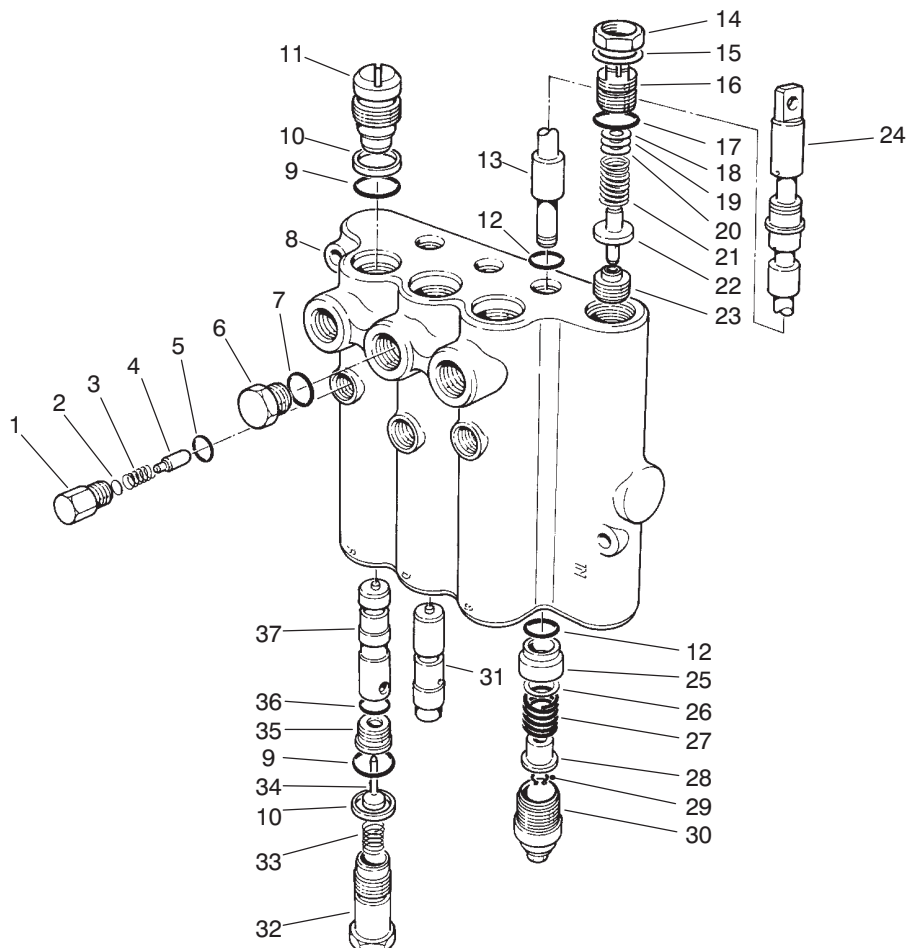

T-0379-1


LIFT VALVE ASSEMBLY NO. 69-1780

Ref. No.	Part No.	Description	No. Used
1	58-6780	Plug Assy. (Incl. Ref. #5)	3
2	60-6450	Disc	A/R
3	58-6760	Spring	3
4	58-6770	Plunger - Detent	3
5	58-6790	Seal - O-Ring	3
6	58-6710	Plug Assy. (Incl. Ref. #7)	1
7	58-6720	Seal - O-Ring	1
†8		Body	1
9	60-5720	Seal - O-Ring	6
10	58-6370	Washer - Back-Up	6
11	58-6350	Plug Assembly (Incl. Ref. #9-10)	3
12	58-6450	Seal - O-Ring	6
†13		Spool	3
14		Nut - Lock	1
15		Washer	1
16	69-1830	Plug Assembly (Incl. Ref. #14, 15 & 17)	1
17	58-6750	Seal - O-Ring	1
18	58-6470	Washer	A/R
19	58-6480	Washer	A/R
20	58-6490	Washer	A/R

Ref. No.	Part No.	Description	No. Used
21	69-1820	Spring - Black	1
22	58-6440	Poppet	1
†23		Seat	1
24	58-6320	Wiper - Seal	3
25	58-6400	Bushing	3
26	58-6700	Washer	3
27	58-6730	Spring	3
28	58-6310	Spacer	3
29	58-6460	Ring - Retaining	3
30	58-6420	Cap Assembly	3
31	69-1840	Plunger	1
32	69-1800	Plug Assembly (Incl. Ref. #9-10)	3
33	69-1810	Spring	3
34	58-6290	Poppet Assembly	3
35	58-6330	Seat Assy. (Incl. Ref. #36)	3
36	58-6340	Seal - O-Ring	3
37	69-1790	Plunger	2
*	60-3780	Seal Kit (Incl. Ref. #5, 7, 9, 10, 12, 17, 24, 29, 34, & 36)	1

*Not Illustrated

†Not Serviceable Separately

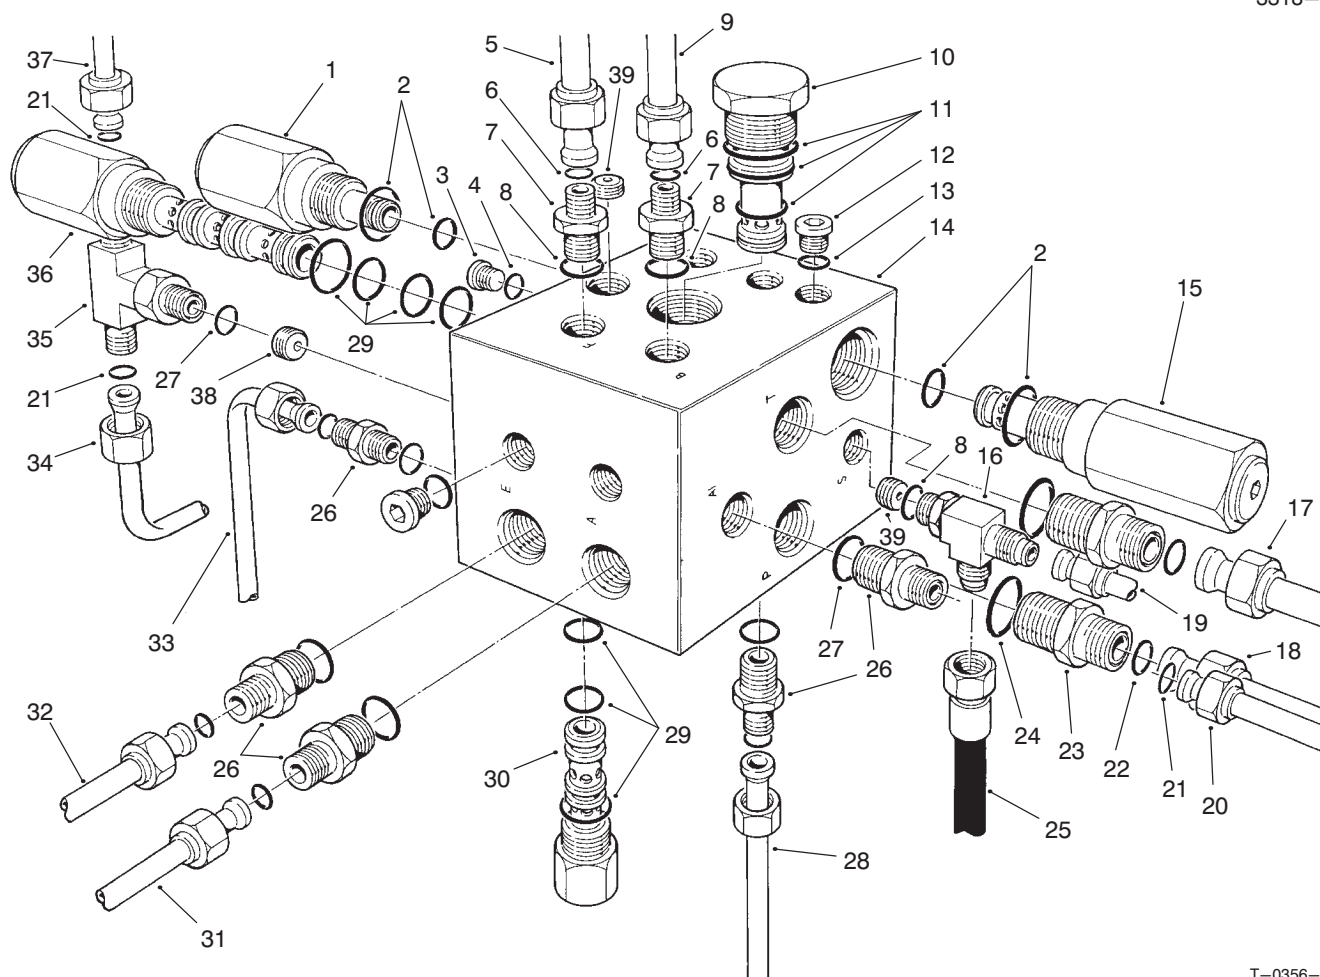


T-0356-2

COUNTERBALANCE MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	95-5630	Valve - Hydraulic Cartridge (Incl. Ref. #2)	1
2	95-5645	Kit - Seal	2
3	353-990	Plug - Hose (Incl. Ref. #4)	2
4	237-78	Seal - O-Ring	2
5	69-5890	Tube - Hydraulic	1
6	237-21	Seal - O-Ring	2
7	340-92	Fitting - Hydraulic Straight (Incl. Ref. #6 & 8)	2
8	237-78	Seal - O-Ring	3
9	69-5680	Tube - Hydraulic	1
10	95-5634	Valve - Hydraulic Cartridge (Incl. Ref. #11)	1
11	95-5641	Kit - Seal	1
12	353-991	Plug - Hole (Incl. Ref. #13)	8
13	237-156	Seal - O-Ring	8
14	69-4070	Manifold - Counter Balance	1
15	95-5632	Valve - Hydraulic Cartridge (Incl. Ref. #2)	1
16	353-566	Tee - Hydraulic (Incl. Ref. #8)	1
17	92-4967	Tube - Hydraulic	1
18	69-5850	Tube - Hydraulic	1
19	69-5910	Tube - Hydraulic	1
20	69-5710	Tube - Hydraulic	1
21	237-22	Seal - O-Ring	7

22	237-30	Seal - O-Ring	2
23	340-4	Fitting - Hydraulic Straight (Incl. Ref. #22 & 24)	2
24	237-79	Seal - O-Ring	2
25	93-7192	Hose - Hydraulic Diagnostic	1
26	340-2	Fitting - Hydraulic Straight (Incl. Ref. #21 & 27)	5
27	237-42	Seal - O-Ring	6
28	69-5870	Tube - Hydraulic	1
29	95-5642	Kit - Seal	3
30	95-5633	Valve - Hydraulic Cartridge (Incl. Ref. #29)	2
31	69-5820	Tube - Hydraulic	1
32	69-5830	Tube - Hydraulic	1
33	69-5730	Tube - Hydraulic	1
34	69-5860	Tube - Hydraulic	1
35	95-5631	Tee - Hydraulic (Incl. Ref. #21 & 27)	1
36	69-4090	Valve - Hydraulic Cartridge (Incl. Ref. #29)	1
37	69-5920	Tube - Hydraulic	1
*	95-5907	Counterbalance Manifold (Incl. Ref. #1-4, 10-15, 29, 30 & 36)	1
38	69-4140	Plug - Orifice .120	1
39	69-4130	Plug - Orifice .047	2

*Not Illustrated

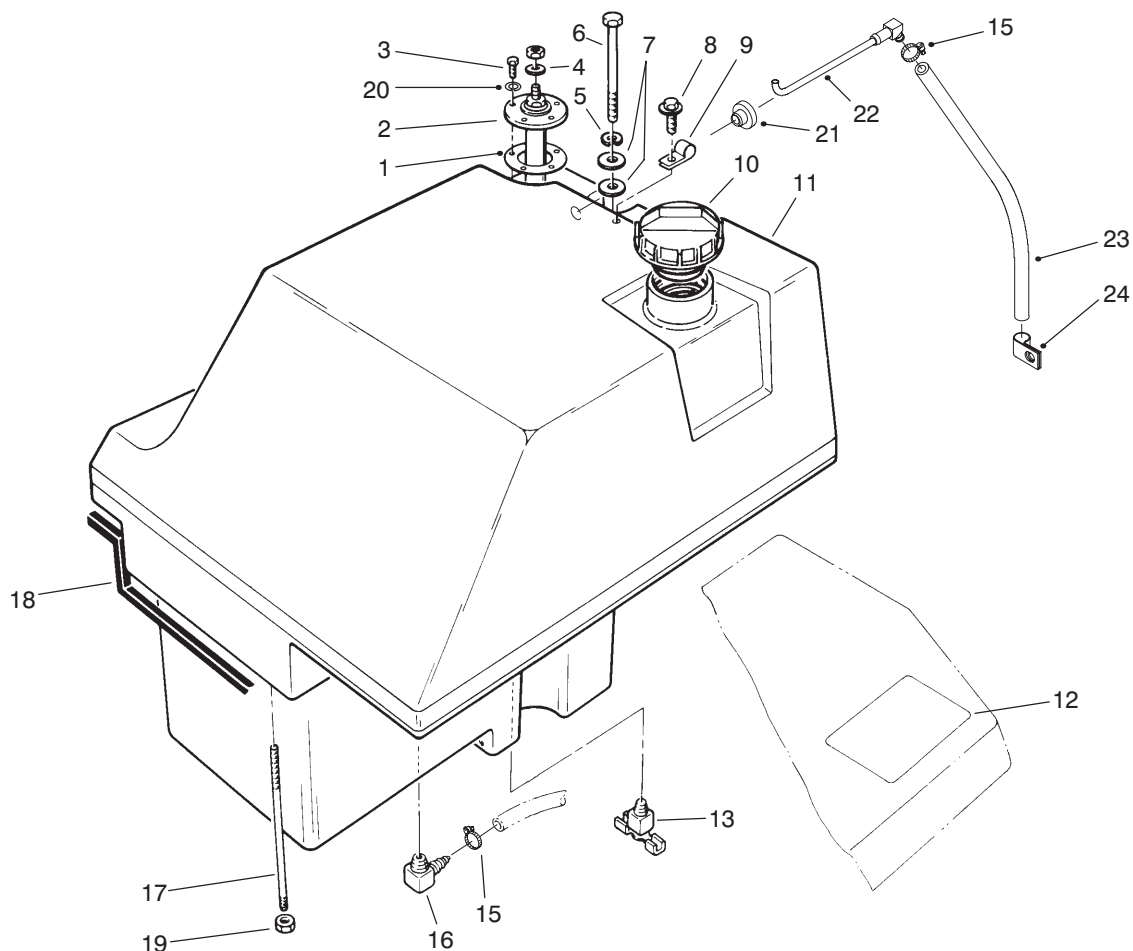


T-0353-3

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-7650	Gasket - Level Sensing Unit	1
2	70-6990	Level Sensing Unit Assembly	1
3	32122-24	Screw - Cap Hex. Hd.	5
4	5-3637	Spacer - Terminal	1
5	3253-21	Washer - Lock	1
6	323-21	Screw - Cap Hex. Hd.	1
7	3256-5	Washer - Flat	2
8	3234-13	Screw - Hex. Washer Hd.	1
9	2412-89	Clamp - R	1
10	93-3102	Cap - Fuel	1
11	94-2865	Tank - Fuel	1
12	95-0822	Decal - Warning	1

Ref. No.	Part No.	Description	No. Used
13	304-46	Drain - Fuel Tank	1
15	2412-108	Clamp - Hose	2
16	353-536	Fitting - Fuel 90° Elbow	1
17	72-9550	Stud - Fuel Tank	1
18	68-7572	Strip - Sealing	1
19	3296-39	Nut - Hex.	1
20	3253-15	Washer - Lock	5
21	46-6560	Bushing	1
22	94-3310	Tube - Vent	1
23	94-3311	Hose - Fuel	1
24	2412-138	Clamp - R	1


* Not Illustrated.

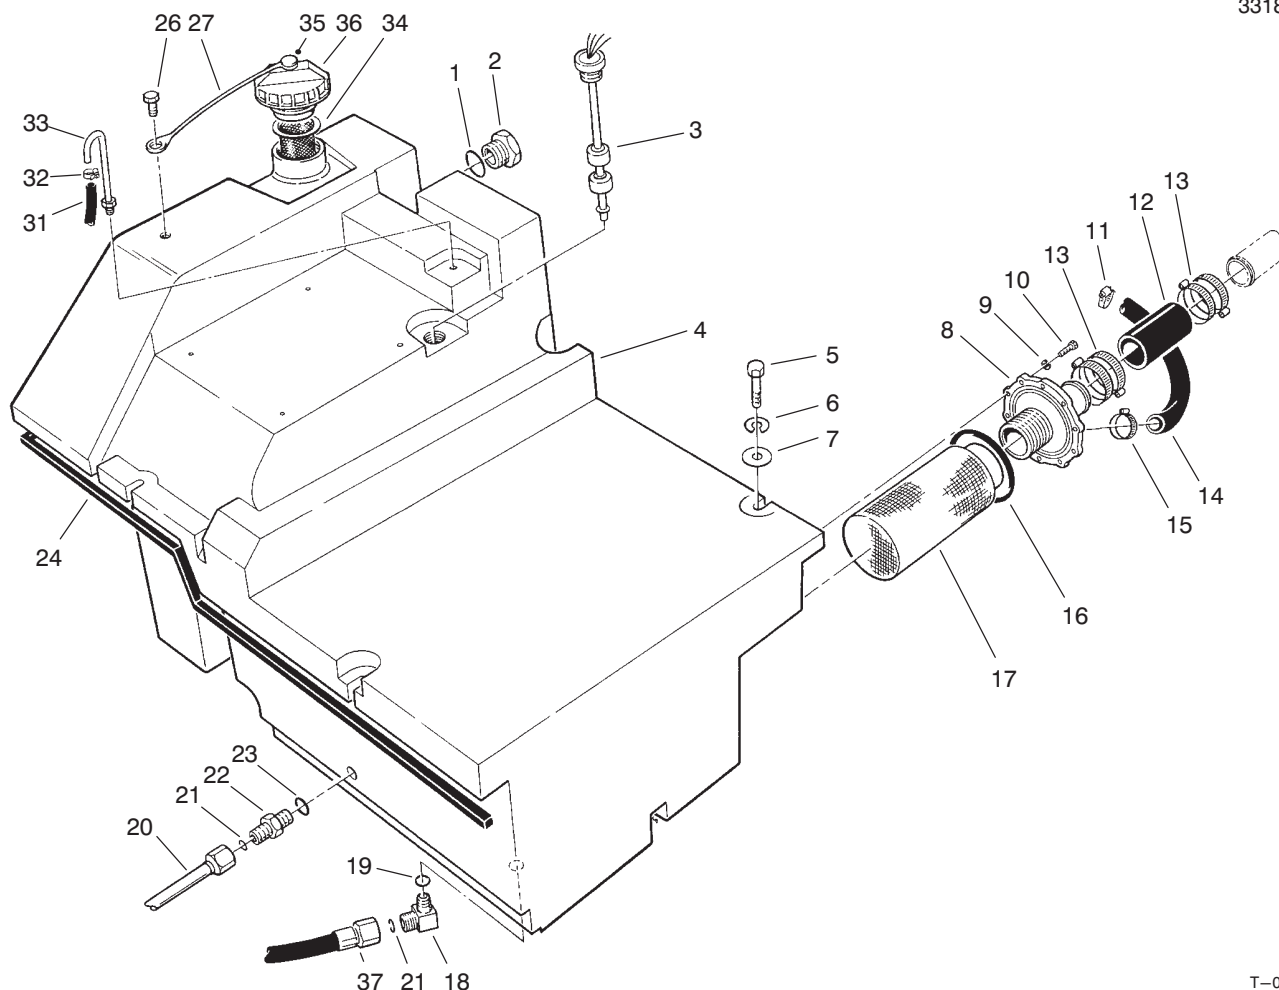

T-0354-2

HYDRAULIC TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	237-81	Seal - O-Ring	1	18	340-130	Fitting - Hydraulic 90° (Incl. Ref. #19 & 21)	1
2	69-1170	Gauge - Sight (Incl. Ref. #1)	1	19	237-80	Seal - O-Ring	3
3	85-6260	Level Sensing Unit	1	20	69-5800	Tube - Hydraulic	1
4	94-1893	Tank - Hydraulic	1	21	237-22	Seal - O-Ring	2
5	323-10	Screw - Cap Hex. Hd.	4	22	340-3	Fitting - Hydraulic Straight (Incl. Ref. #21 & 23)	1
6	3253-21	Washer - Lock	4	23	237-79	Seal - O-Ring	1
7	5-3177	Washer - Flat	4	24	68-7571	Strip - Sealing	1
8	69-1610	Adapter - Suction Hose	1	26	321-2	Screw - Cap, Hex. Hd.	1
9	3253-3	Washer - Lock	10	27	75-0540	Tether - Cap, Reservoir	1
10	321-5	Screw - Cap Hex. Hd.	10	31	71-2680	Hose - Vent	1
11	2412-34	Clamp - Hose	1	32	2412-108	Clamp - Hose	1
12	69-5640	Hose - Suction	1	33	69-4280	Tube - Hydraulic Vent	1
13	2412-42	Clamp - Hose	4	34	61-2790	Filler - Screen	1
14	94-1892	Hose - Auxiliary Suction	1	35	2410-73	Pin - Tether	1
15	2412-3	Clamp - Hose	1	36	93-3103	Cap - Hydraulic (Incl. Ref. #27 & 35)	1
16	237-157	Seal - O-Ring	1	37	92-4970	Hose - Hydraulic	1
17	69-1650	Screen - Suction	1				

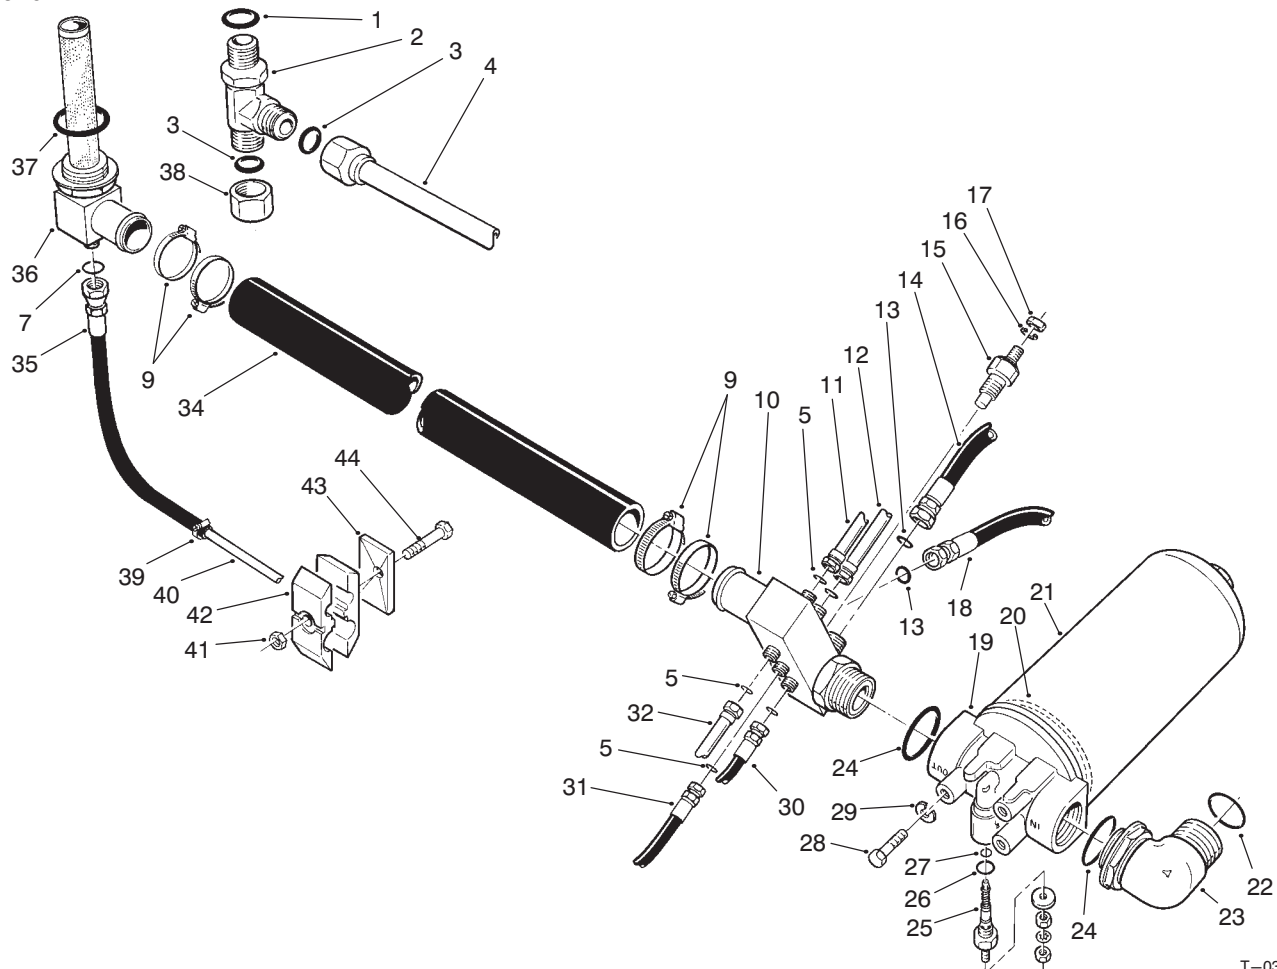


T-0367-1

HYDRAULIC FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237-80	Seal - O-Ring	1
2	340-22	Fitting - Hydraulic Tee (Incl. Ref. #1 & 3)	1
3	237-65	Seal - O-Ring	2
4	92-4807	Tube - Hydraulic	1
5	237-22	Seal - O-Ring	3
7	237-58	Seal - O-Ring	1
9	2412-92	Clamp - Hose	4
10	69-5410	Manifold - Return (Incl. Ref. #5, 13 & 24)	1
11	69-6000	Tube - Hydraulic (Incl. Ref. #5)	1
12	69-5990	Tube - Hydraulic (Incl. Ref. #5)	1
13	237-30	Seal - O-Ring	2
14	69-5460	Hose - Hydraulic	1
15	39-7593	Temperature Sending Unit	1
16	3253-2	Washer - Lock	1
17	3219-14	Nut - Hex.	1
18	69-5650	Hose - Hydraulic	1
19	69-1700	Hydraulic Filter Assembly (Incl. Ref. #20, 21 & 25-27)	1
20	237-155	Seal - O-Ring	1
21	69-1720	Element - Filter (Incl. Ref. #20)	1

Ref. No.	Part No.	Description	No. Used
22	340-65	Seal - O-Ring	1
23	340-79	Fitting - Hydraulic 90° (Incl. Ref. #22 & 24)	1
24	237-101	Seal - O-Ring	2
25	69-1710	Indicator - Filter (Incl. Ref. #26 & 27)	1
†26		Seal - O-Ring	1
†27		Seal - O-Ring	1
28	323-4	Screw - Cap Hex. Hd.	3
29	3253-21	Washer - Lock	3
30	69-5440	Hose - Hydraulic	1
31	69-8440	Hose - Hydraulic	1
32	69-5950	Tube - Hydraulic	1
34	74-2660	Hose - Hydraulic Return	1
35	92-2352	Hose - Hydraulic	1
36	92-2351	Fitting - Tank Return (Incl. Ref. #7 & 37)	1
37	340-136	Seal - O-Ring	1
38	340-150	Cap - Hydraulic	1
39	2412-129	Clamp - Hose	1
40	92-1742	Tube - Hydraulic	1
41	32152-1	Nut - Lock	3
42	56-7978	Clamp Half - Hydraulic Line	6
43	69-9761	Plate - Cover	3
44	322-12	Screw - Cap Hex. Hd.	3

†Not serviceable separately.

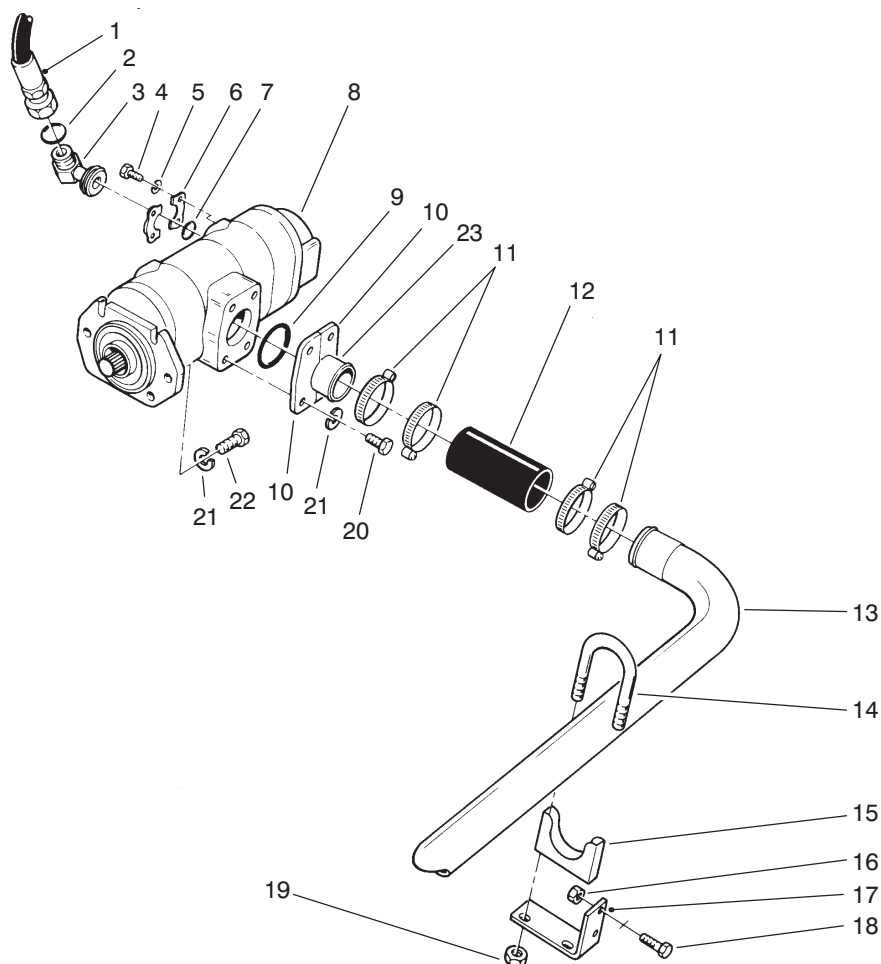


T-0349-1

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69—5590	Hydraulic Hose Assembly	2	13	94—1891	Hydraulic Tube Assembly	1
2	237—58	Seal — O—Ring	2	†14		Bolt — U	2
3	69—6240	Fitting — Hydraulic 90° (Incl. Ref # 2 & 7)	2	15	20—4840	Clamp — Tube (Incl. Ref. #14 & 19)	2
4	323—7	Screw — Cap Hex. Hd.	8	16	32152—2	Nut — Lock	4
5	3253—21	Washer — Lock	8	17	69—9220	Support — Tube Clamp	2
6	353—992	Flange — Fitting	4	18	323—6	Screw — Cap Hex. Hd.	4
7	340—135	Seal — O—Ring	2	19	32128—25	Nut — Lock	4
8	69—2050	Hydraulic Pump Assembly	1	20	325—6	Screw — Cap Hex. Hd.	4
9	237—116	Seal — O—Ring	1	21	3253—7	Washer — Lock	8
10	354—42	Flange — Half	2	22	3213—2	Screw — Cap Hex. Hd.	4
11	2412—42	Clamp — Hose	4	23	74—2270	Fitting — Suction	1
12	69—5640	Hose — Hydraulic	1				

†Not serviceable separately.

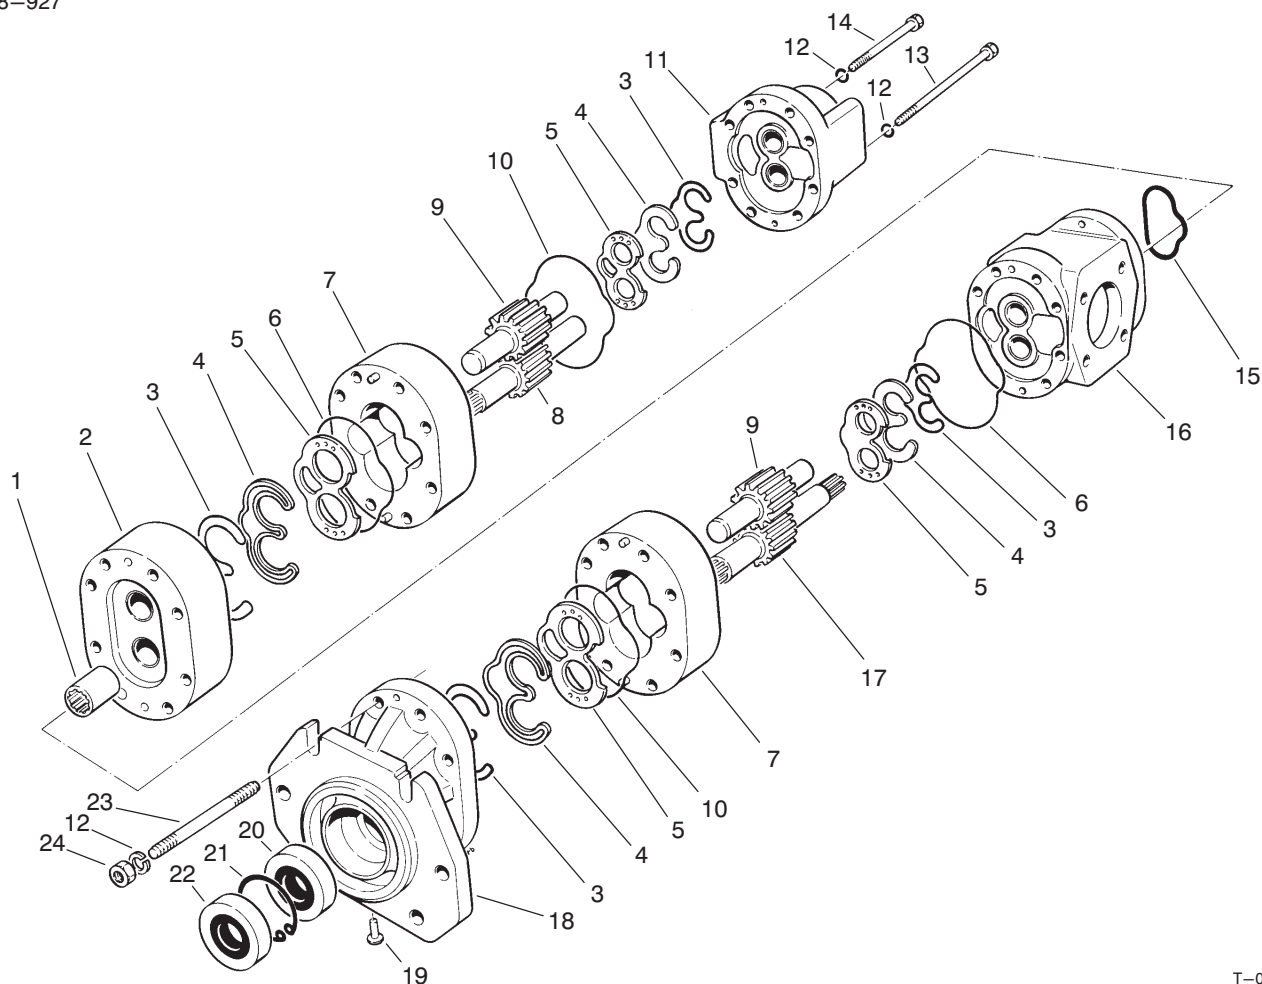


T-0382-1

DOUBLE GEAR PUMP NO. 69-2050

Ref. No.	Part No.	Description	No. Used
1	69-2110	Coupling	1
2	69-2170	Adapter Section Assembly	1
3	59-7990	Seal - Gland	4
4	59-8470	Retainer - Seal	4
5	69-2070	Plate - Flex	4
6	69-2200	Seal - O-Ring	2
7	69-2080	Center Section Assembly	2
8	69-2090	Gear/Shaft - Rear Drive	1
9	59-8600	Gear - Driven	2
10	69-2120	Seal - O-Ring	2
11	69-2100	Rear Cover Assembly	1
12	59-7590	Washer - Lock	16
13	69-2150	Screw - Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
14	69-2140	Screw - Cap Hex. Hd.	4
15	69-2210	Seal - O-Ring	1
16	69-2160	Port Section Assembly	1
17	59-8500	Gear/Shaft - Front Drive	1
18	69-2060	Shaft End Cover Assembly	1
19	69-2130	Plug	1
20	59-8590	Seal - Shaft	1
21	59-8580	Ring - Retaining	1
22	59-8570	Seal - Shaft	1
23	59-7970	Stud - Threaded	8
24	59-7580	Nut - Hex.	8
*	59-8610	Repair Kit (Incl. Ref. #3, 4, 20 & 22)	1

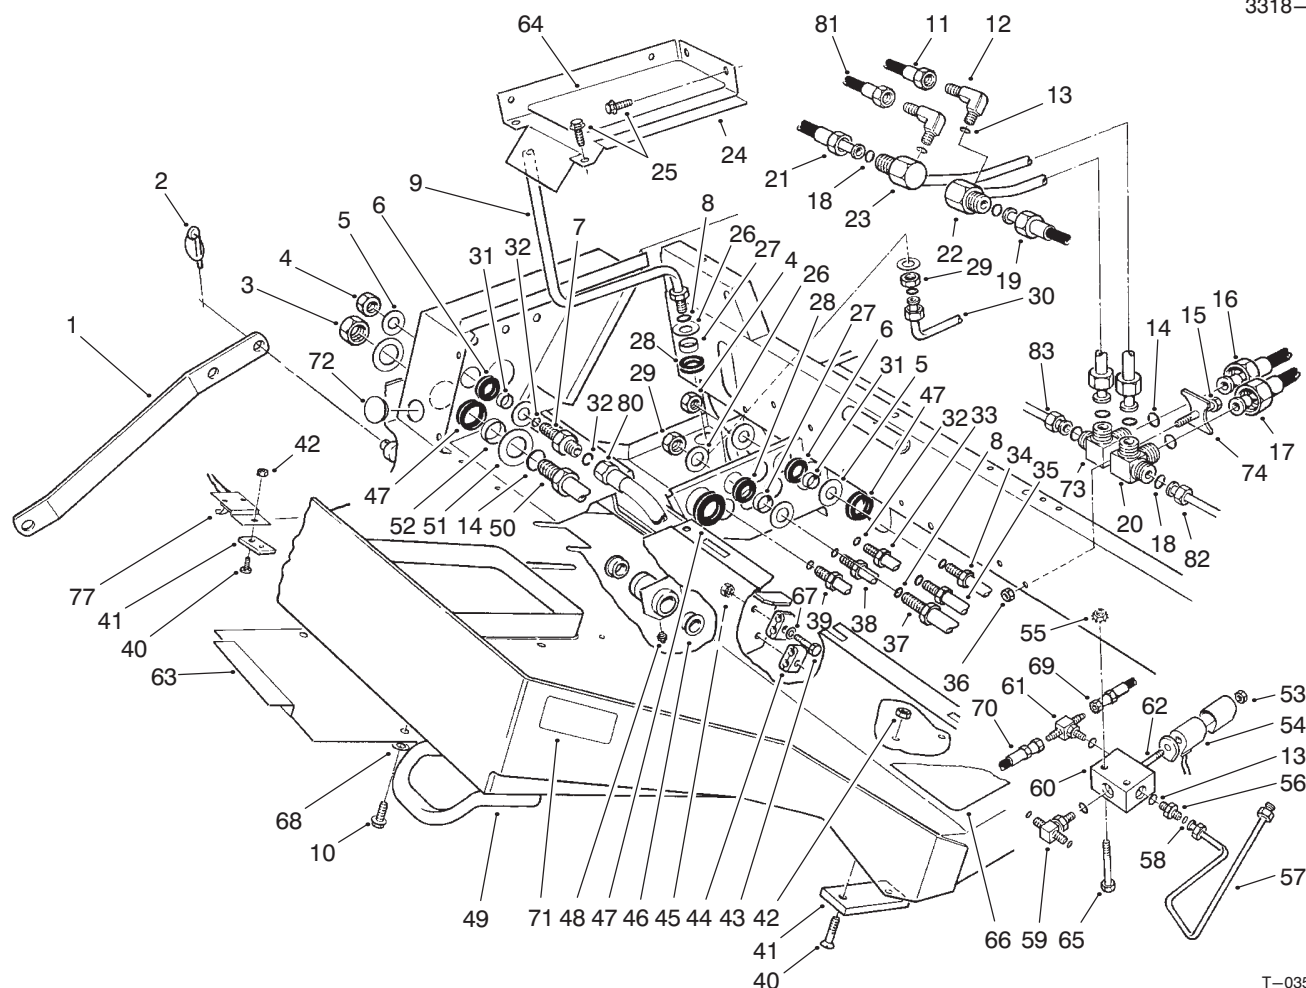


T-0357-2

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	85-6190	Link - Deck Tilt	1	22	69-6200	Tube - Hydraulic	1
2	3290-495	Pin - Lynch	2	23	69-6190	Tube - Hydraulic	1
3	340-126	Nut - Bulkhead	2			(Incl. Ref. #18)	
4	340-70	Nut - Bulkhead	6	24	71-2450	Cover - Access	1
5	69-8940	Washer	12	25	3234-14	Screw - Hex. Flange Hd.	4
6	240-4	Grommet	6	26	69-8930	Washer	4
7	340-71	Fitting - Hydraulic Bulkhead	1	27	69-8960	Spacer	2
		(Incl. Ref. #32)		28	240-5	Grommet	2
8	237-30	Seal - O-Ring	3	29	340-127	Nut - Bulkhead	2
9	92-4967	Tube - Hydraulic	1	30	85-6150	Tube - Hydraulic	1
		(Incl. Ref. #8)		31	69-8970	Spacer	6
10	3234-28	Screw - Hex. Flange Hd.	2	32	237-22	Seal - O-Ring	7
11	93-7422	Hose - Hydraulic	1	33	69-6050	Tube - Hydraulic	1
12	353-375	Fitting - Hydraulic 90°	2			(Incl. Ref. #32)	
		(Incl. Ref. #13)		34	69-6040	Tube - Hydraulic	1
13	237-78	Seal - O-Ring	5			(Incl. Ref. #32)	
14	237-58	Seal - O-Ring	4	35	69-6030	Tube - Hydraulic	1
15	3274-86	Screw - Cap Socket Hd.	1			(Incl. Ref. #32)	
16	69-5470	Hose - Hydraulic	1	36	32152-1	Nut - Lock	1
17	69-5480	Hose - Hydraulic	1	37	69-5790	Tube - Hydraulic	1
18	237-65	Seal - O-Ring	6			(Incl. Ref. #8)	
19	93-7177	Assy. - Tube, Traction L.H.	1	38	69-6060	Tube - Hydraulic	1
20	83-8350	Fitting - Traction, L.H.	1			(Incl. Ref. #32)	
		(Incl. Ref. #14 & 18)		39	93-7426	Tube - Hydraulic	1
21	93-7178	Assy. - Tube, Traction R.H.	1			(Incl. Ref. #32)	

*Not Illustrated

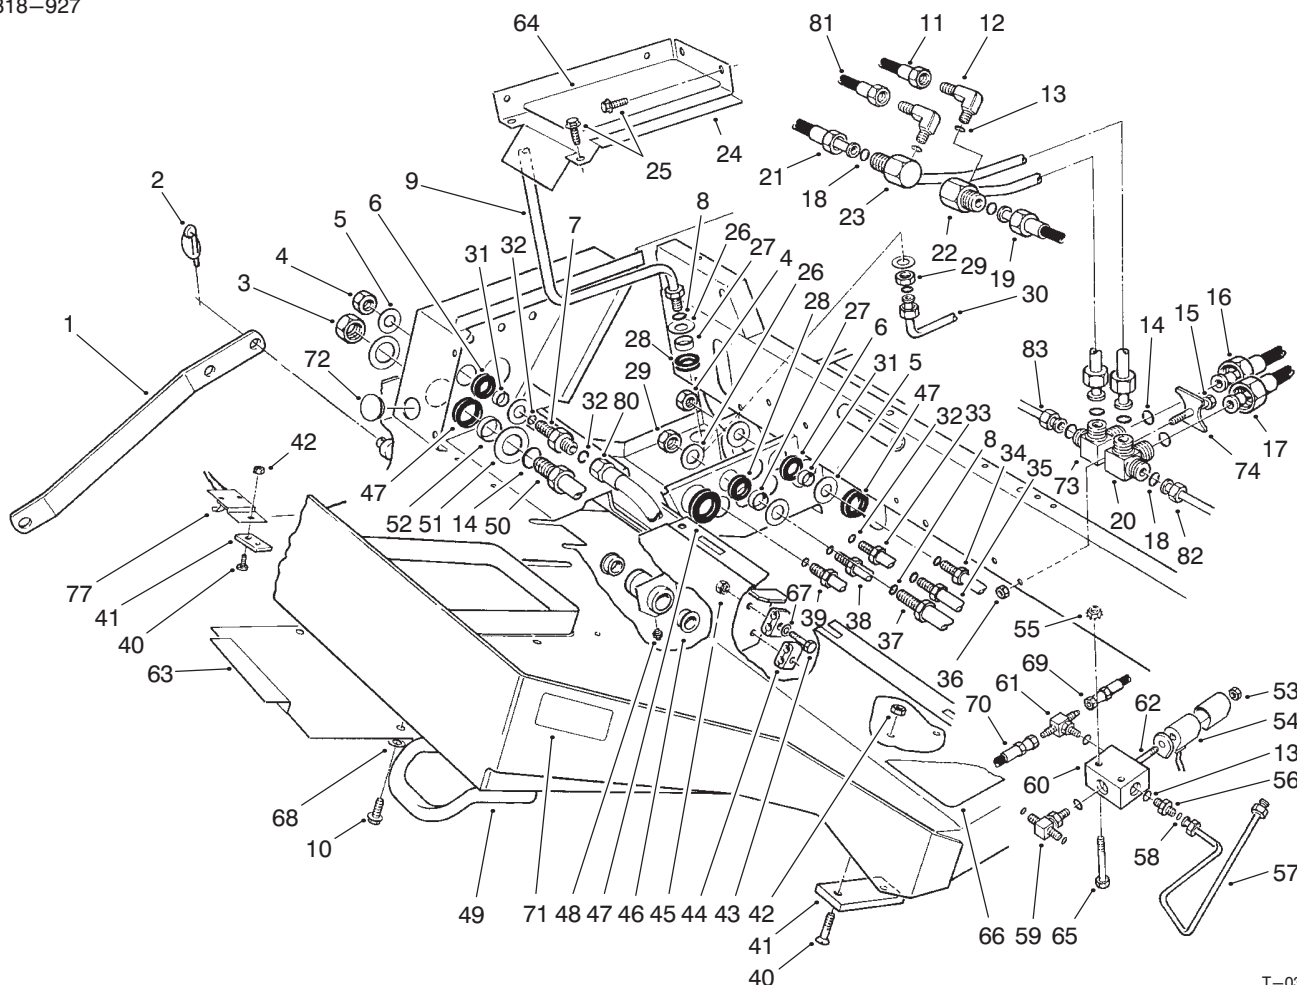

T-0357-2


FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
40	32108-103	Screw - Machine Flat Hd.	4
41	69-9300	Cushion - Rubber	2
42	32152-1	Nut - Lock	4
43	321-9	Screw - Cap Hex. Hd.	2
44	56-7973	Clamp Half - Hydraulic Line	4
45	32152-4	Nut - Lock	2
46	256-247	Bushing - Flange	2
47	240-7	Grommet	4
48	302-5	Fitting - Grease	1
49	69-0100	Frame - Assembly (Incl. Ref. #46 & 48)	1
50	69-6100	Tube - Hydraulic Pressure (Incl. Ref. #14)	1
*	69-5810	Tube - Hydraulic Return (Incl. Ref. #14)	1
51	69-8910	Washer	4
52	69-8900	Spacer	2
53	3220-4	Nut	1
54	92-3048	Solenoid Coil Kit	3
55	32149-2	Nut - Keps	2
56	340-92	Fitting - Hydraulic (Incl. Ref. #13 & 58)	1
57	69-5950	Tube - Hydraulic	1
58	237-21	Seal - O-Ring	3
59	340-125	Fitting - Hydraulic (Incl. Ref. #13 & 58)	1

Ref. No.	Part No.	Description	No. Used
†60		Body - Valve	1
61	93-9988	Fitting - Hydraulic (Incl. Ref. #13)	1
62	95-5638	Valve - Solenoid (Incl. Ref. #53)	1
63	69-9470	Cover - Access	1
64	71-0430	Cover - Abrasive	1
65	321-11	Screw - Cap Hex. Hd.	2
66	71-0420	Floor - Abrasive	1
67	3256-56	Washer - Flat	2
68	3256-23	Washer - Flat	2
69	93-7424	Hose - Diagnostic	1
70	93-7193	Hose - Diagnostic	1
71	72-4080	Decal - Danger	2
72	2410-10	Plug - Button	1
73	83-8360	Fitting - Traction, R.H.	1
74	83-8370	Plate - Clamp	1
77	93-7038	Switch	1
80	92-4970	Hose - Hydraulic	1
81	93-7192	Hose - Diagnostic	1
82	83-4330	Assy. - Tube, Traction LH	1
83	83-4340	Assy. - Tube, Traction RH	1
*	95-5917	Valve Seal Kit	1
*	95-5916	Solenoid Valve Assembly (Incl. Ref. #53, 54, 60, 62 & Valve Seal Kit #92-3049)	1

*Not Illustrated


†Not serviceable separately.

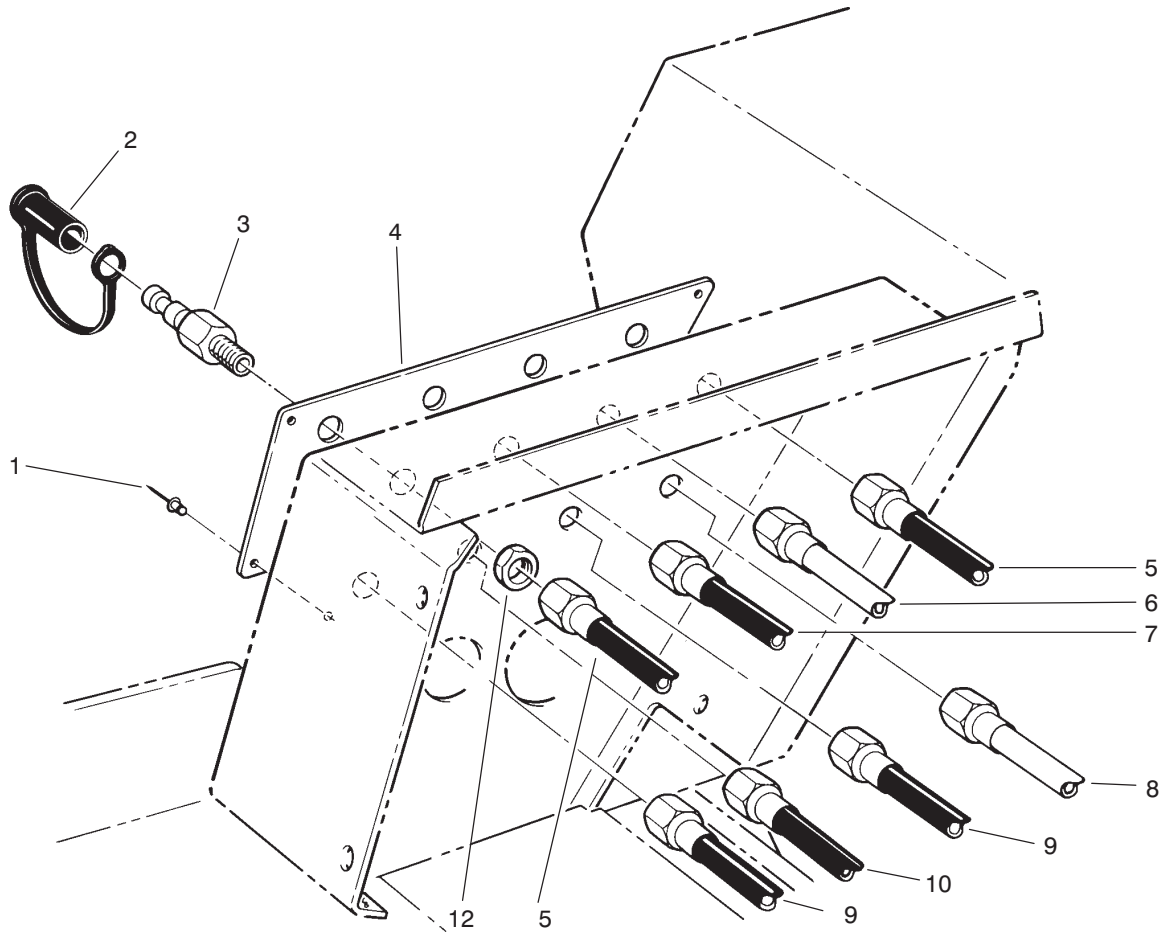

T-0363-1

HYDRAULIC SYSTEM DIAGNOSTIC PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3269—25	Rivet — Pop	4	6	69—5910	Tube — Hyd. Diagnostic	1
2	353—947	Cap — Fitting	8	7	93—7193	Hose — Hyd. Diagnostic	1
3	353—997	Fitting — Hydraulic Bulkhead (Incl. Ref. #12)	8	8	69—5920	Tube — Diagnostic	1
4	95—0824	Panel — Diagnostic	1	9	93—7423	Hose — Hyd. Diagnostic	2
5	93—7422	Hose — Hyd. Diagnostic	1	10	93—7425	Hose — Hyd. Diagnostic	1
				12	3220—4	Nut — Bulkhead	8

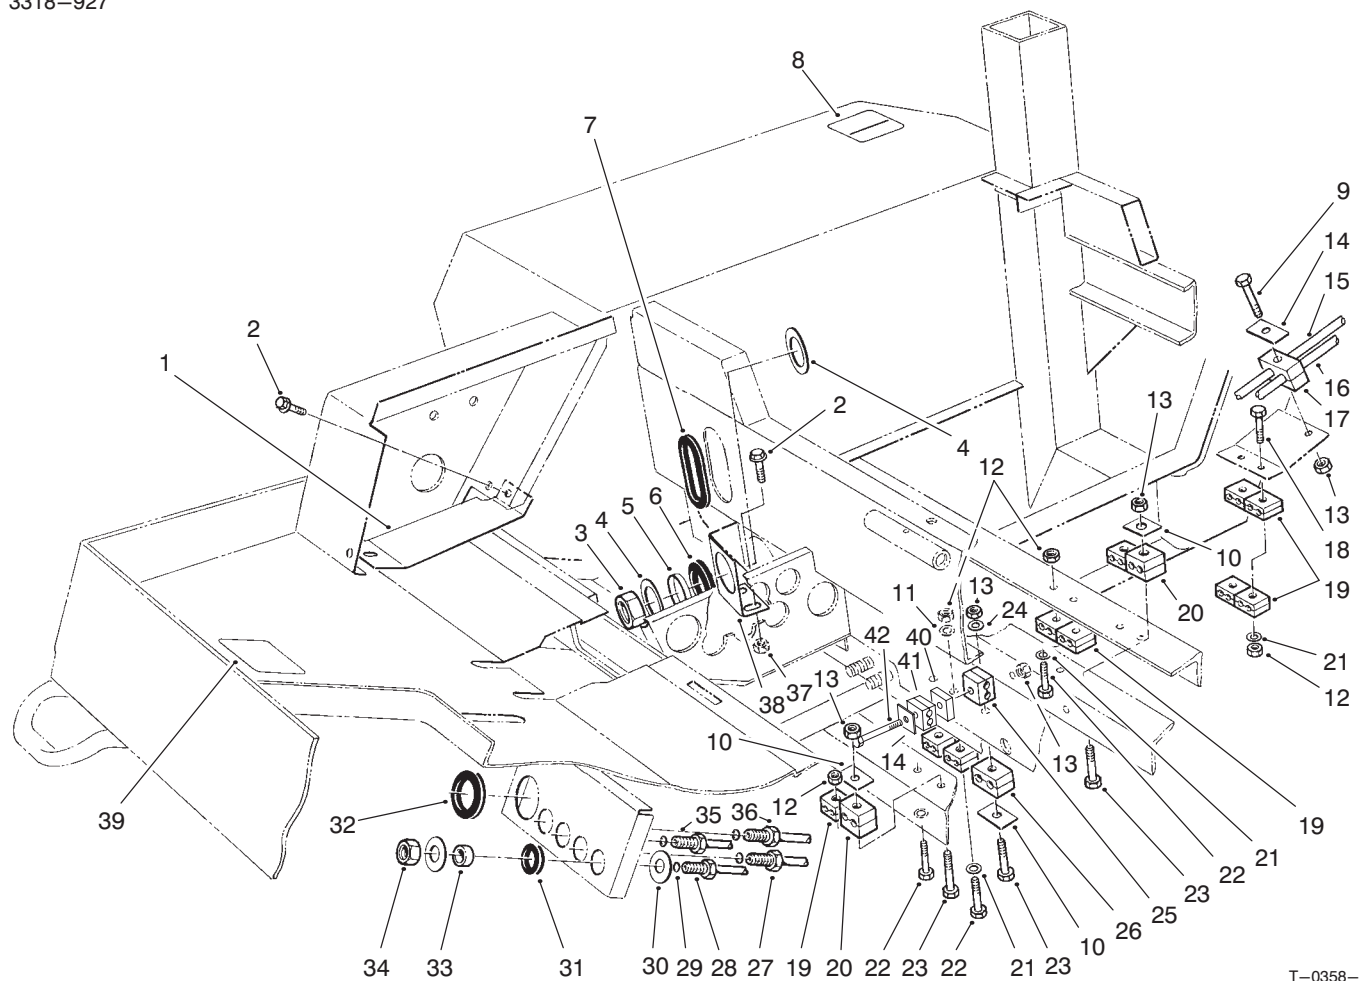


T-0358-2


HYDRAULIC LINE CLAMPS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-9330	Cover	1
2	3234-14	Screw - Hex. Flange Hd.	6
3	340-128	Nut - Bulkhead	2
4	69-8920	Washer	4
5	69-8950	Spacer	2
6	240-2	Grommet	2
7	237-164	Grommet	1
8	95-0821	Decal - Hydraulic Oil	1
9	322-12	Screw - Cap Hex. Hd.	2
10	69-9760	Plate - Cover	3
11	3256-22	Washer - Flat	2
12	32152-4	Nut - Lock	6
13	32152-1	Nut - Lock	8
14	69-9761	Plate - Cover	5
15	69-6130	Tube - Hydraulic	1
16	69-6120	Tube - Hydraulic	1
17	56-7974	Clamp Half - Hydraulic Line	2
18	321-15	Screw - Cap Hex. Hd.	2
19	56-7973	Clamp Half - Hydraulic Line	20
20	56-7972	Clamp Half - Hydraulic Line	4
21	3256-56	Washer - Flat	8
22	321-9	Screw - Cap Hex. Hd.	6
23	322-21	Screw - Cap Hex. Hd.	3

Ref. No.	Part No.	Description	No. Used
24	3256-23	Washer - Flat	1
25	56-7978	Clamp Half - Hydraulic Line	8
26	56-7971	Clamp Half - Hydraulic Line	2
27	93-7179	Tube - Hydraulic (Incl. Ref. #29)	1
28	69-5800	Tube - Hydraulic (Incl. Ref. #29)	1
29	237-21	Seal - O-Ring	4
30	69-8980	Washer	8
31	240-6	Grommet	4
32	240-7	Grommet	1
33	69-8990	Spacer	4
34	340-78	Nut - Bulkhead	4
35	69-6080	Tube - Hydraulic (Incl. Ref. #29)	1
36	69-6070	Tube - Hydraulic (Incl. Ref. #29)	1
37	32153-3	Nut - Lock	4
38	71-2560	Support - Bulkhead	2
39	69-0940	Decal - Caution	1
40	95-5616	Spacer	2
41	56-7970	Clamp - Tube	4
42	322-19	Screw - Hex. Hd.	2

HYDRAULIC SCHEMATIC

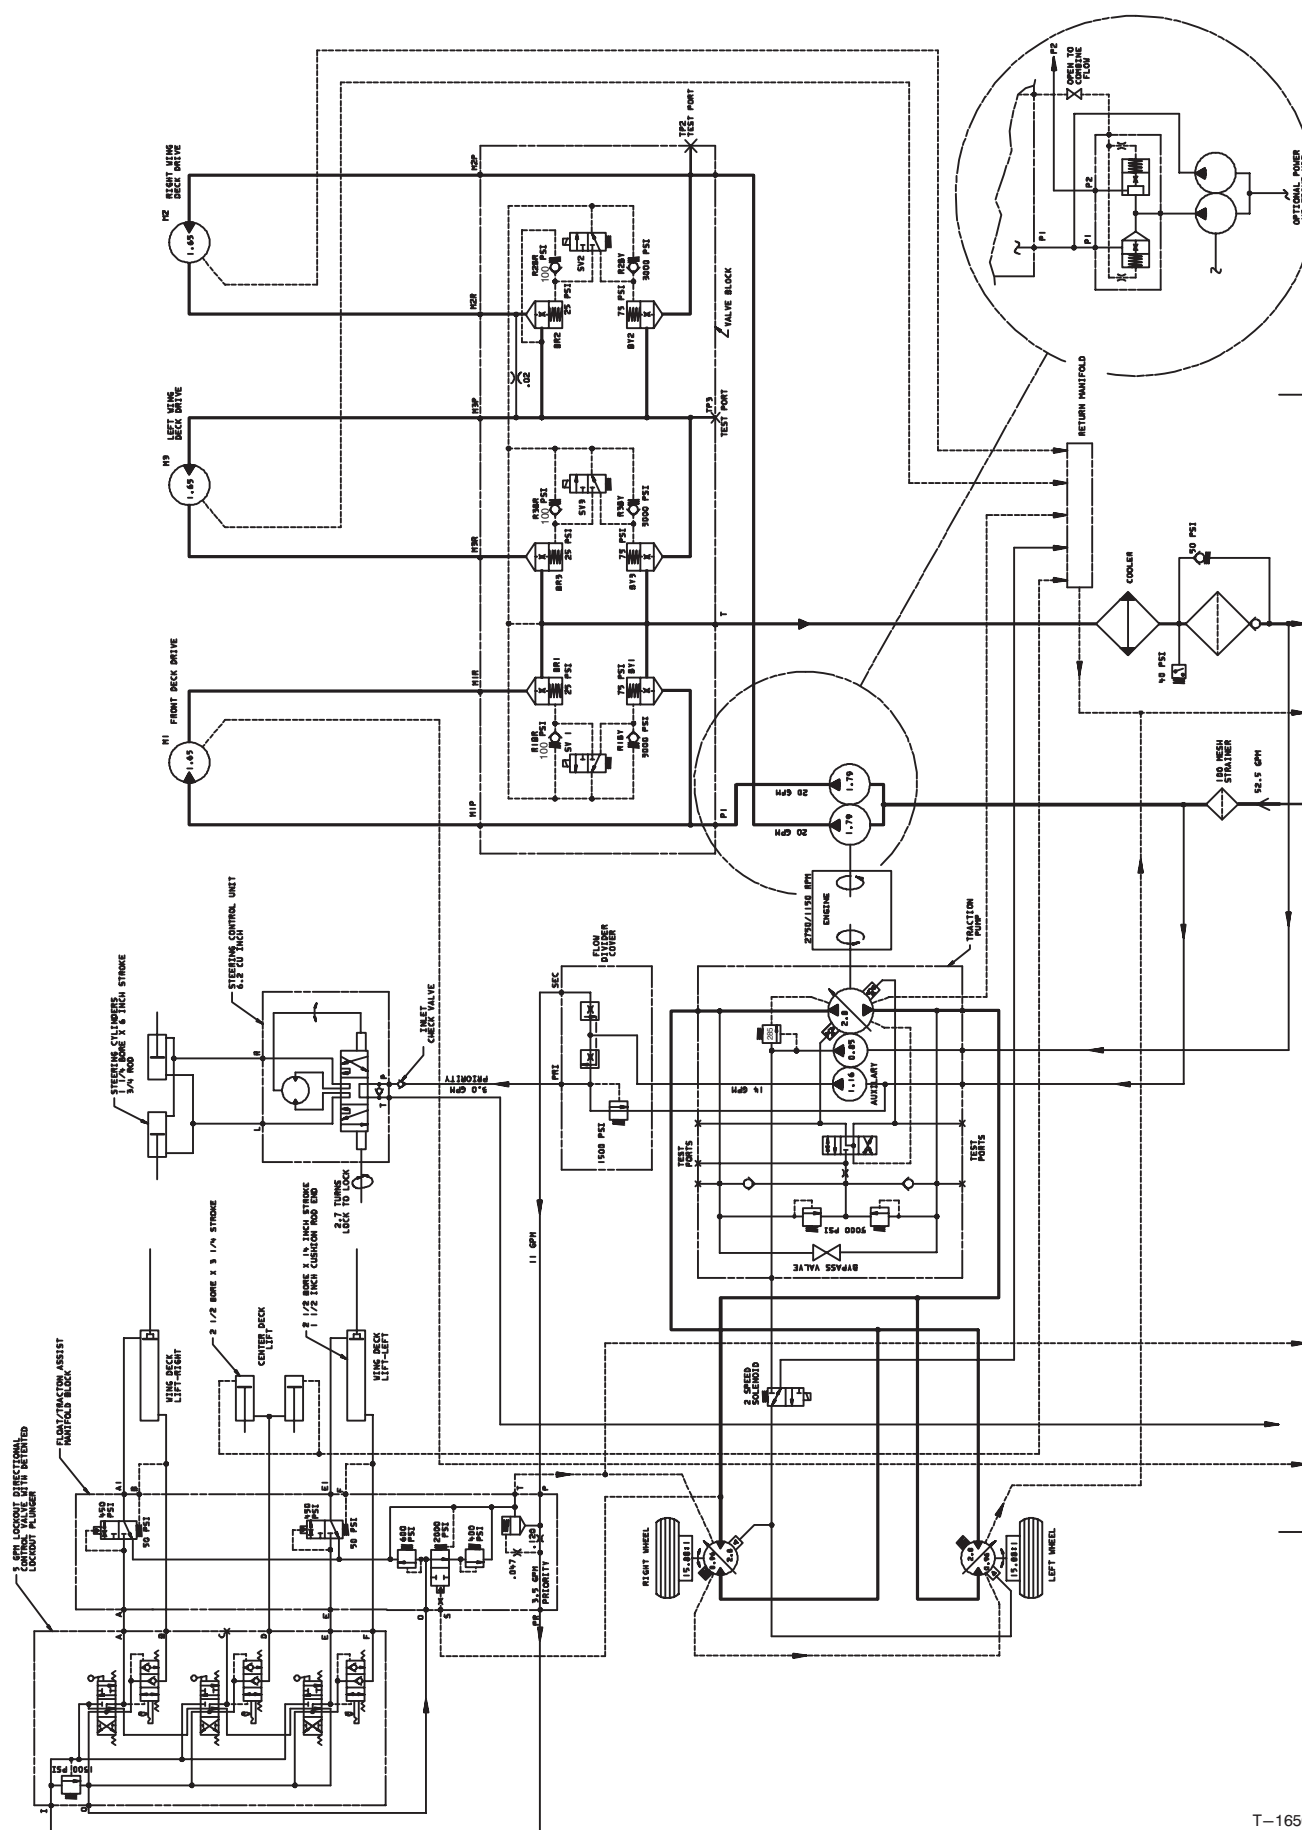

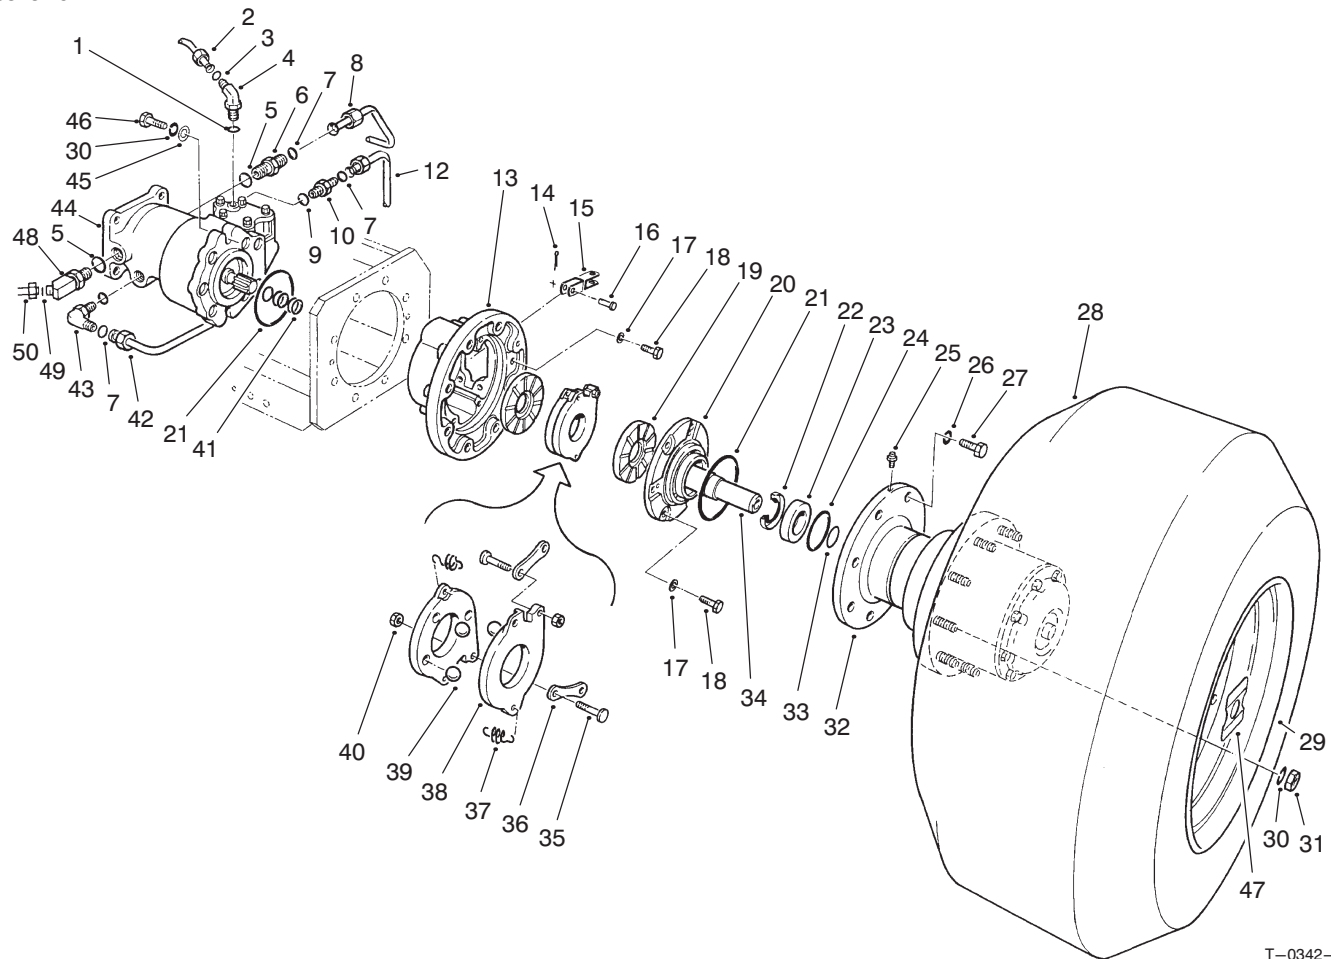


T-0342-2

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237-42	Seal - O-Ring	2
2	69-5940	Tube - Hydraulic L.H.	1
*	69-5930	Tube - Hydraulic R.H.	1
3	237-21	Seal - O-Ring	2
4	340-82	Fitting - Hydraulic Elbow (Incl. Ref. #1 & 3)	2
5	237-146	Seal - O-Ring	4
6	340-91	Fitting - Hydraulic Straight (Incl. Ref. #5 & 7)	2
7	237-58	Seal - O-Ring	7
8	83-4330	Tube - Hydraulic L.H.	1
*	83-4340	Tube - Hydraulic R.H.	1
9	237-81	Seal - O-Ring	4
10	340-9	Fitting - Hydraulic St. L.H. (Incl. Ref. #7 & 9)	1
*	340-148	Fitting - Hydraulic Tee R.H. (Incl. Ref. #7 & 9)	1
12	92-1742	Tube - Hydraulic L.H.	1
*	92-4807	Tube - Hyd. R.H. Run	1
*	85-6150	Tube - Hyd. R.H. Branch	1
13	71-4010	Housing - Brake	2
14	3272-6	Pin - Cotter	2
15	71-3880	Clevis - Brake Cable	2
16	283-2	Pin - Clevis	2
17	3253-21	Washer - Lock	14
18	323-6	Screw - Cap Hex. Hd.	14
19	71-0470	Disc - Middle	4
20	71-3990	Cap - Brake Housing	2

Ref. No.	Part No.	Description	No. Used
21	237-158	Seal - O-Ring	4
22	253-156	Seal - Oil	2
23	251-340	Bearing - Ball	2
24	32120-22	Ring - Retaining Internal	2
25	302-39	Vent	2
26	3253-8	Washer - Lock	16
27	327-22	Screw - Cap Hex. Hd.	16
28	69-9800	Tire	2
*	58-5620	Tube - Inner	2
*	231-140	Tire - (Optional)	2
29	71-2470	Rim	2
30	3253-7	Washer - Lock	22
31	3219-5	Nut - Hex.	18
32	69-1730	Planetary Gear Drive Assy.	2
33	32120-84	Ring - Retaining External	2
34	71-3810	Coupling - Hydraulic Motor	2
35	69-9970	Stud	4
36	69-9960	Link	4
37	69-9950	Spring - Extension	4
38	69-9990	Disc - Actuating	4
39	69-9980	Ball	6
40	69-9940	Nut - Jam	4
41	253-157	Ring - Cup	6
42	92-1741	Tube - Hydraulic	1
43	340-142	Fitting - Hydraulic Elbow (Incl. Ref. #9 & 11)	2
44	69-3050	Motor - Hydraulic Wheel	2
45	3256-26	Washer - Flat	4

*Not Illustrated

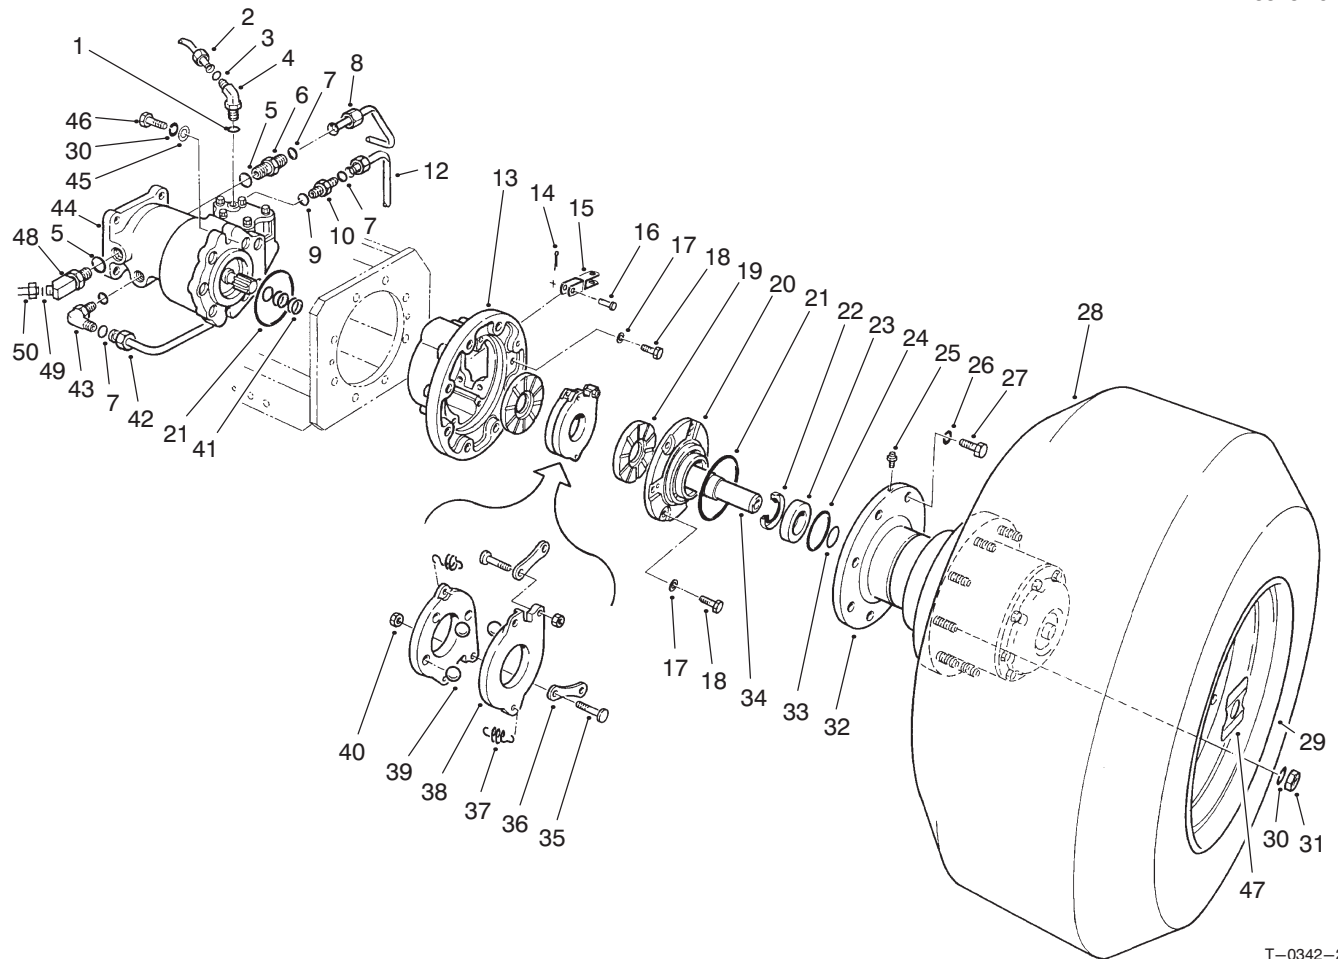


T-0342-2

FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
46	325-7	Screw — Cap Hex. Hd.	4	49	237-65	O-Ring	2
47	72-4070	Decal — Danger	2	50	93-7177	Tube — Hydraulic, LH	1
48	93-7176	Fitting — 45° ORFS	2	*	93-7178	Tube — Hydraulic, RH	1

*Not Illustrated

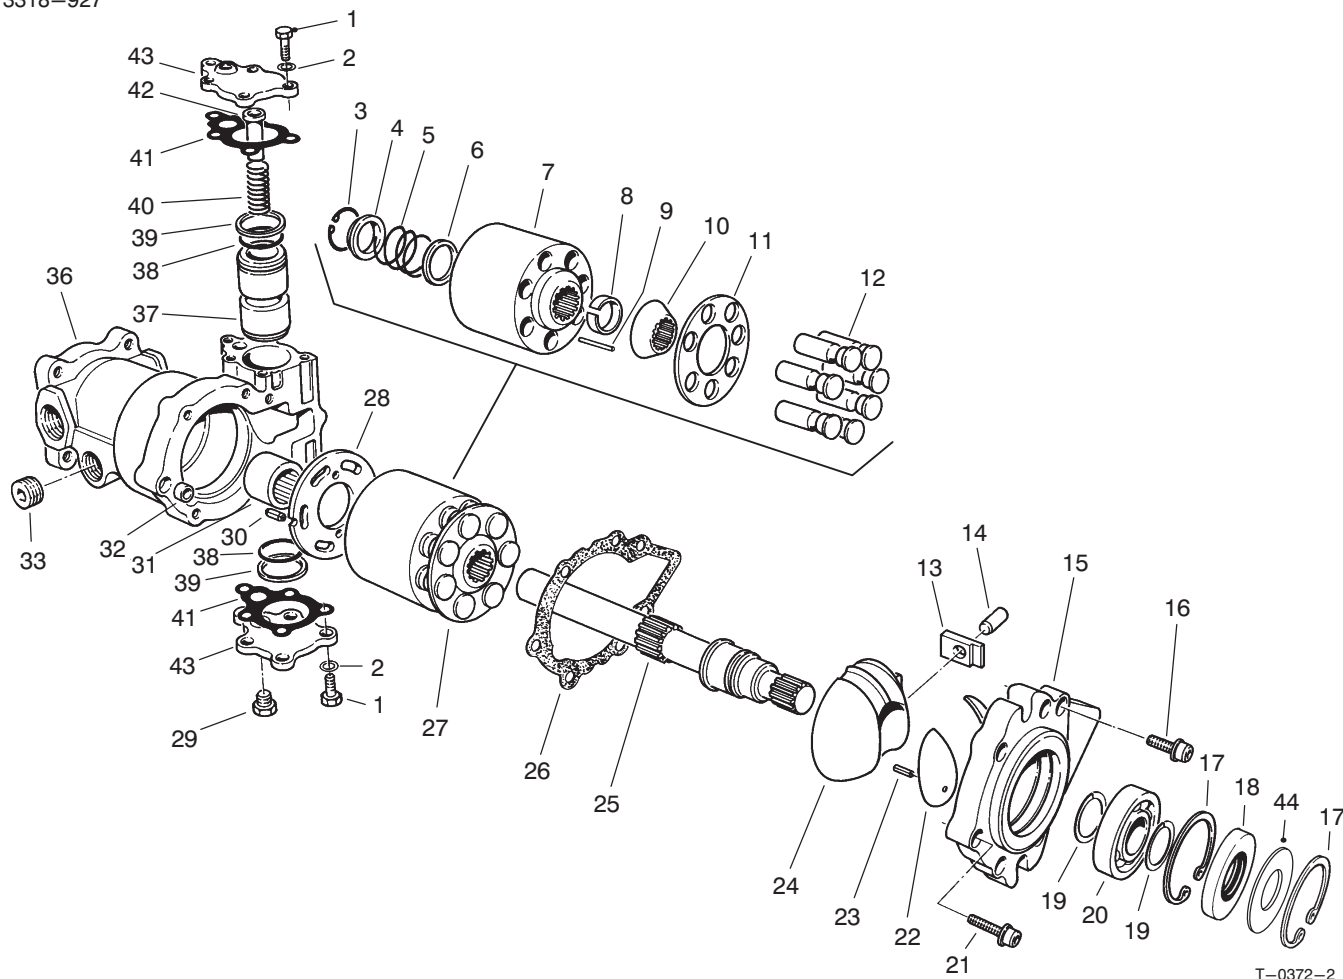

T-0372-2


WHEEL MOTOR NO. 69-3050

Ref. No.	Part No.	Description	No. Used
1	69-3150	Screw Hex. Hd.	10
2	69-3070	Washer - Plain	10
†3		Ring - Retaining	1
†4		Washer	1
†5		Spring - Compression	1
†6		Washer	1
†7		Block - Cylinder	1
†8		Retainer	1
†9		Pin - Slipper Hold Down	3
†10		Guide - Retainer	1
†11		Guide - Slipper	1
†12		Piston Assembly	7
13	69-3500	Bearing - Sleeve	1
14	69-3510	Pin	1
15	76-4610	Cover - Front	1
16	76-4590	Screw	6
17	69-3200	Ring - Retaining	2
18	69-3190	Seal - Lip	1
19	69-3170	Ring - Retaining	2
20	69-3210	Bearing - Ball	1
21	69-3960	Screw	1
22	69-3970	Bearing - Journal	2
23	69-3520	Pin - Spring	2

Ref. No.	Part No.	Description	No. Used
24	69-3980	Swashplate - Variable	1
25	69-3950	Shaft - Motor	1
26	76-4600	Gasket - Front Cover	1
27	69-3910	Cylinder Block Kit (Incl. Ref. #3-12)	1
28	69-3990	Plate - Motor Valve	1
29	69-3940	Plug	1
30	69-3450	Pin	1
31	69-3370	Bearing - Needle	1
32	69-3230	Pin - Spring	1
33	69-3130	Plug - Hole	1
†36		Housing	1
37	69-4020	Piston - Servo	1
38	69-3560	Seal - O-Ring	2
39	69-3570	Ring - Piston	2
40	69-4030	Spring - Servo	1
41	69-3710	Gasket - Servo Cover	2
42	69-4040	Stop - Servo Piston	1
43	69-3720	Cover - Servo	2
44	95-4400	Washer - Backup	1
*	69-3920	Piston Ring & O-Ring Kit (Incl. Ref. #38 & 39)	1

*Not Illustrated

†Not serviceable separately.

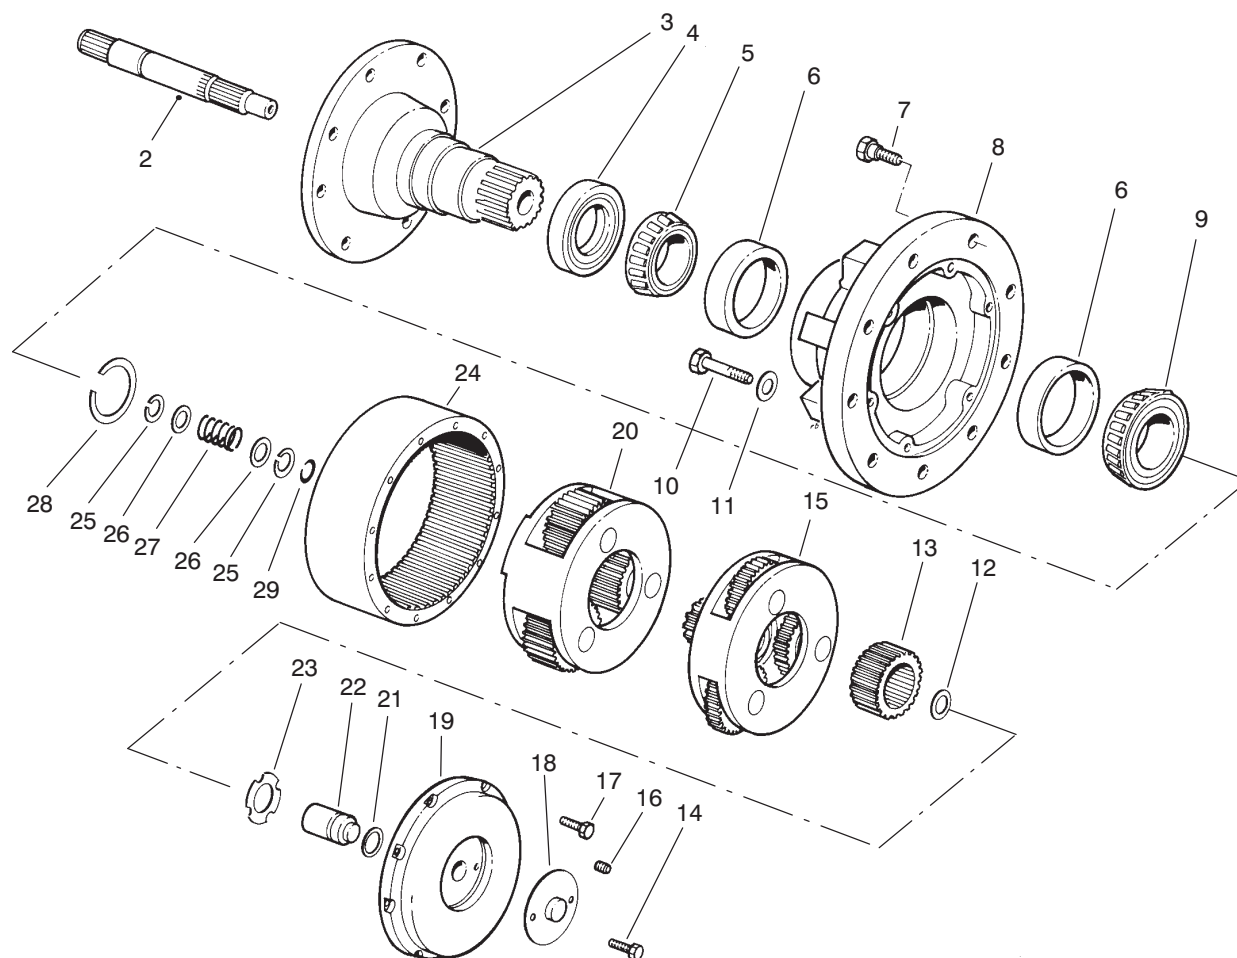


T-0140-1

PLANETARY GEAR ASSEMBLY NO. 69—1730

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	60-3810	Shaft — Input	1	16	60-4040	Plug — Pipe	1
3	69-1740	Spindle	1	17	60-4030	Bolt — Hex. Hd.	8
4	60-3830	Seal — Oil	1	18	60-4060	Cover — Disengage	1
5	60-3840	Cone — Bearing	1	19	60-4050	Cover — Large	1
6	60-3850	Cup — Bearing	2	20	60-4000	Secondary Carrier Assy.	1
7	60-3860	Bolt — Wheel	9	21	60-4020	Seal — O-Ring	1
8	60-3870	Hub	1	22	60-4010	Plunger — Disengage	1
9	60-3880	Cone — Bearing	1	23	60-3990	Washer — Thrust	1
10	60-3890	Bolt — Hex. Hd.	6	24	60-3900	Gear — Ring	1
11	60-3910	Washer — Flat	6	25	60-3930	Ring — Retaining	2
12	60-3980	Washer — Thrust	1	26	60-3940	Washer	2
13	60-3970	Gear — Primary Sun	1	27	60-3950	Spring — Disengage	1
14	60-4070	Bolt — Hex. Hd.	2	†28	62-6450	Kit — Retaining Ring	1
15	60-3960	Primary Carrier Assembly	1	*	62-6460	Sealant — RTV (Tube)	1

*Not Illustrated

†Includes 7 different thickness retaining rings for service adjustment of bearings.

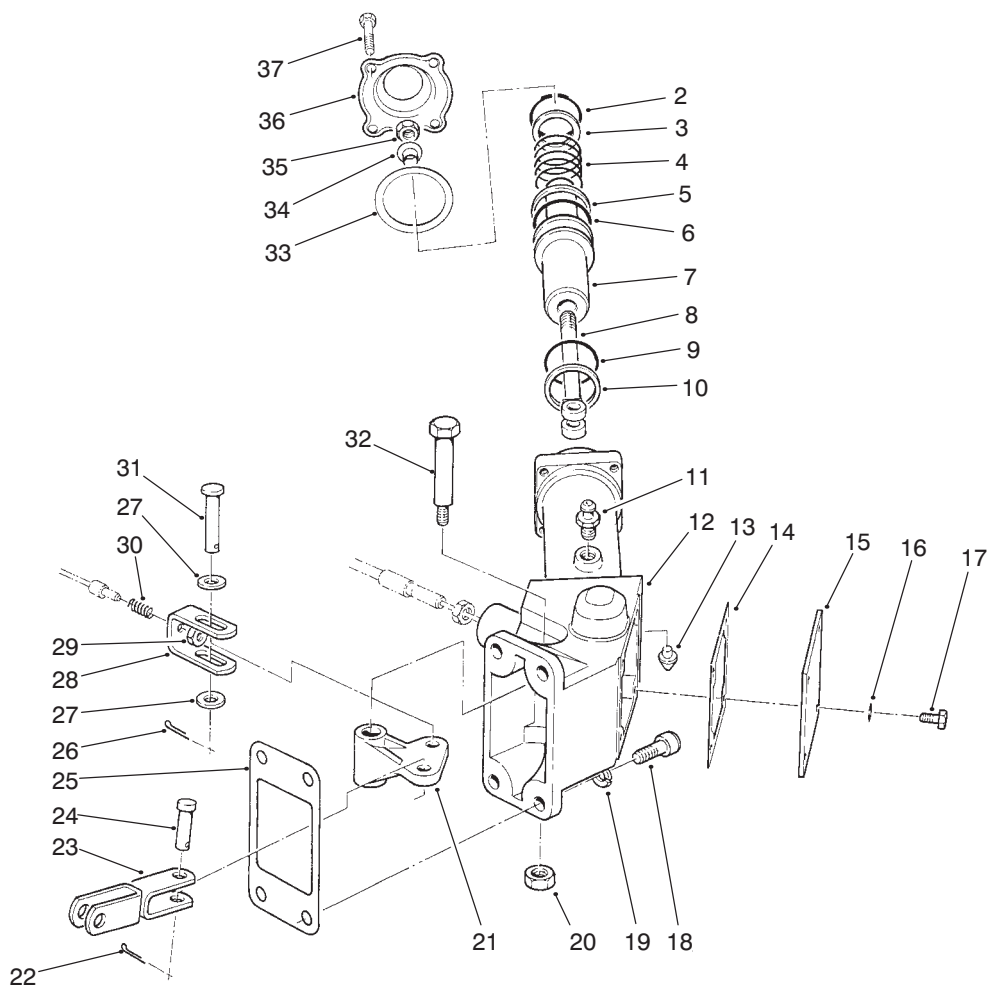


T-1277-1

WHEEL BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	32151-100	Ring - Retaining	2
3	69-8910	Washer	2
4	82-7850	Spring - Compression	2
5	354-104	Ring - Backup	2
6	237-175	O-Ring	2
7	82-7840	Piston - Brake	2
8	21-2070	Yoke - End	2
9	237-174	O-Ring	2
10	354-105	Ring - Backup	2
11	82-7830	Screw - Bleed, Brake	2
12	92-8003	Housing - Actuator, R.H.	1
*	92-8004	Housing - Actuator, L.H.	1
13	82-7820	Seat - Brake, Tube	2
14	71-3870	Gasket	2
15	71-3850	Cover - Housing	2
16	3253-3	Washer - Lock	8
17	321-2	Screw - Cap Hex. Hd.	8
18	3274-7	Screw - Cap Socket Hd.	8
19	3253-21	Washer - Lock	8

Ref. No.	Part No.	Description	No. Used
20	32128-25	Nut - Lock	2
21	71-3830	Bellcrank - Brake	2
22	3272-6	Pin - Cotter	2
23	71-3880	Clevis - Brake Cable	2
24	283-2	Pin - Clevis	2
25	71-3900	Gasket	2
26	3272-10	Pin - Cotter	2
27	3256-24	Washer - Flat	4
28	71-3860	Clevis	2
29	3296-3	Nut - Lock	2
30	69-0030	Spring - Compression	2
31	283-15	Pin - Clevis	2
32	12-8900	Bolt - Shoulder	2
33	93-7417	Gasket	2
34	71-3910	Collar	2
35	3296-59	Nut - Lock	2
36	93-7418	Cap - Actuator	2
37	321-6	Screw - Cap Hex. Hd.	8


*Not Illustrated

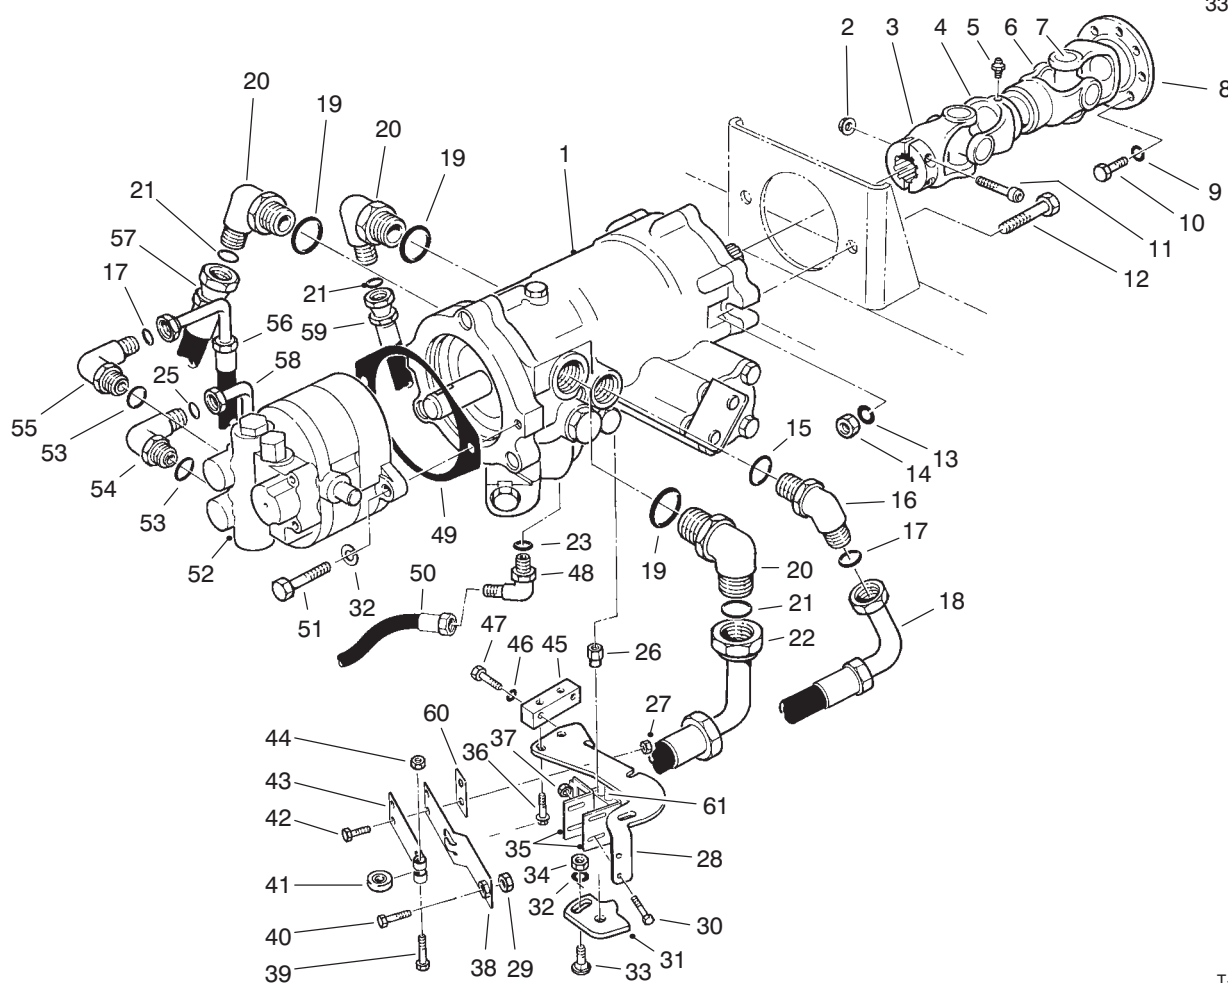

T-0350-1

VARIABLE DISPLACEMENT PUMP INSTALLATION

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-9322	Variable Displacement Pump	1	27	32152-4	Nut - Lock	2
2	32128-21	Nut - Flange Lock	2	28	69-9480	Bracket - Neutral Device	1
3	93-7189	Yoke - Pump End	1	29	3219-2	Nut - Hex.	1
4	93-7191	Tube - Slip Yoke	1	30	32144-1	Screw - Hex. Hd.	2
5	302-2	Fitting - Grease	1	31	69-9040	Cam - Neutral Device	1
6	93-7188	Shaft - Slip Yoke	1	32	3253-21	Washer - Lock	3
7	93-7190	Kit - Universal Joint	2	33	3231-30	Bolt - Carriage	1
8	93-7187	Yoke - Engine End	1	34	3217-7	Nut - Hex.	1
9	48-9570	Washer - Lock	8	35	93-9337	Bracket - Switch	1
10	48-7710	Screw - Cap Hex. Hd.	8	36	3234-13	Screw - Hex. Flange Hd.	4
11	3274-20	Screw - Hex. Socket Hd.	2	37	32127-11	Nut - Flexlok	2
12	325-7	Screw - Cap Hex. Hd.	2	38	29-6170	Leaf Spring Assembly	1
13	3253-7	Washer - Lock	2	39	322-17	Screw - Cap Hex. Hd.	1
14	3217-9	Nut - Hex.	2	40	3210-7	Screw - Cap Hex. Hd.	1
15	237-81	Seal - O-Ring	1	41	251-259	Bearing - Neutral Detent	1
16	340-131	Fitting - Hydraulic Elbow (Incl. Ref. #15 & 17)	1	42	321-4	Screw - Cap Hex. Hd.	2
17	237-30	Seal - O-Ring	2	43	29-6150	Spring - Leaf	1
18	69-5460	Hose - Hydraulic	1	44	32153-3	Nut - Lock	1
19	237-146	Seal - O-Ring	3	45	69-9050	Bar - Neutral Device	1
20	340-15	Fitting - Hydraulic Elbow (Incl. Ref. #19 & 21)	3	46	3253-3	Washer - Lock	2
21	237-58	Seal - O-Ring	3	47	321-10	Screw - Cap Hex. Hd.	2
22	69-5650	Hose - Hydraulic	1	48	340-134	Fitting - Hydraulic Elbow (Incl. Ref. #23)	1
23	237-42	Seal - O-Ring	1	49	41-8760	Gasket - Pump	1
25	237-22	Seal - O-Ring	1	50	93-7424	Hose - Hydraulic	1
26	69-9020	Nut - Special	1	51	323-7	Screw - Cap Hex. Hd.	2
				52	69-2220	Pump/Valve	1

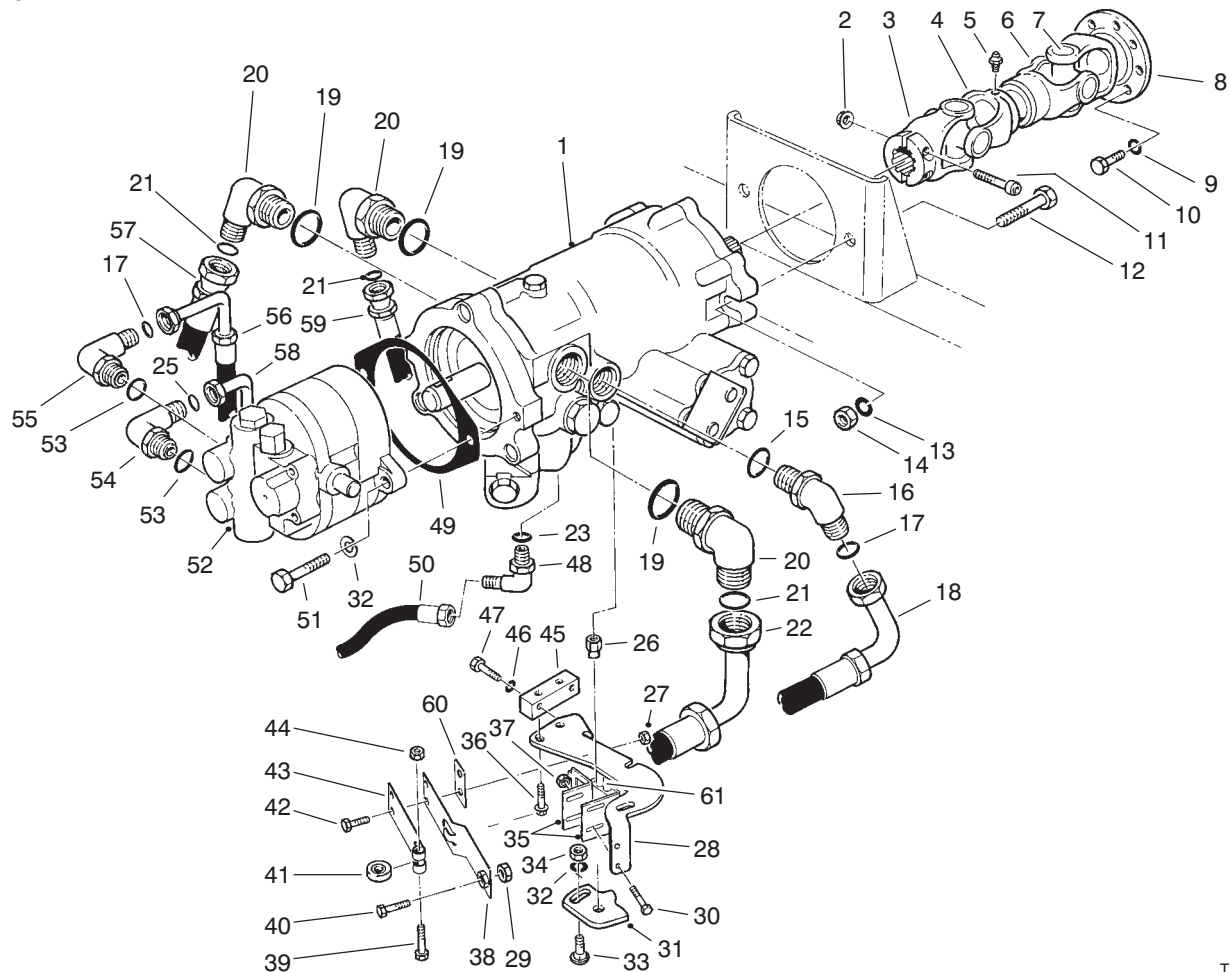


T-0350-1

VARIABLE DISPLACEMENT PUMP INSTALLATION (Cont.)

Ref. No.	Part No.	Description	No. Used
53	327-80	Seal - O-Ring	2
54	340-130	Fitting - Hydraulic Elbow (Incl. Ref. #25 & 53)	1
55	340-105	Fitting - Hydraulic Elbow (Incl. Ref. #17 & 53)	1
56	69-5450	Hose - Hydraulic	1
57	69-5470	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
58	69-5440	Hose - Hydraulic	1
59	69-5480	Hose - Hydraulic	1
60	51-3150	Shim - Spring	A/R
61	93-7037	Switch	1
*	93-3219	Pump Drive Shaft Assembly (Incl. Ref. #3-8)	1

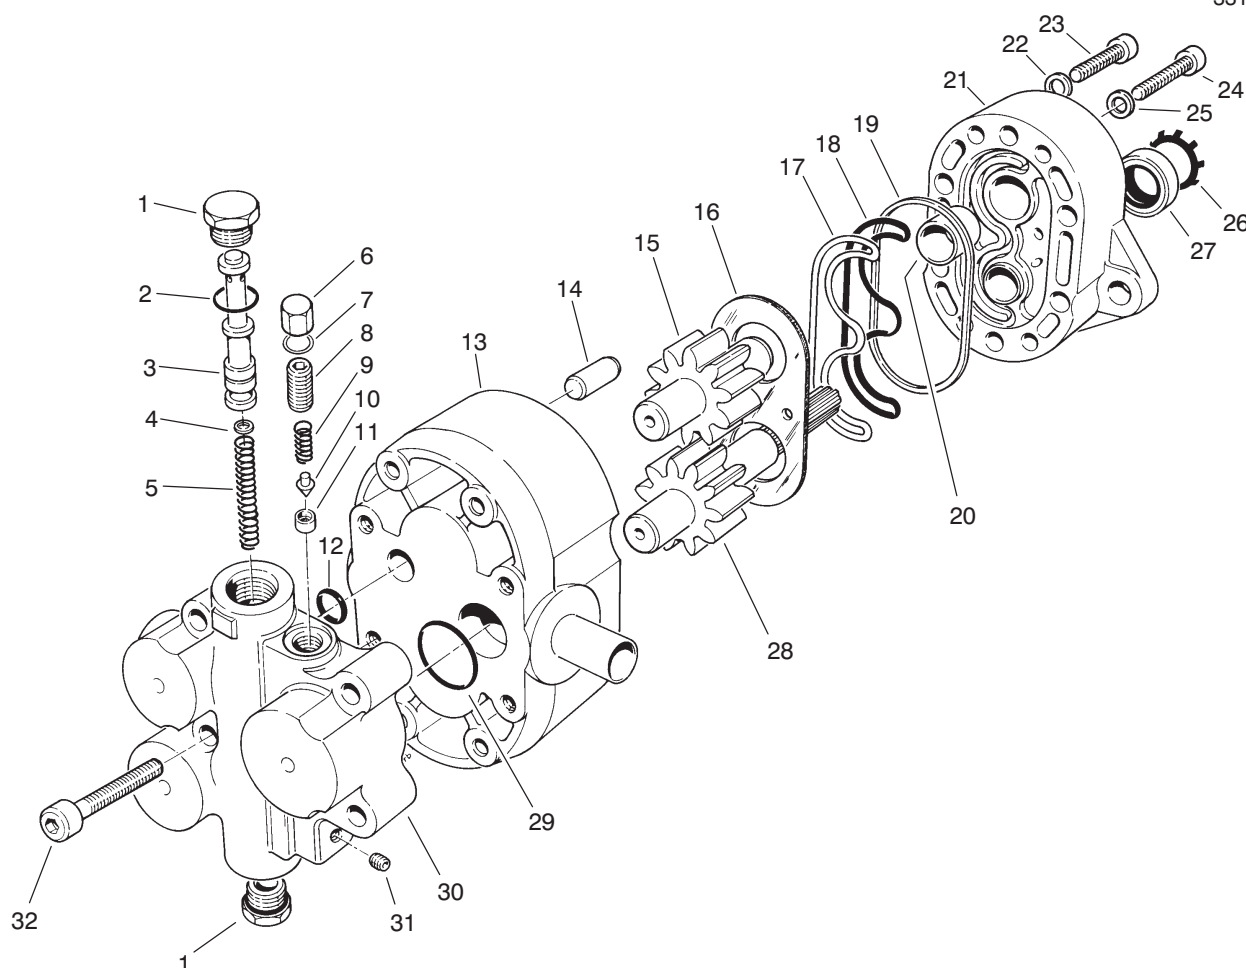


T-0374-1

GEAR PUMP & FLOW DIVIDER NO. 69-2220

Ref. No.	Part No.	Description	No. Used
1	69-2410	Plug (Incl. Ref. #2)	2
2	69-2420	Seal - O-Ring	2
3	69-2450	Piston	1
4	69-2440	Orifice	1
5	69-2430	Spring - Compression	1
6	69-2460	Cap	1
7	69-2470	Gasket - Cap	1
8	69-2480	Screw - Set	1
9	69-2490	Spring - Compression	1
10	69-2500	Poppet	1
11	69-2510	Seat	1
12	69-2530	Seal - O-Ring	1
13	69-2540	Cover Assembly (Incl. Ref. #20)	1
14	69-2340	Pin - Dowel	2
15	69-2280	Shaft/Gear - Idler	1
16	69-2320	Plate - Wear	1
17	69-2260	Seal - Load	1
18	69-2270	Seal - Pre-Load	1
19	69-2350	Ring - Sealing	1

Ref. No.	Part No.	Description	No. Used
20	69-2250	Bearing - Sleeve	4
21	69-2330	Body Assembly (Incl. Ref. #20)	1
22	69-2370	Washer	4
23	69-2360	Screw	4
24	69-2380	Screw	4
25	69-2390	Washer	4
26	69-2300	Ring - Retaining	1
27	69-2310	Seal - Shaft	1
28	69-2290	Shaft/Gear - Drive	1
29	69-2400	Seal - O-Ring	1
30	69-2230	Flow Divider Assembly (Incl. Ref. #1-11 & 31)	1
31	69-2520	Plug - Pipe	1
32	69-2240	Screw	4
*	69-2550	Repair Kit - Pump (Incl. Ref. #16-19, 22 & 25-27)	1
*	69-2560	Repair Kit - Pump & Divider Incl. Ref. #2, 7, 9-10, 12, 16-19, 22, 25-27 & 29)	1

*Not Illustrated

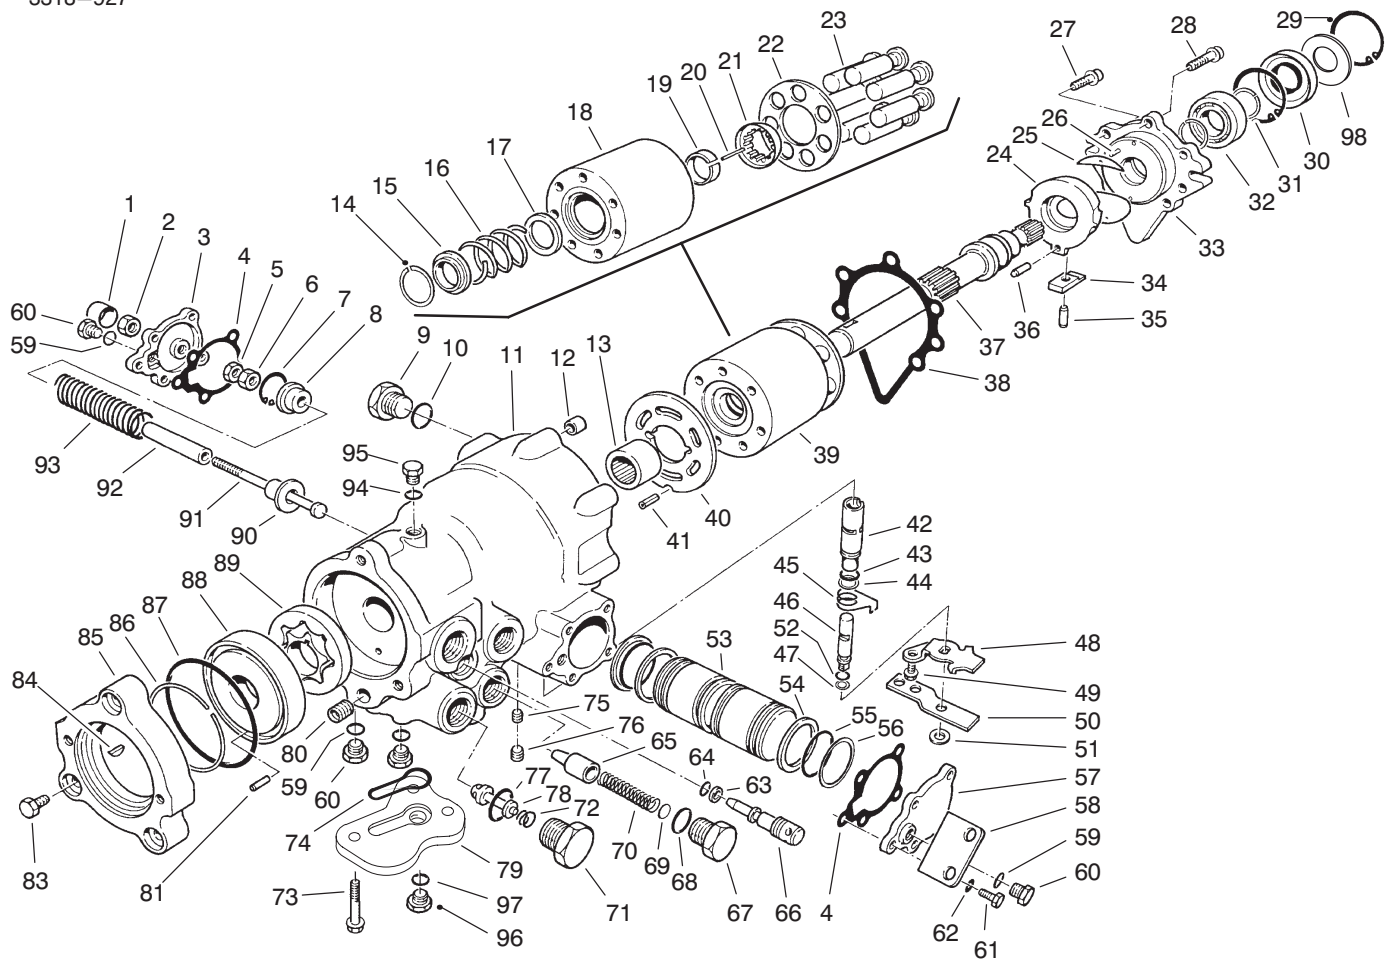


T-0373-3

VARIABLE DISPLACEMENT PUMP NO. 93-9322

Ref. No.	Part No.	Description	No. Used
1	69-3620	Cover - Servo Adjustment	1
2	69-3630	Nut Special	1
3	69-3640	Cover - Servo	1
4	69-3710	Gasket - Servo	2
5	69-3610	Nut - Jam	1
6	69-3600	Nut - Hex.	1
7	69-3590	Ring - Retaining	1
8	69-3580	Guide - Spring	1
9	69-3130	Plug (Incl. Ref. #10)	1
†10		Seal - O-Ring	1
†11		Housing - Pump	1
12	69-3230	Pin - Spring	1
13	69-3370	Bearing - Needle	1
†14		Ring - Retaining	1
†15		Washer	1
†16		Spring - Compression	1
†17		Washer	1
†18		Block - Cylinder	1
†19		Retainer	1
†20		Pin - Slipper Hold Down	3
†21		Guide - Retainer	1
†22		Guide - Slipper	1
†23		Piston - Assembly	7
24	69-3250	Swashplate - Variable	1
25	69-3240	Bearing - Journal	2
26	94-2878	Pin	2
27	76-4590	Screw	6

Ref. No.	Part No.	Description	No. Used
28	69-3220	Screw	1
29	69-3200	Ring - Retaining	2
30	69-3190	Seal - Lip	1
31	69-3170	Ring - Retaining	2
32	69-3210	Bearing - Ball	1
33	76-4610	Cover	1
34	69-3500	Sleeve - Bearing	1
35	69-3510	Pin	1
36	69-3470	Pin	1
37	69-3180	Shaft Pump	1
38	76-4600	Gasket - Cover	1
39	69-3910	Cylinder Block Assembly (Incl. Ref #14-23)	1
40	93-9320	Plate - Valve L.H.	1
41	69-3450	Pin	1
42	69-3820	Sleeve - Control Valve	1
43	28-3590	Seal O-Ring	1
44	28-3580	Ring - Back Up	1
45	69-3880	Spring - Neutral Return	1
46	69-3830	Spool - Rotary Valve	1
47	25-2630	Ring Back Up	1
48	69-3890	Bracket - Neutral Return	1
49	69-3860	Screw - Flange Hd.	1
50	69-3870	Handle - Control Valve	1
51	69-3900	Washer	1
52	69-3840	Seal - O-Ring	1
53	69-3650	Piston - Servo	1

†Not serviceable separately.

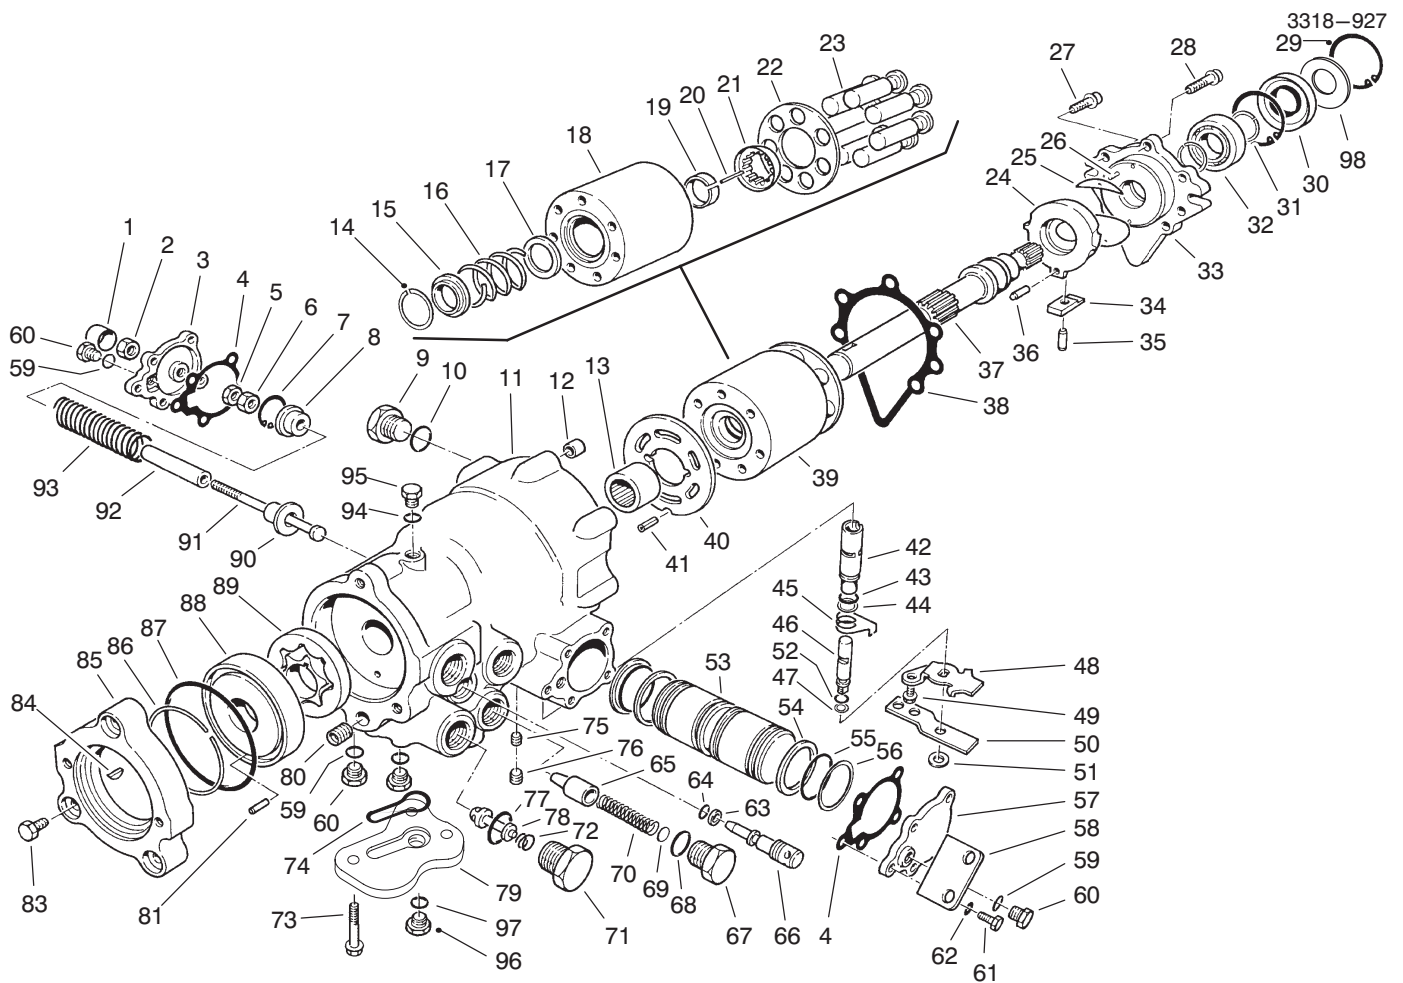


T-0373-3

VARIABLE DISPLACEMENT PUMP NO. 93-9322 (Cont.)

Ref. No.	Part No.	Description	No. Used
54	69-3690	Bearing	2
55	69-3560	Seal - O-Ring	2
56	69-3570	Ring - Piston	2
57	69-3720	Cover Servo	1
58	69-3140	Bracket - Lifting	1
†59	69-3080	Seal - O-Ring	4
60	69-3150	Plug (Incl. Ref. #59)	4
61	69-3070	Screw - Hex. Hd.	10
62	69-3070	Washer - Lock	10
63	25-2630	Ring - Back Up	1
64	237-22	Seal - O-Ring	1
65	69-3800	Valve	1
66	69-3810	Valve - By Pass	1
67	69-3780	Plug (Incl. Ref. #68)	1
68	237-80	Seal - O-Ring	1
69	69-3770	Shim	1
70	69-3790	Spring Compression	1
71	69-3760	Plug Special (Incl. Ref. #77)	2
72	69-3740	Spring - Compression	2
73	94-9413	Screw	3
74	94-9412	Seal - Adapter	1
75	93-9321	Plug - Orifice	1
76	285-17	Plug - Pipe	2

Ref. No.	Part No.	Description	No. Used
77	69-3750	Seal - O-Ring	2
78	69-3730	Valve - Relief (Incl. Ref. #71, 72 & 77)	2
79	94-9414	Adapter - Suction	1
80	69-3460	Plug Expansion	1
81	69-3550	Pin	1
83	69-3400	Screw Hex. Hd.	3
84	69-3430	Key - Woodruff	1
85	69-3410	Adapter - A Flange	1
86	69-3420	Ring - Temper Load	1
87	69-3440	Seal - O-Ring	1
88	69-3540	Cover - Gerotor	1
89	69-3390	Gerotor Assembly	1
90	69-3700	Guide - Spring	1
91	69-3660	Screw - Special	1
92	69-3680	Stop - Servo	1
93	69-3670	Spring - Compression	1
†94	69-3120	Seal O-Ring	1
95	69-3150	Plug (Incl. Ref. #94)	1
96	94-9415	Plug (Incl. Ref. #97)	1
†97	95-4400	Seal O-Ring	1
98	95-4400	Washer - Backup	1

†Not serviceable separately.

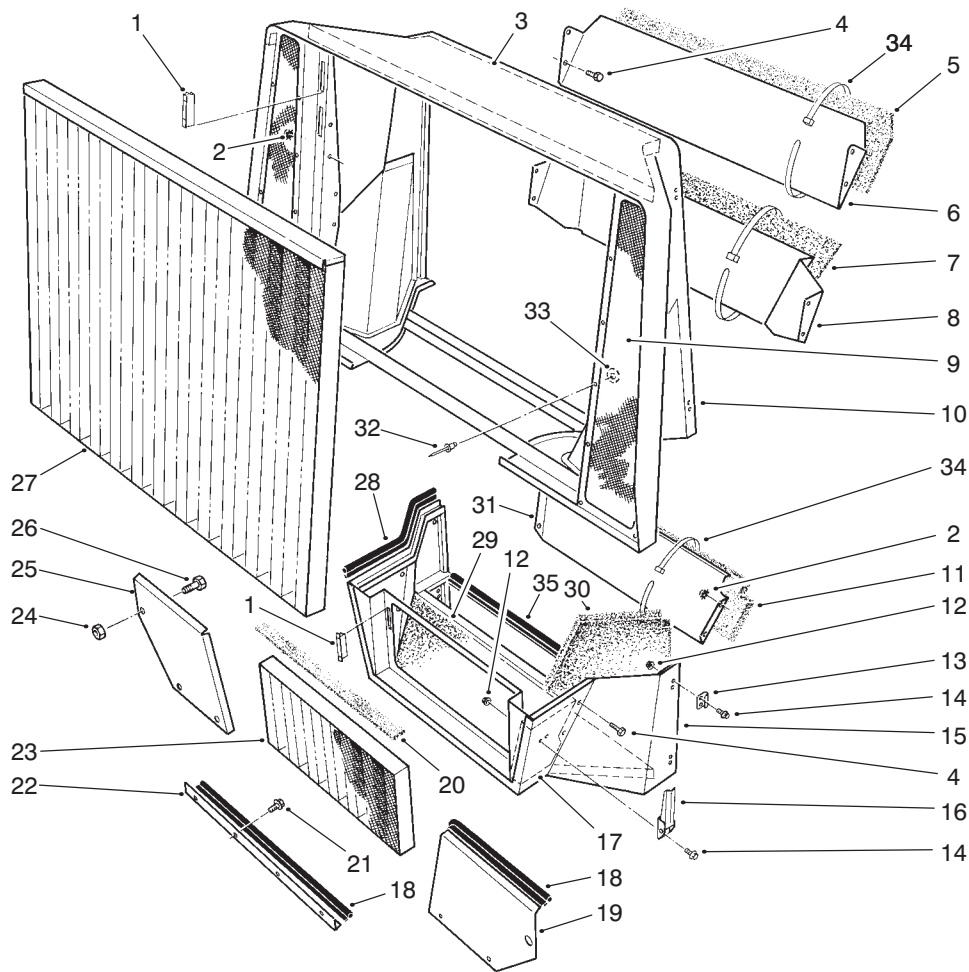


T-0368-1

COWL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	58-4250	Magnet	6
2	32149-2	Nut - Keps	16
3	71-0280	Foam - Cowl Top	1
4	321-2	Screw - Cap Hex. Hd.	16
5	71-0240	Foam - Louver Top	2
6	69-9370	Louver - Top	2
7	71-0230	Foam - Louver Middle	1
8	69-1130	Louver - Middle	1
9	69-9650	Screen - Cowl	2
10	69-8650	Cowl - Radiator	1
*	82-6330	Cowl - Radiator, Optional	1
11	71-0220	Foam - Louver Lower	1
12	3296-2	Nut - Flange Lock	20
13	69-3030	Strike - Latch	8
14	3290-321	Screw - Hex. Washer Hd.	20
15	69-8690	Support - Grille	1
16	69-3020	Handle - Latch	2
17	71-0300	Foam - Low Front Cowl L.H.	1
*	71-0310	Foam - Low Front Cowl R.H.	1

Ref. No.	Part No.	Description	No. Used
18	69-9721	Strip - Sealing	3
19	75-9460	Bracket - Sealing L.H.	1
20	69-0040	Foam - Lower Grille	1
21	32144-11	Screw - Hex. Flange Hd.	8
22	75-9480	Bracket - Sealing Bottom	1
23	69-7150	Grille - Lower	1
24	32153-6	Nut Lock	2
25	75-9470	Bracket - Sealing R.H.	1
26	328-11	Screw - Cap Hex. Hd.	2
27	69-7120	Grille - Upper	1
28	69-9720	Strip - Sealing	2
29	71-0290	Foam - Cowl Bottom	1
30	71-0330	Foam - Low Rear Cowl L.H.	1
*	71-0320	Foam - Low Rear Cowl R.H.	1
31	69-1140	Louver - Lower	1
32	3269-15	Rivet - Pop	22
33	3269-6	Washer - Backup	22
34	250-5	Tie - Cable	16
35	69-9722	Trim - Sealing	1

*Not Illustrated

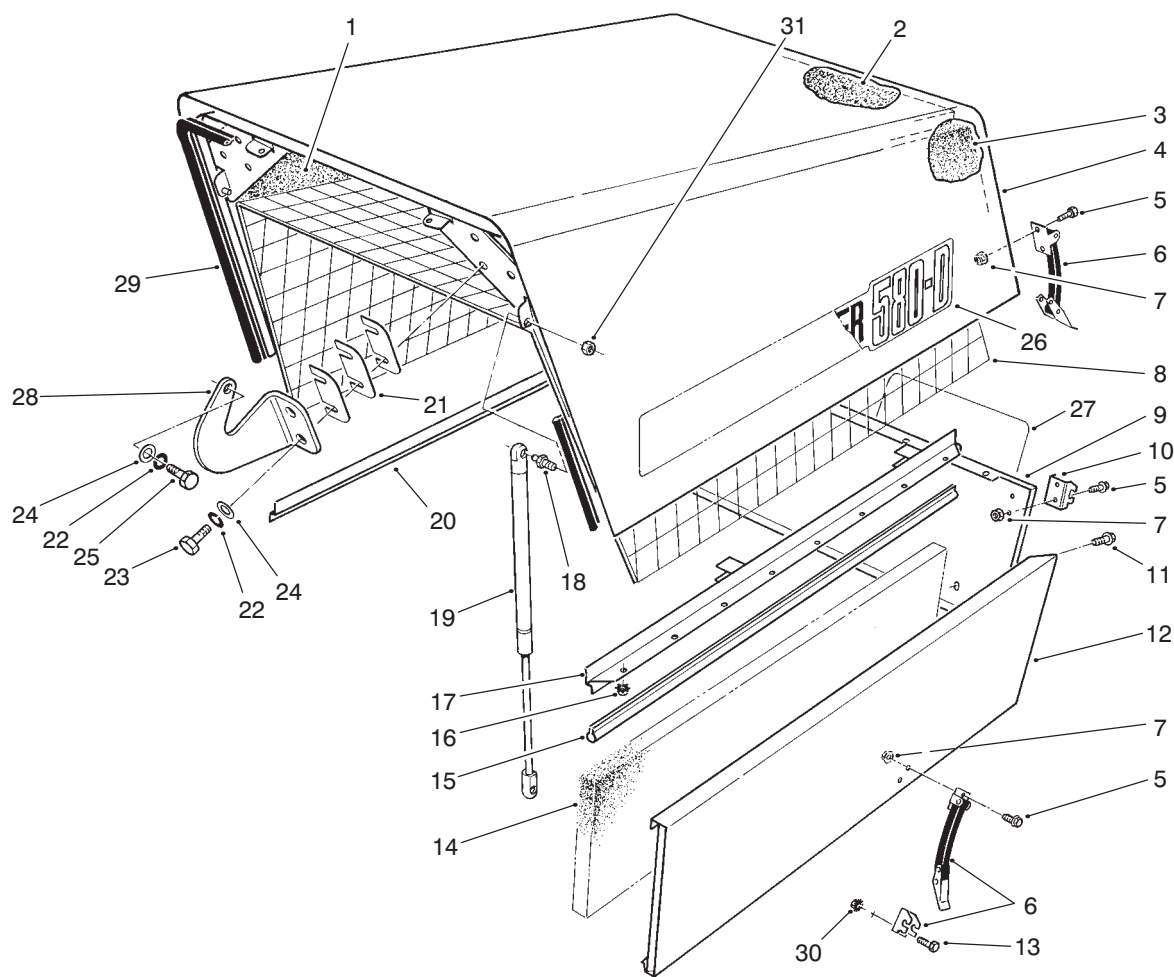


T-0360-1

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-0270	Foam - Hood Side R.H.	1	15	69-9723	Seal - Hood Bottom	2
2	71-0250	Foam - Hood Top	1	16	32149-2	Nut - Keps	16
3	71-0260	Foam - Hood Side L.H.	1	17	69-8230	Bracket - Trim L.H.	1
4	92-1772	Hood Assembly (Incl. Ref.#1-4, 8, 15-17, 20, 26 & 29)	1	18	88-6770	Stud - Ball	2
5	3290-321	Screw - Cap Hex. Hd.	12	19	88-6760	Spring - Gas	2
6	69-3010	Strap - Hold Down (Incl. Ref. #10)	4	20	69-8250	Bracket - Trim R.H.	1
7	3296-2	Nut - Flange Lock	12	21	69-8500	Shim - Hinge Bracket	6
8	71-0060	Support - Foam	1	22	3253-21	Washer - Lock	6
9	69-9520	Panel - Rear	1	23	323-6	Screw - Cap Hex. Hd.	4
†10		Latch - Hold - Down	4	24	3256-24	Washer - Flat	6
11	3234-14	Screw - Cap Hex. Hd.	6	25	323-4	Screw - Cap Hex. Hd.	2
12	69-1390	Panel - Side L.H.	1	26	69-0950	Decal - 580D	2
*	69-1380	Panel - Side R.H.	1	27	66-6140	Decal - TORO	1
13	3290-134	Screw - Cap Hex. Hd.	4	28	69-8520	Bracket - Hinge	2
14	71-0400	Foam - Side Panel	2	29	69-9724	Seal - Hood Front	1
				30	32149-7	Nut	4
				31	32152-1	Nut	2

*Not Illustrated

†Not serviceable separately.

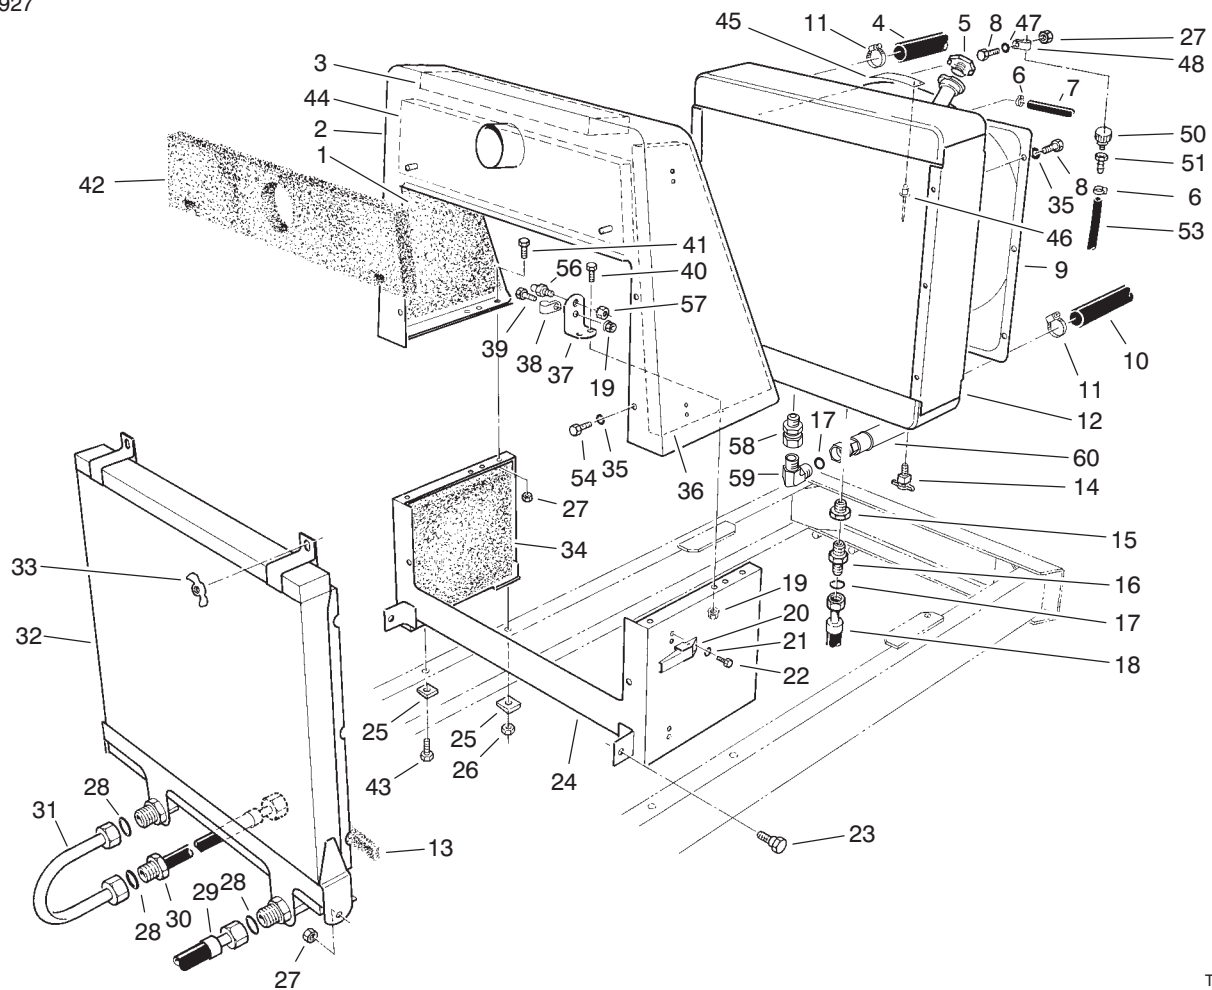


T-0359-3

RADIATOR & OIL COOLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-0350	Foam - Rad. Support R.H.	1
2	69-8590	Support - Radiator Upper	1
3	71-0360	Foam - Rad. Support Top	1
4	69-5380	Hose - Upper Radiator	1
5	66-3241	Cap - Radiator	1
6	2412-108	Clamp - Hose	2
7	23-2140	Hose - Radiator Vent	1
8	323-34	Screw - Cap Hex. Hd.	7
9	13-4239	Shroud - Fan (Incl. Ref. #45 & 46)	1
10	69-5390	Hose - Lower Radiator	1
11	2412-92	Clamp - Hose	4
12	94-2860	Radiator	1
13	71-0210	Foam - Radiator Seal	1
14	304-46	Valve - Drain	1
15	2812-4	Fitting - Reducer	1
16	340-124	Fitting - Hydraulic Straight (Incl. Ref. #17)	1
17	237-22	Seal - O-Ring	1
18	94-3335	Hose - Hydraulic	1
19	32128-20	Nut - Flange Lock	5
20	69-3020	Latch	8
21	3253-2	Washer - Lock	16
22	3290-321	Screw - Cap Hex. Hd.	16
23	46-3380	Bolt - Shoulder	2
24	69-7100	Support - Radiator Lower	1

Ref. No.	Part No.	Description	No. Used
25	3290-216	Washer - Bevel	4
26	32153-5	Nut - Lock	4
27	32152-2	Nut - Lock	7
28	340-65	Seal - O-Ring	3
29	69-5620	Hose - Hydraulic	1
30	69-8450	Hose - Hydraulic (Incl. Ref. #28)	1
31	69-5900	Tube - Hydraulic	1
32	69-1670	Cooler - Oil (Incl. Ref. #28)	1
33	32103-3	Nut - Wing	2
34	71-0370	Foam - Lower Rad. Support	2
35	3253-21	Washer - Lock	12
36	71-0340	Foam - Rad. Support L.H.	1
37	88-9450	Bracket - Hood Cylinder	2
38	2412-41	Clamp - R	1
39	322-5	Screw - Cap Hex. Hd.	1
40	322-6	Screw - Cap Hex. Hd.	4
41	323-7	Screw - Cap Hex. Hd.	4
42	71-0380	Foam - Rad. Support Front	1
43	325-6	Screw - Cap Hex. Hd.	4
44	71-0390	Foam - Rad. Support Rear	1
45	76-8750	Plate - Caution	2
46	3290-271	Rivet - Pop	4
47	3256-56	Washer - Flat	2
48	2412-147	Clamp - R	1
50	68-6150	Breather	1

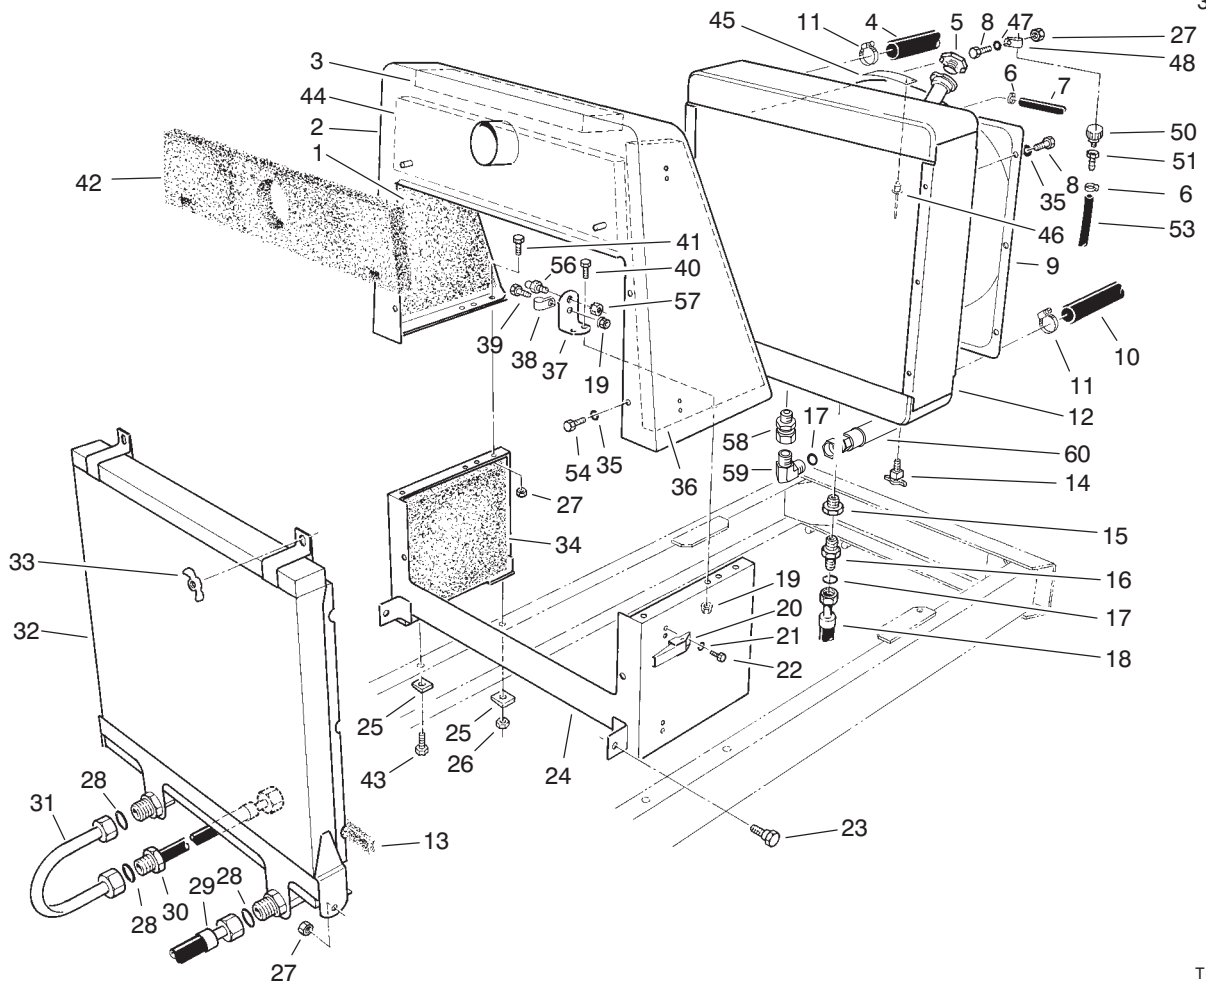


T-0359-3

RADIATOR & OIL COOLER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
51	354-95	Fitting	1
53	71-2680	Hose - Vent	1
54	32144-69	Screw - Cap, Hex. Hd.	6
56	88-6770	Stud - Ball	2
57	32152-1	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
58	94-3336	Fitting - Hydraulic Straight	1
59	94-3337	Fitting - Hydraulic 90° (Incl. Ref. #17)	1
60	94-3334	Hose - Hydraulic	1

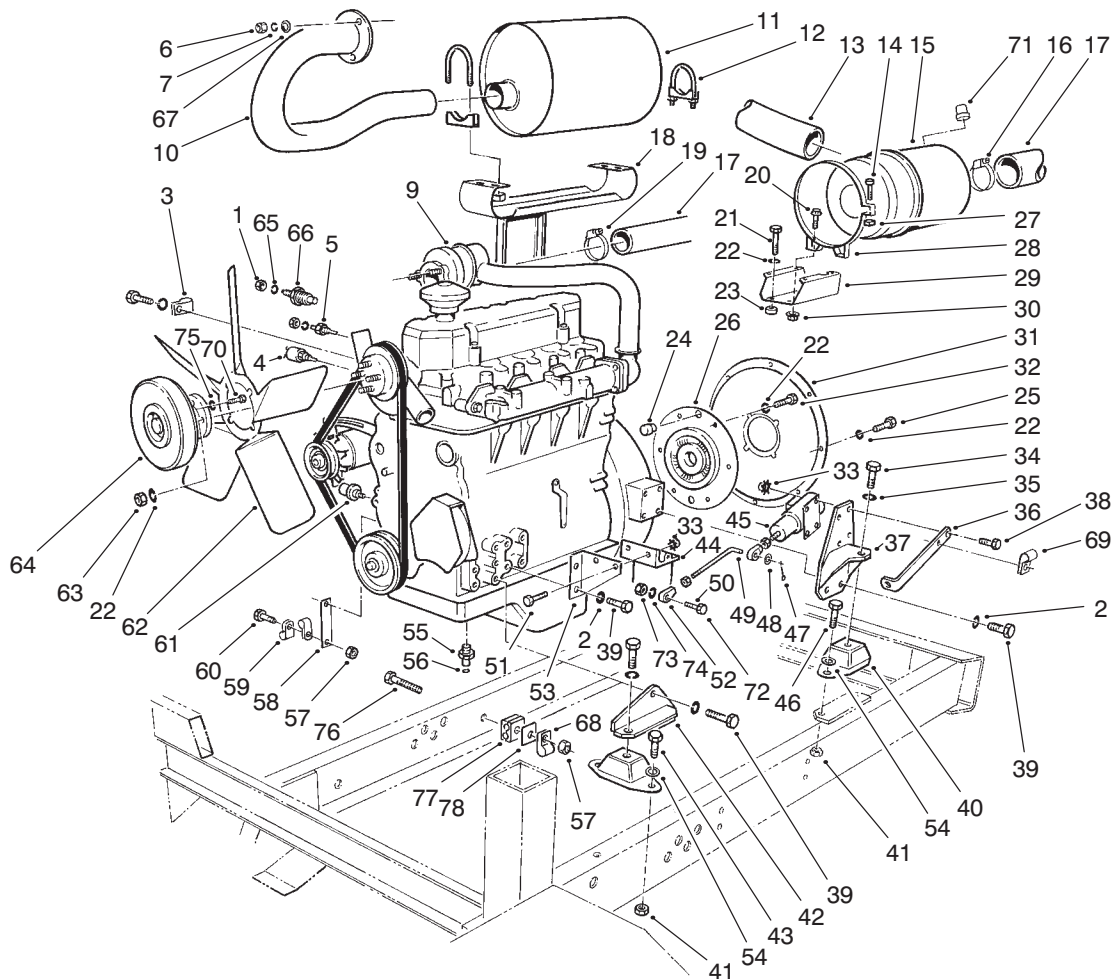


T-0347-1

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3219-14	Nut - Hex.	2
2	48-8070	Washer - Lock	16
3	2412-70	Clamp - R	1
4	67-4510	Sending Unit - Temperature	1
5	39-7592	Switch - Temperature	1
6	48-7930	Nut - Lock	3
7	48-9570	Washer - Lock	3
9	69-6250	Engine - Assembly	1
10	76-0980	Pipe - Exhaust	1
11	69-9420	Muffler	1
12	20-4840	Clamp - Exhaust	2
13	69-5350	Hose - Air Cleaner Inlet	1
14	3258-19	Screw - Machine	2
15	69-1890	Air Cleaner Assembly	1
16	2412-110	Clamp - Hose	3
17	69-5360	Hose - Air Cleaner	1
18	93-4382	Bracket - Muffler	1
19	2412-42	Clamp - Hose	1
20	3234-14	Screw - Hex. Washer Hd.	4
21	48-9480	Screw - Cap Hex. Hd.	4
22	48-9590	Washer - Lock	22
23	17-7190	Spacer	4
24	58-3590	Pin - Flywheel	2
25	48-9470	Screw - Cap Hex. Hd.	8
26	92-1753	Coupling - Spring Centering	1
27	32107-11	Nut - Square	2
28	69-1950	Band - Air Cleaner (Incl. Ref. #14 & 27)	2

Ref. No.	Part No.	Description	No. Used
29	69-9530	Bracket - Air Cleaner	1
30	32128-20	Nut - Flange Lock	4
31	69-9550	Plate - Adapter	1
32	48-7780	Screw - Cap Hex. Hd.	6
33	32149-2	Nut - Keps	5
34	69-8410	Screw - Cap Hex. Hd.	4
35	69-8420	Washer - Lock	4
36	69-8490	Bracket - Throttle Cable	1
37	85-6210	Bracket - Rear Eng. Mount	2
38	321-6	Screw - Cap Hex. Hd.	3
39	69-0060	Screw - Cap Hex. Hd.	16
40	69-1660	Mount - Engine	4
41	32153-5	Nut - Lock	8
42	69-7580	Bracket - Front Engine Mount L.H.	1
*	69-7570	Bracket - Front Engine Mount R. H.	1
43	325-17	Screw - Cap Hex. Hd.	4
44	69-1750	Fuel Filter Assembly	1
45	85-6230	Solenoid - Engine Run	1
46	325-4	Screw - Cap Hex. Hd.	4
47	3272-6	Pin - Cotter	1
48	3256-1	Washer - Flat	1
49	69-9110	Rod - Engine Run Solenoid	1
50	3220-1	Nut - Jam	2
51	321-4	Screw - Cap Hex. Hd.	2
52	2411-41	End - Rod	2
53	69-9360	Bracket - Fuel Filter	1

*Not Illustrated

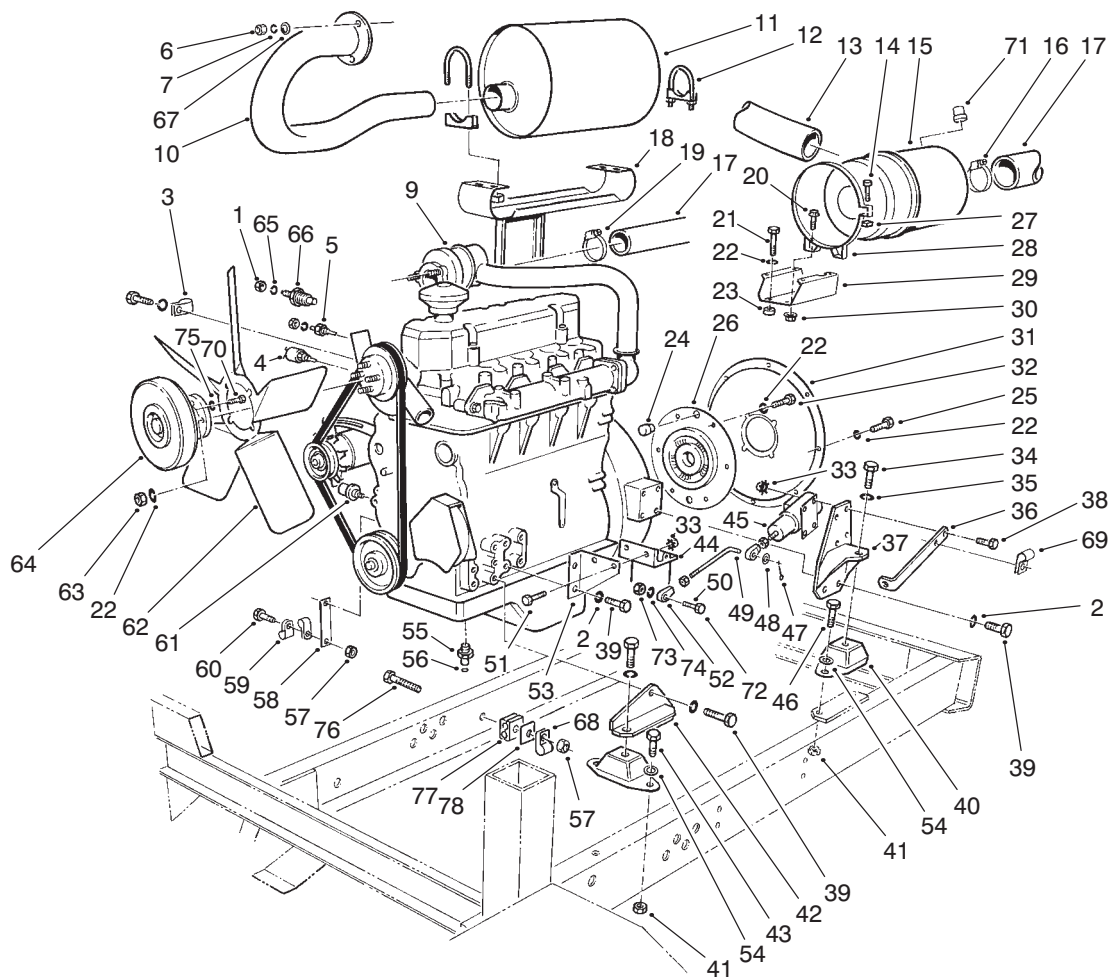


T-0347-1

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
54	3256-26	Washer - Flat	8	66	39-7591	Thermo Switch Assembly	1
55	69-8460	Fitting - Hydraulic Straight (Incl. Ref. #56)	2	67	3256-3	Washer - Flat	3
56	237-22	Seal - O-Ring	2	68	2412-39	Clamp - R	1
57	32152-1	Nut - Lock	2	69	2412-73	Clamp - R	1
58	69-9070	Bracket - Clamp	1	70	323-4	Screw - Cap Hex. Hd.	4
59	2412-41	Clamp - R	2	71	69-1940	Indicator - Electrical	1
60	323-6	Screw - Cap Hex. Hd.	1	72	48-7630	Screw	1
61	71-4280	Sending Unit - Oil Pressure	1	73	48-7890	Nut - Hex.	1
62	69-1680	Fan	1	74	3253-3	Washer - Lock	1
63	69-9710	Nut - Lock	4	75	3253-21	Washer - Lock	4
64	69-1690	Clutch - Fan	1	76	322-13	Screw - Cap Hex. Hd.	1
65	3253-2	Washer - Lock	2	77	56-7974	Clamp Half - Hydraulic Line	2
				78	69-9761	Plate - Cover	1

*Not Illustrated

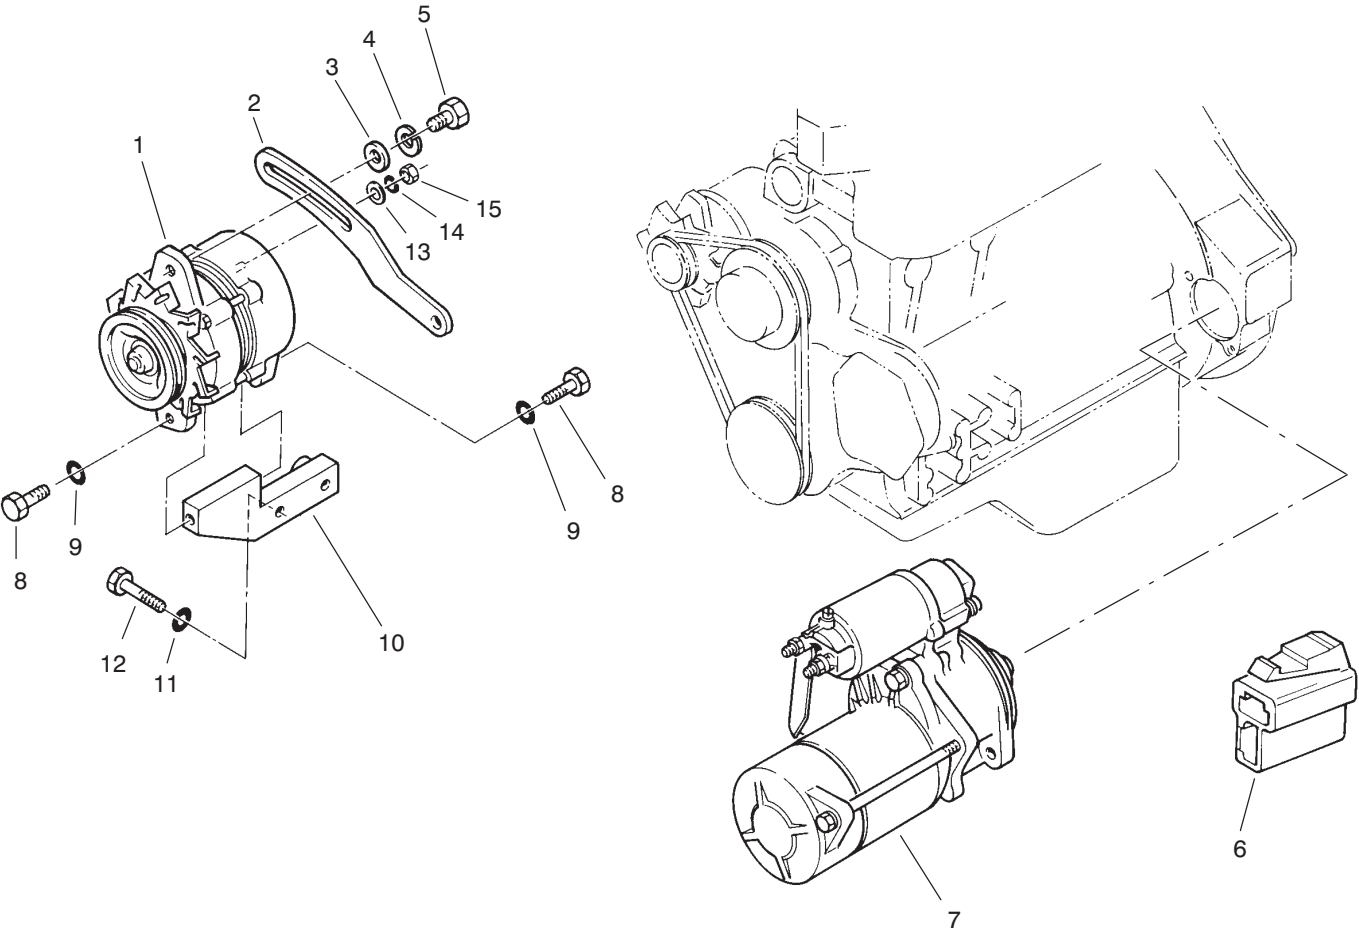


T-0580-1

STARTER & ALTERNATOR INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-5760	Alternator Assembly	1
2	70-5740	Plate	1
3	51-8590	Washer	1
4	51-7250	Washer - Lock	1
5	60-7370	Bolt	1
6	59-6910	Connector	1
7	70-5860	Starter Assembly	1
8	51-8640	Bolt	2

Ref. No.	Part No.	Description	No. Used
9	51-6390	Washer - Lock	2
10	70-5750	Bracket	1
11	51-8610	Washer - Lock	2
12	70-2940	Bolt	2
13	5-3637	Washer - Flat	1
14	43-5920	Washer - Lock	1
15	43-5970	Nut - Hex.	1

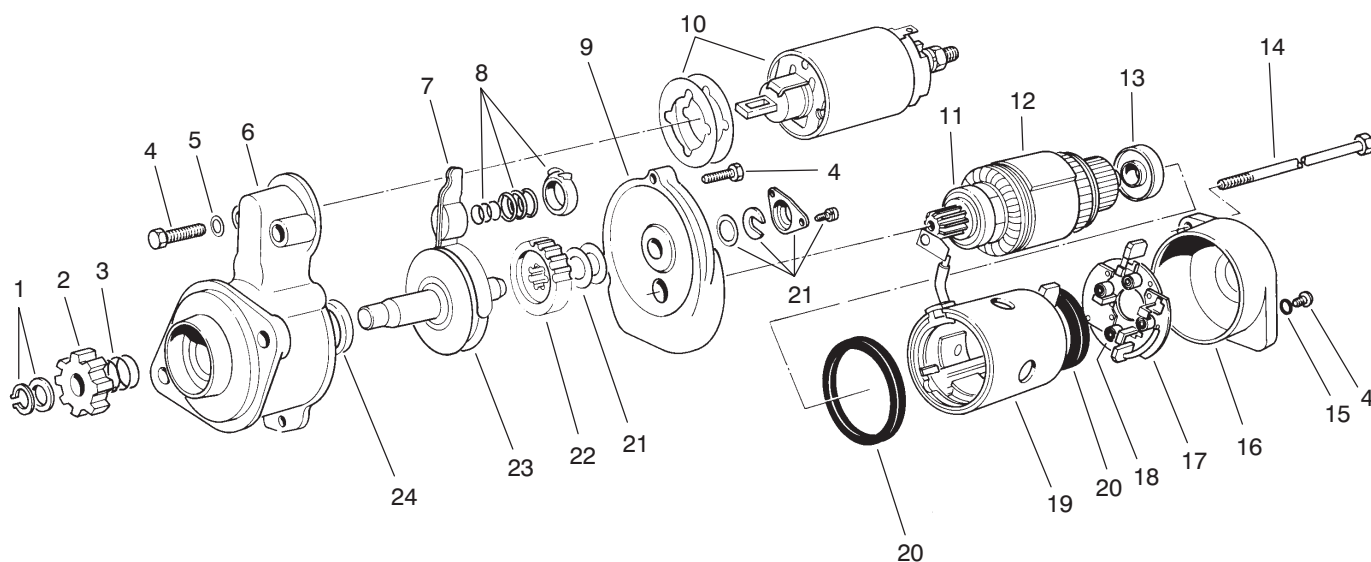


T-0160-1

STARTER MOTOR ASSEMBLY NO. 70-5860

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	51-7740	Retaining Ring Assembly	1	14	70-3310	Bolt Set	1
2	51-7730	Gear Pinion Assembly (Incl. Ref. #1 & 3)	1	15	51-7840	Ring — Rubber	2
†3		Spring	1	16	51-7830	Cover — Rear	1
4	51-7600	Screw Set	1	17	70-3290	Brush Holder Assembly (Incl. Ref. #18)	1
5	51-7610	Packing	2	18	70-3270	Spring — Brush	4
6	70-3280	Cover Assembly Front (Incl. Ref. #24)	1	19	70-3300	Yoke Assembly	1
7	51-7640	Lever Assembly	1	20	51-7790	Packing	2
8	51-7650	Spring Assembly	1	21	51-7780	Cover Assembly	1
9	51-7660	Bracket Assembly Center	1	22	51-7770	Gear — Pinion	1
10	51-7670	Solenoid	1	23	51-7760	Shaft Assembly	1
11	51-7690	Bearing	1	24	51-7630	Seal — Oil	1
12	70-3260	Armature Assembly (Incl. Ref. #11 & 13)	1	*	51-7750	Gear Assembly (Incl. Ref. #22 & 23)	1
13	70-3330	Bearing	1	*	51-7720	Clutch Assy. (Incl. Ref. #1-3 & 21-24)	1

*Not Illustrated

†Not Serviceable Separately

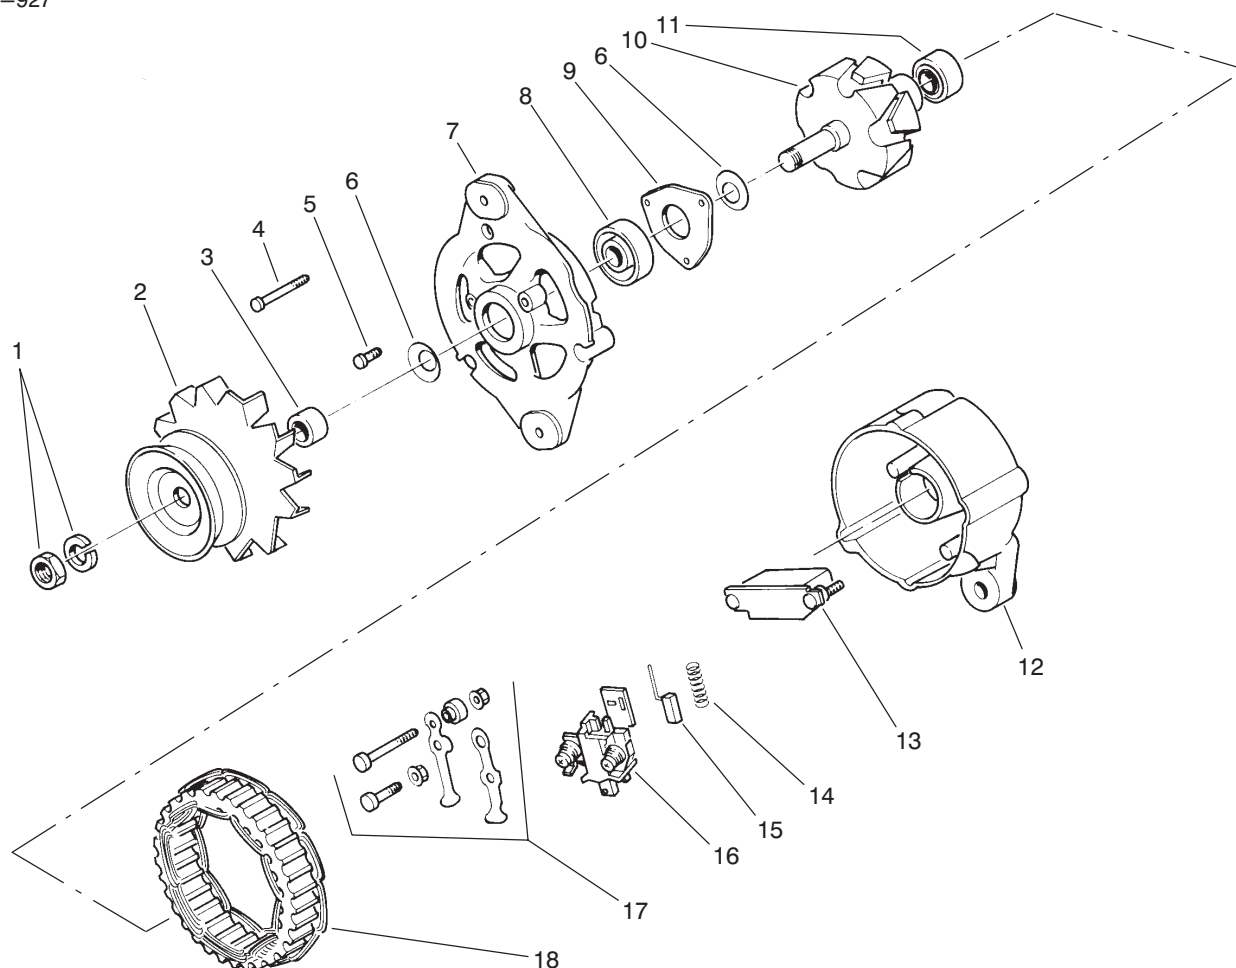


T-0161-1

ALTERNATOR ASSEMBLY NO. 70-5760

Ref. No.	Part No.	Description	No. Used
1	51-7850	Nut Assembly	1
2	70-2800	Pulley Assembly	
		(Incl. Ref. #3)	1
†3		Collar - Shaft	1
4	51-7870	Screw Set	1
5	51-7890	Screw Set	1
†6		Spring Washer	2
7	60-5340	Cover Assembly - Front	1
		(Incl. Ref. #5, 6, 8 & 9)	
8	70-3320	Bearing	1
†9		Plate - Bearing Retainer	1

Ref. No.	Part No.	Description	No. Used
10	51-7910	Rotor Assembly	
		(Incl. Ref. #11)	1
11	60-5360	Bearing	1
12	60-5380	Cover Assembly - Rear	
		(Incl. Ref. #13-17)	1
13	60-5370	Rectifier Assembly	1
14	70-2810	Spring - Return	2
15	51-7970	Brush	2
16	51-7960	Regulator Assembly	
		(Incl. Ref. #14 & 15)	1
17	51-7950	Terminal Assembly	1
18	51-7930	Stator	1

†Not Serviceable Separately

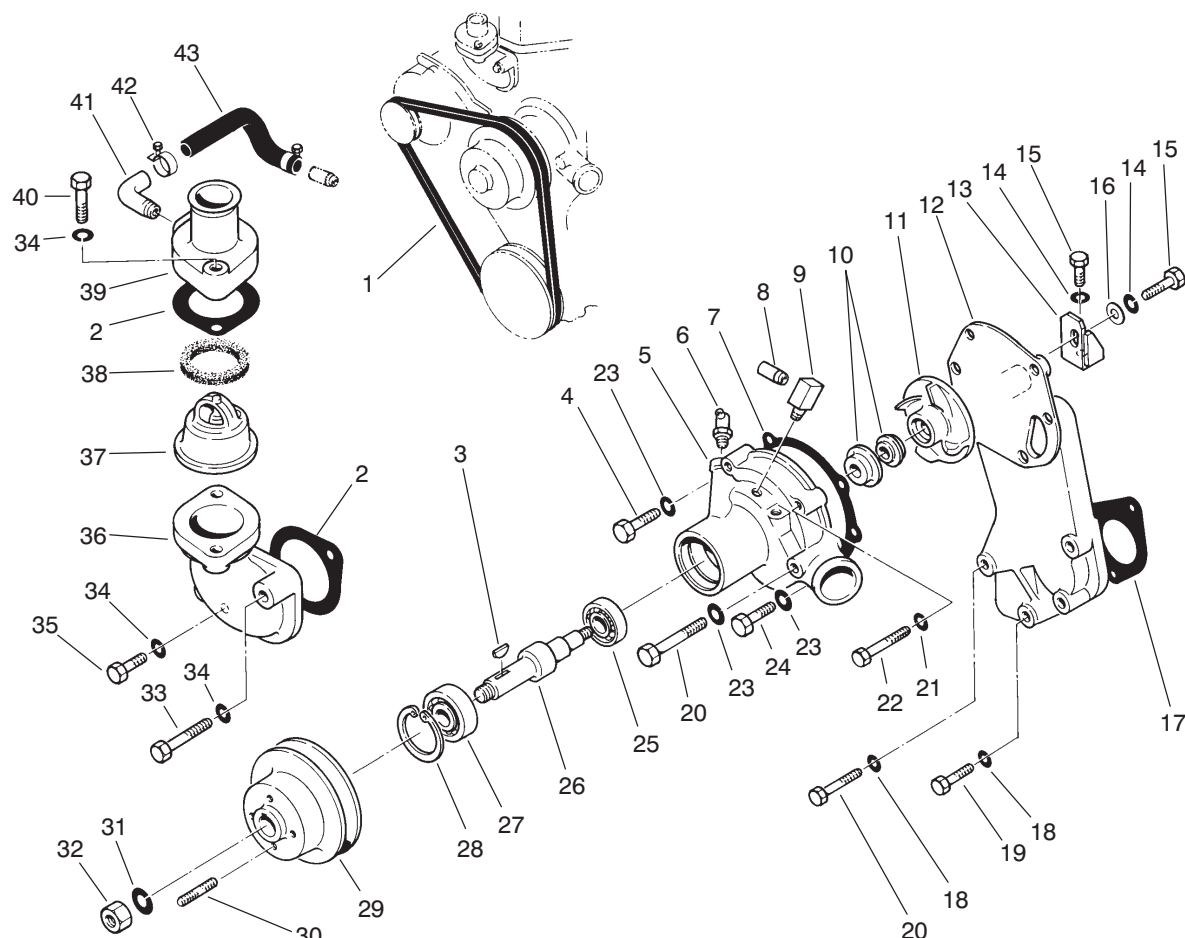


T-0581-1

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-3450	V-Belt	1
†2	51-7210	Gasket	2
3	51-6960	Key	1
4	70-2910	Bolt	1
5	70-5600	Water Pump Assembly (Incl. Ref #3-4, 6, 8-11 & 25-32)	1
6	51-7020	Nipple	1
7	70-5650	Gasket	1
8	51-7170	Pipe	1
9	70-5620	Connector	1
10	51-7030	Seal	1
11	70-5610	Impeller	1
12	70-5640	Bracket	1
13	70-5670	Stay	1
14	51-6390	Washer — Lock	2
15	70-2890	Bolt	2
16	70-2990	Washer	1
†17	70-5660	Gasket	1
18	51-6390	Washer — Lock	4
19	70-2900	Bolt	1
20	70-2920	Bolt	3
21	51-6920	Washer — Lock	2

Ref. No.	Part No.	Description	No. Used
22	70-2850	Bolt	2
23	51-6390	Washer — Lock	4
24	51-4910	Bolt	2
25	51-6980	Bearing	1
26	70-5630	Shaft	1
27	51-6950	Bearing	1
28	51-6940	Ring	1
29	70-5680	Pulley	1
30	70-2950	Stud	4
31	51-6920	Washer — Lock	1
32	51-6910	Nut	1
33	70-2860	Bolt	1
34	51-7250	Washer — Lock	4
35	60-7280	Bolt	1
36	70-5690	Elbow	1
37	51-7230	Thermostat	1
†38	51-7220	Gasket	1
39	70-5050	Cover	1
40	60-7040	Bolt	2
41	70-5590	Connector	1
42	51-7200	Clamp	2
43	70-5040	Hose	1

†Included in Gasket Set No. 70-6950

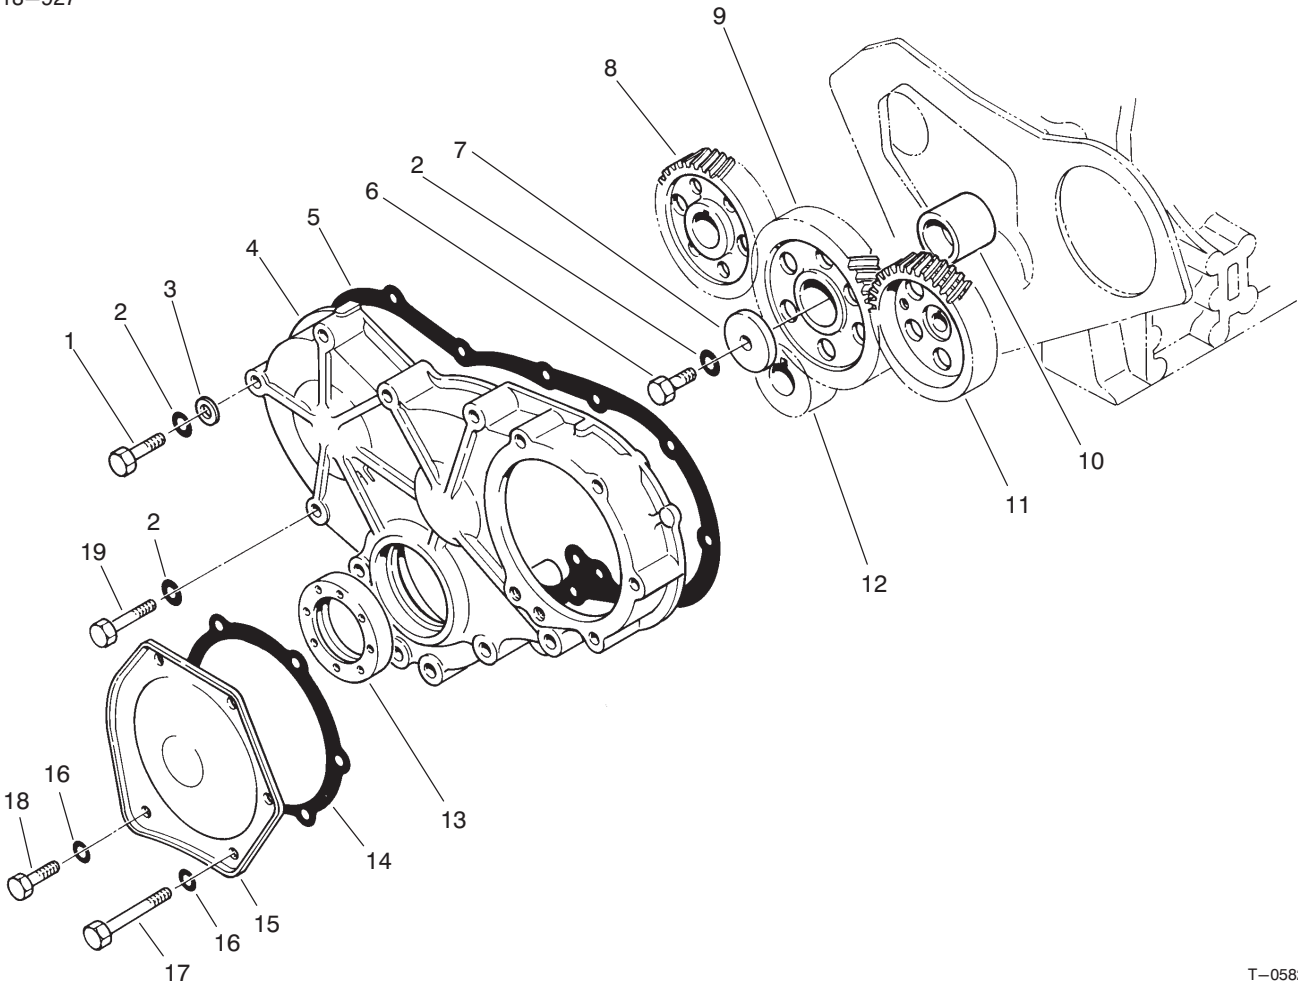


T-0582-1

TIMING GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51-4920	Bolt	1
2	51-6390	Washer - Lock	11
3	70-2990	Washer	1
4	70-5790	Case	1
†5	70-5370	Gasket	1
6	60-7210	Bolt	1
7	51-6400	Plate	1
8	70-5020	Gear - Camshaft	1
9	70-5450	Idler Assembly (Incl. Ref. #10)	1

Ref. No.	Part No.	Description	No. Used
10	51-6430	Bushing	1
11	70-6040	Gear - Injection Pump	1
12	70-5830	Gear - Crankshaft	1
†13	70-5780	Seal	1
†14	51-5860	Gasket	1
15	51-5850	Cover	1
16	51-7250	Washer - Lock	5
17	70-2860	Bolt	4
18	60-7110	Bolt	1
19	70-2930	Bolt	9

†Included in Gasket Set No. 70-6950
‡Included In Oil Seal Kit No. 70-6960

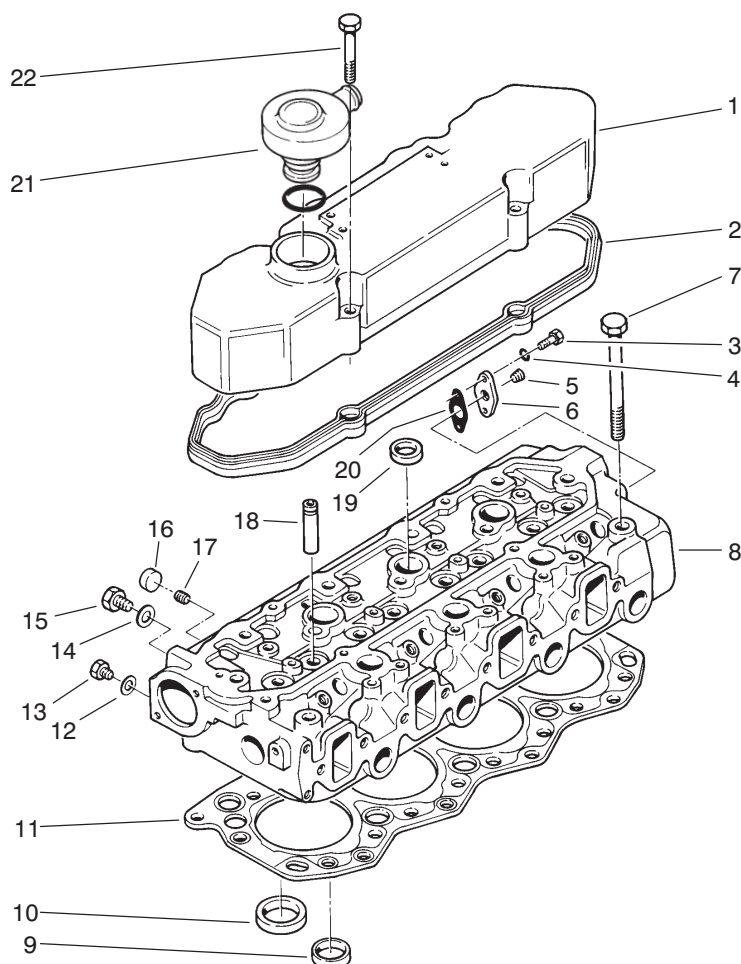


T-0583-1

ROCKER COVER & CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93—3681	Cover	1	†11	70—5130	Gasket	1
†2	93—3682	Gasket	1	†12	51—5840	Washer	1
3	60—7280	Bolt	2	13	70—3100	Plug	1
4	51—7250	Washer — Lock	2	†14	51—6890	Gasket	1
5	70—5140	Plug	1	15	70—3230	Plug	1
6	70—5890	Flange	1	16	70—3360	Cap	4
7	63—4740	Bolt	17	17	70—3390	Plug	4
8	70—5900	Cylinder Head Assembly (Incl. Ref. #3—6, 9—10 & 12—20)	1	18	51—4950	Guide	8
9	70—5870	Insert — Exhaust	4	19	70—3380	Cap	15
10	70—5880	Insert — Inlet	4	20	70—5090	Gasket	1
				21	70—5570	Breather	1
				22	70—2930	Bolt	4

†Included in Gasket Set No. 70—6950

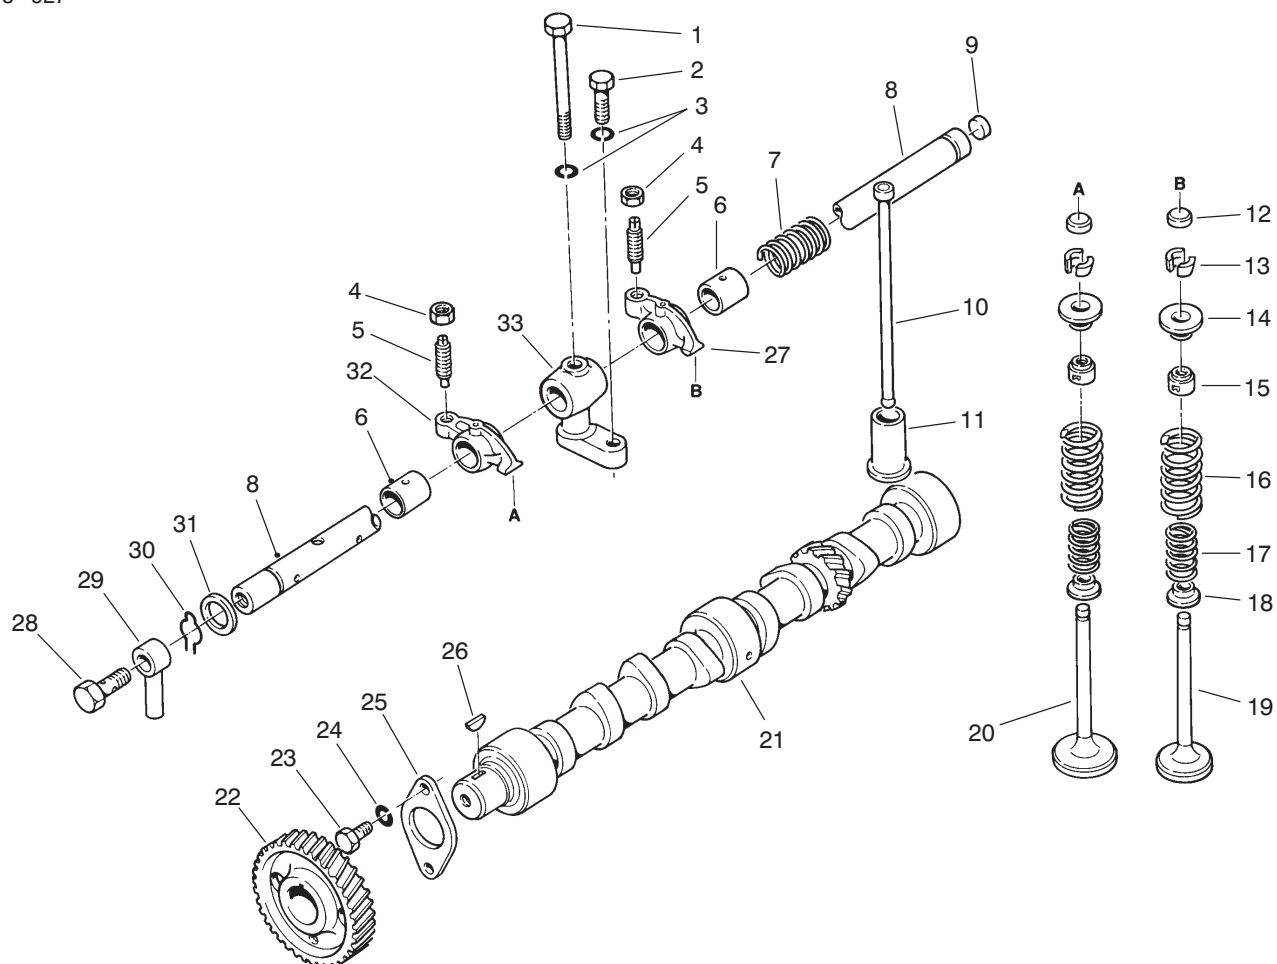


T-0584-1

VALVE & CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-2870	Bolt	4
2	60-7280	Bolt	4
3	51-7250	Washer - Lock	8
4	70-2970	Nut	8
5	70-3160	Screw	8
6	70-5080	Bushing	8
7	70-5190	Spring	3
8	70-5180	Rocker Shaft Assembly (Incl. Ref. #9)	1
9	51-5090	Plug	1
10	70-5230	Rod - Push	8
11	70-5010	Tappet	8
12	51-5280	Cap	8
13	51-5290	Cotter (Available in set w/pair)	16
14	51-5300	Retainer	8
†15	51-5310	Seal	8
16	70-5930	Spring	8
17	70-4990	Spring	8

Ref. No.	Part No.	Description	No. Used
18	70-5000	Retainer	8
19	70-5920	Valve - Exhaust	4
20	70-5910	Valve - Inlet	4
21	70-5940	Camshaft	1
22	70-5020	Gear - Camshaft	1
23	60-7110	Bolt	2
24	51-7250	Washer - Lock	2
25	51-5470	Plate	1
26	51-5460	Key	1
27	70-5160	Rocker Assembly - Exhaust (Incl. Ref. #4-6)	4
28	70-3050	Bolt	1
29	70-5170	Pipe	1
30	51-5260	Ring - Retaining	2
31	70-5110	Washer	2
32	70-5150	Rocker Assembly - Intake (Incl. Ref. #4-6)	4
33	70-5200	Bracket	4

†Included in Oil Seal Kit No. 70-6960

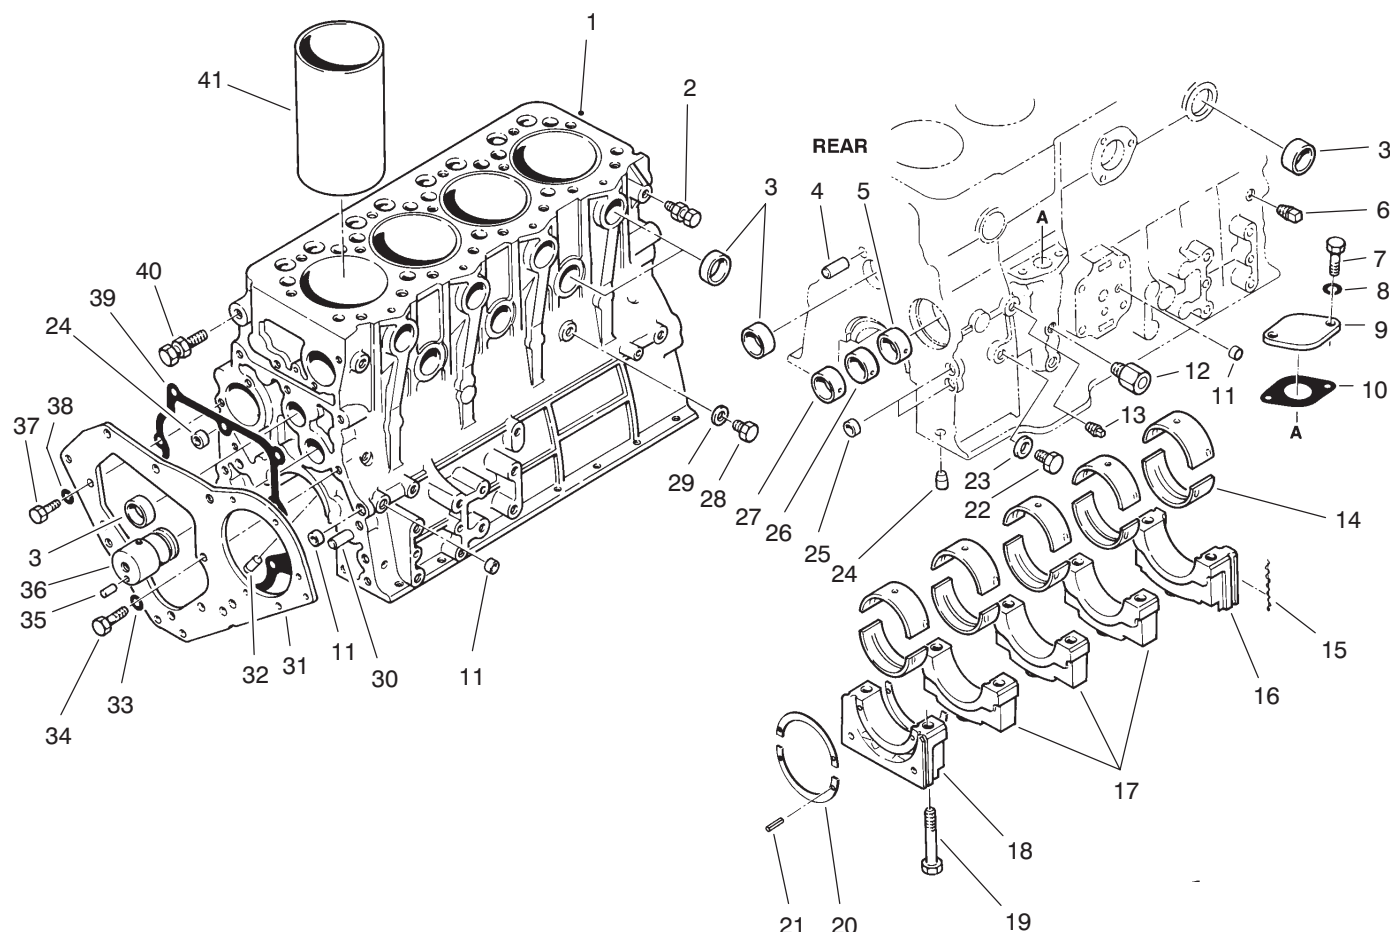

T-0585-1


CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-5960	Crankcase Assembly (Incl. Ref. #2-6, 11, 13, 15-19, 21-30, 32, 35-36, & 40-41)	1
2	51-5580	Hanger	1
3	51-5600	Cap	11
4	70-3000	Pin	2
5	51-5500	Bushing No. 1	1
6	70-3400	Plug	6
7	60-7280	Bolt	2
8	51-7250	Washer	2
9	51-6480	Cover	1
†10	51-6490	Gasket	1
11	70-3350	Cap	6
12	70-5950	Connector	1
13	70-3410	Plug	1
14	70-5350	Bearing - Main (Std.)	10
14	70-5351	Bearing - Main U.S. 0.25mm	10
14	70-5352	Bearing - Main U.S. 0.50mm	10
14	70-5353	Bearing - Main U.S. 0.75mm	10
‡15	70-5240	Seal	4
16		Cap - Bearing No. 1	1
17		Cap - Bearing No. 2,3, & 4	3
18		Cap - Bearing No. 5	1
19	70-5300	Bolt	10
20	70-5360	Plate - Thrust (Std.)	3

Ref. No.	Part No.	Description	No. Used
20	70-5361	Plate - Thrust O.S. 0.15mm	3
20	70-5362	Plate - Thrust O.S. 0.30mm	3
20	70-5363	Plate - Thrust O.S. 0.45mm	3
21	51-5650	Pin	6
22	70-3120	Plug	1
†23	70-3080	Gasket	1
24		Plug	2
25	70-3370	Cap	3
26	51-5510	Bushing - No. 2	1
27	51-5520	Bushing - No. 3	1
28	51-8280	Bolt	1
†29	51-8270	Washer	1
30	70-5320	Pin	2
31	70-5250	Plate	1
32	70-5340	Valve	4
33	51-6390	Washer	1
34	70-2890	Bolt	1
35	51-5650	Pin	1
36	51-5640	Idler Shaft Assembly (Incl. Ref. #35)	1
37	60-7110	Bolt	1
38	51-7250	Washer	1
†39	70-5260	Gasket	1
40	70-5290	Hanger	1
41	70-5280	Sleeve	4

†Included in Gasket Set No. 70-6950

‡Included In Oil Seal Kit No. 70-6960

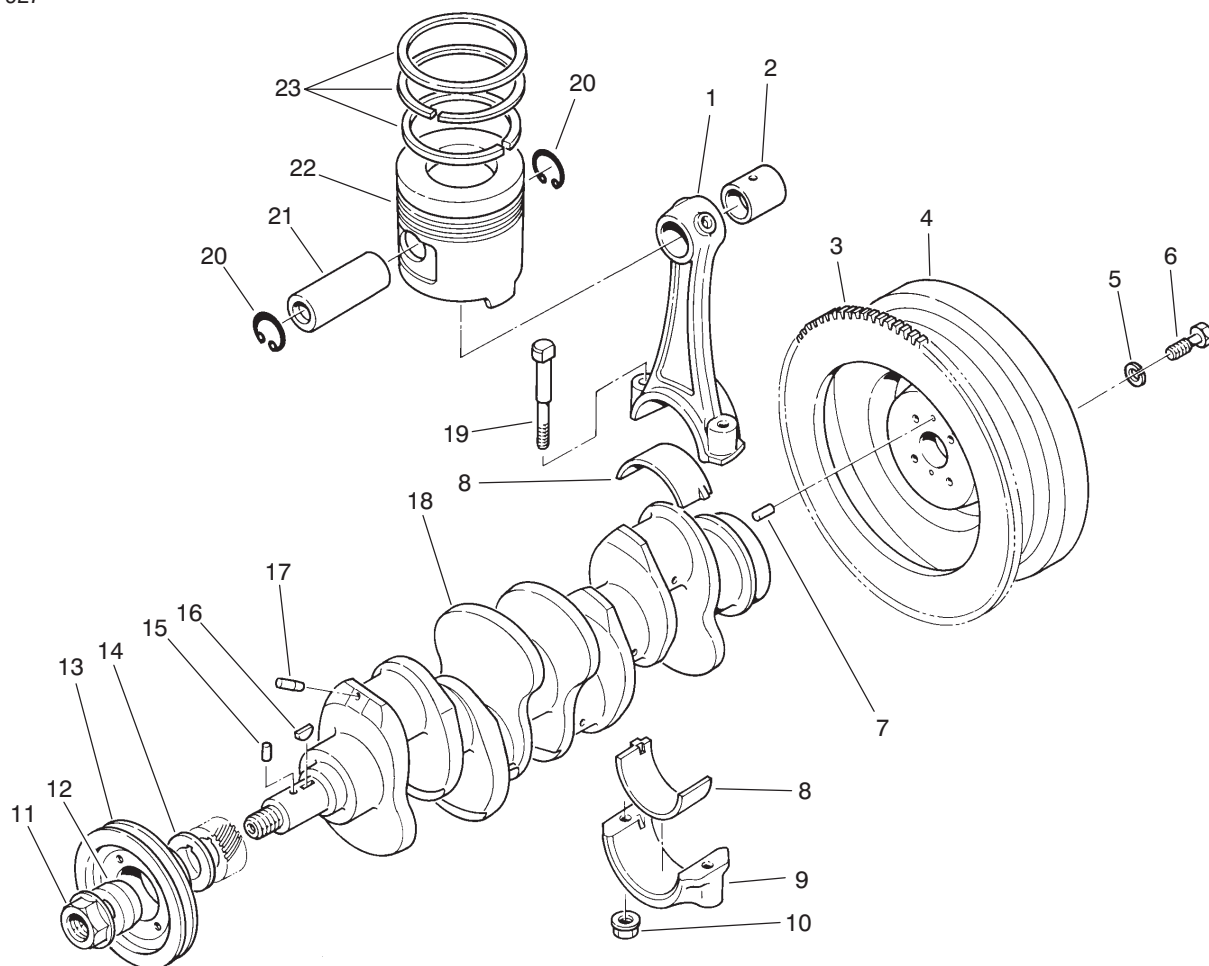


T-0586-1

PISTON, CONNECTING ROD, CRANKSHAFT & FLYWHEEL

Ref. No.	Part No.	Description	No. Used
1	70-5990	Connecting Rod - Std. (Incl. Ref. #2, 8-10 & 19)	4
2	70-6000	Bushing	4
3	51-6350	Gear	1
4	70-6030	Flywheel Assembly (Incl. Ref. #3)	1
5	51-8610	Washer - Lock	4
6	70-2880	Bolt	4
7	70-5800	Pin	2
8	70-5430	Bearing - Rod (Std.)	8
9		Cap	4
10	70-5420	Nut	8
11	70-3170	Nut	1
12	70-5820	Cone	1
13	70-5440	Pulley	1
14	70-5810	Plate	1
15	51-5650	Pin	1

Ref. No.	Part No.	Description	No. Used
16	51-5460	Key	1
17		Plug	2
18	70-6020	Crankshaft Assembly (Incl. Ref. #7, 11, & 15-17)	1
19	70-6010	Bolt	8
20	70-3020	Ring	8
21	70-5410	Pin	4
22	70-5980	Piston (Std.)	4
23	70-5400	Ring Set - Std.	4
*	70-5401	Ring Set - O.S. 0.25mm	4
*	70-5402	Ring Set - O.S. 0.50mm	4
*	70-5431	Bearing - Rod U.S. 0.25mm	4
*	70-5432	Bearing - Rod U.S. 0.50mm	4
*	70-5433	Bearing - Rod U.S. 0.75mm	4
*	70-5981	Piston - O.S. 0.25mm	4
*	70-5982	Piston - O.S. 0.50mm	4

*Not Illustrated

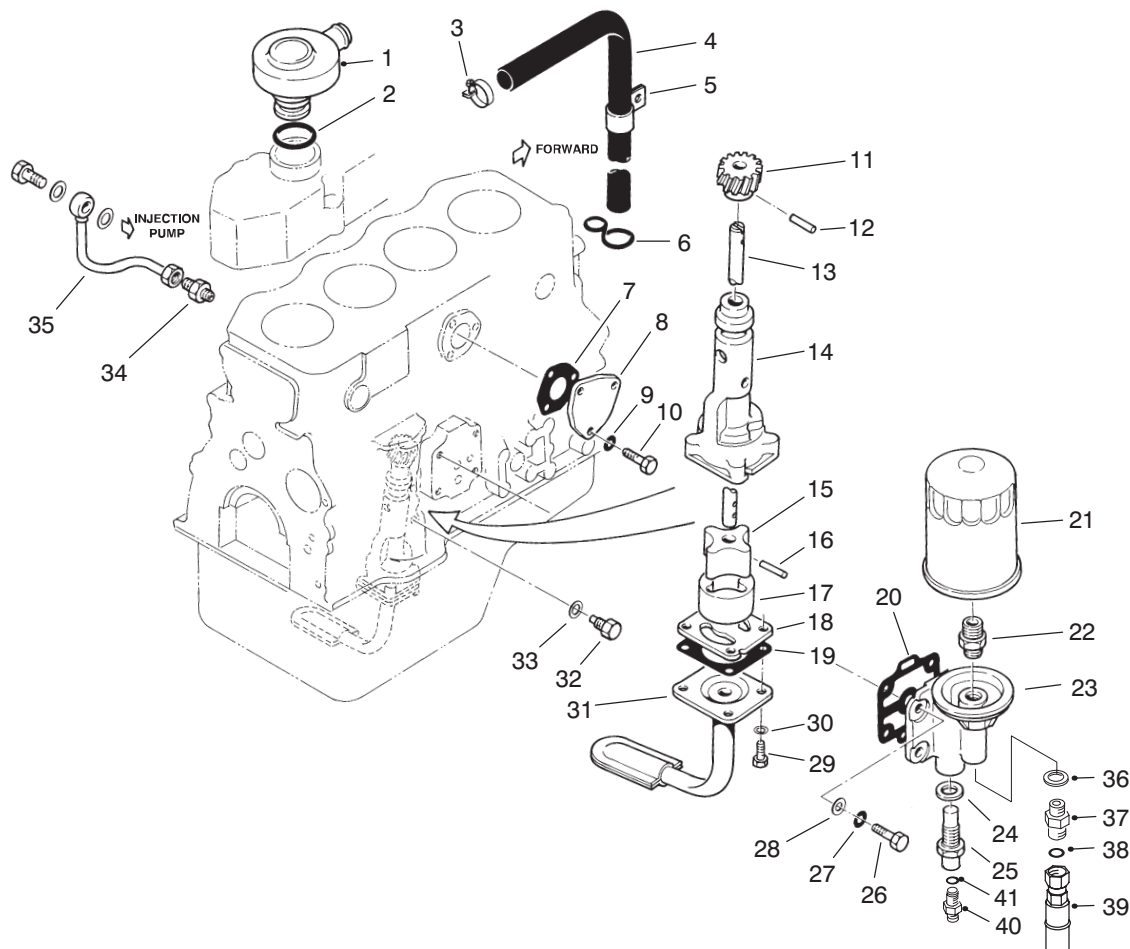


T-0587-1

OIL PUMP, BREATHER & FILTER

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	70-5570	Breather	1	23	70-5530	Bracket Assembly (Incl. Ref. #22, 24 & 25)	1
†2	70-3220	O-Ring	1	24	51-6820	Washer	1
3	70-3090	Clamp	1	25	51-6830	Relief Valve Assembly	1
4	70-3030	Tube	1	26	60-7480	Bolt	4
5	70-3420	Clip	1	27	51-6390	Washer - Lock	4
6	70-5580	Stay	1	28	70-2990	Washer	4
†7	70-5100	Gasket	1	29	60-7290	Bolt	4
8	70-5270	Cover	1	30	51-7400	Washer	4
9	51-7250	Washer	3	31	70-5500	Strainer	1
10	60-7110	Bolt	3	32	70-5120	Bolt	1
11		Gear	1	†33	70-3070	Gasket	1
12		Pin	1	34	70-3340	Connector	1
13		Shaft	1	35	70-5030	Pipe	1
14	70-5840	Oil Pump Assembly (Incl. Ref. #11-13, 15-18 & 29-30)	1	36	70-3080	Gasket	1
15		Rotor	1	37	69-8460	Fitting - Hydraulic Straight (Incl. Ref. #38)	1
16		Pin	2	38	237-22	Seal - O-Ring	1
17		Rotor	1	39	69-8430	Hose - Hydraulic	1
18	70-5850	Cover	1	40	94-2867	Valve - Relief (Incl. Ref. #41)	1
†19	70-5510	Gasket	1	41		O-Ring	1
†20	70-5550	Gasket	1	*	70-5540	Oil Filter Assembly (Incl. Ref. #21-25)	1
21	49-2500	Element Assembly	1				
22	70-5520	Union	1				

†Included in Gasket Set No. 70-6950

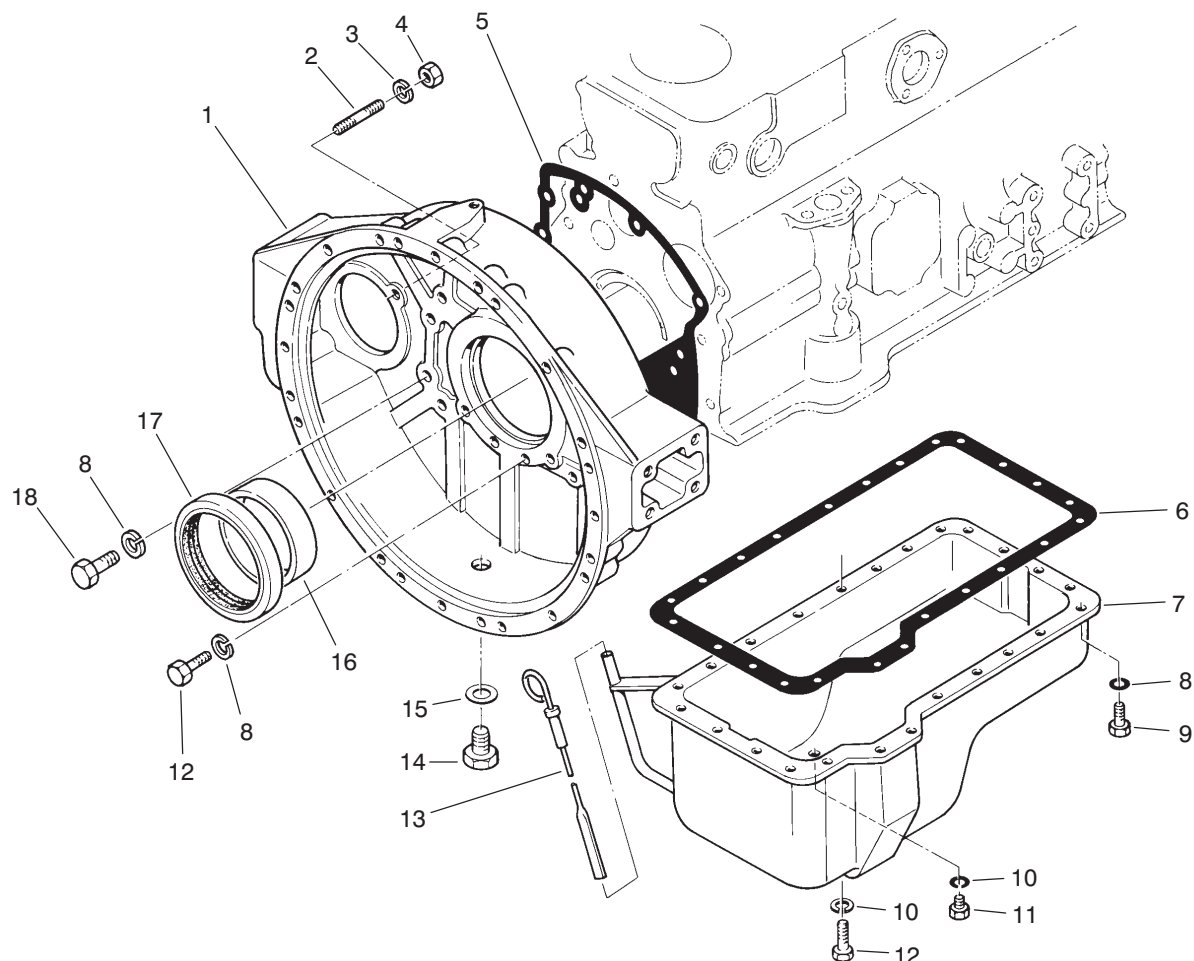

T-0588-1


FLYWHEEL HOUSING & OIL PAN ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-5970	Housing	1
2	51-5950	Stud	2
3	51-6390	Washer - Lock	13
4	51-5970	Nut	2
†5	70-5330	Gasket	1
†6	70-5390	Gasket	1
7	70-5380	Pan - Oil (Incl. Ref. #10 & 11)	1
8	51-7250	Washer - Lock	28
9	60-7280	Bolt	23

Ref. No.	Part No.	Description	No. Used
†10	70-3470	Washer - Drain Plug	1
11	70-3110	Plug - Drain	1
12	60-7370	Bolt	5
13	70-5560	Gage	1
14	70-3230	Plug	1
†15	51-6890	Gasket - Plug	1
16		Sleeve	1
‡17	51-5890	Oil Seal Assembly (Incl. Ref. #16)	1
18	70-2900	Bolt	11

†Included in Gasket Set No. 70-6950

‡Included In Oil Seal Kit No. 70-6960

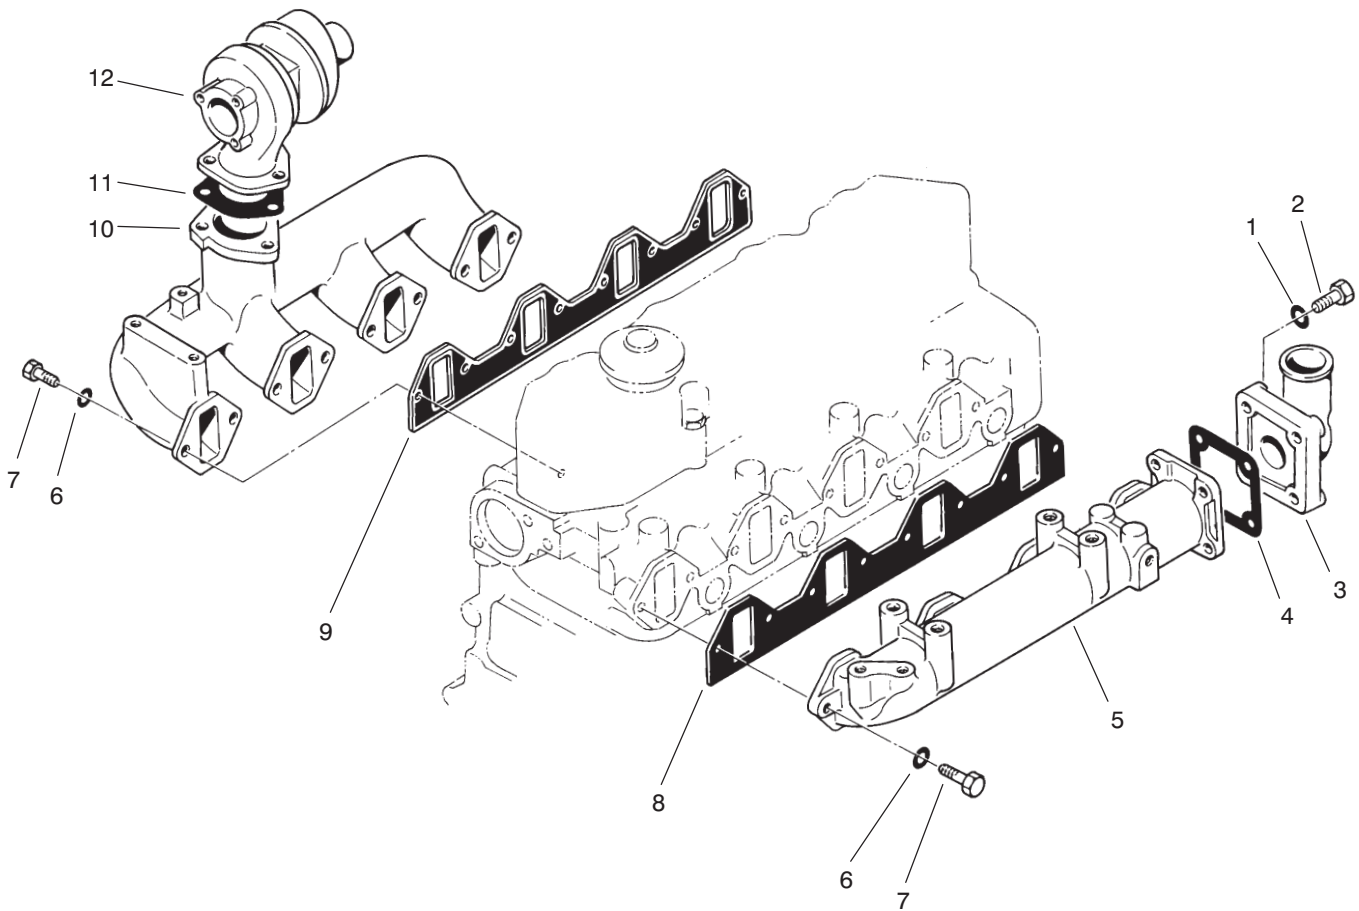


T—0590—1

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51—7250	Washer	4
2	60—7370	Bolt	4
3	70—6090	Elbow	1
†4	70—3130	Gasket	1
5	70—6050	Manifold	1
6	51—7250	Washer	16

Ref. No.	Part No.	Description	No. Used
7	60—7370	Bolt	16
†8	70—6060	Gasket	1
†9	70—5460	Gasket	1
10	70—5470	Manifold	1
†11	70—6250	Gasket	1
12	70—6430	Turbocharger Assembly	1

†Included in Gasket Set No. 70—6950

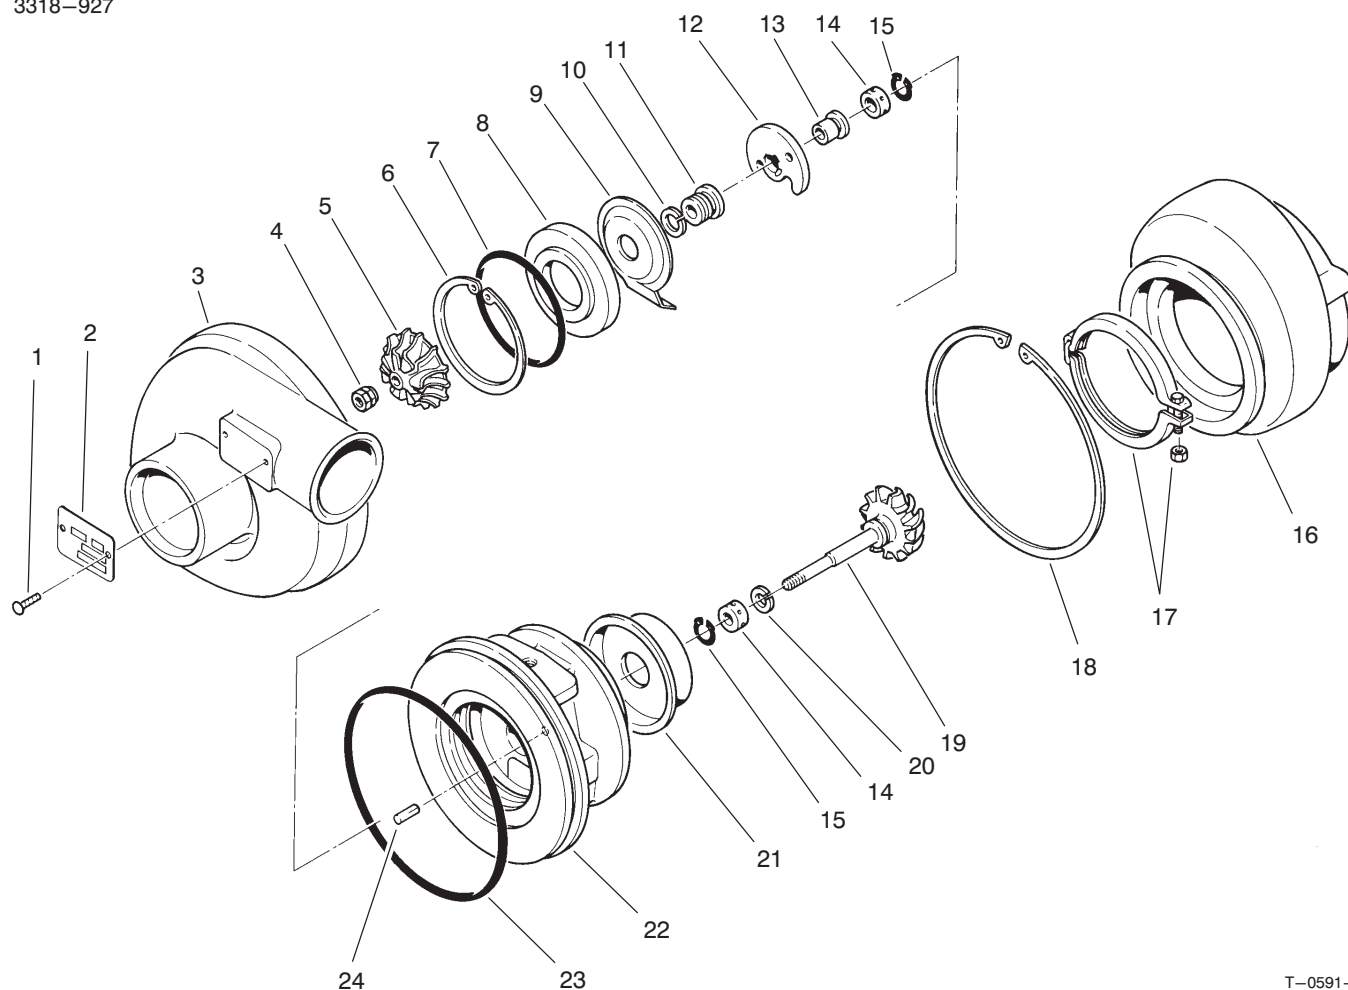


T-0591-1

TURBOCHARGER ASSEMBLY NO. 70-6430

Ref. No.	Part No.	Description	No. Used
1	60-7160	Rivet	2
2	70-6360	Plate	1
3	70-6340	Cover	1
4	70-6330	Nut	1
5	70-6320	Wheel	1
6	70-6300	Ring	1
7	70-6270	O-Ring	1
8	70-6290	Insert	1
9	70-6280	Deflector	1
10	70-6310	Ring	1
11	70-6410	Sleeve	1
12	70-6380	Bearing	1
13	70-6420	Ring	1
14	70-6370	Bearing	2

Ref. No.	Part No.	Description	No. Used
15	70-6390	Ring	2
16	70-6450	Housing	1
17	70-6230	Coupling Assembly	1
18	70-6400	Ring	1
19	70-6470	Shaft & Turbine Wheel Assy.	1
20	70-6350	Ring	1
21	70-6260	Plate	1
22	70-6460	Bearing Housing Assembly (Incl. Ref. #24)	1
23	70-3010	O-Ring	1
24		Pin	1
*	70-6440	Cartridge Assembly (Incl. Ref. #4-15 & 19-24)	1

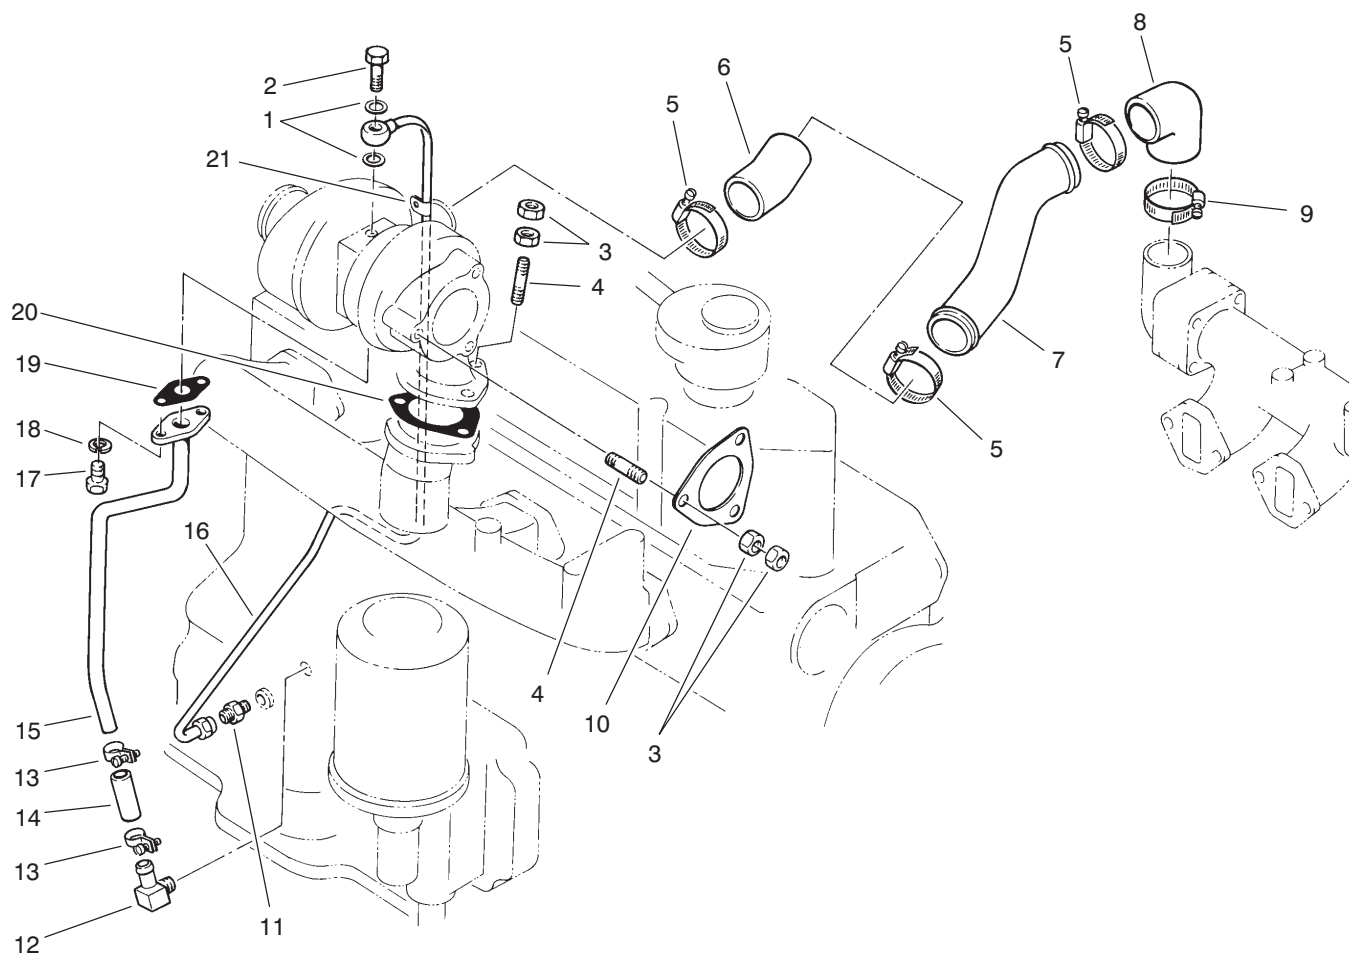


T-0592-1

TURBOCHARGER OIL PIPE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1	70-3060	Gasket	2	12	70-5310	Fitting - 90° Elbow	1
2	70-4980	Bolt - Cap Hex Hd.	1	13	70-3090	Clamp - Hose	2
3	60-7120	Nut - Hex.	12	14	70-3040	Hose	1
4	70-3480	Stud	6	15	70-5490	Pipe - Oil	1
5	70-3430	Clamp - Hose	3	16	70-5480	Pipe - Oil	1
6	70-6080	Hose	1	17	70-2830	Bolt - Cap Hex. Hd.	2
7	70-6070	Pipe	1	18	51-7400	Washer - Lock	2
8	70-4950	Hose - 90° Elbow	1	19	70-4970	Gasket	1
9	70-3440	Clamp - Hose	1	†20	70-6250	Gasket	1
10	70-6240	Gasket	1	21	70-4960	Clamp - R	1
11	70-3340	Connector	1				

†Included in Gasket Set No. 70-6950

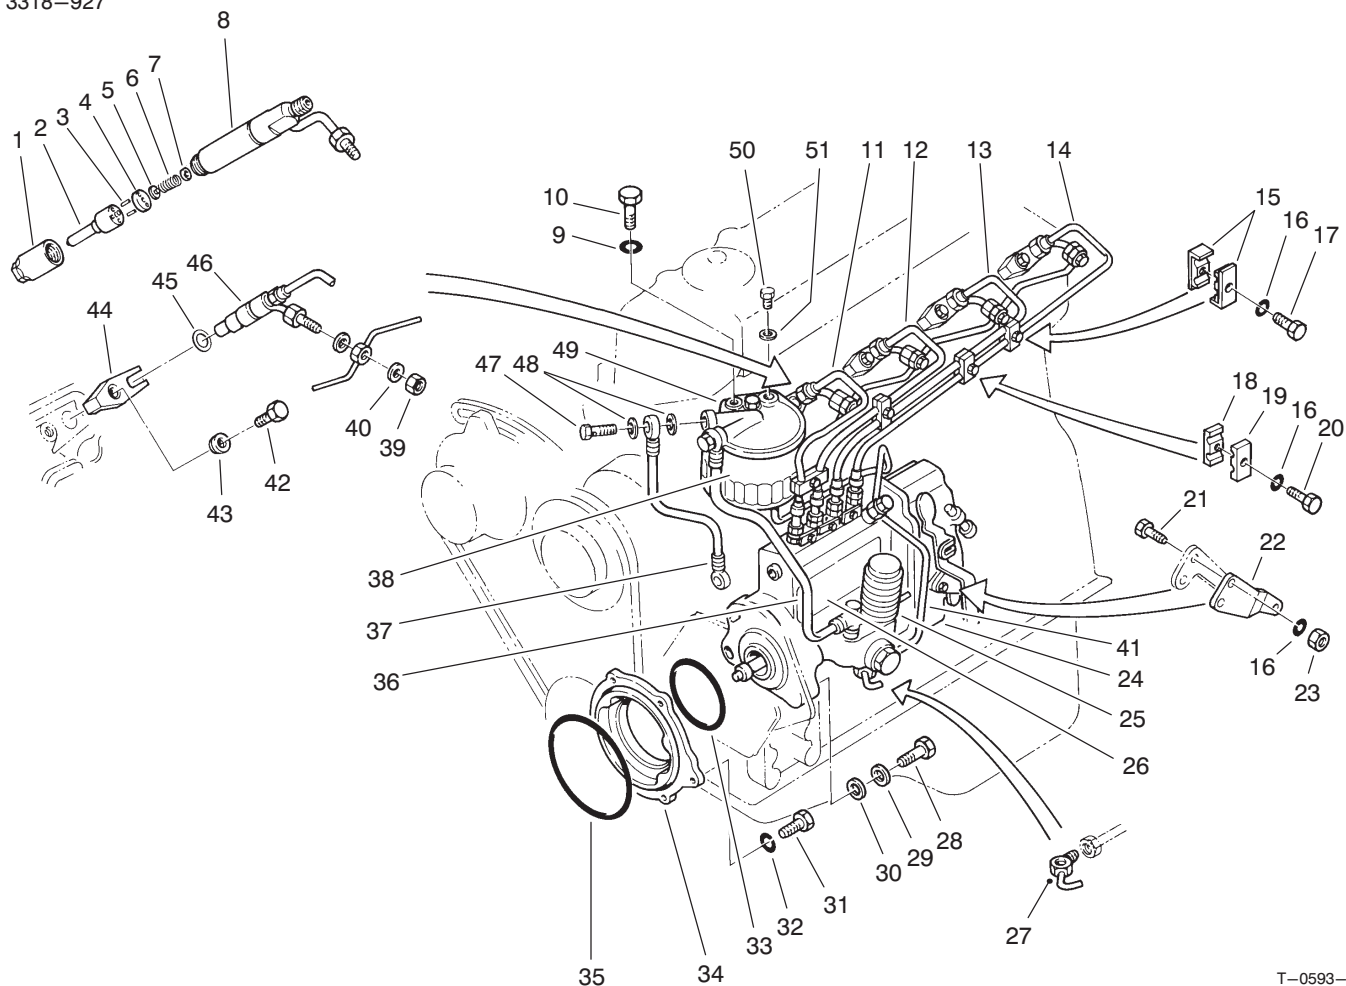

T-0593-1


FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-4840	Nut	4
2	70-6170	Nozzle Tip Assembly	4
3	70-6830	Pin	8
4	70-4930	Packing	4
5	70-4820	Pin	4
6	70-4830	Spring	4
7	70-4860	Washer 1.00 mm	A/R
*	70-4870	Washer 1.05 mm	A/R
*	70-4880	Washer 1.10 mm	A/R
*	70-4850	Washer 2.15 mm	A/R
*	70-4890	Washer 1.275 mm	A/R
*	70-4900	Washer 1.325 mm	A/R
*	70-4910	Washer 1.775 mm	A/R
*	70-4920	Washer 0.95 mm	A/R
8	70-4810	Body Assembly	4
9	51-6390	Washer - Lock	2
10	60-7480	Bolt	2
11	70-6190	Pipe - No. 1	1
12	70-6100	Pipe - No. 2	1
13	70-6200	Pipe - No. 3	1
14	70-6110	Pipe - No. 4	1
15	60-5210	Clamp	2
16	51-7400	Washer - Lock	6
17	70-2840	Bolt	1

Ref. No.	Part No.	Description	No. Used
18	70-3180	Clamp	3
19	70-3190	Clamp	3
20	70-2830	Bolt	3
21	70-2820	Bolt	2
22	70-5770	Lever	1
23	70-2960	Nut	2
24		Governor	1
25	70-5700	Fuel Feed Pump	1
26	70-6180	Injection Pump (Incl. Ref. #24 & 25)	1
27	70-5060	Joint	1
28	51-4910	Bolt	4
29	51-6390	Washer	4
30	70-2990	Washer	4
31	60-7280	Bolt	2
32	51-7250	Washer - Lock	2
†33	70-6130	O-Ring	1
34	70-6210	Flange	1
†35	70-5070	O-Ring	1
36	70-3140	Pipe	1
37	70-3150	Pipe	1
38	70-5730	Filter Element Assembly	1
39	70-2980	Nut	4
†40	70-3460	Washer	8

*Not Illustrated

†Included in Gasket Set No. 70-6950

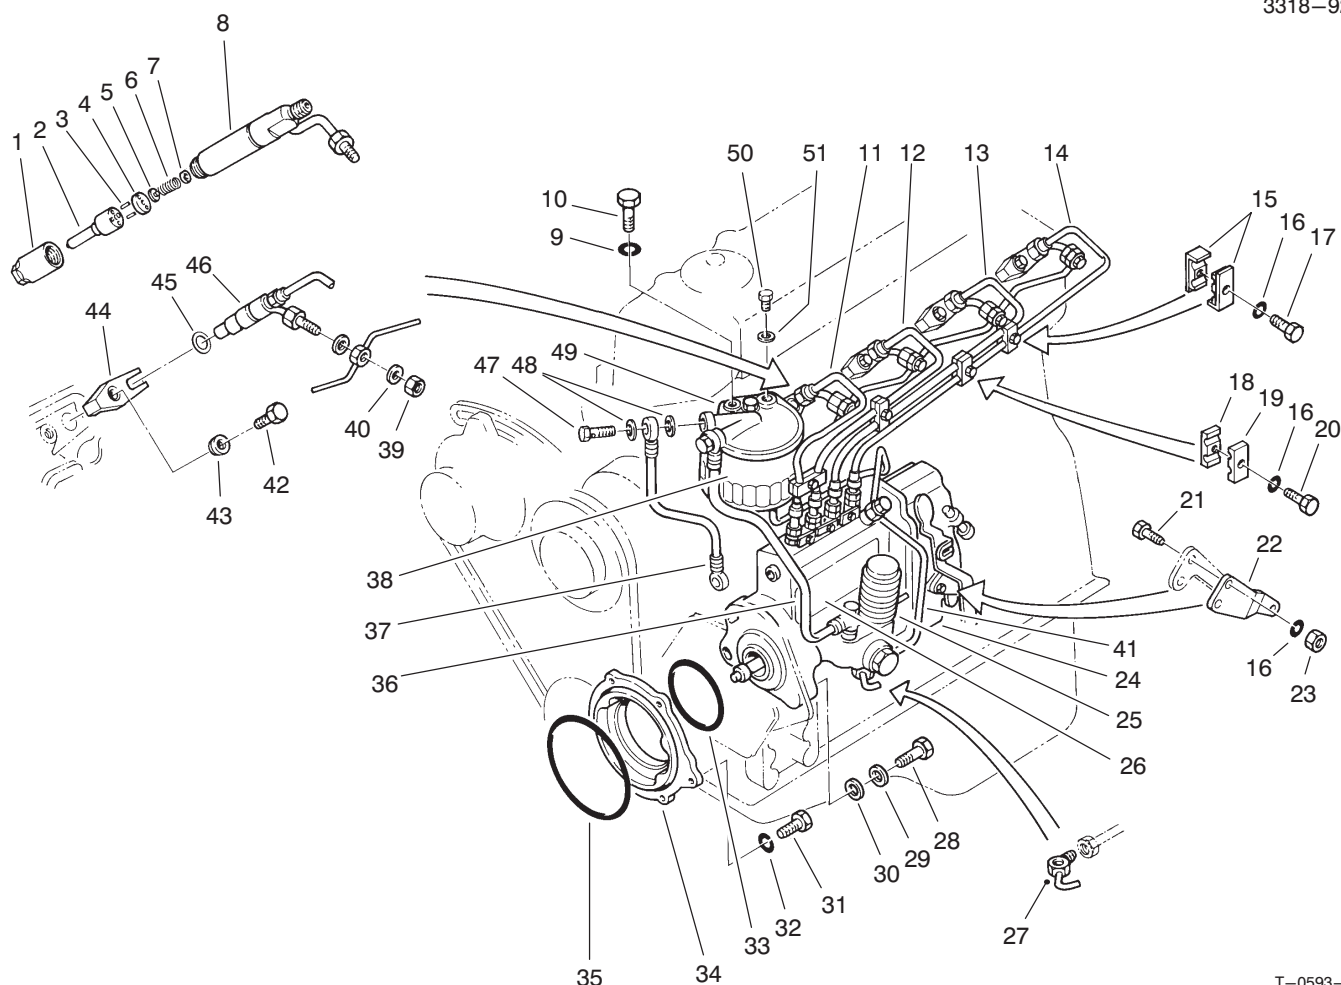


T-0593-1

FUEL SYSTEM ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
41	70-6120	Pipe	1	47	70-3250	Bolt	2
42	70-2850	Bolt	4	48	70-3210	Packing	4
43	70-6140	Washer	4	49	70-5720	Bracket	1
44	70-6220	Gland	4	50	70-3200	Washer	1
†45	70-6150	Gasket	4	51	70-3240	Plug	1
46	70-6160	Nozzle Assembly (Incl. Ref. #1-8)	4	*	70-5710	Fuel Filter Assembly (Incl. Ref. #38 & 47-51)	1

*Not Illustrated

†Included in Gasket Set No. 70-6950

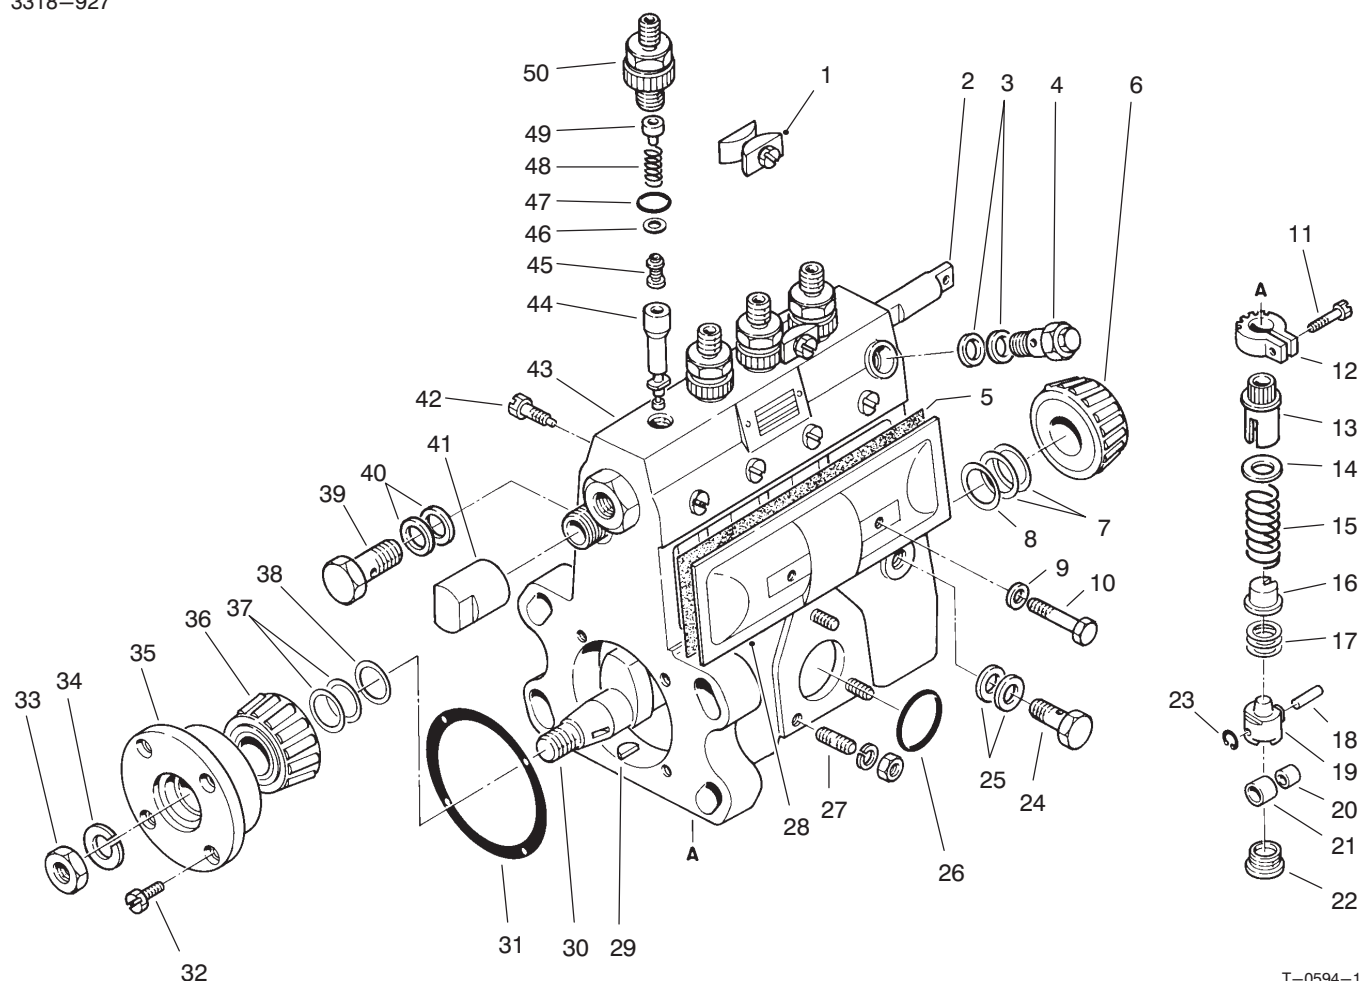


T-0594-1

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-3880	Plate	2
2	70-3840	Rack	1
3	70-3860	Washer	2
4	70-3960	Valve	1
5	70-3930	Gasket	1
6	70-6850	Bearing	2
7	70-3710	Plate - 0.10	A/R
*	70-3720	Plate - 0.12	A/R
*	70-3730	Plate - 0.14	A/R
*	70-3740	Plate - 0.16	A/R
*	70-3750	Plate - 0.18	A/R
*	70-3760	Plate - 0.50	A/R
*	70-3770	Plate - 0.30	A/R
8	70-3690	Ring	1
9	70-3900	Packing	2
10	70-3950	Screw	2
11	70-3570	Screw	4
12	70-3560	Pinion	4
13	70-3580	Sleeve	4
14	70-3590	Seat	4
15	70-3600	Spring	4
16	70-3610	Seat	4

Ref. No.	Part No.	Description	No. Used
17	70-3970	Plate - 0.6	A/R
*	70-3980	Plate - 0.7	A/R
*	70-3990	Plate - 0.8	A/R
*	70-4000	Plate - 0.9	A/R
*	70-4010	Plate - 1.0	A/R
*	70-4020	Plate - 1.1	A/R
*	70-4030	Plate - 1.2	A/R
*	70-4040	Plate - 1.3	A/R
*	70-4050	Plate - 1.4	A/R
*	70-4060	Plate - 0.1	A/R
*	70-4070	Plate - 0.2	A/R
*	70-4080	Plate - 0.3	A/R
*	70-4090	Plate - 0.4	A/R
*	70-4100	Plate - 0.5	A/R
*	70-4110	Plate - 0.15	A/R
18	70-3640	Pin	4
19	70-3620	Body	4
20	70-3650	Bushing	4
21	70-3660	Roller	4
22	70-3670	Plug	4
23	70-6800	E-Ring	4
24	70-6930	Screw	1

*Not Illustrated

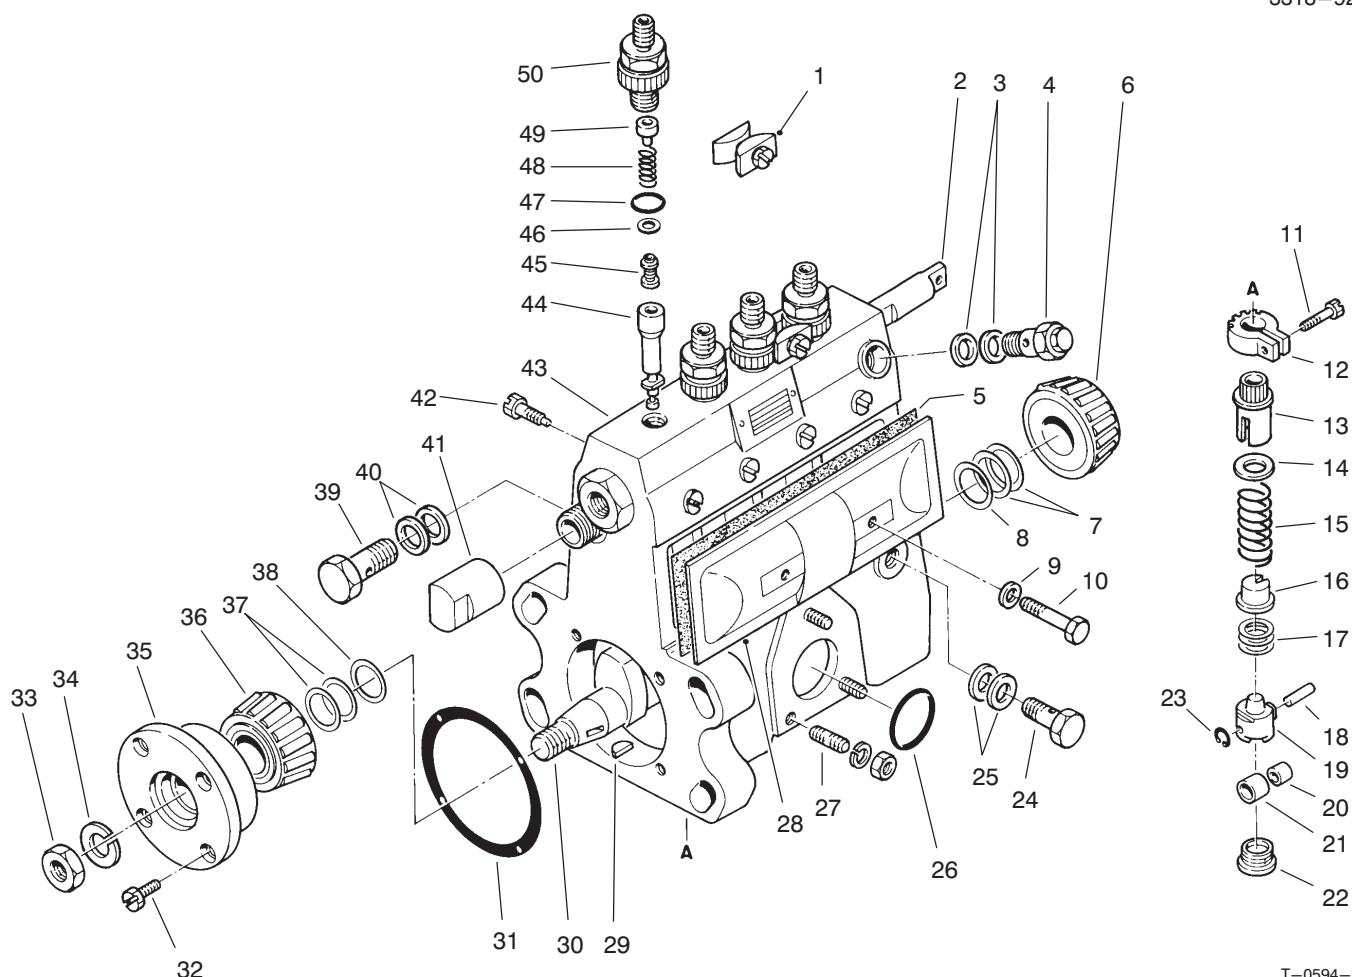


T-0594-1

FUEL INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
25	70-3910	Washer	2	39	70-6940	Screw	1
26	70-6900	O-Ring	1	†40	70-3870	Washer	2
27	70-6720	Stud	3	41	70-3490	Cover	1
28	70-3940	Plate	2	42	70-3850	Screw	1
29	70-6880	Key	1	43	70-4940	Housing Assembly (Incl. Ref. #27)	1
30	70-3680	Camshaft	1	44	70-3550	Element Assembly	4
31	70-3830	Gasket	1	45	70-3540	Valve Assembly	4
32	70-6540	Bolt	4	46	70-3530	Gasket	4
33	70-6780	Nut	1	47	70-6910	O-Ring	4
34	70-6680	Washer	1	48	70-3520	Spring	4
35	70-3820	Cover	1	49	70-3510	Stopper	4
36	70-6840	Bearing	1	50	70-3500	Holder	4
37	70-3780	Plate - 0.1	A/R	*	70-3920	Cover Assembly (Incl. Ref. #5, 9-10 & 28)	1
*	70-3790	Plate - 0.15	A/R	*	70-3630	Tappet Assembly (Incl. Ref. #18-21 & 23)	1
*	70-3800	Plate - 0.3	A/R				
*	70-3810	Plate - 0.5	A/R				
38	70-3700	Ring	1				

*Not Illustrated

†Included in Gasket Set No. 70-6950

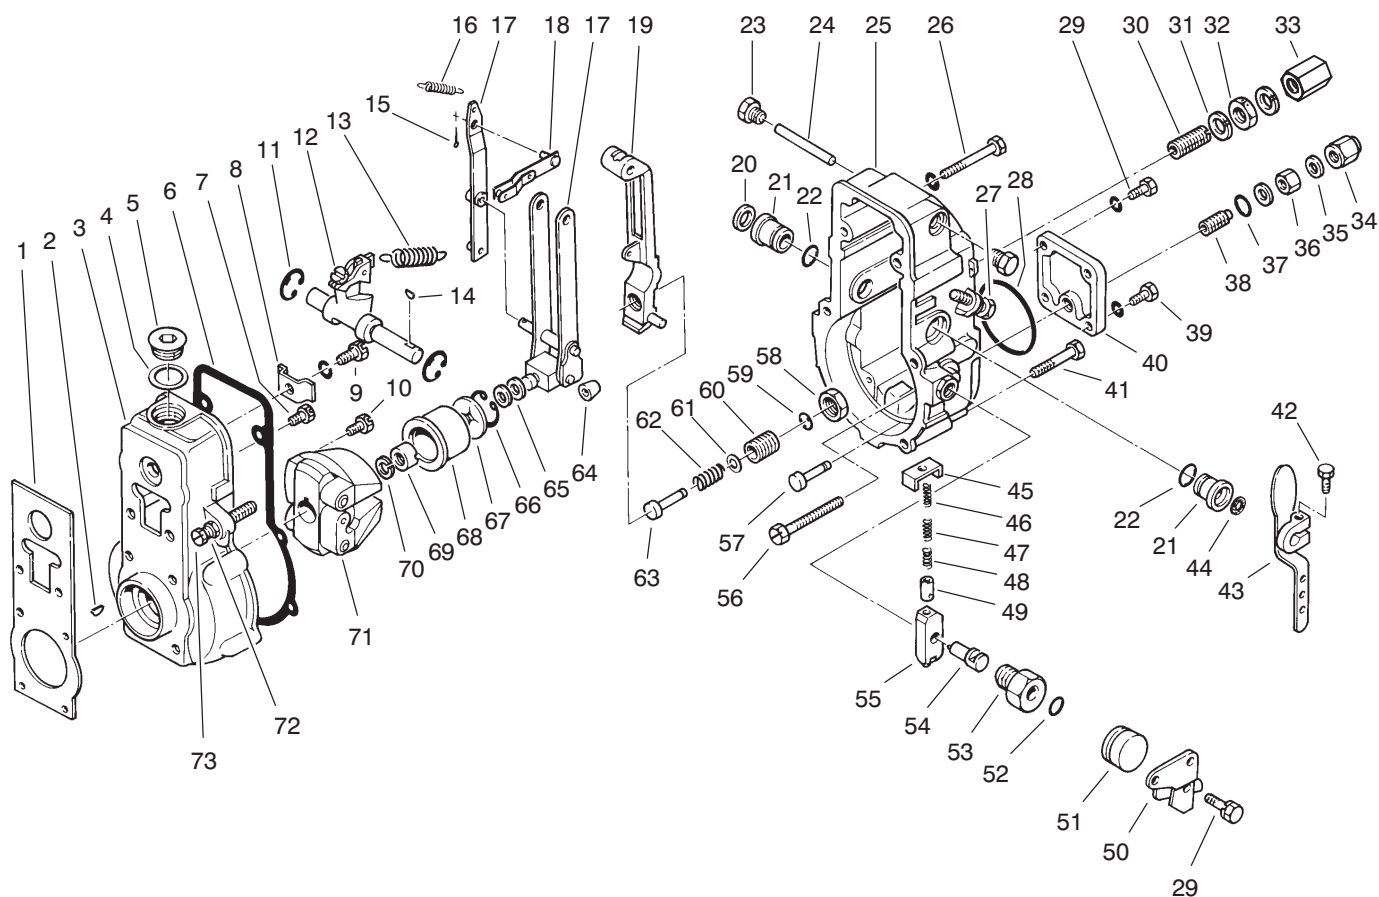


T-0595-1

GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-4160	Gasket	1
2	70-6870	Key	1
3	70-4130	Housing	1
4	70-6710	Washer	1
5	70-4590	Plug	1
6	70-4150	Gasket	1
7	70-6530	Bolt	5
8	70-4210	Plate	1
9	70-6550	Bolt	1
10	70-6520	Bolt	1
11	70-6810	E-Ring	2
12	70-4220	Swiveling Lever Assembly	1
13	70-4370	Spring	1
14	70-6860	Key	1
15	70-6480	Pin	1
16	70-4380	Spring	1
17	70-4320	Lever Assembly	1
18	70-4340	Shackle Assembly	1
19	70-4250	Tension Lever Assembly	1
20	70-4580	Cap	1
21	70-4230	Bushing	2
22	70-6510	O-Ring	2
23	70-4360	Plug	2
24	70-4350	Shaft	1
25	70-4400	Cover	1
26	70-6740	Bolt	2

Ref. No.	Part No.	Description	No. Used
27	70-4140	Stopper	1
28	70-6790	Packing	1
29	70-6520	Bolt & Washer	3
30	70-4120	Capsule	1
31	70-3890	Washer	2
32	70-4310	Nut	1
33	70-4440	Nut	1
34	70-4450	Nut	1
35	70-6690	Washer	2
36	70-6770	Nut	1
37	70-6500	O-Ring	1
38	70-4330	Bushing	1
39	70-6760	Bolt & Washer	2
40	70-4550	Plate	1
41	70-6750	Bolt	4
42	70-6730	Bolt	1
43	70-4560	Adjusting Lever Assembly	1
44	70-6920	Seal	1
45	70-4460	Plate	1
46	70-4500	Spring	1
47	70-4520	Spring	1
48	70-4510	Spring	1
49	70-4490	Cup	1
50	70-4570	Stop Lever Assembly	1
51	70-4530	Cover	1
52	70-6890	O-Ring	1

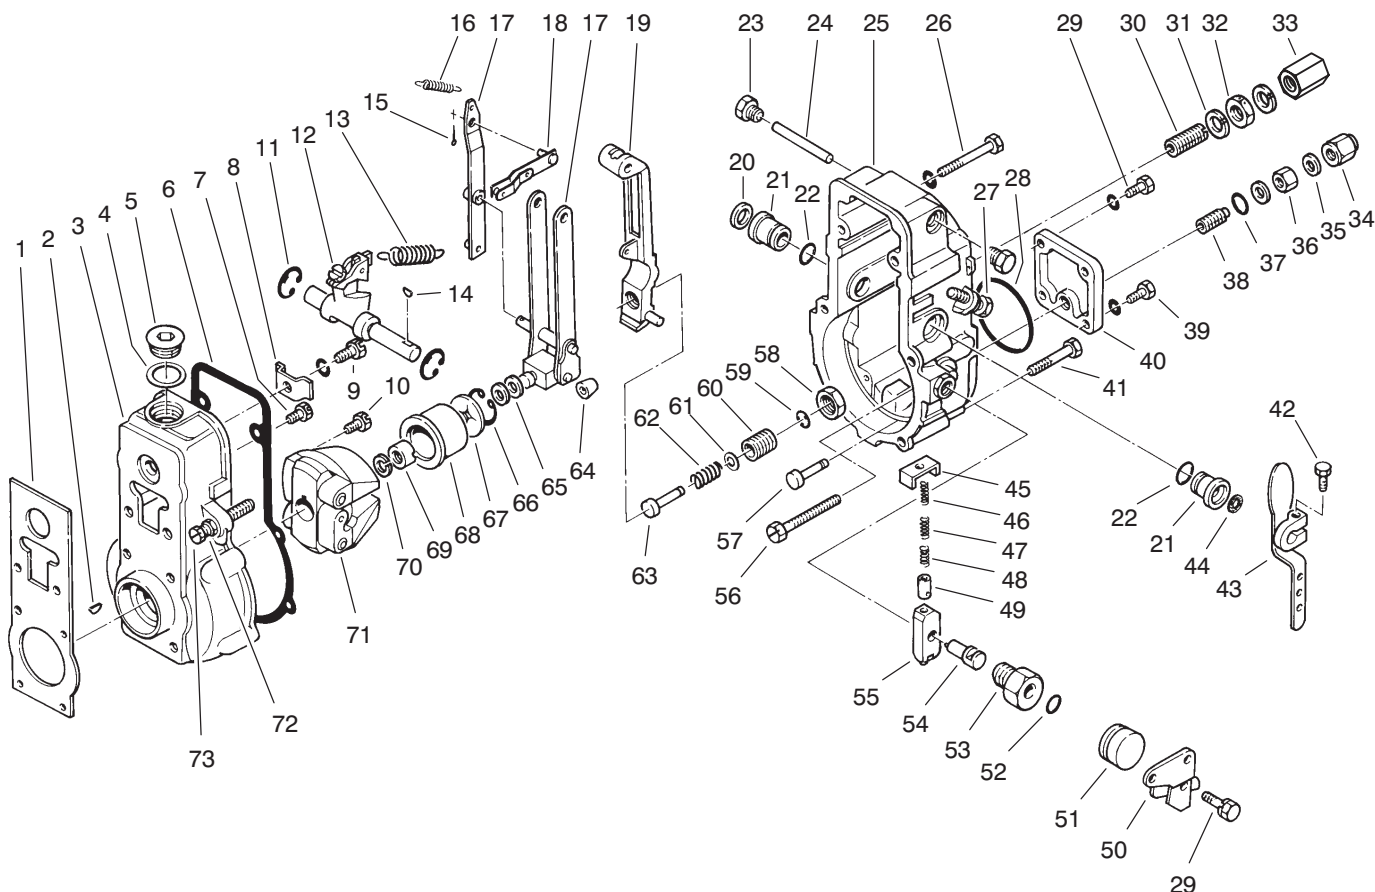


T-0595-1

GOVERNOR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
53	70-4420	Bushing	1	65	70-6610	Washer - 0.2	A/R
54	70-4480	Shaft	1	*	70-6620	Washer - 0.3	A/R
55	70-4470	Lever	1	*	70-6630	Washer - 0.4	A/R
56	70-4390	Screw	1	*	70-6640	Washer - 0.1	A/R
57	70-4410	Pin	1	*	70-6650	Washer - 1.0	A/R
58	70-4300	Nut	1	66	70-6490	Ring	1
59	70-4240	E-Ring	1	67	70-4200	Plate	1
60	70-4270	Screw	1	68	70-4190	Sleeve	1
61	70-6570	Washer - 0.1	A/R	69	70-4180	Nut	1
*	70-6600	Washer - 0.2	A/R	70	70-6670	Washer	1
*	70-6580	Washer - 0.25	A/R	71	70-4170	Flyweight Assembly	1
*	70-6590	Washer - 0.5	A/R	72	70-6560	Nut	2
*	70-6660	Washer - 1.0	A/R	73	70-4430	Screw	1
62	70-4280	Spring	1	*	70-4260	Adapter Assembly (Incl. Ref. #59-63)	1
63	70-4290	Adapter	1				
64	70-4540	Slider	1				

*Not Illustrated

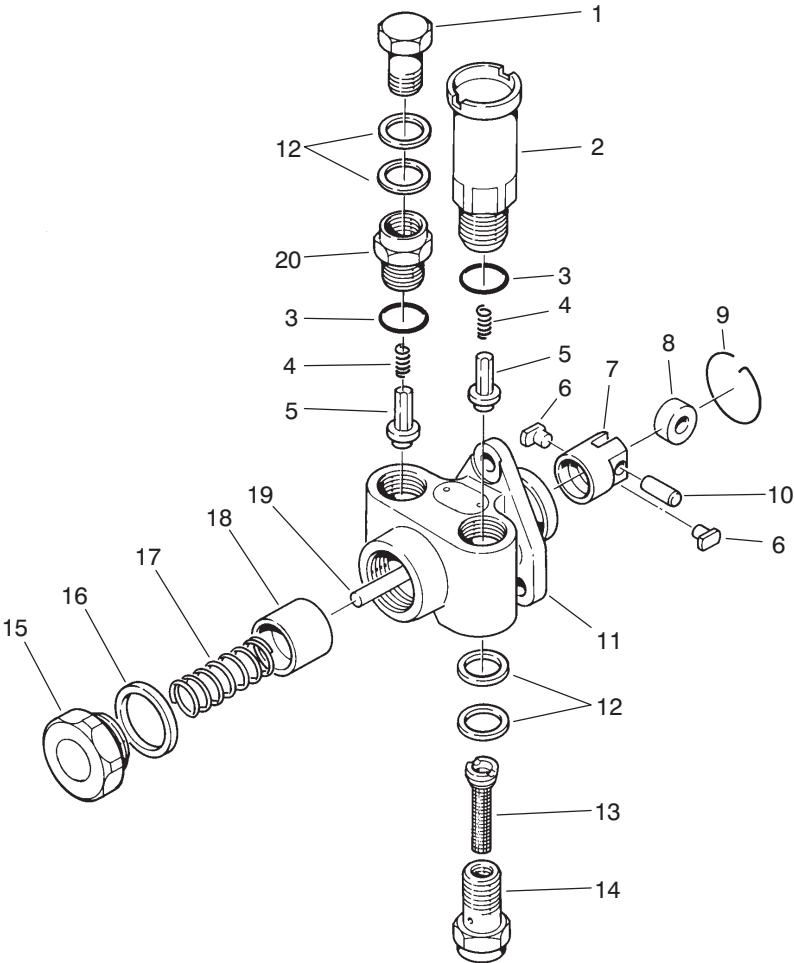


T-0596-1

FUEL FEED PUMP ASSEMBLY NO. 70-5700

Ref. No.	Part No.	Description	No. Used
1	70-6940	Screw	1
2	70-4650	Pump Assembly	1
3	70-4630	Gasket	2
4	70-4620	Spring	2
5	70-4610	Valve	2
6	70-4760	Block	2
7	70-4730	Tappet	1
8	70-4740	Roller	1
9	70-6820	Ring	1
10	70-4750	Pin	1
11	70-4600	Housing Assembly	1
†12	70-3870	Washer	4
13	70-4790	Filter	1

Ref. No.	Part No.	Description	No. Used
14	70-4800	Screw	1
15	70-4780	Plug	1
16	70-6700	Washer	1
17	70-4770	Spring	1
18	70-4720	Piston	1
19	70-4660	Rod, Blue Small Dia.	A/R
*	70-4670	Rod, Red Small Dia.	A/R
*	70-4680	Rod, Yellow Small Dia.	A/R
*	70-4690	Rod, Green Small Dia.	A/R
*	70-4700	Rod, White Small Dia.	A/R
*	70-4710	Rod, Brown Big Dia.	A/R
20	70-4640	Support	1

*Not Illustrated
†Included in Gasket Set No. 70-6950

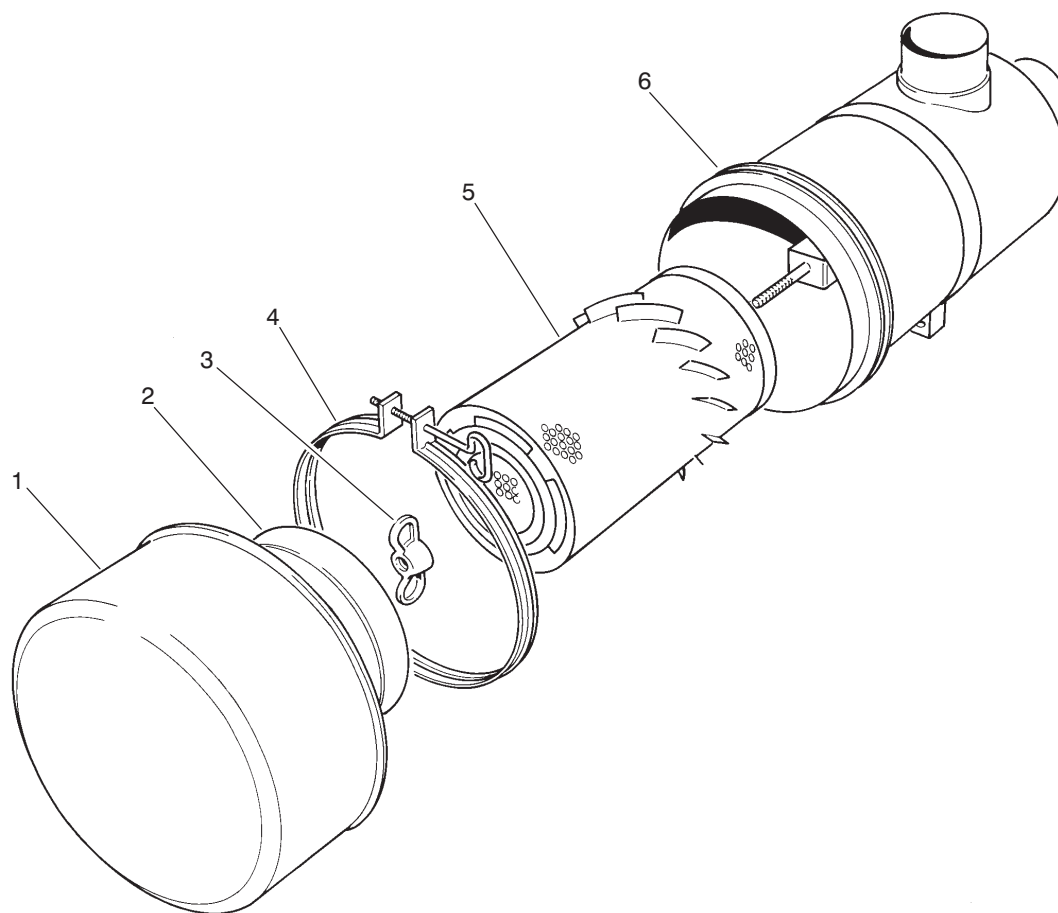


T-0387-1

AIR CLEANER ASSEMBLY NO. 69-1890

Ref. No.	Part No.	Description	No. Used
1	69—1930	Cup Assembly	1
2	69—1920	Baffle	1
3	27—7120	Nut	1
4	69—1910	Clamp Assembly	1

Ref. No.	Part No.	Description	No. Used
5	69-1900	Element Assembly	1
†6		Housing	1
*	27-7220	Detergent - Element	1

*Not Illustrated
†Not Serviceable

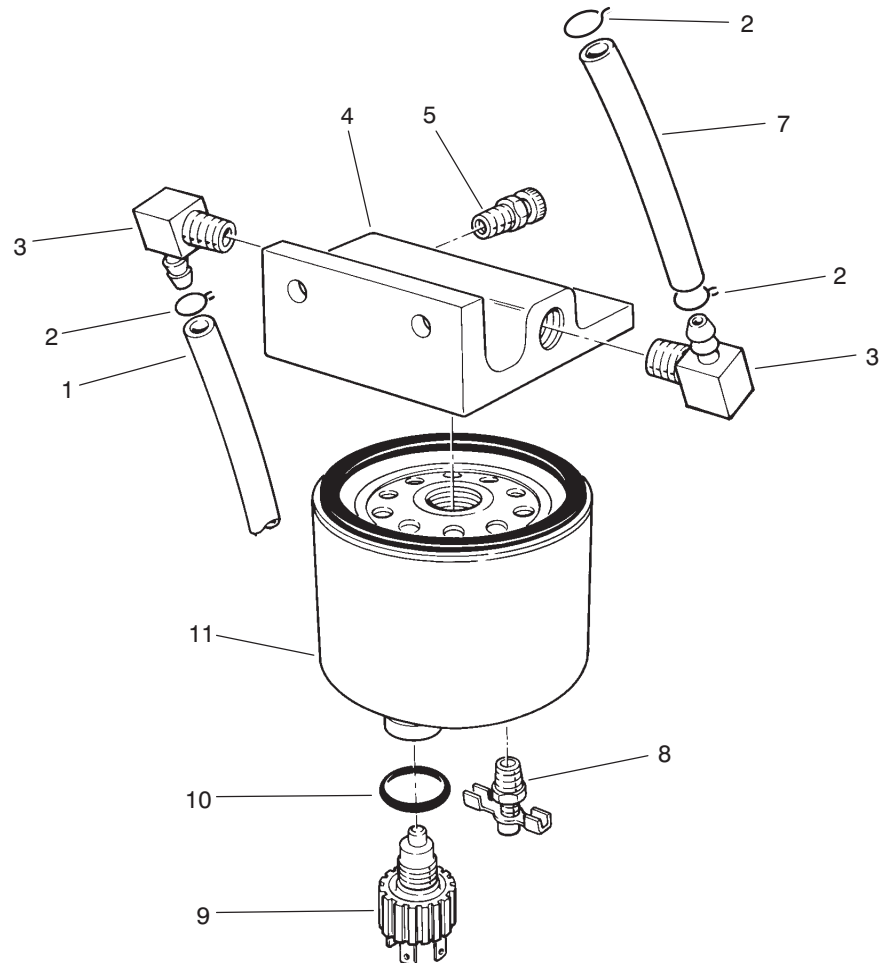


T-0376-1

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	37-9560	Hose - Fuel	1	8	63-8310	Valve - Drain	1
2	2412-108	Clamp - Hose	3	9	69-1760	Sensor - Water	1
3	353-781	Fitting - Fuel Elbow	2	10	237-154	Seal - O-Ring	1
4	63-8280	Head - Fuel Filter (Incl. Ref. #5)	1	11	69-1770	Element - Spin-On (Incl. Ref. #6)	1
5	63-8290	Vent - Air	1	*	69-1750	Fuel Filter Assembly (Incl. Ref. #4, 5 & 8-11)	1
7	71-2690	Hose - Fuel	1				

*Not Illustrated

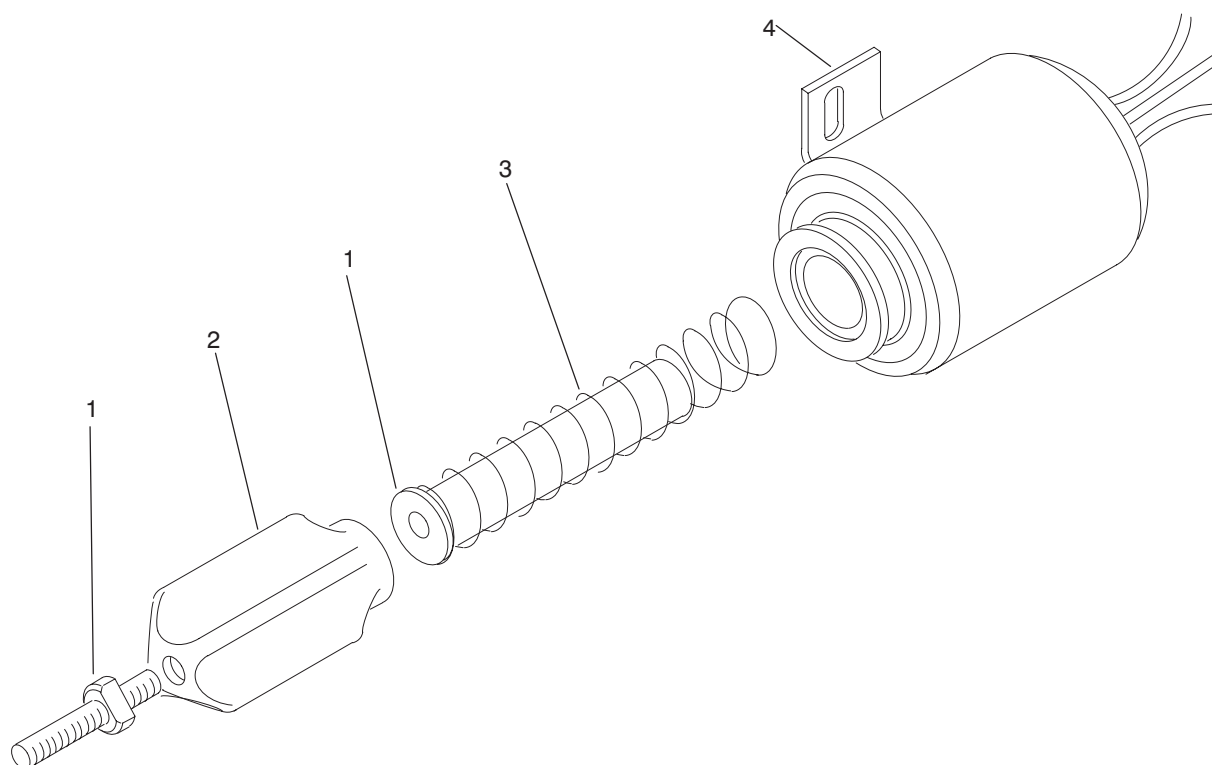


T-1758-1

SOLENOID VALVE NO. 85-6230

Ref. No.	Part No.	Description	No. Used
1	85-6300	Assembly - Plunger	1
2	85-6290	Boot - Rubber	1
3	85-6280	Spring - Return	1

Ref. No.	Part No.	Description	No. Used
4 *	85-6230	Body - Solenoid Assembly - Solenoid Valve (Incl. Ref. #1-4)	1

*Not Illustrated

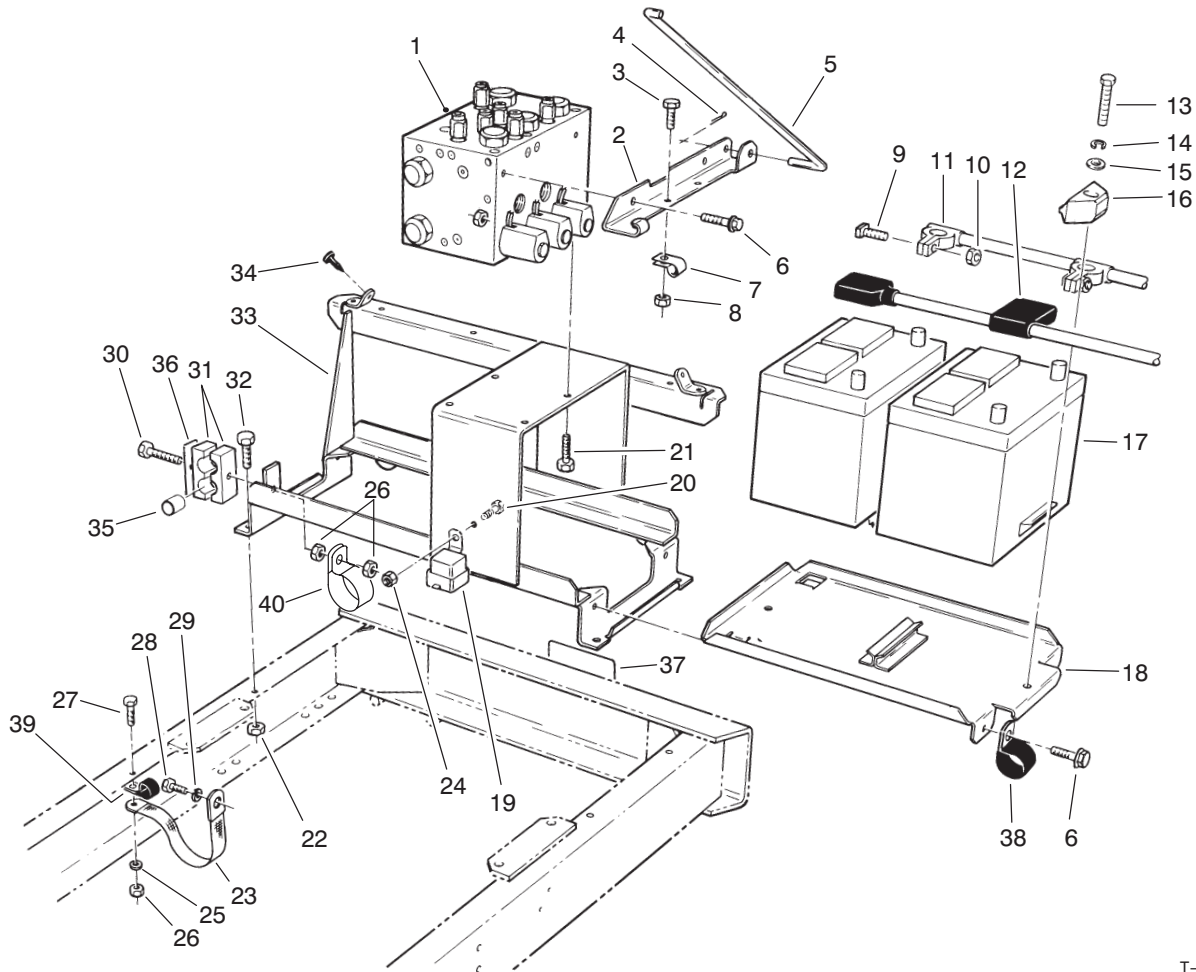

T-0346-1


BATTERY FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-4150	PTO Manifold Assembly	1
2	69-9350	Bracket - Hood Prop Rod	1
3	321-3	Screw - Cap Hex. Hd.	3
4	3272-6	Pin - Cotter	1
5	69-9120	Rod - Hood Prop	1
6	3234-17	Screw - Hex. Flange Hd.	4
7	2412-73	Clamp - R	3
8	32149-2	Nut - Keps	3
†9		Bolt - Clamp	4
†10		Nut - Clamp	4
11	95-1839	Cable - Negative	1
12	92-4997	Cable - Positive	1
13	323-9	Screw - Cap Hex. Hd.	2
14	3253-21	Washer - Lock	2
15	3256-24	Washer - Flat	2
16	66-2490	Hold-Down - Battery	2
‡17		Battery (Type 24, LTV)	2
18	80-0160	Tray - Battery	1
19	63-7590	Relay	1
20	3290-321	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
21	323-4	Screw - Cap Hex. Hd.	4
22	32152-2	Nut - Lock	4
23	18-2770	Strap - Ground	1
24	3296-2	Nut - Flange Lock	1
25	3254-2	Washer - Lock	1
26	32152-1	Nut - Lock	3
27	322-5	Screw - Cap Hex Hd.	1
28	69-0060	Screw - Cap Hex. Hd.	1
29	48-8070	Washer - Lock	1
30	322-11	Screw - Cap Hex. Hd.	1
31	56-7974	Clamp - Hydraulic Lines	2
32	323-6	Screw - Cap Hex. Hd.	4
33	69-8290	Frame - Battery	1
34	237-37	Bumper - Rubber	4
35	23-7250	Spacer	1
36	69-9761	Plate - Clamp	1
37	72-4080	Decal - Danger	1
38	2412-41	Clamp	2
39	2412-39	Clamp	1
40	2412-104	Clamp-R	1

†Not serviceable separately.

‡Obtain Locally

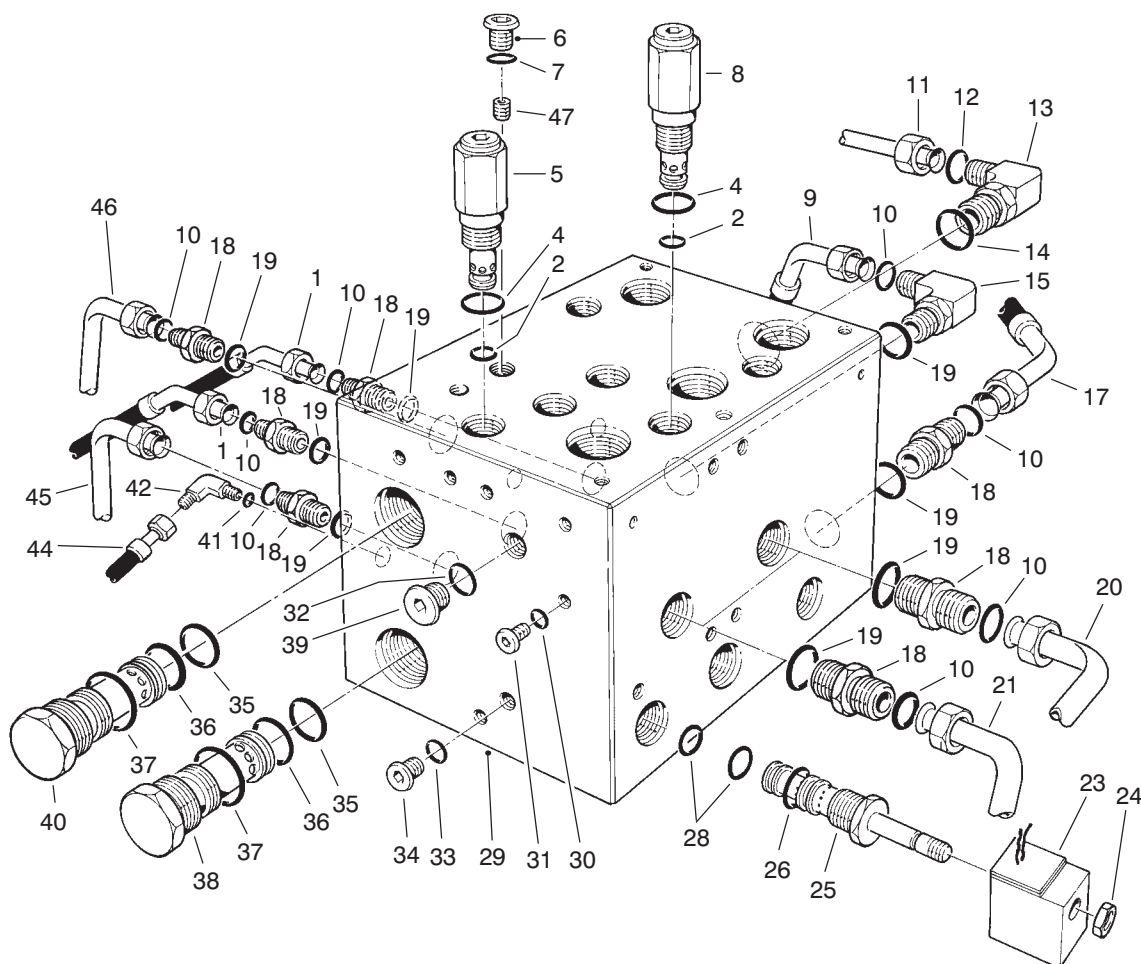


T-0364-2

PTO MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-5590	Hose - Hydraulic	2	24	3219-10	Nut - Jam	3
†2		Seal - O-Ring	6	25	95-5639	Spool - Solenoid Valve (Incl. Ref. # 24, 26-28)	3
†4		Seal - O-Ring	6	†26		Seal - O-Ring	3
5	95-5640	Valve - Cartridge (600 lbs) (Incl. Ref. #2-4)	3	†28		Seal - O-Ring	6
6	353-989	Plug (Incl. Ref. #7)	1	†29		Manifold - PTO	1
7	237-42	Seal - O-Ring	1	30	237-156	Seal - O-Ring	30
8	95-5635	Valve - Cartridge (3000 lbs) (Incl. Ref. #2-4)	3	31	353-991	Plug (Incl. Ref. #30)	30
9	69-5600	Hose - Hydraulic	1	32	237-79	Seal - O-Ring	4
10	237-58	Seal - O-Ring	8	33	237-78	Seal - O-Ring	1
11	69-6160	Tube - Hydraulic	1	34	353-990	Plug (Incl. Ref. #33)	1
12	340-65	Seal - O-Ring	2	†35		Seal - O-Ring	6
13	340-129	Fitting - Hydraulic Elbow (Incl. Ref. #12 & 14)	1	†36		Seal - O-Ring	6
14	237-146	Seal - O-Ring	1	†37		Seal - O-Ring	6
15	340-142	Fitting - Hydraulic Elbow (Incl. Ref. #10 & 16)	1	38	95-5637	Valve - Cartridge (75 lbs) (Incl. Ref. #35-37)	3
17	69-5610	Hose - Hydraulic	1	39	353-988	Plug (Incl. Ref. #32)	4
18	340-9	Fitting - Hydraulic Straight (Incl. Ref. #10 & 19)	7	40	95-5636	Valve - Cartridge (20 lbs) (Incl. Ref. #35-37)	3
19	237-81	Seal - O-Ring	8	41	237-78	Seal - O-Ring	2
20	69-6180	Tube - Hydraulic	1	42	353-431	Fitting - Hydraulic 45° (Incl. Ref. #41 & 43)	2
21	69-6170	Tube - Hydraulic	1	44	93-7423	Hose - Diagnostic	2
23	88-9190	Solenoid Coil Assembly	3	45	69-6140	Tube - Hydraulic	1
				46	69-6150	Tube - Hydraulic	1

†Not serviceable separately.

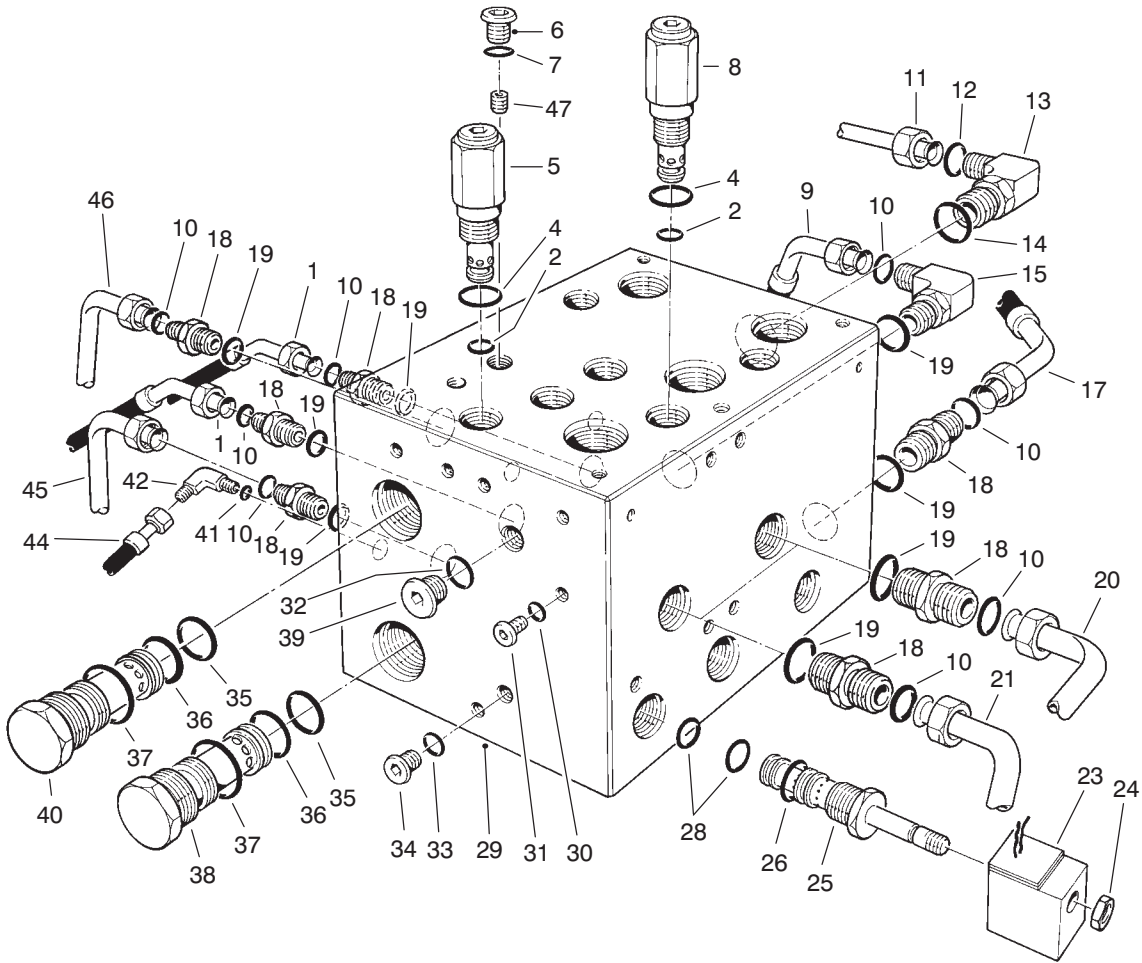


T-0364-2

PTO MANIFOLD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
47	69-4220	Plug - Orifice	1	*	95-5643	Solenoid Valve Seal Kit (Incl. Ref. #26-28)	3
*	95-5645	Cartridge Valve Seal Kit (Incl. Ref. #2 & 4)	6	*	95-5908	PTO Manifold Assembly (Incl. Ref. #2, 4-8, 22-40 & 47)	1
*	95-5644	Cartridge Valve Seal Kit (Incl. Ref. #35-37)	6				

*Not Illustrated

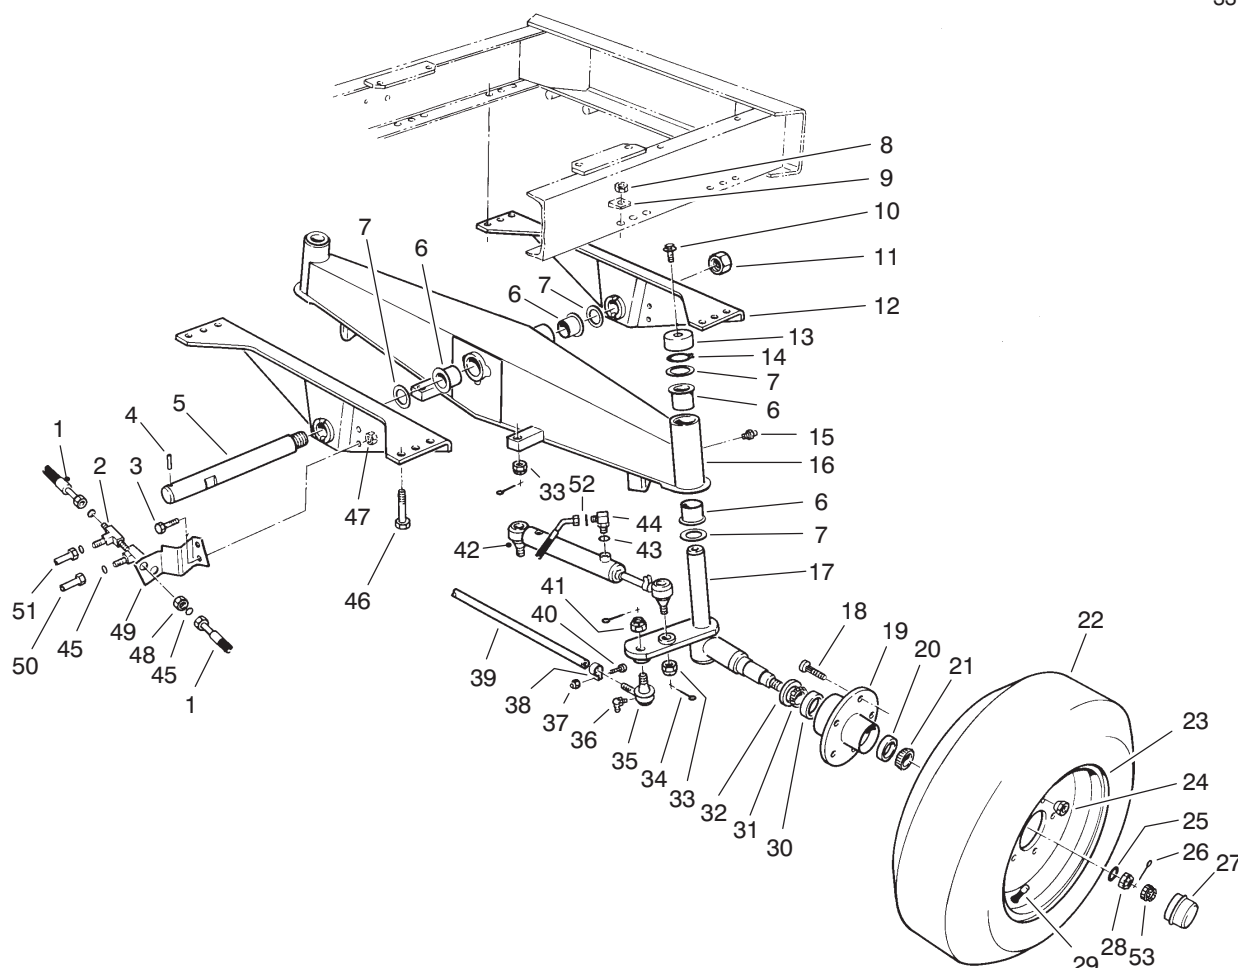


T-0345-1

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-5510	Hose - Hydraulic	4	24	23-7270	Nut - Lug	10
2	340-68	Fitting - Hydraulic Bulkhead Tee (Incl. Ref. #45)	2	25	93-0309	Washer	2
3	323-6	Screw - Cap Hex. Hd.	2	26	3272-13	Pin - Cotter	2
4	32121-110	Pin - Roll	1	27	69-2970	Cap - Hub	2
5	71-2590	Shaft - Pivot	1	28	3220-7	Nut - Jam	2
6	69-6470	Bushing - Flange	6	29	232-27	Stem - Valve	2
7	256-304	Washer - Thrust	6	30	254-107	Cup - Bearing Inner	2
8	32128-23	Nut - Lock	12	31	254-106	Cone - Bearing Inner	2
9	3290-216	Washer - Bevel	12	32	69-2980	Seal - Inner	2
10	3234-12	Screw - Hex. Flange Hd.	2	33	32136-13	Nut - Castle	4
11	3296-68	Nut - Lock	1	34	3272-12	Pin - Cotter	6
12	69-7960	Support - Axle	2	35	2116-4	Joint - Ball R.H.	1
13	69-8890	Cap - Spindle	2	*	2116-3	Joint - Ball L.H.	1
14	32151-10	Ring - Retaining	2	36	302-33	Fitting - Grease	2
15	302-5	Fitting - Grease	3	†37		Nut - Lock	2
16	69-7420	Axle - Rear	1	38	2412-7	Clamp Assembly (Incl. Ref. #37 & 40)	2
17	93-0311	Spindle - Wheel L.H.	1	39	3-3710	Tie Rod Assembly (Incl. Ref. #35-41)	1
*	93-0310	Spindle - Wheel R.H.	1	†40		Screw - Cap Hex. Hd.	2
18	69-2990	Screw - Drive	10	41	32136-2	Nut - Castle	2
19	69-2960	Hub - Rear Wheel (Incl. Ref. #18, 20 & 30)	2	42	69-1960	Hydraulic Cylinder Assembly	2
20	254-72	Cup - Bearing Outer	2	43	237-78	Seal - O-Ring	4
21	254-92	Cone - Bearing Outer	2	44	340-132	Fitting - Hydraulic Elbow (Incl. Ref. #43 & 52)	4
22	69-9880	Tire	2	45	237-22	Seal - O-Ring	6
23	217-116	Rim	2	46	325-6	Screw - Cap Hex. Hd.	12

*Not Illustrated

†Not serviceable separately.

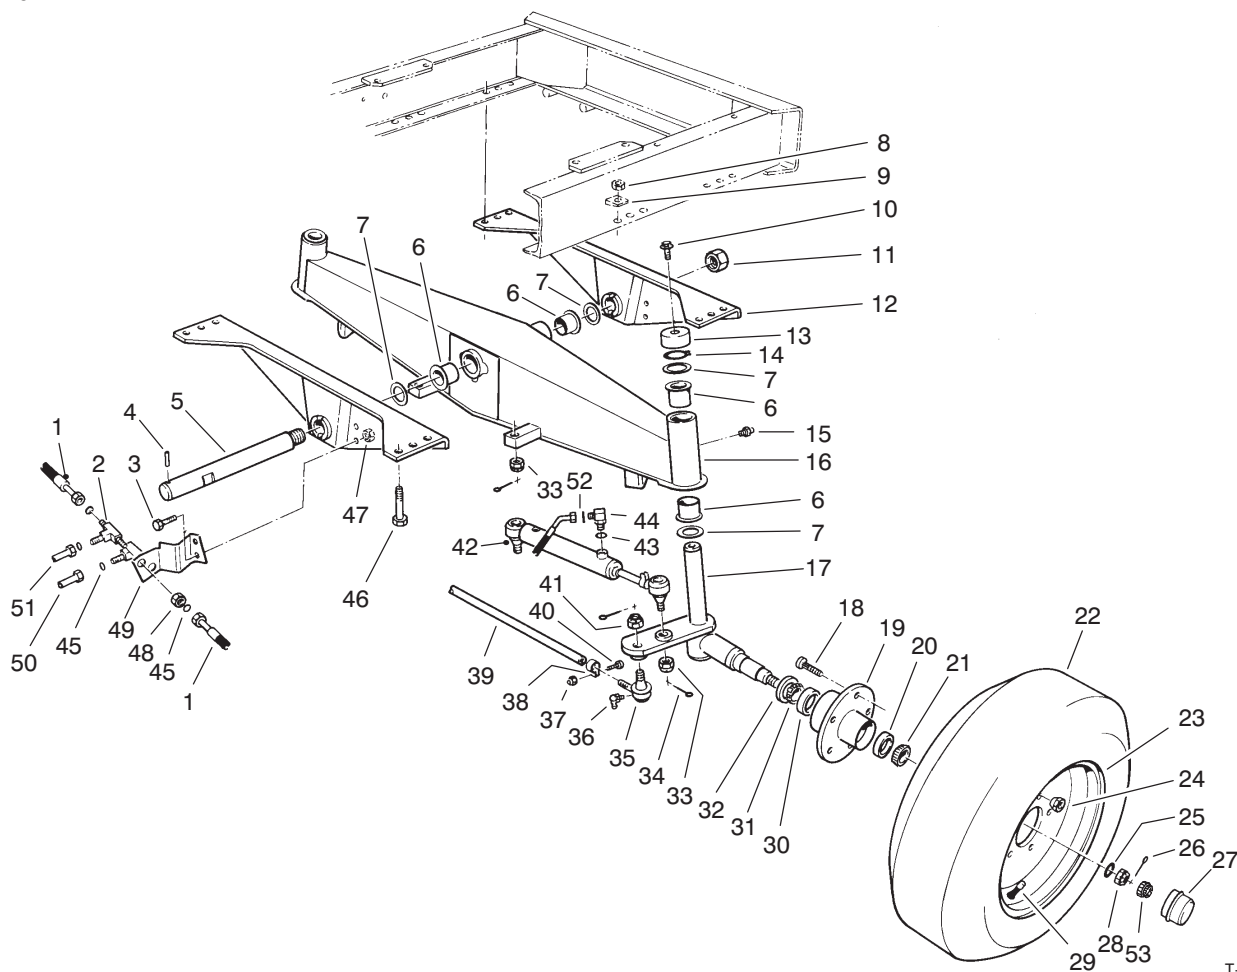


T-0345-1

REAR AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	32152-2	Nut - Lock	2
48	340-70	Nut - Bulkhead	2
49	69-9400	Bracket - Hose Support	1
50	69-6010	Tube - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
51	69-6020	Tube - Hydraulic	1
52	237-21	Seal - O-Ring	4
53	93-0307	Nut - Retainer	2

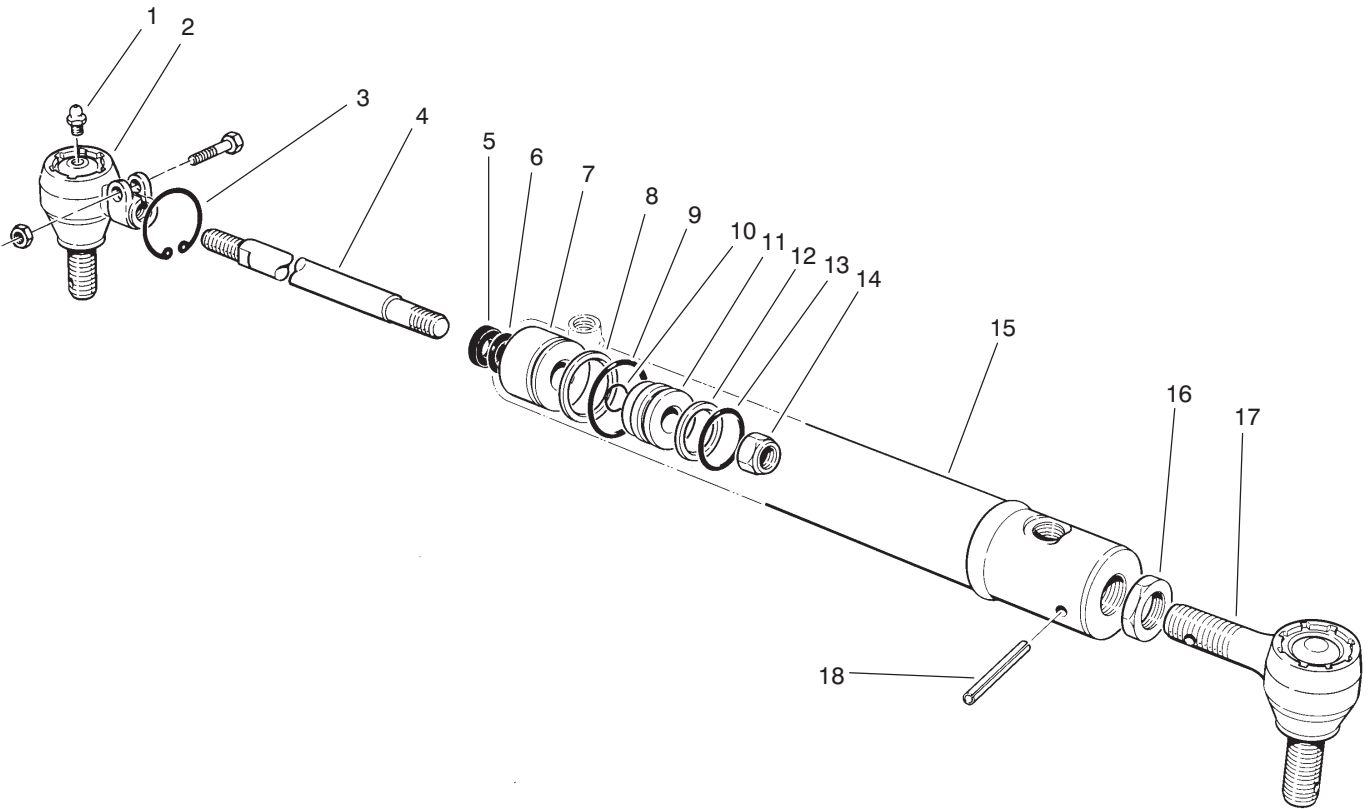


T-0378-1

HYDRAULIC CYLINDER ASSEMBLY NO. 69—1960

Ref. No.	Part No.	Description	No. Used
1	302—5	Fitting — Grease	1
2	69—9810	Joint — Ball	1
3		Ring — Retaining	1
4	69—2020	Rod — Piston	1
5		Wiper — Rod	1
6		Seal — U—Cup	1
7	69—2030	Ring — Head	1
8		Ring — Back—Up	1
9		Seal — O—Ring	1
10		Seal — O—Ring	1
11	69—2000	Piston	1

Ref. No.	Part No.	Description	No. Used
12		Ring — Piston	1
13		Seal — O—Ring	1
14	69—1990	Nut — Lock	1
15		Barrel — Cylinder	1
16	69—1980	Nut — Jam	1
17	69—1970	Joint — Ball	1
18	32121—34	Pin — Roll	1
*	92—1792	Repair Kit (Incl. Ref. #3, 5, 6, 8—10 & 12—13)	1
*	69—1960	Steering Cylinder (Complete) (Incl. Ref. #3—18)	2

*Not Illustrated

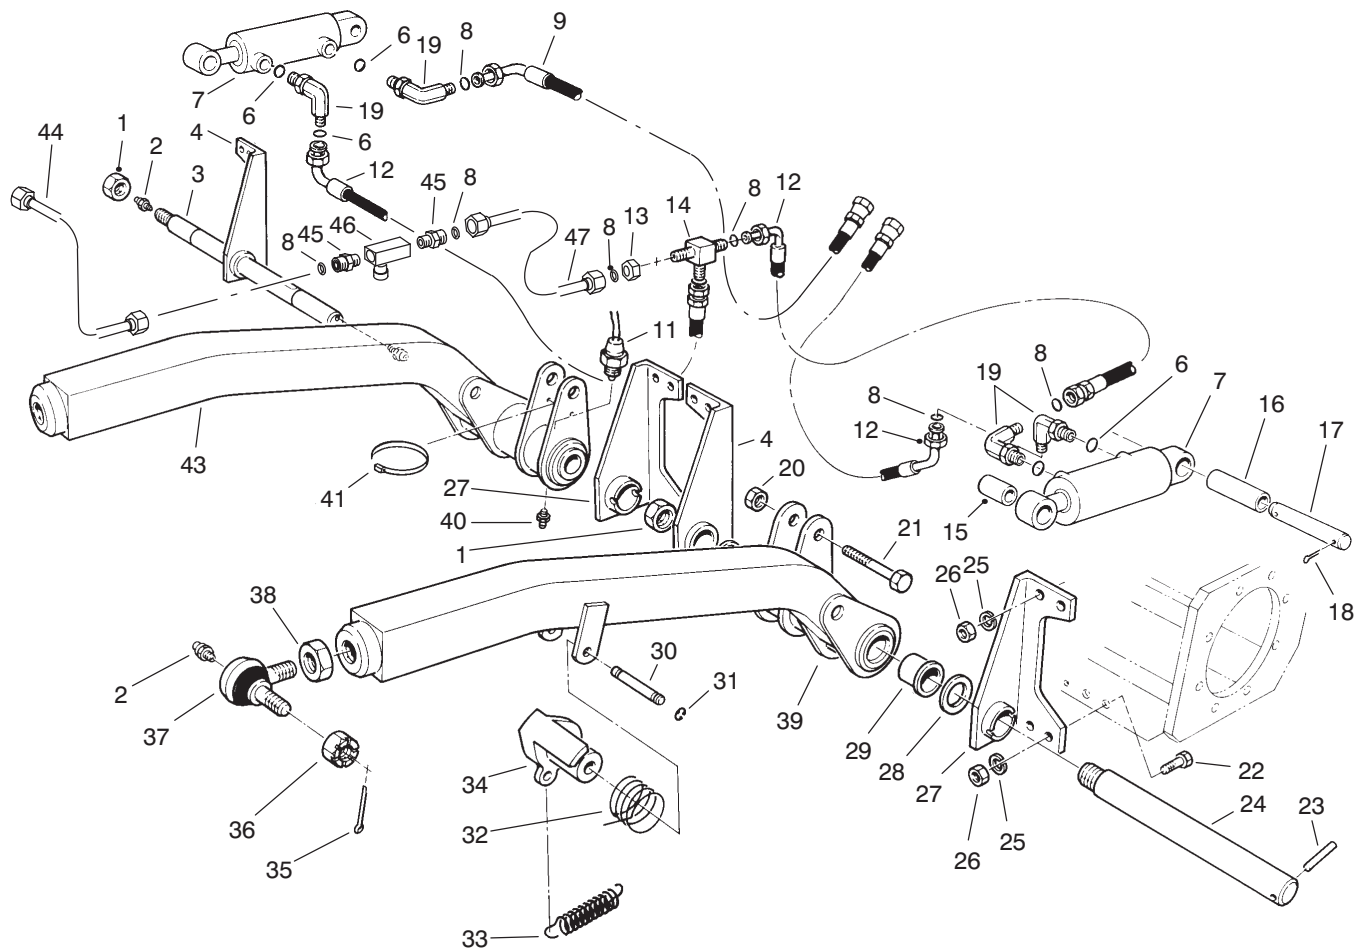


T-0344-1

FRONT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-68	Nut - Lock	2
2	302-2	Fitting - Grease	4
3	71-2570	Shaft - Pivot	1
4	69-7940	Support - Lift Arm R.H.	2
6	237-42	Seal - O-Ring	4
7	92-4971	Hydraulic Cylinder Assembly	2
8	237-22	Seal - O-Ring	9
9	69-8440	Hose - Hydraulic	1
11	72-4310	Switch - Ball	1
12	69-5440	Hose - Hydraulic	3
13	340-70	Nut - Bulkhead	1
14	340-68	Fitting - Hydraulic Bulk. Tee (Incl. Ref. #8)	1
15	69-9190	Tube - Cylinder Bushing	2
16	20-4360	Tube - Spacer	2
17	69-9180	Pin - Cylinder	2
18	3272-23	Pin - Cotter	4
19	340-77	Fitting - Hydraulic Elbow (Incl. Ref. #6 & 8)	4
20	32153-6	Nut - Lock	2
21	328-5	Screw - Cap Hex. Hd.	2
22	325-6	Screw - Cap Hex. Hd.	12
23	32121-110	Pin - Roll	2
24	71-2590	Shaft - Pivot	1
25	3253-7	Washer - Lock	16

Ref. No.	Part No.	Description	No. Used
26	3217-9	Nut - Hex.	16
27	69-7920	Support - Lift Arm L.H.	2
28	256-304	Washer - Thrust	2
29	69-6470	Bushing - Flange	4
30	92-4806	Pin - Latch	1
31	32120-47	Ring - Retaining	2
32	69-8470	Spring - Torsion	1
33	76-1670	Spring - Extension	1
34	69-1540	Pivot - Spring	1
35	3272-12	Pin - Cotter	2
36	32136-2	Nut - Slotted	2
37	86-8100	Joint - Ball (Incl. Ref. #2 & 36)	2
38	21-3000	Nut - Jam	2
39	69-9580	Front Lift Arm Assy. L.H. (Incl. Ref. #29 & 40)	1
40	302-5	Fitting - Grease	2
41	3290-378	Tie - Cable	1
43	69-9570	Front Lift Arm Assy. R.H. (Incl. Ref. #29 & 40)	1
44	93-7426	Tube - Hydraulic	1
45	340-57	Fitting - Hydraulic Straight (Incl. Ref. #8)	2
46	93-1397	Valve - Flow Control	1
47	93-7427	Tube - Hydraulic	1

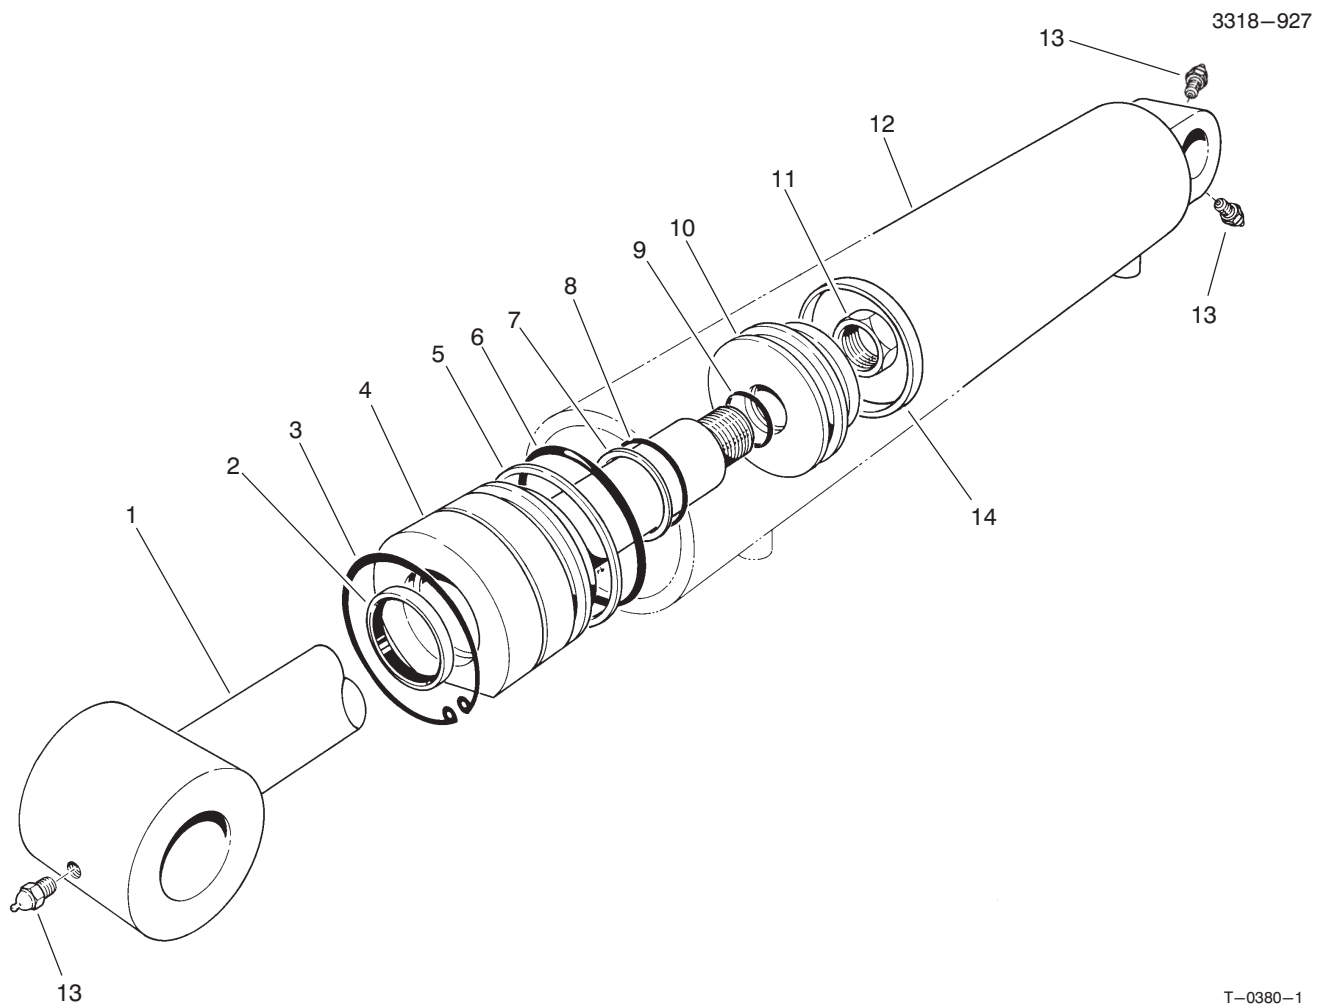

HYDRAULIC CYLINDER ASSEMBLY NO. 92-4971


T-0380-1

Ref. No.	Part No.	Description	No. Used
1	69-2580	Shaft w/clevis	1
†2		Seal - Dust	1
3	61-4990	Ring - Retaining	1
4	69-2570	Head	1
†5		Ring - Back-Up	1
†6		Seal - O-Ring	1
†7		Ring - Back-Up	1
†8		Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
†9		Uni-Ring	1
10	60-9770	Piston	1
11	60-9760	Nut - Lock	1
†12		Barrel	1
13	302-5	Fitting - Grease	3
14		Seal - Uni-Ring	1
*	86-7350	Seal Repair Kit (Incl. Ref. #2 & 5-9)	1

*Not Illustrated


†Not serviceable separately.

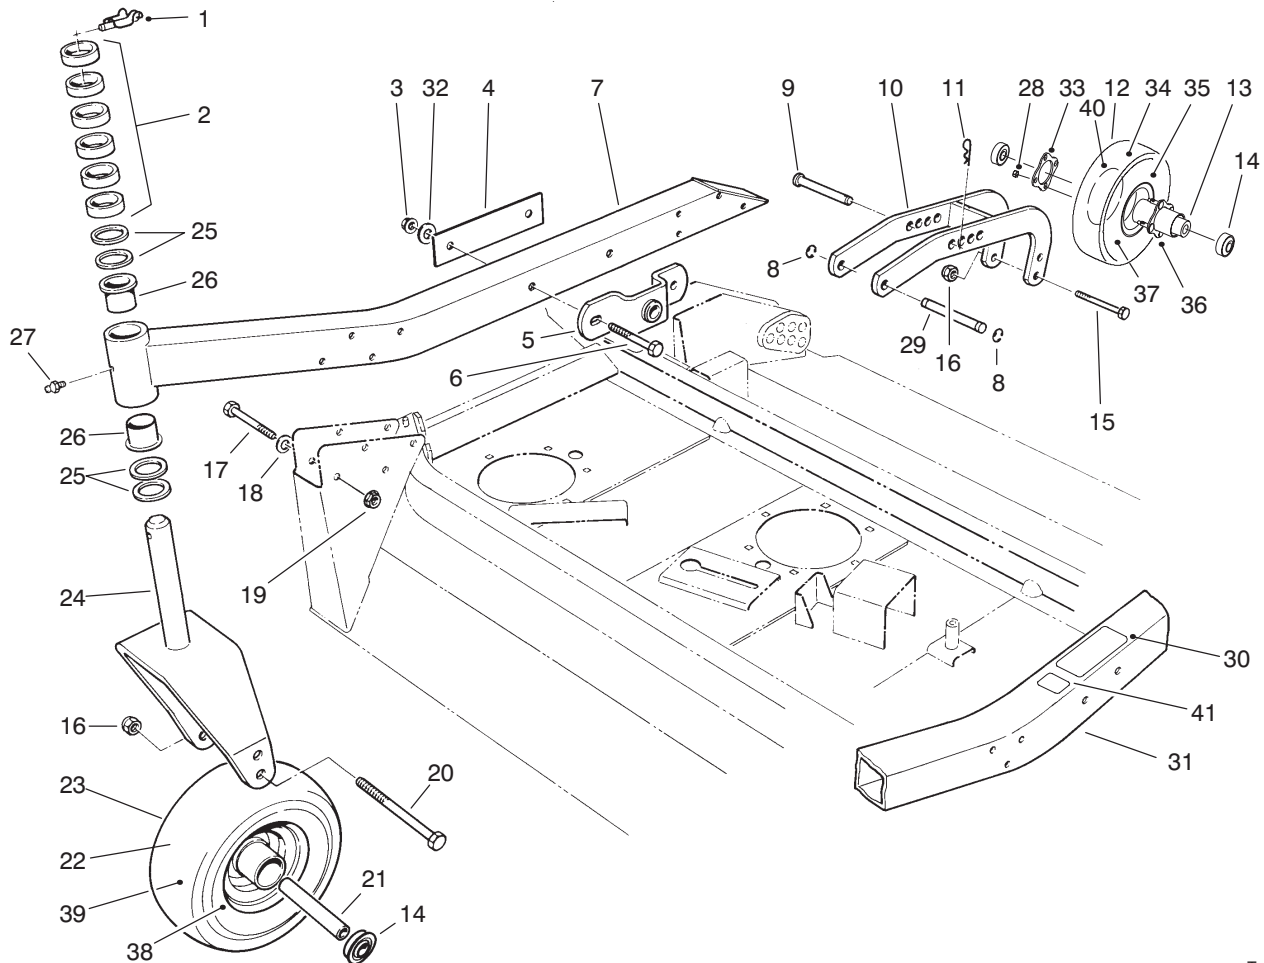

T-0362-4

CENTER DECK MODEL NO. 30592 CARRIER FRAME ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-384	Pin - Lynch	2	22	93-5508	Tire - 13"	2
2	69-1510	Spacer - Caster	12	23	93-5452	Wheel - Pneumatic, 13" (Incl. Ref. #14, 21-22 & 38-39)	2
3	32128-23	Nut - Flange Lock	4	24	69-6270	Fork - Castor	2
4	69-8790	Plate - Reinforcing	2	25	69-6860	Washer - Castor	8
5	69-7290	Mount - Ball Joint	2	26	69-6470	Bushing - Flange	4
6	325-15	Screw - Cap Hex. Hd.	4	27	302-5	Fitting - Grease	2
7	69-8860	Arm - Castor R.H. (Incl. Ref. #26-27)	1	28	32128-16	Nut - HHF	8
8	32151-48	Ring - Retaining	4	29	69-9260	Pin - Clevis	2
9	283-70	Pin - Hitch (Incl. Ref. #11)	2	30	95-0818	Decal - Torque	1
10	75-9790	Arm - Pivot	2	31	13-5069	Arm - Castor L.H. (Incl. Ref. #26-27, & 30)	1
11	3290-343	Pin - Cotter Hair	2	32	30-8770	Washer - Flat	4
12	93-4240	10" Wheel - Pneumatic (Incl. Ref. #13-14, 28, 33-37, & 40)	2	33	93-4242	Plate	2
13	93-4241	Spacer	2	34	93-4243	Tire - 10"	2
14	93-4237	Bearing	8	35	93-4239	Rim - Wheel	4
15	327-24	Screw Cap Hex. Hd.	2	36	93-5980	Hub	2
16	3296-53	Nut - Lock	4	37	93-4244	Tube - w/Valve	2
17	323-15	Screw - Cap Hex. Hd.	16	38	93-5631	Rim - Wheel	2
18	5-0838	Washer - Flat	16	39	93-5963	Tube - w/Valve	2
19	32128-43	Nut - Lock	16	40	95-2741	Rim - Wheel	2
20	327-25	Screw - Cap Hex. Hd.	2	41	93-7252	Decal - CE	1
21	93-5630	Spacer - Bearing	2				

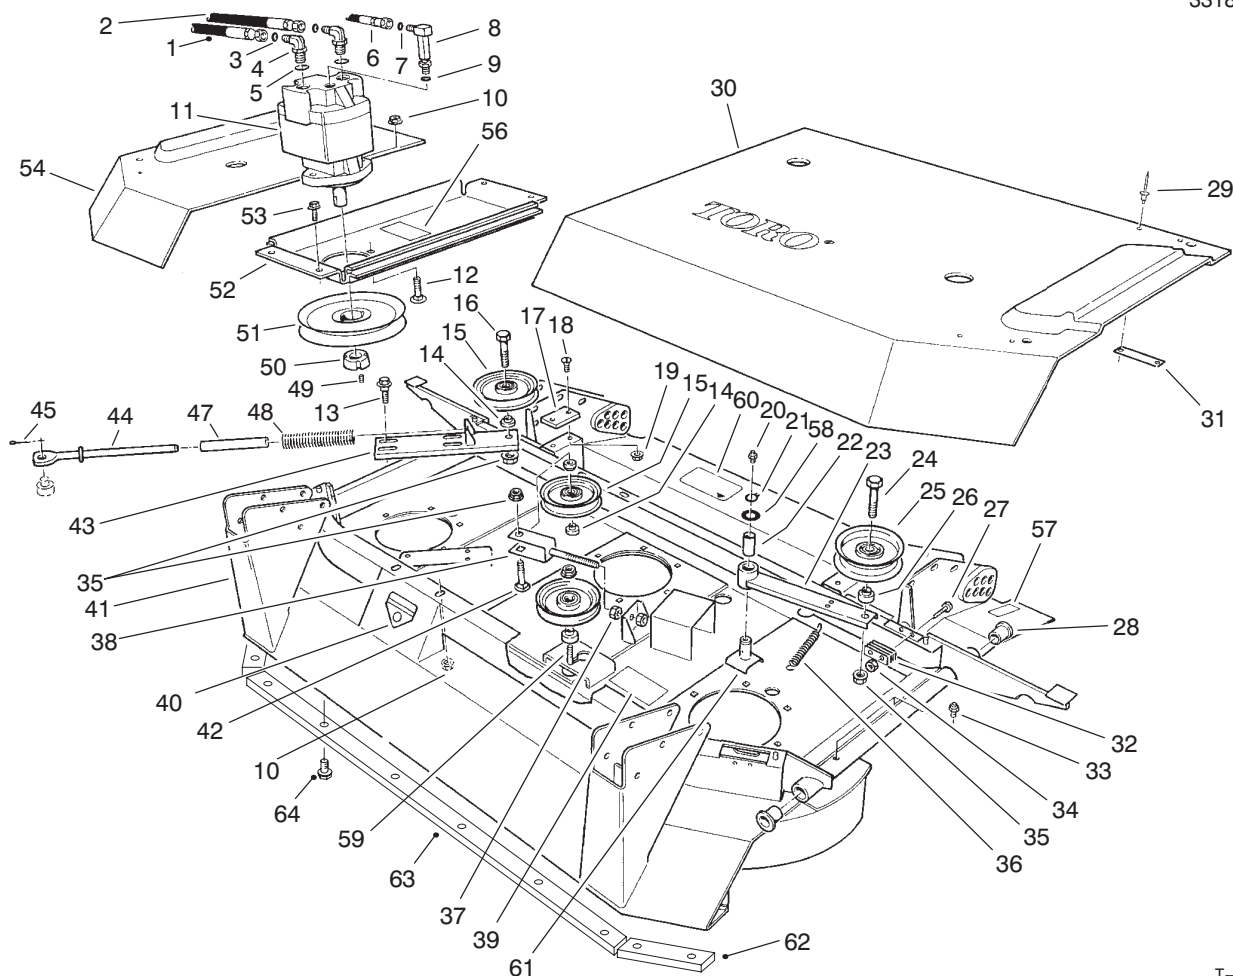

T-0361-3

CENTER DECK MODEL NO. 30592

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-2760	Hydraulic Hose Assembly	1	26	69-6970	Spacer - Idler	1
2	76-2750	Hydraulic Hose Assembly	1	27	32105-1	Screw - Machine	8
3	237-58	Seal - O-Ring	2	28	92-3162	Bushing - Flange	4
4	95-1692	Fitting - Hydraulic Elbow (Incl. Ref #3 & 5)	2	29	3269-25	Rivet - Pop	8
5	237-81	Seal - O-Ring	2	30	69-6780	Cover - Center Left	1
6	76-2770	Hydraulic Hose Assembly	1	31	69-6870	Plate - Magnet	4
7	237-22	Seal - O-Ring	1	32	69-6260	Magnet - Cover	4
8	69-4320	Fitting - Hydraulic 90° (Incl. Ref. #7 & 9)	1	33	302-5	Fitting - Grease	4
9	237-42	Seal O-Ring	1	34	3296-2	Nut - Lock	8
10	32128-21	Nut - Flange Lock	6	35	32128-23	Nut - Flange Lock	4
11	94-4907	Motor - Hydraulic	1	36	76-1670	Spring - Extension	1
12	3231-28	Bolt - Carriage	2	37	3217-9	Nut - Jam	2
13	19-1470	Bolt - Shoulder	4	38	69-6550	Arm - Tension	1
14	69-6960	Spacer - Idler	4	39	95-0833	Decal - Belt Routing	1
15	63-1540	Pulley - Idler	3	40	43-8480	Decal - Danger	1
16	325-7	Screw - Cap Hex. Hd.	1	41	13-4969	Deck - Center (Incl. Ref. #20, 28, 33, 39, 40 & 57)	1
17	69-9290	Pad - Bumper	2	42	3233-27	Bolt - Carriage	1
18	32108-103	Screw - Flat Hd.	4	43	69-6490	Plate - Tension	1
19	32128-20	Nut - Lock	4	44	77-2830	Rod - Spring	1
20	302-2	Fitting - Grease	1	45	3272-7	Pin - Cotter	1
21	32120-72	Ring - Retaining	1	47	69-6890	Spacer - Spring	1
22	256-188	Bushing - Sleeve	1	48	86-7480	Spring - Compression	1
23	69-6610	Arm - Idler (Incl. Ref. #22)	1	49		Screw - Set	2
24	325-8	Screw - Cap Hex. Hd.	1	50	23-1640	Bushing - Taper Lock (Incl. Ref. #49)	1
25	69-5430	Pulley - Idler	1				

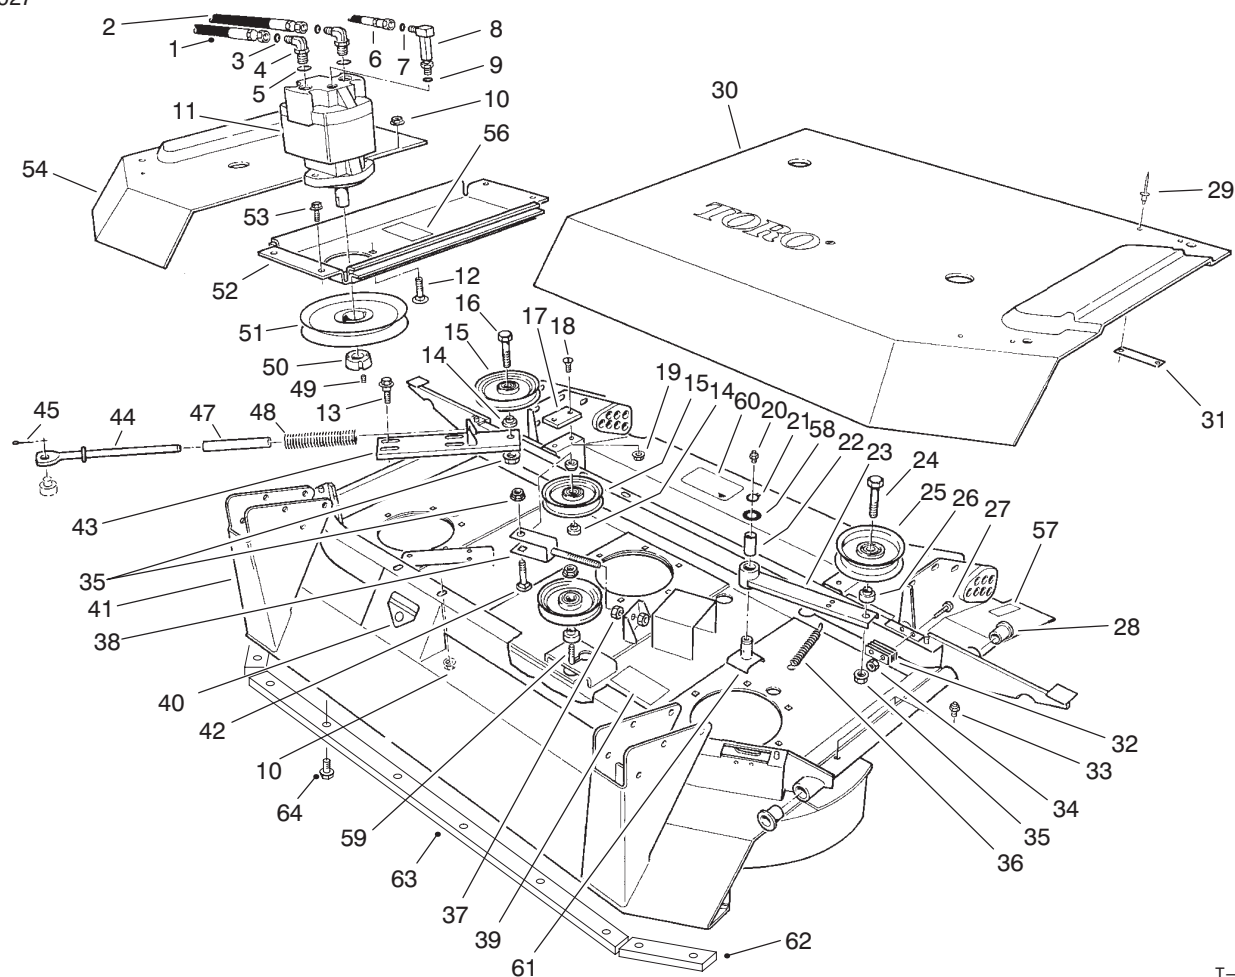


T-0361-3

CENTER DECK MODEL NO. 30592 (Continued)

Ref. No.	Part No.	Description	No. Used
51	63-0660	Pulley - Drive	1
52	69-6390	Plate - Gearbox	1
53	3234-12	Screw - Hex. Flange Hd.	4
54	69-6790	Cover - Center Right	1
56	95-0845	Decal - H.O.C.	1
57	95-0817	Decal - H.O.C.	1
58	3-6498	Washer - Flat	1
59	3233-30	Bolt - Carriage	1
60	66-1340	Decal - Danger	1

Ref. No.	Part No.	Description	No. Used
60	93-7824	Decal - Danger (Europe)	1
61	93-9324	Pivot - Idler	1
62	94-9820	Bar - Guard, Front RH & LH (Europe)	2
63	94-9819	Bar - Guard, Front Center (Europe)	1
64	32104-31	Screw - HW (Europe)	10
*	93-8457	Hex. - Belt - Deck Drive	1
*	3290-378	Tie - Cable	2

*Not Illustrated

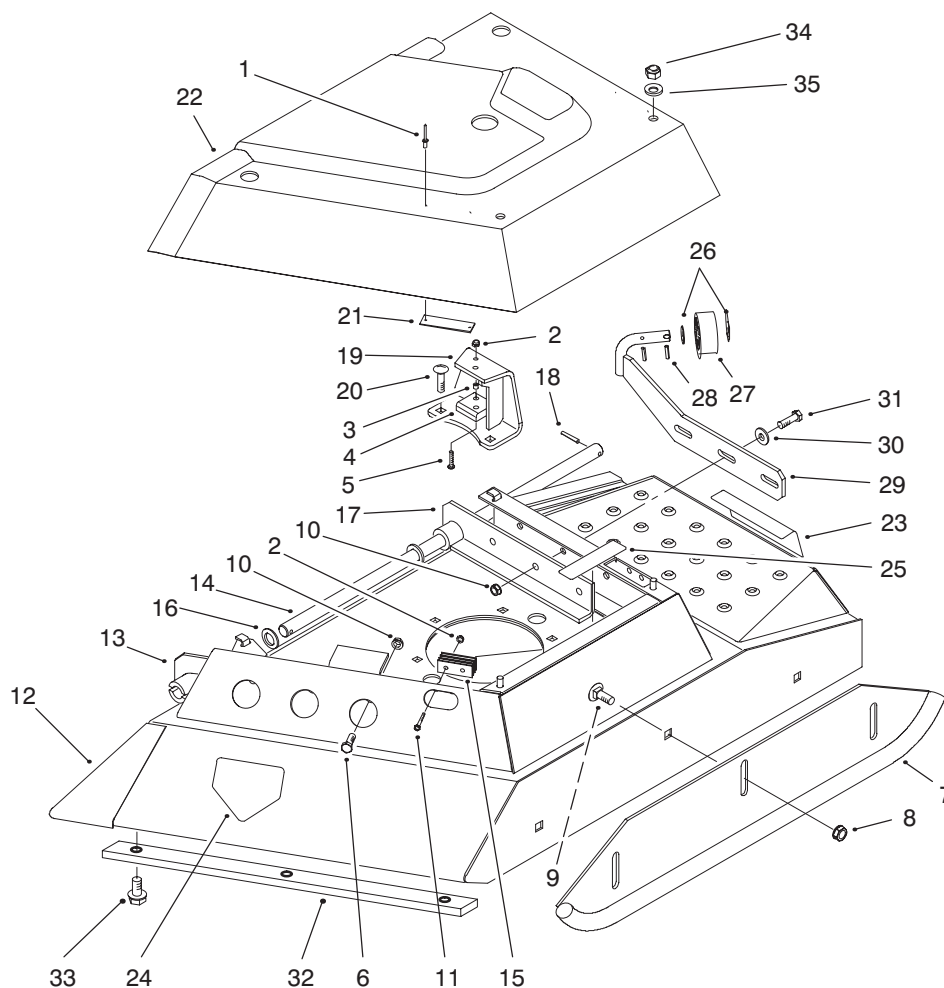


T-0366-3

CENTER DECK MODEL NO. 30592 LEFT WING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3269-25	Rivet — Pop	4	21	69-6870	Plate — Magnet	2
2	3296-2	Nut — Lock	6	22	69-6850	Cover — Left Wing	1
3	40-9520	Spacer — Split	2	23	66-1340	Decal — Danger	1
4	40-0330	Cushion — Rubber	1	23	93-7824	Decal — Danger (Europe)	1
5	32122-28	Screw — Truss Hd.	2	24	43-8480	Decal — Danger	1
6	323-6	Screw — Cap Hex. Hd.	3	24	93-7815	Decal — Danger (Europe)	1
7	69-6730	Skid	1	25	67-5360	Decal — Danger	1
8	32128-23	Nut — Flange Lock	3	25	93-7273	Decal — Danger (Europe)	1
9	3233-9	Bolt — Carriage	3	26	3256-69	Washer	2
10	32128-21	Nut — Flange Lock	6	27	82-4910	Roller	1
11	32105-1	Screw — Machine	4	28	32121-4	Pin — Roll	2
12	13-4989	Deck — Left Wing (Incl. Ref. #23-25)	1	29	88-9270	Bracket — Roller LH	1
13	69-6640	Hinge — Left Front	1	30	5-0838	Washer — Flat	3
14	69-6900	Shaft — Hinge	1	31	323-7	Screw — Cap Hex. Hd.	3
15	69-6260	Magnet — Cover	2	32	94-9824	Bar — Guard, Front Wing LH (Europe)	1
16	95-3297	Washer — Thrust	2	33	32104-31	Screw — HH (Europe)	3
17	69-6670	Hinge — Left Rear	1	34	3296-29	Nut — Lock	2
18	32121-6	Pin — Roll	2	35	3256-23	Washer — Flat	2
19	94-6760	Bracket — Support	1	*	76-2060	V-Belt	1
20	3231-25	Bolt — Carriage	2	*	42-6200	Shim — Cushion	A/R

*Not Illustrated

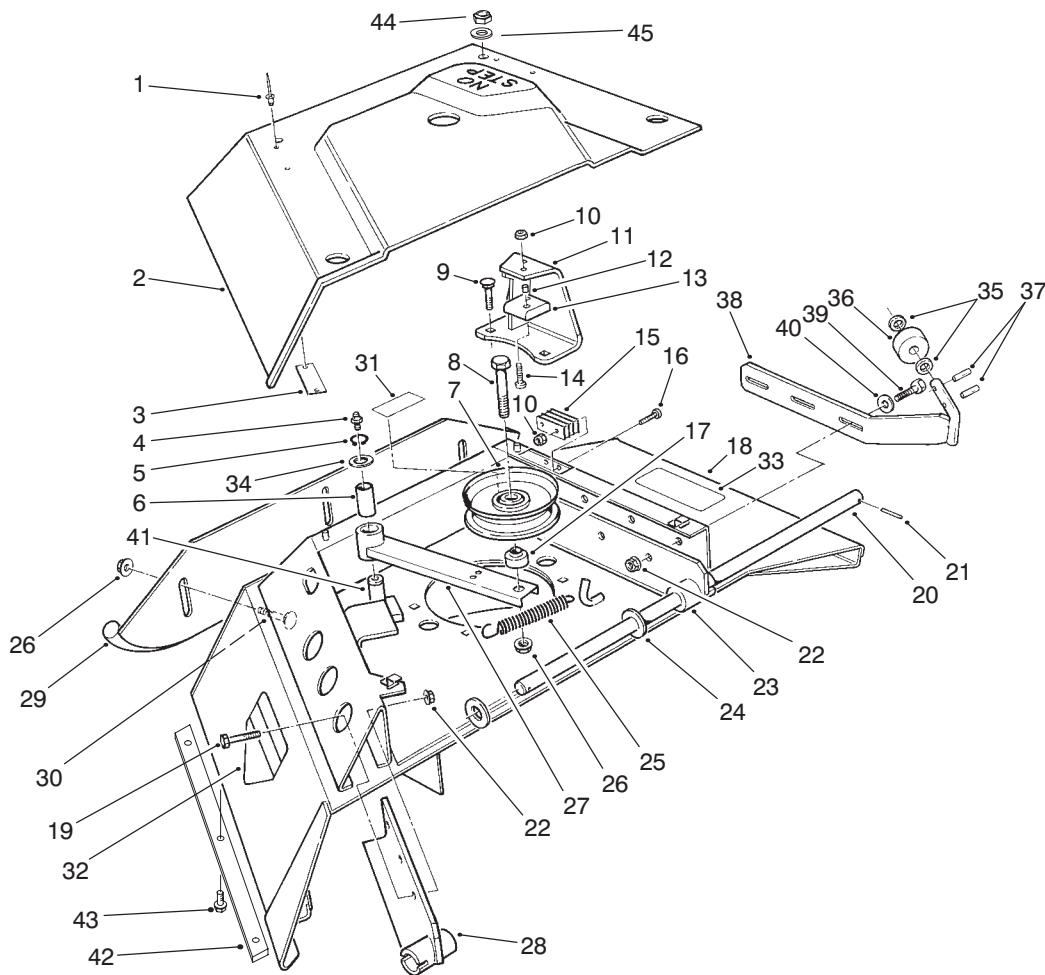


T-0365-3

CENTER DECK MODEL NO. 30592 RIGHT WING ASSY.

Ref. No.	Part No.	Description	No. Used
1	3269-25	Rivet - Pop	4
2	69-6840	Cover - Right Wing	1
3	69-6870	Plate - Magnet	2
4	302-2	Fitting - Grease	1
5	32120-72	Ring - Retaining	1
6	256-188	Bushing - Sleeve	1
7	69-5430	Pulley - Idler	1
8	325-8	Screw - Cap Hex. Hd.	1
9	3231-25	Bolt - Carriage	2
10	3296-2	Nut - Lock	6
11	94-6762	Bracket - Support	1
12	40-9520	Spacer - Split	2
13	40-0330	Cushion - Rubber	1
14	32122-28	Screw - Truss Hd.	2
15	69-6260	Magnet - Cover	2
16	32105-1	Screw - Machine	4
17	69-6970	Spacer - Idler	1
18	13-4979	Right Wing Deck Assembly (Incl. Ref. #4, 32 & 33)	1
19	323-6	Screw - Cap Hex. Hd.	3
20	69-6900	Shaft - Hinge	1
21	32121-6	Pin - Roll	2
22	32128-21	Nut - Flange Lock	6
23	69-6710	Hinge - Right Rear	1
24	95-3297	Washer - Thrust	2
25	76-1670	Spring - Extension	1
26	32128-23	Nut - Flange Lock	4

Ref. No.	Part No.	Description	No. Used
27	69-6610	Idler Arm Assembly (Incl. Ref. #6)	1
28	69-6690	Hinge - Right Front	1
29	69-6730	Skid	1
30	3233-9	Bolt - Carriage	3
31	67-5360	Decal - Danger	1
31	93-7273	Decal - Danger (Europe)	1
32	43-8480	Decal - Danger	1
32	93-7815	Decal - Danger (Europe)	1
33	66-1340	Decal - Danger	1
33	95-7824	Decal - Danger (Europe)	1
34	3-6498	Washer	1
35	3256-69	Washer	2
36	82-4910	Roller	1
37	32121-4	Pin - Roll	2
38	88-9260	Bracket - Roller RH	1
39	323-7	Screw - Cap Hex. Hd.	3
40	5-0838	Washer - Flat	3
41	93-9324	Pivot - Idler	1
42	32104-31	Screw - HH (Europe)	3
43	94-9821	Bar - Guard, Front Wing RH (Europe)	1
44	3296-29	Nut - Lock	2
45	3256-23	Washer - Flat	2
*	76-2060	V-Belt	1
*	42-6200	Shim - Cushion	A/R

*Not Illustrated

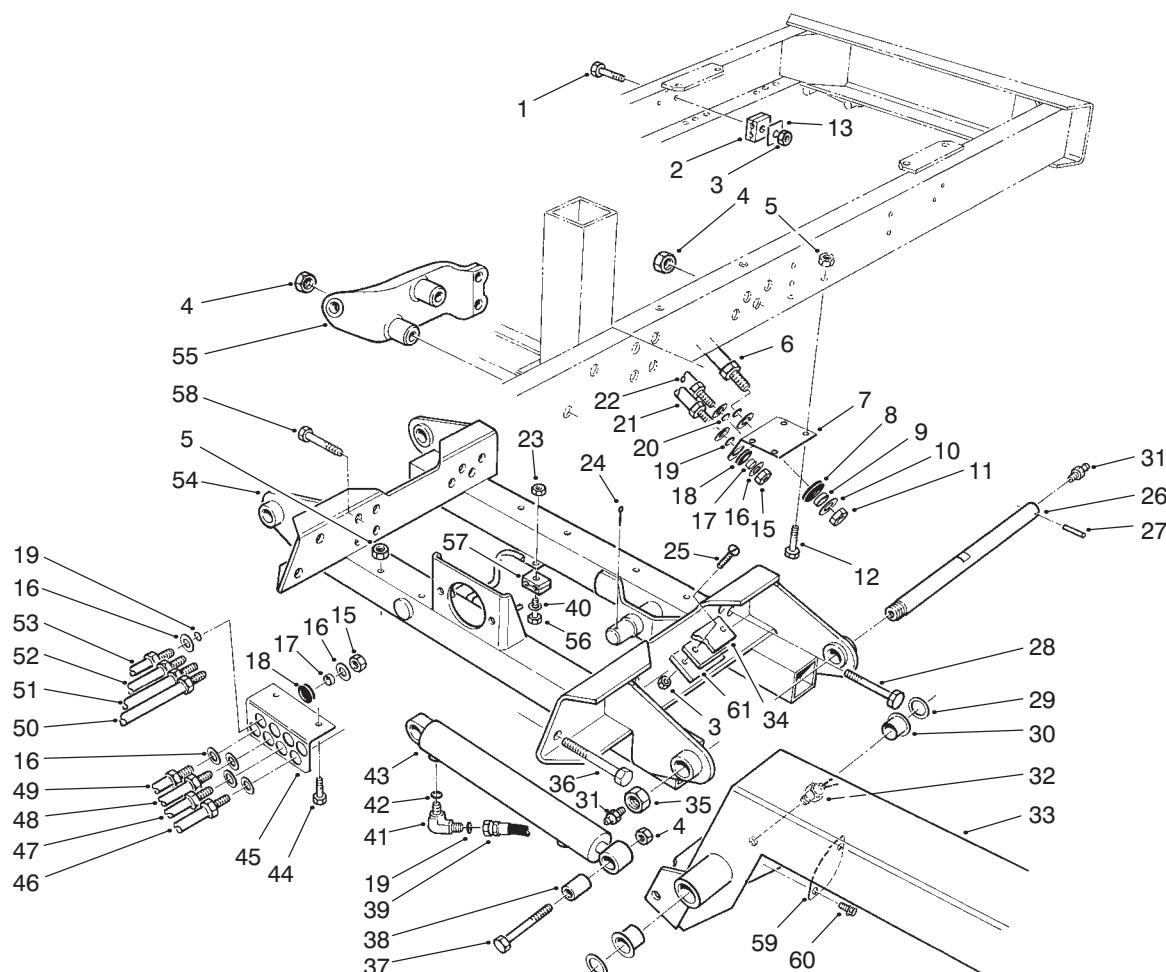


T-0348-1

WING DECK LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-11	Screw - Cap Hex. Hd.	1	22	69-6180	Tube - Hydraulic L.H. (Incl. Ref. #20)	1
2	56-7974	Clamp Half - Hydraulic Line	2	*	69-6150	Tube - Hydraulic R.H. (Incl. Ref. #20)	1
3	32152-1	Nut - Lock	5	23	32152-4	Nut Lock	3
4	32153-6	Nut - Lock	22	24	3272-33	Pin - Cotter	2
5	32152-2	Nut - Lock	6	25	32108-103	Screw - Machine Flat Hd.	4
6	69-6170	Tube - Hydraulic L.H. (Incl. Ref. #20)	1	26	71-2580	Shaft - Lift Arm Pivot	2
*	69-6140	Tube - Hydraulic R.H. (Incl. Ref. # 20)	1	27	32121-110	Pin - Roll	2
7	69-9450	Bracket - Wing Hose L.H.	1	28	328-26	Screw - Cap Hex. Hd.	12
*	69-9460	Bracket - Wing Hose R.H.	1	29	256-304	Washer - Thrust	4
8	240-3	Grommet	4	30	69-6470	Bushing - Flange	4
9	69-9000	Spacer	4	31	302-2	Fitting - Grease	4
10	69-9010	Washer	8	32	72-4310	Switch - Lift	2
11	340-74	Nut - Bulkhead	4	33	92-8664	Lift Arm Assembly L.H. (Incl. Ref. #30-31)	1
12	323-6	Screw - Cap Hex. Hd.	4	*	92-8665	Lift Arm Assembly R.H. (Incl. Ref. #30-31)	1
13	69-9761	Plate - Cover	1	34	69-9300	Cushion - Rubber	2
15	340-70	Nut - Bulkhead	10	35	3296-68	Nut Lock	2
16	69-8940	Washer	20	36	328-8	Screw - Cap Hex. Hd.	4
17	69-8970	Spacer	10	37	328-8	Screw - Cap Hex. Hd.	2
18	240-4	Grommet	10	38	69-9190	Bushing - Cylinder	2
19	237-22	Seal - O-Ring	14	39	69-5490	Hose - Cylinder	4
20	237-65	Seal - O-Ring	4	40	3256-56	Washer - Flat	3
21	69-5980	Tube - Hydraulic L.H. (Incl. Ref. #19)	1	41	340-77	Fitting - Hydraulic Elbow (Incl. Ref. #19 & 42)	4
*	69-5970	Tube - Hydraulic R.H. (Incl. Ref #19)	1				

*Not Illustrated

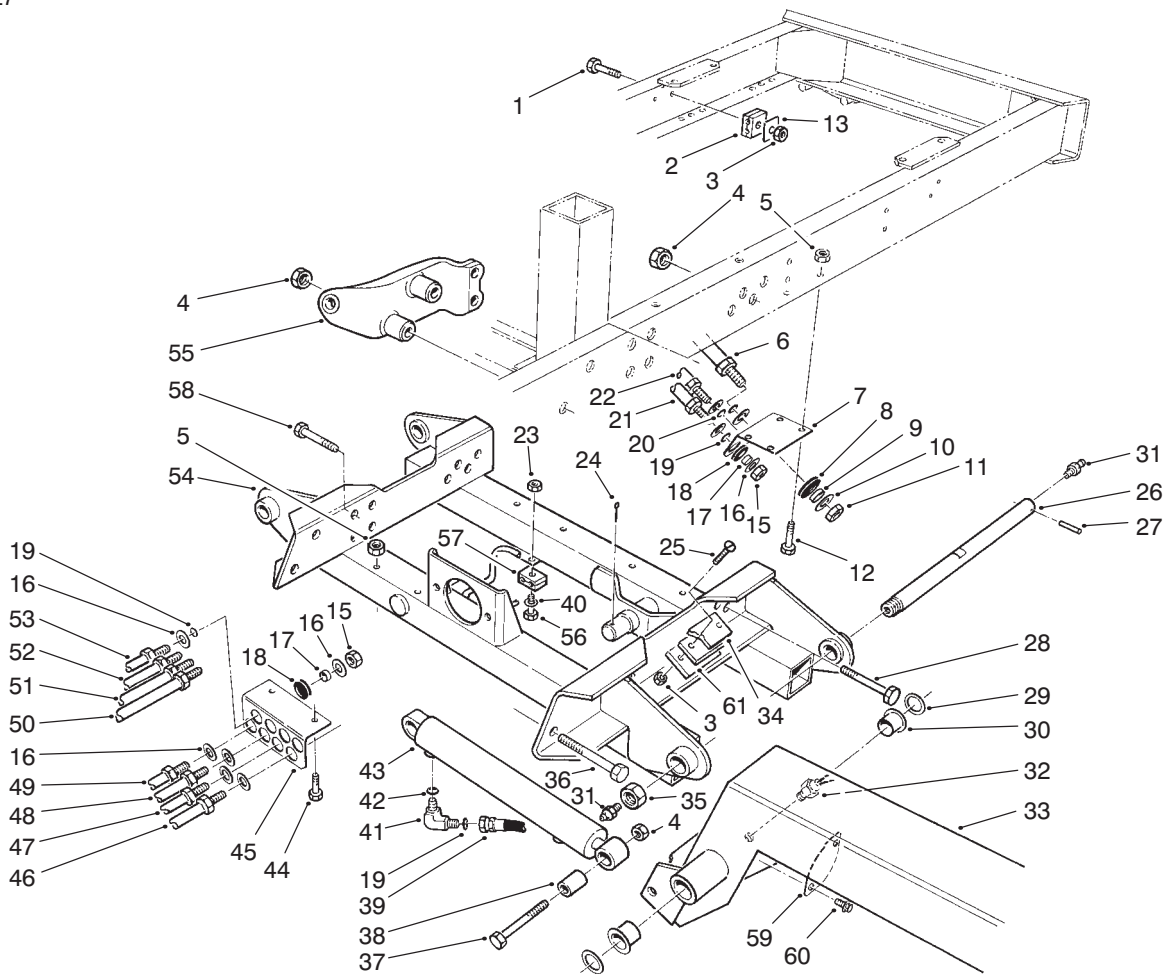


T-0348-1

WING DECK LIFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
42	237-42	Seal - O-Ring	4	52	69-6080	Tube - Hydraulic (Incl. Ref. #19)	1
43	74-2170	Cylinder - Lift	2	53	69-5990	Tube - Hydraulic (Incl. Ref. #19)	1
44	323-15	Screw - Cap Hex. Hd.	2	54	69-4400	Carrier - Wing Deck	1
45	74-2680	Bracket - Bulkhead	1	55	69-1580	Anchor - Latch L.H.	1
46	69-6030	Tube - Hydraulic (Incl. Ref. #19)	1	*	69-1600	Anchor - Latch R.H.	1
47	69-6060	Tube - Hydraulic (Incl. Ref. #19)	1	56	321-9	Screw - Cap Hex. Hd.	3
48	69-6070	Tube - Hydraulic (Incl. Ref. #19)	1	57	56-7973	Clamp Half - Hydraulic Line	6
49	69-6000	Tube - Hydraulic (Incl. Ref. #19)	1	58	328-24	Screw - Cap Hex. Hd.	4
50	69-6040	Tube - Hydraulic (Incl. Ref. #19)	1	59	39-7650	Plate - Cover	2
51	69-6050	Tube - Hydraulic (Incl. Ref. #19)	1	60	32144-11	Screw - Thread Forming	4
				61	93-9922	Spacer	2
				*	3290-378	Tie - Cable	3

*Not Illustrated

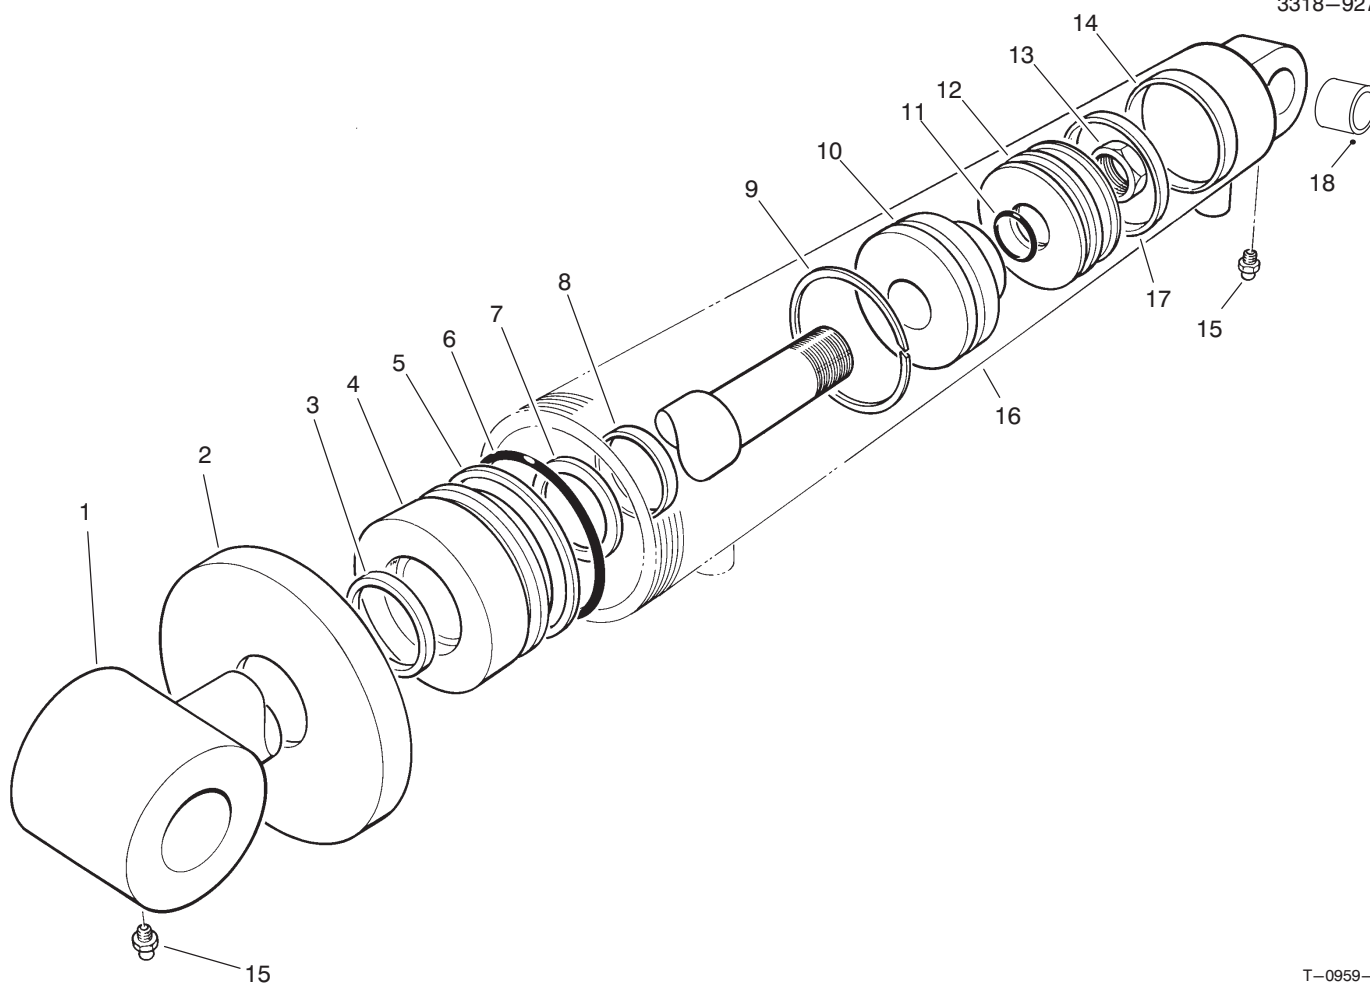


T-0959-2

HYDRAULIC CYLINDER ASSEMBLY NO. 74-2170

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	74-2230	Shaft/Clevis	1	12	74-2210	Piston	1
2	74-2220	Collar	1	13	60-9760	Nut - Lock	1
†3		Seal - Dust	1	†14		Ring - Wear	1
4	74-2200	Head	1	15	302-5	Fitting - Grease	2
†5		Ring - Back-Up	1	†16		Barrel/Clevis	1
†6		Seal - O-Ring	1	†17		Seal - Uni-Ring	1
†7		Seal - Uni-Ring	1	18	95-1597	Bushing	1
†8		Ring - Wear	1	*	86-7350	Seal Repair Kit (Incl. Ref. #3, 5-8, 11, 14 & 17)	1
9	74-2180	Ring - Steel	1				
10	74-2190	Cushion	1				
†11		Seal - Uni-Ring	1				

*Not Illustrated

†Not serviceable separately.

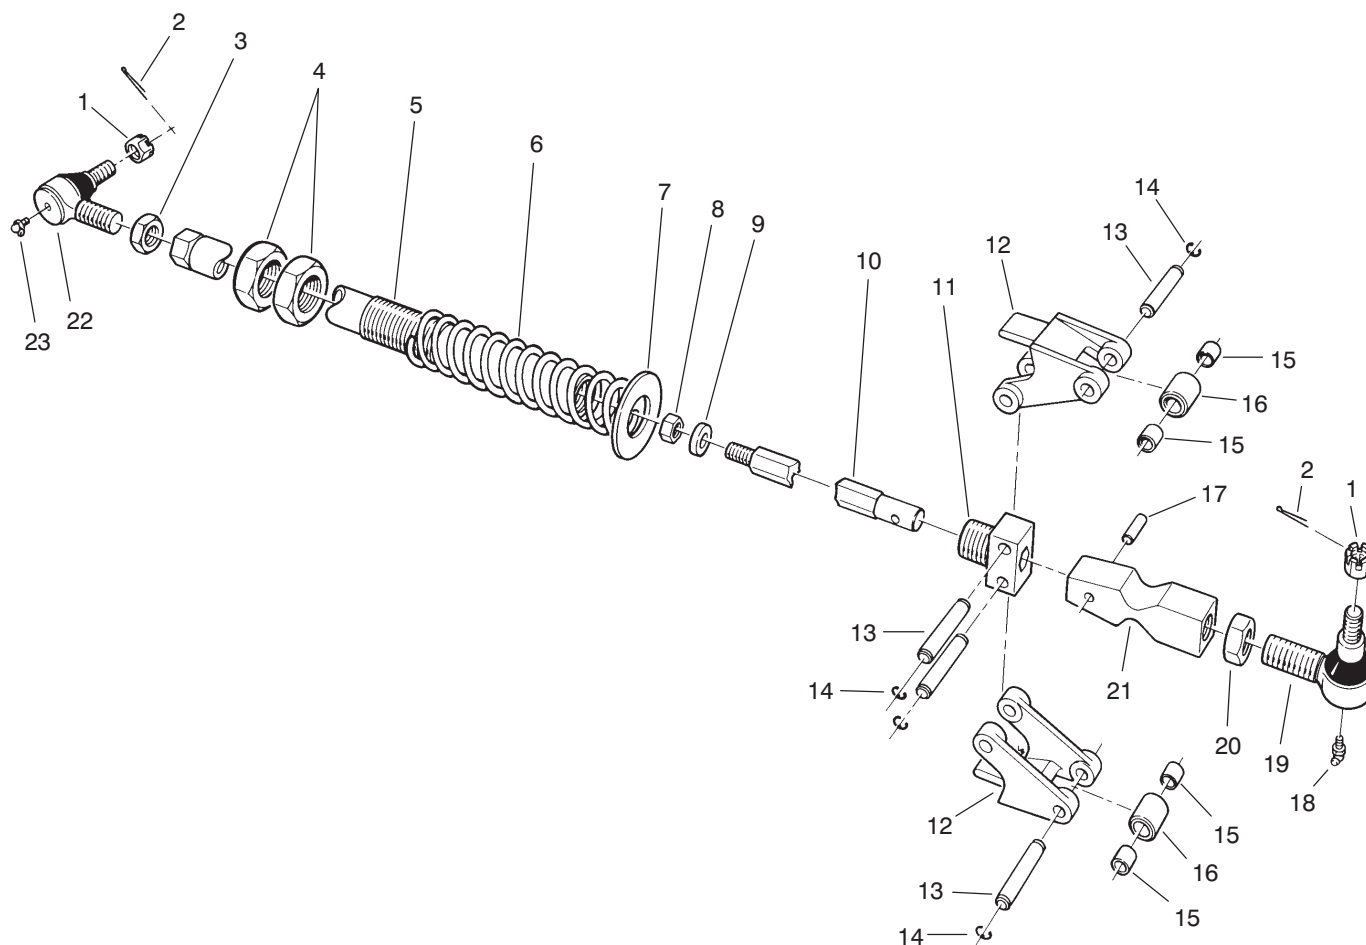


T-0369-1

WING DECK LATCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32136-2	Nut - Castle	4
2	3272-12	Pin - Cotter	4
3	21-3001	Nut - Jam L.H. Thread	2
4	3220-22	Nut - Jam	4
5	69-7210	Tube - Latch	2
6	69-8480	Spring - Compression	2
7	69-9100	Washer - Latch	2
8	3296-41	Nut - Lock	2
9	71-2550	Washer - Latch Shaft	2
10	69-9680	Shaft - Latch	2
11	92-4804	Block - Latch Pivot	2
12	69-1630	Arm - Latch Pivot	4
13	92-4806	Pin - Latch	8

Ref. No.	Part No.	Description	No. Used
14	32120-47	Ring - Retaining	16
15	256-172	Bearing - Sleeve	8
16	92-4094	Roller - Latch	4
17	32121-49	Pin - Roll	2
18	302-5	Fitting - Grease	2
19	86-8100	Joint - Ball ((Incl. Ref. #1 & 18))	2
20	21-3000	Nut - Jam	2
21	92-4805	Cam - Spring Trip	2
22	86-8101	Joint - Ball (Incl. Ref. #1 & 23)	2
23	302-40	Fitting - Grease	2

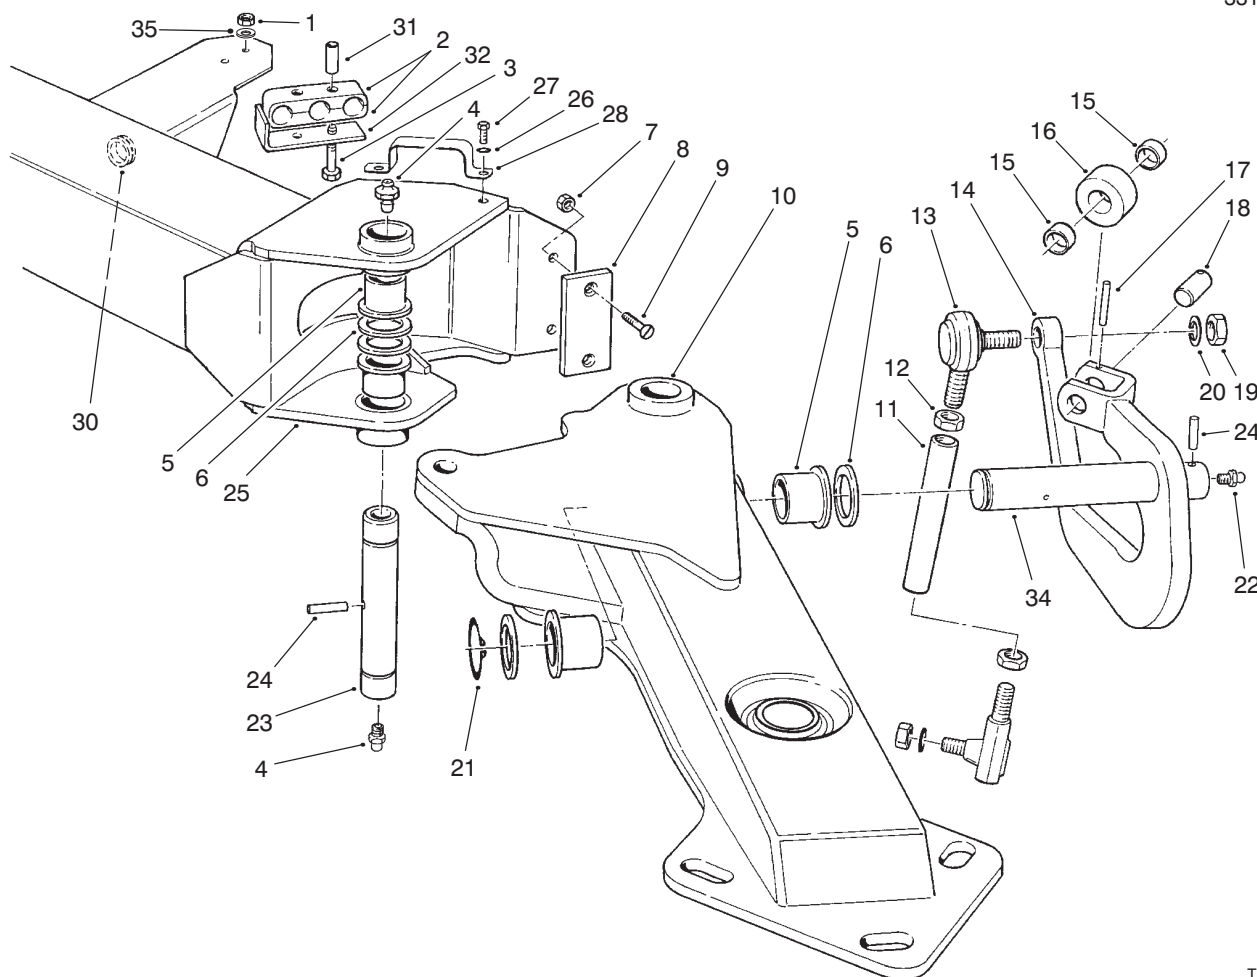


T-0370-5

WING DECK LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-32	Nut - Lock	4
2	74-2710	Clamp Half - Hydraulic Line	4
3	321-15	Screw - Cap Hex. Hd.	4
4	302-2	Fitting - Grease	4
5	69-6470	Bushing - Flange	8
6	256-304	Washer - Thrust	8
7	32152-1	Nut - Lock	4
8	69-9300	Cushion - Rubber	2
9	32108-103	Screw - Machine Flat Hd.	4
10	93-9942	Arm - Outer Lift L.H. (Incl. Ref. #5)	1
*	93-9941	Arm - Outer Lift R.H. (Incl. Ref. #5)	1
11	71-2600	Tube - Anti - Sway	2
12	3220-7	Nut - Jam	4
13	2411-40	Joint - Ball	4
14	82-7930	Arm - Anti-Sway L.H.	1
*	82-7940	Arm - Anti-Sway R.H.	1
15	256-76	Bushing - Sleeve	4
16	69-9240	Roller - Cam	2

Ref. No.	Part No.	Description	No. Used
17	32121-34	Pin - Roll	2
18	69-9250	Shaft - Roller	2
19	3219-7	Nut - Lock	4
20	3253-9	Washer - Lock	4
21	32151-10	Ring - Retaining	2
22	302-5	Fitting - Grease	2
23	71-2620	Shaft - Lift Arm Elbow	2
24	32121-110	Pin Roll	4
25	93-9926	Lift Arm Assembly L.H. (Incl. Ref. #5)	1
*	93-9925	Lift Arm Assembly R.H. (Incl. Ref. #5)	1
26	3254-2	Washer	4
27	322-3	Screw - HH	4
28	93-9928	Clamp - Hose	2
30	93-9912	Grommet	2
31	74-2730	Tube - Clamp	4
32	94-6772	Retainer - Clamp	2
34	82-7900	Shaft - Arm	2
35	3256-22	Washer - Flat	4

*Not Illustrated

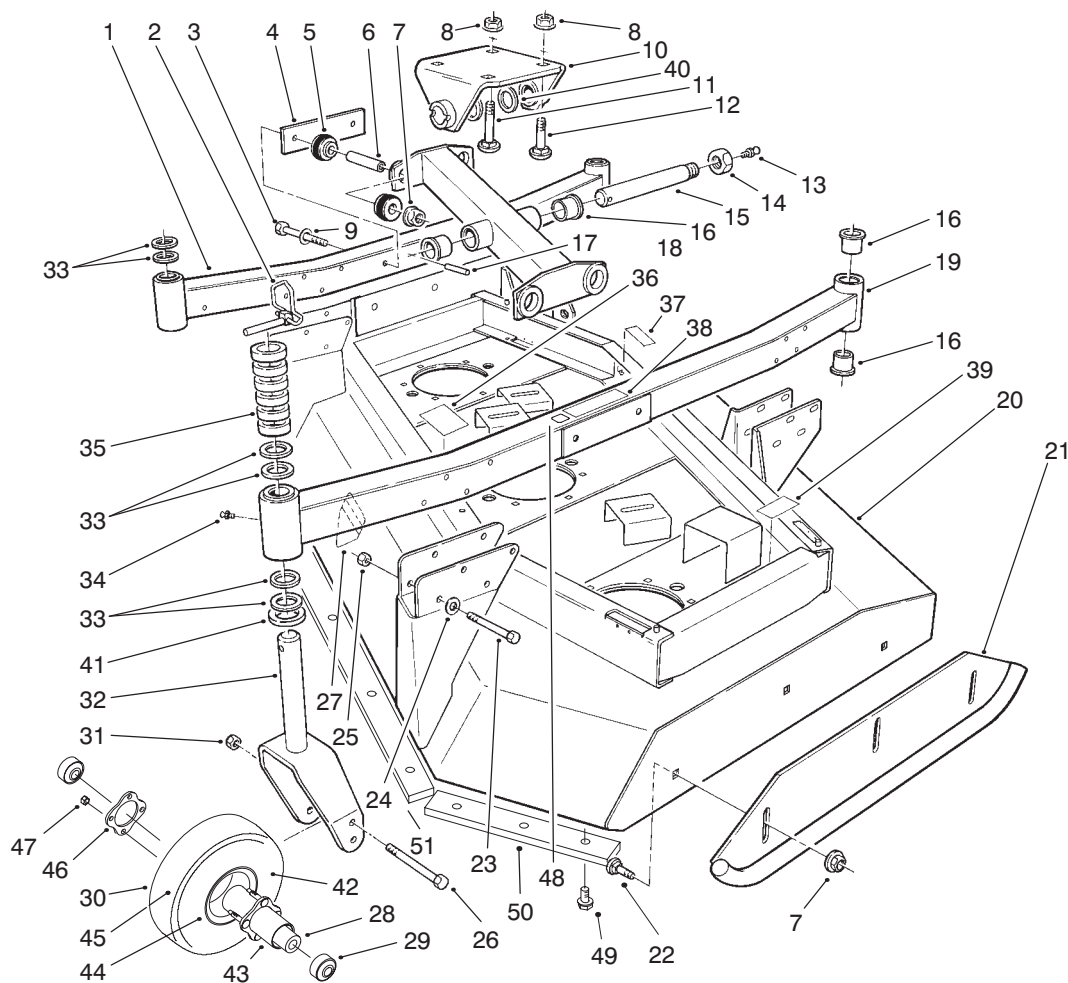


T-0335-4

WING DECK MODEL NO 30591 L.H. & 30593 R.H.

Ref. No.	Part No.	Description	No. Used
1	69-8830	Arm - Inside Castor (Incl. Ref. #16 & 34)	2
2	3290-384	Pin - Lynch	8
3	325-20	Screw - Cap Hex. Hd.	8
4	69-8790	Plate - Reinforcing	2
5	69-9700	Mount - Rubber (Incl. Ref. #6)	8
6		Spacer	8
7	32128-23	Nut - Flange Lock	20
8	32128-45	Nut - Lock	8
9	30-8770	Washer - Flat	8
10	69-7170	Clevis - Deck	2
11	3233-29	Bolt - Carriage	2
12	3233-28	Bolt - Carriage	6
13	302-2	Fitting - Grease	2
14	3296-68	Nut - Lock	2
15	71-2610	Shaft - Deck Pivot	2
16	69-6470	Bushing - Flange	20
17	32121-110	Pin - Roll	2
18	69-6420	Bar - Lift L.H. (Incl. Ref. #16)	1
*	69-6480	Bar - Lift R.H. (Incl. Ref. #16)	1
19	13-5059	Arm - Outside Castor (Incl. Ref. #16, 34 & 38)	2
20	13-5009	Deck - Wing L.H. (Incl. Ref. #27, 36, 37 & 39)	1

Ref. No.	Part No.	Description	No. Used
*	13-4999	Deck - Wing R.H. (Incl. Ref. #27, 36, 37 & 39)	1
21	69-6730	Skid	4
22	3233-9	Bolt - Carriage	12
23	323-15	Screw - Cap Hex. Hd.	32
24	5-0838	Washer - Flat	32
25	32128-43	Nut - Lock	32
26	327-17	Screw Cap Hex. Hd.	8
27	43-8480	Decal - Danger	2
27	93-7815	Decal - Danger (Europe)	2
28	93-4241	Spacer	8
29	93-4237	Bearing	16
30	93-4240	10" Wheel - Pneumatic (Incl. Ref. #28-29 & 42-47)	8
31	3296-53	Nut - Lock	8
32	75-9670	Fork - Castor	8
33	69-6860	Washer - Thrust	28
34	302-5	Fitting - Grease	8
35	69-1510	Spacer - Castor	48
36	95-0819	Decal - Belt Routing L.H.	1
*	95-0820	Decal - Belt Routing R.H.	1
37	66-1340	Decal - Danger	2
37	93-7824	Decal - Danger (Europe)	2
38	95-0818	Decal - Torque	2
39	67-5360	Decal - Danger	4
39	93-7273	Decal - Danger (Europe)	4
40	256-304	Washer - Thrust	4

*Not Illustrated

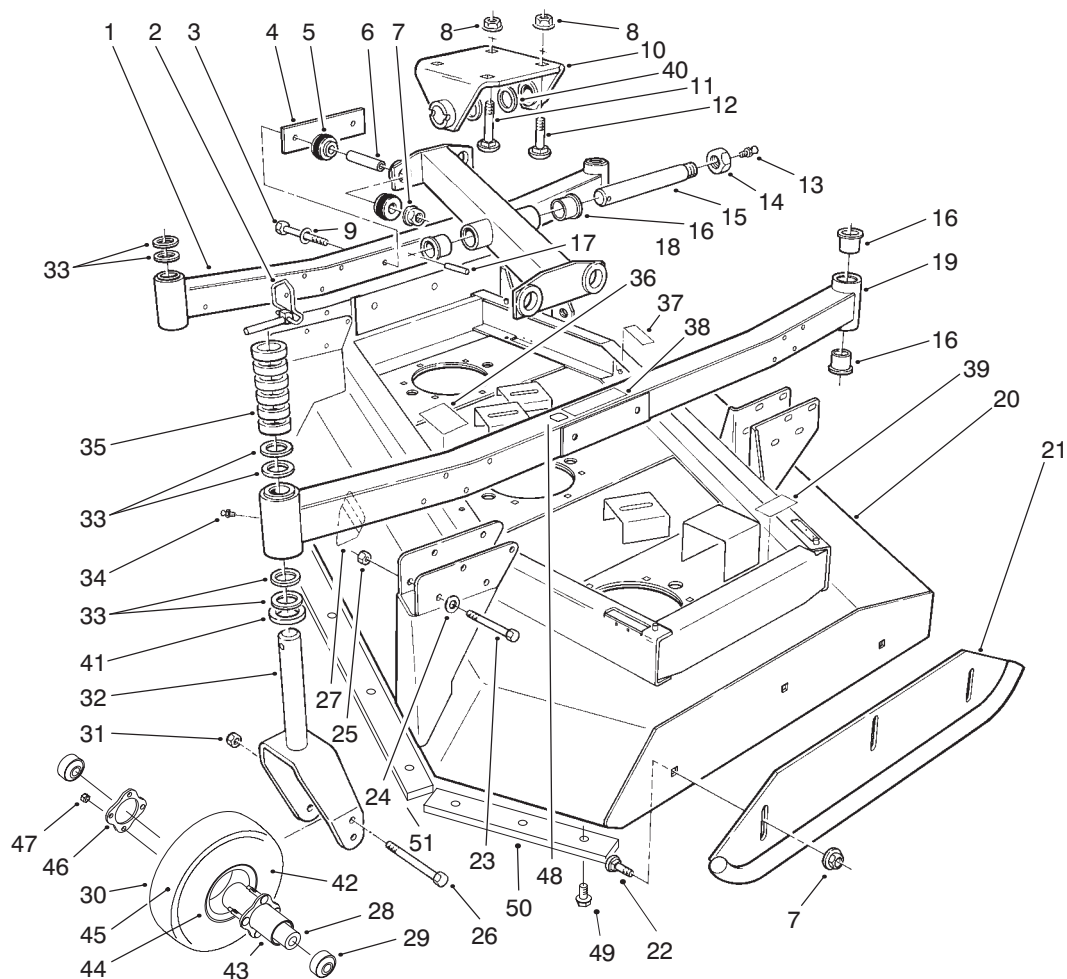


T-0335-4

WING DECK MODEL NO 30591 L.H. & 30593 R.H. (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
41	77-0950	Washer - Castor	8	48	93-7252	Decal - CE	2
42	93-4243	Tire - 10"	8	49	32104-31	Screw - HH (Europe)	20
43	93-5980	Hub	8	50	94-9822	Bar - Guard, Wing Inner (Europe)	2
44	95-2741	Rim - Wheel	16	51	94-9823	Bar - Guard, Wing RH & LH (Europe)	2
45	93-4244	Tube - w/Valve	8				
46	93-4242	Plate	8				
47	32128-16	Nut - HHF	32				

*Not Illustrated

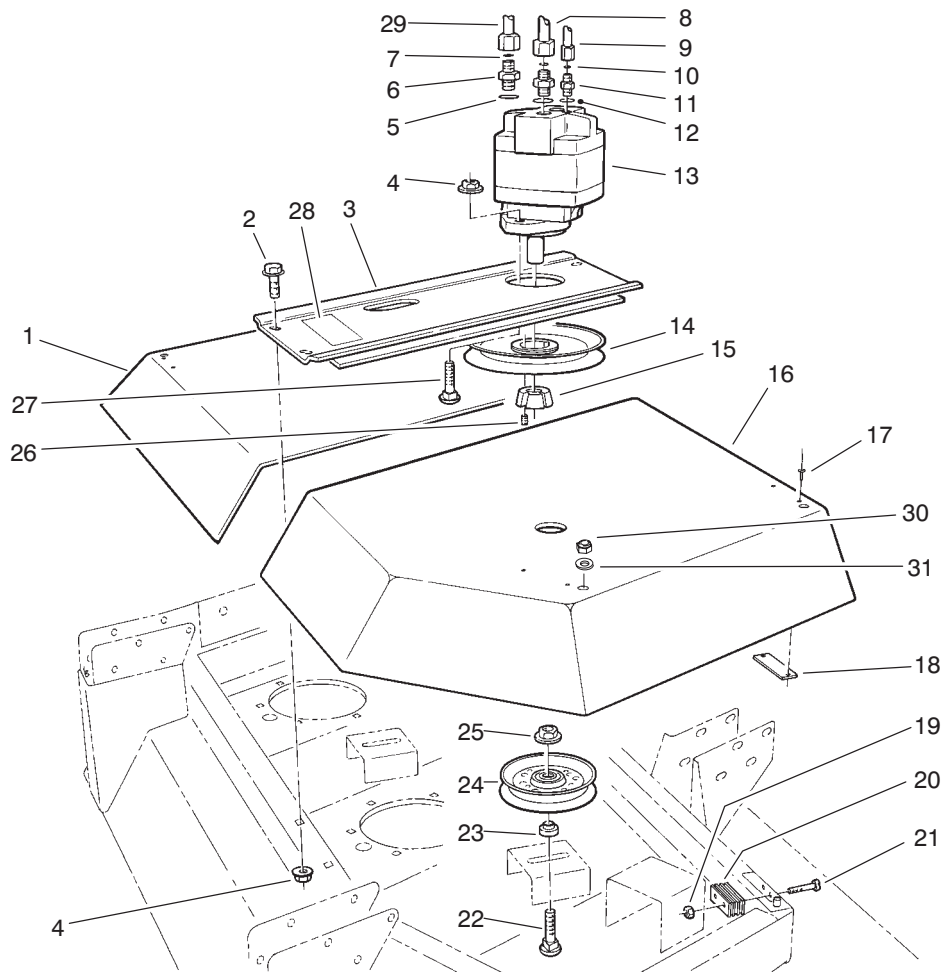


T-0336-2

WING DECK MODEL NO. 30591 L.H. & 30593 R.H. DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-6800	Cover - Inner L.H.	1	17	3269-25	Rivet - Pop	16
*	69-6820	Cover - Inner R.H.	1	18	69-6870	Plate - Magnet	8
2	3234-12	Screw - Hex. Washer Hd.	8	19	3296-2	Nut - Lock	16
3	69-6360	Plate - Motor Mounting L.H.	1	20	69-6260	Magnet - Cover	8
*	69-6340	Plate - Motor Mounting R.H.	1	21	32105-1	Screw - Pan Hd.	16
4	32128-21	Nut - Flange Lock	12	22	3233-30	Bolt - Carriage	6
5	237-81	Seal - O-Ring	4	23	69-6960	Spacer - Idler	6
6	340-8	Fitting - Hydraulic Straight (Incl. Ref. #5 & 7)	4	24	63-1540	Pulley - Idler	6
7	237-65	Seal - O-Ring	4	25	32128-23	Nut - Flange Lock	6
8	93-9918	Asm. - Hose, Hydraulic	2	26		Screw - Set	4
9	93-9917	Asm. - Hose, Hydraulic	2	27	3231-28	Bolt - Carriage	4
10	237-22	Seal - O-Ring	2	28	95-0845	Decal - H.O.C.	2
11	340-2	Fitting - Hydraulic Straight (Incl. Ref. # 10 & 12)	2	29	93-9919	Asm. - Hose, Hydraulic	2
12	237-42	Seal - O-Ring	2	30	3296-29	Nut - Lock	4
13	94-4907	Motor - Hydraulic	2	31	3256-23	Washer - Flat	4
14	63-0660	Pulley - Wing Deck Drive	2	*	76-2060	V-Belt	6
15	23-1640	Bushing - Taper Lock (Incl. Ref. #26)	2	*	3290-378	Tie - Cable	24
16	69-6810	Cover - Outer L.H.	1				
*	69-6830	Cover - Outer R.H.	1				

*Not Illustrated

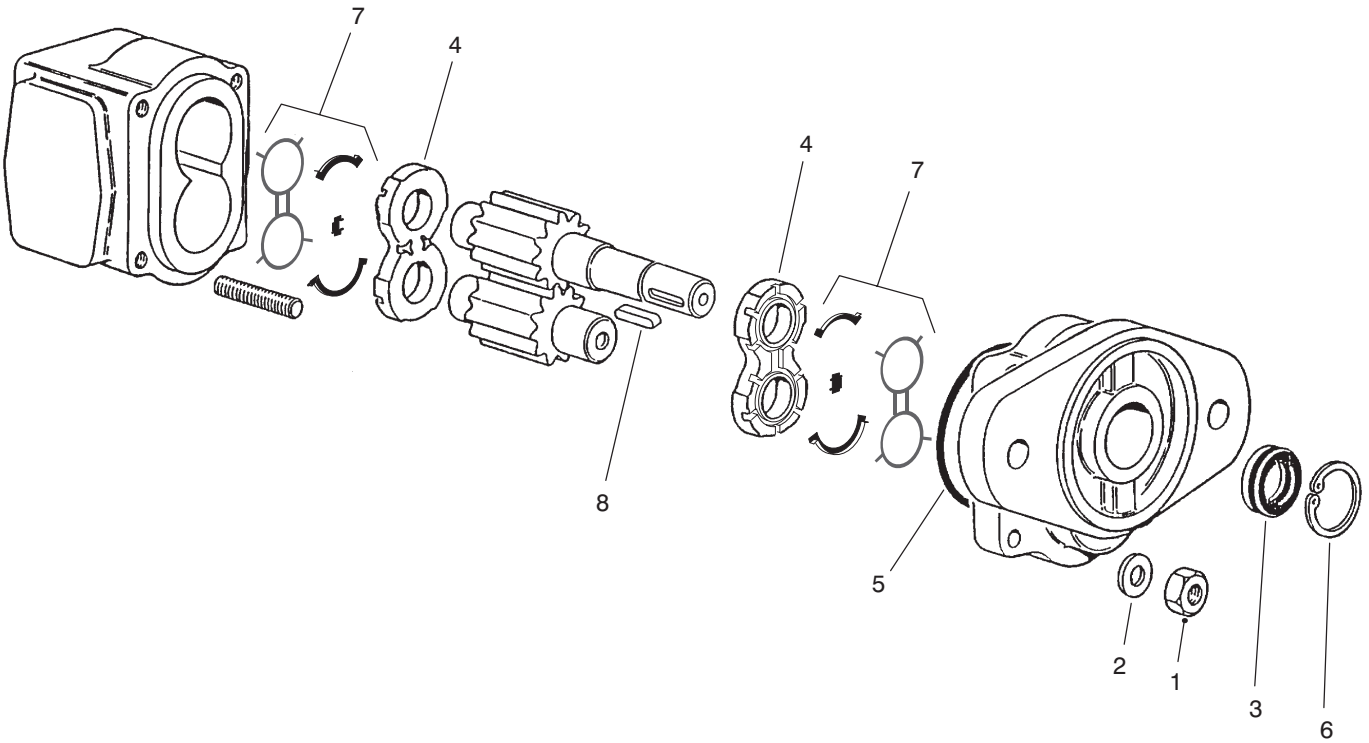


T-2313-1

HYDRAULIC MOTOR ASSEMBLY NO. 94—4907

Ref. No.	Part No.	Description	No. Used
1	33016—00	Nut — Hex.	4
2	33096—00	Washer — Flat	4
3	94—5391	Seal — Shaft	1
4	94—5390	Plate — Load	2
5		Seal — O—Ring	1

Ref. No.	Part No.	Description	No. Used
6		Ring — Retaining	1
7		Seal — Load	2
8	93—7637	Key — Square	1
*	94—5392	Kit — Seal (Incl. Ref. #3 & 5—8)	1

*Not Illustrated

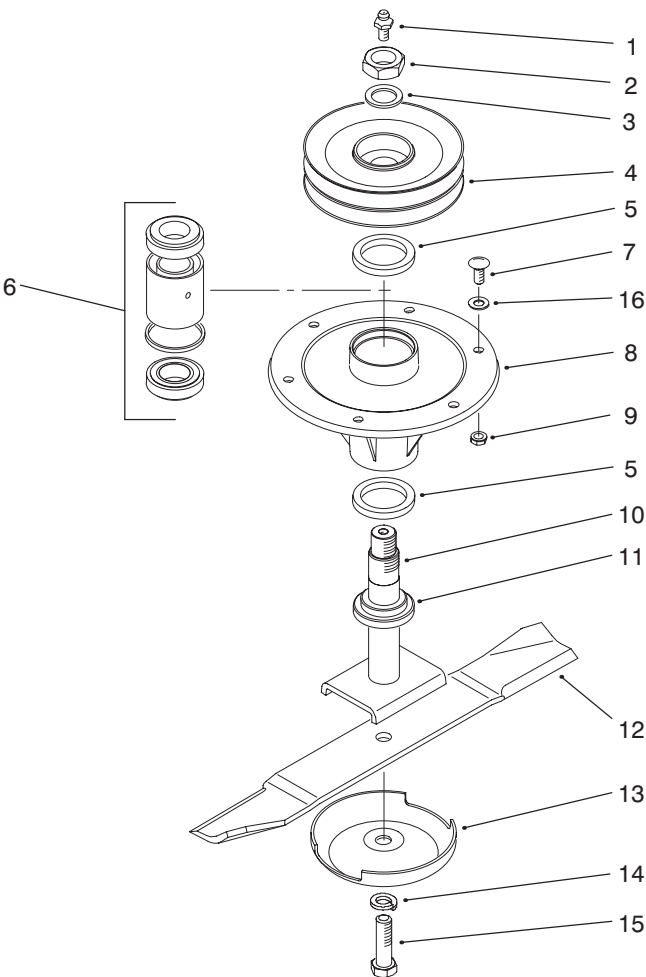


T-0337-2

SPINDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-2	Fitting - Grease Str.	1	8	69-1530	Housing - Spindle	1
*	302-10	Fitting - Grease 45° (Used only on wing deck center & inside spindles)	1	9	32128-21	Nut - Flange Lock	6
2	3296-49	Nut - Lock	1	10	69-6760	Shaft - Spindle	1
3	3-8514	Washer	1	11	92-9800	Spacer - Spindle	1
4	69-8390	Pulley - Spindle	1	12	69-6920	Blade - 20"	1
5	253-154	Seal - Wave	2	13	67-7561	Cup - Anti Scalp	1
6	71-2530	Bearing Assembly	1	14	3253-8	Washer - Lock	1
7	3231-22	Bolt - Carriage	6	15	51-4060	Bolt - Blade	1
				16	3256-24	Washer - Flat	A/R

*Not Illustrated

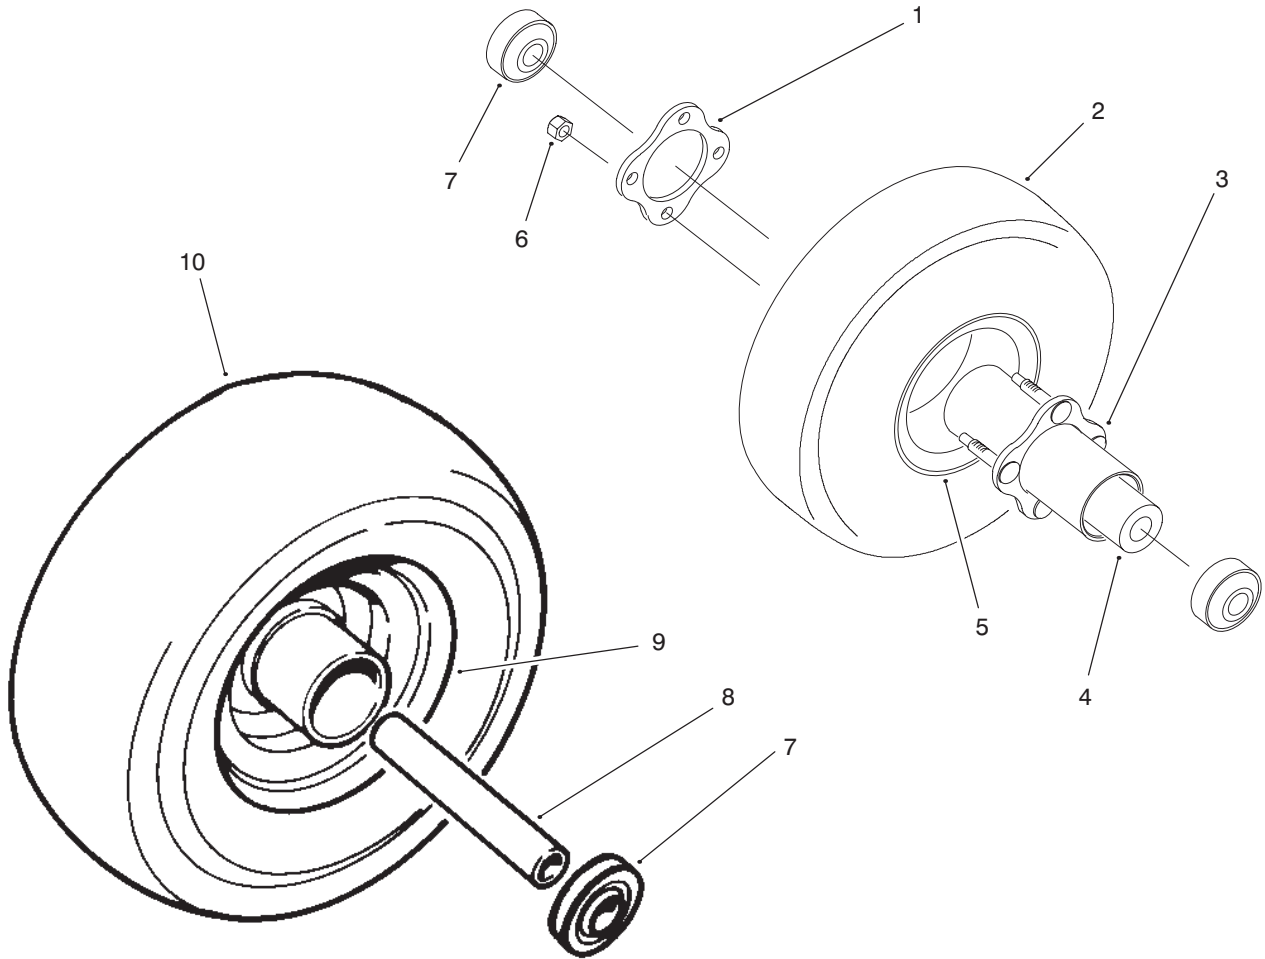

T-2441-1

10" & 13" FOAM FILLED TIRE ASSEMBLIES (Optional)

Ref. No.	Part No.	Description	No. Used
†1	93-5973	Plate	1
2		10" Foam Filled Tire Asm. (Incl. Ref. #1, 3-7)	1
†3	93-4241	Hub	1
4		Spacer - Bearing, Inner	1
†5		Rim	2

Ref. No.	Part No.	Description	No. Used
†6	93-4237	Nut - HHF	4
7		Bearing	4
8	93-5630	Spacer - Bearing, Inner	1
†9	93-5999	Rim	1
10		13" Foam Filled Tire Asm. (Incl. Ref. #7-9)	1

† Not Serviced Separately.

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3—2858	Disc — Friction	18 2 1	40—4120	Plate — Rubber	3 7 1
3—3710	Tie Rod Assembly	75 39 1	40—4150	Roller	3 11 1
3—6498	Washer	84 34 1	40—4160	Guide — Sleeve	3 12 1
3—6498	Washer — Flat	82 58 1	40—4230	Plug	3 17 1
3—8514	Washer	94 3 1	40—4310	Bearing — Thrust Needle	3 25 1
3—8596	Spring — Compression	18 12 1	40—4340	Spring — Extension	3 28 1
5—0838	Washer — Flat	80 18 16	40—4350	Spring — Extension	3 29 2
5—0838	Washer — Flat	90 24 32	40—4360	Plate	3 30 1
5—0838	Washer — Flat	83 30 3	40—4370	Bolt	3 31 1
5—0838	Washer — Flat	84 40 3	40—4380	Bracket — Release	3 32 2
5—3177	Washer — Flat	23 7 4	40—9520	Spacer — Split	83 3 2
5—3637	Spacer — Terminal	22 4 1	40—9520	Spacer — Split	84 12 2
5—3637	Washer — Flat	48 13 1	41—8760	Gasket — Pump	37 49 1
12—8900	Bolt — Shoulder	36 32 2	42—1720	Field Core Coil Assembly	9 5 1
13—4239	Shroud — Fan	44 9 1	42—6200	Shim — Cushion	83 * A/R
13—4969	Deck — Center	81 41 1	42—6200	Shim — Cushion	84 * A/R
13—4979	Right Wing Deck Assembly	84 18 1	43—4000	Breaker — Circuit 40A	11 10 1
13—4989	Deck — Left Wing	83 12 1	43—5920	Washer — Lock	48 14 1
13—4999	Deck — Wing R.H.	90 * 1	43—5970	Nut — Hex.	48 15 1
13—5009	Deck — Wing L.H.	90 20 1	43—6110	Plate — Clutch	9 9 1
13—5059	Arm — Outside Castor	90 19 2	43—6200	Spring — Compression	9 27 1
13—5069	Arm — Castor L.H.	80 31 1	43—6280	Button	13 10 2
17—7190	Spacer	46 23 4	43—6280	Button	14 12 2
18—2770	Strap — Ground	72 23 1	43—6320	Collar — Locking	9 10 1
19—1470	Bolt — Shoulder	81 13 4	43—6420	Bezel	13 11 2
20—4360	Tube — Spacer	78 16 2	43—6420	Bezel	14 13 2
20—4840	Clamp — Exhaust	46 12 2	43—8480	Decal — Danger	83 24 1
20—4840	Clamp — Tube	25 15 2	43—8480	Decal — Danger	90 27 2
20—9500	Spacer	4 14 2	43—8480	Decal — Danger	84 32 1
21—0141	Joint — Ball	9 20 1	43—8480	Decal — Danger	81 40 1
21—1830	Spring — Extension	7 23 1	44—2210	Body — Indicator Light	4 5 1
21—2070	Yoke — End	36 8 2	44—2212	Body — Indicator Light	4 12 2
21—3000	Nut — Jam	88 20 2	46—1600	Spacer	4 26 4
21—3000	Nut — Jam	78 38 2	46—3380	Bolt — Shoulder	44 23 2
21—3001	Nut — Jam L.H. Thread	88 3 2	46—6560	Bushing	22 21 1
23—1640	Bushing — Taper Lock	81 50 1	47—6990	Nut — Hex.	4 9 1
23—1640	Bushing — Taper Lock	92 15 2	48—7630	Screw	47 72 1
23—2140	Hose — Radiator Vent	44 7 1	48—7710	Screw — Cap Hex. Hd.	37 10 8
23—2270	Bushing — Rubber	9 15 1	48—7780	Screw — Cap Hex. Hd.	2 15 2
23—7250	Spacer	72 35 1	48—7780	Screw — Cap Hex. Hd.	46 32 6
23—7270	Nut — Lug	75 24 10	48—7890	Nut — Hex.	47 73 1
25—2630	Ring — Back Up	41 63 1	48—7930	Nut — Lock	46 6 3
25—2630	Ring Back Up	40 47 1	48—8070	Washer — Lock	46 2 16
27—2360	Switch — Ignition	14 16 1	48—8070	Washer — Lock	72 29 1
27—4720	Pin — Pivot Seat	1 14 1	48—9470	Screw — Cap Hex. Hd.	46 25 8
27—4720	Pin — Pivot, Seat	2 19 1	48—9480	Screw — Cap Hex. Hd.	46 21 4
27—7120	Nut	69 3 1	48—9570	Washer — Lock	46 7 3
27—7220	Detergent — Element	69 * 1	48—9570	Washer — Lock	37 9 8
28—0380	Spacer	4 35 3	48—9590	Washer — Lock	46 22 22
28—3580	Ring — Back Up	40 44 1	49—2500	Element Assembly	57 21 1
28—3590	Seal O—Ring	40 43 1	49—6170	Pad — Brake	7 4 1
29—6150	Spring — Leaf	37 43 1	49—6171	Pad — Brake Pedal L.H.	6 19 1
29—6163	Switch — Micro	6 13 1	49—6172	Pad — Brake Pedal R.H.	6 * 1
29—6170	Leaf Spring Assembly	37 38 1	51—3150	Shim — Spring	38 60 A/R
30—8770	Washer — Flat	90 9 8	51—4060	Bolt — Blade	94 15 1
30—8770	Washer — Flat	80 32 4	51—4910	Bolt	51 24 2
31—0390	Washer — Friction	4 15 3	51—4910	Bolt	62 28 4
37—9560	Hose — Fuel	70 1 1	51—4920	Bolt	52 1 1
39—5710	Plug	2 13 21	51—4950	Guide	53 18 8
39—7591	Thermo Switch Assembly	47 66 1	51—5090	Plug	54 9 1
39—7592	Switch — Temperature	46 5 1	51—5260	Ring — Retaining	54 30 2
39—7593	Temperature Sending Unit	24 15 1	51—5280	Cap	54 12 8
39—7650	Plate — Cover	86 59 2	51—5290	Cotter	54 13 16
40—0330	Cushion — Rubber	83 4 1	51—5300	Retainer	54 14 8
40—0330	Cushion — Rubber	84 13 1	51—5310	Seal	54 15 8
40—3890	Trim	2 14 2	51—5460	Key	56 16 1
40—4010	Roller	3 1 4	51—5460	Key	54 26 1
40—4060	Washer — Rubber	3 26 1	51—5470	Plate	54 25 1
40—4070	Washer	3 24 3	51—5500	Bushing No. 1	55 5 1
40—4080	Track — U	3 6 1	51—5510	Bushing — No. 2	55 26 1
40—4090	Rivet — Pop	3 5 2	51—5520	Bushing — No. 3	55 27 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
51-5580	Hanger	55 2 1	51-7740	Retaining Ring Assembly	49 1 1
51-5600	Cap	55 3 11	51-7750	Gear Assembly	49 * 1
51-5640	Idler Shaft Assembly	55 36 1	51-7760	Shaft Assembly	49 23 1
51-5650	Pin	56 15 1	51-7770	Gear - Pinion	49 22 1
51-5650	Pin	55 21 6	51-7780	Cover Assembly	49 21 1
51-5650	Pin	55 35 1	51-7790	Packing	49 20 2
51-5840	Washer	53 12 1	51-7830	Cover - Rear	49 16 1
51-5850	Cover	52 15 1	51-7840	Ring - Rubber	49 15 2
51-5860	Gasket	52 14 1	51-7850	Nut Assembly	50 1 1
51-5890	Oil Seal Assembly	58 17 1	51-7870	Screw Set	50 4 1
51-5950	Stud	58 2 2	51-7890	Screw Set	50 5 1
51-5970	Nut	58 4 2	51-7910	Rotor Assembly	50 10 1
51-6350	Gear	56 3 1	51-7930	Stator	50 18 1
51-6390	Washer	62 29 4	51-7950	Terminal Assembly	50 17 1
51-6390	Washer	55 33 1	51-7960	Regulator Assembly	50 16 1
51-6390	Washer - Lock	52 2 11	51-7970	Brush	50 15 2
51-6390	Washer - Lock	58 3 13	51-8270	Washer	55 29 1
51-6390	Washer - Lock	48 9 2	51-8280	Bolt	55 28 1
51-6390	Washer - Lock	62 9 2	51-8590	Washer	48 3 1
51-6390	Washer - Lock	51 14 2	51-8610	Washer - Lock	56 5 4
51-6390	Washer - Lock	51 18 4	51-8610	Washer - Lock	48 11 2
51-6390	Washer - Lock	51 23 4	51-8640	Bolt	48 8 2
51-6390	Washer - Lock	57 27 4	52-9230	Ring - Retaining	5 3 1
51-6400	Plate	52 7 1	52-9240	Bushing - Gland Seal	5 4 1
51-6430	Bushing	52 10 1	52-9250	Needle Bearing Kit	5 * 1
51-6480	Cover	55 9 1	52-9260	Screw - Set	5 1 1
51-6490	Gasket	55 10 1	52-9270	Seat - Check Ball	5 24 1
51-6820	Washer	57 24 1	52-9280	Ball - Check	5 22 1
51-6830	Relief Valve Assembly	57 25 1	52-9290	Retainer - Check Ball	5 21 1
51-6890	Gasket	53 14 1	52-9320	Drive	5 15 1
51-6890	Gasket - Plug	58 15 1	56-7970	Clamp - Tube	30 41 4
51-6910	Nut	51 32 1	56-7971	Clamp Half - Hydraulic Line	30 26 2
51-6920	Washer - Lock	51 21 2	56-7972	Clamp Half - Hydraulic Line	30 20 4
51-6920	Washer - Lock	51 31 1	56-7973	Clamp Half - Hydraulic Line	30 19 20
51-6940	Ring	51 28 1	56-7973	Clamp Half - Hydraulic Line	28 44 4
51-6950	Bearing	51 27 1	56-7973	Clamp Half - Hydraulic Line	86 57 6
51-6960	Key	51 3 1	56-7974	Clamp - Hydraulic Lines	72 31 2
51-6980	Bearing	51 25 1	56-7974	Clamp Half - Hydraulic Line	85 2 2
51-7020	Nipple	51 6 1	56-7974	Clamp Half - Hydraulic Line	30 17 2
51-7030	Seal	51 10 1	56-7974	Clamp Half - Hydraulic Line	47 77 2
51-7170	Pipe	51 8 1	56-7978	Clamp Half - Hydraulic Line	30 25 8
51-7200	Clamp	51 42 2	56-7978	Clamp Half - Hydraulic Line	24 42 6
51-7210	Gasket	51 2 2	58-3590	Pin - Flywheel	46 24 2
51-7220	Gasket	51 38 1	58-4250	Magnet	42 1 6
51-7230	Thermostat	51 37 1	58-5620	Tube - Inner	32 * 2
51-7250	Washer	59 1 4	58-6290	Poppet Assembly	20 34 3
51-7250	Washer	59 6 16	58-6310	Spacer	20 28 3
51-7250	Washer	55 8 2	58-6320	Wiper - Seal	20 24 3
51-7250	Washer	57 9 3	58-6330	Seat Assy.	20 35 3
51-7250	Washer	55 38 1	58-6340	Seal - O-Ring	20 36 3
51-7250	Washer - Lock	54 3 8	58-6350	Plug Assembly	20 11 3
51-7250	Washer - Lock	48 4 1	58-6370	Washer - Back-Up	20 10 6
51-7250	Washer - Lock	53 4 2	58-6400	Bushing	20 25 3
51-7250	Washer - Lock	58 8 28	58-6420	Cap Assembly	20 30 3
51-7250	Washer - Lock	52 16 5	58-6440	Poppet	20 22 1
51-7250	Washer - Lock	54 24 2	58-6450	Seal - O-Ring	20 12 6
51-7250	Washer - Lock	62 32 2	58-6460	Ring - Retaining	20 29 3
51-7250	Washer - Lock	51 34 4	58-6470	Washer	20 18 A/R
51-7400	Washer	57 30 4	58-6480	Washer	20 19 A/R
51-7400	Washer - Lock	62 16 6	58-6490	Washer	20 20 A/R
51-7400	Washer - Lock	61 18 2	58-6700	Washer	20 26 3
51-7600	Screw Set	49 4 1	58-6710	Plug Assy.	20 6 1
51-7610	Packing	49 5 2	58-6720	Seal - O-Ring	20 7 1
51-7630	Seal - Oil	49 24 1	58-6730	Spring	20 27 3
51-7640	Lever Assembly	49 7 1	58-6750	Seal - O-Ring	20 17 1
51-7650	Spring Assembly	49 8 1	58-6760	Spring	20 3 3
51-7660	Bracket Assembly Center	49 9 1	58-6770	Plunger - Detent	20 4 3
51-7670	Solenoid	49 10 1	58-6780	Plug Assy.	20 1 3
51-7690	Bearing	49 11 1	58-6790	Seal - O-Ring	20 5 3
51-7720	Clutch Assy.	49 * 1	59-6730	Race - Bearing	5 7 2
51-7730	Gear Pinion Assembly	49 2 1	59-6740	Bearing - Needle Thrust	5 8 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
59-6820	Centering Spring Kit	5 11 1	61-2790	Filler - Screen	23 34 1
59-6830	Kit - Centering Pin	5 20 1	61-4990	Ring - Retaining	79 3 1
59-6910	Connector	48 6 1	62-5550	Decal	4 47 1
59-7580	Nut - Hex.	26 24 8	62-6450	Kit - Retaining Ring	35 28 1
59-7590	Washer - Lock	26 12 16	62-6460	Sealant - RTV (Tube)	35 * 1
59-7970	Stud - Threaded	26 23 8	62-7650	Gasket - Level Sensing Unit	22 1 1
59-7990	Seal - Gland	26 3 4	63-0660	Pulley - Drive	82 51 1
59-8470	Retainer - Seal	26 4 4	63-0660	Pulley - Wing Deck Drive	92 14 2
59-8500	Gear/Shaft - Front Drive	26 17 1	63-1540	Pulley - Idler	81 15 3
59-8570	Seal - Shaft	26 22 1	63-1540	Pulley - Idler	92 24 6
59-8580	Ring - Retaining	26 21 1	63-4740	Bolt	53 7 17
59-8590	Seal - Shaft	26 20 1	63-7430	Gauge - Temperature	13 8 1
59-8600	Gear - Driven	26 9 2	63-7590	Relay	72 19 1
59-8610	Repair Kit	26 * 1	63-8280	Head - Fuel Filter	70 4 1
60-3780	Seal Kit	20 * 1	63-8290	Vent - Air	70 5 1
60-3810	Shaft - Input	35 2 1	63-8310	Valve - Drain	70 8 1
60-3830	Seal - Oil	35 4 1	63-8360	Key - Ignition	14 11 1
60-3840	Cone - Bearing	35 5 1	66-1340	Decal - Danger	83 23 1
60-3850	Cup - Bearing	35 6 2	66-1340	Decal - Danger	84 33 1
60-3860	Bolt - Wheel	35 7 9	66-1340	Decal - Danger	90 37 2
60-3870	Hub	35 8 1	66-1340	Decal - Danger	82 60 1
60-3880	Cone - Bearing	35 9 1	66-2490	Hold-Down - Battery	72 16 2
60-3890	Bolt - Hex. Hd.	35 10 6	66-2940	Gauge - Fuel	13 25 1
60-3900	Gear - Ring	35 24 1	66-2950	Hourmeter	13 26 1
60-3910	Washer - Flat	35 11 6	66-3241	Cap - Radiator	44 5 1
60-3930	Ring - Retaining	35 25 2	66-6140	Decal - TORO	43 27 1
60-3940	Washer	35 26 2	66-8530	Track - Adjustment	2 3 1
60-3950	Spring - Disengage	35 27 1	67-4510	Sending Unit - Temperature	46 4 1
60-3960	Primary Carrier Assembly	35 15 1	67-5360	Decal - Danger	83 25 1
60-3970	Gear - Primary Sun	35 13 1	67-5360	Decal - Danger	84 31 1
60-3980	Washer - Thrust	35 12 1	67-5360	Decal - Danger	90 39 4
60-3990	Washer - Thrust	35 23 1	67-7160	Block - Fuse	11 24 4
60-4000	Secondary Carrier Assy.	35 20 1	67-7561	Cup - Anti Scalp	94 13 1
60-4010	Plunger - Disengage	35 22 1	67-9560	Shell - Seat	1 2 1
60-4020	Seal - O-Ring	35 21 1	68-6150	Breather	44 50 1
60-4030	Bolt - Hex. Hd.	35 17 8	68-7571	Strip - Sealing	23 24 1
60-4040	Plug - Pipe	35 16 1	68-7572	Strip - Sealing	22 18 1
60-4050	Cover - Large	35 19 1	68-8080	Wheel - Steering	4 10 1
60-4060	Cover - Disengage	35 18 1	69-0030	Spring - Compression	36 30 2
60-4070	Bolt - Hex. Hd.	35 14 2	69-0040	Foam - Lower Grille	42 20 1
60-5210	Clamp	62 15 2	69-0060	Screw - Cap Hex. Hd.	72 28 1
60-5340	Cover Assembly - Front	50 7 1	69-0060	Screw - Cap Hex. Hd.	46 39 16
60-5360	Bearing	50 11 1	69-0090	Pin - Clevis Engine End	18 * 1
60-5370	Rectifier Assembly	50 13 1	69-0100	Frame - Assembly	28 49 1
60-5380	Cover Assembly - Rear	50 12 1	69-0760	Bracket - Arm Rest L.H.	1 * 1
60-5720	Seal - O-Ring	20 9 6	69-0770	Bracket - Arm Rest R.H.	1 18 1
60-6450	Disc	20 2 A/R	69-0940	Decal - Caution	30 39 1
60-7040	Bolt	51 40 2	69-0950	Decal - 580D	43 26 2
60-7110	Bolt	57 10 3	69-1130	Louver - Middle	42 8 1
60-7110	Bolt	52 18 1	69-1140	Louver - Lower	42 31 1
60-7110	Bolt	54 23 2	69-1170	Gauge - Sight	23 2 1
60-7110	Bolt	55 37 1	69-1180	Armrest	1 20 2
60-7120	Nut - Hex.	61 3 12	69-1380	Panel - Side R.H.	43 * 1
60-7160	Rivet	60 1 2	69-1390	Panel - Side L.H.	43 12 1
60-7210	Bolt	52 6 1	69-1510	Spacer - Caster	80 2 12
60-7280	Bolt	54 2 4	69-1510	Spacer - Castor	90 35 48
60-7280	Bolt	53 3 2	69-1530	Housing - Spindle	94 8 1
60-7280	Bolt	55 7 2	69-1540	Pivot - Spring	78 34 1
60-7280	Bolt	58 9 23	69-1560	Lever - Lock	4 1 1
60-7280	Bolt	62 31 2	69-1580	Anchor - Latch L.H.	86 55 1
60-7280	Bolt	51 35 1	69-1600	Anchor - Latch R.H.	86 * 1
60-7290	Bolt	57 29 4	69-1610	Adapter - Suction Hose	23 8 1
60-7370	Bolt	59 2 4	69-1630	Arm - Latch Pivot	88 12 4
60-7370	Bolt	48 5 1	69-1650	Screen - Suction	23 17 1
60-7370	Bolt	59 7 16	69-1660	Mount - Engine	46 40 4
60-7370	Bolt	58 12 5	69-1670	Cooler - Oil	44 32 1
60-7480	Bolt	62 10 2	69-1680	Fan	47 62 1
60-7480	Bolt	57 26 4	69-1690	Clutch - Fan	47 64 1
60-9760	Nut - Lock	79 11 1	69-1700	Hydraulic Filter Assembly	24 19 1
60-9760	Nut - Lock	87 13 1	69-1710	Indicator - Filter	24 25 1
60-9770	Piston	79 10 1	69-1720	Element - Filter	24 21 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
69-1730	Planetary Gear Drive Assy.	32 32 2	69-2480	Screw — Set	39 8 1
69-1740	Spindle	35 3 1	69-2490	Spring — Compression	39 9 1
69-1750	Fuel Filter Assembly	46 44 1	69-2500	Poppet	39 10 1
69-1750	Fuel Filter Assembly	70 * 1	69-2510	Seat	39 11 1
69-1760	Sensor — Water	70 9 1	69-2520	Plug — Pipe	39 31 1
69-1770	Element — Spin-On	70 11 1	69-2530	Seal — O-Ring	39 12 1
69-1780	Lift Valve Assembly	19 2 1	69-2540	Cover Assembly	39 13 1
69-1790	Plunger	20 37 2	69-2550	Repair Kit — Pump	39 * 1
69-1800	Plug Assembly	20 32 3	69-2560	Repair Kit — Pump & Divider	39 * 1
69-1810	Spring	20 33 3	69-2570	Head	79 4 1
69-1820	Spring — Black	20 21 1	69-2580	Shaft w/clevis	79 1 1
69-1830	Plug Assembly	20 16 1	69-2640	Master Cylinder Assembly	7 9 1
69-1840	Plunger	20 31 1	69-2650	Boot — Rod	8 1 1
69-1860	Gerotor	5 16 1	69-2660	Ring — Retaining	8 2 1
69-1880	Spacer	5 17 1	69-2730	Piston Assembly	8 * 1
69-1890	Air Cleaner Assembly	46 15 1	69-2740	Bail — Cover	8 12 1
69-1900	Element Assembly	69 5 1	69-2750	Cover — Reservoir	8 9 1
69-1910	Clamp Assembly	69 4 1	69-2760	Gasket — Diaphragm	8 10 1
69-1920	Baffle	69 2 1	69-2770	Seat — Tube	8 11 1
69-1930	Cup Assembly	69 1 1	69-2960	Hub — Rear Wheel	75 19 2
69-1940	Indicator — Electrical	47 71 1	69-2970	Cap — Hub	75 27 2
69-1950	Band — Air Cleaner	46 28 2	69-2980	Seal — Inner	75 32 2
69-1960	Hydraulic Cylinder Assembly	75 42 2	69-2990	Screw — Drive	75 18 10
69-1960	Steering Cylinder (Complete)	77 * 2	69-3010	Strap — Hold Down	43 6 4
69-1970	Joint — Ball	77 17 1	69-3020	Handle — Latch	42 16 2
69-1980	Nut — Jam	77 16 1	69-3020	Latch	44 20 8
69-1990	Nut — Lock	77 14 1	69-3030	Strike — Latch	42 13 8
69-2000	Piston	77 11 1	69-3050	Motor — Hydraulic Wheel	32 44 2
69-2020	Rod — Piston	77 4 1	69-3070	Washer — Lock	41 62 10
69-2030	Ring — Head	77 7 1	69-3070	Washer — Plain	34 2 10
69-2050	Hydraulic Pump Assembly	25 8 1	69-3080	Plug	41 60 4
69-2060	Shaft End Cover Assembly	26 18 1	69-3120	Plug	41 95 1
69-2070	Plate — Flex	26 5 4	69-3130	Plug	40 9 1
69-2080	Center Section Assembly	26 7 2	69-3130	Plug — Hole	34 33 1
69-2090	Gear/Shaft — Rear Drive	26 8 1	69-3140	Bracket — Lifting	41 58 1
69-2100	Rear Cover Assembly	26 11 1	69-3150	Screw — Hex. Hd.	41 61 10
69-2110	Coupling	26 1 1	69-3150	Screw Hex. Hd.	34 1 10
69-2120	Seal — O-Ring	26 10 2	69-3170	Ring — Retaining	34 19 2
69-2130	Plug	26 19 1	69-3170	Ring — Retaining	40 31 2
69-2140	Screw — Cap Hex. Hd.	26 14 4	69-3180	Shaft Pump	40 37 1
69-2150	Screw — Cap Hex. Hd.	26 13 4	69-3190	Seal — Lip	34 18 1
69-2160	Port Section Assembly	26 16 1	69-3190	Seal — Lip	40 30 1
69-2170	Adapter Section Assembly	26 2 1	69-3200	Ring — Retaining	34 17 2
69-2200	Seal — O-Ring	26 6 2	69-3200	Ring — Retaining	40 29 2
69-2210	Seal — O-Ring	26 15 1	69-3210	Bearing — Ball	34 20 1
69-2220	Pump/Valve	37 52 1	69-3210	Bearing — Ball	40 32 1
69-2230	Flow Divider Assembly	39 30 1	69-3220	Screw	40 28 1
69-2240	Screw	39 32 4	69-3230	Pin — Spring	40 12 1
69-2250	Bearing — Sleeve	39 20 4	69-3230	Pin — Spring	34 32 1
69-2260	Seal — Load	39 17 1	69-3240	Bearing — Journal	40 25 2
69-2270	Seal — Pre-Load	39 18 1	69-3250	Swashplate — Variable	40 24 1
69-2280	Shaft/Gear — Idler	39 15 1	69-3370	Bearing — Needle	40 13 1
69-2290	Shaft/Gear — Drive	39 28 1	69-3370	Bearing — Needle	34 31 1
69-2300	Ring — Retaining	39 26 1	69-3390	Gerotor Assembly	41 89 1
69-2310	Seal — Shaft	39 27 1	69-3400	Screw Hex. Hd.	41 83 3
69-2320	Plate — Wear	39 16 1	69-3410	Adapter — A Flange	41 85 1
69-2330	Body Assembly	39 21 1	69-3420	Ring — Temper Load	41 86 1
69-2340	Pin — Dowel	39 14 2	69-3430	Key — Woodruff	41 84 1
69-2350	Ring — Sealing	39 19 1	69-3440	Seal — O-Ring	41 87 1
69-2360	Screw	39 23 4	69-3450	Pin	34 30 1
69-2370	Washer	39 22 4	69-3450	Pin	40 41 1
69-2380	Screw	39 24 4	69-3460	Plug Expansion	41 80 1
69-2390	Washer	39 25 4	69-3470	Pin	40 36 1
69-2400	Seal — O-Ring	39 29 1	69-3500	Bearing — Sleeve	34 13 1
69-2410	Plug	39 1 2	69-3500	Sleeve — Bearing	40 34 1
69-2420	Seal — O-Ring	39 2 2	69-3510	Pin	34 14 1
69-2430	Spring — Compression	39 5 1	69-3510	Pin	40 35 1
69-2440	Orifice	39 4 1	69-3520	Pin — Spring	34 23 2
69-2450	Piston	39 3 1	69-3540	Cover — Gerotor	41 88 1
69-2460	Cap	39 6 1	69-3550	Pin	41 81 1
69-2470	Gasket — Cap	39 7 1	69-3560	Seal — O-Ring	34 38 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
69-3560	Seal - O-Ring	41 55 2	69-5460	Hose - Hydraulic	37 18 1
69-3570	Ring - Piston	34 39 2	69-5470	Hose - Hydraulic	27 16 1
69-3570	Ring - Piston	41 56 2	69-5470	Hose - Hydraulic	38 57 1
69-3580	Guide - Spring	40 8 1	69-5480	Hose - Hydraulic	27 17 1
69-3590	Ring - Retaining	40 7 1	69-5480	Hose - Hydraulic	38 59 1
69-3600	Nut - Hex.	40 6 1	69-5490	Hose - Cylinder	85 39 4
69-3610	Nut - Jam	40 5 1	69-5500	Hose - Hydraulic	4 33 4
69-3620	Cover - Servo Adjustment	40 1 1	69-5510	Hose - Hydraulic	75 1 4
69-3630	Nut Special	40 2 1	69-5590	Hose - Hydraulic	73 1 2
69-3640	Cover - Servo	40 3 1	69-5590	Hydraulic Hose Assembly	25 1 2
69-3650	Piston - Servo	40 53 1	69-5600	Hose - Hydraulic	73 9 1
69-3660	Screw - Special	41 91 1	69-5610	Hose - Hydraulic	73 17 1
69-3670	Spring - Compression	41 93 1	69-5620	Hose - Hydraulic	44 29 1
69-3680	Stop - Servo	41 92 1	69-5640	Hose - Hydraulic	25 12 1
69-3690	Bearing	41 54 2	69-5640	Hose - Suction	23 12 1
69-3700	Guide - Spring	41 90 1	69-5650	Hose - Hydraulic	24 18 1
69-3710	Gasket - Servo	40 4 2	69-5650	Hose - Hydraulic	37 22 1
69-3710	Gasket - Servo Cover	34 41 2	69-5670	Cable - Brake	6 22 2
69-3720	Cover - Servo	34 43 2	69-5680	Tube - Hydraulic	21 9 1
69-3720	Cover Servo	41 57 1	69-5680	Tube - Hydraulic	19 20 1
69-3730	Valve - Relief	41 78 2	69-5700	Tube - Hydraulic	19 18 1
69-3740	Spring - Compression	41 72 2	69-5710	Tube - Hydraulic	21 20 1
69-3750	Seal - O-Ring	41 77 2	69-5720	Tube - Hydraulic	19 17 1
69-3760	Plug Special	41 71 2	69-5730	Tube - Hydraulic	21 33 1
69-3770	Shim	41 69 1	69-5740	Tube - Hydraulic	19 19 1
69-3780	Plug	41 67 1	69-5790	Tube - Hydraulic	27 37 1
69-3790	Spring Compression	41 70 1	69-5800	Tube - Hydraulic	23 20 1
69-3800	Valve	41 65 1	69-5800	Tube - Hydraulic	30 28 1
69-3810	Valve - By Pass	41 66 1	69-5810	Tube - Hydraulic Return	28 * 1
69-3820	Sleeve - Control Valve	40 42 1	69-5820	Tube - Hydraulic	21 31 1
69-3830	Spool - Rotary Valve	40 46 1	69-5830	Tube - Hydraulic	21 32 1
69-3840	Seal - O-Ring	40 52 1	69-5850	Tube - Hydraulic	21 18 1
69-3860	Screw - Flange Hd.	40 49 1	69-5860	Tube - Hydraulic	19 16 1
69-3870	Handle - Control Valve	40 50 1	69-5860	Tube - Hydraulic	21 34 1
69-3880	Spring - Neutral Return	40 45 1	69-5870	Tube - Hydraulic	19 22 1
69-3890	Bracket - Neutral Return	40 48 1	69-5870	Tube - Hydraulic	21 28 1
69-3900	Washer	40 51 1	69-5890	Tube - Hydraulic	21 5 1
69-3910	Cylinder Block Assembly	40 39 1	69-5890	Tube - Hydraulic	19 21 1
69-3910	Cylinder Block Kit	34 27 1	69-5900	Tube - Hydraulic	44 31 1
69-3920	Piston Ring & O-Ring Kit	34 * 1	69-5910	Tube - Hyd. Diagnostic	29 6 1
69-3940	Plug	34 29 1	69-5910	Tube - Hydraulic	21 19 1
69-3950	Shaft - Motor	34 25 1	69-5920	Tube - Diagnostic	29 8 1
69-3960	Screw	34 21 1	69-5920	Tube - Hydraulic	21 37 1
69-3970	Bearing - Journal	34 22 2	69-5930	Tube - Hydraulic R.H.	32 * 1
69-3980	Swashplate - Variable	34 24 1	69-5940	Tube - Hydraulic L.H.	32 2 1
69-3990	Plate - Motor Valve	34 28 1	69-5950	Tube - Hydraulic	24 32 1
69-4020	Piston - Servo	34 37 1	69-5950	Tube - Hydraulic	28 57 1
69-4030	Spring - Servo	34 40 1	69-5970	Tube - Hydraulic R.H.	85 * 1
69-4040	Stop - Servo Piston	34 42 1	69-5980	Tube - Hydraulic L.H.	85 21 1
69-4060	Counterbalance Manifold	19 26 1	69-5990	Tube - Hydraulic	24 12 1
69-4070	Manifold - Counter Balance	21 14 1	69-5990	Tube - Hydraulic	86 53 1
69-4130	Plug - Orifice .047	21 39 2	69-6000	Tube - Hydraulic	24 11 1
69-4140	Plug - Orifice .120	21 38 1	69-6000	Tube - Hydraulic	86 49 1
69-4150	PTO Manifold Assembly	72 1 1	69-6010	Tube - Hydraulic	76 50 1
69-4220	Plug - Orifice	74 47 1	69-6020	Tube - Hydraulic	76 51 1
69-4280	Tube - Hydraulic Vent	23 33 1	69-6030	Tube - Hydraulic	27 35 1
69-4320	Fitting - Hydraulic 90°	81 8 1	69-6030	Tube - Hydraulic	86 46 1
69-4400	Carrier - Wing Deck	86 54 1	69-6040	Tube - Hydraulic	27 34 1
69-4780	Clamp - Gauge	13 23 2	69-6040	Tube - Hydraulic	86 50 1
69-5350	Hose - Air Cleaner Inlet	46 13 1	69-6050	Tube - Hydraulic	27 33 1
69-5360	Hose - Air Cleaner	46 17 1	69-6050	Tube - Hydraulic	86 51 1
69-5380	Hose - Upper Radiator	44 4 1	69-6060	Tube - Hydraulic	27 38 1
69-5390	Hose - Lower Radiator	44 10 1	69-6060	Tube - Hydraulic	86 47 1
69-5410	Manifold - Return	24 10 1	69-6070	Tube - Hydraulic	30 36 1
69-5430	Pulley - Idler	84 7 1	69-6070	Tube - Hydraulic	86 48 1
69-5430	Pulley-Idler	81 25 1	69-6080	Tube - Hydraulic	30 35 1
69-5440	Hose - Hydraulic	78 12 3	69-6080	Tube - Hydraulic	86 52 1
69-5440	Hose - Hydraulic	24 30 1	69-6100	Tube - Hydraulic Pressure	28 50 1
69-5440	Hose - Hydraulic	38 58 1	69-6120	Tube - Hydraulic	30 16 1
69-5450	Hose - Hydraulic	38 56 1	69-6130	Tube - Hydraulic	30 15 1
69-5460	Hose - Hydraulic	24 14 1	69-6140	Tube - Hydraulic	73 45 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
69-6140	Tube - Hydraulic R.H.	85 * 1	69-7170	Clevis - Deck	90 10 2
69-6150	Tube - Hydraulic	73 46 1	69-7210	Tube - Latch	88 5 2
69-6150	Tube - Hydraulic R.H.	85 * 1	69-7290	Mount - Ball Joint	80 5 2
69-6160	Tube - Hydraulic	73 11 1	69-7420	Axle - Rear	75 16 1
69-6170	Tube - Hydraulic	73 21 1	69-7570	Bracket - Front Engine	46 * 1
69-6170	Tube - Hydraulic L.H.	85 6 1	69-7580	Bracket - Front Engine	46 42 1
69-6180	Tube - Hydraulic	73 20 1	69-7650	Pedal - Traction	9 24 1
69-6180	Tube - Hydraulic L.H.	85 22 1	69-7700	Pedal - Brake	7 3 1
69-6190	Tube - Hydraulic	27 23 1	69-7700	Pedal - Brake	6 20 2
69-6200	Tube - Hydraulic	27 22 1	69-7720	Pawl - Brake	6 7 1
69-6240	Fitting - Hydraulic 90 _	25 3 2	69-7740	Support - Steering Gear	4 21 1
69-6250	Engine - Assembly _	46 9 1	69-7760	Link - Steering Gear	4 19 1
69-6260	Magnet	11 6 1	69-7790	Pin - Brake Arm	6 11 1
69-6260	Magnet - Cover	83 15 2	69-7810	Bracket - Valve	19 11 1
69-6260	Magnet - Cover	84 15 2	69-7840	Mount - Brake Arm	6 16 1
69-6260	Magnet - Cover	92 20 8	69-7880	Arm - Brake L.H.	6 23 1
69-6260	Magnet - Cover	81 32 4	69-7890	Arm - Brake R.H.	6 2 1
69-6270	Fork - Castor	80 24 2	69-7920	Support - Lift Arm L.H.	78 27 2
69-6340	Plate - Motor Mounting R.H.	92 * 1	69-7940	Support - Lift Arm R.H.	78 4 2
69-6360	Plate - Motor Mounting L.H.	92 3 1	69-7960	Support - Axle	75 12 2
69-6390	Plate - Gearbox	82 52 1	69-8040	Arm - Throttle	18 4 1
69-6420	Bar - Lift L.H.	90 18 1	69-8080	Cover - Tool Box	10 3 1
69-6470	Bushing - Flange	89 5 8	69-8110	Box - Tool	10 5 1
69-6470	Bushing - Flange	75 6 6	69-8160	Tower - Steering	4 31 1
69-6470	Bushing - Flange	90 16 20	69-8210	Support - Cover	11 26 1
69-6470	Bushing - Flange	80 26 4	69-8230	Bracket - Trim L.H.	43 17 1
69-6470	Bushing - Flange	78 29 4	69-8250	Bracket - Trim R.H.	43 20 1
69-6470	Bushing - Flange	85 30 4	69-8290	Frame - Battery	72 33 1
69-6480	Bar - Lift R.H.	90 * 1	69-8390	Pulley - Spindle	94 4 1
69-6490	Plate - Tension	81 43 1	69-8410	Screw - Cap Hex. Hd.	46 34 4
69-6550	Arm - Tension	81 38 1	69-8420	Washer - Lock	46 35 4
69-6610	Arm - Idler	81 23 1	69-8430	Hose - Hydraulic	57 39 1
69-6610	Idler Arm Assembly	84 27 1	69-8440	Hose - Hydraulic	78 9 1
69-6640	Hinge - Left Front	83 13 1	69-8440	Hose - Hydraulic	24 31 1
69-6670	Hinge - Left Rear	83 17 1	69-8450	Hose - Hydraulic	44 30 1
69-6690	Hinge - Right Front	84 28 1	69-8460	Fitting - Hydraulic Straight	57 37 1
69-6710	Hinge - Right Rear	84 23 1	69-8460	Fitting - Hydraulic Straight	47 55 2
69-6730	Skid	83 7 1	69-8470	Spring - Torsion	78 32 1
69-6730	Skid	90 21 4	69-8480	Spring - Compression	88 6 2
69-6730	Skid	84 29 1	69-8490	Bracket - Throttle Cable	46 36 1
69-6760	Shaft - Spindle	94 10 1	69-8500	Shim - Hinge Bracket	43 21 6
69-6780	Cover - Center Left	81 30 1	69-8510	Cover - Steering Tower	4 41 1
69-6790	Cover - Center Right	82 54 1	69-8520	Bracket - Hinge	43 28 2
69-6800	Cover - Inner L.H.	92 1 1	69-8590	Support - Radiator Upper	44 2 1
69-6810	Cover - Outer L.H.	92 16 1	69-8650	Cowl - Radiator	42 10 1
69-6820	Cover - Inner R.H.	92 * 1	69-8690	Support - Grille	42 15 1
69-6830	Cover - Outer R.H.	92 * 1	69-8750	Arm - Brake	7 1 1
69-6840	Cover - Right Wing	84 2 1	69-8790	Plate - Reinforcing	80 4 2
69-6850	Cover - Left Wing	83 22 1	69-8790	Plate - Reinforcing	90 4 2
69-6860	Washer - Castor	80 25 8	69-8830	Arm - Inside Castor	90 1 2
69-6860	Washer - Thrust	90 33 28	69-8860	Arm - Castor R.H.	80 7 1
69-6870	Plate - Magnet	84 3 2	69-8890	Cap - Spindle	75 13 2
69-6870	Plate - Magnet	92 18 8	69-8900	Spacer	28 52 2
69-6870	Plate - Magnet	83 21 2	69-8910	Washer	36 3 2
69-6870	Plate - Magnet	81 31 4	69-8910	Washer	28 51 4
69-6890	Spacer - Spring	81 47 1	69-8920	Washer	30 4 4
69-6900	Shaft - Hinge	83 14 1	69-8930	Washer	27 26 4
69-6900	Shaft - Hinge	84 20 1	69-8940	Washer	27 5 12
69-6920	Blade - 20"	94 12 1	69-8940	Washer	85 16 20
69-6960	Spacer - Idler	81 14 4	69-8950	Spacer	30 5 2
69-6960	Spacer - Idler	92 23 6	69-8960	Spacer	27 27 2
69-6970	Spacer - Idler	84 17 1	69-8970	Spacer	85 17 10
69-6970	Spacer - Idler	81 26 1	69-8970	Spacer	27 31 6
69-6980	Valve - Check	4 38 1	69-8980	Washer	30 30 8
69-6990	Lever - Valve Mid.	19 * 1	69-8990	Spacer	30 33 4
69-7000	Lever - Valve R.H.	19 * 1	69-9000	Spacer	85 9 4
69-7010	Lever - Valve L.H.	19 5 1	69-9010	Washer	85 10 8
69-7040	Holder - Cup	11 13 1	69-9020	Nut - Special	37 26 1
69-7100	Support - Radiator Lower	44 24 1	69-9030	Post - Neutral Device	9 14 1
69-7120	Grille - Upper	42 27 1	69-9040	Cam - Neutral Device	37 31 1
69-7150	Grille - Lower	42 23 1	69-9050	Bar - Neutral Device	37 45 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
69-9070	Bracket - Clamp	47 58 1	70-2820	Bolt	62 21 2
69-9100	Washer - Latch	88 7 2	70-2830	Bolt	62 20 3
69-9110	Rod - Engine Run Solenoid	46 49 1	70-2830	Bolt - Cap Hex. Hd.	61 17 2
69-9120	Rod - Hood Prop	72 5 1	70-2840	Bolt	62 17 1
69-9130	Bracket - Throttle	18 11 1	70-2850	Bolt	51 22 2
69-9140	Link - Valve Lever	19 6 3	70-2850	Bolt	63 42 4
69-9150	Shaft - Valve Lever	19 9 1	70-2860	Bolt	52 17 4
69-9180	Pin - Cylinder	78 17 2	70-2860	Bolt	51 33 1
69-9190	Bushing - Cylinder	85 38 2	70-2870	Bolt	54 1 4
69-9190	Tube - Cylinder Bushing	78 15 2	70-2880	Bolt	56 6 4
69-9200	Pin - Brake Pawl	6 8 1	70-2890	Bolt	51 15 2
69-9210	Lever - Brake Latch	6 4 1	70-2890	Bolt	55 34 1
69-9220	Support - Tube Clamp	25 17 2	70-2900	Bolt	58 18 11
69-9230	Shaft - Steering Pivot	4 2 1	70-2900	Bolt	51 19 1
69-9240	Roller - Cam	89 16 2	70-2910	Bolt	51 4 1
69-9250	Shaft - Roller	89 18 2	70-2920	Bolt	51 20 3
69-9260	Pin - Clevis	80 29 2	70-2930	Bolt	52 19 9
69-9290	Pad - Bumper	81 17 2	70-2930	Bolt	53 22 4
69-9300	Cushion - Rubber	89 8 2	70-2940	Bolt	48 12 2
69-9300	Cushion - Rubber	85 34 2	70-2950	Stud	51 30 4
69-9300	Cushion - Rubber	28 41 2	70-2960	Nut	62 23 2
69-9310	Plate - Lever	14 20 1	70-2970	Nut	54 4 8
69-9330	Cover	30 1 1	70-2980	Nut	62 39 4
69-9340	Rod - Brake	7 15 1	70-2990	Washer	52 3 1
69-9350	Bracket - Hood Prop Rod	72 2 1	70-2990	Washer	51 16 1
69-9360	Bracket - Fuel Filter	46 53 1	70-2990	Washer	57 28 4
69-9370	Louver - Top	42 6 2	70-2990	Washer	62 30 4
69-9390	Shaft - Pedal	9 11 1	70-3000	Pin	55 4 2
69-9400	Bracket - Hose Support	76 49 1	70-3010	O-Ring	60 23 1
69-9420	Muffler	46 11 1	70-3020	Ring	56 20 8
69-9430	Foam - Tool Box	10 4 1	70-3030	Tube	57 4 1
69-9440	Panel - Steering Tower	4 4 1	70-3040	Hose	61 14 1
69-9450	Bracket - Wing Hose L.H.	85 7 1	70-3050	Bolt	54 28 1
69-9460	Bracket - Wing Hose R.H.	85 * 1	70-3060	Gasket	61 1 2
69-9470	Cover - Access	28 63 1	70-3070	Gasket	57 33 1
69-9480	Bracket - Neutral Device	37 28 1	70-3080	Gasket	55 23 1
69-9520	Panel - Rear	43 9 1	70-3080	Gasket	57 36 1
69-9530	Bracket - Air Cleaner	46 29 1	70-3090	Clamp	57 3 1
69-9540	Bracket - Steering Gear	4 18 1	70-3090	Clamp - Hose	61 13 2
69-9550	Plate - Adapter	46 31 1	70-3100	Plug	53 13 1
69-9560	Housing - Control	11 1 1	70-3110	Plug - Drain	58 11 1
69-9570	Front Lift Arm Assy. R.H.	78 43 1	70-3120	Plug	55 22 1
69-9580	Front Lift Arm Assy. L.H.	78 39 1	70-3130	Gasket	59 4 1
69-9650	Screen - Cowl	42 9 2	70-3140	Pipe	62 36 1
69-9680	Shaft - Latch	88 10 2	70-3150	Pipe	62 37 1
69-9700	Mount - Rubber	90 5 8	70-3160	Screw	54 5 8
69-9710	Nut - Lock	47 63 4	70-3170	Nut	56 11 1
69-9720	Strip - Sealing	42 28 2	70-3180	Clamp	62 18 3
69-9721	Strip - Sealing	42 18 3	70-3190	Clamp	62 19 3
69-9722	Trim - Sealing	42 35 1	70-3200	Washer	63 50 1
69-9723	Seal - Hood Bottom	43 15 2	70-3210	Packing	63 48 4
69-9724	Seal - Hood Front	43 29 1	70-3220	O-Ring	57 2 1
69-9730	Switch - Toggle	14 18 1	70-3230	Plug	58 14 1
69-9740	Switch - Toggle	14 14 1	70-3230	Plug	53 15 1
69-9760	Plate - Cover	30 10 3	70-3240	Plug	63 51 1
69-9761	Plate - Clamp	72 36 1	70-3250	Bolt	63 47 2
69-9761	Plate - Cover	85 13 1	70-3260	Armature Assembly	49 12 1
69-9761	Plate - Cover	30 14 5	70-3270	Spring - Brush	49 18 4
69-9761	Plate - Cover	24 43 3	70-3280	Cover Assembly Front	49 6 1
69-9761	Plate - Cover	47 78 1	70-3290	Brush Holder Assembly	49 17 1
69-9800	Tire	32 28 2	70-3300	Yoke Assembly	49 19 1
69-9810	Joint - Ball	77 2 1	70-3310	Bolt Set	49 14 1
69-9880	Tire	75 22 2	70-3320	Bearing	50 8 1
69-9940	Nut - Jam	32 40 4	70-3330	Bearing	49 13 1
69-9950	Spring - Extension	32 37 4	70-3340	Connector	61 11 1
69-9960	Link	32 36 4	70-3340	Connector	57 34 1
69-9970	Stud	32 35 4	70-3350	Cap	55 11 6
69-9980	Ball	32 39 6	70-3360	Cap	53 16 4
69-9990	Disc - Actuating	32 38 4	70-3370	Cap	55 25 3
70-2800	Pulley Assembly	50 2 1	70-3380	Cap	53 19 15
70-2810	Spring - Return	50 14 2	70-3390	Plug	53 17 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
70-3400	Plug	55 6 6	70-4100	Plate — 0.5	64 * A/R
70-3410	Plug	55 13 1	70-4110	Plate — 0.15	64 * A/R
70-3420	Clip	57 5 1	70-4120	Capsule	66 30 1
70-3430	Clamp — Hose	61 5 3	70-4130	Housing	66 3 1
70-3440	Clamp — Hose	61 9 1	70-4140	Stopper	66 27 1
70-3450	V-Belt	51 1 1	70-4150	Gasket	66 6 1
70-3460	Washer	62 40 8	70-4160	Gasket	66 1 1
70-3470	Washer — Drain Plug	58 10 1	70-4170	Flyweight Assembly	67 71 1
70-3480	Stud	61 4 6	70-4180	Nut	67 69 1
70-3490	Cover	65 41 1	70-4190	Sleeve	67 68 1
70-3500	Holder	65 50 4	70-4200	Plate	67 67 1
70-3510	Stopper	65 49 4	70-4210	Plate	66 8 1
70-3520	Spring	65 48 4	70-4220	Swiveling Lever Assembly	66 12 1
70-3530	Gasket	65 46 4	70-4230	Bushing	66 21 2
70-3540	Valve Assembly	65 45 4	70-4240	E-Ring	67 59 1
70-3550	Element Assembly	65 44 4	70-4250	Tension Lever Assembly	66 19 1
70-3560	Pinion	64 12 4	70-4260	Adapter Assembly	67 * 1
70-3570	Screw	64 11 4	70-4270	Screw	67 60 1
70-3580	Sleeve	64 13 4	70-4280	Spring	67 62 1
70-3590	Seat	64 14 4	70-4290	Adapter	67 63 1
70-3600	Spring	64 15 4	70-4300	Nut	67 58 1
70-3610	Seat	64 16 4	70-4310	Nut	66 32 1
70-3620	Body	64 19 4	70-4320	Lever Assembly	66 17 1
70-3630	Tappet Assembly	65 * 1	70-4330	Bushing	66 38 1
70-3640	Pin	64 18 4	70-4340	Shackle Assembly	66 18 1
70-3650	Bushing	64 20 4	70-4350	Shaft	66 24 1
70-3660	Roller	64 21 4	70-4360	Plug	66 23 2
70-3670	Plug	64 22 4	70-4370	Spring	66 13 1
70-3680	Camshaft	65 30 1	70-4380	Spring	66 16 1
70-3690	Ring	64 8 1	70-4390	Screw	67 56 1
70-3700	Ring	65 38 1	70-4400	Cover	66 25 1
70-3710	Plate — 0.10	64 7 A/R	70-4410	Pin	67 57 1
70-3720	Plate — 0.12	64 * A/R	70-4420	Bushing	67 53 1
70-3730	Plate — 0.14	64 * A/R	70-4430	Screw	67 73 1
70-3740	Plate — 0.16	64 * A/R	70-4440	Nut	66 33 1
70-3750	Plate — 0.18	64 * A/R	70-4450	Nut	66 34 1
70-3760	Plate — 0.50	64 * A/R	70-4460	Plate	66 45 1
70-3770	Plate — 0.30	64 * A/R	70-4470	Lever	67 55 1
70-3780	Plate — 0.1	65 37 A/R	70-4480	Shaft	67 54 1
70-3790	Plate — 0.15	65 * A/R	70-4490	Cup	66 49 1
70-3800	Plate — 0.3	65 * A/R	70-4500	Spring	66 46 1
70-3810	Plate — 0.5	65 * A/R	70-4510	Spring	66 48 1
70-3820	Cover	65 35 1	70-4520	Spring	66 47 1
70-3830	Gasket	65 31 1	70-4530	Cover	66 51 1
70-3840	Rack	64 2 1	70-4540	Slider	67 64 1
70-3850	Screw	65 42 1	70-4550	Plate	66 40 1
70-3860	Washer	64 3 2	70-4560	Adjusting Lever Assembly	66 43 1
70-3870	Washer	65 40 2	70-4570	Stop Lever Assembly	66 50 1
70-3870	Washer	68 12 4	70-4580	Cap	66 20 1
70-3880	Plate	64 1 2	70-4590	Plug	66 5 1
70-3890	Washer	66 31 2	70-4600	Housing Assembly	68 11 1
70-3900	Packing	64 9 2	70-4610	Valve	68 5 2
70-3910	Washer	65 25 2	70-4620	Spring	68 4 2
70-3920	Cover Assembly	65 * 1	70-4630	Gasket	68 3 2
70-3930	Gasket	64 5 1	70-4640	Support	68 20 1
70-3940	Plate	65 28 2	70-4650	Pump Assembly	68 2 1
70-3950	Screw	64 10 2	70-4660	Rod, Blue Small Dia.	68 19 A/R
70-3960	Valve	64 4 1	70-4670	Rod, Red Small Dia.	68 * A/R
70-3970	Plate — 0.6	64 17 A/R	70-4680	Rod, Yellow Small Dia.	68 * A/R
70-3980	Plate — 0.7	64 * A/R	70-4690	Rod, Green Small Dia.	68 * A/R
70-3990	Plate — 0.8	64 * A/R	70-4700	Rod, White Small Dia.	68 * A/R
70-4000	Plate — 0.9	64 * A/R	70-4710	Rod, Brown Big Dia.	68 * A/R
70-4010	Plate — 1.0	64 * A/R	70-4720	Piston	68 18 1
70-4020	Plate — 1.1	64 * A/R	70-4730	Tappet	68 7 1
70-4030	Plate — 1.2	64 * A/R	70-4740	Roller	68 8 1
70-4040	Plate — 1.3	64 * A/R	70-4750	Pin	68 10 1
70-4050	Plate — 1.4	64 * A/R	70-4760	Block	68 6 2
70-4060	Plate — 0.1	64 * A/R	70-4770	Spring	68 17 1
70-4070	Plate — 0.2	64 * A/R	70-4780	Plug	68 15 1
70-4080	Plate — 0.3	64 * A/R	70-4790	Filter	68 13 1
70-4090	Plate — 0.4	64 * A/R	70-4800	Screw	68 14 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
70-4810	Body Assembly	62 8 4	70-5432	Bearing — Rod U.S. 0.50mm	56 * 4
70-4820	Pin	62 5 4	70-5433	Bearing — Rod U.S. 0.75mm	56 * 4
70-4830	Spring	62 6 4	70-5440	Pulley	56 13 1
70-4840	Nut	62 1 4	70-5450	Idler Assembly	52 9 1
70-4850	Washer 2.15 mm	62 * A/R	70-5460	Gasket	59 9 1
70-4860	Washer 1.00 mm	62 7 A/R	70-5470	Manifold	59 10 1
70-4870	Washer 1.05 mm	62 * A/R	70-5480	Pipe — Oil	61 16 1
70-4880	Washer 1.10 mm	62 * A/R	70-5490	Pipe — Oil	61 15 1
70-4890	Washer 1.275 mm	62 * A/R	70-5500	Strainer	57 31 1
70-4900	Washer 1.325 mm	62 * A/R	70-5510	Gasket	57 19 1
70-4910	Washer 1.775 mm	62 * A/R	70-5520	Union	57 22 1
70-4920	Washer 0.95 mm	62 * A/R	70-5530	Bracket Assembly	57 23 1
70-4930	Packing	62 4 4	70-5540	Oil Filter Assembly	57 * 1
70-4940	Housing Assembly	65 43 1	70-5550	Gasket	57 20 1
70-4950	Hose — 90° Elbow	61 8 1	70-5560	Gage	58 13 1
70-4960	Clamp — R	61 21 1	70-5570	Breather	57 1 1
70-4970	Gasket	61 19 1	70-5570	Breather	53 21 1
70-4980	Bolt — Cap Hex Hd.	61 2 1	70-5580	Stay	57 6 1
70-4990	Spring	54 17 8	70-5590	Connector	51 41 1
70-5000	Retainer	54 18 8	70-5600	Water Pump Assembly	51 5 1
70-5010	Tappet	54 11 8	70-5610	Impeller	51 11 1
70-5020	Gear — Camshaft	52 8 1	70-5620	Connector	51 9 1
70-5020	Gear — Camshaft	54 22 1	70-5630	Shaft	51 26 1
70-5030	Pipe	57 35 1	70-5640	Bracket	51 12 1
70-5040	Hose	51 43 1	70-5650	Gasket	51 7 1
70-5050	Cover	51 39 1	70-5660	Gasket	51 17 1
70-5060	Joint	62 27 1	70-5670	Stay	51 13 1
70-5070	O-Ring	62 35 1	70-5680	Pulley	51 29 1
70-5080	Bushing	54 6 8	70-5690	Elbow	51 36 1
70-5090	Gasket	53 20 1	70-5700	Fuel Feed Pump	62 25 1
70-5100	Gasket	57 7 1	70-5710	Fuel Filter Assembly	63 * 1
70-5110	Washer	54 31 2	70-5720	Bracket	63 49 1
70-5120	Bolt	57 32 1	70-5730	Filter Element Assembly	62 38 1
70-5130	Gasket	53 11 1	70-5740	Plate	48 2 1
70-5140	Plug	53 5 1	70-5750	Bracket	48 10 1
70-5150	Rocker Assembly — Intake	54 32 4	70-5760	Alternator Assembly	48 1 1
70-5160	Rocker Assembly — Exhaust	54 27 4	70-5770	Lever	62 22 1
70-5170	Pipe	54 29 1	70-5780	Seal	52 13 1
70-5180	Rocker Shaft Assembly	54 8 1	70-5790	Case	52 4 1
70-5190	Spring	54 7 3	70-5800	Pin	56 7 2
70-5200	Bracket	54 33 4	70-5810	Plate	56 14 1
70-5230	Rod — Push	54 10 8	70-5820	Cone	56 12 1
70-5240	Seal	55 15 4	70-5830	Gear — Crankshaft	52 12 1
70-5250	Plate	55 31 1	70-5840	Oil Pump Assembly	57 14 1
70-5260	Gasket	55 39 1	70-5850	Cover	57 18 1
70-5270	Cover	57 8 1	70-5860	Starter Assembly	48 7 1
70-5280	Sleeve	55 41 4	70-5870	Insert — Exhaust	53 9 4
70-5290	Hanger	55 40 1	70-5880	Insert — Inlet	53 10 4
70-5300	Bolt	55 19 10	70-5890	Flange	53 6 1
70-5310	Fitting — 90° Elbow	61 12 1	70-5900	Cylinder Head Assembly	53 8 1
70-5320	Pin	55 30 2	70-5910	Valve — Inlet	54 20 4
70-5330	Gasket	58 5 1	70-5920	Valve — Exhaust	54 19 4
70-5340	Valve	55 32 4	70-5930	Spring	54 16 8
70-5350	Bearing — Main (Std.)	55 14 10	70-5940	Camshaft	54 21 1
70-5351	Bearing — Main U.S. 0.25mm	55 14 10	70-5950	Connector	55 12 1
70-5352	Bearing — Main U.S. 0.50mm	55 14 10	70-5960	Crankcase Assembly	55 1 1
70-5353	Bearing — Main U.S. 0.75mm	55 14 10	70-5970	Housing	58 1 1
70-5360	Plate — Thrust (Std.)	55 20 3	70-5980	Piston (Std.)	56 22 4
70-5361	Plate — Thrust O.S. 0.15mm	55 20 3	70-5981	Piston — O.S. 0.25mm	56 * 4
70-5362	Plate — Thrust O.S. 0.30mm	55 20 3	70-5982	Piston — O.S. 0.50mm	56 * 4
70-5363	Plate — Thrust O.S. 0.45mm	55 20 3	70-5990	Connecting Rod — Std.	56 1 4
70-5370	Gasket	52 5 1	70-6000	Bushing	56 2 4
70-5380	Pan — Oil	58 7 1	70-6010	Bolt	56 19 8
70-5390	Gasket	58 6 1	70-6020	Crankshaft Assembly	56 18 1
70-5400	Ring Set — Std.	56 23 4	70-6030	Flywheel Assembly	56 4 1
70-5401	Ring Set — O.S. 0.25mm	56 * 4	70-6040	Gear — Injection Pump	52 11 1
70-5402	Ring Set — O.S. 0.50mm	56 * 4	70-6050	Manifold	59 5 1
70-5410	Pin	56 21 4	70-6060	Gasket	59 8 1
70-5420	Nut	56 10 8	70-6070	Pipe	61 7 1
70-5430	Bearing — Rod (Std.)	56 8 8	70-6080	Hose	61 6 1
70-5431	Bearing — Rod U.S. 0.25mm	56 * 4	70-6090	Elbow	59 3 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
70-6100	Pipe - No. 2	62 12 1	70-6790	Packing	66 28 1
70-6110	Pipe - No. 4	62 14 1	70-6800	E-Ring	64 23 4
70-6120	Pipe	63 41 1	70-6810	E-Ring	66 11 2
70-6130	O-Ring	62 33 1	70-6820	Ring	68 9 1
70-6140	Washer	63 43 4	70-6830	Pin	62 3 8
70-6150	Gasket	63 45 4	70-6840	Bearing	65 36 1
70-6160	Nozzle Assembly	63 46 4	70-6850	Bearing	64 6 2
70-6170	Nozzle Tip Assembly	62 2 4	70-6860	Key	66 14 1
70-6180	Injection Pump	62 26 1	70-6870	Key	66 2 1
70-6190	Pipe - No. 1	62 11 1	70-6880	Key	65 29 1
70-6200	Pipe - No. 3	62 13 1	70-6890	O-Ring	66 52 1
70-6210	Flange	62 34 1	70-6900	O-Ring	65 26 1
70-6220	Gland	63 44 4	70-6910	O-Ring	65 47 4
70-6230	Coupling Assembly	60 17 1	70-6920	Seal	66 44 1
70-6240	Gasket	61 10 1	70-6930	Screw	64 24 1
70-6250	Gasket	59 11 1	70-6940	Screw	68 1 1
70-6250	Gasket	61 20 1	70-6940	Screw	65 39 1
70-6260	Plate	60 21 1	70-6990	Level Sensing Unit Assembly	22 2 1
70-6270	O-Ring	60 7 1	71-0060	Support - Foam	43 8 1
70-6280	Deflector	60 9 1	71-0210	Foam - Radiator Seal	44 13 1
70-6290	Insert	60 8 1	71-0220	Foam - Louver Lower	42 11 1
70-6300	Ring	60 6 1	71-0230	Foam - Louver Middle	42 7 1
70-6310	Ring	60 10 1	71-0240	Foam - Louver Top	42 5 2
70-6320	Wheel	60 5 1	71-0250	Foam - Hood Top	43 2 1
70-6330	Nut	60 4 1	71-0260	Foam - Hood Side L.H.	43 3 1
70-6340	Cover	60 3 1	71-0270	Foam - Hood Side R.H.	43 1 1
70-6350	Ring	60 20 1	71-0280	Foam - Cowl Top	42 3 1
70-6360	Plate	60 2 1	71-0290	Foam - Cowl Bottom	42 29 1
70-6370	Bearing	60 14 2	71-0300	Foam - Low Front Cowl L.H.	42 17 1
70-6380	Bearing	60 12 1	71-0310	Foam - Low Front Cowl R.H.	42 * 1
70-6390	Ring	60 15 2	71-0320	Foam - Low Rear Cowl R.H.	42 * 1
70-6400	Ring	60 18 1	71-0330	Foam - Low Rear Cowl L.H.	42 30 1
70-6410	Sleeve	60 11 1	71-0340	Foam - Rad. Support L.H.	44 36 1
70-6420	Ring	60 13 1	71-0350	Foam - Rad. Support R.H.	44 1 1
70-6430	Turbocharger Assembly	59 12 1	71-0360	Foam - Rad. Support Top	44 3 1
70-6440	Cartridge Assembly	60 * 1	71-0370	Foam - Lower Rad. Support	44 34 2
70-6450	Housing	60 16 1	71-0380	Foam - Rad. Support Front	44 42 1
70-6460	Bearing Housing Assembly	60 22 1	71-0390	Foam - Rad. Support Rear	44 44 1
70-6470	Shaft & Turbine Wheel Assy.	60 19 1	71-0400	Foam - Side Panel	43 14 2
70-6480	Pin	66 15 1	71-0410	Cover - Abrasive	10 2 1
70-6490	Ring	67 66 1	71-0420	Floor - Abrasive	28 66 1
70-6500	O-Ring	66 37 1	71-0430	Cover - Abrasive	28 64 1
70-6510	O-Ring	66 22 2	71-0440	Abrasive - Pedal Front	9 25 1
70-6520	Bolt	66 10 1	71-0450	Abrasive - Pedal Rear	9 29 1
70-6520	Bolt & Washer	66 29 3	71-0470	Disc - Middle	32 19 4
70-6530	Bolt	66 7 5	71-0480	Suspension Assembly	3 * 1
70-6540	Bolt	65 32 4	71-0540	Column - Steering	4 27 1
70-6550	Bolt	66 9 1	71-2170	Pin	3 22 1
70-6560	Nut	67 72 2	71-2180	Bearing	3 2 4
70-6570	Washer - 0.1	67 61 A/R	71-2190	Pin	3 3 1
70-6580	Washer - 0.25	67 * A/R	71-2200	Bracket - Swing Arm	3 33 1
70-6590	Washer - 0.5	67 * A/R	71-2210	Pin	3 13 1
70-6600	Washer - 0.2	67 * A/R	71-2220	Pin	3 16 1
70-6610	Washer - 0.2	67 65 A/R	71-2230	Ring - Snap	3 14 1
70-6620	Washer - 0.3	67 * A/R	71-2240	Knob Assembly	3 15 1
70-6630	Washer - 0.4	67 * A/R	71-2250	Bracket - Spring	3 18 1
70-6640	Washer - 0.1	67 * A/R	71-2260	Spring	3 27 2
70-6650	Washer - 1.0	67 * A/R	71-2270	Nut - Special	3 23 1
70-6660	Washer - 1.0	67 * A/R	71-2280	Band - Weight Indicator	3 10 1
70-6670	Washer	67 70 1	71-2290	Bearing - Triple	3 4 1
70-6680	Washer	65 34 1	71-2300	Bumper	3 9 2
70-6690	Washer	66 35 2	71-2310	Plate - Lower Suspension	3 8 1
70-6700	Washer	68 16 1	71-2320	Pin	3 21 2
70-6710	Washer	66 4 1	71-2330	Ring - Snap	3 19 2
70-6720	Stud	65 27 3	71-2340	Absorber - Shock	3 20 1
70-6730	Bolt	66 42 1	71-2380	Washer	2 7 2
70-6740	Bolt	66 26 2	71-2390	Rivet - Pop	2 8 2
70-6750	Bolt	66 41 4	71-2400	Assembly - Bumper	2 6 2
70-6760	Bolt & Washer	66 39 2	71-2410	Plate - Upper Suspension	2 5 1
70-6770	Nut	66 36 1	71-2420	Bellows - Rubber	2 12 1
70-6780	Nut	65 33 1	71-2430	Plate - Rear	11 16 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
71-2450	Cover — Access	27 24 1	76-2750	Hydraulic Hose Assembly	81 2 1
71-2460	Plate — Control	14 5 1	76-2760	Hydraulic Hose Assembly	81 1 1
71-2470	Rim	32 29 2	76-2770	Hydraulic Hose Assembly	81 6 1
71-2530	Bearing Assembly	94 6 1	76-4590	Screw	34 16 6
71-2550	Washer — Latch Shaft	88 9 2	76-4590	Screw	40 27 6
71-2560	Support — Bulkhead	30 38 2	76-4600	Gasket — Cover	40 38 1
71-2570	Shaft — Pivot	78 3 1	76-4600	Gasket — Front Cover	34 26 1
71-2580	Shaft — Lift Arm Pivot	85 26 2	76-4610	Cover	40 33 1
71-2590	Shaft — Pivot	75 5 1	76-4610	Cover — Front	34 15 1
71-2590	Shaft — Pivot	78 24 1	76-8750	Plate — Caution	44 45 2
71-2600	Tube — Anti — Sway	89 11 2	77-0950	Washer — Castor	91 41 8
71-2610	Shaft — Deck Pivot	90 15 2	77-2830	Rod — Spring	81 44 1
71-2620	Shaft — Lift Arm Elbow	89 23 2	77-2990	Cable — Throttle	18 8 1
71-2680	Hose — Vent	23 31 1	80-0160	Tray — Battery	72 18 1
71-2680	Hose — Vent	45 53 1	80-4890	Decal — Service	11 32 1
71-2690	Hose — Fuel	70 7 1	80-9330	Alarm — Audio	11 3 1
71-3810	Coupling — Hydraulic Motor	32 34 2	82-4910	Roller	83 27 1
71-3830	Bellcrank — Brake	36 21 2	82-4910	Roller	84 36 1
71-3850	Cover — Housing	36 15 2	82-6330	Cowl — Radiator, Optional	42 * 1
71-3860	Clevis	36 28 2	82-7820	Seat — Brake, Tube	36 13 2
71-3870	Gasket	36 14 2	82-7830	Screw — Bleed, Brake	36 11 2
71-3880	Clevis — Brake Cable	32 15 2	82-7840	Piston — Brake	36 7 2
71-3880	Clevis — Brake Cable	36 23 2	82-7850	Spring — Compression	36 4 2
71-3900	Gasket	36 25 2	82-7900	Shaft — Arm	89 34 2
71-3910	Collar	36 34 2	82-7930	Arm — Anti—Sway L.H.	89 14 1
71-3990	Cap — Brake Housing	32 20 2	82-7940	Arm — Anti—Sway R.H.	89 * 1
71-4010	Housing — Brake	32 13 2	82-9060	Track & Latch — Adjustment	2 4 1
71-4060	Rod — Brake Latch	4 40 1	83-4330	Assy. — Tube, Traction LH	28 82 1
71-4130	Support — Control	11 17 1	83-4330	Tube — Hydraulic L.H.	32 8 1
71-4170	Switch — Toggle	14 19 1	83-4340	Assy. — Tube, Traction RH	28 83 1
71-4200	Cluster — Warning Light	13 6 1	83-4340	Tube — Hydraulic R.H.	32 * 1
71-4210	Cluster — Warning Light	13 4 1	83-6630	Shim — Switch	1 5 2
71-4250	Spacer	13 20 2	83-6640	Sensor — Switch	1 8 1
71-4280	Sending Unit — Oil Pressure	47 61 1	83-6660	Support — Seat	2 11 1
72-4070	Decal — Danger	33 47 2	83-6690	Plate — Seat	1 15 1
72-4080	Decal — Danger	72 37 1	83-6700	Plate — Suspension	1 9 1
72-4080	Decal — Danger	28 71 2	83-8350	Fitting — Traction, L.H.	27 20 1
72-4310	Switch — Ball	78 11 1	83-8360	Fitting — Traction, R.H.	28 73 1
72-4310	Switch — Lift	85 32 2	83-8370	Plate — Clamp	28 74 1
72-9550	Stud — Fuel Tank	22 17 1	85-4491	Holder — Indicator, Light	11 37 1
72-9760	Switch	14 15 2	85-4750	Display — Diagnostic	12 2 1
74-0720	Tube — Manual	2 1 1	85-6140	Spring	1 16 1
74-2170	Cylinder — Lift	86 43 2	85-6150	Tube — Hyd. R.H. Branch	32 * 1
74-2180	Ring — Steel	87 9 1	85-6150	Tube — Hydraulic	27 30 1
74-2190	Cushion	87 10 1	85-6160	Pin — Spring	1 10 1
74-2200	Head	87 4 1	85-6190	Link — Deck Tilt	27 1 1
74-2210	Piston	87 12 1	85-6210	Bracket — Rear Eng. Mount	46 37 2
74-2220	Collar	87 2 1	85-6230	Assembly — Solenoid Valve	71 * 1
74-2230	Shaft/Clevis	87 1 1	85-6230	Solenoid — Engine Run	46 45 1
74-2270	Fitting — Suction	25 23 1	85-6260	Level Sensing Unit	23 3 1
74-2510	Tube — Hydraulic L.H.	7 13 1	85-6280	Spring — Return	71 3 1
74-2520	Tube — Hydraulic R.H.	7 14 1	85-6290	Boot — Rubber	71 2 1
74-2530	Tube — Hydraulic	7 11 1	85-6300	Assembly — Plunger	71 1 1
74-2660	Hose — Hydraulic Return	24 34 1	86-7350	Seal Repair Kit	87 * 1
74-2680	Bracket — Bulkhead	86 45 1	86-7350	Seal Repair Kit	79 * 1
74-2700	Rod — Control	9 16 1	86-7410	Plate — Gage	13 5 1
74-2710	Clamp Half — Hydraulic Line	89 2 4	86-7480	Spring — Compression	81 48 1
74-2730	Tube — Clamp	89 31 4	86-8100	Joint — Ball	88 19 2
75-0540	Tether — Cap, Reservoir	23 27 1	86-8100	Joint — Ball	78 37 2
75-9460	Bracket — Sealing L.H.	42 19 1	86-8101	Joint — Ball	88 22 2
75-9470	Bracket — Sealing R.H.	42 25 1	88-6760	Spring — Gas	43 19 2
75-9480	Bracket — Sealing Bottom	42 22 1	88-6770	Stud — Ball	43 18 2
75-9670	Fork — Castor	90 32 8	88-6770	Stud — Ball	45 56 2
75-9790	Arm — Pivot	80 10 2	88-9190	Solenoid Coil Assembly	73 23 3
76-0980	Pipe — Exhaust	46 10 1	88-9260	Bracket — Roller RH	84 38 1
76-1670	Spring — Extension	84 25 1	88-9270	Bracket — Roller LH	83 29 1
76-1670	Spring — Extension	78 33 1	88-9420	Wire Harness Assembly	11 * 1
76-1670	Spring — Extension	81 36 1	88-9430	Decal — Fuse	11 5 1
76-2060	V—Belt	83 * 1	88-9450	Bracket — Hood Cylinder	44 37 2
76-2060	V—Belt	84 * 1	92-1179	Cushion — Seat	1 17 1
76-2060	V—Belt	92 * 6	92-1180	Assembly — Seat	1 1 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-1741	Tube - Hydraulic	32 42 1	93-5963	Tube - w/Valve	80 39 2
92-1742	Tube - Hydraulic	24 40 1	93-5973	10" Foam Filled Tire Asm.	95 2 1
92-1742	Tube - Hydraulic L.H.	32 12 1	93-5980	Hub	80 36 2
92-1753	Coupling - Spring Centering	46 26 1	93-5980	Hub	91 43 8
92-1771	Board - Instrument	13 16 1	93-5999	13" Foam Filled Tire Asm.	95 10 1
92-1772	Hood Assembly	43 4 1	93-7037	Switch	7 22 1
92-1792	Repair Kit	77 * 1	93-7037	Switch	38 61 1
92-2351	Fitting - Tank Return	24 36 1	93-7038	Switch	28 77 1
92-2352	Hose - Hydraulic	24 35 1	93-7039	Bracket - Service Brake	7 21 1
92-3048	Solenoid Coil Kit	28 54 3	93-7176	Fitting - 45° ORFS	33 48 2
92-3162	Bushing - Flange	81 28 4	93-7177	Assy. - Tube, Traction L.H.	27 19 1
92-4087	Decal - Diagnostic V2.0	12 1 1	93-7177	Tube - Hydraulic, LH	33 50 1
92-4094	Roller - Latch	88 16 4	93-7178	Assy. - Tube, Traction R.H.	27 21 1
92-4804	Block - Latch Pivot	88 11 2	93-7178	Tube - Hydraulic, RH	33 * 1
92-4805	Cam - Spring Trip	88 21 2	93-7179	Tube - Hydraulic	30 27 1
92-4806	Pin - Latch	88 13 8	93-7187	Yoke - Engine End	37 8 1
92-4806	Pin - Latch	78 30 1	93-7188	Shaft - Slip Yoke	37 6 1
92-4807	Tube - Hyd. R.H. Run	32 * 1	93-7189	Yoke - Pump End	37 3 1
92-4807	Tube - Hydraulic	24 4 1	93-7190	Kit - Universal Joint	37 7 2
92-4967	Tube - Hydraulic	27 9 1	93-7191	Tube - Slip Yoke	37 4 1
92-4967	Tube - Hydraulic	21 17 1	93-7192	Hose - Diagnostic	28 81 1
92-4970	Hose - Hydraulic	23 37 1	93-7192	Hose - Hydraulic Diagnostic	21 25 1
92-4970	Hose - Hydraulic	28 80 1	93-7193	Hose - Diagnostic	28 70 1
92-4971	Hydraulic Cylinder Assembly	78 7 2	93-7193	Hose - Hyd. Diagnostic	29 7 1
92-4997	Cable - Positive	72 12 1	93-7252	Decal - CE	80 41 1
92-5720	Controller	11 22 1	93-7252	Decal - CE	4 48 1
92-7301	Spacer	1 19 2	93-7252	Decal - CE	91 48 2
92-8003	Housing - Actuator, R.H.	36 12 1	93-7273	Decal - Danger (Europe)	90 39 4
92-8004	Housing - Actuator, L.H.	36 * 1	93-7273	Decal - Danger (Europe)	83 25 1
92-8661	Tab	11 34 3	93-7273	Decal - Danger (Europe)	84 31 1
92-8664	Lift Arm Assembly L.H.	85 33 1	93-7417	Gasket	36 33 2
92-8665	Lift Arm Assembly R.H.	85 * 1	93-7418	Cap - Actuator	36 36 2
92-8753	Catch - Magnetic	1 6 1	93-7422	Hose - Hyd. Diagnostic	29 5 1
92-9701	Shaft - Cruise Control	9 3 1	93-7422	Hose - Hydraulic	27 11 1
92-9730	Cap - End	5 18 1	93-7423	Hose - Diagnostic	73 44 2
92-9732	Plate - Wear	5 14 1	93-7423	Hose - Hyd. Diagnostic	29 9 2
92-9735	Screw - Cap	5 19 7	93-7424	Hose - Diagnostic	28 69 1
92-9748	Valve - Power Steering	4 28 1	93-7424	Hose - Hydraulic	37 50 1
92-9749	Seal Kit	5 * 1	93-7425	Hose - Hyd. Diagnostic	29 10 1
92-9800	Spacer - Spindle	94 11 1	93-7426	Tube - Hydraulic	27 39 1
93-0307	Nut - Retainer	76 53 2	93-7426	Tube - Hydraulic	78 44 1
93-0309	Washer	75 25 2	93-7427	Tube - Hydraulic	78 47 1
93-0310	Spindle - Wheel R.H.	75 * 1	93-7637	Key - Square	93 8 1
93-0311	Spindle - Wheel L.H.	75 17 1	93-7815	Decal - Danger (Europe)	83 24 1
93-1397	Valve - Flow Control	78 46 1	93-7815	Decal - Danger (Europe)	90 27 2
93-3102	Cap - Fuel	22 10 1	93-7815	Decal - Danger (Europe)	84 32 1
93-3103	Cap - Hydraulic	23 36 1	93-7824	Decal - Danger (Europe)	82 60 1
93-3219	Pump Drive Shaft Assembly	38 * 1	93-7824	Decal - Danger (Europe)	83 23 1
93-3681	Cover	53 1 1	93-7824	Decal - Danger (Europe)	90 37 2
93-3682	Gasket	53 2 1	93-8457	Hex.-Belt - Deck Drive	82 * 1
93-4237	Bearing	95 7 4	93-9320	Plate - Valve L.H.	40 40 1
93-4237	Bearing	80 14 8	93-9321	Plug - Orifice	41 75 1
93-4237	Bearing	90 29 16	93-9322	Variable Displacement Pump	37 1 1
93-4239	Rim - Wheel	80 35 4	93-9324	Pivot - Idler	84 41 1
93-4240	10" Wheel - Pneumatic	90 30 8	93-9324	Pivot - Idler	82 61 1
93-4240	10" Wheel - Pneumatic	80 12 2	93-9337	Bracket - Switch	7 28 1
93-4241	Spacer	80 13 2	93-9337	Bracket - Switch	37 35 1
93-4241	Spacer	90 28 8	93-9912	Grommet	89 30 2
93-4241	Spacer - Bearing, Inner	95 4 1	93-9917	Asm. - Hose, Hydraulic	92 9 2
93-4242	Plate	80 33 2	93-9918	Asm. - Hose, Hydraulic	92 8 2
93-4242	Plate	91 46 8	93-9919	Asm. - Hose, Hydraulic	92 29 2
93-4243	Tire - 10"	80 34 2	93-9922	Spacer	86 61 2
93-4243	Tire - 10"	91 42 8	93-9925	Lift Arm Assembly R.H.	89 * 1
93-4244	Tube - w/Valve	80 37 2	93-9926	Lift Arm Assembly L.H.	89 25 1
93-4244	Tube - w/Valve	91 45 8	93-9928	Clamp - Hose	89 28 2
93-4382	Bracket - Muffler	46 18 1	93-9941	Arm - Outer Lift R.H.	89 * 1
93-5452	Wheel - Pneumatic, 13"	80 23 2	93-9942	Arm - Outer Lift L.H.	89 10 1
93-5508	Tire - 13"	80 22 2	93-9988	Fitting - Hydraulic	28 61 1
93-5630	Spacer - Bearing	80 21 2	94-1891	Hydraulic Tube Assembly	25 13 1
93-5630	Spacer - Bearing, Inner	95 8 1	94-1892	Hose - Auxiliary Suction	23 14 1
93-5631	Rim - Wheel	80 38 2	94-1893	Tank - Hydraulic	23 4 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-2860	Radiator	44 12 1	95-5645	Kit - Seal	21 2 2
94-2867	Valve - Relief	57 40 1	95-5907	Counterbalance Manifold	21 * 1
94-2878	Pin	40 26 2	95-5908	PTO Manifold Assembly	74 * 1
94-3310	Tube - Vent	22 22 1	95-5916	Solenoid Valve Assembly	28 * 1
94-3311	Hose - Fuel	22 23 1	95-5917	Valve Seal Kit	28 * 1
94-3334	Hose - Hydraulic	45 60 1	95-7824	Decal - Danger (Europe)	84 33 1
94-3335	Hose - Hydraulic	44 18 1	213-31	Cover - Steering Wheel	4 8 1
94-3336	Fitting - Hydraulic Straight	45 58 1	217-116	Rim	75 23 2
94-3337	Fitting - Hydraulic 90°	45 59 1	218-242	Switch - Brake	7 25 1
94-4907	Motor - Hydraulic	81 11 1	218-243	Fitting - Tee	7 12 1
94-4907	Motor - Hydraulic	92 13 2	218-446	Nut - Hex	14 9 1
94-5390	Plate - Load	93 4 2	218-447	Washer - Lock	14 8 1
94-5391	Seal - Shaft	93 3 1	218-498	Nut	13 18 2
94-5392	Kit - Seal	93 * 1	218-498	Nut - Hex	14 7 10
94-6760	Bracket - Support	83 19 1	218-533	Lens - Indicator Light (Red)	4 7 1
94-6762	Bracket - Support	84 11 1	218-535	Nut - Hex.	4 24 3
94-6772	Retainer - Clamp	89 32 2	218-536	Washer - Lock	4 23 3
94-9412	Seal - Adapter	41 74 1	218-562	Lens - Indicator Light	4 11 2
94-9413	Screw	41 73 3	218-573	Fuse - 5A	11 * 1
94-9414	Adapter - Suction	41 79 1	218-581	Fuse - 15A	11 33 6
94-9415	Plug	41 96 1	219-17	Bulb - Light	13 9 8
94-9819	Bar - Guard, Front Center	82 63 1	219-19	Bulb	11 38 1
94-9820	Bar - Guard, Front RH & LH	82 62 2	2116-3	Joint - Ball L.H.	75 * 1
94-9821	Bar - Guard, Front Wing RH	84 43 1	2116-4	Joint - Ball R.H.	75 35 1
94-9822	Bar - Guard, Wing Inner	91 50 2	231-140	Tire - (Optional)	32 * 2
94-9823	Bar - Guard, Wing RH & LH	91 51 2	232-27	Stem - Valve	75 29 2
94-9824	Bar - Guard, Front Wing LH	83 32 1	233-17	Knob	4 3 1
95-0815	Panel - Lever	14 1 1	233-42	Knob	19 3 3
95-0817	Decal - H.O.C.	82 57 1	233-48	Knob	18 3 1
95-0818	Decal - Torque	80 30 1	233-66	Knob	14 10 1
95-0818	Decal - Torque	90 38 2	237-21	Seal - O-Ring	32 3 2
95-0819	Decal - Belt Routing L.H.	90 36 1	237-21	Seal - O-Ring	21 6 2
95-0820	Decal - Belt Routing R.H.	90 * 1	237-21	Seal - O-Ring	30 29 4
95-0821	Decal - Hydraulic Oil	30 8 1	237-21	Seal - O-Ring	76 52 4
95-0822	Decal - Warning	22 12 1	237-21	Seal - O-Ring	28 58 3
95-0824	Panel - Diagnostic	29 4 1	237-22	Seal - O-Ring	27 32 7
95-0825	Panel - Control	4 46 1	237-22	Seal - O-Ring	24 5 3
95-0826	Panel - Control	14 6 1	237-22	Seal - O-Ring	81 7 1
95-0827	Panel	13 3 1	237-22	Seal - O-Ring	78 8 9
95-0831	Decal - Fuse	14 22 1	237-22	Seal - O-Ring	92 10 2
95-0833	Decal - Belt Routing	81 39 1	237-22	Seal - O-Ring	19 14 9
95-0845	Decal - H.O.C.	92 28 2	237-22	Seal - O-Ring	44 17 1
95-0845	Decal - H.O.C.	82 56 1	237-22	Seal - O-Ring	85 19 14
95-1597	Bushing	87 18 1	237-22	Seal - O-Ring	21 21 7
95-1692	Fitting - Hydraulic Elbow	81 4 2	237-22	Seal - O-Ring	23 21 2
95-1821	Spring - Compression	4 45 1	237-22	Seal - O-Ring	37 25 1
94-2865	Tank - Fuel	22 11 1	237-22	Seal - O-Ring	4 37 4
95-1839	Cable - Negative	72 11 1	237-22	Seal - O-Ring	57 38 1
95-2741	Rim - Wheel	80 40 2	237-22	Seal - O-Ring	75 45 6
95-2741	Rim - Wheel	91 44 16	237-22	Seal - O-Ring	47 56 2
95-3297	Washer - Thrust	83 16 2	237-22	Seal - O-Ring	41 64 1
95-3297	Washer - Thrust	84 24 2	237-30	Seal - O-Ring	27 8 3
95-4400	Washer - Backup	34 44 1	237-30	Seal - O-Ring	24 13 2
95-4400	Washer - Backup	41 98 1	237-30	Seal - O-Ring	37 17 2
95-5616	Spacer	30 40 2	237-30	Seal - O-Ring	21 22 2
95-5630	Valve - Hydraulic Cartridge	21 1 1	237-37	Bumper - Rubber	72 34 4
95-5631	Valve - Hydraulic Cartridge	21 36 1	237-42	Seal - O-Ring	32 1 2
95-5632	Valve - Hydraulic Cartridge	21 15 1	237-42	Seal - O-Ring	78 6 4
95-5633	Valve - Hydraulic Cartridge	21 30 2	237-42	Seal - O-Ring	73 7 1
95-5634	Valve - Hydraulic Cartridge	21 10 1	237-42	Seal - O-Ring	92 12 2
95-5635	Valve - Cartridge (3000 lbs)	73 8 3	237-42	Seal - O-Ring	37 23 1
95-5636	Valve - Cartridge (20 lbs)	73 40 3	237-42	Seal - O-Ring	19 24 5
95-5637	Valve - Cartridge (75 lbs)	73 38 3	237-42	Seal - O-Ring	21 27 6
95-5638	Valve - Solenoid	28 62 1	237-42	Seal - O-Ring	86 42 4
95-5639	Spool - Solenoid Valve	73 25 3	237-42	Seal O-Ring	81 9 1
95-5640	Valve - Cartridge (600 lbs)	73 5 3	237-58	Seal - O-Ring	27 14 4
95-5641	Kit - Seal	21 11 1	237-58	Seal - O-Ring	25 2 2
95-5642	Kit - Seal	21 29 3	237-58	Seal - O-Ring	81 3 2
95-5643	Solenoid Valve Seal Kit	74 * 3	237-58	Seal - O-Ring	24 7 1
95-5644	Cartridge Valve Seal Kit	74 * 6	237-58	Seal - O-Ring	32 7 7
95-5645	Cartridge Valve Seal Kit	74 * 6	237-58	Seal - O-Ring	73 10 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
237-58	Seal - O-Ring	37 21 3	2412-108	Clamp - Hose	44 6 2
237-65	O-Ring	33 49 2	2412-108	Clamp - Hose	22 15 2
237-65	Seal - O-Ring	24 3 2	2412-108	Clamp - Hose	23 32 1
237-65	Seal - O-Ring	92 7 4	2412-110	Clamp - Hose	46 16 3
237-65	Seal - O-Ring	27 18 6	2412-129	Clamp - Hose	24 39 1
237-65	Seal - O-Ring	85 20 4	2412-133	Clamp	2 2 2
237-78	Seal - O-Ring	27 13 5	2412-138	Clamp - R	22 24 1
237-78	Seal - O-Ring	21 4 2	2412-147	Clamp - R	44 48 1
237-78	Seal - O-Ring	21 8 3	250-5	Tie - Cable	42 34 16
237-78	Seal - O-Ring	73 33 1	251-259	Bearing - Neutral Detent	37 41 1
237-78	Seal - O-Ring	73 41 2	251-340	Bearing - Ball	32 23 2
237-78	Seal - O-Ring	75 43 4	253-154	Seal - Wave	94 5 2
237-79	Seal - O-Ring	19 12 2	253-156	Seal - Oil	32 22 2
237-79	Seal - O-Ring	23 23 1	253-157	Ring - Cup	32 41 6
237-79	Seal - O-Ring	21 24 2	254-72	Cup - Bearing Outer	75 20 2
237-79	Seal - O-Ring	73 32 4	254-92	Cone - Bearing Outer	75 21 2
237-79	Seal - O-Ring	4 39 4	254-106	Cone - Bearing Inner	75 31 2
237-80	Seal - O-Ring	24 1 1	254-107	Cup - Bearing Inner	75 30 2
237-80	Seal - O-Ring	23 19 3	256-76	Bushing - Sleeve	89 15 4
237-80	Seal - O-Ring	41 68 1	256-156	Bushing - Flange	9 30 2
237-81	Seal - O-Ring	23 1 1	256-172	Bearing - Sleeve	88 15 8
237-81	Seal - O-Ring	81 5 2	256-188	Bushing - Sleeve	84 6 1
237-81	Seal - O-Ring	92 5 4	256-188	Bushing - Sleeve	81 22 1
237-81	Seal - O-Ring	32 9 4	256-247	Bushing - Flange	6 1 4
237-81	Seal - O-Ring	37 15 1	256-247	Bushing - Flange	28 46 2
237-81	Seal - O-Ring	73 19 8	256-273	Bushing - Flange	9 28 1
237-101	Seal - O-Ring	24 24 2	256-304	Washer - Thrust	89 6 8
237-116	Seal - O-Ring	25 9 1	256-304	Washer - Thrust	75 7 6
237-146	Seal - O-Ring	32 5 4	256-304	Washer - Thrust	78 28 2
237-146	Seal - O-Ring	73 14 1	256-304	Washer - Thrust	85 29 4
237-146	Seal - O-Ring	37 19 3	256-304	Washer - Thrust	90 40 4
237-154	Seal - O-Ring	70 10 1	282-2	Clevis - Brake Rod	7 18 1
237-155	Seal - O-Ring	24 20 1	282-28	Clevis - Adjustable	18 6 2
237-156	Seal - O-Ring	21 13 8	283-1	Pin - Clevis	6 24 2
237-156	Seal - O-Ring	73 30 30	283-1	Pin - Clevis	7 24 1
237-157	Seal - O-Ring	23 16 1	283-2	Pin - Clevis	32 16 2
237-158	Seal - O-Ring	32 21 4	283-2	Pin - Clevis	36 24 2
237-164	Grommet	30 7 1	283-15	Pin - Clevis	36 31 2
237-174	O-Ring	36 9 2	283-67	Pin - Clevis Arm End	18 5 1
237-175	O-Ring	36 6 2	283-70	Pin - Hitch	80 9 2
240-2	Grommet	30 6 2	283-72	Pin - Lynch	1 3 1
240-3	Grommet	85 8 4	285-17	Plug - Pipe	41 76 2
240-4	Grommet	27 6 6	2812-4	Fitting - Reducer	44 15 1
240-4	Grommet	85 18 10	302-2	Fitting - Grease	85 31 4
240-5	Grommet	27 28 2	302-2	Fitting - Grease	78 2 4
240-6	Grommet	30 31 4	302-2	Fitting - Grease	84 4 1
240-7	Grommet	30 32 1	302-2	Fitting - Grease	89 4 4
240-7	Grommet	28 47 4	302-2	Fitting - Grease	37 5 1
2410-10	Plug - Button	28 72 1	302-2	Fitting - Grease	90 13 2
2410-73	Pin - Tether	23 35 1	302-2	Fitting - Grease	81 20 1
2411-40	Joint - Ball	89 13 4	302-2	Fitting - Grease Str.	94 1 1
2411-41	End - Rod	46 52 2	302-5	Fitting - Grease	77 1 1
2412-3	Clamp - Hose	23 15 1	302-5	Fitting - Grease	6 3 2
2412-7	Clamp Assembly	75 38 2	302-5	Fitting - Grease	79 13 3
2412-34	Clamp - Hose	23 11 1	302-5	Fitting - Grease	75 15 3
2412-39	Clamp	72 39 1	302-5	Fitting - Grease	87 15 2
2412-39	Clamp - R	47 68 1	302-5	Fitting - Grease	88 18 2
2412-41	Clamp	72 38 2	302-5	Fitting - Grease	89 22 2
2412-41	Clamp - R	44 38 1	302-5	Fitting - Grease	80 27 2
2412-41	Clamp - R	47 59 2	302-5	Fitting - Grease	81 33 4
2412-42	Clamp - Hose	25 11 4	302-5	Fitting - Grease	90 34 8
2412-42	Clamp - Hose	23 13 4	302-5	Fitting - Grease	78 40 2
2412-42	Clamp - Hose	46 19 1	302-5	Fitting - Grease	28 48 1
2412-70	Clamp - R	46 3 1	302-10	Fitting - Grease 45°	94 * 1
2412-73	Clamp - R	72 7 3	302-33	Fitting - Grease	75 36 2
2412-73	Clamp - R	47 69 1	302-39	Vent	32 25 2
2412-89	Clamp - R	22 9 1	302-40	Fitting - Grease	88 23 2
2412-92	Clamp - Hose	24 9 4	304-46	Drain - Fuel Tank	22 13 1
2412-92	Clamp - Hose	44 11 4	304-46	Valve - Drain	44 14 1
2412-104	Clamp-R	72 40 1	321-2	Screw - Cap Hex. Hd.	42 4 16
2412-108	Clamp - Hose	70 2 3	321-2	Screw - Cap Hex. Hd.	6 10 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
321-2	Screw - Cap Hex. Hd.	36 17 8	325-7	Screw - Cap Hex. Hd.	37 12 2
321-2	Screw - Cap, Hex. Hd.	23 26 1	325-7	Screw - Cap Hex. Hd.	81 16 1
321-3	Screw - Cap Hex. Hd.	72 3 3	325-7	Screw - Cap Hex. Hd.	33 46 4
321-3	Screw - Cap Hex. Hd.	9 6 4	325-8	Screw - Cap Hex. Hd.	84 8 1
321-3	Screw - Cap Hex. Hd.	18 10 3	325-8	Screw - Cap Hex. Hd.	81 24 1
321-3	Screw - Cap Hex. Hd.	11 14 4	325-15	Screw - Cap Hex. Hd.	80 6 4
321-4	Screw - Cap Hex. Hd.	6 5 1	325-17	Screw - Cap Hex. Hd.	46 43 4
321-4	Screw - Cap Hex. Hd.	37 42 2	325-20	Screw - Cap Hex. Hd.	90 3 8
321-4	Screw - Cap Hex. Hd.	46 51 2	327-17	Screw Cap Hex. Hd.	90 26 8
321-5	Screw - Cap Hex. Hd.	23 10 10	327-22	Screw - Cap Hex. Hd.	32 27 16
321-6	Screw - Cap Hex. Hd.	36 37 8	327-24	Screw Cap Hex. Hd.	80 15 2
321-6	Screw - Cap Hex. Hd.	46 38 3	327-25	Screw - Cap Hex. Hd.	80 20 2
321-9	Screw - Cap Hex. Hd.	30 22 6	327-80	Seal - O-Ring	38 53 2
321-9	Screw - Cap Hex. Hd.	28 43 2	328-5	Screw - Cap Hex. Hd.	78 21 2
321-9	Screw - Cap Hex. Hd.	86 56 3	328-8	Screw - Cap Hex. Hd.	85 36 4
321-10	Screw - Cap Hex. Hd.	19 1 2	328-8	Screw - Cap Hex. Hd.	85 37 2
321-10	Screw - Cap Hex. Hd.	37 47 2	328-11	Screw - Cap Hex. Hd.	42 26 2
321-11	Screw - Cap Hex. Hd.	28 65 2	328-24	Screw - Cap Hex. Hd.	86 58 4
321-15	Screw - Cap Hex. Hd.	89 3 4	328-26	Screw - Cap Hex. Hd.	85 28 12
321-15	Screw - Cap Hex. Hd.	30 18 2	3210-7	Screw - Cap Hex. Hd.	37 40 1
322-3	Screw - Cap Hex. Hd.	7 5 2	3213-2	Screw - Cap Hex. Hd.	25 22 4
322-3	Screw - HH	89 27 4	3217-7	Nut - Hex.	37 34 1
322-5	Screw - Cap Hex Hd.	72 27 1	3217-7	Nut - Lock	9 1 1
322-5	Screw - Cap Hex. Hd.	44 39 1	3217-9	Nut - Hex.	37 14 2
322-6	Screw - Cap Hex. Hd.	44 40 4	3217-9	Nut - Hex.	78 26 16
322-9	Screw - Hex. Hd.	30 42 2	3217-9	Nut - Jam	81 37 2
322-11	Screw - Cap Hex. Hd.	85 1 1	3217-26	Nut - Lock	9 7 1
322-11	Screw - Cap Hex. Hd.	72 30 1	3219-2	Nut - Hex.	37 29 1
322-12	Screw - Cap Hex. Hd.	30 9 2	3219-5	Nut - Hex.	32 31 18
322-12	Screw - Cap Hex. Hd.	24 44 3	3219-7	Nut - Lock	89 19 4
322-13	Screw - Cap Hex. Hd.	47 76 1	3219-10	Nut - Jam	73 24 3
322-17	Screw - Cap Hex. Hd.	37 39 1	3219-14	Nut - Hex.	46 1 2
322-21	Screw - Cap Hex. Hd.	30 23 3	3219-14	Nut - Hex.	18 7 2
323-4	Screw - Cap Hex. Hd.	11 4 4	3219-14	Nut - Hex.	24 17 1
323-4	Screw - Cap Hex. Hd.	6 21 4	3220-1	Nut - Jam	46 50 2
323-4	Screw - Cap Hex. Hd.	72 21 4	3220-2	Nut - Jam	7 17 1
323-4	Screw - Cap Hex. Hd.	43 25 2	3220-3	Nut - Jam	9 21 2
323-4	Screw - Cap Hex. Hd.	24 28 3	3220-4	Nut	28 53 1
323-4	Screw - Cap Hex. Hd.	47 70 4	3220-4	Nut - Bulkhead	29 12 8
323-6	Screw - Cap Hex. Hd.	75 3 2	3220-5	Nut - Jam	9 19 1
323-6	Screw - Cap Hex. Hd.	83 6 3	3220-7	Nut - Jam	89 12 4
323-6	Screw - Cap Hex. Hd.	2 9 2	3220-7	Nut - Jam	75 28 2
323-6	Screw - Cap Hex. Hd.	85 12 4	3220-22	Nut - Jam	88 4 4
323-6	Screw - Cap Hex. Hd.	25 18 4	3220-24	Nut - Hex.	11 39 1
323-6	Screw - Cap Hex. Hd.	32 18 14	3229-8	Bolt - Carriage	11 35 3
323-6	Screw - Cap Hex. Hd.	84 19 3	3230-22	Bolt - Carriage	2 20 1
323-6	Screw - Cap Hex. Hd.	43 23 4	3231-22	Bolt - Carriage	94 7 6
323-6	Screw - Cap Hex. Hd.	9 31 1	3231-25	Bolt - Carriage	84 9 2
323-6	Screw - Cap Hex. Hd.	72 32 4	3231-25	Bolt - Carriage	83 20 2
323-6	Screw - Cap Hex. Hd.	47 60 1	3231-28	Bolt - Carriage	81 12 2
323-7	Screw - Cap Hex. Hd.	37 51 2	3231-28	Bolt - Carriage	92 27 4
323-7	Screw - Cap Hex. Hd.	25 4 8	3231-30	Bolt - Carriage	37 33 1
323-7	Screw - Cap Hex. Hd.	7 7 3	3233-9	Bolt - Carriage	83 9 3
323-7	Screw - Cap Hex. Hd.	4 16 4	3233-9	Bolt - Carriage	90 22 12
323-7	Screw - Cap Hex. Hd.	83 31 3	3233-9	Bolt - Carriage	84 30 3
323-7	Screw - Cap Hex. Hd.	84 39 3	3233-27	Bolt - Carriage	81 42 1
323-7	Screw - Cap Hex. Hd.	44 41 4	3233-28	Bolt - Carriage	90 12 6
323-9	Screw - Cap Hex. Hd.	72 13 2	3233-29	Bolt - Carriage	90 11 2
323-9	Screw - Cap Hex. Hd.	1 22 2	3233-30	Bolt - Carriage	92 22 6
323-10	Screw - Cap Hex. Hd.	23 5 4	3233-30	Bolt - Carriage	82 59 1
323-15	Screw - Cap Hex. Hd.	80 17 16	3234-5	Screw - Cap Hex. Hd.	1 11 4
323-15	Screw - Cap Hex. Hd.	90 23 32	3234-7	Screw - Hex. Washer Hd.	11 2 11
323-15	Screw - Cap Hex. Hd.	86 44 2	3234-12	Screw - Hex. Flange Hd.	75 10 2
323-21	Screw - Cap Hex. Hd.	22 6 1	3234-12	Screw - Hex. Flange Hd.	82 53 4
323-34	Screw - Cap Hex. Hd.	44 8 7	3234-12	Screw - Hex. Washer Hd.	92 2 8
325-4	Screw - Cap Hex. Hd.	46 46 4	3234-13	Screw - Hex. Flange Hd.	37 36 4
325-5	Screw - Cap Hex. Hd.	4 30 3	3234-13	Screw - Hex. Washer Hd.	22 8 1
325-6	Screw - Cap Hex. Hd.	25 20 4	3234-13	Screw - Hex. Washer Hd.	7 19 2
325-6	Screw - Cap Hex. Hd.	78 22 12	3234-14	Screw - Cap Hex. Hd.	43 11 6
325-6	Screw - Cap Hex. Hd.	44 43 4	3234-14	Screw - Cap Hex. Hd.	9 12 1
325-6	Screw - Cap Hex. Hd.	75 46 12	3234-14	Screw - Cap Hex. Hd.	6 18 3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3234-14	Screw - Cap Hex. Hd.	1 23 6	3256-26	Washer - Flat	18 13 1
3234-14	Screw - Cap Hex. Hd.	11 25 2	3256-26	Washer - Flat	4 29 3
3234-14	Screw - Hex. Flange Hd.	10 1 4	3256-26	Washer - Flat	32 45 4
3234-14	Screw - Hex. Flange Hd.	30 2 6	3256-26	Washer - Flat	47 54 8
3234-14	Screw - Hex. Flange Hd.	19 8 6	3256-27	Washer - Flat	1 24 1
3234-14	Screw - Hex. Flange Hd.	27 25 4	3256-56	Washer - Flat	30 21 8
3234-14	Screw - Hex. Washer Hd.	46 20 4	3256-56	Washer - Flat	85 40 3
3234-14	Screw - Hex. Washer Hd.	4 25 8	3256-56	Washer - Flat	44 47 2
3234-17	Screw - Hex. Flange Hd.	72 6 4	3256-56	Washer - Flat	28 67 2
3234-28	Screw - Hex. Flange Hd.	27 10 2	3256-69	Washer	83 26 2
3245-31	Screw - Set	9 8 1	3256-69	Washer	84 35 2
3245-32	Screw - Set	9 26 1	3258-19	Screw - Machine	46 14 2
3249-11	Screw - Machine	6 26 2	3269-6	Washer - Backup	42 33 22
3253-2	Washer - Lock	24 16 1	3269-15	Rivet - Pop	42 32 22
3253-2	Washer - Lock	44 21 16	3269-25	Rivet - Pop	29 1 4
3253-2	Washer - Lock	47 65 2	3269-25	Rivet - Pop	83 1 4
3253-3	Washer - Lock	23 9 10	3269-25	Rivet - Pop	84 1 4
3253-3	Washer - Lock	11 15 4	3269-25	Rivet - Pop	92 17 16
3253-3	Washer - Lock	36 16 8	3269-25	Rivet - Pop	81 29 8
3253-3	Washer - Lock	37 46 2	3272-1	Pin - Cotter	19 4 6
3253-3	Washer - Lock	47 74 1	3272-1	Pin - Cotter	18 9 3
3253-7	Washer - Lock	37 13 2	3272-5	Pin - Cotter	6 6 1
3253-7	Washer - Lock	25 21 8	3272-5	Pin - Cotter	4 43 1
3253-7	Washer - Lock	78 25 16	3272-6	Pin - Cotter	72 4 1
3253-7	Washer - Lock	32 30 22	3272-6	Pin - Cotter	6 9 2
3253-8	Washer - Lock	94 14 1	3272-6	Pin - Cotter	19 10 2
3253-8	Washer - Lock	32 26 16	3272-6	Pin - Cotter	32 14 2
3253-9	Washer - Lock	89 20 4	3272-6	Pin - Cotter	36 22 2
3253-15	Washer - Lock	22 20 5	3272-6	Pin - Cotter	46 47 1
3253-15	Washer - Lock	14 21 A/R	3272-7	Pin - Cotter	9 23 2
3253-21	Washer - Lock	9 2 2	3272-7	Pin - Cotter	81 45 1
3253-21	Washer - Lock	22 5 1	3272-10	Pin - Cotter	7 16 1
3253-21	Washer - Lock	25 5 8	3272-10	Pin - Cotter	9 18 1
3253-21	Washer - Lock	23 6 4	3272-10	Pin - Cotter	36 26 2
3253-21	Washer - Lock	2 10 2	3272-12	Pin - Cotter	88 2 4
3253-21	Washer - Lock	72 14 2	3272-12	Pin - Cotter	7 6 1
3253-21	Washer - Lock	32 17 14	3272-12	Pin - Cotter	75 34 6
3253-21	Washer - Lock	4 17 4	3272-12	Pin - Cotter	78 35 2
3253-21	Washer - Lock	11 19 4	3272-13	Pin - Cotter	75 26 2
3253-21	Washer - Lock	36 19 8	3272-23	Pin - Cotter	78 18 4
3253-21	Washer - Lock	43 22 6	3272-33	Pin - Cotter	85 24 2
3253-21	Washer - Lock	24 29 3	3274-7	Screw - Cap Socket Hd.	36 18 8
3253-21	Washer - Lock	37 32 3	3274-20	Screw - Hex. Socket Hd.	37 11 2
3253-21	Washer - Lock	44 35 12	3274-86	Screw - Cap Socket Hd.	27 15 1
3253-21	Washer - Lock	47 75 4	3290-133	Screw - Round Hd.	13 1 4
3254-2	Washer	89 26 4	3290-133	Screw - Round Hd.	14 3 8
3254-2	Washer - Lock	72 25 1	3290-133	Screw - Round Hd.	11 11 4
3254-6	Washer - Lock	19 25 1	3290-134	Screw - Cap Hex. Hd.	43 13 4
3254-6	Washer - Lock, Int. Tooth	11 40 1	3290-216	Washer - Bevel	75 9 12
3256-1	Washer - Flat	46 48 1	3290-216	Washer - Bevel	44 25 4
3256-3	Washer - Flat	47 67 3	3290-271	Rivet - Pop	44 46 4
3256-5	Washer - Flat	22 7 2	3290-307	Pin - Cotter, Hair	6 25 2
3256-6	Washer - Flat	9 17 1	3290-321	Screw - Cap Hex. Hd.	43 5 12
3256-7	Washer - Flat	1 26 1	3290-321	Screw - Cap Hex. Hd.	72 20 1
3256-22	Washer - Flat	14 2 8	3290-321	Screw - Cap Hex. Hd.	44 22 16
3256-22	Washer - Flat	30 11 2	3290-321	Screw - Hex. Washer Hd.	42 14 20
3256-22	Washer - Flat	11 12 4	3290-343	Pin - Cotter Hair	80 11 2
3256-22	Washer - Flat	89 35 4	3290-378	Tie - Cable	11 * 25
3256-22	Washer - Flat	4 44 1	3290-378	Tie - Cable	6 * 3
3256-23	Washer	13 2 4	3290-378	Tie - Cable	82 * 2
3256-23	Washer - Flat	92 31 4	3290-378	Tie - Cable	86 * 3
3256-23	Washer - Flat	83 35 2	3290-378	Tie - Cable	92 * 24
3256-23	Washer - Flat	84 45 2	3290-378	Tie - Cable	11 18 2
3256-23	Washer - Flat	2 16 4	3290-378	Tie - Cable	78 41 1
3256-23	Washer - Flat	30 24 1	3290-378	Tie - Cable	4 36 5
3256-23	Washer - Flat	28 68 2	3290-384	Pin - Lynch	80 1 2
3256-24	Washer - Flat	72 15 2	3290-384	Pin - Lynch	90 2 8
3256-24	Washer - Flat	94 16 A/R	3290-392	Screw - HH	14 17 1
3256-24	Washer - Flat	43 24 6	3290-495	Pin - Lynch	27 2 2
3256-24	Washer - Flat	1 27 2	3296-2	Nut - Flange Lock	43 7 12
3256-24	Washer - Flat	36 27 4	3296-2	Nut - Flange Lock	42 12 20

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3296-2	Nut - Flange Lock	72 24 1	32122-53	Screw - Pan Head	1 7 4
3296-2	Nut - Lock	83 2 6	32122-53	Screw - Phil. Truss Hd.	11 9 2
3296-2	Nut - Lock	84 10 6	32127-11	Nut - Flexlok	7 27 2
3296-2	Nut - Lock	13 15 2	32127-11	Nut - Flexlok	37 37 2
3296-2	Nut - Lock	92 19 16	32128-16	Nut - HHF	80 28 8
3296-2	Nut - Lock	11 21 6	32128-16	Nut - HHF	91 47 32
3296-2	Nut - Lock	81 34 8	32128-19	Nut - Lock Flange Hd.	1 21 2
3296-3	Nut - Lock	36 29 2	32128-20	Nut - Flange Lock	44 19 5
3296-9	Nut - Lock	6 14 2	32128-20	Nut - Flange Lock	4 22 2
3296-23	Nut - Lock	18 14 1	32128-20	Nut - Flange Lock	11 27 2
3296-29	Nut - Lock	1 12 4	32128-20	Nut - Flange Lock	46 30 4
3296-29	Nut - Lock	2 17 4	32128-20	Nut - Lock	9 13 1
3296-29	Nut - Lock	92 30 4	32128-20	Nut - Lock	6 17 3
3296-29	Nut - Lock	83 34 2	32128-20	Nut - Lock	81 19 4
3296-29	Nut - Lock	84 44 2	32128-21	Nut - Flange Lock	37 2 2
3296-39	Nut - Hex.	22 19 1	32128-21	Nut - Flange Lock	92 4 12
3296-41	Nut - Lock	88 8 2	32128-21	Nut - Flange Lock	94 9 6
3296-42	Nut - Keps	18 1 3	32128-21	Nut - Flange Lock	81 10 6
3296-42	Nut - Lock	14 4 4	32128-21	Nut - Flange Lock	83 10 6
3296-49	Nut - Lock	94 2 1	32128-21	Nut - Flange Lock	84 22 6
3296-49	Nut - Lock	4 20 1	32128-21	Nut - Lock	7 8 3
3296-53	Nut - Lock	80 16 4	32128-23	Nut - Flange Lock	80 3 4
3296-53	Nut - Lock	90 31 8	32128-23	Nut - Flange Lock	90 7 20
3296-54	Nut - Lock	1 4 4	32128-23	Nut - Flange Lock	83 8 3
3296-59	Nut - Lock	36 35 2	32128-23	Nut - Flange Lock	92 25 6
3296-68	Nut - Lock	78 1 2	32128-23	Nut - Flange Lock	84 26 4
3296-68	Nut - Lock	75 11 1	32128-23	Nut - Flange Lock	4 34 3
3296-68	Nut - Lock	90 14 2	32128-23	Nut - Flange Lock	81 35 4
3296-68	Nut Lock	85 35 2	32128-23	Nut - Lock	75 8 12
32103-3	Nut - Wing	44 33 2	32128-25	Nut - Lock	25 19 4
32104-16	Screw - Tapping	13 7 4	32128-25	Nut - Lock	36 20 2
32104-31	Screw - HH (Europe)	83 33 3	32128-32	Nut - Lock	89 1 4
32104-31	Screw - HH (Europe)	84 42 3	32128-43	Nut - Lock	80 19 16
32104-31	Screw - HH (Europe)	91 49 20	32128-43	Nut - Lock	90 25 32
32104-31	Screw - HWH (Europe)	82 64 10	32128-45	Nut - Lock	90 8 8
32105-1	Screw - Cap Hex. Hd.	13 17 2	32136-2	Nut - Castle	88 1 4
32105-1	Screw - Machine	83 11 4	32136-2	Nut - Castle	75 41 2
32105-1	Screw - Machine	84 16 4	32136-2	Nut - Slotted	78 36 2
32105-1	Screw - Machine	81 27 8	32136-13	Nut - Castle	75 33 4
32105-1	Screw - Pan Hd.	92 21 16	32144-1	Screw - Hex. Hd.	7 26 2
32105-12	Screw - Hex. Socket Hd.	11 7 2	32144-1	Screw - Hex. Hd.	37 30 2
32105-13	Screw - Hex. Hd.	11 8 4	32144-11	Screw - Hex. Flange Hd.	42 21 8
32107-11	Nut - Square	46 27 2	32144-11	Screw - Thread Forming	86 60 4
32108-103	Screw - Flat Hd.	81 18 4	32144-19	Screw - Round Hd.	13 24 4
32108-103	Screw - Machine Flat Hd.	89 9 4	32144-64	Screw - Hex. Washer Hd.	4 13 4
32108-103	Screw - Machine Flat Hd.	85 25 4	32144-69	Screw - Cap, Hex. Hd.	45 54 6
32108-103	Screw - Machine Flat Hd.	28 40 4	32144-96	Screw - Mach. Round Hd.	4 42 3
32120-22	Ring - Retaining Internal	32 24 2	32149-2	Nut - Keps	42 2 16
32120-47	Ring - Retaining	88 14 16	32149-2	Nut - Keps	9 4 4
32120-47	Ring - Retaining	78 31 2	32149-2	Nut - Keps	19 7 2
32120-64	Ring - Retaining	1 25 2	32149-2	Nut - Keps	72 8 3
32120-72	Ring - Retaining	84 5 1	32149-2	Nut - Keps	43 16 16
32120-72	Ring - Retaining	81 21 1	32149-2	Nut - Keps	7 20 2
32120-84	Ring - Retaining External	32 33 2	32149-2	Nut - Keps	46 33 5
32121-4	Pin - Roll	1 13 1	32149-2	Nut - Keps	11 36 3
32121-4	Pin - Roll	2 18 1	32149-2	Nut - Keps	28 55 2
32121-4	Pin - Roll	83 28 2	32149-7	Nut	43 30 4
32121-4	Pin - Roll	84 37 2	32149-7	Nut - Keps	11 23 3
32121-6	Pin - Roll	83 18 2	32151-10	Ring - Retaining	75 14 2
32121-6	Pin - Roll	84 21 2	32151-10	Ring - Retaining	89 21 2
32121-34	Pin - Roll	89 17 2	32151-48	Ring - Retaining	80 8 4
32121-34	Pin - Roll	77 18 1	32151-100	Ring - Retaining	36 2 2
32121-49	Pin - Roll	88 17 2	32152-1	Nut	43 31 2
32121-110	Pin - Roll	75 4 1	32152-1	Nut - Lock	7 2 2
32121-110	Pin - Roll	90 17 2	32152-1	Nut - Lock	85 3 5
32121-110	Pin - Roll	78 23 2	32152-1	Nut - Lock	89 7 4
32121-110	Pin - Roll	85 27 2	32152-1	Nut - Lock	6 12 4
32121-110	Pin Roll	89 24 4	32152-1	Nut - Lock	30 13 8
32122-24	Screw - Cap Hex. Hd.	22 3 5	32152-1	Nut - Lock	72 26 3
32122-28	Screw - Truss Hd.	83 5 2	32152-1	Nut - Lock	27 36 1
32122-28	Screw - Truss Hd.	84 14 2	32152-1	Nut - Lock	24 41 3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
32152-1	Nut - Lock	28 42 4	340-77	Fitting - Hydraulic Elbow	78 19 4
32152-1	Nut - Lock	45 57 2	340-77	Fitting - Hydraulic Elbow	85 41 4
32152-1	Nut - Lock	47 57 2	340-78	Nut - Bulkhead	30 34 4
32152-2	Nut - Lock	85 5 6	340-79	Fitting - Hydraulic 90°	24 23 1
32152-2	Nut - Lock	25 16 4	340-82	Fitting - Hydraulic Elbow	32 4 2
32152-2	Nut - Lock	72 22 4	340-86	Fitting - Hydraulic Tee	19 15 2
32152-2	Nut - Lock	44 27 7	340-91	Fitting - Hydraulic Straight	32 6 2
32152-2	Nut - Lock	76 47 2	340-92	Fitting - Hydraulic Straight	21 7 2
32152-4	Nut - Lock	30 12 6	340-92	Fitting - Hydraulic	28 56 1
32152-4	Nut - Lock	6 15 2	340-94	Tee - Hydraulic	21 35 1
32152-4	Nut - Lock	37 27 2	340-105	Fitting - Hydraulic Elbow	38 55 1
32152-4	Nut - Lock	28 45 2	340-124	Fitting - Hydraulic Straight	44 16 1
32152-4	Nut Lock	85 23 3	340-125	Fitting - Hydraulic	28 59 1
32153-3	Nut - Lock	30 37 4	340-126	Nut - Bulkhead	27 3 2
32153-3	Nut - Lock	37 44 1	340-127	Nut - Bulkhead	27 29 2
32153-5	Nut - Lock	44 26 4	340-128	Nut - Bulkhead	30 3 2
32153-5	Nut - Lock	46 41 8	340-129	Fitting - Hydraulic Elbow	73 13 1
32153-6	Nut - Lock	85 4 22	340-130	Fitting - Hydraulic 90°	23 18 1
32153-6	Nut - Lock	78 20 2	340-130	Fitting - Hydraulic Elbow	38 54 1
32153-6	Nut Lock	42 24 2	340-131	Fitting - Hydraulic Elbow	37 16 1
33004-00	Nut - HWH	2 23 2	340-132	Fitting - Hydraulic Elbow	75 44 4
33015-00	Nut	2 22 2	340-133	Fitting - Hydraulic Straight	4 32 3
33016-00	Nut - Hex.	93 1 4	340-134	Fitting - Hydraulic Elbow	37 48 1
33096-00	Washer - Flat	93 2 4	340-135	Seal - O-Ring	25 7 2
33104-025	Screw - HHF	2 21 2	340-136	Seal - O-Ring	24 37 1
340-2	Fitting - Hydraulic Straight	19 23 3	340-142	Fitting - Hydraulic Elbow	73 15 1
340-2	Fitting - Hydraulic Straight	21 26 5	340-142	Fitting - Hydraulic Elbow	32 43 2
340-2	Fitting - Hydraulic Straight	92 11 2	340-148	Fitting - Hydraulic Tee R.H.	32 * 1
340-3	Fitting - Hydraulic Straight	19 13 2	340-150	Cap - Hydraulic	24 38 1
340-3	Fitting - Hydraulic Straight	23 22 1	353-375	Fitting - Hydraulic 90°	27 12 2
340-4	Fitting - Hydraulic Straight	21 23 2	353-431	Fitting - Hydraulic 45°	73 42 2
340-8	Fitting - Hydraulic Straight	92 6 4	353-536	Fitting - Fuel 90° Elbow	22 16 1
340-9	Fitting - Hydraulic St. L.H.	32 10 1	353-566	Tee - Hydraulic	21 16 1
340-9	Fitting - Hydraulic Straight	73 18 7	353-781	Fitting - Fuel Elbow	70 3 2
340-15	Fitting - Hydraulic Elbow	37 20 3	353-947	Cap - Fitting	29 2 8
340-22	Fitting - Hydraulic Tee	24 2 1	353-988	Plug	73 39 4
340-57	Fitting - Hydraulic Straight	78 45 2	353-989	Plug	73 6 1
340-65	Seal - O-Ring	73 12 2	353-990	Plug	73 34 1
340-65	Seal - O-Ring	24 22 1	353-990	Plug - Hose	21 3 2
340-65	Seal - O-Ring	44 28 3	353-991	Plug	73 31 30
340-68	Fitting - Hydraulic Bulk. Tee	78 14 1	353-991	Plug - Hole	21 12 8
340-68	Fitting - Hydraulic Bulkhead	75 2 2	353-992	Flange - Fitting	25 6 4
340-70	Nut - Bulkhead	27 4 6	353-994	Adapter	7 10 1
340-70	Nut - Bulkhead	78 13 1	353-997	Fitting - Hydraulic Bulkhead	29 3 8
340-70	Nut - Bulkhead	85 15 10	354-42	Flange - Half	25 10 2
340-70	Nut - Bulkhead	76 48 2	354-95	Fitting	45 51 1
340-71	Fitting - Hydraulic Bulkhead	27 7 1	354-104	Ring - Backup	36 5 2
340-74	Nut - Bulkhead	85 11 4	354-105	Ring - Backup	36 10 2

TABLE OF CONTENTS

Description	Page	Description	Page
Seat Assembly	1	Water Pump Assembly	51
Seat Pivot & Bellows Assembly	2	Timing Gear Case Assembly	52
Seat Suspension Assembly	3	Rocker Cover & Cylinder Head Assembly	53
Steering Tower Assembly	4	Valve & Camshaft Assembly	54
Power Steering Valve Assembly No. 92—9748	5	Crankcase Assembly	55
Steering Brake Assembly	6	Piston, Connecting Rod, Crankshaft & Flywheel	56
Service Brake Assembly	7	Oil Pump, Breather & Filter	57
Brake System Master Cylinder No. 69—2640	8	Flywheel Housing & Oil Pan Assembly	58
Traction Pedal & Cruise Control Assembly	9	Intake & Exhaust Manifold Assembly	59
Tool Box Assembly	10	Turbocharger Assembly No. 70—6430	60
Control Box Assembly	11	Turbocharger Oil Pipe Assembly	61
Diagnostic Display Assembly	12	Fuel System Assembly	62—63
Upper Control Panel Assembly	13	Fuel Injection Pump Assembly	64—65
Lower Control Panel Assembly	14	Governor Assembly	66—67
Electrical Schematic	15	Fuel Feed Pump Assembly No. 70—5700	68
Controller Electrical Schematic	16	Air Cleaner Assembly No. 69—1890	69
Operators Control Panel Electrical Schematic	17	Fuel Filter Assembly	70
Throttle Assembly	18	Solenoid Valve Assembly No. 85—6230	71
Lift Valve Installation Assembly	19	Battery Frame Assembly	72
Lift Valve Assembly No. 69—1780	20	PTO Manifold Assembly	73—74
Counterbalance Manifold Assembly	21	Rear Axle Assembly	75—76
Fuel Tank Assembly	22	Hydraulic Cylinder Assembly No. 69—1960	77
Hydraulic Tank Assembly	23	Front Lift Arm Assembly	78
Hydraulic Filter Assembly	24	Hydraulic Cylinder Assembly No. 92—4971	79
Hydraulic Pump Installation Assembly	25	Center Deck Model No. 30592	
Double Gear Pump No. 69—2050	26	Carrier Frame Assembly	80
Frame Assembly	27—28	Center Deck Model No. 30592	81—82
Hydraulic System Diagnostic Panel Assembly	29	Center Deck Model No. 30592	
Hydraulic Line Clamps Assembly	30	Left Wing Assembly	83
Hydraulic Schematic	31	Center Deck Model No. 30592	
Front Wheel Assembly	32—33	Ring Wing Assembly	84
Wheel Motor No. 69—3050	34	Wing Deck Lift Assembly	85—86
Planetary Gear Drive Assembly No. 69—1730	35	Hydraulic Cylinder Assembly No. 74—2170	87
Wheel Brake Assembly	36	Wing Deck Latch Assembly	88
Variable Displacement Pump Installation	37—38	Wing Deck Lift Arm Assembly	89
Gear Pump & Flow Divider No. 69—2220	39	Wing Deck Model No. 30591 L.H. &	
Variable Displacement Pump No. 93—9322	40—41	30593 R.H.	90—91
Cowl Assembly	42	Wing Deck Model No. 30591 L.H. & 30593 R.H.	
Hood Assembly	43	Drive Assembly	92
Radiator & Oil Cooler Assembly	44—45	Hydraulic Motor Assembly No. 93—4363	93
Engine Installation Assembly	46—47	Spindle Assembly	94
Starter & Alternator Installation Assembly	48	10" & 13" Foam Filled Tire Assemblies	
Starter Motor Assembly No. 70—5860	49	(Optional)	95
Alternator Assembly No. 70—5760	50	TORO Part Number Index	96—113

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.