




MODEL NO. 03422-70001 & UP MODEL NO. 03422TE-70001 & UP MODEL NO. 03427-70001 & UP MODEL NO. 03427TE-70001 & UP MODEL NO. 03471 MODEL NO. 03472	PARTS CATALOG
REELMASTER® 2300D/2600D TRACTION UNIT	

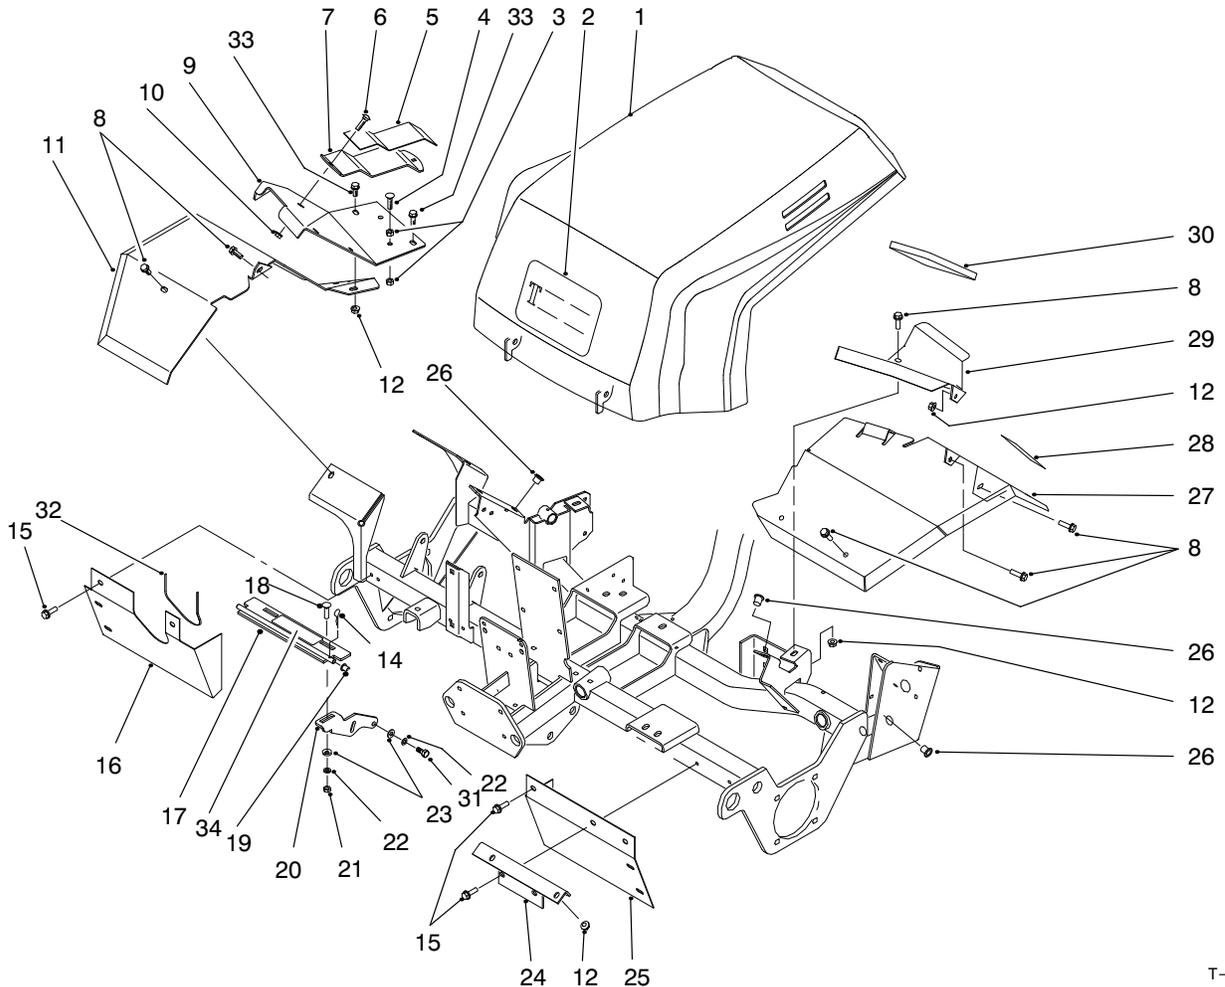


T-2150-4

HOOD & GRILLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3622	Asm-Hood (Incl. Ref. #2)	1
2	62-7400	Decal-Toro	1
3	32128-20	Nut-Lock, Flange, Whiz	2
4	3230-27	Screw-Carriage	1
5	76-2260	Pad-Footerest	1
6	3229-1	Bolt-Carriage	2
7	76-2200	Footerest-Traction Pedal	1
8	3234-5	Screw-Flange	10
9	93-6779	Footerest-RH	1
10	32128-33	Nut-Lock Flange	2
11	93-6778	Fender-Right	1
12	32128-44	Nut-Flange, Lrg	12
14	3290-467	Pin-Cotter, Hair	1
15	32104-82	Screw-HWH	5
16	93-6858	Shield-Front RH	1
17	93-6780	Hinge	1
18	3230-23	Screw-Carriage	2

Ref. No.	Part No.	Description	No. Used
19	256-320	Bushing	2
20	93-6742	Bracket-Hood Pivot	2
21	3217-6	Nut-Hex,	2
22	3253-4	Washer-Spring Lock	6
23	3256-23	Washer-Flat	6
24	83-8510	Bracket-Left Fender	1
25	83-9800	Shield-Front Grass LH	1
26	32148-8	Nut-Clinch	4
27	93-6776	Fender-LH	1
28	93-7267	Decal-Brake	1
*	84-6860	Decal-Brake (Japan)	1
29	83-9710	Footerest-LH	1
30	83-9840	Pad-Footerest	1
31	322-3	Screw-HH	4
32	93-6927	Trim	1
33	3234-17	Screw - Hex. Head	4
34	94-5056	Decal - Instructions	1

*Not Illustrated

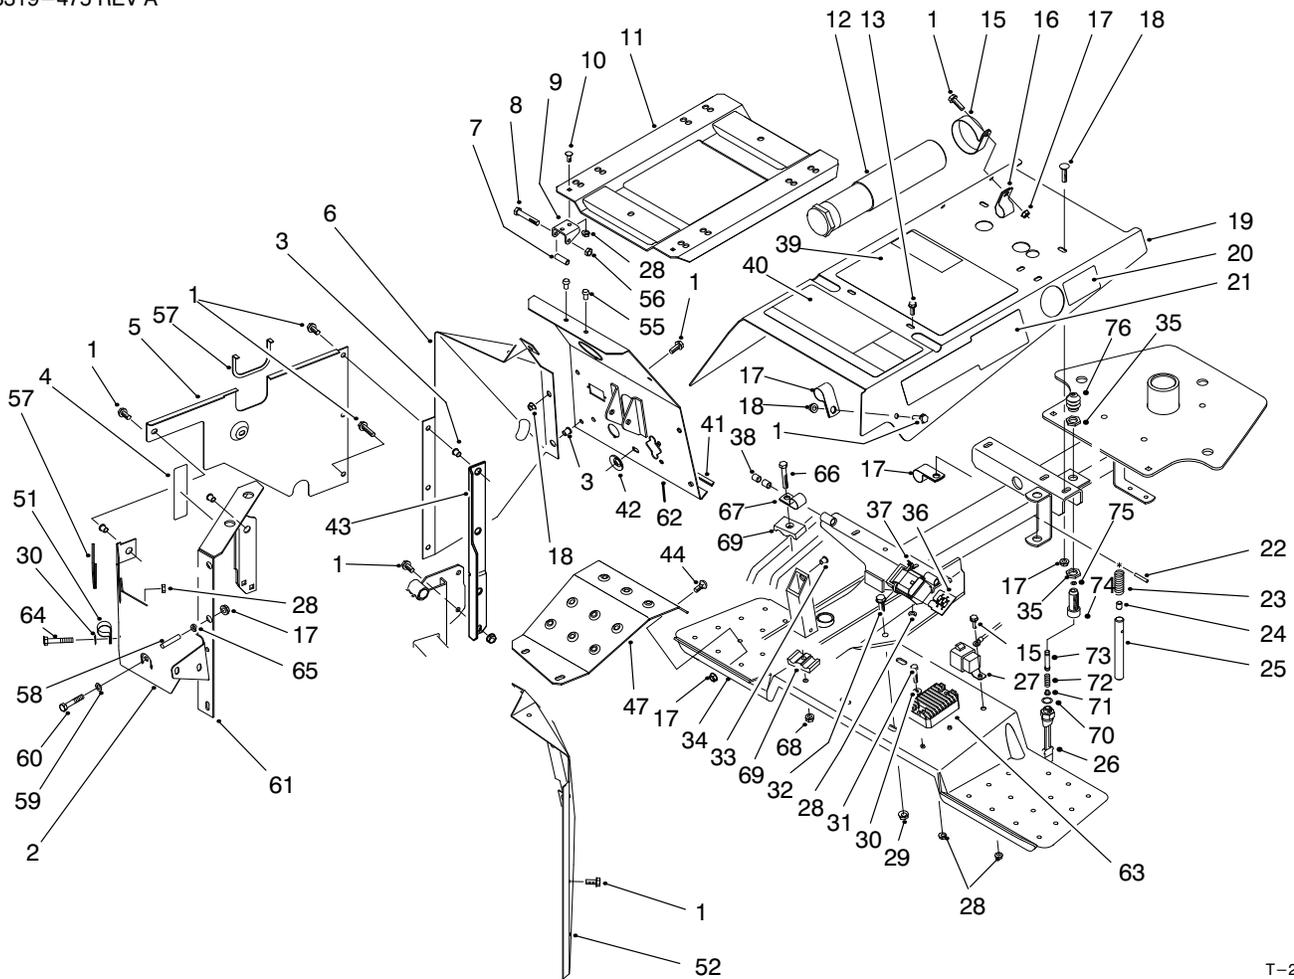


T-2151-2

SKIRT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234-5	Screw-Flange	18
2	93-6847	Panel-Left Front	1
3	32148-7	Nut-Clinch	6
4	67-5360	Decal-Danger	1
*	93-7273	Decal-Danger (Europe)	1
*	84-7280	Decal-Danger (Japan)	1
5	93-6846	Panel-Right Front	1
6	83-8120	Panel-Right Rear	1
7	85-5340	Tube-Seat Pivot	2
8	321-11	Screw-HH	2
9	85-5230	Bracket-Seat Pivot	2
10	3229-22	Screw-Carriage	2
11	85-5330	Asm-Seat Plate	1
12	74-0720	Tube-Manual	1
13	3234-4	Screw-HH	3
15	2412-133	Clamp-R	2
16	2412-39	Clamp-R	3
17	32128-44	Nut-Flange	11
18	3230-2	Bolt-Carriage	2
19	94-3632	Asm-Skirt (Incl. Ref. #20, 21, 39 & 40)	1
20	93-7270	Decal-Control (Model No. 03427 Only)	1
*	84-6960	Decal-Control (Japan) (Model No. 03427 Only)	1
21	93-6761	Decal-Reelmaster 2300D	2
*	94-5070	Decal-Reelmaster 2600D	2

Ref. No.	Part No.	Description	No. Used
22	32121-6	Pin-Roll	1
23	37-9590	Spring-Compression	1
24	28-6180	Pin-Plastic	1
25	27-9870	Pin-Seat Switch	1
26	72-4320	Switch - Seat	1
27	70-1480	Relay	1
28	32128-33	Nut-Lock Flange	6
29	32128-43	Nut-Whiz Flange	4
30	3256-22	Washer-Flat	3
31	321-8	Screw-HH	2
32	3234-11	Screw-Flange	4
33	32148-8	Nut-Clinch	1
34	93-6868	Asm-Footstep	1
35	218-461	Nut-HH	2
36	92-3188	Diode-Circuit Board	1
37	3290-379	Tie-Cable	1
38	256-321	Bushing	4
39	93-6903	Decal-Service	1
*	94-2595	Decal-Service (Italian)	1
*	94-1247	Decal-Service (Swedish)	1
*	94-2594	Decal-Service (German)	1
*	94-2599	Decal-Service (Spanish)	1
*	94-2593	Decal-Service (French)	1
*	94-2590	Decal-Service (Danish)	1
*	94-2591	Decal-Service (Dutch)	1
*	94-2592	Decal-Service (Finnish)	1
*	94-2597	Decal-Service (Norwegian)	1

*Not Illustrated

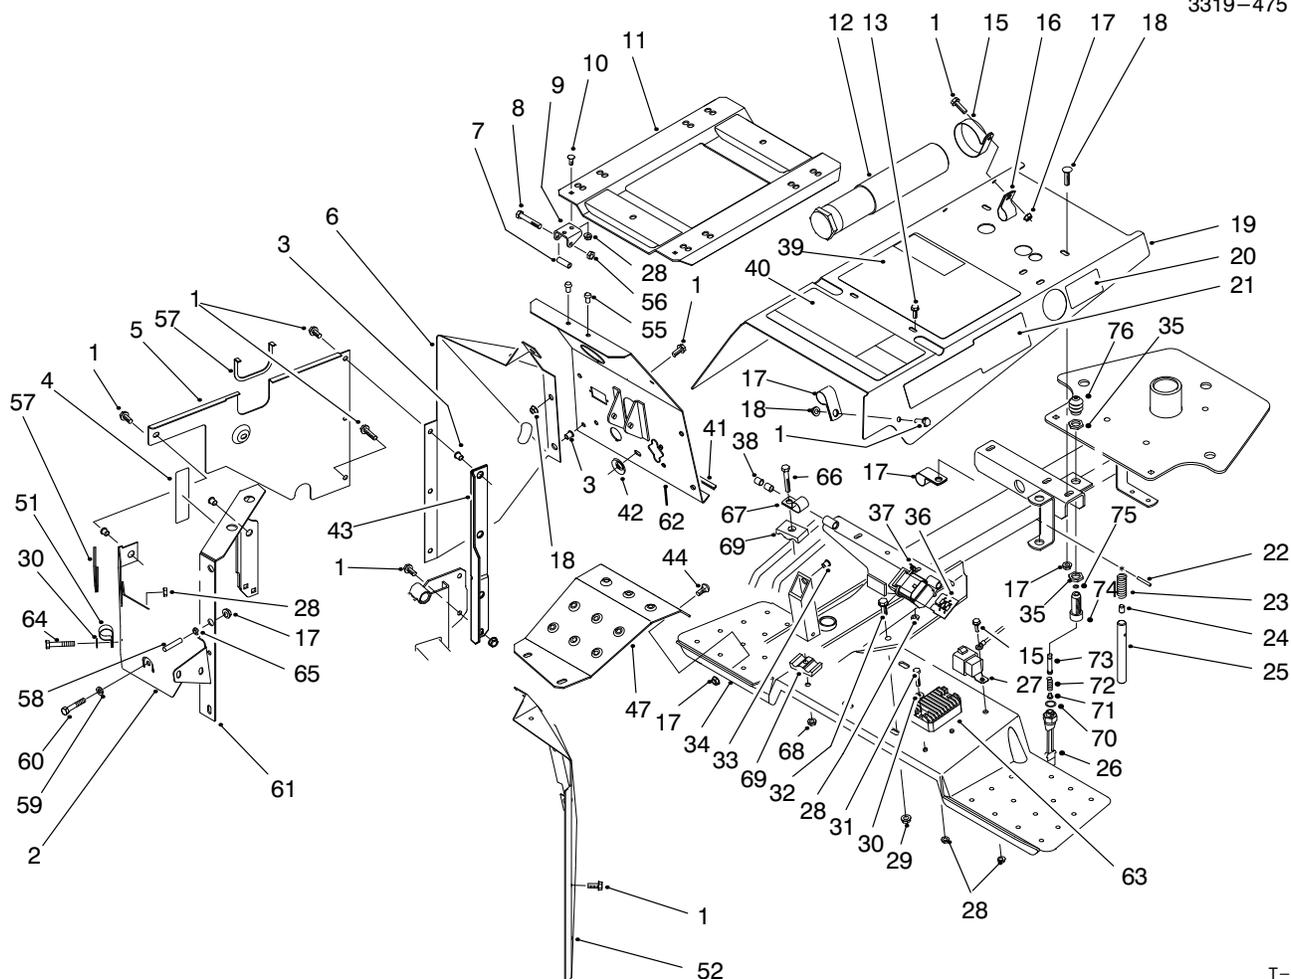


T-2151-2

SKIRT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
39	94-2598	Decal-Service (Portuguese)	1	†63	185516061	Regulator	1
*	94-2596	Decal-Service (Japan)	1	64	321-3	Screw-HH	1
40	83-9550	Decal-Warning	1	65	87-8640	Washer-Flat	1
*	93-7271	Decal-Warning (Europe)	1	66	322-9	Screw-Hex. Flange Hd. (Model No. 03427 Only)	1
*	84-7080	Decal-Warning (Japan)	1	*	3234-5	Screw-Hex. Flange Hd. (Model No. 03422 Only)	1
41	76-6471	Trim	1	67	2412-104	Clamp-R	1
42	62-7170	Spacer	1	68	3296-29	Nut-Lock	1
43	94-3694	Angle-Right	1	69	56-7976	Clamp-Tube (Model No. 03427 Only)	2
44	3230-1	Bolt-Carriage	1	70	237-30	O-Ring	1
47	93-6938	Panel-Foot	1	71	43-8610	Guide-Spring	1
51	2412-106	Clamp-R	1	72	43-8600	Spring-Compression	1
52	93-6732	Panel-Left Rear	1	73	43-8860	Plunger-Switch	1
55	237-37	Bumper-Rubber	2	74	43-8620	Guide-Pin	1
56	3296-42	Nut-Hex Lock	2	75	237-7	O-Ring	1
57	93-6924	Trim	2	76	43-8870	Boot-Switch	1
58	93-6908	Spacer-Split	1	*	43-9071	Asm-Switch, Limit (Incl. Ref. #26, 35 & 70-67)	1
59	3256-23	Washer-Flat	1				
60	322-23	Screw-Hex. Hd.	1				
61	94-3633	Asm-U-Bracket Support (Incl. Ref. #4)	1				
62	94-3691	Panel-Instrument	1				

*Not Illustrated

†Obtain from your Local Perkins Dealer

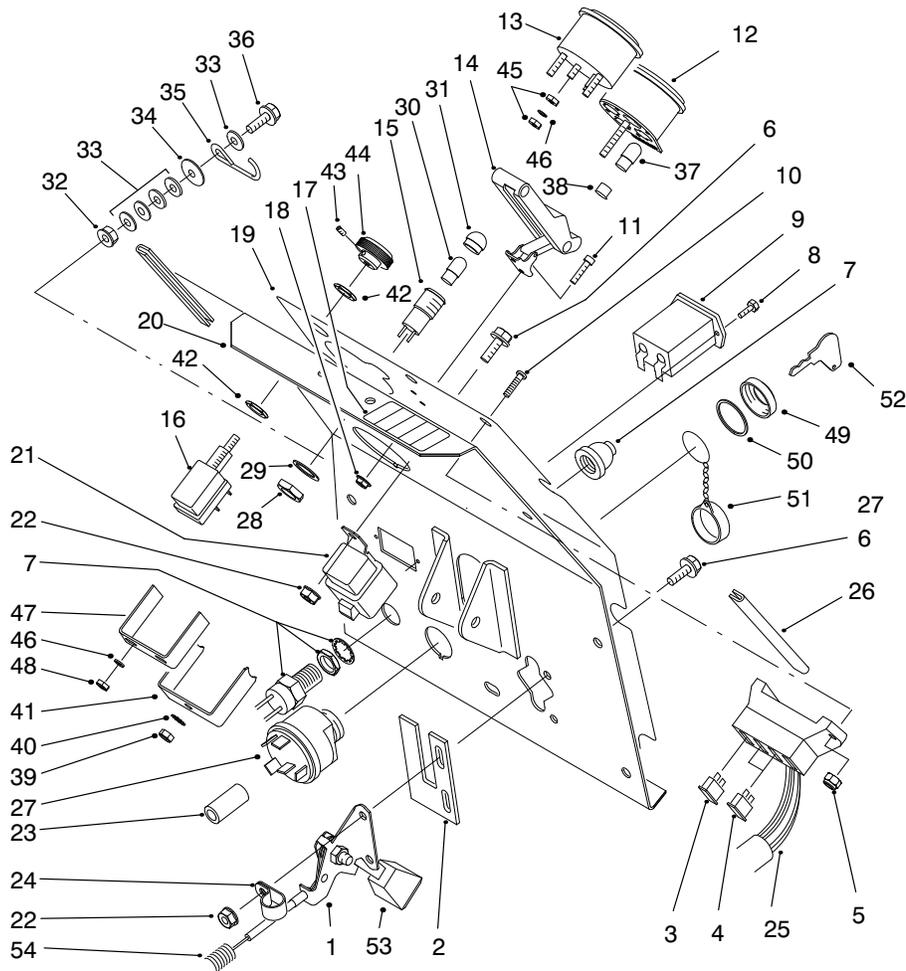

T-2155-5


INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-6816	Control-Throttle (Incl. Ref. # 53)	1
2	93-6743	Stop-Throttle	1
3	218-594	Fuse-20 Amp	1
4	218-578	Fuse-10 Amp	2
5	3296-2	Nut-Lock	2
6	3234-4	Screw-HH	3
7	93-6762	Switch-Push Button	1
8	32144-18	Screw-HWH	2
9	75-6820	Hour Meter	1
10	3250-13	Screw-Pan Hd	2
11	3274-90	Screw-Hex Socket	2
12	92-9775	Warning Light Cluster (Incl. Ref. #37-41)	1
13	93-4411	Gauge-Temperature (Incl. Ref. #45-48)	1
14	80-6980	Asm-Soft Latch	1
15	44-2212	Asm-Indicator Light (Incl. Ref. #28-31)	1
16	92-3194	Switch-Push/Pull (Incl. Ref. #42-44)	1
17	93-6902	Decal-Fuse Block	1
*	94-3352	Decal-Fuse Block (Europe)	1
*	94-2948	Decal-Fuse Block (Japan)	1
18	32149-9	Nut-Flange	2
19	94-4985	Decal-Instrument Panel	1

Ref. No.	Part No.	Description	No. Used
19	94-3351	Decal-Instrument Panel (Europe)	1
*	94-3350	Decal-Instrument Panel (Japan)	1
20	94-3691	Instrument Panel	1
21	70-1480	Relay	1
22	32128-33	Nut-Lock Flange	3
23	80-7345	Hose	1
24	2412-39	Clamp-R	1
25	94-3692	Asm-Wire Harness (Incl. Ref. #3 & 4)	1
26	93-6941	Trim	2
†27	385201160	Asm-Ignition Switch (Incl. Ref. #49-50)	1
28	218-535	Nut-Hex.	1
29	218-536	Washer-Flat	1
30	219-18	Bulb-Light	1
31	218-562	Lens-Light	1
32	32128-44	Nut-Flange (Europe)	1
33	3256-2	Washer-Flat (Europe)	5
34	3256-4	Washer-Flat (Europe)	1
35	93-7726	Hook (Europe)	1
36	32122-35	Screw-Machine (Europe)	1
37	219-17	Bulb	4
38	87-6270	Socket-Light	4
39	3217-26	Nut	1

*Not Illustrated

†Obtain from your local Perkins Dealer.

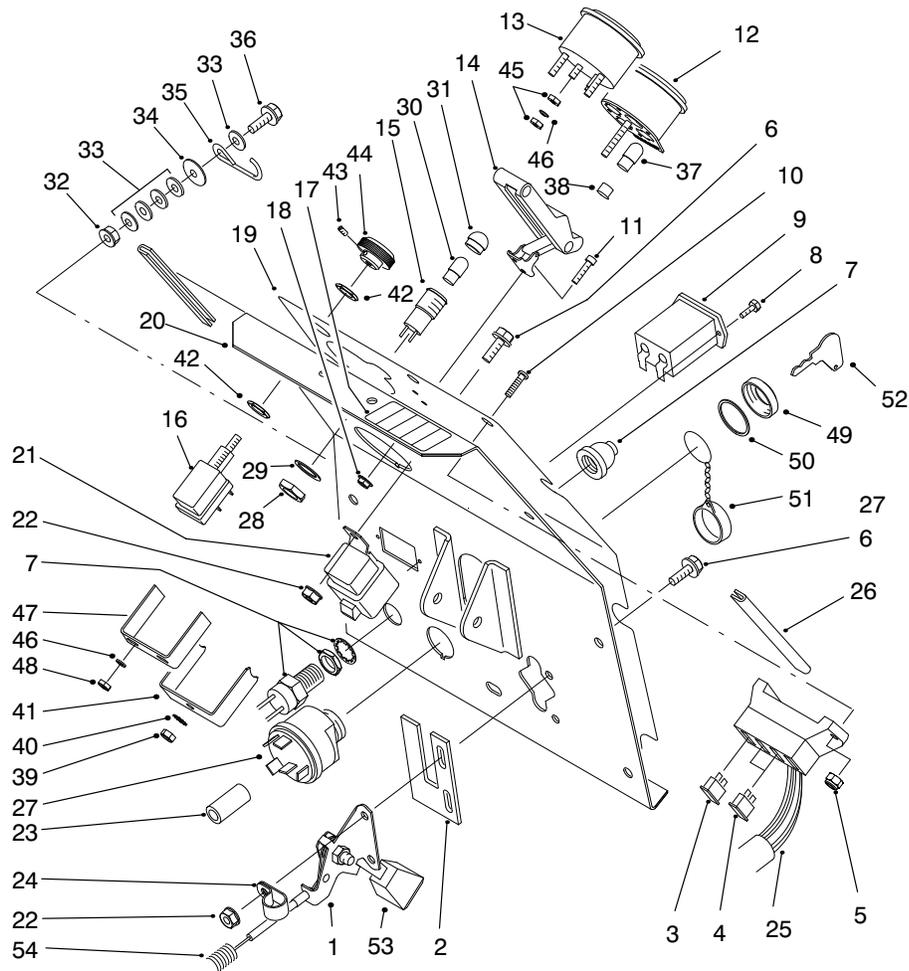

T-2155-5


INSTRUMENT PANEL ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
40	3254-1	Washer-Lock	1	48	3217-27	Nut-Hex.	2
41		Clamp-Mounting	1	†49		Nut-Retaining	1
42	3218-19	Nut-Hex.	2	†50	390190030	Seal-Switch	1
43	3298-8	Screw-Set	1	†51	385800010	Cover-Switch	1
44	92-3195	Knob	1	52	85-5270	Key-Switch, Start	2
45	3217-29	Nut-Hex.	6	53	66-0120	Knob-Control	1
46	3253-2	Washer-Lock	5	54	98-7393	Conduit-Convoluted	1
47		Clamp-Gauge	1				

*Not Illustrated

†Obtain from your local Perkins Dealer.

ELECTRICAL SCHEMATIC

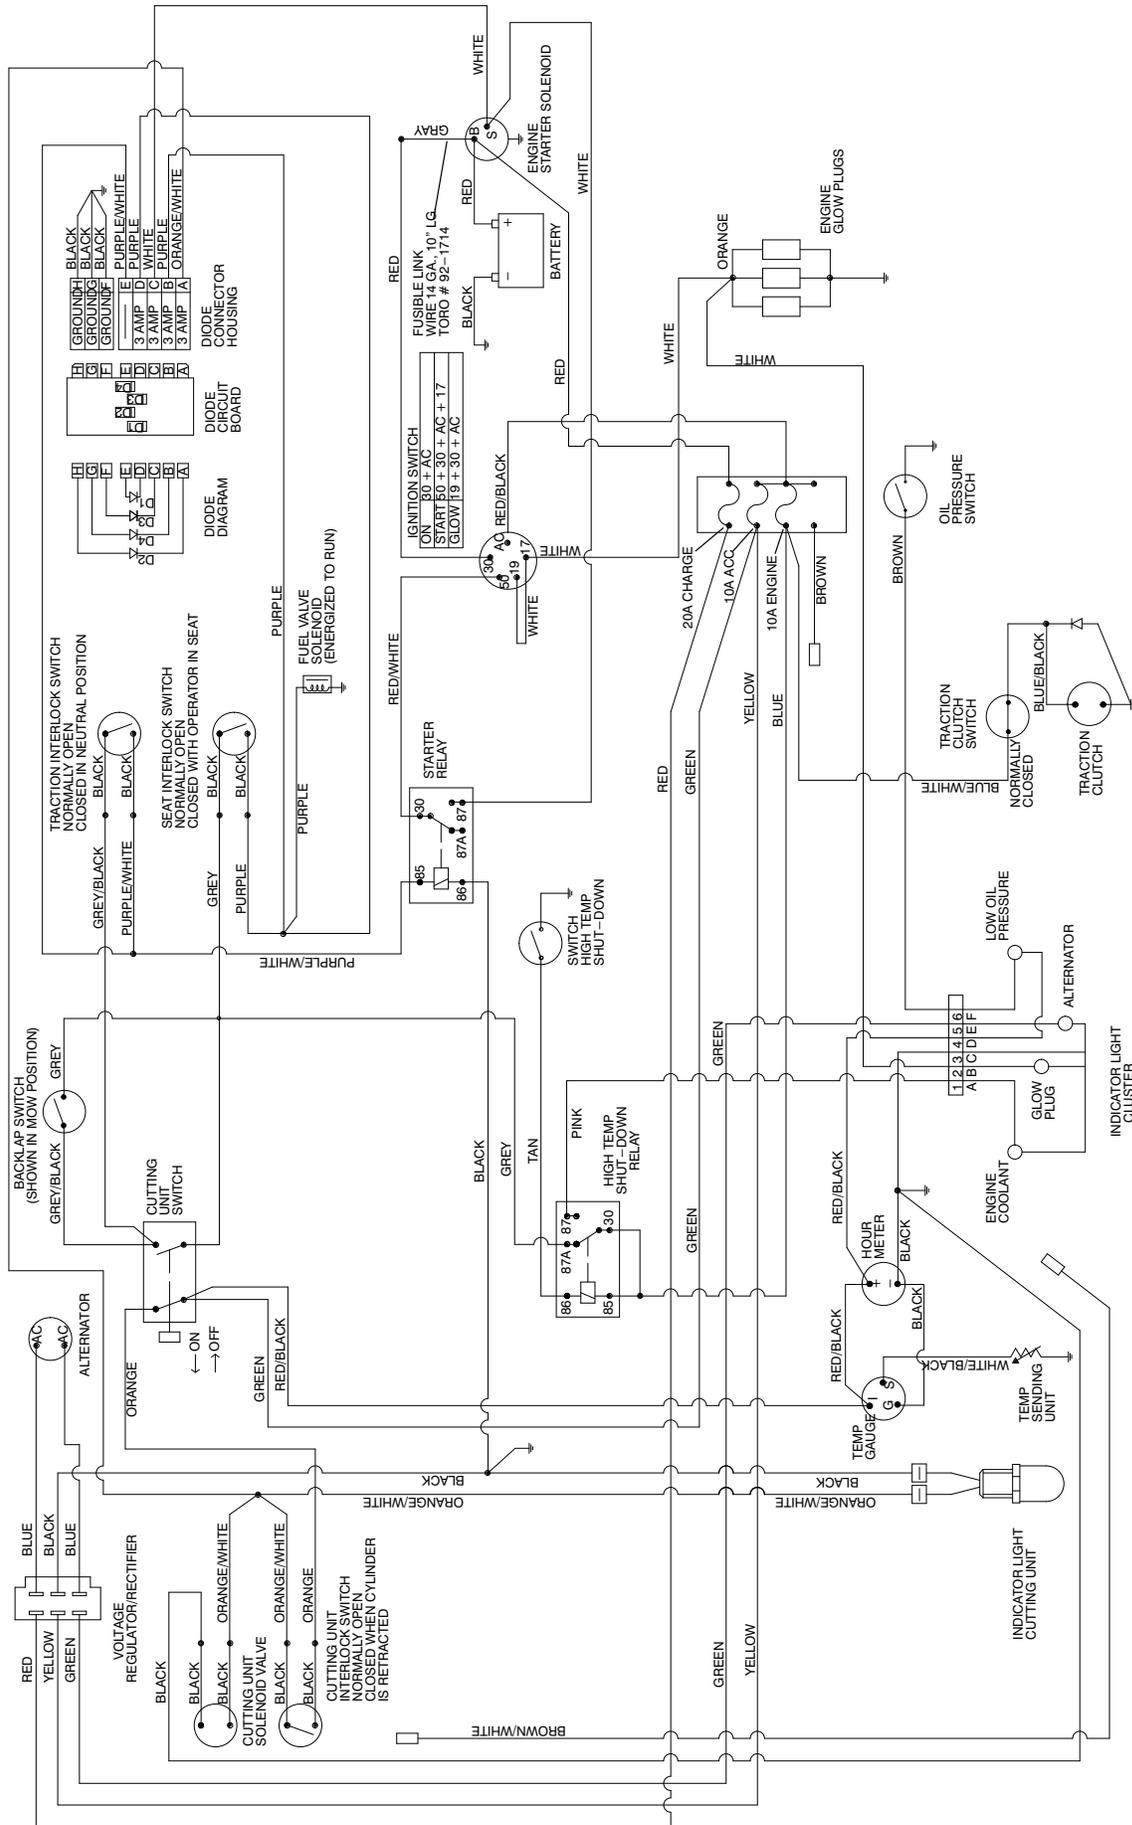


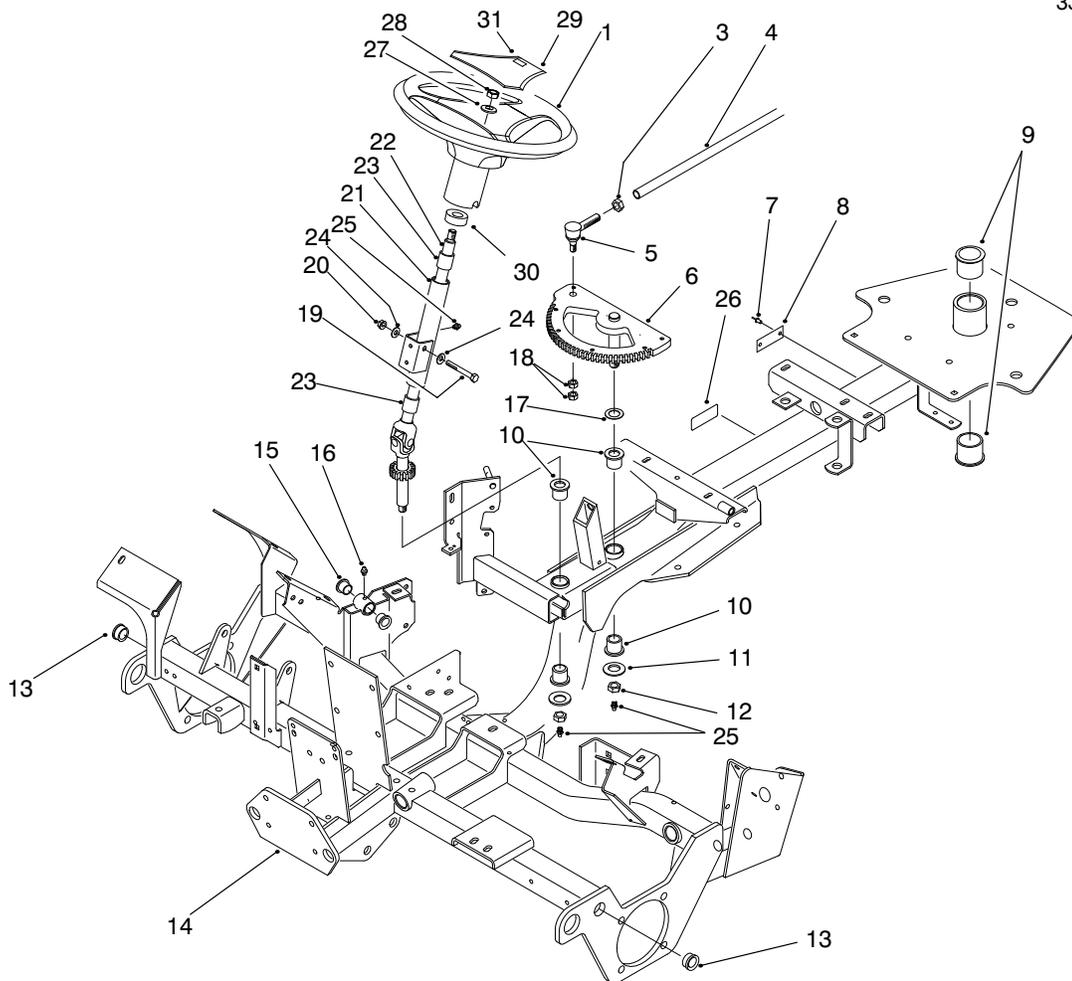

T-2153-6

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	98-1471	Asm-Steering Wheel (Incl. Ref. #29)	1	16	302-60	Fitting-Lube	1
3	3220-5	Nut-Hex Jam	1	17	3-6498	Washer-Thrust	A/R
4	61-2070	Tube-Steering	1	18	3220-3	Nut-HJ	2
5	21-0150	Asm-Socket, LH	1	19	322-12	Screw HH	1
6	93-6768	Gear-Sector	1	20	3296-29	Nut-Hex. Lock	1
7	3290-55	Rivet-Pop	2	21	93-6769	Steering Column	1
8		Plate-Serial Number	1	22	94-5969	Steering Shaft & Gear	1
9	256-245	Bushing	2	23	256-27	Bushing	2
10	92-3162	Bushing-Flange	4	24	87-8640	Washer-Flat, Hardened	2
11	3256-27	Washer-Flat	2	25	302-5	Fitting-Grease	3
12	3296-33	Nut-Lock Nylon	2	26	93-7252	Decal-CE Mark (Europe)	1
13	256-247	Bushing-Flange	2	27	3256-26	Washer-Flat	1
14	94-5114	Asm-Frame (Incl. Ref. #9-10, 13, 15 & 16)	1	28	3296-25	Nut-Lock	1
15	75-2160	Bushing-Flange	2	29	98-1468	Cover-Steering Wheel	1
				30	21-9260	Cover-Dust	1
				31	98-1459	Decal-Toro	1

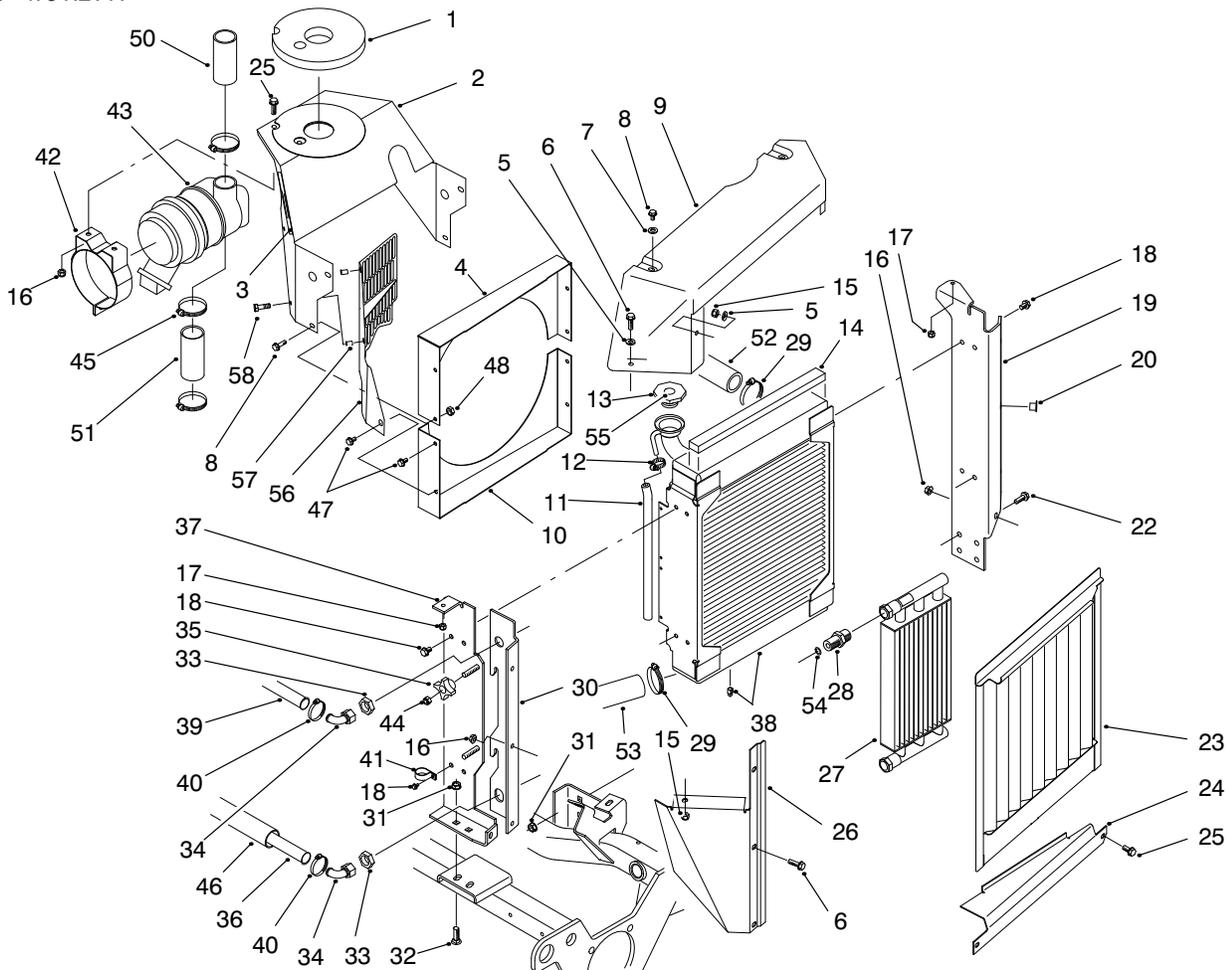


T-2157-1

RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-6877	Foam-Seal	1
2	94-3634	Asm-Air Cleaner Housing (Incl. Ref. #3)	1
3	77-3100	Decal-Caution	1
*	93-7272	Decal-Caution (Europe)	1
*	84-6760	Decal-Caution (Japan)	1
4	93-6731	Shroud-Radiator Top	1
5	3256-23	Washer-Flat	2
6	3234-17	Screw-HH	4
7	3256-22	Washer-Flat	2
8	3234-4	Screw-HH	4
9	83-8040	Cover-Left	1
10	93-6730	Shroud-Radiator Bottom	1
11	71-3382	Hose	1
12	2412-108	Clamp-Hose	1
13	66-3240	Cap-Radiator	1
14	83-9030	Foam-Top	1
15	3296-29	Nut-Hex. Lock	2
16	32128-44	Nut-Flange	6
17	3296-42	Nut-Hex. Lock	2
18	3234-28	Screw-HH	8
19	83-7980	Bracket-Radiator Rear	1
20	32148-8	Nut-Clinch	3
22	323-6	Screw-HH	4
23	83-8150	Asm-Screen	1
24	83-8070	Shield-Radiator Bottom	1
25	3234-5	Screw-Flange	4


Ref. No.	Part No.	Description	No. Used
26	83-8210	Panel-Left Front	1
27	93-6932	Exchanger-Heat	1
28	83-7970	Fitting-Hydraulic (Incl. Ref. #54)	2
29	2412-34	Clamp-Hose	2
30	88-6730	Bracket-Screen Front	1
31	32128-43	Nut-Whiz Flange	6
32	3231-22	Bolt-Carriage	2
33	340-127	Nut-Bulkhead ORS	2
34	93-6803	Fitting-90°	2
35	93-7159	Knob	2
36	93-6804	Hose	1
37	88-6720	Radiator Bracket	1
38	93-6726	Asm-Radiator	1
39	93-6805	Hose	1
40	2412-36	Clamp-Hose	2
41	2412-41	Clamp-R	1
42	93-2191	Asm-Clamp	1
43	93-2190	Asm-Air Cleaner	1
45	2412-92	Clamp-Hose	3
46	93-6933	Sleeve-Protective	1
47	32104-116	Screw-HFH	6
48	32128-33	Nut-Lock Flange	2
50	93-6876	Hose-Air Inlet Upper	1
51	93-6724	Hose-Air Inlet Lower	1
52	93-6728	Hose-Radiator Upper	1
53	93-6729	Hose-Radiator Lower	1

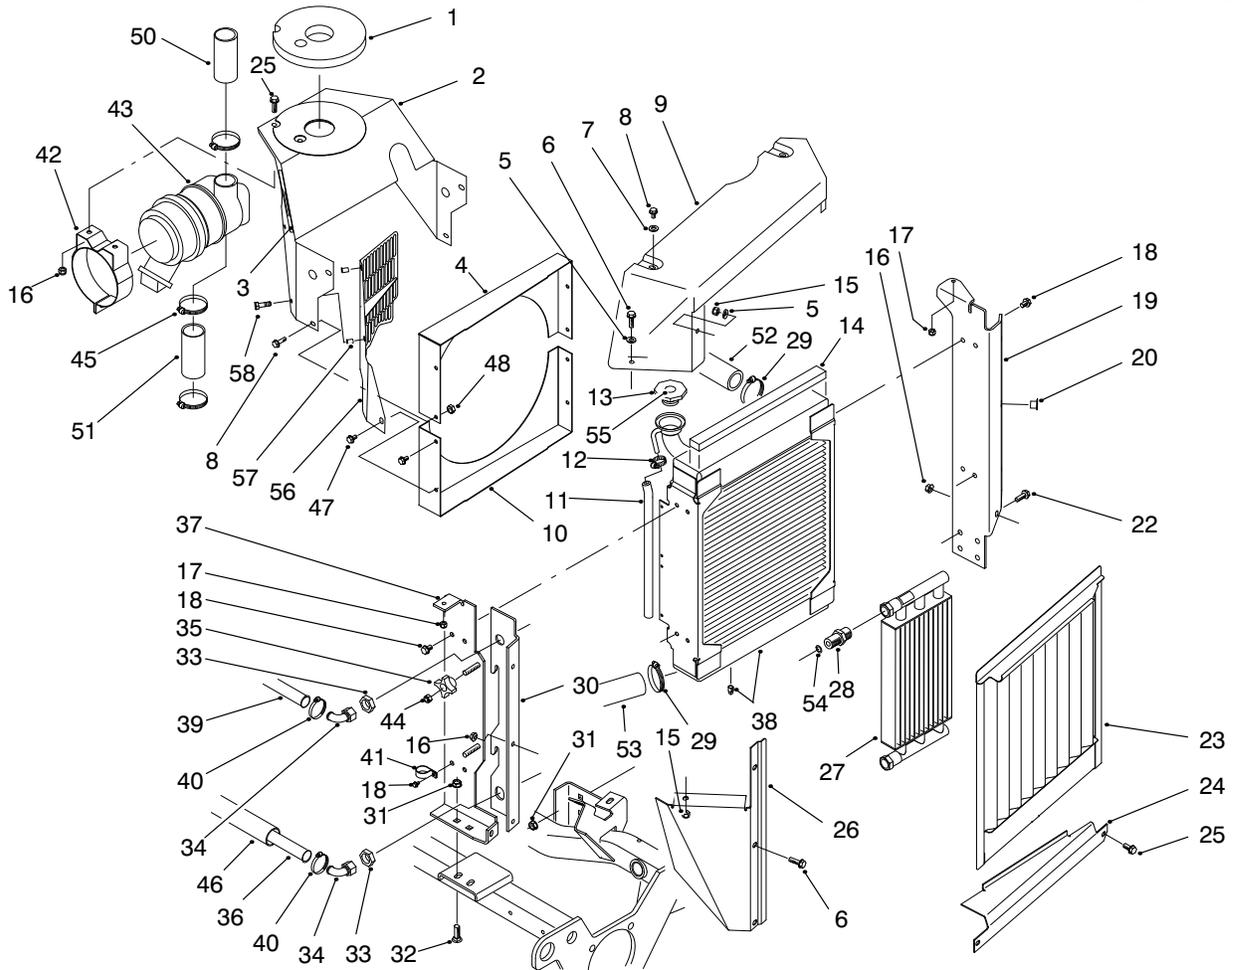

T-2157-1

RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
54	237-30	O-Ring	2	56	94-3665	Asm-Guard (Europe)	1
55	93-7840	Decal-Radiator Cap (Europe)	1	57	32148-6	Insert-Threaded (Europe)	2
				58	3234-4	Screw-HH (Europe)	2

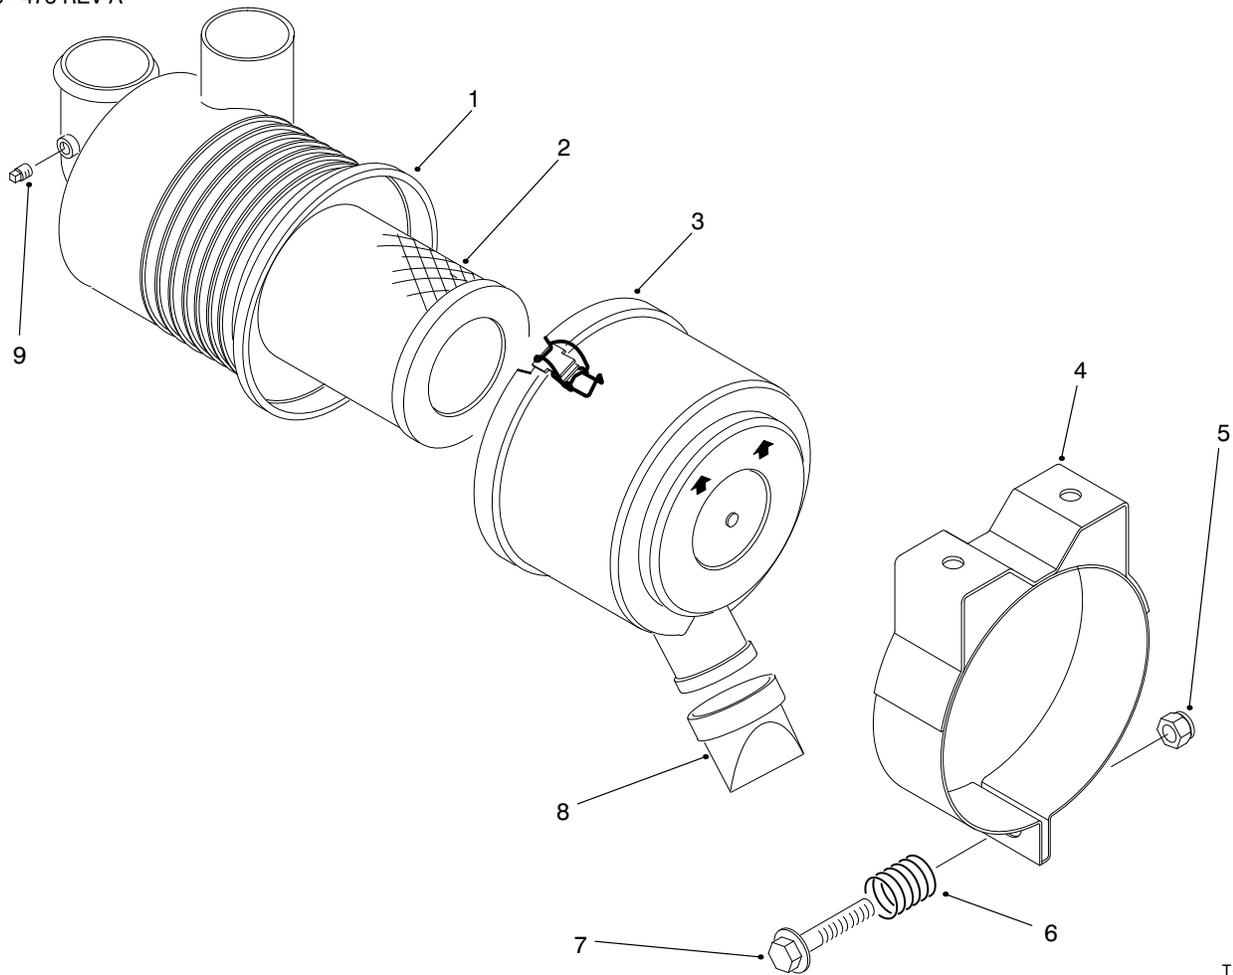

T-2201-1


AIR CLEANER & CLAMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1		Body-Air Cleaner	1
2	93-2195	Element-Air Cleaner	1
3	94-3652	Asm-Cover	1
4	93-2191	Asm-Clamp (Incl. Ref. #5-7)	1
5	48-9510	Nut-Lock	1

Ref. No.	Part No.	Description	No. Used
6	94-3654	Spring-Compression	1
7	94-3653	Bolt	1
8	87-9400	Valve	1
9	285-17	Plug	1
*	93-2190	Asm-Air Cleaner (Incl. Ref. #1-3, 8 & 9)	1

*Not Illustrated


†Not Serviced Separately

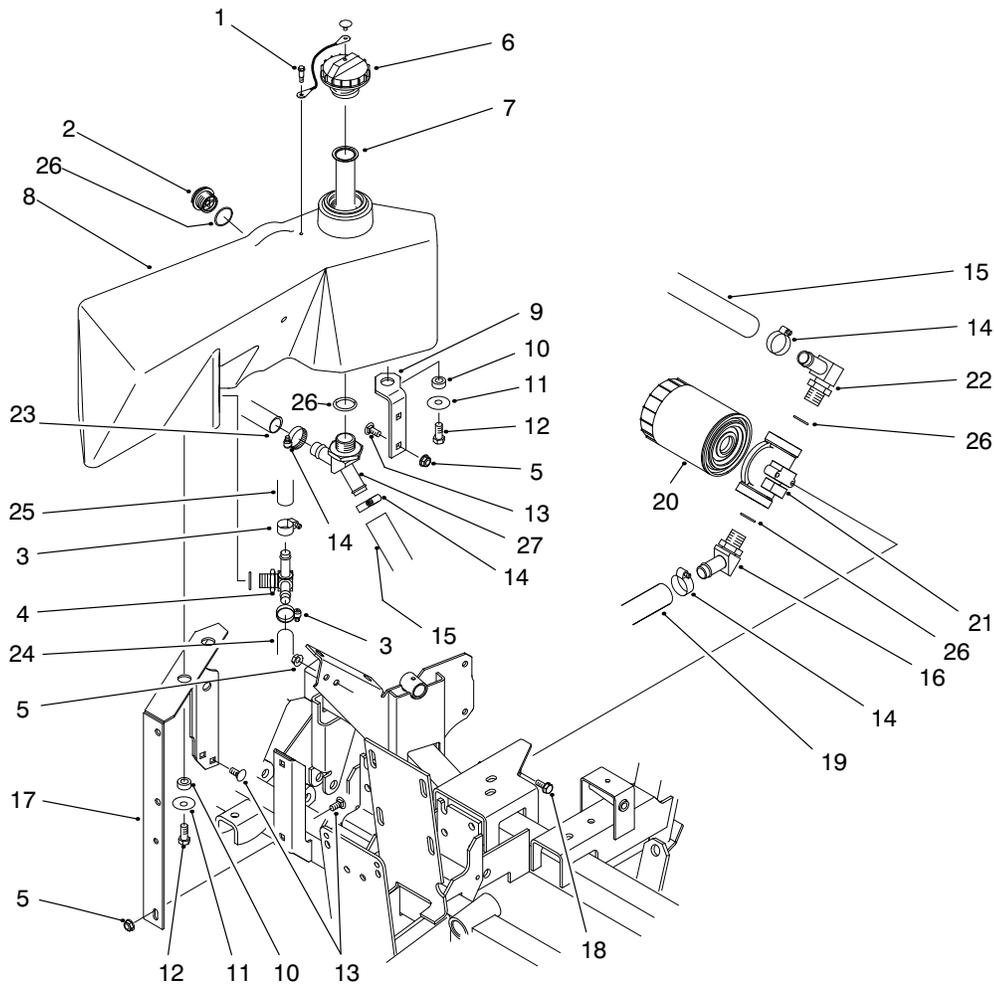

T-2159-1

HYDRAULIC RESERVOIR & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	57-5420	Screw-Shoulder	1	16	354-127	Fitting-45°	
2	69-1170	Glass-Sight (Incl. Ref. #26)	1	17	94-3633	U-Bracket Support	1
3	2412-36	Clamp-Hose	2	18	3234-33	Screw-HH	2
4	93-6793	Fitting-Barb	1	19	93-6799	Hose-Hydraulic	1
5	32128-44	Nut-Flange	6	20	54-0110	Element-Oil Filter	1
6	93-7160	Asm-Oil Cap	1	21	68-8990	Head-Oil Filter	1
7	61-2790	Filler-Screen	1	22	353-987	Fitting-90°	
8	93-6811	Tank-Hydraulic	1			(Incl. Ref. #26)	1
9	83-9920	Bracket-Hydraulic Tank	1	23	93-6857	Hose-Hydraulic	1
10	240-11	Grommet	3	24	93-6804	Hose-Hydraulic	1
11	63-8410	Washer-Flat	3	25	93-6806	Hose-Hydraulic	1
12	323-5	Screw-HH	3	26	237-81	O-Ring	4
13	3230-23	Screw-Carriage	6	27	93-6794	Fitting-Special	
14	2412-34	Clamp-Hose	4			(Incl. Ref. #26)	1
15	83-9651	Hose-Hydraulic	1				

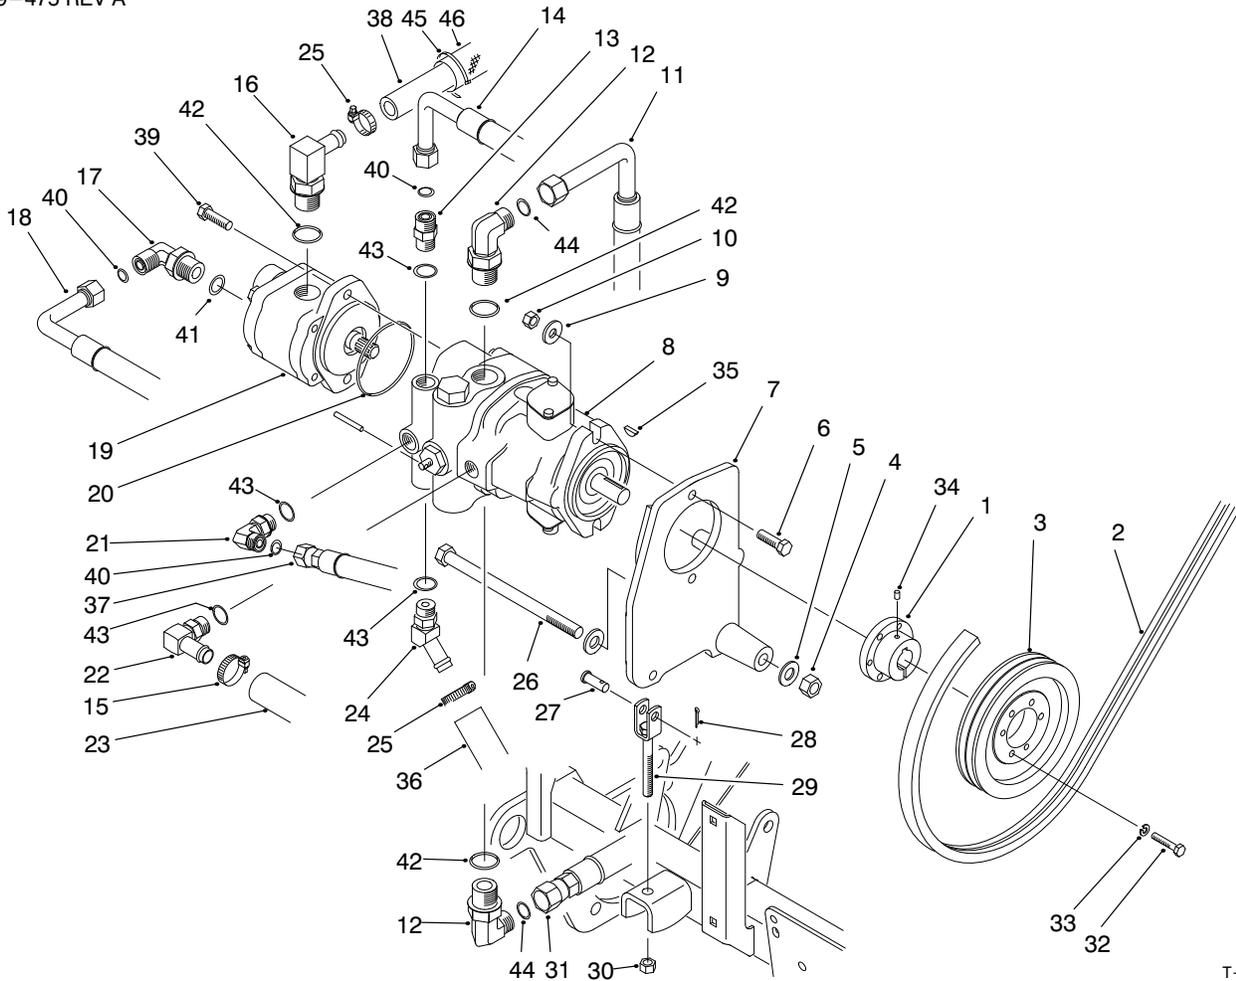


T-2160-1

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-6842	Asm-Taper Lock Bushing (Incl. Ref. #32-34)	1
2	93-6840	Belt-Pump Drive	1
3	93-6841	Pulley	1
4	3296-23	Nut-Hex. Lock	1
5	87-7270	Washer-Hardened	2
6	323-9	Screw-HH	2
7	93-6737	Pump Mount Mach	1
8	93-6751	Asm-Pump (Incl. Ref. #35)	1
9	80-6990	Washer-Hardened	2
10	3296-39	Nut-Hex. Lock	2
11	93-6829	Asm-Hose	1
12	340-139	Elbow-90° (Incl. Ref. #42 & 44)	2
13	340-4	Fitting-ORS (Incl. Ref. #40 & 43)	1
14	93-6797	Asm-Hose	1
15	2412-36	Clamp-Hose	1
16	353-987	Fitting-90° (Incl. Ref. #42)	1
17	340-105	Elbow (Incl. Ref. #40-41)	1
18	93-6800	Hose-Hyd	1
19	93-6974	Pump-Reel Drive	1
20	353-949	O-Ring	1
21	340-98	Fitting (Incl. Ref. #40 & 43)	1

Ref. No.	Part No.	Description	No. Used
22	93-6795	Fitting-90° (Incl. Ref. #43)	1
23	93-6806	Hose	1
24	93-6848	Fitting-Barb 45° (Incl. Ref. #43)	1
25	2412-34	Clamp-Hose	2
26	325-36	Screw-HH	1
27	283-2	Pin-Clevis	1
28	3272-6	Pin-Cotter	1
29	93-6845	Yoke-Belt Adjust	1
30	3296-6	Nut-Lock	1
31	93-6828	Asm-Hose	1
32	321-13	Screw-Hex. Hd.	3
33	3253-3	Washer-Lock	3
34	3245-36	Screw-Set	1
35	94-3645	Key	1
36	93-6799	Hose-Hydraulic	1
37	93-6798	Hose-Hydraulic	1
38	93-6857	Hose-Hydraulic	1
39	323-7	Screw-HH	2
40	237-30	O-Ring	3
41	237-80	O-Ring	1
42	237-81	O-Ring	3
43	237-79	O-Ring	4
44	237-65	O-Ring	2
45	3290-379	Tie-Cable	2
46	94-3688	Sleeve-Protective	1

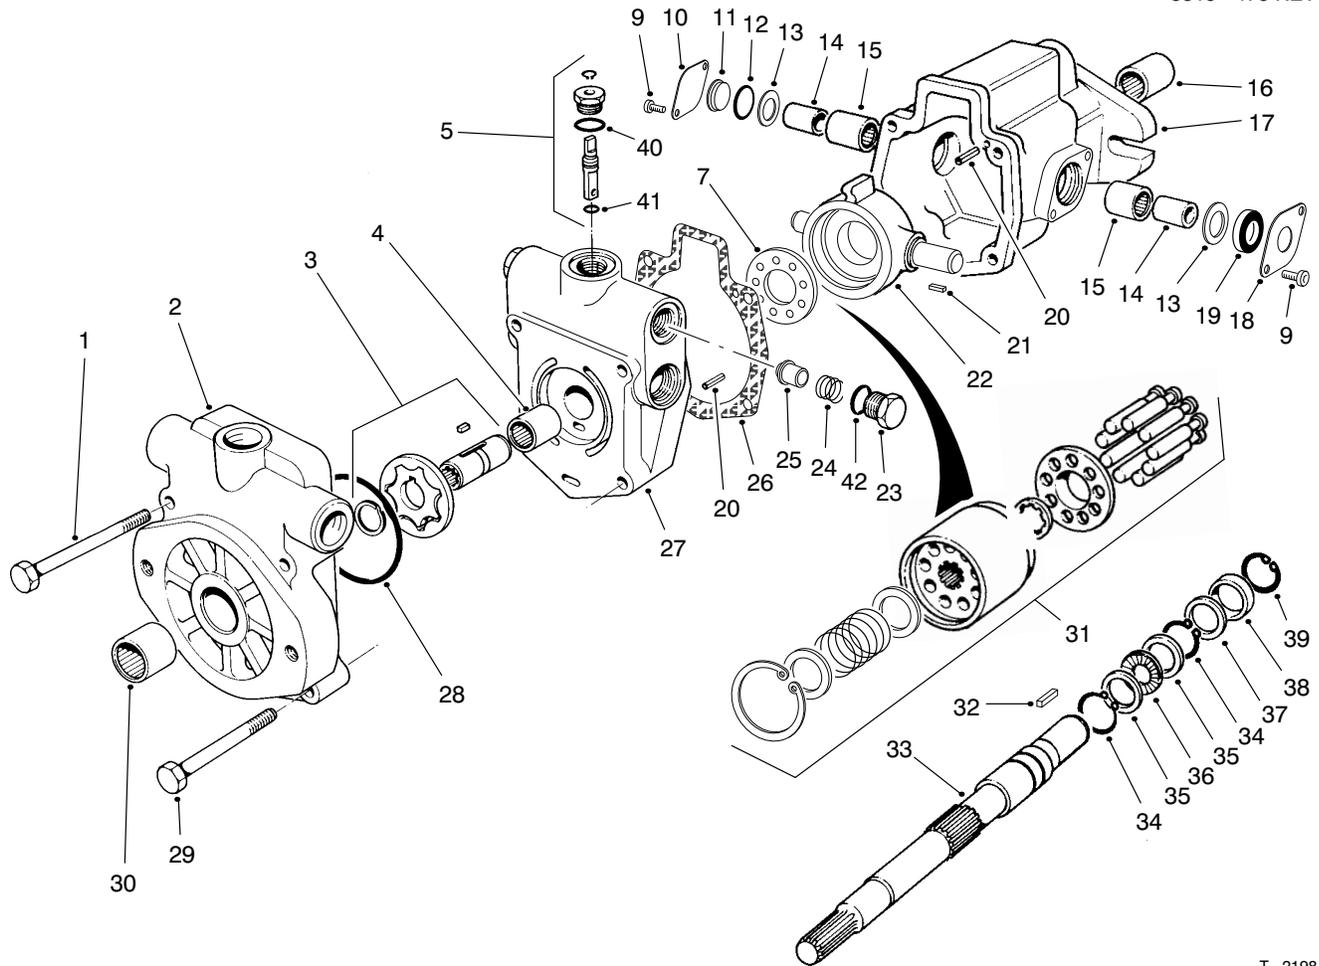


T-2198-1

HYDRAULIC PUMP ASSEMBLY NO. 93-6751

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-3	Screw-Hex. Hd.	2	24	76-6200	Spring	2
2	94-3647	Asm-Charge Pump Adaptor (Incl. Ref. #30)	1	25	94-3644	Seat	2
3	94-3648	Asm-Gerotor	1	26	33-4930	Gasket	1
4		Bearing	1	27	94-3640	Asm-Backplate (Incl. Ref. #4 & 20)	1
5	94-3650	Asm-Valve	1	28		O-Ring	1
7	94-3649	Plate-Valve	1	29	322-20	Screw-Hex. Hd.	2
9	60-6330	Screw-Pan Hd.	4	30		Bearing	1
10	76-6090	Cover-Trunnion	1	31	76-6070	Kit-Rotating Parts	1
11	76-6100	Cover	1	32	94-3645	Key	1
12	76-6140	O-Ring	1	33	94-3642	Shaft-Drive	1
13	76-6180	Washer	2	34	32151-29	Ring-Retaining	2
14	33-3750	Race-Inner	2	35	252-71	Race-Bearing	2
15	252-95	Bearing	2	36	252-66	Bearing-Thrust	1
16		Bearing	1	37	33-3270	Washer	1
17	94-3641	Asm-Housing (Incl. Ref. #16)	1	38	42-2720	Seal-Shaft	1
18	76-6080	Cover-Seal	1	39	32151-13	Ring-Retaining	1
19	76-6190	Seal-Shaft	1	40		O-Ring	1
20	76-6150	Pin-Dowel	2	41		O-Ring	1
21	94-3646	Key	1	42		O-Ring	2
22	94-3643	Camplate	1	*	94-3651	Kit-Seal (Incl. Ref. #12, 19, 26, 28, 34, 38 & 39-42)	1
23	70-1240	Asm-Plug (Incl. Ref. #42)	2				

*Not Illustrated

3319-475 REV A

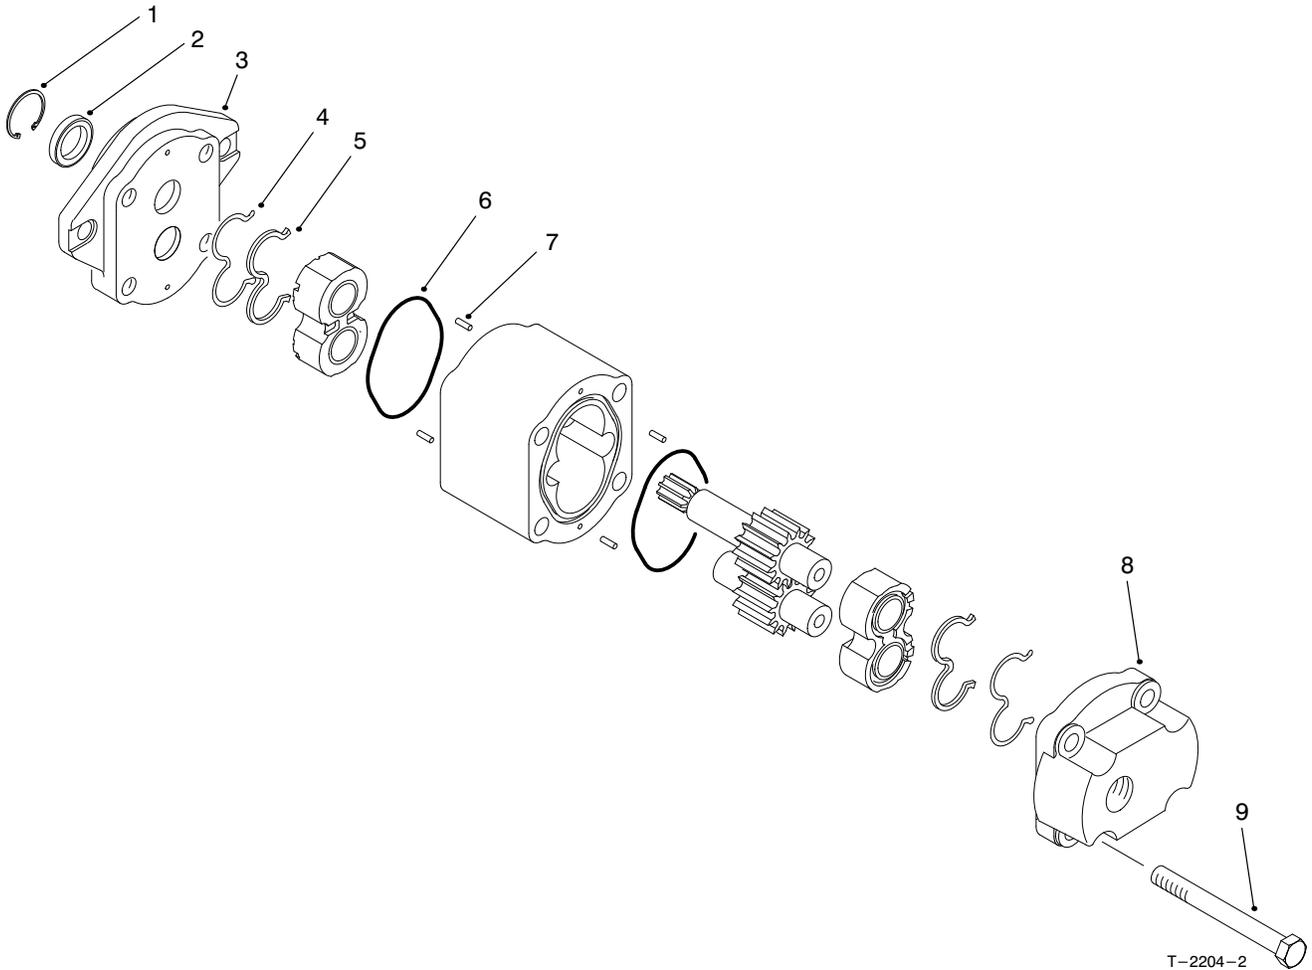


HYDRAULIC PUMP ASSEMBLY NO. 93-6974

Ref. No.	Part No.	Description	No. Used
1		Ring-Retaining	1
2		Seal-Shaft	2
3	94-3624	Asm-Flange (Incl. Ref. #1, 2 & 7)	1
4		Seal-E	2
5		Ring-Backup	2

Ref. No.	Part No.	Description	No. Used
6		O-Ring	2
7	94-3625	Pin-Dowel	4
8	94-3626	Cover-End	1
9	94-3639	Bolt	4
*	94-3623	Kit-Seal (Incl. Ref. #1, 2 & 4-6)	1


*Not Illustrated

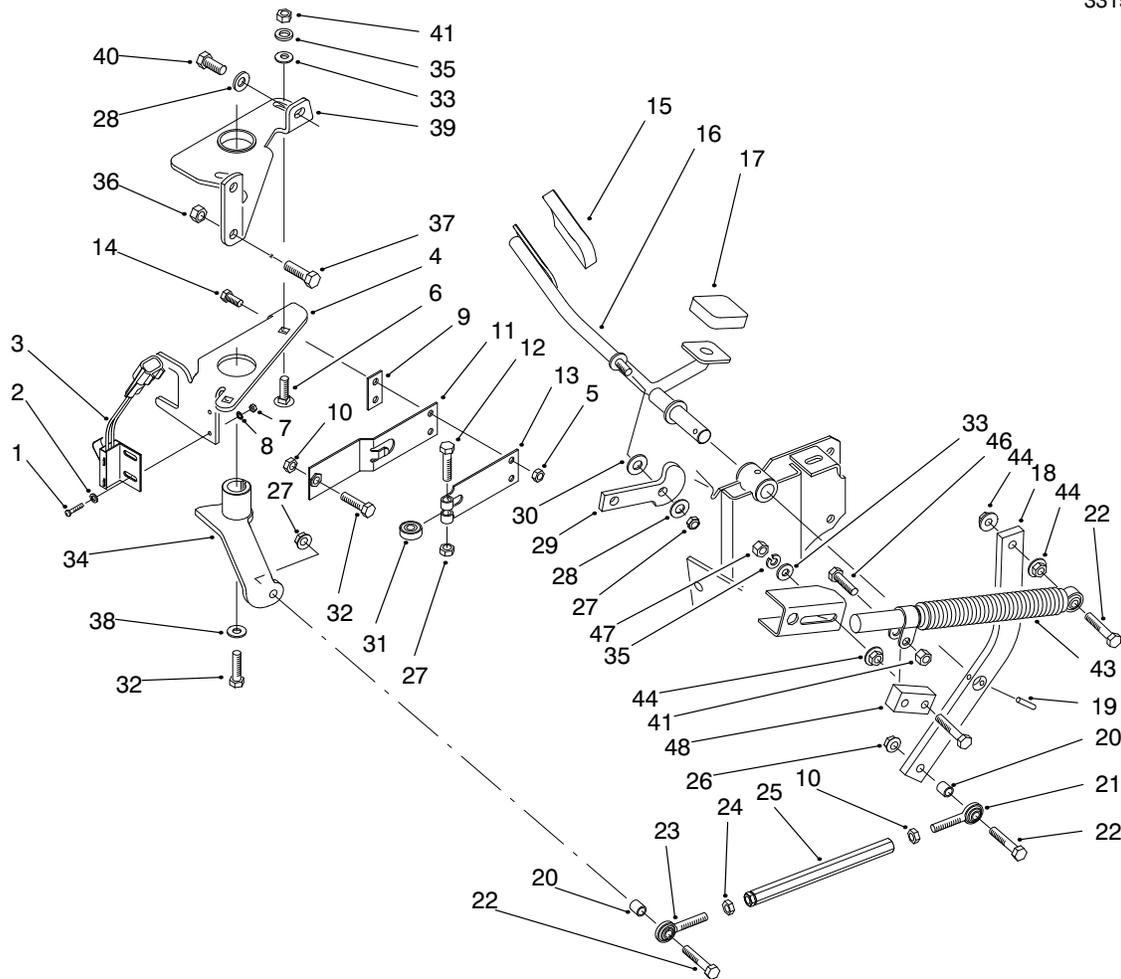

T-2161-1

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3249-3	Screw-Round Hd	2	24	3220-20	Nut-Jam	1
2	3256-53	Washer-Flat	2	25	83-8760	Rod-Pump Control	1
3	94-1754	Micro Switch	1	27	3296-59	Nut-Lock	1
4	93-6825	Plate-Pump	1	28	3256-24	Washer-Flat	2
5	3296-16	Nut-Lock	2	29	74-6110	Stop-Cam	1
6	3230-2	Screw-Carriage	2	30	66-2920	Washer-Nylon	1
7	3217-29	Nut-HH	2	31	251-259	Bearing-Ball	1
8	3254-9	Washer-Lock Int Tooth	2	32	3210-7	Screw-HH	2
9	51-3150	Shim-Spring Arm	1	33	3256-23	Washer-Flat	3
10	3220-2	Nut-Hex Jam	2	34	93-6824	Asm-Pump Lever	1
11	29-6170	Asm-Extended Leaf Spring	1	35	3253-4	Washer-Spring Lock	3
12	322-17	Screw-HH	1	36	3296-39	Nut-Hex Lock	2
13	29-6150	Spring-Leaf	1	37	323-7	Screw-HH	2
14	321-6	Screw-HH	2	38	87-8640	Washer-Flat Hardened	1
15	74-9100	Pad-Pedal Forward	1	39	93-6826	Mounting Bracket	1
16	83-8270	Pedal-Traction	1	40	323-5	Screw-HH	1
17	74-9110	Pad-Pedal Reverse	1	41	3296-29	Nut-Hex Lock	3
18	93-6936	Arm-Traction	1	43	76-8870	Dampner	1
19	32121-6	Pin-Roll	1	44	32128-44	Nut-Flange Lock	3
20	93-6859	Spacer	2	46	322-6	Screw-Hex. Hd.	1
21	2411-52	Bearing-Rod End RH	1	47	3217-6	Nut-Hex.	1
22	322-9	Screw-HH	4	48	76-9760	Pivot-Damper	1
23	2411-53	Bearing-Rod End LH	1				

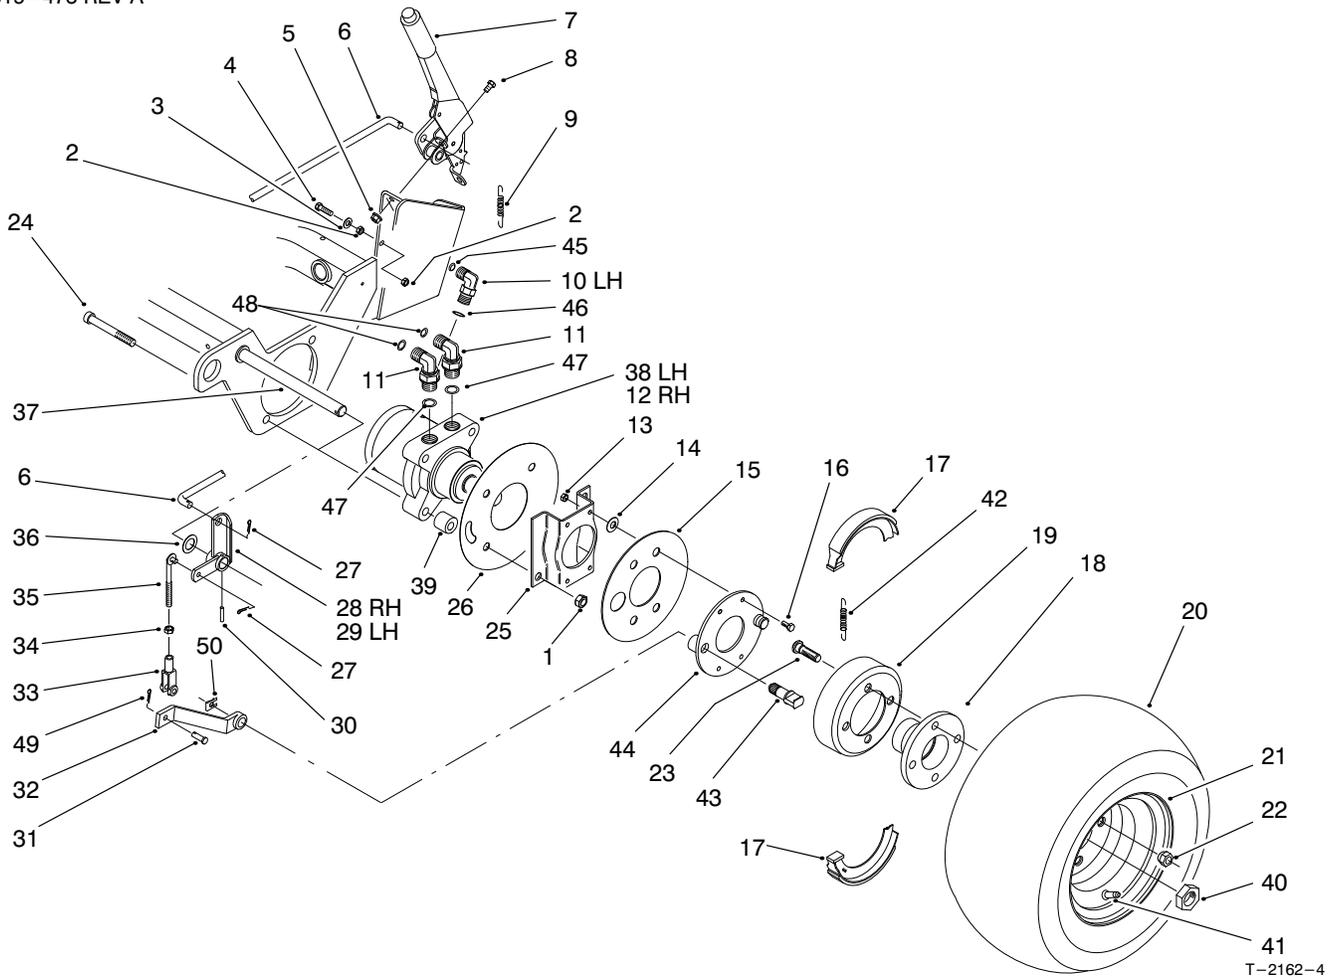


FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-23	Nut-Hex Lock	8
2	32128-20	Nut-Lock Flange Whiz	2
3	3256-23	Washer-Flat	1
4	322-17	Screw-HH	1
5	32128-44	Nut-Flange	2
6	83-9350	Rod-Adjusting	1
7	61-3990	Parking Brake	1
8	3234-5	Screw-Flange	2
9	5-7290	Spring	1
10	340-77	Fitting - Hyd. LH (Incl. Ref. #45 & 46)	1
11	340-17	Elbow ORS (Incl. Ref. #47 & 48)	4
12	75-9990	Motor-Hydraulic RH	1
13	3296-42	Nut-Hex Lock	8
14	3256-16	Washer-Flat	8
15	83-9340	Shield-Grass Brake	2
16	321-5	Screw-HH	8
17	70-9840	Shoe-Brake	4
18	93-6838	Hub-Wheel	2
19	10-6850	Drum Brake	2
20	93-6879	Tire	2
21	93-6881	Rim	2
22	242-50	Nut-Lug	8
23	85-6540	Drive Type Stud	8
24	3274-99	Screw-Socket Hd.	8
25	84-2000	Bracket-Brake	2

Ref. No.	Part No.	Description	No. Used
26	93-6905	Shield-Wheel	2
27	3272-6	Pin-Cotter	3
28	83-9310	Brake Arm-RH	1
29	83-9270	Brake Arm-LH	1
30	32121-6	Pin-Roll	2
31	283-1	Pin-Clevis	2
32	93-6850	Brake Lever	2
33	282-2	Clevis	2
34	3220-2	Nut-Hex Jam	2
35	84-1990	Rod-Adjusting	2
36	3-6498	Washer-Thrust	2
37	83-9330	Shaft-Brake	1
38	93-6888	Motor-Hydraulic LH	1
†39	94-5135	Spacer	8
40	26-3790	Nut-Lock	2
41	232-27	Stem-Valve	2
42	70-9880	Spring-Extension	4
43	70-9860	Pin-Pivot	2
44	70-9870	Plate-Brake	2
45	237-22	O-Ring	1
46	237-42	O-Ring	1
47	237-80	O-Ring	4
48	237-65	O-Ring	4
49	3272-10	Pin-Cotter	2
*	71-1500	Asm-Brake (Incl. Ref. #17 & 42-44)	2
50	70-9850	Clip - Retaining	2

†For model 03427 serial no. 70001-70212 & model 30427TE serial no. 70001-70211,
4 spacers (per wheel) must be replaced.

*Not Illustrated

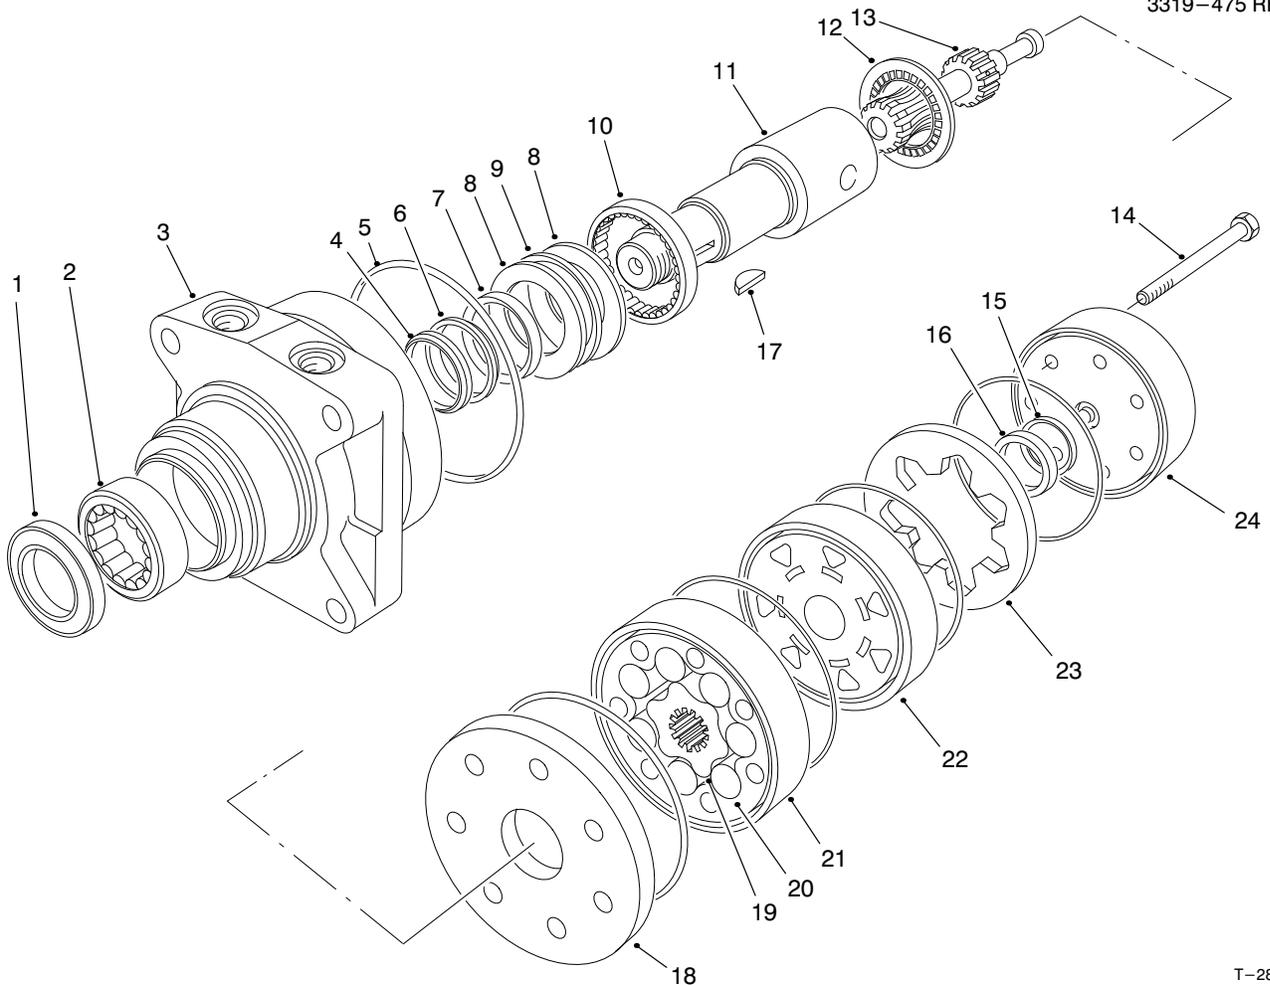


T-2805-1

REAR HYDRAULIC DRIVE MOTOR NO. 75-9990 (MODEL NO. 03427)

Ref. No.	Part No.	Description	No. Used
1		Seal-Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer-Backup	1
5		Seal Rings	5
6		Washer-Backup	1
7		Seal-Inner	1
8		Washer-Thrust	2
9		Bearing-Thrust	1
10		Bearing	1
11	76-0860	Shaft-Coupling	1
12	76-0850	Bearing-Thrust	1
13	76-0960	Link-Drive	1
14	76-1010	Screw-Hex. Hd.	7
15		Seal-Commutator	1
16		Commutator	1

Ref. No.	Part No.	Description	No. Used
17	3257-42	Key-Woodruff	1
18	76-0870	Plate-Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	76-0840	Manifold	1
23		Ring-Commutator	1
24	76-0940	Asm-End Cover	1
*	76-0970	Rotor Set (Incl. Ref. #19-21)	1
*	76-0880	Asm-Commutator (Incl. Ref. #15, 16 & 23)	1
*	76-0800	Kit-Seal (Incl. Ref. #1, 4-7 & 15)	1
*	76-0810	Asm-Housing (Incl. Ref. #2, 3 & 8-10)	1

*Not Illustrated

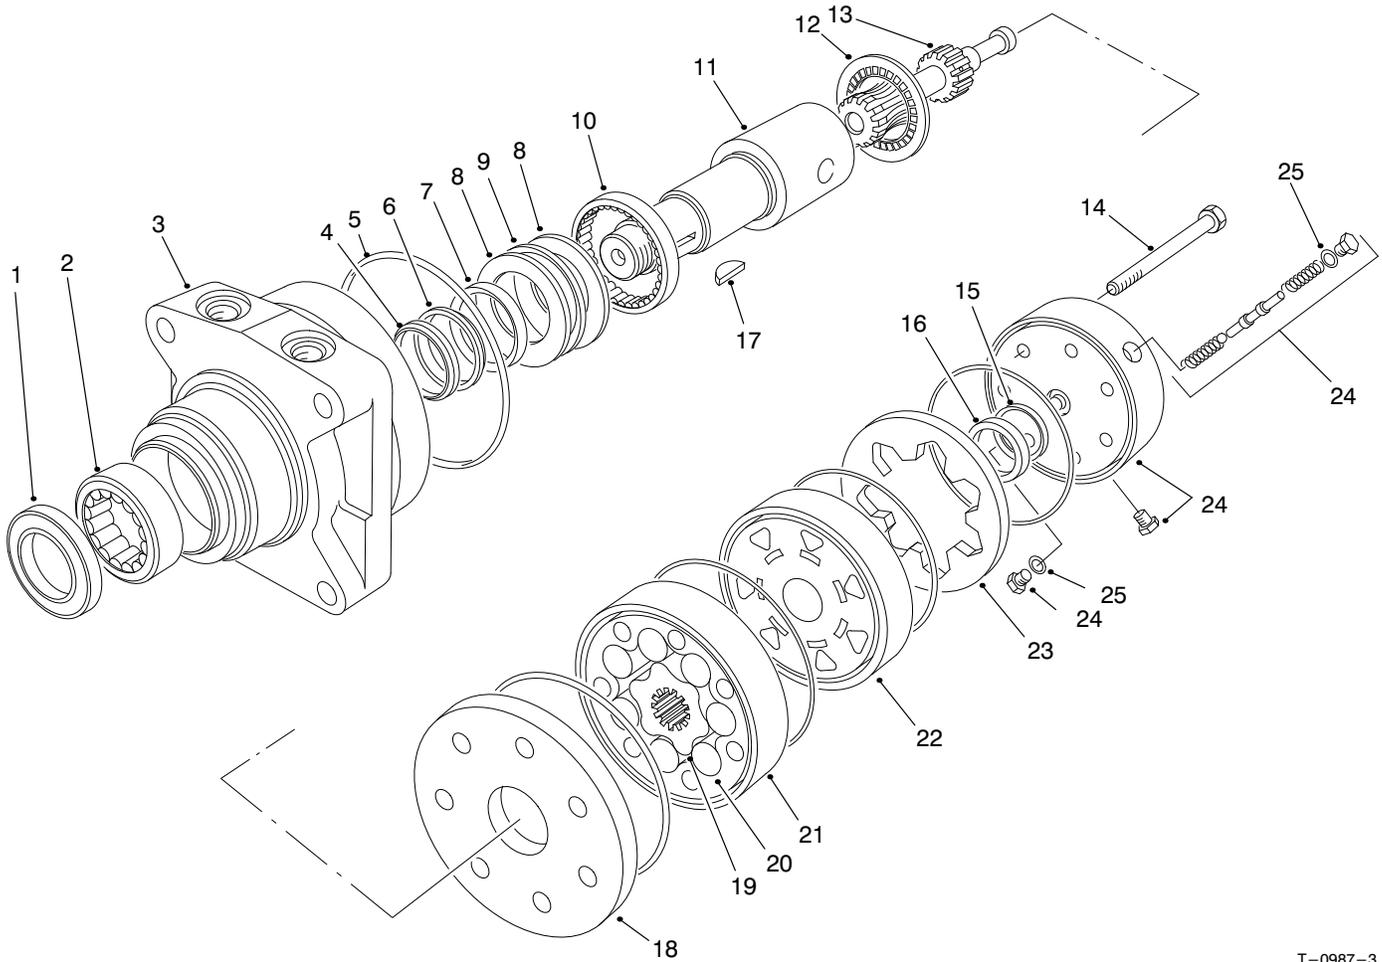


T-0987-3

FRONT HYDRAULIC DRIVE MOTOR NO. 93-6888

Ref. No.	Part No.	Description	No. Used
1		Seal-Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer-Backup	1
5		Seal Rings	5
6		Washer-Backup	1
7		Seal-Inner	1
8		Washer-Thrust	2
9		Bearing-Thrust	1
10		Bearing	1
11	76-0860	Shaft-Coupling	1
12	76-0850	Bearing-Thrust	1
13	76-0960	Link-Drive	1
14	94-3662	Screw-Hex. Hd.	7
15		Seal-Commutator	1
16		Commutator	1
17	3257-42	Key-Woodruff	1

Ref. No.	Part No.	Description	No. Used
18	76-0870	Plate-Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	76-0840	Manifold	1
23		Ring-Commutator	1
24	76-0890	Asm-End Cover (Incl. Ref. #25)	1
*	76-0970	Rotor Set (Incl. Ref. #19-21)	1
*	76-0880	Asm-Commutator (Incl. Ref. #15, 16 & 23)	1
*	76-0800	Kit-Seal (Incl. Ref. #1, 4-7 & 15)	1
*	76-0810	Asm-Housing (Incl. Ref. #2, 3 & 8-10)	1
25	237-78	O-Ring	2


*Not Illustrated

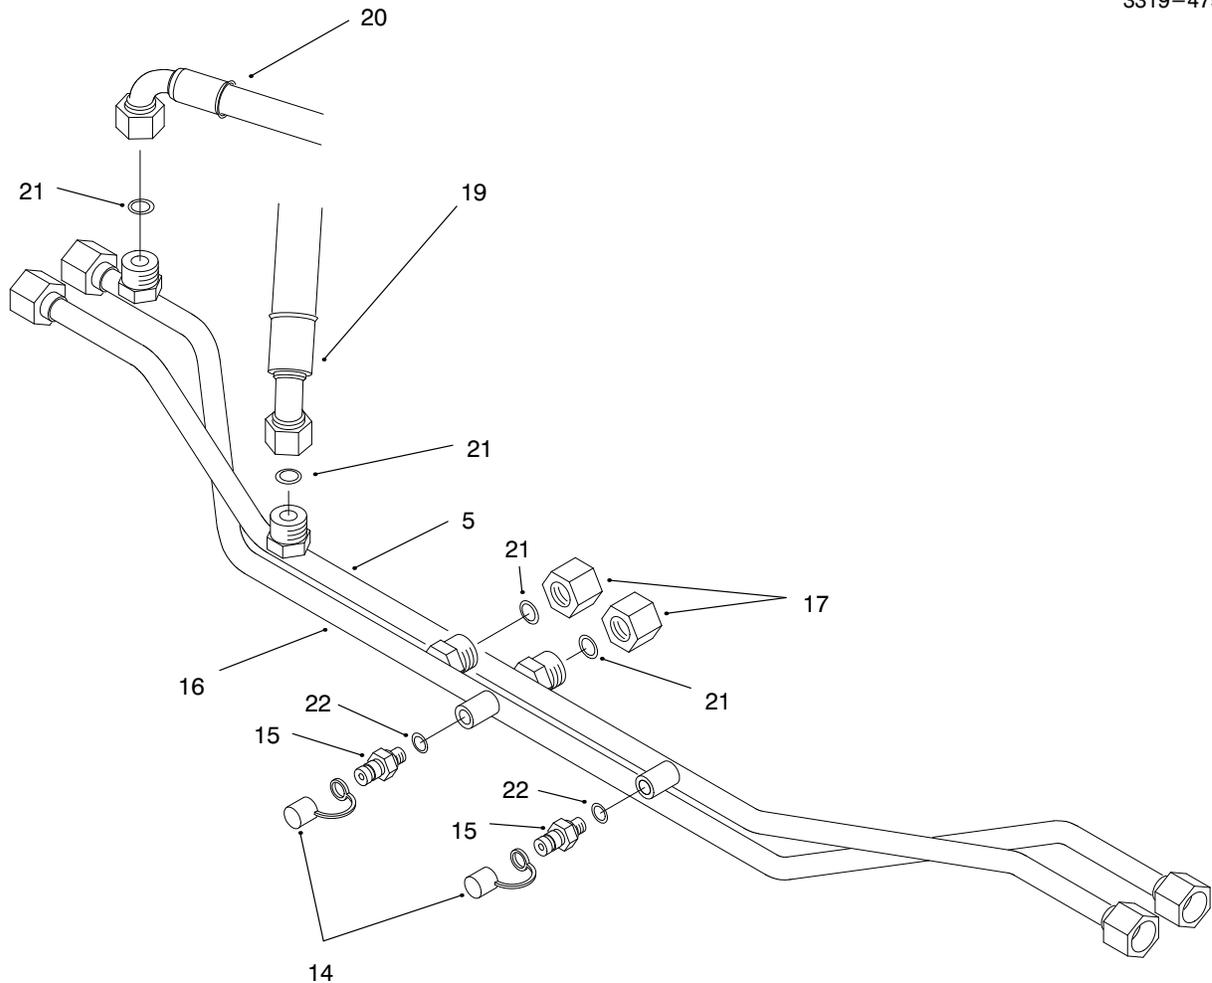

T-2385-1

DRIVE MOTOR PLUMBING ASSEMBLY (MODEL NO. 03422)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
5	93-6836	Asm-Tube (Incl. Ref. #21)	1	17	340-152	Cap-Hydraulic	2
14	354-79	Cap-Fitting Yellow	2	19	93-6828	Hose-Hydraulic	1
15	354-77	Fitting-Quick Connect (Incl. Ref. #22)	2	20	93-6829	Hose-Hydraulic	1
16	93-6837	Asm-Tube (Incl. Ref. #21)	1	21	237-30	O-Ring	6
				22	237-78	O-Ring	2

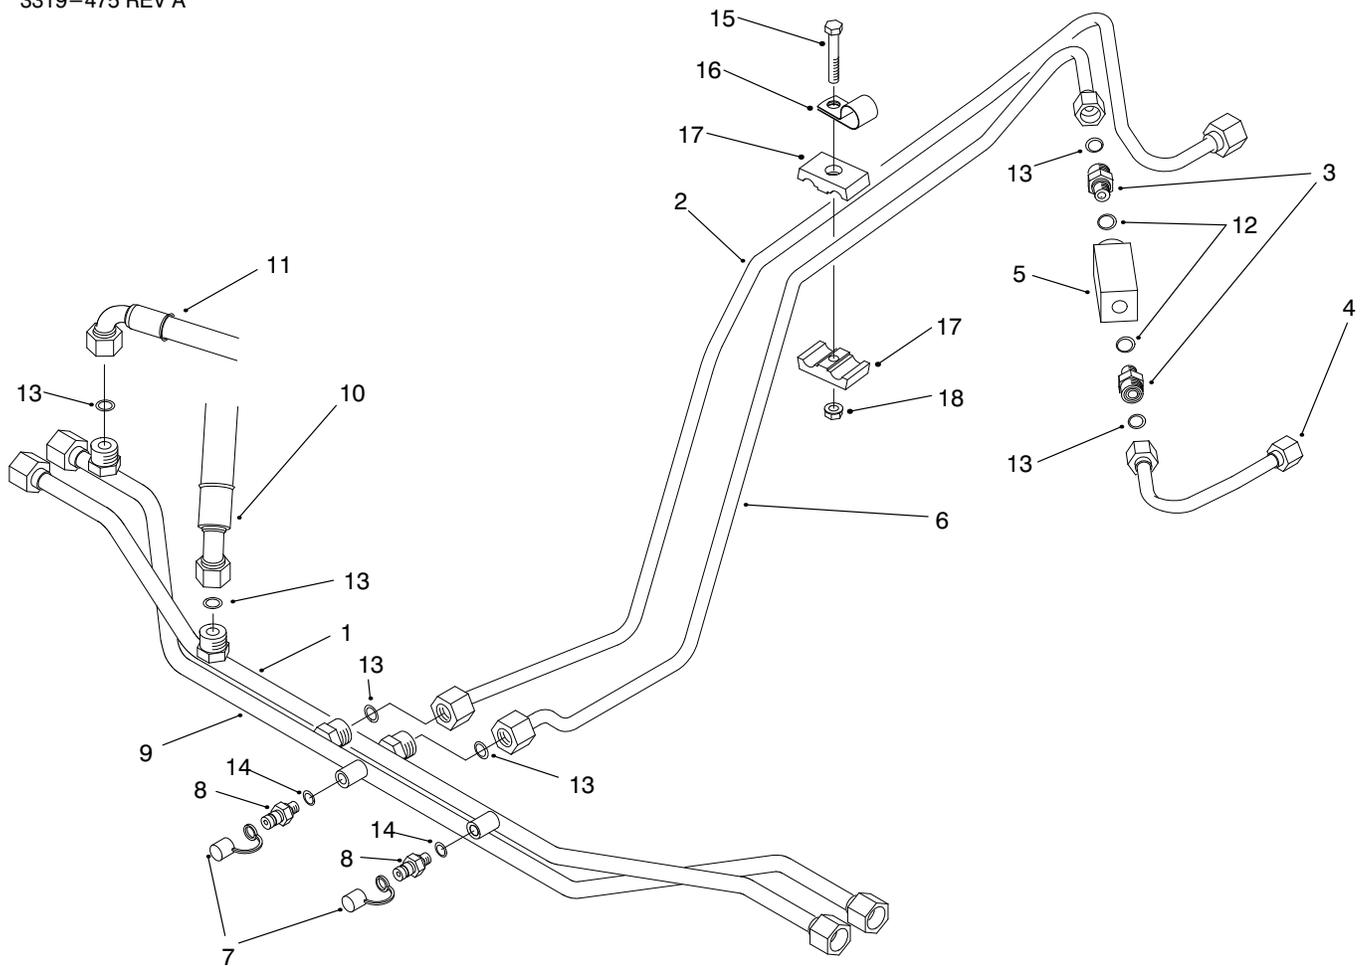


T-2163-3

DRIVE MOTOR PLUMBING ASSEMBLY (MODEL NO. 03427)

Ref. No.	Part No.	Description	No. Used
1	93-6836	Asm-Tube (Incl. Ref. #13)	1
2	93-6895	Asm-Tube 3wd Fwd	1
3	340-5	Fitting-ORS (Incl. Ref. #12 & 13)	2
4	83-9500	Asm-Tube 3wd Valve	1
5	94-5083	Valve-Flow Control	1
6	93-6896	Asm-Tube 3wd Reverse	1
7	354-79	Cap-Fitting Yellow	2
8	354-77	Fitting-Quick Connect (Incl. Ref. #14)	2


Ref. No.	Part No.	Description	No. Used
9	93-6837	Asm-Tube (Incl. Ref. #13)	1
10	93-6828	Hose-Hydraulic	1
11	93-6829	Hose-Hydraulic	1
12	237-42	O-Ring	2
13	237-30	O-Ring	6
14	237-78	O-Ring	2
15	322-10	Screw-HH	1
16	2412-104	Clamp-R	1
17	56-7976	Clamp-Tube	2
18	3296-29	Nut-Lock	1

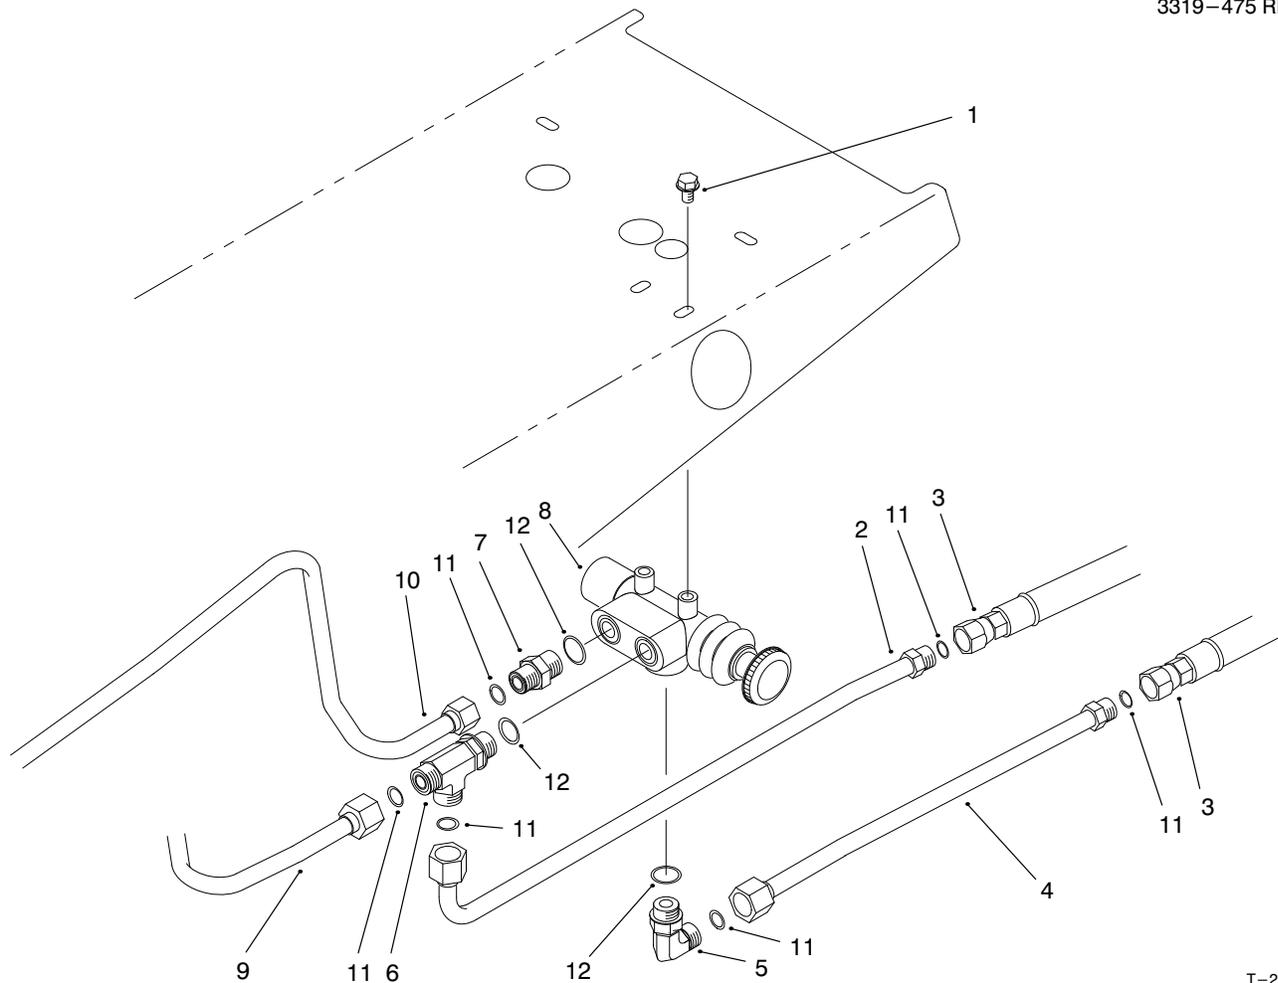

T-2152-1

REAR WHEEL DRIVE VALVE ASSEMBLY (MODEL NO. 03427)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3234-28	Screw-HH	2	6	340-109	Fitting-Tee (Incl. Ref. #11 & 12)	1
2	93-6830	Tube-Hyd (Incl. Ref. #11)	1	7	340-4	Fitting-ORS (Incl. Ref. #11 & 12)	1
3	93-6843	Asm-Hose	2	8	92-3196	Valve-2 Position	1
4	93-6835	Tube-Hyd (Incl. Ref. #11)	1	9	83-9500	Tube-Hydraulic	1
5	340-98	Fitting (Incl. Ref. #11 & 12)	1	10	93-6895	Tube-Hydraulic	1
				11	237-30	O-Ring	6
				12	237-79	O-Ring	3

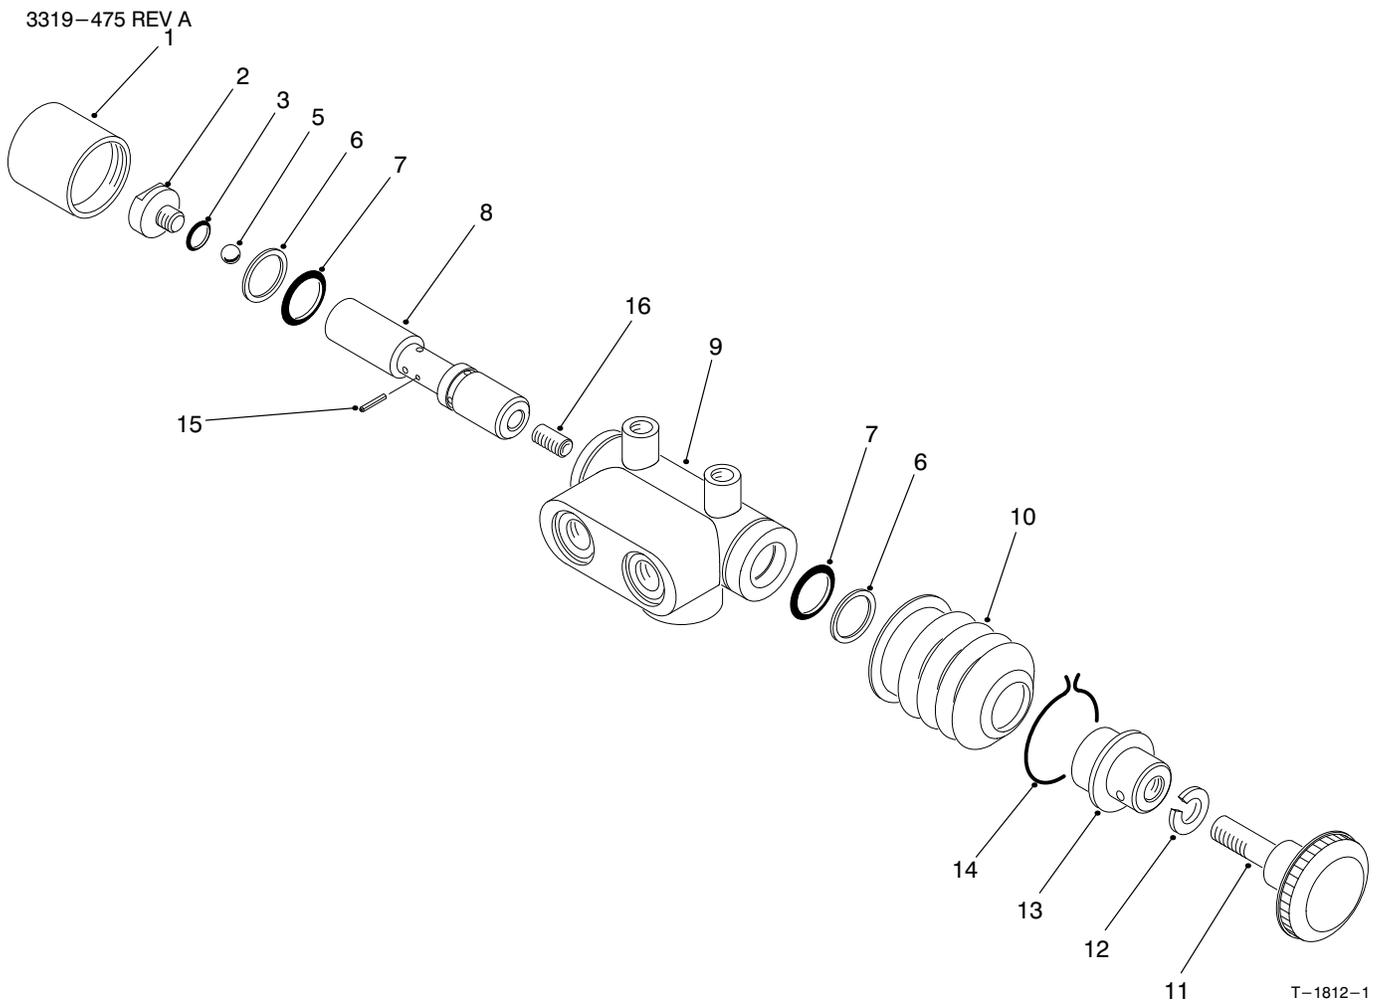




TWO POSITION VALVE ASSEMBLY NO. 92-3196 (MODEL NO. 03427)

Ref. No.	Part No.	Description	No. Used
1	92-7904	Cap-Valve	1
2	94-3427	Asm-Plug (Incl. Ref. #3)	1
3	237-22	O-Ring	1
5	354-23	Ball	1
6		Ring-Back-Up	2
7		O-Ring	2
8		Spool-Valve	1
9		Housing-Valve	1
10	92-7911	Boot	1


Ref. No.	Part No.	Description	No. Used
11	233-46	Knob	1
12	3253-5	Washer-Lock	1
13	94-3426	Stop-Valve	1
14	92-7912	Retainer-Boot	1
15	32121-38	Pin-Spring	1
16	94-3425	Screw	1
*	92-7913	Kit-Seal Repair (Incl. Ref. #1, 3, 6, 7, 10 & 14)	1

*Not Illustrated

HYDRAULIC SCHEMATIC (MODEL NO. 03427)

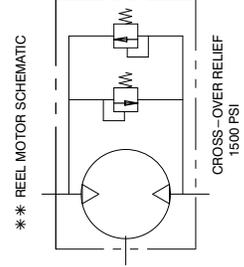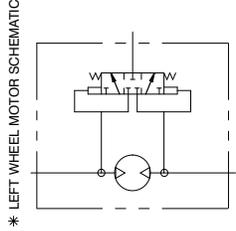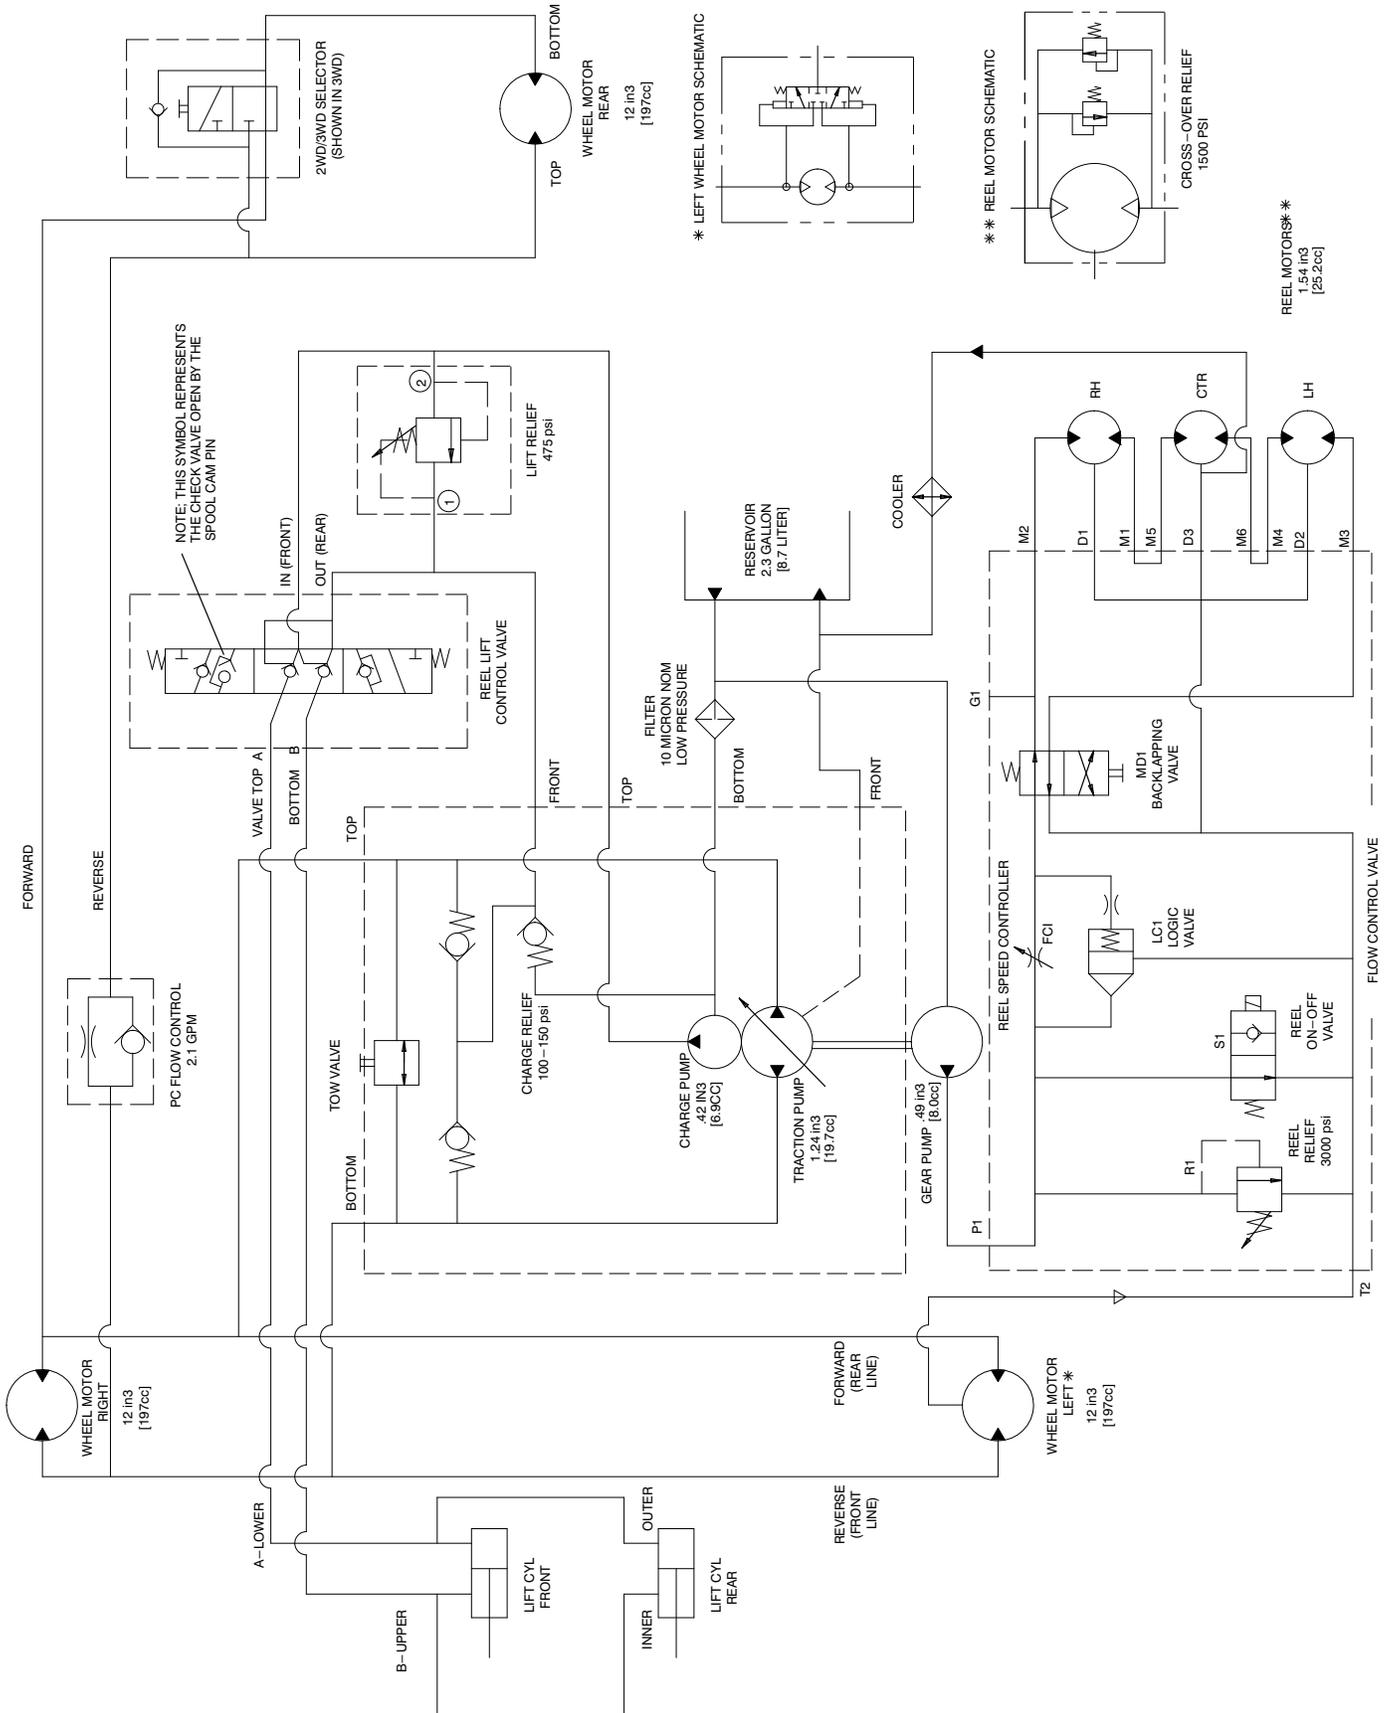

REEL MOTORS**
1.54 in³
[25.2cc]

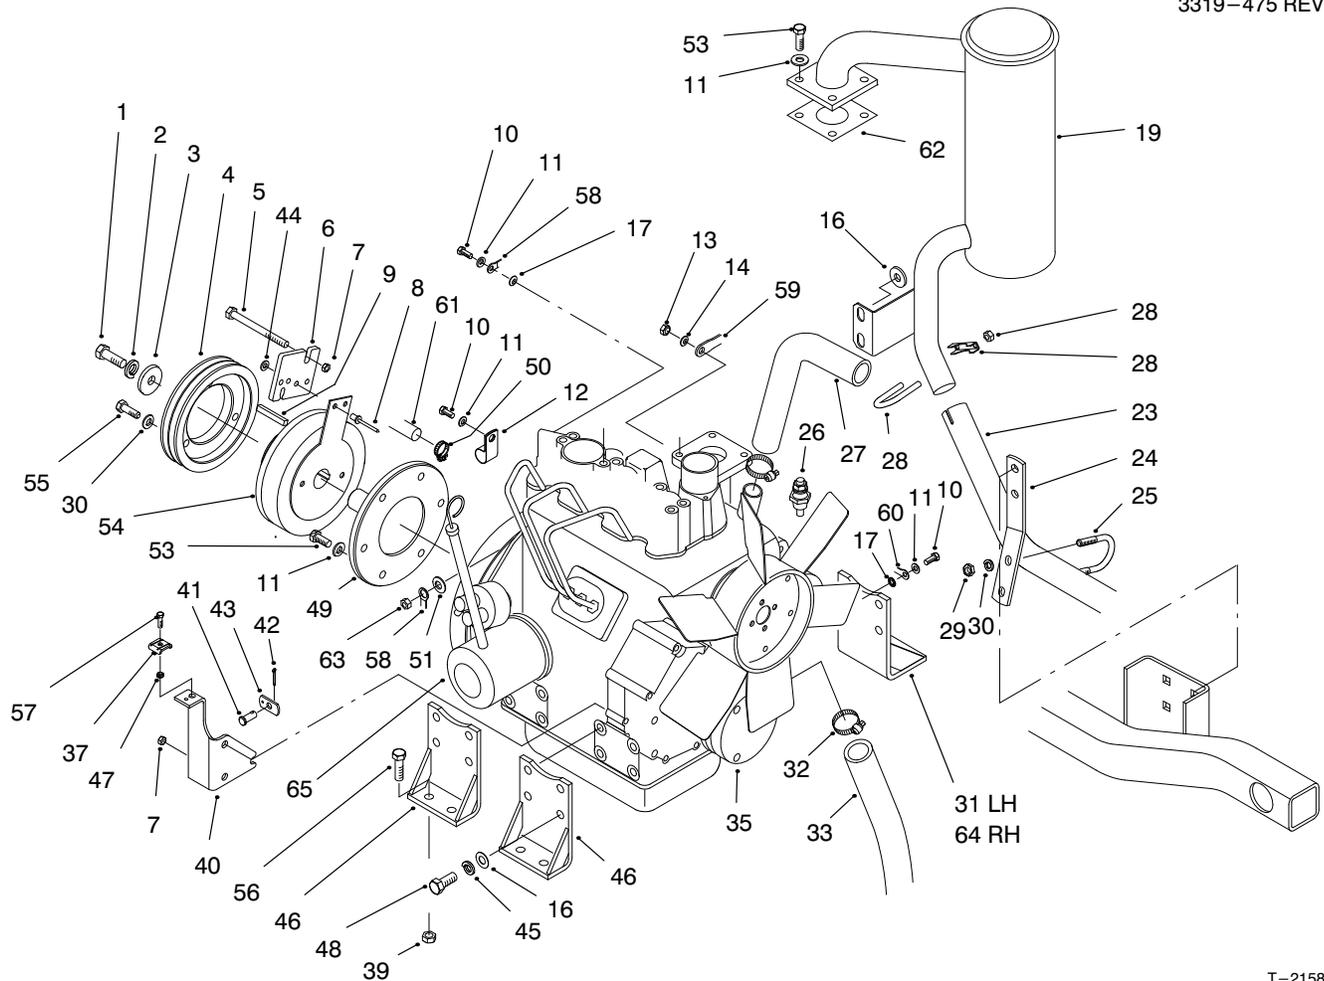


T-2158-3

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3212-5	Screw-HH	1
2	3253-6	Washer-Lock	1
3	44-8160	Washer-Clutch	1
4	93-6706	Pulley-Engine	1
5	68-6030	Screw-HH	1
6	93-6725	Bracket-Wire Keeper	1
7	33004-00	Nut-HF	4
8	3290-412	Rivet-Pop	2
9	83-8080	Key	1
10	48-7700	Screw-HH	3
11	3256-23	Washer-Flat	13
12	2412-96	Clamp-R	1
13	57-6390	Nut-Jam	1
14	42-9850	Washer-Lock	1
16	80-6990	Washer-Hardened	16
17	3255-8	Washer-Lock	2
19	93-6719	Muffler	1
23	93-6721	Tube-Muffler	1
24	93-6720	Bracket-Muffler	1
25	93-6722	U-Bolt	1
26	82-3110	Sender-Temp	1
27	93-6728	Hose-Radiator, Upper	1
28	2112-11	Clamp-Muffler	1
29	3217-6	Nut-Hex.	2
30	3253-4	Washer-Lock	4
31	93-6713	Bracket-Mount, Rear LH	1

Ref. No.	Part No.	Description	No. Used
32	2412-34	Clamp-Hose	2
33	93-6729	Hose-Radiator, Lower	1
†35	KL70372	Asm-Engine (Carburetor Certified)	1
37	81-1690	Clamp-Throttle Cable	1
39	32128-19	Nut-Flange	7
40	93-6892	Bracket-Throttle Cable	1
41	283-62	Pin-Clevis	1
42	3272-10	Pin-Cotter	1
43	92-3154	Tab-Throttle	1
44	48-8010	Washer-Flat	2
45	48-9590	Washer-Lock	14
46	93-6712	Bracket-Mount, Front	2
47	32148-14	Nut-Insert	1
48	48-7780	Screw-HH	16
49	93-6707	Spindle-Clutch	1
50	2412-108	Clamp-Hose	1
51	3255-17	Washer-Lock	1
53	66-3160	Screw	10
54	93-6727	Clutch-Electric	1
55	322-5	Screw-HH	1
56	3234-24	Screw-HH	7
57	3290-432	Screw-HH	1
58	94-3692	Harness-Wire	1
59	93-6775	Cable-Battery Pos.	1
60	94-5980	Cable-Battery Neg.	1

†Obtain from your local Perkins Dealer.

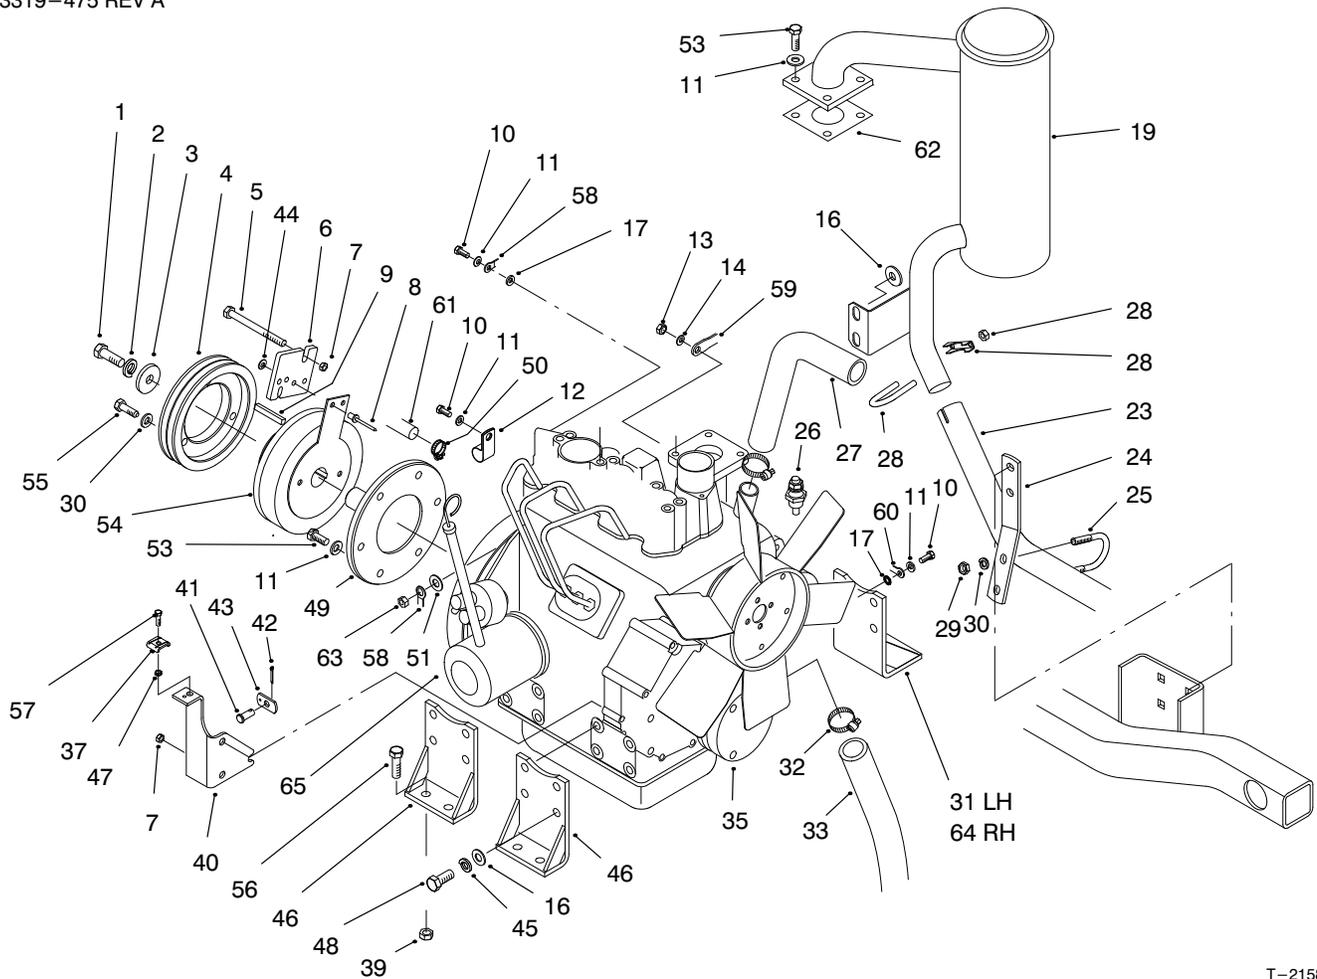


T-2158-3

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
61	75-4703	Hose-Fuel	1
†62	314990013	Gasket-Muffler	1
63	33004-00	Nut-Hex.	1

Ref. No.	Part No.	Description	No. Used
64	93-6946	Bracket-Mount Rear RH	1
65	85-4930	Filter-Oil	1

†Obtain from your local Perkins Dealer.

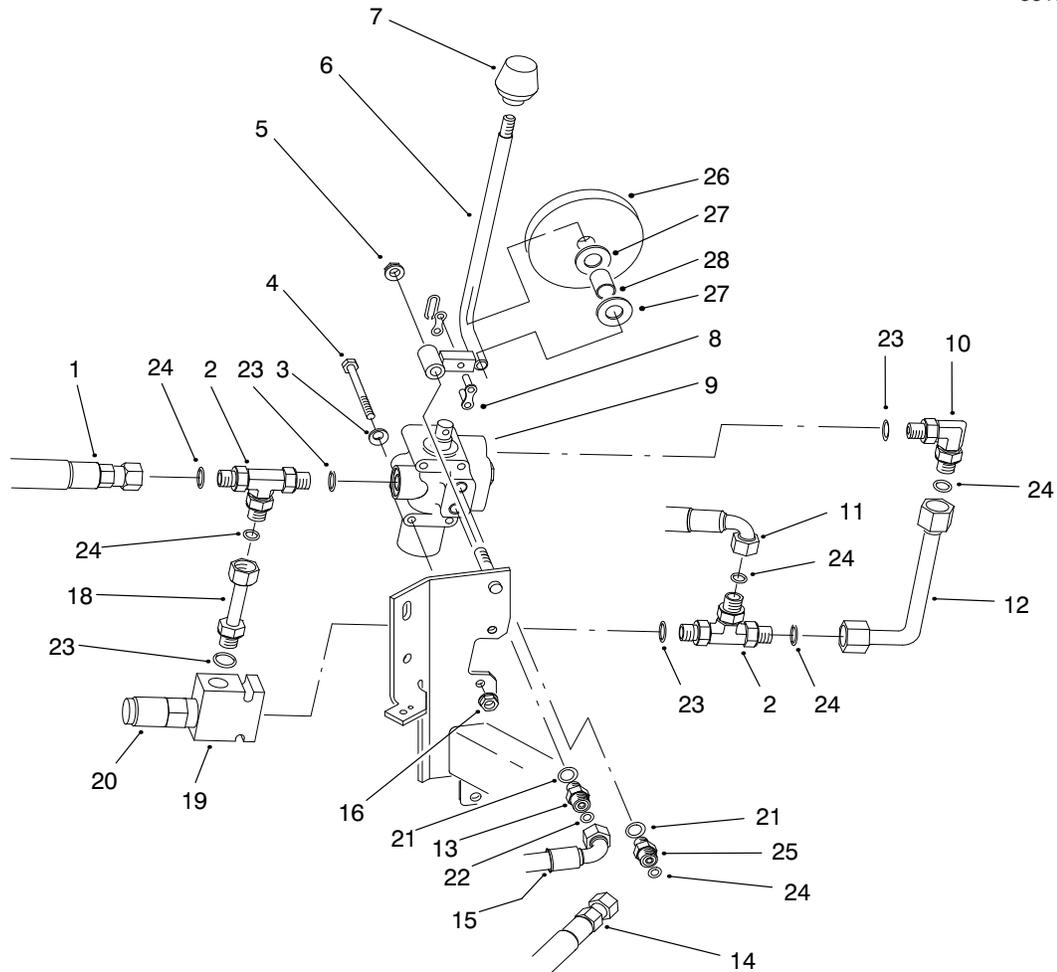


T-2164-3

CUTTING UNIT LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-6797	Asm-Hose	1
2	340-86	Fitting-Hyd, Tee (Incl. Ref. #23 & 24)	2
3	3256-22	Washer-Flat	2
4	321-23	Screw-HH	2
5	3296-39	Nut-Hex Lock	1
6	85-5160	Valve Lever	1
7	233-37	Knob	1
8	2710-16	Asm-Connecting Link	1
9	43-1950	Valve-Control Hydraulic	1
10	340-77	Fitting-Hyd 90° (Incl. Ref. #23 & 24)	1
11	93-6798	Asm-Hose	1
12	93-6922	Tube-Hydraulic	1
13	340-92	Fitting-Straight (Incl. Ref. #21 & 22)	1
14	94-5007	Asm-Hose	1

Ref. No.	Part No.	Description	No. Used
15	94-5006	Asm-Hose	1
16	3296-16	Nut-Lock	2
18	93-6923	Tube-Hydraulic (Incl. Ref. #23)	1
19	94-3608	Body-Relief Valve	1
20	94-3607	Cartridge-Relief Valve	1
21	237-78	O-Ring	2
22	237-21	O-Ring	1
23	237-42	O-Ring	4
24	237-22	O-Ring	6
25	340-88	Fitting-Hydraulic (Incl. Ref. #21 & 24)	1
26	94-5119	Sponge	1
27	3256-26	Washer-Flat	2
28	65-9940	Spring-Compression	1
*	93-6921	Asm-Relief Valve (Incl. Ref. #19 & 20)	1

*Not Illustrated

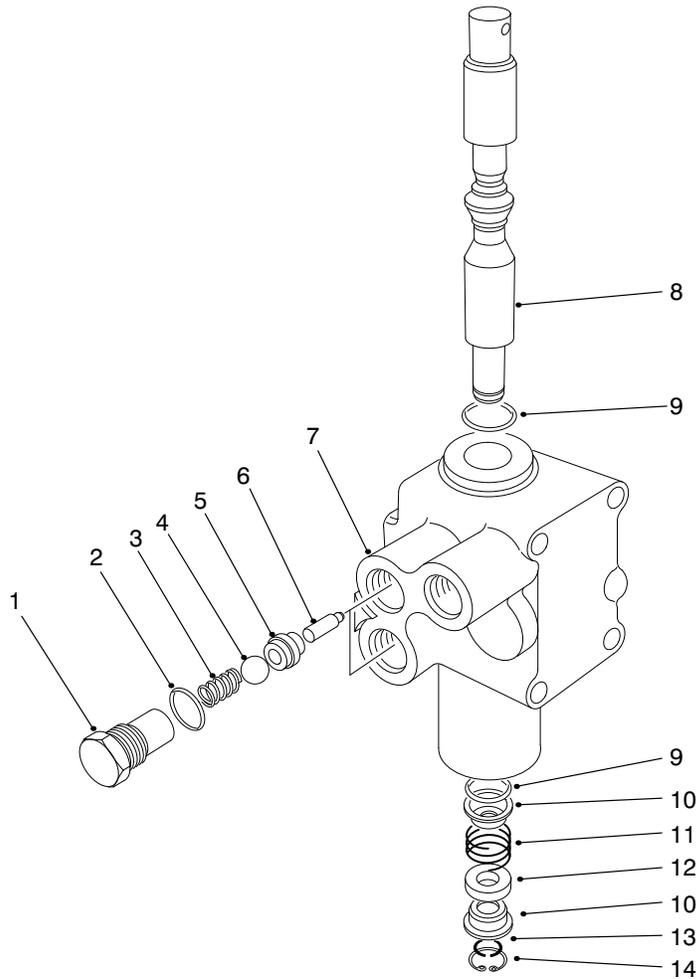


T-0280-2

CONTROL VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat-Check Valve	2
6	22-8360	Pin-Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	O-Ring	2
10	22-8380	Retainer-Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Snap Ring-Spool	1
14	22-8490	Snap Ring	1

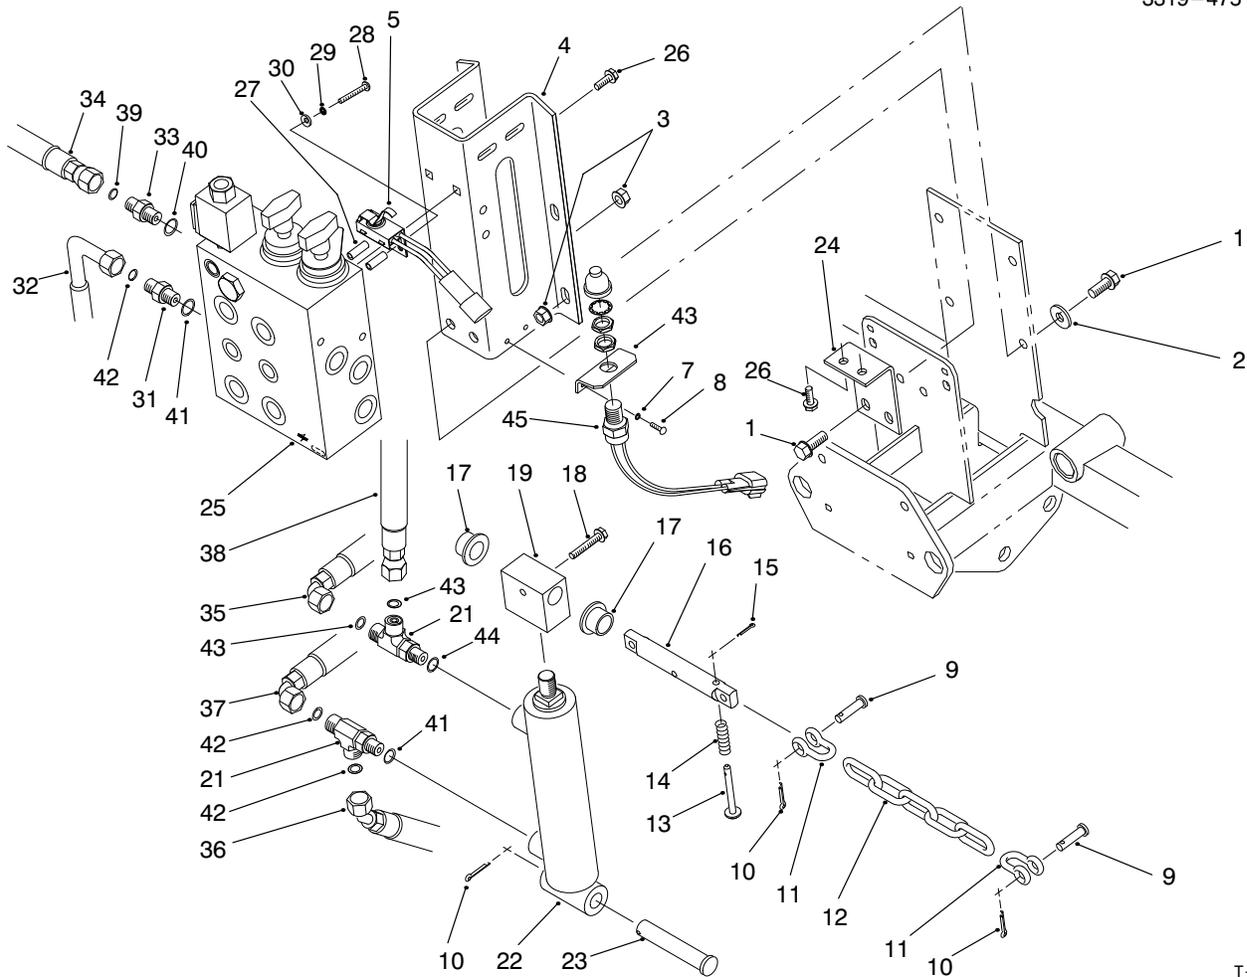


T-2167-3

FRONT CUTTING UNIT LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3234-25	Bolt-Flange	6	23	283-78	Clevis Pin	1
2	80-6990	Washer-Hardened	4	24	93-6733	Bracket-Valve Mount	1
3	32128-43	Nut-Whiz	5	25	93-6718	Asm-Hydraulic Manifold	1
4	94-5033	Bracket-Cyl Support	1	26	3234-5	Screw-Flange	3
5	92-7905	Micro Switch	1	27	93-6904	Spacer	2
7	3254-9	Screw-Lock Int. Tooth	2	28	32105-1	Screw-HH	2
8	3249-3	Screw-PRH	2	29	3255-17	Washer-Lock Ext. Tooth	2
9	283-6	Pin-Clevis	4	30	3256-14	Washer-Flat	2
10	3272-11	Pin-Cotter	5	31	340-2	Adaptor (Incl. Ref. #41 & 42)	1
11	282-4	Clevis	4	32	93-6935	Asm-Hose	1
12	61-3830	Chain (RM2300D Only)	2	33	340-4	Adaptor (Incl. Ref. #39 & 40)	1
*	94-5057	Chain (RM2600D Only)	2	34	93-6800	Hose-Hydraulic	1
13	94-5010	Pin-Switch Actuator	1	35	94-5009	Hose-Hydraulic	1
14	94-5011	Spring-Compression	1	36	94-5008	Hose-Hydraulic	1
15	3272-4	Pin-Cotter	1	37	94-5007	Hose-Hydraulic	1
16	72-4190	Pin-Cylinder Guide	1	38	94-5006	Hose-Hydraulic	1
17	84-8440	Bush-Flange	2	39	237-22	O-Ring	1
18	321-43	Screw-HH	1	40	237-79	O-Ring	1
19	61-2450	Hub-Lift	1	41	237-42	O-Ring	3
21	340-86	Tee (Incl. Ref. #41 & 42)	2	42	237-22	O-Ring	5
22	94-5031	Cylinder-Lift	1	43	94-3424	Bracket-Switch Mount	1
				45	94-3429	Plunger Switch	1

*Not Illustrated

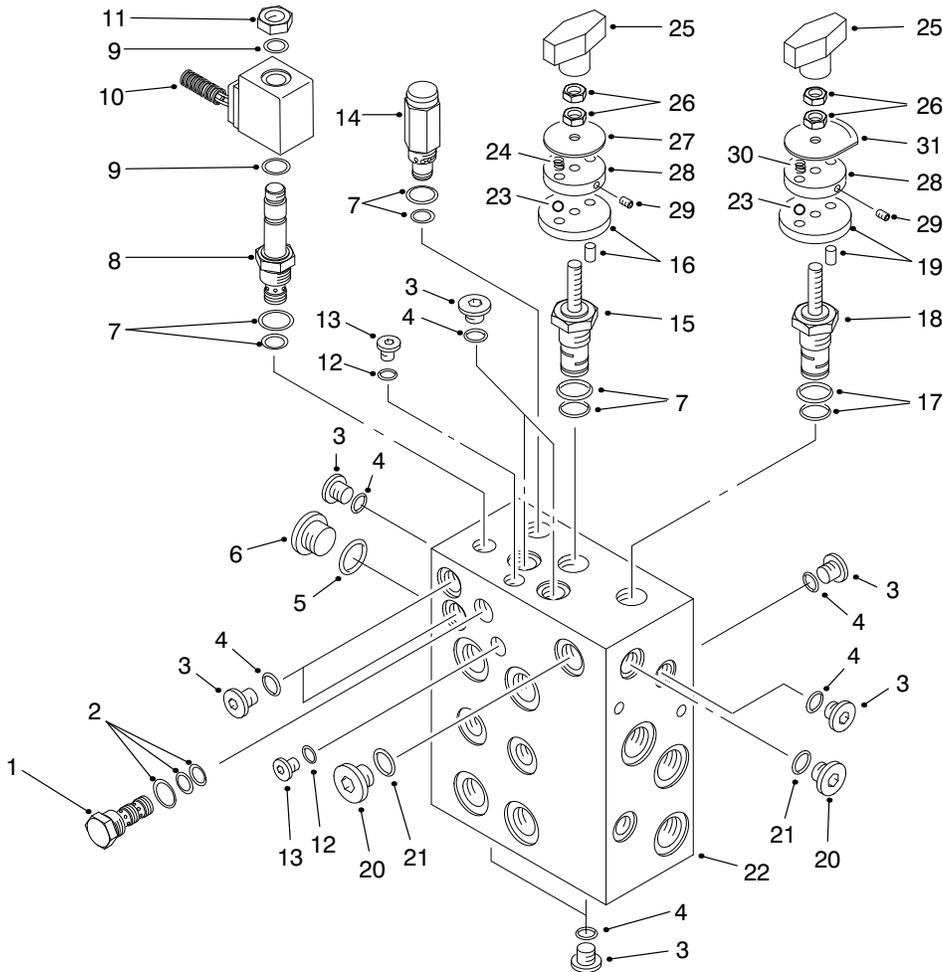


T-2203-2

HYDRAULIC MANIFOLD ASSEMBLY NO. 93-6718

Ref. No.	Part No.	Description	No. Used
1	69-4120	Asm-Cartridge Valve (Incl. Ref. #2)	1
2	69-4240	Kit-Seal	1
3	353-990	Asm-Plug (Incl. Ref. #4)	7
4	237-78	O-Ring	7
5	237-79	O-Ring	1
6	353-988	Asm-Plug (Incl. Ref. #5)	1
7	75-2080	Kit-Seal	3
8	94-3656	Asm-Spool (Incl. Ref. #7, 9 & 11)	1
9	94-5438	O-Ring	2
10	83-2010	Asm-Coil (Incl. Ref. #9)	1
11	69-4300	Nut	1
12	237-156	O-Ring	2
13	353-991	Asm-Plug (Incl. Ref. #12)	2
14	94-3655	Asm-Cartridge Valve (Incl. Ref. #7)	1

Ref. No.	Part No.	Description	No. Used
15	94-3659	Asm-Spool (Incl. Ref. #7)	1
16	94-5025	Asm-Locating Plate	1
17	94-3661	Kit-Seal	1
18	94-3657	Asm-Spool (Incl. Ref. #17)	1
19	94-5021	Asm-Locating Plate	1
20	353-989	Asm-Plug (Incl. Ref. #21)	2
21	237-42	O-Ring	2
†22		Body-Manifold	1
23	255-13	Ball	4
24	94-5027	Spring-Compression	2
25	94-5020	Knob	2
26	3218-1	Nut-Jam	4
27	94-5026	Plate-Indicator	1
28	94-5023	Asm-Detent Plate (Incl. Ref. #29)	2
29	3245-36	Screw-Set	2
30	94-5024	Spring-Compression	2
31	94-5022	Plate-Indicator	1

†Not Serviced Separately

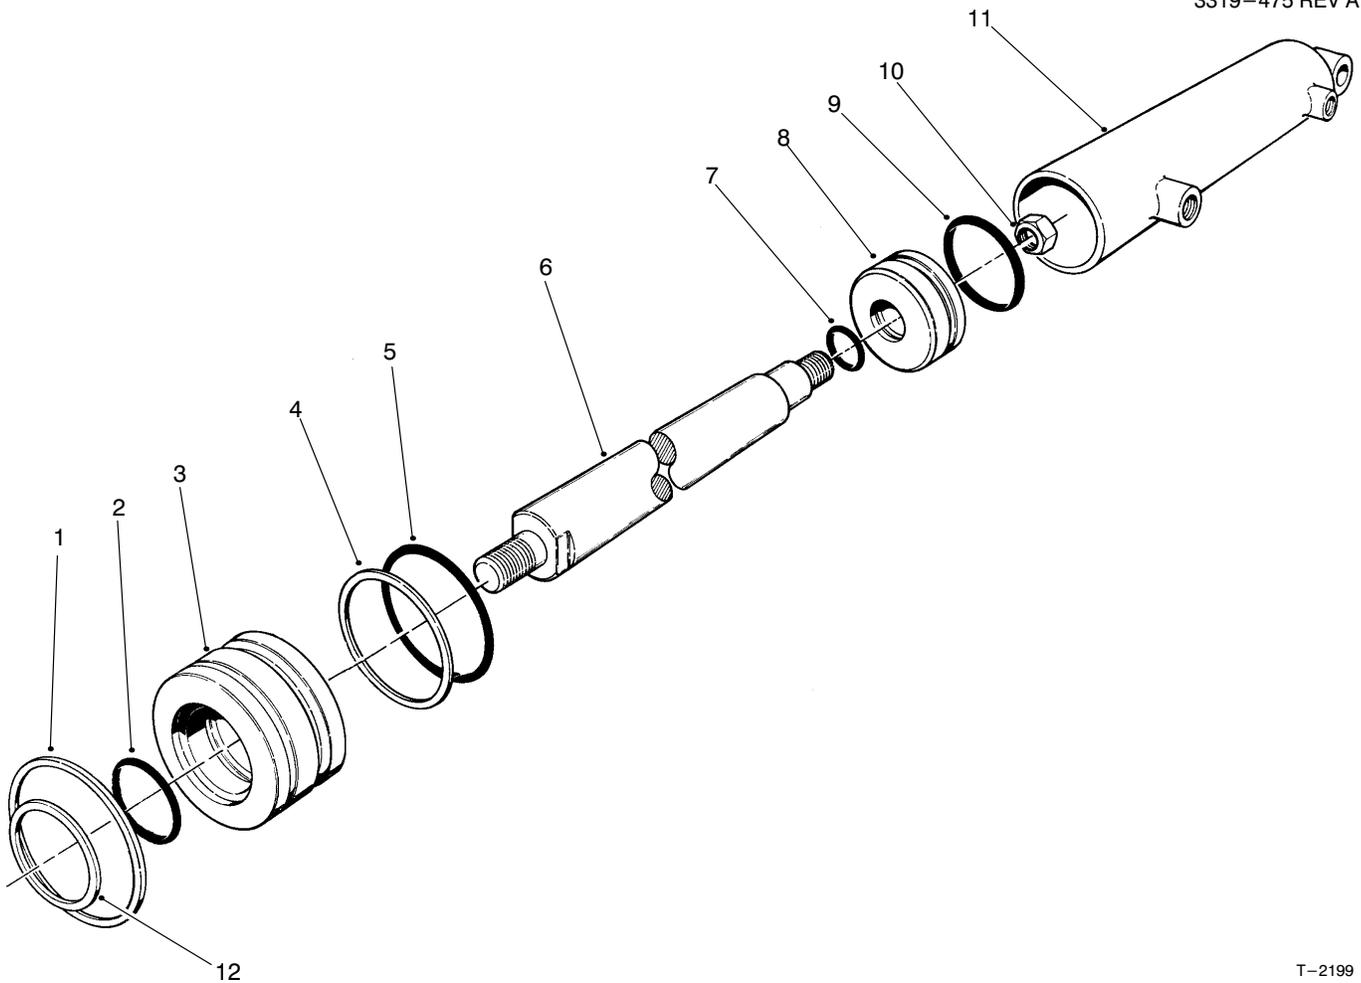


T-2199

FRONT HYDRAULIC CYLINDER ASSEMBLY NO. 94-5031

Ref. No.	Part No.	Description	No. Used
1	94-3612	Ring-Retaining	1
2		O-Ring	1
3	94-3611	Head	1
4		Washer-Backup	1
5		O-Ring	1
6	94-3610	Shaft	1
7		O-Ring	1
8	94-3609	Piston	1

Ref. No.	Part No.	Description	No. Used
9		Uniring	1
10	32152-10	Nut-Lock	1
11	94-5032	Barrel	1
12		Seal-Dust	1
*	94-3614	Kit-Repair (Incl. Ref. #2, 4-5, 7, 9 & 12)	1

*Not Illustrated

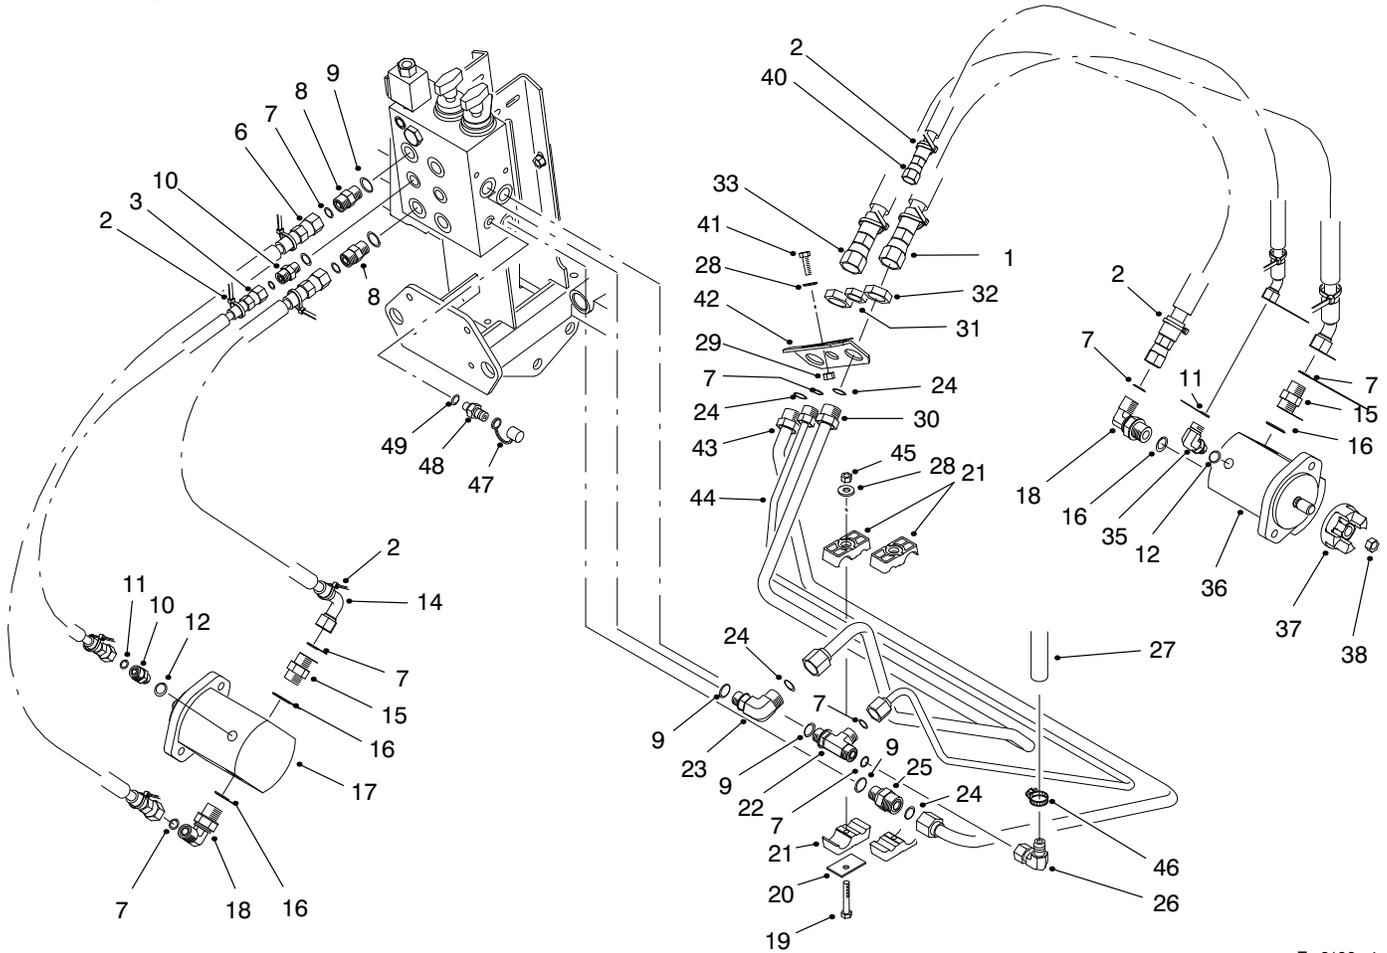


T-2196-4

CUTTING UNIT HYDRAULIC PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-5129	Asm-Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	1
2	3290-378	Tie - Cable	18
3	94-5986	Asm-Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	2
6	94-5987	Asm-Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	2
7	237-30	O-Ring	13
8	340-4	Fitting-Hydraulic Straight (Incl. Ref. #7 & 9)	4
9	237-79	O-Ring	7
10	340-2	Fitting-Hydraulic Straight (Incl. Ref. #11 & 12)	4
11	237-22	O-Ring	5
12	237-42	O-Ring	5
14	94-5985	Asm-Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	2
15	340-6	Fitting-Hydraulic Straight (Incl. Ref. #7 & 16)	3
16	237-80	O-Ring	6
17	93-6972	Asm-Hydraulic Motor	2
18	340-105	Fitting-Hydraulic 90° (Incl. Ref. #7 & 16)	3

Ref. No.	Part No.	Description	No. Used
19	322-10	Screw-Hex. Hd.	2
20	69-9760	Plate-Clamp	2
21	56-7970	Clamp-Tube	4
22	340-109	Fitting-Hydraulic Tee (Incl. Ref. #7 & 9)	1
23	340-153	Fitting-Hydraulic 90° (Incl. Ref. #9 & 24)	1
24	237-65	O-Ring	4
25	340-155	Fitting-Hydraulic Straight (Incl. Ref. #9 & 24)	1
26	93-6803	Fitting-Hydraulic 90°	1
27	93-6805	Hose-Hydraulic	1
28	3256-3	Washer-Flat	4
29	32128-44	Nut-Lock	2
30	93-6918	Asm-Hydraulic Tube (Incl. Ref. #24)	1
31	340-70	Nut-Bulkhead	1
32	340-74	Nut-Bulkhead	2
33	93-6790	Asm-Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	1
35	340-77	Fitting-Hydraulic 90° (Incl. Ref. #11 & 12)	1
36	93-6975	Asm-Hydraulic Motor	1
37	93-8823	Coupling	3
38	32128-48	Nut-Lock	3

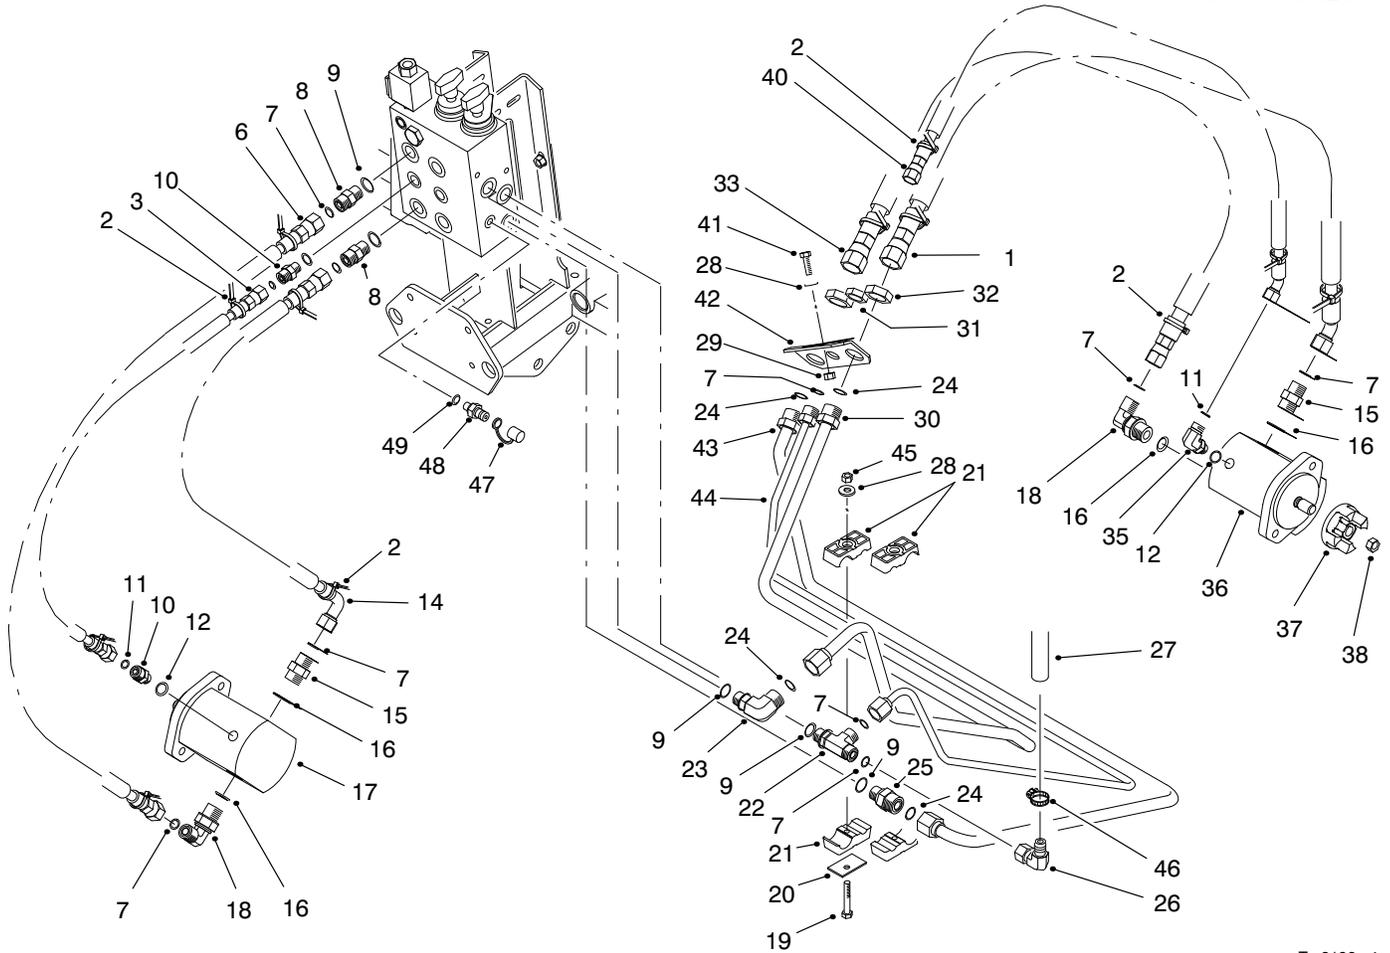


T-2196-4

CUTTING UNIT HYDRAULIC PLUMBING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
40	93-6789	Asm-Hydraulic Hose (Incl. Ref. #2 & Protective Sleeve)	1
41	3234-5	Screw-Hex. Hd.	2
42	93-6796	Bracket-Bulkhead	1
43	93-6919	Asm-Hydraulic Tube (Incl. Ref. #24)	1
44	93-6920	Asm-Hydraulic Tube (Incl. Ref. #7)	1

Ref. No.	Part No.	Description	No. Used
45	3296-29	Nut-Lock	2
46	2412-36	Clamp-Hose	1
47	354-79	Cap-Fitting Yellow	1
48	354-77	Fitting-Quick Connect (Incl. Ref. #49)	1
49	237-78	O-Ring	1

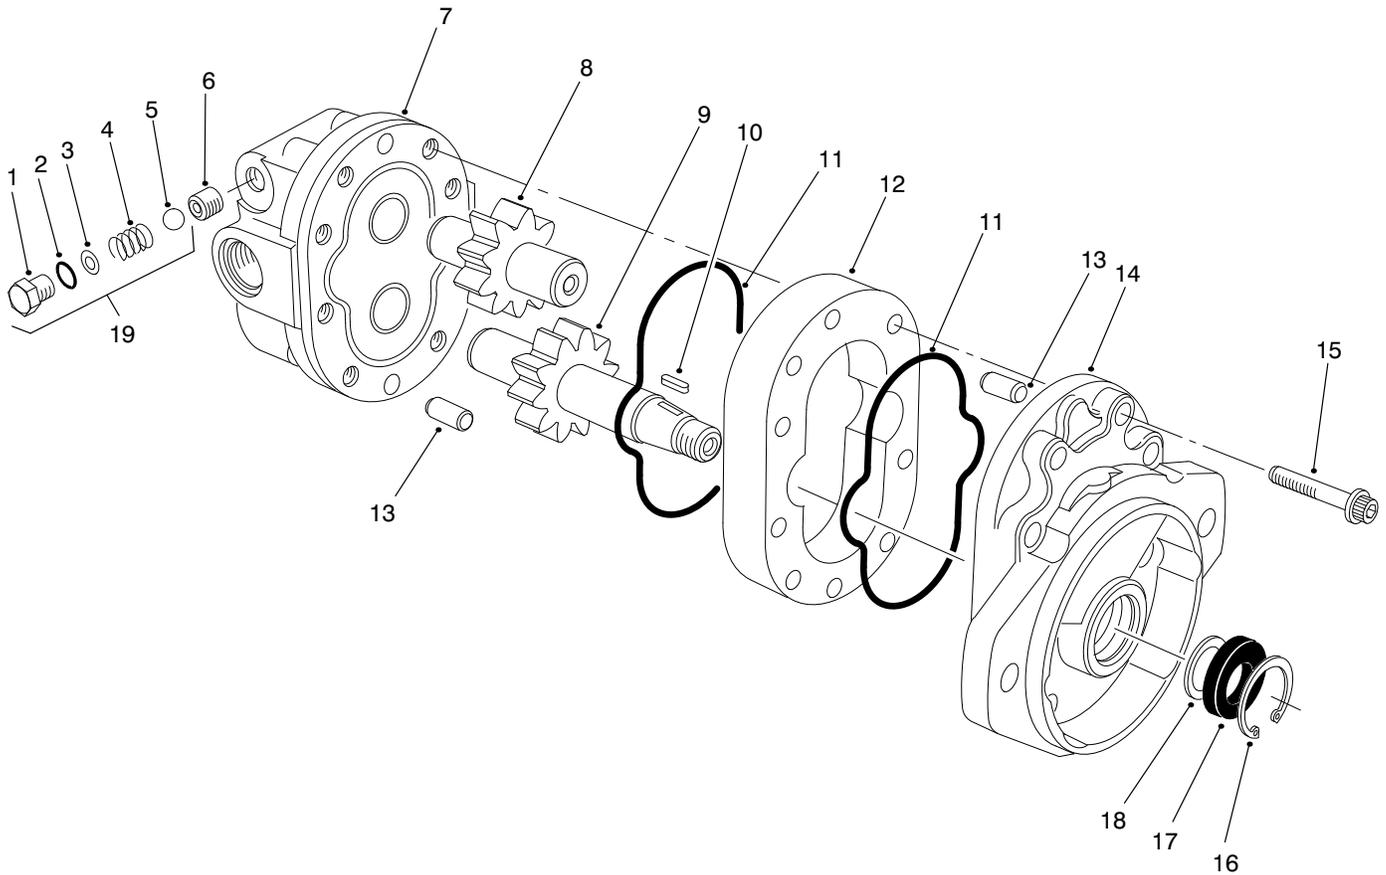

T-2184-3


FRONT REEL MOTOR ASSEMBLY NO. 93-6972

Ref. No.	Part No.	Description	No. Used
†1		Plug	2
†2		O-Ring	2
†3		Shim	A/R
†4		Spring	2
†5		Ball	2
†6		Seal-Relief Valve	2
7	94-3604	Asm-Backplate/Relief (Incl. Ref. #1-6)	1
8	94-3601	Gear-Idler	1
9	94-3602	Gear-Drive	1
10	94-3606	Key	1
11	59-8420	O-Ring	2

Ref. No.	Part No.	Description	No. Used
12	94-3603	Body	1
13	42-2010	Pin-Alignment	2
14	66-5730	Asm-Front Plate	1
15	94-3600	Screw-Hex. Socket Hd.	8
16	59-8320	Ring-Retaining	1
17	66-5710	Seal-Oil	1
18	60-5890	Washer-Backup	1
19	92-9260	Asm-Relief Valve (Incl. Ref. #1-5)	1
*	93-1413	Kit-Seal Repair (Incl. Ref. #11, 16, 17 & 2)	1

*Not Illustrated

†Not Serviced Separately

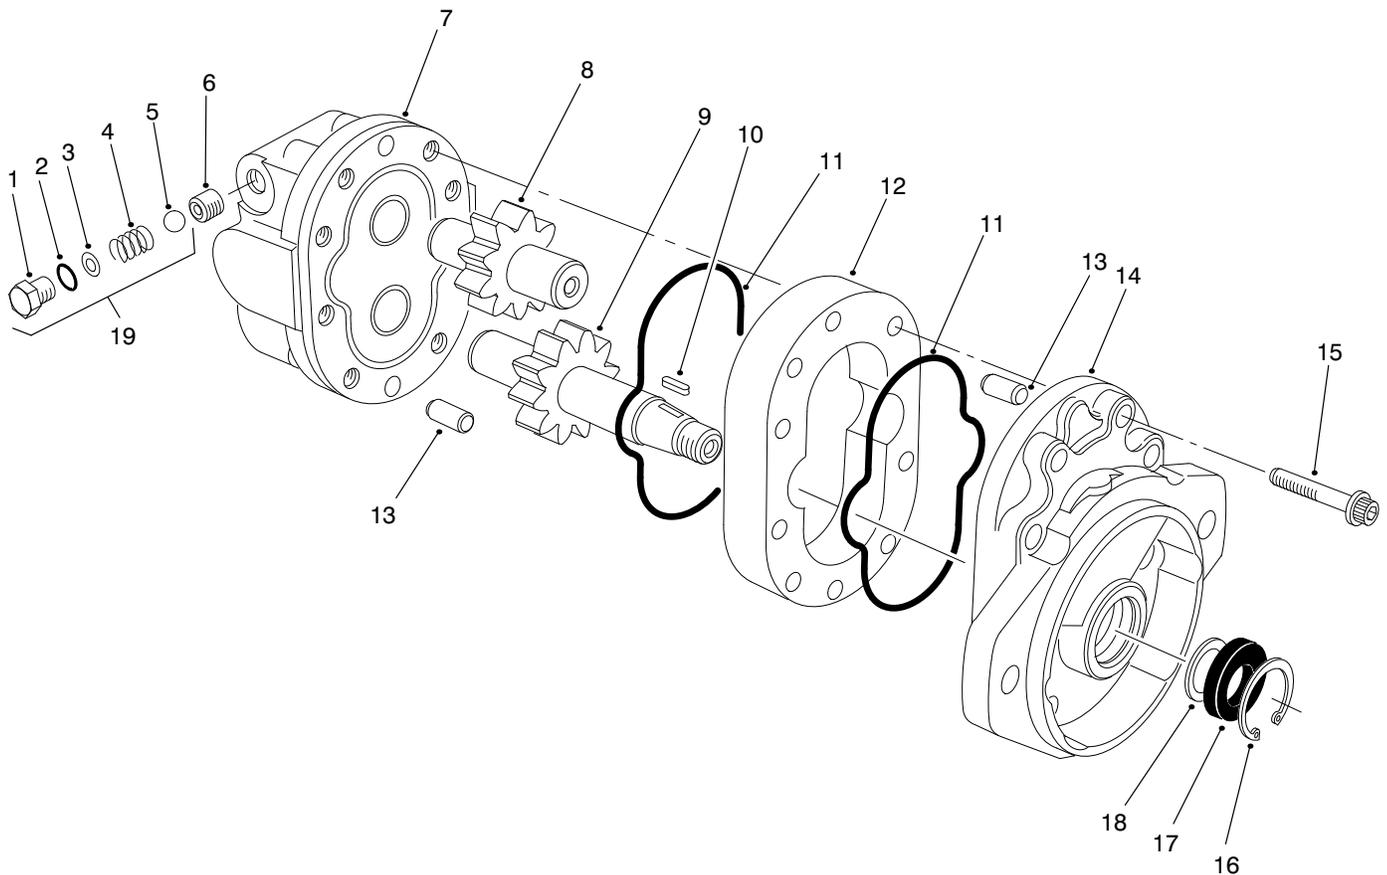


T-2185-3

REAR REEL MOTOR ASSEMBLY NO. 93-6975

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		Plug	2	12	94-3603	Body	1
†2		O-Ring	2	13	42-2010	Pin-Alignment	2
†3		Shim	A/R	14	66-5730	Asm-Front Plate	1
†4		Spring	2	15	94-3600	Screw-Hex. Socket Hd.	8
†5		Ball	2	16	59-8320	Ring-Retaining	1
†6		Seal-Relief Valve	2	17	66-5710	Seal-Oil	1
7	94-3605	Asm-Backplate/Relief (Incl. Ref. #1-6)	1	18	60-5890	Washer-Backup	1
8	94-3601	Gear-Idler	1	19	92-9260	Asm-Relief Valve (Incl. Ref. #1-5)	1
9	94-3602	Gear-Drive	1	*	93-1413	Kit-Seal Repair (Incl. Ref. #11, 16, 17 & 2)	1
10	94-3606	Key	1				
11	59-8420	O-Ring	2				

*Not Illustrated

†Not Serviced Separately

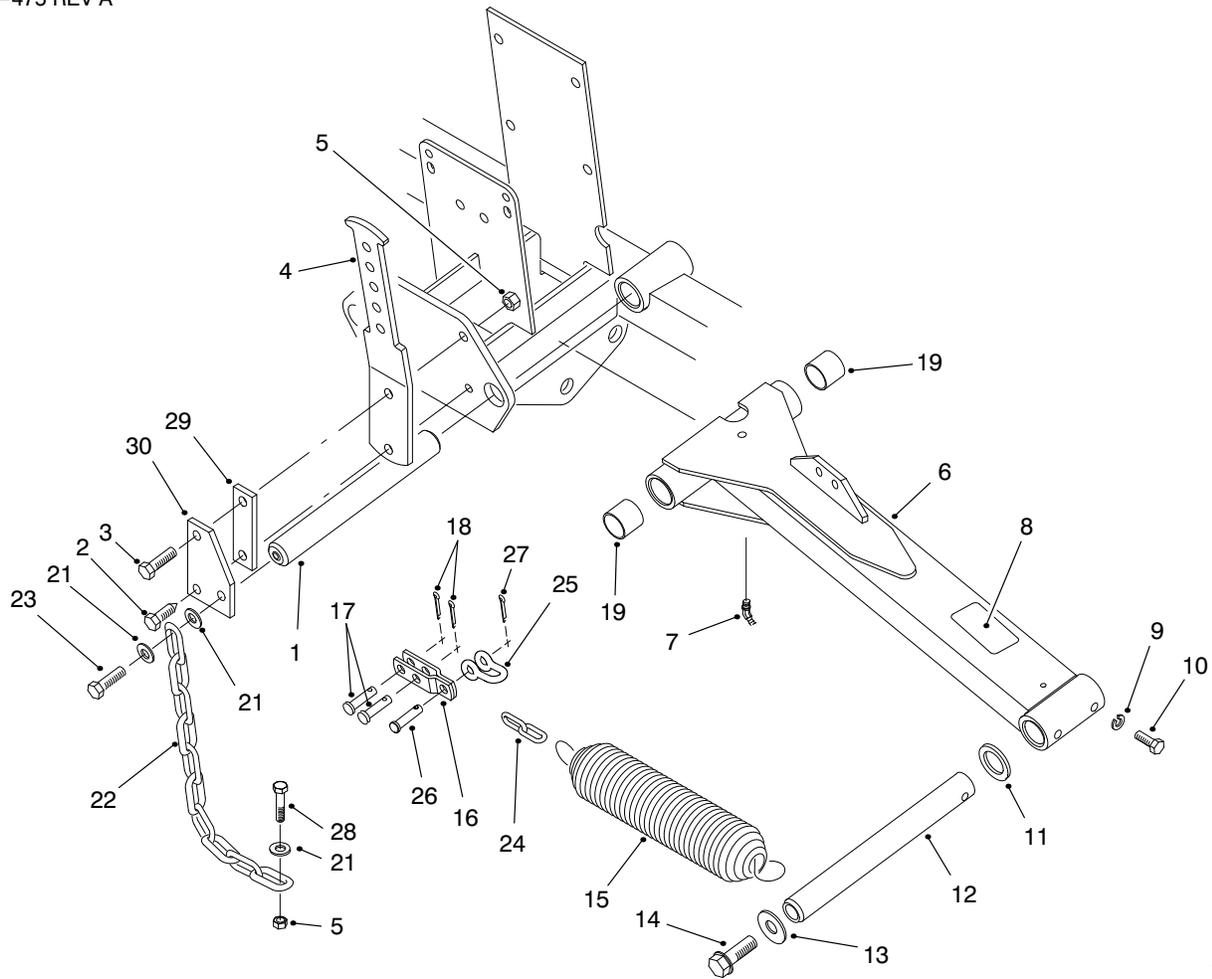


T-2165-5

FRONT CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-1812	Shaft-Lift Pivot	2
2	32144-109	Screw-HH	2
3	323-9	Screw-HH	2
4	92-1818	Arm-Tension Spring	2
5	3296-39	Nut-Hex Lock	4
6	94-5095	Asm-Lift Arm (RM2600D Only)	2
*	94-5100	Asm-Lift Arm (RM2300D Only)	2
7	302-11	Fitting Lube 45°	2
8	93-6696	Decal-Warning	2
*	84-2940	Decal-Warning (Japan)	2
9	3253-4	Washer-Spring Lock	2
10	322-4	Screw-HH	2
11	256-115	Washer-Thrust	2
12	94-5069	Rod-Pivot	2
13	3256-6	Washer-Flat	2
14	3234-32	Screw-HH	2
15	5-0743	Spring	2
16	93-6912	Shackle	2

Ref. No.	Part No.	Description	No. Used
17	283-75	Pin-Clevis	4
18	3272-10	Pin-Cotter	4
19	3-0348	Bushing	4
21	3256-24	Washer-Flat	6
22	93-6738	Chain-Tipper	2
23	323-18	Screw-Hex. Hd.	2
24	62-7300	Chain (RM2600D Only)	2
25	282-4	Clevis (RM2600D Only)	2
26	283-6	Pin-Clevis (RM2600D Only)	2
27	3272-11	Pin-Cotter (RM2600D Only)	2
28	323-7	Screw-HH	2
29	98-3445	Spacer	2
30	98-3446	Plate-Reinforcement	2
*	03471	RM2300D Lift Arm Kit (Incl. Ref. #6-19)	1
*	03472	RM2600D Lift Arm Kit (Incl. Ref. #6-19 & 24-27)	1

*Not Illustrated

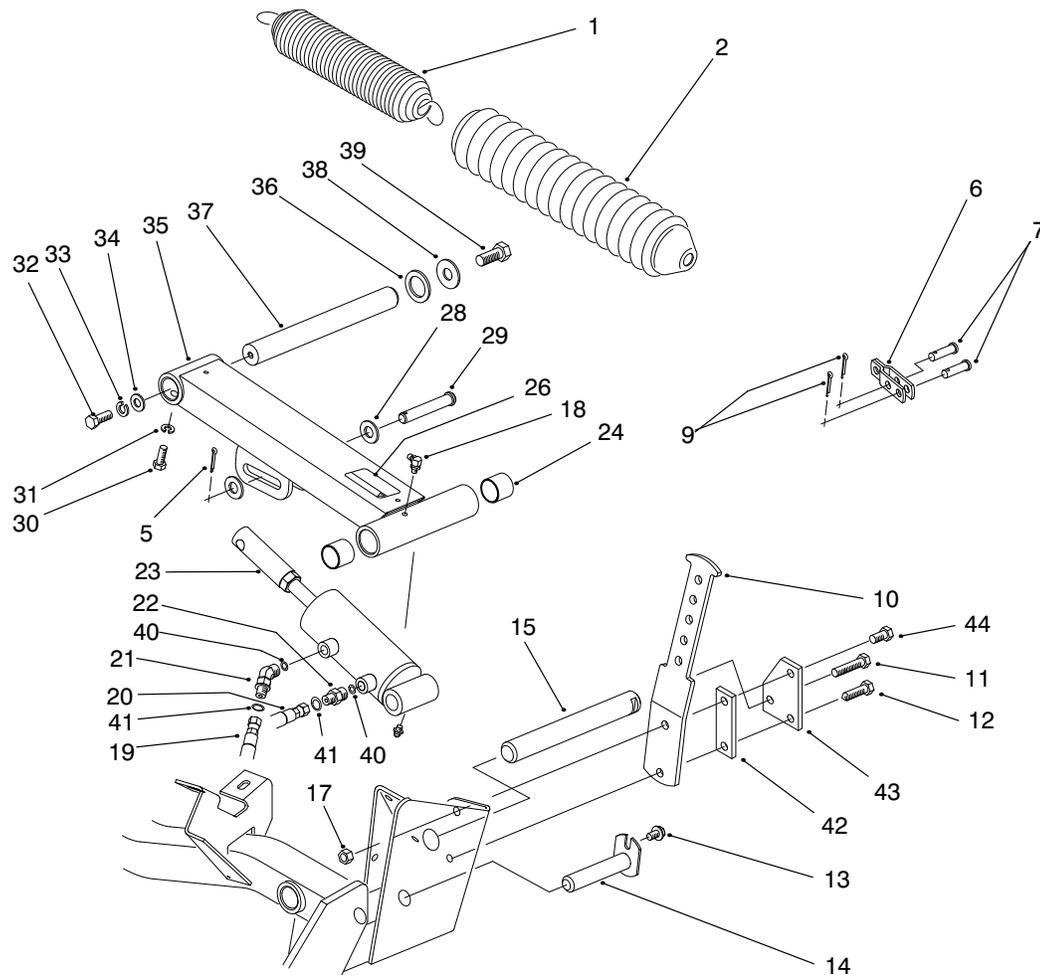


T-2166-3

REAR CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	5-0743	Spring	1	*	84-2940	Decal-Warning (Japan)	1
2	62-7240	Sleeve-Vinyl Spring	1	28	3256-26	Washer-Flat	2
5	3272-11	Pin-Cotter	1	29	93-6926	Pin-Clevis	1
6	93-6912	Shackle	1	30	322-4	Screw-HH	1
7	283-75	Pin-Clevis	2	31	3253-4	Washer-Spring Lock	1
9	3272-10	Pin-Cotter	2	32	322-26	Screw-HH	1
10	92-1818	Arm-Tension Spring	1	33	3253-4	Washer-Spring Lock	1
11	323-9	Screw-HH	1	34	3256-57	Washer-Flat	1
12	32144-109	Screw-HH	1	35	94-3635	Asm-Lift Arm, Rear (Incl. Ref. #18, 24 & 26)	1
13	32144-14	Screw-HH	1	36	256-115	Washer-Thrust	1
14	93-6893	Ram Pivot Pin	1	37	94-5069	Rod-Pivot	1
15	92-1812	Shaft-Lift Pivot	1	38	3256-6	Washer-Flat	1
17	3296-39	Nut-Hex. Lock	1	39	3234-32	Screw-HH	1
18	302-60	Fitting-Lube	1	40	237-78	O-Ring	2
19	94-5009	Asm-Hose	1	41	237-21	O-Ring	2
20	94-5008	Asm-Hose	1	42	98-3445	Spacer	1
21	340-103	Fitting (Incl. Ref. #40 & 41)	1	43	98-3446	Plate-Reinforcement	1
22	340-92	Fitting-Straight (Incl. Ref. #40 & 41)	1	44	323-4	Screw-HH	1
23	93-6869	Asm-Hydraulic Cylinder	1	*	03471	RM2300D Lift Arm Kit (Incl. Ref. #1, 2, 6, 7 & 9)	1
24	3-0348	Bushing	2	*	03472	RM2600D Lift Arm Kit (Incl. Ref. #1, 2, 6, 7 & 9)	1
26	93-6696	Decal-Warning	1				

*Not Illustrated

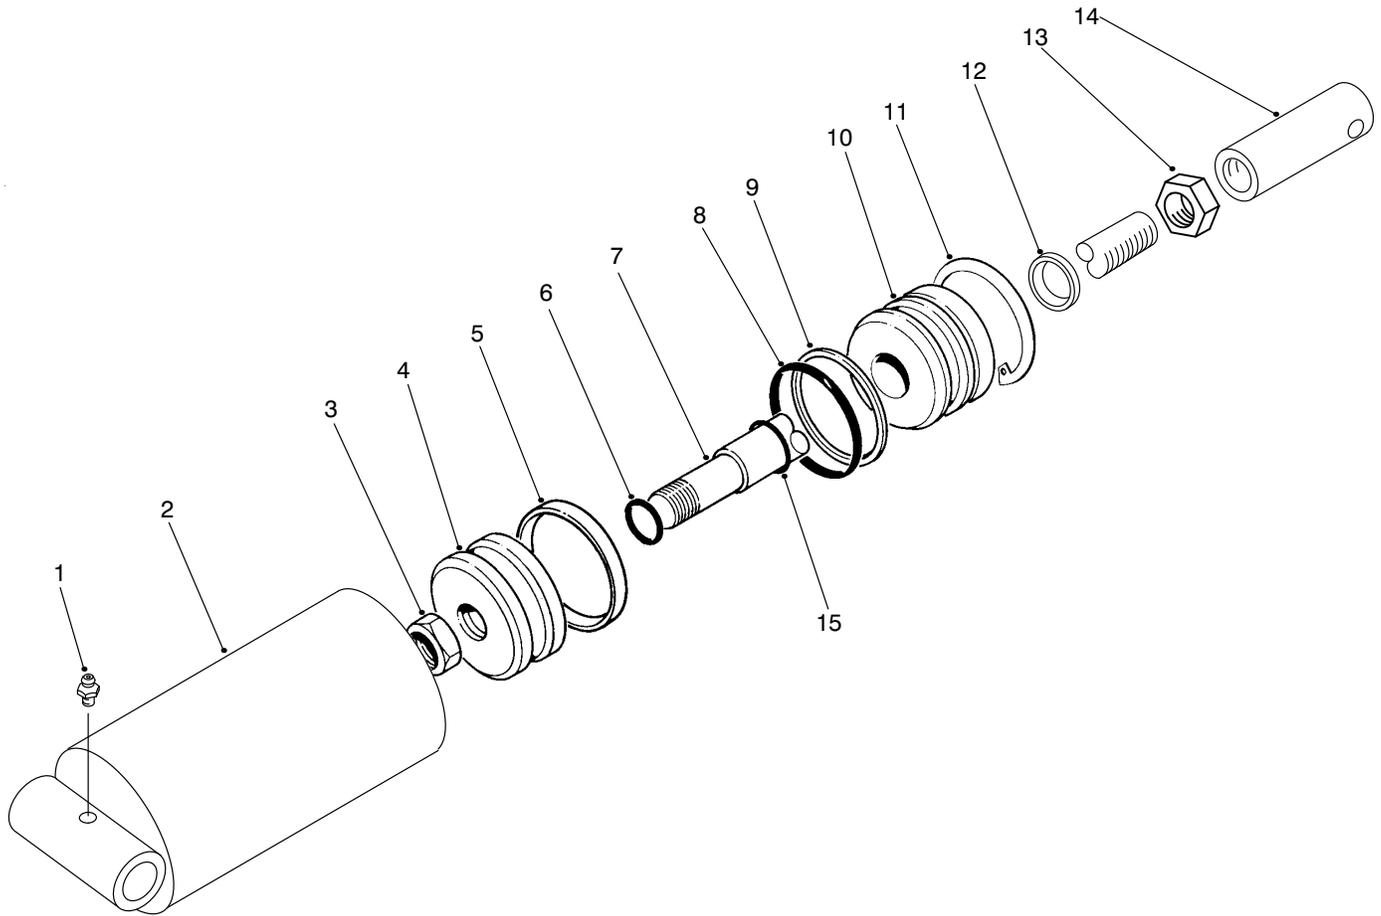


T-2200-1

REAR HYDRAULIC CYLINDER ASSEMBLY NO. 93-6869

Ref. No.	Part No.	Description	No. Used
1	302-58	Fitting-Grease	1
2	94-3620	Barrel	1
3	32152-10	Nut-Lock	1
4	94-3616	Piston	1
5		Uniring	1
6		O-Ring	1
7	94-3618	Shaft	1
8		O-Ring	1
9		Washer-Backup	1

Ref. No.	Part No.	Description	No. Used
10	94-3615	Head	1
11	94-3638	Ring-Retaining	1
12		Seal-Dust	1
13	3220-6	Nut-Hex.	1
14	94-3617	Clevis-Rod	1
*	94-3619	Kit-Repair (Incl. Ref. #5-6, 8-9, 12 & 15)	1


*Not Illustrated

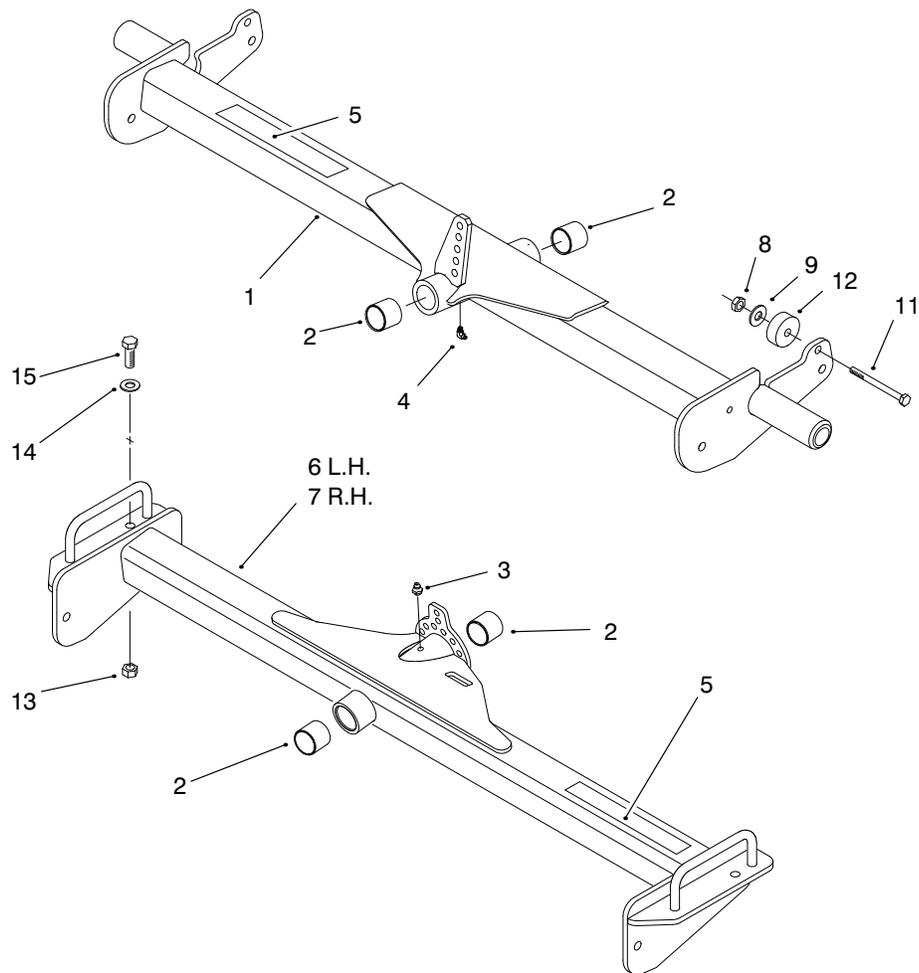

T-2487-3

CUTTING UNIT CARRIER FRAMES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-5098	Asm-Carrier Frame, Rear (Incl. Ref. #2, 4 & 5) (For RM2600D Only)	1	7	94-5097	Asm-Carrier Frame, RH (Incl. Ref. #2, 3 & 5) (For RM2600D Only)	1
*	94-5103	Asm-Carrier Frame, Rear (Incl. Ref. #2, 4 & 5) (For RM2300D Only)	1	*	94-5102	Asm-Carrier Frame, RH (Incl. Ref. #2, 3 & 5) (For RM2300D Only)	1
2	3-0348	Bushing	6	8	3296-4	Nut-Lock	2
3	302-5	Fitting-Lube	2	9	3256-3	Washer-Flat	2
4	302-60	Fitting-Lube 90°	1	11	322-6	Screw-HH	2
5	94-3353	Decal-Warning	3	12	94-5087	Bumper	2
6	94-5096	Asm-Carrier Frame, LH (Incl. Ref. #2, 3 & 5) (For RM2600D Only)	1	13	3296-22	Nut-Lock	2
*	94-5073	Asm-Carrier Frame, LH (Incl. Ref. #2, 3 & 5) (For RM2300D Only)	1	14	3256-24	Washer-Flat	2
				15	323-7	Screw-HH	2
				*	03471	RM2300D Lift Arm Kit (Incl. Ref. #1-12)	1
				*	03472	RM2600D Lift Arm Kit (Incl. Ref. #1-12)	1

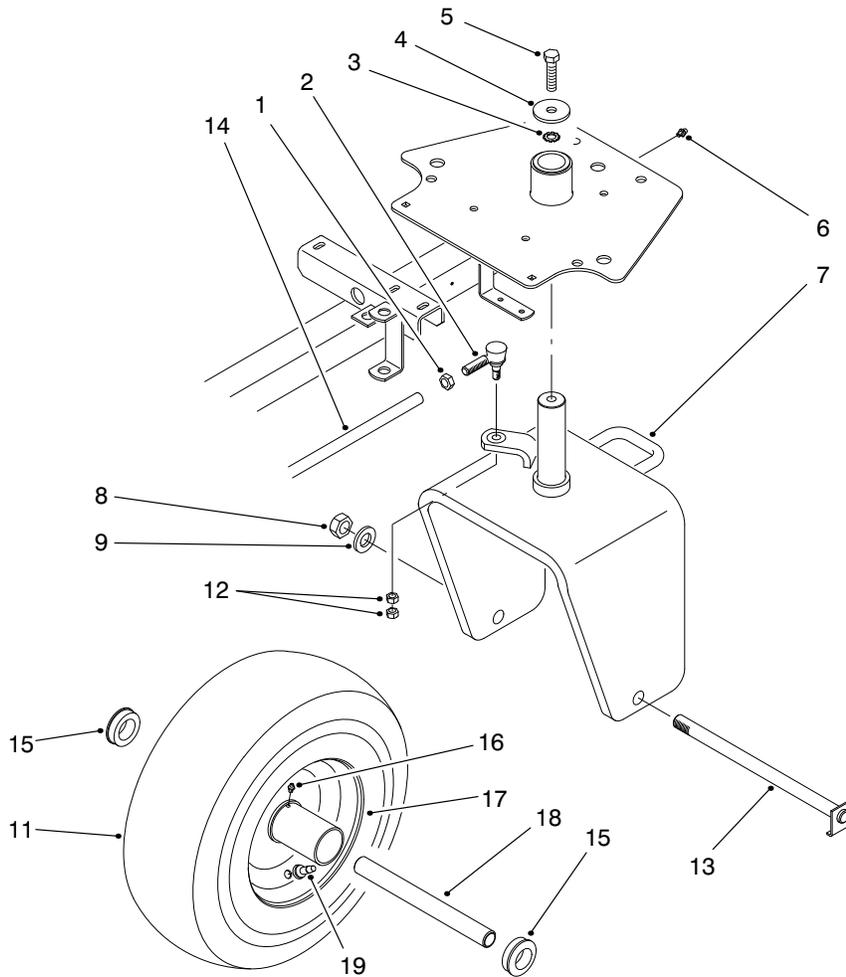


T-2387-1

REAR WHEEL ASSEMBLY (MODEL NO. 03422)

Ref. No.	Part No.	Description	No. Used
1	3220-12	Nut-Jam	1
2	21-0141	Asm-Socket, RH	1
3	3255-2	Washer-Lock ETLW	1
4	75-7730	Washer-Thrust	1
5	325-6	Screw-Hex. Hd.	1
6	302-5	Fitting-Grease	1
7	94-3675	Fork-Castor	1
8	3296-50	Nut-Lock	1
9	3256-28	Washer-Flat	1
11	94-5028	Tire	1


Ref. No.	Part No.	Description	No. Used
12	3220-3	Nut-Jam	2
13	94-5111	Axle-Castor	1
14	61-2070	Link-Steering	1
15	251-321	Bearing	2
16	302-55	Fitting-Grease	1
17	94-5952	Asm-Rim (Incl. Ref. #16)	1
18	94-5970	Spacer	1
19	232-27	Valve-Stem	1

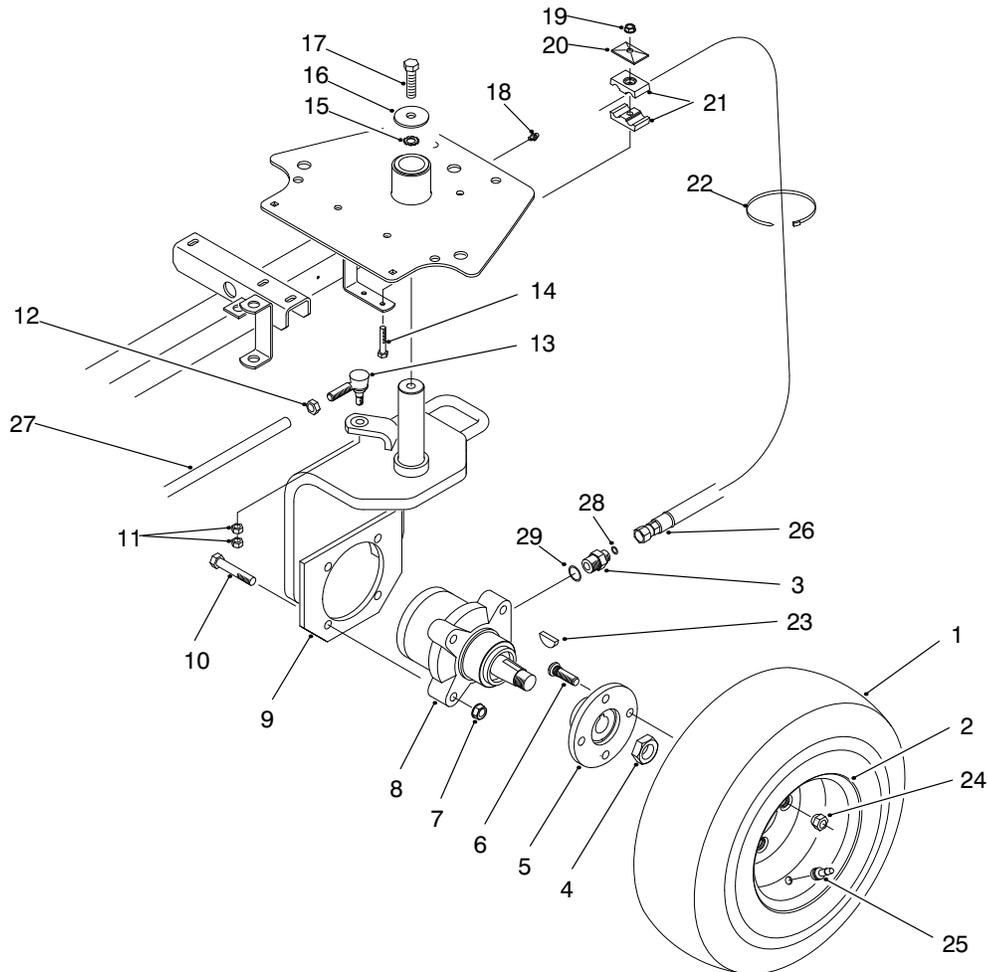

T-2154-1

REAR WHEEL ASSEMBLY (MODEL NO. 03427)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-5028	Tire	1	14	322-9	Screw-HH	1
2	93-6881	Rim	1	15	3255-2	Washer-Lock Ext Tooth	1
3	340-6	Fitting-ORS (Incl. Ref. #28 & 29)	2	16	75-7730	Washer-Thrust	1
4	26-3790	Nut-Lock	1	17	325-6	Screw-HH	1
5	10-6870	Hub-Wheel	1	18	302-5	Fitting-Grease, Straight	1
6	10-6830	Stud-Drive Type	4	19	3296-29	Nut-Hex. Lock	1
7	3296-23	Nut-Hex Lock	4	20	69-9760	Plate-Cover	1
8	75-9990	Motor-Hydraulic (Incl. Ref. #23) (Service Parts on Page 17)	1	21	56-7976	Clamp-Tube	2
9	93-6782	Fork-Rear Wheel	1	22	3290-379	Tie-Cable	1
10	3274-93	Screw-HSH	4	23	3257-42	Key-Woodruff	1
11	3220-3	Nut-Hex. Jam	2	24	242-50	Nut-Lug	4
12	3220-12	Nut-Hex. Jam	1	25	232-27	Stem-Valve	1
13	21-0141	Asm-Socket, RH	1	26	93-6843	Hose-Hydraulic	2
				27	61-2070	Link-Steering	1
				28	237-30	O-Ring	2
				29	237-80	O-Ring	2

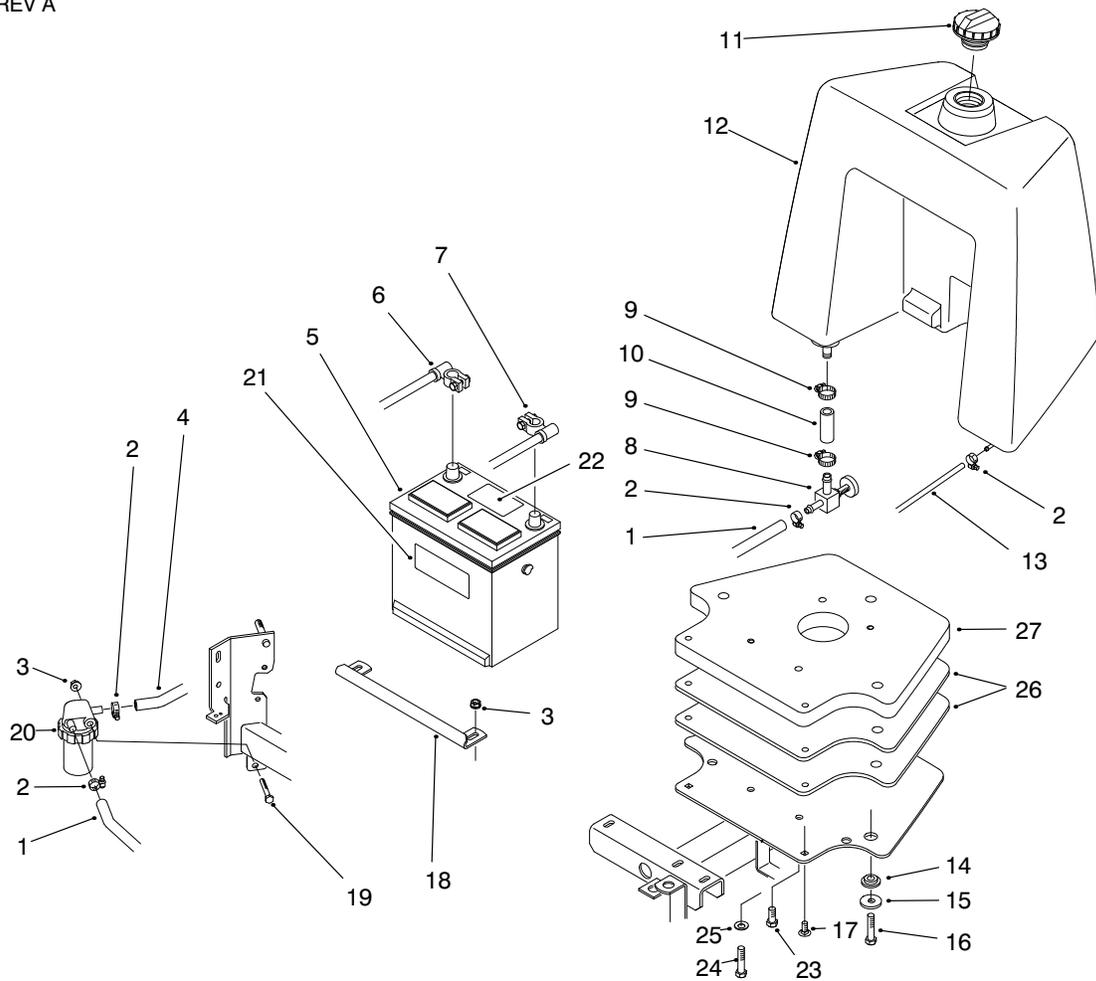

T-2156-2

FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	23-2140	Hose-Fuel	1
2	2412-108	Clamp-Hose	4
3	32128-44	Nut-Flange	3
4	51-0670	Hose-Fuel Line	1
5	83-9000	Battery	1
6	93-6775	Cable-Battery, Pos.	1
7	94-5980	Cable-Battery, Neg.	1
8	56-2520	Fitting-Fuel Shutoff	1
9	2412-36	Clamp-Hose	2
10	56-2230	Hose-Fuel	1
11	93-3102	Fuel Cap-Diesel	1
12	83-8720	Tank-Fuel	1
13	75-4703	Hose-Fuel Return	1
14	240-11	Grommet	3
15	63-8410	Washer-Flat	3
16	323-5	Screw-Hex. Hd.	3
*	323-14	Screw-Hex. Hd. (Model No. 03422 Europe)	3
*	323-12	Screw-Hex. Hd. (Model No. 03427 Europe)	3


Ref. No.	Part No.	Description	No. Used
17	3230-1	Bolt-Carriage	3
*	3230-9	Bolt-Carriage (Model No. 03422 Europe)	2
*	3230-7	Bolt-Carriage (Model No. 03427 Europe)	2
18	83-9240	Bracket-Battery	1
19	322-12	Screw HH	1
†20	130306041	Filter-Fuel	1
21	93-6668	Decal-Battery (Europe)	1
22	93-7276	Decal-Danger (Europe)	1
23	3234-18	Screw-Hex. Flange Hd. (Model No. 03427 Europe)	2
24	323-10	Screw-Hex. Hd. (Model No. 03422 Europe)	2
25	3256-24	Washer-Flat (Model No. 03422 Europe)	2
26	94-3698	Weight-Rear (Model No. 03427 Europe)	2
27	83-9390	Weight-Rear (Model No. 03422 Europe) (Model No. 03427 Europe)	2 1

*Not Illustrated

†Obtain from your local Perkins Dealer.

SPECIAL TOOLS


DRIVE MOTOR SEAL INSTALLATION TOOL NO. *19-2660

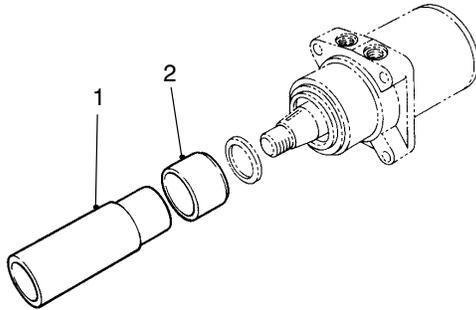

T-0728

Ref. No.	Part No.	Description	No. Used
1		Driver-Seal	1
2		Holder-Seal	1


BEDKNIFE SCREW TOOL NO. *TOR510880

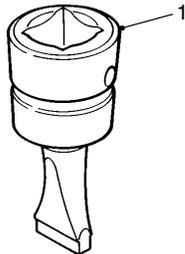

T-0729

Ref. No.	Part No.	Description	No. Used
1		Tool-Bedknife Screw	1


HYDRAULIC OIL RESERVOIR PLUG NO. *88-9220

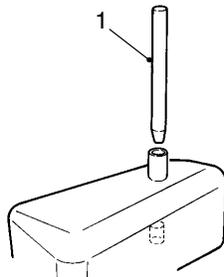

T-1213

Ref. No.	Part No.	Description	No. Used
1		Plug-Reservoir	1


GAUGE BAR ASSEMBLY NO. *TOR138199

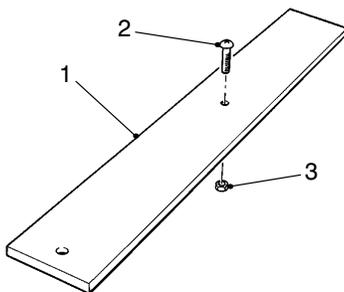

T-1151

Ref. No.	Part No.	Description	No. Used
1	65-8320	Bar-Height-Of-Cut	1
2	32122-2	Screw-Round Hd.	1
3	3219-14	Nut-Hex.	1


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

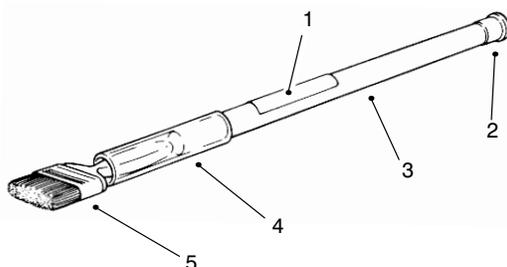

T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose-Handle	1
5	36-4310	Brush	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

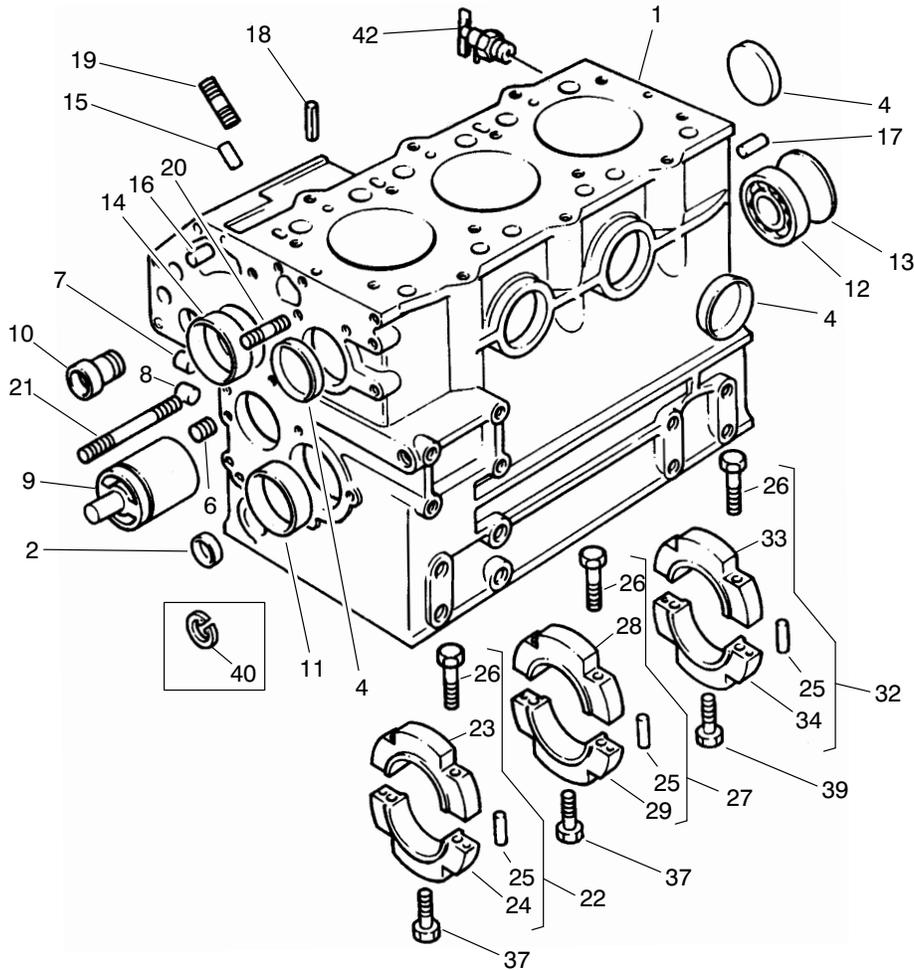

T-1377-2


CYLINDER BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	110186150	Kit-Cylinder Block	1
2	064200015	Plug	1
4	064200040	Plug	4
6	198466050	Plug	3
7	198466010	Plug	4
8	198466070	Plug	2
9	165296160	Shaft	1
10	198517090	Bushing	1
11	198517300	Bushing	1
*	198517304	Bushing 0.25mm US	1
*	198517307	Bushing 0.50mm US	1
12	040106203	Bearing-Ball	1
13	064100045	Plug	1
14	042303015	Bushing	1
15	030500512	Dowel	2
16	030500616	Dowel	2
17	030500820	Dowel	2
18	030309005	Pin	2
19	012100620	Stud	2
20	012100635	Stud	1
21	012100660	Stud	1

Ref. No.	Part No.	Description	No. Used
22	110156220	Holder (Incl. Ref. #23 & 24)	1
23		Cap	1
24		Cap	1
25	030500612	Dowel	6
26	010810840	Screw	6
27	110156230	Holder (Incl. Ref. #28 & 29)	1
28		Cap	1
29		Cap	1
32	110156240	Holder (Incl. Ref. #33 & 34)	1
33		Cap	1
34		Cap	1
37	011310850	Screw	2
39	010700845	Screw	2
40	036509005	Circlip	1
41	064200018	Plug	2
42	198736052	Cock	1
*	195906840	Kit-Gasket	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

*Not Illustrated

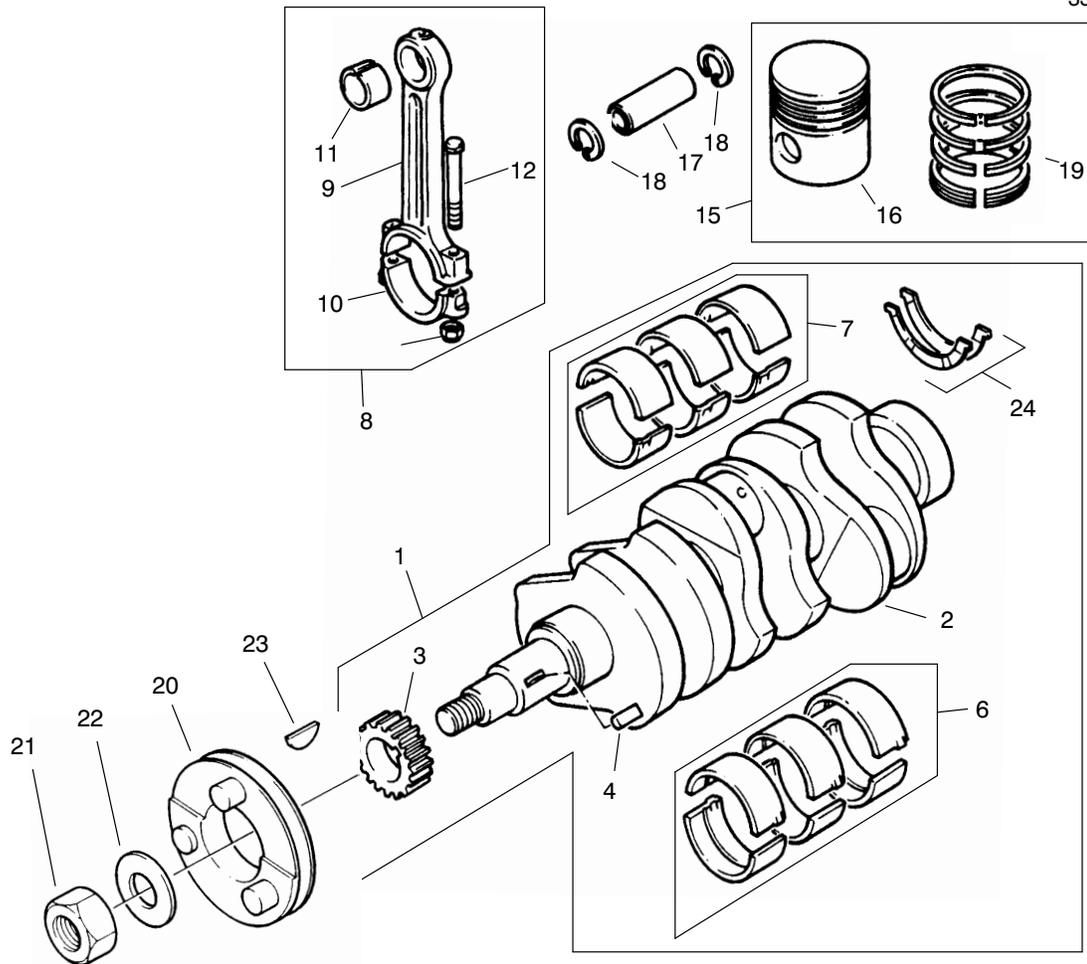


T-2174-4

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	115236020	Kit-Crankshaft (Incl. Ref. #2-4, 6-7 & 24)	1	12	115176130	Screw	2
2		Crankshaft	1	13	020109103	Nut	2
3	115276210	Gear	1	15	115017340	Kit-Piston Std. (Incl. Ref. #16 & 19)	1
4	030509020	Key	1	*	115016970	K-- Piston 0.5mm OS (Incl. Ref. #16 & 19)	1
6	198586030	Kit-Bearing Std.	1	16		Piston	1
*	198586034	Kit-Bearing 0.25mm US	1	17	115326260	Pin	1
*	198586037	Kit-Bearing 0.50mm US	1	18	036500019	Circlip	2
7	198586060	Kit-Bearing Std.	1	19	115107820	Kit-Piston Ring Std.	1
*	198586064	Kit-Bearing 0.25mm US	1	*	115107410	Kit-Piston Ring 0.5mm OS	1
*	198586067	Kit-Bearing 0.50mm US	1	20	115397720	Pulley	1
8	115026240	Asm-Connecting Rod (Incl. Ref. # 9-13)	3	21	020800018	Nut	1
9		Rod	1	22	026200018	Washer	1
10		Cap	1	23	034100508	Key	1
11	198517325	Bushing	1	24		Ring	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

*Not Illustrated

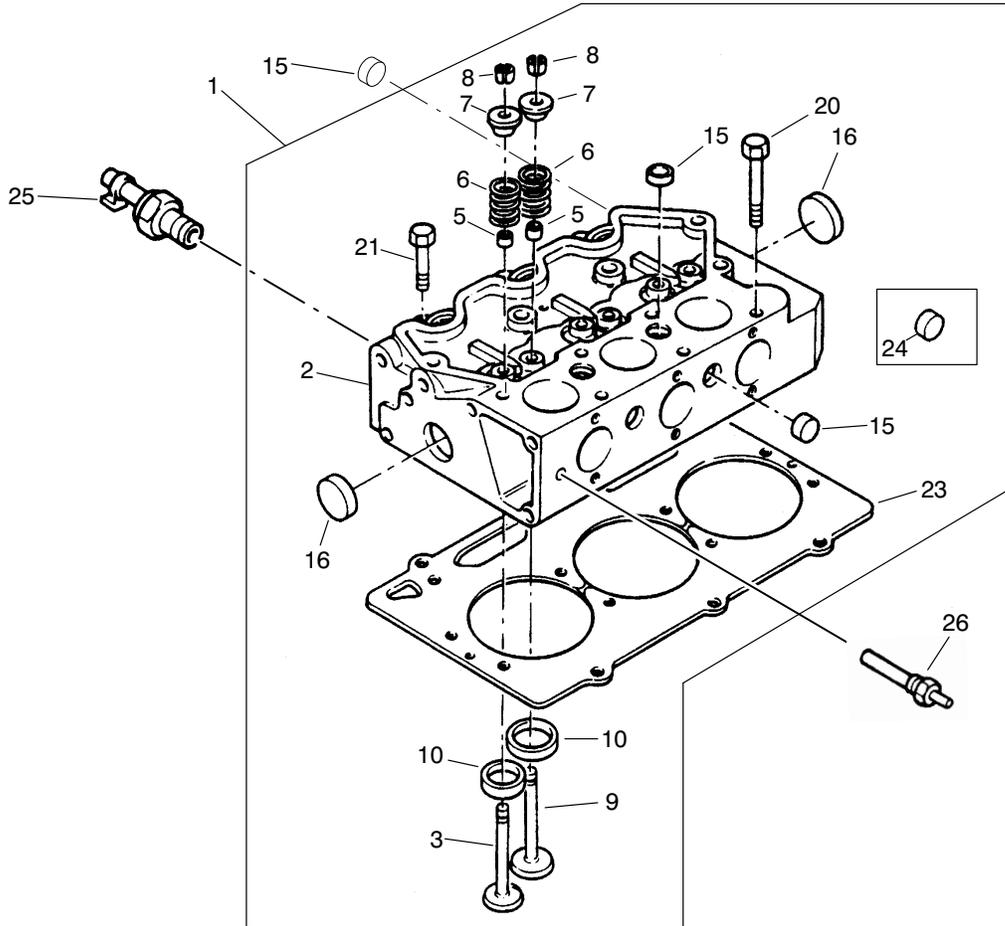


T-2175-2

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111016911	Kit-Cylinder Head	1	15	198466070	Plug	4
2	111086030	Kit-Cylinder Head	1	16	064200022	Plug	6
3	120166280	Valve Inlet	3	20	111136340	Screw	11
5	120406080	Seal	6	21	111136350	Screw	3
6	198217070	Spring	6	23	111147400	Gasket 1.3 mm OS	1
7	120186100	Cap	6	24	064200018	Plug	2
8	120226080	Cotter	12	25	185246060	Switch-Oil Pressure	1
9	120176290	Valve-Exhaust	3	26	385720101	Sender-Temperature	1
10	110136290	Insert	6				

NOTE: Obtain replacement parts from your local Perkins Dealer.

*Not Illustrated

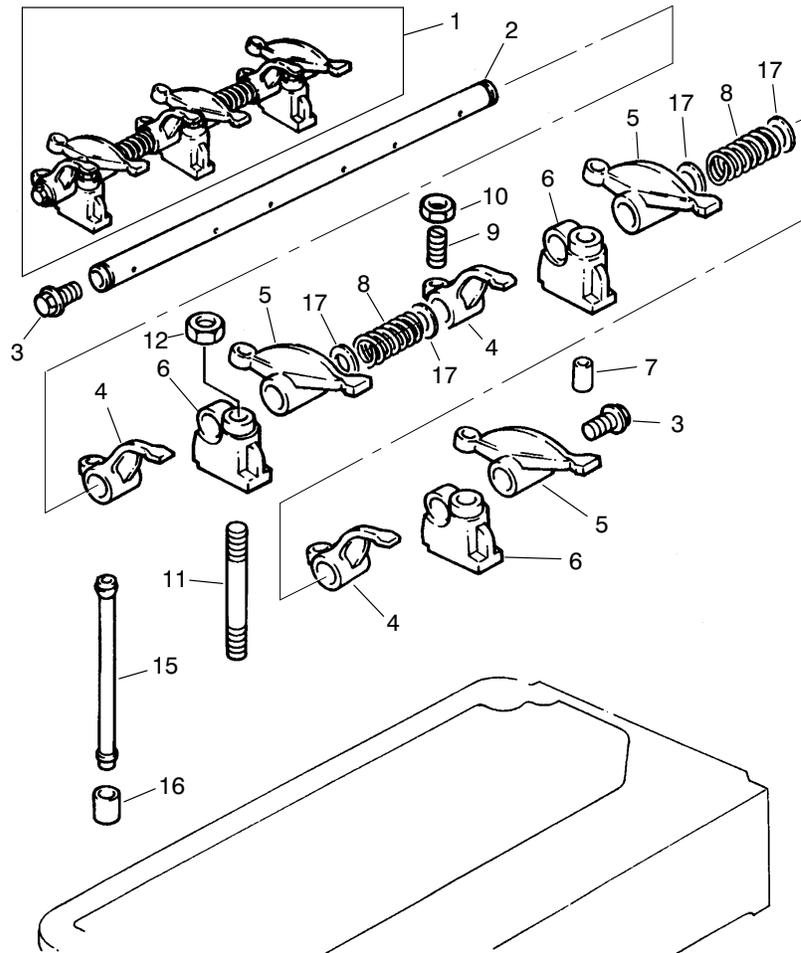


T-1380-1

ROCKER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	120036330	Asm-Rocker Shaft	1	9	199486220	Adjusting Screw	6
2	120316190	Shaft	1	10	020109076	Nut	6
3	064609006	Plug	2	11	012109177	Stud	3
4	120356120	Lever	3	12	023100008	Nut	3
5	120356110	Lever	3	15	120456240	Rod	6
6	120346170	Bracket	3	16	120116160	Tappet	6
7	030300325	Pin	1	17	199280280	Washer	4
8	198217080	Spring	2				

NOTE: Obtain replacement parts from your local Perkins Dealer.

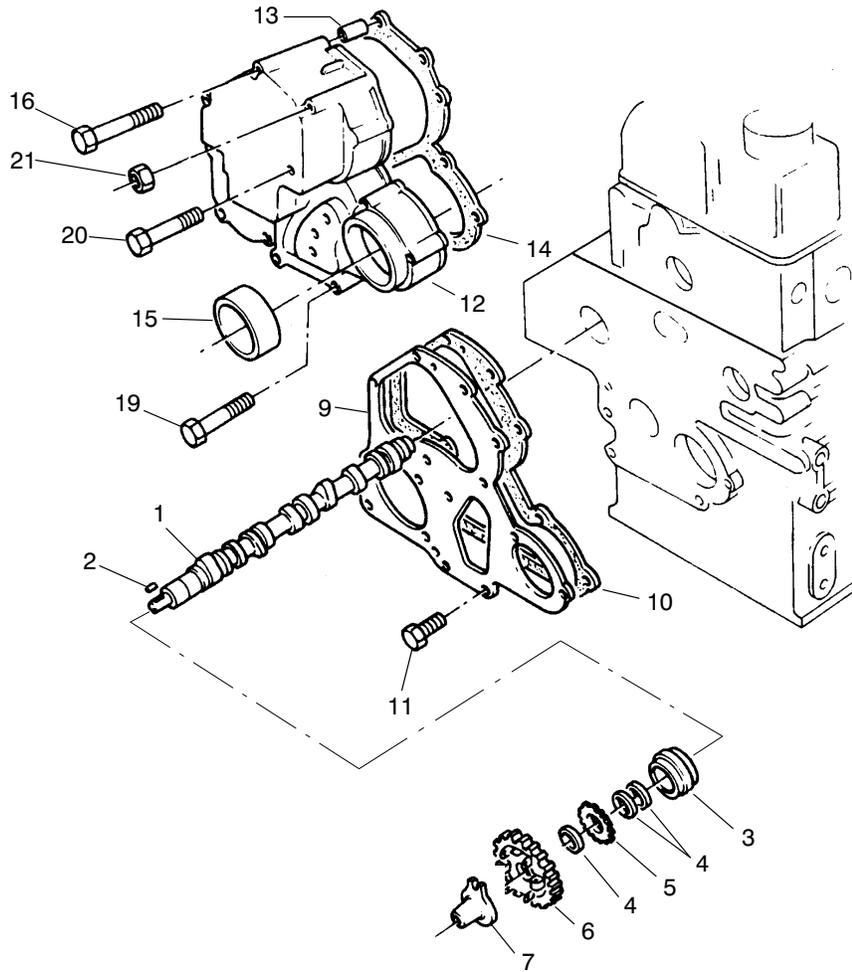


T-1381-1

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120026121	Camshaft	1
2	034100508	Key	1
3	040109059	Bearing	1
4	199216230	Spacer	3
5	120736081	Gear	1
6	120016030	Gear	1
7	125256120	Tappet	1
9	165166260	Plate	1
10	165996400	Joint	1

Ref. No.	Part No.	Description	No. Used
11	011300612	Bolt	3
12	165106131	Cover	1
13	030300414	Pin	1
14	165996410	Joint	1
15	198636090	Seal	1
16	011300680	Screw	2
19	011300640	Screw	4
20	011300660	Screw	2
21	023100006	Nut	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

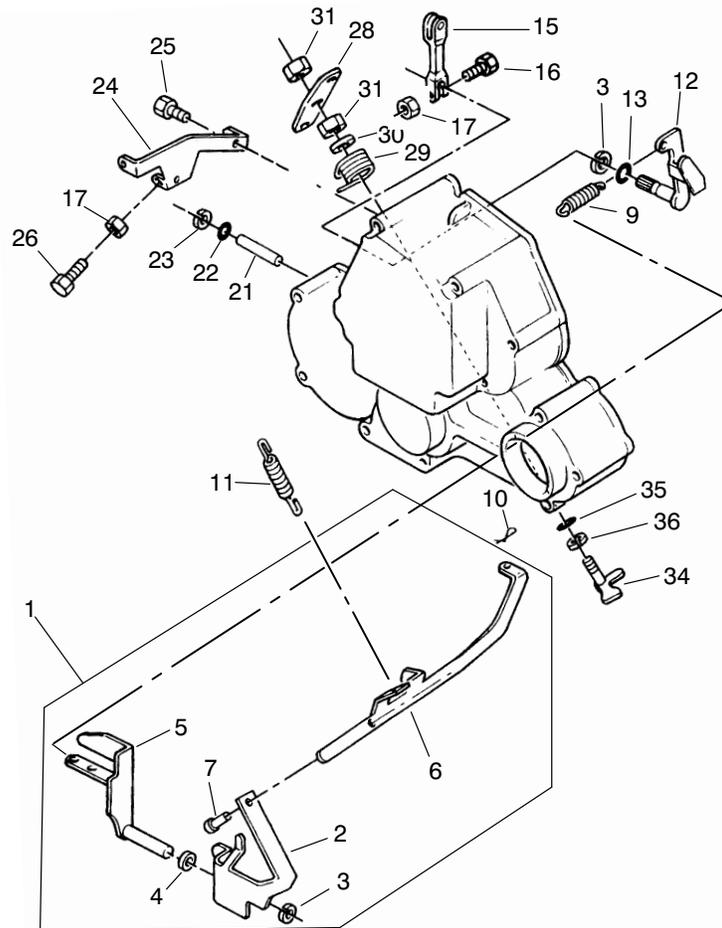


T-1382-2

TIMING COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	125046250	Lever (Incl. Ref. #2-7)	1	17	023100006	Nut	3
2		Lever	1	21	125116130	Shaft	1
3	036800008	Circlip	2	22	052100030	O-Ring	1
4	026200010	Washer	1	23	036800005	Circlip	1
5	125406071	Lever	1	24	125976120	Stay	1
6		Link	1	25	011300616	Screw	2
7		Pin	1	26	010109264	Screw	2
9	198217220	Spring	1	28	125176080	Lever	1
10	031100004	Pin	1	29	198216760	Spring	1
11	198216731	Spring	1	30	026200008	Washer	1
12	125156170	Arm	1	31	020300008	Nut	2
13	052100070	O Ring	1	34	125156180	Arm	1
15	125416020	Lever	1	35	052100050	O-Ring	1
16	010110630	Screw	1	36	036800006	Circlip	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

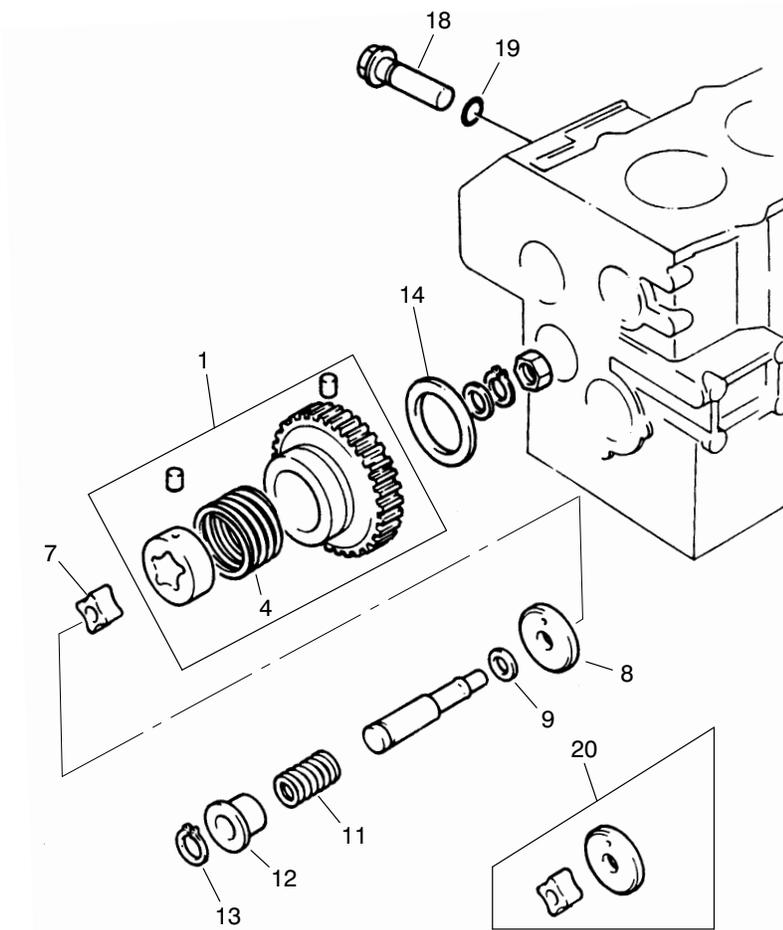

T-1383-1


OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165026110	Asm-Gear (Incl. Ref. #4)	1
4	198216821	Spring	1
7	140166130	Rotor	1
8	140116140	Cover	1
9	199286150	Shim 0.10mm OS	1
*	199286160	Shim 0.15mm OS	1
*	199286170	Shim 0.20mm OS	1
*	199286180	Shim 0.50mm OS	1

Ref. No.	Part No.	Description	No. Used
11	198216720	Spring	1
12	199236540	Collar	1
13	036800010	Circlip	1
14	199266180	Washer	1
18	140036120	Valve	1
19	052100150	O-Ring	1
20	140186010	Kit-Repair	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

*Not Illustrated

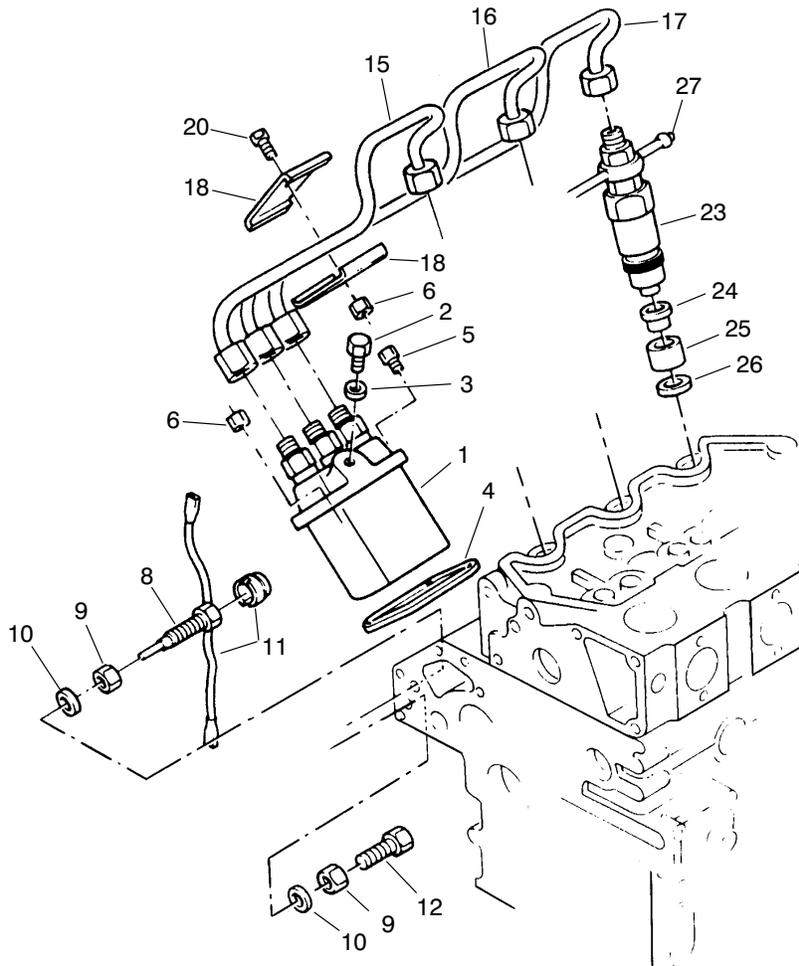


T-1384-2

FUEL INJECTION SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	131017610	Injection Pump	1	15	131507010	Injection Pipe No. 1 Cyl.	1
2	131236280	Screw	1	16	131507020	Injection Pipe No. 2 Cyl.	1
3	025100006	Washer	1	17	131507030	Injection Pipe No. 3 Cyl.	1
4	131426300	Shim 0.2 mm	1	18	199106020	Damper	4
5	011300620	Screw	2	20	010100625	Screw	2
6	023100006	Nut	4	23	131406340	Atomizer	3
8	131046160	Screw	1	24	131426200	Gasket	3
9	023109002	Nut	2	25	111316280	Insert	3
10	025100010	Washer	2	26	198996090	Seal	3
11	198236030	Wire	1	27	131606260	Pipe	1
12	010109270	Screw	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

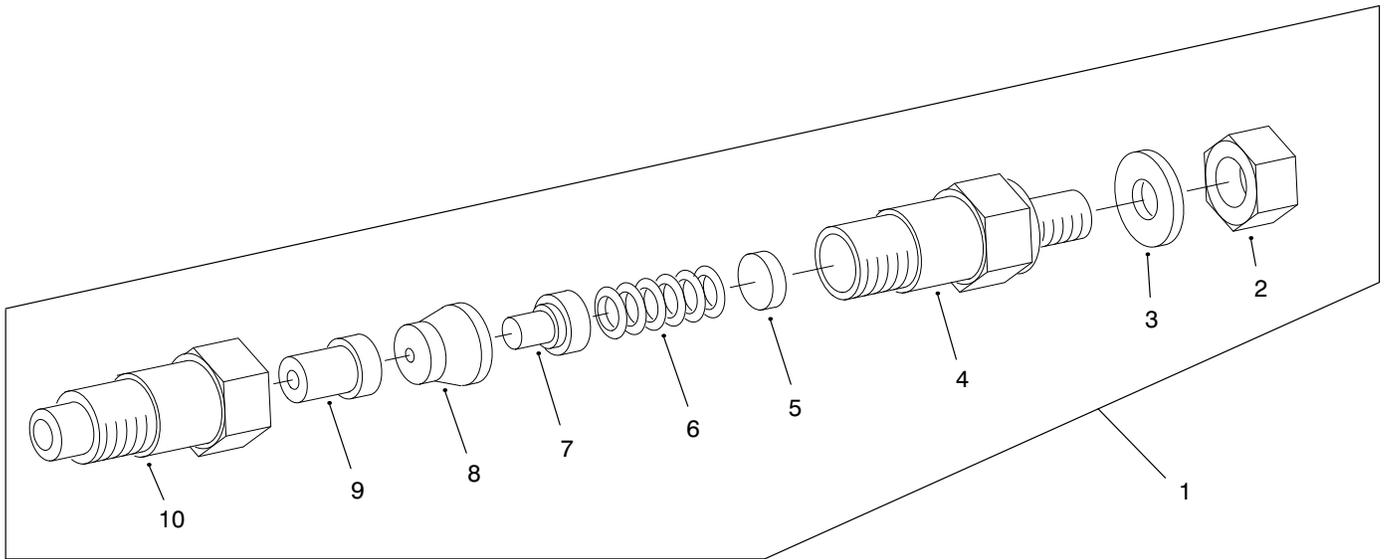

T-2495-2


INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	131406340	Atomizer (Incl. Ref. #2-10)	3
2	131446069	Nut	1
3	131426210	Washer	1
4	131446065	Body	1
5	131437250	Shim 0.90mm OS	1
*	131437251	Shim 0.925mm OS	1
*	131437252	Shim 0.95mm OS	1
*	131437253	Shim 0.975mm OS	1
*	131437354	Shim 1.00mm OS	1
*	131437255	Shim 1.025mm OS	1
*	131437256	Shim 1.05mm OS	1
*	131437257	Shim 1.075mm OS	1
*	131437258	Shim 1.10mm OS	1
*	131437259	Shim 1.125mm OS	1
*	131437260	Shim 1.15mm OS	1
*	131437261	Shim 1.175mm OS	1

Ref. No.	Part No.	Description	No. Used
*	131437262	Shim 1.20mm OS	1
*	131437263	Shim 1.225mm OS	1
*	131437264	Shim 1.250mm OS	1
*	131437265	Shim 1.275mm OS	1
*	131437266	Shim 1.30mm OS	1
*	131437267	Shim 1.325mm OS	1
*	131437268	Shim 1.35mm OS	1
*	131437269	Shim 1.375mm OS	1
*	131437270	Shim 1.40mm OS	1
*	131437271	Shim 1.425mm OS	1
*	131437272	Shim 1.45mm OS	1
6	131446066	Spring	1
7	131446070	Pin	1
8	131446068	Spacer	1
9	131416150	Nozzle	1
10	131446067	Nut	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

*Not Illustrated

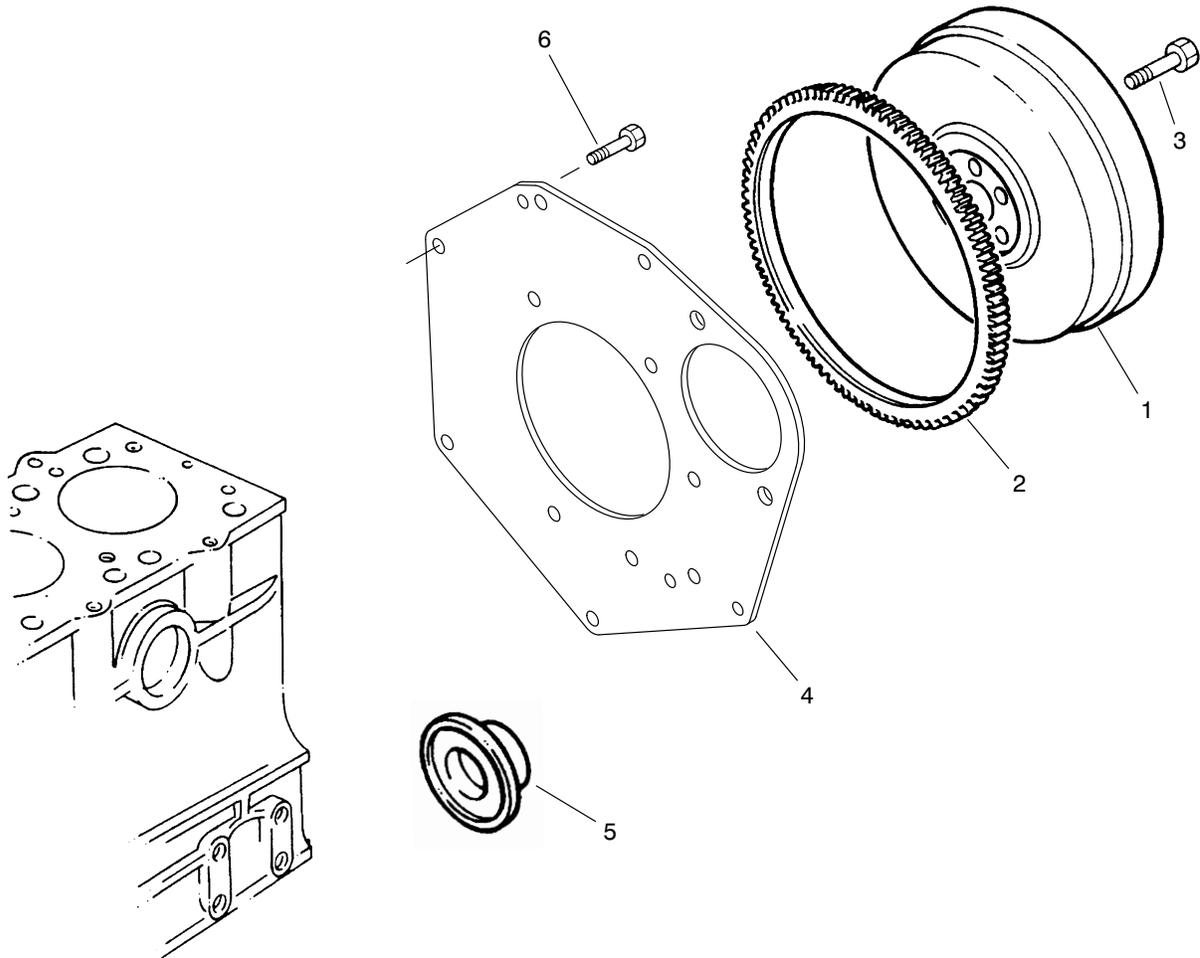


T-1387-3

FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115356922	Flywheel	1
2	115376150	Gear-Ring	1
3	010109330	Screw	4

Ref. No.	Part No.	Description	No. Used
4	110367650	Plate	1
5	198636080	Seal	1
6	011310816	Screw	10

NOTE: Obtain replacement parts from your local Perkins Dealer.

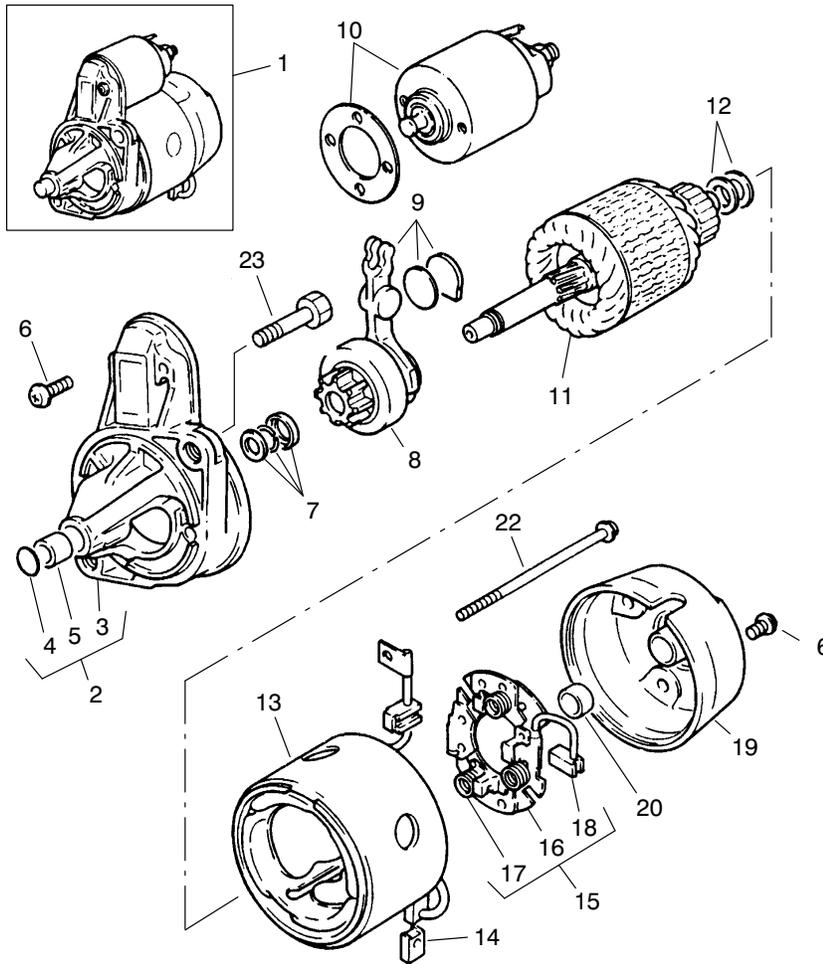


T-1389-3

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1	12	185846475	Washer	1
2	185846471	Cover	1	13	185846476	Yoke	1
3		Cover	1	14	185416400	Brush	1
4		Ring	1	15	185416390	Holder	1
5	185846472	Bushing	2	16		Holder	1
6	185846468	Screw	5	17	185886010	Spring	1
7	185846473	Washer	1	18	185416410	Brush	1
8	185866240	Pinion	1	19	185846477	Cover	1
9	185846469	Lever	1	20	185846478	Bushing	1
10	185816220	Switch	1	22	185846470	Screw	2
11	185846474	Armature	1	23	011401020	Screw	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

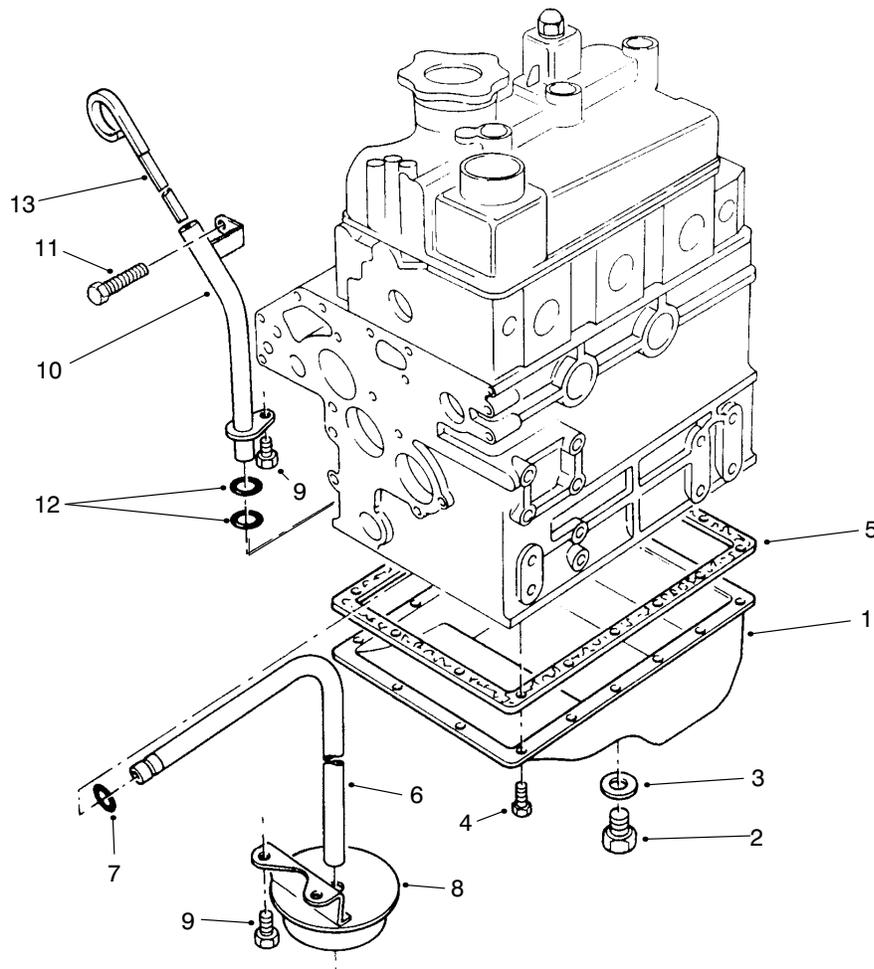


T-1390-2

OIL SUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	110706860	Sump	1	8	140406310	Strainer	1
2	010401212	Plug	2	9	011300612	Bolt	3
3	025100012	Washer	2	10	110756380	Tube	1
4	010109235	Screw	18	11	011300812	Screw	1
5	110996590	Gasket	1	12	052100100	O-Ring	2
6	140986590	Pipe	1	13	198416371	Dipstick	1
7	052109076	O-Ring	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

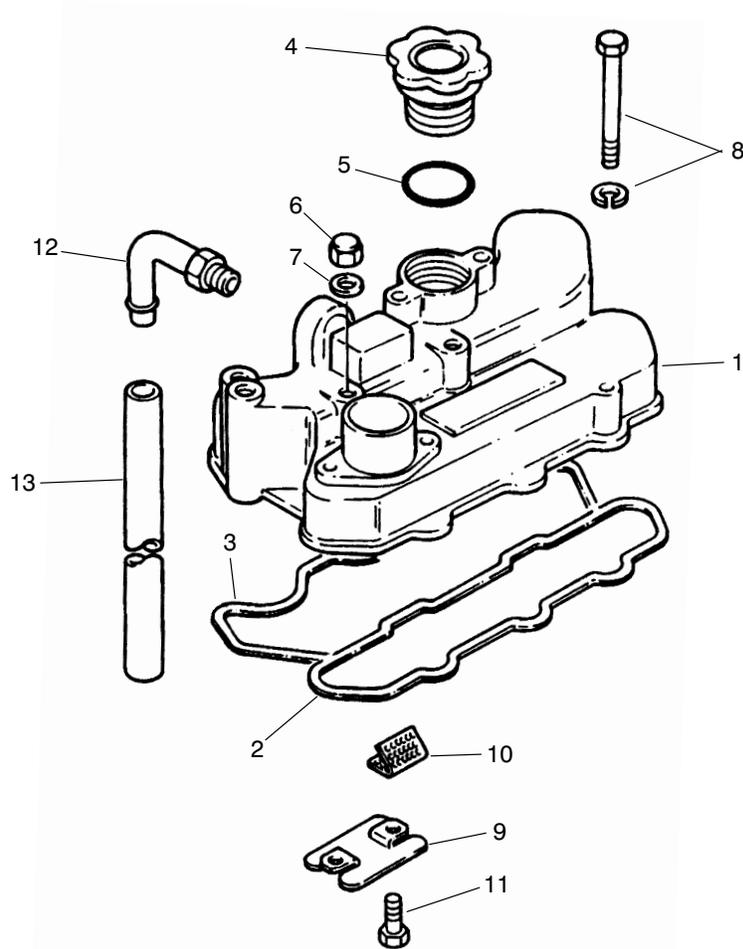


T-1391-1

VALVE COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111026371	Cover	1	8	011300650	Screw	2
2	111996330	Gasket	1	9	110666110	Plate	1
3	111996060	Gasket	1	10	110666120	Gauze	1
4	198436010	Cap	1	11	011300612	Bolt	2
5	052100400	Seal	1	12	110986500	Pipe	1
6	024600008	Nut	3	13	068122560	Hose	1
7	198996060	Washer	3				

NOTE: Obtain replacement parts from your local Perkins Dealer.
 *Not Illustrated

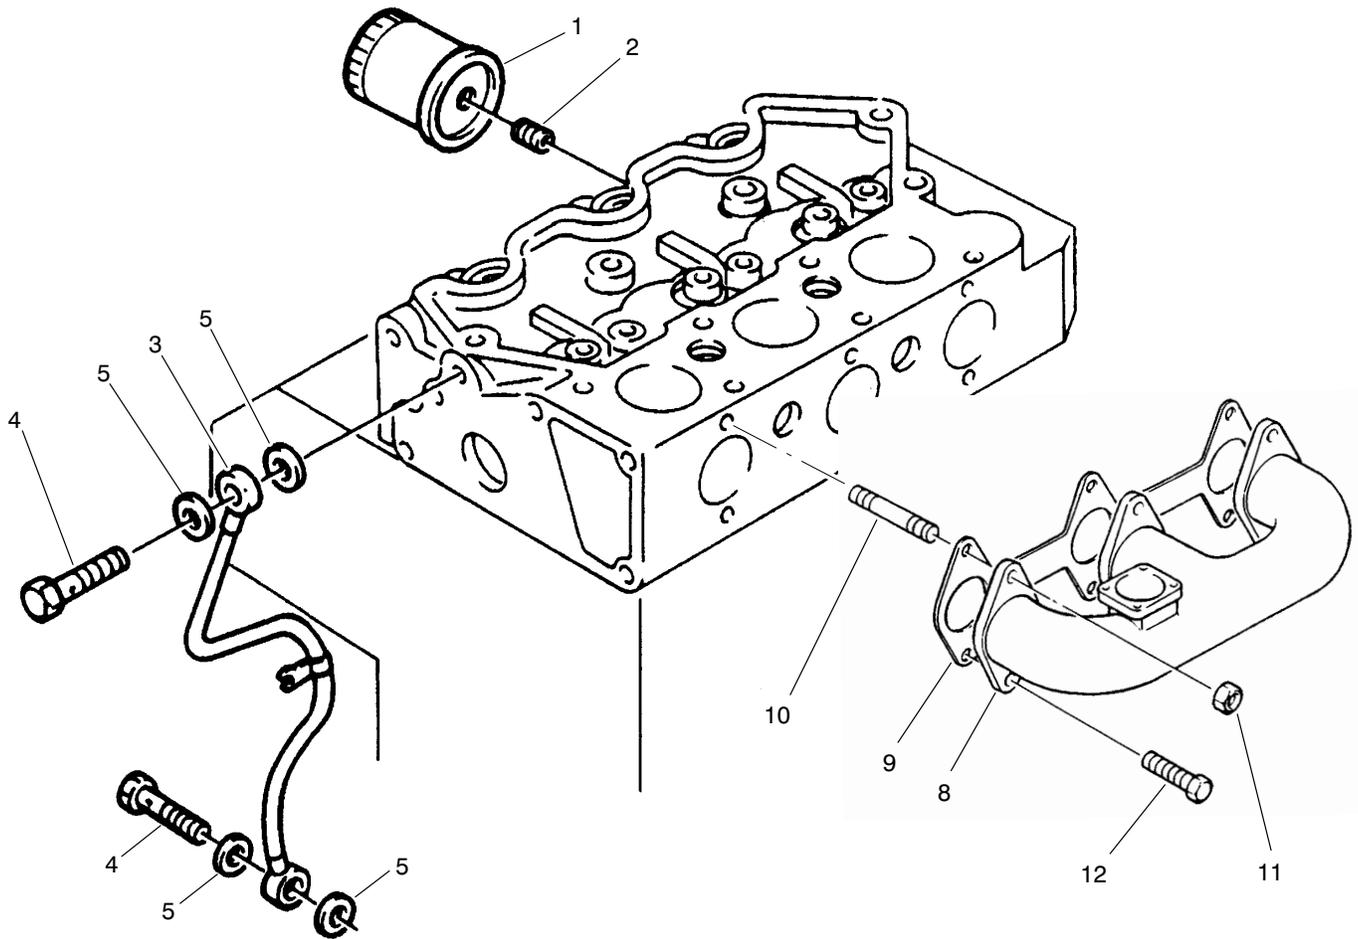


T-1392-3

OIL FILTER & EXHAUST MANIFOLD ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	85-4930	Filter-Oil	1
2	140546020	Connection	1
3	140606680	Pipe	1
4	198486780	Bolt	2
5	198996060	Washer	4

Ref. No.	Part No.	Description	No. Used
8	135616630	Manifold-Exhaust	1
9	135996520	Gasket	1
10	012110625	Stud	3
11	023100006	Nut	3
12	011310625	Screw	3

NOTE: Obtain replacement parts from your local Perkins Dealer.

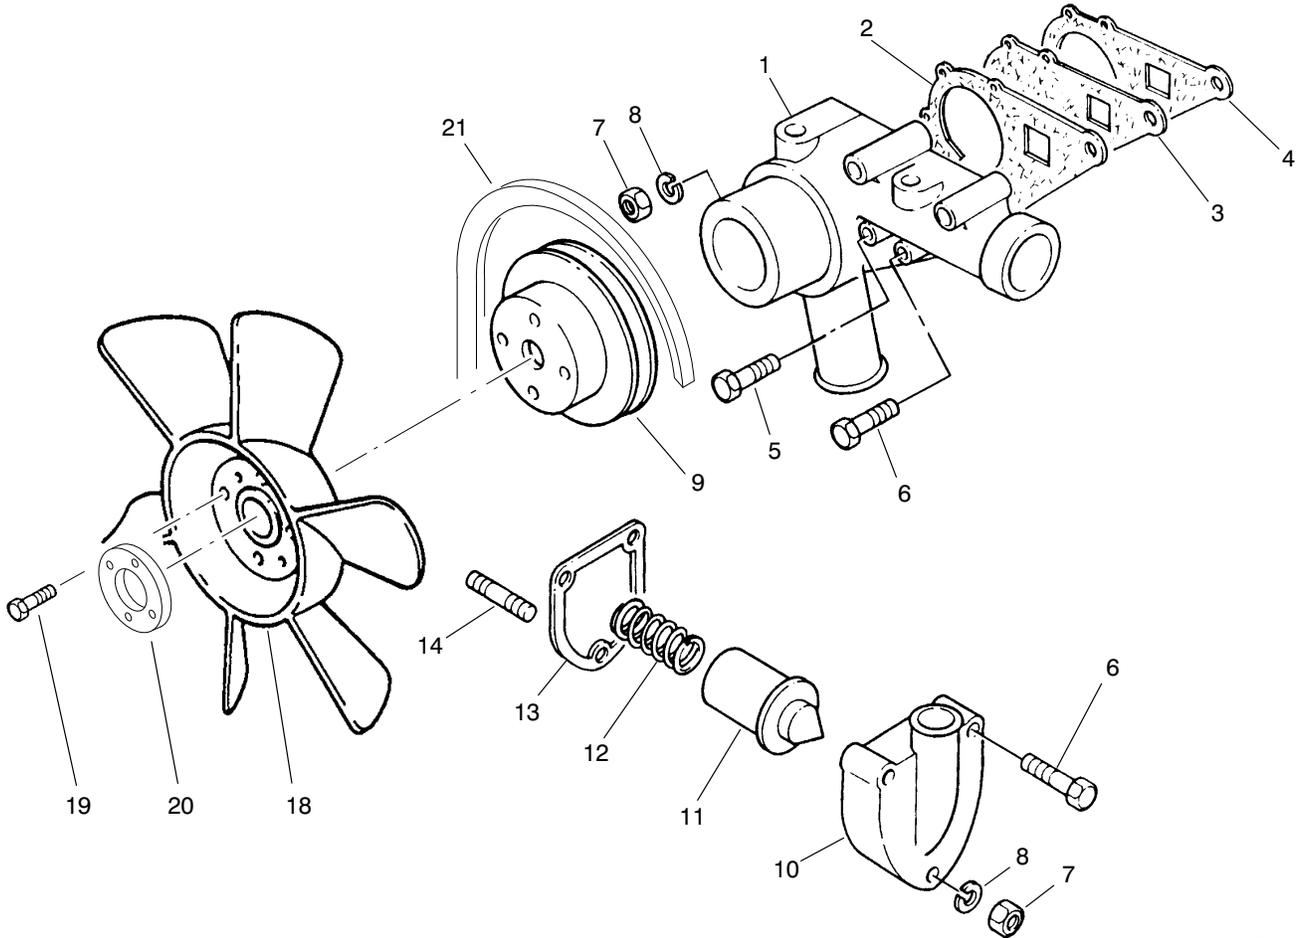


T-2177-3

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	145017400	Pump-Water	1
2	145996430	Gasket	1
3	145146270	Backplate	1
4	145996420	Gasket	1
5	011300635	Screw	3
6	011300650	Screw	6
7	023100006	Nut	2
8	027100006	Washer	2
9	145336490	Pulley	1

Ref. No.	Part No.	Description	No. Used
10	145216161	Housing	1
11	145206062	Thermostat	1
12	198217410	Spring	1
13	145996440	Gasket	1
14	012100650	Stud	1
18	145306780	Fan	1
19	011310614	Screw	4
20	145386520	Plate	1
21	080109048	Belt-Fan	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

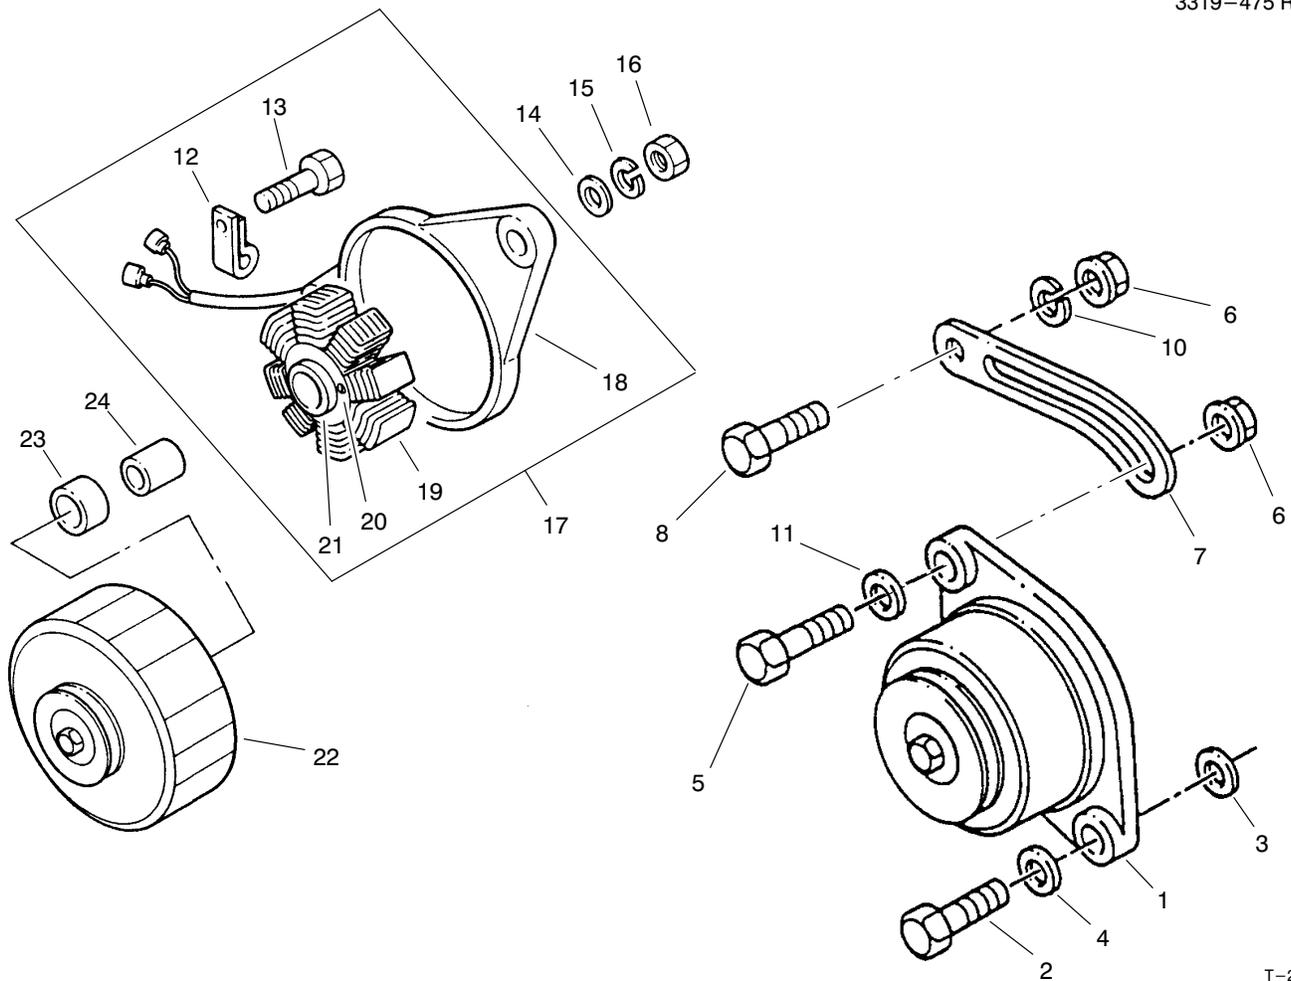


T-2178-2

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	185046210	Alternator	1	15	027100010	Washer	1
2	010110850	Screw	1	16	020210010	Nut	1
3	026909011	Washer	1	17	185446217	Asm-Plate (Incl. Ref. #12-13 & 18-21)	1
4	026200008	Washer	1	18	185716200	Plate	1
5	012810840	Screw	1	19	185446218	Stator	1
6	023100008	Nut	2	20	015140425	Screw	2
7	185726431	Lever	1	21	040126201	Bearing-Ball	1
8	011300816	Screw	1	22	185446219	Pulley	1
10	027100008	Washer	1	23	040126201	Bearing	1
11	026109017	Washer	1	24	199236510	Collar	1
12	185446220	Clip	1				
13	015140408	Screw	1				
14	026100010	Washer	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

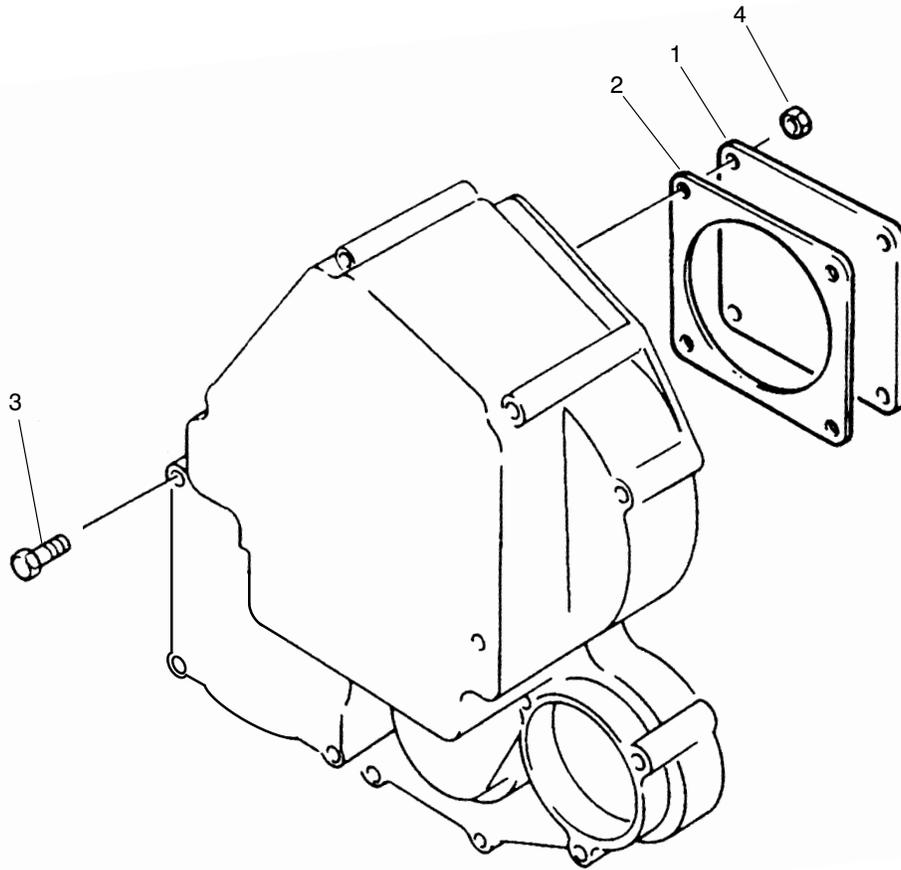


T-1398-1

TIMING COVER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165206360	Plate	1
2	165996420	Gasket	1

Ref. No.	Part No.	Description	No. Used
3	010310865	Bolt	4
4	023100008	Nut	4

NOTE: Obtain replacement parts from your local Perkins Dealer.

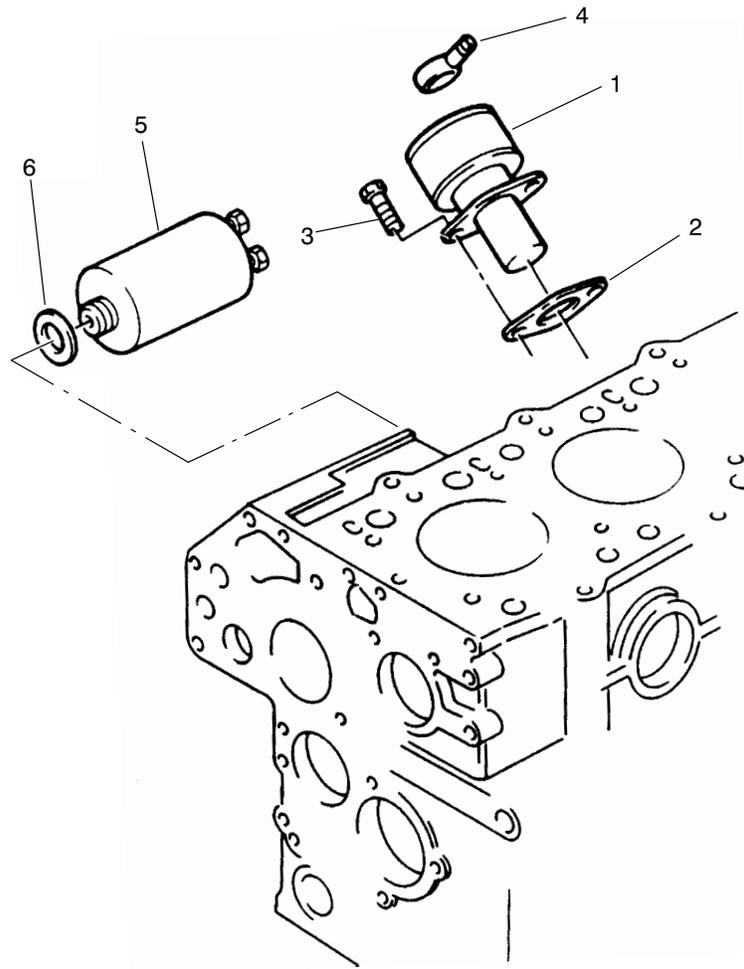


T-2179-1

LOW PRESSURE FUEL SYSTEM & THROTTLE STOP ASSEMBLIES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130506140	Pump-Lift	1	4	198486840	Connection	2
2	130996130	Joint	1	5	185206082	Solenoid	1
3	011140616	Screw	2	6	025100016	Washer	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

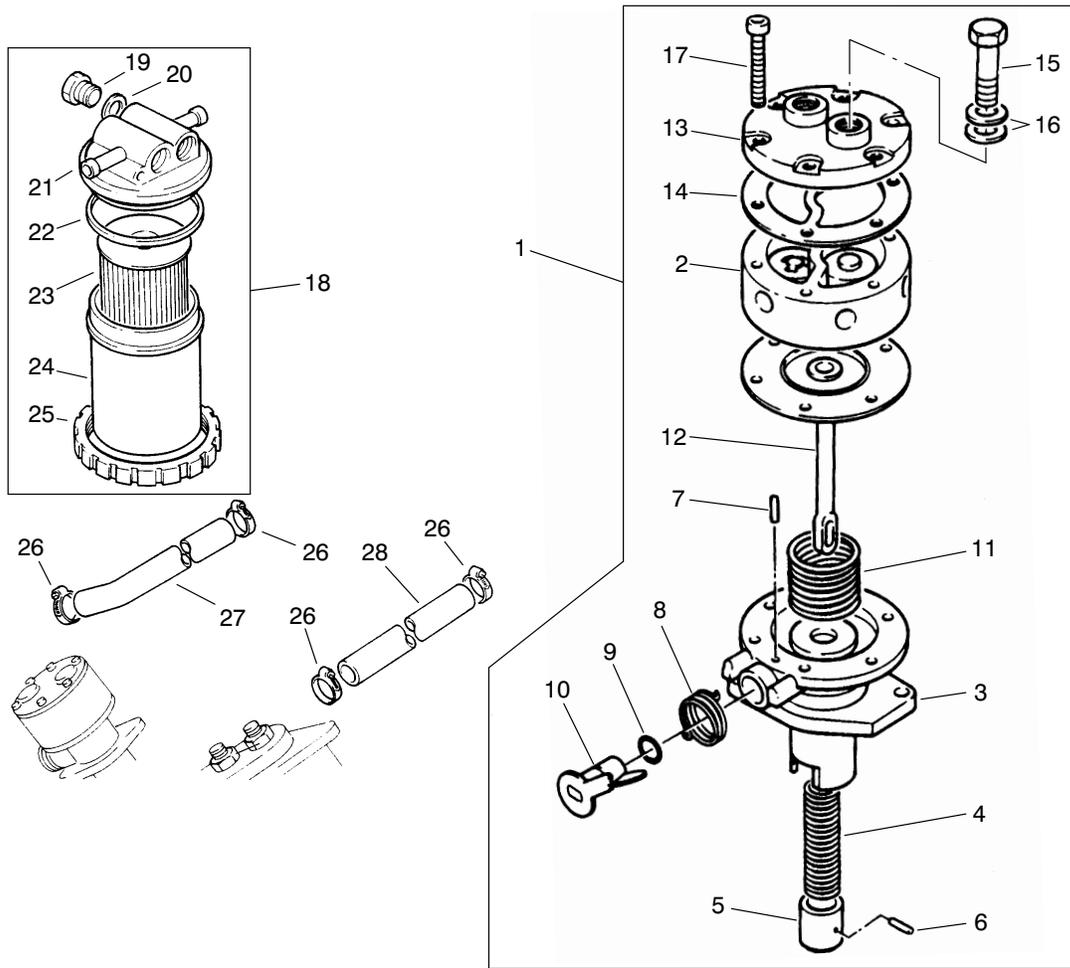


T-1401-3

FUEL FILTER & LIFT PUMP ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	130506140	Asm-Lift Pump (Incl. Ref. #2)	1
2		Body	1
3	130516080	Body	1
4	130516081	Spring	1
5	130516082	Plunger	1
6	130516085	Pin	1
7	130516088	Pin	1
8	130516083	Spring	1
9	131226180	O-Ring	1
10	130516086	Lever	1
11	130516087	Spring	1
12	130516084	Diaphragm	1
13	130516090	Cap	1
14	130516089	Gasket	1

Ref. No.	Part No.	Description	No. Used
15	130516092	Bolt	2
16	130516069	Washer	4
17	130516091	Screw	6
18	130306041	Asm-Fuel Filter (Incl. Ref. #19-25)	1
19	130446080	Plug	2
20	130326120	Washer	2
21		Head-Fuel Filter	1
22	052100440	O-Ring	1
23	130366040	Element-Filter	1
24	130336031	Container	1
25	130446090	Ring	1
26	198346020	Clip	4
27	068207224	Pipe-Fuel	1
28	068207400	Pipe-Fuel	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

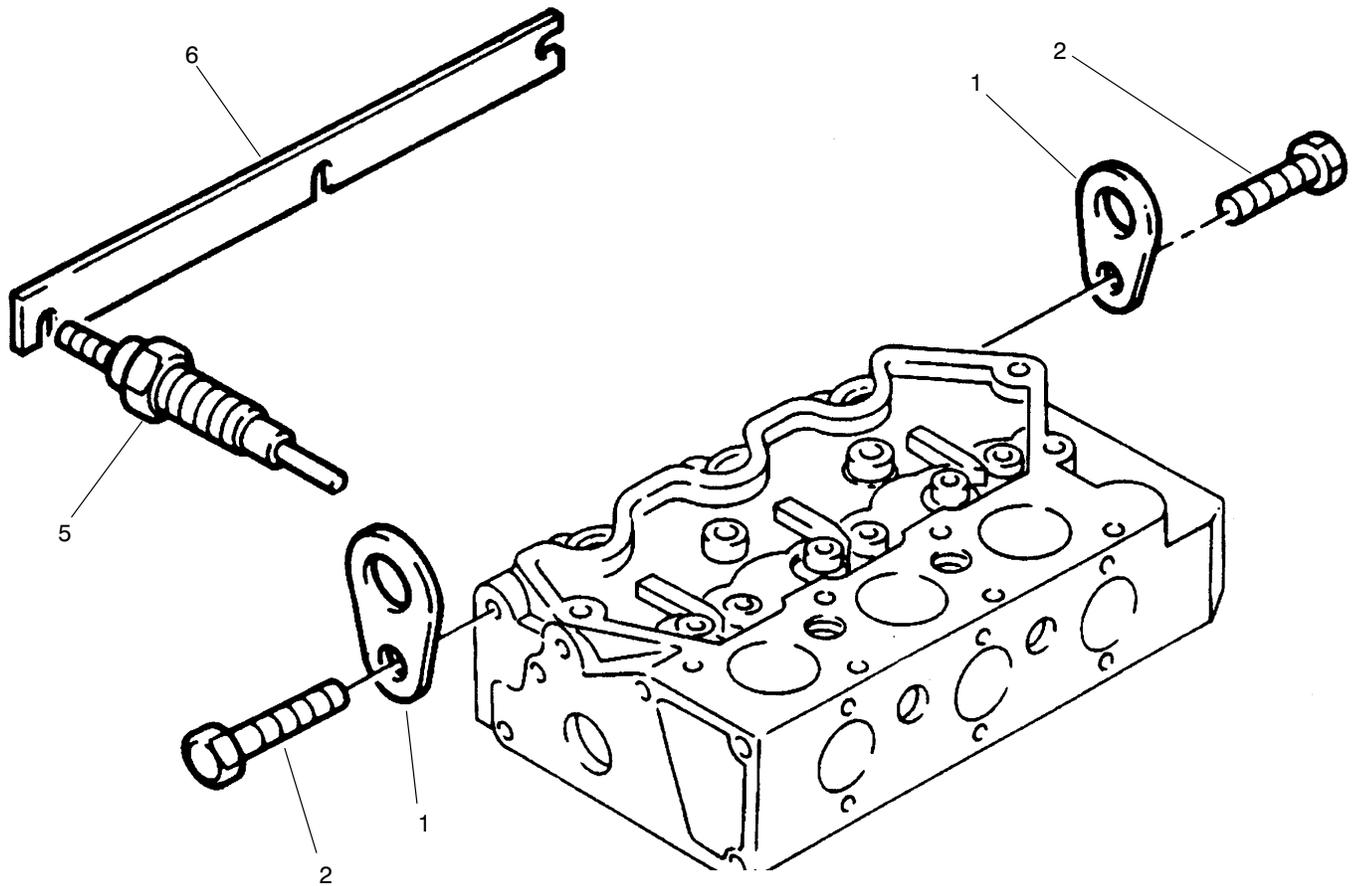


T-1404-3

ENGINE LIFTING TAB & COLD START ASSEMBLIES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	195816200	Plate	2	5	185366060	Heater	3
2	011310816	Screw	2	6	185376170	Bar	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

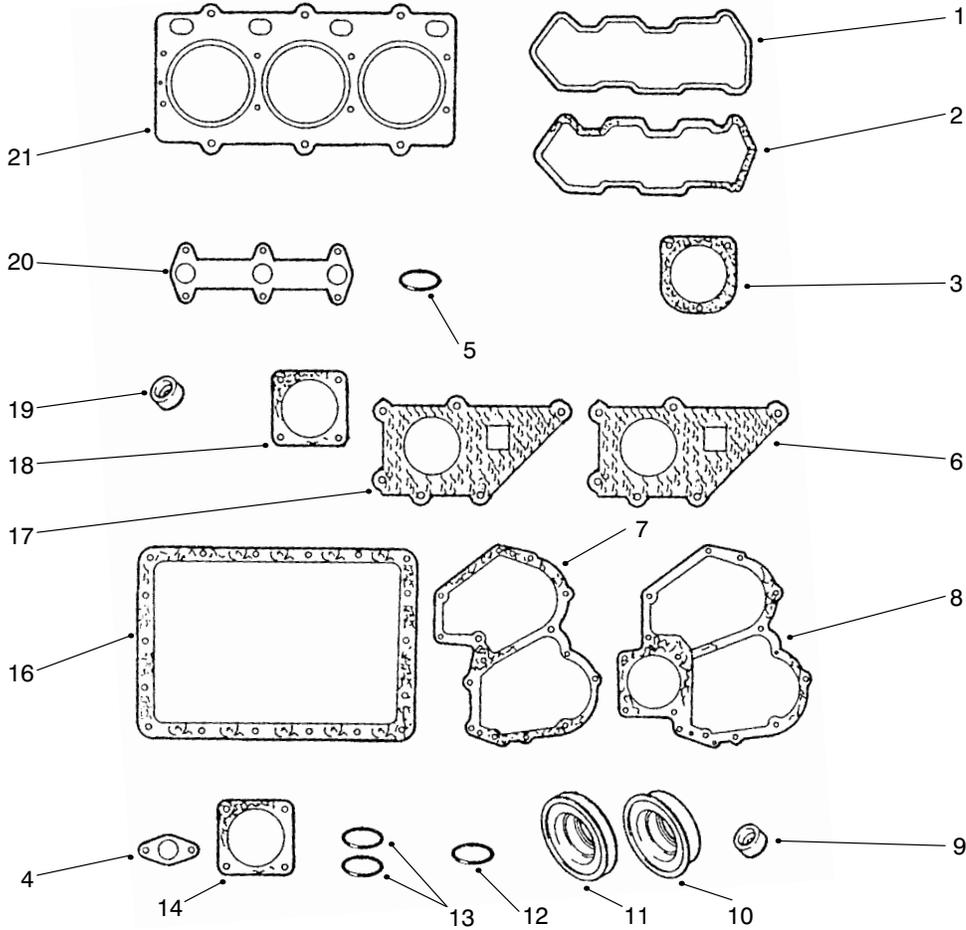

T-2433-1

GASKET AND SEALS

Ref. No.	Part No.	Description	No. Used
1	111996060	Gasket (Valve Cover Asm.)	1
2	111996330	Gasket (Valve Cover Asm.)	1
3	145996440	Gasket (Water Pump Asm.)	1
4	130996070	Gasket (Low Pressure Fuel System Asm.)	2
5	052100400	Seal (Valve Cover Asm.)	1
6	145996430	Gasket (Water Pump Asm.)	1
7	165996400	Gasket (Camshaft Asm.)	1
8	165996410	Gasket (Camshaft Asm.)	1
9	131426200	Gasket (Fuel Injection Asm.)	3
10	198636080	Seal (Flywheel Asm.)	1
11	198636090	Seal (Camshaft Asm.)	1
12	052109076	O-Ring (Oil Sump Asm.)	1

Ref. No.	Part No.	Description	No. Used
13	052100100	O-Ring (Oil Sump Asm.)	2
14	165996420	Gasket (Timing Cover Plate Asm.)	1
16	110996590	Gasket (Oil Sump Asm.)	1
17	145996420	Gasket (Water Pump Asm.)	1
18	314990013	Gasket (Muffler)	1
19	120406080	Seal (Cylinder Head Asm.)	3
20	135996520	Gasket (Exhaust Manifold Asm.)	1
21	111147390	Gasket (Cylinder Head Asm.)	1
*	195906840	Kit-Gasket & Seals (Incl. Ref. #1-21)	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

*Not Illustrated

TORO PART NUMBER INDEX

3319-475 REV A

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-0348	Bushing	39	2	6	59-8320	Ring-Retaining	34	16	1
3-0348	Bushing	36	19	4	59-8320	Ring-Retaining	35	16	1
3-0348	Bushing	37	24	2	59-8420	O-Ring	34	11	2
3-6498	Washer-Thrust	7	17	A/R	59-8420	O-Ring	35	11	2
3-6498	Washer-Thrust	16	36	2	60-5890	Washer-Backup	34	18	1
5-0743	Spring	37	1	1	60-5890	Washer-Backup	35	18	1
5-0743	Spring	36	15	2	60-6330	Screw-Pan Hd.	13	9	4
5-7290	Spring	16	9	1	61-2070	Link-Steering	40	14	1
10-6830	Stud-Drive Type	41	6	4	61-2070	Link-Steering	41	27	1
10-6850	Drum Brake	16	19	2	61-2070	Tube-Steering	7	4	1
10-6870	Hub-Wheel	41	5	1	61-2450	Hub-Lift	29	19	1
12-9140	Decal	43	1	1	61-2790	Filler-Screen	11	7	1
21-0141	Asm-Socket, RH	40	2	1	61-3830	Chain	29	12	2
21-0141	Asm-Socket, RH	41	13	1	61-3990	Parking Brake	16	7	1
21-0150	Asm-Socket, LH	7	5	1	62-7170	Spacer	3	42	1
21-9260	Cover-Dust	7	30	1	62-7240	Sleeve-Vinyl Spring	37	2	1
22-8330	Plug	28	1	2	62-7300	Chain	36	24	2
22-8340	Spring	28	3	2	62-7400	Decal-Toro	1	2	1
22-8350	Ball	28	4	2	63-8410	Washer-Flat	11	11	3
22-8360	Pin-Cam	28	6	2	63-8410	Washer-Flat	42	15	3
22-8370	Seat-Check Valve	28	5	2	65-8320	Bar-Height-Of-Cut	43	1	1
22-8380	Retainer-Spring	28	10	2	65-9940	Spring-Compression	27	28	1
22-8410	Spring	28	11	1	66-0120	Knob-Control	5	53	1
22-8420	Spool	28	8	1	66-2920	Washer-Nylon	15	30	1
22-8480	Snap Ring-Spool	28	13	1	66-3160	Screw	25	53	10
22-8490	Snap Ring	28	14	1	66-3240	Cap-Radiator	8	13	1
22-8500	O-Ring	28	9	2	66-5710	Seal-Oil	34	17	1
23-2140	Hose-Fuel	42	1	1	66-5710	Seal-Oil	35	17	1
23-3030	Spacer	28	12	1	66-5730	Asm-Front Plate	34	14	1
26-3790	Nut-Lock	41	4	1	66-5730	Asm-Front Plate	35	14	1
26-3790	Nut-Lock	16	40	2	67-5360	Decal-Danger	2	4	1
27-9870	Pin-Seat Switch	2	25	1	68-6030	Screw-HH	25	5	1
28-6180	Pin-Plastic	2	24	1	68-8990	Head-Oil Filter	11	21	1
29-6150	Spring-Leaf	15	13	1	69-1170	Glass-Sight	11	2	1
29-6170	Asm-Extended Leaf Spring	15	11	1	69-4120	Asm-Cartridge Valve	30	1	1
29-9080	Handle	43	3	1	69-4240	Kit-Seal	30	2	1
29-9090	Hose-Handle	43	4	1	69-4300	Nut	30	11	1
33-3270	Washer	13	37	1	69-9760	Plate-Clamp	32	20	2
33-3750	Race-Inner	13	14	2	69-9760	Plate-Cover	41	20	1
33-4930	Gasket	13	26	1	70-1240	Asm-Plug	13	23	2
36-4310	Brush	43	5	1	70-1480	Relay	4	21	1
37-9590	Spring-Compression	2	23	1	70-1480	Relay	2	27	1
42-2010	Pin-Alignment	34	13	2	70-9840	Shoe-Brake	16	17	4
42-2010	Pin-Alignment	35	13	2	70-9850	Clip-Retaining	16	50	2
42-2720	Seal-Shaft	13	38	1	70-9860	Pin-Pivot	16	43	2
42-9850	Washer-Lock	25	14	1	70-9870	Plate-Brake	16	44	2
43-1950	Valve-Control Hydraulic	27	9	1	70-9880	Spring-Extension	16	42	4
43-8600	Spring-Compression	3	72	1	71-1500	Asm-Brake	16	*	2
43-8610	Guide-Spring	3	71	1	71-3382	Hose	8	11	1
43-8620	Guide-Pin	3	74	1	72-4190	Pin-Cylinder Guide	29	16	1
43-8860	Plunger-Switch	3	73	1	72-4320	Switch-Seat	2	26	1
43-8870	Boot-Switch	3	76	1	74-0720	Tube-Manual	2	12	1
43-9071	Asm-Switch, Limit	3	*	1	74-6110	Stop-Cam	15	29	1
44-2212	Asm-Indicator Light	4	15	1	74-9100	Pad-Pedal Forward	15	15	1
44-8160	Washer-Clutch	25	3	1	74-9110	Pad-Pedal Reverse	15	17	1
48-7700	Screw-HH	25	10	3	75-2080	Kit-Seal	30	7	3
48-7780	Screw-HH	25	48	16	75-2160	Bushing-Flange	7	15	2
48-8010	Washer-Flat	25	44	2	75-4703	Hose-Fuel	26	61	1
48-9510	Nut-Lock	10	5	1	75-4703	Hose-Fuel Return	42	13	1
48-9590	Washer-Lock	25	45	14	75-6820	Hour Meter	4	9	1
51-0670	Hose-Fuel Line	42	4	1	75-7730	Washer-Thrust	40	4	1
51-3150	Shim-Spring Arm	15	9	1	75-7730	Washer-Thrust	41	16	1
54-0110	Element-Oil Filter	11	20	1	75-9990	Motor-Hydraulic	41	8	1
56-2230	Hose-Fuel	42	10	1	75-9990	Motor-Hydraulic RH	16	12	1
56-2520	Fitting-Fuel Shutoff	42	8	1	76-0800	Kit-Seal	17	*	1
56-7970	Clamp-Tube	32	21	4	76-0800	Kit-Seal	18	*	1
56-7976	Clamp-Tube	20	17	2	76-0810	Asm-Housing	17	*	1
56-7976	Clamp-Tube	41	21	2	76-0810	Asm-Housing	18	*	1
56-7976	Clamp-Tube	3	69	2	76-0840	Manifold	17	22	1
57-5420	Screw-Shoulder	11	1	1	76-0840	Manifold	18	22	1
57-6390	Nut-Jam	25	13	1	76-0850	Bearing-Thrust	17	12	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
76-0850	Bearing-Thrust	18	12	1	84-6860	Decal-Brake (Japan)	1	*	1
76-0860	Shaft-Coupling	17	11	1	84-6960	Decal-Control (Japan)	2	*	1
76-0860	Shaft-Coupling	18	11	1	84-7080	Decal-Warning (Japan)	3	*	1
76-0870	Plate-Wear	17	18	1	84-7280	Decal-Danger (Japan)	2	*	1
76-0870	Plate-Wear	18	18	1	84-8440	Bush-Flange	29	17	2
76-0880	Asm-Commutator	17	*	1	85-4930	Filter-Oil	26	65	1
76-0880	Asm-Commutator	18	*	1	85-5160	Valve Lever	27	6	1
76-0890	Asm-End Cover	18	24	1	85-5230	Bracket-Seat Pivot	2	9	2
76-0940	Asm-End Cover	17	24	1	85-5270	Key-Switch, Start	5	52	2
76-0960	Link-Drive	17	13	1	85-5330	Asm-Seat Plate	2	11	1
76-0960	Link-Drive	18	13	1	85-5340	Tube-Seat Pivot	2	7	2
76-0970	Rotor Set	17	*	1	85-6540	Drive Type Stud	16	23	8
76-0970	Rotor Set	18	*	1	87-6270	Socket-Light	4	38	4
76-1010	Screw-Hex. Hd.	17	14	7	87-7270	Washer-Hardened	12	5	2
76-2200	Footrest-Traction Pedal	1	7	1	87-8640	Washer-Flat	3	65	1
76-2260	Pad-Footrest	1	5	1	87-8640	Washer-Flat Hardened	15	38	1
76-6070	Kit-Rotating Parts	13	31	1	87-8640	Washer-Flat, Hardened	7	24	2
76-6080	Cover-Seal	13	18	1	87-9400	Valve	10	8	1
76-6090	Cover-Trunnion	13	10	1	88-6720	Radiator Bracket	8	37	1
76-6100	Cover	13	11	1	88-6730	Bracket-Screen Front	8	30	1
76-6140	O-Ring	13	12	1	92-1812	Shaft-Lift Pivot	36	1	2
76-6150	Pin-Dowel	13	20	2	92-1812	Shaft-Lift Pivot	37	15	1
76-6180	Washer	13	13	2	92-1818	Arm-Tension Spring	36	4	2
76-6190	Seal-Shaft	13	19	1	92-1818	Arm-Tension Spring	37	10	1
76-6200	Spring	13	24	2	92-3154	Tab-Throttle	25	43	1
76-6471	Trim	3	41	1	92-3162	Bushing-Flange	7	10	4
76-8870	Dampner	15	43	1	92-3188	Diode-Circuit Board	2	36	1
76-9760	Pivot-Damper	15	48	1	92-3194	Switch-Push/Pull	4	16	1
77-3100	Decal-Caution	8	3	1	92-3195	Knob	5	44	1
80-6980	Asm-Soft Latch	4	14	1	92-3196	Valve-2 Position	21	8	1
80-6990	Washer-Hardened	29	2	4	92-7904	Cap-Valve	22	1	1
80-6990	Washer-Hardened	12	9	2	92-7905	Micro Switch	29	5	1
80-6990	Washer-Hardened	25	16	16	92-7911	Boot	22	10	1
80-7345	Hose	4	23	1	92-7912	Retainer-Boot	22	14	1
81-1690	Clamp-Throttle Cable	25	37	1	92-7913	Kit-Seal Repair	22	*	1
82-3110	Sender-Temp	25	26	1	92-9260	Asm-Relief Valve	34	19	1
83-2010	Asm-Coil	30	10	1	92-9260	Asm-Relief Valve	35	19	1
83-7970	Fitting-Hydraulic	8	28	2	92-9775	Warning Light Cluster	4	12	1
83-7980	Bracket-Radiator Rear	8	19	1	93-1413	Kit-Seal Repair	34	*	1
83-8040	Cover-Left	8	9	1	93-1413	Kit-Seal Repair	35	*	1
83-8070	Shield-Radiator Bottom	8	24	1	93-2190	Asm-Air Cleaner	10	*	1
83-8080	Key	25	9	1	93-2190	Asm-Air Cleaner	8	43	1
83-8120	Panel-Right Rear	2	6	1	93-2191	Asm-Clamp	10	4	1
83-8150	Asm-Screen	8	23	1	93-2191	Asm-Clamp	8	42	1
83-8210	Panel-Left Front	8	26	1	93-2195	Element-Air Cleaner	10	2	1
83-8270	Pedal-Traction	15	16	1	93-3102	Fuel Cap-Diesel	42	11	1
83-8510	Bracket-Left Fender	1	24	1	93-4411	Gauge-Temperature	4	13	1
83-8720	Tank-Fuel	42	12	1	93-6668	Decal-Battery (Europe)	42	21	1
83-8760	Rod-Pump Control	15	25	1	93-6696	Decal-Warning	36	8	2
83-9000	Battery	42	5	1	93-6696	Decal-Warning	37	26	1
83-9030	Foam-Top	8	14	1	93-6706	Pulley-Engine	25	4	1
83-9240	Bracket-Battery	42	18	1	93-6707	Spindle-Clutch	25	49	1
83-9270	Brake Arm-LH	16	29	1	93-6712	Bracket-Mount, Front	25	46	2
83-9310	Brake Arm-RH	16	28	1	93-6713	Bracket-Mount, Rear LH	25	31	1
83-9330	Shaft-Brake	16	37	1	93-6718	Asm-Hydraulic Manifold	29	25	1
83-9340	Shield-Grass Brake	16	15	2	93-6719	Muffler	25	19	1
83-9350	Rod-Adjusting	16	6	1	93-6720	Bracket-Muffler	25	24	1
83-9390	Weight-Rear	42	27	2	93-6721	Tube-Muffler	25	23	1
83-9500	Asm-Tube 3wd Valve	20	4	1	93-6722	U-Bolt	25	25	1
83-9500	Tube-Hydraulic	21	9	1	93-6724	Hose-Air Inlet Lower	8	51	1
83-9550	Decal-Warning	3	40	1	93-6725	Bracket-Wire Keeper	25	6	1
83-9651	Hose-Hydraulic	11	15	1	93-6726	Asm-Radiator	8	38	1
83-9710	Footrest-LH	1	29	1	93-6727	Clutch-Electric	25	54	1
83-9800	Shield-Front Grass LH	1	25	1	93-6728	Hose-Radiator Upper	8	52	1
83-9840	Pad-Foot	1	30	1	93-6728	Hose-Radiator, Upper	25	27	1
83-9920	Bracket-Hydraulic Tank	11	9	1	93-6729	Hose-Radiator Lower	8	53	1
84-1990	Rod-Adjusting	16	35	2	93-6729	Hose-Radiator, Lower	25	33	1
84-2000	Bracket-Brake	16	25	2	93-6730	Shroud-Radiator Bottom	8	10	1
84-2940	Decal-Warning (Japan)	36	*	2	93-6731	Shroud-Radiator Top	8	4	1
84-2940	Decal-Warning (Japan)	37	*	1	93-6732	Panel-Left Rear	3	52	1
84-6760	Decal-Caution (Japan)	8	*	1	93-6733	Bracket-Valve Mount	29	24	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-6737	Pump Mount Mach	12 7 1	93-6869	Asm-Hydraulic Cylinder	37 23 1
93-6738	Chain-Tipper	36 22 2	93-6876	Hose-Air Inlet Upper	8 50 1
93-6742	Bracket-Hood Pivot	1 20 2	93-6877	Foam-Seal	8 1 1
93-6743	Stop-Throttle	4 2 1	93-6879	Tire	16 20 2
93-6751	Asm-Pump	12 8 1	93-6881	Rim	41 2 1
93-6761	Decal-Reelmaster 2300D	2 21 2	93-6881	Rim	16 21 2
93-6762	Switch-Push Button	4 7 1	93-6888	Motor-Hydraulic LH	16 38 1
93-6768	Gear-Sector	7 6 1	93-6892	Bracket-Throttle Cable	25 40 1
93-6769	Steering Column	7 21 1	93-6893	Ram Pivot Pin	37 14 1
93-6775	Cable-Battery Pos.	25 59 1	93-6895	Asm-Tube 3wd Fwd	20 2 1
93-6775	Cable-Battery, Pos.	42 6 1	93-6895	Tube-Hydraulic	21 10 1
93-6776	Fender-LH	1 27 1	93-6896	Asm-Tube 3wd Reverse	20 6 1
93-6778	Fender-Right	1 11 1	93-6902	Decal-Fuse Block	4 17 1
93-6779	Footrest-RH	1 9 1	93-6903	Decal-Service	2 39 1
93-6780	Hinge	1 17 1	93-6904	Spacer	29 27 2
93-6782	Fork-Rear Wheel	41 9 1	93-6905	Shield-Wheel	16 26 2
93-6789	Asm-Hydraulic Hose	33 40 1	93-6908	Spacer-Split	3 58 1
93-6790	Asm-Hydraulic Hose	32 33 1	93-6912	Shackle	37 6 1
93-6793	Fitting-Barb	11 4 1	93-6912	Shackle	36 16 2
93-6794	Fitting-Special	11 27 1	93-6918	Asm-Hydraulic Tube	32 30 1
93-6795	Fitting-90°	12 22 1	93-6919	Asm-Hydraulic Tube	33 43 1
93-6796	Bracket-Bulkhead	33 42 1	93-6920	Asm-Hydraulic Tube	33 44 1
93-6797	Asm-Hose	27 1 1	93-6921	Asm-Relief Valve	27 * 1
93-6797	Asm-Hose	12 14 1	93-6922	Tube-Hydraulic	27 12 1
93-6798	Asm-Hose	27 11 1	93-6923	Tube-Hydraulic	27 18 1
93-6798	Hose-Hydraulic	12 37 1	93-6924	Trim	3 57 2
93-6799	Hose-Hydraulic	11 19 1	93-6926	Pin-Clevis	37 29 1
93-6799	Hose-Hydraulic	12 36 1	93-6927	Trim	1 32 1
93-6800	Hose-Hyd	12 18 1	93-6932	Exchanger-Heat	8 27 1
93-6800	Hose-Hydraulic	29 34 1	93-6933	Sleeve-Protective	8 46 1
93-6803	Fitting-90°	8 34 2	93-6935	Asm-Hose	29 32 1
93-6803	Fitting-Hydraulic 90°	32 26 1	93-6936	Arm-Traction	15 18 1
93-6804	Hose	8 36 1	93-6938	Panel-Foot	3 47 1
93-6804	Hose-Hydraulic	11 24 1	93-6941	Trim	4 26 2
93-6805	Hose	8 39 1	93-6946	Bracket-Mount Rear RH	26 64 1
93-6805	Hose-Hydraulic	32 27 1	93-6972	Asm-Hydraulic Motor	32 17 2
93-6806	Hose	12 23 1	93-6974	Pump-Reel Drive	12 19 1
93-6806	Hose-Hydraulic	11 25 1	93-6975	Asm-Hydraulic Motor	32 36 1
93-6811	Tank-Hydraulic	11 8 1	93-7159	Knob	8 35 2
93-6816	Control-Throttle	4 1 1	93-7160	Asm-Oil Cap	11 6 1
93-6824	Asm-Pump Lever	15 34 1	93-7252	Decal-CE Mark (Europe)	7 26 1
93-6825	Plate-Pump	15 4 1	93-7267	Decal-Brake	1 28 1
93-6826	Mounting Bracket	15 39 1	93-7270	Decal-Control	2 20 1
93-6828	Asm-Hose	12 31 1	93-7271	Decal-Warning (Europe)	3 * 1
93-6828	Hose-Hydraulic	20 10 1	93-7272	Decal-Caution (Europe)	8 * 1
93-6828	Hose-Hydraulic	19 19 1	93-7273	Decal-Danger (Europe)	2 * 1
93-6829	Asm-Hose	12 11 1	93-7276	Decal-Danger (Europe)	42 22 1
93-6829	Hose-Hydraulic	20 11 1	93-7726	Hook (Europe)	4 35 1
93-6829	Hose-Hydraulic	19 20 1	93-7840	Decal-Radiator Cap	9 55 1
93-6830	Tube-Hyd	21 2 1	93-8823	Coupling	32 37 3
93-6835	Tube-Hyd	21 4 1	94-1247	Decal-Service (Swedish)	2 * 1
93-6836	Asm-Tube	20 1 1	94-1754	Micro Switch	15 3 1
93-6836	Asm-Tube	19 5 1	94-2590	Decal-Service (Danish)	2 * 1
93-6837	Asm-Tube	20 9 1	94-2591	Decal-Service (Dutch)	2 * 1
93-6837	Asm-Tube	19 16 1	94-2592	Decal-Service (Finnish)	2 * 1
93-6838	Hub-Wheel	16 18 2	94-2593	Decal-Service (French)	2 * 1
93-6840	Belt-Pump Drive	12 2 1	94-2594	Decal-Service (German)	2 * 1
93-6841	Pulley	12 3 1	94-2595	Decal-Service (Italian)	2 * 1
93-6842	Asm-Taper Lock Bushing	12 1 1	94-2596	Decal-Service (Japan)	3 * 1
93-6843	Asm-Hose	21 3 2	94-2597	Decal-Service (Norwegian)	2 * 1
93-6843	Hose-Hydraulic	41 26 2	94-2598	Decal-Service (Portuguese)	3 39 1
93-6845	Yoke-Belt Adjust	12 29 1	94-2599	Decal-Service (Spanish)	2 * 1
93-6846	Panel-Right Front	2 5 1	94-2948	Decal-Fuse Block (Japan)	4 * 1
93-6847	Panel-Left Front	2 2 1	94-3350	Decal-Instrument Panel	4 * 1
93-6848	Fitting-Barb 45°	12 24 1	94-3351	Decal-Instrument Panel	4 19 1
93-6850	Brake Lever	16 32 2	94-3352	Decal-Fuse Block (Europe)	4 * 1
93-6857	Hose-Hydraulic	11 23 1	94-3353	Decal-Warning	39 5 3
93-6857	Hose-Hydraulic	12 38 1	94-3424	Bracket-Switch Mount	29 43 1
93-6858	Shield-Front RH	1 16 1	94-3425	Screw	22 16 1
93-6859	Spacer	15 20 2	94-3426	Stop-Valve	22 13 1
93-6868	Asm-Footstep	2 34 1	94-3427	Asm-Plug	22 2 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
94-3429	Plunger Switch	29	45	1	94-5006	Hose-Hydraulic	29	38	1
94-3600	Screw-Hex. Socket Hd.	34	15	8	94-5007	Asm-Hose	27	14	1
94-3600	Screw-Hex. Socket Hd.	35	15	8	94-5007	Hose-Hydraulic	29	37	1
94-3601	Gear-Idler	34	8	1	94-5008	Asm-Hose	37	20	1
94-3601	Gear-Idler	35	8	1	94-5008	Hose-Hydraulic	29	36	1
94-3602	Gear-Drive	34	9	1	94-5009	Asm-Hose	37	19	1
94-3602	Gear-Drive	35	9	1	94-5009	Hose-Hydraulic	29	35	1
94-3603	Body	34	12	1	94-5010	Pin-Switch Actuator	29	13	1
94-3603	Body	35	12	1	94-5011	Spring-Compression	29	14	1
94-3604	Asm-Backplate/Relief	34	7	1	94-5020	Knob	30	25	2
94-3605	Asm-Backplate/Relief	35	7	1	94-5021	Asm-Locating Plate	30	19	1
94-3606	Key	34	10	1	94-5022	Plate-Indicator	30	31	1
94-3606	Key	35	10	1	94-5023	Asm-Detent Plate	30	28	2
94-3607	Cartridge-Relief Valve	27	20	1	94-5024	Spring-Compression	30	30	2
94-3608	Body-Relief Valve	27	19	1	94-5025	Asm-Locating Plate	30	16	1
94-3609	Piston	31	8	1	94-5026	Plate-Indicator	30	27	1
94-3610	Shaft	31	6	1	94-5027	Spring-Compression	30	24	2
94-3611	Head	31	3	1	94-5028	Tire	41	1	1
94-3612	Ring-Retaining	31	1	1	94-5028	Tire	40	11	1
94-3614	Kit-Repair	31	*	1	94-5031	Cylinder-Lift	29	22	1
94-3615	Head	38	10	1	94-5032	Barrel	31	11	1
94-3616	Piston	38	4	1	94-5033	Bracket-Cyl Support	29	4	1
94-3617	Clevis-Rod	38	14	1	94-5056	Decal - Instructions	1	34	1
94-3618	Shaft	38	7	1	94-5057	Chain	29	*	2
94-3619	Kit-Repair	38	*	1	94-5069	Rod-Pivot	36	12	2
94-3620	Barrel	38	2	1	94-5069	Rod-Pivot	37	37	1
94-3622	Asm-Hood	1	1	1	94-5070	Decal-Reelmaster 2600D	2	*	2
94-3623	Kit-Seal	14	*	1	94-5073	Asm-Carrier Frame, LH	39	*	1
94-3624	Asm-Flange	14	3	1	94-5083	Valve-Flow Control	20	5	1
94-3625	Pin-Dowel	14	7	4	94-5087	Bumper	39	12	2
94-3626	Cover-End	14	8	1	94-5095	Asm-Lift Arm	36	6	2
94-3632	Asm-Skirt	2	19	1	94-5096	Asm-Carrier Frame, LH	39	6	1
94-3633	Asm-U-Bracket Support	3	61	1	94-5097	Asm-Carrier Frame, RH	39	7	1
94-3633	U-Bracket Support	11	17	1	94-5098	Asm-Carrier Frame, Rear	39	1	1
94-3634	Asm-Air Cleaner Housing	8	2	1	94-5100	Asm-Lift Arm	36	*	2
94-3635	Asm-Lift Arm, Rear	37	35	1	94-5102	Asm-Carrier Frame, RH	39	*	1
94-3638	Ring-Retaining	38	11	1	94-5103	Asm-Carrier Frame, Rear	39	*	1
94-3639	Bolt	14	9	4	94-5111	Axle-Castor	40	13	1
94-3640	Asm-Backplate	13	27	1	94-5114	Asm-Frame	7	14	1
94-3641	Asm-Housing	13	17	1	94-5119	Sponge	27	26	1
94-3642	Shaft-Drive	13	33	1	94-5129	Asm-Hydraulic Hose	32	1	1
94-3643	Camplate	13	22	1	94-5135	Spacer	16	39	8
94-3644	Seat	13	25	2	94-5438	O-Ring	30	9	2
94-3645	Key	13	32	1	94-5952	Asm-Rim	40	17	1
94-3645	Key	12	35	1	94-5969	Steering Shaft & Gear	7	22	1
94-3646	Key	13	21	1	94-5970	Spacer	40	18	1
94-3647	Asm-Charge Pump Adaptor	13	2	1	94-5980	Cable-Battery Neg.	25	60	1
94-3648	Asm-Gerotor	13	3	1	94-5980	Cable-Battery, Neg.	42	7	1
94-3649	Plate-Valve	13	7	1	94-5985	Asm-Hydraulic Hose	32	14	2
94-3650	Asm-Valve	13	5	1	94-5986	Asm-Hydraulic Hose	32	3	2
94-3651	Kit-Seal	13	*	1	94-5987	Asm-Hydraulic Hose	32	6	2
94-3652	Asm-Cover	10	3	1	98-1459	Decal-Toro	7	31	1
94-3653	Bolt	10	7	1	98-1468	Cover-Steering Wheel	7	29	1
94-3654	Spring-Compression	10	6	1	98-1471	Asm-Steering Wheel	7	1	1
94-3655	Asm-Cartridge Valve	30	14	1	98-3445	Spacer	36	29	2
94-3656	Asm-Spool	30	8	1	98-3445	Spacer	37	42	1
94-3657	Asm-Spool	30	18	1	98-3446	Plate-Reinforcement	36	30	2
94-3659	Asm-Spool	30	15	1	98-3446	Plate-Reinforcement	37	43	1
94-3661	Kit-Seal	30	17	1	98-7393	Conduit-Convolute	5	54	1
94-3662	Screw-Hex. Hd.	18	14	7	218-461	Nut-HH	2	35	2
94-3665	Asm-Guard (Europe)	9	56	1	218-535	Nut-Hex.	4	28	1
94-3675	Fork-Castor	40	7	1	218-536	Washer-Flat	4	29	1
94-3688	Sleeve-Protective	12	46	1	218-562	Lens-Light	4	31	1
94-3691	Instrument Panel	4	20	1	218-578	Fuse-10 Amp	4	4	2
94-3691	Panel-Instrument	3	62	1	218-594	Fuse-20 Amp	4	3	1
94-3692	Asm-Wire Harness	4	25	1	219-17	Bulb	4	37	4
94-3692	Harness-Wire	25	58	1	219-18	Bulb-Light	4	30	1
94-3694	Angle-Right	3	43	1	2112-11	Clamp-Muffler	25	28	1
94-3698	Weight-Rear	42	26	2	232-27	Stem-Valve	41	25	1
94-4985	Decal-Instrument Panel	4	19	1	232-27	Stem-Valve	16	41	2
94-5006	Asm-Hose	27	15	1	232-27	Valve-Stem	40	19	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
233-37	Knob	27 7 1	2412-104	Clamp-R	3 67 1
233-46	Knob	22 11 1	2412-106	Clamp-R	3 51 1
237-7	O-Ring	3 75 1	2412-108	Clamp-Hose	42 2 4
237-21	O-Ring	27 22 1	2412-108	Clamp-Hose	8 12 1
237-21	O-Ring	37 41 2	2412-108	Clamp-Hose	25 50 1
237-22	O-Ring	22 3 1	2412-133	Clamp-R	2 15 2
237-22	O-Ring	32 11 5	251-259	Bearing-Ball	15 31 1
237-22	O-Ring	27 24 6	251-321	Bearing	40 15 2
237-22	O-Ring	29 39 1	252-66	Bearing-Thrust	13 36 1
237-22	O-Ring	29 42 5	252-71	Race-Bearing	13 35 2
237-22	O-Ring	16 45 1	252-95	Bearing	13 15 2
237-30	O-Ring	32 7 13	255-13	Ball	30 23 4
237-30	O-Ring	21 11 6	256-27	Bushing	7 23 2
237-30	O-Ring	20 13 6	256-115	Washer-Thrust	36 11 2
237-30	O-Ring	19 21 6	256-115	Washer-Thrust	37 36 1
237-30	O-Ring	41 28 2	256-245	Bushing	7 9 2
237-30	O-Ring	12 40 3	256-247	Bushing-Flange	7 13 2
237-30	O-Ring	9 54 2	256-320	Bushing	1 19 2
237-30	O-Ring	3 70 1	256-321	Bushing	2 38 4
237-37	Bumper-Rubber	3 55 2	2710-16	Asm-Connecting Link	27 8 1
237-42	O-Ring	28 2 2	282-2	Clevis	16 33 2
237-42	O-Ring	20 12 2	282-4	Clevis	29 11 4
237-42	O-Ring	32 12 5	282-4	Clevis	36 25 2
237-42	O-Ring	30 21 2	283-1	Pin-Clevis	16 31 2
237-42	O-Ring	27 23 4	283-2	Pin-Clevis	12 27 1
237-42	O-Ring	29 41 3	283-6	Pin-Clevis	29 9 4
237-42	O-Ring	16 46 1	283-6	Pin-Clevis	36 26 2
237-65	O-Ring	32 24 4	283-62	Pin-Clevis	25 41 1
237-65	O-Ring	12 44 2	283-75	Pin-Clevis	37 7 2
237-65	O-Ring	16 48 4	283-75	Pin-Clevis	36 17 4
237-78	O-Ring	30 4 7	283-78	Clevis Pin	29 23 1
237-78	O-Ring	20 14 2	285-17	Plug	10 9 1
237-78	O-Ring	27 21 2	302-5	Fitting-Grease	40 6 1
237-78	O-Ring	19 22 2	302-5	Fitting-Grease	7 25 3
237-78	O-Ring	18 25 2	302-5	Fitting-Grease, Straight	41 18 1
237-78	O-Ring	37 40 2	302-5	Fitting-Lube	39 3 2
237-78	O-Ring	33 49 1	302-11	Fitting Lube 45°	36 7 2
237-79	O-Ring	30 5 1	302-55	Fitting-Grease	40 16 1
237-79	O-Ring	32 9 7	302-58	Fitting-Grease	38 1 1
237-79	O-Ring	21 12 3	302-60	Fitting-Lube	7 16 1
237-79	O-Ring	29 40 1	302-60	Fitting-Lube	37 18 1
237-79	O-Ring	12 43 4	302-60	Fitting-Lube 90°	39 4 1
237-80	O-Ring	32 16 6	321-3	Screw-HH	3 64 1
237-80	O-Ring	41 29 2	321-5	Screw-HH	16 16 8
237-80	O-Ring	12 41 1	321-6	Screw-HH	15 14 2
237-80	O-Ring	16 47 4	321-8	Screw-HH	2 31 2
237-81	O-Ring	11 26 4	321-11	Screw-HH	2 8 2
237-81	O-Ring	12 42 3	321-13	Screw-Hex. Hd.	12 32 3
237-156	O-Ring	30 12 2	321-23	Screw-HH	27 4 2
240-11	Grommet	11 10 3	321-43	Screw-HH	29 18 1
240-11	Grommet	42 14 3	322-3	Screw-HH	1 31 4
242-50	Nut-Lug	16 22 8	322-3	Screw-Hex. Hd.	13 1 2
242-50	Nut-Lug	41 24 4	322-4	Screw-HH	36 10 2
2410-18	Plug	43 2 1	322-4	Screw-HH	37 30 1
2411-52	Bearing-Rod End RH	15 21 1	322-5	Screw-HH	25 55 1
2411-53	Bearing-Rod End LH	15 23 1	322-6	Screw-HH	39 11 2
2412-34	Clamp-Hose	11 14 4	322-6	Screw-Hex. Hd.	15 46 1
2412-34	Clamp-Hose	12 25 2	322-9	Screw-HH	41 14 1
2412-34	Clamp-Hose	8 29 2	322-9	Screw-HH	15 22 4
2412-34	Clamp-Hose	25 32 2	322-9	Screw-Hex. Flange Hd.	3 66 1
2412-36	Clamp-Hose	11 3 2	322-10	Screw-HH	20 15 1
2412-36	Clamp-Hose	42 9 2	322-10	Screw-Hex. Hd.	32 19 2
2412-36	Clamp-Hose	12 15 1	322-12	Screw HH	42 19 1
2412-36	Clamp-Hose	8 40 2	322-12	Screw HH	7 19 1
2412-36	Clamp-Hose	33 46 1	322-17	Screw-HH	16 4 1
2412-39	Clamp-R	2 16 3	322-17	Screw-HH	15 12 1
2412-39	Clamp-R	4 24 1	322-20	Screw-Hex. Hd.	13 29 2
2412-41	Clamp-R	8 41 1	322-23	Screw-Hex. Hd.	3 60 1
2412-92	Clamp-Hose	8 45 3	322-26	Screw-HH	37 32 1
2412-96	Clamp-R	25 12 1	323-4	Screw-HH	37 44 1
2412-104	Clamp-R	20 16 1	323-5	Screw-HH	11 12 3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
323-5	Screw-HH	15	40	1	3234-32	Screw-HH	37	39	1
323-5	Screw-Hex. Hd.	42	16	3	3234-33	Screw-HH	11	18	2
323-6	Screw-HH	8	22	4	3245-36	Screw-Set	30	29	2
323-7	Screw-HH	39	15	2	3245-36	Screw-Set	12	34	1
323-7	Screw-HH	36	28	2	3249-3	Screw-PRH	29	8	2
323-7	Screw-HH	15	37	2	3249-3	Screw-Round Hd	15	1	2
323-7	Screw-HH	12	39	2	3250-13	Screw-Pan Hd	4	10	2
323-9	Screw-HH	36	3	2	3253-2	Washer-Lock	5	46	5
323-9	Screw-HH	12	6	2	3253-3	Washer-Lock	12	33	3
323-9	Screw-HH	37	11	1	3253-4	Washer-Lock	25	30	4
323-10	Screw-Hex. Hd.	42	24	2	3253-4	Washer-Spring Lock	36	9	2
323-12	Screw-Hex. Hd.	42	*	3	3253-4	Washer-Spring Lock	1	22	6
323-14	Screw-Hex. Hd.	42	*	3	3253-4	Washer-Spring Lock	37	31	1
323-18	Screw-Hex. Hd.	36	23	2	3253-4	Washer-Spring Lock	37	33	1
325-6	Screw-HH	41	17	1	3253-4	Washer-Spring Lock	15	35	3
325-6	Screw-Hex. Hd.	40	5	1	3253-5	Washer-Lock	22	12	1
325-36	Screw-HH	12	26	1	3253-6	Washer-Lock	25	2	1
3210-7	Screw-HH	15	32	2	3254-1	Washer-Lock	5	40	1
3212-5	Screw-HH	25	1	1	3254-9	Washer-Lock Int Tooth	15	8	2
3217-6	Nut-Hex.	1	21	2	3254-9	Washer-Lock Int. Tooth	29	7	2
3217-6	Nut-Hex.	25	29	2	3255-2	Washer-Lock ETLW	40	3	1
3217-6	Nut-Hex.	15	47	1	3255-2	Washer-Lock Ext Tooth	41	15	1
3217-26	Nut	4	39	1	3255-8	Washer-Lock	25	17	2
3217-27	Nut-Hex.	5	48	2	3255-17	Washer-Lock	25	51	1
3217-29	Nut-HH	15	7	2	3255-17	Washer-Lock Ext. Tooth	29	29	2
3217-29	Nut-Hex.	5	45	6	3256-2	Washer-Flat (Europe)	4	33	5
3218-1	Nut-Jam	30	26	4	3256-3	Washer-Flat	39	9	4
3218-19	Nut-Hex.	5	42	2	3256-3	Washer-Flat	32	28	4
3219-14	Nut-Hex.	43	3	1	3256-4	Washer-Flat (Europe)	4	34	1
3220-2	Nut-Hex Jam	15	10	2	3256-6	Washer-Flat	36	13	2
3220-2	Nut-Hex Jam	16	34	2	3256-6	Washer-Flat	37	38	1
3220-3	Nut-HJ	7	18	2	3256-14	Washer-Flat	29	30	2
3220-3	Nut-Hex. Jam	41	11	2	3256-16	Washer-Flat	16	14	8
3220-3	Nut-Jam	40	12	2	3256-22	Washer-Flat	27	3	2
3220-5	Nut-Hex Jam	7	3	1	3256-22	Washer-Flat	8	7	2
3220-6	Nut-Hex.	38	13	1	3256-22	Washer-Flat	2	30	3
3220-12	Nut-Hex. Jam	41	12	1	3256-23	Washer-Flat	16	3	1
3220-12	Nut-Jam	40	1	1	3256-23	Washer-Flat	8	5	2
3220-20	Nut-Jam	15	24	1	3256-23	Washer-Flat	25	11	13
3229-1	Bolt-Carriage	1	6	2	3256-23	Washer-Flat	1	23	6
3229-22	Screw-Carriage	2	10	2	3256-23	Washer-Flat	15	33	3
3230-1	Bolt-Carriage	42	17	3	3256-23	Washer-Flat	3	59	1
3230-1	Bolt-Carriage	3	44	1	3256-24	Washer-Flat	39	14	2
3230-2	Bolt-Carriage	2	18	2	3256-24	Washer-Flat	36	21	6
3230-2	Screw-Carriage	15	6	2	3256-24	Washer-Flat	42	25	2
3230-7	Bolt-Carriage	42	*	2	3256-24	Washer-Flat	15	28	2
3230-9	Bolt-Carriage	42	*	2	3256-26	Washer-Flat	27	27	2
3230-23	Screw-Carriage	11	13	6	3256-26	Washer-Flat	7	27	1
3230-23	Screw-Carriage	1	18	2	3256-26	Washer-Flat	37	28	2
3230-27	Screw-Carriage	1	4	1	3256-27	Washer-Flat	7	11	2
3231-22	Bolt-Carriage	8	32	2	3256-28	Washer-Flat	40	9	1
3234-4	Screw-HH	4	6	3	3256-53	Washer-Flat	15	2	2
3234-4	Screw-HH	8	8	4	3256-57	Washer-Flat	37	34	1
3234-4	Screw-HH	2	13	3	3257-42	Key-Woodruff	17	17	1
3234-4	Screw-HH (Europe)	9	58	2	3257-42	Key-Woodruff	18	17	1
3234-5	Screw-Flange	2	1	18	3257-42	Key-Woodruff	41	23	1
3234-5	Screw-Flange	1	8	10	3272-4	Pin-Cotter	29	15	1
3234-5	Screw-Flange	16	8	2	3272-6	Pin-Cotter	16	27	3
3234-5	Screw-Flange	8	25	4	3272-6	Pin-Cotter	12	28	1
3234-5	Screw-Flange	29	26	3	3272-10	Pin-Cotter	37	9	2
3234-5	Screw-Hex. Flange Hd.	3	*	1	3272-10	Pin-Cotter	36	18	4
3234-5	Screw-Hex. Hd.	33	41	2	3272-10	Pin-Cotter	25	42	1
3234-11	Screw-Flange	2	32	4	3272-10	Pin-Cotter	16	49	2
3234-17	Screw-Hex. Head	1	33	4	3272-11	Pin-Cotter	37	5	1
3234-17	Screw-HH	8	6	4	3272-11	Pin-Cotter	29	10	5
3234-18	Screw-Hex. Flange Hd.	42	23	2	3272-11	Pin-Cotter	36	27	2
3234-24	Screw-HH	25	56	7	3274-90	Screw-Hex Socket	4	11	2
3234-25	Bolt-Flange	29	1	6	3274-93	Screw-HSH	41	10	4
3234-28	Screw-HH	21	1	2	3274-99	Screw-Socket Hd.	16	24	8
3234-28	Screw-HH	8	18	8	3290-55	Rivet-Pop	7	7	2
3234-32	Screw-HH	36	14	2	3290-378	Tie-Cable	32	2	18

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3290-379	Tie-Cable	41 22 1	32144-14	Screw-HH	37 13 1
3290-379	Tie-Cable	2 37 1	32144-18	Screw-HWH	4 8 2
3290-379	Tie-Cable	12 45 2	32144-109	Screw-HH	36 2 2
3290-412	Rivet-Pop	25 8 2	32144-109	Screw-HH	37 12 1
3290-432	Screw-HH	25 57 1	32148-6	Insert-Threaded (Europe)	9 57 2
3290-467	Pin-Cotter, Hair	1 14 1	32148-7	Nut-Clinch	2 3 6
3296-2	Nut-Lock	4 5 2	32148-8	Nut-Clinch	8 20 3
3296-4	Nut-Lock	39 8 2	32148-8	Nut-Clinch	1 26 4
3296-6	Nut-Lock	12 30 1	32148-8	Nut-Clinch	2 33 1
3296-16	Nut-Lock	15 5 2	32148-14	Nut-Insert	25 47 1
3296-16	Nut-Lock	27 16 2	32149-9	Nut-Flange	4 18 2
3296-22	Nut-Lock	39 13 2	32151-13	Ring-Retaining	13 39 1
3296-23	Nut-Hex Lock	16 1 8	32151-29	Ring-Retaining	13 34 2
3296-23	Nut-Hex Lock	41 7 4	32152-10	Nut-Lock	38 3 1
3296-23	Nut-Hex. Lock	12 4 1	32152-10	Nut-Lock	31 10 1
3296-25	Nut-Lock	7 28 1	33004-00	Nut-HF	25 7 4
3296-29	Nut-Hex Lock	15 41 3	33004-00	Nut-Hex.	26 63 1
3296-29	Nut-Hex. Lock	8 15 2	340-2	Adaptor	29 31 1
3296-29	Nut-Hex. Lock	41 19 1	340-2	Fitting-Hydraulic Straight	32 10 4
3296-29	Nut-Hex. Lock	7 20 1	340-4	Adaptor	29 33 1
3296-29	Nut-Lock	20 18 1	340-4	Fitting-Hydraulic Straight	32 8 4
3296-29	Nut-Lock	33 45 2	340-4	Fitting-ORS	21 7 1
3296-29	Nut-Lock	3 68 1	340-4	Fitting-ORS	12 13 1
3296-33	Nut-Lock Nylon	7 12 2	340-5	Fitting-ORS	20 3 2
3296-39	Nut-Hex Lock	27 5 1	340-6	Fitting-Hydraulic Straight	32 15 3
3296-39	Nut-Hex Lock	36 5 4	340-6	Fitting-ORS	41 3 2
3296-39	Nut-Hex Lock	15 36 2	340-17	Elbow ORS	16 11 4
3296-39	Nut-Hex. Lock	12 10 2	340-70	Nut-Bulkhead	32 31 1
3296-39	Nut-Hex. Lock	37 17 1	340-74	Nut-Bulkhead	32 32 2
3296-42	Nut-Hex Lock	16 13 8	340-77	Fitting - Hyd. LH	16 10 1
3296-42	Nut-Hex Lock	3 56 2	340-77	Fitting-Hyd 90°	27 10 1
3296-42	Nut-Hex. Lock	8 17 2	340-77	Fitting-Hydraulic 90°	32 35 1
3296-50	Nut-Lock	40 8 1	340-86	Fitting-Hyd, Tee	27 2 2
3296-59	Nut-Lock	15 27 1	340-86	Tee	29 21 2
3298-8	Screw-Set	5 43 1	340-88	Fitting-Hydraulic	27 25 1
32104-82	Screw-HWH	1 15 5	340-92	Fitting-Straight	27 13 1
32104-116	Screw-HFH	8 47 6	340-92	Fitting-Straight	37 22 1
32105-1	Screw-HH	29 28 2	340-98	Fitting	21 5 1
32121-6	Pin-Roll	15 19 1	340-98	Fitting	12 21 1
32121-6	Pin-Roll	2 22 1	340-103	Fitting	37 21 1
32121-6	Pin-Roll	16 30 2	340-105	Elbow	12 17 1
32121-38	Pin-Spring	22 15 1	340-105	Fitting-Hydraulic 90°	32 18 3
32122-2	Screw-Round Hd.	43 2 1	340-109	Fitting-Hydraulic Tee	32 22 1
32122-35	Screw-Machine (Europe)	4 36 1	340-109	Fitting-Tee	21 6 1
32128-19	Nut-Flange	25 39 7	340-127	Nut-Bulkhead ORS	8 33 2
32128-20	Nut-Lock Flange Whiz	16 2 2	340-139	Elbow-90°	12 12 2
32128-20	Nut-Lock, Flange, Whiz	1 3 2	340-152	Cap-Hydraulic	19 17 2
32128-33	Nut-Lock Flange	1 10 2	340-153	Fitting-Hydraulic 90°	32 23 1
32128-33	Nut-Lock Flange	4 22 3	340-155	Fitting-Hydraulic Straight	32 25 1
32128-33	Nut-Lock Flange	2 28 6	353-949	O-Ring	12 20 1
32128-33	Nut-Lock Flange	8 48 2	353-987	Fitting-90°	12 16 1
32128-43	Nut-Whiz	29 3 5	353-987	Fitting-90°	11 22 1
32128-43	Nut-Whiz Flange	2 29 4	353-988	Asm-Plug	30 6 1
32128-43	Nut-Whiz Flange	8 31 6	353-989	Asm-Plug	30 20 2
32128-44	Nut-Flange	42 3 3	353-990	Asm-Plug	30 3 7
32128-44	Nut-Flange	11 5 6	353-991	Asm-Plug	30 13 2
32128-44	Nut-Flange	16 5 2	354-23	Ball	22 5 1
32128-44	Nut-Flange	8 16 6	354-77	Fitting-Quick Connect	20 8 2
32128-44	Nut-Flange	2 17 11	354-77	Fitting-Quick Connect	19 15 2
32128-44	Nut-Flange (Europe)	4 32 1	354-77	Fitting-Quick Connect	33 48 1
32128-44	Nut-Flange Lock	15 44 3	354-79	Cap-Fitting Yellow	20 7 2
32128-44	Nut-Flange, Lrg	1 12 12	354-79	Cap-Fitting Yellow	19 14 2
32128-44	Nut-Lock	32 29 2	354-79	Cap-Fitting Yellow	33 47 1
32128-48	Nut-Lock	32 38 3	354-127	Fitting-45°	11 16 1

*Not Illustrated

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 2300D/2600D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 2300D/2600D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 2300D/2600D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hood & Grille Assembly	1	Front Reel Motor Assembly No. 93-6972	34
Skirt Assembly	2-3	Rear Reel Motor Assembly No. 93-6975	35
Instrument Panel Assembly	4-5	Front Cutting Unit Lift Arm Assembly	36
Electrical Schematic	6	Rear Cutting Unit Lift Arm Assembly	37
Frame Assembly	7	Rear Hydraulic Cylinder Assembly No. 93-6869 .	38
Radiator Assembly	8-9	Cutting Unit Carrier Frames	39
Air Cleaner & Clamp Assembly	10	Rear Wheel Assembly (Model No. 03422)	40
Hydraulic Reservoir & Filter Assembly	11	Rear Wheel Assembly (Model No. 03427)	41
Hydraulic Pump Installation Assembly	12	Fuel System Assembly	42
Hydraulic Pump Assembly No. 93-6751	13	Special Tools	43
Hydraulic Pump Assembly No. 93-6974	14	Cylinder Block Assembly	44
Traction Control Assembly	15	Crankshaft Assembly	45
Front Wheel Assembly	16	Cylinder Head Assembly	46
Rear Hydraulic Drive Motor No. 75-9990		Rocker Arm Assembly	47
(Model No. 03427)	17	Camshaft Assembly	48
Front Hydraulic Drive Motor No. 93-6888	18	Timing Cover Assembly	49
Drive Motor Plumbing Assembly		Oil Pump Assembly	50
(Model No. 03422)	19	Fuel Injection System Assembly	51
Drive Motor Plumbing Assembly		Injection Pump Assembly	52
(Model No. 03427)	20	Flywheel Assembly	53
Rear Wheel Drive Valve Assembly		Starter Assembly	54
(Model No. 03427)	21	Oil Sump Assembly	55
Two Position Valve Assembly No. 92-3196		Valve Cover Assembly	56
(Model No. 03427)	22	Oil Filter & Exhaust Manifold Assemblies	57
Hydraulic Schematic (Model No. 03422)	23	Water Pump Assembly	58
Hydraulic Schematic (Model No. 03427)	24	Alternator Assembly	59
Engine Installation Assembly	25-26	Timing Cover Plate Assembly	60
Cutting Unit Lift Valve Installation Assembly	27	Low Pressure Fuel System & Throttle Stop	
Control Valve No. 43-1950	28	Assemblies	61
Front Cutting Unit Lift Assembly	29	Fuel Filter & Lift Pump Assemblies	62
Hydraulic Manifold Assembly No. 93-6718	30	Engine Lifting Tab & Cold Start Assemblies	63
Front Hydraulic Cylinder Assembly No. 94-5031 .	31	Gasket & Seals	64
Cutting Unit Hydraulic Plumbing Assembly ..	32-33	TORO Part Number Index	65-71

Japanese parts kit number 94-5975 contains all of the individual parts on the preceding pages designated as (Japan).