 


TORO®

MODEL NO. 03800-70001 & UP
MODEL NO. 03800TE-70101 & UP
MODEL NO. 03801-70001 & UP
MODEL NO. 03801TE-70101 & UP

PARTS CATALOG


REELMASTER® 6500D — 2WD/4WD TRACTION UNIT

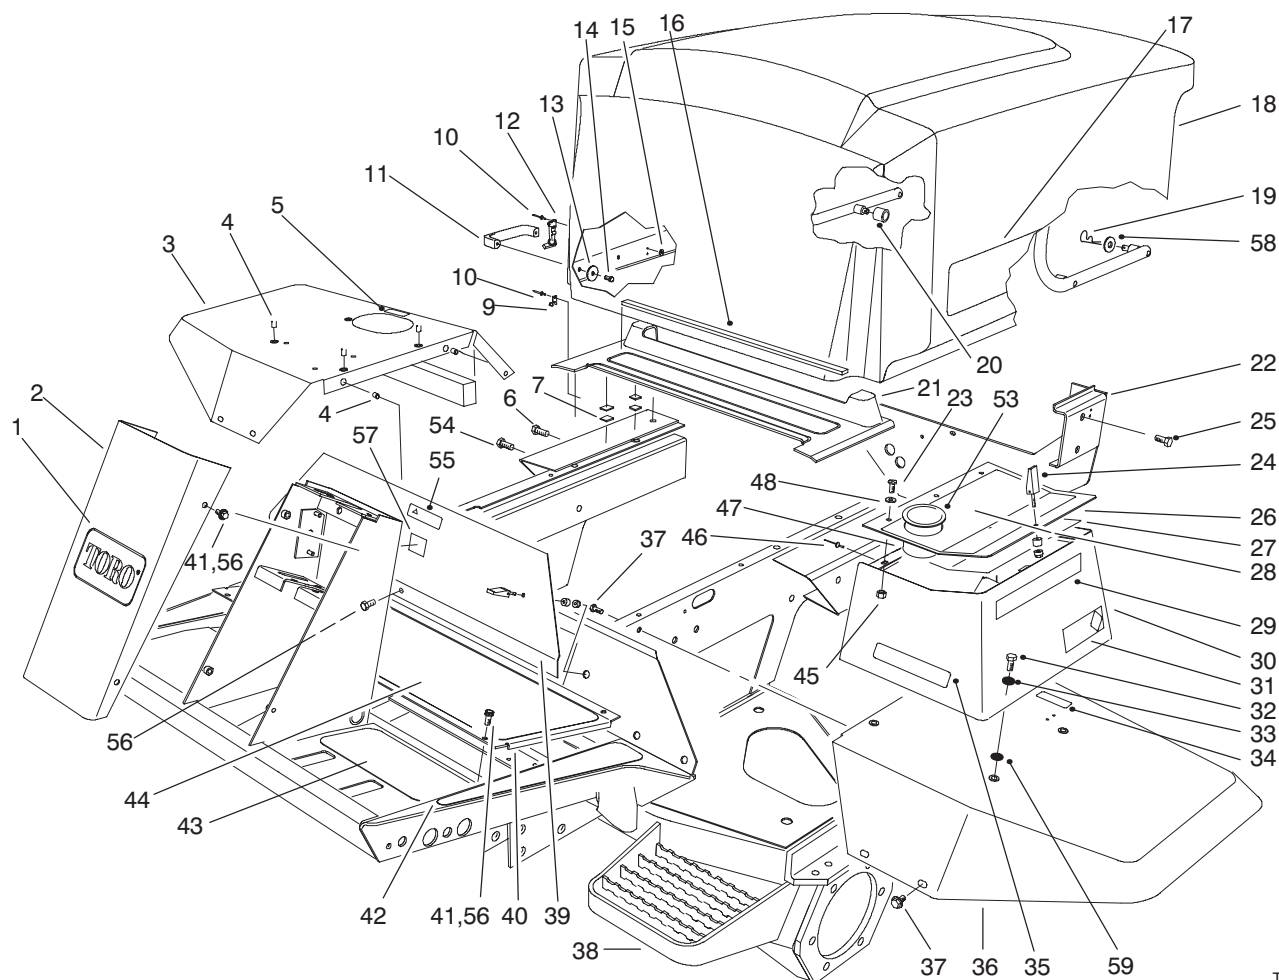

T-2366-3

FRAME & BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-5550	Decal-Toro	1	16	92-7633	Strip-Bumper, Hood	1
2	93-7996	Cover-Tower	1	17	92-7532	Decal-RM6500D	2
3	93-7579	Fender-RH	1	18	92-7511	Hood	1
4	32148-7	Nut-Clinch	5	19	3290-467	Pin-Cotter, Hair	2
5	85-4730	Decal-Hydraulic Oil Only	1	20	93-7582	Hose	1
5	93-6686	Decal-Hydraulic Oil (Europe)	1	21	94-2617	Cover-Pump	1
5	88-1980	Decal-Hydraulic Oil (Japan)	1	22	94-8131	Frame-Rear (Incl. Ref. #1, Page 51)	1
6	33106-035	Screw-HHF	8	23	3258-166	Screw	3
7	93-9155	Velcro	2	24	74-5950	Latch-Swell	3
9	249-40	Keeper	1	25	33108-035	Screw	6
10	3269-13	Rivet-Pop	4	26	93-9180	Cover-Box, Tool	1
11	65-5100	Handle-Hood	1	27	93-9165	Decal-Instr. Service, 2WD	1
12	59-9740	Latch-Draw	1	27	94-2935	Decal-Service (Danish)	1
13	3256-78	Washer-Flat	2	27	94-2936	Decal-Service (Dutch)	1
14	46-8091	Screw-Tapping	2	27	94-2937	Decal-Service (Finnish)	1
15	3269-10	Washer-Flat	2	27	94-2938	Decal-Service (French)	1
				27	94-2939	Decal-Service (German)	1

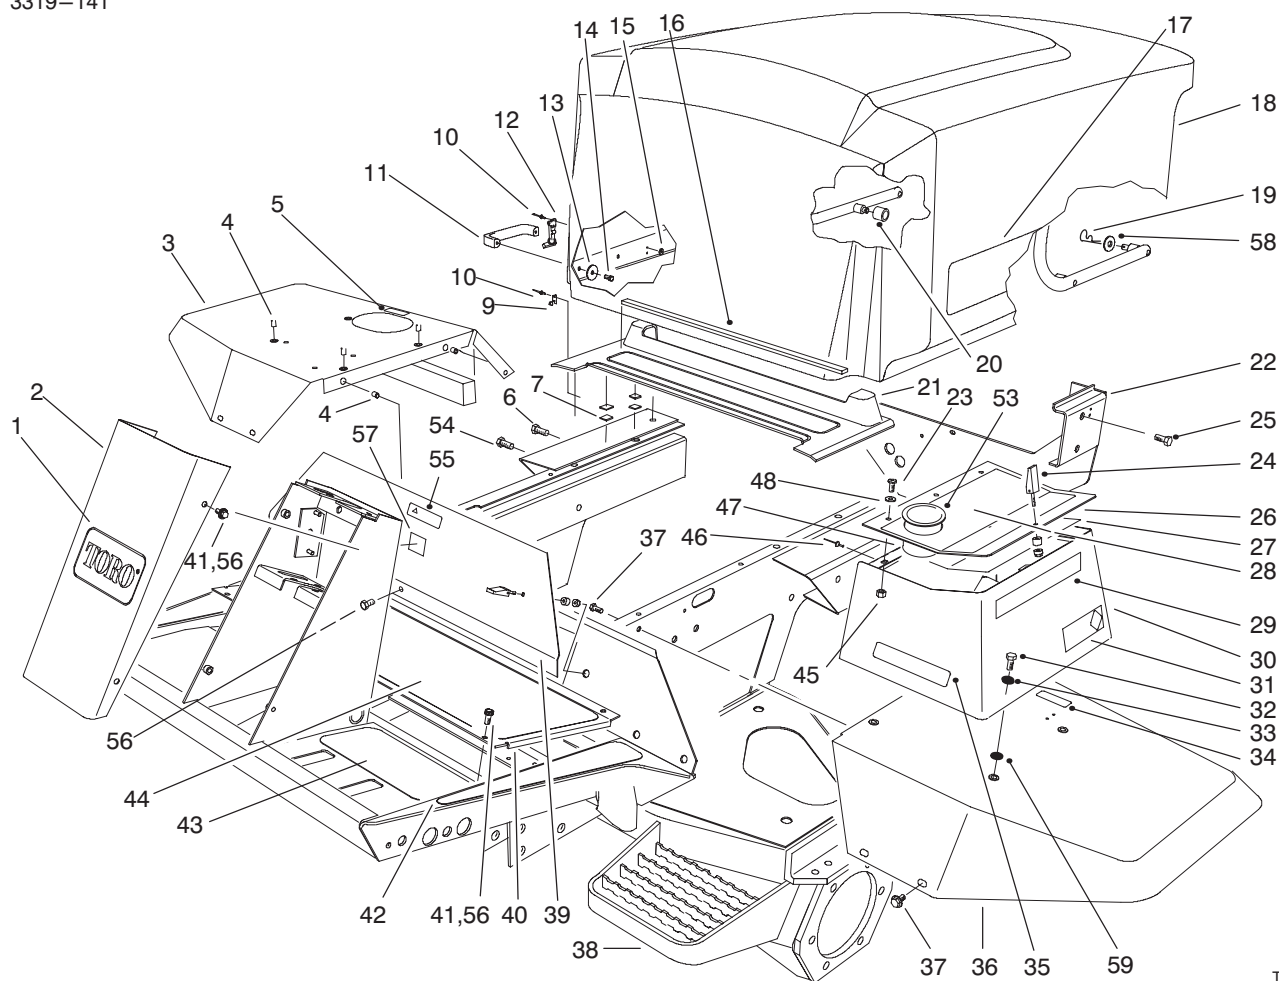 


T-2366-3

FRAME & BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
27	94-2940	Decal-Service (Italian)	1
27	94-2942	Decal-Service (Norwegian)	1
27	94-2943	Decal-Service (Portuguese)	1
27	94-2944	Decal-Service (Spanish)	1
27	94-2945	Decal-Service (Swedish)	1
27	94-2941	Decal-Service (Japan)	1
27	93-9166	Decal-Instr. Service, 4WD	1
27	94-2924	Decal-Service (Danish)	1
27	94-2925	Decal-Service (Dutch)	1
27	94-2926	Decal-Service (Finnish)	1
27	94-2927	Decal-Service (French)	1
27	94-2928	Decal-Service (German)	1
27	94-2929	Decal-Service (Italian)	1
27	94-2931	Decal-Service (Norwegian)	1
27	94-2932	Decal-Service (Portuguese)	1
27	94-2933	Decal-Service (Spanish)	1
27	94-2934	Decal-Service (Swedish)	1
27	94-2930	Decal-Service (Japan)	1
28	93-9177	Decal-Warning, Hillside	1
28	93-1262	Decal-Hillside (Europe)	1
28	94-4572	Decal-Hillside (Japan)	1
29	72-3560	Decal-4WD (Model 03801)	1
30	75-5810	Box-Tool	1
31	93-0096	Decal-ACE	2
32	322-3	Screw-Hex. Hd.	4
33	3256-3	Washer-Flat	4
34	52-1320	Decal-Fuel, Diesel	1
34	93-6680	Decal-Fuel, Diesel (Europe)	1
34	84-2860	Decal-Fuel, Diesel (Japan)	1

Ref. No.	Part No.	Description	No. Used
35	75-5190	Decal-No Riders	1
35	93-6689	Decal-No Riders (Europe)	1
35	84-3420	Decal-No Riders (Japan)	1
36	75-3860	Fender-LH	1
37	3234-14	Screw-Flange	10
38	94-9953	Frame-Front (Incl. Ref. #42, 43 & on Page 67, #21)	1
39	75-1390	Cover-Access, Front	1
40	75-1410	Plate-Access, Floor	1
41	75-6840	Knob-Knurled	8
42	93-7592	Tread-Footrest	2
43	75-0620	Tread-Foot, LH	1
*	75-0610	Tread-Foot, RH	1
44	75-0630	Tread-Foot, Center	1
45	32128-33	Nut-Flange	3
46	93-8744	Rivet-Pop	3
47	75-5780	Hinge-Cover	1
48	3256-1	Washer-Flat	3
53	94-1410	Holder-Can, Beverage	1
54	33105-035	Screw-Flange	2
55	93-9426	Decal-Danger	1
55	93-9425	Decal-Danger (Europe)	1
55	94-4579	Decal-Danger (Japan)	1
56	3234-7	Screw-(Europe)	3
57	93-7252	Decal-(Europe)	1
58	66-6480	Washer	2
59	66-2920	Washer	4

 
*Not Illustrated

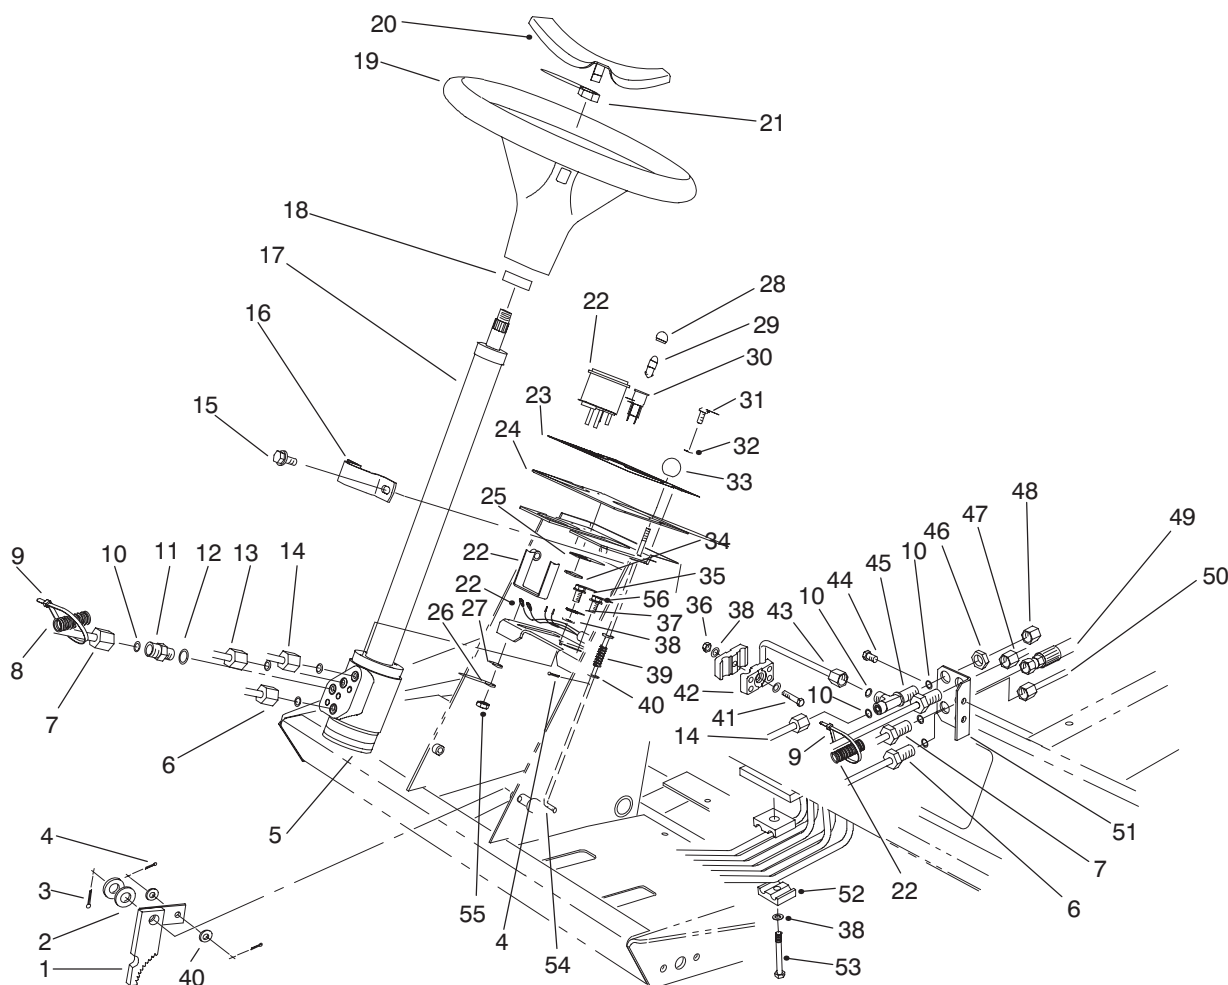

T-2447-1

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	63-7900	Rack	1	23	94-4573	Decal-Tower (Japan)	1
2	3256-26	Washer-Flat	2	24	93-7998	Plate-Instrument	1
3	3272-10	Pin-Cotter	1	25	218-536	Washer-Lock, Int. Tooth	1
4	3272-5	Pin-Cotter	3	26	3219-14	Washer-Lock	3
5	94-9950	Asm-Valve, Steering	1	27	3256-14	Washer-Flat	2
6	94-3059	Tube-Steering, RH	1	28	218-533	Lens-Red	1
7	94-3061	Tube-Steering, Front, In	1	29	93-7480	Bulb-LED	1
8	94-3090	Harness-Wire, Main	1	30	44-2210	Asm-Light, Warning (Incl. Ref. #25, 28, 29, & 34)	1
9	3290-378	Tie-Cable	7	31	87-6620	Screw-Torx Pan Hd.	2
10	237-22	O-Ring	10	32	3256-1	Washer-Flat	2
11	340-2	Adapter (Incl. Ref. #10 & 12)	4	33	233-17	Knob	1
12	237-42	O-Ring	4	34	218-535	Nut-Lock	1
13	94-3060	Tube-Steering, Front LH	1	35	33103-025	Screw-HHF	1
14	94-3062	Tube-Steering, Front, Out	1	36	3296-47	Nut-Lock	1
15	3234-7	Screw	2	37	3255-8	Washer-Lock	1
16	75-2810	Bracket-Column, Steering	1	38	3256-23	Washer-Flat	6
17	94-9951	Asm-Column, Steering	1	39	95-1821	Spring-Brake, Park	1
18	21-9260	Cover-Dust	1	40	3256-22	Washer-Flat	4
19	94-3500	Wheel-Steering (Incl. Ref. #20)	1	41	322-7	Screw-HH	1
20	88-3870	Cover	1	42	56-7972	Clamp	2
21	94-9952	Nut-Jam	1	43	94-1447	Tube-Steering, Return	1
22	93-4213	Asm-Speedometer (Incl. Ref. #26, 27 & 53))	1	44	32144-11	Screw-Thread Forming	2
23	93-7554	Decal-Tower	1	45	340-68	Fitting-Tee, Bulkhead (Incl. Ref. #10)	1
23	93-1263	Decal-Tower (Europe)	1	46	340-70	Nut-Lock, Bulkhead	4
				47	92-7495	Asm-Tube, Steering Rear	1

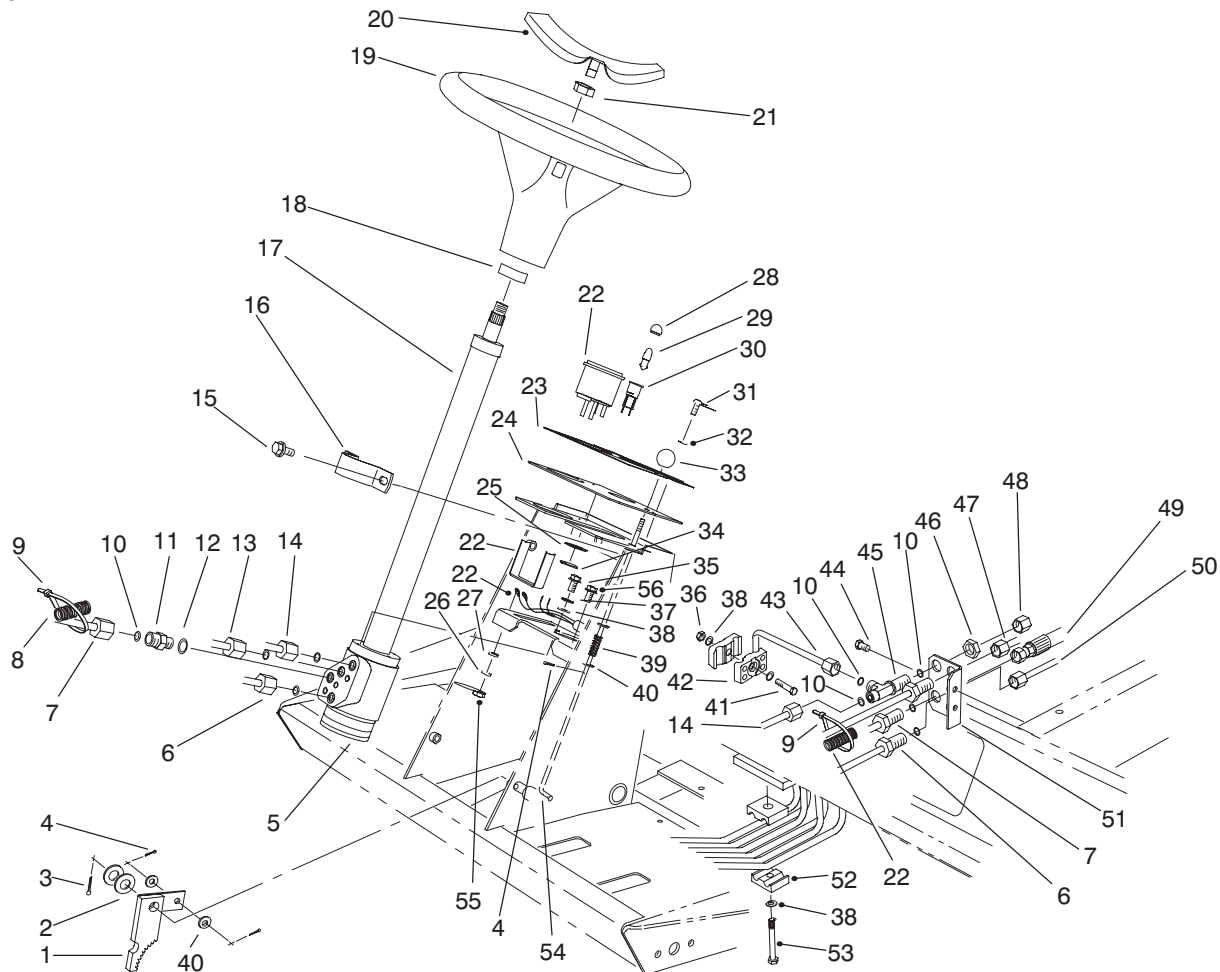 


T-2447-1

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
48	340-117	Cap-Fitting	1
49	92-7622	Hose-Steering	1
50	92-7494	Asm-Tube Steering Rear	1
51	92-7606	Bracket-Bulkhead	1
52	56-7973	Clamp	6

Ref. No.	Part No.	Description	No. Used
53	322-6	Screw-Hex. Hd.	3
54	75-1490	Rod-Brake, Park	1
55	3253-2	Nut-Hex.	9
56	33103-020	Screw-HHF	2

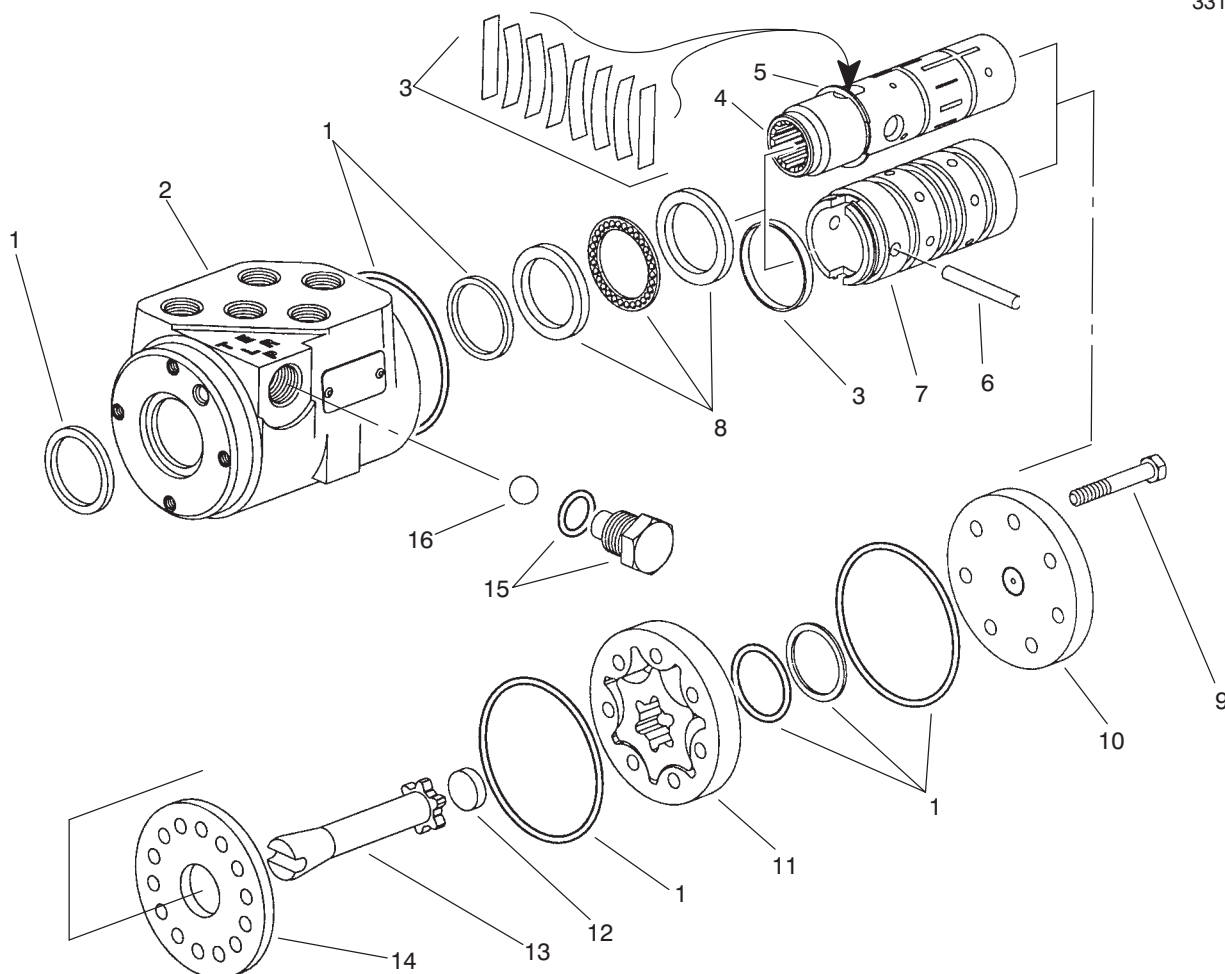 


T-2312-1

STEERING VALVE ASSEMBLY NO. 94-9950

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-4099	Kit-Seal	1	9	94-4088	Screw	7
†2		Housing	1	10	94-4089	Cap-End	1
3	94-4095	Kit-Spring, Centering	1	11	94-4090	Gerotor	1
†4		Spool	1	12	94-4091	Spacer	1
5	94-4098	Ring-Retaining	1	13	94-4093	Drive	1
6	94-4094	Pin	1	14	94-4092	Plate-Wear	1
†7		Sleeve	1	15	94-4097	Asm-Plug	1
8	94-4096	Kit-Bearing	1	16	94-4100	Ball	1

 † Not Serviced Separately.

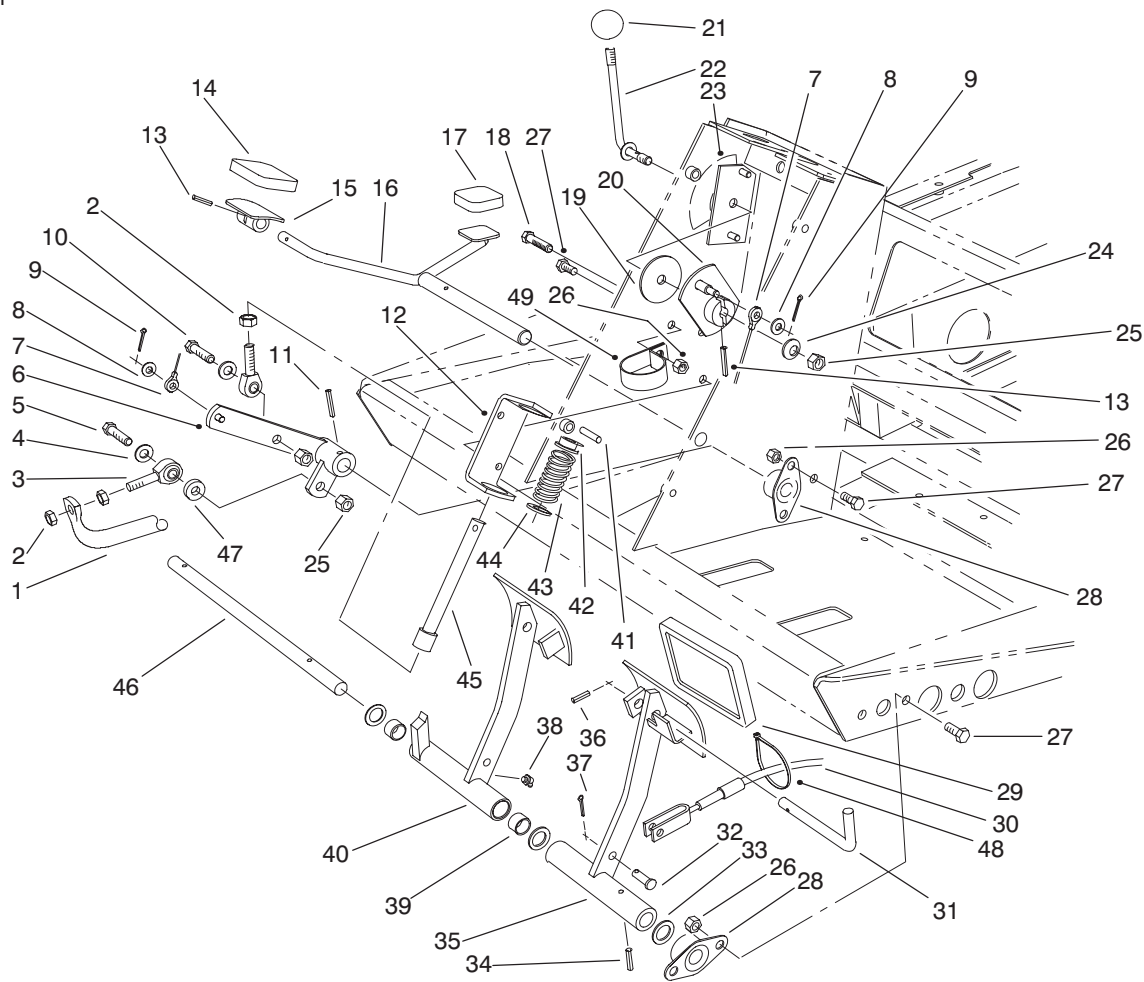


T-2063-2

TRACTION & BRAKE PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-7531	Tube—Control, Pump	1
2	3220-3	Nut—Jam	3
3	2411-36	Bearing—Rod End	2
4	3256-24	Washer—Flat	2
5	323-9	Screw—Hex. Hd.	1
6	75-3270	Hub—Pivot, Traction	1
7	75-6580	Cable—Pedal	1
8	3256-22	Washer—Flat	2
9	3272-2	Pin—Cotter	2
10	323-7	Screw—Hex. Hd.	1
11	32121-6	Pin—Roll	1
12	92-7608	Bracket—Spring	1
13	32121-45	Pin—Roll	2
14	74-9100	Pad—Pedal, Forward	1
15	49-6440	Pedal—Accelerator	1
16	75-2970	Pedal—Traction	1
17	74-9110	Pad—Pedal, Reverse	1
18	32144-14	Screw—Hex. Hd.	2
19	75-6550	Disc—Friction	1
20	75-6510	Bracket—Lever	1
21	233-42	Knob	1
22	75-6490	Lever	1
23	75-6710	Decal—Fast/Slow	1
23	93-6699	Decal—Fast/Slow (Europe)	1
23	84-3500	Decal—Fast/Slow (Japan)	1
24	3290-461	Washer—Belleville	1
25	3296-39	Nut—Lock	3

Ref. No.	Part No.	Description	No. Used
26	32128-20	Nut—Lock	9
27	322-3	Screw—Hex. Hd.	9
28	256-236	Bearing—Flange	4
29	93-8742	Pad—Brake	2
30	92-7530	Asm—Cable, Brake LH	1
*	92-7529	Asm—Cable, Brake RH	1
31	63-7880	Pin—Latch, Brake	1
32	283-58	Pin—Clevis	2
33	3256-69	Washer—Flat	3
34	32121-16	Pin—Roll	1
35	75-1440	Pedal—Brake, LH	1
36	32121-50	Pin—Roll	1
37	3272-10	Pin—Cotter	2
38	302-60	Fitting—Grease	1
39	256-42	Bushing	2
40	75-1430	Pedal—Brake, RH (Incl. Ref. #38 & 39)	1
41	32121-11	Pin—Roll	1
42	92-7610	Retainer—Spring	1
43	60-5700	Spring—Compression	1
44	3256-5	Washer—Flat	1
45	92-7609	Shaft—Spring	1
46	75-1470	Pin—Pivot, Brake	1
47	5-0652	Spacer	1
48	3290-378	Tie—Cable	1
49	2412-96	Clamp—R	1

 
*Not Illustrated

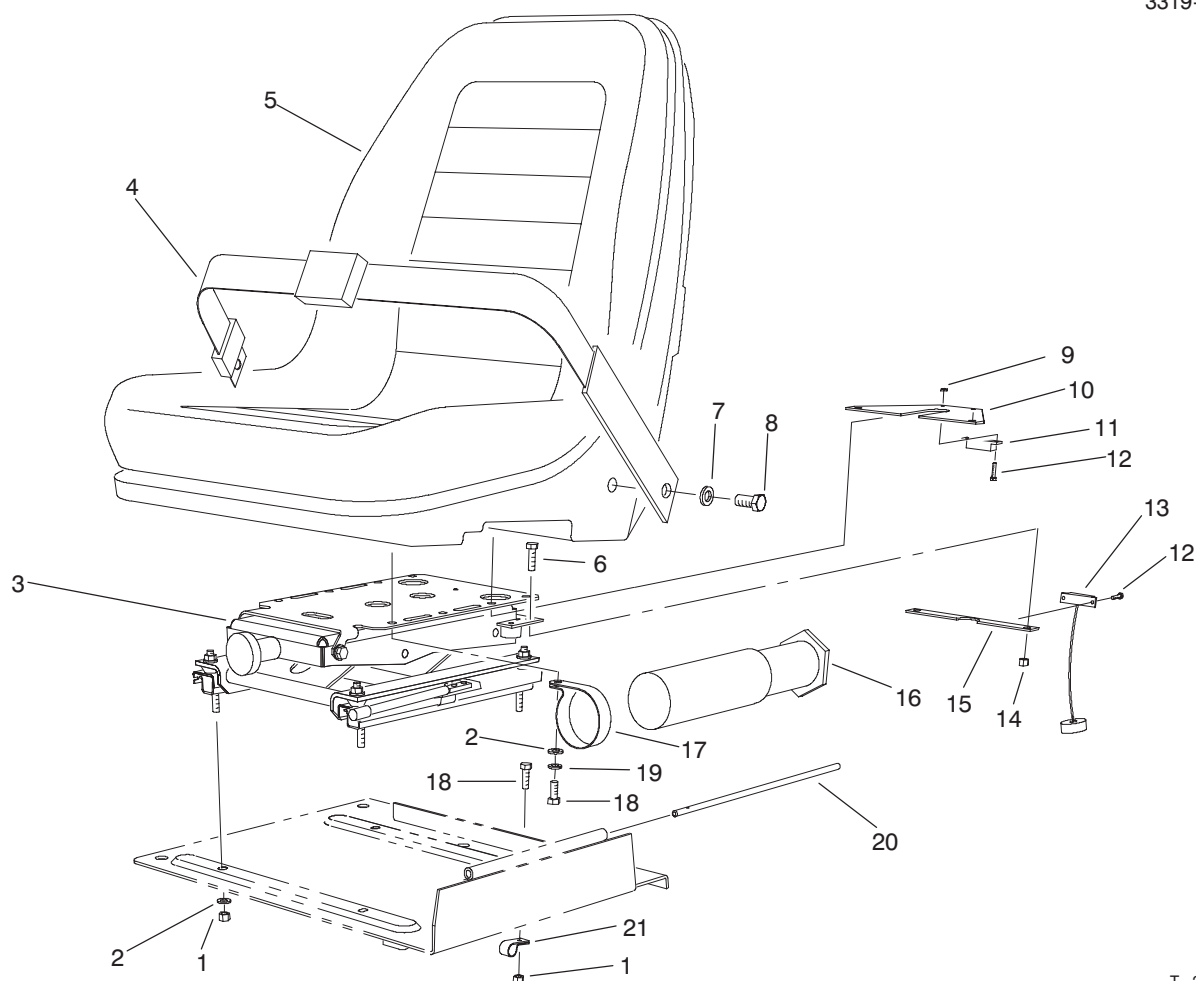

T-2064-1

SEAT FRAME & THROTTLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut-Lock	5	10	75-4370	Bracket-Seat	1
2	3256-23	Washer-Flat	8	11	92-8753	Magnet-Switch, Reed	1
3		Suspension-Seat	1	12	3250-29	Screw	4
4	21-4191	Asm-Seat Belt (Model 03801 Only)	1	13	92-8001	Sensor-Switch, Reed	1
5	92-1180	Asm-Seat	1	14	3296-39	Nut-Lock	2
6	323-4	Screw-Hex. Hd.	2	15	75-4360	Bracket-Suspension, Seat	1
7	3253-6	Washer-Lock (Model 03801 Only)	2	16	74-0720	Tube-Manual	1
8	3212-4	Screw (Model 03801 Only)	2	17	2412-133	Clamp-R	2
9	3296-54	Nut-Lock	4	18	322-3	Screw-Hex. Hd.	2
				19	3253-4	Washer-Lock	4
				20	75-3400	Shaft-Pivot, Seat	1
				21	2412-93	Clamp-R	1

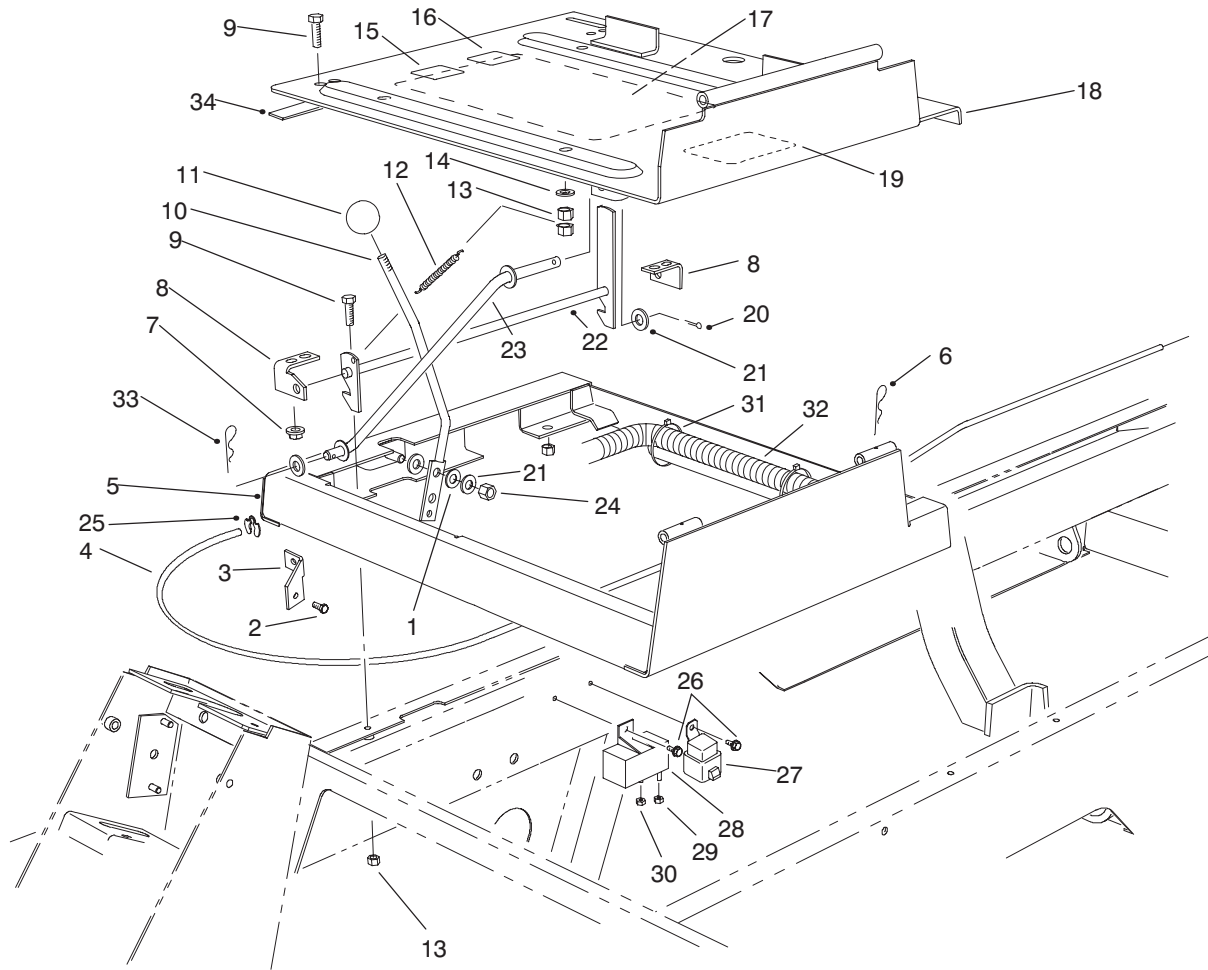 


T-2065-2

SEAT FRAME & THROTTLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	66-2920	Washer—Nylon	2
2	49-2040	Screw—Hex. Hd.	1
3	92-7396	Mount—Cable	1
4	92-7520	Cable—Throttle	1
5	93-9973	Frame—Seat	1
6	3290-467	Pin—Cotter, Hair	1
7	32128-25	Nut—Lock	4
8	93-9983	Bracket—Latch, Seat	2
9	322-3	Screw—HH	8
10	93-7598	Lever—Throttle	1
11	233-42	Knob	1
12	66-4190	Spring	1
13	3296-29	Nut—Lock	9
14	3256-23	Washer—Flat	4
15	63-9920	Decal—EEC 105 DBA	1
16	85-6910	Decal—EEC 86 DBA	1
17	95-3466	Decal—Instructions, Clip	1
17	95-3467	Decal—Clip (Danish)	1
17	95-3468	Decal—Clip (Dutch)	1
17	95-3469	Decal—Clip (Finnish)	1
17	95-3470	Decal—Clip (French)	1
17	95-3471	Decal—Clip (German)	1
17	95-3472	Decal—Clip (Italian)	1
17	95-3473	Decal—Clip (Norwegian)	1
17	95-3474	Decal—Clip (Portuguese)	1
17	95-3475	Decal—Clip (Spanish)	1
17	95-3476	Decal—Clip (Swedish)	1
17	95-3477	Decal—Clip (Japan)	1


Ref. No.	Part No.	Description	No. Used
18	93-9976	Plate—Seat	1
19	93-9184	Decal—Rear Manifold Block	1
19	94-2913	Decal—Rear Manifold (DK)	1
19	94-2914	Decal—Rear Manifold (NL)	1
19	94-2915	Decal—Rear Manifold (SF)	1
19	94-2916	Decal—Rear Manifold (F)	1
19	94-2917	Decal—Rear Manifold (D)	1
19	94-2918	Decal—Rear Manifold (I)	1
19	94-2920	Decal—Rear Manifold (N)	1
19	94-2921	Decal—Rear Manifold (P)	1
19	94-2922	Decal—Rear Manifold (ES)	1
19	94-2923	Decal—Rear Manifold (S)	1
19	94-2919	Decal—Rear Manifold (J)	1
20	3272-10	Pin—Cotter	1
21	3256-24	Washer—Flat	3
22	93-9979	Latch—Seat	1
23	75-3680	Rod—Seat	1
24	3296-39	Nut—Lock	1
25	52-5910	Ring—Retaining	1
26	32144-10	Screw	2
27	70-1480	Relay	1
28	76-5260	Relay—Glow Plug	1
29	48-7880	Nut	1
30	48-7890	Nut	1
31	3290-378	Tie—Cable	2
32	94-3090	Harness—Wire, Main	1
33	3290-307	Pin—Cotter, Hair	1
34	94-8146	Strip—Foam, Seat	1

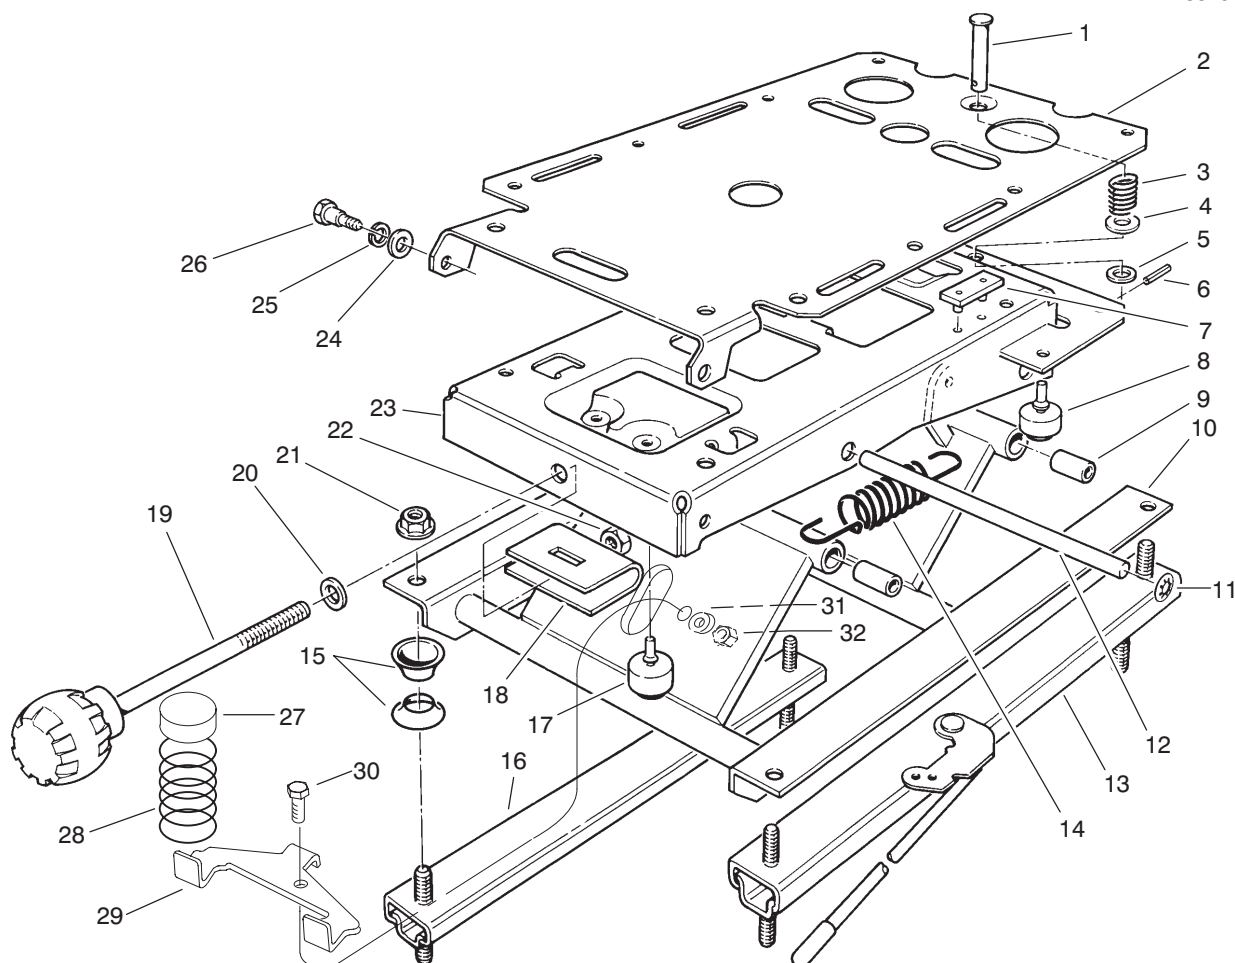 

T-1031-1

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	80-4860	Pin—Clevis	1	17	66-8520	Bumper—Down Stop	2
2	75-3580	Plate—Mounting, Seat	1	18	77-2870	Weldment—Hanger	1
3	75-3530	Spring—Compression	1	19	76-1930	Knob—Tension Adjustment	1
4	3256-5	Washer—Flat	1	20	3256-46	Washer—Flat	1
5	3256-24	Washer	1	21	32128-26	Nut—Flange	4
6	75-3540	Pin—Roll	1	22	3296-44	Nut—Lock	1
7	75-3550	Bumper—Seat	2	23	75-3480	Weldment—Upper	1
8	76-2940	Bumper—Rubber	2	24	3256-26	Washer—Flat	2
9	76-1920	Bushing—Sleeve	4	25	3253-6	Washer—Lock	2
10	66-8610	Weldment—Lower	1	26	75-3510	Bolt—Shoulder	2
11	66-8560	Nut—Push	4	27	93-3164	Cap	2
12	76-1910	Shaft—Pivot	2	28	93-3163	Spring	1
13	82-9060	Adjuster W/Handle	1	29	93-3165	Bracket	1
14	76-1940	Spring—Extension	2	30	322-6	Screw—Hex. Hd.	1
15	66-9290	Spacer	6	31	3253-33	Washer—Lock	1
16	66-8530	Adjuster	1	32	3217-6	Nut—Jam	1

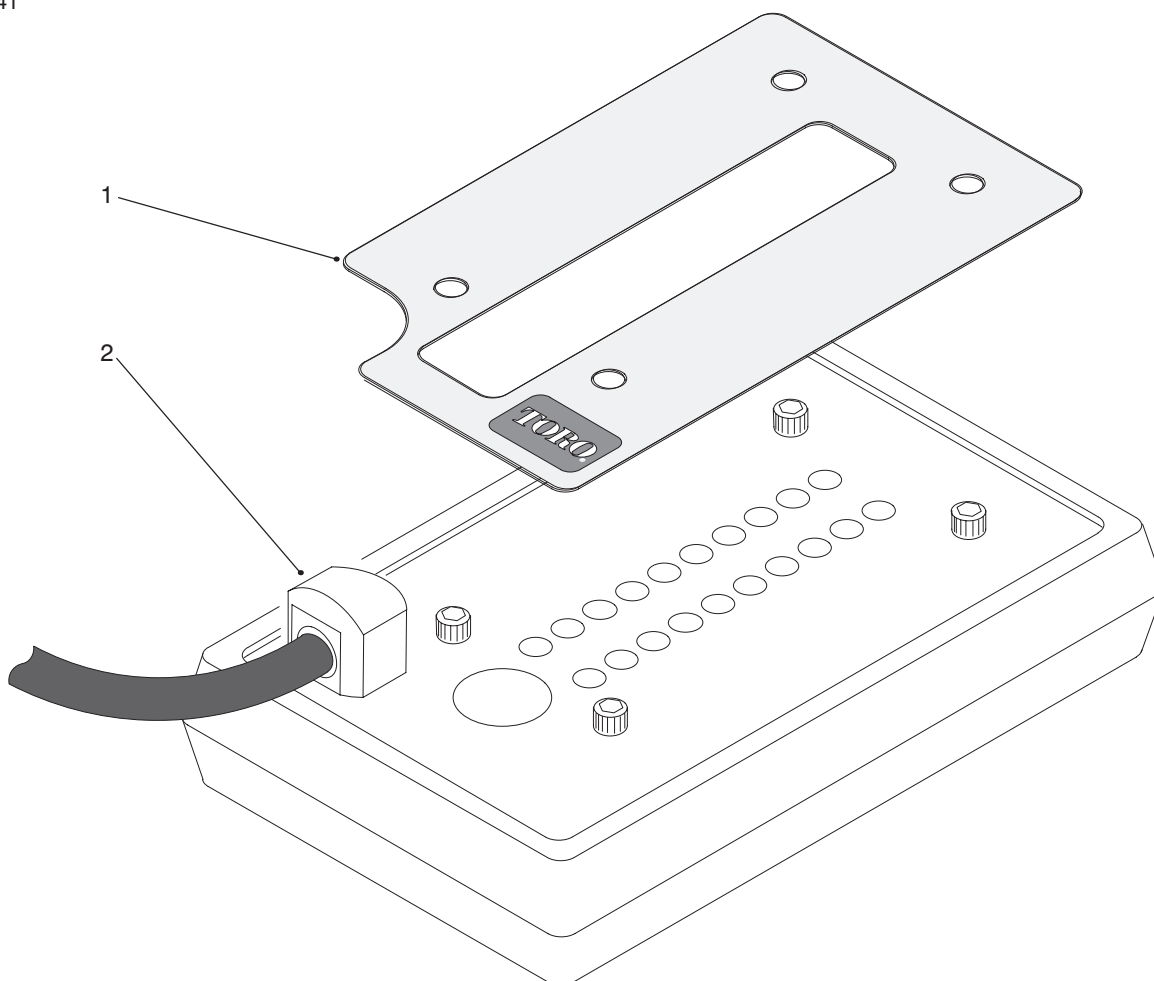 


T-1458-1

DIAGNOSTIC — ACE DISPLAY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-7543	Decal—Diagnostic ACE V 1.0	1
1	94-3354	Decal—Diagnostic ACE V 1.0 (Danish)	1
1	94-3355	Decal—Diagnostic ACE V 1.0 (Dutch)	1
1	94-3356	Decal—Diagnostic ACE V 1.0 (Finnish)	1
1	94-3357	Decal—Diagnostic ACE V 1.0 (French)	1
1	94-3358	Decal—Diagnostic ACE V 1.0 (German)	1
1	94-3359	Decal—Diagnostic ACE V 1.0 (Italian)	1
1	94-3361	Decal—Diagnostic ACE V 1.0 (Norwegian)	1
1	94-3362	Decal—Diagnostic ACE V 1.0 (Portuguese)	1
1	94-3363	Decal—Diagnostic ACE V 1.0 (Spanish)	1
1	94-3364	Decal—Diagnostic ACE V 1.0 (Swedish)	1
1	94-3360	Decal—Diagnostic ACE V 1.0 (Japan)	1

Ref. No.	Part No.	Description	No. Used
2	85-4750	Display—Diagnostic ACE	1
*3	94-5386	Decal—Diagnostic	1
*3	94-8060	Decal—Diagnostic (Danish)	1
*3	94-8061	Decal—Diagnostic (Dutch)	1
*3	94-8062	Decal—Diagnostic (Finnish)	1
*3	94-8063	Decal—Diagnostic (French)	1
*3	94-8064	Decal—Diagnostic (German)	1
*3	94-8065	Decal—Diagnostic (Italian)	1
*3	94-8066	Decal—Diagnostic (Japanese)	1
*3	94-8067	Decal—Diagnostic (Norwegian)	1
*3	94-8068	Decal—Diagnostic (Portuguese)	1
*3	94-8069	Decal—Diagnostic (Spanish)	1
*3	94-8070	Decal—Diagnostic (Swedish)	1

 *Not Illustrated

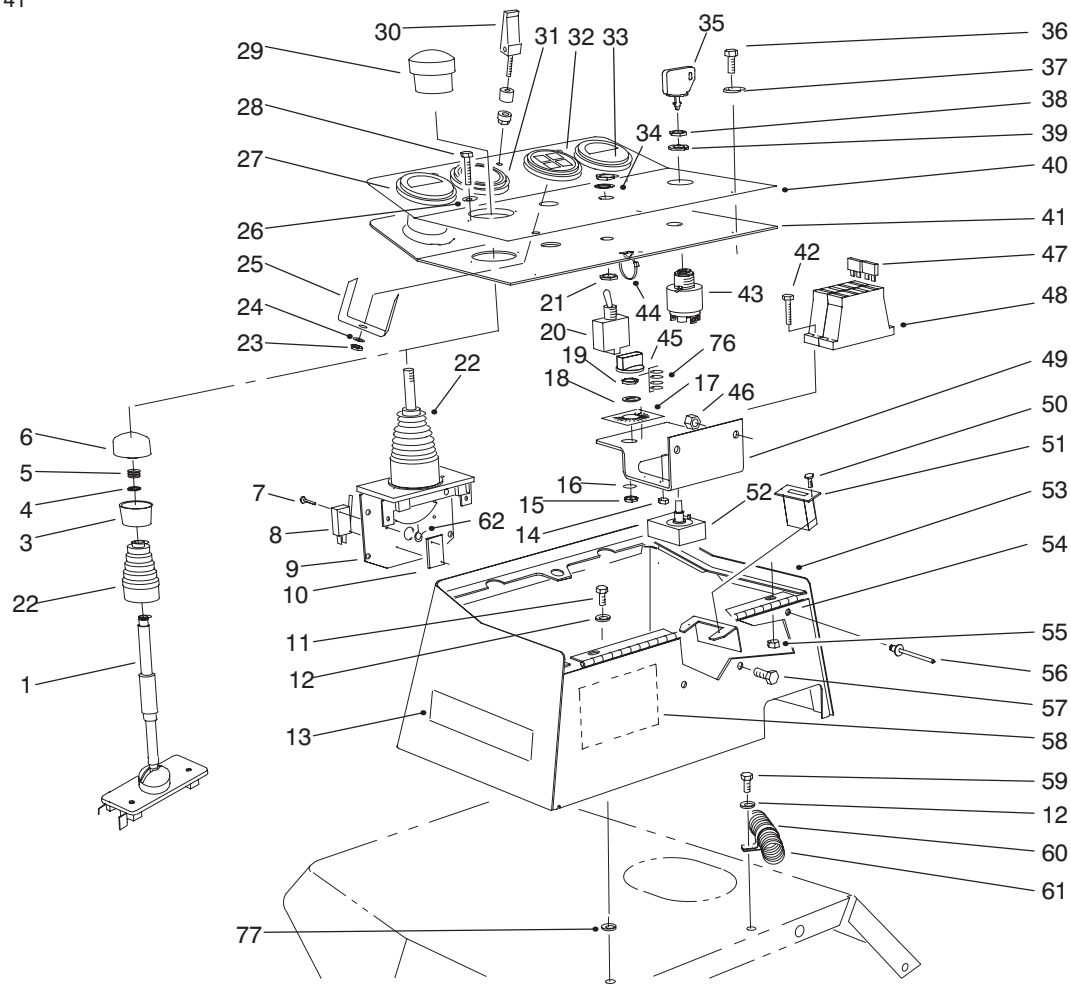


T-2066-6

CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-8102	Tube-Interlock (Europe)	1
3	94-3055	Cap-Lower, Joystick (Europe)	1
4	94-3056	Snap Ring-Joystick (Europe)	1
5	94-3057	Spring-Compression (Europe)	1
6	94-3058	Cap-Upper, Joystick (Europe)	1
7	3290-93	Screw-HH	4
8	94-8104	Switch-Micro	2
9	75-3420	Lever-Control (Incl. Ref. #7-8, 10, 22 & 29)	1
9	94-6753	Joystick (Europe) (Incl. Ref. #1-6, 7-8, 10 & 22)	1
10	3290-354	Plate-Nut	2
11	322-3	Screw-HH	3
12	3256-23	Washer-Flat	4
13	75-5190	Decal-No Riders	1
13	93-6689	Decal-No Riders (Europe)	1
13	84-3420	Decal-No Riders (Japan)	1
14	3296-2	Nut-Lock	1
15		Nu-Lock	1
16		Washer-Lock	1
17	94-2633	Decal-HOC Selector	1

Ref. No.	Part No.	Description	No. Used
17	93-1268	Decal-HOC Selector (Europe)	1
17	94-4575	Decal-HOC Selector (Japan)	1
18	3254-6	Washer-Lock	1
19	3220-24	Nut-Lock	1
20	75-1010	Switch (Incl. Ref. #21, 34 & 74-75)	1
21	218-498	Nut-Hex.	2
22	94-8103	Boot-Control, Lift	1
23	3217-26	Nut	1
24	3254-1	Washer-Lock	1
25		Clamp	1
26	3256-14	Washer-Flat	2
27	93-8497	Gauge-Fuel	1
28	3250-31	Screw-Pan Hd.	2
29	3290-489	Knob-Control, Lift	1
30	74-5950	Latch-Swell	1
31	93-7484	Light-Warning Bank (Incl. Ref. #23-25 & 62-63)	1
32	93-7483	Light-Warning Bank (Incl. Ref. #23-25 & 62-63)	1
33	76-9060	Gauge-Temperature (Incl. Ref. #64-65)	1
34	218-589	Washer-Lock	1
35	63-8360	Key-Ignition	1
36	3258-166	Screw	3

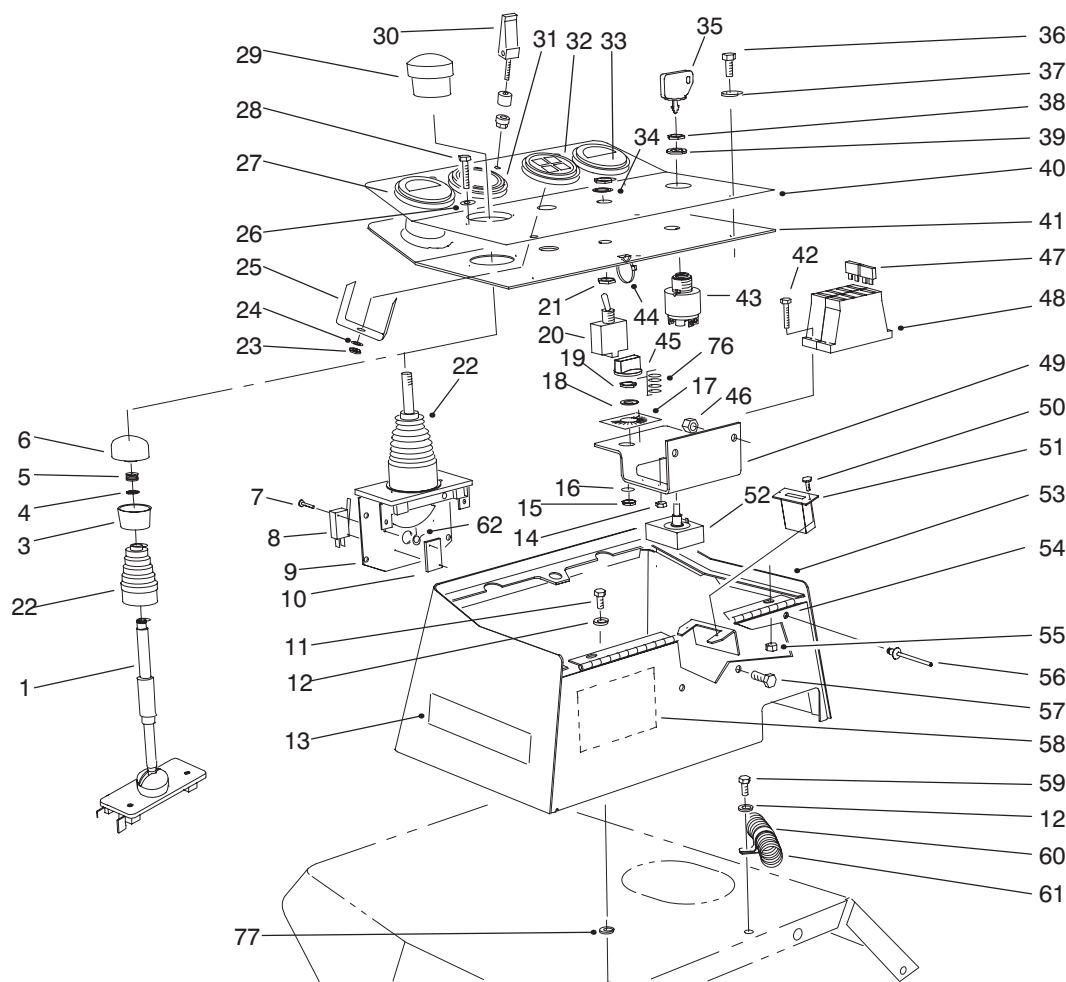 

T-2066-6


CONTROL CONSOLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
37	3256-1	Washer	3	53	75-5740	Box-Control	1
38	218-447	Nut-Hex.	1	54	75-5780	Hinge-Cover	1
39	218-446	Washer-Lock	1	55	32128-33	Nut-Lock	3
40	93-9167	Decal-Console	1	56	93-8744	Rivet-Pop	3
40	93-1261	Decal-Console (Europe)	1	57	321-39	Screw-Hex. Hd.	2
40	94-4574	Decal-Console (Japan)	1	58	94-6349	Decal-Fuses	1
41	94-1417	Cover-Box, Control	1	58	93-1266	Decal-Fuses (Europe)	1
42	32105-13	Screw-HH	4	58	94-3091	Decal-Fuses (Japan)	1
43	27-2360	Switch-Ignition (Incl. Ref. #38 & 39)	1	59	322-5	Screw-Hex. Hd.	1
44	3290-378	Tie-Cable	2	60	2412-126	Clamp-R	1
45	85-4480	Knob	1	61	94-3090	Harness-Wire, Main	1
46	3296-42	Nut-Lock	2	62	93-3625	Spring-Return, Joystick	1
†47	218-594	Fuse-20A	1	*63	87-6270	Socket-Light	4
†47	218-578	Fuse-10A	4	*64	219-17	Bulb	4
†47	218-581	Fuse-15A	1	*65	3217-25	Nut-Hex.	2
†47	218-574	Fuse-7.5A	1	*66	3253-15	Washer-Lock	2
†47	94-6710	Fuse-2A	1	*67	3217-29	Nut-Hex.	6
†48	67-7160	Block-Fuse	2	*68	3255-24	Washer-Lock, Ext. Tooth	3
49	93-7587	Bracket-Fuse Block	1	*69	3219-14	Nut-Hex.	8
50	32144-18	Screw-Hex. Washer Hd.	2	*70	3253-2	Washer-Lock	5
51	75-6820	Hour Meter	1	*74	218-588	Screw	2
52	85-4470	Potentiometer (Incl. Ref. #18 & 19) Note: Replacement of this part requires recalibration of electronic controller by distributor after installation.	1	*75	3255-19	Washer-Lock	2
				*	94-6343	Decal-Wire Identification #1	1
				*	94-6344	Decal-Wire Identification #2	1
				76	237-7	O-Ring	4
				77	66-2920	Washer	3

*Not Illustrated


†Included in Main Wiring Harness

 HYDRAULIC SCHEMATIC (Model 03800)

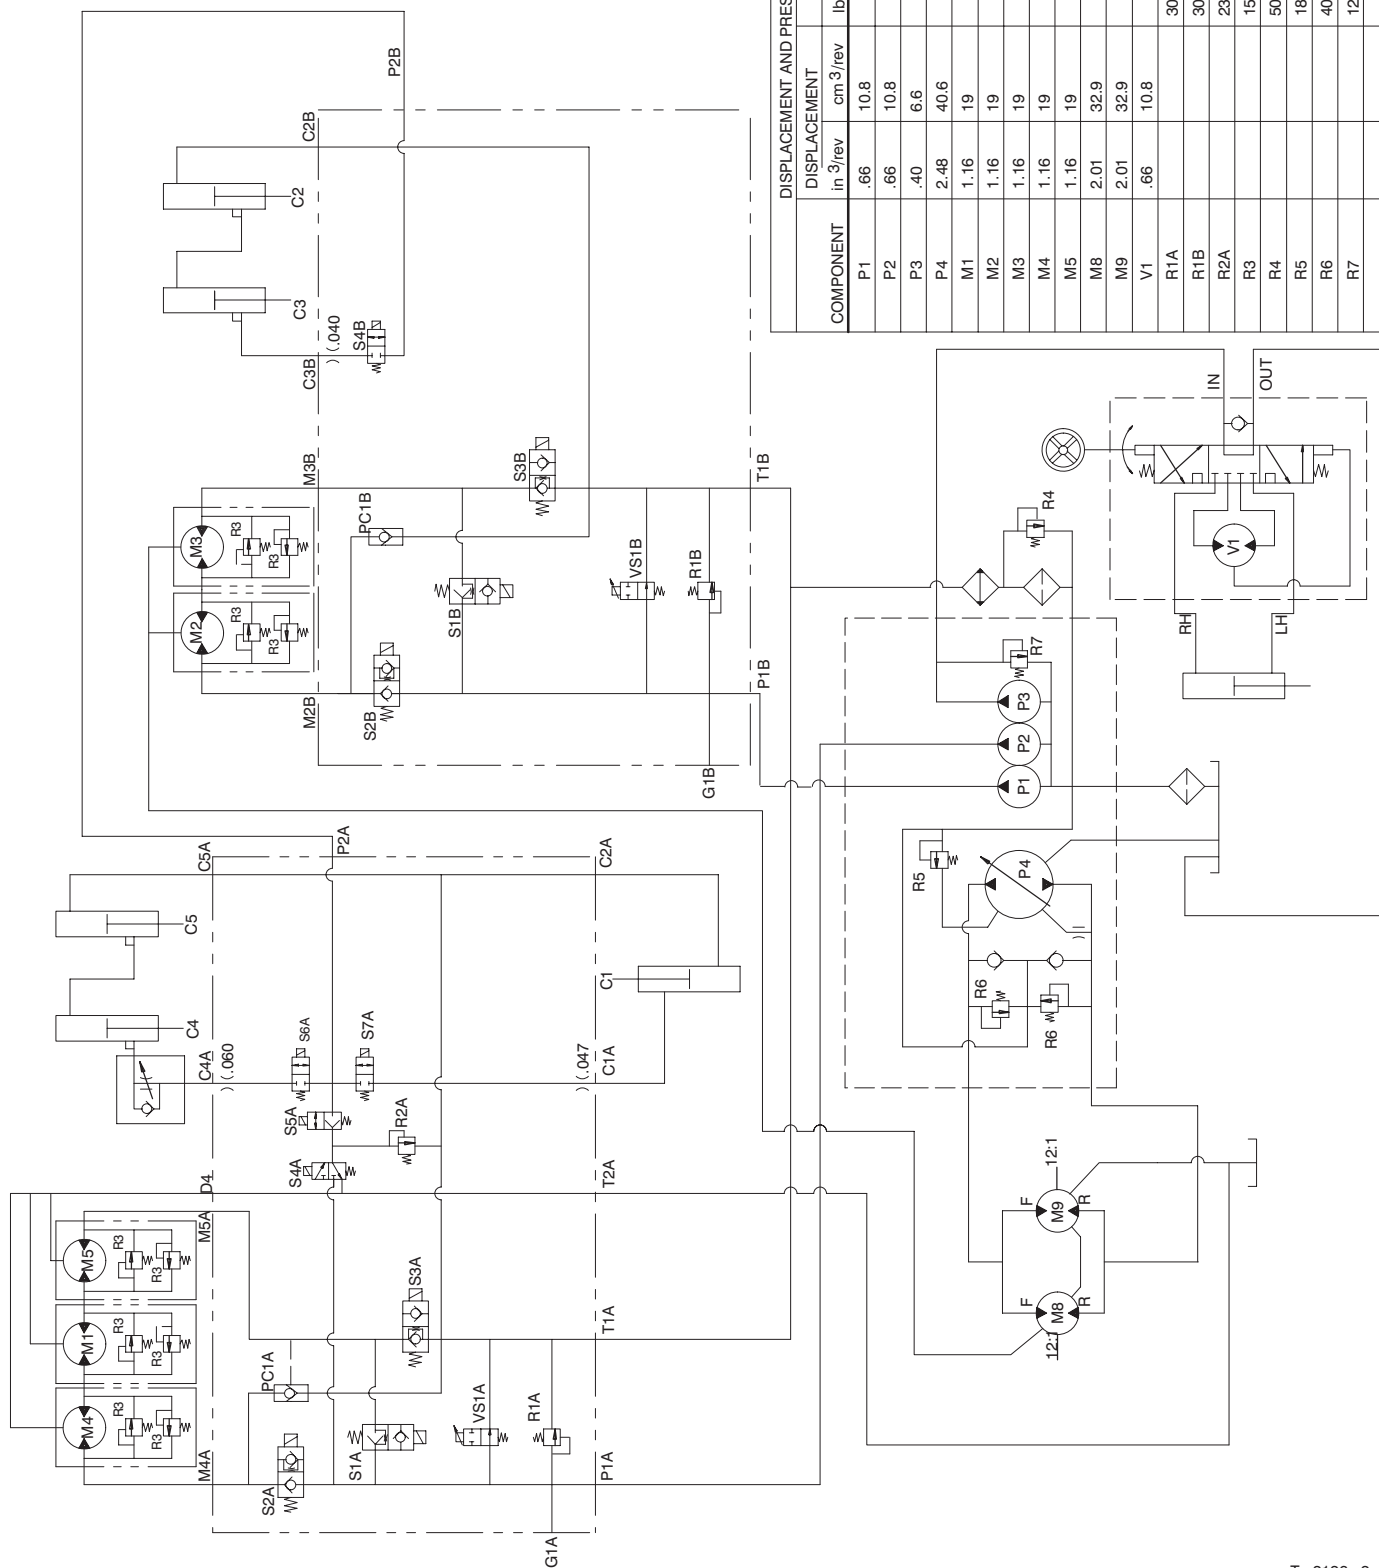


COMPONENT	DISPLACEMENT AND PRESSURE CHART			*FLOW RATE	
	DISPLACEMENT in 3/rev	cm 3/rev	PRESSURE lbs/in 2	GPM	LPM
P1	.66	10.8		7.0	26.5
P2	.66	10.8		7.0	26.5
P3	.40	6.6		4.2	15.9
P4	2.48	40.6		26.3	99.5
M1	1.16	19			
M2	1.16	19			
M3	1.16	19			
M4	1.16	19			
M5	1.16	19			
M8	2.01	32.9			
M9	2.01	32.9			
V1	.66	10.8			
R1A			3000	207	
R1B			3000	207	
R2A			2300	159	
R3			1500	103	
R4			50	3	
R5			180	12	
R6			4000	276	
R7			1250	86	

 HYDRAULIC SCHEMATIC (Model 03801)

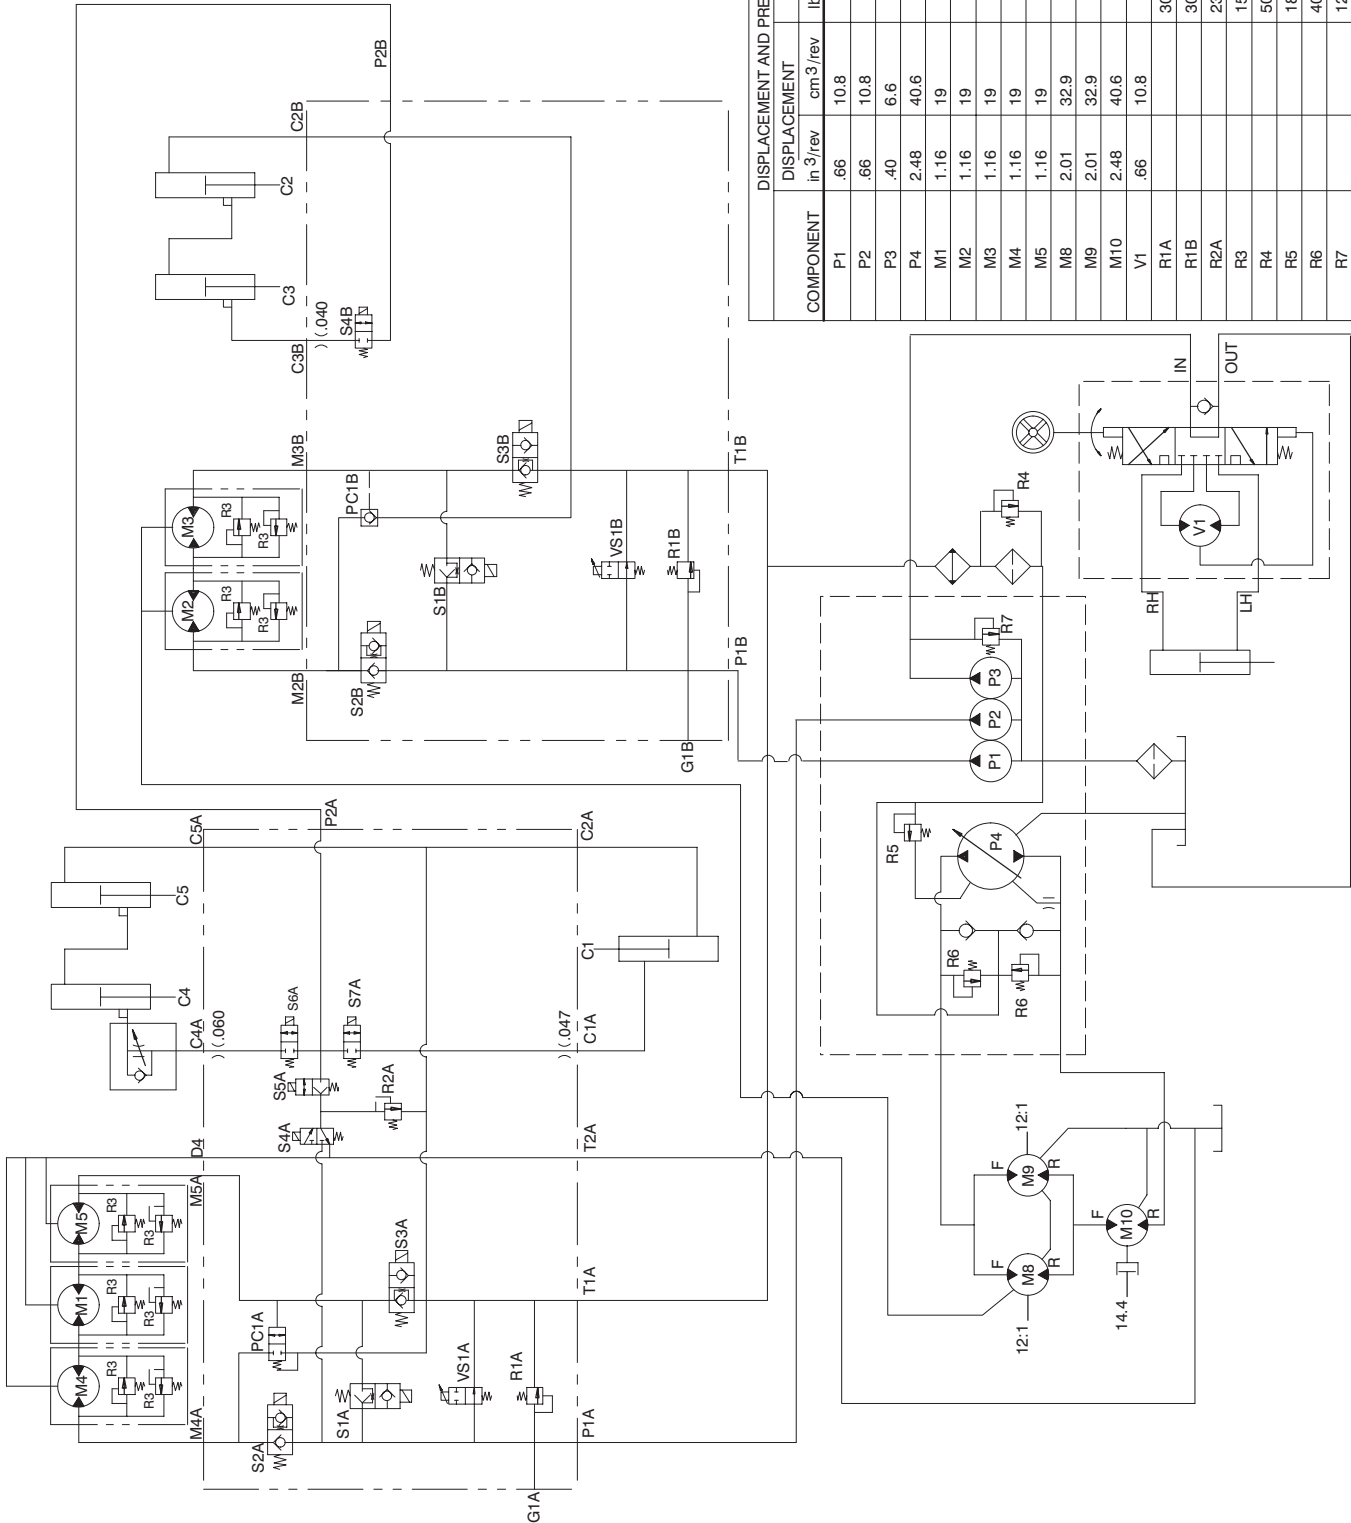

COMPONENT	DISPLACEMENT		PRESSURE		*FLOW RATE	
	in 3/rev	cm ³ /rev	lbs/in ²	BARS	GPM	LPM
P1	.66	10.8			7.0	26.5
P2	.66	10.8			7.0	26.5
P3	.40	6.6			4.2	15.9
P4	2.48	40.6			26.3	99.5
M1	1.16	19				
M2	1.16	19				
M3	1.16	19				
M4	1.16	19				
M5	1.16	19				
M8	2.01	32.9				
M9	2.01	32.9				
M10	2.48	40.6				
V1	.66	10.8				
R1A			3000	207		
R1B			3000	207		
R2A			2300	159		
R3			1500	103		
R4			50	3		
R5			180	12		
R6			4000	276		
R7			1250	86		

 *FLOW RATE CALCULATED AT 2500 RPM AND 98% EFFICIENCY.

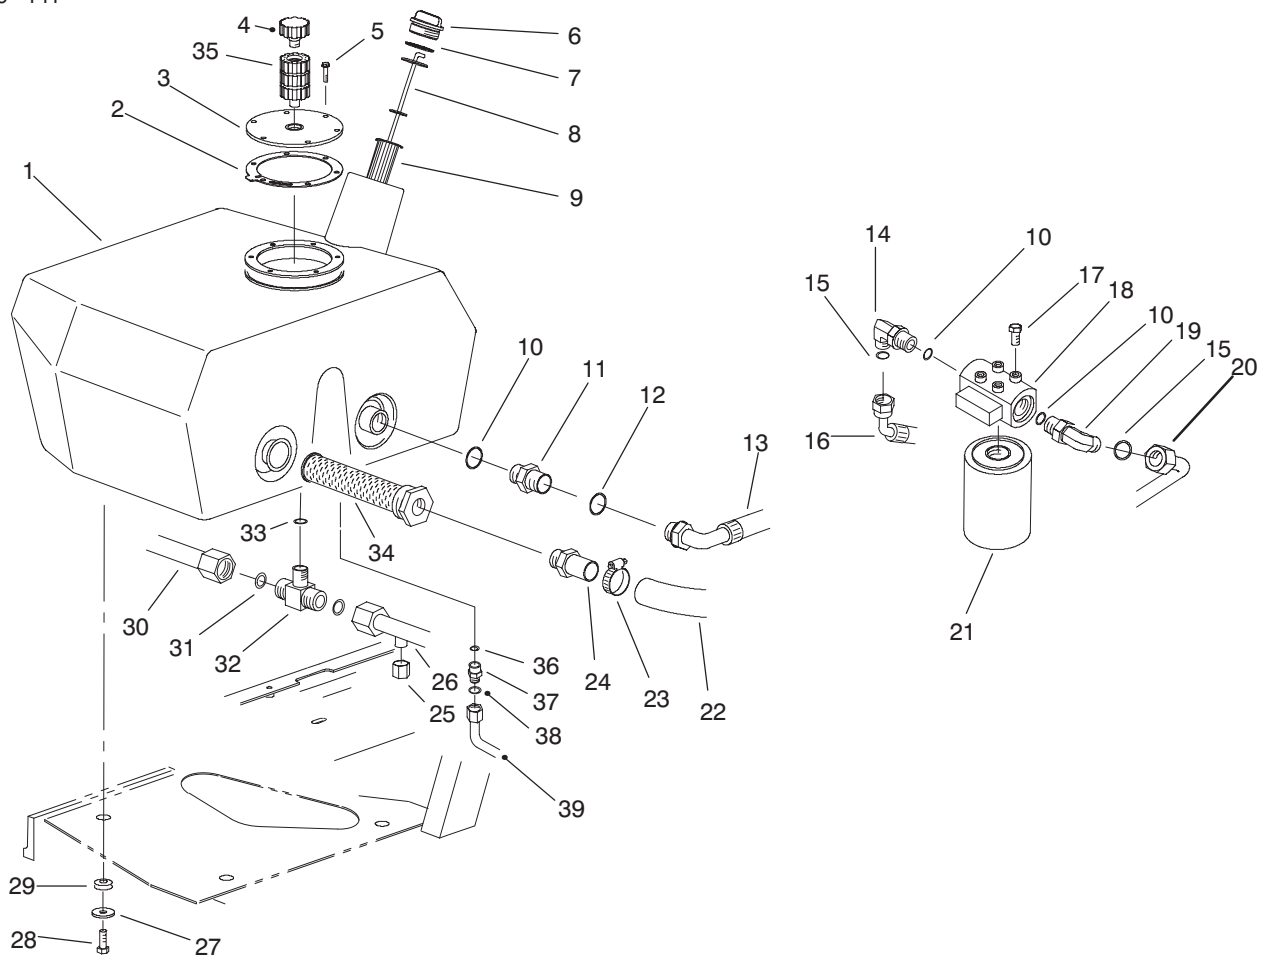


T-2067-1

HYDRAULIC FILTER & RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-7488	Tank-Hydraulic	1
2	93-7499	Gasket-Flange	1
3	93-7588	Cover-Tank	1
4	68-6150	Breather-Air	1
5	48-7730	Screw-Hex. Hd. Flange	6
6	93-7498	Plug-Plastic	1
7	94-8166	O-Ring	1
8	75-3710	Dipstick	1
9	61-2790	Filter-Screen	1
10	237-81	O-Ring	3
11	340-9	Fitting-Hydraulic (Incl. Ref. #10 & 12)	1
12	237-58	O-Ring	1
13	92-7489	Hose-Return	1
14	340-139	Fitting-Elbow 90° (Incl. Ref. #10 & 15)	1
15	237-65	O-Ring	2
16	92-7490	Hose-Filter	1
17	3234-1	Screw	2
18	94-2620	Head-Filter (Incl. Ref. #21)	1
19	340-142	Fitting-Hydraulic 90° (Incl. Ref. #10 & 15)	1

Ref. No.	Part No.	Description	No. Used
20	92-7493	Hose-Filter	1
21	94-2621	Element	1
22	92-7465	Hose-Suction	1
23	2412-111	Clamp	1
24	92-7525	Fitting-Hose	1
25	92-7551	Cap-Fitting	1
26	94-1446	Tube-Drain	1
27	63-8410	Washer-Flat	3
28	33105-025	Screw-Hex. Hd. Flange	3
29	240-11	Grommet	3
30	92-7478	Tube-Motor, RH	1
31	237-30	O-Ring	2
32	340-157	Fitting-Tee (Incl. Ref. #31 & 33)	1
33	237-79	O-Ring	1
34	92-7527	Strainer-Suction	1
35	92-8020	Adapter-Breather	3
36	237-42	O-Ring	1
37	340-2	Adapter (Incl. Ref. #36 & 38)	1
38	237-22	O-Ring	1
39	94-1447	Tube-Steering, Return	1

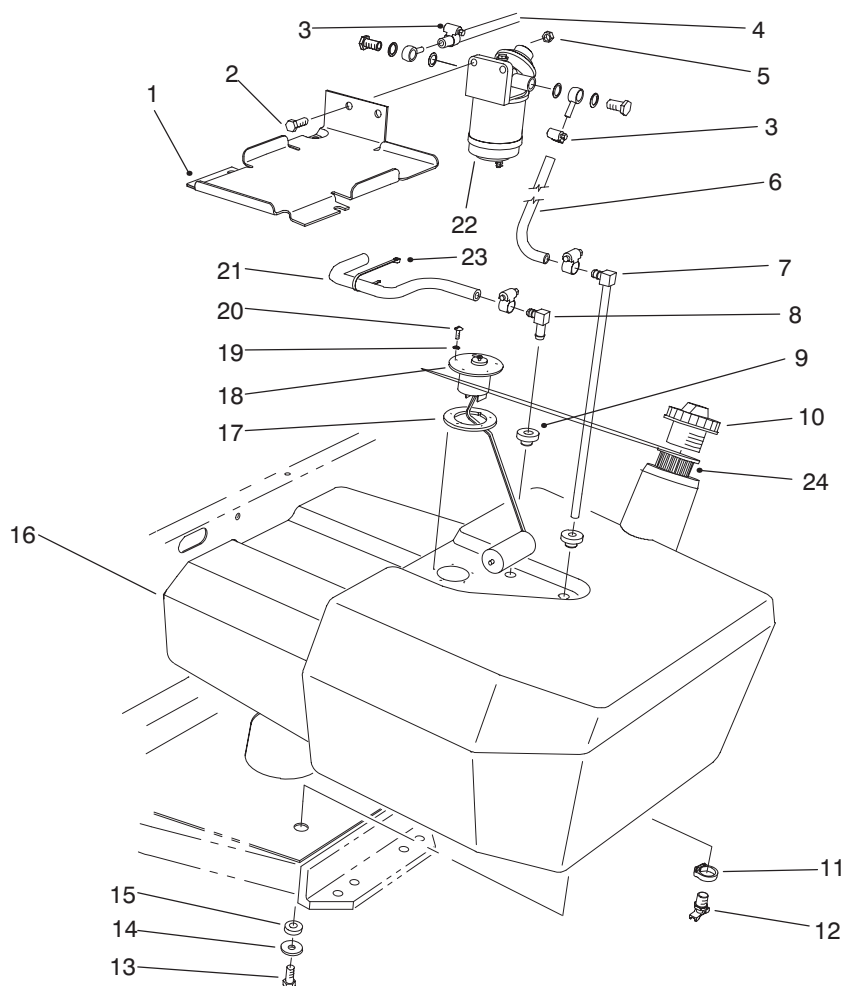 


T-2068-1

FUEL TANK & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7974	Plate-Box, Battery	1	14	63-8410	Washer-Flat	3
2	33105-030	Screw-Hex. Hd. Flange	2	15	240-11	Grommet	3
3	2412-108	Clamp-Hose	4	16	92-7422	Tank-Fuel (Incl. Ref. #11 & 12)	1
4	63-7627	Hose-Fuel	1	17	62-7650	Gasket	1
5	33005-00	Nut-Hex. Flange	2	18	63-7640	Sender-Fuel	1
6	92-7522	Hose-Fuel	1	19	3253-15	Washer-Lock	5
7	66-8121	Standpipe	1	20	32122-24	Screw	5
8	46-6550	Fitting-Connector	1	21	92-7521	Hose-Fuel	1
9	46-6560	Bushing	2	†22	76-5300	Asm-Filter, Fuel	1
10	93-3102	Cap-Fuel, Diesel	1	23	3290-378	Tie-Cable	3
11	2412-36	Clamp-Drain	1	24	61-2790	Filler-Screen	1
12	304-46	Fitting-Drain	1				
13	33105-025	Screw-Hex. Hd. Flange	3				

 
†Furnished with engine.

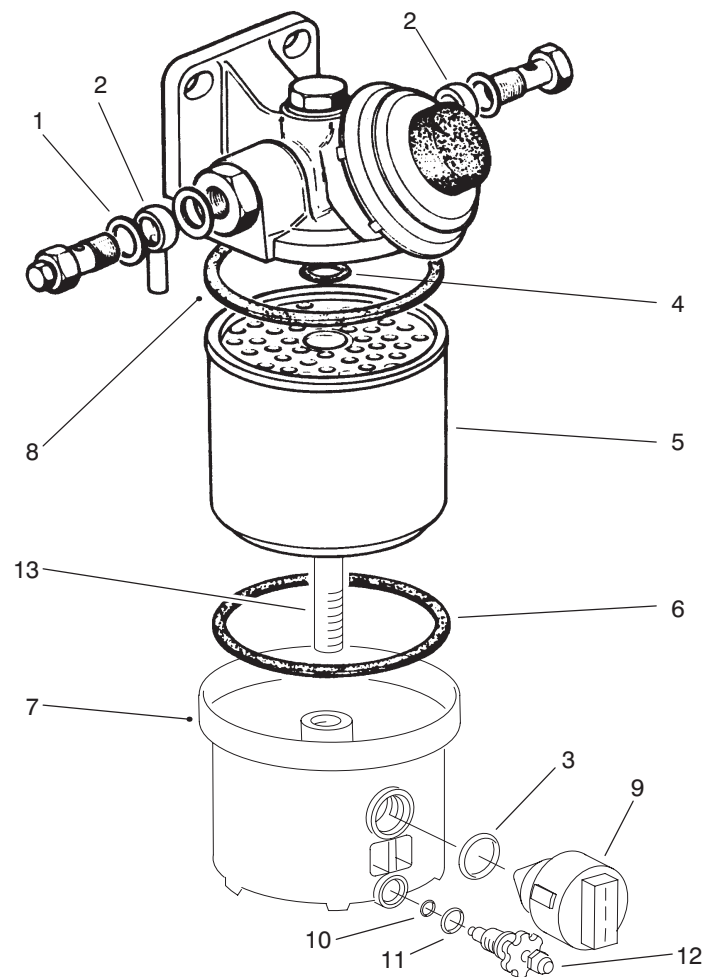

T-0966-2

FUEL FILTER ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5180	Washer-Copper	4	8		Seal-Gasket	1
2	76-5190	Fitting-Adjustable	2	9	76-5320	Sensor-Water (Incl. Ref. #3)	1
3	94-8025	O-Ring	1	10	94-8027	O-Ring	1
4		O-Ring	1	11	94-8028	O-Ring	1
5	76-5220	Element-Filter (Incl. Ref. #4, 6 & 8)	1	12	94-8026	Screw-Vent	1
6		Seal-Gasket	1	13		Bolt	1
7		Cap-Filter, Fuel	1				

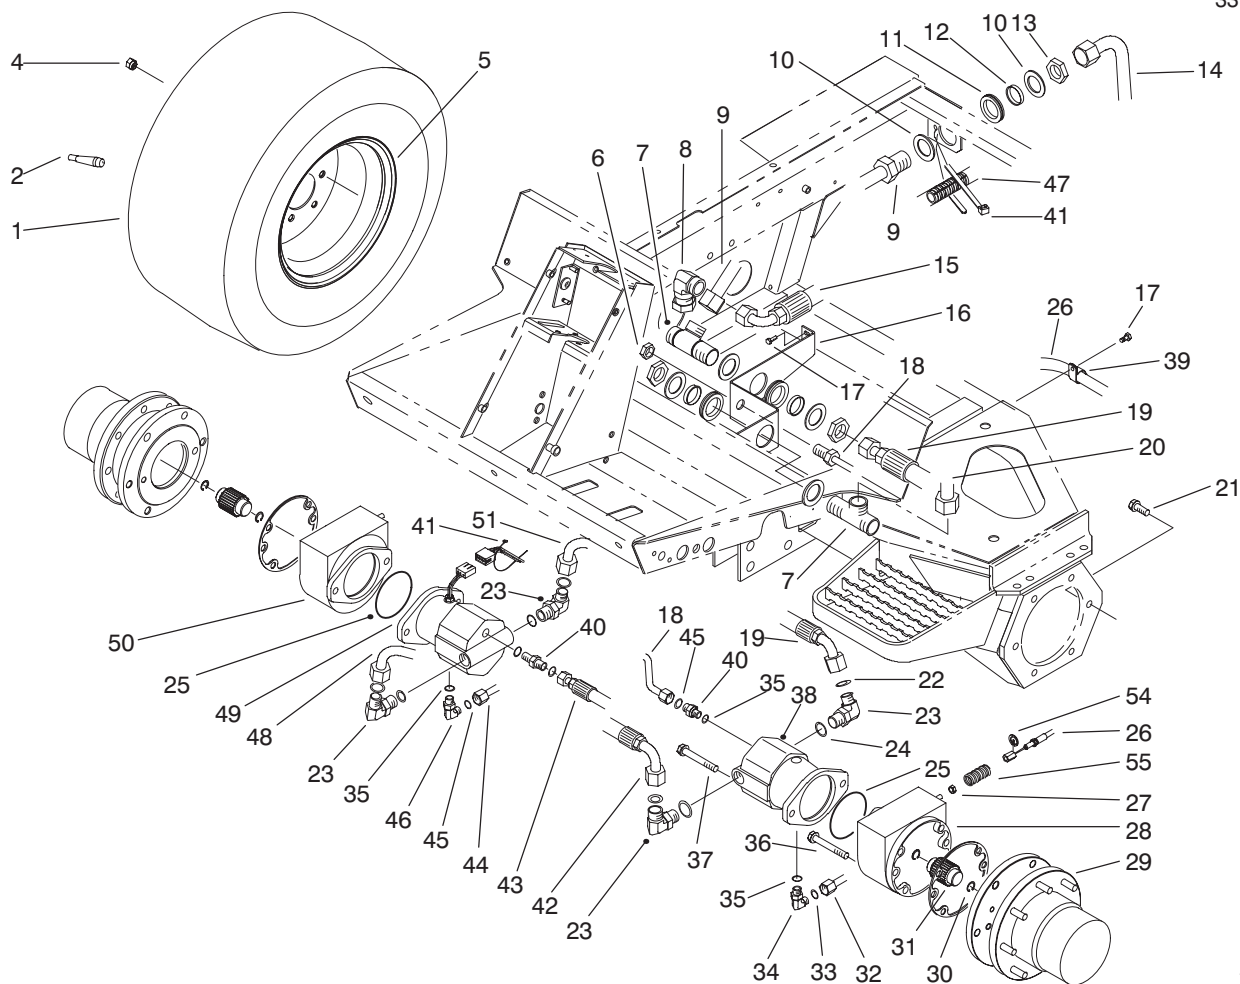 

T-2069-2

FRONT HYDRAULIC DRIVE & BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-8143	Tire	2	14	92-7473	Asm—Tube, Rear (Model 03801)	1
2	232-24	Stem—Valve	2	15	92-7634	Asm—Hose, Traction (Model 03800)	1
4	92-7483	Nut—Lug	16	16	92-7455	Plate—Bulkhead	1
5	94-8149	Rim	2	17	32144-11	Screw—Thread Forming	5
6	340-127	Nut—Bulkhead	1	18	92-7477	Asm—Tube, Motor Drain	1
7	92-7550	Fitting—Tee, Bulkhead (Incl. Ref. #53)	2	19	92-7486	Asm—Hose	1
8	92-7645	Fitting—Hydraulic 90° (Model 03800)	1	20	92-7485	Asm—Hose	1
9	92-7474	Assembly—Tube, Front (Model 03801)	1	21	33106-030	Screw—Hex. Hd. Flange	12
10	69-8920	Washer (Model 03800)	4	22	237-58	O—Ring	4
10	69-8920	Washer (Model 03801)	6	23	340-142	Fitting—Hydraulic 90° (Incl. Ref. #22 & 24)	4
11	240-2	Grommet (Model 03800)	2	24	237-81	O—Ring	4
11	240-2	Grommet (Model 03801)	3	25	237-166	O—Ring	2
12	69-8950	Spacer (Model 03800)	2	26	92-7530	Cable—Brake, LH	1
12	69-8950	Spacer (Model 03801)	3	27	3218-4	Nut—Jam	2
13	340-128	Nut—Bulkhead (Model 03800)	2	28	92-7417	Asm—Brake, LH	1
13	340-128	Nut—Bulkhead (Model 03801)	3	29	92-7415	Asm—Drive, Planetary	2
				30	93-7972	Ring—Retaining	4
				31	93-7966	Shaft—Splined, Brake	2
				32	92-7598	Asm—Tube, Frt. Drain	1
				33	237-22	O—Ring	1
				34	340-18	Fitting—Hydraulic 90° (Incl. Ref. #33 & 35)	1
				35	237-79	O—Ring	4
				36	33106-090	Screw—Hex. Hd. Flange	8

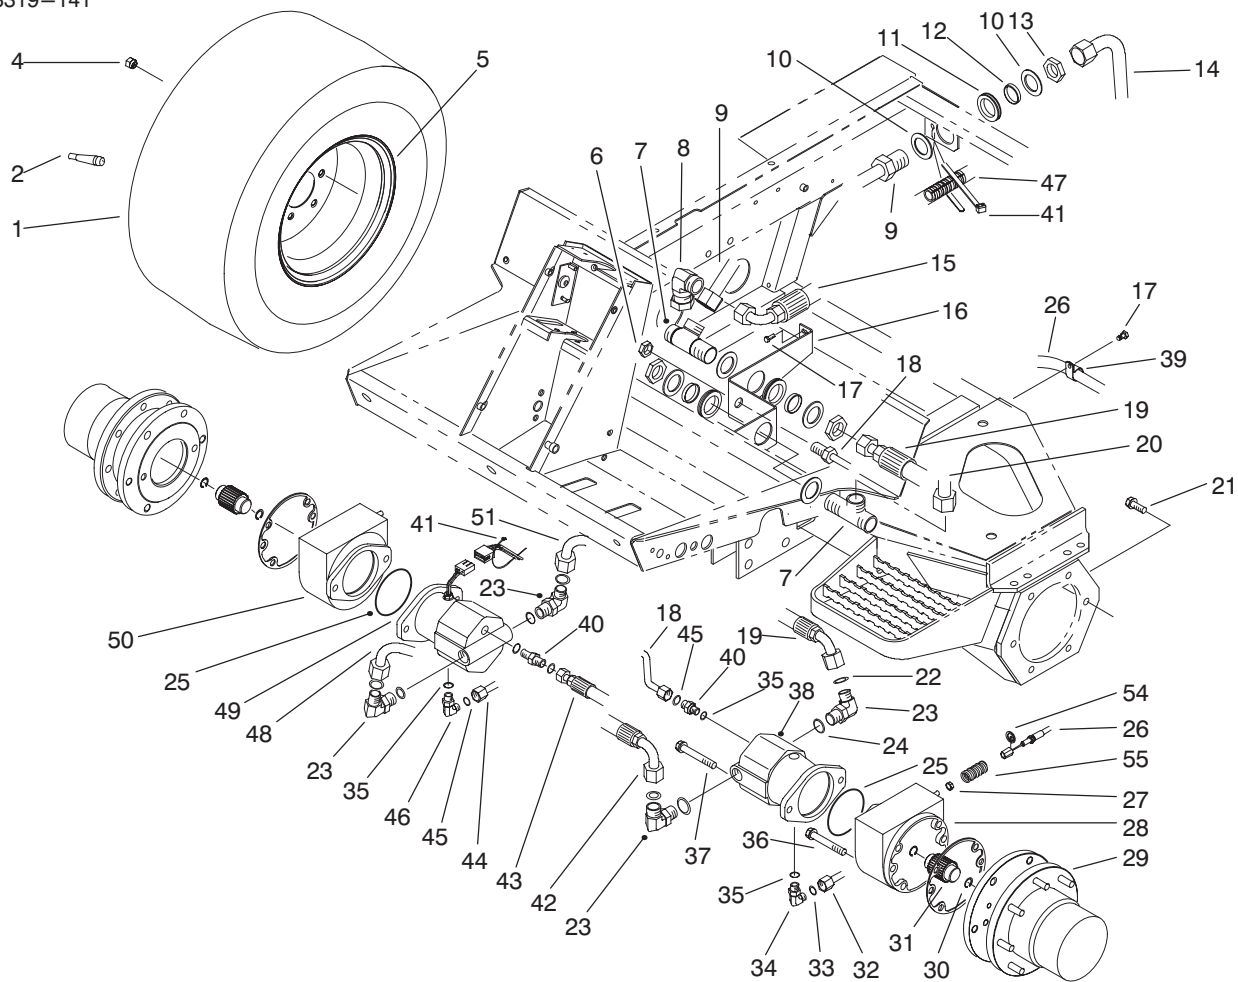 


T-2069-2

FRONT HYDRAULIC DRIVE & BRAKE ASM. (Continued)

Ref. No.	Part No.	Description	No. Used
37	33116-120	Screw-Hex. Hd.	4
38	92-7385	Motor-Planetary	1
39	2412-93	R-Clamp	2
40	340-5	Fitting-Hydraulic (Incl. Ref. #22 & 24)	2
41	3290-378	Tie-Cable	3
42	92-7487	Asm-Tube	1
43	92-7488	Asm-Hose	1
44	92-7478	Asm-Tube, Motor RH	1
45	237-30	O-Ring	3

Ref. No.	Part No.	Description	No. Used
46	340-98	Fitting-Hydraulic 90° (Incl. Ref. #35 & 45)	1
47	94-3090	Harness-Wire, Main	1
48	92-7476	Assembly-Tube, Traction	1
49	93-7476	Motor-Hydraulic W/Sensor	1
50	92-7414	Assembly-Brake, RH	1
51	92-7475	Assembly-Tube, Traction	1
*53	340-65	O-Ring	6
54	94-3050	Plate-Spring	2
55	94-3088	Spring-Brake	2

 *Not Illustrated

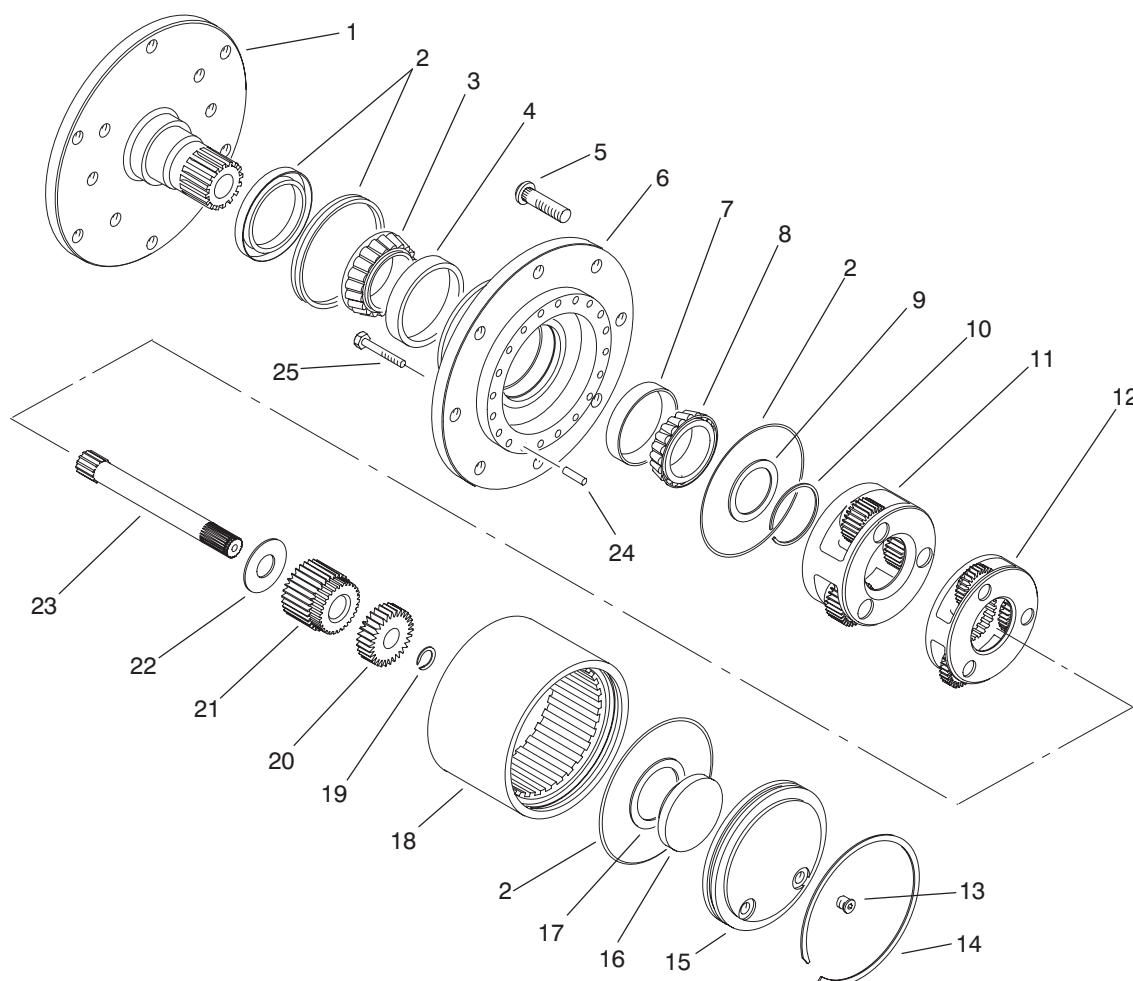


T-2070-1

PLANETARY DRIVE ASSEMBLY NO. 92-7415

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7450	Spindle	1	15	93-7458	Plate—Cover	1
2	93-7474	Kit—Seal	1	16	93-7457	Spacer—Input	1
3	93-7451	Cone—Bearing	1	17	93-7460	Washer—Thrust	1
4	93-7452	Cup—Bearing	1	18	93-7456	Gear—Ring	1
5	93-7455	Stud—Wheel	8	19	93-7459	Ring—Retaining, External	1
6	93-7453	Housing	1	20	93-7463	Gear—Sun	1
7	93-7470	Cup—Bearing	1	21	93-7464	Gear—Sun	1
8	93-7469	Cone—Bearing	1	22	93-7465	Washer—Thrust	1
9	93-7468	Washer—Thrust	1	23	93-7471	Shaft—Input	1
10	93-7467	Ring—Retaining, External	1	24	93-7466	Pin—Dowel	2
11	93-7472	Asm—Carrier, Secondary	1	25	93-7454	Screw—HH	18
12	93-7473	Asm—Carrier, Primary	1	*	92-7415	Asm—Complete (Incl. Ref. #1-25)	1
13	93-7461	Plug—Pipe	2				
14	93-7462	Ring—Retaining, Internal	1				

 *Not Illustrated

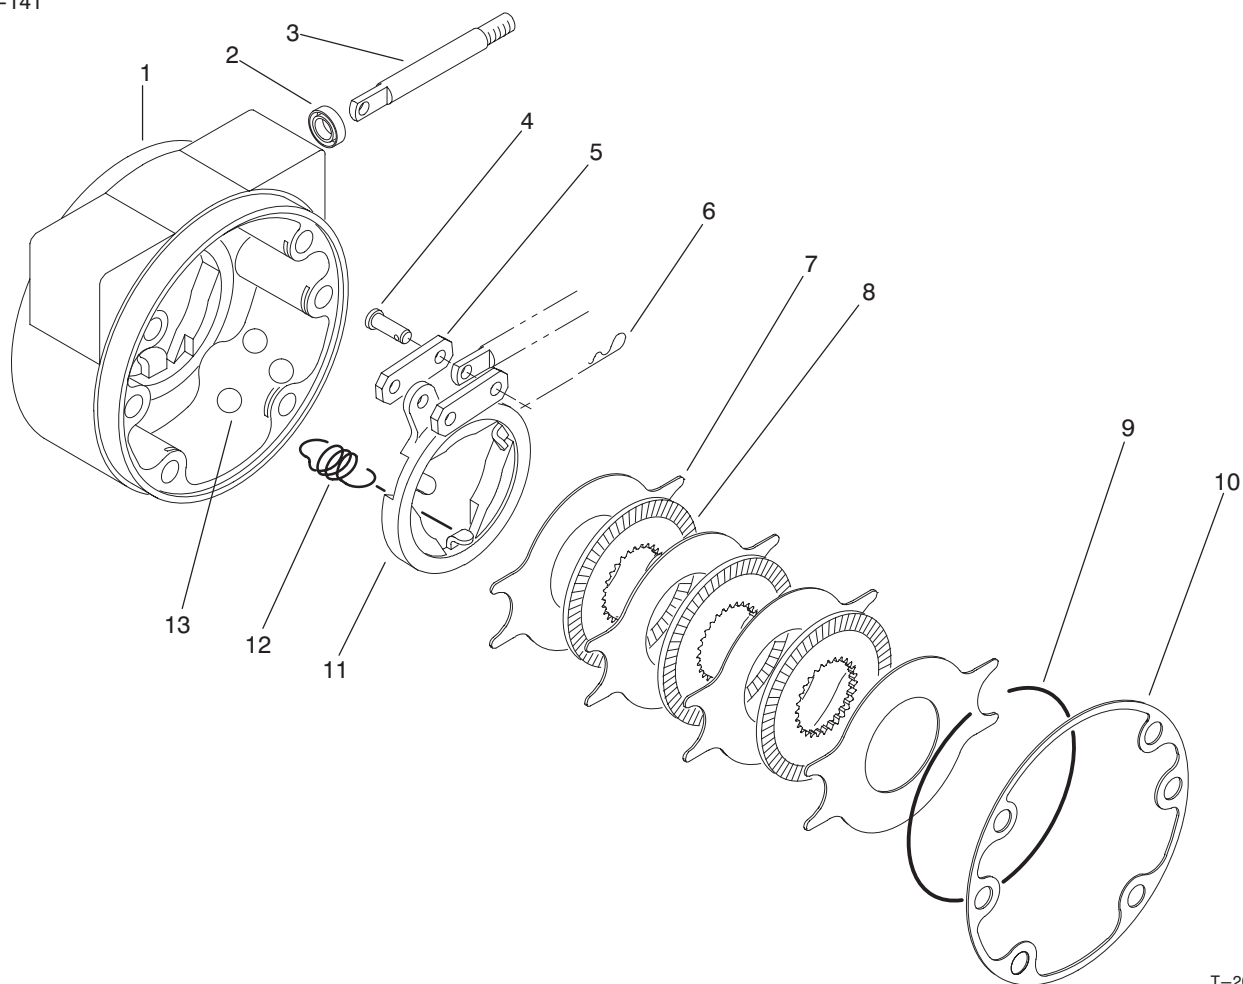

T-2071-1


BRAKE ASM NO. 92-7414 RH & 92-7417 LH (Shown)

Ref. No.	Part No.	Description	No. Used
†1		Housing—Brake, LH	1
†*		Housing—Brake, RH	1
2	93-7977	Seal	1
3	93-7978	Rod—Pull	1
4	93-7983	Pin—Clevis	2
5	93-7980	Link	2
6	93-7979	Pin—Cotter, Hair	2

Ref. No.	Part No.	Description	No. Used
7	93-7986	Disc—Stationary	4
8	93-7981	Disc—Rotating	3
9	93-7976	Ring—Retaining	1
10	93-7984	Gasket	1
11	93-7982	Actuator	1
12	93-7987	Spring—Extension	3
13	93-7985	Ball	3

*Not Illustrated

 
†Not Serviced Separately

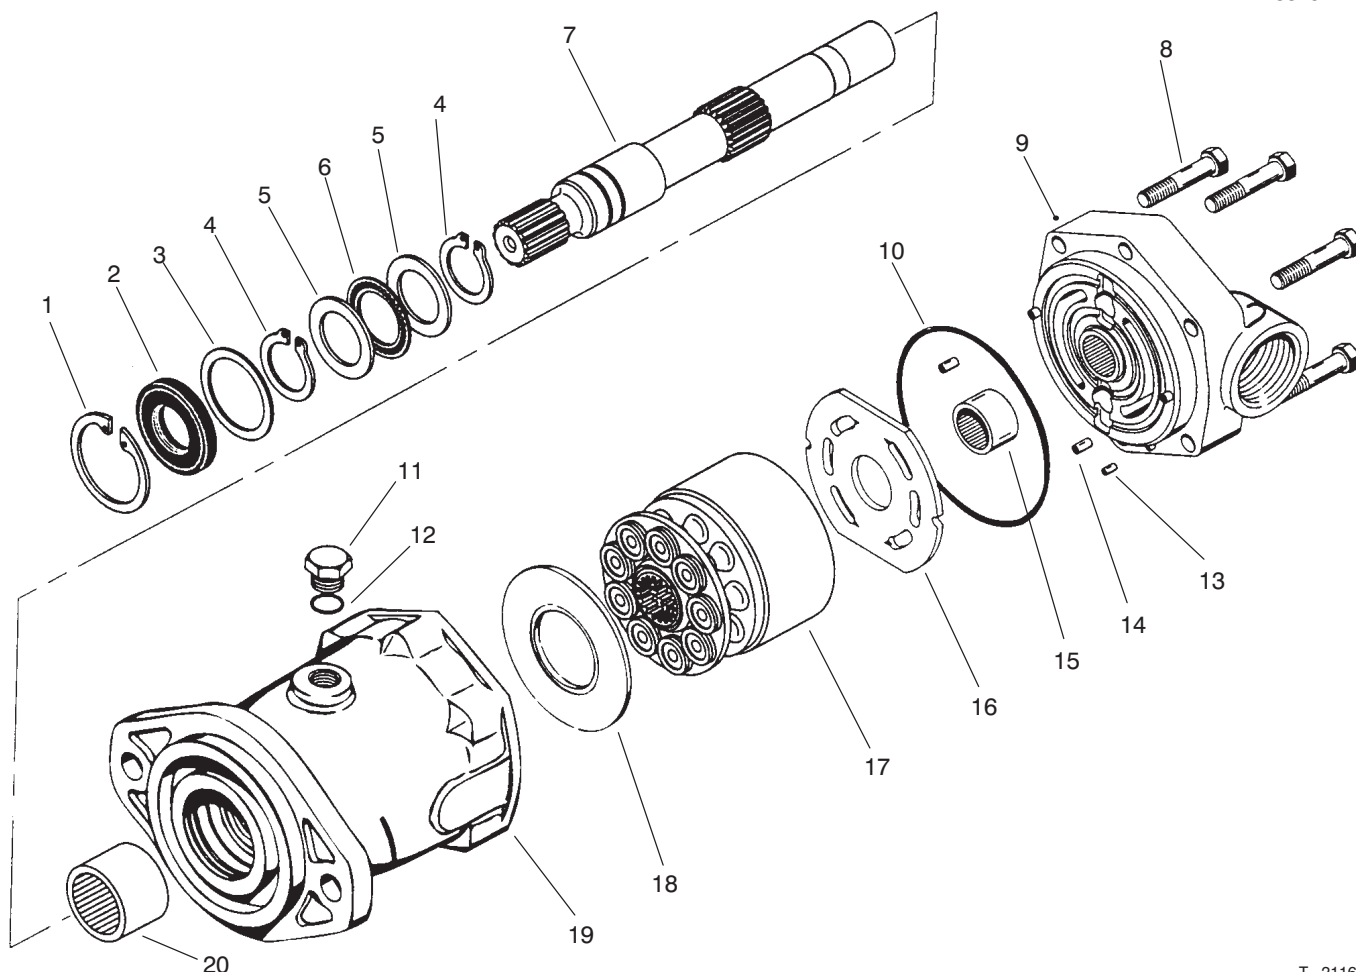

T-2116-1

HYDRAULIC MOTOR ASSEMBLY NO. 92-7385

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring—Retaining	1	12		O—Ring	1
2	94-3008	Seal—Shaft	1	13		Pin—Dowel	1
3	94-3007	Washer	1	14		Pin—Dowel	3
4	76-7000	Ring—Retaining	2	15		Bearin—Needle	1
5	76-6950	Race—Thrust	2	16	94-3003	Plate—Valve	1
6	76-6960	Bearing—Thrust	1	17	76-6910	Kit—Rotating	1
7	94-3004	Shaft—Drive, Splined	1	18	76-6970	Insert—Camplate	1
8	94-3002	Screw—HH	6	19	94-3006	Housing	1
9	94-3005	Asm— Backplate (Incl. Ref. #13-15)	1	20		(Incl. Ref. #20) Bearing—Needle	1
10	76-6980	O—Ring	1				
11	94-3009	Asm—Plug (Incl. Ref. #12)	1				

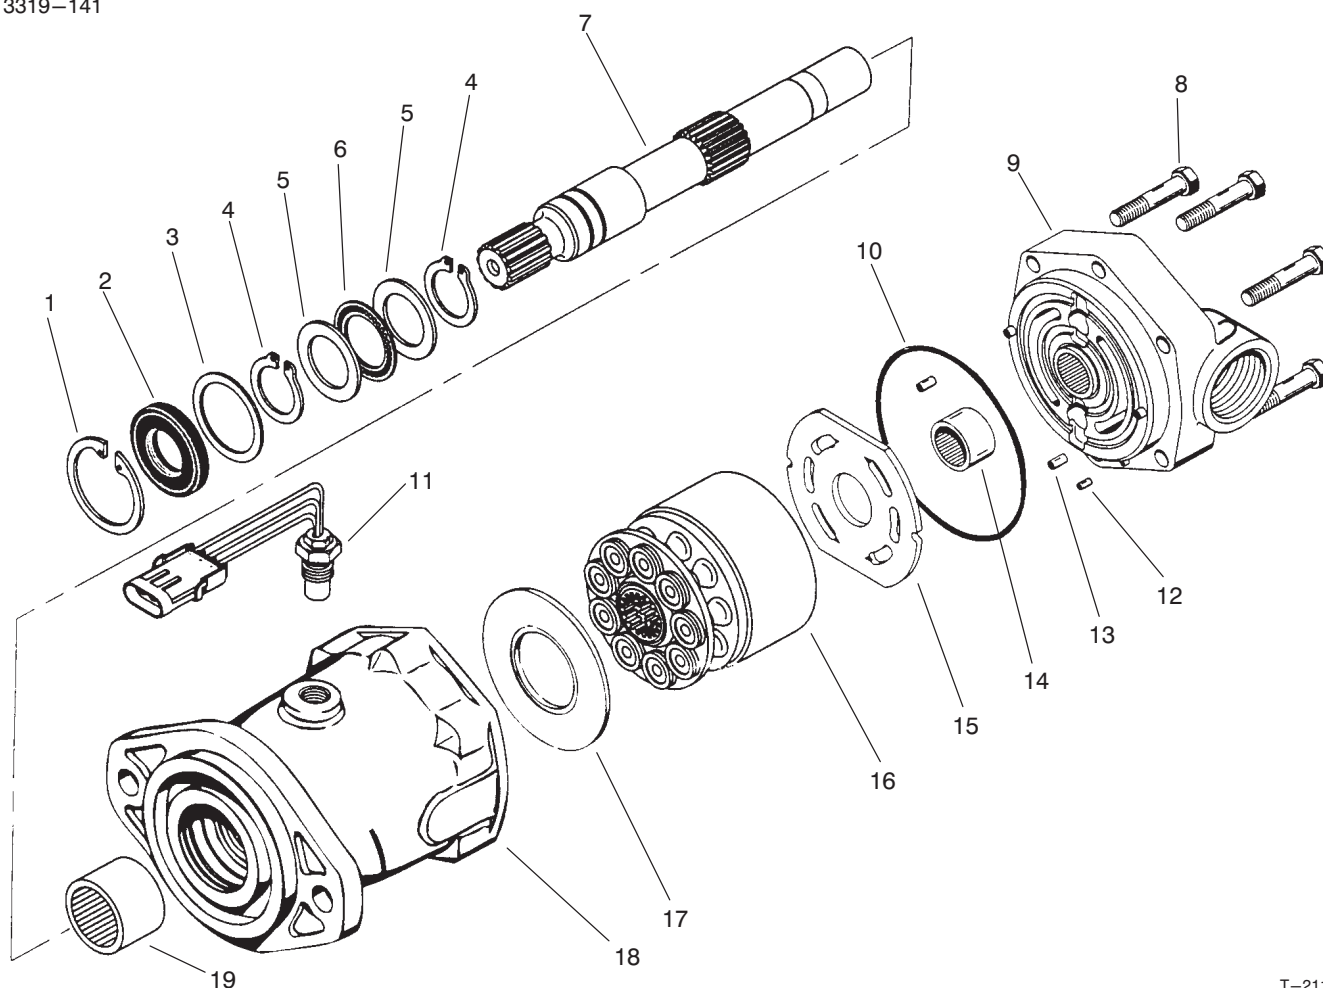 


T-2117-1

HYDRAULIC MOTOR ASM. NO. 93-7476 W/SENSOR

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1
2	94-3008	Seal-Shaft	1
3	94-3007	Washer	1
4	76-7000	Ring-Retaining	2
5	76-6950	Race-Thrust	2
6	76-6960	Bearing-Thrust	1
7	94-3004	Shaft-Drive, Splined	1
8	94-3002	Screw-HH	6
9	94-3005	Asm-Backplate (Incl. Ref. #12-14)	1
10	76-6980	O-Ring	1


Ref. No.	Part No.	Description	No. Used
11	94-3010	Sensor-Speed Pickup	1
12		Pin-Dowel	1
13		Pin-Dowel	3
14		Bearing-Needle	1
15	94-3003	Plate-Valve	1
16	76-6910	Kit-Rotating	1
17	76-6970	Insert-Camplate	1
18	94-3006	Housing (Incl. Ref. #19)	1
19		Bearing-Needle	1

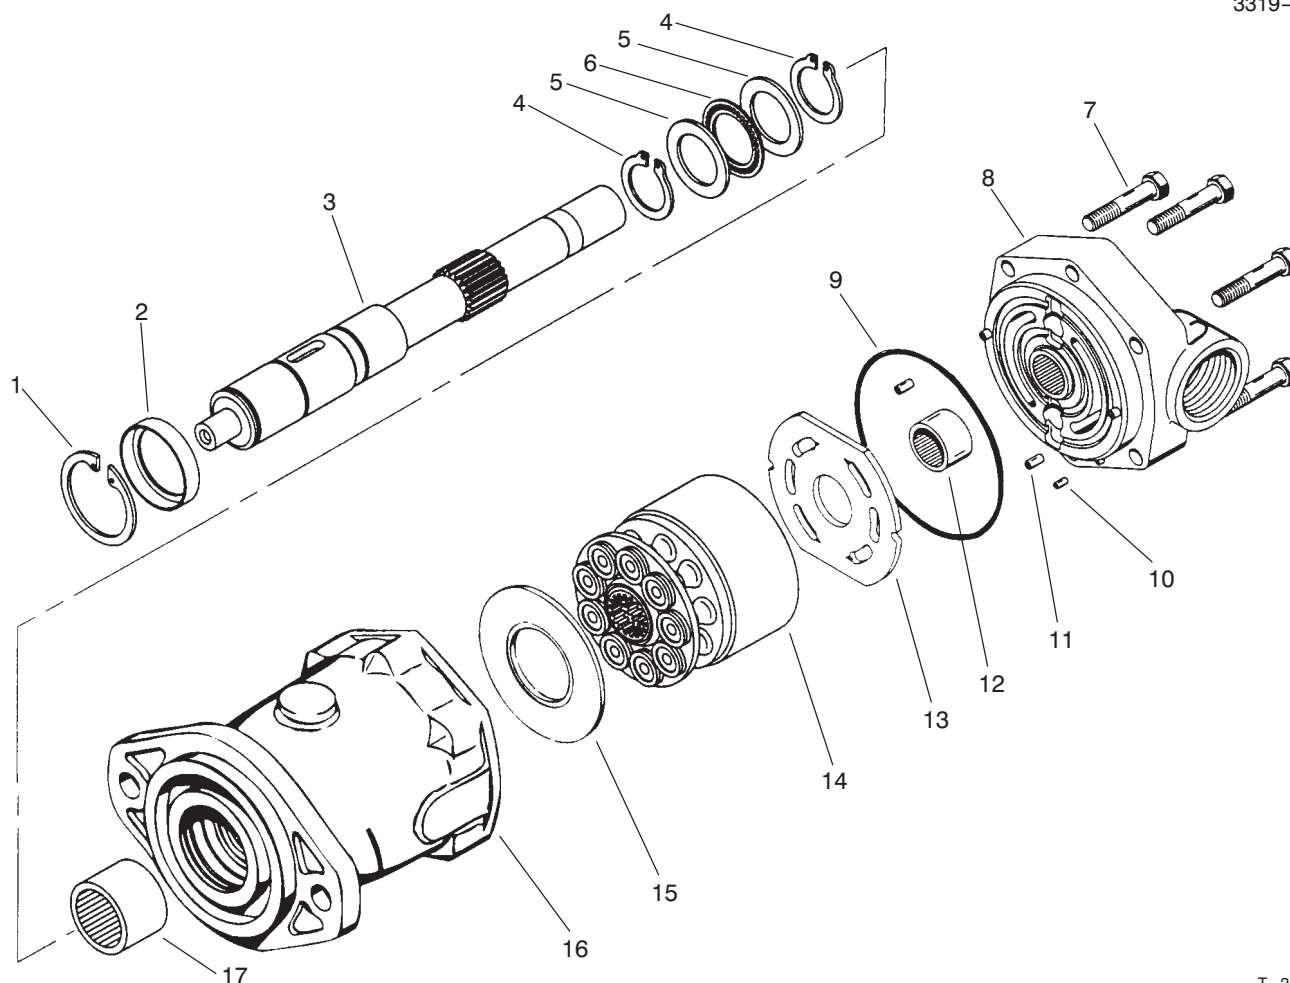 

T-2118-1

4 WD HYDRAULIC MOTOR ASM. NO. 92-7386

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring—Retaining	1	10		Pin—Dowel	3
2	76-7020	Spacer	1	11		Pin—Dowel	1
3	76-6930	Shaft—Drive, Straight	1	12		Bearing—Needle	1
4	76-7000	Ring—Retaining	2	13	94-3003	Plate—Valve	1
5	76-6950	Race—Thrust	2	14	76-6910	Kit—Rotating	1
6	76-6960	Bearing—Thrust	1	15	76-6970	Insert—Camplate	1
7	94-3002	Screw—HH	6	16	94-3001	Housing (Incl. Ref. #17)	1
8	94-3000	Asm.—Backplate (Incl. Ref. #10-12)	1	17		Bearing—Needle	1
9	76-6980	O—Ring	1				

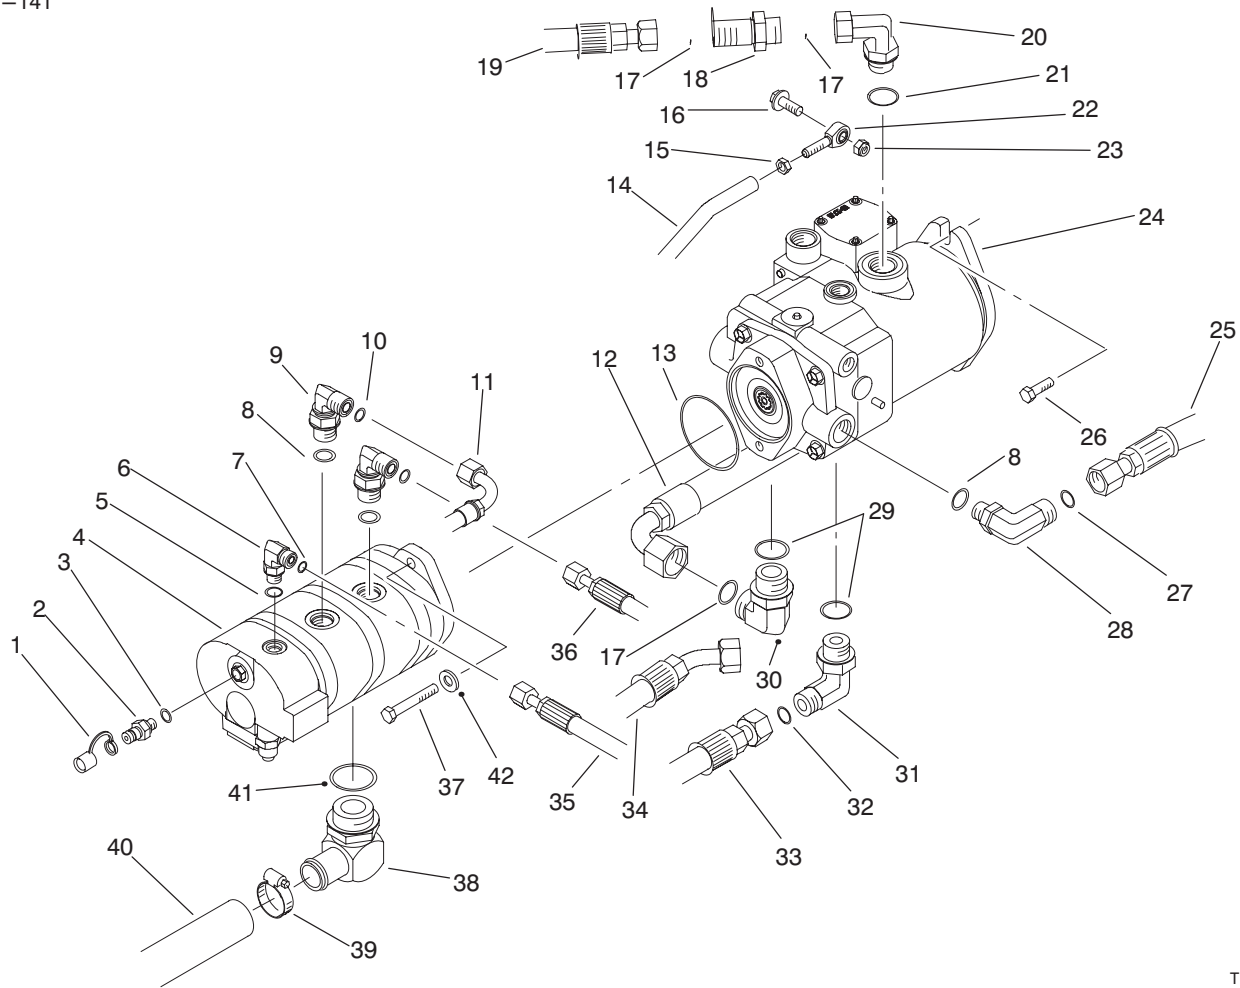 

T-2072-1

PUMP INSTALLATION ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	354-79	Cap—Dust	4
2	354-77	Fitting—Quick Connect (Incl. Ref. #3)	4
3	237-78	O—Ring	4
4	93-2175	Asm—Pump, Gear	1
5	237-42	O—Ring	1
6	340-77	Fitting—Hydraulic 90° (Incl. Ref. #5 & 7)	1
7	237-22	O—Ring	1
8	237-80	O—Ring	3
9	340-105	Fitting—Hydraulic 90° (Incl. Ref. #8 & 10)	2
10	237-30	O—Ring	2
11	92-7491	Asm—Hose	1
12	92-7484	Asm—Hose (Model No. 03801)	1
13	237-99	O—Ring	1
14	92-7531	Tube—Rod, Control	1
15	3220-3	Nut—Jam	1
16	3234-11	Screw—Flange Head	1
17	237-58	O—Ring	3
18	94-2637	Fitting—Hydraulic, Straight (Incl. Ref. #17)	1
19	92-7489	Hose—Return	1
20	94-2636	Fitting—Hydraulic 90°	1
21	237-81	O—Ring	1
22	2411-36	Bearing—Rod End	1
23	3296-59	Nut—Lock	1

Ref. No.	Part No.	Description	No. Used
24	95-3450	Pump—Piston	1
25	92-7490	Asm—Hose, Filter	1
26	82-5050	Screw—Hex. Hd.	2
27	237-65	O—Ring	1
28	340-17	Fitting—Hydraulic 90° (Incl. Ref. #8 & 27)	1
29	237-146	O—Ring	2
30	340-15	Fitting—Hydraulic 90° (Incl. Ref. #17 & 29) (Model No. 03801)	1
30	340-129	Fitting—Hydraulic 90° (Incl. Ref. #29 & 32) (Model No. 03800)	1
31	340-129	Fitting—Hydraulic 90° (Incl. Ref. #29 & 32)	1
32	340-65	O—Ring	2
33	92-7485	Asm—Hose	1
34	92-7634	Asm—Hose, Traction (Model No. 03800)	1
35	92-7622	Asm—Hose, Steering	1
36	92-7492	Asm—Hose	1
37	323-7	Screw—Hex. Hd.	2
38	92-7526	Fitting—Hydraulic, Suction	1
39	2412-111	Clamp—Hose	2
40	92-7465	Hose—Suction	1
41	237-101	O—Ring	1
42	3256-46	Washer—Flat	2

*Not Illustrated

GEAR PUMP ASSEMBLY NO. 93-2175

 3319-141

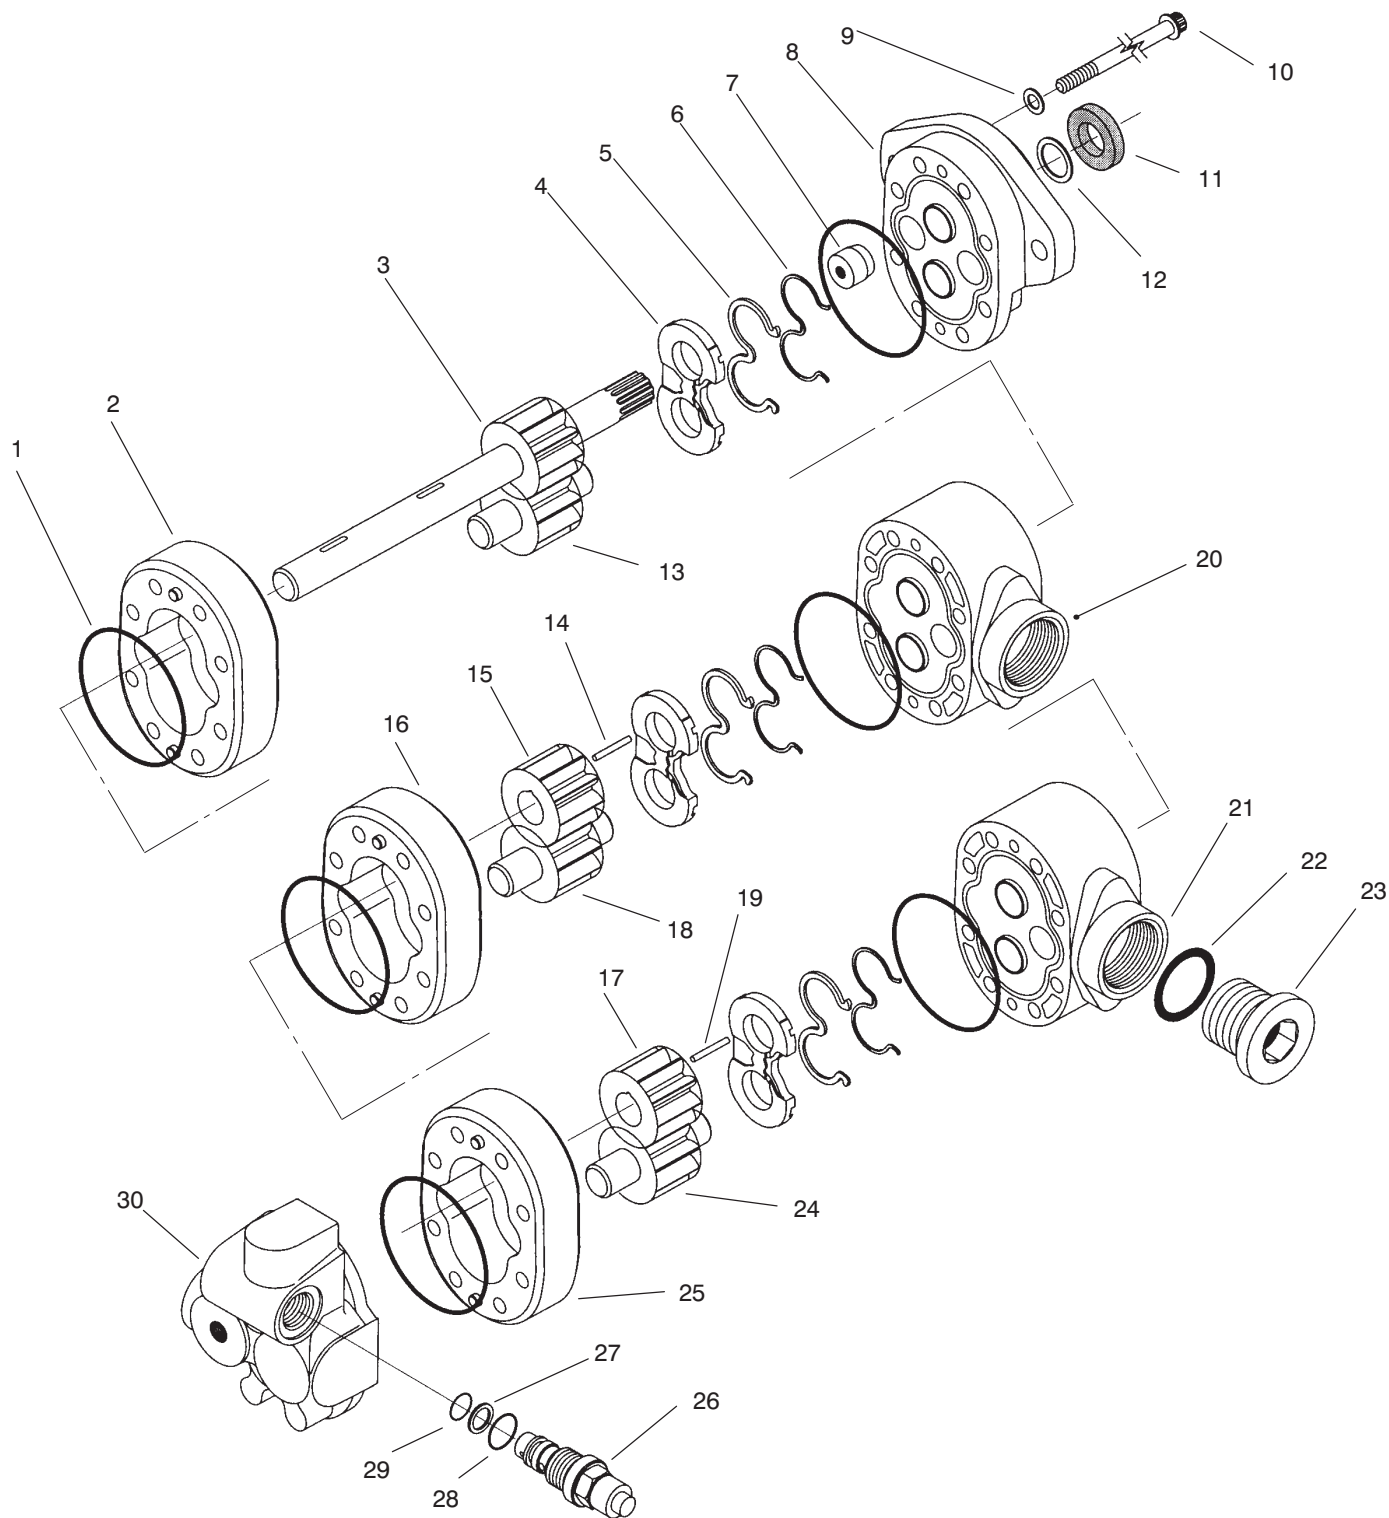

T-2138-1

GEAR PUMP ASSEMBLY NO. 93—2175


Ref. No.	Part No.	Description	No. Used
1	56—6710	O—Ring	6
†2		Body	1
†3		Asm—Gear, Drive	1
4		Plate—Wear	3
5		Seal—Pressure, Balance	3
6		Gasket—Backup	3
7	94—3011	Plug	1
†8		Asm—Plate, Front	1
9	74—8920	Washer—Copper	4
10	94—3012	Screw	8
11	49—2640	Seal—Shaft	1
12	60—5890	Washer	1
†13		Gear—Idler	1
†14		Key	1
†15		Gear	1
†16		Body	1
†17		Gear	1

Ref. No.	Part No.	Description	No. Used
†18		Gear—Idler	1
†19		Key	1
†20		Plate—Adaptor	1
†21		Plate—Adaptor	1
†22		O—Ring	1
23	94—3013	Plug	
		(Incl. Ref. #22)	1
†24		Gear—Idler	1
†25		Body	1
26	94—3014	Valve—Relief	
		(Incl. Ref. #27—29)	1
†27		Washer—Backup	1
†28		O—Ring	1
†29		O—Ring	1
†30		Asm—Backplate	1
*	94—3015	Kit—Seal	
		(Incl. Ref. #1, & 4—6)	1

*Not Illustrated

† Not Serviced Separately

 SERVO CONTROLLED PISTON PUMP ASM. NO. 95—3450 3319—141

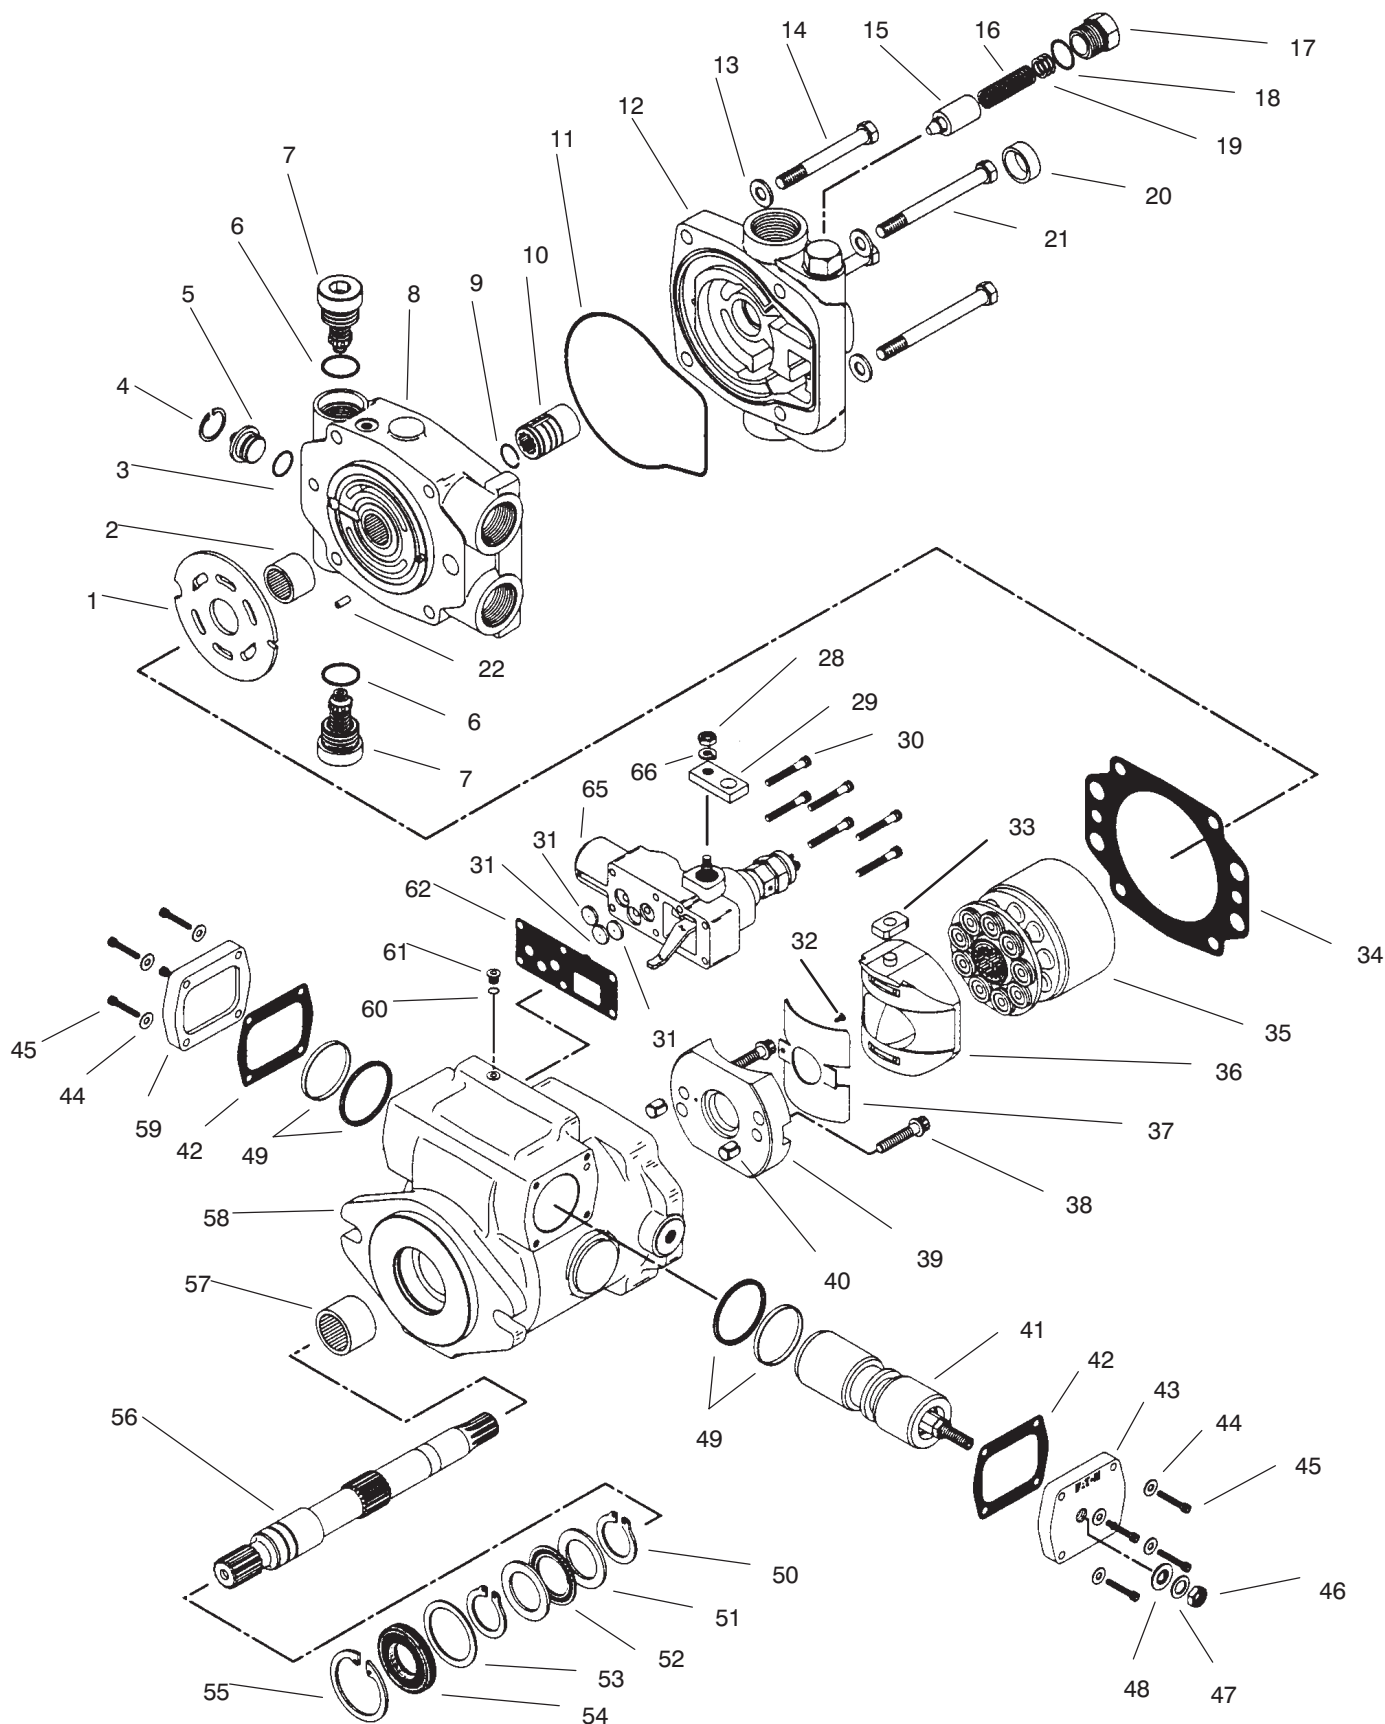


SERVO CONTROLLED PISTON PUMP ASM. NO. 95-3450

Ref. No.	Part No.	Description	No. Used
1	94-3022	Plate-Valve	1
†2		Bearing	1
3	94-3036	Ring-Quad	1
4	94-3037	Ring-Retaining	1
5	94-3038	Plug-Dump Valve	1
†6		O-Ring	2
7	94-9999	Valve-Relief	2
8	94-3016	Asm-Backplate (Incl. Ref. #2 & 22)	1
9	94-3035	Ring-Lock	1
10	94-3023	Coupler	1
†11		O-Ring-Molded	1
12	94-3017	Adaptor-Charge Relief (Incl. Ref. #15-20)	1
13	3256-24	Washer-Flat	4
14	94-3028	Screw	2
†15		Poppet	2
†16		Spring	2
†17		Plug	1
†18		O-Ring	1
†19		Washer	3
†20		Bushing	1
21	94-3029	Screw	2
†22		Pin-Roll	1
28	3217-5	Nut	1
29	94-3031	Arm-Control	1
30	3274-59	Screw-Cap	6
31	94-3040	Orifice-Valve, Control	3
†32		Screw	1
33	94-3032	Follower-Piston	1
†34		Gasket-Housing	1
35	94-3021	Asm-Kit, Rotating	1
36	94-3026	Asm-Camplate	1

Ref. No.	Part No.	Description	No. Used
†37		Bushing	1
†38		Screw	1
†39		Asm-Cradle	1
†40		Dowel-Bushing	2
41	94-3025	Asm-Piston, Servo	1
†42		Gasket-Plate, Cover	2
43	94-3034	Plate-Cover	1
44	3256-77	Washer-Flat	8
45	3274-81	Screw	8
46	3220-3	Nut-Jam	1
47	94-3030	Washer	1
48	94-3027	Washer-Seal	1
†49		Seal	2
50	76-7000	Ring-Retaining	2
51	76-6950	Race-Thrust	1
52	76-6960	Bearing-Thrust	1
53	94-3007	Washer	1
54	94-3008	Seal-Shaft	1
55	76-7010	Ring-Retaining	1
56	94-3020	Shaft-Drive	1
†57		Bearing	1
58	94-3018	Asm-Housing (Incl. Ref. #32, 37-40, 49, 57, & 60-61)	1
59	94-3033	Plate-Cover	1
†60		O-Ring	1
†61		Plug	1
†62		Gasket	1
65	94-3019	Control-Servo, Manual	1
66	3253-3	Washer-Lock	1
*	94-3039	Kit-Seal (Incl. Ref. #11, 34, 42 & 62)	1

*Not Illustrated

 † Not Serviced Separately.

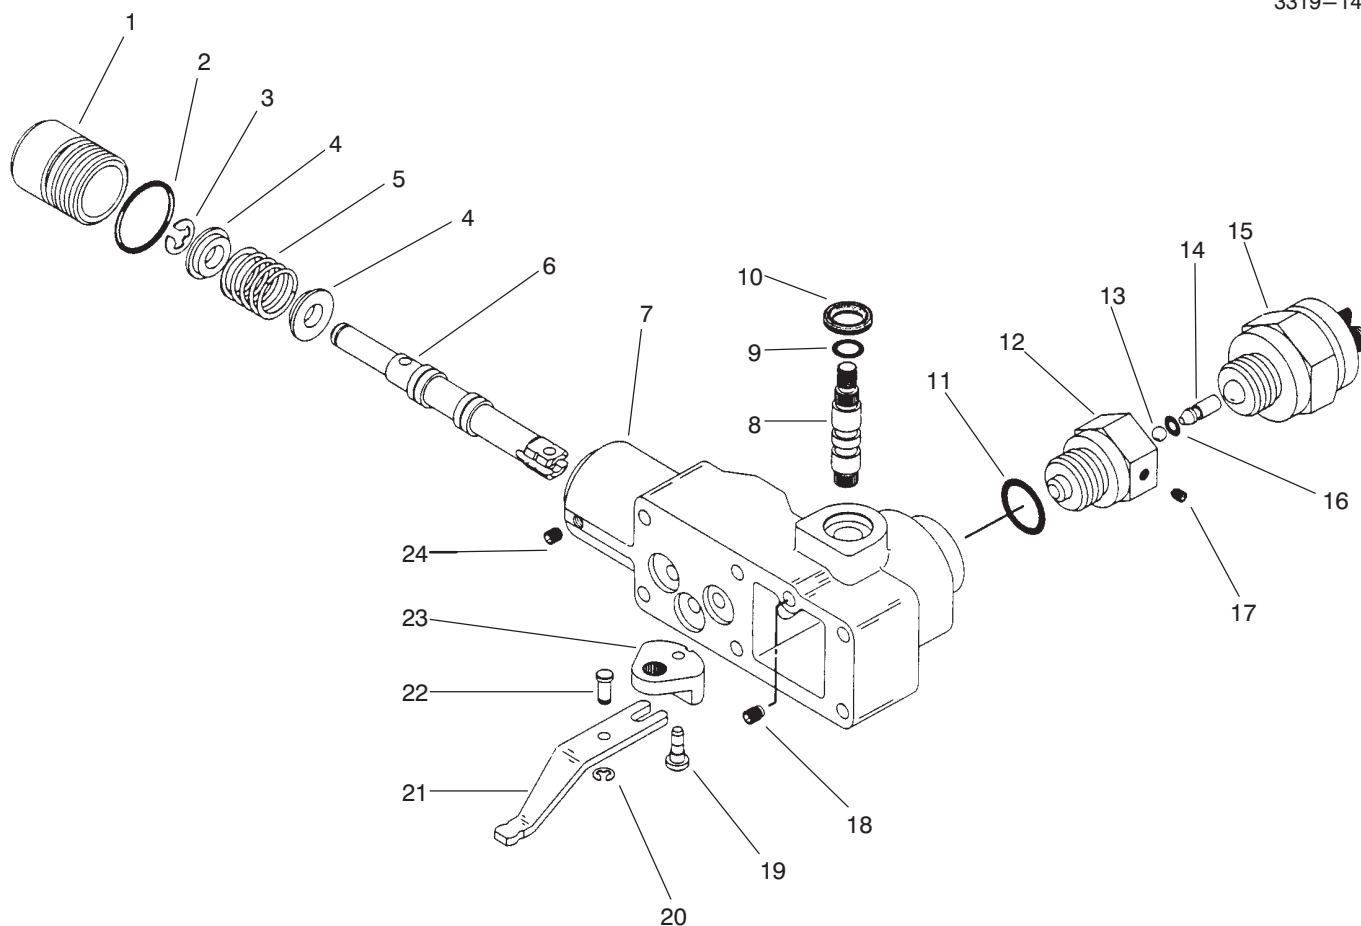


T-2119-1

MANUAL SERVO CONTROL NO. 94-3019

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Plug	1	14		Pin	1
2		O-Ring	1	15	94-3043	Switch	1
3		Ring-Retaining	1	16		O-Ring	1
4		Retainer-Spring	2	17		Screw-Set	1
5		Spring	1	18		Screw-Set	1
6		Valve-Spool	1	19		Pin	1
7		Housing-Control	1	20		Ring-Retaining	1
8		Shaft-Input	1	21		Link	1
9		O-Ring	1	22		Pin-Dowel	1
10		Seal-Wiper	1	23		Crank-Bell	1
11		O-Ring	1	24		Screw-Set	1
12		Adaptor	1	*	94-3044	Kit-Seal	1
13		Ball	1			(Incl. Ref. #2, 9-11 & 16)	

 *Not Illustrated

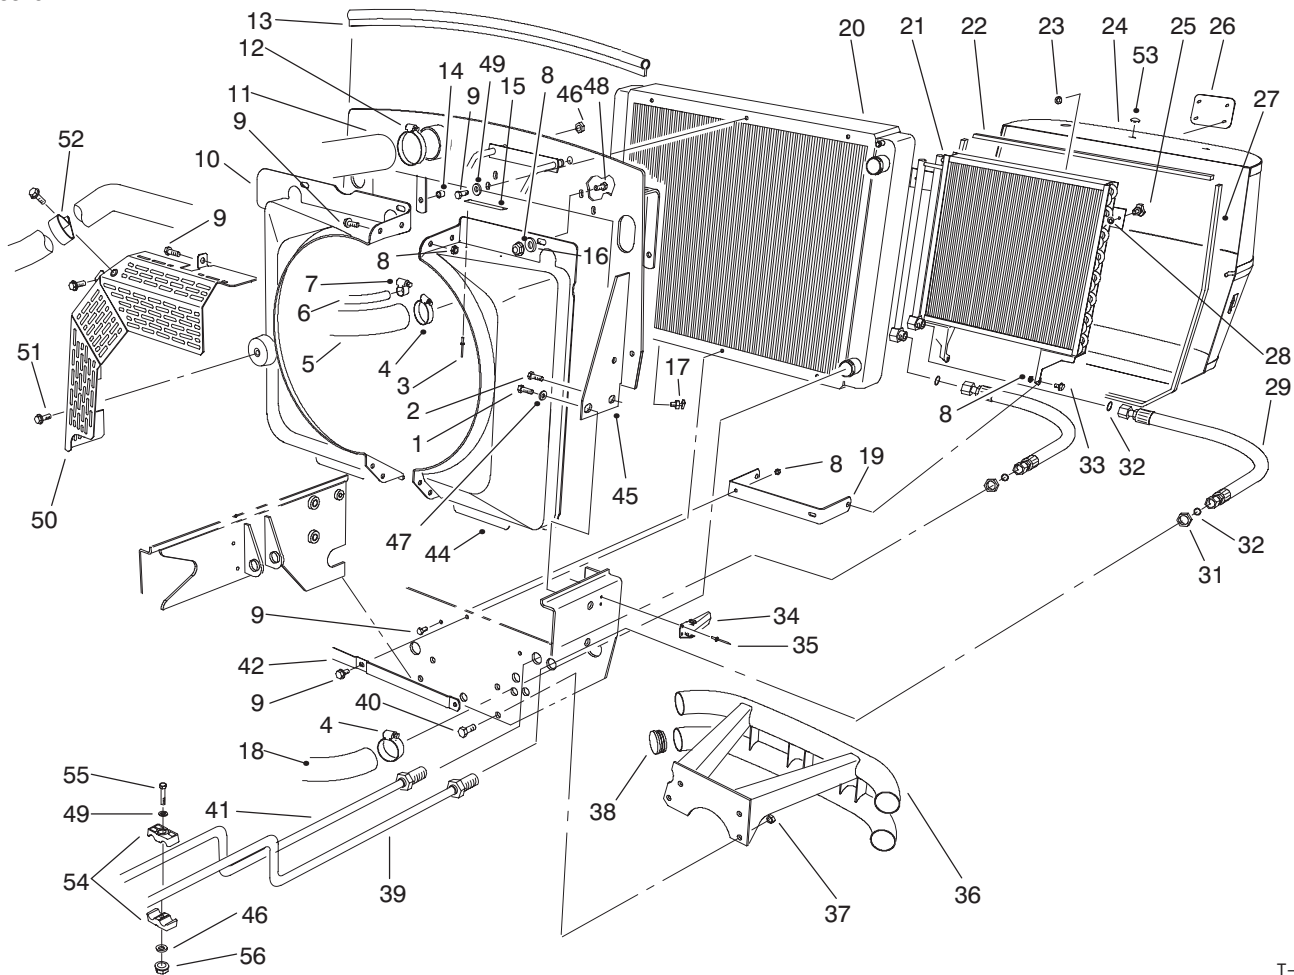


T-2073-4

RADIATOR & SHROUD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	33108-025	Screw—Hex. Hd. Flange	2
2	33105-030	Screw—Hex. Hd. Flange	2
3	3290-271	Rivet—Pop	2
4	2412-3	Clamp—Hose	2
5	93-4215	Hose—Radiator, Upper Rear	1
6	92-7424	Hose—Radiator, Overflow	1
7	2412-36	Clamp—Hose	1
8	32128-20	Nut—Flange	4
9	3234-5	Screw—Flange	10
10	92-7374	Shroud—Fan RH	1
11	93-7584	Hose—Intake	1
12	2412-125	Clamp—Hose	1
13	93-7553	Seal—Hood	1
14	32148-10	Nut—Clinch	2
15	93-6681	Plate—Warning	1
15	94-2646	Decal—Warning (Europe)	1
15	94-4577	Decal—Warning (Japan)	1
16	3256-56	Washer—Flat	3
17	304-46	Nut—Drain Cock	1
18	92-7463	Hose—Radiator, Lower	1
19	92-7516	Bracket—Support, Cooler	1
20	74-3410	Asm—Radiator	1
21	82-3740	Cooler—Oil	1
22	92-7631	Sealstrip—Screen	1
23	94-2638	Nut—Push On	4
24	92-7505	Screen	1
25	77-3620	Retainer—Cover	2


Ref. No.	Part No.	Description	No. Used
26	93-6028	Plate—Logo, Toro	1
27	93-4208	Strip—Seal, Screen	1
28	32151-72	Retainer—Push On	2
29	92-7535	Asm—Hose, Oil Cooler	2
31	340-74	Nut—Bulkhead	2
32	237-65	O—Ring	4
33	37-8771	Bolt—Shoulder	2
34	69-3020	Latch—Draw	2
35	3269-4	Rivet—Pop	4
36	94-3084	Bumper (Model 03800)	1
36	92-7623	Bumper (Model 03801)	1
37	3296-23	Nut—Lock	4
38	2410-42	Cap—Bumper (Model 03800)	2
38	2410-42	Cap—Bumper (Model 03801)	4
39	92-7493	Asm—Tube, Filter	1
40	325-5	Screw—Hex. Hd.	2
41	92-7558	Asm—Tube, Cooler	1
42	92-7416	Strap—Radiator	1
44	92-7375	Shroud—Fan LH	1
45	92-7388	Support—Radiator	1
46	3296-23	Nut—Lock	2
47	3256-27	Washer—Flat	2
48	3230-2	Screw—Carriage	3
49	3256-23	Washer—Flat	3
50	94-2646	Guard—Fan (Europe)	1

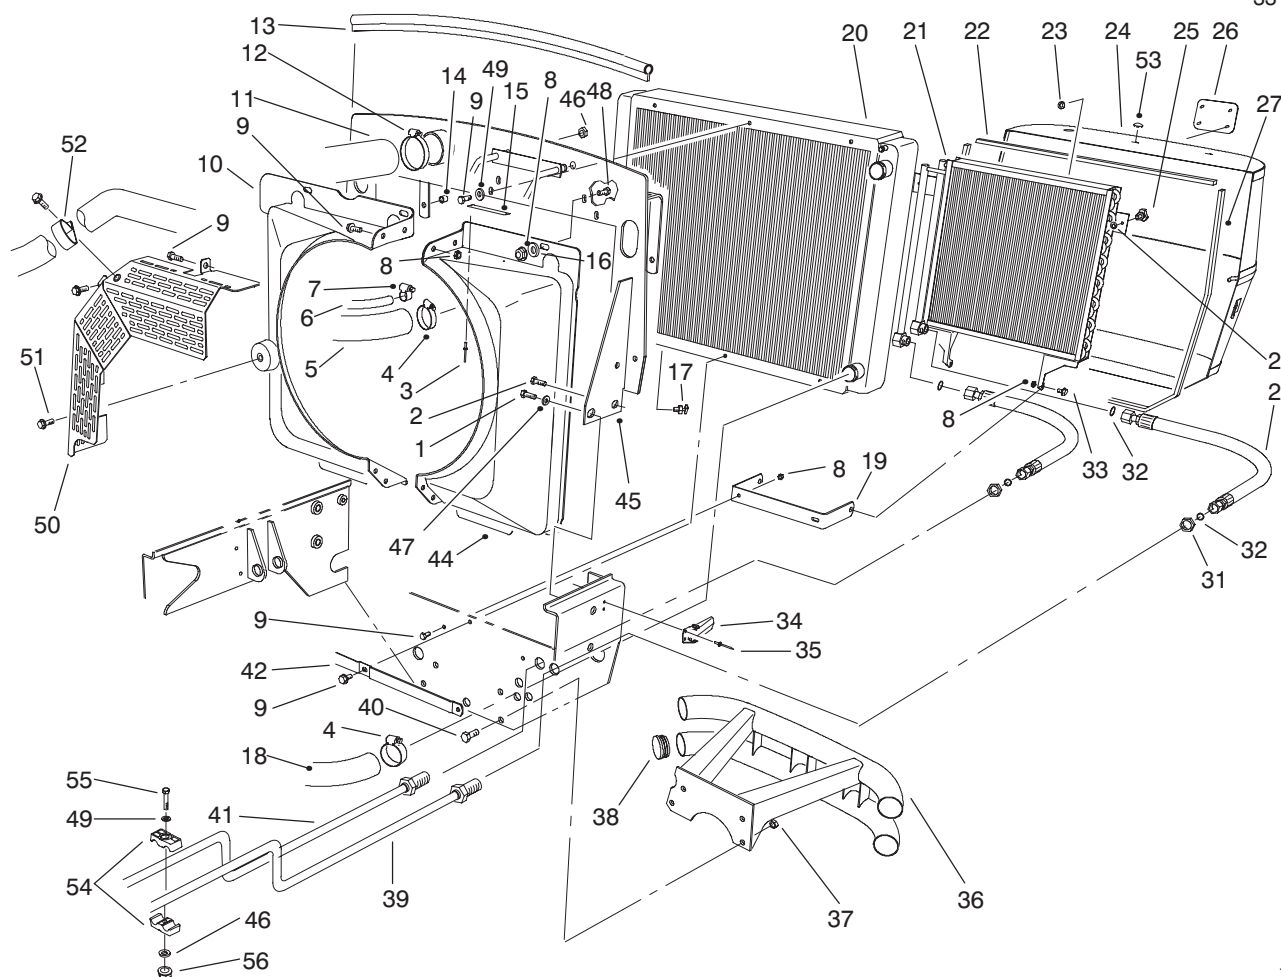 

T-2073-4

RADIATOR & SHROUD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
51	33104-020	Screw-HHF (Europe)	3	54	94-8105	Clamp-Tube	2
52	2412-96	Clamp-R (Europe)	1	55	322-9	Screw-HH	1
53	2410-64	Button-Plug	3	56	3296-47	Nut-Lock	1

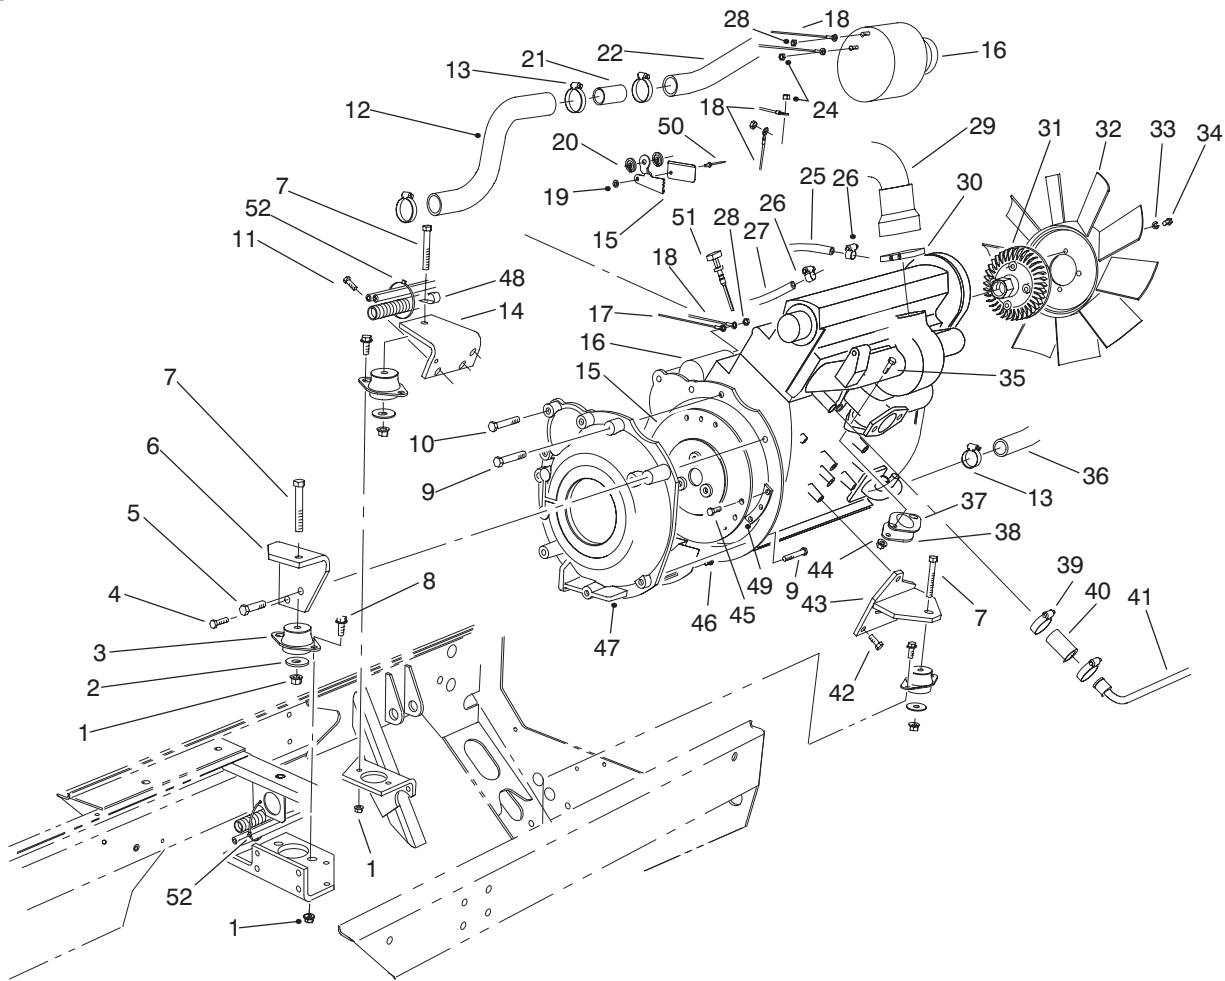 


T-2074-1

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33005-00	Nut-Hex. Flange	9	26	2412-108	Clamp-Hose	2
2	87-5100	Washer-Snubbing	3	27	63-7627	Hose-Fuel	1
3	53-9681	Mount-Rubber	3	28	48-7930	Nut-Hex.	2
4	48-9470	Screw	1	29	94-2624	Hose-Manifold	1
5	48-7840	Screw-Hex. Hd.	1	30	2412-125	Clamp-Hose	1
6	92-7425	Support-Mount, Engine	1	31	92-7466	Clutch-Fan	1
7	33105-070	Screw-Hex. Hd. Flange	3	32	74-3650	Fan-Engine	1
8	33105-030	Screw-Hex. Hd. Flange	6	35	33104-020	Screw-Hex. Hd. Flange	2
9	48-7570	Screw-Hex. Hd.	3	36	92-7463	Hose-Radiator, Lower	1
10	48-7810	Screw-Hex. Hd.	3	37	77-3700	Gasket-Exhaust, Manifold	1
11	66-3160	Screw	4	38	92-7382	Cover-Manifold	1
12	94-1418	Hose-Radiator, Upper	1	39	2412-129	Clamp-Hose	4
13	2412-3	Clamp-Hose	4	40	74-6490	Hose-Water Line	2
14	92-7429	Mount-Motor, RH	1	41	92-7381	Tube-Water, Return	1
15	94-1421	Coupling-Center, Spring	1	42	48-7780	Screw-Hex. Hd.	3
16	93-4233	Asm-Engine	1	43	92-7426	Mount-Motor	1
17	75-1370	Cable-Battery, Positive	1	44	33004-00	Nut-Hex. Flange	2
18	94-3090	Harness-Wire, Main	1	45	48-7700	Screw-Hex. Hd.	6
*	94-9967	Circuit Breaker-50 Amp	1	46	48-7610	Screw-Hex. Hd.	3
*	94-9968	Circuit Breaker-100 Amp	1	47	82-5120	Adapter-Pump To Engine	1
19	3256-49	Washer-Flat	1	48	2412-150	J-Clip	1
20	86-2990	Mount-Cable, Throttle	2	49	94-1422	Spacer-Coupler	3
21	93-7594	Spacer-Tubular	1	50	3290-282	Rivet-Pop	1
22	93-4215	Hose-Radiator, Upper Rear	1	51	93-9176	Dipstick-Peugeot	1
24	48-7880	Nut	3	52	3290-378	Tie-Cable	2
25	92-7521	Hose-Fuel	1				

 *Not Illustrated

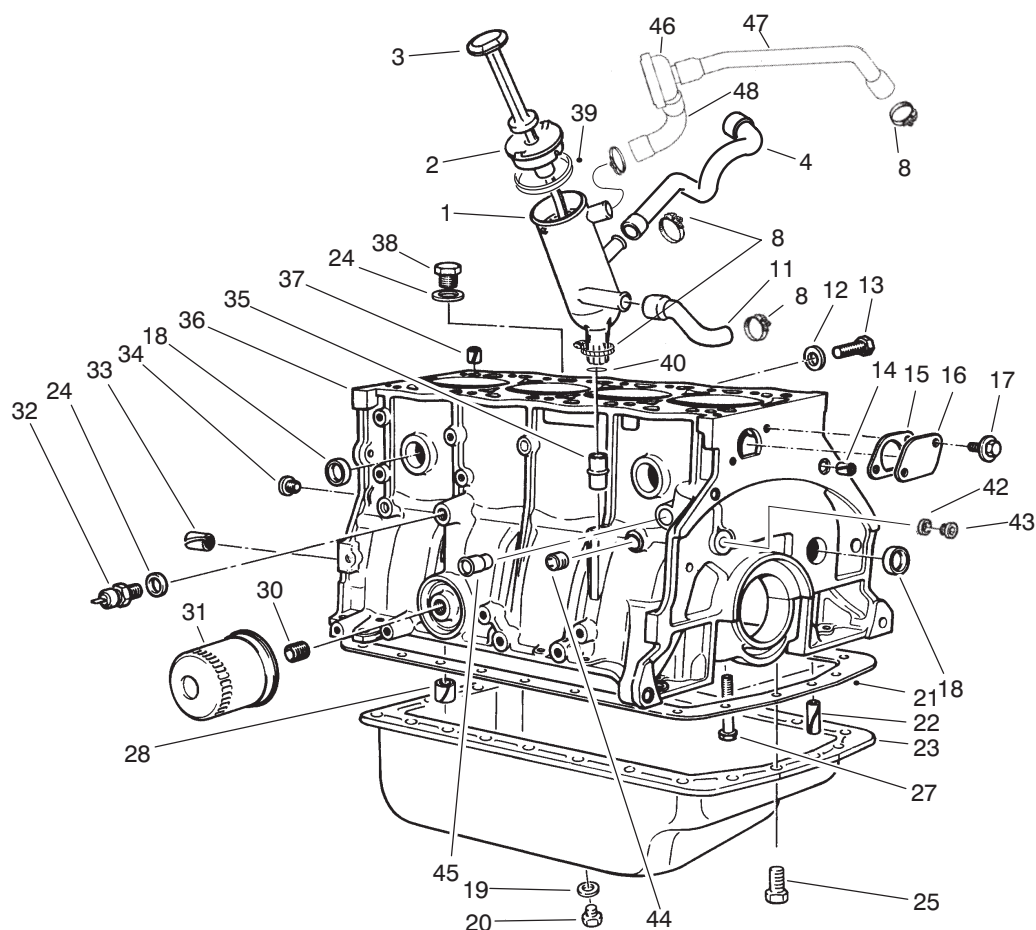


T-2142-3

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3181	Oil Filler (Incl. Ref. 39)	1	27	74-7930	Screw-Bearing Cap	10
2	94-3182	Plug	1	28	74-7940	Bushing-Spring	1
3	93-9176	Dipstick-Oil	1	29	74-7950	Screw-Plate	6
4	94-3184	Union	1	30	74-7960	Stud-Filter	1
8	2412-129	Clamp-Hose	8	31	74-7970	Filter-Oil	1
11	74-7770	Hose-Crankcase	1	32	94-3180	Switch-Pressure	1
12	74-7780	Gasket	1	33	74-7990	Pin-Spring	4
13	74-7790	Screw	1	34	74-8000	Plug	2
14	94-3102	Pin	2	35	74-8010	Guide-Dipstick	1
15	74-7810	Gasket-Plate	1	36	94-3100	Asm-Short Block (Incl. Pistons next page)	1
16	74-7820	Plate	1	37	74-8030	Pin-Spring	1
17	94-3112	Screw-Washer Hd.	2	38	94-3105	Plug-Drain	1
18	74-7840	Plug-27 mm Dia.	8	39	94-3183	Gasket	1
*	94-3108	Plug-27.5 mm Dia.	8	40	94-3186	O-Ring	1
*	94-3109	Plug-28.5 mm Dia.	9	42	94-3106	Gasket	2
19	74-7320	Gasket	1	43	94-3104	Plug-Threaded	2
20	74-7310	Plug-Threaded	1	44	94-3103	Plug-Threaded	1
21	74-7380	Gasket-Oil Pan	1	45	94-3110	Stud	1
22	94-3111	Pin-Groove	2	46	94-3190	PCV Valve	1
23	74-7300	Pan-Oil	1	47	94-3192	Union	1
24	94-3107	Gasket	2	48	94-3191	Union	1
25	74-7330	Screw-Hex. Hd.	23	*	94-3101	Gasket Set (Without Head Gasket)	1
26	77-3790	Plug-Drain	1				

 *Not Illustrated

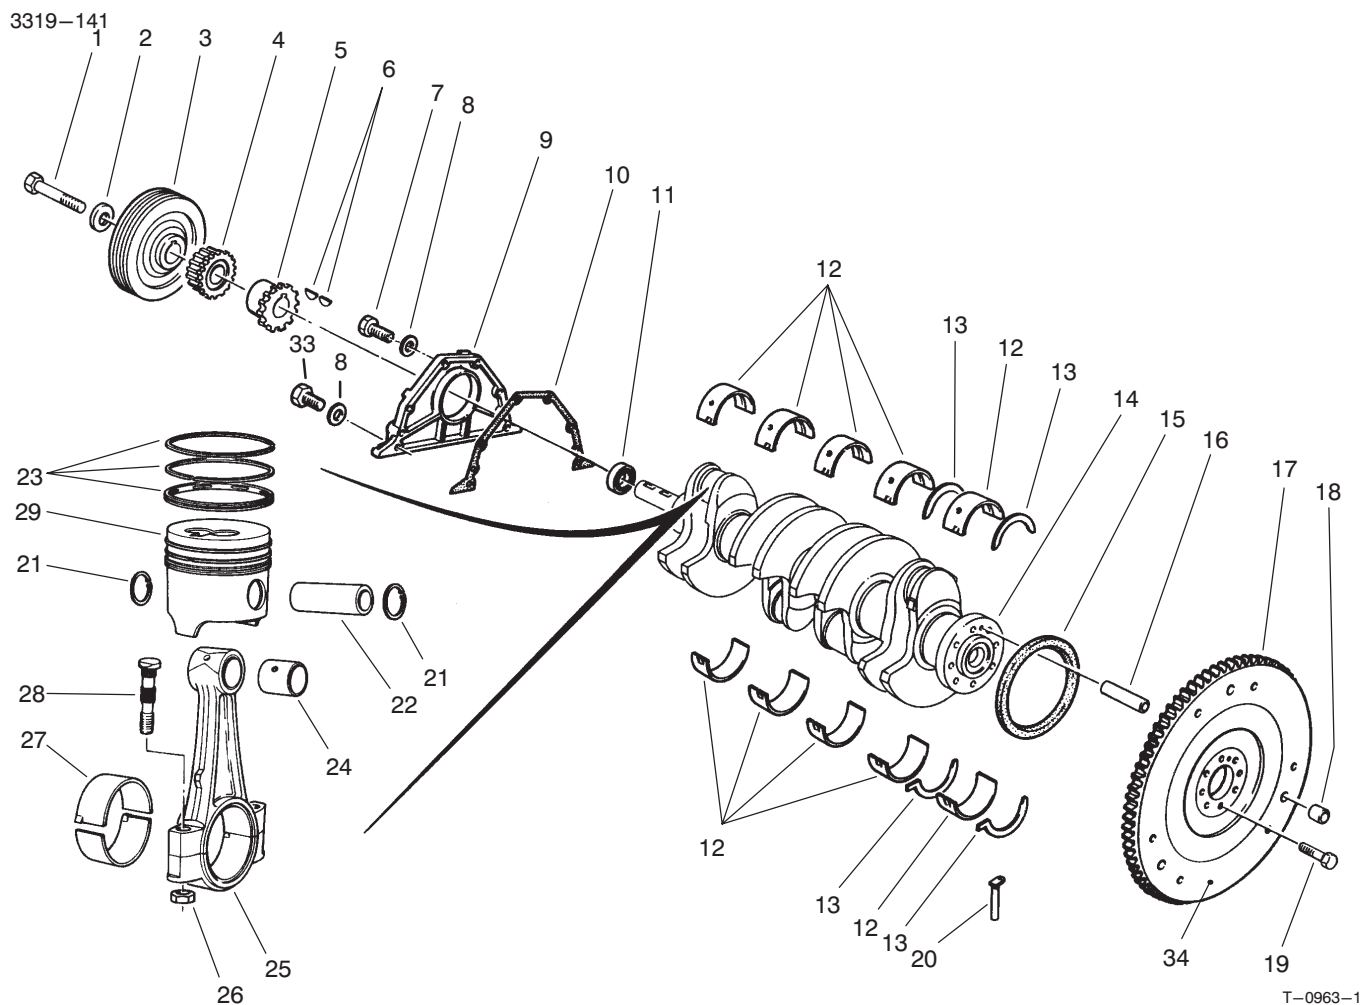


T-0963-1

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3145	Screw-Hex. Hd.	1
2	94-3146	Washer	1
3	94-3144	Pulley	1
4	74-8100	Gear-Pinion	1
5	95-3485	Sprocket-Oil Pump	1
6	74-8120	Key-Woodruff	2
7	94-3150	Screw-Hex. Hd.	4
8	94-3151	Washer	6
9	74-8140	Cover	1
10	74-8150	Gasket-Cover	1
11	94-3148	Seal-Shaft	1
12	74-8170	Bearing Set (Std.)	2
*	94-3140	Bearing Set (.30mm OS)	2
13	94-3141	Thrust Bearing Set (Std.)	2
*	94-3142	Thrust Bearing Set (.10mm OS)	2
*	74-8210	Thrust Bearing Set (.15mm OS)	2
*	94-3143	Thrust Bearing Set (.20mm OS)	2
14	74-8230	Crankshaft	1
15	94-3147	Seal	1
16	74-7990	Pin	1
17	94-3149	Gear-Flywheel	1
18	74-8270	Pin	3
19	95-3484	Screw-Hex. Hd.	8
20	74-8290	Seal-#1 Bearing Cap	2
21	74-8300	Clip-Piston Pin	8

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
22	74-8310	Pin-Piston	4
23	94-3158	Piston Ring Set Std.	4
*	74-8320	Piston Ring Set-0.20 mm	4
*	74-8330	Piston Ring Set-0.50 mm	4
*	74-8340	Piston Ring Set-0.80 mm	4
24	94-3154	Bushing-Sleeve	4
25	94-3153	Rod-Connecting	4
26		Nut-Hex.	8
27	74-8380	Bearing-Connecting Rod (Std.)	4
*	94-3155	Bearing-Connecting Rod (49.7mm ID)	4
28	94-3156	Bolt-Connecting Rod (Incl. Ref. #26)	8
29	94-3157	Piston Set-Std. (Incl. Ref. #21-23)	1
29	74-8420	Piston Set-Stage #1 (83.13mm OD) (Incl. Ref. #21-23)	1
*	74-8430	Piston Set-Stage #2 (83.43mm OD) (Incl. Ref. #21-23)	1
*	74-8440	Piston Set-Stage #3 (83.73mm OD) (Incl. Ref. #21-23)	1
33	94-3152	Screw-Hex. Hd.	2
34	74-8260	Flywheel	1

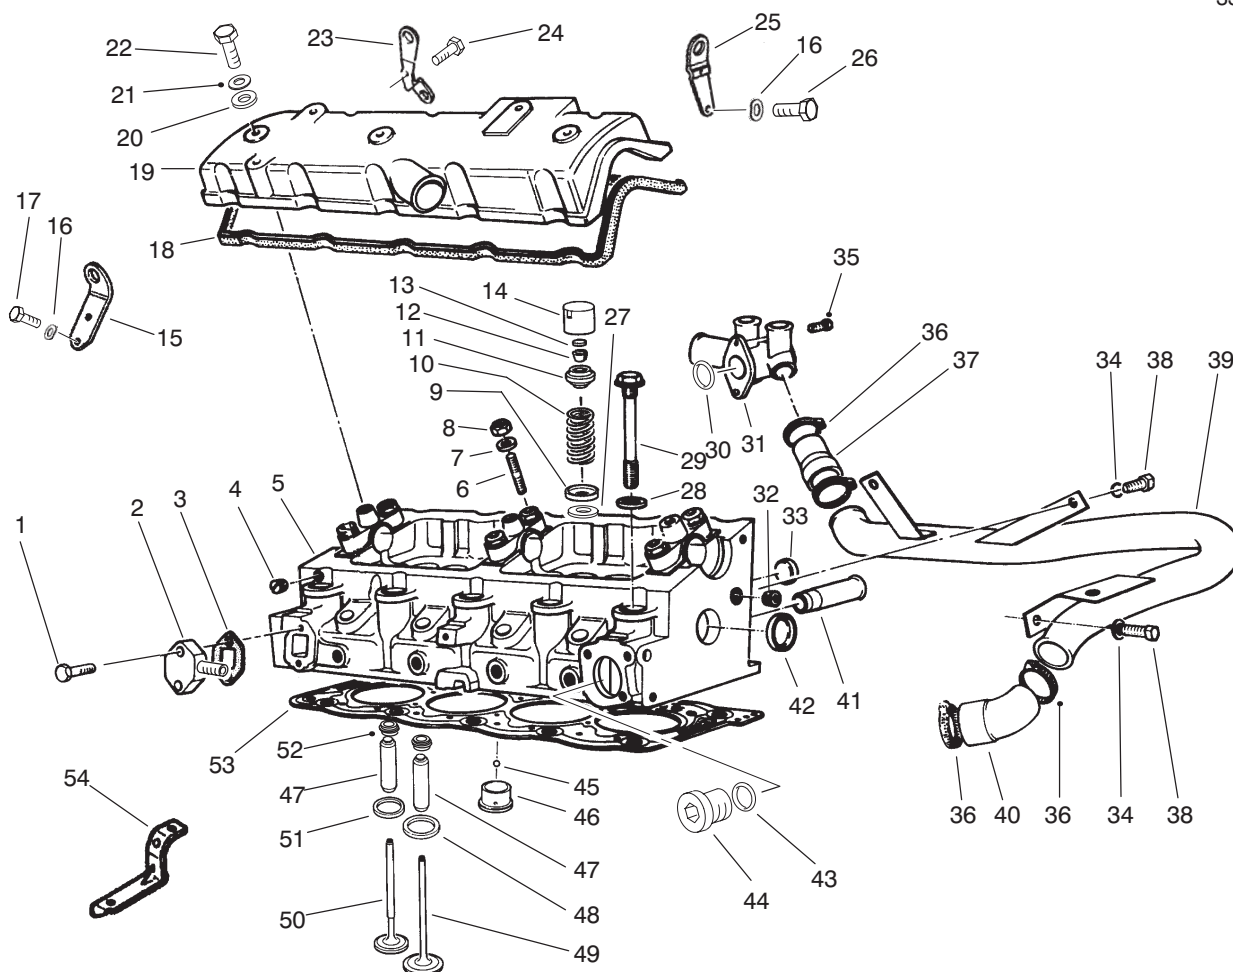 


T-2148-4

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3123	Screw—Hex. Hd.	2	13	74-6720	Insert—Valve (2.400mm)	8
2	94-3117	Plate	1	*	74-6730	Insert—Valve (2.425mm)	8
3	94-3116	Gasket	1	*	74-6740	Insert—Valve (2.450mm)	8
4	74-7600	Plug	4	*	74-6750	Insert—Valve (2.475mm)	8
5	94-3113	Asm—Cylinder Head	1	*	74-6760	Insert—Valve (2.500mm)	8
6	76-5130	Stud	6	*	74-6770	Insert—Valve (2.525mm)	8
7	74-8900	Washer—Flat	6	*	74-6780	Insert—Valve (2.550mm)	8
8	94-3115	Nut—Lock	6	*	74-6790	Insert—Valve (2.575mm)	8
9	74-6570	Cup—Lower Valve Spring	8	*	74-6800	Insert—Valve (2.600mm)	8
10	74-6560	Spring—Valve	8	*	74-6810	Insert—Valve (2.625mm)	8
11	74-6550	Cup—Upper Valve Spring	8	*	74-6820	Insert—Valve (2.650mm)	8
12	74-7240	Collar—Split	16	*	74-6830	Insert—Valve (2.675mm)	8
13	74-6580	Insert—Valve (1.650mm)	8	*	74-6840	Insert—Valve (2.700mm)	8
*	74-6590	Insert—Valve (1.725mm)	8	*	74-6850	Insert—Valve (2.725mm)	8
*	74-6600	Insert—Valve (1.800mm)	8	*	74-6860	Insert—Valve (2.750mm)	8
*	74-6610	Insert—Valve (1.900mm)	8	*	74-6870	Insert—Valve (2.775mm)	8
*	74-6620	Insert—Valve (1.975mm)	8	*	74-6880	Insert—Valve (2.800mm)	8
*	74-6630	Insert—Valve (2.050mm)	8	*	74-6890	Insert—Valve (2.825mm)	8
*	74-6640	Insert—Valve (2.125mm)	8	*	74-6900	Insert—Valve (2.850mm)	8
*	74-6650	Insert—Valve (2.225mm)	8	*	74-6910	Insert—Valve (2.875mm)	8
*	74-6660	Insert—Valve (2.250mm)	8	*	74-6920	Insert—Valve (2.900mm)	8
*	74-6670	Insert—Valve (2.275mm)	8	*	74-6930	Insert—Valve (2.925mm)	8
*	74-6680	Insert—Valve (2.300mm)	8	*	74-6940	Insert—Valve (2.950mm)	8
*	74-6690	Insert—Valve (2.325mm)	8	*	74-6950	Insert—Valve (2.975mm)	8
*	74-6700	Insert—Valve (2.350mm)	8	*	74-6960	Insert—Valve (3.000mm)	8
*	74-6710	Insert—Valve (2.375mm)	8	*	74-6970	Insert—Valve (3.025mm)	8

 *Not Illustrated

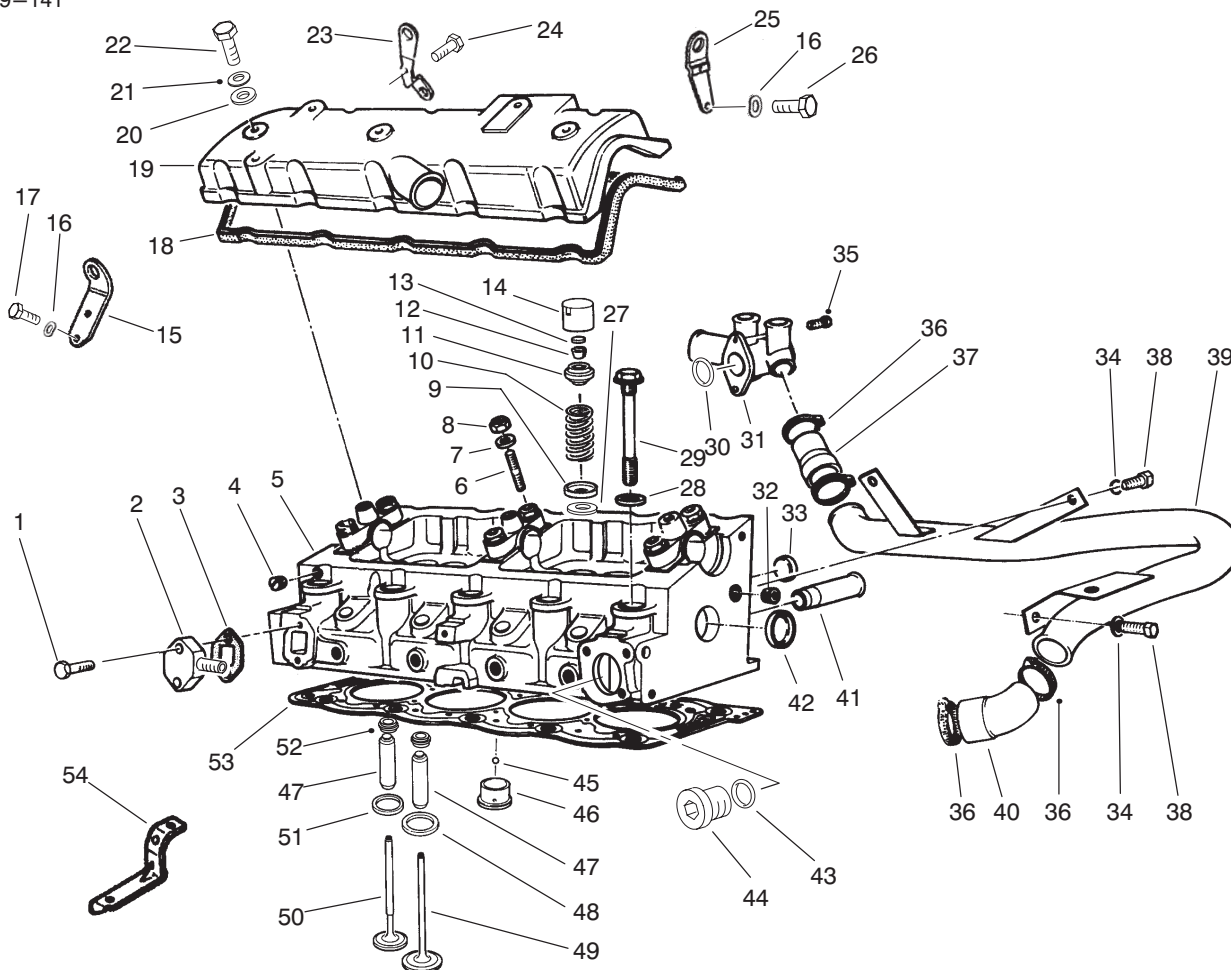


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
13	74-6980	Insert-Valve (3.050mm)	8
*	74-6990	Insert-Valve (3.075mm)	8
*	74-7000	Insert-Valve (3.100mm)	8
*	74-7010	Insert-Valve (3.125mm)	8
*	74-7020	Insert-Valve (3.150mm)	8
*	74-7030	Insert-Valve (3.175mm)	8
*	74-7040	Insert-Valve (3.200mm)	8
*	74-7050	Insert-Valve (3.225mm)	8
*	74-7060	Insert-Valve (3.250mm)	8
*	74-7070	Insert-Valve (3.275mm)	8
*	74-7080	Insert-Valve (3.300mm)	8
*	74-7090	Insert-Valve (3.325mm)	8
*	74-7100	Insert-Valve (3.350mm)	8
*	74-7110	Insert-Valve (3.375mm)	8
*	74-7120	Insert-Valve (3.400mm)	8
*	74-7130	Insert-Valve (3.425mm)	8
*	74-7140	Insert-Valve (3.450mm)	8
*	74-7150	Insert-Valve (3.475mm)	8
*	74-7160	Insert-Valve (3.500mm)	8
*	74-7170	Insert-Valve (3.550mm)	8
*	74-7180	Insert-Valve (3.625mm)	8
*	74-7190	Insert-Valve (3.700mm)	8
*	74-7200	Insert-Valve (3.775mm)	8
*	74-7210	Insert-Valve (3.850mm)	8
*	74-7220	Insert-Valve (3.925mm)	8
*	74-7230	Insert-Valve (4.000mm)	8

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
14	74-6540	Tappet-Valve	8
15	94-3135	Bracket-Lifting	1
16	74-7560	Washer-Spring	3
17	76-5440	Screw	2
18	74-7630	Gasket-Valve Cover	1
19	74-7640	Cover-Valve	1
20	74-7650	Washer-Flat	3
21	94-3125	Washer	3
22	94-3124	Bolt-Valve Cover	3
23	94-3136	Bracket-Lifting	1
24	94-3138	Screw	1
25	94-3137	Bracket-Lifting	1
26	94-3139	Screw	1
27	94-3174	Washer	8
28	74-7270	Washer-Flat	10
29	74-7260	Bolt-Head	10
30	94-3197	O-Ring	1
31	94-3196	Inlet-Water	1
32	94-3118	Plug	1
33	74-7840	Plug-27 mm Dia.	2
*	94-3108	Plug-27.5 mm Dia.	2
*	94-3109	Plug-28.5 mm Dia.	2
34	68-9420	Washer-Lock	3
35	94-3198	Screw	2
36	2412-129	Clamp-Hose	4
37	94-3200	Hose-By-Pass	1

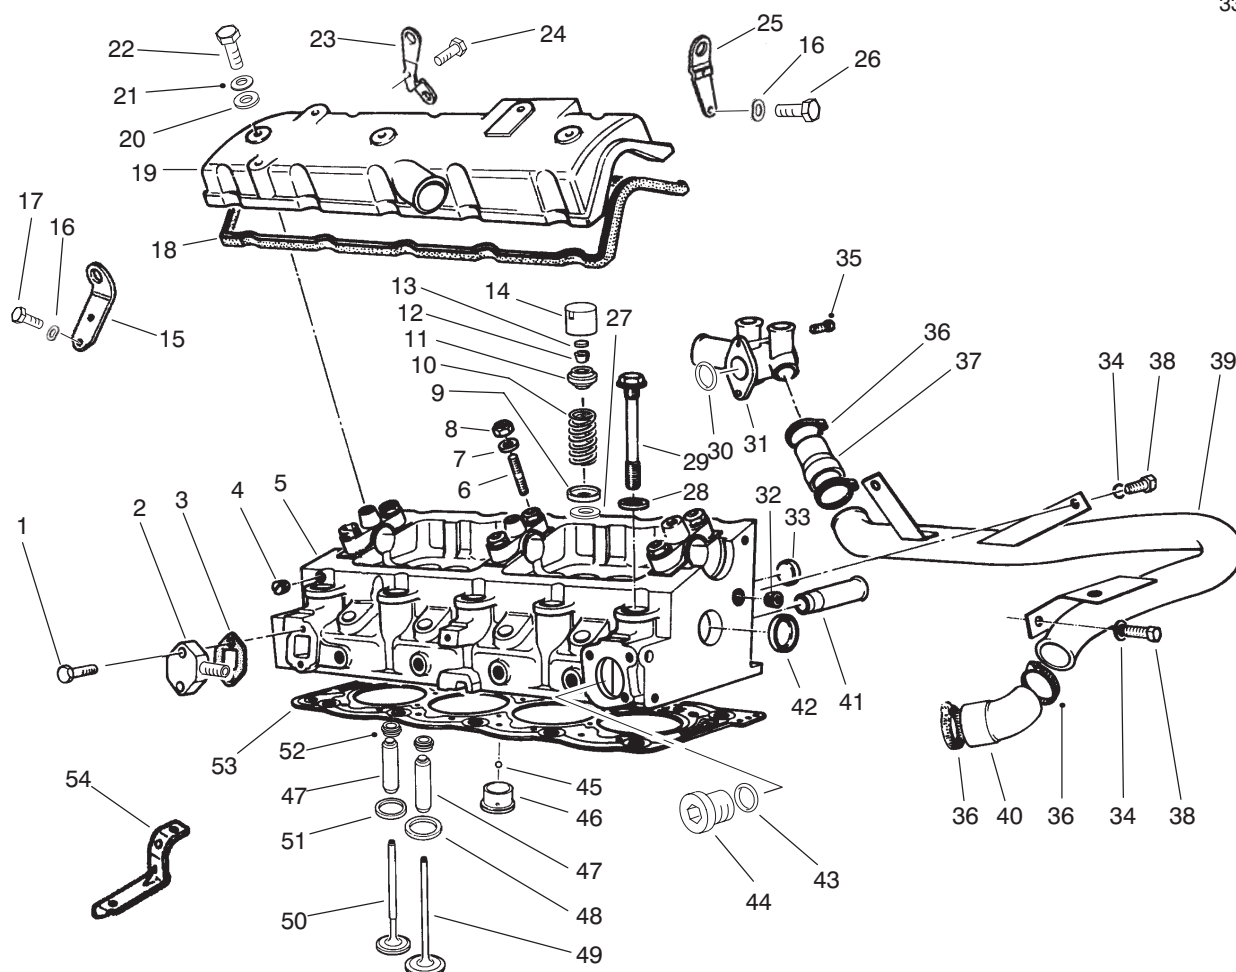 


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
38	48-7700	Screw—Hex. Hd.	3	49	74-7480	Valve—Intake	4
39	94-3199	Pipe—By—Pass	1	50	92-7794	Valve—Exhaust	4
40	94-3201	Hose—By—Pass	1	51	92-7795	Seat—Exhaust Valve (34.5mm)	4
41	74-7400	Tube	1	52	92-7791	Seal—Valve	8
42	74-7840	Plug	2	53	94-8132	Gasket—Head (1.48 mm)	1
43	94-3122	Gasket	1	*	94-8133	Gasket—Head (1.52 mm)	1
44	94-3121	Plug	1	*	94-8134	Gasket—Head (1.58 mm)	1
45	74-7420	Ball	4	*	94-8135	Gasket—Head (1.62 mm)	1
46	74-7430	Chamber—Turbulence (32.45mm)	4	54	94-3120	Bracket	1
*	74-7440	Chamber—Turbulence (32.65mm)	4	*	74-7670	Head Bolt & Washer Set (Incl. Ref. #28 & 29)	1
47	92-7792	Guide—Valve (14.29mm)	8	*	94-3119	Kit—Gasket	1
*	92-7793	Guide—Valve (14.59mm)	8	*	94-9965	Asm—Head, Cylinder	1
48	74-7450	Seat—Intake Valve (39.3mm)	4				
*	74-7460	Seal—Intake Valve (39.5mm)	4				

 *Not Illustrated

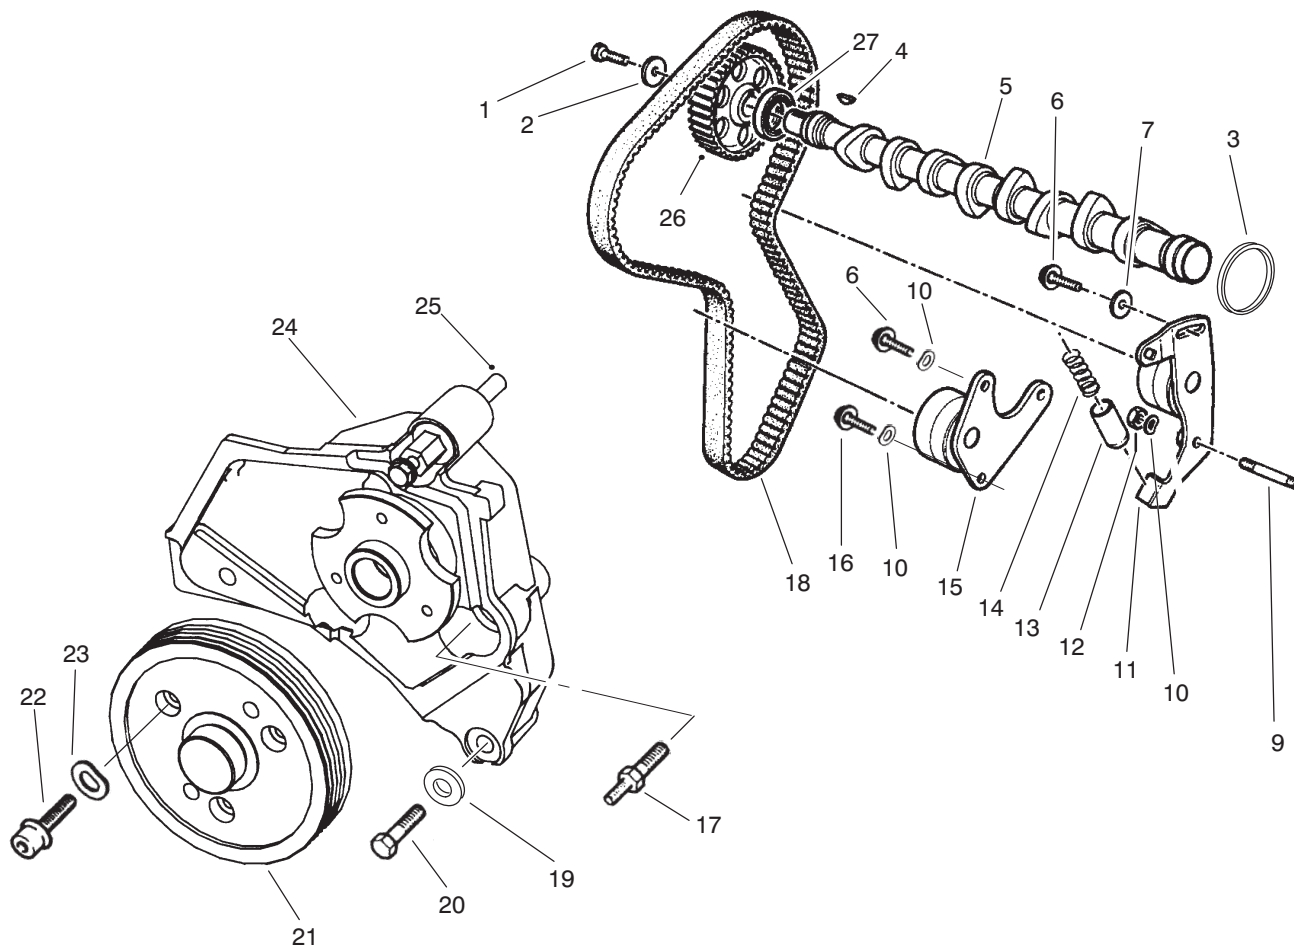


T-2141-1

CAMSHAFT & FAN SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-3440	Screw	2
2	77-3450	Washer	2
3	77-3420	Gasket	1
4	77-3410	Key	1
5	77-3400	Camshaft	1
6	94-3163	Screw	1
7	94-3166	Washer-Flat	1
9	94-3162	Stud	1
10	94-3164	Washer-Spring	4
11	94-3159	Asm-Roller	1
12	94-3165	Nut-Lock	1
13	77-3520	Cup	1
14	77-3510	Spring	1

Ref. No.	Part No.	Description	No. Used
15	94-3160	Asm-Roller	1
16	94-3161	Screw	2
17	94-3170	Screw	1
18	74-8830	Belt	1
19	94-3172	Washer	3
20	94-3171	Screw	2
21	94-3168	Pulley-Fan	1
22	94-3173	Screw	3
23	76-5010	Washer	3
24	94-3167	Bracket-Fan	1
25	94-3169	Screw	1
26	92-7787	Pulley-Camshaft	1
27	94-9994	Gasket-Camshaft	1

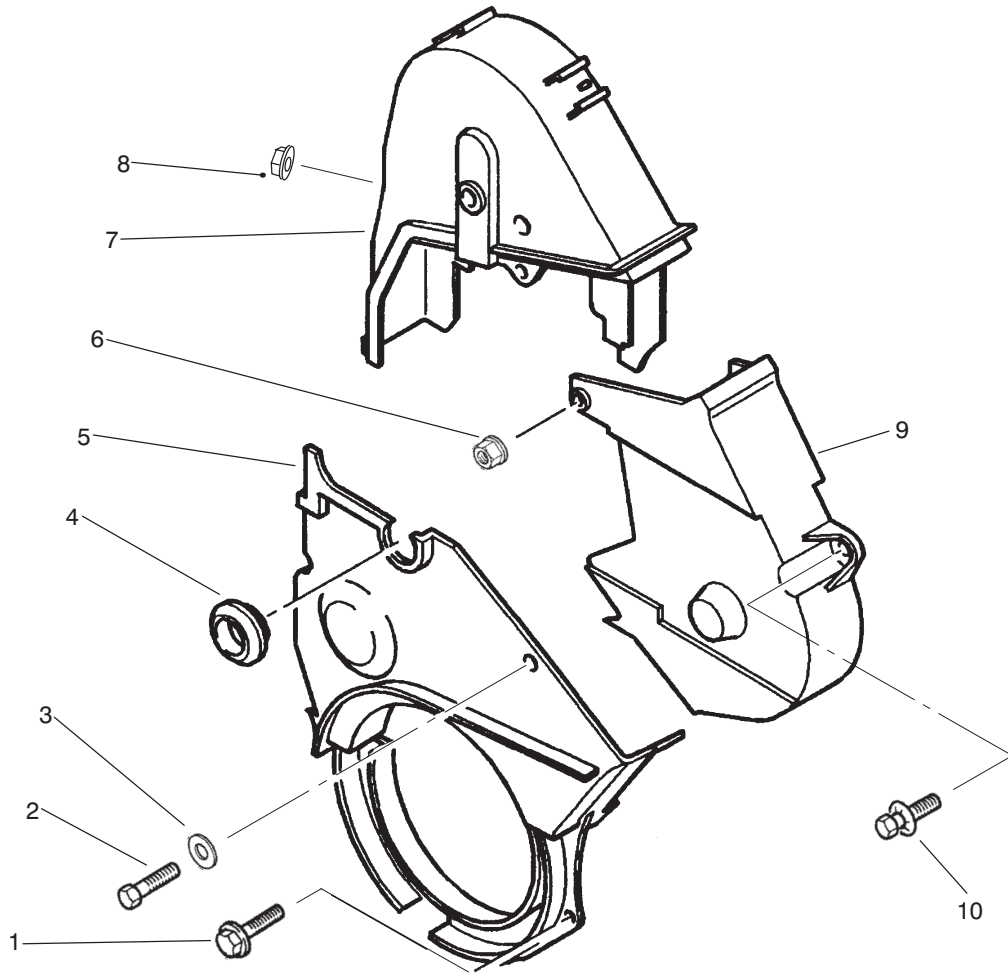 


T-2140-2

TIMING COVER

Ref. No.	Part No.	Description	No. Used
1	94-3132	Screw	2
2	94-3130	Screw	1
3	94-3125	Washer-Flat	1
4	94-3129	Plug	1
5	94-3126	Protector-Lower	1

Ref. No.	Part No.	Description	No. Used
6	94-3133	Nut W/Washer	1
7	94-3127	Case-Timing, Left	1
8	94-3134	Nut	1
9	94-3128	Case-Timing, Right	1
10	94-3131	Screw	1

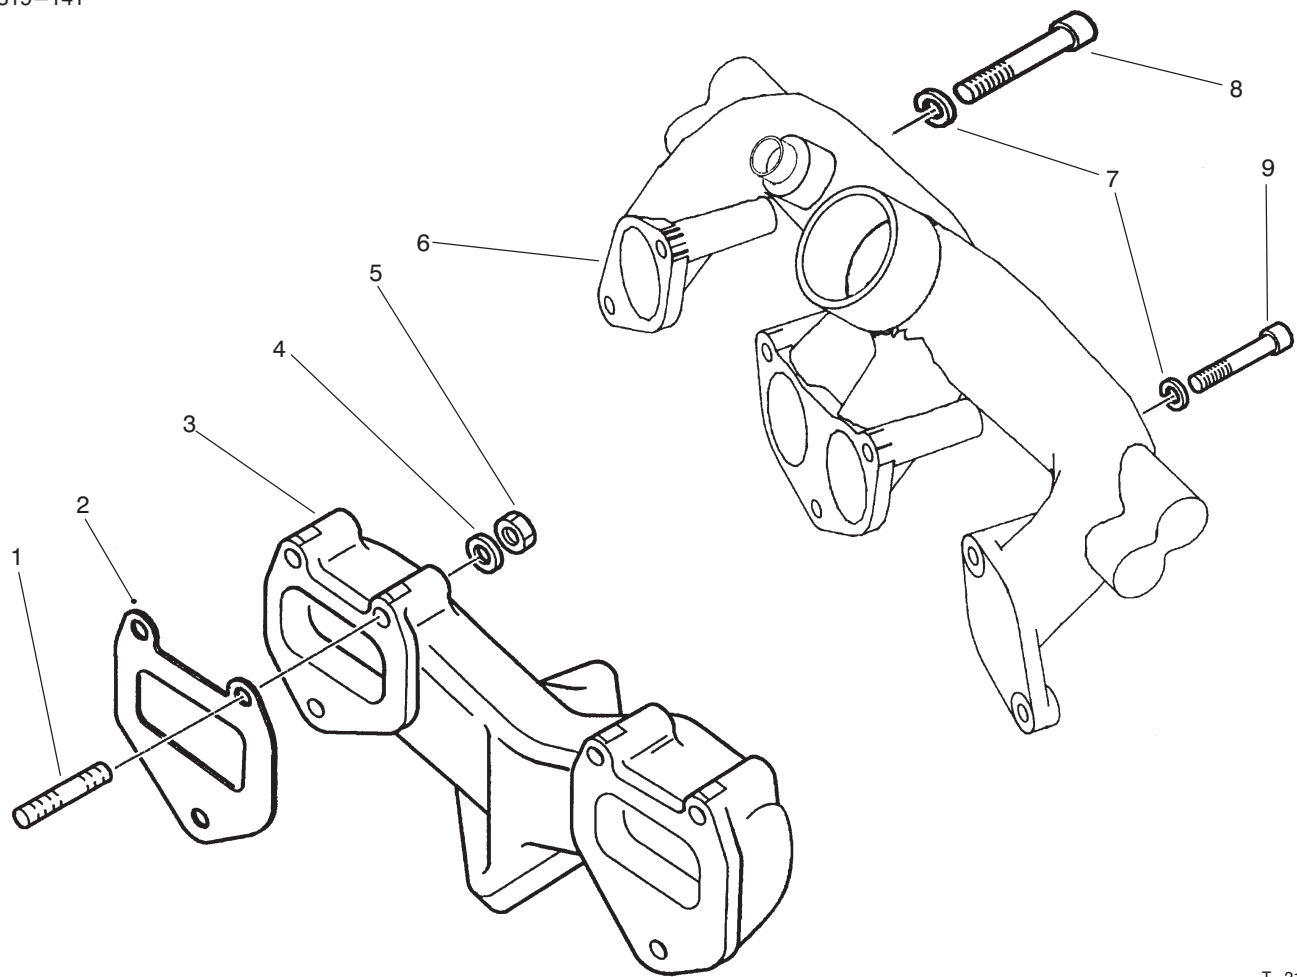 


T-2149-3

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-3300	Stud	6
2	77-3310	Gasket	2
3	77-3340	Manifold-Exhaust	1
4	68-9420	Washer-Lock	6
5	77-3320	Nut-Hex	6

Ref. No.	Part No.	Description	No. Used
6	94-3215	Manifold-Intake	1
7	94-3164	Washer-Spring	7
8	94-3216	Screw	5
9	94-3217	Screw	4
*	94-3218	Screw	1

 
*Not Illustrated

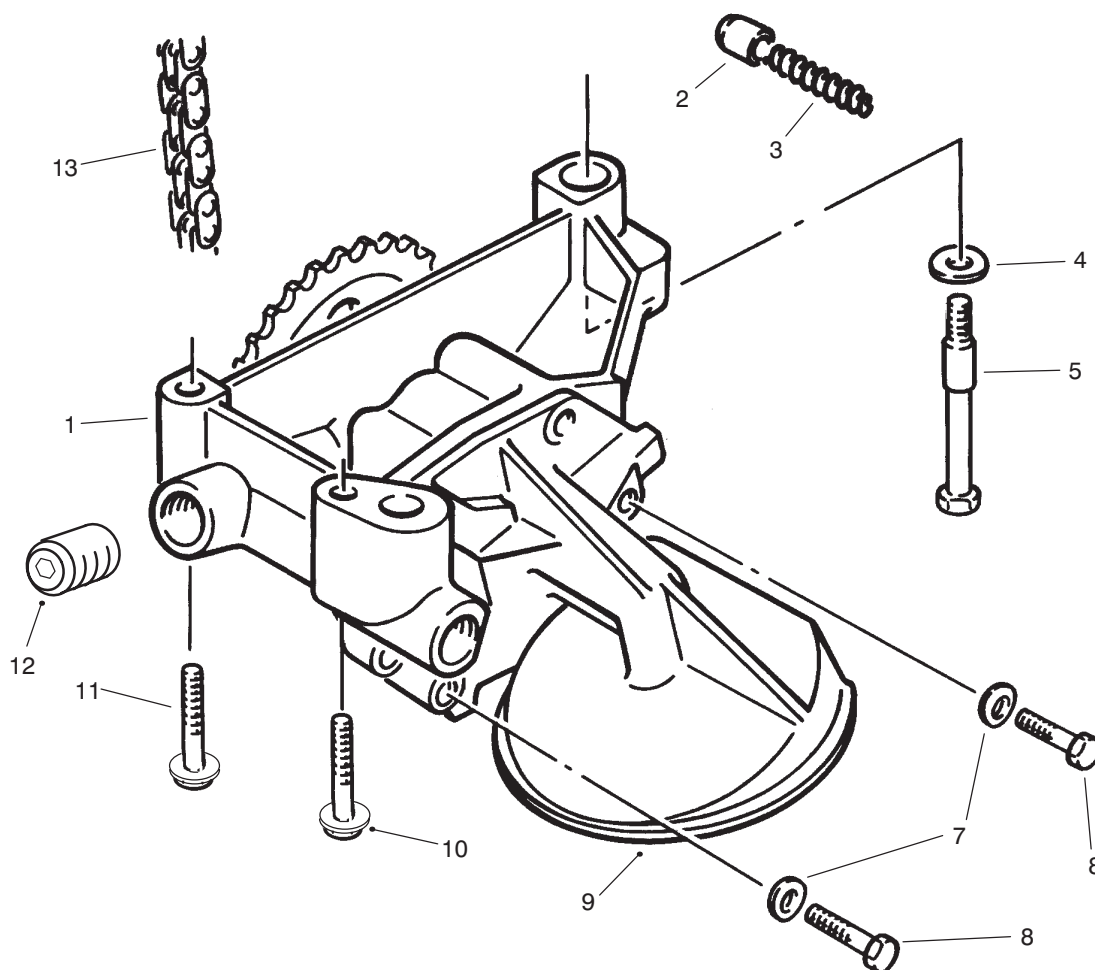

T-0964-2

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5070	Asm—Oil Pump	1	8	94-3124	Screw—Hex. Hd.	2
2	94-3176	Gear—Oil Pump	1	9	94-3178	Strainer	1
3	76-5090	Spring—Piston	1	10	77-3470	Screw	1
4	94-3179	Washer—Spring	3	11	77-3490	Screw	1
5	76-5100	Bolt—Shoulder	1	12	94-3177	Plug	2
7	76-5010	Washer—Spring	5	13	76-5170	Chain—Pump Drive	1

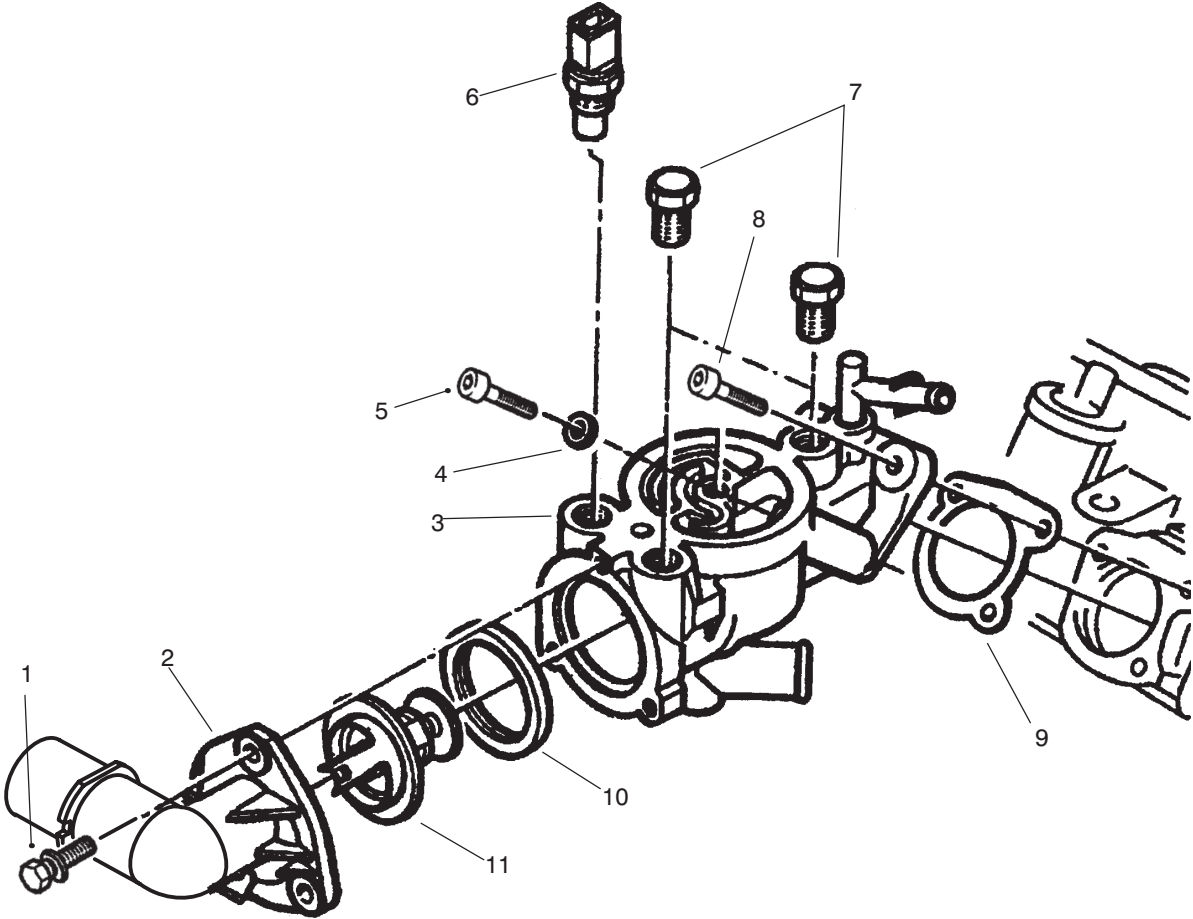 


T-2143-3

COLLECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3131	Screw	3
2	94-3208	Stub-Outlet	1
3	94-3205	Box-Outlet	1
4	94-3207	Ring	1
5	94-3214	Screw	1
6	94-3211	Temp Sending Unit	1

Ref. No.	Part No.	Description	No. Used
7	94-3212	Plug	2
8	94-3213	Screw	1
9	94-3206	Gasket	1
10	94-3210	Gasket	1
11	94-3209	Thermostat	1

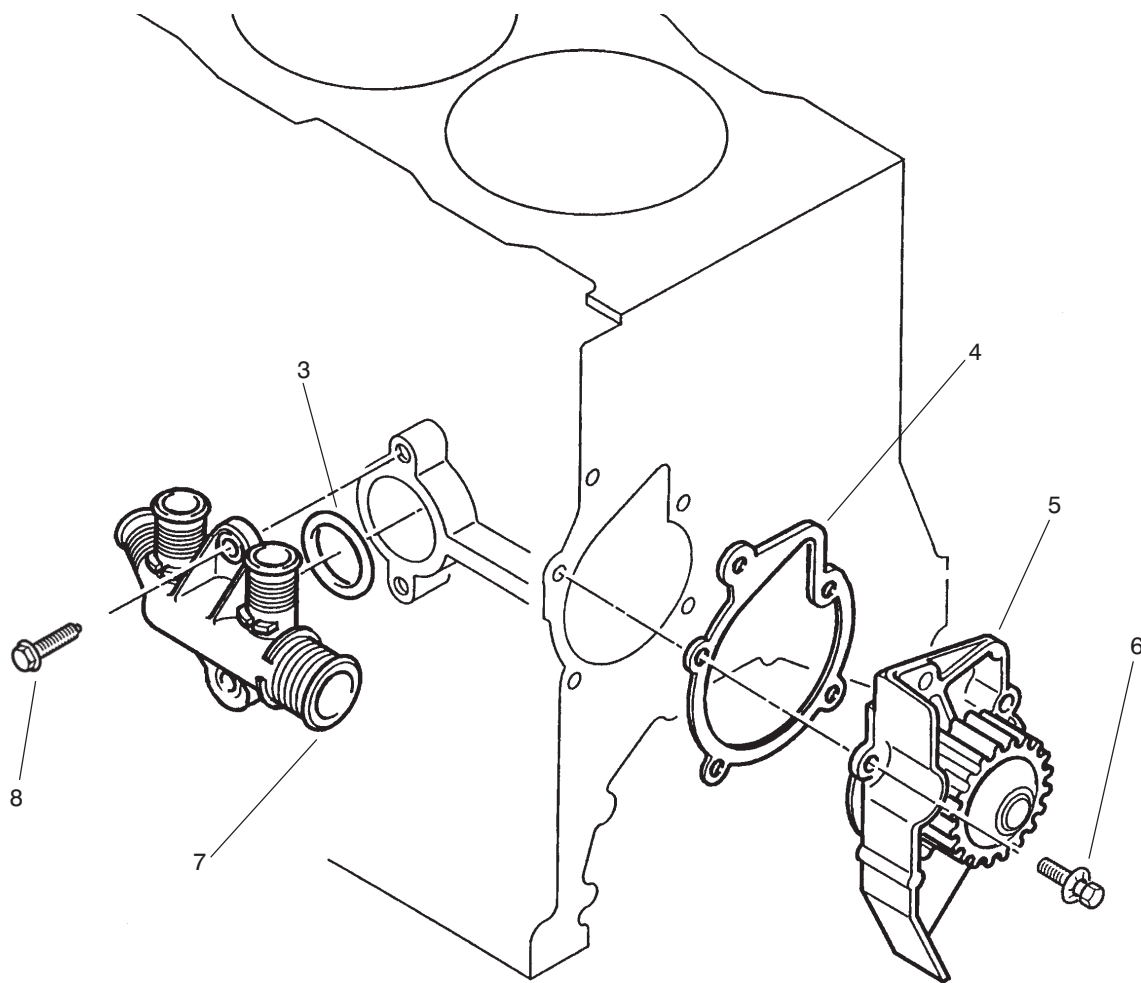 


T-2144-1

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	94-3197	O-Ring	1
4	94-3195	Gasket-Pump, Water	1
5	94-3194	Cover-Pump, Water (Incl. Ref. #4)	1

Ref. No.	Part No.	Description	No. Used
6	76-5500	Screw	5
7	94-3196	Inlet-Water	1
8	94-3198	Screw	2

 3319-141

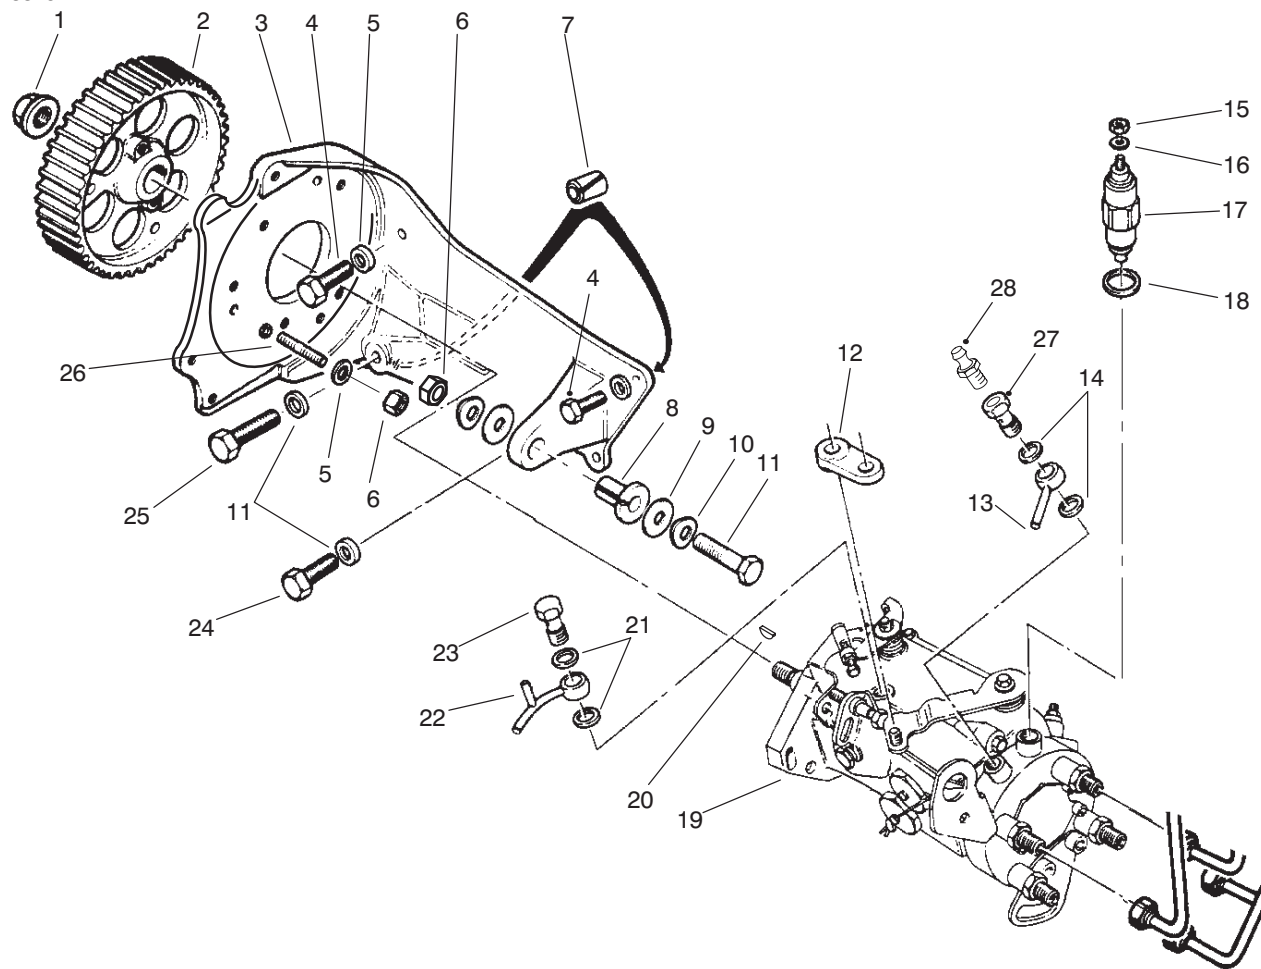


T-2146-1

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-4950	Nut	1
2	76-4940	Gear-Pump, Injection	1
3	94-3220	Bracket	1
4	94-3225	Screw	2
5	76-4930	Washer	3
6	94-3165	Nut	4
7	74-8610	Pin	2
8	74-8630	Bushing-Flange	1
9	94-3224	Washer-Flat	2
10	94-3164	Washer-Spring	6
11	94-3221	Screw	1
12	74-8650	Journal	1
13	74-8670	Union-Inlet	1
14	74-8680	Gasket	2

Ref. No.	Part No.	Description	No. Used
15	94-3251	Nut	1
16	74-8710	Washer	1
17	93-5856	Valve-Solenoid	1
18	94-3274	O-Ring	1
19	94-3219	Pump-Injection	1
20	94-3222	Key	1
21	74-8870	Gasket	2
22	94-3249	Tube-Outlet	1
23	94-3250	Screw-Connection	1
24	94-3161	Screw	1
25	94-3223	Screw	1
26	76-4910	Stud	3
27	94-9969	Screw-Connection	1
28	93-5835	Screw-Purge	1

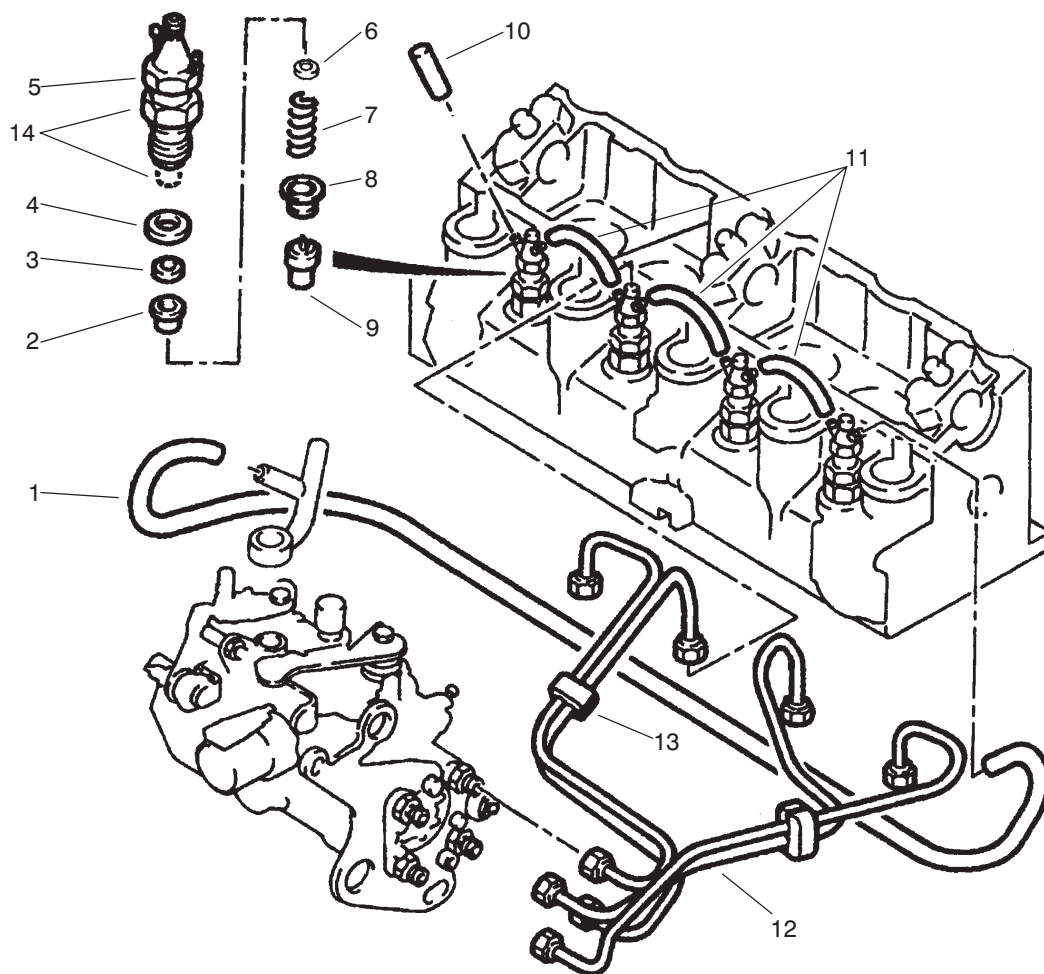 


T-2145-2

FUEL INJECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3230	Hose	1	6	94-3242	Washer-1.30 mm	4
2	76-5540	Plug	4	*	94-3243	Washer-1.33 mm	4
3	76-5530	Gasket-Injector	4	*	94-3244	Washer-1.36 mm	4
4	94-3226	Gasket-Injector	4	*	94-3245	Washer-1.39 mm	4
5	76-5520	Holder-Injector	4	*	94-3246	Washer-1.42 mm	4
6	94-3232	Washer-0.79 mm	4	*	94-3247	Washer-1.45 mm	4
*	94-3233	Washer-0.82 mm	4	*	94-3248	Washer-1.48 mm	4
*	94-3234	Washer-0.85 mm	4	7	94-3228	Spring	4
*	94-3235	Washer-0.88 mm	4	8	94-3227	Spacer	4
*	94-3236	Washer-0.91 mm	4	9	94-8147	Nozzle-Injector	4
*	94-3237	Washer-0.94 mm	4	10	74-8770	Plug	1
*	94-3238	Washer-0.97 mm	4	11	94-3229	Union	3
*	94-3239	Washer-1.00 mm	4	12	74-8750	Pipe	1
*	94-3240	Washer-1.03 mm	4	13	94-3231	Bracket	2
*	94-3241	Washer-1.06 mm	4	14	76-5600	Asm-Holder, Injector	4

 *Not Illustrated

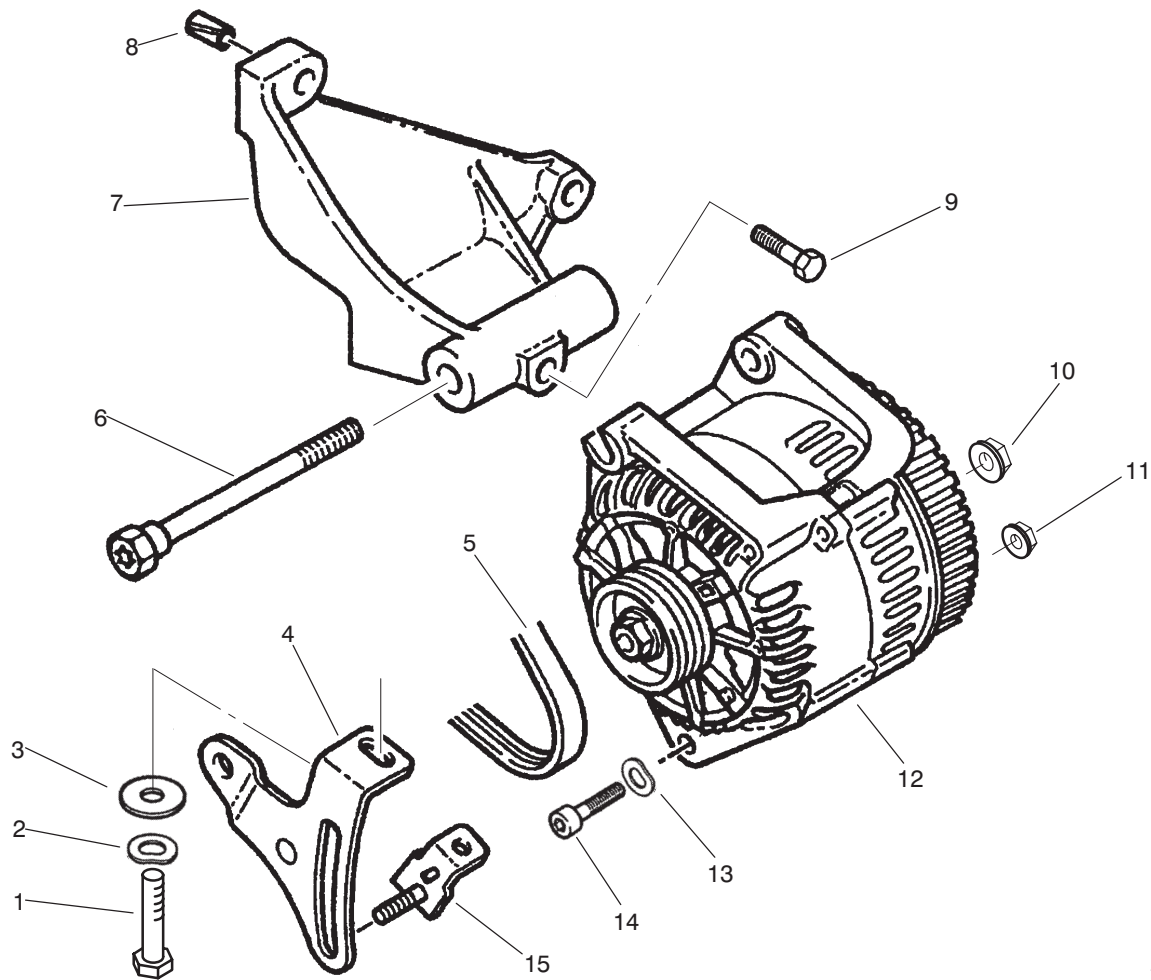


T-2147-2

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5060	Screw	1
2	76-5010	Washer-Spring	1
3	94-3260	Washer-Flat	1
4	94-3255	Slide	1
5	94-3256	Belt	1
6	94-3254	Screw	1
7	94-3253	Bracket	1
8	74-8610	Pin	2

Ref. No.	Part No.	Description	No. Used
9	94-3259	Screw	1
10	94-3262	Nut	1
11	94-3261	Nut	1
12	94-3252	Alternator	1
13	94-3257	Washer-Spring	1
14	94-3258	Screw	1
15	76-4990	Bracket	1

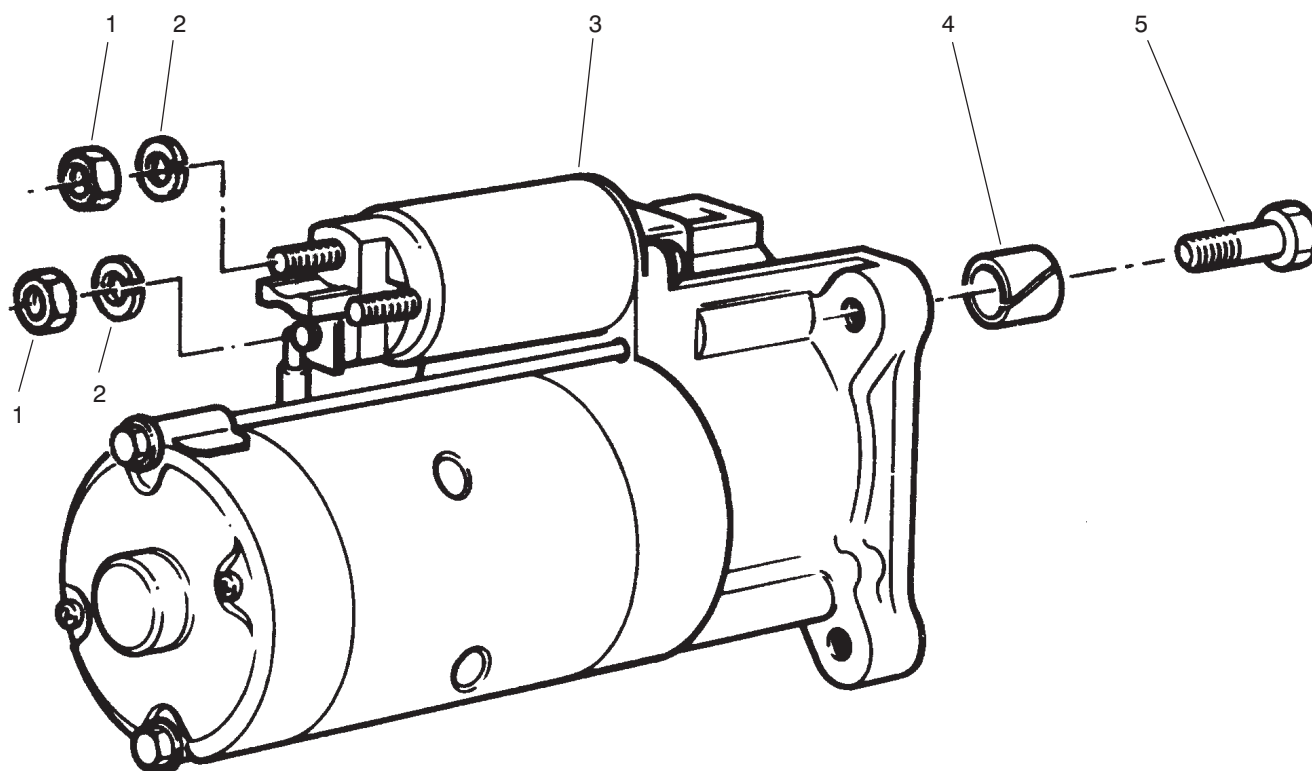 


T-0968-1

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-0330	Nut-Hex	2
2	76-5570	Washer-Lock	2
3	94-3263	Starter	1
4	76-5590	Sleeve-Spring	1

Ref. No.	Part No.	Description	No. Used
5 *	48-7810 94-3275	Screw-Mounting Solenoid-Starter	3 1

 *Not Illustrated

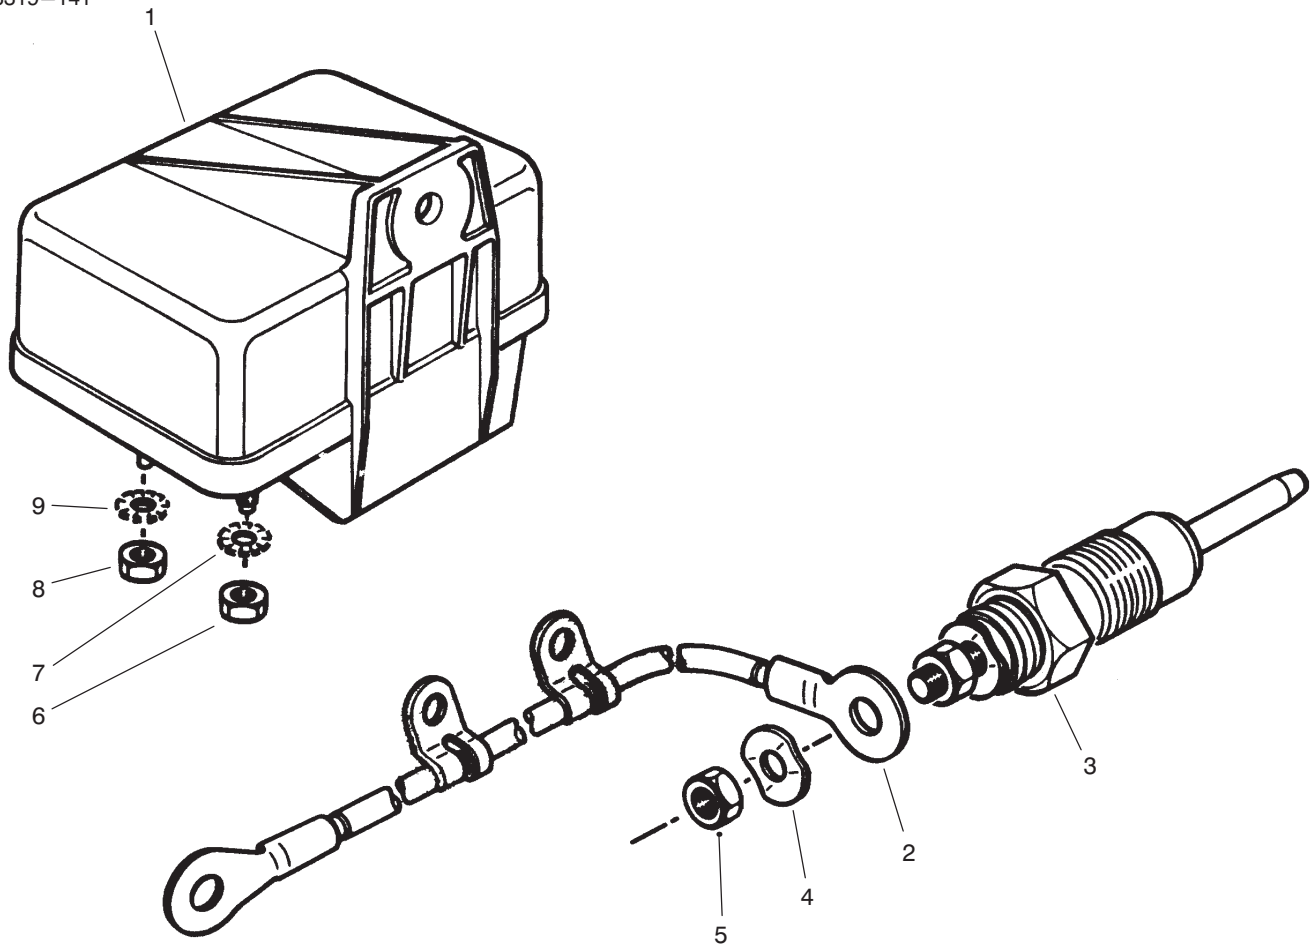


T-0972-1

GLOW PLUG & GLOW RELAY

Ref. No.	Part No.	Description	No. Used
1	76-5260	Relay-Glow Plug	1
2	94-3265	Cable-Glow Plug	4
3	94-3264	Plug-Glow	4
4	76-5290	Washer-Spring	4
5	94-3266	Nut-Hex.	4

Ref. No.	Part No.	Description	No. Used
6	94-3267	Nut-Lock	1
7	76-5310	Washer-E.T.L.W.	1
8	94-3251	Nut-Lock	1
9	74-8710	Washer-E.T.L.W.	1

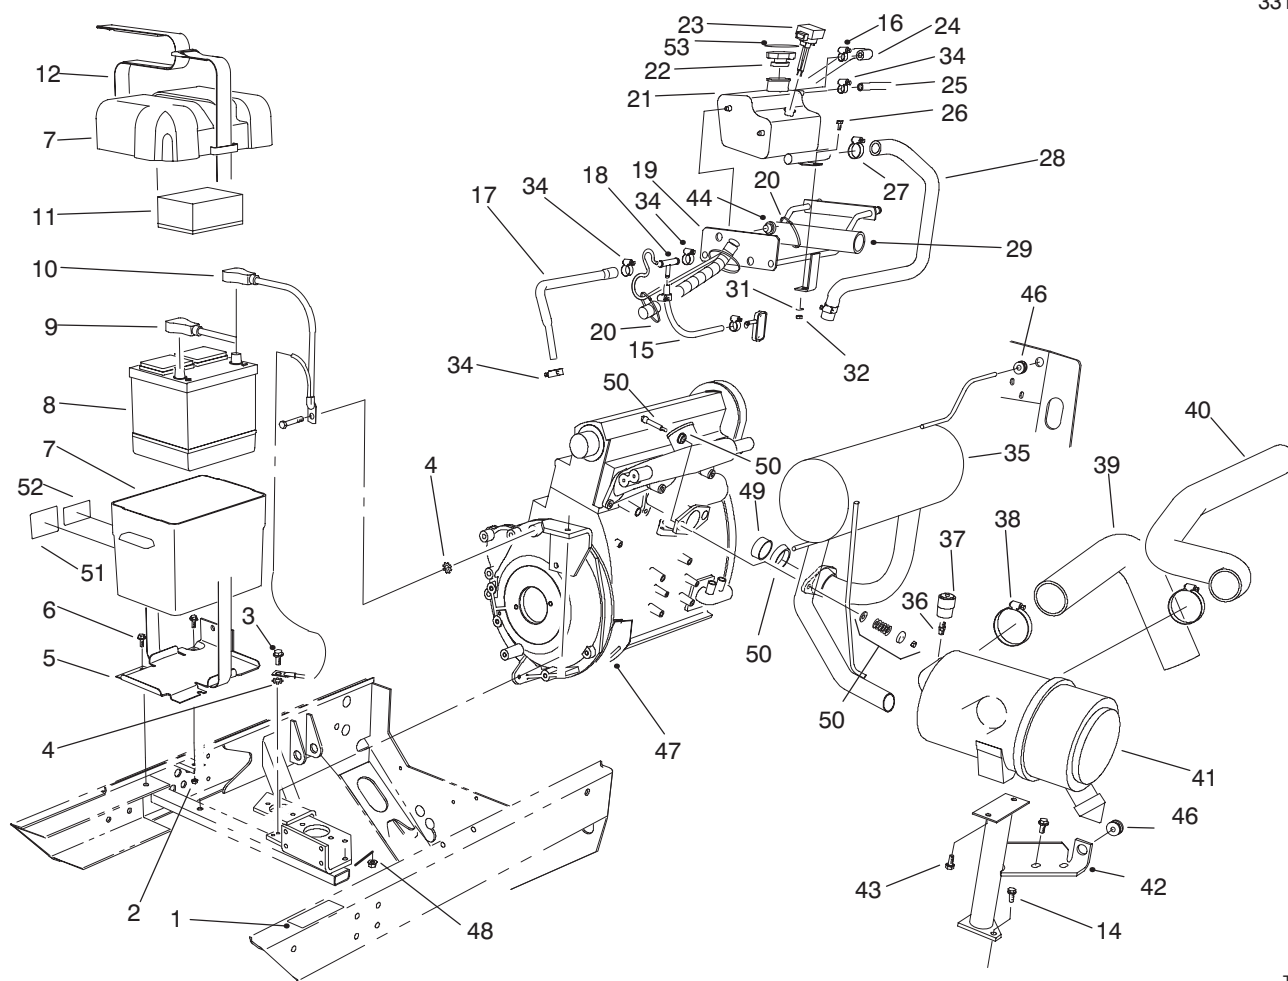 


T-2373-3

ENGINE COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-9198	Decal-Hot Surface	1	26	33103-020	Screw-Hex. Hd. Flange	1
1	93-1265	Decal-Hot Surface (Europe)	1	27	2412-129	Clamp-Hose	2
1	94-4578	Decal-Hot Surface (Japan)	1	28	93-7589	Hose-Overflow	1
2	3296-29	Nut-Lock	1	29	93-4215	Hose-Radiator, Upper Rear	1
4	3255-9	Washer-Lock, Ext. Tooth	2	31	33093-00	Washer	1
5	93-7974	Plate-Battery, Box	1	32	33023-00	Nut-Lock	1
6	3234-5	Screw-Flange Hd.	3	34	2412-36	Clamp-Hose	4
7	93-7595	Asm-Box, Battery	1	35	93-9178	Muffler	1
†8		Battery	1	*	94-2849	Muffler-Spark Arrestor	1
9	75-1370	Cable-Battery, Positive	1	36	94-1416	Adapter-Indicator	1
10	94-1411	Cable-Battery, Negative	1	37	93-9164	Indicator-Service	1
11	93-7968	Pad-Foam, Battery	1	38	2412-125	Clamp-Hose	2
12	94-1445	Strap-Battery	1	39	94-2624	Hose-Manifold	1
14	33105-030	Screw-Hex. Hd. Flange	2	40	93-7584	Hose-Intake	1
15	63-7622	Hose-Fuel	1	41	93-7485	Asm-Filter, Air	1
16	2412-108	Clamp-Hose	3	42	94-8108	Support-Filter, Air	1
17	94-2630	Hose-Return	1	43	33104-016	Screw-Hex. Hd. Flange	2
18	93-4207	Fitting-Tee	1	†44	94-2801	Grommet-Rubber	2
19	94-1408	Wireform-Overflow	1	46	94-2812	Grommet	2
20	3290-378	Tie-Cable	3	†47	77-3600	Plate-Closing	1
†21	94-9983	Box-Degassing	1	48	33005-00	Nut-Hex. Flange	2
†22	94-2800	Cap-Radiator	1	†49	94-2815	Sleeve-Exhaust Flange	1
22	66-3240	Cap-Radiator (Europe)	1	†50	94-2814	Kit-Exhaust Coupler	1
†23	94-9984	Sensor-Water Level	1	51	93-6668	Decal-Charging (Europe)	1
24	93-7591	Hose-Return	1	52	93-7276	Decal-Danger (Europe)	1
25	92-7424	Hose-Overflow, Radiator	1	53	93-7840	Decal-Cap (Europe)	1

† Furnished with engine.

 ‡ Obtain locally.

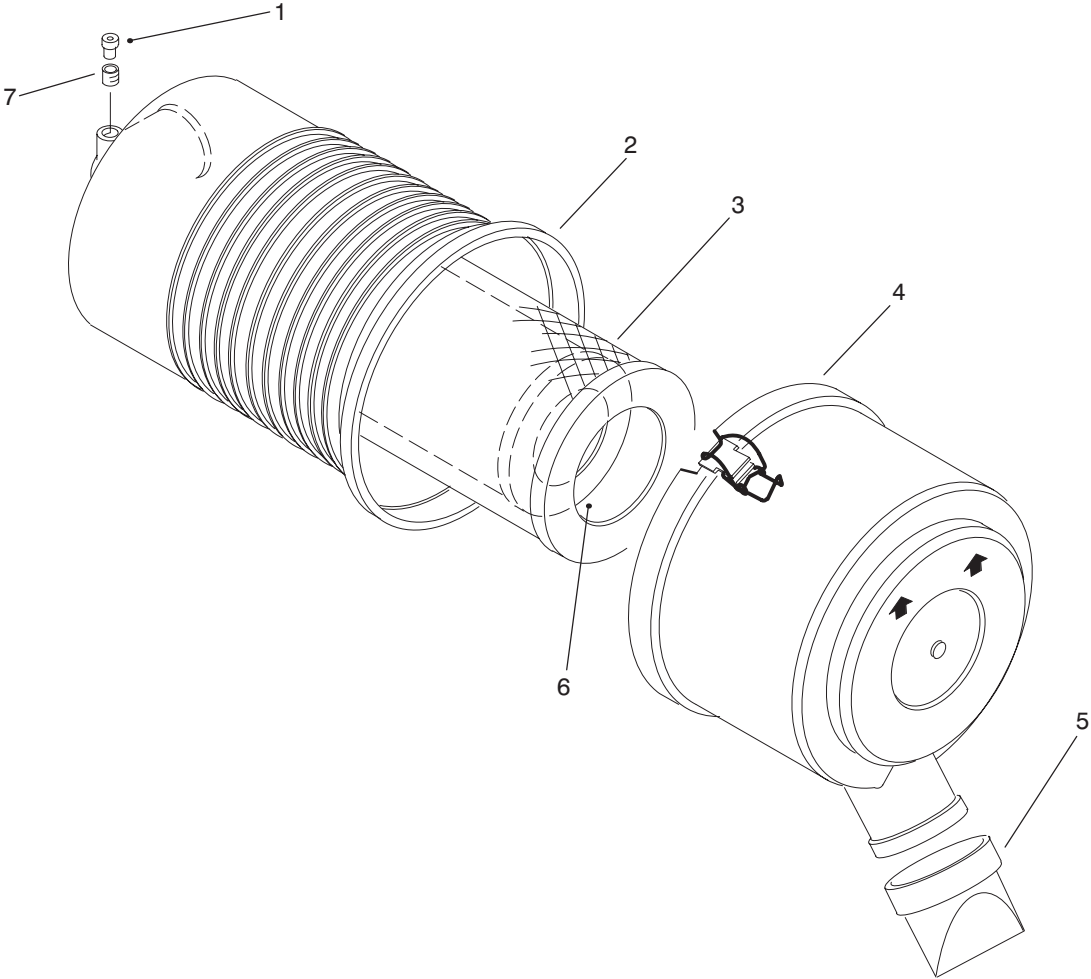


T-2076-1

AIR CLEANER ASSEMBLY NO. 93-7485

Ref. No.	Part No.	Description	No. Used
1	93-9164	Indicator	1
2		Asm-Body	1
3	93-9162	Filter-Primary	1
4	93-5986	Asm-Cover	1


Ref. No.	Part No.	Description	No. Used
5	94-1414	Valve-Vacuator	1
6	93-9163	Filter-Safety	1
7	94-1416	Asm-Adaptor	1

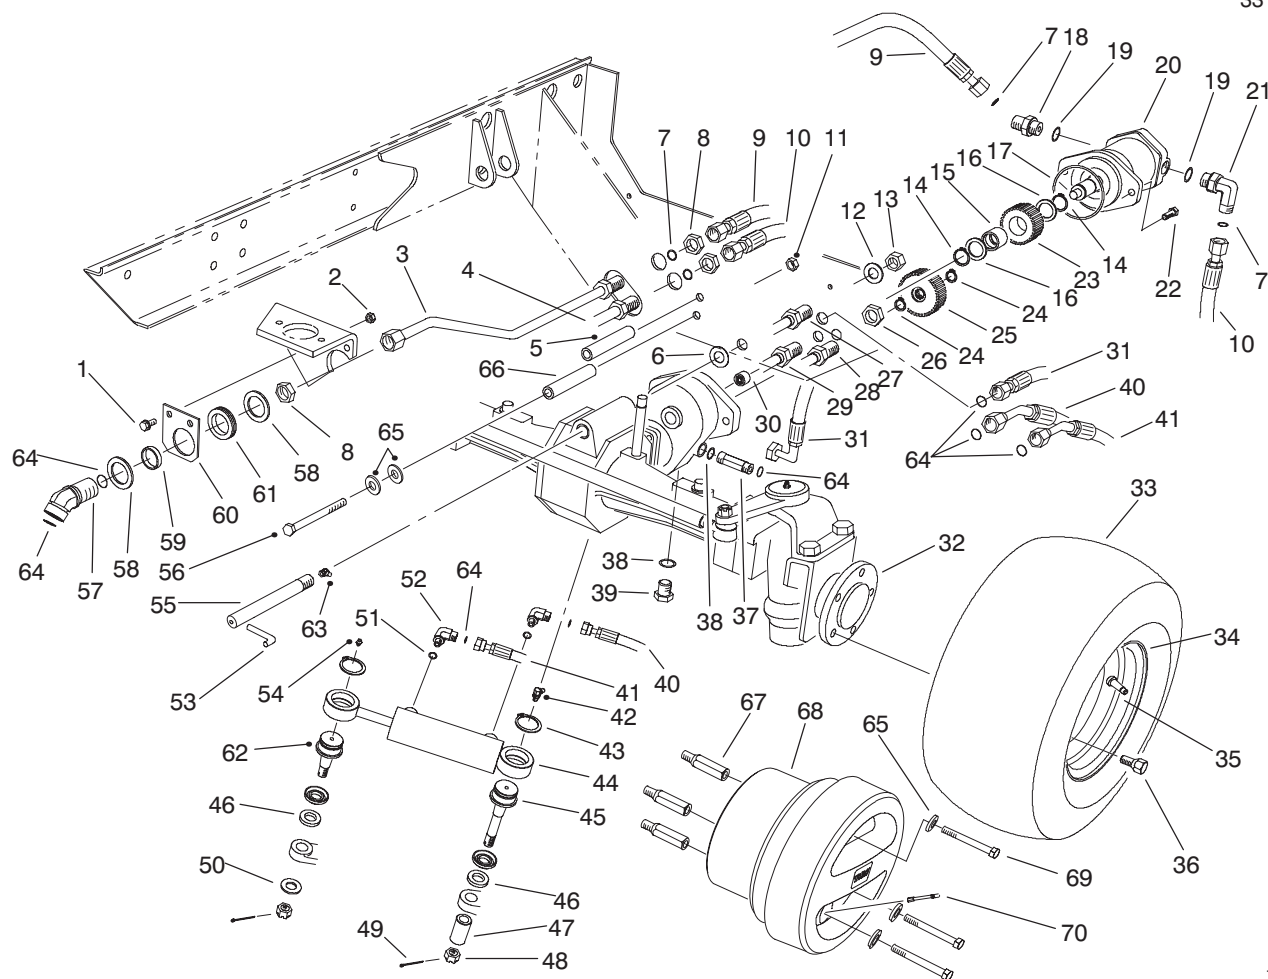 

T-2077-5

4-WD AXLE ASSEMBLY (Model No. 03801)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	323-6	Screw-Hex. Hd.	2	24	32120-15	Ring-Retaining	2
2	32128-21	Nut-Hex. Hd. Flange	2	25	92-7586	Gear-Driven	1
3	92-7472	Asm-Tube, Rear	1	26	340-70	Nut-Lock	2
4	92-7473	Asm-Tube, Rear	1	27	92-7553	Asm-Tube, Rear Drain	1
5	76-8350	Stop-Axle, 4WD	2	28	92-7495	Asm-Tube, Steering	1
6	93-7247	Washer-Thrust	1	29	92-7494	Asm-Tube, Steering	1
7	237-58	O-Ring	6	30	74-5700	Bearing-Needle	1
8	340-126	Nut-Bulkhead	3	31	92-7534	Assembly-Hose	1
9	92-7536	Asm-Hose, Rear Motor	1	32	93-7780	Axle-4WD	1
10	92-7537	Asm-Hose, Rear Motor	1	33	86-5910	Tire	2
11	3296-23	Nut-Lock	2	34	217-125	Wheel	2
12	3256-29	Washer-Flat	1	35	232-27	Stem-Valve	2
13	94-8000	Nut-Lock	1	36	74-5500	Bolt-Wheel	10
14	32151-96	Ring-Retaining	1	37	340-2	Adapter	1
15	71-4580	Clutch-Roller	1	38	237-42	O-Ring	2
16	71-4590	Washer-Thrust	2	39	353-508	Plug	1
17	237-166	O-Ring	1	40	92-7539	Asm-Hose	1
18	340-9	Fitting-Hydraulic (Incl. Ref. #7 & 19)	1	41	92-7538	Asm-Hose	1
19	237-81	O-Ring	2	42	302-60	Fitting-Grease 90°	1
20	92-7386	Motor-Hydraulic	1	43	32151-104	Ring-Retaining	2
21	340-142	Fitting-Hydraulic 90° (Incl. Ref. #7 & 19)	1	44	94-8141	Cylinder-Hydraulic	1
22	325-4	Screw-Hex. Hd.	2	45	92-5839	Ball Joint	1
23	92-7587	Gear-Driver	1	46	92-5833	Spacer-Ball Joint	2
				47	92-5844	Spacer-Ball Joint	1
				48	32136-14	Nut-Hex. Slotted	2

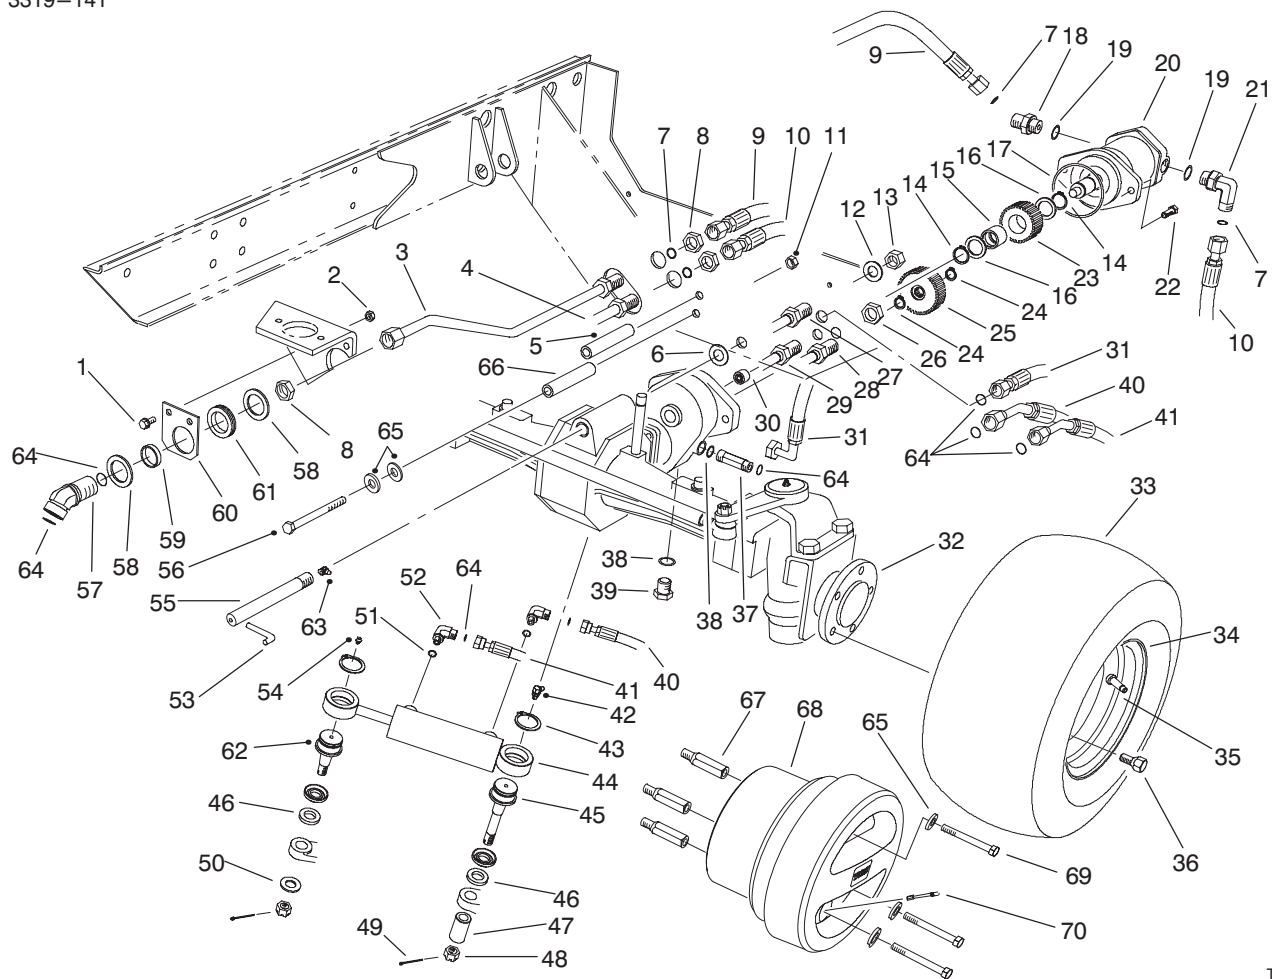 


T-2077-5

4-WD AXLE ASSEMBLY (Model No. 03801)

Ref. No.	Part No.	Description	No. Used
49	3272-12	Pin-Cotter	2
50	92-5836	Washer-Axle	1
51	237-78	O-Ring	2
52	340-97	Fitting-Hydraulic 90° (Incl. Ref. #51 & 64)	2
53	92-7604	Pin-Stop	1
54	302-5	Fitting-Grease	1
55	94-8115	Pin-Axle, Pivot	1
56	325-33	Screw-Hex. Hd. 2WD	2
56	325-33	Screw-Hex. Hd. 4WD	4
57	92-7646	Fitting-Hydraulic 45° (Incl. Ref. #7)	1
58	69-8910	Washer	2
59	69-8900	Spacer	1

Ref. No.	Part No.	Description	No. Used
60	92-7552	Bracket-Bulkhead	1
61	240-7	Grommet	1
62	92-5838	Ball Joint	1
63	302-33	Fitting-Grease	1
64	237-22	O-Ring	6
65	3256-26	Washer	1
66	88-1550	Stop-Axle	2
67	94-2806	Adaptor-Nut (Europe)	6
68	94-3052	Weight-Wheel (Europe)	2
69	3256-26	Washer-Flat (Europe)	6
70	3213-14	Screw-HH (Europe)	6
71	94-3063	Extension-Stem, Valve (Europe)	2

 *Not Illustrated

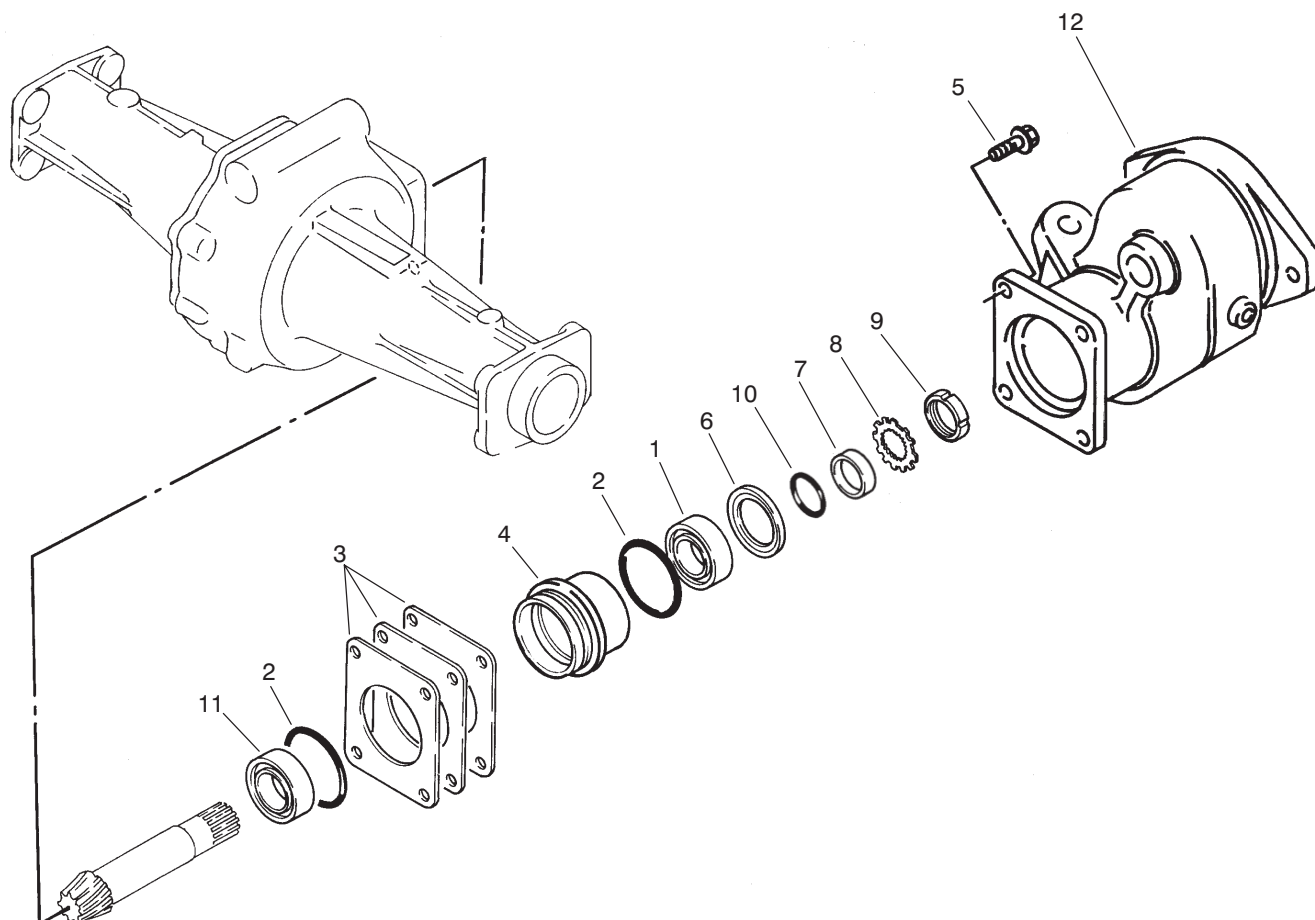


T-1109-3

SLEEVE ASSEMBLY AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7330	Bearing	1	7	76-7350	Bushing	1
2	76-7400	O-Ring	2	8	76-7380	Washer	1
3	76-7410	Shim-0.1 mm	A/R	9	76-7390	Nut-Lock	1
*	76-7420	Shim-0.2 mm	A/R	10	76-7360	O-Ring	1
*	76-7430	Shim-0.4 mm	A/R	11	76-7370	Bearing	1
4	76-7320	Sleeve	1	12	76-8070	Adapter	1
5	93-7773	Bolt	4	*	77-4010	Shim Set (Incl. Ref. #3)	1
6	76-7340	Seal-Oil	1				

 *Not Illustrated

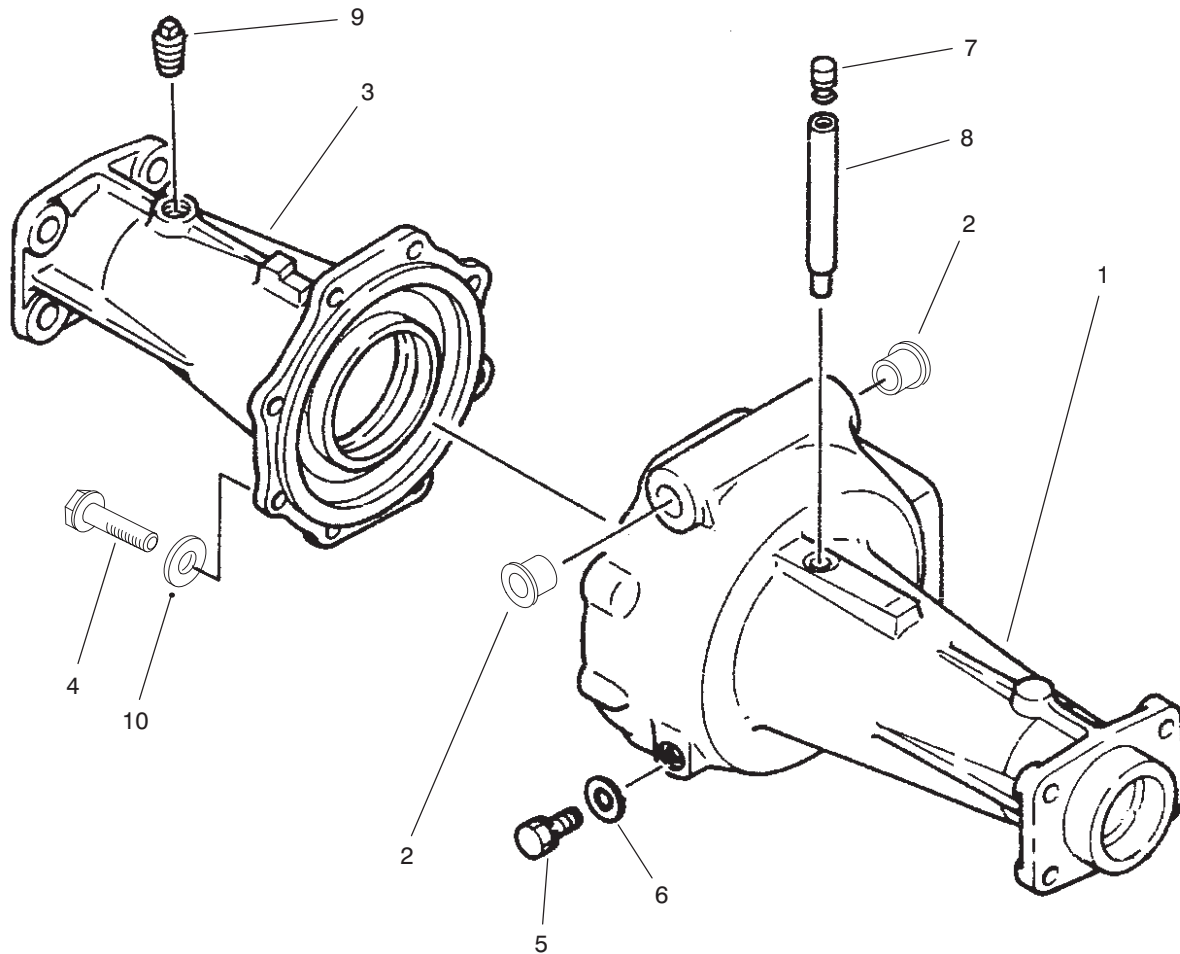


T-1112-3

AXLE HOUSING ASSEMBLY

AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used
1	93-7778	Housing—Axle A	1
2	93-7787	Bushing—Flange	2
3	93-7779	Housing—Axle B	1
4	93-7782	Screw—HHF	8
5	76-7110	Plug	1

Ref. No.	Part No.	Description	No. Used
6	76-7120	Seal—Washer	1
7	76-7480	Plug—Vent	1
8	76-7470	Pipe	1
9	76-7140	Plug	1
10	93-7781	Washer	8

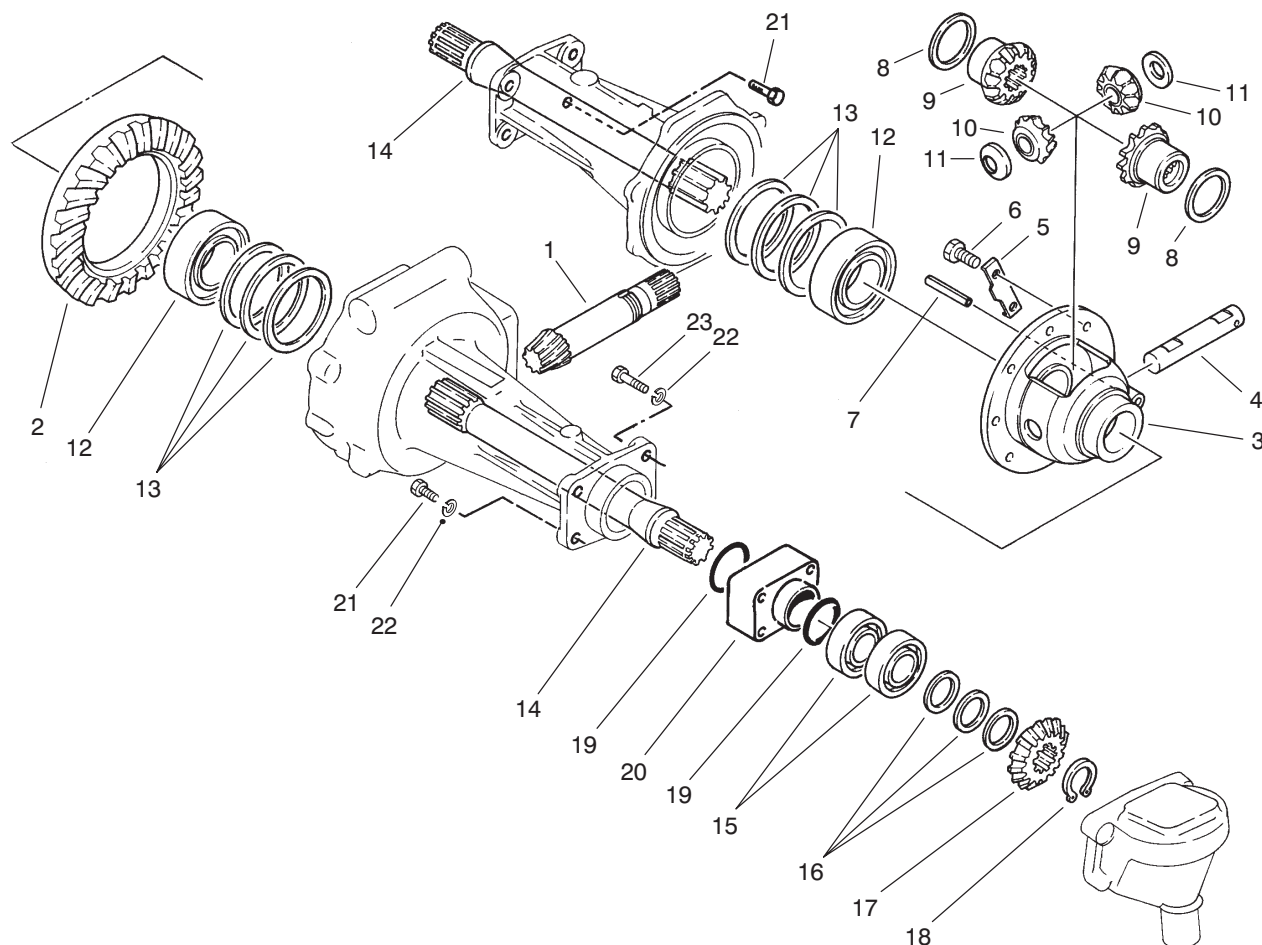 


T-1111-2

DIFFERENTIAL & SHAFT ASSEMBLY AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7250	Shaft-Drive	1	16	76-7520	Shim-0.1 mm	A/R
2	76-7240	Ring-Gear	1	*	76-7530	Shim-0.2 mm	A/R
3	76-7170	Case-Differential	1	*	76-7540	Shim-0.4 mm	A/R
4	76-7200	Shaft-Pinion	1	17	76-7510	Pinion-14T	2
5	76-7230	Washer-Lock	4	18	76-7550	Ring-Retaining	2
6	76-7260	Bolt	8	19	76-7580	O-Ring	4
7	76-7270	Pin-Spring	1	20	76-7590	Spacer	2
8	76-7220	Washer-Thrust	2	21	76-7600	Bolt-Reamer	2
9	76-7190	Gear-Side	2	22	76-7620	Washer-Lock	8
10	76-7180	Pinion-Mate	2	23	76-7610	Bolt	6
11	76-7210	Washer-Thrust	2	*	76-7160	Asm-Gear Case (Incl. Ref. #2-11)	1
12	76-7280	Bearing	2	*	77-4000	Shim Set (Incl. Ref. #13)	1
13	76-7290	Shim-0.1 mm	A/R	*	77-4020	Shim Set (Incl. Ref. #16)	1
*	76-7300	Shim-0.2 mm	A/R				
*	76-7310	Shim-0.3 mm	A/R				
14	76-7490	Shaft-Differential	2				
15	76-7500	Bearing	4				

 *Not Illustrated

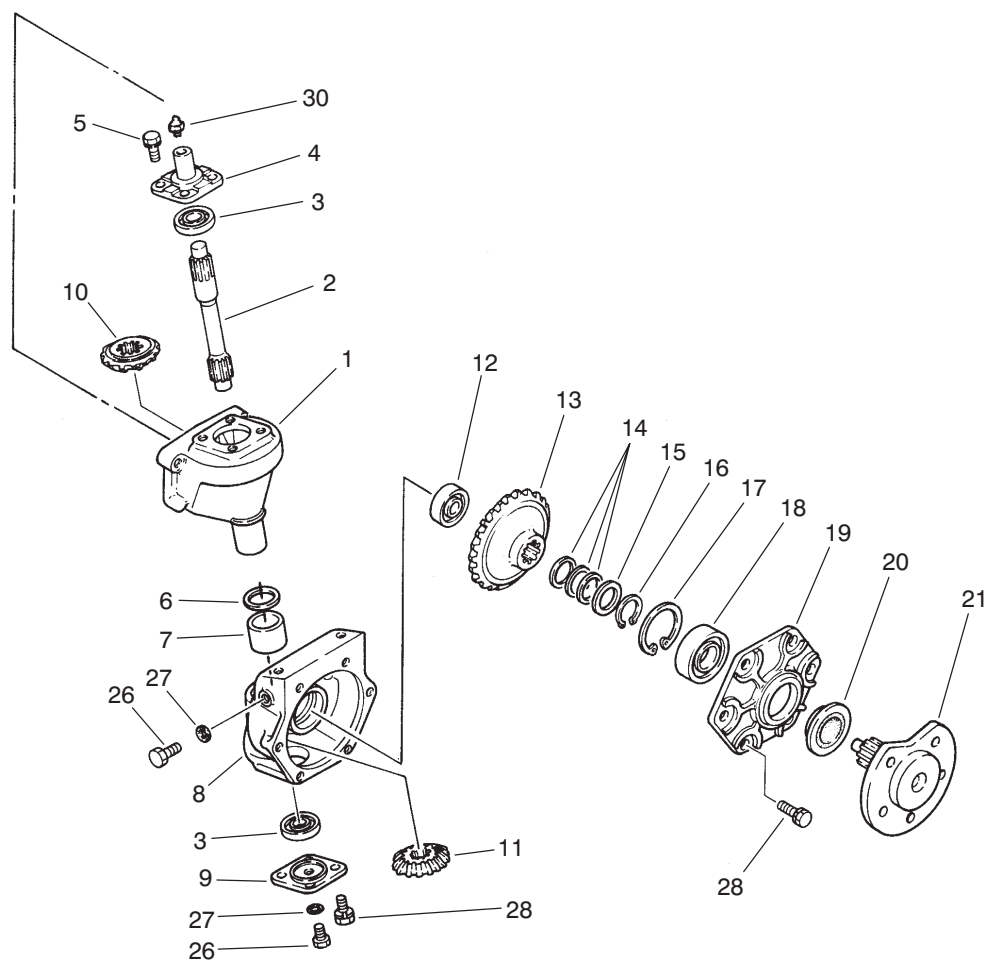


T-1110-1

STEERING GEAR CASE ASSEMBLY AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7560	Case—Gear	2
2	76-7650	Shaft—Final Drive	2
3	76-7670	Bearing	4
4	76-7660	Holder—20 mm L.H.	1
*	76-7630	Holder—25 mm R.H.	1
5	76-7640	Bolt	8
6	76-7740	Seal—Oil	2
7	76-7730	Bushing	2
8	76-7680	Case—Final Drive	2
9	76-7770	Cover	2
10	76-7510	Pinion—14T	2
11	76-7750	Pinion—15T	2
12	94-2803	Bearing	2
13	76-7840	Gear—Bevel	2
14	76-7890	Shim—0.15 mm	A/R
*	76-7900	Shim—0.2 mm	A/R
*	76-7910	Shim—0.4 mm	A/R

Ref. No.	Part No.	Description	No. Used
15	76-7880	Spacer	2
16	76-7920	Ring—Retaining	2
17	76-7930	Ring—Retaining	2
18	93-7775	Bearing	2
19	76-7810	Holder—Bearing	2
20	76-7870	Seal—Oil	2
21	76-7830	Shaft—Wheel	2
26	76-7110	Plug	4
27	76-7120	Seal—Washer	4
28	76-7640	Bolt	20
30	76-7960	Fitting—Grease	2
*	77-4030	Shim Set (Incl. Ref. #14)	1

 *Not Illustrated

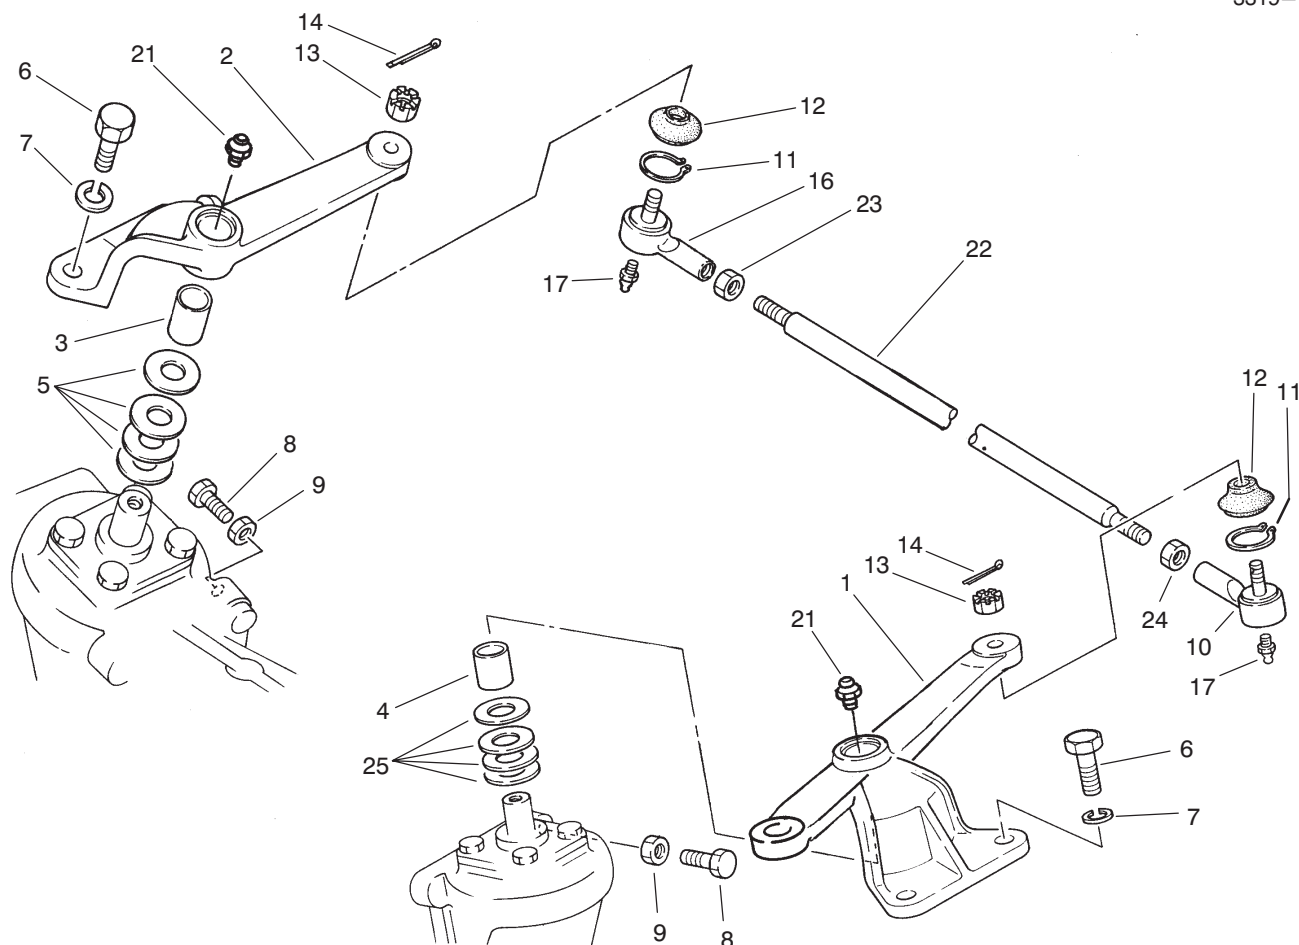


T-1108-1

STEERING ARM LINKAGE AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-8018	Arm-Drag Link	1	14	3272-7	Pin-Cotter	2
2	94-8019	Arm-Tie Rod	1	16	76-8050	Asm-R.H. Rod End (Incl. Ref. #11-14 & 17)	1
3	76-4260	Bushing	1	17	93-7786	Fitting-Grease	2
4	76-7950	Bushing	1	21	76-7960	Fitting-Grease	2
5	76-7820	Shim-1.0 mm	A/R	22	76-8020	Rod-Tie	1
*	76-7970	Shim-1.4 mm	A/R	23	76-8060	Nut-R.H.	1
*	76-7980	Shim-1.2 mm	A/R	24	76-8040	Nut-L.H.	1
*	76-7990	Shim-.08 mm	A/R	25	76-7700	Shim-0.8 mm	A/R
6	76-8000	Bolt	4	*	76-7760	Shim-1.0 mm	A/R
7	76-8010	Washer	2	*	76-7780	Shim-1.2 mm	A/R
8	76-7710	Bolt	2	*	76-7790	Shim-1.4 mm	A/R
9	76-7720	Nut	4	*	77-4050	Shim Set (Incl. Ref. #5)	1
10	76-8030	Asm-L.H. Rod End (Incl. Ref. #11-14 & 17)	1	*	77-4040	Shim Set (Incl. Ref. #25)	1
11	93-7783	Ring-Retaining	2				
12	93-7784	Cover	2				
13	93-7785	Nut-Slotted	2				

 *Not Illustrated

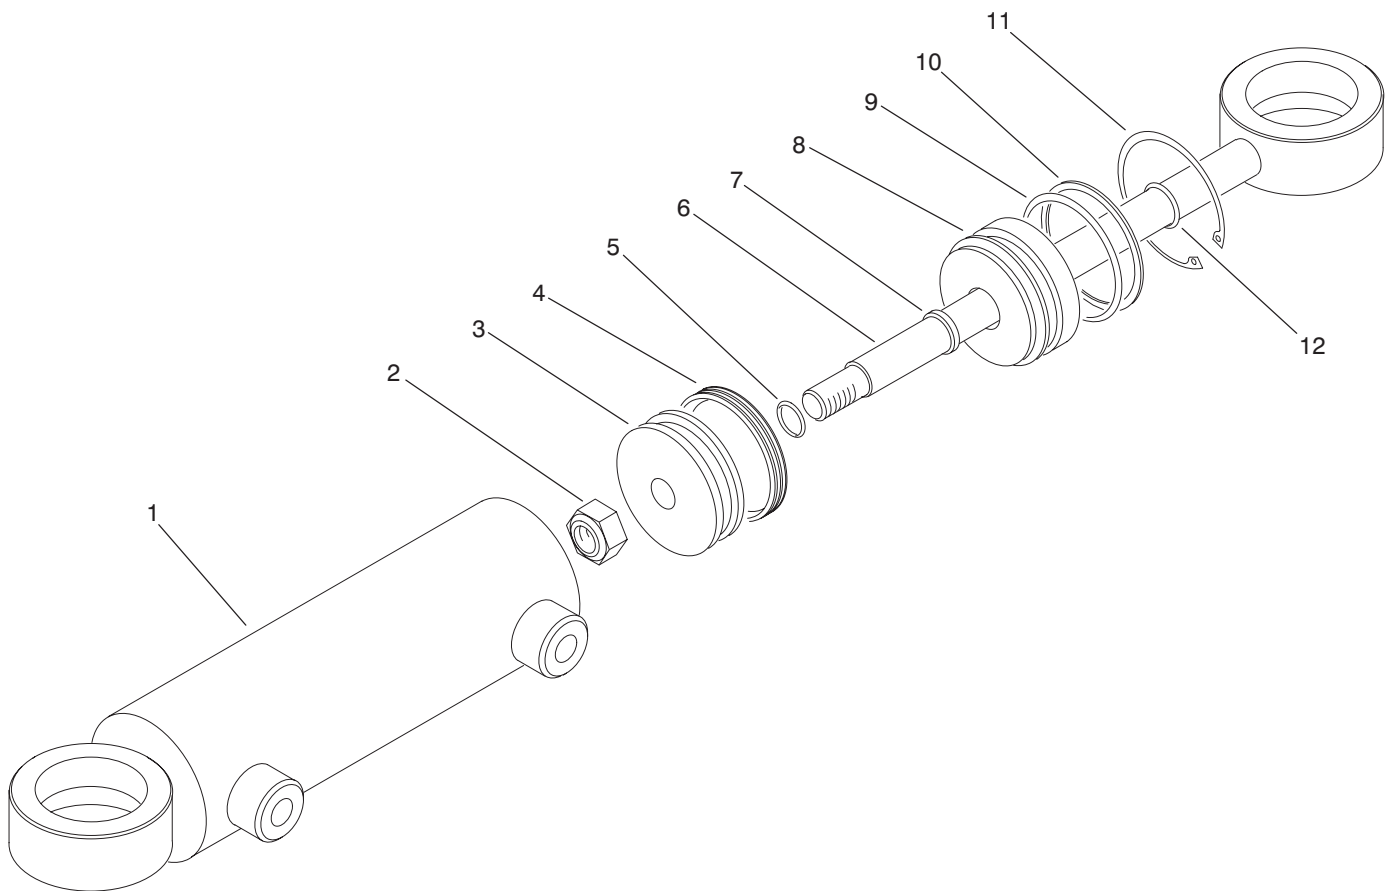


T-2452-1

HYDRAULIC CYLINDER NO. 94-8141 (Model No. 03801)

Ref. No.	Part No.	Description	No. Used
1	94-9955	Asm-Barrel	1
2	32152-10	Nut-Lock	1
3	94-9957	Piston	1
4		Uniring	1
5		O-Ring	1
6	94-9956	Asm-Piston Rod	1
7		Seal-Rod	1
8	94-9958	Gland-Cylinder	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
10		Backup	1
11	32120-8	Ring-Retaining	1
12		O-Ring	1
*	86-5390	Kit-Seal (Incl. Ref. #4, 5, 7, 9, 10 & 12)	1

 
*Not Illustrated

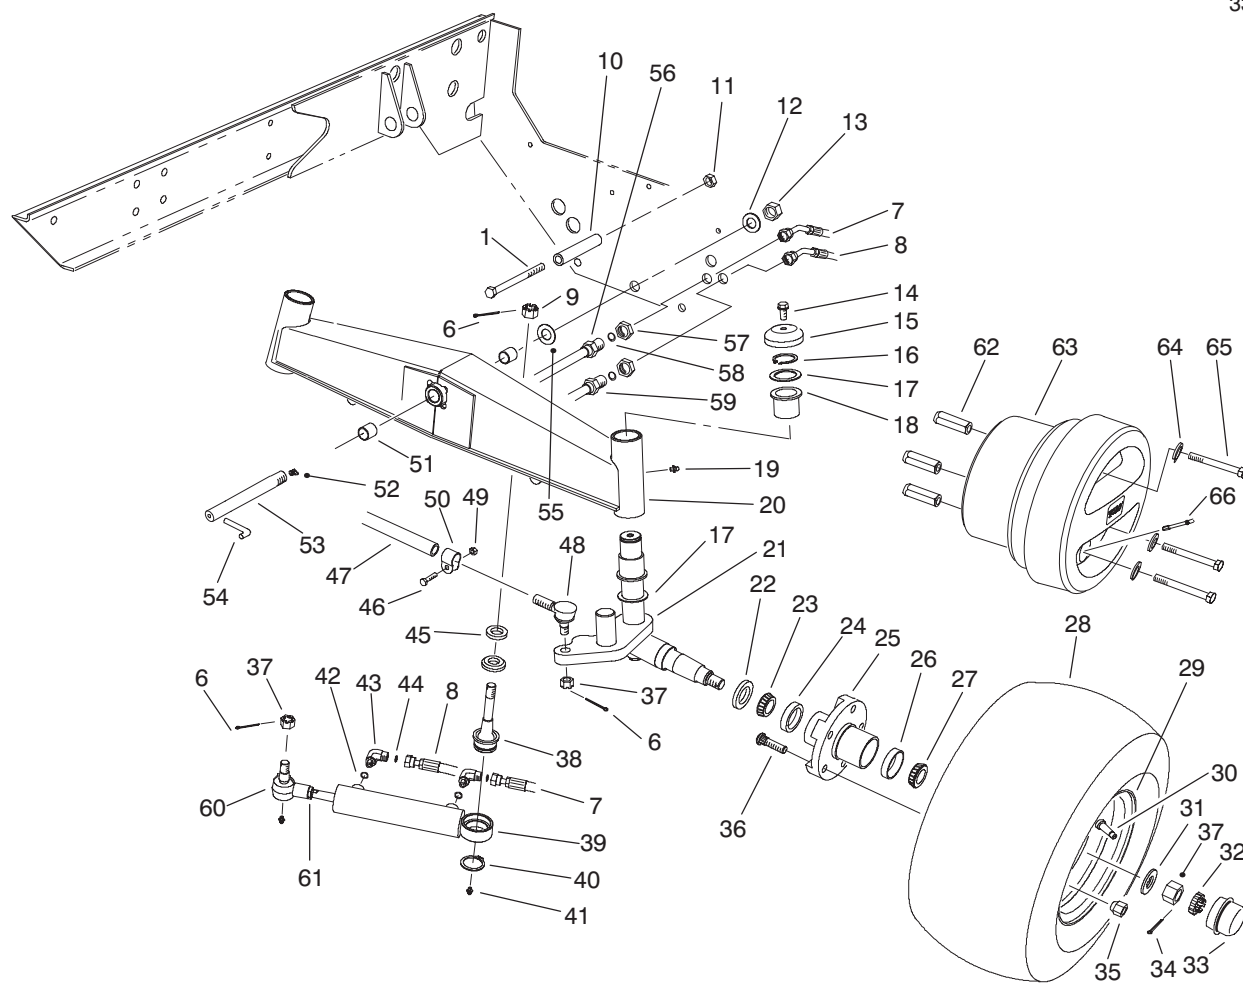

T-2078-3

2-WD REAR AXLE ASSEMBLY (Model No. 03800)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	325-20	Screw-Hex. Hd.	2	28	86-5910	Tire	2
6	3272-12	Pin-Cotter	2	29	217-125	Wheel	2
7	92-7594	Asm-Hose	1	30	232-27	Stem-Valve	2
8	92-7595	Asm-Hose	1	31	93-0309	Washer-Tab	2
9	32136-14	Nut-Hex. Slotted	4	32	93-0307	Nut-Retainer	2
10	76-8350	Stop-Axle	2	33	69-2970	Cap-Hub	2
11	3296-45	Nut-Lock	2	34	3272-13	Pin-Cotter	2
12	3256-29	Washer-Flat	1	35	242-50	Nut-Lug	10
13	94-8000	Nut-Lock	1	36	92-9652	Stud-Drive	10
14	3234-12	Screw-Hex. Hd. Flange	2	37	3220-7	Nut-Jam	2
15	69-8890	Cap-Spindle	2	38	92-5839	Ball Joint	1
16	32151-10	Ring-Retaining	2	39	94-8142	Asm-Cylinder	1
17	62-2170	Washer-Thrust	4	40	94-9973	Ring-Retaining	1
18	69-6470	Bushing-Flange	4	41	302-5	Fitting-Grease	1
19	302-11	Fitting-Grease	2	42	237-78	O-Ring	2
20	94-5607	Asm-Axle, Rear (Incl. Ref. #18, 19 & 51)	1	43	340-97	Fitting-Hydraulic 90° (Incl. Ref. #42 & 44)	2
21	92-9725	Spindle-LH	1	43	340-97	Fitting-Hydraulic 90° (Incl. Ref. #42 & 44)	2
*	92-9724	Spindle-RH	1	44	237-22	O-Ring	2
22	69-2980	Seal-Inner	2	45	92-5833	Spacer-Ball Joint	1
23	254-106	Cone-Bearing	2	46	3210-5	Screw-Hex. Hd.	2
24	254-107	Cup-Bearing	2	47	74-5940	Asm-Rod, Tie	1
25	92-9651	Asm-Hub (Incl. Ref. #24, 26, & 36)	2	48	2411-46	Joint-Ball, LH (Incl. Ref. #6)	1
26	254-72	Cup-Bearing	2				
27	254-92	Cone-Bearing	2				

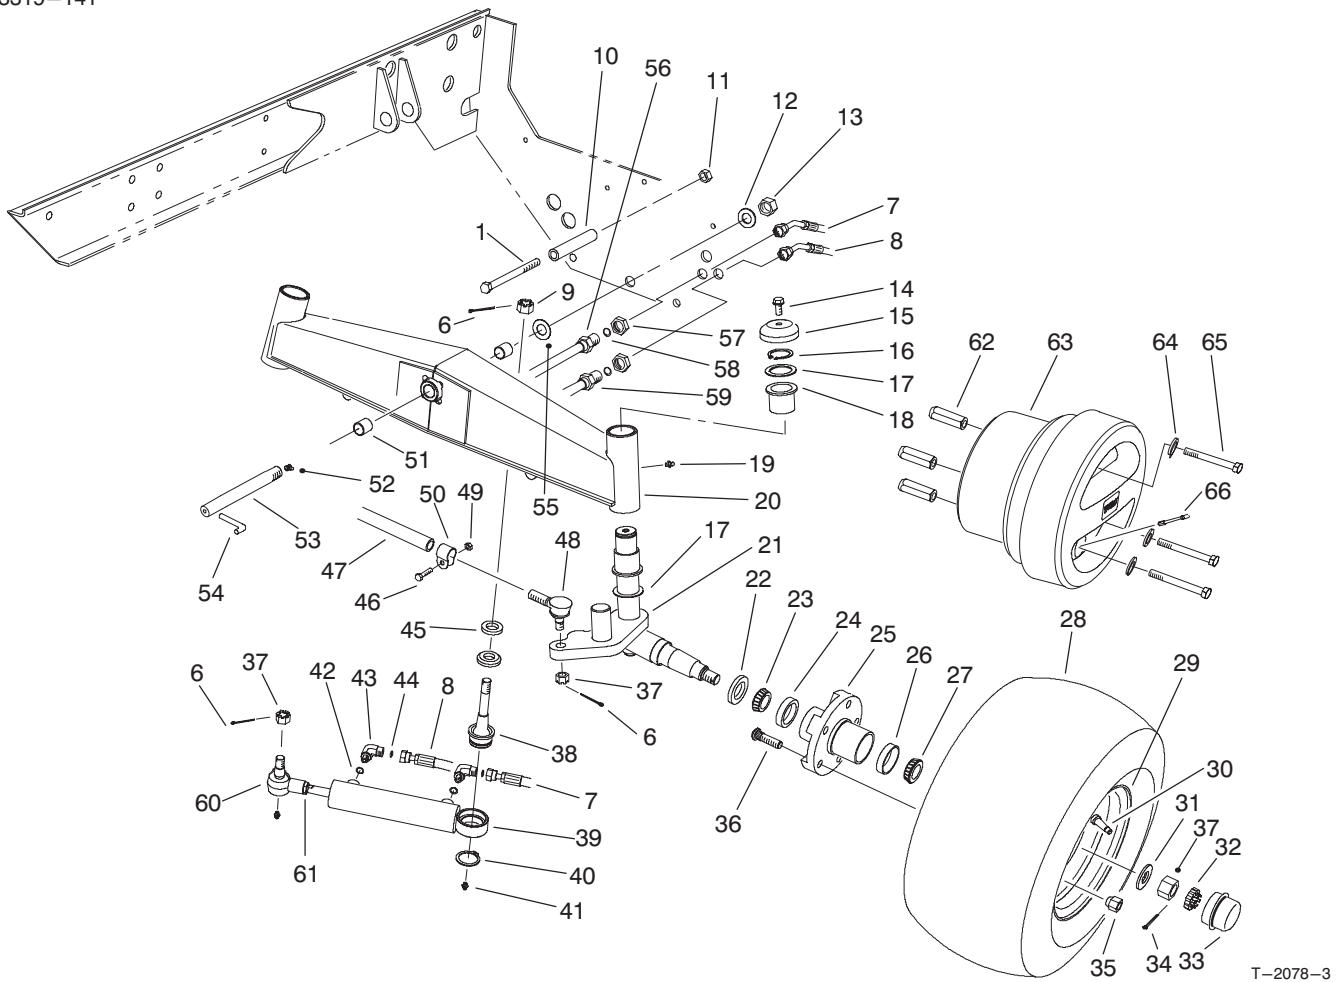 


T-2078-3

2-WD REAR AXLE ASSEMBLY (Model No. 03800) (Cont.)

Ref. No.	Part No.	Description	No. Used
48	2411-45	Joint-Ball, RH (Incl. Ref. #6)	1
49	32152-5	Nut-Lock	2
50	2412-122	Asm-Clamp (Incl. Ref. #46 & 49)	2
51	94-5603	Bushing-Sleeve	2
52	302-33	Fitting-Grease 90°	1
53	94-8115	Pin-Axle, Pivot	1
54	92-7604	Pin-Stop	1
55	93-7247	Washer-Thrust	1
56	92-7495	Asm-Tube, Steering Rear	1

Ref. No.	Part No.	Description	No. Used
57	340-70	Nut-Lock, Bulkhead	2
58	237-22	O-Ring	2
59	92-7494	Asm-Tube, Steering Rear	1
60	92-5837	Asm-Rod End	1
61	3220-11	Nut-Jam	1
62	94-2807	Adaptor-Nut (Europe)	6
63	94-3052	Weight-Wheel (Europe)	2
64	3256-26	Washer-Flat (Europe)	6
65	3213-14	Screw-HH (Europe)	6
66	94-3063	Extension-Stem, Valve (Europe)	2

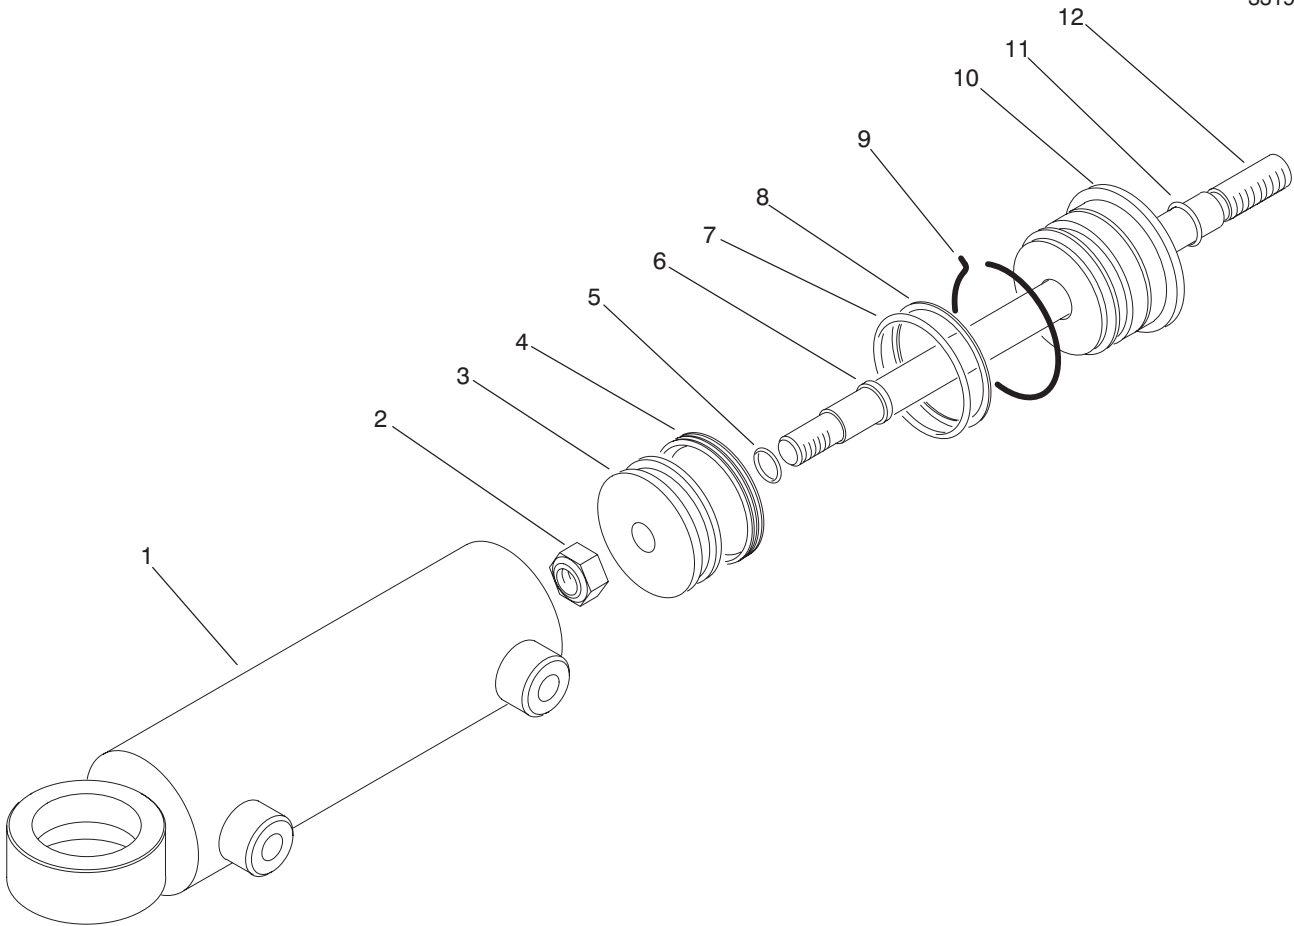 


T-2453-1

HYDRAULIC CYLINDER NO. 94-8142 (Model No. 03800)

Ref. No.	Part No.	Description	No. Used
1	94-9959	Asm-Barrel	1
2	32152-10	Nut-Lock	1
3	94-9961	Piston	1
4		Uniring	1
5		O-Ring	1
6		Seal-Rod	1
7		O-Ring	1

Ref. No.	Part No.	Description	No. Used
8		Backup	1
9	94-9963	Ring-Retaining	1
10	94-9962	Gland-Cylinder	1
11		O-Ring	1
12	94-9960	Asm-Rod, Piston	1
*	94-9964	Kit-Seal (Incl. Ref. #4-8, & 11)	1

 *Not Illustrated

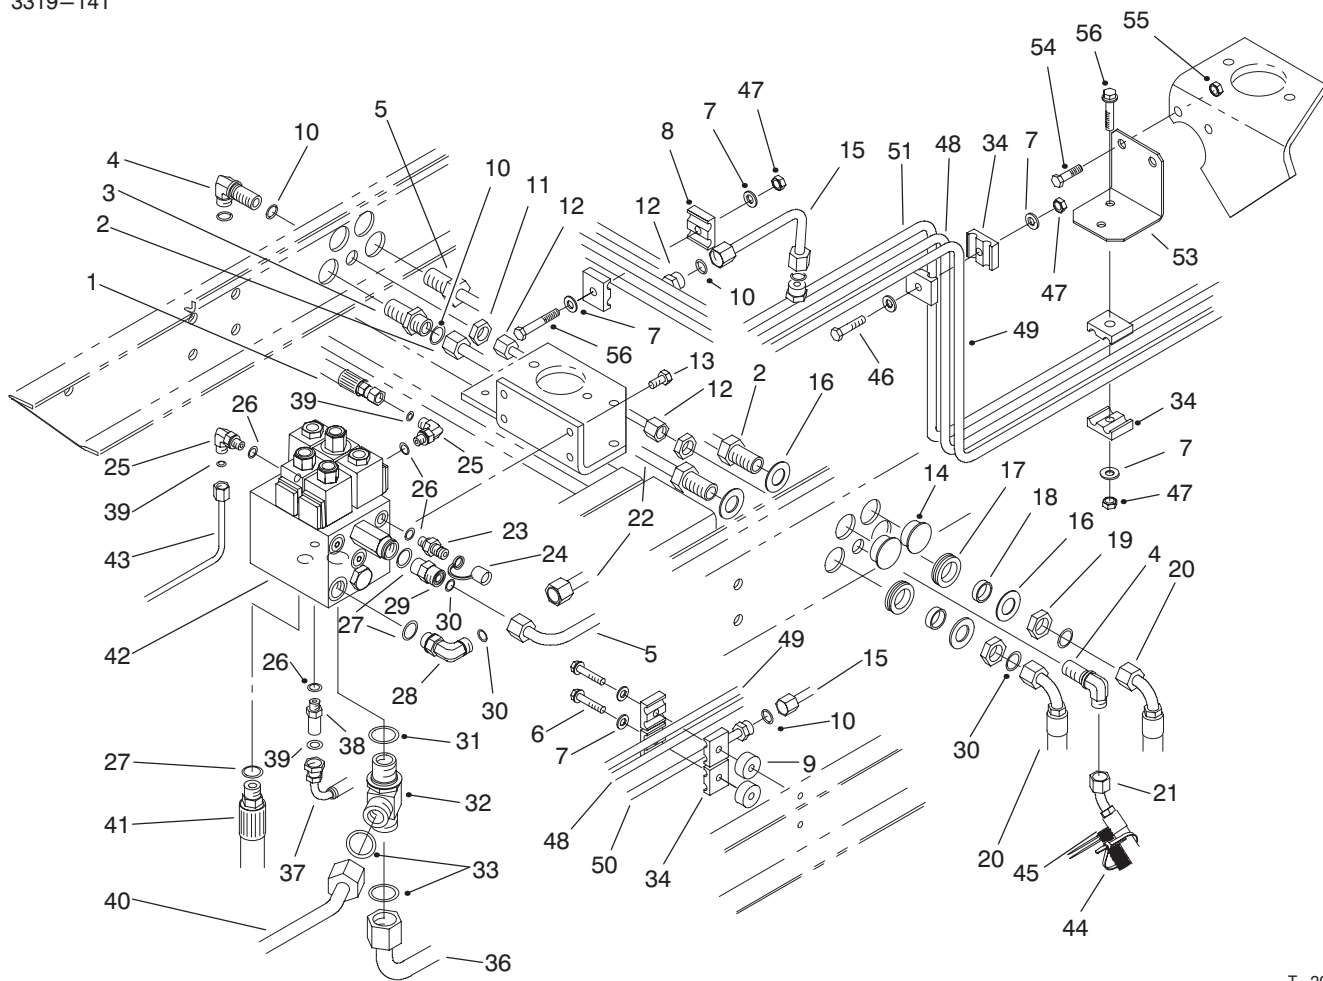


T-2079-1

REAR HYDRAULIC CONTROL BLOCK & TUBES

Ref. No.	Part No.	Description	No. Used
1	92-7638	Asm-Hose	1
2	92-7648	Asm-Hose	1
3	340-161	Fitting-Adapter (Incl. Ref. #30)	1
4	340-154	Fitting-Hydraulic 90° (Incl. Ref. #10)	2
5	92-7584	Asm-Tube	1
6	32104-37	Screw-Hex. Hd.	2
7	3256-23	Washer-Flat	8
8	56-7972	Clamp-Tube	2
9	80-8660	Spacer	2
10	237-22	O-Ring	2
11	340-70	Nut-Bulkhead	7
12	92-7647	Asm-Tube, Drain	1
13	33104-025	Screw-Hex. Hd. Flange	4
14	94-1402	Plug	4
15	93-4205	Asm-Tube, Drain (Model 03800)	1
15	93-4206	Asm-Tube, Drain (Model 03801)	1
16	69-8930	Washer	8
17	240-5	Grommet	4
18	69-8960	Spacer	4
19	340-127	Nut-Bulkhead	4
20	92-7649	Asm-Hose	4
21	93-4201	Asm-Hose	2


Ref. No.	Part No.	Description	No. Used
22	92-7585	Asm-Tube	1
23	354-77	Fitting-Quick Connect (Incl. Ref. #26)	1
24	354-79	Cap-Fitting	1
25	340-132	Fitting-Hydraulic 90° (Incl. Ref. #26 & 39)	2
26	237-78	O-Ring	4
27	237-79	O-Ring	3
28	340-98	Fitting-Hydraulic 90° (Incl. Ref. #27 & 30)	1
29	340-4	Fitting-Hydraulic (Incl. Ref. #27 & 30)	1
30	237-30	O-Ring	6
31	237-81	O-Ring	1
32	340-148	Fitting-Tee (Incl. Ref. #31, 33)	1
33	237-58	O-Ring	2
34	56-7973	Clamp-Tube	10
36	92-7558	Asm-Tube, Cooler Rear	1
37	92-7639	Asm-Hose	1
38	94-1403	Fitting-Hydraulic (Incl. Ref. #26 & 39)	1
39	237-21	O-Ring	2
40	92-7557	Asm-Tube, Cooler Front	1
41	92-7492	Asm-Hose	1
42	92-7419	Asm-Block, Manifold	1

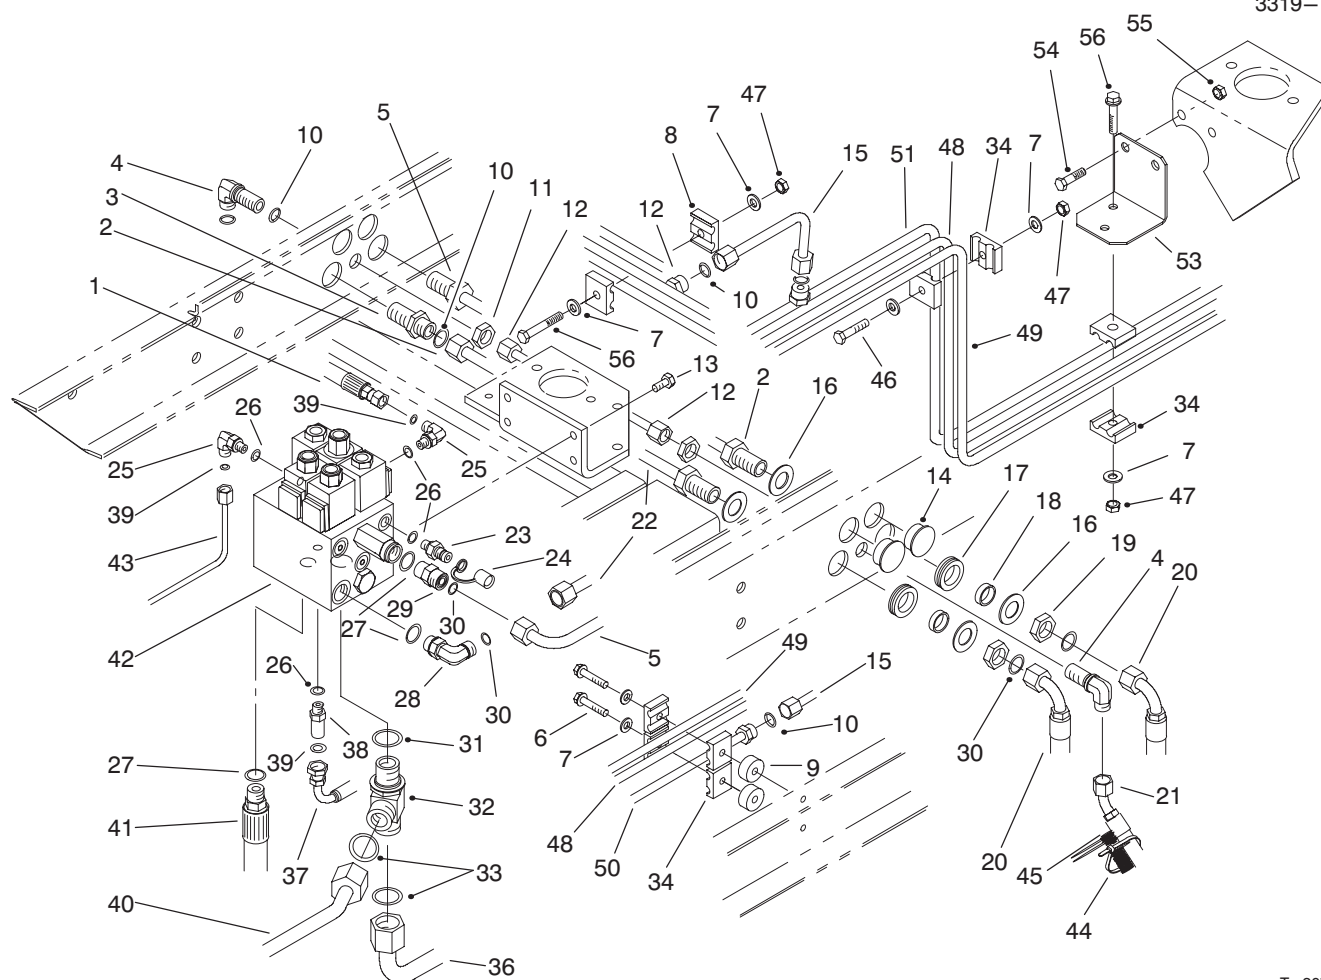 

T-2079-1

REAR HYDRAULIC CONTROL BLOCK & TUBES (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
43	92-7591	Asm—Tube, P2A	1	51	92-7553	Asm—Tube, Rear Drain (Model 03801)	1
44	3290-378	Tie—Cable	6	52	237-42	O—Ring	2
45	94-3090	Harness—Wire, Main	1	53	94-2834	Bracket—Clamp	1
46	322-6	Screw—HH	1	54	323-6	Screw—Hex. Hd.	2
47	3296-47	Nut—Lock	4	55	32128-21	Nut—Lock	2
48	92-7494	Asm—Tube, Steering, Rear	1	56	322-7	Screw—Hex. Hd.	3
49	92-7495	Asm—Tube, Steering, Rear	1				
50	92-7598	Asm—Tube, Front Drain	1				

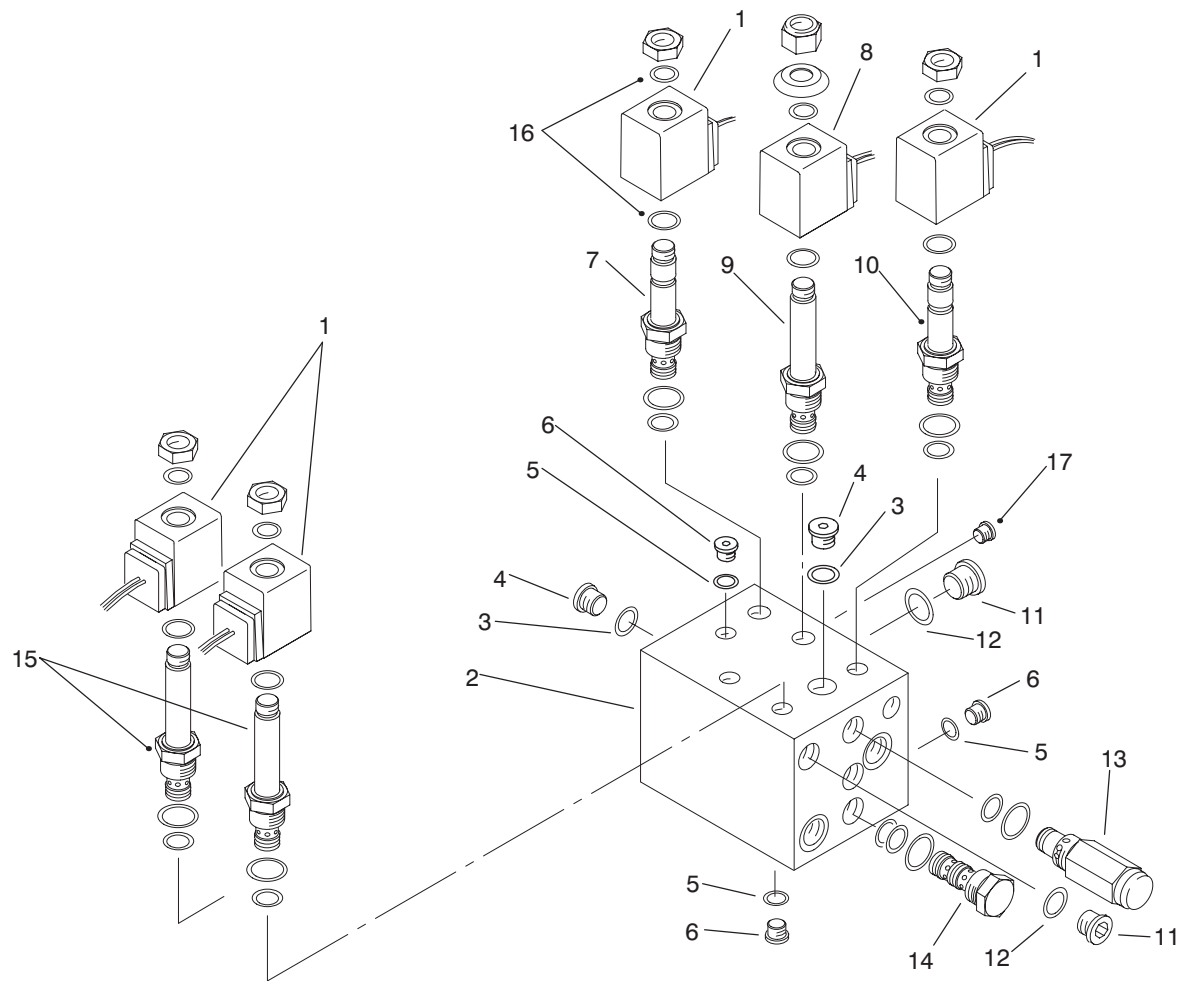 

T-2080-1


MANIFOLD ASSEMBLY NO. 92-7419

Ref. No.	Part No.	Description	No. Used
1	88-9190	Solenoid—20 Watt	4
†2		Block—Manifold, Rear	1
3	237-78	O-Ring	4
4	353-990	Plug (Incl. Ref. #30)	4
5	237-56	O-Ring	4
6	353-991	Plug (Incl. Ref. #5)	4
7	88-6990	Cartridge—N.C. Spool (Use Seal Kit 75-2080)	1
8	88-9200	Solenoid—28 Watt	1
9	95-3459	Cartridge—No Flow (Use Seal Kit 75-2080)	1
10	88-6980	Cartridge—N.C. Poppet (Use Seal Kit 75-2080)	1

Ref. No.	Part No.	Description	No. Used
11	353-989	Plug (Incl. Ref. #12)	5
12	237-42	O-Ring	5
13	75-0920	Cartridge—Relief 3000 psi (Use Seal Kit 75-2080)	1
14	93-7491	Cartridge—Pilot Check (Use Seal Kit 69-4260)	1
15	93-7494	Cartridge—N.O. Poppet (Use Seal Kit 75-2080)	2
16	94-5438	Seal—Solenoid	10
17	94-2626	Plug—Orifice	1
*	75-2080	Seal Kit	5
*	69-4260	Seal Kit	1

*Not Illustrated

 
†Not Serviced Separately

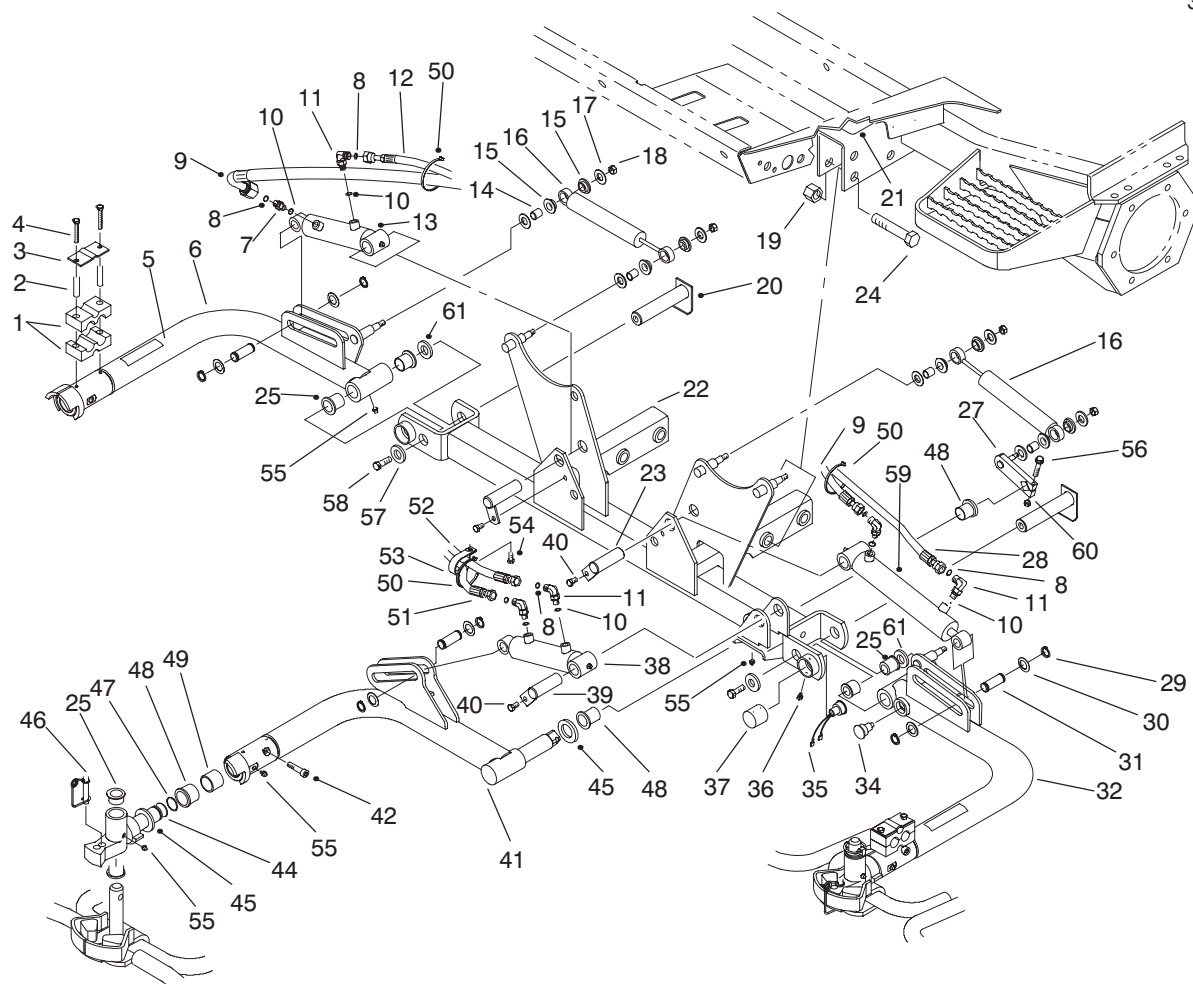

T-2081-1

FRONT LIFT ARMS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	82-8170	Clamp	6	22	93-2649	Asm-Frame, Carrier	1
2	93-7960	Spacer	6	23	83-6780	Pin-Cylinder	2
3	93-7961	Clamp-Drain, Case	3	24	328-7	Screw-Hex. Hd.	4
4	60-6700	Screw-Hex. Hd.	6	25	94-8949	Bushing-Flange	12
5	36-3400	Decal-Warning	2	27	94-1425	Bar-Lift, Center	1
5	93-6687	Decal-No Step (Europe)	2	28	82-6490	Asm-Hose	1
5	84-2780	Decal-No Step (Japan)	2	29	94-9974	Ring-Retaining	6
6	93-9194	Lift Arm #5	1	30	94-9998	Washer-Thrust	6
7	340-92	Fitting-Hydraulic (Incl. Ref. #8 & 10)	1	31	75-5350	Pin-Cylinder, Slide	3
8	237-21	O-Ring	6	32	93-9193	Lift Arm #4	1
9	75-5890	Hose	2	34	92-8754	Magnet-Switch, Reed	1
10	237-78	O-Ring	6	35	92-8002	Sensor-Switch, Reed	1
11	340-132	Fitting-Hydraulic 90° (Incl. Ref. #8 & 10)	5	36	32104-76	Screw-Self Tapping	2
12	92-7564	Asm-Hose	1	37	75-6370	Cap-Sensor	1
13	93-7551	Cylinder-Hydraulic	1	38	93-2650	Cylinder-Hydraulic	1
14	256-172	Bushing	6	39	83-6790	Pin-Short, Cylinder	1
15	94-1430	Bushing-Flange	12	40	32144-14	Screw-Hex. Hd.	3
16	93-4224	Absorber-Shock	3	41	93-9190	Lift Arm #1	1
17	69-8980	Washer-Flat	12	42	93-4234	Screw-Socket Hd.	3
18	33025-00	Nut	6	44	93-9181	Knuckle-Pivot	3
19	3296-51	Nut-Lock	4	45	94-8946	Washer-Thrust	3
20	95-3461	Pin	2	46	93-9161	Pin	3
21	88-0440	Decal-Floor Plate	1	47	93-7524	O-Ring	3
21	93-6693	Decal-Floor Plate (Europe)	1	48	94-8947	Bushing-Flange	5
21	88-1900	Decal-Floor Plate (Japan)	1	49	94-8948	Bushing	3
				50	3290-378	Tie-Cable	3
				51	92-7565	Asm-Hose	1

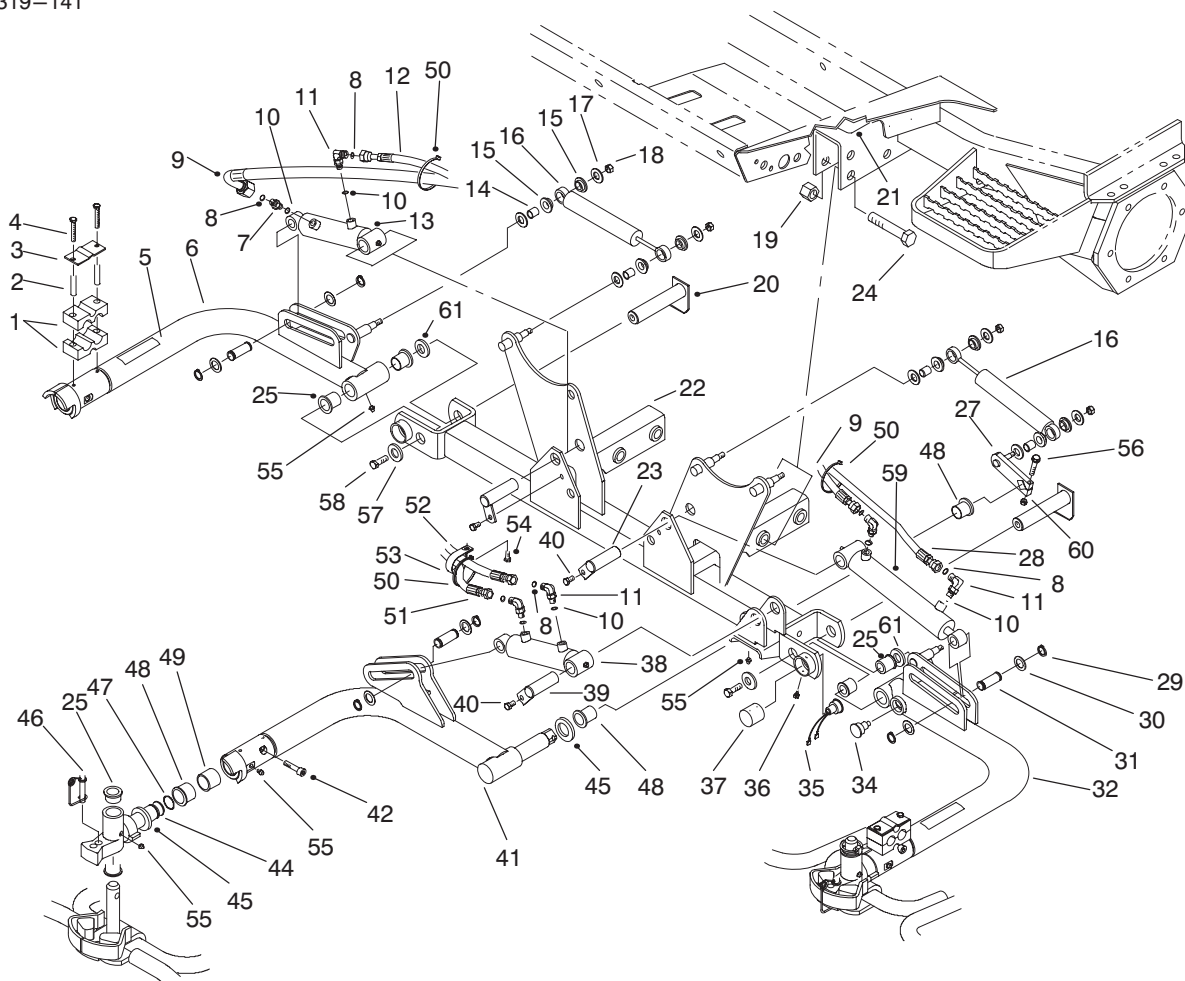 


T-2081-1

FRONT LIFT ARMS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
52	92-7562	Asm—Hose	1
53	2412-96	Clamp	1
54	322-4	Screw—HH	1
55	302-5	Fitting—Grease	9
56	33104-060	Screw—HH	1

Ref. No.	Part No.	Description	No. Used
57	53-6380	Washer—Flat	2
58	33105-040	Screw—HH	2
59	93-7555	Cylinder—Hydraulic	1
60	33024-00	Nut	1
61	3256-42	Washer—Flat	2

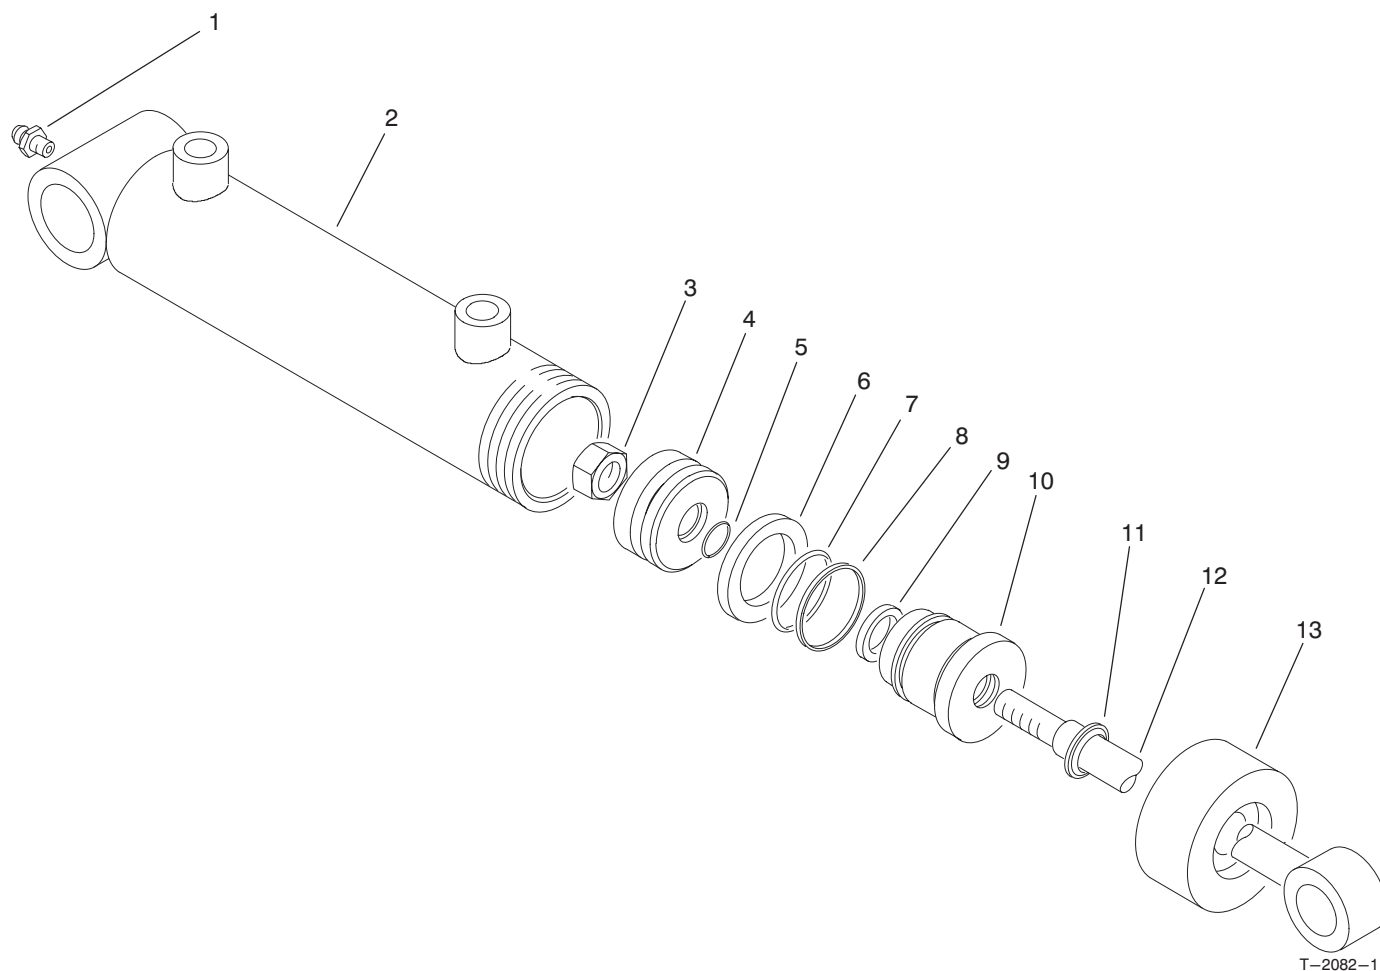 


HYDRAULIC CYLINDER NO. 93-7555

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting—Grease	1
†2		Assembly—Barrel	1
3	32152-10	Nut—Lock	1
4	70-2780	Piston	1
†5		O—Ring	1
†6		Seal—Special	1
†7		O—Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal—Rod	1
10	93-7990	Head	1
†11		Seal—Dust	1
12	75-2120	Shaft With Clevis	1
13	93-7991	Collar	1
*	86-7330	Kit—Seal Repair (Incl. Ref. #5-9, & 11)	1

†Not Serviced Separately.

 *Not Illustrated

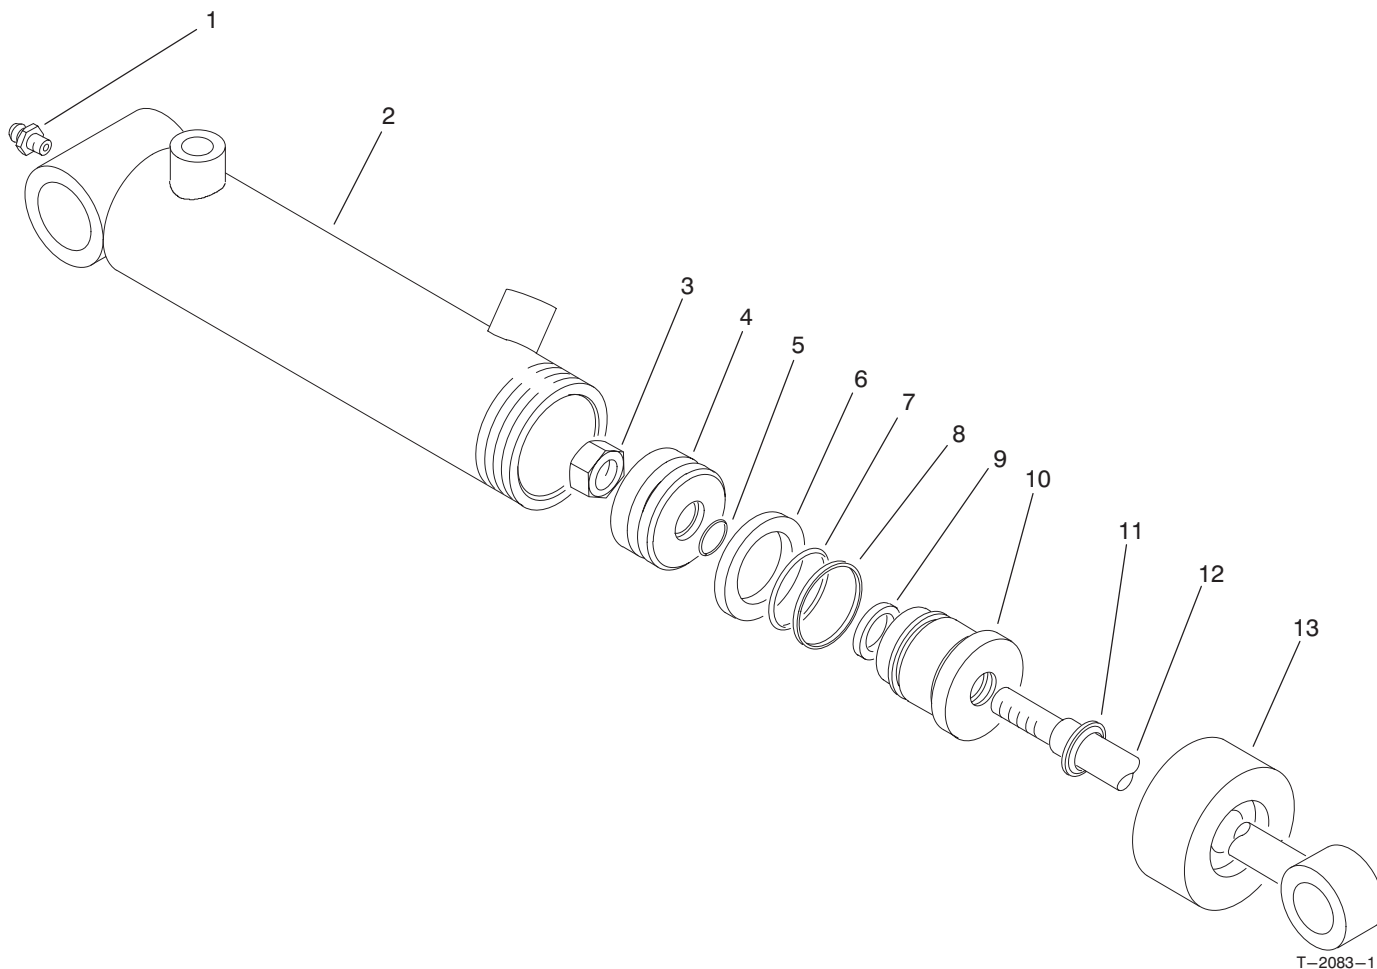


HYDRAULIC CYLINDER NO. 93-7551

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting—Grease	1
†2		Asm—Barrel	1
3	32152-10	Nut—Lock	1
4	84-1710	Piston	1
†5		O—Ring	1
†6		Seal—Special	1
†7		O—Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal—Rod	1
10	93-7993	Head	1
†11		Seal—Dust	1
12	84-1740	Shaft With Clevis	1
13	93-7994	Collar	1
*	84-1760	Kit—Seal Repair (Incl. Ref. #5-9, & 11)	1

† Not Serviced Separately.

 *Not Illustrated

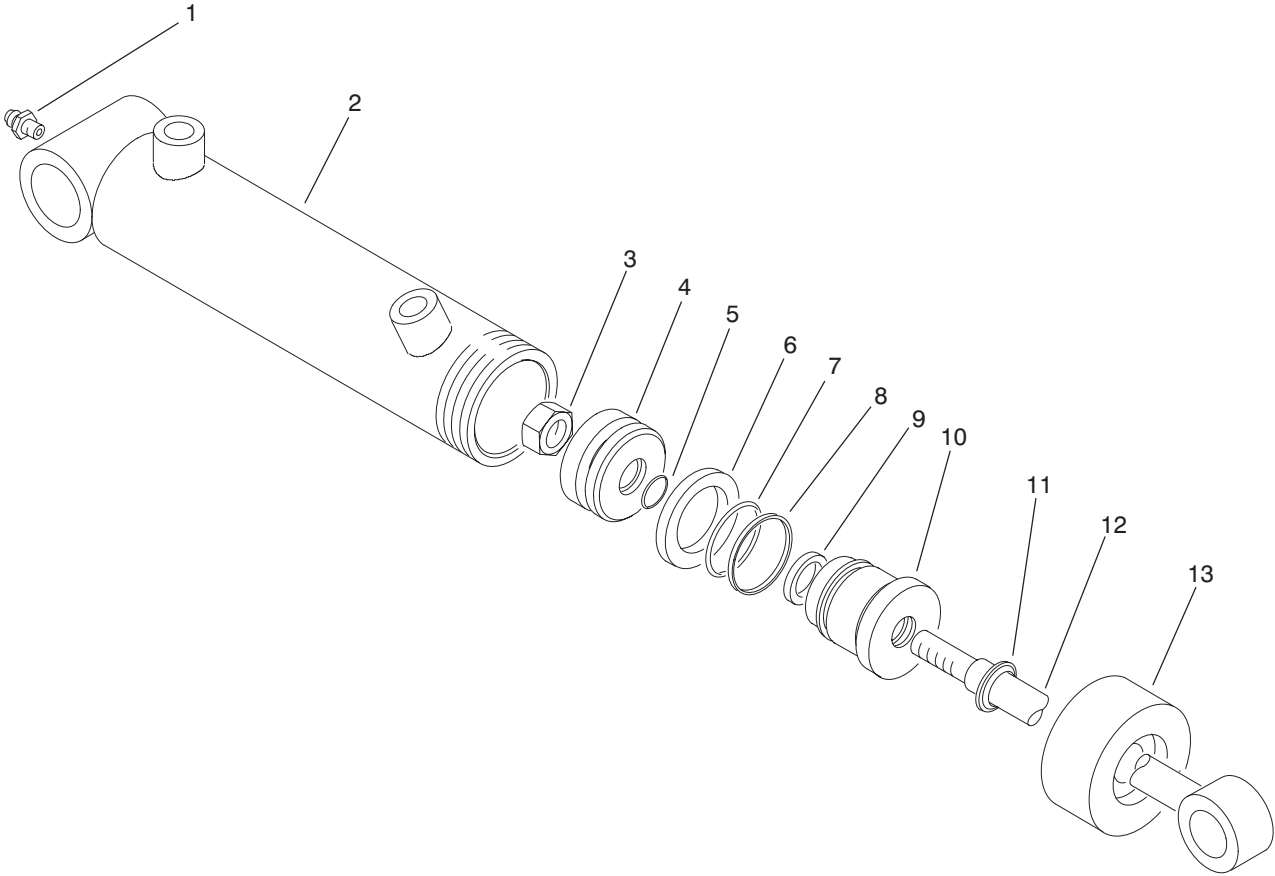


T-2084-1

HYDRAULIC CYLINDER NO. 93-2650

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1	†9		Seal-Rod	1
†2		Assembly-Barrel	1	10	93-7990	Head	1
3	32152-10	Nut-Lock	1	†11		Seal-Dust	1
4	70-2780	Piston	1	12	94-2644	Shaft With Clevis	1
†5		O-Ring	1	13	93-7991	Collar	1
†6		Seal-Special	1	*	86-7330	Kit-Seal Repair (Incl. Ref. #5-9, & 11)	1
†7		O-Ring	1				
†8		Backup	1				

 † Not Serviced Separately.
*Not Illustrated

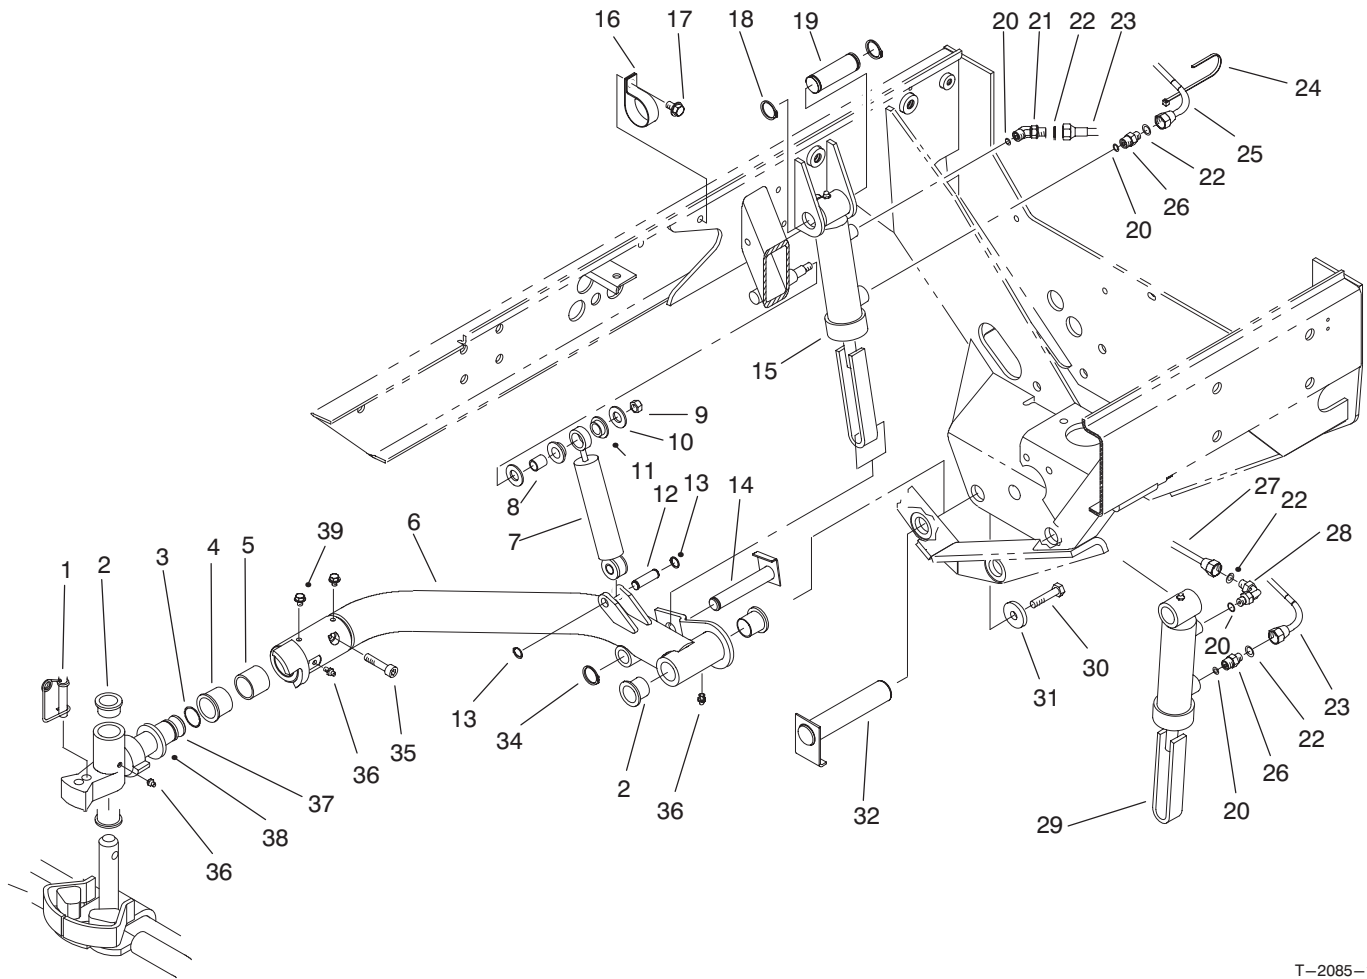


T-2085-1

REAR LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-9161	Pin	2
2	94-8949	Bushing-Flange	8
3	93-7524	O-Ring	2
4	94-8947	Bushing-Flange	2
5	94-8948	Bushing	2
6	93-9192	Lift Arm #3	1
*	93-9191	Lift Arm #2	1
7	93-4224	Absorber-Shock	2
8	256-172	Bushing	4
9	33025-00	Nut	2
10	69-8980	Washer-Flat	4
11	94-1430	Bearing-Flange	8
12	93-4246	Pin-Shock	2
13	32151-61	Ring-Retaining	4
14	92-7456	Pin	2
15	92-7420	Asm-Cylinder, Hyd. #3	1
16	2412-96	Clamp-R	1
17	32144-11	Screw-Self Tapping	1
18	32151-36	Ring-Retaining	4
19	92-7548	Pin-Cylinder	2
20	237-78	O-Ring	4

Ref. No.	Part No.	Description	No. Used
21	340-103	Fitting-Hydraulic 45° (Incl. Ref. #20 & 22)	1
22	237-21	O-Ring	4
23	92-7636	Asm-Hose	1
24	3290-378	Tie-Cable	2
25	92-7638	Asm-Hose	1
26	340-92	Fitting-Hydraulic (Incl. Ref. #20 & 22)	2
27	92-7639	Asm-Hose	1
28	340-132	Fitting-Hydraulic 90° (Incl. Ref. #20 & 22)	1
29	92-7421	Asm-Cylinder, Hyd. LH	1
30	33105-040	Screw-HHF	2
31	53-6380	Washer-Flat	2
32	95-3461	Pin	2
34	32120-93	Ring-Retaining	2
35	93-4234	Screw-Socket Hd.,	2
36	302-5	Fitting-Grease	6
37	93-9181	Knuckle-Pivot	2
38	94-8946	Washer-Thrust	2
39	33104-010	Screw-HH	4

 *Not Illustrated

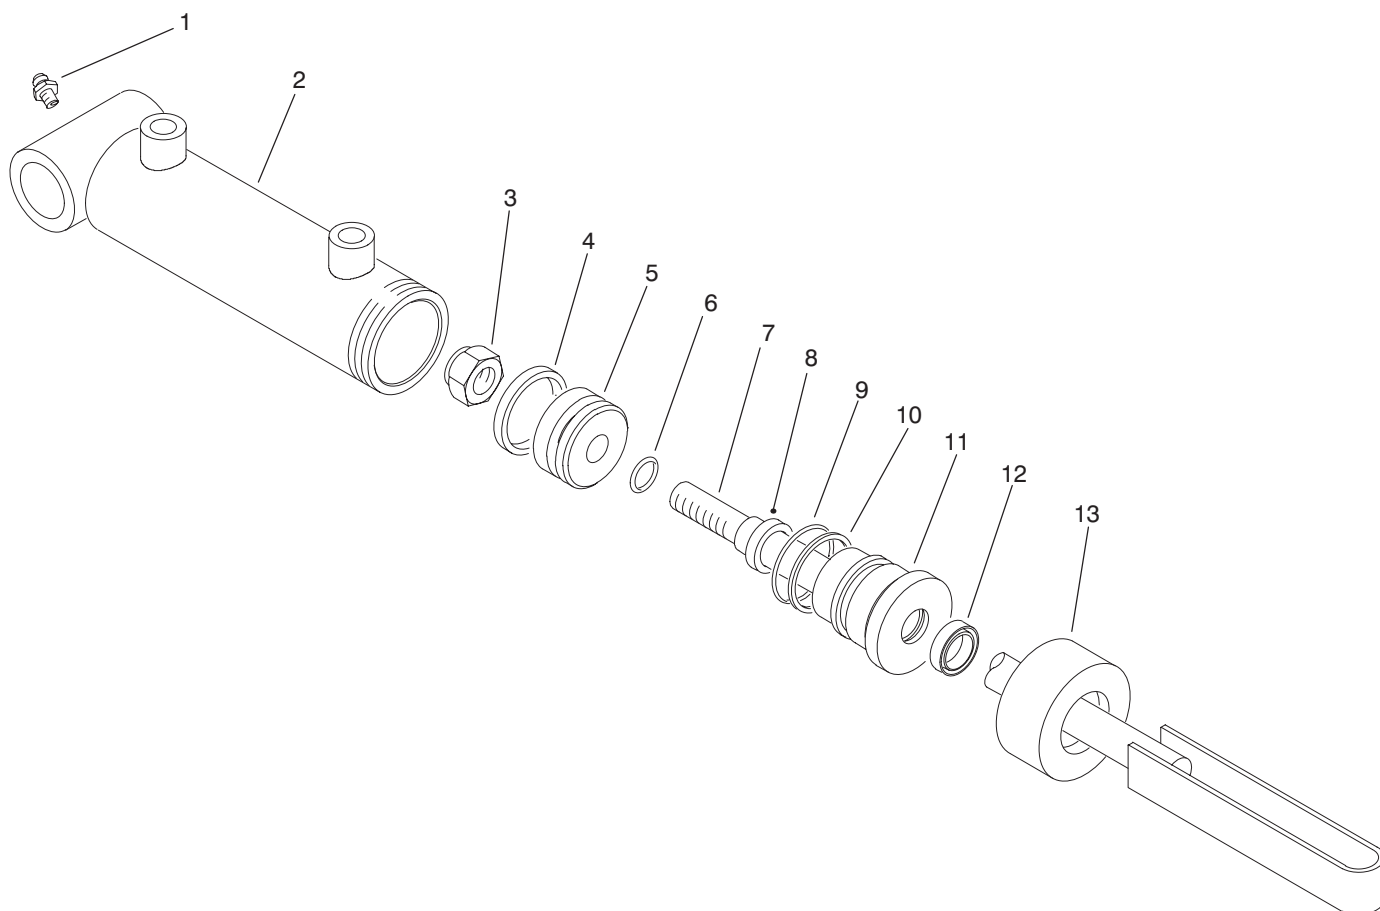


T-2086-1

HYDRAULIC CYLINDER NO. 92-7420

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting—Grease	1	9		O—Ring	1
2	93-7992	Asm.—Barrel	1	†10		Backup	1
3	32152-10	Nut	1	11	93-7990	Head	1
†4		Uni—ring	1	†12		Seal—Dust	1
5	70-2780	Piston	1	13	93-7991	Collar	1
†6		O—Ring	1	*	86-7330	Seal repair Kit	1
7	93-7989	Shaft W/Clevis	1			(Incl. Ref. #4, 6, 8-10 & 12)	
†8		Seal—Rod	1				

*Not Illustrated

 † Not Serviced Separately.

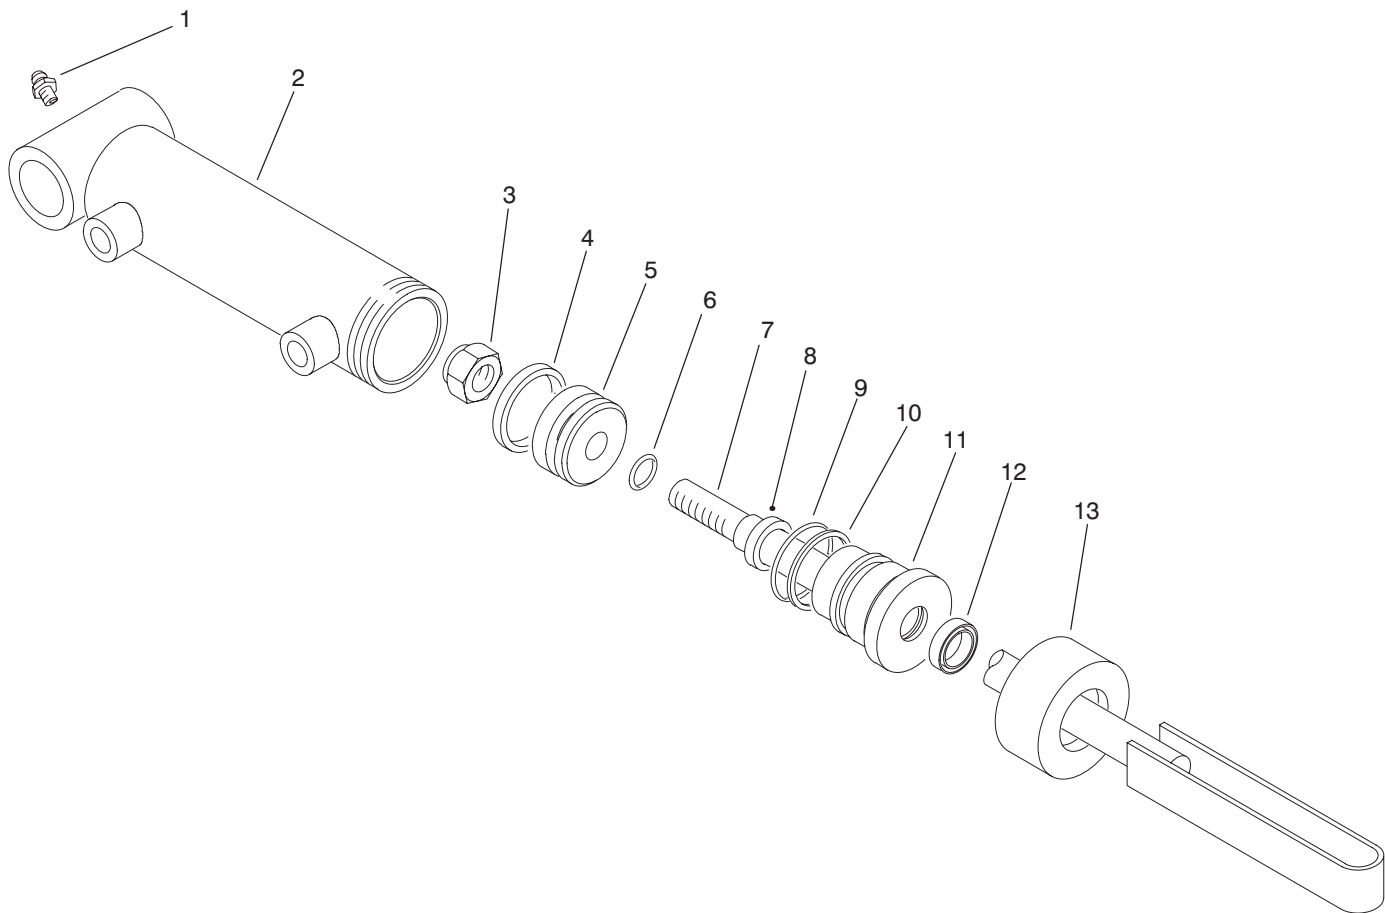


T-2087-1

HYDRAULIC CYLINDER NO. 92-7421

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1
2	93-7995	Asm-Barrel	1
3	32152-10	Nut	1
†4		Uni-ring	1
5	84-1710	Piston	1
†6		O-Ring	1
7	93-7989	Shaft W/Clevis	1
†8		Seal-Rod	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
†10		Backup	1
11	93-7993	Head	1
†12		Seal-Dust	1
13	93-7994	Collar	1
*	84-1760	Seal repair Kit (Incl. Ref. #4, 6, 8-10 & 12)	1

 
*Not Illustrated
†Not Serviced Separately.

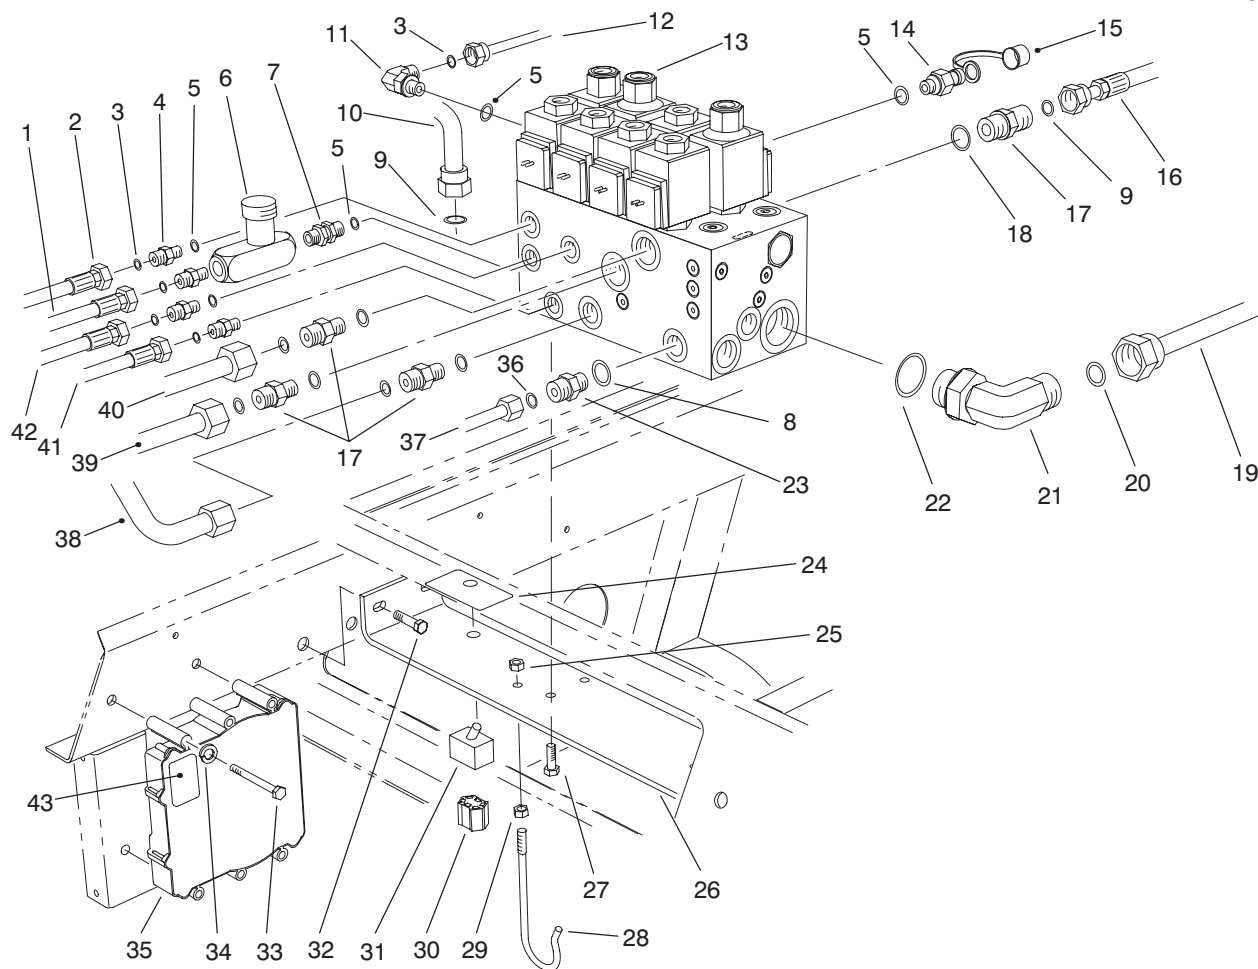

T-2088-1

FRONT HYDRAULIC CONTROL BLOCK & HOSES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	82-6490	Asm-Hose	1	22	237-81	O-Ring	1
2	92-7562	Asm-Hose	1	23	340-2	Adapter-Hydraulic (Incl. Ref. #8 & 36)	1
3	237-21	O-Ring	5	24	93-9197	Decal-Switch, Backlap	1
4	340-92	Fitting-Hydraulic (Incl. Ref. #3 & 5)	4	24	93-1264	Decal-Switch, Backlap (Europe)	1
5	237-78	O-Ring	8	24	94-4580	Decal-Backlap (Japan)	1
6	93-7489	Valve-Control, Flow	1	25	3296-29	Nut-Lock	1
7	93-7597	Fitting-SAE (Incl. Ref. #5)	1	26	92-7519	Bracket-Block, Manifold	1
8	237-42	O-Ring	1	27	33104-016	Screw-Hex. Hd. Flange	4
9	237-30	O-Ring	4	28	93-7970	Form-Wire, Hose Mount	1
10	92-7479	Asm-Tube	1	29	3217-6	Nut-Jam	1
11	340-132	Fitting-Hydraulic 90° (Incl. Ref. #3 & 5)	1	30	94-3090	Harness-Wire, Main	1
12	92-7591	Asm-Tube	1	31	93-7487	Switch-Toggle	1
13	92-7418	Asm-Block, Control	1	32	3234-17	Screw-Flange Hd.	4
14	354-77	Fitting-Quick Connect (Incl. Ref. #5)	1	33	321-15	Screw-HH	3
15	354-79	Cap-Fitting	1	34	3253-3	Washer-Lock	3
16	92-7491	Asm-Hose	1	35	92-5720	Controller-Solid State	1
17	340-4	Fitting-Hydraulic (Incl. Ref. #9 & 18)	4	36	237-22	O-Ring	1
18	237-79	O-Ring	4	37	93-4222	Asm-Tube, Drain Return	1
19	92-7557	Asm-Tube	1	38	94-1447	Asm-Tube, Steering Ret.	1
20	237-65	O-Ring	1	39	93-4217	Asm-Tube	1
21	340-139	Fitting-Hydraulic 90° (Incl. Ref. #20 & 22)	1	40	93-4216	Asm-Tube	1
				41	92-7565	Asm-Hose	1
				42	92-7564	Asm-Hose	1
				43	93-8053	Decal-ECU Label (Europe)	1

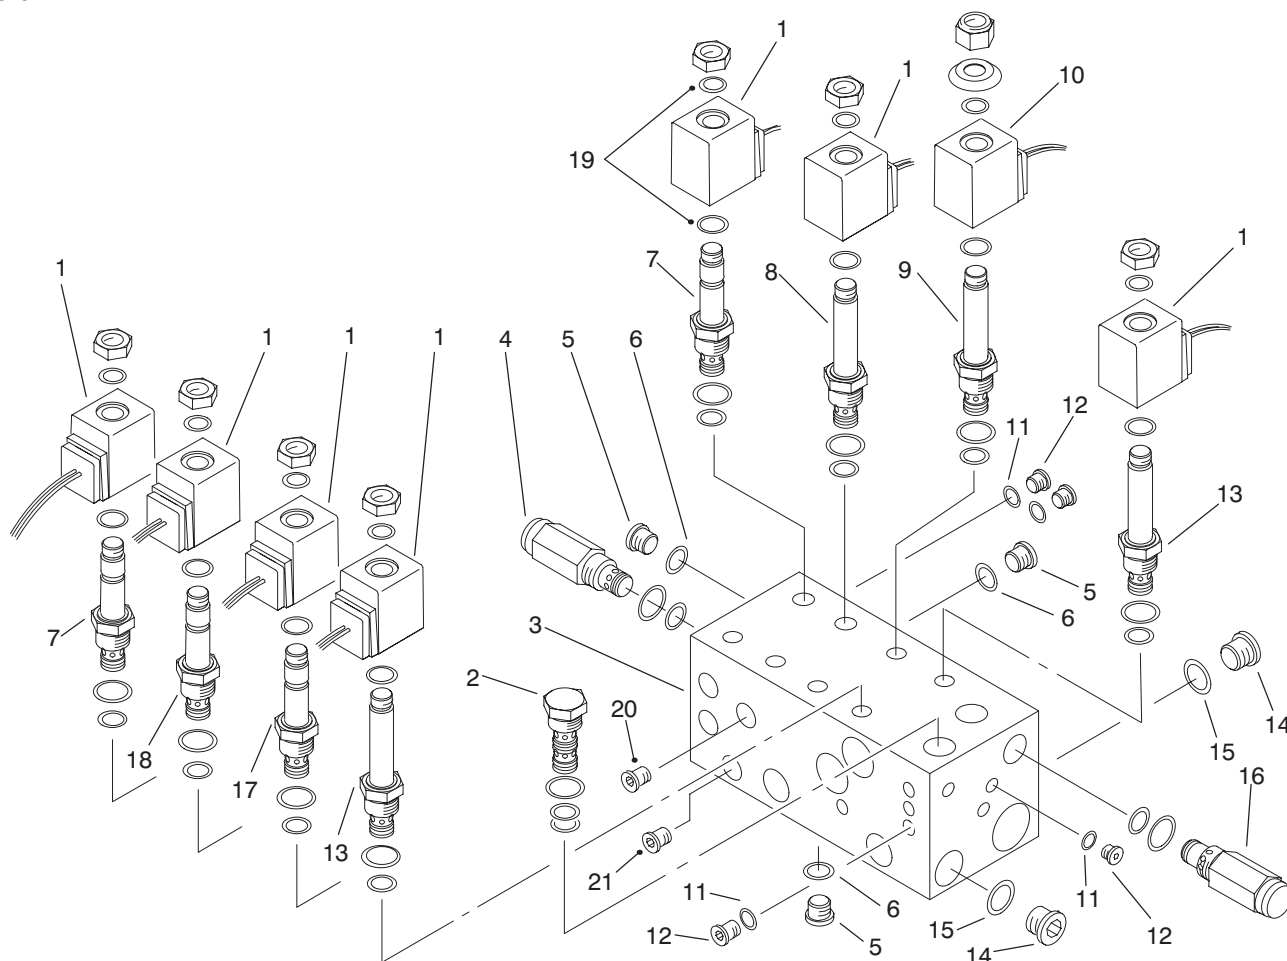 

T-2089-2


CONTROL BLOCK ASSEMBLY NO. 92-7418

Ref. No.	Part No.	Description	No. Used
1	88-9190	Solenoid—20 Watt	7
2	93-7491	Cartridge—Pilot Check (Use Seal Kit 69-4260)	1
†3		Block—Manifold, Front	1
4	93-7492	Cartridge—Relief 2300 psi (Use Seal Kit 75-2080)	1
5	353-990	Plug (Incl. Ref. #6)	10
6	237-78	O-Ring	10
7	88-6990	Cartridge—N.C. (Use Seal Kit 75-2080)	2
8	92-3071	Solenoid (Use Seal Kit 69-4260)	1
9	95-3459	Cartridge—N.O. (Use Seal Kit 75-2080)	1
10	88-9200	Solenoid—28 Watt	1
11	237-156	O-Ring	10
12	353-991	Plug (Incl. Ref. #11)	10

Ref. No.	Part No.	Description	No. Used
13	93-7494	Cartridge—N.O. Poppet (Use Seal Kit 75-2080)	2
14	353-989	Plug (Incl. Ref. #15)	5
15	237-42	O-Ring	5
16	75-0920	Cartridge—Relief 3000 psi (Use Seal Kit 75-2080)	1
17	88-6980	Cartridge—N.O. Poppet (Use Seal Kit 75-2080)	1
18	92-6315	Cartridge—N.C. Poppet (Use Seal Kit 75-2080)	1
19	94-5438	Seal—Solenoid	16
20	94-3077	Plug—Orifice	1
21	94-8140	Plug—Orifice	1
*	75-2080	Seal Kit	7
*	69-4260	Seal Kit	2

*Not Illustrated

 †Not Serviced Separately

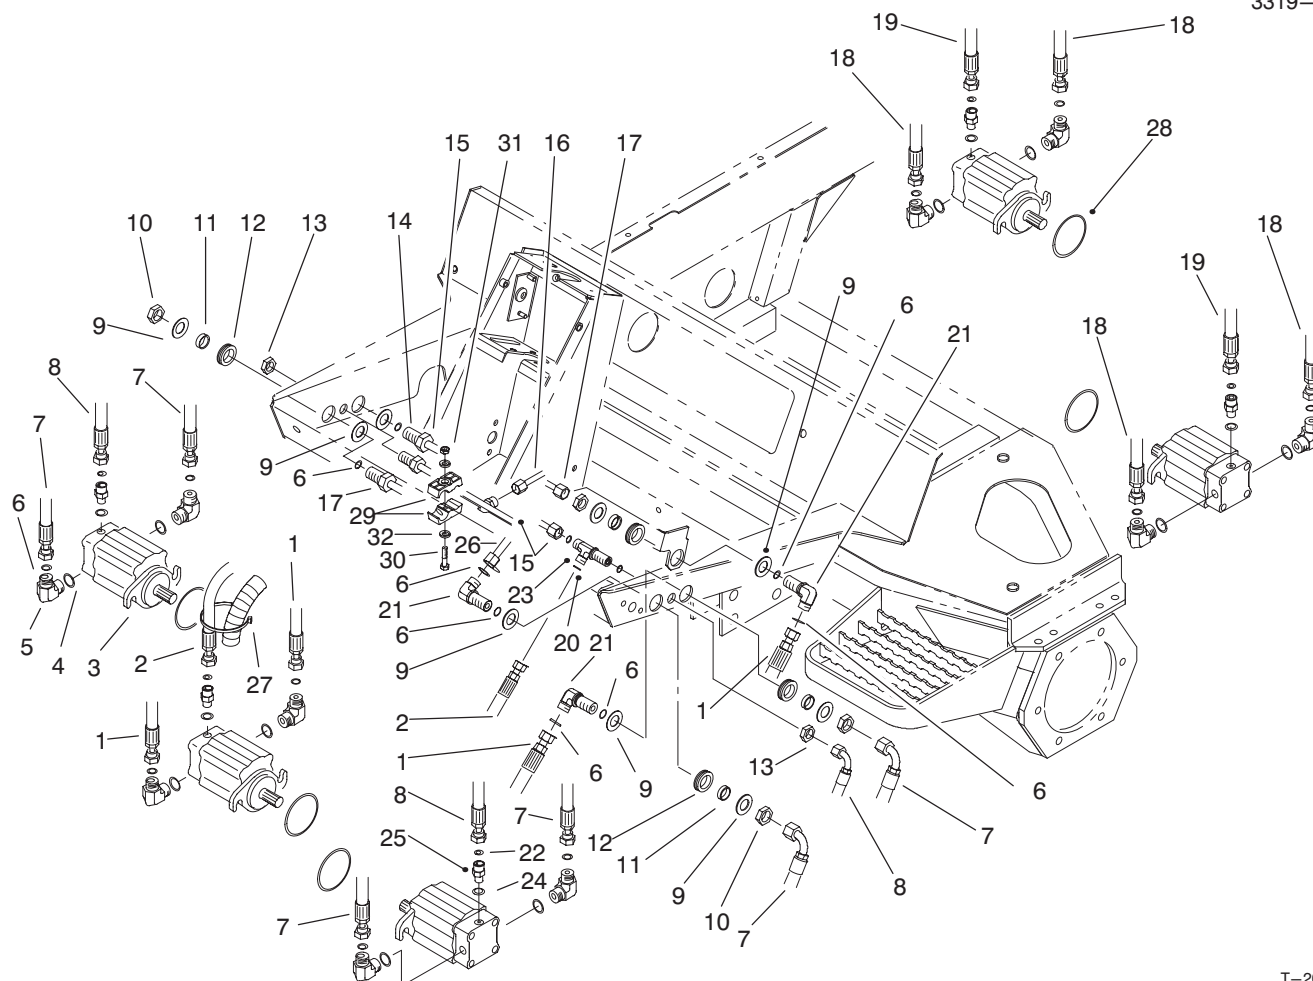


T-2090-1

REEL MOTORS & HOSES

Ref. No.	Part No.	Description	No. Used
1	92-7556	Asm-Hose	1
2	92-7560	Asm-Hose	1
3	92-7387	Motor-Hydraulic	5
4	237-79	O-Ring	10
5	340-98	Fitting-Hydraulic 90° (Incl. Ref. #4 & 6)	10
6	237-30	O-Ring	18
7	92-7555	Asm-Hose	4
8	92-7559	Asm-Hose	2
9	69-8930	Washer	10
10	340-127	Nut-Bulkhead	5
11	69-8960	Spacer	5
12	240-5	Grommet	5
13	340-70	Nut-Bulkhead	2
14	93-4216	Asm-Tube (Incl. Ref. #6)	1
15	93-4223	Asm-Tube, Front Drain (Incl. Ref. #20)	1
16	93-4222	Asm-Tube, Drain Return	1
17	93-4219	Asm-Tube, #1 Bulkhead (Incl. Ref. #6)	1

Ref. No.	Part No.	Description	No. Used
18	92-7649	Asm-Hose	4
19	93-4201	Asm-Hose	2
20	237-22	O-Ring	3
21	93-9151	Fitting-Hydraulic 90° (Incl. Ref. #6)	3
22	237-21	O-Ring	5
23	340-68	Fitting-Hydraulic, Tee (Incl. Ref. #20)	1
24	237-78	O-Ring	5
25	340-92	Fitting-Hydraulic (Incl. Ref. #22 & 24)	5
26	93-4217	Asm-Tube	1
27	3290-378	Tie-Cable	1
28	93-9783	O-Ring	10
29	56-7972	Clamp-Tube	4
30	322-7	Screw-HH	2
31	3296-47	Nut-Lock	2
32	3256-23	Washer- Flat	4

 3319-141

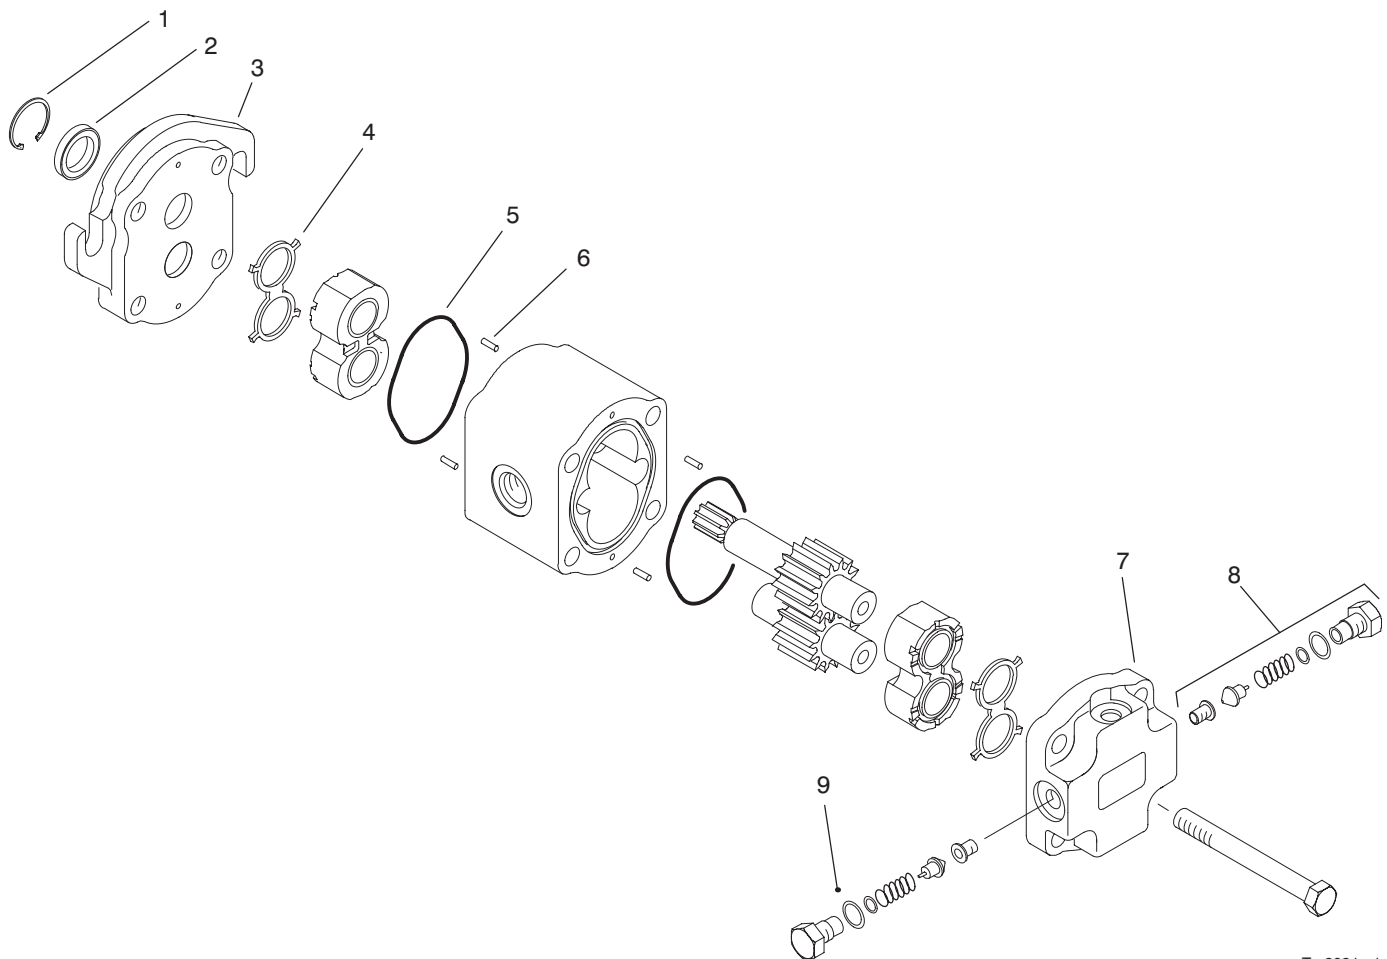


T-2091-1

REEL MOTOR NO. 92-7387 ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Ring—Retaining	1
2		Seal—Shaft	1
3		Flange	1
4		E—Seal	2
5		O—Ring	2
6		Pin—Dowel	4
7		Block—Valve (Incl. Ref. #8)	1

Ref. No.	Part No.	Description	No. Used
8		Valve—Adjusting	2
9		O—Ring	2
*	93-9152	Kit—Flange (Incl. Ref. #1-3 & 6)	1
*	93-9153	Kit—Seal (Incl. Ref. #1, 2, 4, 5 & 9)	1
*	93-9154	Kit—Valve Block (Incl. Ref. #6 & 7)	1

 *Not Illustrated

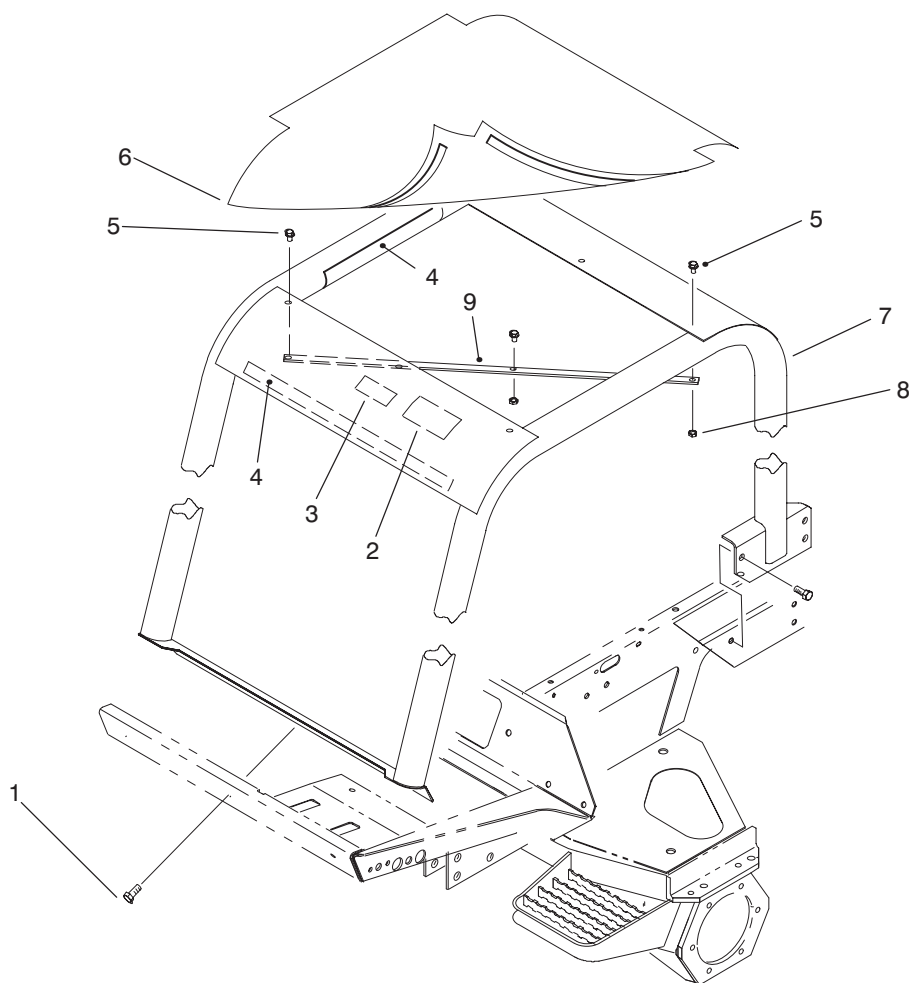


T-2092-1

ROLL OVER PROTECTION SYSTEM (ROPS)

Ref. No.	Part No.	Description	No. Used
1	33106-035	Screw-HHF	3
2	83-7430	Decal-Danger	1
2	93-8050	Decal-Warning (Europe)	1
2	84-4300	Decal-Warning (Japan)	1
3	92-7540	Decal-ROPS	1
3	93-8073	Decal-Blank (Europe)	1
4	93-9157	Velcro	4

Ref. No.	Part No.	Description	No. Used
5	33104-030	Screw-HHF	5
6	93-9160	Cover-ROPS	1
7	94-2643	Frame-ROPS (Incl. Ref. #2-4)	1
8	33024-00	Nut-Lock	5
9	93-9159	Strap-Cover	2

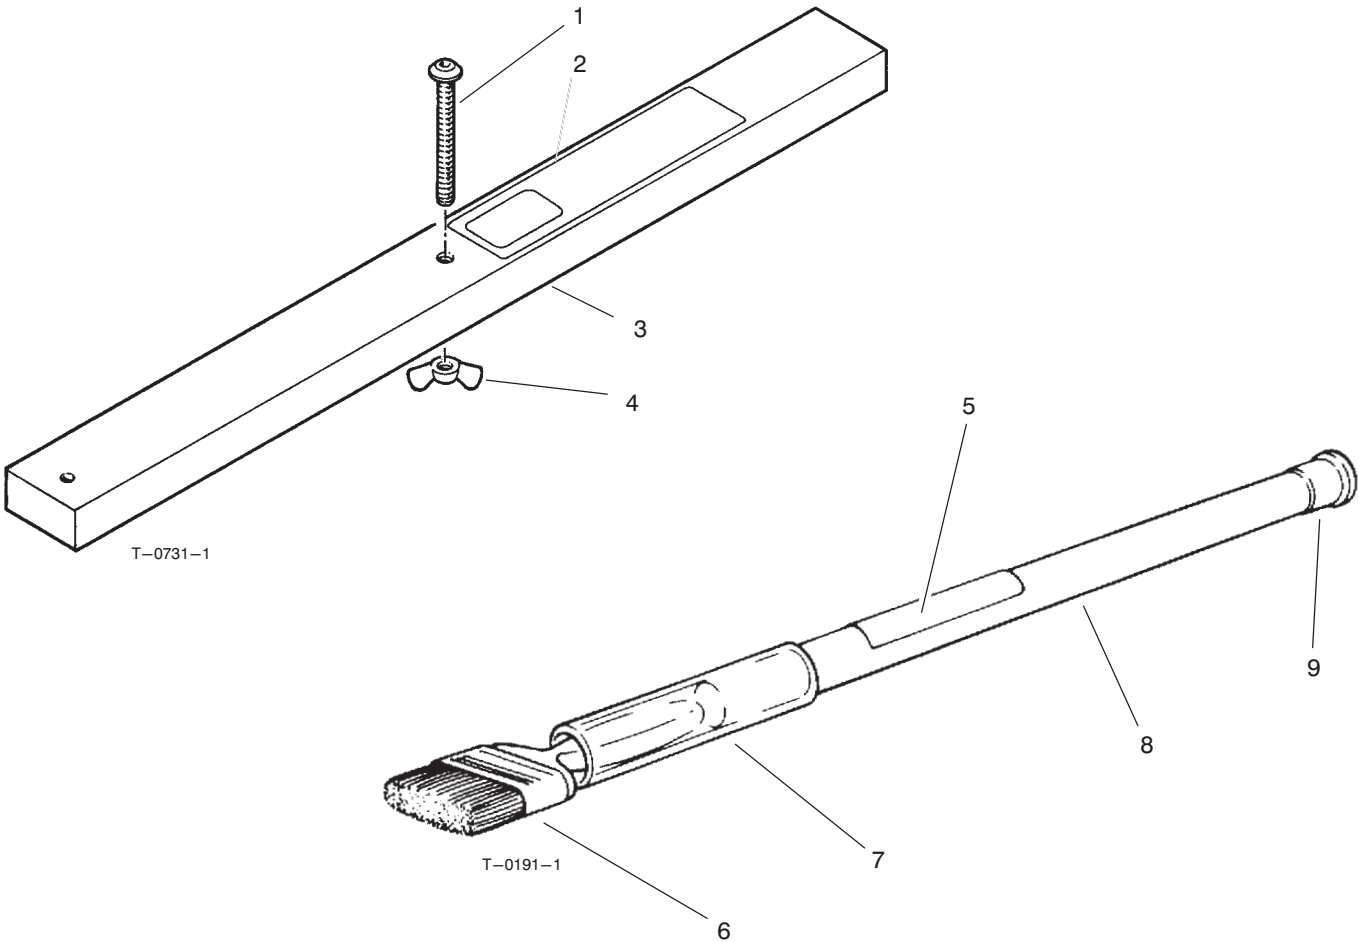 

GAUGE BAR & BACKLAPPING BRUSH ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	32122-54	Screw-Machine Slot Hd.	1
2	59-7930	Decal	1
3	59-7900	Asm-Gauge Bar (Incl. Ref. #1-2 & 4)	1
4	32103-3	Nut-Wing	1
5	12-9140	Decal	1

Ref. No.	Part No.	Description	No. Used
6	36-4310	Brush	1
7	29-9090	Hose-Handle	1
8	29-9080	Handle	1
9	2410-18	Plug	1
*	29-9100	Asm-Backlapping Brush (Incl. Ref. #5-9)	1

*Not Illustrated

TORO PART NUMBER INDEX

3319-141

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
5-0652	Spacer	6 47 1	66-3160	Screw	34 11 4
12-9140	Decal	80 5 1	66-3240	Cap-Radiator (Europe)	51 22 1
21-4191	Asm-Seat Belt	7 4 1	66-4190	Spring	8 12 1
21-9260	Cover-Dust	3 18 1	66-6480	Washer	2 58 2
27-2360	Switch-Ignition	13 43 1	66-8121	Standpipe	17 7 1
29-9080	Handle	80 8 1	66-8520	Bumper-Down Stop	9 17 2
29-9090	Hose-Handle	80 7 1	66-8530	Adjuster	9 16 1
29-9100	Asm-Backlapping Brush	80 * 1	66-8560	Nut-Push	9 11 4
36-3400	Decal-Warning	67 5 2	66-8610	Weldment-Lower	9 10 1
36-4310	Brush	80 6 1	66-9290	Spacer	9 15 6
37-8771	Bolt-Shoulder	32 33 2	67-7160	Block-Fuse	13 48 2
44-2210	Asm-Light, Warning	3 30 1	68-6150	Breather-Air	16 4 1
46-0330	Nut-Hex	49 1 2	68-9420	Washer-Lock	42 4 6
46-6550	Fitting-Connector	17 8 1	68-9420	Washer-Lock	38 34 3
46-6560	Bushing	17 9 2	69-2970	Cap-Hub	61 33 2
46-8091	Screw-Tapping	1 14 2	69-2980	Seal-Inner	61 22 2
48-7570	Screw-Hex. Hd.	34 9 3	69-3020	Latch-Draw	32 34 2
48-7610	Screw-Hex. Hd.	34 46 3	69-4260	Seal Kit	66 * 1
48-7700	Screw-Hex. Hd.	39 38 3	69-4260	Seal Kit	76 * 2
48-7700	Screw-Hex. Hd.	34 45 6	69-6470	Bushing-Flange	61 18 4
48-7730	Screw-Hex. Hd. Flange	16 5 6	69-8890	Cap-Spindle	61 15 2
48-7780	Screw-Hex. Hd.	34 42 3	69-8900	Spacer	54 59 1
48-7810	Screw-Hex. Hd.	34 10 3	69-8910	Washer	54 58 2
48-7810	Screw-Mounting	49 5 3	69-8920	Washer	19 10 4
48-7840	Screw-Hex. Hd.	34 5 1	69-8920	Washer	19 10 6
48-7880	Nut	34 24 3	69-8930	Washer	77 9 10
48-7880	Nut	8 29 1	69-8930	Washer	64 16 8
48-7890	Nut	8 30 1	69-8950	Spacer	19 12 2
48-7930	Nut-Hex.	34 28 2	69-8950	Spacer	19 12 3
48-9470	Screw	34 4 1	69-8960	Spacer	77 11 5
49-2040	Screw-Hex. Hd.	8 2 1	69-8960	Spacer	64 18 4
49-2640	Seal-Shaft	28 11 1	69-8980	Washer-Flat	72 10 4
49-6440	Pedal-Accelerator	6 15 1	69-8980	Washer-Flat	67 17 12
52-1320	Decal-Fuel, Diesel	2 34 1	70-1480	Relay	8 27 1
52-5910	Ring-Retaining	8 25 1	70-2780	Piston	69 4 1
53-6380	Washer-Flat	72 31 2	70-2780	Piston	71 4 1
53-6380	Washer-Flat	68 57 2	70-2780	Piston	73 5 1
53-9681	Mount-Rubber	34 3 3	71-4580	Clutch-Roller	53 15 1
56-6710	O-Ring	28 1 6	71-4590	Washer-Thrust	53 16 2
56-7972	Clamp	3 42 2	72-3560	Decal-4WD (Model 03801)	2 29 1
56-7972	Clamp-Tube	64 8 2	74-0720	Tube-Manual	7 16 1
56-7972	Clamp-Tube	77 29 4	74-3410	Asm-Radiator	32 20 1
56-7973	Clamp	4 52 6	74-3650	Fan-Engine	34 32 1
56-7973	Clamp-Tube	64 34 10	74-5500	Bolt-Wheel	53 36 10
59-7900	Asm-Gauge Bar	80 3 1	74-5700	Bearing-Needle	53 30 1
59-7930	Decal	80 2 1	74-5940	Asm-Rod, Tie	61 47 1
59-9740	Latch-Draw	1 12 1	74-5950	Latch-Swell	1 24 3
60-5700	Spring-Compression	6 43 1	74-5950	Latch-Swell	12 30 1
60-5890	Washer	28 12 1	74-6490	Hose-Water Line	34 40 2
60-6700	Screw-Hex. Hd.	67 4 6	74-6540	Tappet-Valve	38 14 8
61-2790	Filler-Screen	17 24 1	74-6550	Cup-Upper Valve Spring	37 11 8
61-2790	Filter-Screen	16 9 1	74-6560	Spring-Valve	37 10 8
62-2170	Washer-Thrust	61 17 4	74-6570	Cup-Lower Valve Spring	37 9 8
62-5550	Decal-Toro	1 1 1	74-6580	Insert-Valve (1.650mm)	37 13 8
62-7650	Gasket	17 17 1	74-6590	Insert-Valve (1.725mm)	37 * 8
63-7622	Hose-Fuel	51 15 1	74-6600	Insert-Valve (1.800mm)	37 * 8
63-7627	Hose-Fuel	17 4 1	74-6610	Insert-Valve (1.900mm)	37 * 8
63-7627	Hose-Fuel	34 27 1	74-6620	Insert-Valve (1.975mm)	37 * 8
63-7640	Sender-Fuel	17 18 1	74-6630	Insert-Valve (2.050mm)	37 * 8
63-7880	Pin-Latch, Brake	6 31 1	74-6640	Insert-Valve (2.125mm)	37 * 8
63-7900	Rack	3 1 1	74-6650	Insert-Valve (2.225mm)	37 * 8
63-8360	Key-Ignition	12 35 1	74-6660	Insert-Valve (2.250mm)	37 * 8
63-8410	Washer-Flat	17 14 3	74-6670	Insert-Valve (2.275mm)	37 * 8
63-8410	Washer-Flat	16 27 3	74-6680	Insert-Valve (2.300mm)	37 * 8
63-9920	Decal-EEC 105 DBA	8 15 1	74-6690	Insert-Valve (2.325mm)	37 * 8
65-5100	Handle-Hood	1 11 1	74-6700	Insert-Valve (2.350mm)	37 * 8
66-2920	Washer	2 59 4	74-6710	Insert-Valve (2.375mm)	37 * 8
66-2920	Washer	13 77 3	74-6720	Insert-Valve (2.400mm)	37 13 8
66-2920	Washer-Nylon	8 1 2	74-6730	Insert-Valve (2.425mm)	37 * 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
74-6740	Insert-Valve (2.450mm)	37 * 8	74-7650	Washer-Flat	38 20 3
74-6750	Insert-Valve (2.475mm)	37 * 8	74-7670	Head Bolt & Washer Set	39 * 1
74-6760	Insert-Valve (2.500mm)	37 * 8	74-7770	Hose-Crankcase	35 11 1
74-6770	Insert-Valve (2.525mm)	37 * 8	74-7780	Gasket	35 12 1
74-6780	Insert-Valve (2.550mm)	37 * 8	74-7790	Screw	35 13 1
74-6790	Insert-Valve (2.575mm)	37 * 8	74-7810	Gasket-Plate	35 15 1
74-6800	Insert-Valve (2.600mm)	37 * 8	74-7820	Plate	35 16 1
74-6810	Insert-Valve (2.625mm)	37 * 8	74-7840	Plug	39 42 2
74-6820	Insert-Valve (2.650mm)	37 * 8	74-7840	Plug-27 mm Dia.	35 18 8
74-6830	Insert-Valve (2.675mm)	37 * 8	74-7840	Plug-27 mm Dia.	38 33 2
74-6840	Insert-Valve (2.700mm)	37 * 8	74-7930	Screw-Bearing Cap	35 27 10
74-6850	Insert-Valve (2.725mm)	37 * 8	74-7940	Bushing-Spring	35 28 1
74-6860	Insert-Valve (2.750mm)	37 * 8	74-7950	Screw-Plate	35 29 6
74-6870	Insert-Valve (2.775mm)	37 * 8	74-7960	Stud-Filter	35 30 1
74-6880	Insert-Valve (2.800mm)	37 * 8	74-7970	Filter-Oil	35 31 1
74-6890	Insert-Valve (2.825mm)	37 * 8	74-7990	Pin	36 16 1
74-6900	Insert-Valve (2.850mm)	37 * 8	74-7990	Pin-Spring	35 33 4
74-6910	Insert-Valve (2.875mm)	37 * 8	74-8000	Plug	35 34 2
74-6920	Insert-Valve (2.900mm)	37 * 8	74-8010	Guide-Dipstick	35 35 1
74-6930	Insert-Valve (2.925mm)	37 * 8	74-8030	Pin-Spring	35 37 1
74-6940	Insert-Valve (2.950mm)	37 * 8	74-8100	Gear-Pinion	36 4 1
74-6950	Insert-Valve (2.975mm)	37 * 8	74-8120	Key-Woodruff	36 6 2
74-6960	Insert-Valve (3.000mm)	37 * 8	74-8140	Cover	36 9 1
74-6970	Insert-Valve (3.025mm)	37 * 8	74-8150	Gasket-Cover	36 10 1
74-6980	Insert-Valve (3.050mm)	38 13 8	74-8170	Bearing Set (Std.)	36 12 2
74-6990	Insert-Valve (3.075mm)	38 * 8	74-8210	Thrust Bearing Set	36 * 2
74-7000	Insert-Valve (3.100mm)	38 * 8	74-8230	Crankshaft	36 14 1
74-7010	Insert-Valve (3.125mm)	38 * 8	74-8260	Flywheel	36 34 1
74-7020	Insert-Valve (3.150mm)	38 * 8	74-8270	Pin	36 18 3
74-7030	Insert-Valve (3.175mm)	38 * 8	74-8290	Seal-#1 Bearing Cap	36 20 2
74-7040	Insert-Valve (3.200mm)	38 * 8	74-8300	Clip-Piston Pin	36 21 8
74-7050	Insert-Valve (3.225mm)	38 * 8	74-8310	Pin-Piston	36 22 4
74-7060	Insert-Valve (3.250mm)	38 * 8	74-8320	Piston Ring Set-0.20 mm	36 * 4
74-7070	Insert-Valve (3.275mm)	38 * 8	74-8330	Piston Ring Set-0.50 mm	36 * 4
74-7080	Insert-Valve (3.300mm)	38 * 8	74-8340	Piston Ring Set-0.80 mm	36 * 4
74-7090	Insert-Valve (3.325mm)	38 * 8	74-8380	Bearing-Connecting Rod	36 27 4
74-7100	Insert-Valve (3.350mm)	38 * 8	74-8420	Piston Set-Stage #1	36 29 1
74-7110	Insert-Valve (3.375mm)	38 * 8	74-8430	Piston Set-Stage #2	36 * 1
74-7120	Insert-Valve (3.400mm)	38 * 8	74-8440	Piston Set-Stage #3	36 * 1
74-7130	Insert-Valve (3.425mm)	38 * 8	74-8610	Pin	46 7 2
74-7140	Insert-Valve (3.450mm)	38 * 8	74-8610	Pin	48 8 2
74-7150	Insert-Valve (3.475mm)	38 * 8	74-8630	Bushing-Flange	46 8 1
74-7160	Insert-Valve (3.500mm)	38 * 8	74-8650	Journal	46 12 1
74-7170	Insert-Valve (3.550mm)	38 * 8	74-8670	Union-Inlet	46 13 1
74-7180	Insert-Valve (3.625mm)	38 * 8	74-8680	Gasket	46 14 2
74-7190	Insert-Valve (3.700mm)	38 * 8	74-8710	Washer	46 16 1
74-7200	Insert-Valve (3.775mm)	38 * 8	74-8710	Washer-E.T.L.W.	50 9 1
74-7210	Insert-Valve (3.850mm)	38 * 8	74-8750	Pipe	47 12 1
74-7220	Insert-Valve (3.925mm)	38 * 8	74-8770	Plug	47 10 1
74-7230	Insert-Valve (4.000mm)	38 * 8	74-8830	Belt	40 18 1
74-7240	Collar-Split	37 12 16	74-8870	Gasket	46 21 2
74-7260	Bolt-Head	38 29 10	74-8900	Washer-Flat	37 7 6
74-7270	Washer-Flat	38 28 10	74-8920	Washer-Copper	28 9 4
74-7300	Pan-Oil	35 23 1	74-9100	Pad-Pedal, Forward	6 14 1
74-7310	Plug-Threaded	35 20 1	74-9110	Pad-Pedal, Reverse	6 17 1
74-7320	Gasket	35 19 1	75-0610	Tread-Foot, RH	2 * 1
74-7330	Screw-Hex. Hd.	35 25 23	75-0620	Tread-Foot, LH	2 43 1
74-7380	Gasket-Oil Pan	35 21 1	75-0630	Tread-Foot, Center	2 44 1
74-7400	Tube	39 41 1	75-0920	Cartridge-Relief 3000 psi	66 13 1
74-7420	Ball	39 45 4	75-0920	Cartridge-Relief 3000 psi	76 16 1
74-7430	Chamber-Turbulence	39 46 4	75-1010	Switch	12 20 1
74-7440	Chamber-Turbulence	39 * 4	75-1370	Cable-Battery, Positive	51 9 1
74-7450	Seat-Intake Valve	39 48 4	75-1370	Cable-Battery, Positive	34 17 1
74-7460	Seal-Intake Valve	39 * 4	75-1390	Cover-Access, Front	2 39 1
74-7480	Valve-Intake	39 49 4	75-1410	Plate-Access, Floor	2 40 1
74-7560	Washer-Spring	38 16 3	75-1430	Pedal-Brake, RH	6 40 1
74-7600	Plug	37 4 4	75-1440	Pedal-Brake, LH	6 35 1
74-7630	Gasket-Valve Cover	38 18 1	75-1470	Pin-Pivot, Brake	6 46 1
74-7640	Cover-Valve	38 19 1	75-1490	Rod-Brake, Park	4 54 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
75-2080	Seal Kit	66 * 5	76-5570	Washer—Lock	49 2 2
75-2080	Seal Kit	76 * 7	76-5590	Sleeve—Spring	49 4 1
75-2120	Shaft With Clevis	69 12 1	76-5600	Asm—Holder, Injector	47 14 4
75-2810	Bracket—Column, Steering	3 16 1	76-6910	Kit—Rotating	25 14 1
75-2970	Pedal—Traction	6 16 1	76-6910	Kit—Rotating	24 16 1
75-3270	Hub—Pivot, Traction	6 6 1	76-6910	Kit—Rotating	23 17 1
75-3400	Shaft—Pivot, Seat	7 20 1	76-6930	Shaft—Drive, Straight	25 3 1
75-3420	Lever—Control	12 9 1	76-6950	Race—Thrust	23 5 2
75-3480	Weldment—Upper	9 23 1	76-6950	Race—Thrust	24 5 2
75-3510	Bolt—Shoulder	9 26 2	76-6950	Race—Thrust	25 5 2
75-3530	Spring—Compression	9 3 1	76-6950	Race—Thrust	30 51 1
75-3540	Pin—Roll	9 6 1	76-6960	Bearing—Thrust	23 6 1
75-3550	Bumper—Seat	9 7 2	76-6960	Bearing—Thrust	24 6 1
75-3580	Plate—Mounting, Seat	9 2 1	76-6960	Bearing—Thrust	25 6 1
75-3680	Rod—Seat	8 23 1	76-6960	Bearing—Thrust	30 52 1
75-3710	Dipstick	16 8 1	76-6970	Insert—Camplate	25 15 1
75-3860	Fender—LH	2 36 1	76-6970	Insert—Camplate	24 17 1
75-4360	Bracket—Suspension, Seat	7 15 1	76-6970	Insert—Camplate	23 18 1
75-4370	Bracket—Seat	7 10 1	76-6980	O—Ring	25 9 1
75-5190	Decal—No Riders	12 13 1	76-6980	O—Ring	23 10 1
75-5190	Decal—No Riders	2 35 1	76-6980	O—Ring	24 10 1
75-5350	Pin—Cylinder, Slide	67 31 3	76-7000	Ring—Retaining	23 4 2
75-5740	Box—Control	13 53 1	76-7000	Ring—Retaining	24 4 2
75-5780	Hinge—Cover	2 47 1	76-7000	Ring—Retaining	25 4 2
75-5780	Hinge—Cover	13 54 1	76-7000	Ring—Retaining	30 50 2
75-5810	Box—Tool	2 30 1	76-7010	Ring—Retaining	23 1 1
75-5890	Hose	67 9 2	76-7010	Ring—Retaining	24 1 1
75-6370	Cap—Sensor	67 37 1	76-7010	Ring—Retaining	25 1 1
75-6490	Lever	6 22 1	76-7010	Ring—Retaining	30 55 1
75-6510	Bracket—Lever	6 20 1	76-7020	Spacer	25 2 1
75-6550	Disc—Friction	6 19 1	76-7110	Plug	56 5 1
75-6580	Cable—Pedal	6 7 1	76-7110	Plug	58 26 4
75-6710	Decal—Fast/Slow	6 23 1	76-7120	Seal—Washer	56 6 1
75-6820	Hour Meter	13 51 1	76-7120	Seal—Washer	58 27 4
75-6840	Knob—Knurled	2 41 8	76-7140	Plug	56 9 1
76-1910	Shaft—Pivot	9 12 2	76-7160	Asm—Gear Case	57 * 1
76-1920	Bushing—Sleeve	9 9 4	76-7170	Case—Differential	57 3 1
76-1930	Knob—Tension Adjustment	9 19 1	76-7180	Pinion—Mate	57 10 2
76-1940	Spring—Extension	9 14 2	76-7190	Gear—Side	57 9 2
76-2940	Bumper—Rubber	9 8 2	76-7200	Shaft—Pinion	57 4 1
76-4260	Bushing	59 3 1	76-7210	Washer—Thrust	57 11 2
76-4910	Stud	46 26 3	76-7220	Washer—Thrust	57 8 2
76-4930	Washer	46 5 3	76-7230	Washer—Lock	57 5 4
76-4940	Gear—Pump, Injection	46 2 1	76-7240	Ring—Gear	57 2 1
76-4950	Nut	46 1 1	76-7250	Shaft—Drive	57 1 1
76-4990	Bracket	48 15 1	76-7260	Bolt	57 6 8
76-5010	Washer	40 23 3	76-7270	Pin—Spring	57 7 1
76-5010	Washer—Spring	48 2 1	76-7280	Bearing	57 12 2
76-5010	Washer—Spring	43 7 5	76-7290	Shim—0.1 mm	57 13 A/R
76-5060	Screw	48 1 1	76-7300	Shim—0.2 mm	57 * A/R
76-5070	Asm—Oil Pump	43 1 1	76-7310	Shim—0.3 mm	57 * A/R
76-5090	Spring—Piston	43 3 1	76-7320	Sleeve	55 4 1
76-5100	Bolt—Shoulder	43 5 1	76-7330	Bearing	55 1 1
76-5130	Stud	37 6 6	76-7340	Seal—Oil	55 6 1
76-5170	Chain—Pump Drive	43 13 1	76-7350	Bushing	55 7 1
76-5180	Washer—Copper	18 1 4	76-7360	O—Ring	55 10 1
76-5190	Fitting—Adjustable	18 2 2	76-7370	Bearing	55 11 1
76-5220	Element—Filter	18 5 1	76-7380	Washer	55 8 1
76-5260	Relay—Glow Plug	50 1 1	76-7390	Nut—Lock	55 9 1
76-5260	Relay—Glow Plug	8 28 1	76-7400	O—Ring	55 2 2
76-5290	Washer—Spring	50 4 4	76-7410	Shim—0.1 mm	55 3 A/R
76-5300	Asm—Filter, Fuel	17 22 1	76-7420	Shim—0.2 mm	55 * A/R
76-5310	Washer—E.T.L.W.	50 7 1	76-7430	Shim—0.4 mm	55 * A/R
76-5320	Sensor—Water	18 9 1	76-7470	Pipe	56 8 1
76-5440	Screw	38 17 2	76-7480	Plug—Vent	56 7 1
76-5500	Screw	45 6 5	76-7490	Shaft—Differential	57 14 2
76-5520	Holder—Injector	47 5 4	76-7500	Bearing	57 15 4
76-5530	Gasket—Injector	47 3 4	76-7510	Pinion—14T	58 10 2
76-5540	Plug	47 2 4	76-7510	Pinion—14T	57 17 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-7520	Shim-0.1 mm	57 16 A/R	77-3600	Plate-Closing	51 47 1
76-7530	Shim-0.2 mm	57 * A/R	77-3620	Retainer-Cover	32 25 2
76-7540	Shim-0.4 mm	57 * A/R	77-3700	Gasket-Exhaust, Manifold	34 37 1
76-7550	Ring-Retaining	57 18 2	77-3790	Plug-Drain	35 26 1
76-7560	Case-Gear	58 1 2	77-4000	Shim Set	57 * 1
76-7580	O-Ring	57 19 4	77-4010	Shim Set	55 * 1
76-7590	Spacer	57 20 2	77-4020	Shim Set	57 * 1
76-7600	Bolt-Reamer	57 21 2	77-4030	Shim Set	58 * 1
76-7610	Bolt	57 23 6	77-4040	Shim Set	59 * 1
76-7620	Washer-Lock	57 22 8	77-4050	Shim Set	59 * 1
76-7630	Holder-25 mm R.H.	58 * 1	80-4860	Pin-Clevis	9 1 1
76-7640	Bolt	58 5 8	80-8660	Spacer	64 9 2
76-7640	Bolt	58 28 20	82-3740	Cooler-Oil	32 21 1
76-7650	Shaft-Final Drive	58 2 2	82-5050	Screw-Hex. Hd.	26 26 2
76-7660	Holder-20 mm L.H.	58 4 1	82-5120	Adapter-Pump To Engine	34 47 1
76-7670	Bearing	58 3 4	82-6490	Asm-Hose	75 1 1
76-7680	Case-Final Drive	58 8 2	82-6490	Asm-Hose	67 28 1
76-7700	Shim-0.8 mm	59 25 A/R	82-8170	Clamp	67 1 6
76-7710	Bolt	59 8 2	82-9060	Adjuster W/Handle	9 13 1
76-7720	Nut	59 9 4	83-6780	Pin-Cylinder	67 23 2
76-7730	Bushing	58 7 2	83-6790	Pin-Short, Cylinder	67 39 1
76-7740	Seal-Oil	58 6 2	83-7430	Decal-Danger	79 2 1
76-7750	Pinion-15T	58 11 2	84-1710	Piston	70 4 1
76-7760	Shim-1.0 mm	59 * A/R	84-1710	Piston	74 5 1
76-7770	Cover	58 9 2	84-1740	Shaft With Clevis	70 12 1
76-7780	Shim-1.2 mm	59 * A/R	84-1760	Kit-Seal Repair	70 * 1
76-7790	Shim-1.4 mm	59 * A/R	84-1760	Seal repair Kit	74 * 1
76-7810	Holder-Bearing	58 19 2	84-2780	Decal-No Step (Japan)	67 5 2
76-7820	Shim-1.0 mm	59 5 A/R	84-2860	Decal-Fuel, Diesel (Japan)	2 34 1
76-7830	Shaft-Wheel	58 21 2	84-3420	Decal-No Riders (Japan)	12 13 1
76-7840	Gear-Bevel	58 13 2	84-3420	Decal-No Riders (Japan)	2 35 1
76-7870	Seal-Oil	58 20 2	84-3500	Decal -Fast/Slow (Japan)	6 23 1
76-7880	Spacer	58 15 2	84-4300	Decal-Warning (Japan)	79 2 1
76-7890	Shim-0.15 mm	58 14 A/R	85-4470	Potentiometer	13 52 1
76-7900	Shim-0.2 mm	58 * A/R	85-4480	Knob	13 45 1
76-7910	Shim-0.4 mm	58 * A/R	85-4730	Decal-Hydraulic Oil Only	1 5 1
76-7920	Ring-Retaining	58 16 2	85-4750	Display-Diagnostic ACE	10 2 1
76-7930	Ring-Retaining	58 17 2	85-6910	Decal-EEC 86 DBA	8 16 1
76-7950	Bushing	59 4 1	86-2990	Mount-Cable, Throttle	34 20 2
76-7960	Fitting-Grease	59 21 2	86-5390	Kit-Seal	60 * 1
76-7960	Fitting-Grease	58 30 2	86-5910	Tire	61 28 2
76-7970	Shim-1.4 mm	59 * A/R	86-5910	Tire	53 33 2
76-7980	Shim-1.2 mm	59 * A/R	86-7330	Kit-Seal Repair	69 * 1
76-7990	Shim-.08 mm	59 * A/R	86-7330	Kit-Seal Repair	71 * 1
76-8000	Bolt	59 6 4	86-7330	Seal repair Kit	73 * 1
76-8010	Washer	59 7 2	87-5100	Washer-Snubbing	34 2 3
76-8020	Rod-Tie	59 22 1	87-6270	Socket-Light	13 *63 4
76-8030	Asm-L.H. Rod End	59 10 1	87-6620	Screw-Torx Pan Hd.	3 31 2
76-8040	Nut-L.H.	59 24 1	88-0440	Decal-Floor Plate	67 21 1
76-8050	Asm-R.H. Rod End	59 16 1	88-1550	Stop-Axle	54 66 2
76-8060	Nut-R.H.	59 23 1	88-1900	Decal-Floor Plate (Japan)	67 21 1
76-8070	Adapter	55 12 1	88-1980	Decal-Hydraulic Oil	1 5 1
76-8350	Stop-Axle	61 10 2	88-3870	Cover	3 20 1
76-8350	Stop-Axle, 4WD	53 5 2	88-6970	Cartridge-N.O.	76 9 1
76-9060	Gauge-Temperature	12 33 1	88-6980	Cartridge-N.C. Poppet	66 10 1
77-2870	Weldment-Hanger	9 18 1	88-6980	Cartridge-N.O. Poppet	76 17 1
77-3300	Stud	42 1 6	88-6990	Cartridge-N.C.	76 7 2
77-3310	Gasket	42 2 2	88-6990	Cartridge-N.C. Spool	66 7 1
77-3320	Nut-Hex	42 5 6	88-9190	Solenoid-20 Watt	66 1 4
77-3340	Manifold-Exhaust	42 3 1	88-9190	Solenoid-20 Watt	76 1 7
77-3400	Camshaft	40 5 1	88-9200	Solenoid-28 Watt	66 8 1
77-3410	Key	40 4 1	88-9200	Solenoid-28 Watt	76 10 1
77-3420	Gasket	40 3 1	92-1180	Asm-Seat	7 5 1
77-3440	Screw	40 1 2	92-3071	Solenoid	76 8 1
77-3450	Washer	40 2 2	92-5720	Controller-Solid State	75 35 1
77-3470	Screw	43 10 1	92-5833	Spacer-Ball Joint	61 45 1
77-3490	Screw	43 11 1	92-5833	Spacer-Ball Joint	53 46 2
77-3510	Spring	40 14 1	92-5836	Washer-Axle	54 50 1
77-3520	Cup	40 13 1	92-5837	Asm-Rod End	62 60 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-5838	Ball Joint	54 62 1	92-7495	Asm-Tube, Steering Rear	62 56 1
92-5839	Ball Joint	61 38 1	92-7495	Asm-Tube, Steering, Rear	65 49 1
92-5839	Ball Joint	53 45 1	92-7505	Screen	32 24 1
92-5844	Spacer-Ball Joint	53 47 1	92-7511	Hood	1 18 1
92-6315	Cartridge-N.C. Poppet	76 18 1	92-7516	Bracket-Support, Cooler	32 19 1
92-7374	Shroud-Fan RH	32 10 1	92-7519	Bracket-Block, Manifold	75 26 1
92-7375	Shroud-Fan LH	32 44 1	92-7520	Cable-Throttle	8 4 1
92-7381	Tube-Water, Return	34 41 1	92-7521	Hose-Fuel	17 21 1
92-7382	Cover-Manifold	34 38 1	92-7521	Hose-Fuel	34 25 1
92-7385	Motor-Planetary	20 38 1	92-7522	Hose-Fuel	17 6 1
92-7386	Motor-Hydraulic	53 20 1	92-7525	Fitting-Hose	16 24 1
92-7387	Motor-Hydraulic	77 3 5	92-7526	Fitting-Hydraulic, Suction	26 38 1
92-7388	Support-Radiator	32 45 1	92-7527	Strainer-Suction	16 34 1
92-7396	Mount-Cable	8 3 1	92-7529	Asm-Cable, Brake RH	6 * 1
92-7414	Assembly-Brake, RH	20 50 1	92-7530	Asm-Cable, Brake LH	6 30 1
92-7415	Asm-Complete	21 * 1	92-7530	Cable-Brake, LH	19 26 1
92-7415	Asm-Drive, Planetary	19 29 2	92-7531	Tube-Control, Pump	6 1 1
92-7416	Strap-Radiator	32 42 1	92-7531	Tube-Rod, Control	26 14 1
92-7417	Asm-Brake, LH	19 28 1	92-7532	Decal-RM6500D	1 17 2
92-7418	Asm-Block, Control	75 13 1	92-7534	Assembly-Hose	53 31 1
92-7419	Asm-Block, Manifold	64 42 1	92-7535	Asm-Hose, Oil Cooler	32 29 2
92-7420	Asm-Cylinder, Hyd. #3	72 15 1	92-7536	Asm-Hose, Rear Motor	53 9 1
92-7421	Asm-Cylinder, Hyd. LH	72 29 1	92-7537	Asm-Hose, Rear Motor	53 10 1
92-7422	Tank-Fuel	17 16 1	92-7538	Asm-Hose	53 41 1
92-7424	Hose-Overflow, Radiator	51 25 1	92-7539	Asm-Hose	53 40 1
92-7424	Hose-Radiator, Overflow	32 6 1	92-7540	Decal-ROPS	79 3 1
92-7425	Support-Mount, Engine	34 6 1	92-7543	Decal-Diagnostic ACE	10 1 1
92-7426	Mount-Motor	34 43 1	92-7548	Pin-Cylinder	72 19 2
92-7429	Mount-Motor, RH	34 14 1	92-7550	Fitting-Tee, Bulkhead	19 7 2
92-7455	Plate-Bulkhead	19 16 1	92-7551	Cap-Fitting	16 25 1
92-7456	Pin	72 14 2	92-7552	Bracket-Bulkhead	54 60 1
92-7463	Hose-Radiator, Lower	32 18 1	92-7553	Asm-Tube, Rear Drain	53 27 1
92-7463	Hose-Radiator, Lower	34 36 1	92-7553	Asm-Tube, Rear Drain	65 51 1
92-7465	Hose-Suction	16 22 1	92-7555	Asm-Hose	77 7 4
92-7465	Hose-Suction	26 40 1	92-7556	Asm-Hose	77 1 1
92-7466	Clutch-Fan	34 31 1	92-7557	Asm-Tube	75 19 1
92-7472	Asm-Tube, Rear	53 3 1	92-7557	Asm-Tube, Cooler Front	64 40 1
92-7473	Asm-Tube, Rear	53 4 1	92-7558	Asm-Tube, Cooler	32 41 1
92-7473	Asm-Tube, Rear	19 14 1	92-7558	Asm-Tube, Cooler Rear	64 36 1
92-7474	Assembly-Tube, Front	19 9 1	92-7559	Asm-Hose	77 8 2
92-7475	Assembly-Tube, Traction	20 51 1	92-7560	Asm-Hose	77 2 1
92-7476	Assembly-Tube, Traction	20 48 1	92-7562	Asm-Hose	75 2 1
92-7477	Asm-Tube, Motor Drain	19 18 1	92-7562	Asm-Hose	68 52 1
92-7478	Asm-Tube, Motor RH	20 44 1	92-7564	Asm-Hose	67 12 1
92-7478	Tube-Motor, RH	16 30 1	92-7564	Asm-Hose	75 42 1
92-7479	Asm-Tube	75 10 1	92-7565	Asm-Hose	75 41 1
92-7483	Nut-Lug	19 4 16	92-7565	Asm-Hose	67 51 1
92-7484	Asm-Hose	26 12 1	92-7584	Asm-Tube	64 5 1
92-7485	Asm-Hose	19 20 1	92-7585	Asm-Tube	64 22 1
92-7485	Asm-Hose	26 33 1	92-7586	Gear-Driven	53 25 1
92-7486	Asm-Hose	19 19 1	92-7587	Gear-Driver	53 23 1
92-7487	Asm-Tube	20 42 1	92-7591	Asm-Tube	75 12 1
92-7488	Asm-Hose	20 43 1	92-7591	Asm-Tube, P2A	65 43 1
92-7489	Hose-Return	16 13 1	92-7594	Asm-Hose	61 7 1
92-7489	Hose-Return	26 19 1	92-7595	Asm-Hose	61 8 1
92-7490	Asm-Hose, Filter	26 25 1	92-7598	Asm-Tube, Front Drain	65 50 1
92-7490	Hose-Filter	16 16 1	92-7598	Asm-Tube, Frt. Drain	19 32 1
92-7491	Asm-Hose	75 16 1	92-7604	Pin-Stop	54 53 1
92-7491	Asm-Hose	26 11 1	92-7604	Pin-Stop	62 54 1
92-7492	Asm-Hose	26 36 1	92-7606	Bracket-Bulkhead	4 51 1
92-7492	Asm-Hose	64 41 1	92-7608	Bracket-Spring	6 12 1
92-7493	Asm-Tube, Filter	32 39 1	92-7609	Shaft-Spring	6 45 1
92-7493	Hose-Filter	16 20 1	92-7610	Retainer-Spring	6 42 1
92-7494	Asm-Tube Steering Rear	4 50 1	92-7622	Asm-Hose, Steering	26 35 1
92-7494	Asm-Tube, Steering	53 29 1	92-7622	Hose-Steering	4 49 1
92-7494	Asm-Tube, Steering Rear	62 59 1	92-7623	Bumper (Model 03801)	32 36 1
92-7494	Asm-Tube, Steering, Rear	65 48 1	92-7631	Sealstrip-Screen	32 22 1
92-7495	Asm-Tube, Steering	53 28 1	92-7633	Strip-Bumper, Hood	1 16 1
92-7495	Asm-Tube, Steering Rear	3 47 1	92-7634	Asm-Hose, Traction	19 15 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-7634	Asm—Hose, Traction	26 34 1	93-5835	Screw—Purge	46 28 1
92-7636	Asm—Hose	72 23 1	93-5856	Valve—Solenoid	46 17 1
92-7638	Asm—Hose	72 25 1	93-5986	Asm—Cover	52 4 1
92-7638	Asm—Hose	64 1 1	93-6028	Plate—Logo, Toro	32 26 1
92-7639	Asm—Hose	72 27 1	93-6668	Decal—Charging (Europe)	51 51 1
92-7639	Asm—Hose	64 37 1	93-6680	Decal—Fuel, Diesel (Europe)	2 34 1
92-7645	Fitting—Hydraulic 90°	19 8 1	93-6681	Plate—Warning	32 15 1
92-7646	Fitting—Hydraulic 45°	54 57 1	93-6686	Decal—Hydraulic Oil	1 5 1
92-7647	Asm—Tube, Drain	64 12 1	93-6687	Decal—No Step (Europe)	67 5 2
92-7648	Asm—Hose	64 2 1	93-6689	Decal—No Riders (Europe)	12 13 1
92-7649	Asm—Hose	77 18 4	93-6689	Decal—No Riders (Europe)	2 35 1
92-7649	Asm—Hose	64 20 4	93-6693	Decal—Floor Plate (Europe)	67 21 1
92-7787	Pulley—Camshaft	40 26 1	93-6699	Decal—Fast/Slow (Europe)	6 23 1
92-7791	Seal—Valve	39 52 8	93-7247	Washer—Thrust	53 6 1
92-7792	Guide—Valve (14.29mm)	39 47 8	93-7247	Washer—Thrust	62 55 1
92-7793	Guide—Valve (14.59mm)	39 * 8	93-7252	Decal—(Europe)	2 57 1
92-7794	Valve—Exhaust	39 50 4	93-7276	Decal—Danger (Europe)	51 52 1
92-7795	Seat—Exhaust Valve	39 51 4	93-7450	Spindle	21 1 1
92-8001	Sensor—Switch, Reed	7 13 1	93-7451	Cone—Bearing	21 3 1
92-8002	Sensor—Switch, Reed	67 35 1	93-7452	Cup—Bearing	21 4 1
92-8020	Adapter—Breather	16 35 3	93-7453	Housing	21 6 1
92-8753	Magnet—Switch, Reed	7 11 1	93-7454	Screw—HH	21 25 18
92-8754	Magnet—Switch, Reed	67 34 1	93-7455	Stud—Wheel	21 5 8
92-9651	Asm—Hub	61 25 2	93-7456	Gear—Ring	21 18 1
92-9652	Stud—Drive	61 36 10	93-7457	Spacer—Input	21 16 1
92-9724	Spindle—RH	61 * 1	93-7458	Plate—Cover	21 15 1
92-9725	Spindle—LH	61 21 1	93-7459	Ring—Retaining, External	21 19 1
93-0096	Decal—ACE	2 31 2	93-7460	Washer—Thrust	21 17 1
93-0307	Nut—Retainer	61 32 2	93-7461	Plug—Pipe	21 13 2
93-0309	Washer—Tab	61 31 2	93-7462	Ring—Retaining, Internal	21 14 1
93-1261	Decal—Console (Europe)	13 40 1	93-7463	Gear—Sun	21 20 1
93-1262	Decal—Hillside (Europe)	2 28 1	93-7464	Gear—Sun	21 21 1
93-1263	Decal—Tower (Europe)	3 23 1	93-7465	Washer—Thrust	21 22 1
93-1264	Decal—Switch, Backlap	75 24 1	93-7466	Pin—Dowel	21 24 2
93-1265	Decal—Hot Surface (Europe)	51 1 1	93-7467	Ring—Retaining, External	21 10 1
93-1266	Decal—Fuses (Europe)	13 58 1	93-7468	Washer—Thrust	21 9 1
93-1268	Decal—HOC Selector	12 17 1	93-7469	Cone—Bearing	21 8 1
93-2175	Asm—Pump, Gear	26 4 1	93-7470	Cup—Bearing	21 7 1
93-2649	Asm—Frame, Carrier	67 22 1	93-7471	Shaft—Input	21 23 1
93-2650	Cylinder—Hydraulic	67 38 1	93-7472	Asm—Carrier, Secondary	21 11 1
93-3102	Cap—Fuel, Diesel	17 10 1	93-7473	Asm—Carrier, Primary	21 12 1
93-3163	Spring	9 28 1	93-7474	Kit—Seal	21 2 1
93-3164	Cap	9 27 2	93-7476	Motor—Hydraulic W/Sensor	20 49 1
93-3165	Bracket	9 29 1	93-7480	Bulb—LED	3 29 1
93-3625	Spring—Return, Joystick	13 62 1	93-7483	Light—Warning Bank	12 32 1
93-4201	Asm—Hose	77 19 2	93-7484	Light—Warning Bank	12 31 1
93-4201	Asm—Hose	64 21 2	93-7485	Asm—Filter, Air	51 41 1
93-4205	Asm—Tube, Drain	64 15 1	93-7487	Switch—Toggle	75 31 1
93-4206	Asm—Tube, Drain	64 15 1	93-7488	Tank—Hydraulic	16 1 1
93-4207	Fitting—Tee	51 18 1	93-7489	Valve—Control, Flow	75 6 1
93-4208	Strip—Seal, Screen	32 27 1	93-7491	Cartridge—Pilot Check	76 2 1
93-4213	Asm—Speedometer	3 22 1	93-7491	Cartridge—Pilot Check	66 14 1
93-4215	Hose—Radiator, Upper Rear	32 5 1	93-7492	Cartridge—Relief 2300 psi	76 4 1
93-4215	Hose—Radiator, Upper Rear	34 22 1	93-7494	Cartridge—N.O. Poppet	76 13 2
93-4215	Hose—Radiator, Upper Rear	51 29 1	93-7494	Cartridge—N.O. Poppet	66 15 2
93-4216	Asm—Tube	77 14 1	93-7498	Plug—Plastic	16 6 1
93-4216	Asm—Tube	75 40 1	93-7499	Gasket—Flange	16 2 1
93-4217	Asm—Tube	77 26 1	93-7524	O—Ring	72 3 2
93-4217	Asm—Tube	75 39 1	93-7524	O—Ring	67 47 3
93-4219	Asm—Tube, #1 Bulkhead	77 17 1	93-7551	Cylinder—Hydraulic	67 13 1
93-4222	Asm—Tube, Drain Return	77 16 1	93-7553	Seal—Hood	32 13 1
93-4222	Asm—Tube, Drain Return	75 37 1	93-7554	Decal—Tower	3 23 1
93-4223	Asm—Tube, Front Drain	77 15 1	93-7555	Cylinder—Hydraulic	68 59 1
93-4224	Absorber—Shock	72 7 2	93-7579	Fender—RH	1 3 1
93-4224	Absorber—Shock	67 16 3	93-7582	Hose	1 20 1
93-4233	Asm—Engine	34 16 1	93-7584	Hose—Intake	32 11 1
93-4234	Screw—Socket Hd.	67 42 3	93-7584	Hose—Intake	51 40 1
93-4234	Screw—Socket Hd.,	72 35 2	93-7587	Bracket—Fuse Block	13 49 1
93-4246	Pin—Shock	72 12 2	93-7588	Cover—Tank	16 3 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-7589	Hose—Overflow	51 28 1	93-9159	Strap—Cover	79 9 2
93-7591	Hose—Return	51 24 1	93-9160	Cover—ROPS	79 6 1
93-7592	Tread—Footrest	2 42 2	93-9161	Pin	72 1 2
93-7594	Spacer—Tubular	34 21 1	93-9161	Pin	67 46 3
93-7595	Asm—Box, Battery	51 7 1	93-9162	Filter—Primary	52 3 1
93-7597	Fitting—SAE	75 7 1	93-9163	Filter—Safety	52 6 1
93-7598	Lever—Throttle	8 10 1	93-9164	Indicator	52 1 1
93-7773	Bolt	55 5 4	93-9164	Indicator—Service	51 37 1
93-7775	Bearing	58 18 2	93-9165	Decal—Instr. Service, 2WD	1 27 1
93-7778	Housing—Axle A	56 1 1	93-9166	Decal—Instr. Service, 4WD	2 27 1
93-7779	Housing—Axle B	56 3 1	93-9167	Decal—Console	13 40 1
93-7780	Axle—4WD	53 32 1	93-9176	Dipstick—Oil	35 3 1
93-7781	Washer	56 10 8	93-9176	Dipstick—Peugeot	34 51 1
93-7782	Screw—HHF	56 4 8	93-9177	Decal—Warning, Hillside	2 28 1
93-7783	Ring—Retaining	59 11 2	93-9178	Muffler	51 35 1
93-7784	Cover	59 12 2	93-9180	Cover—Box, Tool	1 26 1
93-7785	Nut—Slotted	59 13 2	93-9181	Knuckle—Pivot	72 37 2
93-7786	Fitting—Grease	59 17 2	93-9181	Knuckle—Pivot	67 44 3
93-7787	Bushing—Flange	56 2 2	93-9184	Decal—Rear Manifold Block	8 19 1
93-7840	Decal—Cap (Europe)	51 53 1	93-9190	Lift Arm #1	67 41 1
93-7960	Spacer	67 2 6	93-9191	Lift Arm #2	72 * 1
93-7961	Clamp—Drain, Case	67 3 3	93-9192	Lift Arm #3	72 6 1
93-7966	Shaft—Splined, Brake	19 31 2	93-9193	Lift Arm #4	67 32 1
93-7968	Pad—Foam, Battery	51 11 1	93-9194	Lift Arm #5	67 6 1
93-7970	Form—Wire, Hose Mount	75 28 1	93-9197	Decal—Switch, Backlap	75 24 1
93-7972	Ring—Retaining	19 30 4	93-9198	Decal—Hot Surface	51 1 1
93-7974	Plate—Battery, Box	51 5 1	93-9425	Decal—Danger (Europe)	2 55 1
93-7974	Plate—Box, Battery	17 1 1	93-9426	Decal—Danger	2 55 1
93-7976	Ring—Retaining	22 9 1	93-9783	O—Ring	77 28 10
93-7977	Seal	22 2 1	93-9973	Frame—Seat	8 5 1
93-7978	Rod—Pull	22 3 1	93-9976	Plate—Seat	8 18 1
93-7979	Pin—Cotter, Hair	22 6 2	93-9979	Latch—Seat	8 22 1
93-7980	Link	22 5 2	93-9983	Bracket—Latch, Seat	8 8 2
93-7981	Disc—Rotating	22 8 3	94-1402	Plug	64 14 4
93-7982	Actuator	22 11 1	94-1403	Fitting—Hydraulic	64 38 1
93-7983	Pin—Clevis	22 4 2	94-1408	Wireform—Overflow	51 19 1
93-7984	Gasket	22 10 1	94-1410	Holder—Can, Beverage	2 53 1
93-7985	Ball	22 13 3	94-1411	Cable—Battery, Negative	51 10 1
93-7986	Disc—Stationary	22 7 4	94-1414	Valve—Vacuator	52 5 1
93-7987	Spring—Extension	22 12 3	94-1416	Adapter—Indicator	51 36 1
93-7989	Shaft W/Clevis	73 7 1	94-1416	Asm—Adaptor	52 7 1
93-7989	Shaft W/Clevis	74 7 1	94-1417	Cover—Box, Control	13 41 1
93-7990	Head	69 10 1	94-1418	Hose—Radiator, Upper	34 12 1
93-7990	Head	71 10 1	94-1421	Coupling—Center, Spring	34 15 1
93-7990	Head	73 11 1	94-1422	Spacer—Coupler	34 49 3
93-7991	Collar	69 13 1	94-1425	Bar—Lift, Center	67 27 1
93-7991	Collar	71 13 1	94-1430	Bearing—Flange	72 11 8
93-7991	Collar	73 13 1	94-1430	Bushing—Flange	67 15 12
93-7992	Asm.—Barrel	73 2 1	94-1445	Strap—Battery	51 12 1
93-7993	Head	70 10 1	94-1446	Tube—Drain	16 26 1
93-7993	Head	74 11 1	94-1447	Asm—Tube, Steering Ret.	75 38 1
93-7994	Collar	70 13 1	94-1447	Tube—Steering, Return	16 39 1
93-7994	Collar	74 13 1	94-1447	Tube—Steering, Return	3 43 1
93-7995	Asm—Barrel	74 2 1	94-2617	Cover—Pump	1 21 1
93-7996	Cover—Tower	1 2 1	94-2620	Head—Filter	16 18 1
93-7998	Plate—Instrument	3 24 1	94-2621	Element	16 21 1
93-8050	Decal—Warning (Europe)	79 2 1	94-2624	Hose—Manifold	34 29 1
93-8053	Decal—ECU Label (Europe)	75 43 1	94-2624	Hose—Manifold	51 39 1
93-8073	Decal—Blank (Europe)	79 3 1	94-2626	Plug—Orifice	66 17 1
93-8497	Gauge—Fuel	12 27 1	94-2630	Hose—Return	51 17 1
93-8742	Pad—Brake	6 29 2	94-2633	Decal—HOC Selector	12 17 1
93-8744	Rivet—Pop	2 46 3	94-2636	Fitting—Hydraulic 90°	26 20 1
93-8744	Rivet—Pop	13 56 3	94-2637	Fitting—Hydraulic, Straight	26 18 1
93-9151	Fitting—Hydraulic 90°	77 21 3	94-2638	Nut—Push On	32 23 4
93-9152	Kit—Flange	78 * 1	94-2643	Frame—ROPS	79 7 1
93-9153	Kit—Seal	78 * 1	94-2644	Shaft With Clevis	71 12 1
93-9154	Kit—Valve Block	78 * 1	94-2646	Decal—Warning (Europe)	32 15 1
93-9155	Velcro	1 7 2	94-2646	Guard—Fan (Europe)	32 50 1
93-9157	Velcro	79 4 4	94-2800	Cap—Radiator	51 22 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-2801	Grommet—Rubber	51 44 2	94-3016	Asm—Backplate	30 8 1
94-2803	Bearing	58 12 2	94-3017	Adaptor—Charge Relief	30 12 1
94-2806	Adaptor—Nut (Europe)	54 67 6	94-3018	Asm—Housing	30 58 1
94-2807	Adaptor—Nut (Europe)	62 62 6	94-3019	Control—Servo, Manual	30 65 1
94-2812	Grommet	51 46 2	94-3020	Shaft—Drive	30 56 1
94-2814	Kit—Exhaust Coupler	51 50 1	94-3021	Asm—Kit, Rotating	30 35 1
94-2815	Sleeve—Exhaust Flange	51 49 1	94-3022	Plate—Valve	30 1 1
94-2834	Bracket—Clamp	65 53 1	94-3023	Coupler	30 10 1
94-2849	Muffler—Spark Arrestor	51 * 1	94-3025	Asm—Piston, Servo	30 41 1
94-2913	Decal—Rear Manifold (DK)	8 19 1	94-3026	Asm—Camplate	30 36 1
94-2914	Decal—Rear Manifold (NL)	8 19 1	94-3027	Washer—Seal	30 48 1
94-2915	Decal—Rear Manifold (SF)	8 19 1	94-3028	Screw	30 14 2
94-2916	Decal—Rear Manifold (F)	8 19 1	94-3029	Screw	30 21 2
94-2917	Decal—Rear Manifold (D)	8 19 1	94-3030	Washer	30 47 1
94-2918	Decal—Rear Manifold (I)	8 19 1	94-3031	Arm—Control	30 29 1
94-2919	Decal—Rear Manifold (J)	8 19 1	94-3032	Follower—Piston	30 33 1
94-2920	Decal—Rear Manifold (N)	8 19 1	94-3033	Plate—Cover	30 59 1
94-2921	Decal—Rear Manifold (P)	8 19 1	94-3034	Plate—Cover	30 43 1
94-2922	Decal—Rear Manifold (ES)	8 19 1	94-3035	Ring—Lock	30 9 1
94-2923	Decal—Rear Manifold (S)	8 19 1	94-3036	Ring—Quad	30 3 1
94-2924	Decal—Service (Danish)	2 27 1	94-3037	Ring—Retaining	30 4 1
94-2925	Decal—Service (Dutch)	2 27 1	94-3038	Plug—Dump Valve	30 5 1
94-2926	Decal—Service (Finnish)	2 27 1	94-3039	Kit—Seal	30 * 1
94-2927	Decal—Service (French)	2 27 1	94-3040	Orifice—Valve, Control	30 31 3
94-2928	Decal—Service (German)	2 27 1	94-3043	Switch	31 15 1
94-2929	Decal—Service (Italian)	2 27 1	94-3044	Kit—Seal	31 * 1
94-2930	Decal—Service (Japan)	2 27 1	94-3050	Plate—Spring	20 54 2
94-2931	Decal—Service (Norwegian)	2 27 1	94-3052	Weight—Wheel (Europe)	62 63 2
94-2932	Decal—Service (Portuguese)	2 27 1	94-3052	Weight—Wheel (Europe)	54 68 2
94-2933	Decal—Service (Spanish)	2 27 1	94-3055	Cap—Lower, Joystick	12 3 1
94-2934	Decal—Service (Swedish)	2 27 1	94-3056	Snap Ring—Joystick	12 4 1
94-2935	Decal—Service (Danish)	1 27 1	94-3057	Spring—Compression	12 5 1
94-2936	Decal—Service (Dutch)	1 27 1	94-3058	Cap—Upper, Joystick	12 6 1
94-2937	Decal—Service (Finnish)	1 27 1	94-3059	Tube—Steering, RH	3 6 1
94-2938	Decal—Service (French)	1 27 1	94-3060	Tube—Steering, Front LH	3 13 1
94-2939	Decal—Service (German)	1 27 1	94-3061	Tube—Steering, Front, In	3 7 1
94-2940	Decal—Service (Italian)	2 27 1	94-3062	Tube—Steering, Front, Out	3 14 1
94-2941	Decal—Service (Japan)	2 27 1	94-3063	Extension—Stem, Valve	62 66 2
94-2942	Decal—Service (Norwegian)	2 27 1	94-3063	Extension—Stem, Valve	54 71 2
94-2943	Decal—Service (Portuguese)	2 27 1	94-3077	Plug—Orifice	76 20 1
94-2944	Decal—Service (Spanish)	2 27 1	94-3084	Bumper (Model 03800)	32 36 1
94-2945	Decal—Service (Swedish)	2 27 1	94-3088	Spring—Brake	20 55 2
94-3000	Asm.—Backplate	25 8 1	94-3090	Harness—Wire, Main	3 8 1
94-3001	Housing	25 16 1	94-3090	Harness—Wire, Main	34 18 1
94-3002	Screw—HH	25 7 6	94-3090	Harness—Wire, Main	75 30 1
94-3002	Screw—HH	23 8 6	94-3090	Harness—Wire, Main	8 32 1
94-3002	Screw—HH	24 8 6	94-3090	Harness—Wire, Main	65 45 1
94-3003	Plate—Valve	25 13 1	94-3090	Harness—Wire, Main	20 47 1
94-3003	Plate—Valve	24 15 1	94-3090	Harness—Wire, Main	13 61 1
94-3003	Plate—Valve	23 16 1	94-3091	Decal—Fuses (Japan)	13 58 1
94-3004	Shaft—Drive, Splined	23 7 1	94-3100	Asm—Short Block	35 36 1
94-3004	Shaft—Drive, Splined	24 7 1	94-3101	Gasket Set	35 * 1
94-3005	Asm—Backplate	23 9 1	94-3102	Pin	35 14 2
94-3005	Asm—Backplate	24 9 1	94-3103	Plug—Threaded	35 44 1
94-3006	Housing	24 18 1	94-3104	Plug—Threaded	35 43 2
94-3006	Housing	23 19 1	94-3105	Plug—Drain	35 38 1
94-3007	Washer	23 3 1	94-3106	Gasket	35 42 2
94-3007	Washer	24 3 1	94-3107	Gasket	35 24 2
94-3007	Washer	30 53 1	94-3108	Plug—27.5 mm Dia.	35 * 8
94-3008	Seal—Shaft	23 2 1	94-3108	Plug—27.5 mm Dia.	38 * 2
94-3008	Seal—Shaft	24 2 1	94-3109	Plug—28.5 mm Dia.	35 * 9
94-3008	Seal—Shaft	30 54 1	94-3109	Plug—28.5 mm Dia.	38 * 2
94-3009	Asm—Plug	23 11 1	94-3110	Stud	35 45 1
94-3010	Sensor—Speed Pickup	24 11 1	94-3111	Pin—Groove	35 22 2
94-3011	Plug	28 7 1	94-3112	Screw—Washer Hd.	35 17 2
94-3012	Screw	28 10 8	94-3113	Asm—Cylinder Head	37 5 1
94-3013	Plug	28 23 1	94-3115	Nut—Lock	37 8 6
94-3014	Valve—Relief	28 26 1	94-3116	Gasket	37 3 1
94-3015	Kit—Seal	28 * 1	94-3117	Plate	37 2 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-3118	Plug	38 32 1	94-3181	Oil Filler	35 1 1
94-3119	Kit-Gasket	39 * 1	94-3182	Plug	35 2 1
94-3120	Bracket	39 54 1	94-3183	Gasket	35 39 1
94-3121	Plug	39 44 1	94-3184	Union	35 4 1
94-3122	Gasket	39 43 1	94-3186	O-Ring	35 40 1
94-3123	Screw-Hex. Hd.	37 1 2	94-3190	PCV Valve	35 46 1
94-3124	Bolt-Valve Cover	38 22 3	94-3191	Union	35 48 1
94-3124	Screw-Hex. Hd.	43 8 2	94-3192	Union	35 47 1
94-3125	Washer	38 21 3	94-3194	Cover-Pump, Water	45 5 1
94-3125	Washer-Flat	41 3 1	94-3195	Gasket-Pump, Water	45 4 1
94-3126	Protector-Lower	41 5 1	94-3196	Inlet-Water	45 7 1
94-3127	Case-Timing, Left	41 7 1	94-3196	Inlet-Water	38 31 1
94-3128	Case-Timing, Right	41 9 1	94-3197	O-Ring	45 3 1
94-3129	Plug	41 4 1	94-3197	O-Ring	38 30 1
94-3130	Screw	41 2 1	94-3198	Screw	45 8 2
94-3131	Screw	44 1 3	94-3198	Screw	38 35 2
94-3131	Screw	41 10 1	94-3199	Pipe-By-Pass	39 39 1
94-3132	Screw	41 1 2	94-3200	Hose-By-Pass	38 37 1
94-3133	Nut W/Washer	41 6 1	94-3201	Hose-By-Pass	39 40 1
94-3134	Nut	41 8 1	94-3205	Box-Outlet	44 3 1
94-3135	Bracket-Lifting	38 15 1	94-3206	Gasket	44 9 1
94-3136	Bracket-Lifting	38 23 1	94-3207	Ring	44 4 1
94-3137	Bracket-Lifting	38 25 1	94-3208	Stub-Outlet	44 2 1
94-3138	Screw	38 24 1	94-3209	Thermostat	44 11 1
94-3139	Screw	38 26 1	94-3210	Gasket	44 10 1
94-3140	Bearing Set (.30mm OS)	36 * 2	94-3211	Temp Sending Unit	44 6 1
94-3141	Thrust Bearing Set (Std.)	36 13 2	94-3212	Plug	44 7 2
94-3142	Thrust Bearing Set	36 * 2	94-3213	Screw	44 8 1
94-3143	Thrust Bearing Set	36 * 2	94-3214	Screw	44 5 1
94-3144	Pulley	36 3 1	94-3215	Manifold-Intake	42 6 1
94-3145	Screw-Hex. Hd.	36 1 1	94-3216	Screw	42 8 5
94-3146	Washer	36 2 1	94-3217	Screw	42 9 4
94-3147	Seal	36 15 1	94-3218	Screw	42 * 1
94-3148	Seal-Shaft	36 11 1	94-3219	Pump-Injection	46 19 1
94-3149	Gear-Flywheel	36 17 1	94-3220	Bracket	46 3 1
94-3150	Screw-Hex. Hd.	36 7 4	94-3221	Screw	46 11 1
94-3151	Washer	36 8 6	94-3222	Key	46 20 1
94-3152	Screw-Hex. Hd.	36 33 2	94-3223	Screw	46 25 1
94-3153	Rod-Connecting	36 25 4	94-3224	Washer-Flat	46 9 2
94-3154	Bushing-Sleeve	36 24 4	94-3225	Screw	46 4 2
94-3155	Bearing-Connecting Rod	36 * 4	94-3226	Gasket-Injector	47 4 4
94-3156	Bolt-Connecting Rod	36 28 8	94-3227	Spacer	47 8 4
94-3157	Piston Set-Std.	36 29 1	94-3228	Spring	47 7 4
94-3158	Piston Ring Set Std.	36 23 4	94-3229	Union	47 11 3
94-3159	Asm-Roller	40 11 1	94-3230	Hose	47 1 1
94-3160	Asm-Roller	40 15 1	94-3231	Bracket	47 13 2
94-3161	Screw	40 16 2	94-3232	Washer-0.79 mm	47 6 4
94-3161	Screw	46 24 1	94-3233	Washer-0.82 mm	47 * 4
94-3162	Stud	40 9 1	94-3234	Washer-0.85 mm	47 * 4
94-3163	Screw	40 6 1	94-3235	Washer-0.88 mm	47 * 4
94-3164	Washer-Spring	42 7 7	94-3236	Washer-0.91 mm	47 * 4
94-3164	Washer-Spring	40 10 4	94-3237	Washer-0.94 mm	47 * 4
94-3164	Washer-Spring	46 10 6	94-3238	Washer-0.97 mm	47 * 4
94-3165	Nut	46 6 4	94-3239	Washer-1.00 mm	47 * 4
94-3165	Nut-Lock	40 12 1	94-3240	Washer-1.03 mm	47 * 4
94-3166	Washer-Flat	40 7 1	94-3241	Washer-1.06 mm	47 * 4
94-3167	Bracket-Fan	40 24 1	94-3242	Washer-1.30 mm	47 6 4
94-3168	Pulley-Fan	40 21 1	94-3243	Washer-1.33 mm	47 * 4
94-3169	Screw	40 25 1	94-3244	Washer-1.36 mm	47 * 4
94-3170	Screw	40 17 1	94-3245	Washer-1.39 mm	47 * 4
94-3171	Screw	40 20 2	94-3246	Washer-1.42 mm	47 * 4
94-3172	Washer	40 19 3	94-3247	Washer-1.45 mm	47 * 4
94-3173	Screw	40 22 3	94-3248	Washer-1.48 mm	47 * 4
94-3174	Washer	38 27 8	94-3249	Tube-Outlet	46 22 1
94-3176	Gear-Oil Pump	43 2 1	94-3250	Screw-Connection	46 23 1
94-3177	Plug	43 12 2	94-3251	Nut	46 15 1
94-3178	Strainer	43 9 1	94-3251	Nut-Lock	50 8 1
94-3179	Washer-Spring	43 4 3	94-3252	Alternator	48 12 1
94-3180	Switch-Pressure	35 32 1	94-3253	Bracket	48 7 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-3254	Screw	48 6 1	94-8062	Decal-Diagnostic	10 *3 1
94-3255	Slide	48 4 1	94-8063	Decal-Diagnostic	10 *3 1
94-3256	Belt	48 5 1	94-8064	Decal-Diagnostic	10 *3 1
94-3257	Washer-Spring	48 13 1	94-8065	Decal-Diagnostic	10 *3 1
94-3258	Screw	48 14 1	94-8066	Decal-Diagnostic	10 *3 1
94-3259	Screw	48 9 1	94-8067	Decal-Diagnostic	10 *3 1
94-3260	Washer-Flat	48 3 1	94-8068	Decal-Diagnostic	10 *3 1
94-3261	Nut	48 11 1	94-8069	Decal-Diagnostic	10 *3 1
94-3262	Nut	48 10 1	94-8070	Decal-Diagnostic	10* 3 1
94-3263	Starter	49 3 1	94-8102	Tube-Interlock (Europe)	12 1 1
94-3264	Plug-Glow	50 3 4	94-8103	Boot-Control, Lift	12 22 1
94-3265	Cable-Glow Plug	50 2 4	94-8104	Switch-Micro	12 8 2
94-3266	Nut-Hex.	50 5 4	94-8105	Clamp-Tube	33 54 2
94-3267	Nut-Lock	50 6 1	94-8108	Support-Filter, Air	51 42 1
94-3274	O-Ring	46 18 1	94-8115	Pin-Axle, Pivot	62 53 1
94-3275	Solenoid-Starter	49 * 1	94-8115	Pin-Axle, Pivot	54 55 1
94-3354	Decal-Diagnostic ACE	10 1 1	94-8131	Frame-Rear	1 22 1
94-3355	Decal-Diagnostic ACE	10 1 1	94-8132	Gasket-Head (1.48 mm)	39 53 1
94-3356	Decal-Diagnostic ACE	10 1 1	94-8133	Gasket-Head (1.52 mm)	39 * 1
94-3357	Decal-Diagnostic ACE	10 1 1	94-8134	Gasket-Head (1.58 mm)	39 * 1
94-3358	Decal-Diagnostic ACE	10 1 1	94-8135	Gasket-Head (1.62 mm)	39 * 1
94-3359	Decal-Diagnostic ACE	10 1 1	94-8140	Plug-Orifice	76 21 1
94-3360	Decal-Diagnostic ACE	10 1 1	94-8141	Cylinder-Hydraulic	53 44 1
94-3361	Decal-Diagnostic ACE	10 1 1	94-8142	Asm-Cylinder	61 39 1
94-3362	Decal-Diagnostic ACE	10 1 1	94-8143	Tire	19 1 2
94-3363	Decal-Diagnostic ACE	10 1 1	94-8146	Strip-Foam, Seat	8 34 1
94-3364	Decal-Diagnostic ACE	10 1 1	94-8147	Nozzle-Injector	47 9 4
94-3500	Wheel-Steering	3 19 1	94-8149	Rim	19 5 2
94-4088	Screw	5 9 7	94-8166	O-Ring	16 7 1
94-4089	Cap-End	5 10 1	94-8946	Washer-Thrust	72 38 2
94-4090	Gerotor	5 11 1	94-8946	Washer-Thrust	67 45 3
94-4091	Spacer	5 12 1	94-8947	Bushing-Flange	72 4 2
94-4092	Plate-Wear	5 14 1	94-8947	Bushing-Flange	67 48 5
94-4093	Drive	5 13 1	94-8948	Bushing	72 5 2
94-4094	Pin	5 6 1	94-8948	Bushing	67 49 3
94-4095	Kit-Spring, Centering	5 3 1	94-8949	Bushing-Flange	72 2 8
94-4096	Kit-Bearing	5 8 1	94-8949	Bushing-Flange	67 25 12
94-4097	Asm-Plug	5 15 1	94-9950	Asm-Valve, Steering	3 5 1
94-4098	Ring-Retaining	5 5 1	94-9951	Asm-Column, Steering	3 17 1
94-4099	Kit-Seal	5 1 1	94-9952	Nut-Jam	3 21 1
94-4100	Ball	5 16 1	94-9953	Frame-Front	2 38 1
94-4572	Decal-Hillside (Japan)	2 28 1	94-9955	Asm-Barrel	60 1 1
94-4573	Decal-Tower (Japan)	3 23 1	94-9956	Asm-Piston Rod	60 6 1
94-4574	Decal-Console (Japan)	13 40 1	94-9957	Piston	60 3 1
94-4575	Decal-HOC Selector	12 17 1	94-9958	Gland-Cylinder	60 8 1
94-4577	Decal-Warning (Japan)	32 15 1	94-9959	Asm-Barrel	63 1 1
94-4578	Decal-Hot Surface (Japan)	51 1 1	94-9960	Asm-Rod, Piston	63 12 1
94-4579	Decal-Danger (Japan)	2 55 1	94-9961	Piston	63 3 1
94-4580	Decal-Backlap (Japan)	75 24 1	94-9962	Gland-Cylinder	63 10 1
94-5386	Decal-Diagnostic	10 *3 1	94-9963	Ring-Retaining	63 9 1
94-5438	Seal-Solenoid	66 16 10	94-9964	Kit-Seal	63 * 1
94-5438	Seal-Solenoid	76 19 16	94-9965	Asm-Head, Cylinder	39 * 1
94-5603	Bushing-Sleeve	62 51 2	94-9967	Circuit Breaker-50 Amp	34 * 1
94-5607	Asm-Axle, Rear	61 20 1	94-9968	Circuit Breaker-100 AMP	34 * 1
94-6343	Decal-Wire Identification #1	13 * 1	94-9969	Screw-Connection	46 27 1
94-6344	Decal-Wire Identification #2	13 * 1	94-9973	Ring-Retaining	61 40 1
94-6349	Decal-Fuses	13 58 1	94-9974	Ring-Retaining	67 29 6
94-6710	Fuse-2A	13 47 1	94-9983	Box-Degassing	51 21 1
94-6753	Joystick (Europe)	12 9 1	94-9984	Sensor-Water Level	51 23 1
94-8000	Nut-Lock	53 13 1	94-9994	Gasket-Camshaft	40 27 1
94-8000	Nut-Lock	61 13 1	94-9998	Washer-Thrust	67 30 6
94-8018	Arm-Drag Link	59 1 1	94-9999	Valve-Relief	30 7 2
94-8019	Arm-Tie Rod	59 2 1	95-1821	Spring-Brake, Park	3 39 1
94-8025	O-Ring	18 3 1	95-3450	Pump-Piston	26 24 1
94-8026	Screw-Vent	18 12 1	95-3459	Cartridge-No Flow	66 9 1
94-8027	O-Ring	18 10 1	95-3461	Pin	67 20 2
94-8028	O-Ring	18 11 1	95-3461	Pin	72 32 2
94-8060	Decal-Diagnostic	10 *3 1	95-3466	Decal-Instructions, Clip	8 17 1
94-8061	Decal-Diagnostic	10 *3 1	95-3467	Decal-Clip (Danish)	8 17 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
95-3468	Decal-Clip (Dutch)	8 17 1	237-65	O-Ring	16 15 2
95-3469	Decal-Clip (Finnish)	8 17 1	237-65	O-Ring	75 20 1
95-3470	Decal-Clip (French)	8 17 1	237-65	O-Ring	26 27 1
95-3471	Decal-Clip (German)	8 17 1	237-65	O-Ring	32 32 4
95-3472	Decal-Clip (Italian)	8 17 1	237-78	O-Ring	26 3 4
95-3473	Decal-Clip (Norwegian)	8 17 1	237-78	O-Ring	66 3 4
95-3474	Decal-Clip (Portuguese)	8 17 1	237-78	O-Ring	75 5 8
95-3475	Decal-Clip (Spanish)	8 17 1	237-78	O-Ring	76 6 10
95-3476	Decal-Clip (Swedish)	8 17 1	237-78	O-Ring	67 10 6
95-3477	Decal-Clip (Japan)	8 17 1	237-78	O-Ring	72 20 4
95-3484	Screw-Hex. Hd.	36 19 8	237-78	O-Ring	77 24 5
95-3485	Sprocket-Oil Pump	36 5 1	237-78	O-Ring	64 26 4
217-125	Wheel	61 29 2	237-78	O-Ring	61 42 2
217-125	Wheel	53 34 2	237-78	O-Ring	54 51 2
218-446	Washer-Lock	13 39 1	237-79	O-Ring	77 4 10
218-447	Nut-Hex.	13 38 1	237-79	O-Ring	75 18 4
218-498	Nut-Hex.	12 21 2	237-79	O-Ring	64 27 3
218-533	Lens-Red	3 28 1	237-79	O-Ring	16 33 1
218-535	Nut-Lock	3 34 1	237-79	O-Ring	19 35 4
218-536	Washer-Lock, Int. Tooth	3 25 1	237-80	O-Ring	26 8 3
218-574	Fuse-7.5A	13 47 1	237-81	O-Ring	16 10 3
218-578	Fuse-10A	13 47 4	237-81	O-Ring	53 19 2
218-581	Fuse-15A	13 47 1	237-81	O-Ring	26 21 1
218-588	Screw	13 *74 2	237-81	O-Ring	75 22 1
218-589	Washer-Lock	12 34 1	237-81	O-Ring	19 24 4
218-594	Fuse-20A	13 47 1	237-81	O-Ring	64 31 1
219-17	Bulb	13 *64 4	237-99	O-Ring	26 13 1
232-24	Stem-Valve	19 2 2	237-101	O-Ring	26 41 1
232-27	Stem-Valve	61 30 2	237-146	O-Ring	26 29 2
232-27	Stem-Valve	53 35 2	237-156	O-Ring	76 11 10
233-17	Knob	3 33 1	237-166	O-Ring	53 17 1
233-42	Knob	8 11 1	237-166	O-Ring	19 25 2
233-42	Knob	6 21 1	240-2	Grommet	19 11 2
237-7	O-Ring	13 76 4	240-2	Grommet	19 11 3
237-21	O-Ring	75 3 5	240-5	Grommet	77 12 5
237-21	O-Ring	67 8 6	240-5	Grommet	64 17 4
237-21	O-Ring	72 22 4	240-7	Grommet	54 61 1
237-21	O-Ring	77 22 5	240-11	Grommet	17 15 3
237-21	O-Ring	64 39 2	240-11	Grommet	16 29 3
237-22	O-Ring	26 7 1	242-50	Nut-Lug	61 35 10
237-22	O-Ring	3 10 10	249-40	Keeper	1 9 1
237-22	O-Ring	64 10 2	2410-18	Plug	80 9 1
237-22	O-Ring	77 20 3	2410-42	Cap-Bumper	32 38 2
237-22	O-Ring	19 33 1	2410-42	Cap-Bumper	32 38 4
237-22	O-Ring	75 36 1	2410-64	Button-Plug	33 53 3
237-22	O-Ring	16 38 1	2411-36	Bearing-Rod End	6 3 2
237-22	O-Ring	61 44 2	2411-36	Bearing-Rod End	26 22 1
237-22	O-Ring	62 58 2	2411-45	Joint-Ball, RH	62 48 1
237-22	O-Ring	54 64 6	2411-46	Joint-Ball, LH	61 48 1
237-30	O-Ring	77 6 18	2412-3	Clamp-Hose	32 4 2
237-30	O-Ring	75 9 4	2412-3	Clamp-Hose	34 13 4
237-30	O-Ring	26 10 2	2412-36	Clamp-Drain	17 11 1
237-30	O-Ring	64 30 6	2412-36	Clamp-Hose	32 7 1
237-30	O-Ring	16 31 2	2412-36	Clamp-Hose	51 34 4
237-30	O-Ring	20 45 3	2412-93	Clamp-R	7 21 1
237-42	O-Ring	26 5 1	2412-93	R-Clamp	20 39 2
237-42	O-Ring	75 8 1	2412-96	Clamp	68 53 1
237-42	O-Ring	3 12 4	2412-96	Clamp-R	72 16 1
237-42	O-Ring	66 12 5	2412-96	Clamp-R	6 49 1
237-42	O-Ring	76 15 5	2412-96	Clamp-R (Europe)	33 52 1
237-42	O-Ring	16 36 1	2412-108	Clamp-Hose	17 3 4
237-42	O-Ring	53 38 2	2412-108	Clamp-Hose	51 16 3
237-42	O-Ring	65 52 2	2412-108	Clamp-Hose	34 26 2
237-56	O-Ring	66 5 4	2412-111	Clamp	16 23 1
237-58	O-Ring	53 7 6	2412-111	Clamp-Hose	26 39 2
237-58	O-Ring	16 12 1	2412-122	Asm-Clamp	62 50 2
237-58	O-Ring	26 17 3	2412-125	Clamp-Hose	32 12 1
237-58	O-Ring	19 22 4	2412-125	Clamp-Hose	34 30 1
237-58	O-Ring	64 33 2	2412-125	Clamp-Hose	51 38 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
2412-126	Clamp-R	13 60 1	3217-29	Nut-Hex.	13 *67 6
2412-129	Clamp-Hose	35 8 8	3218-4	Nut-Jam	19 27 2
2412-129	Clamp-Hose	51 27 2	3219-14	Nut-Hex.	13 *69 8
2412-129	Clamp-Hose	38 36 4	3219-14	Washer-Lock	3 26 3
2412-129	Clamp-Hose	34 39 4	3220-3	Nut-Jam	6 2 3
2412-133	Clamp-R	7 17 2	3220-3	Nut-Jam	26 15 1
2412-150	J-Clip	34 48 1	3220-3	Nut-Jam	30 46 1
254-72	Cup-Bearing	61 26 2	3220-7	Nut-Jam	61 37 2
254-92	Cone-Bearing	61 27 2	3220-11	Nut-Jam	62 61 1
254-106	Cone-Bearing	61 23 2	3220-24	Nut-Lock	12 19 1
254-107	Cup-Bearing	61 24 2	3230-2	Screw-Carriage	32 48 3
256-42	Bushing	6 39 2	3234-1	Screw	16 17 2
256-172	Bushing	72 8 4	3234-5	Screw-Flange	32 9 10
256-172	Bushing	67 14 6	3234-5	Screw-Flange Hd.	51 6 3
256-236	Bearing-Flange	6 28 4	3234-7	Screw	3 15 2
283-58	Pin-Clevis	6 32 2	3234-7	Screw-(Europe)	2 56 3
302-5	Fitting-Grease	69 1 1	3234-11	Screw-Flange Head	26 16 1
302-5	Fitting-Grease	70 1 1	3234-12	Screw-Hex. Hd. Flange	61 14 2
302-5	Fitting-Grease	71 1 1	3234-14	Screw-Flange	2 37 10
302-5	Fitting-Grease	73 1 1	3234-17	Screw-Flange Hd.	75 32 4
302-5	Fitting-Grease	74 1 1	3250-29	Screw	7 12 4
302-5	Fitting-Grease	72 36 6	3250-31	Screw-Pan Hd.	12 28 2
302-5	Fitting-Grease	61 41 1	3253-2	Nut-Hex.	4 55 9
302-5	Fitting-Grease	54 54 1	3253-2	Washer-Lock	13 *70 5
302-5	Fitting-Grease	68 55 9	3253-3	Washer-Lock	75 34 3
302-11	Fitting-Grease	61 19 2	3253-3	Washer-Lock	30 66 1
302-33	Fitting-Grease	54 63 1	3253-4	Washer-Lock	7 19 4
302-33	Fitting-Grease 90°	62 52 1	3253-6	Washer-Lock	7 7 2
302-60	Fitting-Grease	6 38 1	3253-6	Washer-Lock	9 25 2
302-60	Fitting-Grease 90°	53 42 1	3253-15	Washer-Lock	13 *66 2
304-46	Fitting-Drain	17 12 1	3253-15	Washer-Lock	17 19 5
304-46	Nut-Drain Cock	32 17 1	3253-33	Washer-Lock	9 31 1
321-15	Screw-HH	75 33 3	3254-1	Washer-Lock	12 24 1
321-39	Screw-Hex. Hd.	13 57 2	3254-6	Washer-Lock	12 18 1
322-3	Screw-HH	8 9 8	3255-8	Washer-Lock	3 37 1
322-3	Screw-HH	12 11 3	3255-9	Washer-Lock, Ext. Tooth	51 4 2
322-3	Screw-Hex. Hd.	7 18 2	3255-19	Washer-Lock	13 *75 2
322-3	Screw-Hex. Hd.	6 27 9	3255-24	Washer-Lock, Ext. Tooth	13 *68 3
322-3	Screw-Hex. Hd.	2 32 4	3256-1	Washer	13 37 3
322-4	Screw-HH	68 54 1	3256-1	Washer-Flat	3 32 2
322-5	Screw-Hex. Hd.	13 59 1	3256-1	Washer-Flat	2 48 3
322-6	Screw-HH	65 46 1	3256-3	Washer-Flat	2 33 4
322-6	Screw-Hex. Hd.	9 30 1	3256-5	Washer-Flat	9 4 1
322-6	Screw-Hex. Hd.	4 53 3	3256-5	Washer-Flat	6 44 1
322-7	Screw-HH	77 30 2	3256-14	Washer-Flat	12 26 2
322-7	Screw-HH	3 41 1	3256-14	Washer-Flat	3 27 2
322-7	Screw-Hex. Hd.	65 56 3	3256-22	Washer-Flat	6 8 2
322-9	Screw-HH	33 55 1	3256-22	Washer-Flat	3 40 4
323-4	Screw-Hex. Hd.	7 6 2	3256-23	Washer-Flat	3 38 6
323-6	Screw-Hex. Hd.	53 1 2	3256-23	Washer-Flat	77 32 4
323-6	Screw-Hex. Hd.	65 54 2	3256-23	Washer-Flat	7 2 8
323-7	Screw-Hex. Hd.	6 10 1	3256-23	Washer-Flat	64 7 8
323-7	Screw-Hex. Hd.	26 37 2	3256-23	Washer-Flat	12 12 4
323-9	Screw-Hex. Hd.	6 5 1	3256-23	Washer-Flat	8 14 4
325-4	Screw-Hex. Hd.	53 22 2	3256-23	Washer-Flat	32 49 3
325-5	Screw-Hex. Hd.	32 40 2	3256-24	Washer-Flat	30 13 4
325-20	Screw-Hex. Hd.	61 1 2	3256-24	Washer	9 5 1
325-33	Screw-Hex. Hd. 2WD	54 56 2	3256-24	Washer-Flat	6 4 2
325-33	Screw-Hex. Hd. 4WD	54 56 4	3256-24	Washer-Flat	8 21 3
328-7	Screw-Hex. Hd.	67 24 4	3256-26	Washer	54 65 1
3210-5	Screw-Hex. Hd.	61 46 2	3256-26	Washer-Flat	3 2 2
3212-4	Screw	7 8 2	3256-26	Washer-Flat	9 24 2
3213-14	Screw-HH (Europe)	62 65 6	3256-26	Washer-Flat (Europe)	62 64 6
3213-14	Screw-HH (Europe)	54 70 6	3256-26	Washer-Flat (Europe)	54 69 6
3217-5	Nut	30 28 1	3256-27	Washer-Flat	32 47 2
3217-6	Nut-Jam	75 29 1	3256-29	Washer-Flat	53 12 1
3217-6	Nut-Jam	9 32 1	3256-29	Washer-Flat	61 12 1
3217-25	Nut-Hex.	13 65 2	3256-42	Washer-Flat	68 61 2
3217-26	Nut	12 23 1	3256-46	Washer-Flat	9 20 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3256-46	Washer-Flat	26 42 2	32120-15	Ring-Retaining	53 24 2
3256-49	Washer-Flat	34 19 1	32120-93	Ring-Retaining	72 34 2
3256-56	Washer-Flat	32 16 3	32121-6	Pin-Roll	6 11 1
3256-69	Washer-Flat	6 33 3	32121-11	Pin-Roll	6 41 1
3256-77	Washer-Flat	30 44 8	32121-16	Pin-Roll	6 34 1
3256-78	Washer-Flat	1 13 2	32121-45	Pin-Roll	6 13 2
3258-166	Screw	1 23 3	32121-50	Pin-Roll	6 36 1
3258-166	Screw	12 36 3	32122-24	Screw	17 20 5
3269-4	Rivet-Pop	32 35 4	32122-54	Screw-Machine Slot Hd.	80 1 1
3269-10	Washer-Flat	1 15 2	32128-20	Nut-Flange	32 8 4
3269-13	Rivet-Pop	1 10 4	32128-20	Nut-Lock	6 26 9
3272-2	Pin-Cotter	6 9 2	32128-21	Nut-Hex. Hd. Flange	53 2 2
3272-5	Pin-Cotter	3 4 3	32128-21	Nut-Lock	65 55 2
3272-7	Pin-Cotter	59 14 2	32128-25	Nut-Lock	8 7 4
3272-10	Pin-Cotter	3 3 1	32128-26	Nut-Flange	9 21 4
3272-10	Pin-Cotter	8 20 1	32128-33	Nut-Flange	2 45 3
3272-10	Pin-Cotter	6 37 2	32128-33	Nut-Lock	13 55 3
3272-12	Pin-Cotter	61 6 2	32136-14	Nut-Hex. Slotted	61 9 4
3272-12	Pin-Cotter	54 49 2	32136-14	Nut-Hex. Slotted	53 48 2
3272-13	Pin-Cotter	61 34 2	32144-10	Screw	8 26 2
3274-59	Screw-Cap	30 30 6	32144-11	Screw-Self Tapping	72 17 1
3274-81	Screw	30 45 8	32144-11	Screw-Thread Forming	19 17 5
3290-93	Screw-HH	12 7 4	32144-11	Screw-Thread Forming	3 44 2
3290-271	Rivet-Pop	32 3 2	32144-14	Screw-Hex. Hd.	6 18 2
3290-282	Rivet-Pop	34 50 1	32144-14	Screw-Hex. Hd.	67 40 3
3290-307	Pin-Cotter, Hair	8 33 1	32144-18	Screw-Hex. Washer Hd.	13 50 2
3290-354	Plate-Nut	12 10 2	32148-7	Nut-Clinch	1 4 5
3290-378	Tie-Cable	3 9 7	32148-10	Nut-Clinch	32 14 2
3290-378	Tie-Cable	51 20 3	32151-10	Ring-Retaining	61 16 2
3290-378	Tie-Cable	17 23 3	32151-36	Ring-Retaining	72 18 4
3290-378	Tie-Cable	72 24 2	32151-61	Ring-Retaining	72 13 4
3290-378	Tie-Cable	77 27 1	32151-72	Retainer-Push On	32 28 2
3290-378	Tie-Cable	8 31 2	32151-96	Ring-Retaining	53 14 1
3290-378	Tie-Cable	20 41 3	32151-104	Ring-Retaining	53 43 2
3290-378	Tie-Cable	13 44 2	32152-5	Nut-Lock	62 49 2
3290-378	Tie-Cable	65 44 6	32152-10	Nut	73 3 1
3290-378	Tie-Cable	6 48 1	32152-10	Nut	74 3 1
3290-378	Tie-Cable	67 50 3	32152-10	Nut-Lock	60 2 1
3290-378	Tie-Cable	34 52 2	32152-10	Nut-Lock	63 2 1
3290-461	Washer-Belleville	6 24 1	32152-10	Nut-Lock	69 3 1
3290-467	Pin-Cotter, Hair	8 6 1	32152-10	Nut-Lock	70 3 1
3290-467	Pin-Cotter, Hair	1 19 2	32152-10	Nut-Lock	71 3 1
3290-489	Knob-Control, Lift	12 29 1	33004-00	Nut-Hex. Flange	34 44 2
3296-2	Nut-Lock	12 14 1	33005-00	Nut-Hex. Flange	34 1 9
3296-23	Nut-Lock	53 11 2	33005-00	Nut-Hex. Flange	17 5 2
3296-23	Nut-Lock	32 37 4	33005-00	Nut-Hex. Flange	51 48 2
3296-23	Nut-Lock	32 46 2	33023-00	Nut-Lock	51 32 1
3296-29	Nut-Lock	7 1 5	33024-00	Nut	68 60 1
3296-29	Nut-Lock	51 2 1	33024-00	Nut-Lock	79 8 5
3296-29	Nut-Lock	8 13 9	33025-00	Nut	72 9 2
3296-29	Nut-Lock	75 25 1	33025-00	Nut	67 18 6
3296-39	Nut-Lock	7 14 2	33093-00	Washer	51 31 1
3296-39	Nut-Lock	8 24 1	33103-020	Screw-HHF	4 56 2
3296-39	Nut-Lock	6 25 3	33103-020	Screw-Hex. Hd. Flange	51 26 1
3296-42	Nut-Lock	13 46 2	33103-025	Screw-HHF	3 35 1
3296-44	Nut-Lock	9 22 1	33104-010	Screw-HH	72 39 4
3296-45	Nut-Lock	61 11 2	33104-016	Screw-Hex. Hd. Flange	75 27 4
3296-47	Nut-Lock	77 31 2	33104-016	Screw-Hex. Hd. Flange	51 43 2
3296-47	Nut-Lock	3 36 1	33104-020	Screw-HHF (Europe)	33 51 3
3296-47	Nut-Lock	65 47 4	33104-020	Screw-Hex. Hd. Flange	34 35 2
3296-47	Nut-Lock	33 56 1	33104-025	Screw-Hex. Hd. Flange	64 13 4
3296-51	Nut-Lock	67 19 4	33104-030	Screw-HHF	79 5 5
3296-54	Nut-Lock	7 9 4	33104-060	Screw-HH	68 56 1
3296-59	Nut-Lock	26 23 1	33105-025	Screw-Hex. Hd. Flange	17 13 3
32103-3	Nut-Wing	80 4 1	33105-025	Screw-Hex. Hd. Flange	16 28 3
32104-37	Screw-Hex. Hd.	64 6 2	33105-030	Screw-Hex. Hd. Flange	17 2 2
32104-76	Screw-Self Tapping	67 36 2	33105-030	Screw-Hex. Hd. Flange	32 2 2
32105-13	Screw-HH	13 42 4	33105-030	Screw-Hex. Hd. Flange	34 8 6
32120-8	Ring-Retaining	60 11 1	33105-030	Screw-Hex. Hd. Flange	51 14 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
33105-035	Screw-Flange	2 54 2	340-98	Fitting-Hydraulic 90°	77 5 10
33105-040	Screw-HH	68 58 2	340-98	Fitting-Hydraulic 90°	64 28 1
33105-040	Screw-HHF	72 30 2	340-98	Fitting-Hydraulic 90°	20 46 1
33105-070	Screw-Hex. Hd. Flange	34 7 3	340-103	Fitting-Hydraulic 45°	72 21 1
33106-030	Screw-Hex. Hd. Flange	19 21 12	340-105	Fitting-Hydraulic 90°	26 9 2
33106-035	Screw-HHF	79 1 3	340-117	Cap-Fitting	4 48 1
33106-035	Screw-HHF	1 6 8	340-126	Nut-Bulkhead	53 8 3
33106-090	Screw-Hex. Hd. Flange	19 36 8	340-127	Nut-Bulkhead	19 6 1
33108-025	Screw-Hex. Hd. Flange	32 1 2	340-127	Nut-Bulkhead	77 10 5
33108-035	Screw	1 25 6	340-127	Nut-Bulkhead	64 19 4
33116-120	Screw-Hex. Hd.	20 37 4	340-128	Nut-Bulkhead	19 13 2
340-2	Adapter	3 11 4	340-128	Nut-Bulkhead	19 13 3
340-2	Adapter	16 37 1	340-129	Fitting-Hydraulic 90°	26 30 1
340-2	Adapter	53 37 1	340-129	Fitting-Hydraulic 90°	26 31 1
340-2	Adapter-Hydraulic	75 23 1	340-132	Fitting-Hydraulic 90°	72 28 1
340-4	Fitting-Hydraulic	75 17 4	340-132	Fitting-Hydraulic 90°	67 11 5
340-4	Fitting-Hydraulic	64 29 1	340-132	Fitting-Hydraulic 90°	75 11 1
340-5	Fitting-Hydraulic	20 40 2	340-132	Fitting-Hydraulic 90°	64 25 2
340-9	Fitting-Hydraulic	16 11 1	340-139	Fitting-Elbow 90°	16 14 1
340-9	Fitting-Hydraulic	53 18 1	340-139	Fitting-Hydraulic 90°	75 21 1
340-15	Fitting-Hydraulic 90°	26 30 1	340-142	Fitting-Hydraulic 90°	19 23 4
340-17	Fitting-Hydraulic 90°	26 28 1	340-142	Fitting-Hydraulic 90°	16 19 1
340-18	Fitting-Hydraulic 90°	19 34 1	340-142	Fitting-Hydraulic 90°	53 21 1
340-65	O-Ring	20 *53 6	340-148	Fitting-Tee	64 32 1
340-65	O-Ring	26 32 2	340-154	Fitting-Hydraulic 90°	64 4 2
340-68	Fitting-Hydraulic, Tee	77 23 1	340-157	Fitting-Tee	16 32 1
340-68	Fitting-Tee, Bulkhead	3 45 1	340-161	Fitting-Adapter	64 3 1
340-70	Nut-Bulkhead	64 11 7	353-508	Plug	53 39 1
340-70	Nut-Bulkhead	77 13 2	353-989	Plug	66 11 5
340-70	Nut-Lock	53 26 2	353-989	Plug	76 14 5
340-70	Nut-Lock, Bulkhead	3 46 4	353-990	Plug	66 4 4
340-70	Nut-Lock, Bulkhead	62 57 2	353-990	Plug	76 5 10
340-74	Nut-Bulkhead	32 31 2	353-991	Plug	66 6 4
340-77	Fitting-Hydraulic 90°	26 6 1	353-991	Plug	76 12 10
340-92	Fitting-Hydraulic	75 4 4	354-77	Fitting-Quick Connect	26 2 4
340-92	Fitting-Hydraulic	67 7 1	354-77	Fitting-Quick Connect	75 14 1
340-92	Fitting-Hydraulic	77 25 5	354-77	Fitting-Quick Connect	64 23 1
340-92	Fitting-Hydraulic	72 26 2	354-79	Cap-Dust	26 1 4
340-97	Fitting-Hydraulic 90°	54 52 2	354-79	Cap-Fitting	75 15 1
340-97	Fitting-Hydraulic 90°	61 43 2	354-79	Cap-Fitting	64 24 1
340-97	Fitting-Hydraulic 90°	61 43 2			

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 6500D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the operator's platform. In any correspondence concerning the Reelmaster 6500D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 6500D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame & Body Assembly	1-2	Collector Assembly	44
Steering Tower Assembly	3-4	Water Pump Assembly	45
Steering Control Valve Asm. 94-9950	5	Fuel Injection Pump Assembly	46
Traction & Brake Pedal Assembly	6	Fuel Injector Assembly	47
Seat Frame & Throttle Assembly	7-8	Alternator Assembly	48
Seat Suspension Assembly	9	Starter Assembly	49
Diagnostic - ACE Display Assembly	10	Glow Plug & Glow Relay	50
Electrical Schematic	11	Engine Components Assembly	51
Control Console Assembly	12-13	Air Cleaner Assembly No. 93-7485	52
Hydraulic Schematic Model 03800	14	4-WD Axle Assembly (Model No. 03801)	53-54
Hydraulic Schematic Model 03801	15	Sleeve Assembly (Model No. 03801)	55
Hydraulic Filter & Reservoir Assembly	16	Axle Housing Assembly (Model No. 03801)	56
Fuel Tank & Filter Assembly	17	Differential & Shaft Assembly (Model No. 03801)	57
Fuel Filter Assembly	18	Steering Gear Case Asm. (Model No. 03801)	58
Front Hydraulic Drive & Brake Assembly	19-20	Steering Arm Linkage (Model No. 03801)	59
Planetary Drive Assembly No. 92-7415	21	Hydraulic Cylinder No. 94-8141	60
Brake Asm. No. 92-7414 RH & 92-7417 LH	22	2-WD Rear Axle Assembly (Model No. 03800)	61-62
Hydraulic Motor Assembly No. 92-7385	23	Hydraulic Cylinder No. 94-8142	63
Hydraulic Motor Asm. No. 93-7476 W/Sensor	24	Rear Hydraulic Control Block & Tubes	64-65
4-WD Hydraulic Motor Asm. No. 92-7386	25	Manifold Assembly No. 92-7419	66
Pump Installation Assembly	26	Front Lift Arms Assembly	67-68
Gear Pump Assembly No. 93-2175	27-28	Hydraulic Cylinder No. 93-7555	69
Servo Controlled Piston Pump Asm. No. 95-3450	29-30	Hydraulic Cylinder No. 93-7551	70
Manual Servo Control No. 94-3019	31	Hydraulic Cylinder No. 93-2650	71
Radiator & Shroud Assembly	32-33	Rear Lift Arm Assembly	72
Engine Installation Assembly	34	Hydraulic Cylinder No. 93-7420	73
Crankcase Assembly	35	Hydraulic Cylinder No. 93-7421	74
Crankshaft Assembly	36	Front Hydraulic Control Block & Hoses	75
Cylinder Head Assembly	37-39	Control Block Assembly No. 92-7418	76
Camshaft & Fan Support Assembly	40	Reel Motor & Hoses	77
Timing Cover	41	Reel Motor Assembly No. 92-7387	78
Intake & Exhaust Manifold Assembly	42	Roll Over Protection System (ROPS)	79
Oil Pump Assembly	43	Guage Bar & Backlapping Brush Assemblies	80
		Numerical Parts Index	81-94

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.