



Count on it.

Parts Catalog

21in Heavy-Duty Rear Bagger

Lawn Mower

Model No. 22189—Serial No. 290000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LPG: Liquid Propane Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Housing Assembly	4
Front Wheel and Tire Assembly No. 100-2870	5
Gear Case Assembly No. 110-2100	6
Blade Brake Clutch Assembly	7
Engine and Fuel Tank Assembly	8
Handle Assembly	9
Rear Suspension Assembly	10
Rear Wheel Assembly No. 100-2860	11
Rear Door and Bag Assembly	12
Cylinder and Crankcase Assembly Kawasaki FJ180V-AS30	13
Piston and Crankshaft Assembly Kawasaki FJ180V-AS30	14
Valve and Camshaft Assembly Kawasaki FJ180V-AS30	15
Lubrication Equipment Assembly Kawasaki FJ180V-AS30	16
Cooling Equipment Assembly Kawasaki FJ180V-AS30	17
Electric Equipment Assembly Kawasaki FJ180V-AS30	18
Control Equipment Assembly Kawasaki FJ180V-AS30	19
Carburetor Assembly Kawasaki FJ180V-AS30	20
Air Filter and Muffler Assembly Kawasaki FJ180V-AS30	21
Starter Assembly Kawasaki FJ180V-AS30	22
Label Assembly Kawasaki FJ180V-AS30	23

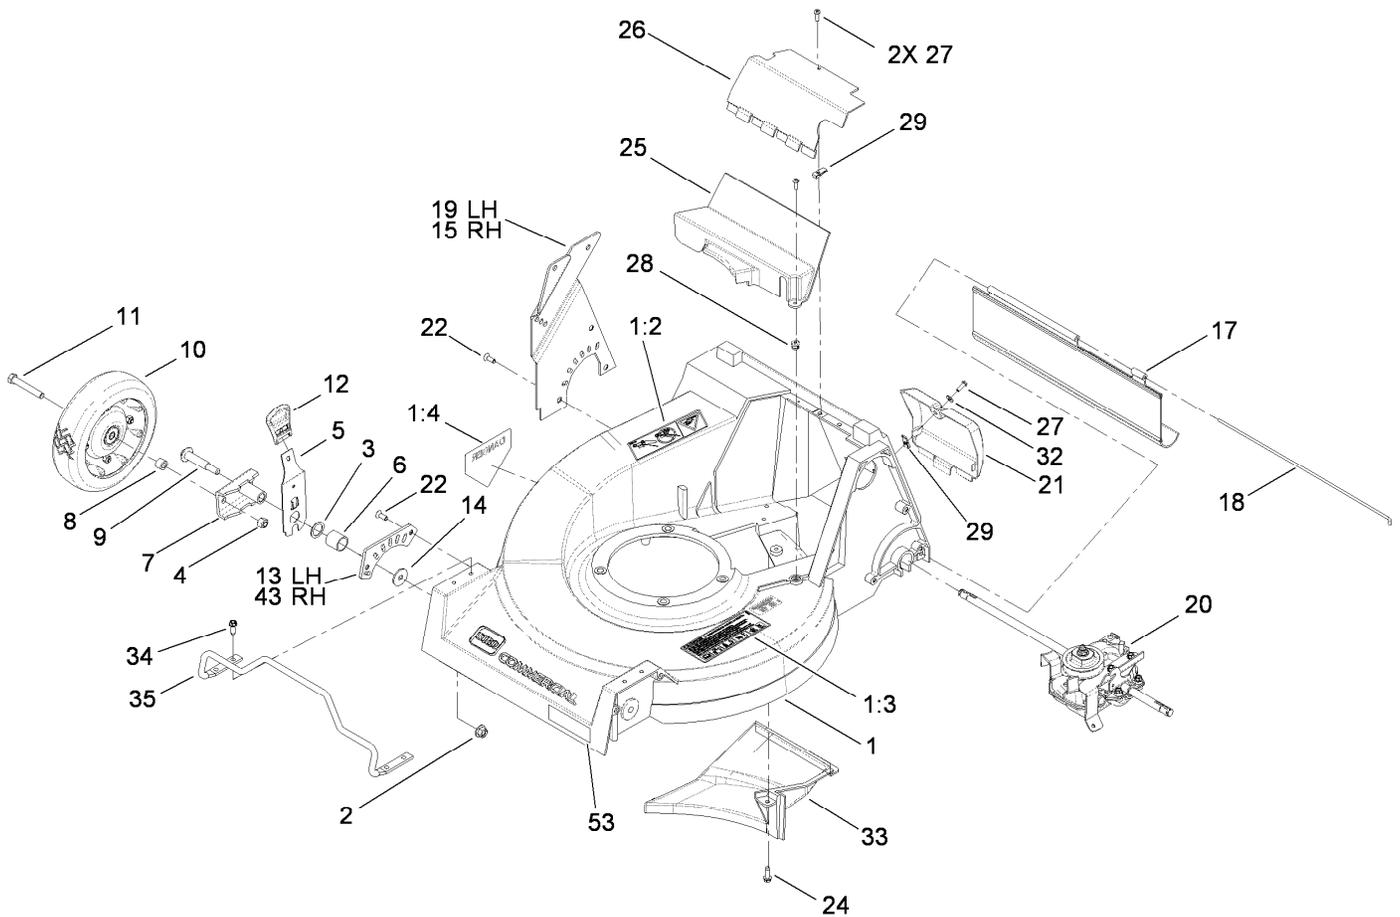

Housing Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	115-0991	1	Deck ASM	17	110-0509	1	Shield-Trailing
1:2	110-4977	1	Decal-Danger	18	33-3202	1	Rod-Shield
1:3	110-4989	1	Decal-Warning	19	115-4497-01	1	Plate-Rear HOC, LH ●
1:4	43-8480	1	Decal-Danger	20	110-2100	1	Gear Case ASM
2	54-9190	2	Nut-Lock	21	107-4288	1	Door-Access, Rear
3	115-0972	2	Washer	22	32144-17	10	Screw-HH
4	32152-2	2	Nut-Lock, Cone	24	32144-85	4	Screw-HWH
5	115-0980	2	Front Spring Arm ASM	25	107-4297	1	Cover-Belt, Lower
6	75-5310	2	Spacer-Bearing	26	107-4298	1	Cover-Belt, Upper
7	61-8300	2	Arm-Pivot, Front	27	32144-32	3	Screw
8	52-2480	2	Spacer-Wheel	28	611380	1	Nut-Clip
9	114-3468	2	Screw-Shoulder	29	3290-171	2	Nut-Type J
10	100-2870	2	Wheel And Tire ASM	32	3256-14	1	Washer-Flat
11	323-12	2	Screw-HH	33	115-0973	1	Baffle-Chute, Floor
12	110-0549	2	Knob-HOC	34	49-2040	4	Screw-HWHTF
13	115-4495	1	Plate-Front HOC, LH ●	35	110-4876	1	Guard-Engine
14	115-0956	2	Washer	43	115-4496	1	Plate-Front HOC, RH
15	115-4498-01	1	Plate-Rear HOC, RH	53	68-7410	1	Decal-Blade


● Not illustrated

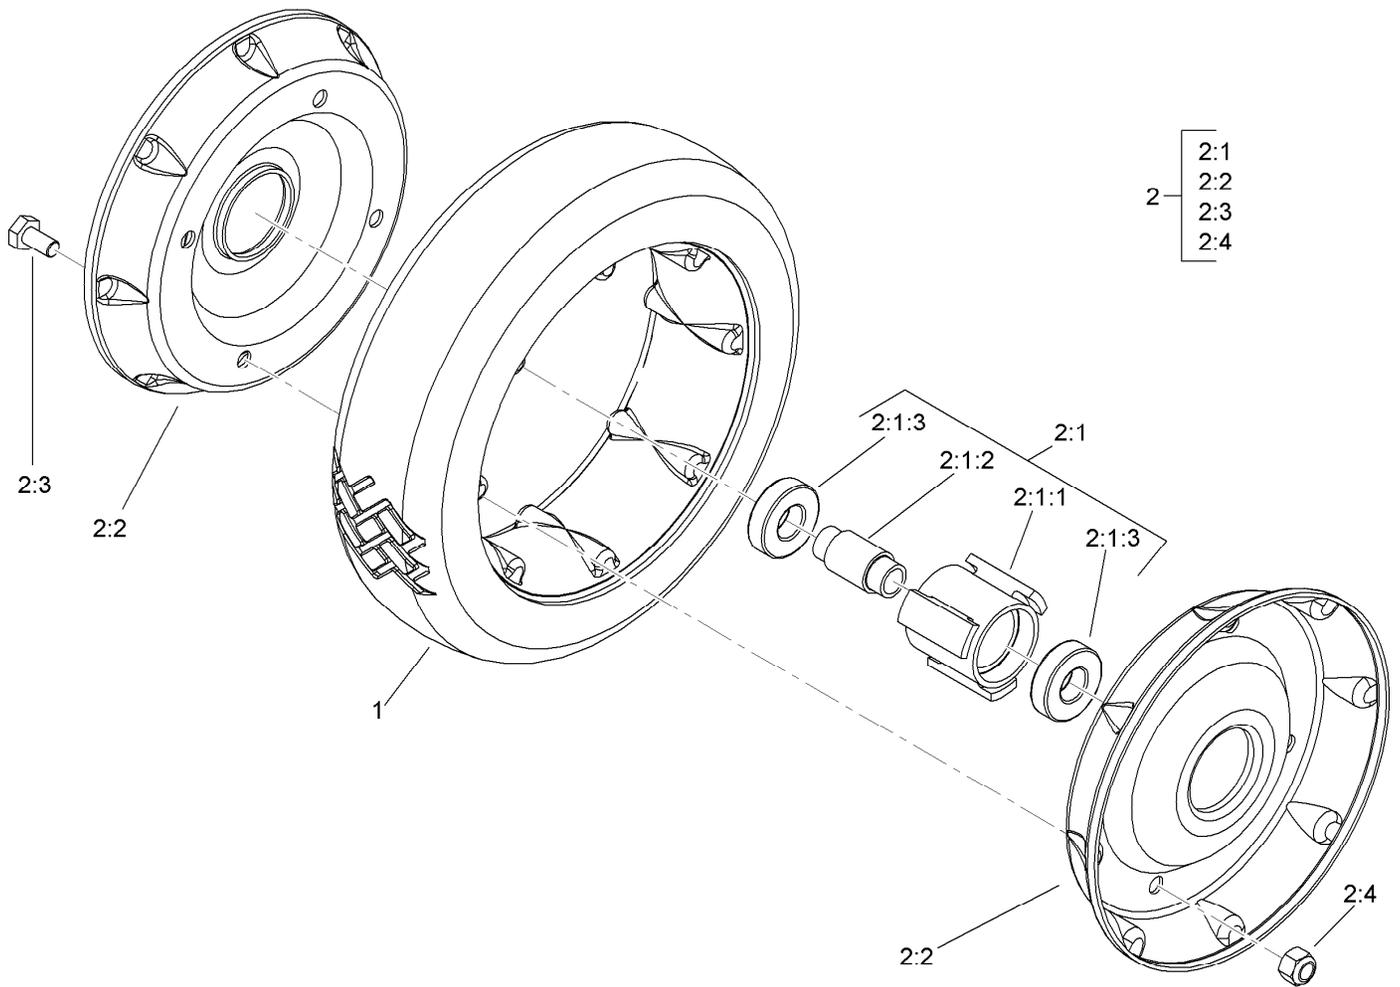

Front Wheel and Tire Assembly No. 100-2870


Ref.	Part Number	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM ●
2:1		1	Hub And Bearing ASM ●
2:1:1	52-2410	1	Hub-Bearing
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	53-7780-06	2	Plate-Wheel, Half
2:3	321-2	4	Screw-HH
2:4	3296-42	4	Nut-Lock, NI

● Not serviced separately

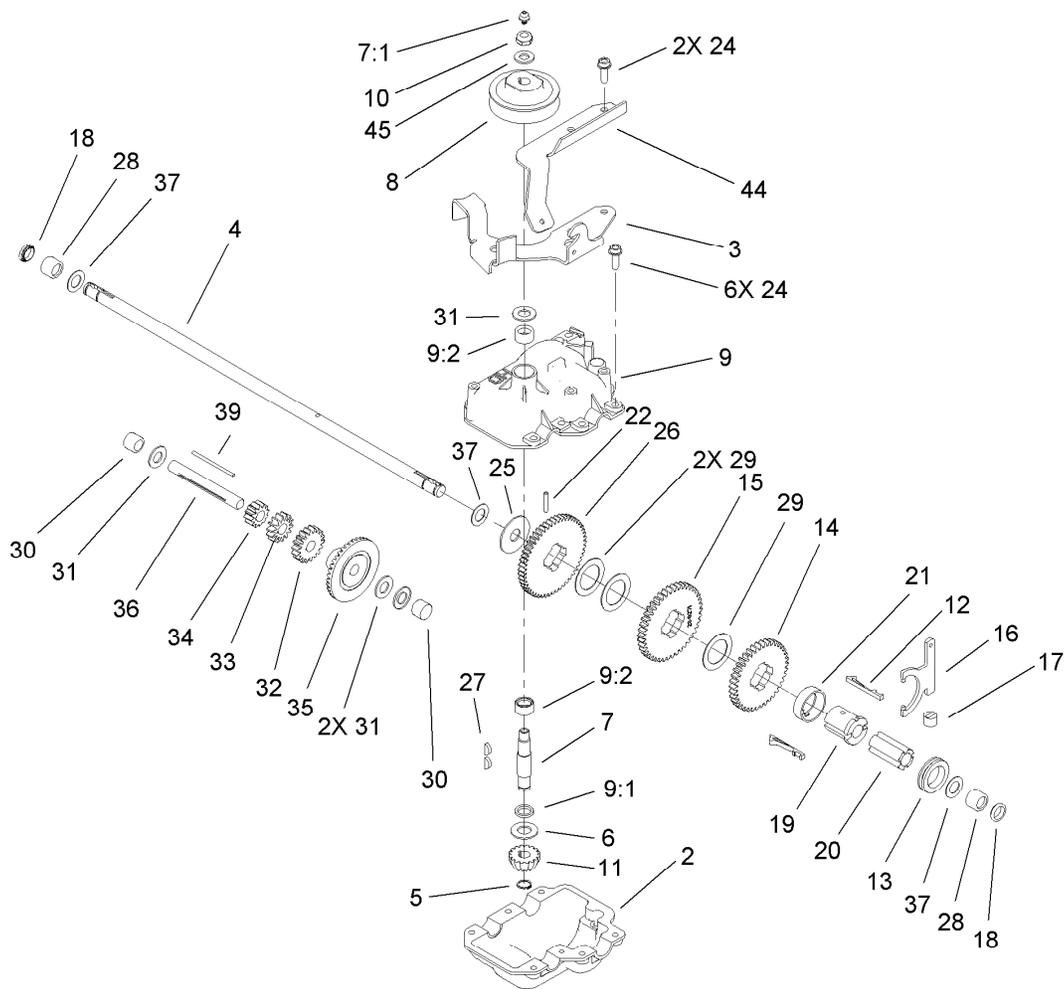

Gear Case Assembly No. 110-2100


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	74-1920	1	Case-Gear, Lower	20	39-6720	1	Sleeve
3	49-8461-03	1	Bracket-Guide, Belt	21	55-8020	1	Retainer-Key
4	74-1890	1	Shaft-Output	22	3285-19	1	Pin-Groove
5	32151-57	1	Ring-Retaining	24	49-2040	8	Screw-HWHTF
6	47-2910	1	Washer-Thrust	25	29-9690	1	Washer
7	13-5149	1	Input Shaft ASM	26	46-3560	1	Gear
7:1	302-63	1	Zerk	27	3257-1	2	Key-Woodruff
8	39-6740	1	Pulley	28	48-2060	2	Bearing-Roller
9	13-9739	1	Upper Gearcase ASM	29	36-4770	3	Washer
9:1	47-7260	1	Seal	30	252-103	2	Bearing-Needle, Closed
9:2	47-7270	2	Bearing-Needle	31	36-4792	4	Washer-Thrust
10	3296-5	1	Nut-Lock	32	39-6650	1	Gear-18T
11	39-6660	1	Pinion-Bevel	33	46-3550	1	Gear-14T
12	29-9330	2	Key-Shift	34	46-3540	1	Gear-12T
13	29-9340	1	Collar-Shift	35	74-1760	1	Gear-Bevel
14	42-4740	1	Gear-38T	36	53-7950	1	Shaft-Intermediate
15	29-9271	1	Gear-42T	37	36-4780	3	Washer-Plain
16	60-8870	1	Yoke-Shift	39	39-7842	1	Key
17	29-9570	1	Bushing-Yoke	44	108-2648-03	1	Arm-Actuating, Gear Case
18	47-6730	2	Seal-Oil	45	3256-45	1	Washer-Flat
19	55-8010	1	Sleeve-Gear				

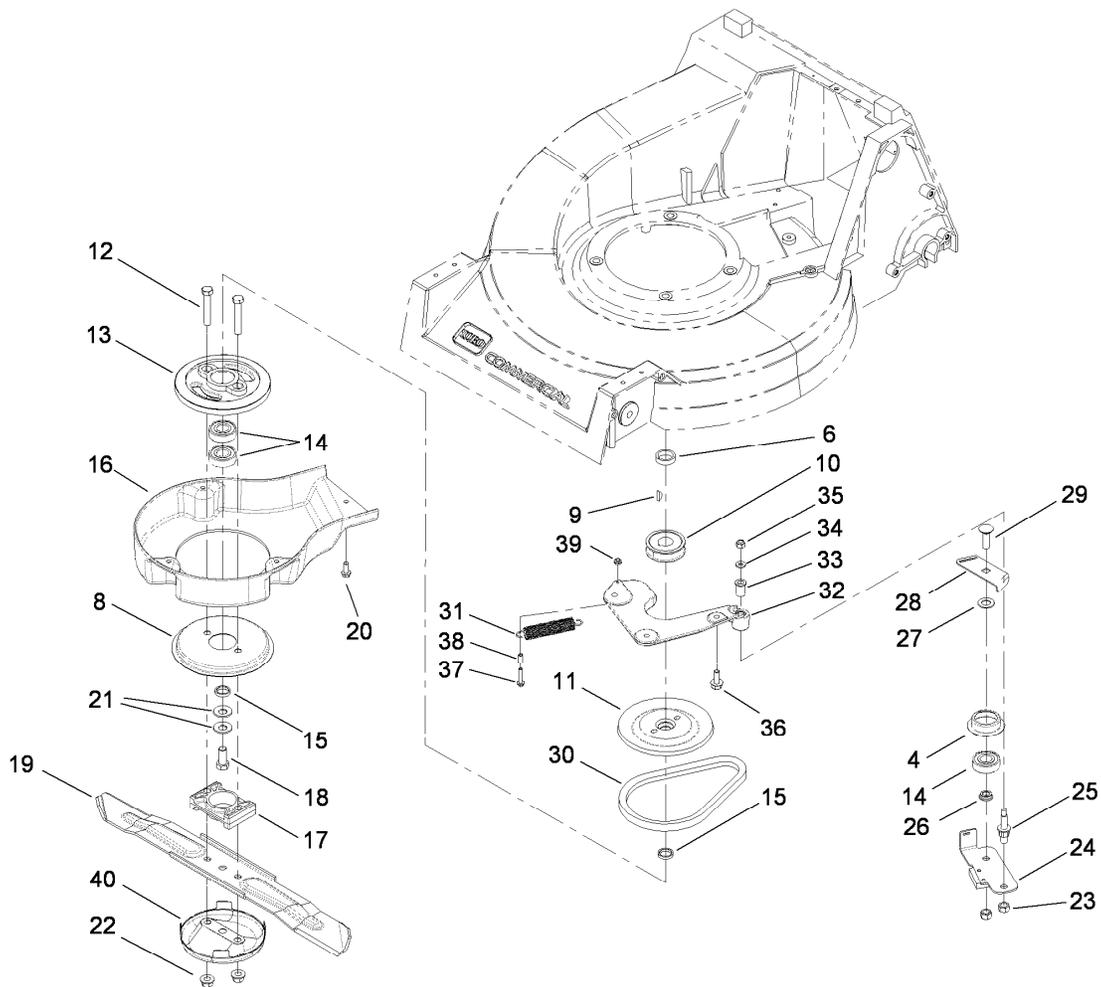

Blade Brake Clutch Assembly


Ref.	Part Number	Qty.	Description
4	108-3790	1	Retainer-Belt
6	110-2142	1	Spacer-Pulley
8	108-3787	1	Disc
9	3257-17	1	Key-Woodruff
10	56-6180	1	Pulley-Driver
11	107-4277-03	1	Pulley-Driver, Upper
12	104-5936	2	Screw-HH
13	107-0754	1	Drum
14	100-1048	3	Bearing-Ball
15	107-4293	2	Spacer-Plate, BBC
16	110-0508	1	Shield-BBC
17	107-4275	1	Spacer-Blade
18	3212-4	1	Screw-HH
19	91-2256-03	1	Blade-21 Inch
20	32144-85	4	Screw-HWH
21	1-603610	2	Washer-Spring
22	54-9190	2	Nut-Lock
23	603773	2	Nut

Ref.	Part Number	Qty.	Description
24	107-7477	1	Brake Arm ASM
25	107-0759	1	Bolt-Shoulder
26	107-0758	1	Spacer-Bearing
27	605256	1	Washer-Plain
28	107-7471	1	Plate-Guide
29	3231-25	1	Screw-CARR
30	110-1790	1	Belt-BBC
31	115-4471	1	Spring-Extension
32	107-4280	1	Plate-Mounting, BBC
33	107-0797	1	Bushing
34	3256-16	1	Washer-Flat
35	3296-42	1	Nut-Lock, NI
36	33104-020	3	Screw-HHF
37	32144-9	1	Screw-TAP
38	107-4292	1	Spacer-BBC
39	3296-27	1	Nut-Lock, NI
40	80-2770	1	Cup-Scalp, Anti

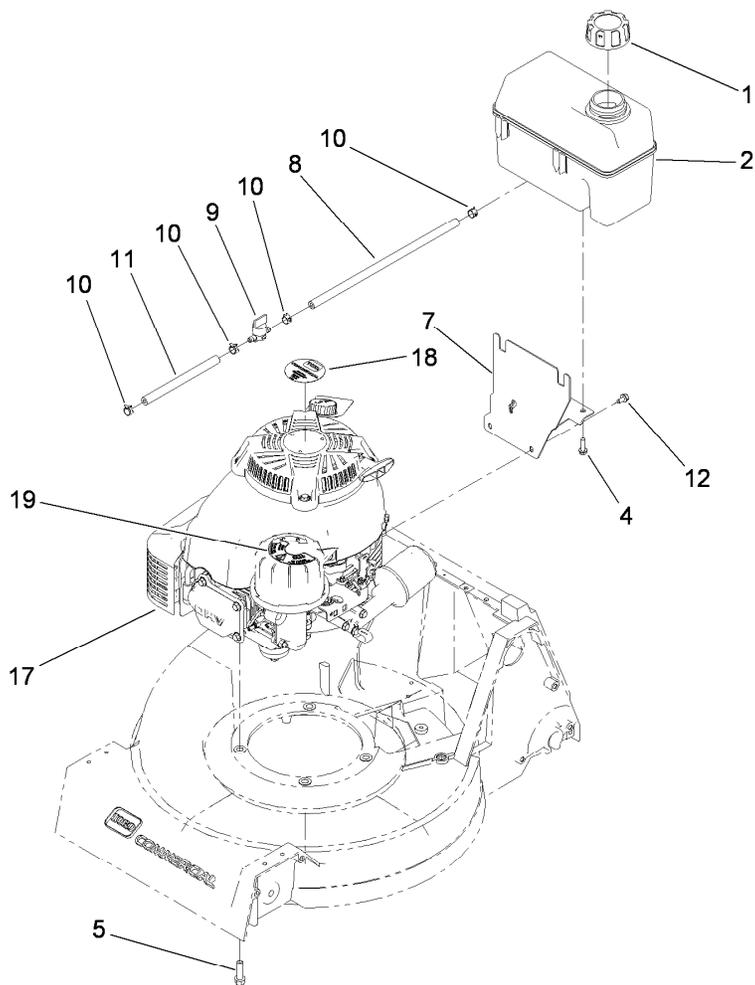


Engine and Fuel Tank Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	93-7198	1	Gas Cap ASM
2	106-0625	1	Tank-Fuel
4	46-8091	2	Screw-HWH
5	95-1727	4	Screw-Taptite
7	115-0954-03	1	Tank Mount ASM
8	114-3766	1	Hose-Fuel
9	1-603770	1	Valve-Fuel
10	2412-98	4	Clamp-Hose
11	107-0588	1	Hose-Fuel
12	104-2628	3	Screw-HWH
17	110-5048	1	Engine-Kawasaki, Fj180V-As30
18	112-9967	1	Decal
19	114-3415	1	Decal-Air Cleaner

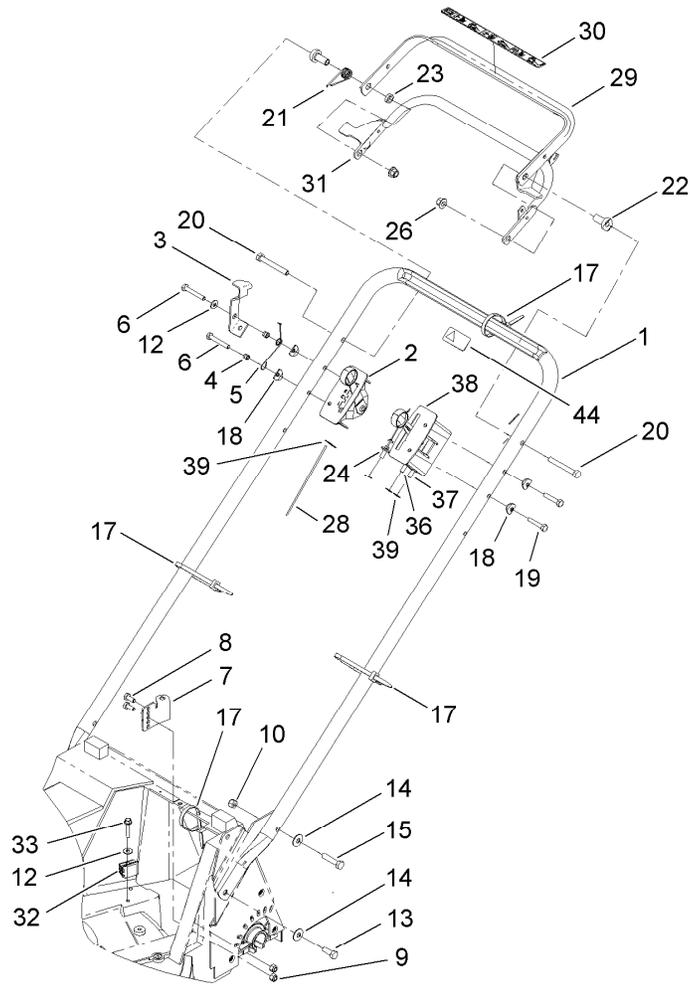

Handle Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	107-4162-03	1	Handle	20	322-12	2	Screw-HH
2	116-0504	1	Control-Shift	21	115-0993	1	Spring-Torsion
3	115-0999-01	1	Latch-Lever, BBC	22	49-1631	2	Spacer-Support
4	110-0542	2	Spacer-Flange	23	59-4310	1	Spacer
5	115-0996	1	Spring-Torsion, Latch	24	107-4296	1	Cable-BBC
6	321-10	2	Screw-HH	26	3296-58	2	Nut-Lock, NI
7	115-4453	1	Anchor-Cable	28	107-4295	1	Cable-Shift
8	321-3	2	Screw-HH	29	115-4454-03	1	Traction Bail ASM
9	3296-42	2	Nut-Lock, NI	30	110-2114	1	Decal-Control
10	3296-29	4	Nut-Lock, NI	31	115-4452-03	1	BBC Bail ASM
12	3256-1	2	Washer-Flat	32	92-7729	1	Anchor-Cable, Upper
13	322-4	2	Screw-HH	33	32144-110	1	Screw-HWH
14	3290-456	4	Washer-Belleville	36	107-4294	1	Cable-Traction
15	322-7	2	Screw-HH	37	110-4923	1	Throttle Cable ASM
17	3290-378	5	Tie-Cable	38	117-3544	1	Control Head
18	115-0995	4	Washer	39	32151-86	4	E-Ring
19	321-13	2	Screw-HH	44	98-4387	1	Decal-Protection, Ear

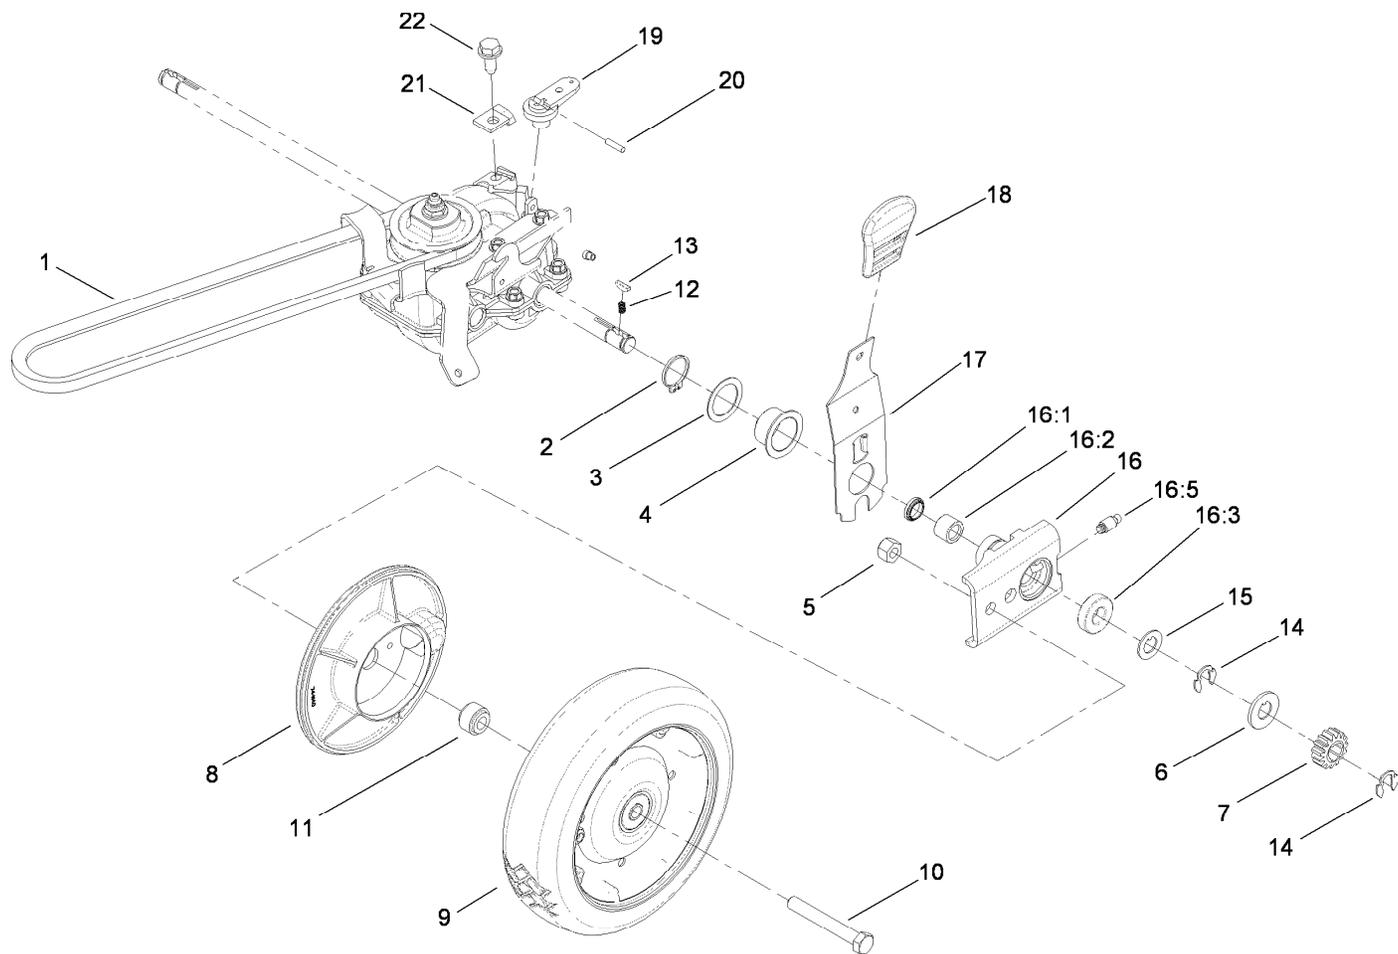

Rear Suspension Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	612652	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	115-0966	2	Bushing-Flange
5	32152-2	2	Nut-Lock, Cone
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	100-2860	2	Wheel And Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk
17	115-0979	2	Rear Spring Arm ASM
18	110-0549	2	Knob-HOC
19	29-9560	1	Lever-Shift
20	32121-99	1	Pin-Coil
21	62-3720	1	Clamp-Cable
22	32144-70	1	Screw-HWHTF

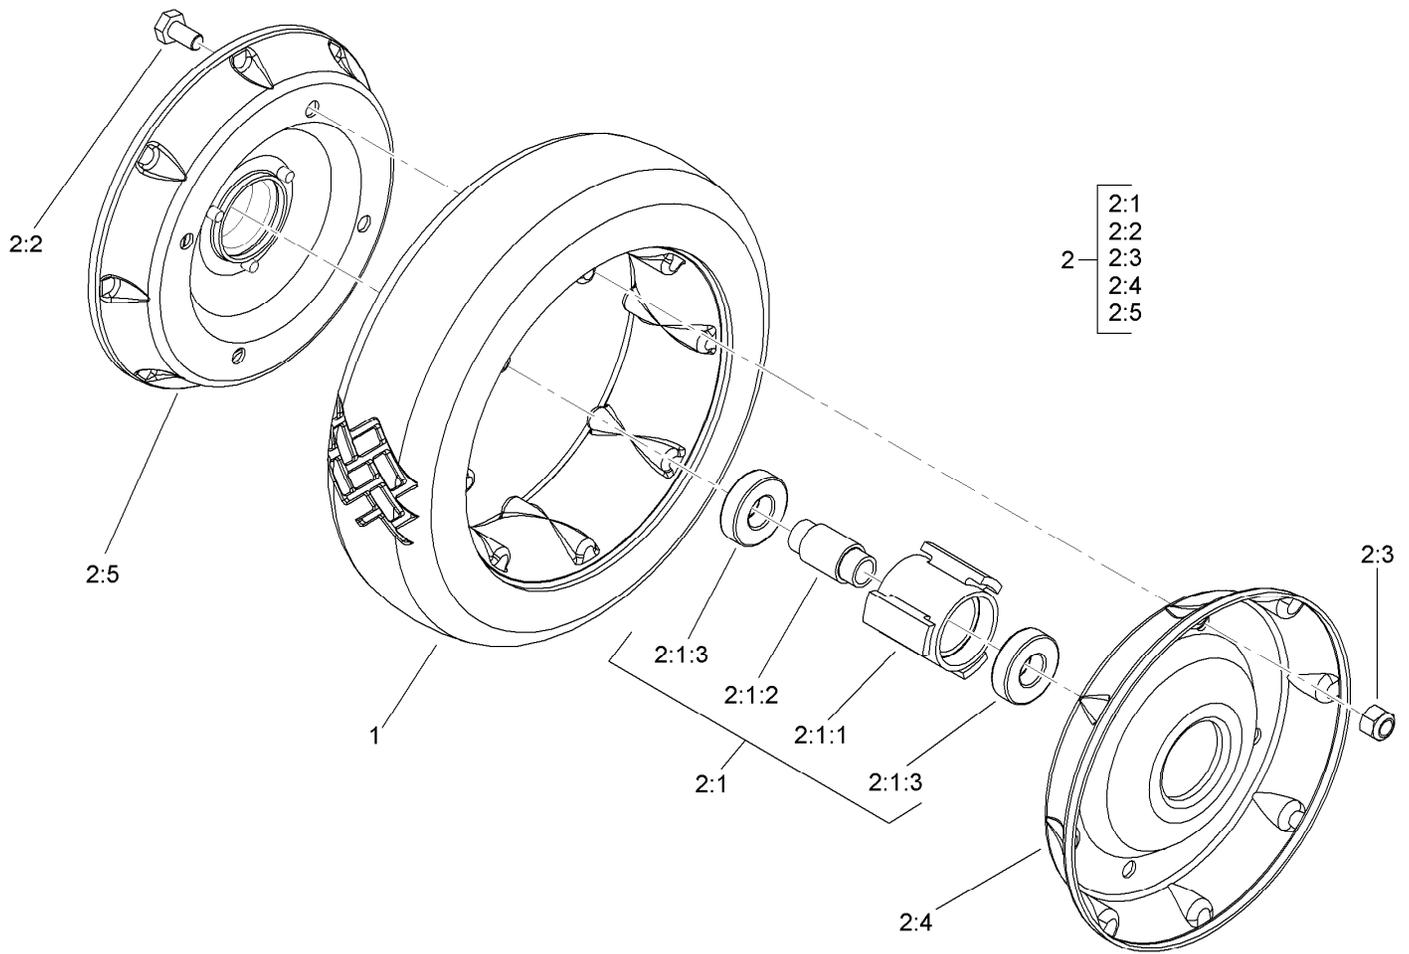

Rear Wheel Assembly No. 100-2860


Ref.	Part Number	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM ●
2:1		1	Hub And Bearing ASM ●
2:1:1	52-2410	1	Hub-Bearing
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	321-2	4	Screw-HH
2:3	3296-42	4	Nut-Lock, NI
2:4	53-7780-06	1	Plate-Wheel, Half
2:5	92-4957-06	1	Wheel Half And Gear ASM

● Not serviced separately

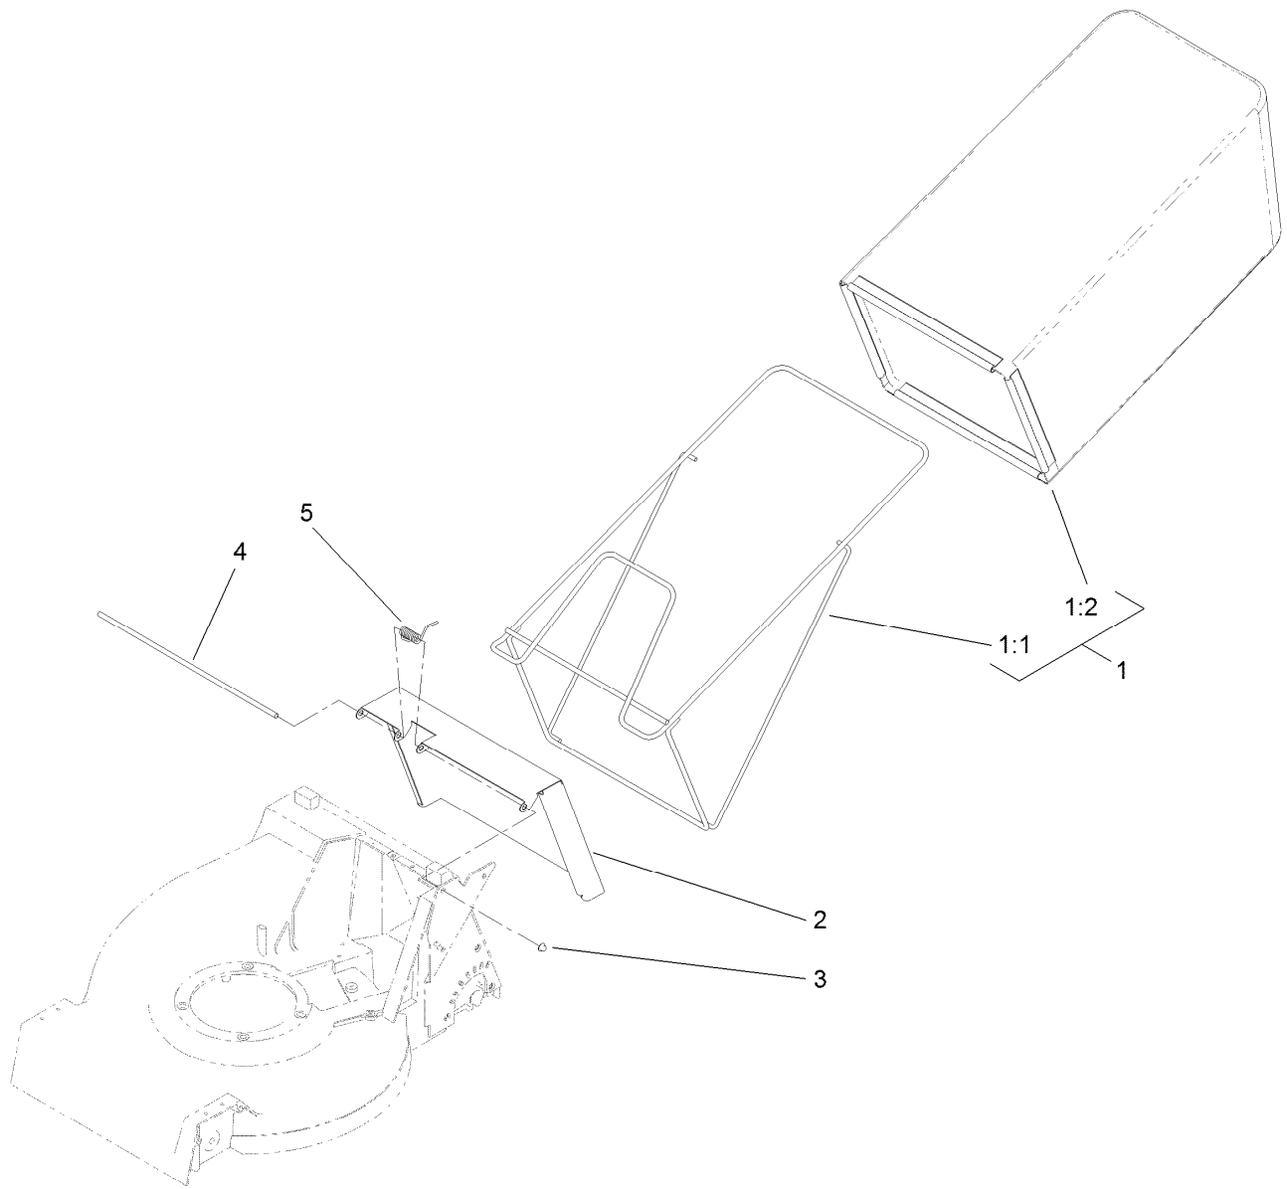

Rear Door and Bag Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-2140	1	Grass Bag ASM
1:1	110-0510-03	1	Frame ASM
1:2	110-0530	1	Bag-Grass
2	114-3445-03	1	Door-Discharge, Rear
3	32112-1	2	Pushnut-Cap, Washer
4	107-4286	1	Rod-Door
5	110-5005	1	Spring-Torsion, Door

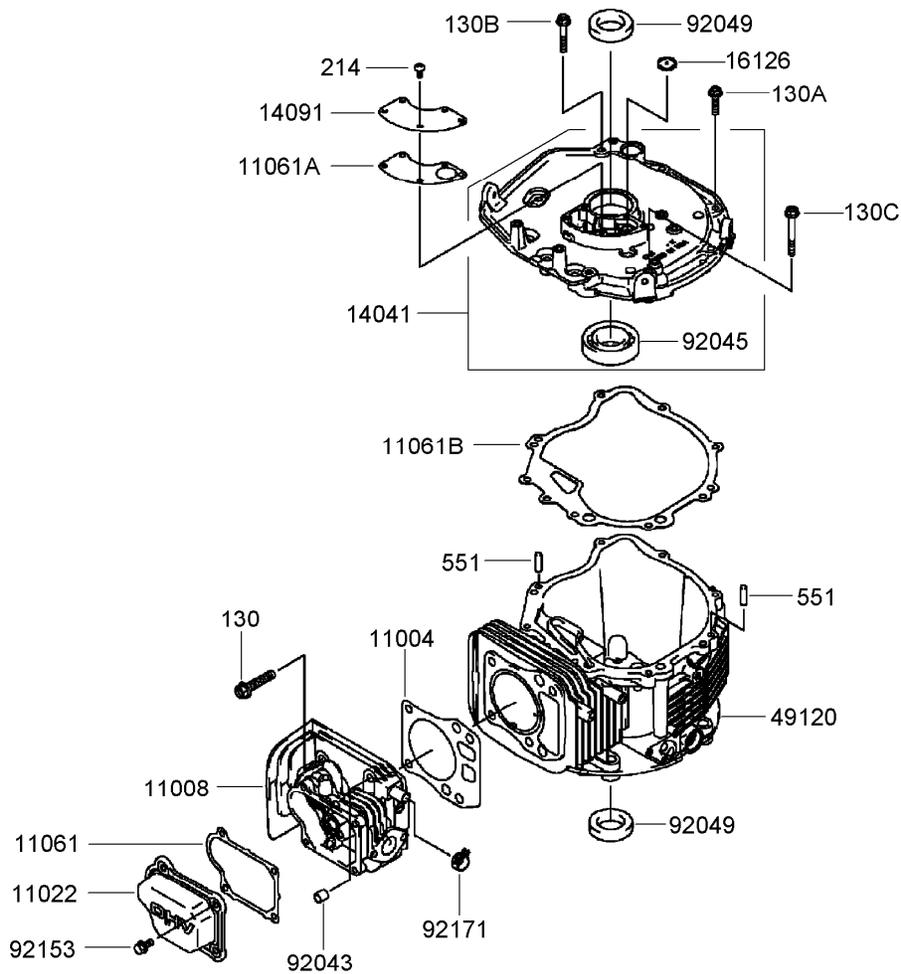

Cylinder and Crankcase Assembly Kawasaki FJ180V-AS30

Ref.	Part Number	Qty.	Description
11004	11004-7020	1	Gasket-Head ●
11008	11008-7025	1	Head-Cylinder ●
11022	11022-7005	1	Case-Rocker ●
11061	11061-7023	1	Gasket-Case, Rocker ●
11061A	11061-7031	1	Gasket-Breather ●
11061B	11061-7060	1	Gasket-Cover, Crankcase ●
14041	14041-7010	1	Cover ●
14091	14091-7010	1	Cover-Breather ●
16126	16126-7014	1	Valve-Breather ●
49120	49120-7082	1	Crankcase ●
92043	92043-7001	2	Pin ●
92045	92045-1207	1	Bearing-Ball (62/28) ●
92049	92049-7008	2	Seal-Oil (28-44-9 T C) ●
92153	92153-7043	4	Bolt (6X12) ●
92171	92171-7024	1	Clamp ●
130	130CA0840	4	Bolt-Flanged (8X40) ●
130A	130G0625	7	Bolt-Flanged (6X25) ●
130B	130G0635	1	Bolt-Flanged (6X35) ●
130C	130G0650	1	Bolt-Flanged,6X50 ●
214	214B0510	5	Screw-Pan (5X10) ●
551	551A0612	2	Pin-Dowel (6X12) ●


● Obtain parts from www.kawpowerepc.com

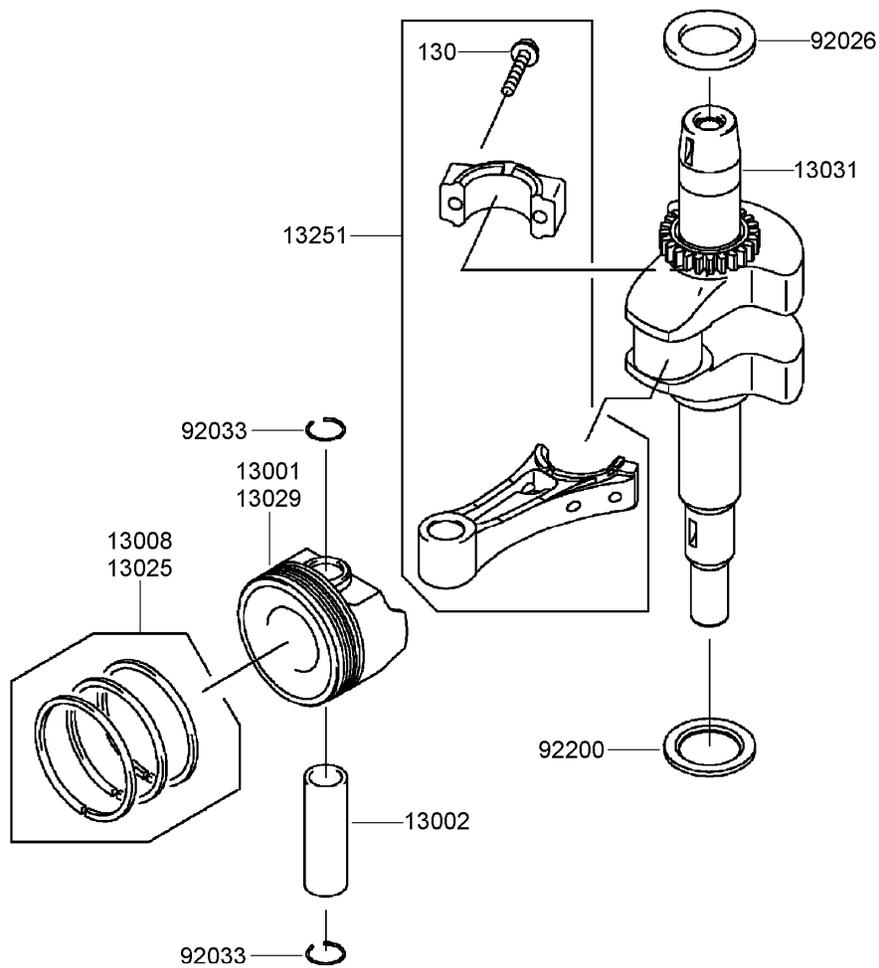

Piston and Crankshaft Assembly Kawasaki FJ180V-AS30

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13001	13001-7022	1	Piston-Engine ●
13002	13002-7001	1	Pin-Piston ●
13008	13008-7002	1	Piston Ring Set ●
13025	13025-7006	1	Piston Ring Set (L 0.50) ●
13029	13029-7005	1	Piston-Engine (L 0.50) ●
13031	13031-7077	1	Crankshaft ●
13251	13251-7011	1	Connecting Rod ASM ●
92026	92026-7020	1	Spacer ●
92033	92033-7002	2	Ring-Snap ●
92200	92200-7042	1	Washer (28X41.5X2.5) ●
130	130G0630	2	Bolt-Flanged (6X30) ●


● Obtain parts from www.kawpowerepc.com

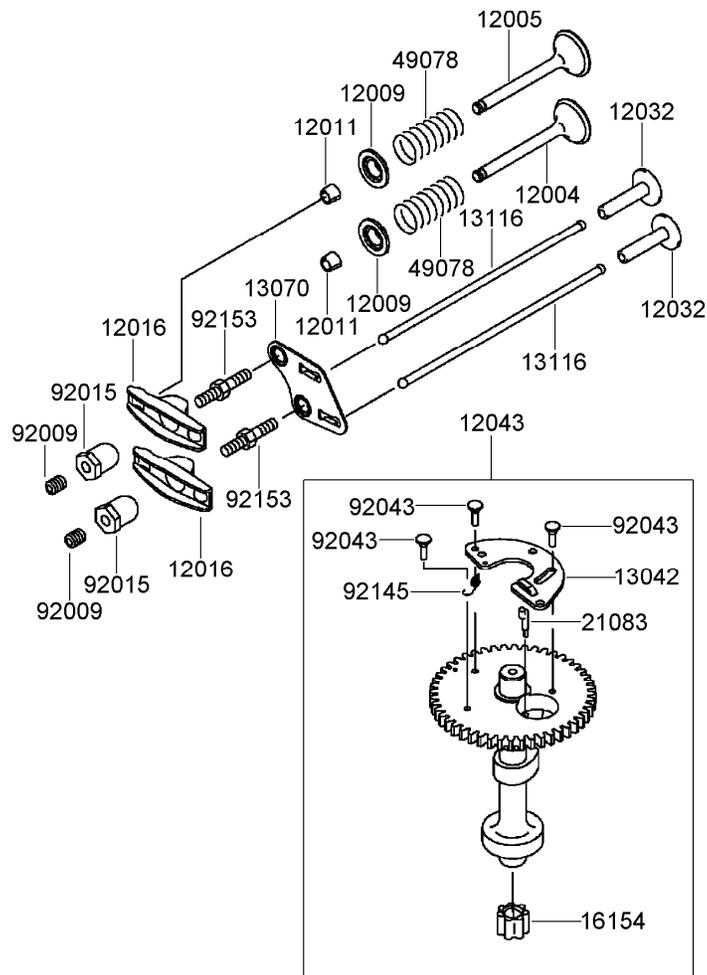

Valve and Camshaft Assembly Kawasaki FJ180V-AS30

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12004	12004-7005	1	Valve-Intake ●
12005	12005-7006	1	Valve-Exhaust ●
12009	12009-7001	2	Retainer-Spring, Valve ●
12011	12011-2056	4	Collet ●
12016	12016-7008	2	Arm-Rocker ●
12032	12032-7001	2	Tappet ●
12043	12043-7005	1	Camshaft Valve ASM ●
13042	13042-7006	1	Weight ●
13070	13070-7009	1	Guide ●
13116	13116-7003	2	Rod-Push ●
16154	16154-7004	1	Rotor-Pump ●
21083	21083-7009	1	Arm ●
49078	49078-7001	2	Spring-Valve, Engine ●
92009	92009-2341	2	Screw ●
92015	92015-2253	2	Nut ●
92043	92043-7006	3	Pin ●
92145	92145-7016	1	Spring ●
92153	92153-7019	2	Bolt ●


● Obtain parts from www.kawpowerepc.com

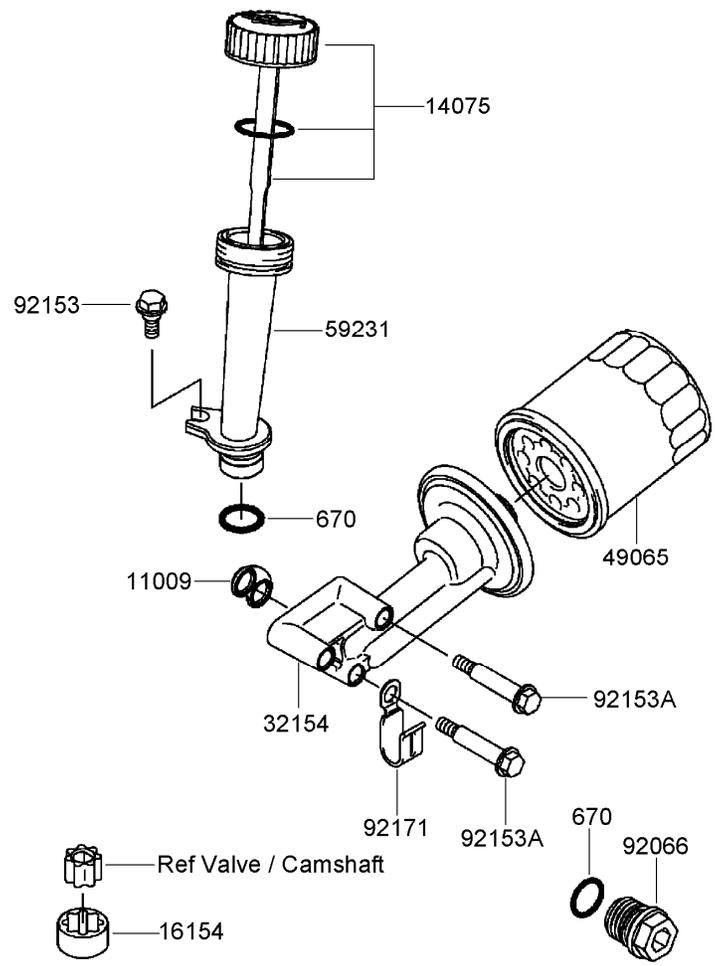

Lubrication Equipment Assembly Kawasaki FJ180V-AS30

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11009	11009-2860	1	Gasket ●
14075	14075-7007	1	Cap ASM ●
16154	16154-7002	1	Rotor-Pump ●
32154	32154-7018	1	Pipe ●
49065	49065-2078	1	Filter-Oil ●
59231	59231-7004	1	Filler ●
92066	92066-7003	1	Plug ●
92153	92153-7007	1	Bolt ●
92153A	92153-7028	3	Bolt ●
92171	92171-7008	1	Clamp ●
670	670D2016	2	O-Ring (16Mm) ●


● Obtain parts from www.kawpowerepc.com

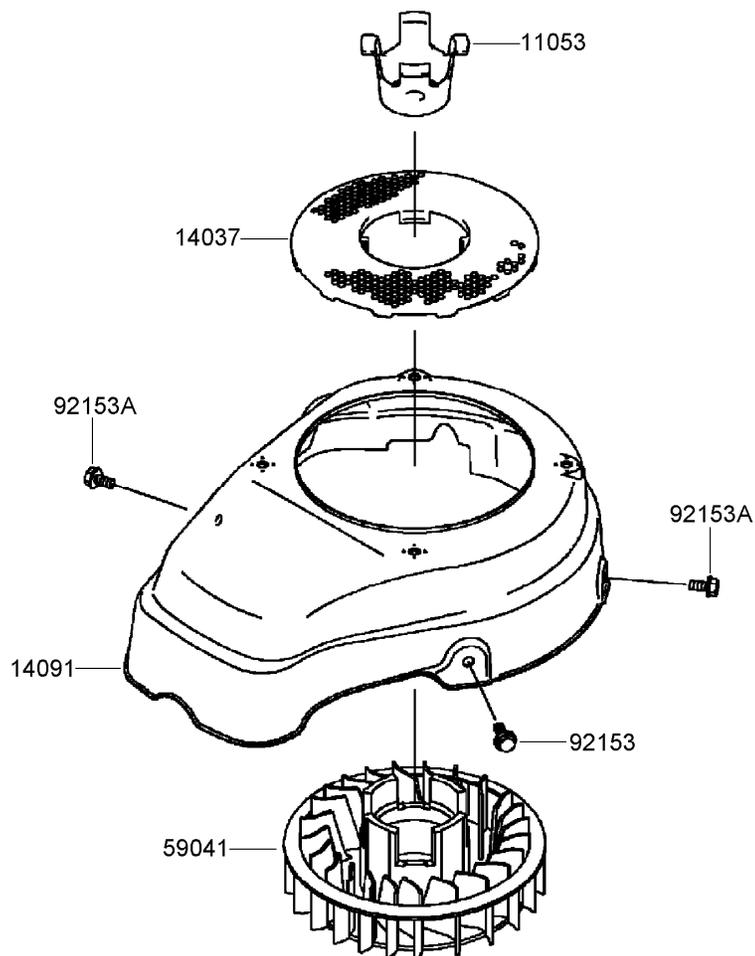

Cooling Equipment Assembly Kawasaki FJ180V-AS30

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11053	11053-7009	1	Bracket-Fan ●
14037	14037-7017	1	Screen ●
14091	14091-7053	1	Cover ●
59041	59041-7009	1	Fan ●
92153	92153-7007	1	Bolt ●
92153A	92153-7043	2	Bolt (6X12) ●


● Obtain parts from www.kawpowerepc.com

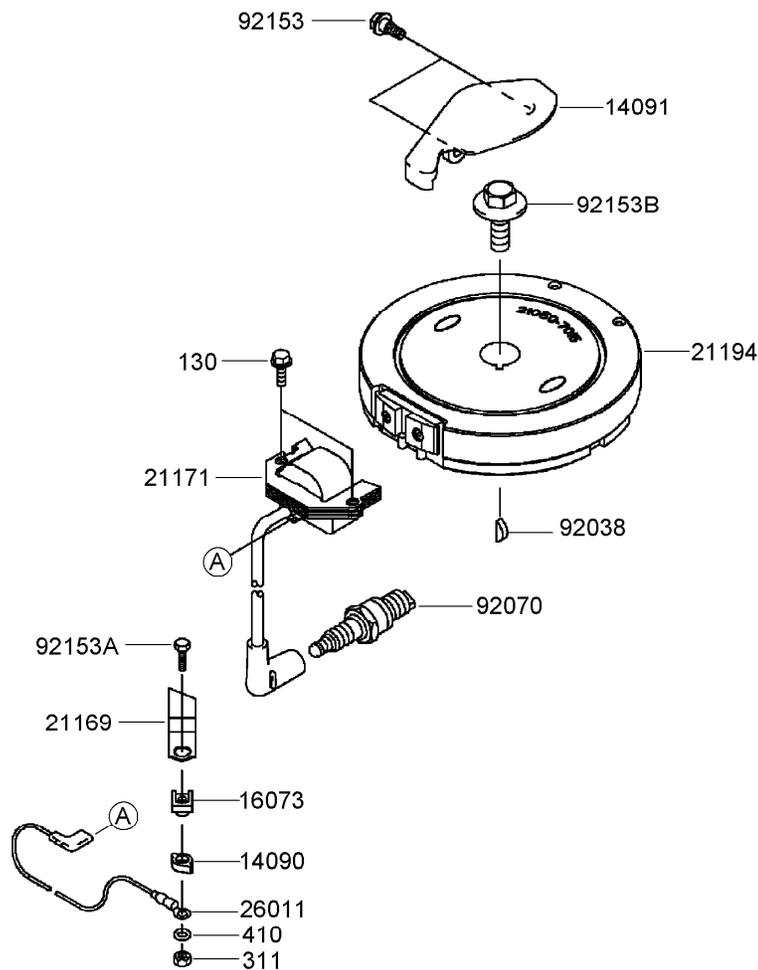

Electric Equipment Assembly Kawasaki FJ180V-AS30

Ref.	Part Number	Qty.	Description
14090	14090-2108	1	Cover ●
14091	14091-7036	1	Cover ●
16073	16073-2192	1	Insulator ●
21169	21169-2071	1	Terminal ●
21171	21171-7030	1	Ignition Coil ASM ●
21194	21194-7024	1	Flywheel ●
26011	26011-7013	1	Wire-Lead ●
92038	92038-2077	1	Key ●
92070	92070-2088	1	Spark Plug, B P R 5E S (N G K) Solid ●
92153	92153-7007	2	Bolt ●
92153A	92153-7012	1	Bolt (4X16) ●
92153B	92153-7030	1	Bolt (12X30) ●
130	130B0620	2	Bolt-Flanged (6X20) ●
311	311B0400	1	Nut-Hex (4Mm) ●
410	410B0400	1	Washer-Plain, S (4Mm) ●


● Obtain parts from www.kawpowerepc.com

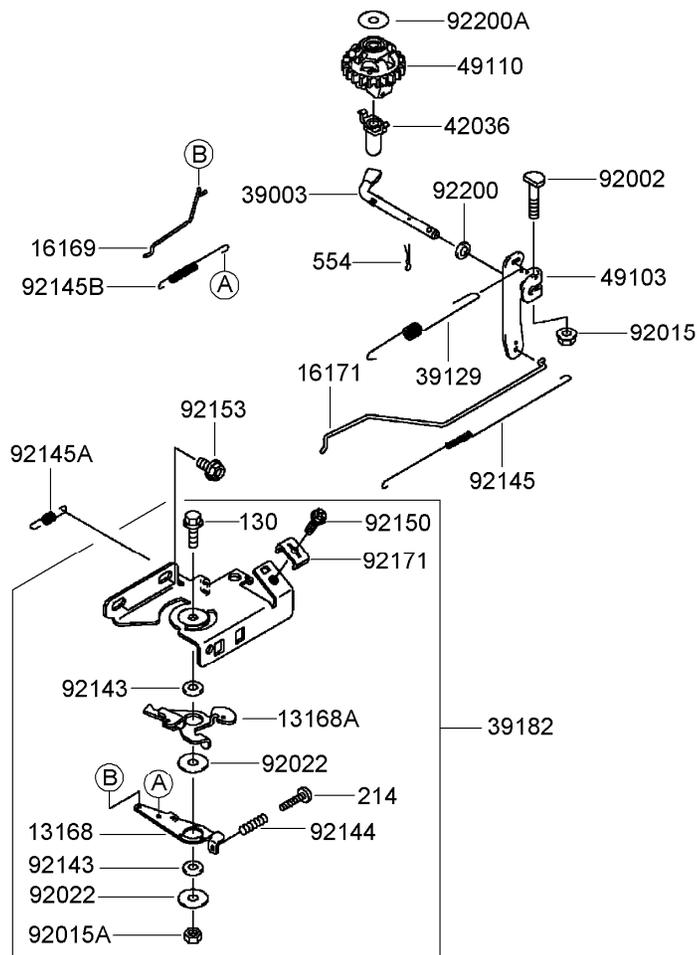

Control Equipment Assembly Kawasaki FJ180V-AS30

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13168	13168-7028	1	Lever ●	92143	92143-2135	2	Collar (6X13X2.3) ●
13168A	13168-7032	1	Lever ●	92144	92144-2266	1	Spring ●
16169	16169-7015	1	Link-Choke ●	92145	92145-7025	1	Spring-Throttle ●
16171	16171-7015	1	Link-Throttle ●	92145A	92145-7032	1	Spring ●
39003	39003-7002	1	Arm-Pivot ●	92145B	92145-7043	1	Spring ●
39129	39129-7014	1	Spring-Governor ●	92150	92150-2182	1	Bolt (5X18) ●
39182	39182-7007	1	Panel-Assy-Control ●	92153	92153-7043	2	Bolt (6X12) ●
42036	42036-2051	1	Sleeve ●	92171	92171-7016	1	Clamp ●
49103	49103-7005	1	Arm-Governor ●	92200	92200-2029	1	Washer (6.5X11.5X2.0) ●
49110	49110-7002	1	Governor ASM ●	92200A	92200-2036	1	Washer (6.2X20X0.5) ●
92002	92002-2269	1	Bolt (6X28) ●	130	130B0618	1	Bolt-Flanged ●
92015	92015-1193	1	Nut ●	214	214B0420	1	Screw-Pan +- (4X20) ●
92015A	92015-2051	1	Nut ●	554	554A0600	1	Pin-Snap (1.2 X 21.2) ●
92022	92022-2372	2	Washer (6X19X1.2) ●				


● Obtain parts from www.kawpowerepc.com

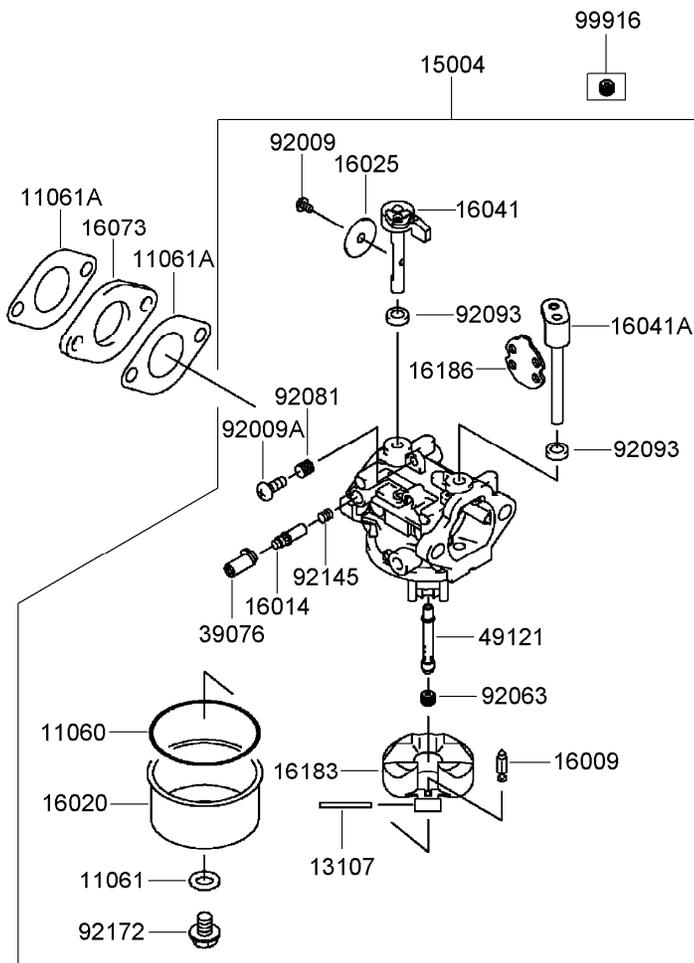

Carburetor Assembly Kawasaki FJ180V-AS30

Ref.	Part Number	Qty.	Description
11060	11060-2190	1	Gasket ●
11061	11061-7010	1	Gasket-Screw ●
11061A	11061-7015	2	Gasket-Insulator ●
13107	13107-7024	1	Shaft ●
15004	15004-7010	1	Carburetor ASM ●
16009	16009-2136	1	Needle-Jet ●
16014	16014-7008	1	Screw-Air, Pilot ●
16020	16020-7004	1	Chamber-Float ●
16025	16025-7007	1	Valve-Throttle ●
16041	16041-7019	1	Shaft-Carburetor ●
16041A	16041-7020	1	Shaft-Carburetor ●
16073	16073-7006	1	Insulator ●
16183	16183-2002	1	Float ASM ●
16186	16186-7003	1	Choke Valve ASM ●
39076	39076-7001	1	Limiter ●
49121	49121-7014	1	Nozzle-Main ●
92009	92009-2083	1	Screw ●
92009A	92009-2349	1	Screw ●
92063	92063-7067	1	Jet-Main (No 70) ●
92081	92081-2234	1	Spring ●
92093	92093-2100	2	Seal ●
92145	92145-7015	1	Spring ●
92172	92172-7002	1	Screw ●
99916	99916-7007	1	Main Jet K H I Parts Kit ●


● Obtain parts from www.kawpowerepc.com

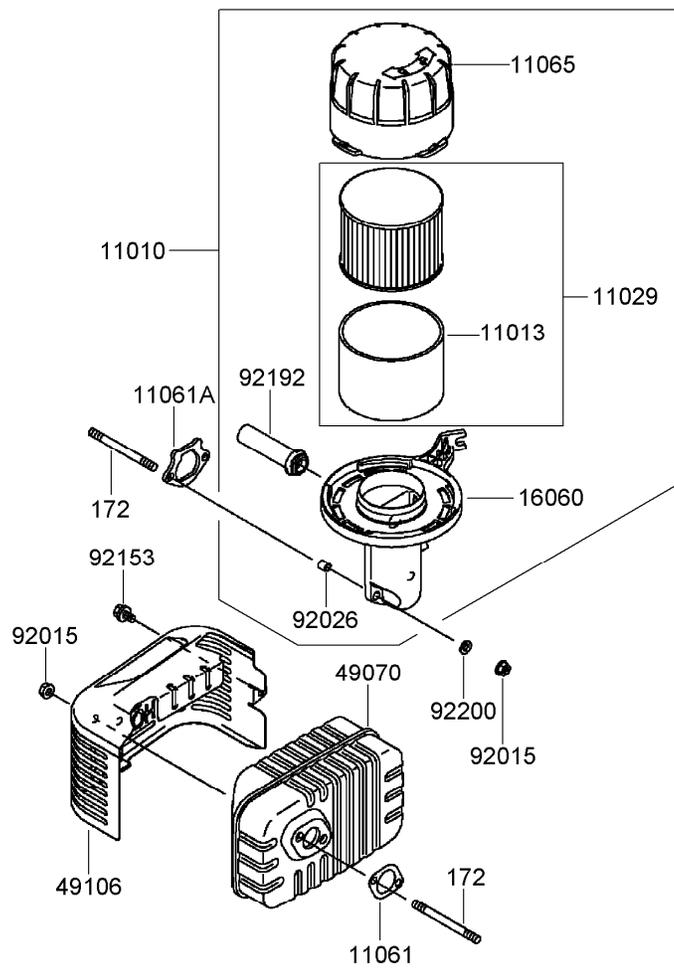

Air Filter and Muffler Assembly Kawasaki FJ180V-AS30

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11010	11010-7021	1	Air Filter ASM ●
11013	11013-7037	1	Element-Filter, Air ●
11029	11029-7023	1	Air Filter Element ASM ●
11061	11061-7029	1	Gasket-Muffler ●
11061A	11061-7075	1	Gasket-Pipe, Intake ●
11065	11065-7018	1	Cap ●
16060	16060-7026	1	Pipe-Intake ●
49070	49070-7022	1	Muffler ●
49106	49106-7021	1	Cover-Muffler ●
92015	92015-1193	4	Nut ●
92026	92026-7021	2	Spacer ●
92153	92153-7023	1	Bolt (6X10) ●
92192	92192-7083	1	Tube ●
92200	92200-7022	2	Washer (6.4X12X1.7) ●
172	172G0680	4	Bolt-Stud (6X80) ●

● Obtain parts from www.kawpowerepc.com

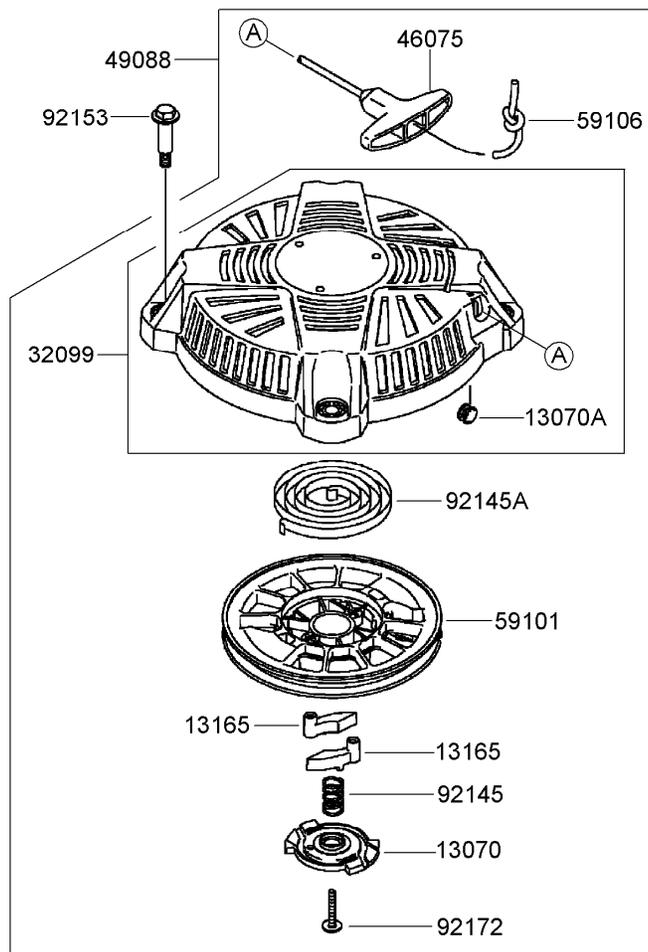

Starter Assembly Kawasaki FJ180V-AS30


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13070	13070-7014	1	Guide ●
13070A	13070-7015	1	Guide ●
13165	13165-7002	2	Pawl-Starter, Recoil ●
32099	32099-7004	1	Case-Starter, Recoil ●
46075	46075-7002	1	Grip ●
49088	49088-7024	1	Starter-Recoil ●
59101	59101-7002	1	Reel-Starter, Recoil ●
59106	59106-7006	1	Rope (1500Mm) ●
92145	92145-7052	1	Spring ●
92145A	92145-7053	1	Spring ●
92153	92153-7021	4	Bolt (M6) ●
92172	92172-7030	1	Screw ●

● Obtain parts from www.kawpowerepc.com

56070



56033

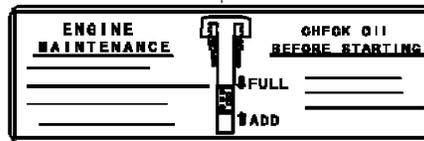

Label Assembly Kawasaki FJ180V-AS30

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
56033	56033-7003	1	Label-Manual ●
56070	56070-7001	1	Label-Warning ●

● Obtain parts from www.kawpowerepc.com



Count on it.