



Count on it.

Parts Catalog

53cm Heavy-Duty

Rear Bagger Lawn Mower

Model No. 22189TE—Serial No. 311000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LPG: Liquid Propane Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Housing and Front Wheel Assembly 4

Front Wheel and Tire Assembly No. 100-2870 5

Gear Case Assembly No. 110-2100 6

Blade Brake Clutch Assembly 7

Engine and Fuel Tank Assembly 8


Handle Assembly 9

Height-of-Cut and Rear Wheel Assembly 10

Rear Wheel Assembly No. 100-2860 11

Rear Door and Bag Assembly 12


Attachments and Accessories 13

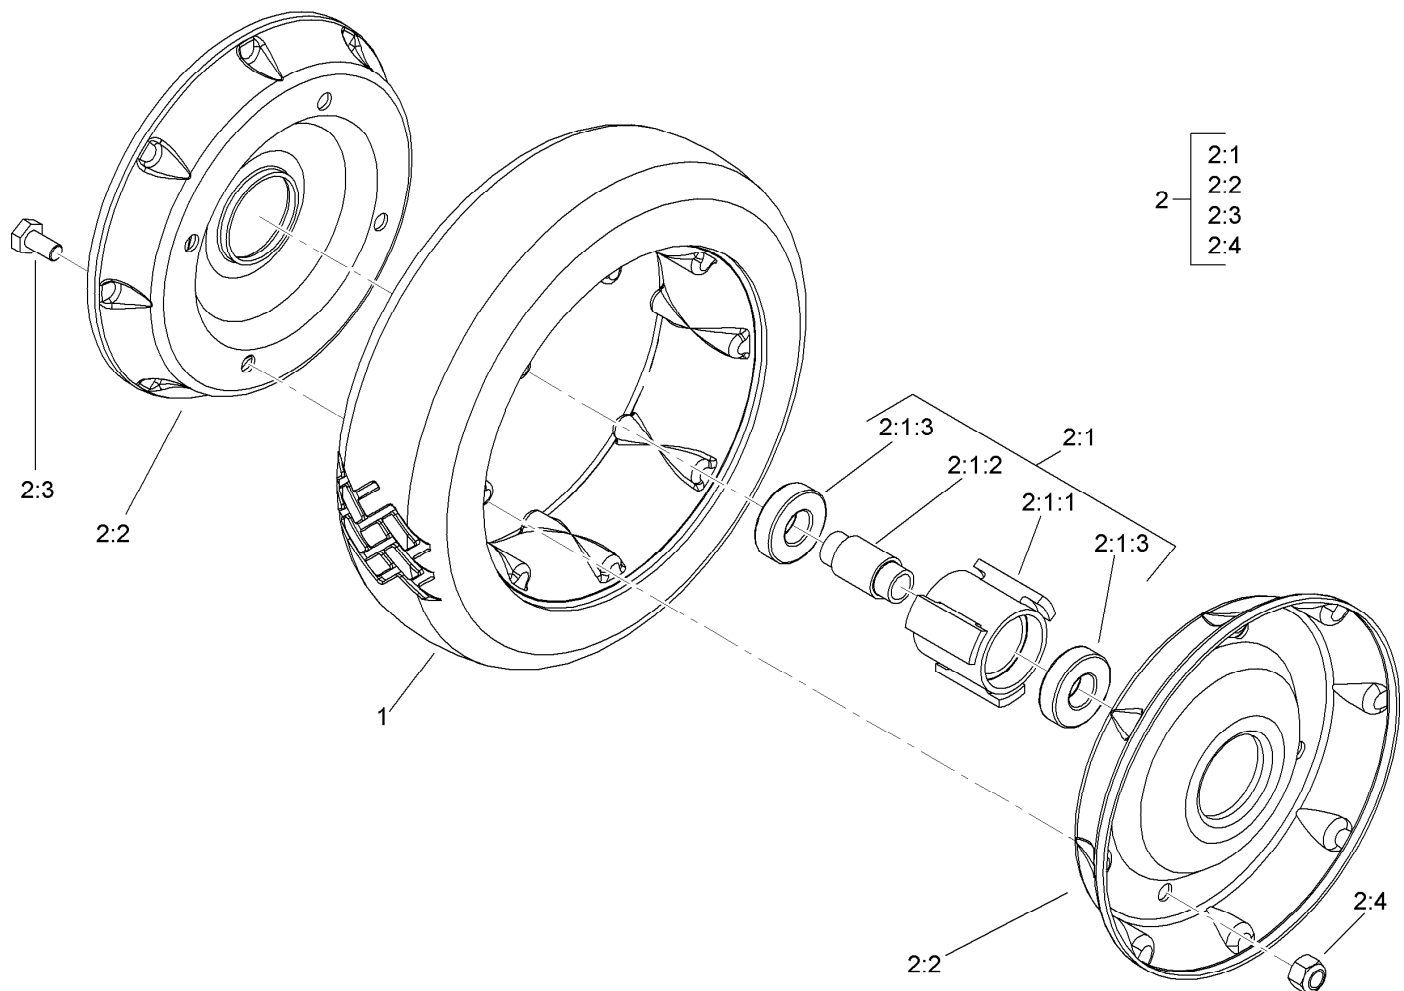

Front Wheel and Tire Assembly No. 100-2870


Ref.	Part Number	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM ●
2:1		1	Hub And Bearing ASM ●
2:1:1	52-2410	1	Hub-Bearing
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	53-7780-06	2	Plate-Wheel, Half
2:3	321-2	4	Screw-HH
2:4	3296-42	4	Nut-Lock, NI

● Not serviced separately

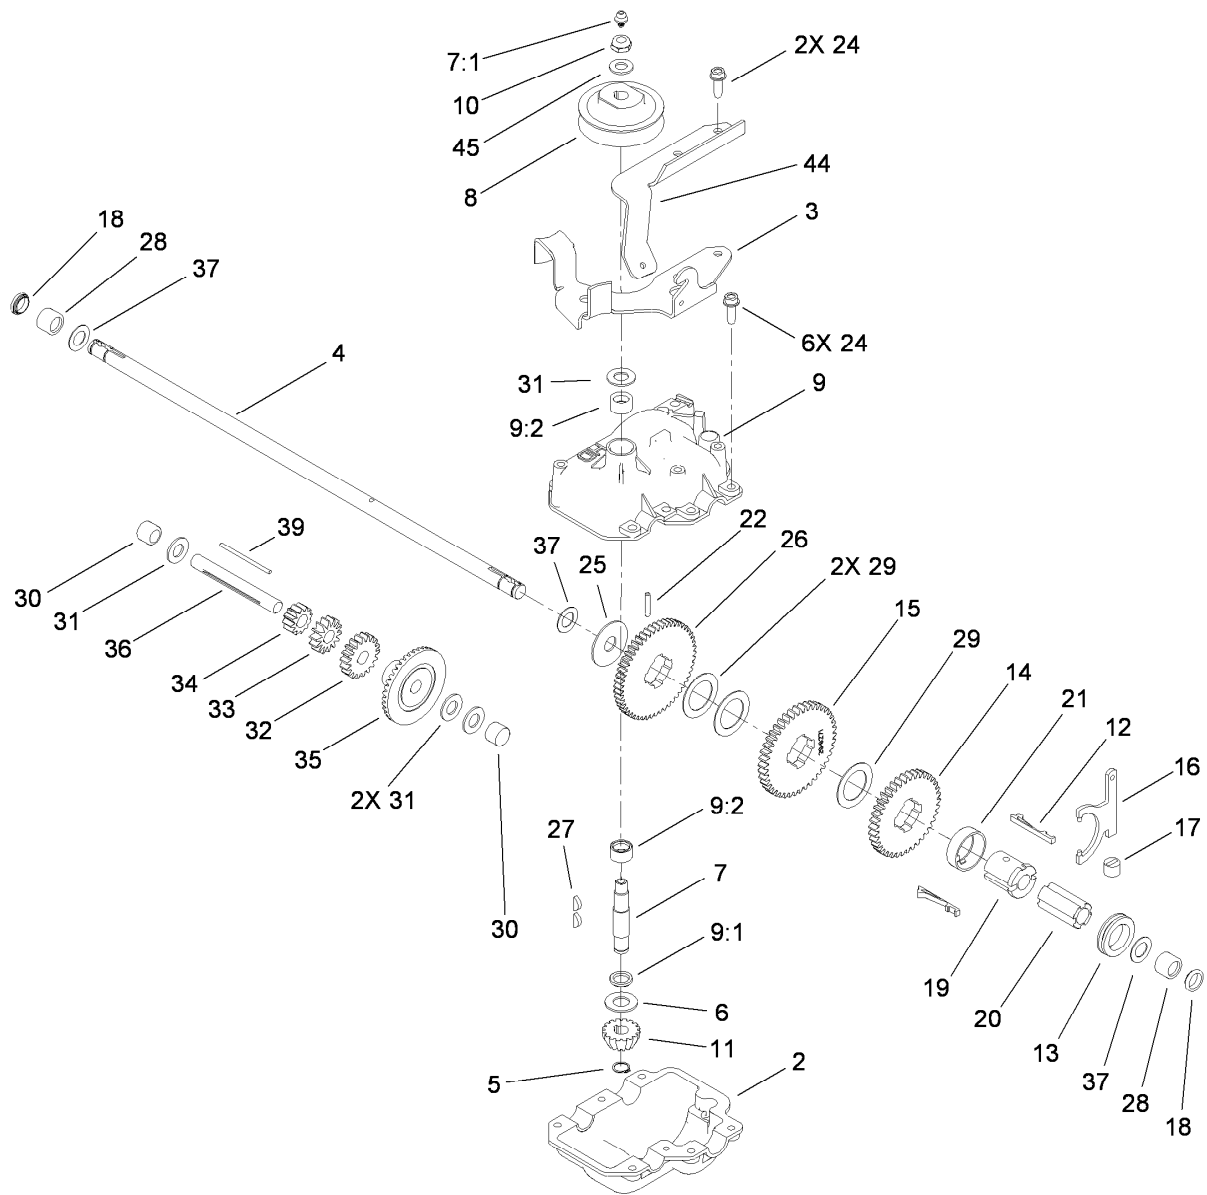


Gear Case Assembly No. 110-2100

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	74-1920	1	Case-Gear, Lower	20	39-6720	1	Sleeve
3	49-8461-03	1	Bracket-Guide, Belt	21	55-8020	1	Retainer-Key
4	74-1890	1	Shaft-Output	22	3285-19	1	Pin-Groove
5	32151-57	1	Ring-Retaining	24	49-2040	8	Screw-HWHTF
6	47-2910	1	Washer-Thrust	25	29-9690	1	Washer
7	13-5149	1	Input Shaft ASM	26	46-3560	1	Gear
7:1	302-63	1	Zerk	27	3257-1	2	Key-Woodruff
8	39-6740	1	Pulley	28	117-3500	2	Bearing-Caged Needle Roller
9	13-9739	1	Upper Gearcase ASM	29	36-4770	3	Washer
9:1	47-7260	1	Seal	30	252-103	2	Bearing-Needle, Closed
9:2	47-7270	2	Bearing-Needle	31	36-4792	4	Washer-Thrust
10	3296-5	1	Nut-Lock	32	39-6650	1	Gear-18T
11	39-6660	1	Pinion-Bevel	33	46-3550	1	Gear-14T
12	29-9330	2	Key-Shift	34	46-3540	1	Gear-12T
13	29-9340	1	Collar-Shift	35	74-1760	1	Gear-Bevel
14	42-4740	1	Gear-38T	36	53-7950	1	Shaft-Intermediate
15	29-9271	1	Gear-42T	37	36-4780	3	Washer-Plain
16	60-8870	1	Yoke-Shift	39	39-7842	1	Key
17	29-9570	1	Bushing-Yoke	44	108-2648-03	1	Arm-Actuating, Gear Case
18	47-6730	2	Seal-Oil	45	3256-45	1	Washer-Flat
19	55-8010	1	Sleeve-Gear				

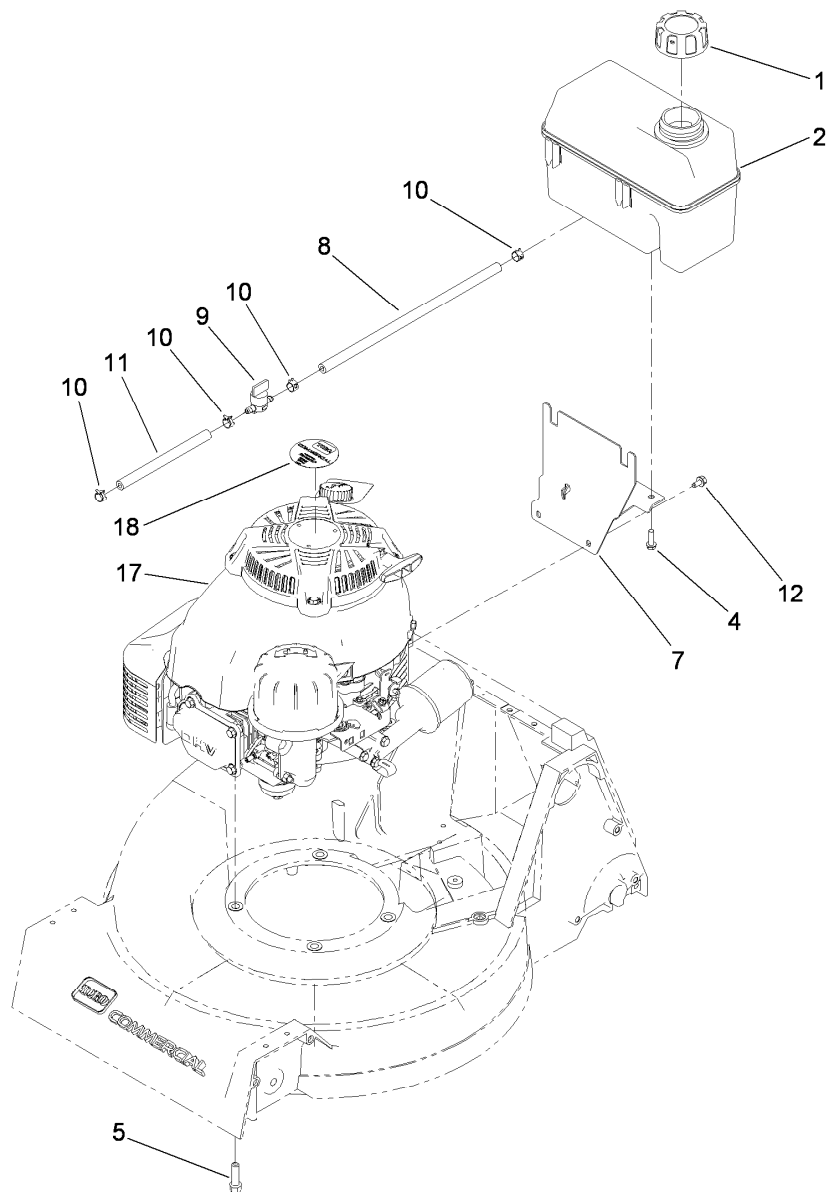

Engine and Fuel Tank Assembly


Ref.	Part Number	Qty.	Description
1	93-7198	1	Gas Cap ASM
2	117-3510	1	Fuel Tank ASM
4	46-8091	2	Screw-HWH
5	95-1727	4	Screw-Taptite
7	115-0954-03	1	Tank Mount ASM
8	114-3766	1	Hose-Fuel
9	1-603770	1	Valve-Fuel
10	2412-98	4	Clamp-Hose
11	107-0588	1	Hose-Fuel
12	104-2628	3	Screw-HWH
17	117-5220	1	Engine-Kawasaki, Fj180V-Am07-M
18	110-0520	1	Decal

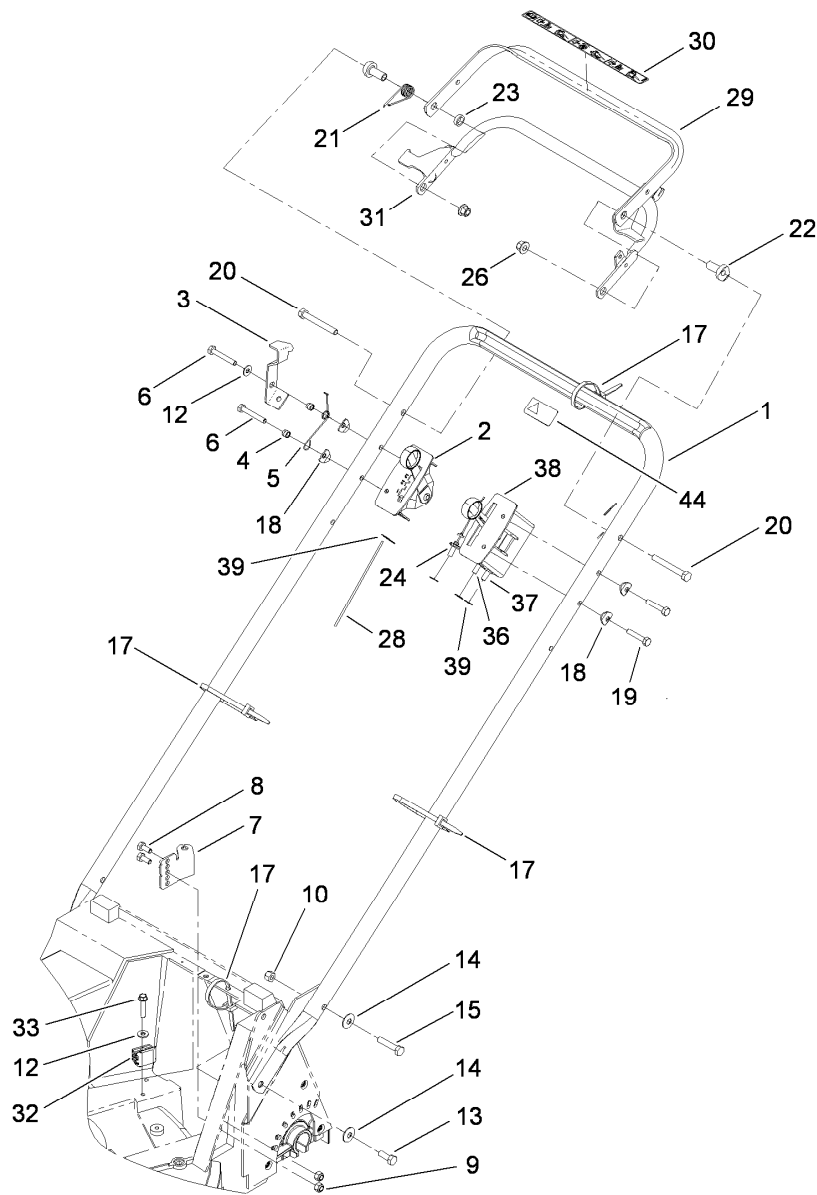

Handle Assembly

Ref.	Part Number	Qty.	Description
1	107-4162-03	1	Handle
2	116-0504	1	Control-Shift
3	115-0999-01	1	Latch-Lever, BBC
4	110-0542	2	Spacer-Flange
5	115-0996	1	Spring-Torsion, Latch
6	321-10	2	Screw-HH
7	115-4453	1	Anchor-Cable
8	321-3	2	Screw-HH
9	3296-42	2	Nut-Lock, NI
10	3296-29	4	Nut-Lock, NI
12	3256-1	2	Washer-Flat
13	322-4	2	Screw-HH
14	3290-456	4	Washer-Belleville
15	322-7	2	Screw-HH
17	3290-378	4	Tie-Cable
18	115-0995	4	Washer
19	321-13	2	Screw-HH


Ref.	Part Number	Qty.	Description
20	322-12	2	Screw-HH
21	115-0993	1	Spring-Torsion
22	49-1631	2	Spacer-Support
23	59-4310	1	Spacer
24	107-4296	1	Cable-BBC
26	3296-58	2	Nut-Lock, NI
28	107-4295	1	Cable-Shift
29	115-4454-03	1	Traction Bail ASM
30	110-2115	1	Decal-Control
31	115-4452-03	1	BBC Bail ASM
32	92-7729	1	Anchor-Cable, Upper
33	32144-110	1	Screw-HWH
36	107-4294	1	Cable-Traction
37	110-4923	1	Throttle Cable ASM
38	117-3544	1	Control Head
39	32151-86	4	E-Ring
44	98-4387	1	Decal-Protection, Ear

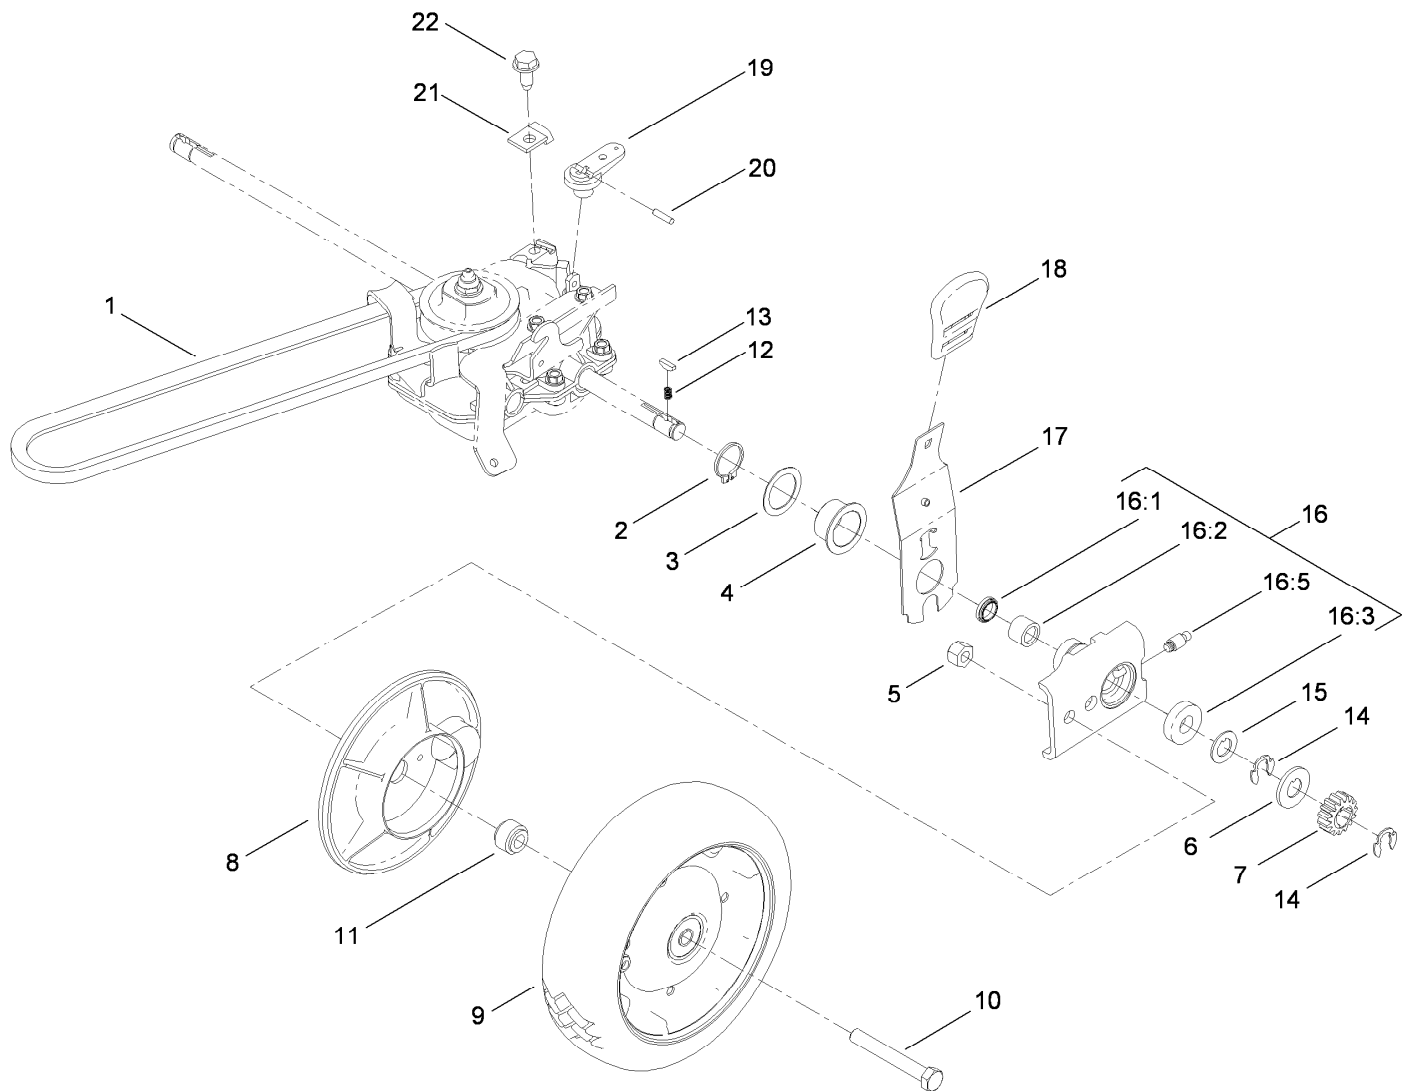

Height-of-Cut and Rear Wheel Assembly

Ref.	Part Number	Qty.	Description
1	612652	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	115-0966	2	Bushing-Flange
5	32152-2	2	Nut-Lock, Cone
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	100-2860	2	Wheel And Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining


Ref.	Part Number	Qty.	Description
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	117-3500	1	Bearing-Caged Needle Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk
17	119-2322	2	Rear Spring Arm ASM
18	110-0549	2	Knob-HOC
19	29-9560	1	Lever-Shift
20	32121-99	1	Pin-Coil
21	62-3720	1	Clamp-Cable
22	32144-70	1	Screw-HWHTF

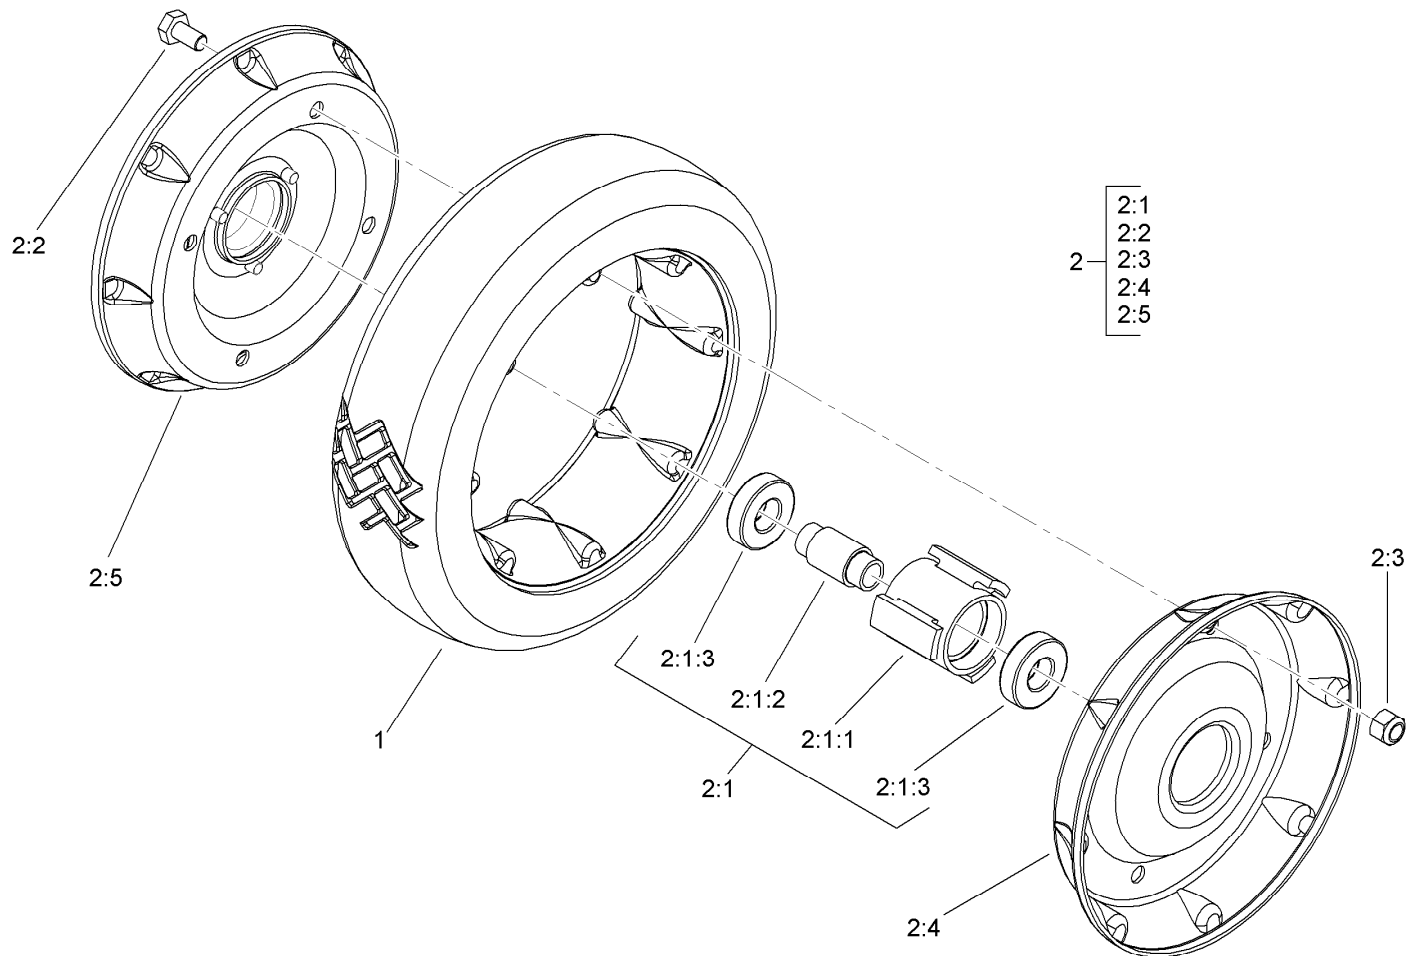

Rear Wheel Assembly No. 100-2860

Ref.	Part Number	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM ●
2:1		1	Hub And Bearing ASM ●
2:1:1	52-2410	1	Hub-Bearing
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	321-2	4	Screw-HH
2:3	3296-42	4	Nut-Lock, NI
2:4	53-7780-06	1	Plate-Wheel, Half
2:5	92-4957-06	1	Wheel Half And Gear ASM

● Not serviced separately

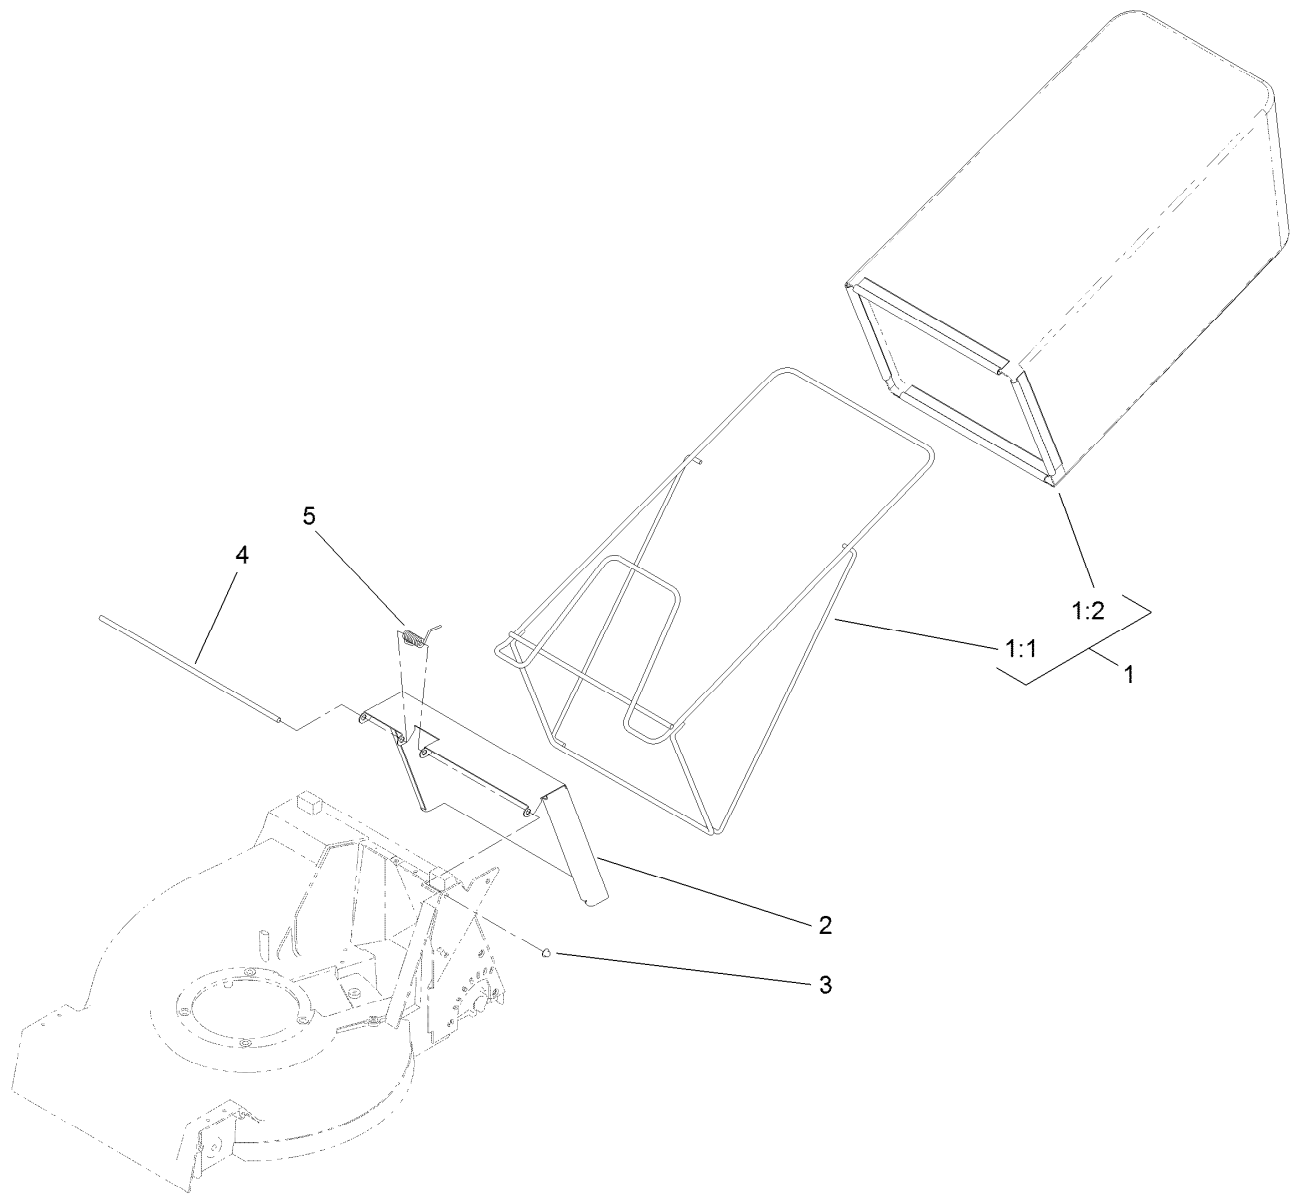

Rear Door and Bag Assembly

Ref.	Part Number	Qty.	Description
1	110-2140	1	Grass Bag ASM
1:1	110-0510-03	1	Frame ASM
1:2	110-0530	1	Bag-Grass
2	114-3445-03	1	Door-Discharge, Rear
3	32112-1	2	Pushnut-Cap, Washer
4	107-4286	1	Rod-Door
5	110-5005	1	Spring-Torsion, Door

Attachments and Accessories

For 22189TE 53cm Heavy-Duty Rear Bagger Lawn Mower

Product Name	Model/Part
Hi-Vac Side Discharge Kit.....	22180

Notes:

Notes:



Count on it.