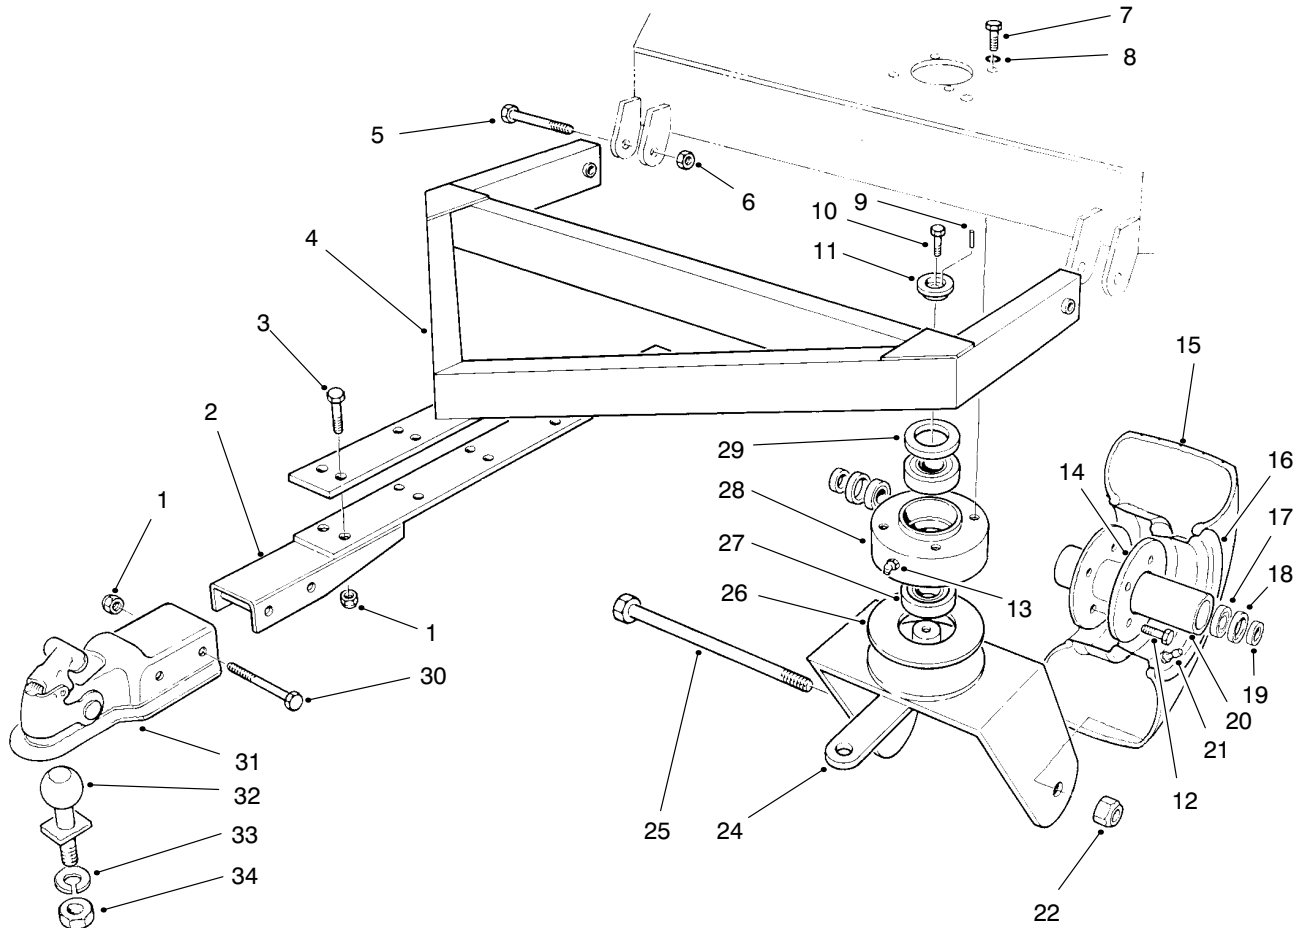



TORO®**MODEL NO. 09502-70001 & UP
MODEL NO. 09512****PARTS
CATALOG****FAIRWAY AERATOR**

T-1309-1

HITCH & FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-23	Nut - Lock	6
2	71-7020	Adapter Asm. - Hitch	1
3	325-8	Screw - Cap Hex. Hd.	4
4	71-6890	Hitch W.A.	1
5	327-14	Screw - Cap Hex. Hd.	2
6	3217-11	Nut - Hex.	2
7	325-5	Screw - Cap Hex. Hd.	4
8	3253-7	Washer - Lock	4
9	32121-3	Pin - Roll	1
10	325-6	Screw - Cap Hex. Hd.	1
11	71-6820	Cap - Retaining	1
12	3212-5	Bolt	4
13	302-61	Fitting - Grease	1
14	71-6760	Support - Rim	1
15	231-119	Tire	1
16	217-60	Rim	1
17	71-6780	Bearing	2

Ref. No.	Part No.	Description	No. Used
18	71-6790	Seal - Oil	2
19	71-6750	Spacer - Outer	2
20	71-6830	Hub Asm. - Wheel	1
21	232-35	Stem - Valve	1
22	3296-70	Nut - Hex.	1
24	71-6730	Caster Asm.	1
25	71-6800	Shaft - Axle	1
26	71-6810	Disc - Plastic	1
27	71-6720	Bearing	2
28	71-6770	Housing - Bearing	1
29	71-6710	Seal - Oil	1
30	325-17	Screw - Cap Hex. Hd.	2
31	71-7010	Coupler - Hitch	1
32	71-7070	Ball - Hitch	1
33	3253-11	Washer - Lock	1
34	72-8010	Nut - Hex.	1

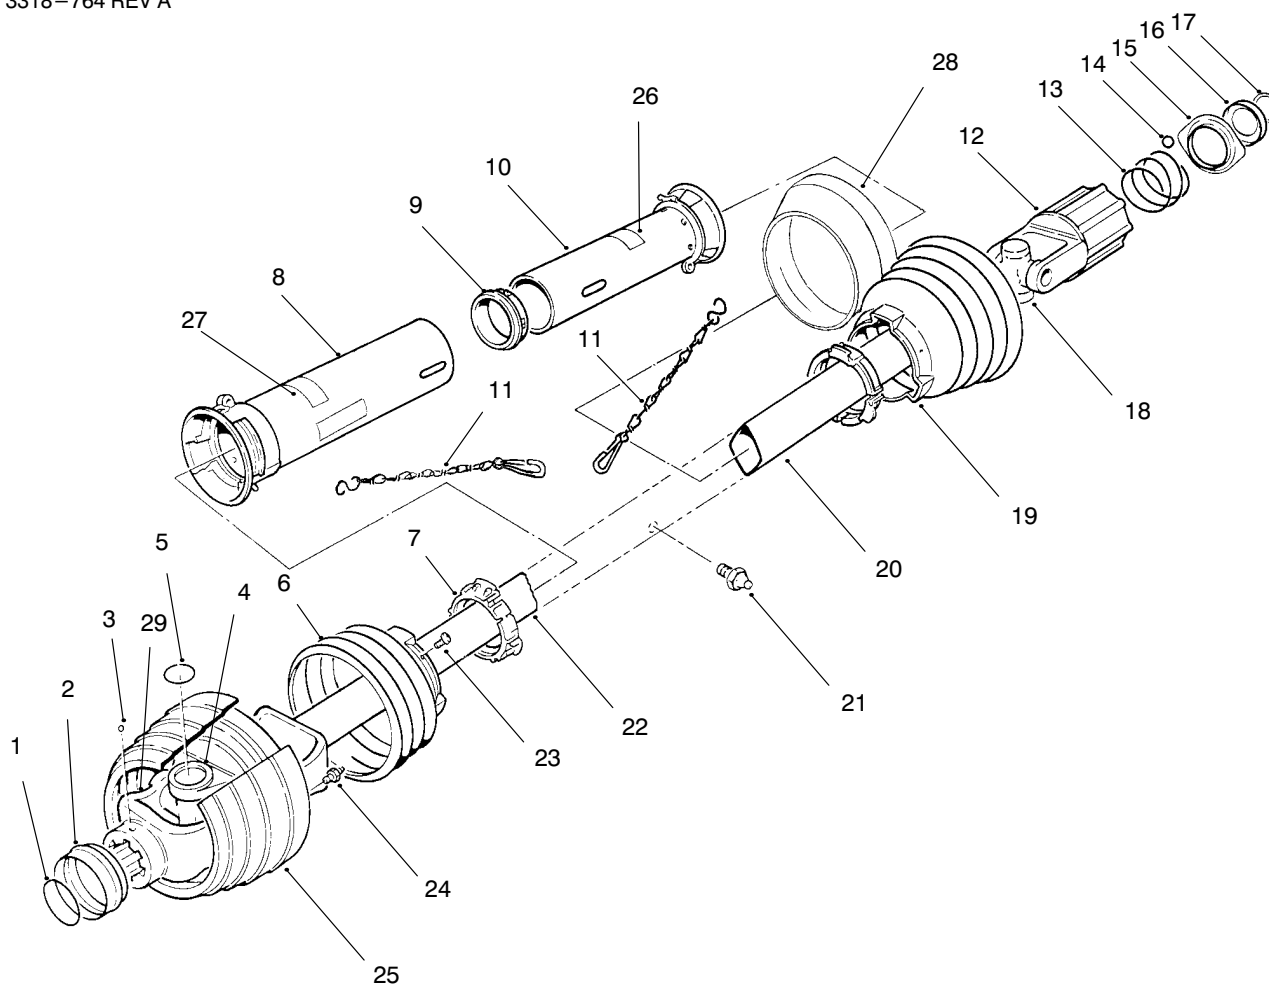

T-1456-1


FRONT DRIVE LINE ASSEMBLY NO. 94-9144

Ref. No.	Part No.	Description	No. Used
1		Ring – Retaining	1
2		Assembly – Collar	1
3		Ball	3
4	84-6300	Yoke – Double	1
5	84-6310	Kit – Cross & Bearing	2
6	84-6350	Shield – 3 Rib	1
7	77-4740	Ring – Bearing	2
8	94-9146	Tube – Shield, Outer	1
9	77-4790	Bearing – Support	1
10	84-6330	Tube – Shield, Inner	1
11	77-4760	Chain – Safety	2
12	94-9145	Clutch – Radial Pin	1
13		Spring – Compression	1
14		Ball	1
15		Collar – Lock	1
16		Ring – Flanged	1
17		Ring – Snap	1
18	77-4720	Cross & Bearing Kit	1
19	77-4730	Cone – Shield	1

Ref. No.	Part No.	Description	No. Used
20	84-6390	Outer Shaft & Yoke	1
21	84-6370	Fitting – Grease	1
22	84-6380	Inner Shaft & Yoke	1
23	84-6360	Screw	8
24	84-6290	Fitting – Grease	1
25	84-6340	Asm.. – Bearing & Cone	1
26	92-7937	Decal – Inner	1
27	92-7936	Decal – Outer	1
28	93-7734	Reinforced Collar	1
29	84-6280	Yoke Assembly (Incl. Ref.#1-4)	1
*	77-4670	Kit – Collar (Incl. Ref.#1-3)	1
*	77-4660	Kit – Flange (Incl. Ref.#13-17)	1
*	94-9144	Drive Line (Complete)	1
**	94-1775	Kit – Clutch, Cams & Springs	4

*Not Illustrated

**Number of Kits Required to Rebuild Clutch

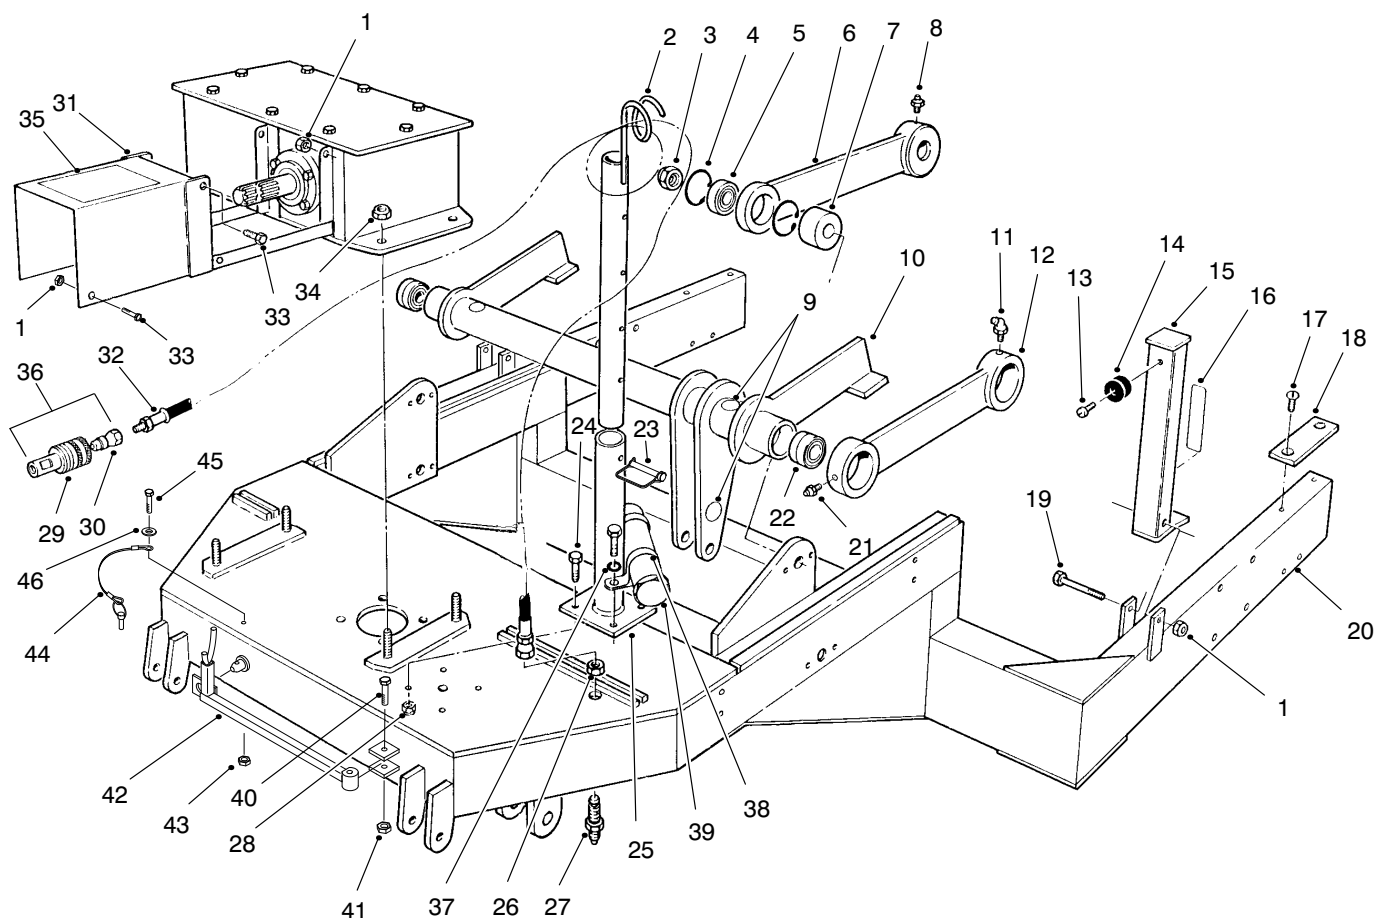

T-0898-3


CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	5
2	71-6910	Extension Asm. - Stand	1
3	3296-70	Nut - Hex	2
4	32120-8	Ring - Retaining	4
5	70-9240	Bearing	2
6	71-6590	Lift Arm - Top	2
7	72-7970	Spacer - Lift Arm, Top	2
8	302-55	Fitting - Grease	3
9	58-6520	Decal - Grease	3
10	71-6510	Lift Unit Asm.	1
11	302-61	Fitting - Grease	2
12	71-6600	Lift Arm - Bottom, LH	1
*	74-3110	Lift Arm - Bottom, RH	1
13	47-2830	Screw	2
14	71-7530	Grommet	2
15	76-2920	Stand - Transport	2
16	67-5370	Decal - Caution	2
17	32108-20	Screw - Countersink	4
18	71-7510	Pad - Absorber, Shock	2
19	323-15	Screw - Cap Hex. Hd.	2
20	94-1778	Frame Asm. - Carrier	1
21	302-55	Fitting - Grease	2
22	70-9240	Bearing	4
23	93-4686	Pin - Snapper	1
24	322-6	Screw - Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
25	71-6950	Stand Asm. - Hose	1
†26		Nut - Bulkhead	1
27	354-33	Fitting Assembly - Bulkhead (Incl. Ref. #26)	1
28	3296-29	Nut - Lock	4
†29		Body - Female	1
†30		Tip - Male	1
31	95-3122	Shield - Drive Line (Incl. Ref. #35)	1
32	71-6980	Hose - Hydraulic	1
33	323-6	Screw - Cap Hex. Hd.	3
34	3296-23	Nut - Lock	4
35	82-9400	Decal - Danger	1
36	71-7060	Coupler - Quick (Incl. Ref. #29 & 30)	1
37	3256-74	Washer - Flat	2
38	2412-133	R-Clamp	2
39	74-0720	Tube - Manual	1
40	325-12	Screw - Cap Hex. Hd.	1
41	3296-23	Nut - Lock	1
42	94-1762	Rest - Drive Shaft	1
43	3296-29	Nut - Lock	1
44	92-9941	Lynch Pin & Tie	1
45	322-5	Screw - Cap Hex. Hd.	1
46	3256-2	Washer - Flat	1

*Not Illustrated

†Not Serviced Separately

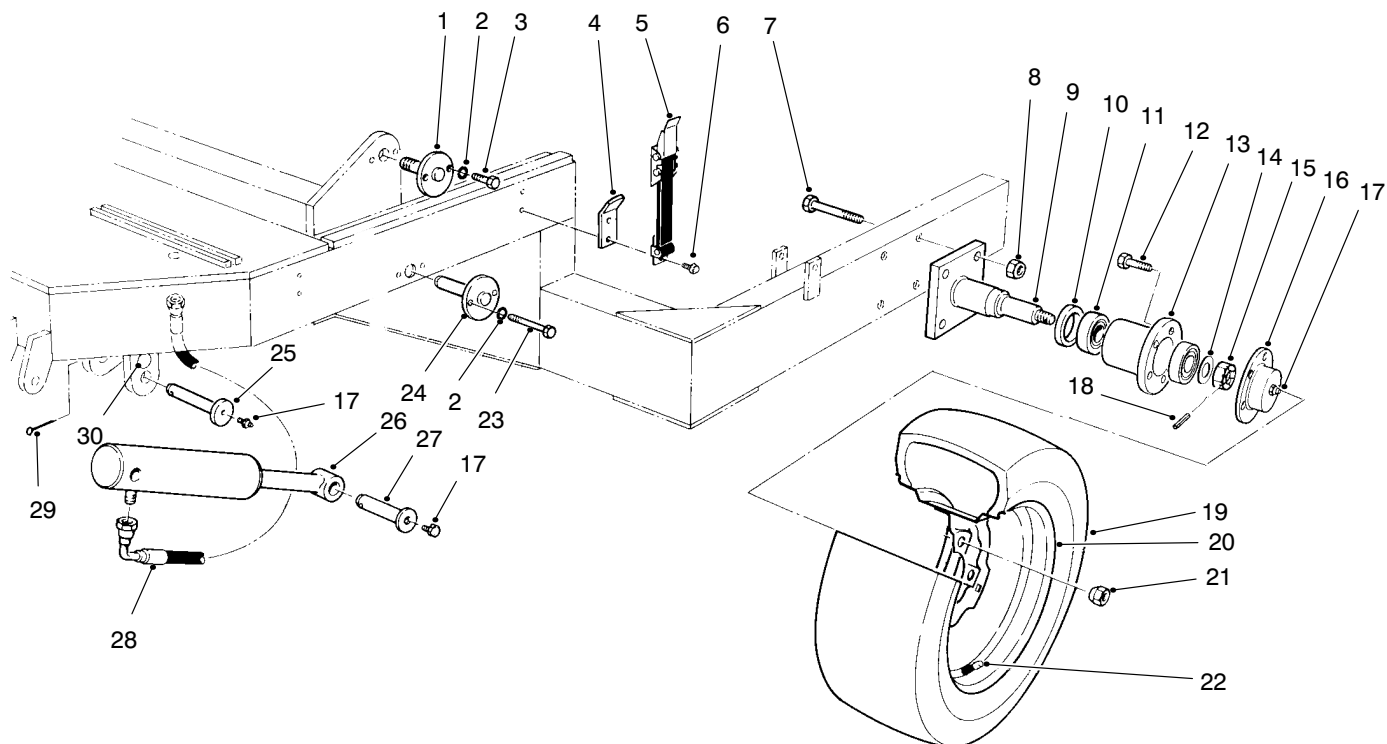


T-0897-1

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-6620	Pin - Location, Top	2
2	3253-21	Washer - Lock	4
3	323-6	Screw - Cap Hex. Hd.	4
4	71-6900	Guide - Cover, Front	4
5	71-6990	Latch - Draw, Flexible	4
6	3234-13	Screw - Flange Hd.	8
7	327-14	Screw - Cap Hex. Hd.	8
8	3296-61	Nut - Lock	8
9	71-6860	Shaft - Axle	2
10	71-6710	Seal - Oil	2
11	71-6630	Bearing	4
12	77-4520	Screw - Cap Hex. Hd.	10
13	71-6850	Housing - Bearing	2
14	70-9520	Washer - Flat	2
15	70-9460	Nut - Castle	2

Ref. No.	Part No.	Description	No. Used
16	71-6840	Cap - Hub	2
17	302-55	Fitting - Grease	2
18	32121-34	Pin - Roll	2
19	231-101	Tire	2
20	217-117	Rim	2
21	23-7270	Nut - Wheel	10
22	232-27	Stem - Valve	2
23	323-14	Screw - Cap Hex. Hd.	4
24	71-6520	Pin - Location, Bottom	2
25	71-6540	Pin - Mount, Front	1
26	71-6560	Cylinder - Hydraulic	1
27	71-6550	Pin - Mount, Rear	1
28	71-7490	Hose Assembly	1
29	3272-23	Pin - Cotter	2
30	58-6520	Decal - Grease	1

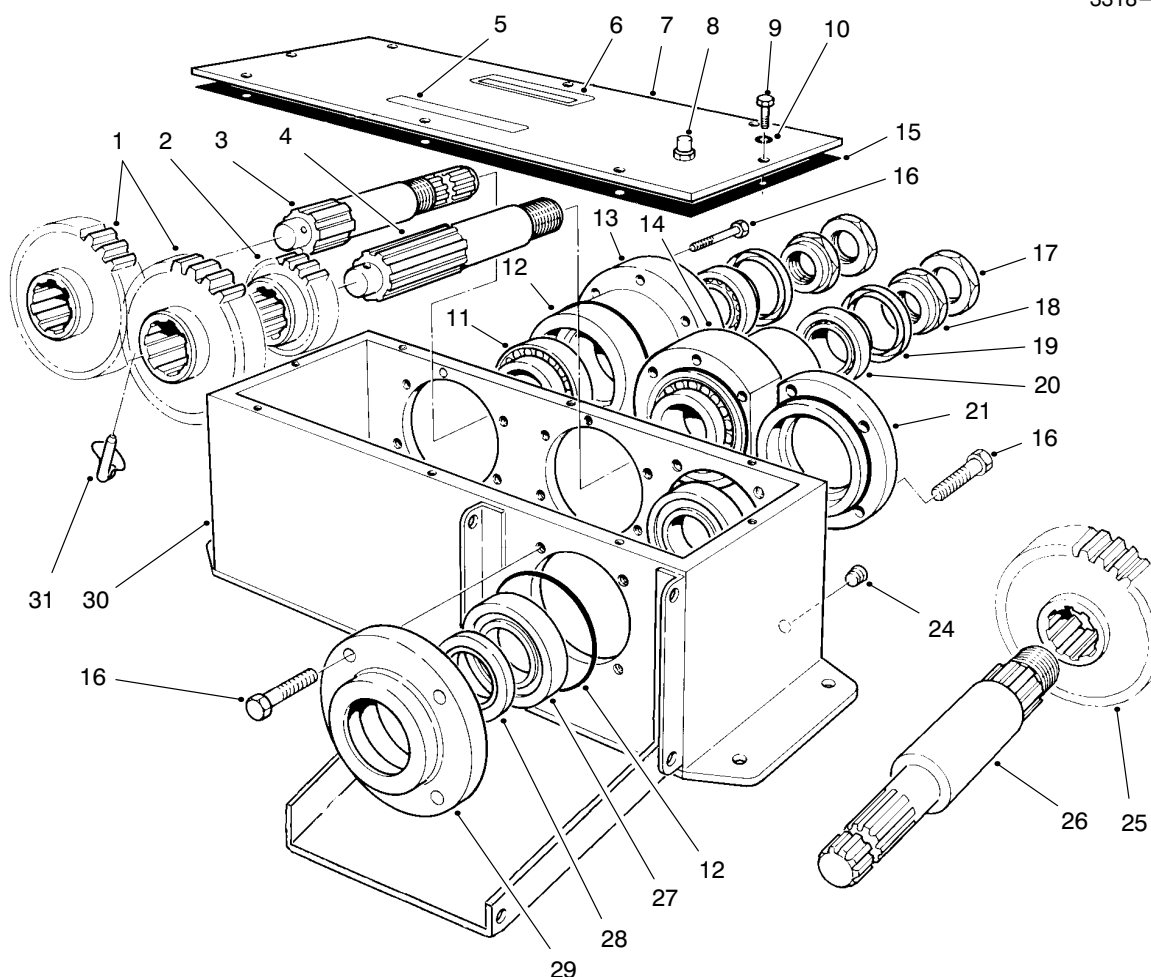


T-0893-1

FRONT GEAR BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-7300	Gear - 30 Tooth	1	11	71-6700	Bearing	2
*	71-7310	Gear - 31 Tooth	1	12	92-3013	Seal - O-Ring	4
*	71-7320	Gear - 32 Tooth	1	13	92-3011	Housing - Bearing	1
*	71-7330	Gear - 33 Tooth	1	14	92-3010	Housing - Bearing	1
*	71-7340	Gear - 34 Tooth	1	15	71-6610	Gasket - Cover	1
*	71-7350	Gear - 35 Tooth	2	16	323-8	Screw - Cap Hex. Hd.	20
*	71-7360	Gear - 36 Tooth	1	17	70-9720	Nut - Jam	2
*	71-7370	Gear - 37 Tooth	1	18	70-9710	Nut - Hex	2
*	71-7380	Gear - 38 Tooth	1	19	71-6490	Seal - Oil	2
*	71-7390	Gear - 39 Tooth	1	20	71-6690	Bearing	2
*	71-7400	Gear - 40 Tooth	1	21	92-3008	Cap - Bearing	1
2	71-7200	Gear - 20 Tooth	1	24	285-21	Plug - Pipe	1
3	71-6570	Shaft - Corer	1	25	82-2900	Gear - 35 Tooth	1
4	70-9690	Shaft - Intermediate	1	26	94-5309	Shaft - Tractor	1
5	65-3090	Decal	1	27	72-3820	Bearing	2
6	67-5360	Decal - Warning	1	28	70-9680	Seal - Oil	1
7	70-9670	Cover - Gearbox	1	29	92-3009	Cap - Bearing	1
8	72-3800	Breather	1	30	94-1779	Gear Case Asm.	1
9	322-5	Screw - Cap Hex. Hd.	8	31	283-72	Pin - Lynch	2
10	3253-4	Washer - Lock	8				

*Not Illustrated

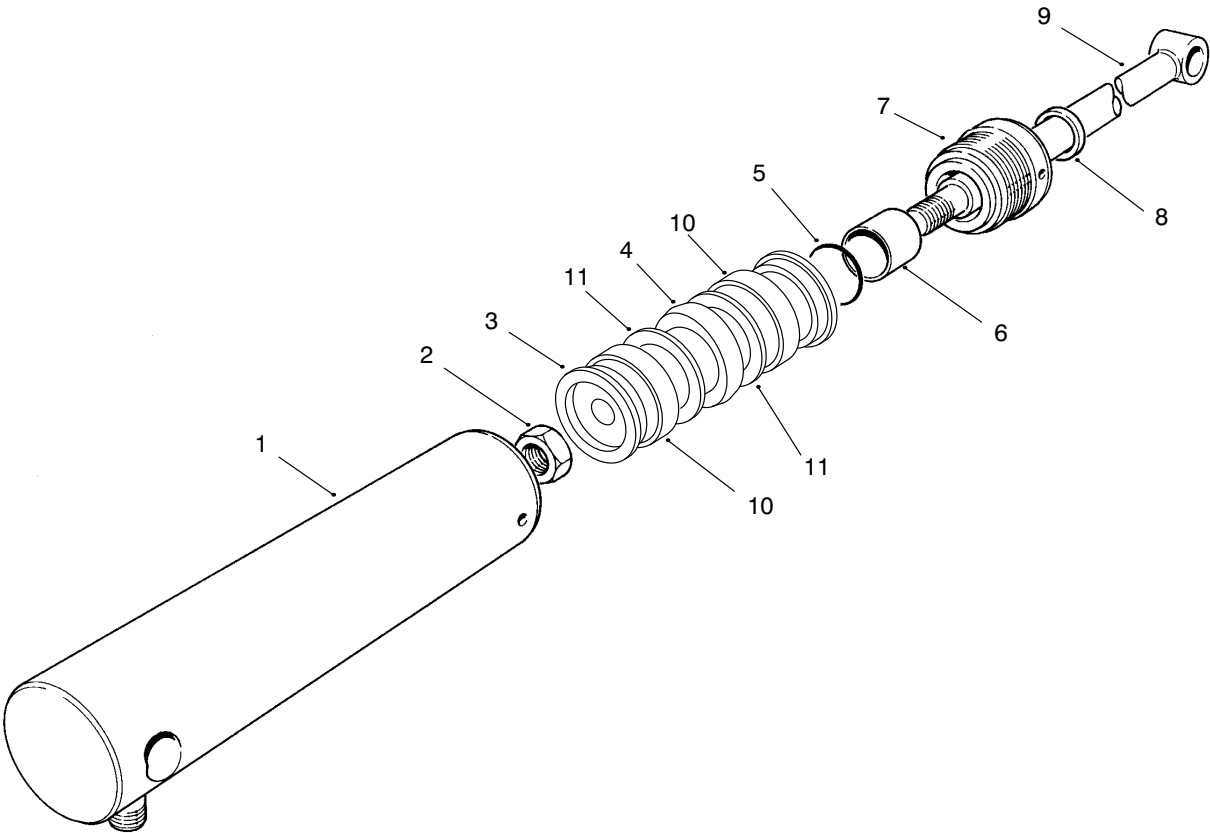


T-0899-1

HYDRAULIC CYLINDER ASSEMBLY NO. 71-6560

Ref. No.	Part No.	Description	No. Used
1	92-2410	Barrel	1
2	93-8770	Nut	1
3	92-2412	Piston	1
†4		Seal - Piston	1
†5		O-Ring	1
†6		Bushing - Bronze	1
7	92-2411	Cap - End	1

Ref. No.	Part No.	Description	No. Used
†8		Seal - Wiper	1
9	92-2413	Rod	1
		(Incl. Ref. #4-6,8,10,11)	1
10		Plastic Anti-Extrusion Ring	2
11		Spiral Back-Up Wear Ring	2
*	71-6640	Seal Kit	1
		(Incl. Ref.# 4-6,8,10,11)	

*Not Illustrated
†Not Serviced Separately

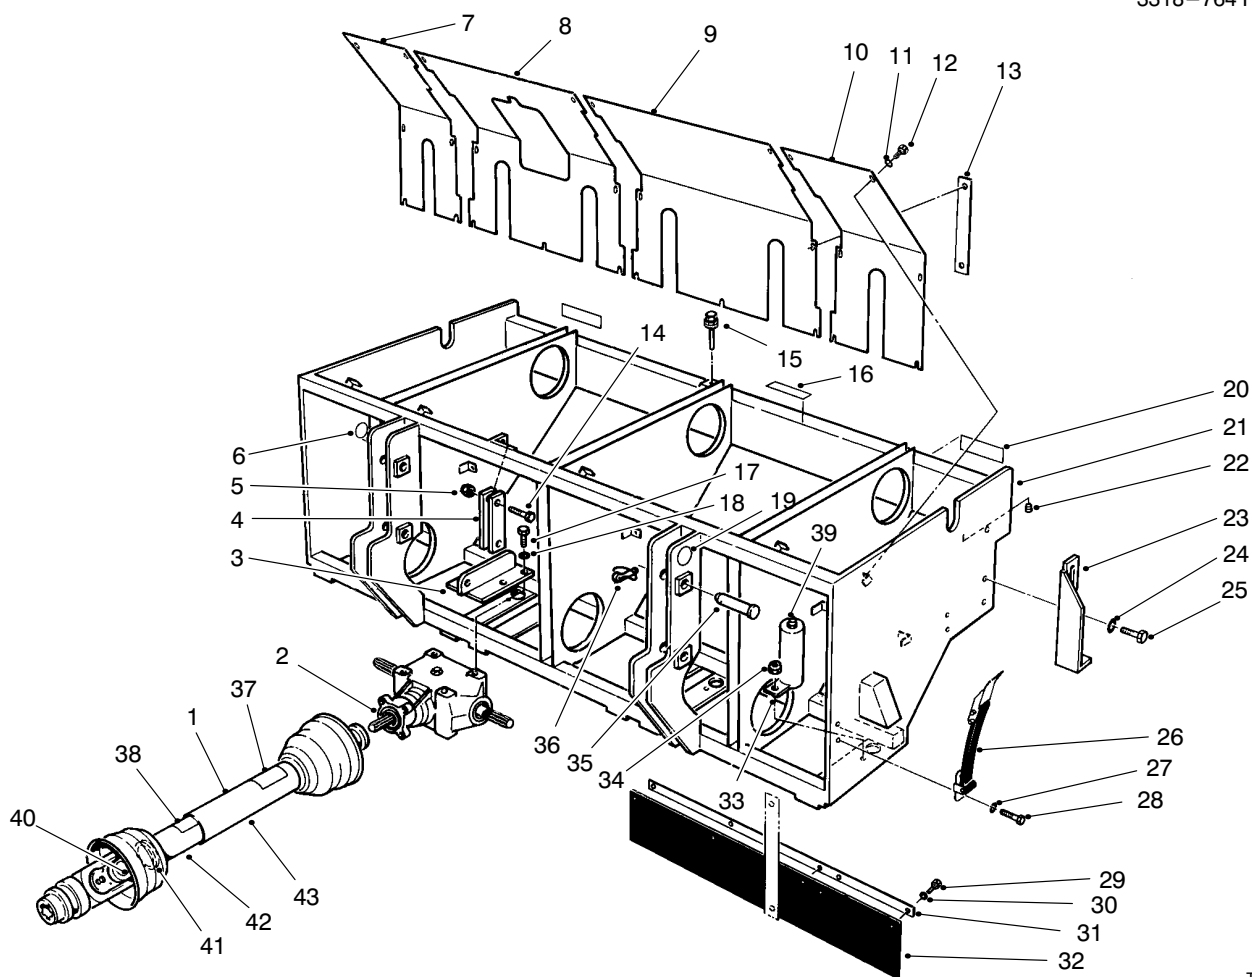


T-1137-1

CORER & SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	68-8060	Drive Line Asm. (Incl. Ref. #37, 38 & 40-43)	1
2	77-3050	Gearbox - Rear, Bevel	1
3	76-3760	Plate - Mounting, Gearbox	1
4	71-7150	Plate - Upright, Gearbox	2
5	3296-23	Nut - Lock	2
6	58-6520	Decal - Grease	1
7	77-3070	Screen - Outer, R.H.	1
8	77-3090	Screen - Inner, R.H.	1
9	77-3080	Screen - Inner, L.H.	1
10	77-3060	Screen - Outer, L.H.	1
11	3253-4	Washer - Lock	16
12	322-3	Screw - Cap Hex. Hd.	16
13	72-7980	Strap	6
14	325-8	Screw - Cap Hex. Hd.	2
15	72-7960	Indicator - Oil Level	1
16	67-5360	Decal - Warning, Covers	1
17	48-7830	Screw, Cap Hex. Hd.	4
18	3253-7	Washer - Lock	4
19	58-6520	Decal - Grease	1
20	59-9930	Decal - Danger	2
21	92-3004	Coring Frame Asm.	1
22	285-21	Plug - Pipe	1

Ref. No.	Part No.	Description	No. Used
23	71-7470	Adjuster - L.H.	1
*	71-7480	Adjuster - R.H.	1
24	3256-69	Washer - Flat	4
25	327-4	Screw - Cap, Hex. Hd.	4
26	71-6990	Latch - Draw, Flexible (Complete)	4
27	3253-3	Washer - Lock	8
28	321-2	Screw - Cap Hex. Hd.	8
29	322-5	Screw - Cap Hex. Hd.	10
30	3256-2	Washer - Flat	10
31	71-7460	Strap - Securing, Curtain	2
32	71-7450	Curtain - Lower	2
33	71-7180	Cover - Dust	6
34	3296-39	Nut - Lock	6
35	71-6530	Pin - Mount, Lift Arm	4
36	283-71	Pin - Lynch	4
37	92-1581	Decal - Safety	1
38	92-1582	Decal - Safety	1
39	302-55	Fitting - Grease	6
40	72-7990	Cross & Bearing Kit	1
41	92-1580	Nylon Repair Kit	1
42	92-7931	Inner Guard	1
43	92-7930	Outer Guard	1

*Not Illustrated

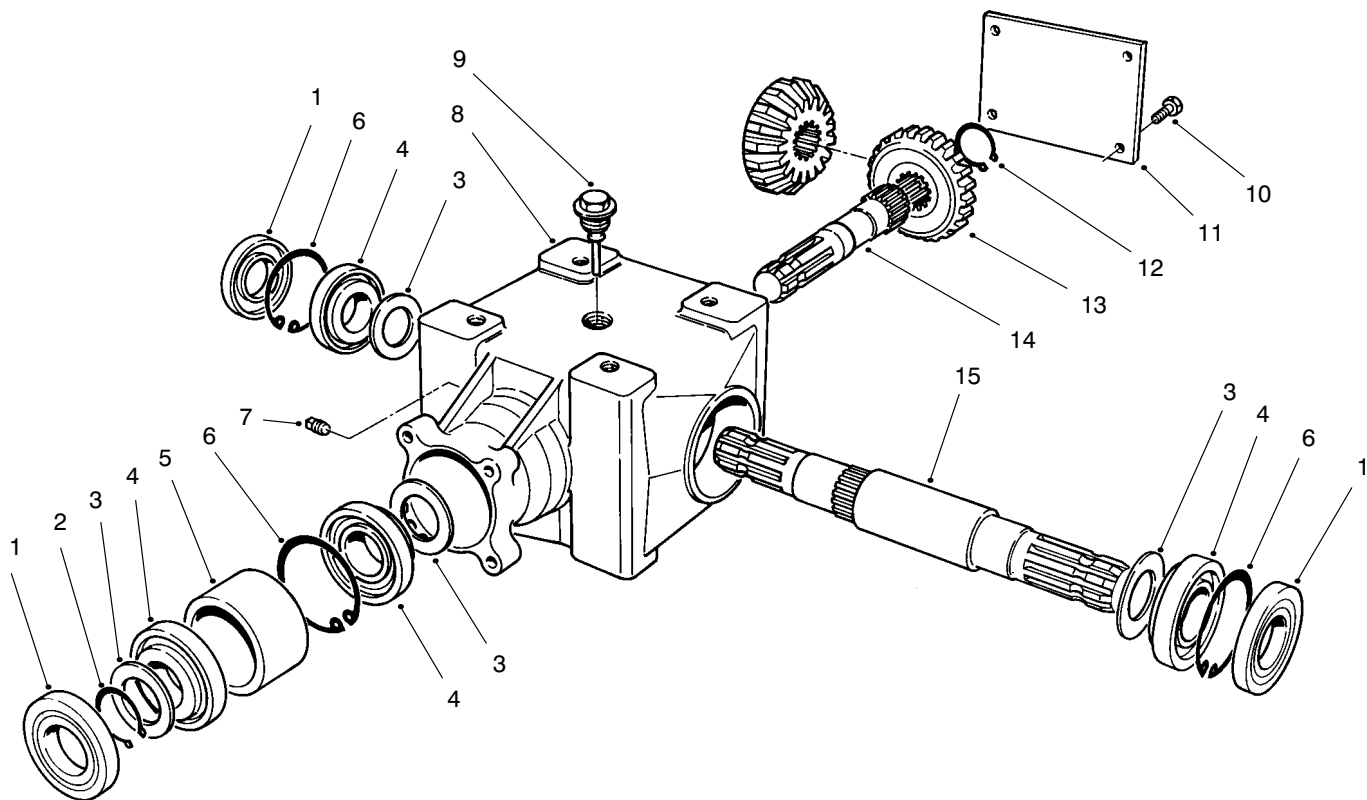


T-1127-1

GEAR BOX ASSEMBLY NO. 77-3050

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	74-3200	Seal - Oil	3	9	77-4490	Plug - Oil Level/Filler	1
2	74-2960	Ring - Retaining	1	10	77-4500	Bolt - Hex. Socket Hd.	4
†3	74-2990	Shim Kit	4	11	77-4470	Cover	1
4	71-6630	Bearing	4	12	77-4460	Ring - Retaining	1
5	77-4430	Spacer	1	13	77-4450	Gear - 18 Tooth	2
6	32120-31	Ring - Snap	3	14	77-4440	Shaft - Input	1
7	281-1	Plug - Pipe	1	15	77-4480	Shaft	1
*8		Case	1				

† Includes three (3) shims of various thickness to properly adjust gear backlash & shaft end play.
Required when replacing items #4, 5, & 13-15. Instruction sheet included.

*Not Serviced Separately

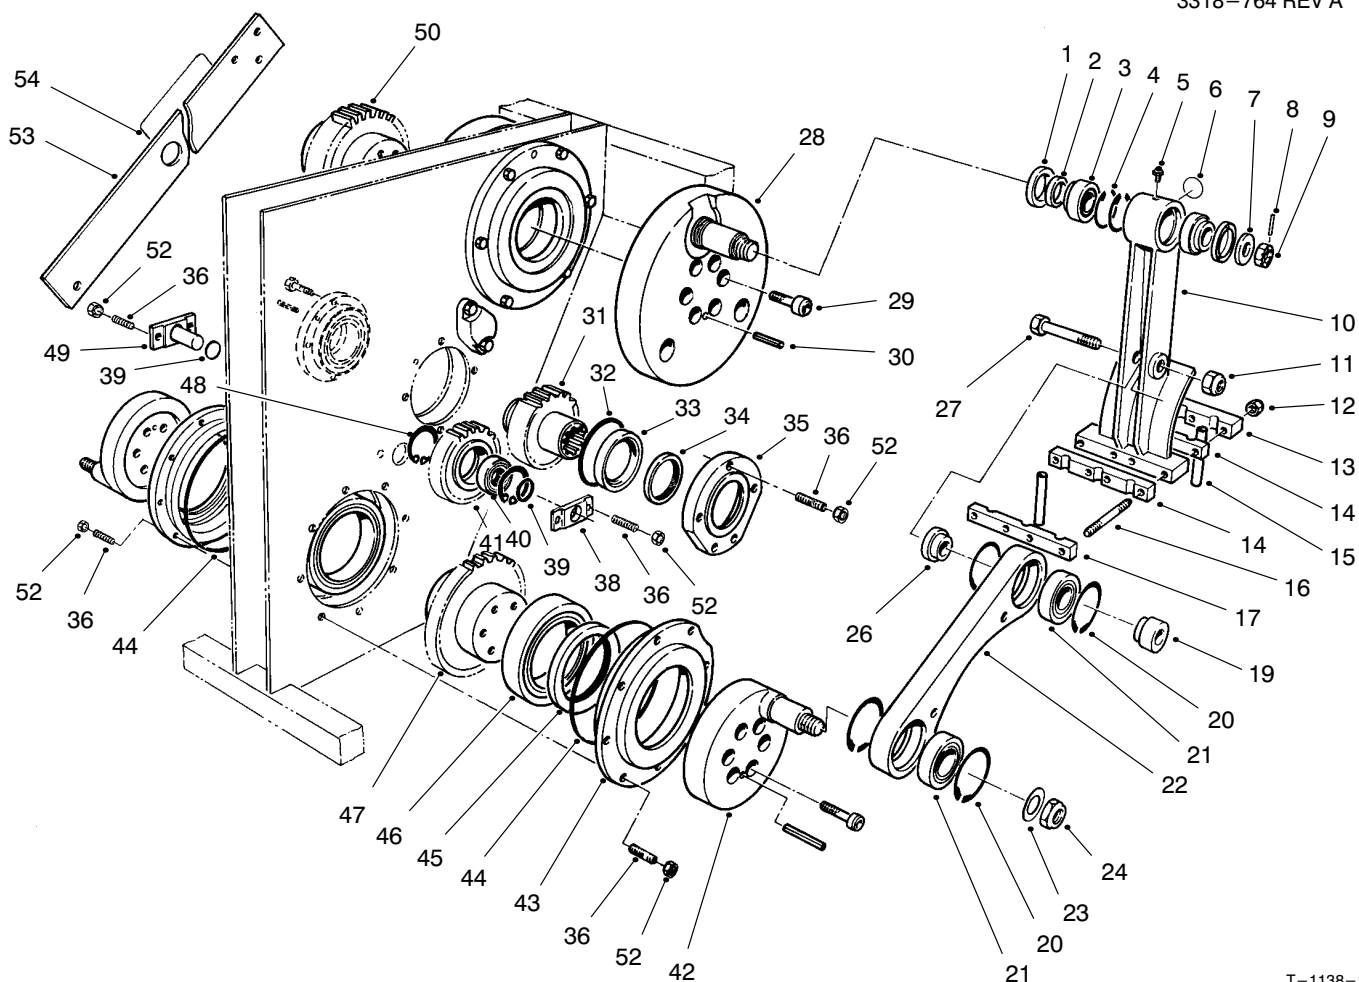


T-1138-1

CORER GEAR CASE & STOMPER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	72-3840	Seal - Oil	12	28	92-9948	Crank - Top	6
2	70-9580	Spacer - Inner	6	29	3274-4	Screw - Cap Hex. Socket	72
3	72-3810	Bearing	12	30	71-7100	Pin - Roll	12
4	82-3190	Ring - Retaining	12	31	76-3630	Gear - Shaft, Driver	3
5	302-55	Fitting - Grease	6	32	92-3013	Seal - O-Ring	6
6	58-6520	Decal - Grease	6	33	70-9220	Bearing	6
7	70-9570	Spacer - Outer	6	34	70-9350	Seal - Oil	6
8	32121-34	Pin - Roll	6	35	92-3001	Flange - Shaft, Drive	6
9	70-9460	Nut - Castle	6	36	92-3005	Stud	150
10	70-9420	Arm - Tine	6	38	92-3003	Cap - End	6
11	3296-70	Nut - Lock	6	39	237-168	O-Ring	12
12	3296-23	Nut - Lock	24	40	77-4560	Bearing	6
†13		Block - Outer		41	76-3640	Gear - Idler	6
†14		Block - Inner		42	72-8100	Crank - Bottom	6
†15		Tine		43	92-3000	Flange - Crankshaft	12
†16		Stud		44	92-3012	Seal - O-Ring	12
†17		Block - Bridging		45	70-9340	Seal - Oil	12
19	72-8060	Bushing - Spacer, Long	6	46	70-9330	Bearing	12
20	32151-88	Ring - Retaining	24	47	76-3660	Gear - Crankshaft, Bottom	3
21	72-8070	Bearing	12	48	32120-62	Ring - Retaining	12
22	77-3040	Rod - Connecting	6	49	92-3002	Shaft - Idler	6
23	3256-62	Washer - Flat	6	50	76-3650	Gear - Crankshaft, Top	3
24	3296-70	Nut - Lock	6	52	92-3006	Nut - Lock	150
26	72-8090	Bushing - Spacer, Short	6	53	82-3200	Timing Bar	1
27	70-9550	Bolt - Connecting	6	54	82-3220	Decal	1

† See pages 9, 10 & 11 for selection.

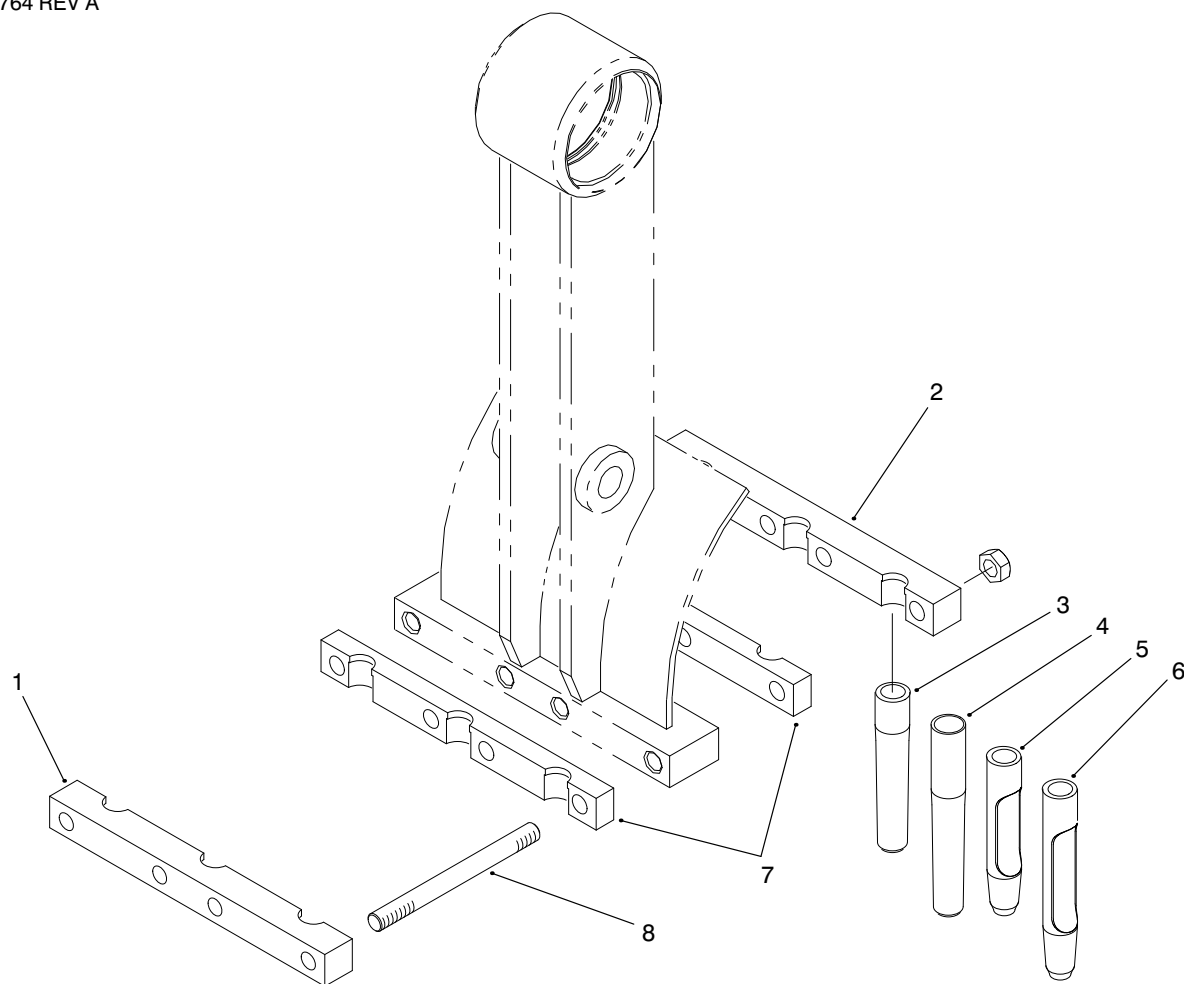


T-2530-1

6-TINE BLOCKS & .75 DIAMETER TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	70-9390	Block - Bridging, 6-Tine	6
2	70-9380	Block - Outer, 6-Tine	6
3	62-4600	Tine - Tubular .75 x 4.75	36
4	86-9720	Tine - Tubular .75 x 5.75	36

Ref. No.	Part No.	Description	No. Used
5	92-7941	Tine - Open Center .75 x 4.75	36
6	92-7900	Tine - Open Center .75 x 5.75	36
7	70-9400	Block, Inner, 6-Tine	12
8	71-7120	Stud - .50 x 150mm	24

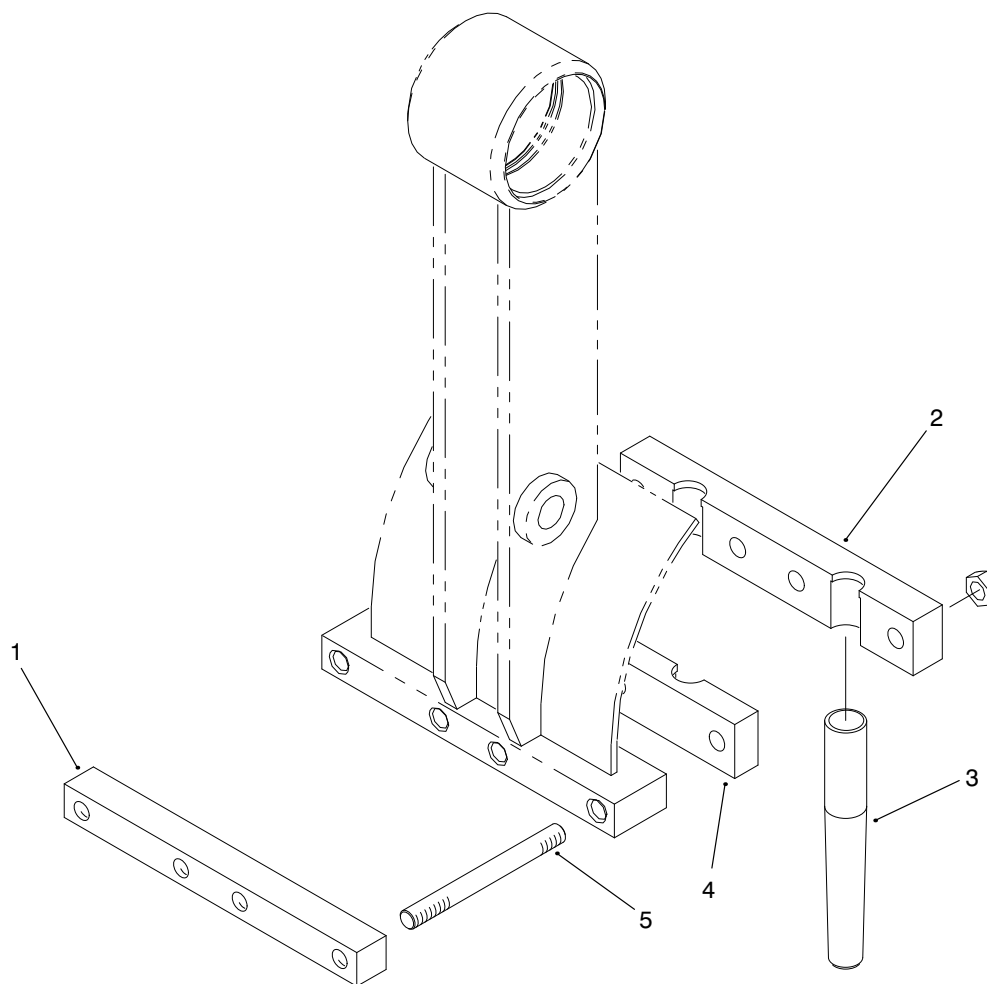


T-2531-1

2-TINE BLOCKS & TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	70-9410	Block - Bridging, 2-Tine	6
2	70-9260	Block - Outer, 2-Tine	6
3	71-0940	Tine - Tubular .88 x 7.00	12

Ref. No.	Part No.	Description	No. Used
4	70-9270	Block - Inner, 2-Tine	6
5	71-7110	Stud - .50 x 130mm	24

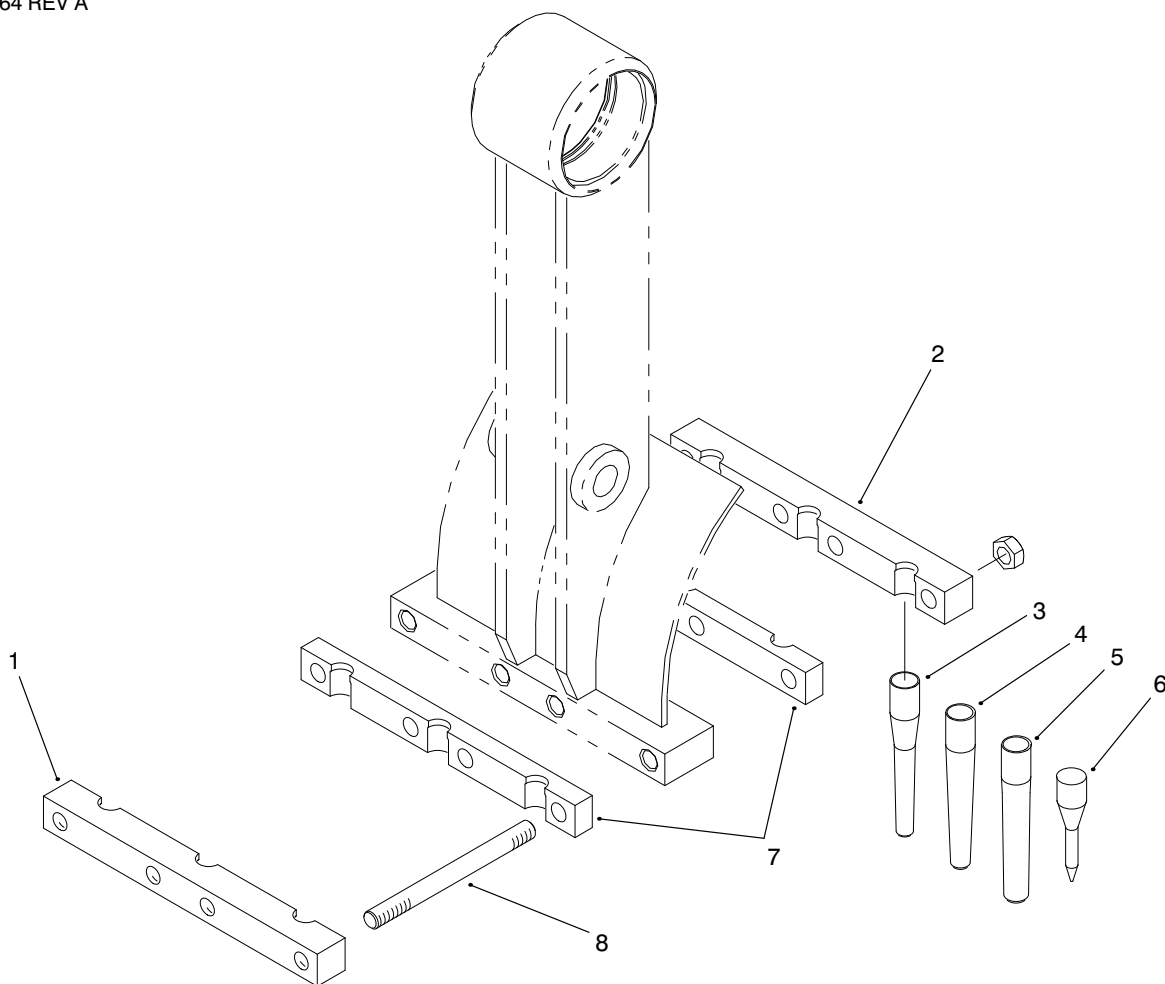


T-2532-1

6-TINE BLOCKS & TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	95-3104	Block - Bridging, 6-Tine	6
2	95-3103	Block - Outer, 6-Tine	6
3	59-3690	Tine - Tubular .38 x 4.75	36
4	94-3419	Tine - Tubular .50 x 4.75	36

Ref. No.	Part No.	Description	No. Used
5	59-3670	Tine - Tubular .62 x 4.75	36
6	77-5320	Tine - Spiker .31 x 3.25	36
7	95-3105	Block - Inner, 6-Tine	12
8	71-7120	Stud - .50 x 150mm	24

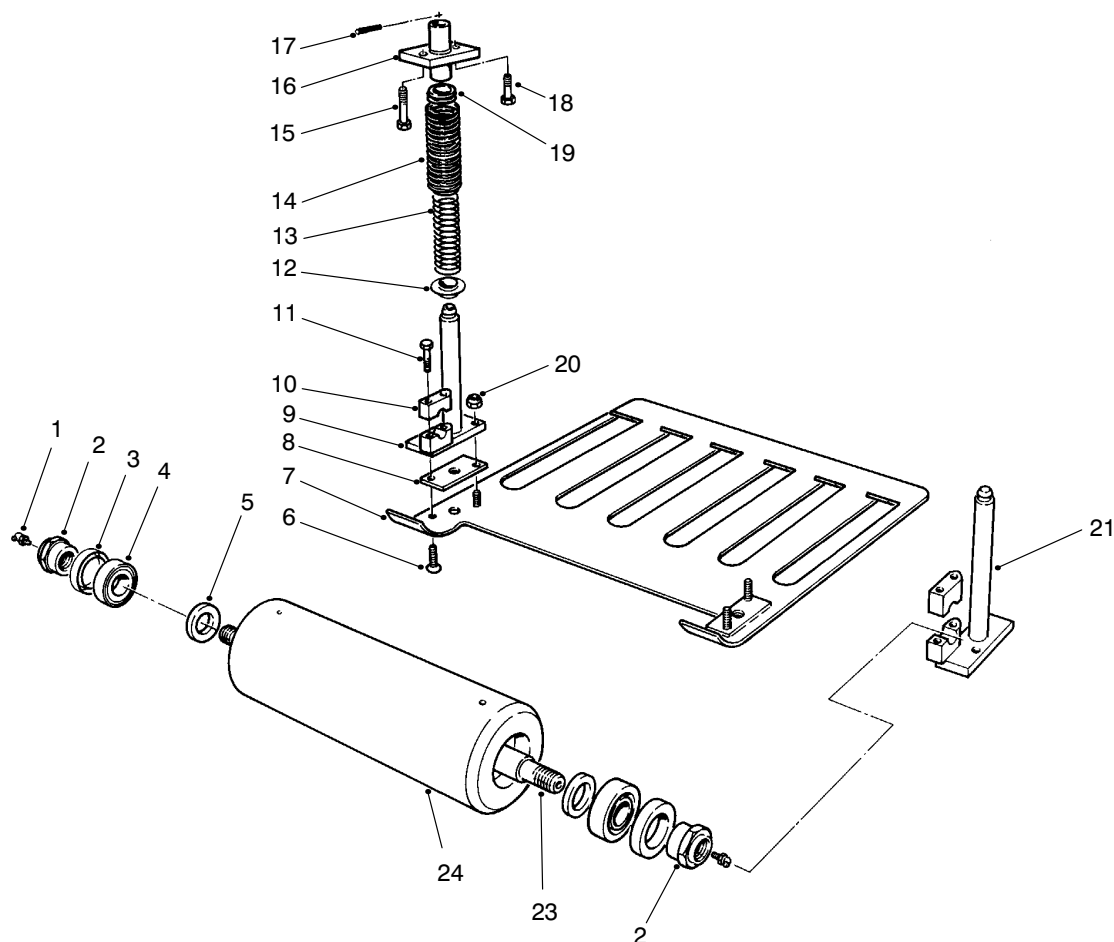


T-0896-1

ROLLER & FINGER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-61	Fitting - Grease	6	13	70-9450	Spring - Compression	6
2	71-7290	Nut - Thin	6	14	82-2890	Shield - Rubber	6
3	71-6790	Seal - Oil	6	15	323-35	Screw - Cap Hex. Hd.	6
4	71-6780	Bearing	6	16	71-7130	Bushing	6
5	72-3830	Seal - Oil	6	17	32121-15	Pin - Roll	6
6	3289-17	Screw - HSFH	12	18	323-7	Screw - Cap Hex. Hd.	6
7	70-9440	Plate - 6 Tine	3	19	71-7230	Ring - Clamp, Top	6
*	70-9430	Plate - 2 Tine	3	20	3296-39	Nut - Lock	12
8	71-7270	Plate - Backing	6	21	71-7210	Shaft - L.H.	3
9	71-7220	Shaft - R.H.	3	23	71-7280	Shaft	3
10	72-8020	Block - Clamp, Top	6	24	71-7250	Roller Assembly (Incl. Ref. #1-5, 22 & 23)	3
11	3212-6	Screw - Cap Hex. Hd.	12				
12	71-7240	Ring - Clamp, Bottom	6				

*Not Illustrated

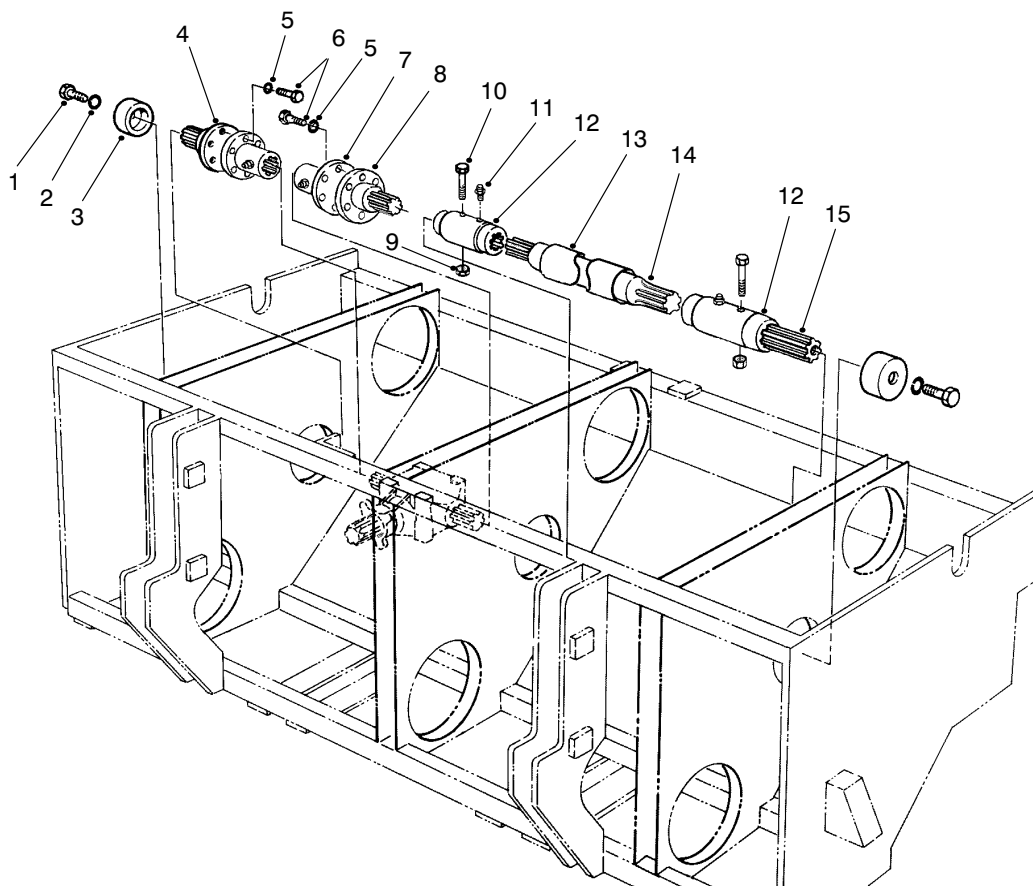


T-1139-1

DRIVE LINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-5	Screw - Cap Hex. Hd.	2
2	48-8070	Washer - Lock	2
3	76-3750	Flange	2
4	76-3730	Shaft - Splined	1
5	3253-7	Washer - Lock	12
6	3274-89	Screw - Cap Hex. Socket	12
7	76-3710	Coupling - Flange	2
8	76-3720	Shaft - Splined	1

Ref. No.	Part No.	Description	No. Used
9	3296-29	Nut - Lock	2
10	322-12	Screw - Cap Hex. Hd.	2
11	302-55	Fitting - Grease	4
12	76-3740	Coupling - Splined	2
13	70-9620	Tube - Shield	1
14	70-9300	Shaft - Splined	1
15	70-9310	Shaft - Splined	1

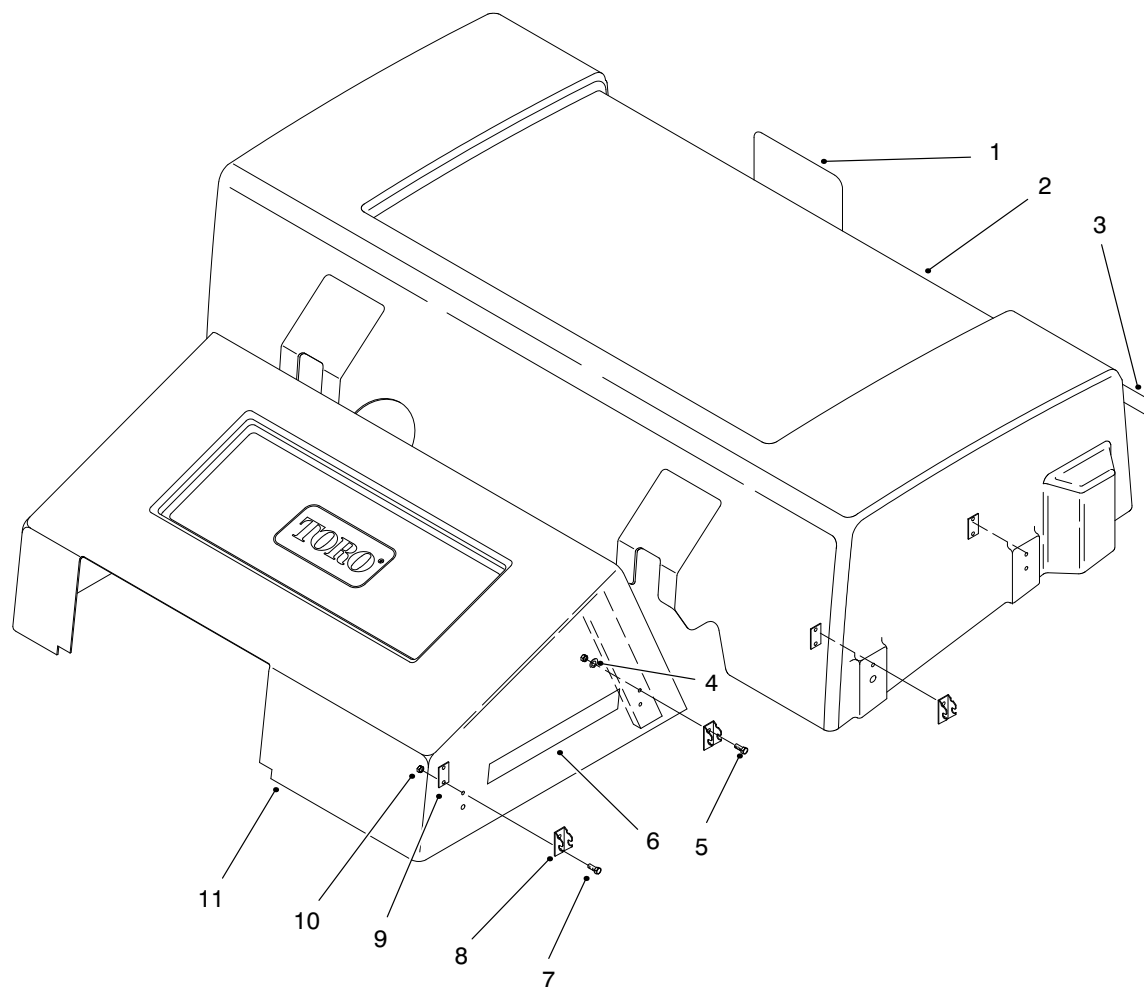

T-0900-1

AERATOR & CORING HEAD COVERS

Ref. No.	Part No.	Description	No. Used
1	67-7310	Decal - Toro	2
2	84-5980	Cover - Coring Head	1
3	59-9930	Decal - Danger	2
4	3256-22	Washer - Flat	4
5	321-9	Screw - Cap Hex. Hd.	4
6	67-5330	Decal - Aerator, Fairway	2

Ref. No.	Part No.	Description	No. Used
7	321-4	Screw - Cap Hex. Hd.	12
8	71-6990	Latch (Complete) (Keeper Shown Illustrated)	4
9	71-6940	Plate - Backing	6
10	3296-56	Nut - Lock	16
11	84-5970	Cover - Front, Aerator	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
23-7270	Nut - Wheel	4 21 10	71-6630	Bearing	4 11 4
47-2830	Screw	3 13 2	71-6640	Seal Kit	6 * 1
48-7830	Screw, Cap Hex. Hd.	7 17 4	71-6690	Bearing	5 20 2
48-8070	Washer - Lock	14 2 2	71-6700	Bearing	5 11 2
58-6520	Decal - Grease	7 6 1	71-6710	Seal - Oil	4 10 2
58-6520	Decal - Grease	9 6 6	71-6710	Seal - Oil	1 29 1
58-6520	Decal - Grease	3 9 3	71-6720	Bearing	1 27 2
58-6520	Decal - Grease	7 19 1	71-6730	Caster Asm.	1 24 1
58-6520	Decal - Grease	4 30 1	71-6750	Spacer - Outer	1 19 2
59-3670	Tine - Tubular	12 5 36	71-6760	Support - Rim	1 14 1
59-3690	Tine - Tubular	12 3 36	71-6770	Housing - Bearing	1 28 1
59-9930	Decal - Danger	15 3 2	71-6780	Bearing	13 4 6
59-9930	Decal - Danger	7 20 2	71-6780	Bearing	1 17 2
62-4600	Tine - Tubular	10 3 36	71-6790	Seal - Oil	13 3 6
65-3090	Decal	5 5 1	71-6790	Seal - Oil	1 18 2
67-5330	Decal - Aerator, Fairway	15 6 2	71-6800	Shaft - Axle	1 25 1
67-5360	Decal - Warning	5 6 1	71-6810	Disc - Plastic	1 26 1
67-5360	Decal - Warning, Covers	7 16 1	71-6820	Cap - Retaining	1 11 1
67-5370	Decal - Caution	3 16 2	71-6830	Hub Asm. - Wheel	1 20 1
67-7310	Decal - Toro	15 1 2	71-6840	Cap - Hub	4 16 2
68-8060	Drive Line Asm.	7 1 1	71-6850	Housing - Bearing	4 13 2
70-9220	Bearing	9 33 6	71-6860	Shaft - Axle	4 9 2
70-9240	Bearing	3 5 2	71-6890	Hitch W.A.	1 4 1
70-9240	Bearing	3 22 4	71-6900	Guide - Cover, Front	4 4 4
70-9260	Block - Outer, 2-Tine	11 2 6	71-6910	Extension Asm. - Stand	3 2 1
70-9270	Block - Inner, 2-Tine	11 4 6	71-6940	Plate - Backing	15 9 6
70-9300	Shaft - Splined	14 14 1	71-6950	Stand Asm. - Hose	3 25 1
70-9310	Shaft - Splined	14 15 1	71-6980	Hose - Hydraulic	3 32 1
70-9330	Bearing	9 46 12	71-6990	Latch (Complete)	15 8 4
70-9340	Seal - Oil	9 45 12	71-6990	Latch - Draw, Flexible	4 5 4
70-9350	Seal - Oil	9 34 6	71-6990	Latch - Draw, Flexible	7 26 4
70-9380	Block - Outer, 6-Tine	10 2 6	71-7010	Coupler - Hitch	1 31 1
70-9390	Block - Bridging, 6-Tine	10 1 6	71-7020	Adapter Asm. - Hitch	1 2 1
70-9400	Block, Inner, 6-Tine	10 7 12	71-7060	Coupler - Quick	3 36 1
70-9410	Block - Bridging, 2-Tine	11 1 6	71-7070	Ball - Hitch	1 32 1
70-9420	Arm - Tine	9 10 6	71-7100	Pin - Roll	9 30 12
70-9430	Plate - 2 Tine	13 * 3	71-7110	Stud - .50 x 130mm	11 5 24
70-9440	Plate - 6 Tine	13 7 3	71-7120	Stud - .50 x 150mm	10 8 24
70-9450	Spring - Compression	13 13 6	71-7120	Stud - .50 x 150mm	12 8 24
70-9460	Nut - Castle	9 9 6	71-7130	Bushing	13 16 6
70-9460	Nut - Castle	4 15 2	71-7150	Plate - Upright, Gearbox	7 4 2
70-9520	Washer - Flat	4 14 2	71-7180	Cover - Dust	7 33 6
70-9550	Bolt - Connecting	9 27 6	71-7200	Gear - 20 Tooth	5 2 1
70-9570	Spacer - Outer	9 7 6	71-7210	Shaft - L.H.	13 21 3
70-9580	Spacer - Inner	9 2 6	71-7220	Shaft - R.H.	13 9 3
70-9620	Tube - Shield	14 13 1	71-7230	Ring - Clamp, Top	13 19 6
70-9670	Cover - Gearbox	5 7 1	71-7240	Ring - Clamp, Bottom	13 12 6
70-9680	Seal - Oil	5 28 1	71-7250	Roller Assembly	13 24 3
70-9690	Shaft - Intermediate	5 4 1	71-7270	Plate - Backing	13 8 6
70-9710	Nut - Hex	5 18 2	71-7280	Shaft	13 23 3
70-9720	Nut - Jam	5 17 2	71-7290	Nut - Thin	13 2 6
71-0940	Tine - Tubular	11 3 12	71-7300	Gear - 30 Tooth	5 1 1
71-6490	Seal - Oil	5 19 2	71-7310	Gear - 31 Tooth	5 * 1
71-6510	Lift Unit Asm.	3 10 1	71-7320	Gear - 32 Tooth	5 * 1
71-6520	Pin - Location, Bottom	4 24 2	71-7330	Gear - 33 Tooth	5 * 1
71-6530	Pin - Mount, Lift Arm	7 35 4	71-7340	Gear - 34 Tooth	5 * 1
71-6540	Pin - Mount, Front	4 25 1	71-7350	Gear - 35 Tooth	5 * 2
71-6550	Pin - Mount, Rear	4 27 1	71-7360	Gear - 36 Tooth	5 * 1
71-6560	Cylinder - Hydraulic	4 26 1	71-7370	Gear - 37 Tooth	5 * 1
71-6570	Shaft - Corer	5 3 1	71-7380	Gear - 38 Tooth	5 * 1
71-6590	Lift Arm - Top	3 6 2	71-7390	Gear - 39 Tooth	5 * 1
71-6600	Lift Arm - Bottom, LH	3 12 1	71-7400	Gear - 40 Tooth	5 * 1
71-6610	Gasket - Cover	5 15 1	71-7450	Curtain - Lower	7 32 2
71-6620	Pin - Location, Top	4 1 2	71-7460	Strap - Securing, Curtain	7 31 2
71-6630	Bearing	8 4 4	71-7470	Adjuster - L.H.	7 23 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
71-7480	Adjuster - R.H.	7 * 1	84-5970	Cover - Front, Aerator	15 11 1
71-7490	Hose Assembly	4 28 1	84-5980	Cover - Coring Head	15 2 1
71-7510	Pad - Absorber, Shock	3 18 2	84-6280	Yoke Assembly	2 29 1
71-7530	Grommet	3 14 2	84-6290	Fitting - Grease	2 24 1
72-3800	Breather	5 8 1	84-6300	Yoke - Double	2 4 1
72-3810	Bearing	9 3 12	84-6310	Kit - Cross & Bearing	2 5 2
72-3820	Bearing	5 27 2	84-6330	Tube - Shield, Inner	2 10 1
72-3830	Seal - Oil	13 5 6	84-6340	Asm.. - Bearing & Cone	2 25 1
72-3840	Seal - Oil	9 1 12	84-6350	Shield - 3 Rib	2 6 1
72-7960	Indicator - Oil Level	7 15 1	84-6360	Screw	2 23 8
72-7970	Spacer - Lift Arm, Top	3 7 2	84-6370	Fitting - Grease	2 21 1
72-7980	Strap	7 13 6	84-6380	Inner Shaft & Yoke	2 22 1
72-7990	Cross & Bearing Kit	7 40 1	84-6390	Outer Shaft & Yoke	2 20 1
72-8010	Nut - Hex.	1 34 1	86-9720	Tine - Tubular	10 4 36
72-8020	Block - Clamp, Top	13 10 6	92-1580	Nylon Repair Kit	7 41 1
72-8060	Bushing - Spacer, Long	9 19 6	92-1581	Decal - Safety	7 37 1
72-8070	Bearing	9 21 12	92-1582	Decal - Safety	7 38 1
72-8090	Bushing - Spacer, Short	9 26 6	92-2410	Barrel	6 1 1
72-8100	Crank - Bottom	9 42 6	92-2411	Cap - End	6 7 1
74-0720	Tube - Manual	3 39 1	92-2412	Piston	6 3 1
74-2960	Ring - Retaining	8 2 1	92-2413	Rod	6 9 1
74-2990	Shim Kit	8 3 4	92-3000	Flange - Crankshaft	9 43 12
74-3110	Lift Arm - Bottom, RH	3 * 1	92-3001	Flange - Shaft, Drive	9 35 6
74-3200	Seal - Oil	8 1 3	92-3002	Shaft - Idler	9 49 6
76-2920	Stand - Transport	3 15 2	92-3003	Cap - End	9 38 6
76-3630	Gear - Shaft, Driver	9 31 3	92-3004	Coring Frame Asm.	7 21 1
76-3640	Gear - Idler	9 41 6	92-3005	Stud	9 36 150
76-3650	Gear - Crankshaft, Top	9 50 3	92-3006	Nut - Lock	9 52 150
76-3660	Gear - Crankshaft, Bottom	9 47 3	92-3008	Cap - Bearing	5 21 1
76-3710	Coupling - Flange	14 7 2	92-3009	Cap - Bearing	5 29 1
76-3720	Shaft - Splined	14 8 1	92-3010	Housing - Bearing	5 14 1
76-3730	Shaft - Splined	14 4 1	92-3011	Housing - Bearing	5 13 1
76-3740	Coupling - Splined	14 12 2	92-3012	Seal - O-Ring	9 44 12
76-3750	Flange	14 3 2	92-3013	Seal - O-Ring	5 12 4
76-3760	Plate - Mounting, Gearbox	7 3 1	92-3013	Seal - O-Ring	9 32 6
77-3040	Rod - Connecting	9 22 6	92-7900	Tine - Open Center	10 6 36
77-3050	Gearbox - Rear, Bevel	7 2 1	92-7930	Outer Guard	7 43 1
77-3060	Screen - Outer, L.H.	7 10 1	92-7931	Inner Guard	7 42 1
77-3070	Screen - Outer, R.H.	7 7 1	92-7936	Decal - Outer	2 27 1
77-3080	Screen - Inner, L.H.	7 9 1	92-7937	Decal - Inner	2 26 1
77-3090	Screen - Inner, R.H.	7 8 1	92-7941	Tine - Open Center	10 5 36
77-4430	Spacer	8 5 1	92-9941	Lynch Pin & Tie	3 44 1
77-4440	Shaft - Input	8 14 1	92-9948	Crank - Top	9 28 6
77-4450	Gear - 18 Tooth	8 13 2	93-4696	Pin - Snapper	3 23 1
77-4460	Ring - Retaining	8 12 1	93-7734	Reinforced Collar	2 28 1
77-4470	Cover	8 11 1	93-8770	Nut	6 2 1
77-4480	Shaft	8 15 1	94-1762	Rest - Drive Shaft	3 42 1
77-4490	Plug - Oil Level/Filler	8 9 1	94-1775	Kit - Clutch, Cams &	2 ** 4
77-4500	Bolt - Hex. Socket Hd.	8 10 4	94-1778	Frame Asm. - Carrier	3 20 1
77-4520	Screw - Cap Hex. Hd.	4 12 10	94-1779	Gear Case Asm.	5 30 1
77-4560	Bearing	9 40 6	94-3419	Tine - Tubular	12 4 36
77-4660	Kit - Flange	2 * 1	94-5309	Shaft - Tractor	5 26 1
77-4670	Kit - Collar	2 * 1	94-9144	Drive Line (Complete)	2 * 1
77-4720	Cross & Bearing Kit	2 18 1	94-9145	Clutch - Radial Pin	2 12 1
77-4730	Cone - Shield	2 19 1	94-9146	Tube - Shield, Outer	2 8 1
77-4740	Ring - Bearing	2 7 2	95-3103	Block - Outer, 6-Tine	12 2 6
77-4760	Chain - Safety	2 11 2	95-3104	Block - Bridging, 6-Tine	12 1 6
77-4790	Bearing - Support	2 9 1	95-3105	Block - Inner, 6-Tine	12 7 12
77-5320	Tine - Spiker	12 6 36	95-3122	Shield - Drive Line	3 31 1
82-2890	Shield - Rubber	13 14 6	217-60	Rim	1 16 1
82-2900	Gear - 35 Tooth	5 25 1	217-117	Rim	4 20 2
82-3190	Ring - Retaining	9 4 12	231-101	Tire	4 19 2
82-3200	Timing Bar	9 53 1	231-119	Tire	1 15 1
82-3220	Decal	9 54 1	232-27	Stem - Valve	4 22 2
82-9400	Decal - Danger	3 35 1	232-35	Stem - Valve	1 21 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
237-168	O-Ring	9 39 12	3253-3	Washer - Lock	7 27 8
2412-133	R-Clamp	3 38 2	3253-4	Washer - Lock	5 10 8
281-1	Plug - Pipe	8 7 1	3253-4	Washer - Lock	7 11 16
283-71	Pin - Lynch	7 36 4	3253-7	Washer - Lock	14 5 12
283-72	Pin - Lynch	5 31 2	3253-7	Washer - Lock	1 8 4
285-21	Plug - Pipe	7 22 1	3253-7	Washer - Lock	7 18 4
285-21	Plug - Pipe	5 24 1	3253-11	Washer - Lock	1 33 1
302-55	Fitting - Grease	9 5 6	3253-21	Washer - Lock	4 2 4
302-55	Fitting - Grease	3 8 3	3256-2	Washer - Flat	7 30 10
302-55	Fitting - Grease	14 11 4	3256-2	Washer - Flat	3 46 1
302-55	Fitting - Grease	4 17 2	3256-22	Washer - Flat	15 4 4
302-55	Fitting - Grease	3 21 2	3256-62	Washer - Flat	9 23 6
302-55	Fitting - Grease	7 39 6	3256-69	Washer - Flat	7 24 4
302-61	Fitting - Grease	13 1 6	3256-74	Washer - Flat	3 37 2
302-61	Fitting - Grease	3 11 2	3272-23	Pin - Cotter	4 29 2
302-61	Fitting - Grease	1 13 1	3274-4	Screw - Cap Hex. Socket	9 29 72
321-2	Screw - Cap Hex. Hd.	7 28 8	3274-89	Screw - Cap Hex. Socket	14 6 12
321-4	Screw - Cap Hex. Hd.	15 7 12	3289-17	Screw - HSFH	13 6 12
321-9	Screw - Cap Hex. Hd.	15 5 4	3296-23	Nut - Lock	1 1 6
322-3	Screw - Cap Hex. Hd.	7 12 16	3296-23	Nut - Lock	7 5 2
322-5	Screw - Cap Hex. Hd.	5 9 8	3296-23	Nut - Lock	9 12 24
322-5	Screw - Cap Hex. Hd.	7 29 10	3296-23	Nut - Lock	3 34 4
322-5	Screw - Cap Hex. Hd.	3 45 1	3296-23	Nut - Lock	3 41 1
322-6	Screw - Cap Hex. Hd.	3 24 4	3296-29	Nut - Lock	14 9 2
322-12	Screw - Cap Hex. Hd.	14 10 2	3296-29	Nut - Lock	3 28 4
323-6	Screw - Cap Hex. Hd.	4 3 4	3296-29	Nut - Lock	3 43 1
323-6	Screw - Cap Hex. Hd.	3 33 3	3296-39	Nut - Lock	3 1 5
323-7	Screw - Cap Hex. Hd.	13 18 6	3296-39	Nut - Lock	7 34 6
323-8	Screw - Cap Hex. Hd.	5 16 20	3296-39	Nut - Lock	13 20 12
323-14	Screw - Cap Hex. Hd.	4 23 4	3296-56	Nut - Lock	15 10 16
323-15	Screw - Cap Hex. Hd.	3 19 2	3296-61	Nut - Lock	4 8 8
323-35	Screw - Cap Hex. Hd.	13 15 6	3296-70	Nut - Hex	3 3 2
325-5	Screw - Cap Hex. Hd.	14 1 2	3296-70	Nut - Hex.	1 22 1
325-5	Screw - Cap Hex. Hd.	1 7 4	3296-70	Nut - Lock	9 11 6
325-6	Screw - Cap Hex. Hd.	1 10 1	3296-70	Nut - Lock	9 24 6
325-8	Screw - Cap Hex. Hd.	1 3 4	32108-20	Screw - Countersink	3 17 4
325-8	Screw - Cap Hex. Hd.	7 14 2	32120-8	Ring - Retaining	3 4 4
325-12	Screw - Cap Hex. Hd.	3 40 1	32120-31	Ring - Snap	8 6 3
325-17	Screw - Cap Hex. Hd.	1 30 2	32120-62	Ring - Retaining	9 48 12
327-4	Screw - Cap, Hex. Hd.	7 25 4	32121-3	Pin - Roll	1 9 1
327-14	Screw - Cap Hex. Hd.	1 5 2	32121-15	Pin - Roll	13 17 6
327-14	Screw - Cap Hex. Hd.	4 7 8	32121-34	Pin - Roll	9 8 6
3212-5	Bolt	1 12 4	32121-34	Pin - Roll	4 18 2
3212-6	Screw - Cap Hex. Hd.	13 11 12	32151-88	Ring - Retaining	9 20 24
3217-11	Nut - Hex.	1 6 2	354-33	Fitting Assembly - Bulkhead	3 27 1
3234-13	Screw - Flange Hd.	4 6 8			

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Fairway Aerator has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Fairway Aerator, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Fairway Aerator.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hitch & Front Wheel Assembly	1	Corer Gear Case & Stomper Arm Assembly	9
Drive Line Assembly	2	6–Tine Blocks & .75 Diameter Tine Selection	10
Chassis Assembly	3	2–Tine Blocks & Tine Selection	11
Rear Wheel Assembly	4	6–Tine Blocks & Tine Selection	12
Front Gear Box Assembly	5	Roller & Finger Plate Assembly	13
Hydraulic Cylinder Assembly No. 71–6560	6	Drive Line Assembly	14
Corer & Shield Assembly	7	Aerator & Coring Head Covers	15
Gear Box Assembly No. 77–3050	8	Numerical Parts Index	16–18

