



Count on it.

Form No. 3374-147 Rev A

Parts Catalog

P40 Vibratory Plow

Pro Sneak 360 Vibratory Plow

Model No. 25402—Serial No. 313000001 and Up

Model No. 25402E—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Plow Frame, Blade Mounting and Transmission Assembly 4

Gear Case Assembly No. AUH530204..... 6

Plow Cylinder Assembly 8

Plow Pivot and Quick Attach Slide Assembly..... 10

Plow Frame, Blade Mounting and Transmission Assembly

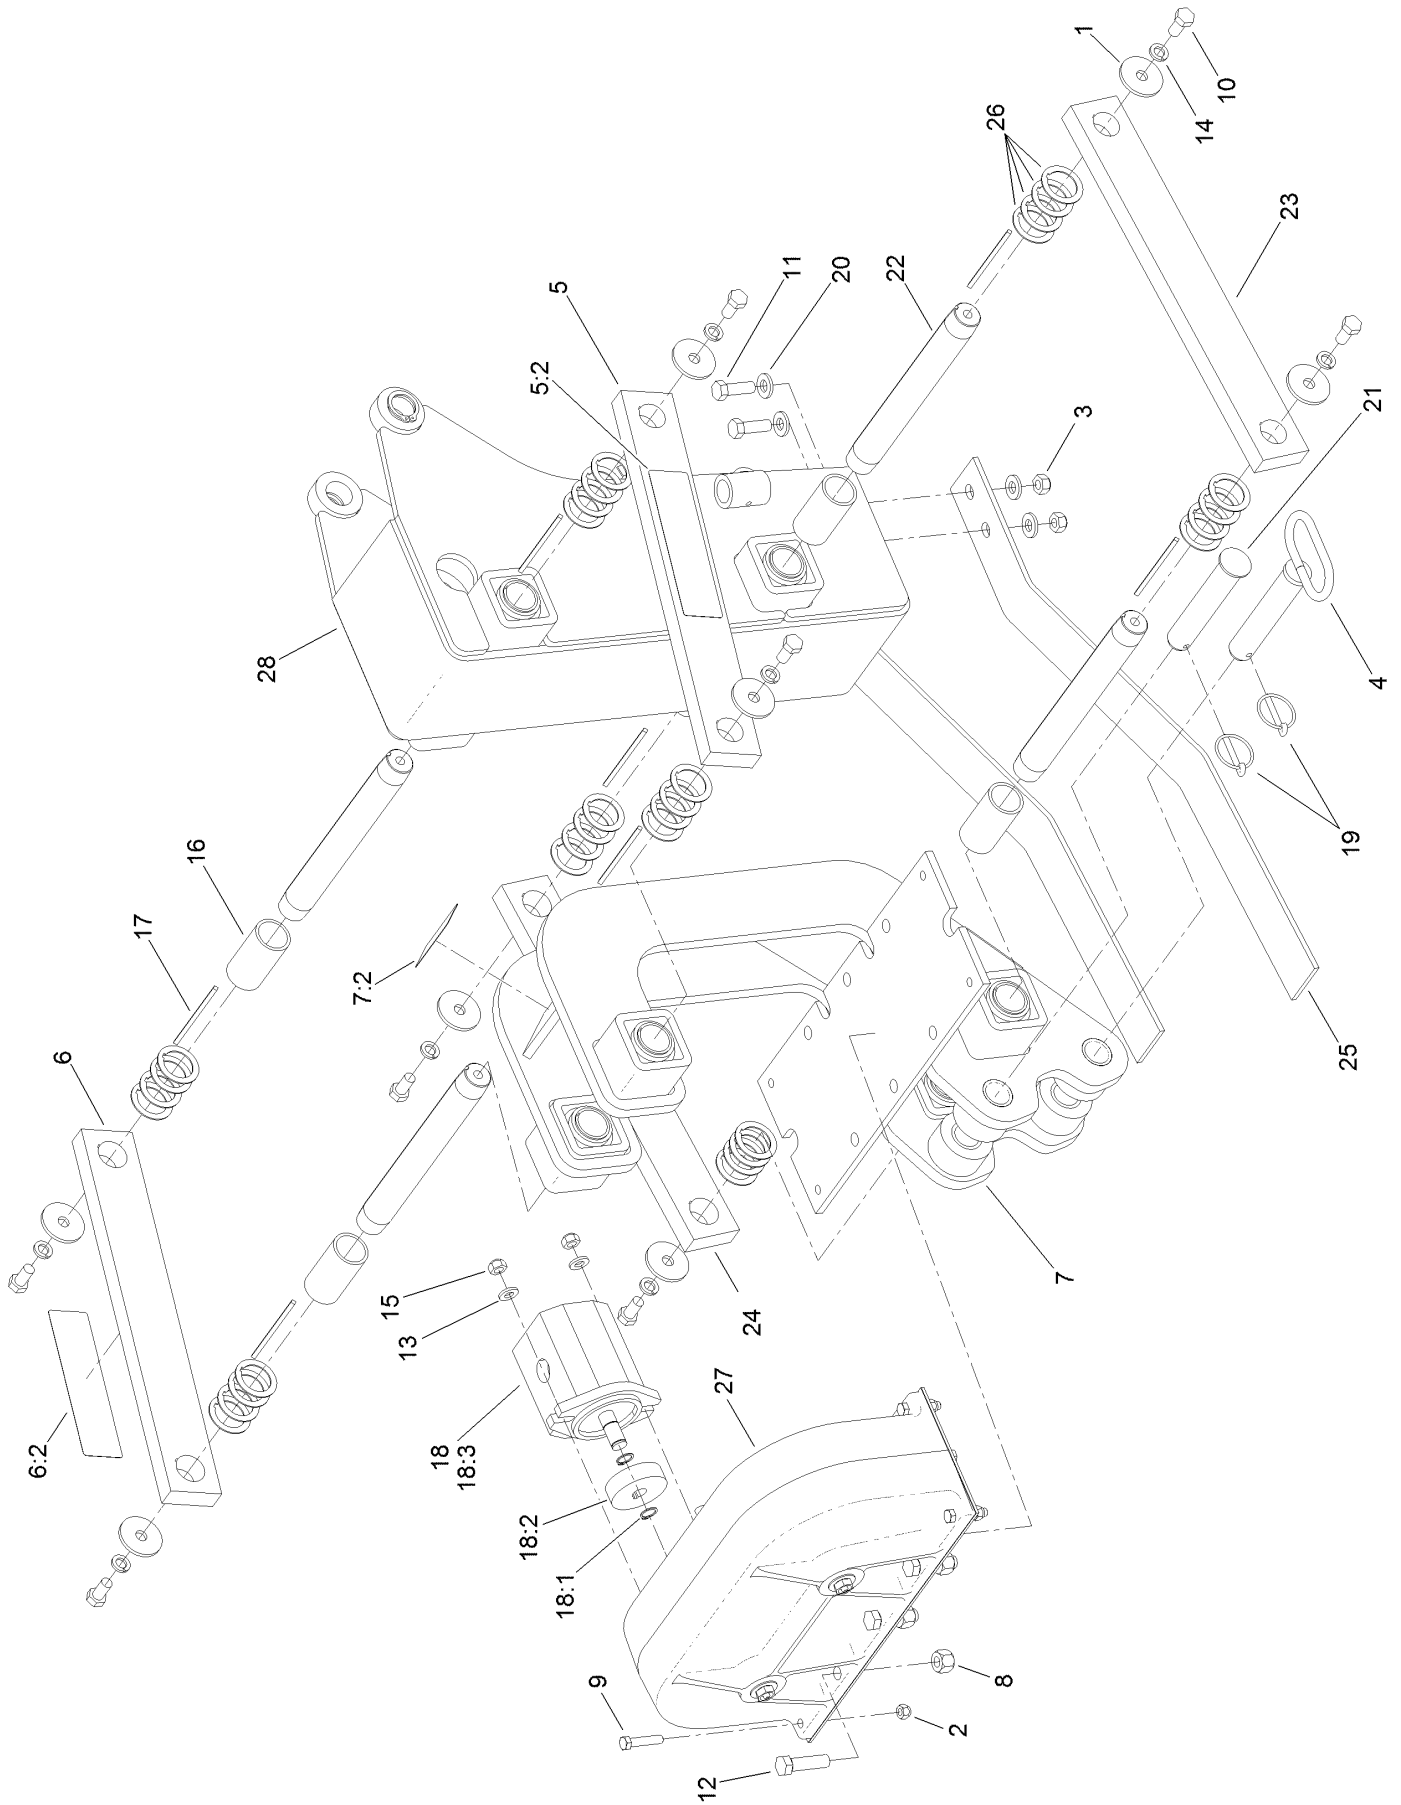


Plow Frame, Blade Mounting and Transmission Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	75-7730	8	Washer-Thrust	14	3253-7	8	Washer-Lock
2	97-1204	4	Nut-Hex	15	32152-9	2	Nut-Hex
3	97-1206	4	Locknut	16	AU116372A1-03	4	Tube-Spacer
4	125-8528	1	Pin	17	AU116373A1	8	Key-Square
5	127-1039	1	RH Upper Bar And Decal ASM	18		1	HYD Gear Motor ASM ●
5:2	125-6684	1	Decal-Danger, Plow	18:1	32151-79	2	Ring-Retaining
6	127-1040	1	LH Upper Bar And Decal ASM	18:2	AUH113282	1	Gear-Mounting, Drive
6:2	125-6684	1	Decal-Danger, Plow	18:3	AU109170A1	1	Motor-Gear, Plow
7	127-1041	1	Mounting Blade And Decal ASM	19	AUA30338	2	Pin-Klik
7:2	125-6671	1	Decal-Danger, Underground Hazard	20	AUH274894	8	Washer
8	AU232-4119	6	Nut	21	AUH393843	1	Pin-Mounting, Blade
9	323-52	4	Screw-HH	22	AUH421867	4	Shaft-Mounting, Plow Arm
10	325-4	8	Screw-HH	23	AUH435952-03	1	Arm-Plow, Lower (RH)
11	325-6	4	Screw-HH	24	AUH435953-03	1	Arm-Plow, Lower (LH)
12	AU426-932	6	Bolt	25	AUH436096-03	2	Spring-Shoe
13	87-7480	2	Washer	26	AUH436118	32	Shim-Arm
				27	AUH530204	1	Gear Case ASM
				28	AUH673331	1	Frame-Lift - Plow

● Not serviced separately

Gear Case Assembly No. AUH530204

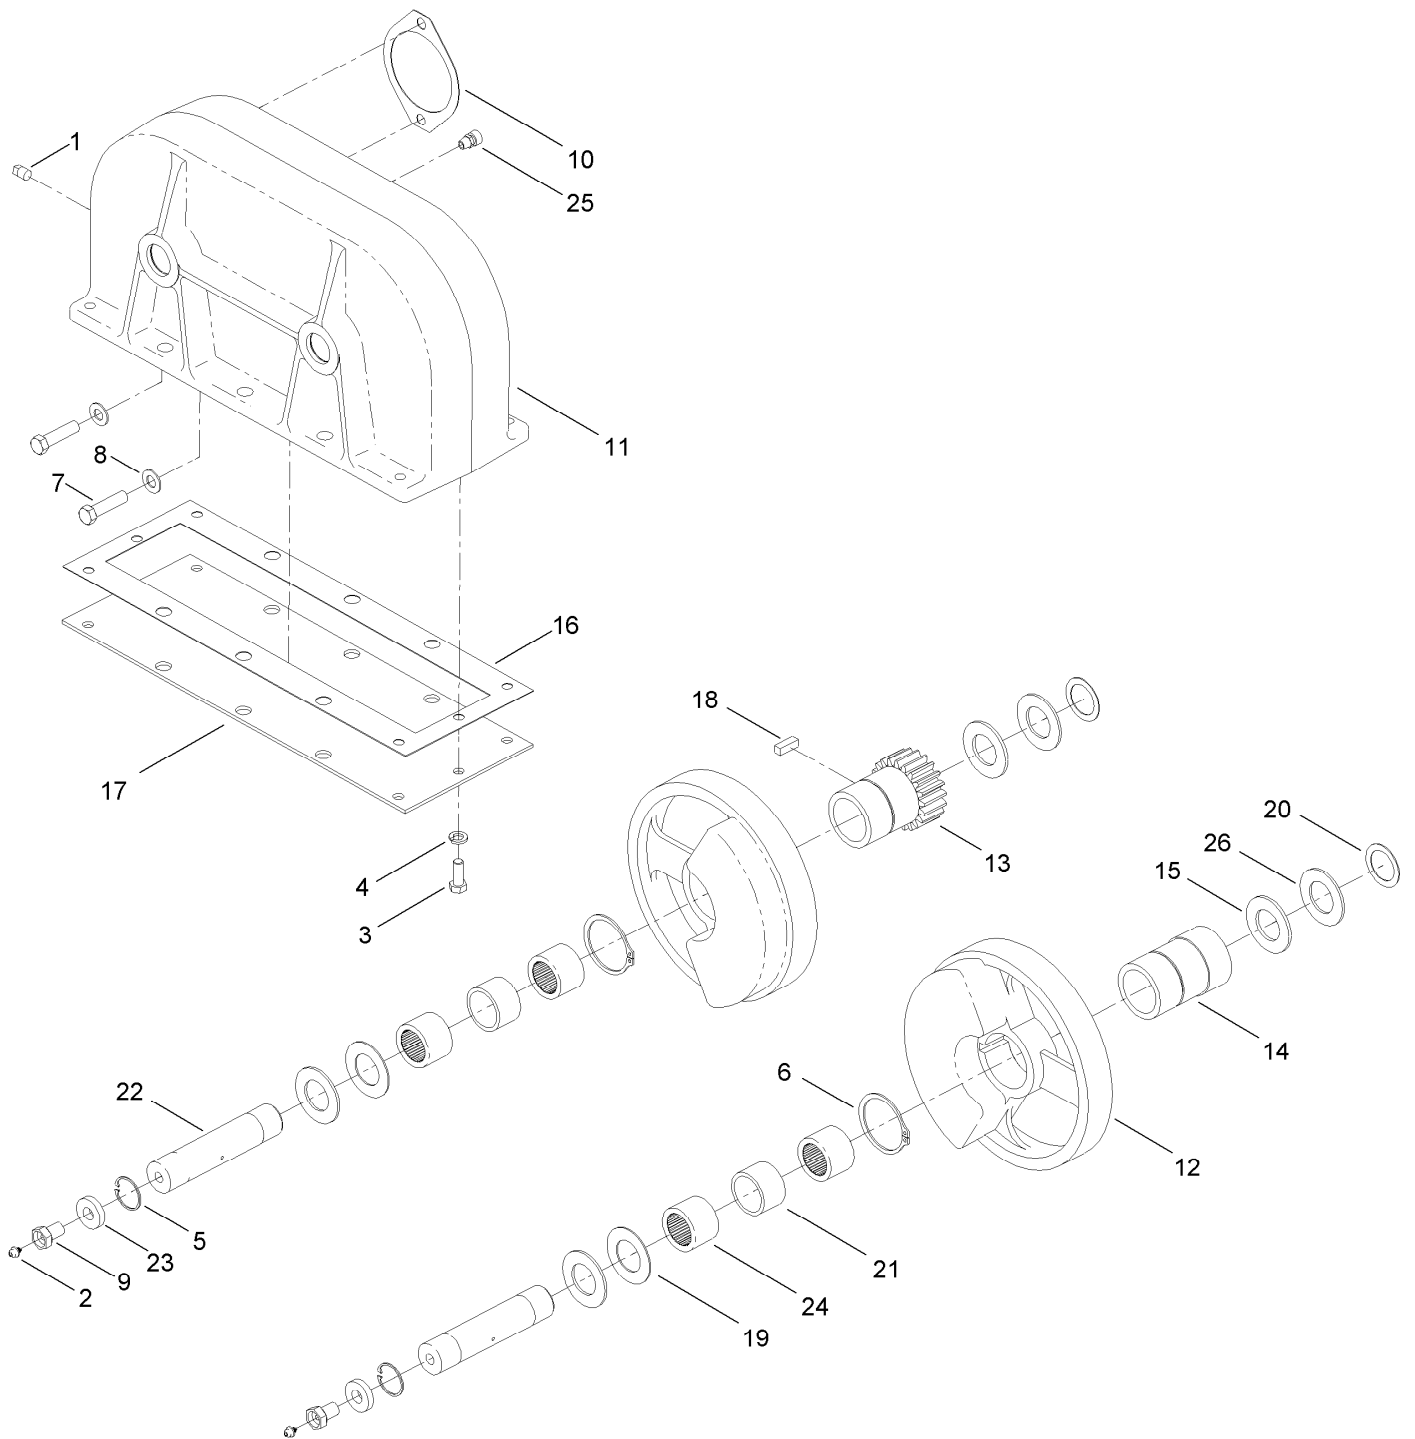


Gear Case Assembly No. AUH530204 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	281-7	1	Cap-Pipe
2	302-63	2	Zerk
3	323-6	2	Screw-HH
4	3253-21	2	Washer-Lock
5	32151-51	2	Ring-Retaining
6	AU103-11225	2	Ring-Retaining
7	AU113-372	2	Screw-HH
8	AU495-11047	2	Washer-Flat
9	AUD136218	2	Adapter-Locating
10	AUH032375	1	Gasket
11	AUH113209-03	1	Case-Gear
12	AUH113217	2	Gear
13	AUH113225	1	Hub-Drive, Bearing

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
14	AUH113233	1	Hub-Bearing
15	AUH113241	2	Washer-10 Gauge
16	AUH113266	1	Gasket-Gearbox
17	AUH113274-03	1	Plate-Cover
18	AUH120550	1	Key-Square
19	AUH159160	2	Washer-Thrust
20	AUH357517	2	Washer
21	AUH369496	2	Spacer
22	AUH436788	2	Pin-Bearing
23	AUH436789	2	Washer-Flat, Stepped
24	AUH748210	4	Bearing-Pitch Line
25	AUL33264	1	Vent-Air
26	AUH126201	4	Washer-Thrust

Plow Cylinder Assembly

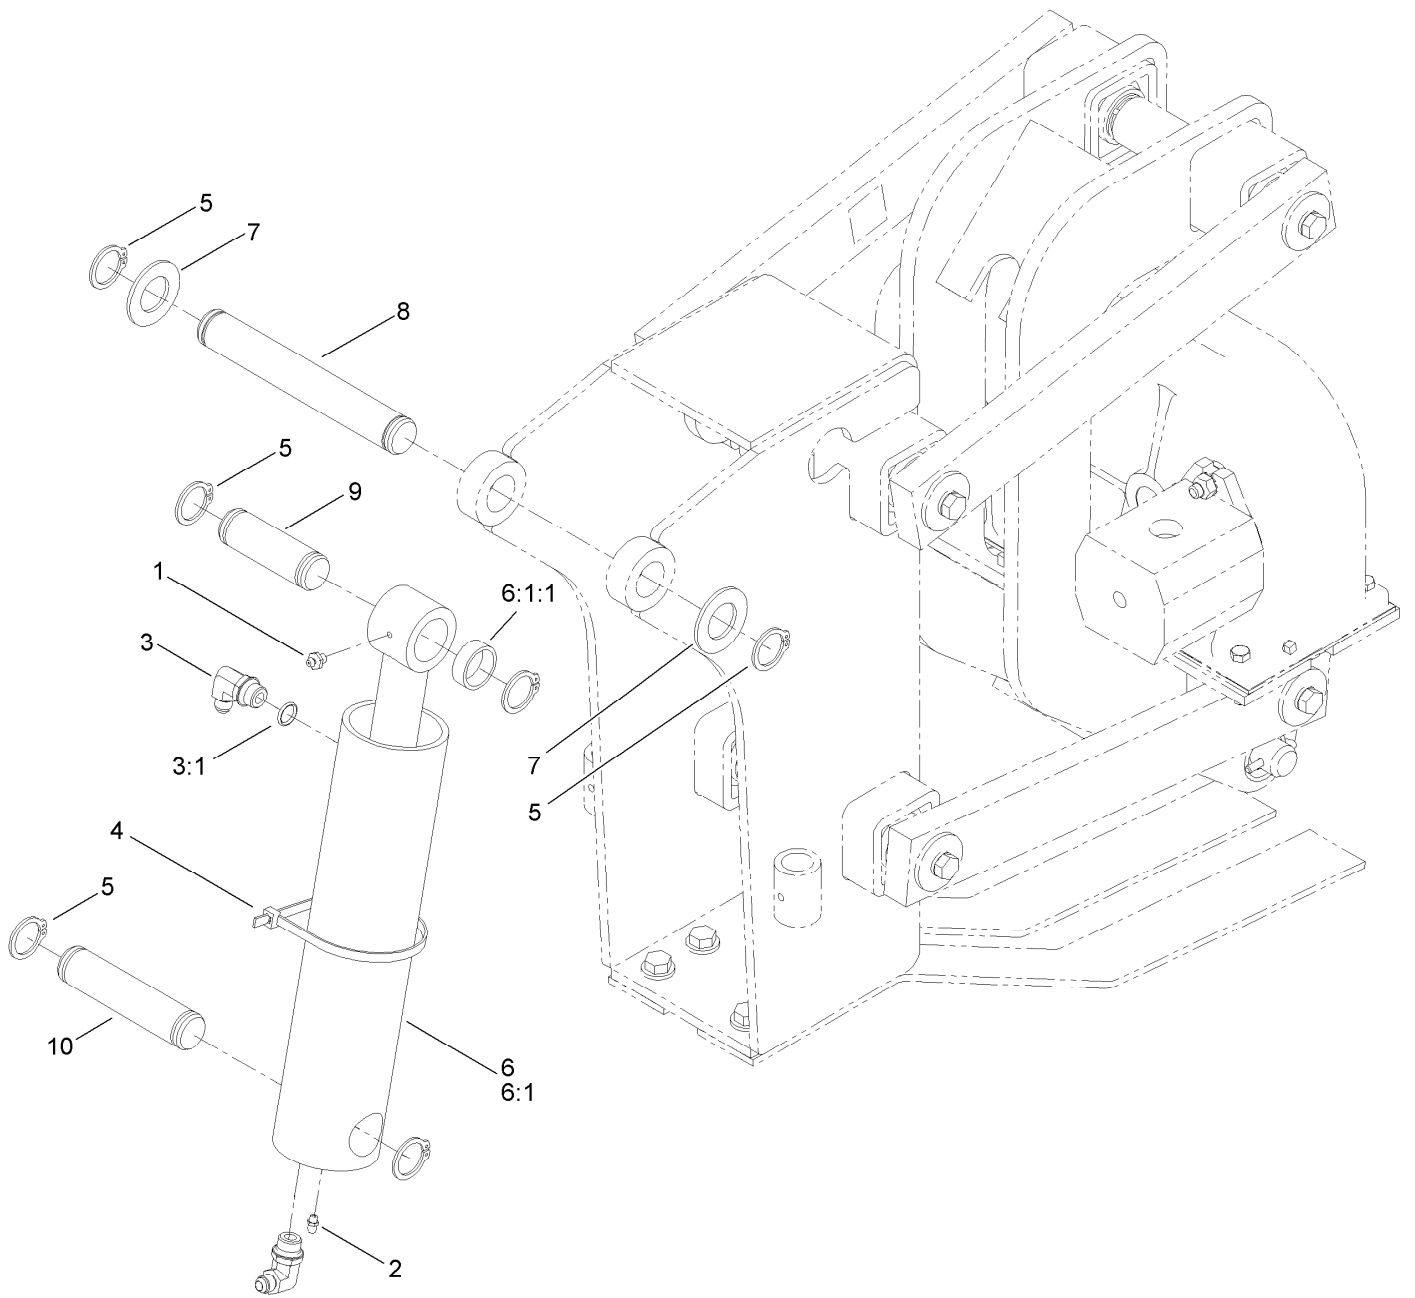


Plow Cylinder Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	302-2	1	Fitting-Grease	6:1		1	Cylinder-Hydraulic ●
2	302-57	1	Fitting-Grease	6:1:1	AU129539	4	Bushing, Press Fit
3	353-537	2	Fitting-Elbow, 90 DEG	7	AUH113241	2	Washer-10 Gauge
3:1	237-79	1	O-Ring	8	AUH382457	1	Pin-Lift
4	3334-945	1	Tie-Cable	9	AUH434556	1	Pin-Clevis
5	32151-77	6	Ring-Retaining, External	10	AUH434557	1	Pin-Clevis
6	AU129434-03	1	HYD Cylinder ASM				

● Not serviced separately

Plow Pivot and Quick Attach Slide Assembly

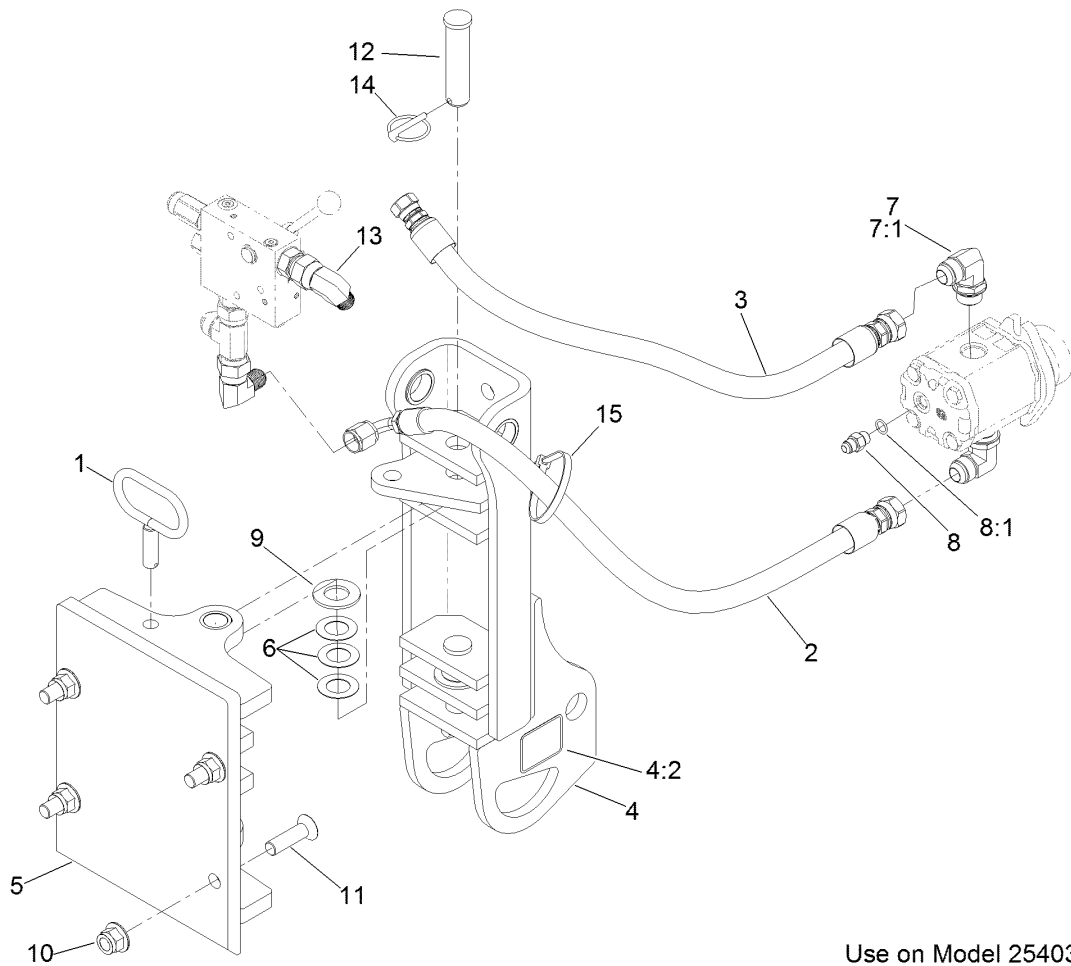

Use on Model 25403 / Prosneak 365

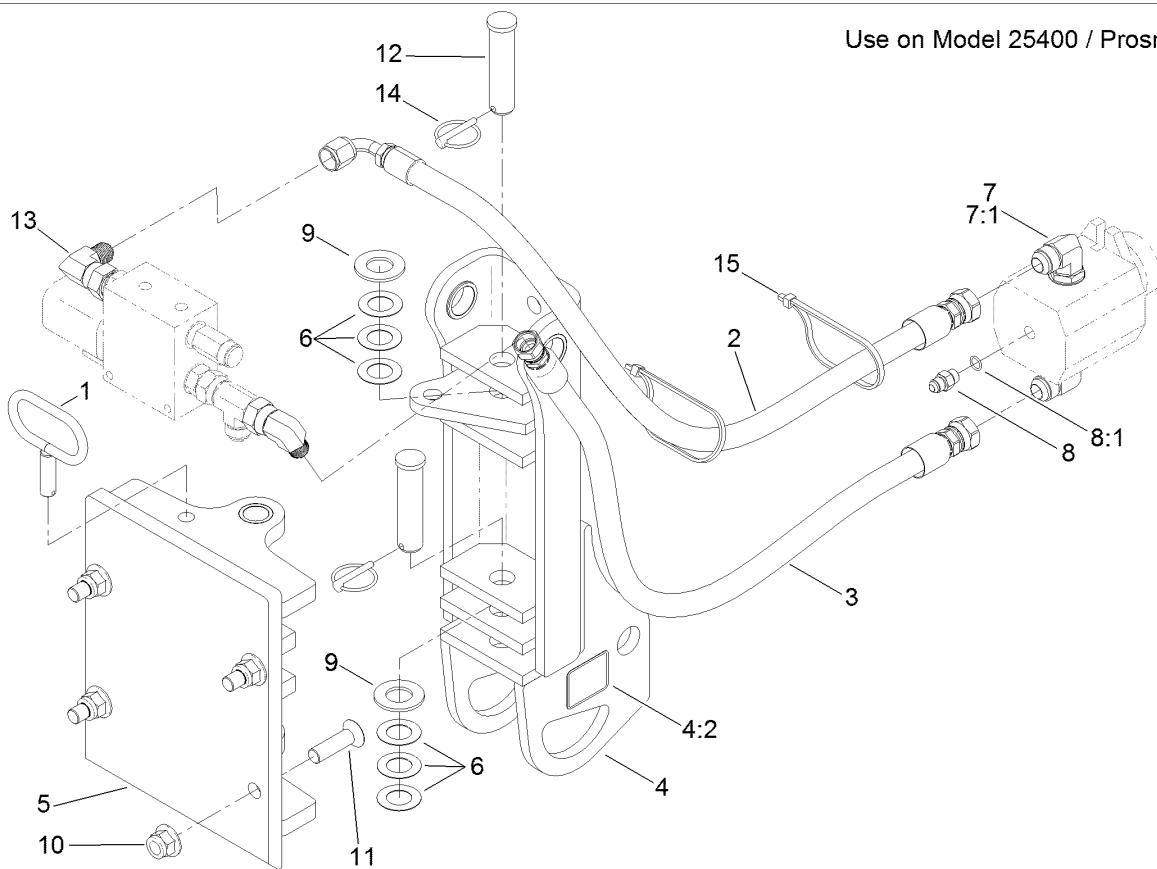

Use on Model 25400 / Prosneak 360

Plow Pivot and Quick Attach Slide Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-8535	1	Lock-Swing
2	127-1019	1	Hose ASM
3	127-1020	1	Hose ASM
4	127-1044	1	Pivot ASM
4:2	125-6694	2	Decal-Tie Down
5	AU107916-03	1	Slide-Quick Attach
6	AU195-81015	6	Washer-Flat
7	353-369	2	Fitting-Elbow, 90 DEG
7:1	237-81	1	O-Ring

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	353-384	1	Fitting-Straight
8:1	237-42	1	O-Ring
9	AU495-11106	2	Washer-Flat
10	AU100529	4	Nut-HHF
11	AU107931	4	Screw-HSFH
12	AU113192A1	2	Pin-Pivot
13	AU218-5377	2	Fitting-Elbow, 90
14	AUA30338	2	Pin-Klik
15	3334-945	2	Tie-Cable



Count on it.