




MODEL NO. 03853-70300 & UP
MODEL NO. 03854-70133 & UP
MODEL NO. 03856-70272 & UP

PARTS CATALOG

5/7/11 BLADE REELS REELMASTER® 6500D/6700D

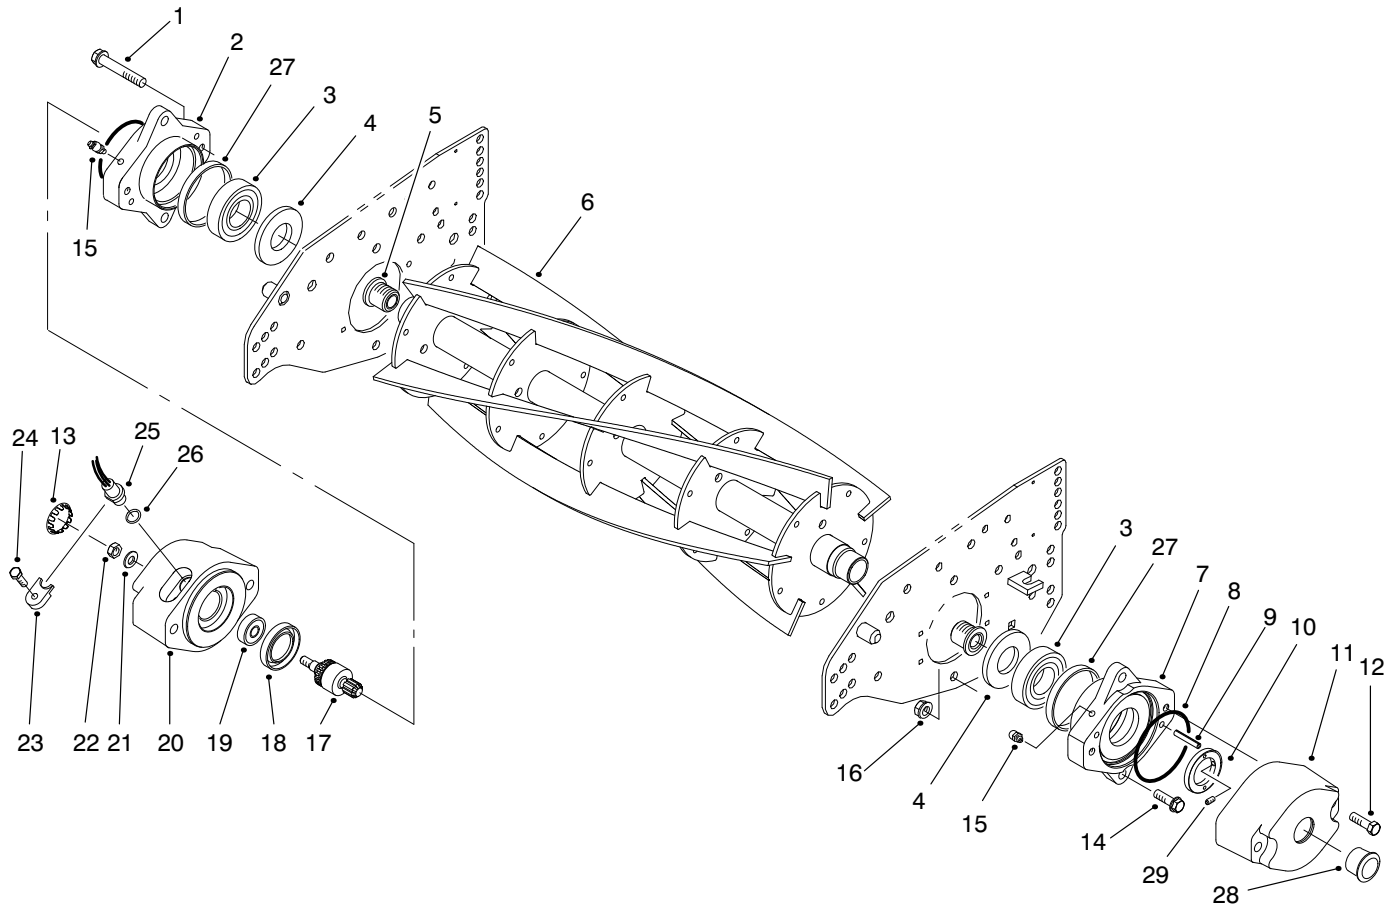


T-1979-2

REEL & BEARING HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	33105-060	Screw - HHF	2
2	93-9794	Housing - Bearing, RH (Incl. Ref. #27)	1
3	93-2489	Bearing	2
4	94-8908	Seal - Grease	2
5	94-2732	Insert - Threaded RH	1
*	94-2733	Insert - Threaded LH	1
6	94-4337	5 Blade Reel Assembly Model 03854 (Incl. Ref. #5)	1
*	95-2770	7 Blade Reel Assembly Model 03853 (Incl. Ref. #5)	1
*	94-4338	11 Blade Reel Assembly Model 03856 (Incl. Ref. #5)	1

Ref. No.	Part No.	Description	No. Used
7	93-9795	Housing - Bearing, LH (Incl. Ref. #27)	1
8	93-9783	O-Ring (Shipped with Traction Unit)	10
9	32121-69	Pin - Roll	4
10	95-2793	Nut - Bearing Adj.	1
11	94-4347	Weight - End (Shipped with Traction Unit)	3
12	93-7522	Screw - HH	2
13	93-3094	Plug - Cap	1
14	33105-030	Screw - HHF	4
15	302-11	Fitting - Grease 45°	2
16	33025-00	Nut - Lock	4
17	93-3085	Asm. - Shaft, Magnet	1
18	253-165	Seal - Outer	1
19	93-2956	Bearing	1
20	93-3080	Weight - Housing, End	1

*Not Illustrated

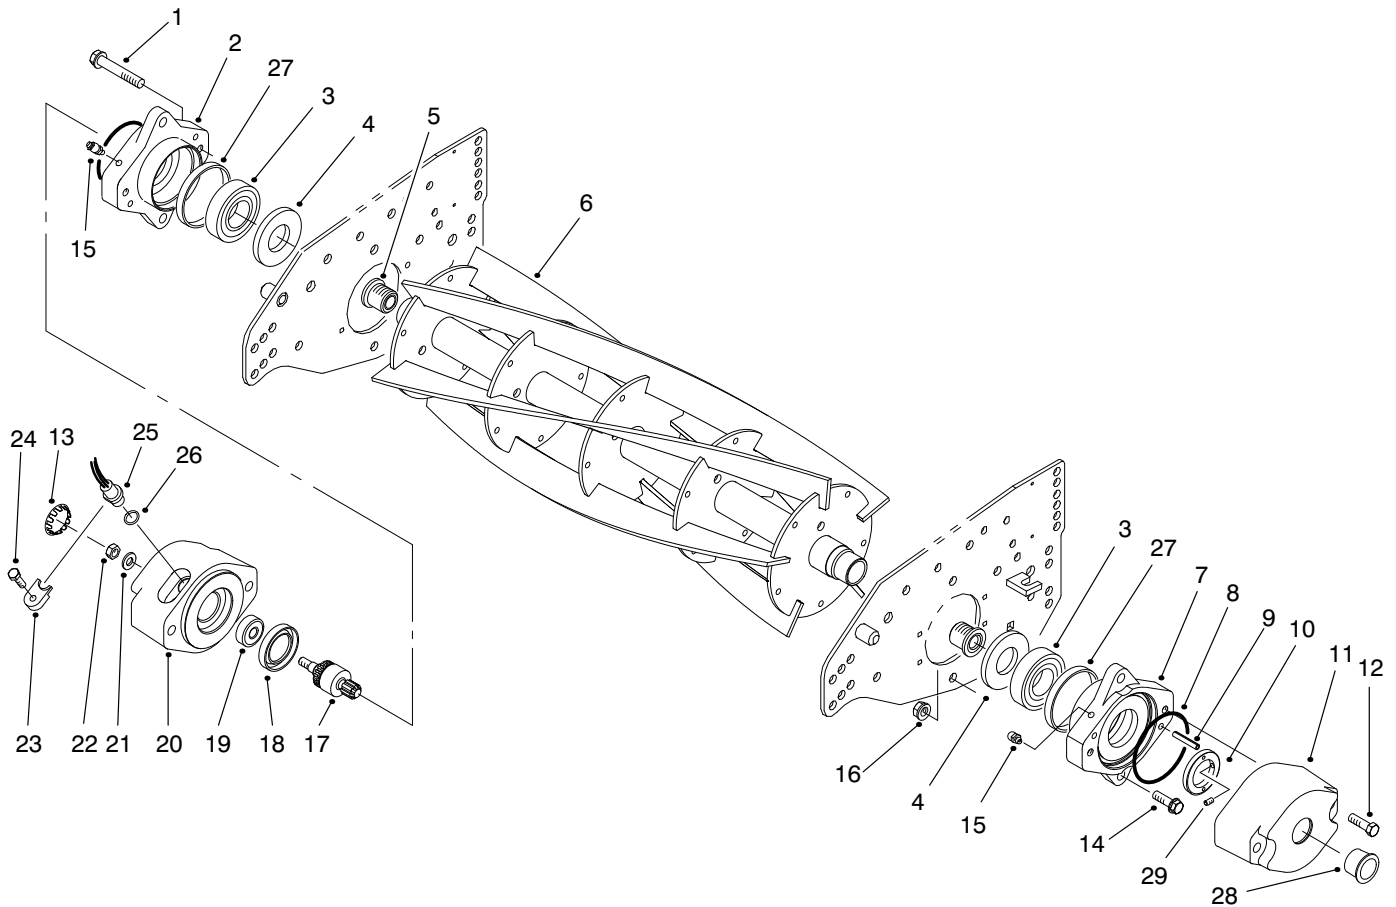


T-1979-2

REEL & BEARING HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
21	3256-23	Washer - Flat	1
22	33024-00	Nut - Lock	1
23	93-3088	Clamp (Shipped with Traction Unit)	2
24	33103-020	Screw - HH (Shipped with Traction Unit)	2
25	94-6980	Sensor - Speed (Shipped with Traction Unit)	2


Ref. No.	Part No.	Description	No. Used
26	237-30	O-Ring (Shipped with Traction Unit)	2
27	93-2922	Ring - Bearing	2
28	93-8717	Plug	1
29	3245-42	Screw - Set	1

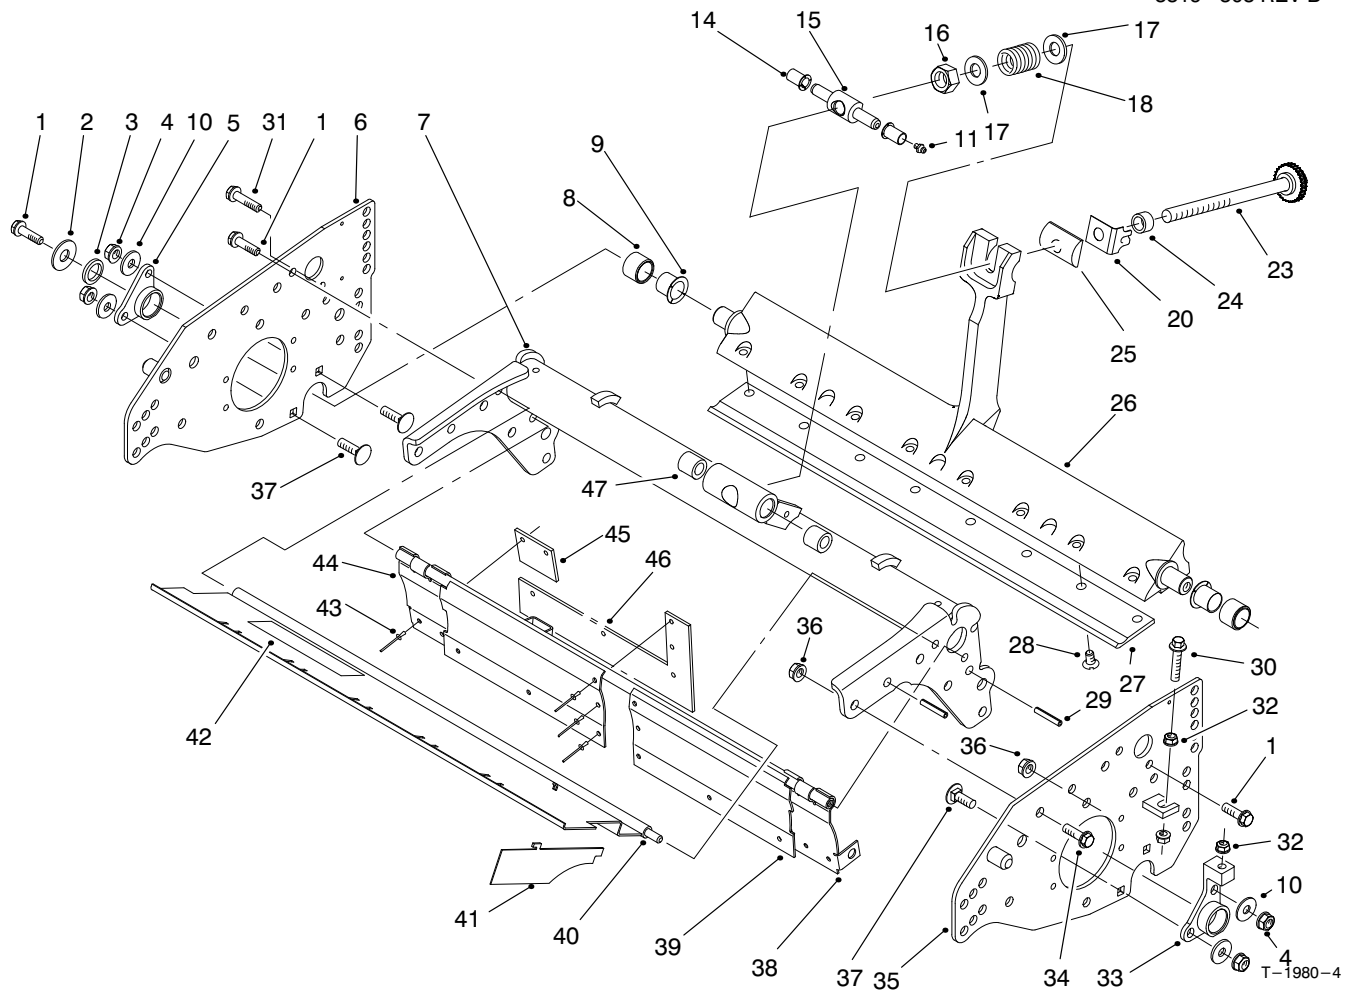

FRAME & BEDBAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33104-020	Screw - HHF	3	28	57-4910	Screw - Special	8
2	3256-82	Washer	1	29	32121-36	Pin - Roll	4
3	93-7510	Ring - Quad	1	30	94-3489	Screw	1
4	33024-00	Nut - Lock	4	31	33104-040	Screw - HHF	1
5	93-2513	Pivot Hub RH	1	32	33004-00	Nut - Flange	3
6	93-2981	Sideplate - RH	1	33	93-2512	Pivot Hub LH	1
7	93-9769	Reel Frame	1	34	33105-025	Screw - HHF	8
8	93-7501	Bushing Assembly	2	35	93-2982	Sideplate - LH	1
9	93-7502	Bushing - Flange	2	36	33025-00	Nut - Lock	12
10	33094-00	Washer - Flat	4	37	94-2738	Screw - Carriage	4
11	302-18	Fitting - Grease, Str.	1	38	93-3008	Shield - LT	1
14	52-2890	Bushing - Plastic	2	39	93-2996	Rear Grass Shield	1
15	57-5260	Pivot Screw Adj.	1	40	94-8942	Asm. - Grass Shield (Incl. Ref. #42)	1
16	3296-62	Nut - Lock	1	41	93-9759	Deflector - Grass Shield	5
17	29-8910	Washer	2	42	67-7960	Decal - Danger, Reel	1
18	95-0772	Spring - Compression	1	42	93-6688	Decal - Danger (Europe)	1
20	93-9767	Arm - Spring	1	42	94-4584	Decal - Danger (Japanese)	1
23	95-2762	Bedbar Adjuster Assy.	1	43	700382	Rivet	14
24	93-2959	Spacer - Adjuster	1	44	93-2998	Shield - RT	1
25	93-2892	Pivot - Bedbar, Man. Adj.	1	45	93-3012	Flap - Side	2
26	95-3458	Bedbar	1	46	93-3011	Flap - Bottom	2
27	93-9774	Bedknife - 2.235" (.88 cm)	1	47	62-5510	Bushing	2
*	94-8936	Bedknife - 2.535" (1.00 cm) (Optional)	1				

*Not Illustrated

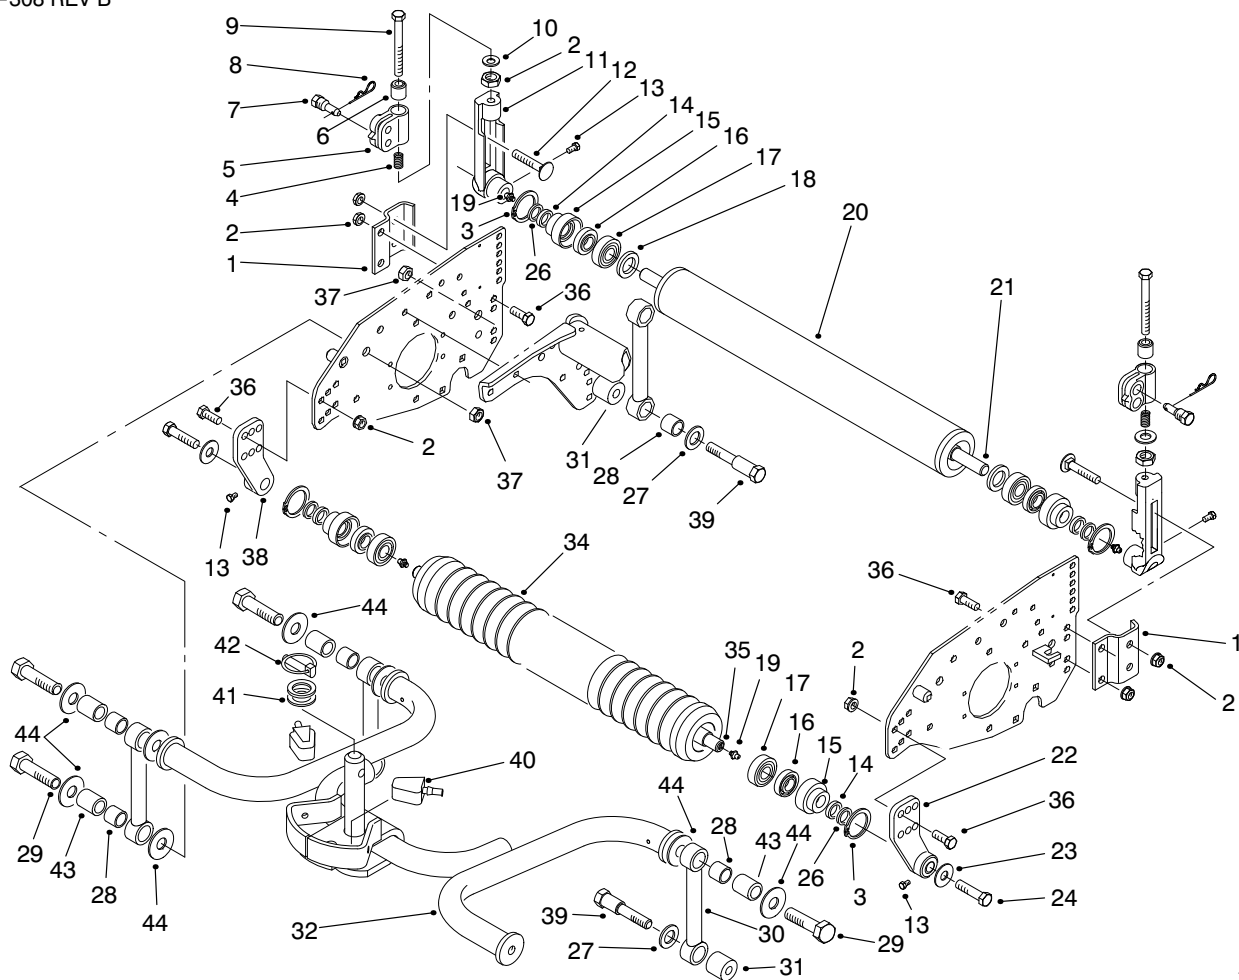

T-1981-1

ROLLERS & 4 BAR FRAME ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	61-0910	Bracket - Angle	2
2	33025-00	Nut - Lock	12
3	32120-62	Snap Ring	4
4	93-2921	Spring - Compression HOC	2
5	93-2902	Support - HOC, Rear	2
6	94-4344	Spacer	2
7	93-2906	Pin - HOC	2
8	3290-467	Pin - Cotter, Hair	2
9	93-7500	Screw - HH	2
10	93-7509	Washer - Special	2
11	93-2904	Bracket - HOC, Rear	2
12	33125-030	Screw - Carriage	2
13	93-9757	Screw - HH	4
14	253-70	Seal - Oil	4
15	93-1252	Seal - Outer	4
16	93-1251	Seal - Inner	4
17	109966	Bearing - Ball	4
18	93-3007	Seal - Oil	4
19	302-5	Fitting - Grease, Straight	4
20	94-4335	Tube Assy. - Rear Roller	1
21	94-4328	Shaft - Rear Roller	1
22	94-4332	HOC Bracket - Frt. LH	1
23	3290-455	Washer - Belleville	2
24	33115-016	Screw - HH	2

Ref. No.	Part No.	Description	No. Used
26	93-2931	Washer - Roller	4
27	93-3001	Washer	2
28	94-8945	Bushing	8
29	94-2702	Bolt	6
30	93-3087	Link - 4 Bar	4
31	93-9775	Spacer	2
32	93-7407	Frame - 4 Bar	1
34	94-4336	Roller - Wiehle	1
35	94-4329	Shaft - Wiehle Roller	1
36	33105-025	Screw - HHF	8
37	94-4307	Nut - Lock	4
38	94-4333	HOC Bracket - Frt. RH	1
39	93-9777	Bolt - Shoulder, Long	2
40	93-9173	Bumper	2
41	3256-42	Washer - Flat	2
42	283-71	Pin - Lynch	1
43	94-2700	Spacer - Link	6
44	94-2701	Washer - Hardened	12
*	94-4331	Rear Roller Assembly (Incl. Ref. #3, 14-21 & 26)	1
*	94-4330	Wiehle Roller Assembly (Incl. Ref. #3, 14-19, 25 26 & 34-35)	1

*Not Illustrated

SPECIAL TOOLS


GAUGE BAR ASSEMBLY NO. 59-7900

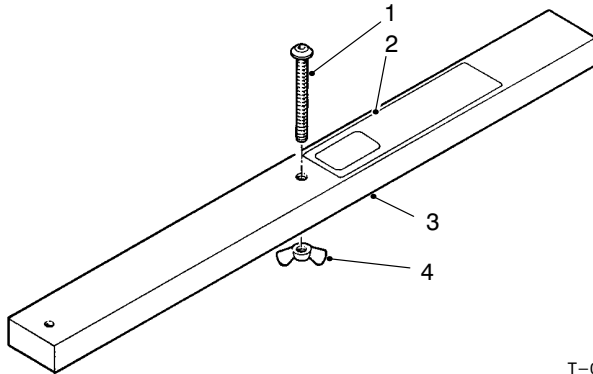

T-0191-1

Ref. No.	Part No.	Description	No. Used
1	32122-54	Screw – Mach. Slot. Hd.	1
2	59-7930	Decal	1
3		Bar	1
4	32103-3	Nut – Wing	1


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

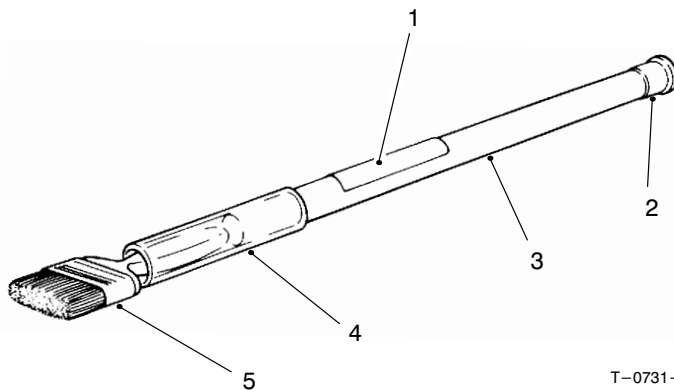

T-0731-1

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose – Handle	1
5	36-4310	Brush	1


BEDKNIFE SCREW TOOL NO. *TOR510880

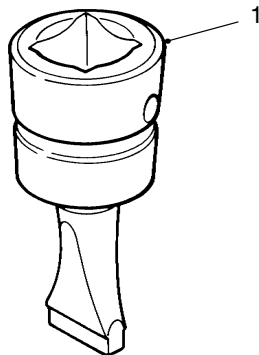

T-0729-1

Ref. No.	Part No.	Description	No. Used
1		Tool – Bedknife Screw	1

REEL DRIVE SHAFT NO. *TOR4074

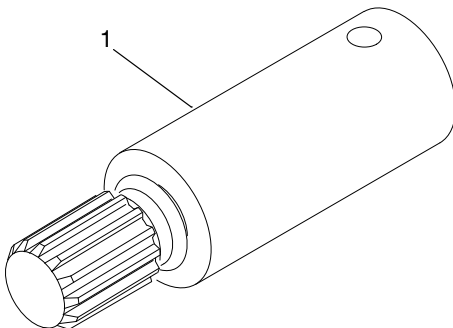


T-2383-2

Ref. No.	Part No.	Description	No. Used
1		Shaft – Reel Drive	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

SPECIAL TOOLS

CUTTING UNIT TOOL KIT NO. *TOR4070

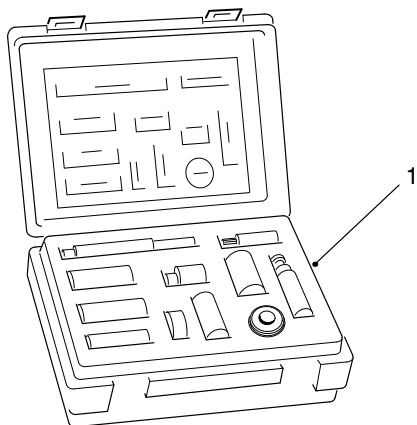

T-2676

Ref. No.	Part No.	Description	No. Used
1	*TOR 4064	Spanner Wrench	1
	*TOR4065	Inner Oil Seal Installer	1
	*TOR4066	Bearing Installer	1
	*TOR4067	Shaft Support Tool	1
	*TOR4068	Inner Seal Installer	1
	*TOR4069	Outer Seal Installer	1
	*TOR4071	Outer Oil Seal Installer	1
	*TOR4072	Reel Motor Shaft Seal Protector	1
	*TOR4073	Handle	1
	*TOR4074	Spline Insert Tool	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

TORO PART NUMBER INDEX

3319–308 REV B

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
109966	Bearing – Ball	4 17 4	94–2702	Bolt	4 29 6
700382	Rivet	3 43 14	94–2732	Insert – Threaded RH	1 5 1
12–9140	Decal	5 1 1	94–2733	Insert – Threaded LH	1 * 1
29–8910	Washer	3 17 2	94–2738	Screw – Carriage	3 37 4
29–9080	Handle	5 3 1	94–3489	Screw	3 30 1
29–9090	Hose – Handle	5 4 1	94–4307	Nut – Lock	4 37 4
36–4310	Brush	5 5 1	94–4328	Shaft – Rear Roller	4 21 1
51–0880	Tool – Bedknife Screw	5 1 1	94–4329	Shaft – Wiehle Roller	4 35 1
52–2890	Bushing – Plastic	3 14 2	94–4330	Wiehle Roller Assembly	4 * 1
57–4910	Screw – Special	3 28 8	94–4331	Rear Roller Assembly	4 * 1
57–5260	Pivot Screw Adj.	3 15 1	94–4332	HOC Bracket – Frt. LH	4 22 1
59–7930	Decal	5 2 1	94–4333	HOC Bracket – Frt. RH	4 38 1
61–0910	Bracket – Angle	4 1 2	94–4335	Tube Assy. – Rear Roller	4 20 1
62–5510	Bushing	3 47 2	94–4336	Roller – Wiehle	4 34 1
67–7960	Decal – Danger, Reel	3 42 1	94–4337	Reel Assembly Model 03854	1 6 1
93–1251	Seal – Inner	4 16 4	94–4338	Reel Assembly Model 03856	1 * 1
93–1252	Seal – Outer	4 15 4	94–4344	Spacer	4 6 2
93–2489	Bearing	1 3 2	94–4347	Weight – End	1 11 3
93–2512	Pivot Hub LH	3 33 1	94–4584	Decal – Danger (Japanese)	3 42 1
93–2513	Pivot Hub RH	3 5 1	94–6980	Sensor – Speed	2 25 2
93–2892	Pivot – Bedbar, Man. Adj.	3 25 1	94–8908	Seal – Grease	1 4 2
93–2902	Support – HOC, Rear	4 5 2	94–8936	Bedknife – 2.535" (1.00 cm)	3 * 1
93–2904	Bracket – HOC, Rear	4 11 2	94–8942	Asm. – Grass Shield	3 40 1
93–2906	Pin – HOC	4 7 2	94–8945	Bushing	4 28 8
93–2921	Spring – Compression HOC	4 4 2	95–0772	Spring – Compression	3 18 1
93–2922	Ring – Bearing	2 27 2	95–2762	Bedbar Adjuster Assy.	3 23 1
93–2931	Washer – Roller	4 26 4	95–2770	Reel Assembly Model 03853	1 * 1
93–2956	Bearing	1 19 1	95–2793	Nut – Bearing Adj.	1 10 1
93–2959	Spacer – Adjuster	3 24 1	95–3458	Bedbar	3 26 1
93–2981	Sideplate – RH	3 6 1	237–30	O–Ring	2 26 2
93–2982	Sideplate – LH	3 35 1	2410–18	Plug	5 2 1
93–2996	Rear Grass Shield	3 39 1	253–70	Seal – Oil	4 14 4
93–2998	Shield – RT	3 44 1	253–165	Seal – Outer	1 18 1
93–3001	Washer	4 27 2	283–71	Pin – Lynch	4 42 1
93–3007	Seal – Oil	4 18 4	302–5	Fitting – Grease, Straight	4 19 4
93–3008	Shield – LT	3 38 1	302–11	Fitting – Grease 45°	1 15 2
93–3011	Flap – Bottom	3 46 2	302–18	Fitting – Grease, Str.	3 11 1
93–3012	Flap – Side	3 45 2	3245–42	Screw – Set	2 29 1
93–3080	Weight – Housing, End	1 20 1	3256–23	Washer – Flat	1 21 1
93–3085	Asm. – Shaft, Magnet	1 17 1	3256–42	Washer – Flat	4 41 2
93–3087	Link – 4 Bar	4 30 4	3256–82	Washer	3 2 1
93–3088	Clamp	1 23 2	3290–455	Washer – Belleville	4 23 2
93–3094	Plug – Cap	1 13 1	3290–467	Pin – Cotter, Hair	4 8 2
93–6688	Decal – Danger (Europe)	3 42 1	3296–62	Nut – Lock	3 16 1
93–7407	Frame – 4 Bar	4 32 1	32103–3	Nut – Wing	5 4 1
93–7500	Screw – HH	4 9 2	32120–62	Snap Ring	4 3 4
93–7501	Bushing Assembly	3 8 2	32121–36	Pin – Roll	3 29 4
93–7502	Bushing – Flange	3 9 2	32121–69	Pin – Roll	1 9 4
93–7509	Washer – Special	4 10 2	32122–54	Screw – Mach. Slot. Hd.	5 1 1
93–7510	Ring – Quad	3 3 1	33004–00	Nut – Flange	3 32 3
93–7522	Screw – HH	1 12 2	33024–00	Nut – Lock	3 4 4
93–8717	Plug	2 28 1	33024–00	Nut – Lock	1 22 1
93–9173	Bumper	4 40 2	33025–00	Nut – Lock	4 2 12
93–9757	Screw – HH	4 13 4	33025–00	Nut – Lock	1 16 4
93–9759	Deflector – Grass Shield	3 41 5	33025–00	Nut – Lock	3 36 12
93–9767	Arm – Spring	3 20 1	33094–00	Washer – Flat	3 10 4
93–9769	Reel Frame	3 7 1	33103–020	Screw – HH	1 24 2
93–9774	Bedknife – 2.235" (.88 cm)	3 27 1	33104–020	Screw – HHF	3 1 3
93–9775	Spacer	4 31 2	33104–040	Screw – HHF	3 31 1
93–9777	Bolt – Shoulder, Long	4 39 2	33105–025	Screw – HHF	3 34 8
93–9783	O–Ring	1 8 10	33105–025	Screw – HHF	4 36 8
93–9794	Housing – Bearing, RH	1 2 1	33105–030	Screw – HHF	1 14 4
93–9795	Housing – Bearing, LH	1 7 1	33105–060	Screw – HHF	1 1 2
94–2700	Spacer – Link	4 43 6	33115–016	Screw – HH	4 24 2
94–2701	Washer – Hardened	4 44 12	33125–030	Screw – Carriage	4 12 2

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]