



Count on it.

Form No. 380-0059 Rev A

Parts Catalog

Network 8000® Satellite Series Controllers, Plastic and Metal Cabinets

Model No. Network 8000 Series



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LPG: Liquid Propane Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Network 8000 Sat., Plastic Cabinet, Int. Components 4

Network 8000 Sat., Plastic Cabinet, 24V Output 6

Network 8000 Sat., Plastic Cabinet, AC/DC PS 8

Network 8000 Sat., Plastic Cabinet, Power Supply 10


Network 8000 Sat., Lrg. Stainless Pedestal (1 of 2) 12

Network 8000 Sat., Lrg. Stainless Pedestal (2 of 2) 14

Network 8000 Sat., Small, Green Stainless Pedestal 16

Network 8000 Satellite Control Panel Assembly 20

Network 8000 Sat., Plastic Cabinet, Int. Components

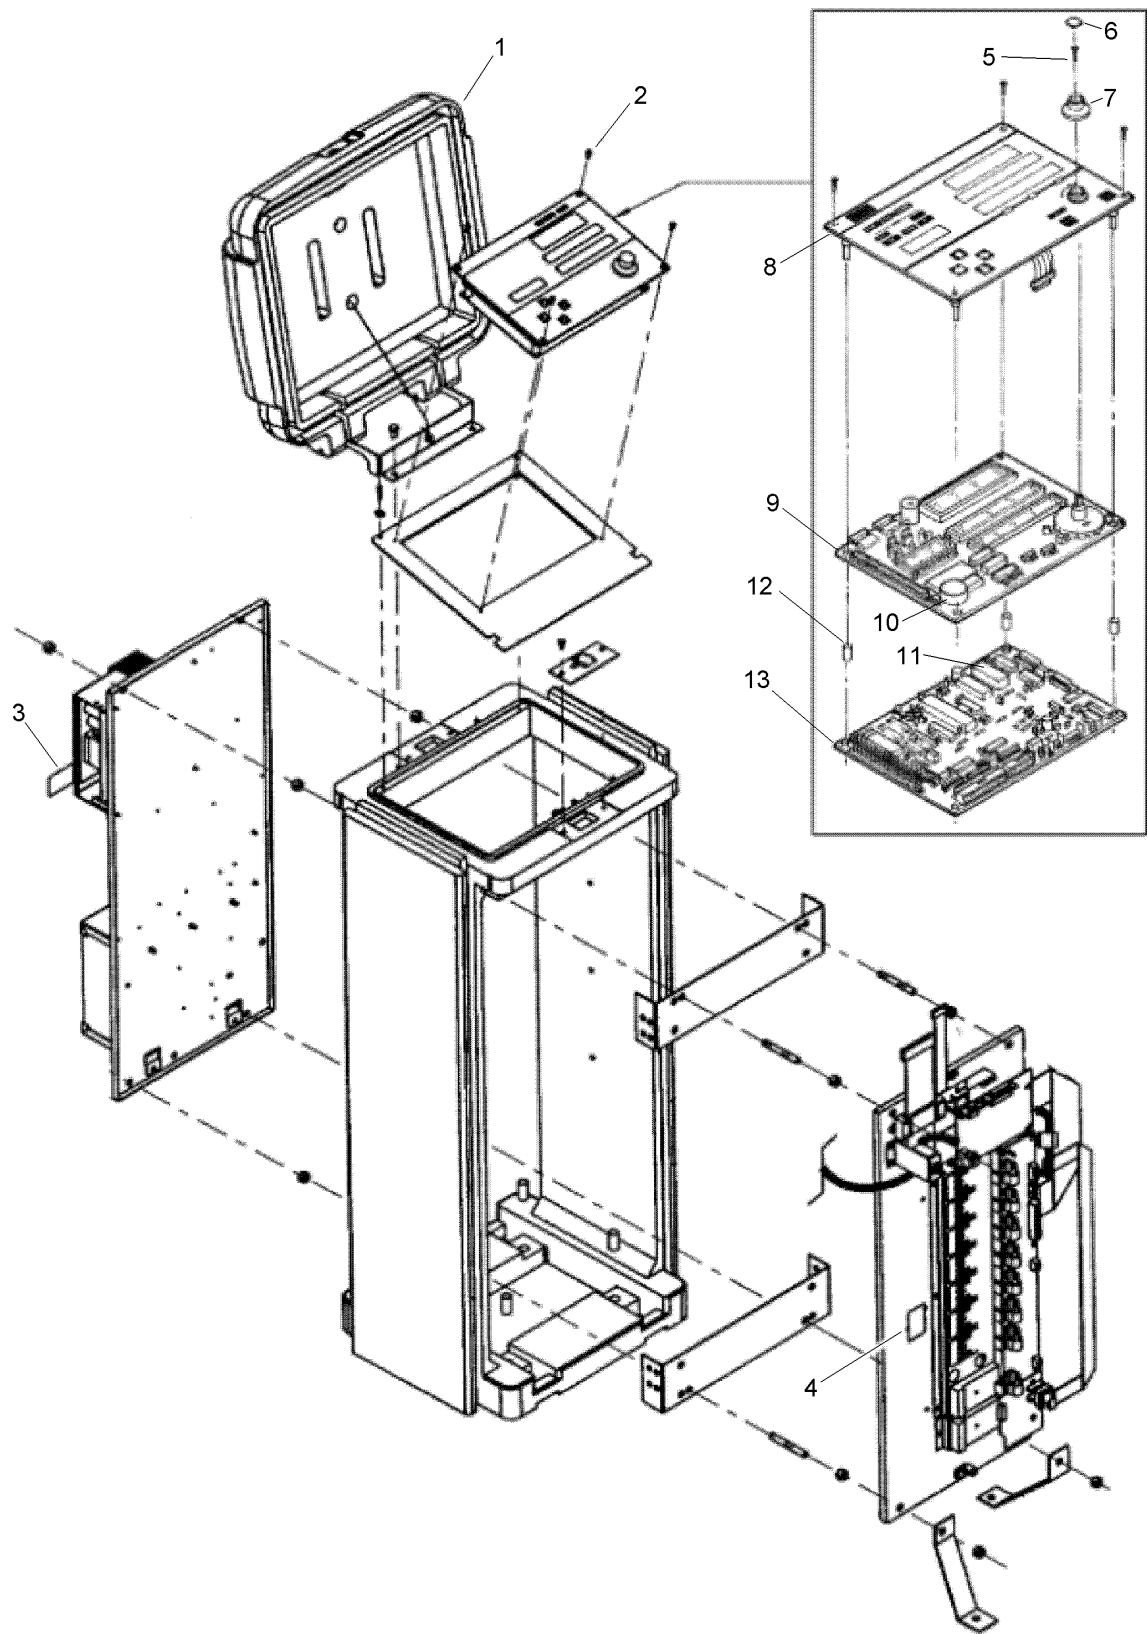


Network 8000 Sat., Plastic Cabinet, Int. Components (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1			Satellite Plastic Pedestal & Components (See Plastic Satellite Pedestal Section) ▲	9	35-6246	1	Pcb Assy., Display
2	4-1063	6	Screw, Tap, #6	10	363-2200	1	Battery, 3.9V
3		1	Label, Caution, Removable Door ▲	11	91-0976	1	Ic, 27C256, Programmed (Eprom)
4		1	Label, Serial, Fcc ▲	12	35-6243	4	Spacer
5	363-1596	1	Screw, Tap, #6-19	13	91-1790	1	Pcb Assembly, Processor Mounting Hole Pattern Board ● ■
6	35-7637	1	Cap, Knob		91-2340		Control Panel Assy., Service (Includes Items 5-13) ● ■
7	35-6237	1	Knob				
8	35-6247	1	Faceplate Assy.				

● SERVICE ITEMS
▲ Not serviced separately

■ Not illustrated

Network 8000 Sat., Plastic Cabinet, 24V Output

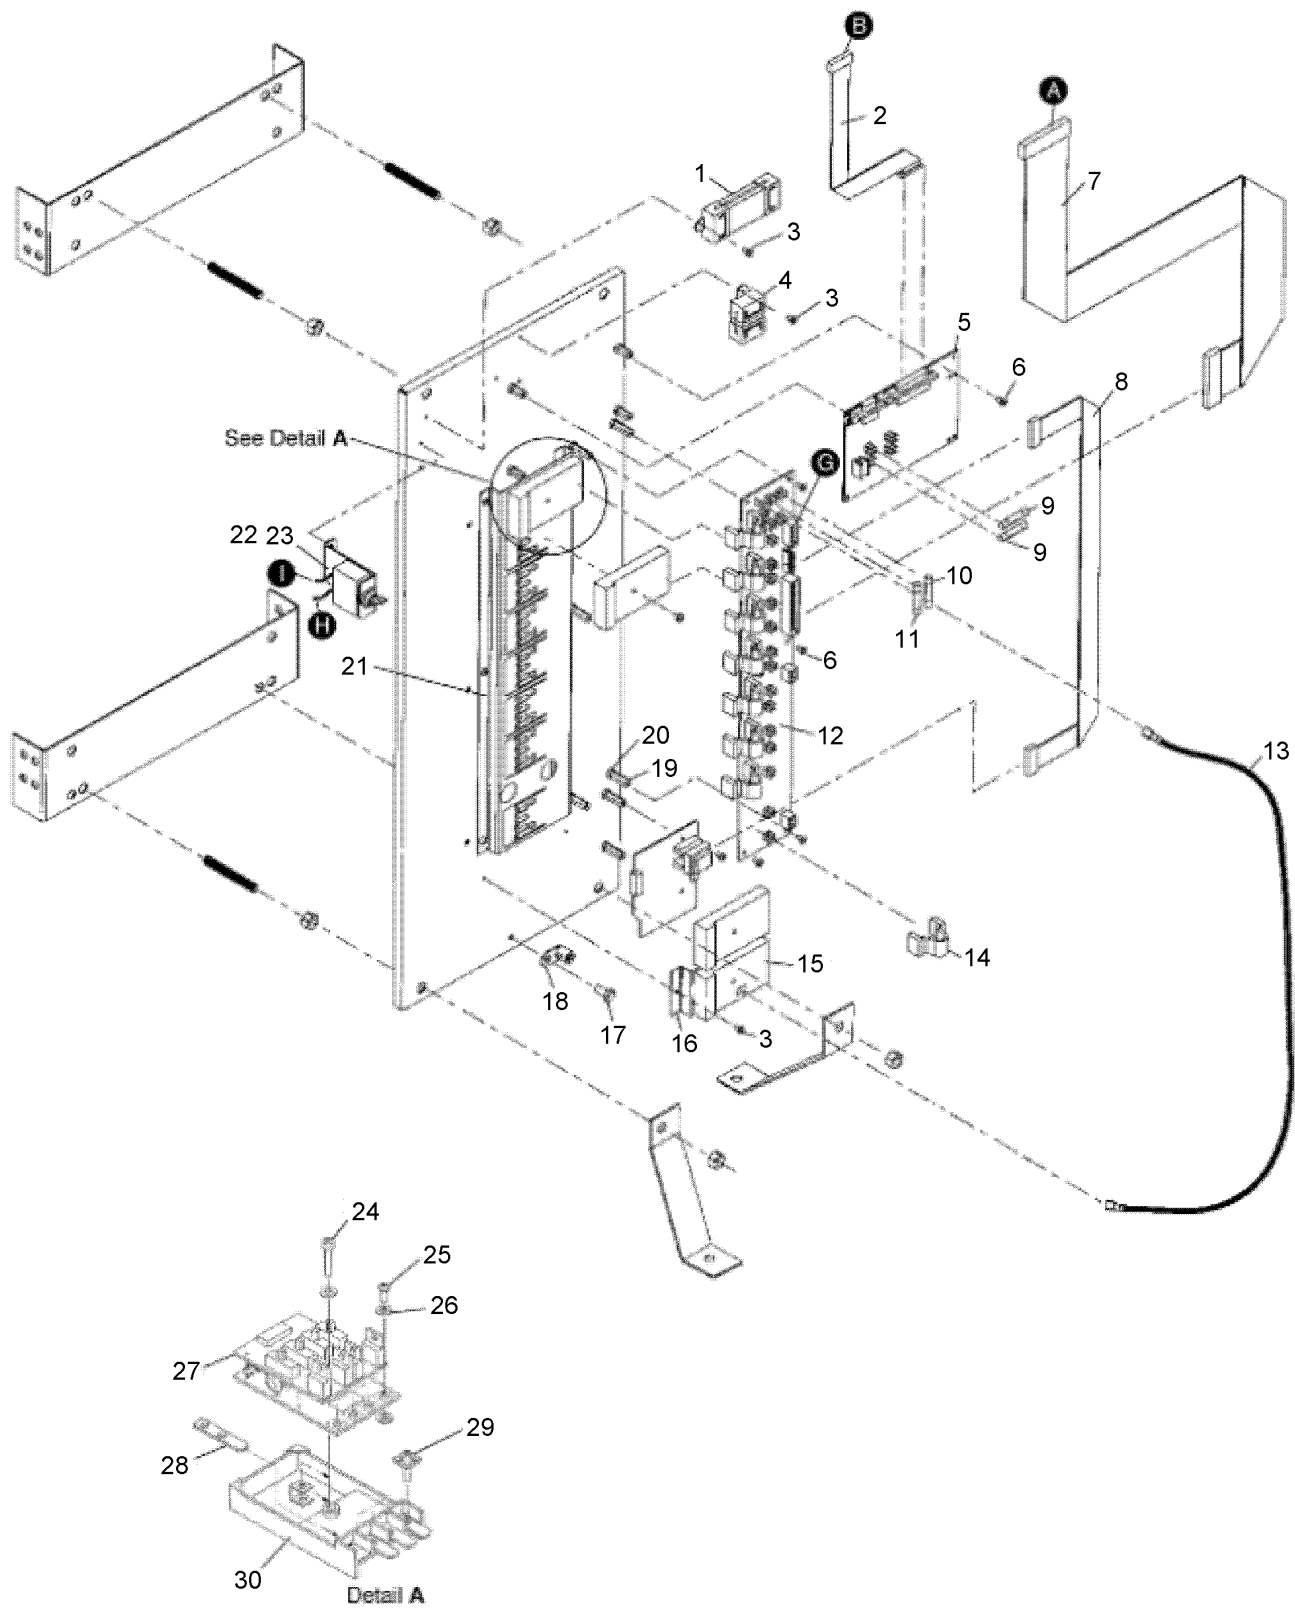

Note: For **G**, **H** & **I** connection, refer to Sheet 4 of 5.


Network 8000 Sat., Plastic Cabinet, 24V Output (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Ferrite, Flat Cable, 3" ▲	16	35-6346	1	Bracket, Pump Triac Module
2		1	Cable Assembly, Modem ▲	17	360-0595	1	Screw, Machine, 1/4-20 X 1/2"
3	4-1063	9	Screw, Tap, #6	18	363-1553	1	Lug, Grounding
4		1	Ferrite, Flat Cable, 1.5" ▲	19	363-2812	8	Standoff, #6-32 X 3/8
5	102-0864	1	Pcb Assembly, Standard Modem	20	1-3079	12	Nut, Hex, 6-32
6	360-0285	18	Screw, Machine, 6-32 X 3/8	21	89-8150	1	Bracket, Triac Module
7	35-8662	1	Cable Assembly, Fuse Board	22		1	Bracket, Switch ▲
8		1	Cable Assembly, Voltage Monitor ▲	23	363-2370	1	Breaker, Circuit, 10 Amp
9	102-3819	2	Fuse, 0.75 Amp (10-Pack)	24	1-6051	9	Screw, #8 Phph, Steel
10	363-2638	1	Fuse, 0.5 Amp	25	3-2698	32	Screw, Tap, #6-32 X 1/4
11	363-2497	8	Fuse, 3.2 Amp, Slow-Blow, Distribution	26	360-0600	72	Washer, Lock, Ext T
12	91-1783	1	Pcb Assembly, Fuse And Distribution	27	35-6399	8	Base Assembly, Triac
13		1	Wire Assembly, 18 Awg, Brown ▲	28	35-6418	36	Terminal Tab, Triac
14	35-8664	8	Cable Assembly, Triac	29	363-2431	36	Screw, #6 X 1/2, Hi-Lo W/Clamp
15	91-1783	1	Pcb Assembly, Fuse And Distribution	30	35-6418 89-8100	9	Terminal Tab, Triac Assembly, Triac Module, Nw8K ●■
					35-6399		Base Assembly, Triac ●■

● SERVICE ITEMS
▲ Not serviced separately

■ Not illustrated

Network 8000 Sat., Plastic Cabinet, AC/DC PS

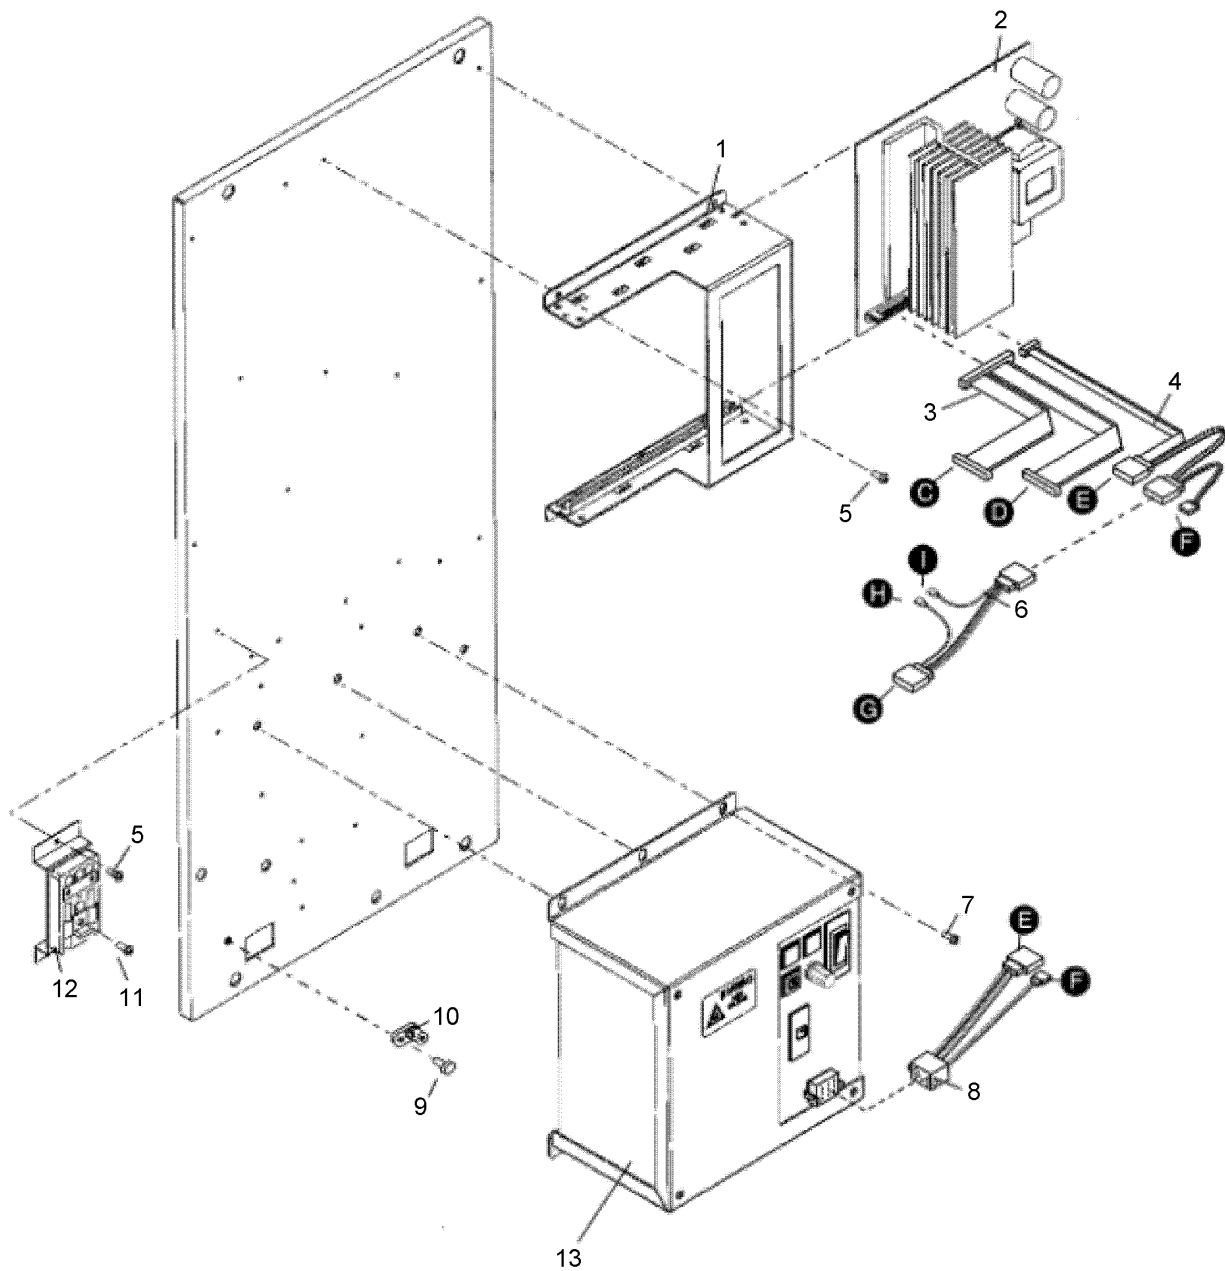

Note: For **C** & **D** connection, refer to **Sheet 1 of 5**. For **G**, **H** & **I** connection, refer to **Sheet 3 of 5**.


Network 8000 Sat., Plastic Cabinet, AC/DC PS (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Bracket, Ac-Dc, Nw8K ■	9	360-0595	1	Screw, Machine, 1/4-20 X 1/2"
2	91-1779	1	Pcb Assembly, Power Supply	10	363-1553	1	Lug, Grounding
3		1	Cable Assembly, Pcn To Modem ■	11	363-3103	1	Screw, Tap, #6-19 X 3/4, Phph
4		1	Cable Assembly, Pcn To Power Supply ■	12	35-8833	1	Bracket Assembly, Com Cable
5	4-1063	6	Screw, Tap, #6	13		1	Power Supply Assembly (See Power Supply Assembly Section) ■
6		1	Cable Assembly, Pcn To Distribution Board ■		35-8833		Bracket Assembly, Com Cable (Includes Items 5, 11 & 12) ●
7	3-1453	3	Screw-PRH				
8		1	Cable Assembly, Power Supply To Pcn ■				

● Not illustrated

■ Not serviced separately

Network 8000 Sat., Plastic Cabinet, Power Supply

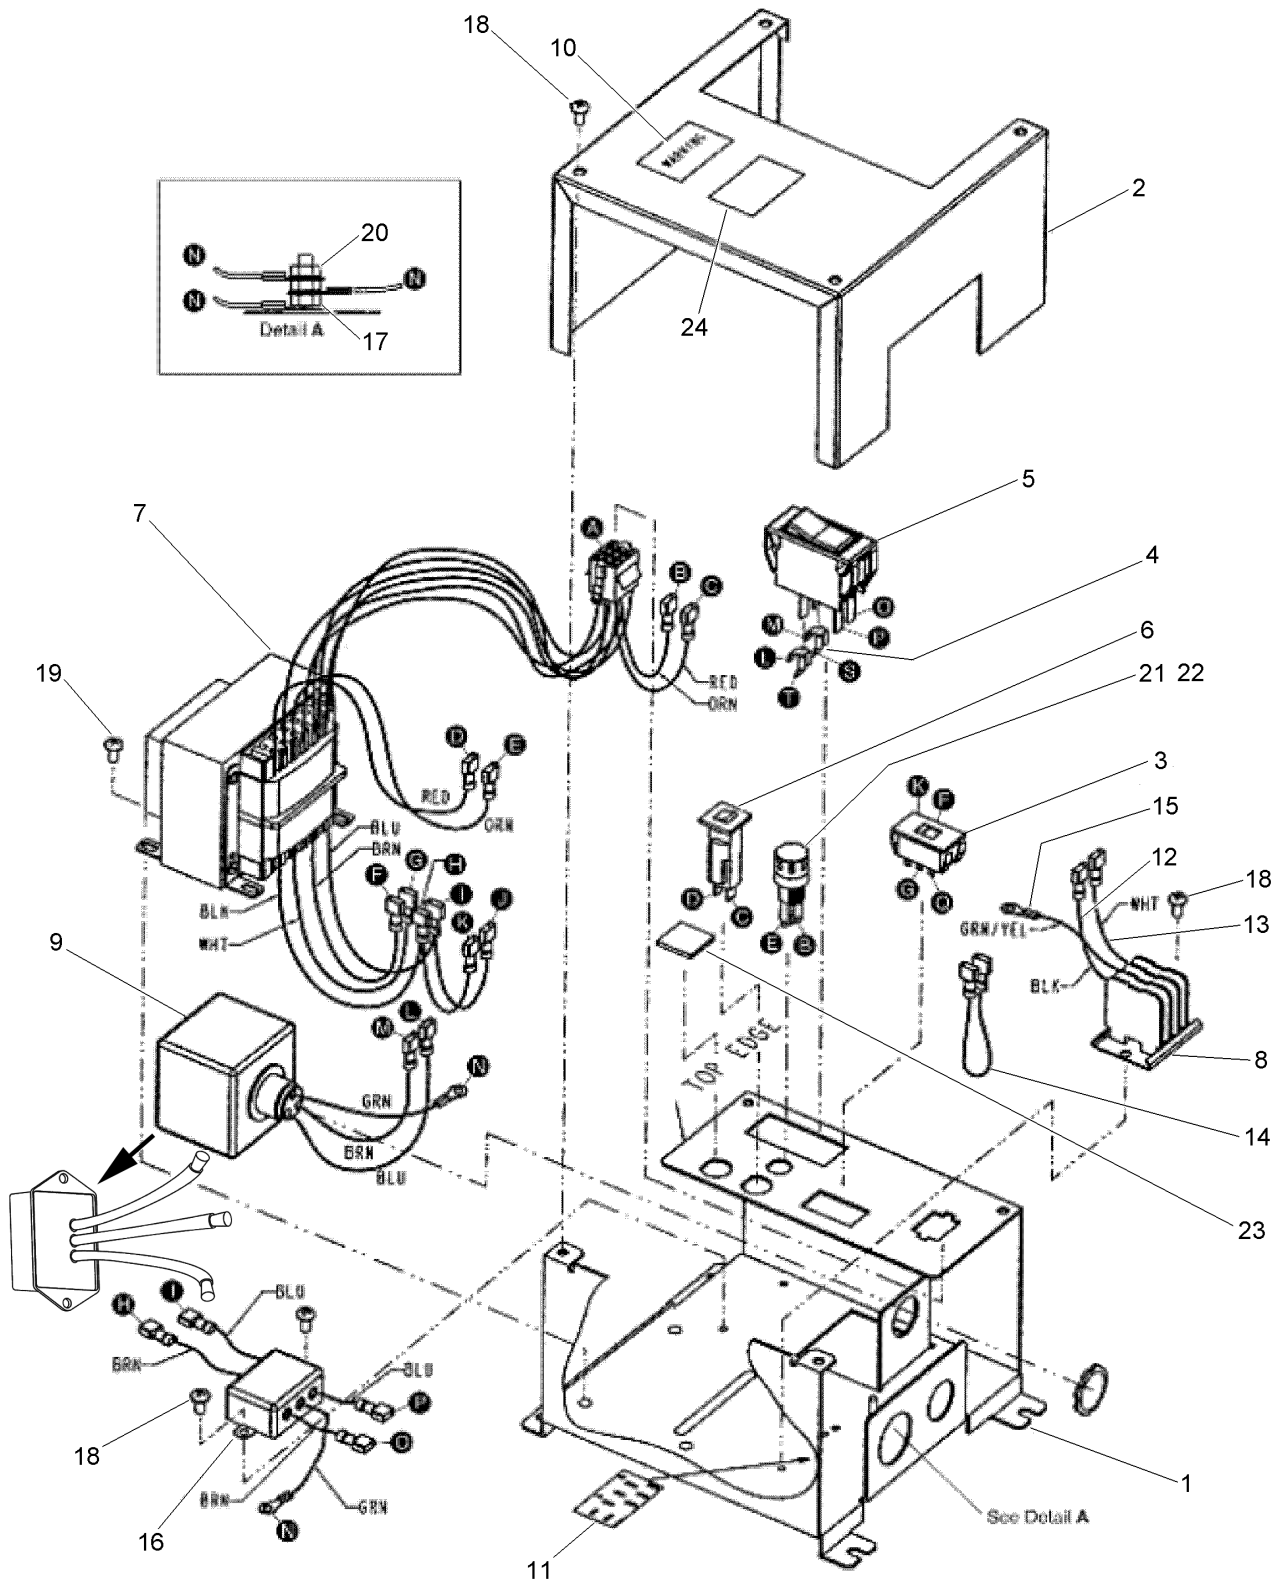


Network 8000 Sat., Plastic Cabinet, Power Supply (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Case, Base, Standard Power Supply ■	15		1	Wire Assy., 18 Awg, Green/Yellow ■
2		1	Case Cover, Standard Power Supply ■	16		1	Rfi Filter Assembly ■
3	102-0648	1	Slide Switch 115/230V	17	360-0600	1	Washer, Lock, External Tooth, #8
4		1	Tab Adapter ■	18	360-0498	4	Screw, Machine, #8-32 X 1/4" Phph Sst
5	363-3361	1	Switch, Circuit Breaker, 1.5 Amp	19	3-1453	2	Screw, Machine, #10-32 X 3/8", Phph
6	363-5270	1	Circuit Breaker, 4.0 Amp	20		1	Hex Nut, #8-32 W/Lock Washer ■
7	89-8285	1	Transformer, Power Supply	21	360-0750	1	Holder, Fuse
8	363-2371	1	Terminal Block, 3-Position	22	363-2497	1	Fuse, 3.2 Amp, Distribution
9	118-0589SK	1	Surge Protector (Replaces Older Model)	23		1	Cap, Blank ■
10	89-0722	4	Label, Warning	24		1	Label, Service Kit ■
11		2	Label, Terminal Block ■		89-8279		Power Supply Module (Includes Items 1-24) ●
12		1	Wire Assy., 18 Awg, Black ■				
13		1	Wire Assy., 8 Awg White ■				
14		1	Wire Assy., 18 Awg, Black ■				

● Not illustrated

■ Not serviced separately

Network 8000 Sat., Lrg. Stainless Pedestal (1 of 2)

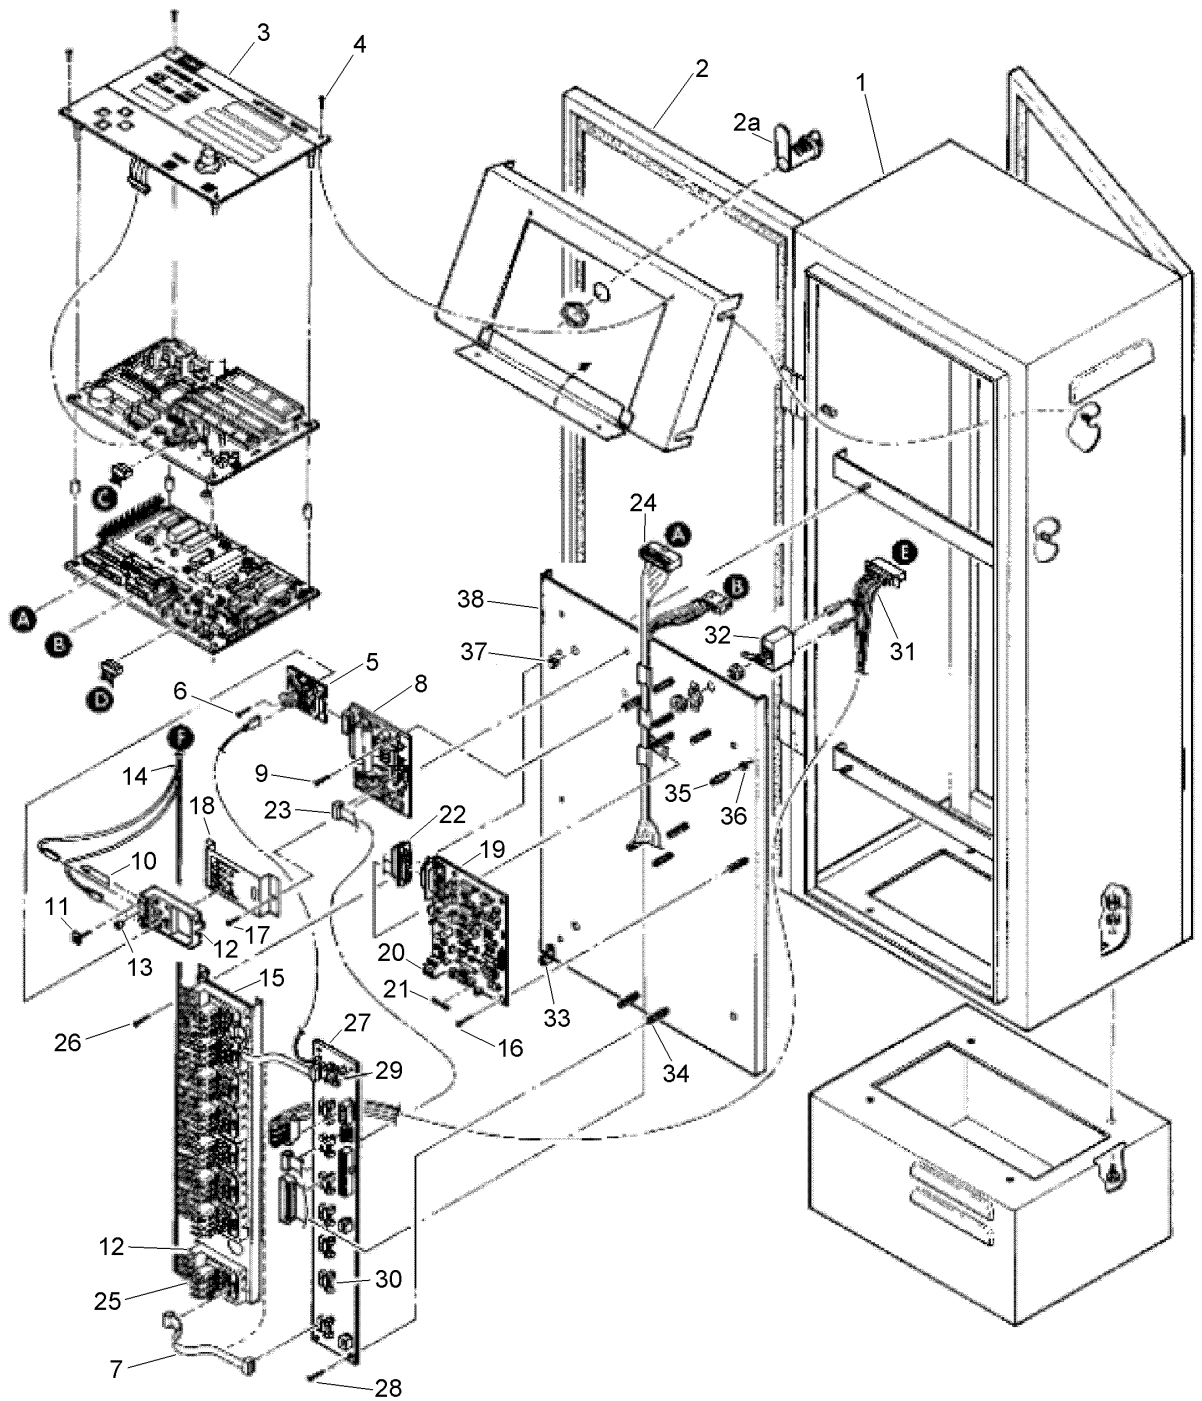


Network 8000 Sat., Lrg. Stainless Pedestal (1 of 2) (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	35-8480	1	Cabinet Assy., Pedestal Controller (Includes Items 1, 2, 2A, And 39) ●	20	363-2231	1	Connector, 3-Pin, Female
2	91-0986	2	Door Assy., Cabinet (Includes Items 2 And 2A) ●	21	363-2638	1	Fuse, 0.5 Amp, 250V, 3Ag
2A	363-2814	2	Lock Assembly (Includes Keys)	22	35-6328	1	Cable Assy., Modem
3		1	Control Panel Assy. (See Control Panel Assembly) ▲	23	35-8663	1	Cable Assy., Valve Voltage
4	360-0285	4	Screw, Machine #6-32 X 3/8", Sst	24	35-8662	1	Cable Assembly, Fuse Board
5	35-6326	1	Pcb Assy., Pump/Current Monitor	25	35-6332	8	Pcb Assy., Triac Module
6	1-1112	1	Screw, Tap #8, Sst	26	4-1063	6	Screw, Tap, #6
7	35-8664	8	Cable Assembly, Triac Board	27	91-1783	1	Pcb Assembly, Fuse And Distribution
8	91-1782	1	Pcb Assy., Valve Voltage Monitor	28	1-3076	4	Screw, #6-32 X 3/8"
9	1-3076	2	Screw, Tap, #6-32 X 3/8"	29	363-2498	8	Fuse, 0.5 Amp Slow-Blow
10	35-6418	4	Terminal Tab, Triac	30	363-2497	1	Fuse, 3.2 Amp, Distribution
11	363-2431	4	Screw, #6 X 1/2, Hi-Lo W/Clamp	31	35-8754	1	Cable Assy., Power, 24 V A.C.
12	35-3434	8	Base, Triac Module	32	363-2370	1	Breaker, Circuit, 10 Amp
13	360-0471	4	Surge Protector	33	363-1553	1	Lug, Grounding
14	35-8742	1	Cable Assy., Triac Module	34	363-2804	6	Standoff, Hex, #6-32 X 1/2"
15	35-8795	1	Bracket, Triac Module	35	363-2812	6	Standoff, #6-32 X 3/8"
16	1-3076	4	Screw, Tap, #6-32 X 3/8"	36	1-3079	12	Nut, Hex, 6-32
17	4-1063	2	Screw, Tap, #6	37	360-0594	3	Nut, Hex, 1/4-20
18	35-6346	1	Bracket, Pump Triac Module	38		1	Plate, Front Mounting ▲
19	89-7852	1	Pcb Assy., Modem (Includes Items 20 & 21)		35-6399		Base Assembly, Triac Module (Includes Items 10-13) ■
					9-1051		Board, Mounting Hole Pattern ■
					363-1683		Washer, Flat, 5/16" ■
					363-1684		Nut, Hex, 5/16-18 ■
					363-1686		Screw, Cap 5/16" X 4" ■

● SERVICE ITEMS
▲ Not serviced separately

■ Not illustrated

Network 8000 Sat., Lrg. Stainless Pedestal (2 of 2)

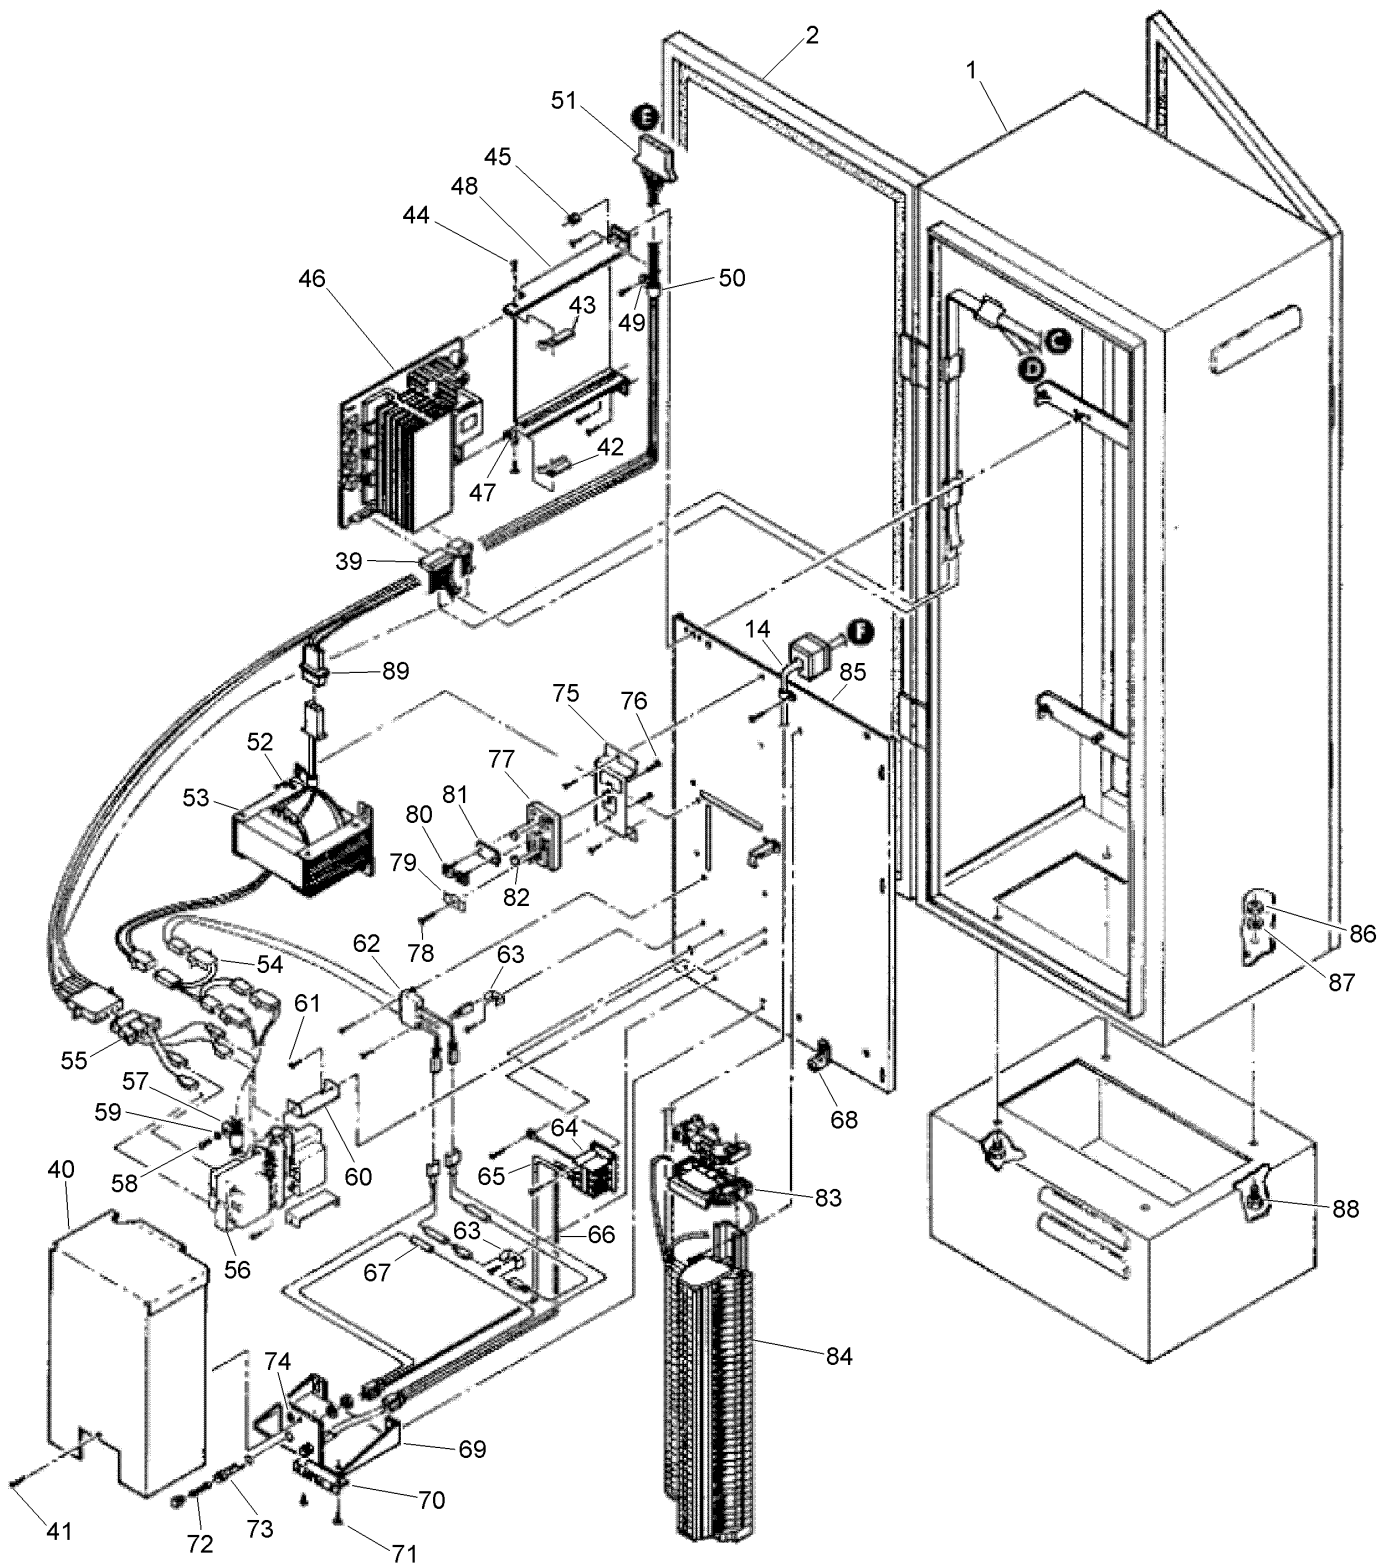


Network 8000 Sat., Lrg. Stainless Pedestal (2 of 2) (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	35-8480	1	Cabinet Assy., Pedestal Controller (Includes Items 1, 2, And 39) ●	68	363-1553	1	Lug, Grounding
2	91-0986	2	Door Assy., Cabinet (Includes Lock Assembly And Keys) ●	69		1	Bracket, Conduit ▲
14	35-8742	1	Cable Assy., Triac Module	70	35-7738	1	Bracket, Pill Carrier
39	35-8705	1	Cable Assy., Power	71	3-2698	5	Screw, Tap, #6-32 X 1/4"
40	35-6345	1	Cover, Power Supply	72	363-2260	2	Fuse, 3 Amp
41	3-2698	1	Screw, Tap, #6-32 X 1/4	73	360-0750	2	Holder, Fuse
42	35-8704	1	Bracket, Retainer, Lower	74	363-2459	1	Plug, Hole
43		1	Bracket, Retainer, Upper ▲	75	35-8448	1	Bracket, Surge Protector
44	4-1063	2	Screw, Tap, #6	76	363-1596	1	Screw, Tap, #6-19
45	360-0594	1	Nut, Hex, 1/4-20	77	35-7458	1	Carrier, Surge Protector
46	91-1779	1	Pcb Assembly, Power Supply	78	363-3103	1	Screw, Tap, #6-19 X 3/4", Phph
47	363-2233	2	Guide, Card, Pcb 6-3/4"	79	363-2271	1	Clamp, Cable
48	35-8367	1	Bracket, Power Supply	80	363-2431	2	Screw, #6 X 1/2", Hi-Lo W/Clamp
49		2	Washer, Flat, #8, Brass ▲	81	35-7524	1	Strap
50	1-7176	1	Clamp, Cable, Large	82	360-0471	2	Surge Protector
51	35-8755	1	Cable Assy., Power Level 3	83	363-2635	1	Fuse, 7.5 Amp
52	360-0355	1	Screw, Tap #8	84	363-2807	1	Terminal Strip
53	35-8583	1	Transformer Assy., Triac	85	35-9703	1	Plate, Rear Mounting
54	35-8792	1	Cable Assy., Transformer, 24V	86	363-1684	8	Nut, Hex, 5/16-18 ●
55	35-8837	1	Cable Assy., Transformer, Power	87	363-1683	4	Washer, Flat, 5/16" ●
56	91-1288	2	Transformer Assy., 24V, 20 Va	88	363-1686	4	Screw, Cap, 5/16" X 1.5" ●
57	1-7176	1	Clamp, Cable, Large	89	89-7464	1	Cable Assy., Y-Harness
58	360-0355	1	Screw, Tap #8		35-8833		Bracket Assembly, Com Cable (Includes Items 75-82) ●■
59		1	Washer, Flat, #8, Brass ▲		35-8741		Bracket And Fuse Assy. (Includes Items 69-74) ●■
60	35-8174	2	Bracket, Transformer		35-9114		Lightning Protection Assy. (Includes Items 67) ●■
61	4-1063	4	Screw, Tap, #6		35-8753		Transformer Assy., Power (Includes Items 56-60) ●■
62	35-8904	1	Filter Assy., Rfi		91-0987		Pcb Assy., Mod. 30, 286, Network 8000 (Snc) ●■
63	363-1346	2	Tab, Terminal, Kt-4		35-9450		Pcb Assy., Sensor Input, Network 8000 Mc Unit ●■
64	363-2371	1	Terminal Block, 3-Position		35-8472		Pressure Sensor Kit, Network 8000 Mc Unit ●■
65	35-7841	1	Wire Assy., Fuse/Terminal Block, Black		35-9427		Cable Assy., Pressure Sensor, Network 8000 Mc Unit ●■
66	35-7842	1	Wire Assy., Fuse/Terminal Block, White				
67	360-0345	3	Surge Protector				

● SERVICE ITEMS
▲ Not serviced separately

■ Not illustrated

Network 8000 Sat., Small, Green Stainless Pedestal

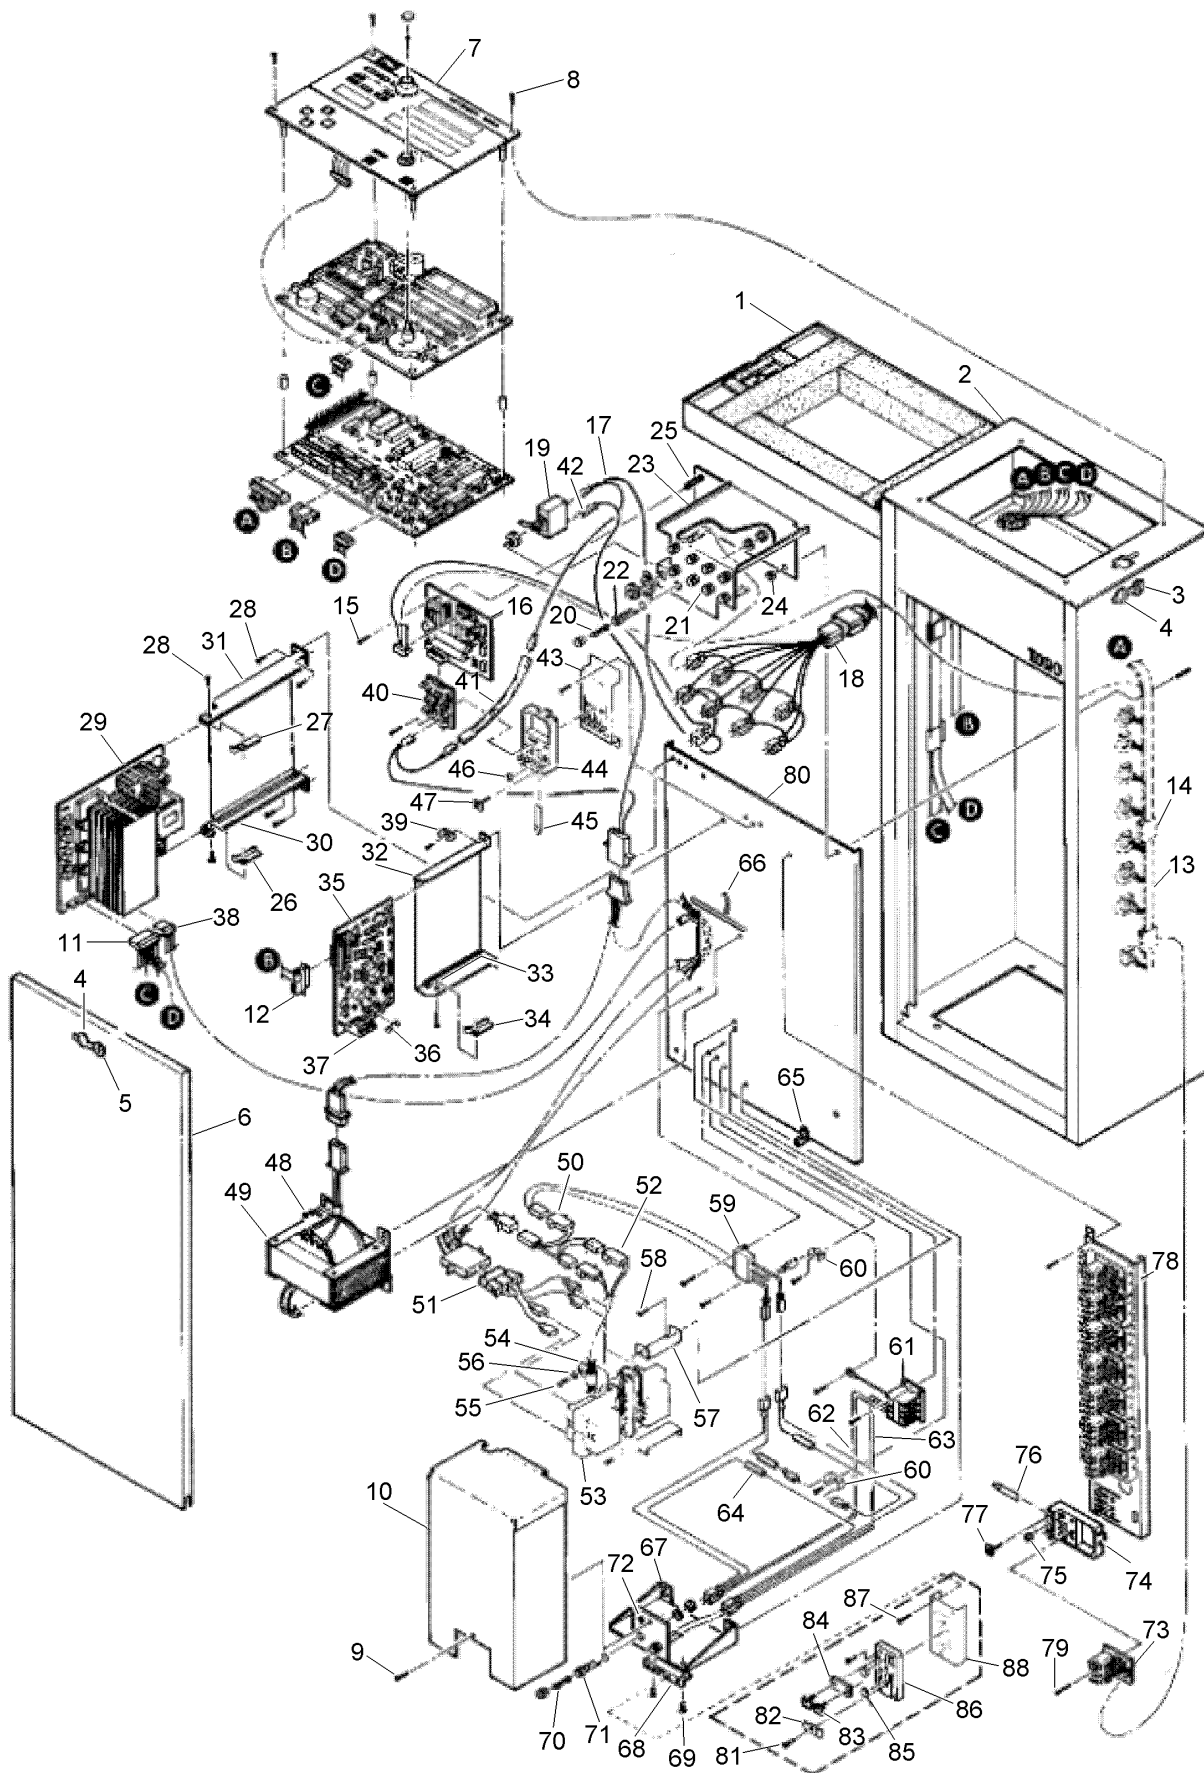


Network 8000 Sat., Small, Green Stainless Pedestal (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	9-4043	1	Lid Assy., Cabinet	51	35-8837	1	Cable Assy., Transformer, Power
2	89-0385	1	Cabinet, Tall	52	363-1273	1	Connector, Pin
3	360-0583	1	Lock, Door	53	91-1288	2	Transformer Assy., 24V, 20 Va
4	9-4303	2	Cover, Lock	54	1-7176	1	Clamp, Cable, Large
5	360-0583	1	Lock, Door	55	360-0355	1	Screw, Tap #8
6	9-1018	1	Door, Pedestal	56		1	Washer, Flat, #8, Brass ▲
7		1	Panel Assy., Control (See Control Panel Assembly) ▲	57	35-8174	2	Bracket, Transformer
8	360-0285	4	Screw, Machine, 6-32 X 3/8", Sst	58	4-1063	4	Screw, Tap, #6
9	3-2698	1	Screw, Tap, #6-32 X 1/4"	59	35-8904	1	Filter Assy., Rfi
10	35-8706	1	Cover, Power Supply	60	363-1346	2	Tab, Terminal, Kt-4
11	35-8705	1	Cable Assy., Power	61	363-2371	1	Terminal Block, 3-Position
12	35-6328	1	Cable Assy., Modem	62	35-7841	1	Wire Assy., Fuse/Terminal Block, Black
13	35-7605	1	Cable Assy., Triac Driver	63	35-7842	1	Wire Assy., Fuse/Terminal Block, White
14	363-2321	1	Clamp, Cable Flat	64	360-0345	3	Surge Protector
15	1-3076	1	Screw, 6-32 X 3/8"	65	363-1553	1	Lug, Grounding
16	91-1782	1	Pcb Assy., Valve Voltage Monitor	66	35-7288	1	Clip, Ground
17	35-7286	1	Wire Assy., Fuse	67		1	Bracket, Conduit ▲
18	35-7575	1	Cable Assy., Triac Fuse	68	35-7738	1	Bracket, Pill Carrier
19	363-2370	1	Breaker, Circuit, 10 Amp	69	3-2698	5	Screw, Tap, #6-32 X 1/4"
20	363-2497	8	Fuse, 3.2 Amp, Distribution	70	363-2260	2	Fuse, 3 Amp
21	363-2498	1	Fuse, 0.5 Amp Slow-Blow	71	360-0750	2	Holder, Fuse
22	360-0750	9	Holder, Fuse	72	363-2459	1	Plug, Hole
23	35-7285	1	Bracket, Fuse	73	35-6332	1	Pcb Assy., Triac Module
24	360-0594	1	Nut-Hex	74	35-3434	1	Base, Triac Module
25	363-2812	8	Standoff, #6-32 X 3/8	75	360-0471	32	Surge Protector
26	35-8704	1	Bracket, Retainer, Lower	76	35-6418	32	Terminal Tab, Triac
27		1	Bracket, Retainer, Upper ▲	77	363-2431	32	Screw, #6 X 1/2, Hi-Lo W/Clamp
28	4-1063	6	Screw, Tap, #6	78	35-8795	1	Bracket, Triac Module
29	91-1779	1	Pcb Assembly, Power Supply	79	1-1112	8	Screw, Tap #8 Sst
30	363-2233	2	Guide, Card, Pcb 6-3/4"	80	35-9703	1	Plate, Rear Mounting
31	35-8367	1	Bracket, Power Supply	81	360-0733	1	Screw, Tap, #6
32	35-8570	1	Bracket, Modem	82	363-2271	1	Clamp, Cable
33	363-2281	2	Guide, Card, Pcb,	83	363-2431	2	Screw, #6 X 1/2, Hi-Lo W/Clamp
34	35-8704	1	Bracket, Retainer, Lower	84	35-7524	1	Strap
35	91-1781	1	Pcb Assy., Modem	85	360-0471	2	Surge Protector
36	363-2638	2	Fuse, .5 Amp	86	35-7458	1	Carrier, Surge Protector
37	363-2231	1	Connector, 3-Pin, Female	87	363-1596	1	Screw, Tap, #6
38	35-8755	1	Cable Assy., Power Level 3	88	35-7790	1	Bracket Assy., Surge Protector
39	363-1346	3	Tab, Terminal, Kt-4		91-0987		Pcb Assy., Mod. 30, 286, Network 8000 (Snc) ●■
40	35-6326	1	Pcb Assy., Pump/Current Monitor		91-0488		Pedestal, Satellite, Network 8000, Small Stainless Steel (Includes Items 1-6) ●■
41	35-7888	1	Surge Protector Assy.		91-0291		Door Assy., Stainless Steel (Includes Items 4-6) ●■
42	35-8796	1	Cable Assy., 24V		9-4993		Door Assy., Green Metal Pedestal (Includes Items 4-6) ●■
43	35-6346	1	Bracket, Pump Triac Module		9-1695		Lock Assy. (Includes Items 3 & 4) ●■
44	35-6399	9	Base Assembly, Triac				
45	35-6418	4	Terminal Tab, Triac				
46	360-0471	4	Surge Protector				
47	363-2431	4	Screw, #6 X 1/2", Hi-Lo W/Clamp				
48	360-0355	1	Screw, Tap #8				
49	35-8583	1	Transformer Assy., Triac				
50	35-8793	1	Cable Assy., Transformer, 24V				

● SERVICE ITEMS
▲ Not serviced separately

■ Not illustrated

Network 8000 Sat., Small, Green Stainless Pedestal (continued)

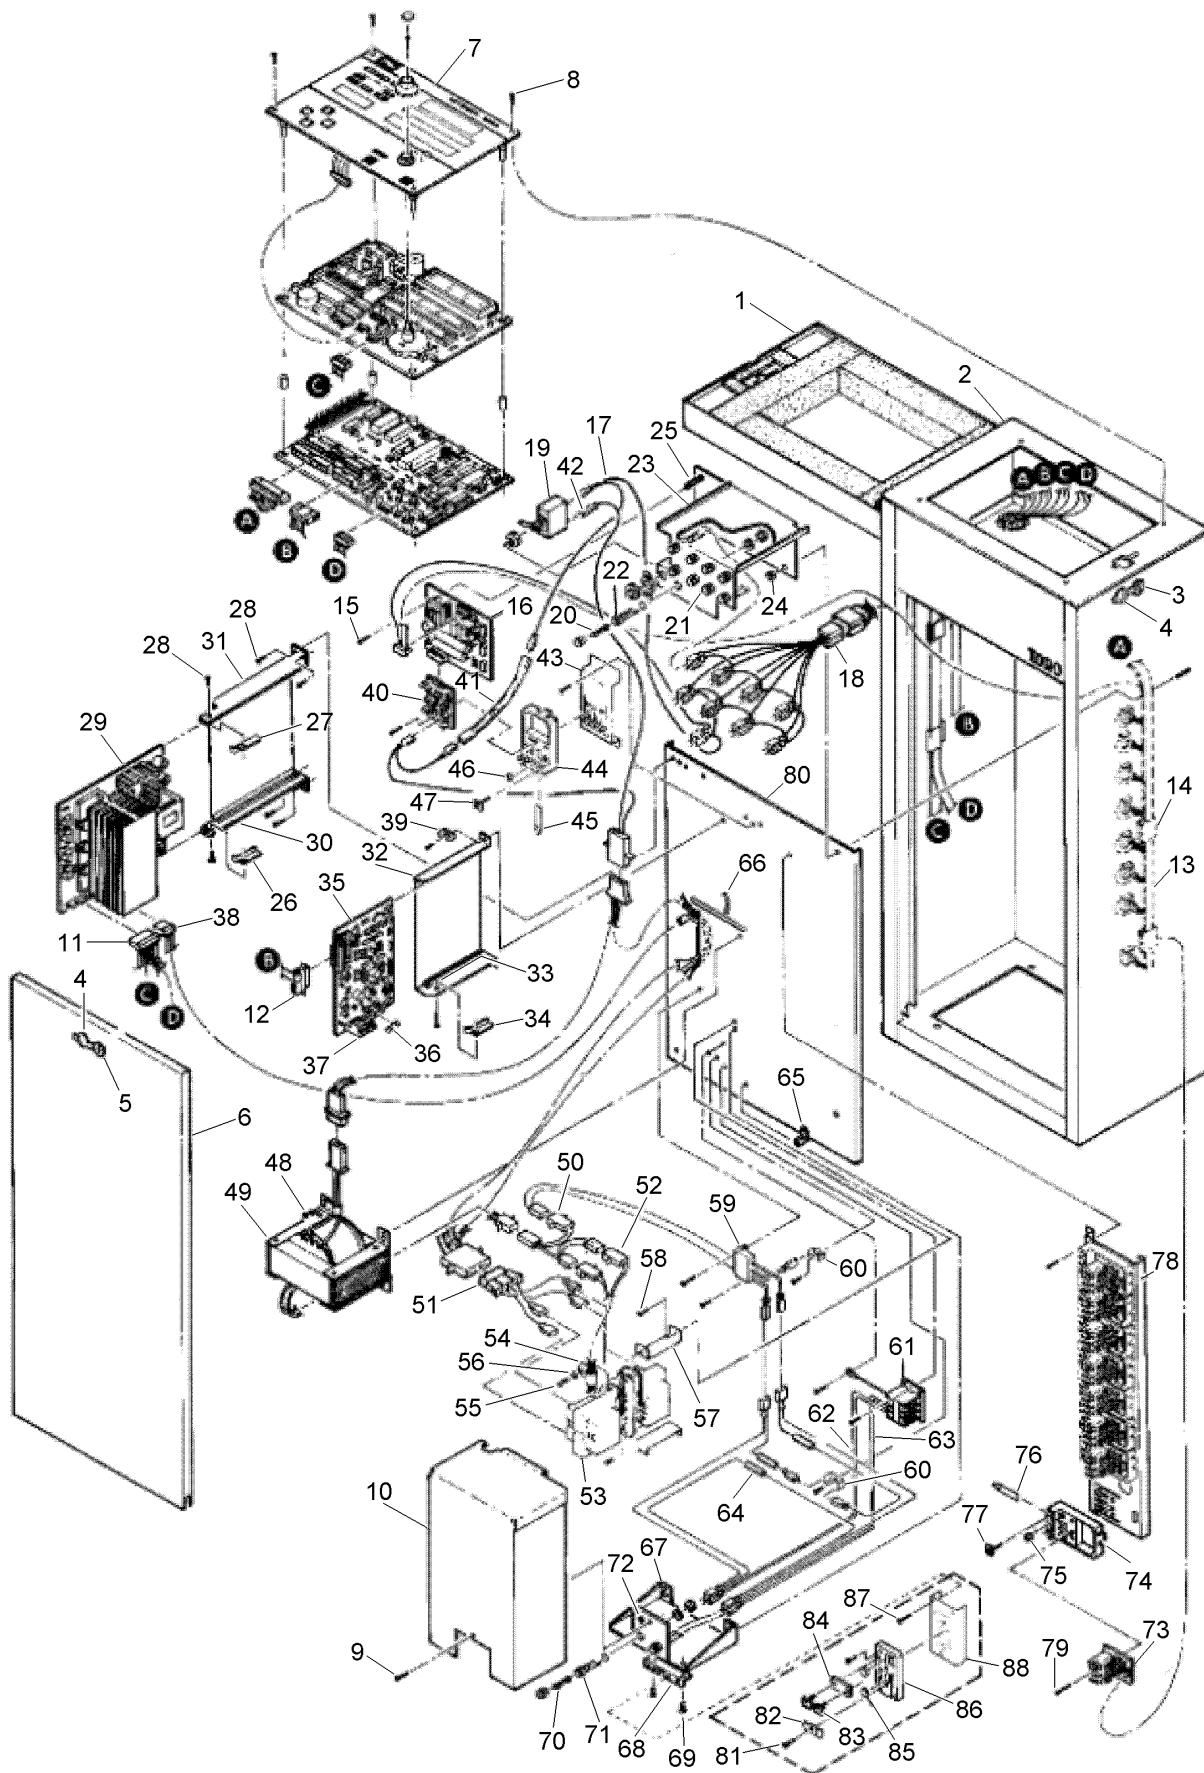

Network 8000 Sat., Small, Green Stainless Pedestal (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
	35-8741		Bracket And Fuse Assy. (Includes Items 67-72) ●■
	35-6399		Base Assembly, Triac Module (Includes Items 74-77) ●■
	35-8970		Kit, Installation, Network 8000 (Includes Items 81-88) ●■
	35-2355		Fuse Holder, Inline (Small Stainless Steel Pedestal Only) ●■

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
	363-2635		Fuse, 7.5 Amp ●■
	363-1684		Hex Nut, 5/16" (Small Stainless Steel Pedestal Only) ●■
	363-1683		Flat Washer, 5/16" (Small Stainless Steel Pedestal Only) ●■
	363-1686		Cap Screw, 5/16" X 4.5" (Small Stainless Steel Pedestal Only) ●■

● SERVICE ITEMS
▲ Not serviced separately

■ Not illustrated

Network 8000 Satellite Control Panel Assembly

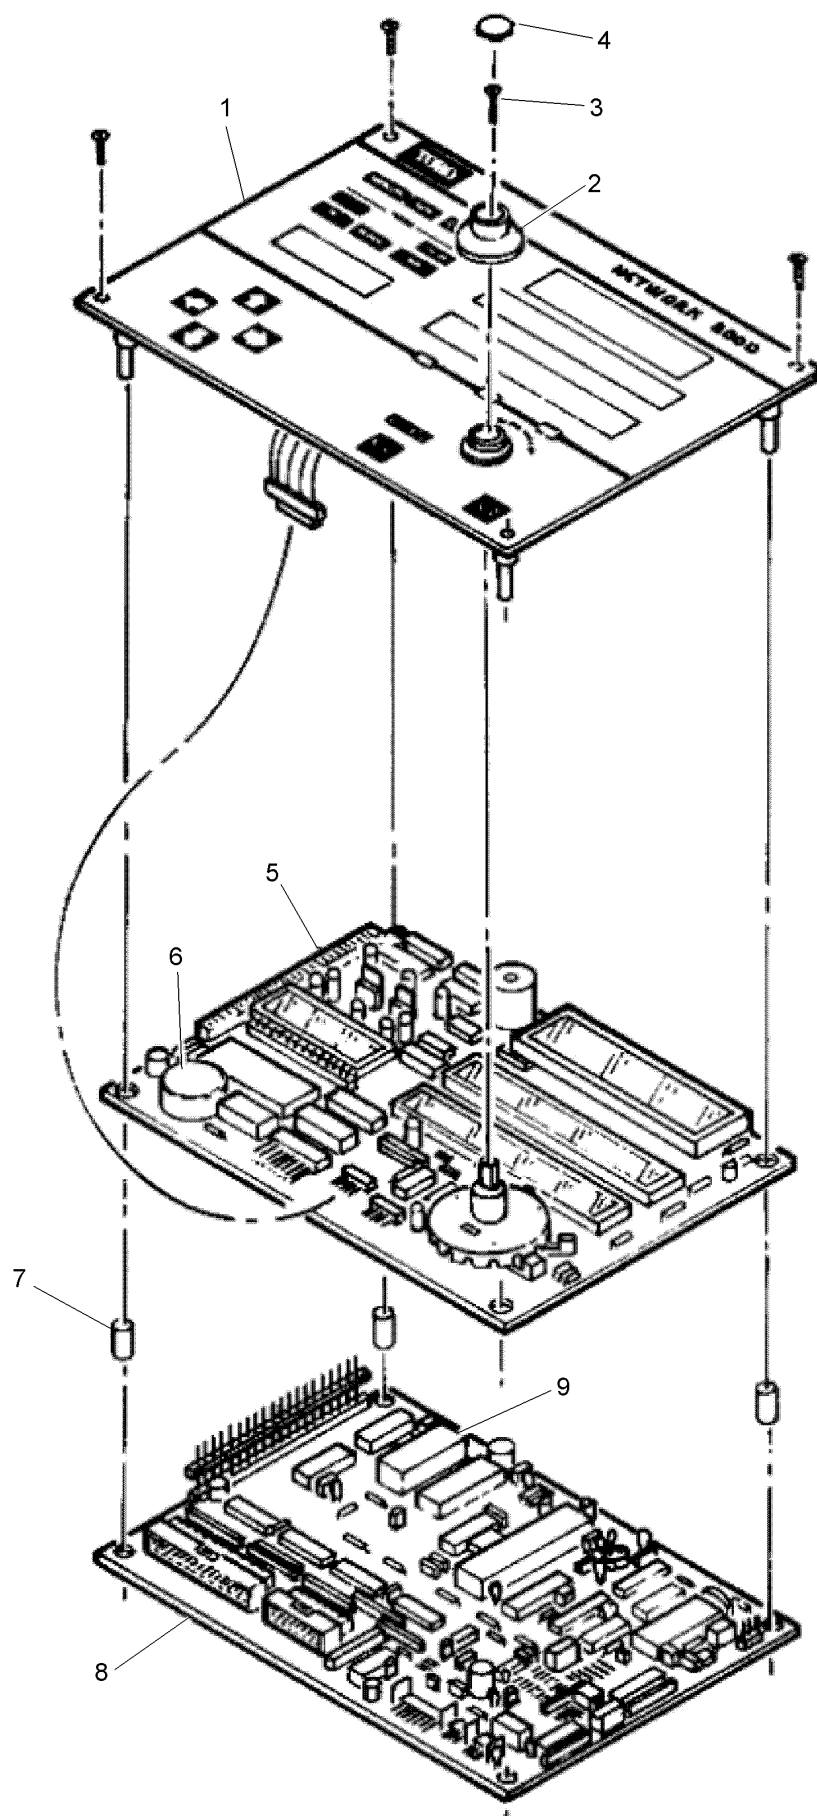

Network 8000 Satellite Control Panel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	35-6247	1	Faceplate Assy.
1		1	Faceplate Assembly, Nw 8000 Mc Unit ▲
1		1	Faceplate Assembly, Nw 8000 Plc ▲
2	35-6237	1	Knob
3	363-1596	1	Screw, Tap, #6-19
4	35-7637	1	Cap, Knob
5	91-1784	1	Pcb Assy., Display, Nw 8000 Sat.
5	91-1791	1	Pcb Assy., Display, Nw 8000 Mc Unit
5	91-1282	1	Pcb Assy., Display, Nw 8000 Plc
6	363-2200	1	Battery, 3.9V
7	35-6243	4	Spacer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	91-1790	1	Pcb Assembly, Processor
8	91-1786	1	Pcb Assy., Processor, Nw 8000 Mc Unit
8	91-1787	1	Pcb Assy., Processor, Nw 8000 Plc
9	995-94	1	Eprom, Network 8000 Satellite, Rev. 5.06
	91-2340		Control Panel Assy., Service (Includes Items 1-9) ●■
	91-1278		Control Panel Assembly, Network 8000 Mc Unit (Includes Items 1-9) ●■
	91-1800		Control Panel Assembly, Network 8000 Plc (Includes Items 1-9) ●■

● SERVICE ITEMS
▲ Not serviced separately

■ Not illustrated

Notes:

Notes:



Count on it.