


TORO®

MODEL NO. 30402-70001 & UP

PARTS CATALOG

QUADFLOAT 126 For Groundsmaster® 455D

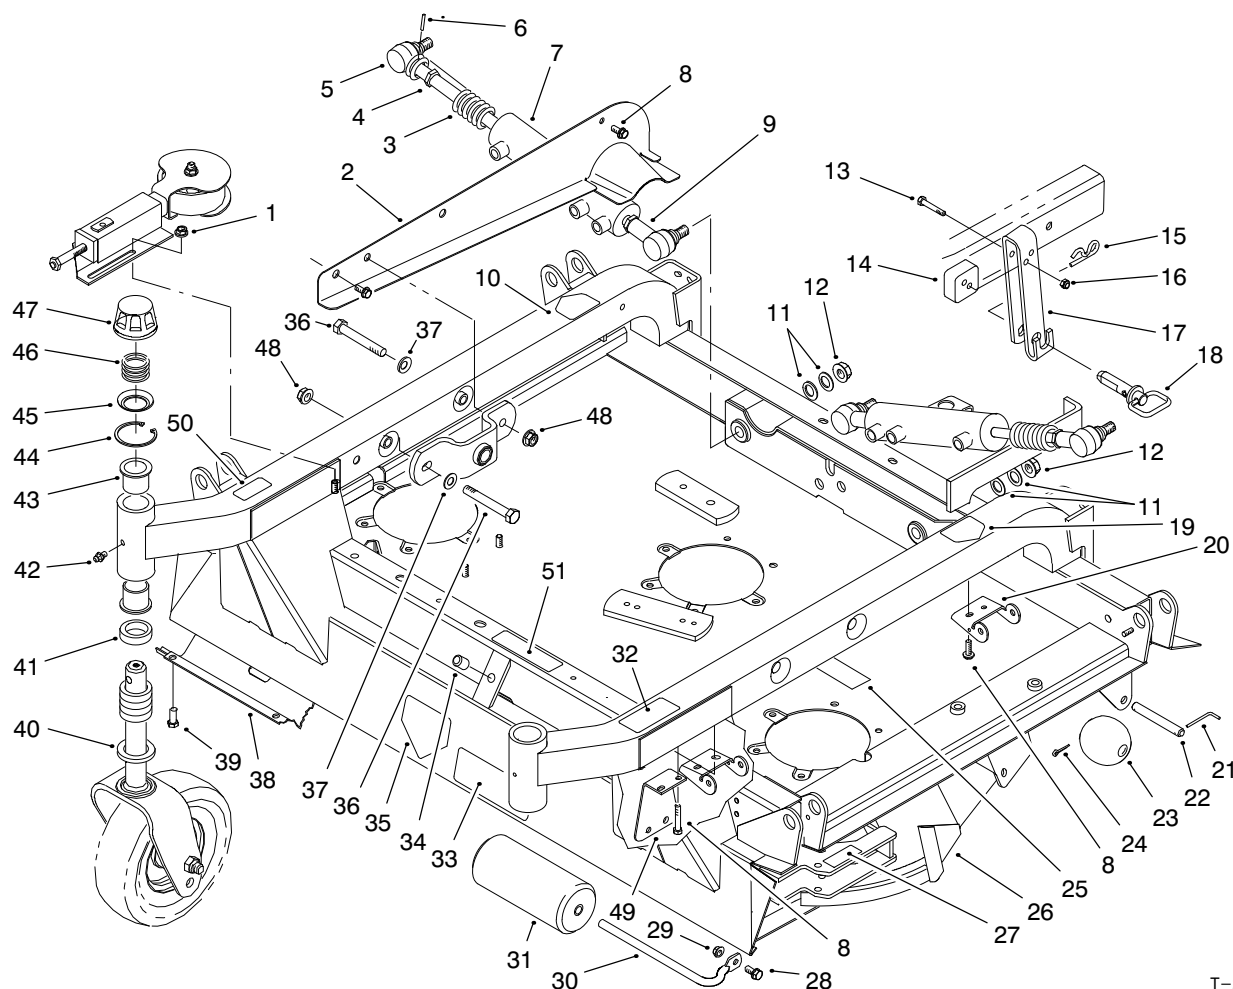


T-2683-1

CENTER DECK & CARRIER MOUNTING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32128-19	Nut - Flange Hd.	2	16	3296-29	Nut - Hex. Lock	4
2	86-2230	Cover - Guide, RH	1	17	94-8009	Strap - Deck H.O.C.	2
*	86-2260	Cover - Guide, LH	1	18	86-2390	Pin - H.O.C.	2
3	86-2510	Spring	2	19	93-9411	Decal - H.O.C. LH (Europe)	1
4	84-5300	Nut	4	19	86-0720	Decal - H.O.C. RH	1
5	92-5810	Ball Joint	2	20	86-1890	Hinge	4
6	32121-51	Pin - Roll	2	21	57-0690	Pin	2
7	86-2190	Cylinder - Hydraulic	2	22	57-0680	Shaft	2
8	32144-26	Screw - Hex. Washer Hd.	12	23	29-4820	Roller	2
9	92-5811	Ball Joint	2	24	3272-11	Pin - Cotter	2
10	93-9410	Decal - H.O.C. RH (Europe)	1	25	86-0740	Decal - Belt	1
10	86-0730	Decal - H.O.C. RH	1	26	92-7757	Center Deck Assembly (Incl. Ref. #10, 19, 25, 27, 32-35, 43, 50 & 51)	1
11	86-1440	Washer - Flat	4	27	93-6674	Decal - Warning (Europe)	2
12	32128-54	Nut - Flange	2	27	55-4300	Decal - Warning	2
13	322-21	Screw - HH	4	28	3234-1	Screw - Hex. Flange Hd.	1
14	94-8008	Plate - Wear	2				
15	3290-256	Pin - Cotter, Hair	2				

*Not Illustrated

©The TORO Company - 1996
All Rights Reserved

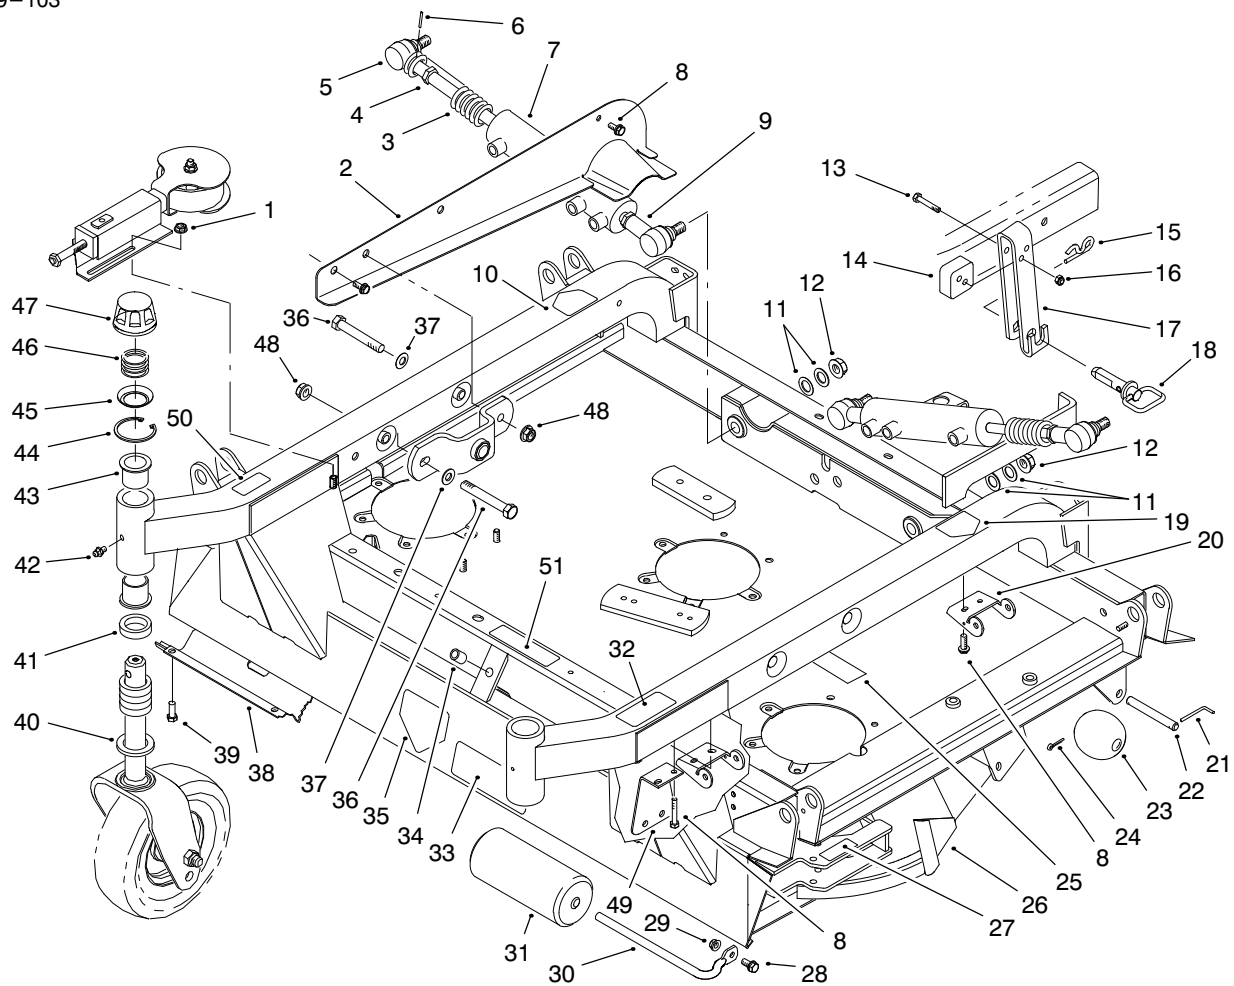

T-2683-1


CENTER DECK & CARRIER MOUNTING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	32128-21	Nut – Flange Hd.	1
30	68-6840	Shaft	1
31	68-6710	Roller	1
32	93-9421	Decal – H.O.C. (Europe)	1
32	86-0780	Decal – H.O.C.	1
33	93-7818	Decal – Caution (Europe)	1
33	68-8340	Decal – Caution	1
34	32148-10	Insert – Threaded	1
35	93-7815	Decal – Danger (Europe)	1
35	43-8480	Decal – Danger	1
36	325-35	Screw – Cap Hex. Hd.	4
37	3256-26	Washer – Flat	4
38	93-7207	Shield – Center	1
39	32144-11	Screw – Hex. Washer Hd.	14
40	77-0950	Washer	2

Ref. No.	Part No.	Description	No. Used
41	69-1510	Spacer	10
42	302-5	Fitting – Grease	2
43	69-6470	Bushing	4
44	92-5581	Ring – Retaining, Internal	2
45	92-5583	Washer	2
46	92-9726	Spring – Compression	2
47	92-8861	Cap	2
48	32128-23	Nut – Flange Hd.	4
49	94-8020	Shield – Wire Harness	2
†50		Decal – Safety Std.	1
51	93-7814	Decal – Danger (Europe)	1
51	86-8410	Decal – Danger	1
*	92-9727	Assembly – Cap, H.O.C. (Incl. Ref. #54-57)	2

*Not Illustrated

†Not Sold Separately

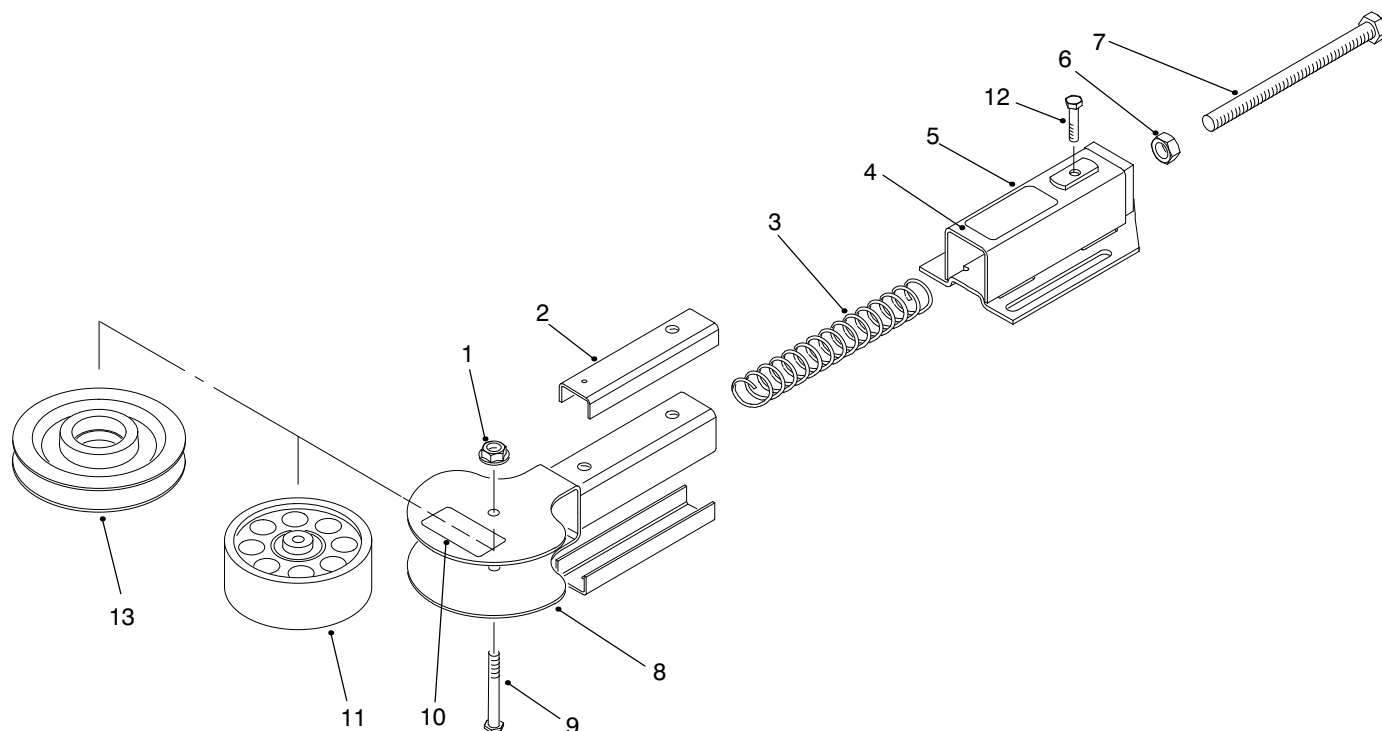


T-1451-3

BELT TENSION ADJUSTOR

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32128-43	Nut – Lock, Flange Head	3	6	3217-9	Nut – Jam	3
2	86-0060	Sleeve – Tube	6	7	86-0050	Screw – Adjusting	3
3	92-7767	Spring – Compression (Wing Deck Adjustor) (Color – White)	2	8	95-4383	Yoke – Pulley (Incl. Ref. #10)	3
*	92-7768	Spring – Compression (Center Deck Adjustor) (Color – Red)	1	9	86-2000	Bolt – Thin Head	3
4	93-9418	Decal – Belt (Europe)	1	10	93-6674	Decal – Warning (Europe)	1
4	86-2670	Decal – Belt	1	10	55-4300	Decal – Warning	1
5	92-0626	Tube Assembly (Incl. Ref. #4)	3	11	92-0625	Idler Pulley Assembly	2
				12	322-5	Screw – HH	1
				13	92-9722	Idler Pulley Assembly – V	1

*Not Illustrated

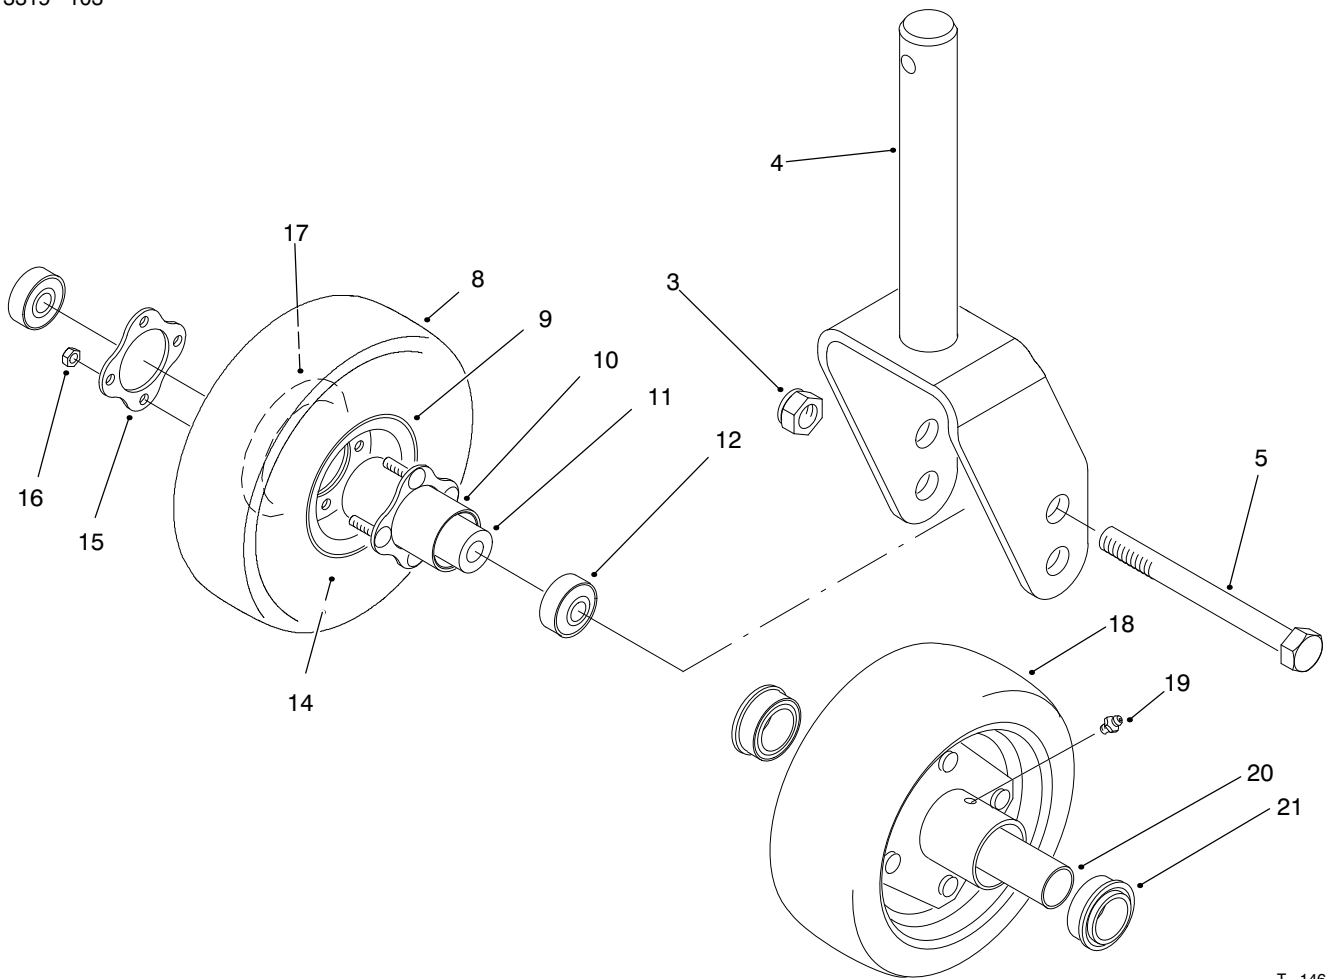


T-1461-3

FRONT CASTOR FORK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	3296-53	Nut - Lock	2
4	92-7750	Fork (Used on Wing Units)	2
*	92-7752	Fork (Used on Center Unit)	2
5	327-24	Screw - Cap Hex. Hd.	2
8	93-9939	Tire - 8"	2
*	93-4243	Tire - 10"	2
9	93-4239	Rim - Wheel	2
10	93-5980	Hub	2
11	93-4241	Spacer - Bearing	2
12	93-4237	Bearing - Castor	4
14	68-8950	8" Tube - w/Valve	2
*	93-4244	10" Tube - w/Valve	2
15	93-4242	Plate	2
16	32128-16	Nut - Hex. Lock	8
17	95-2741	Rim - Wheel	2

Ref. No.	Part No.	Description	No. Used
18	76-1880	Segmented 10" Wheel Optional (Incl. Ref. #19-21)	2
19	302-5	Fitting - Grease	2
20	251-332	Spacer - Inner	2
21	251-321	Bearing - Ball	2
*	93-9938	Wheel - 8" (Used on Wing Units) (Incl. Ref. #8-17)	2
*	93-4240	Wheel - 10" (Used on Center Unit) (Incl. Ref. #8-17)	2
*	93-5974	8" Foam Filled Wheel Assy. (Optional) (Incl. Ref. #8-12, & 15-17)	2
*	93-5973	10" Foam Filled Wheel Assy. (Optional) (Incl. Ref. #8-12, & 15-17)	2

*Not Illustrated

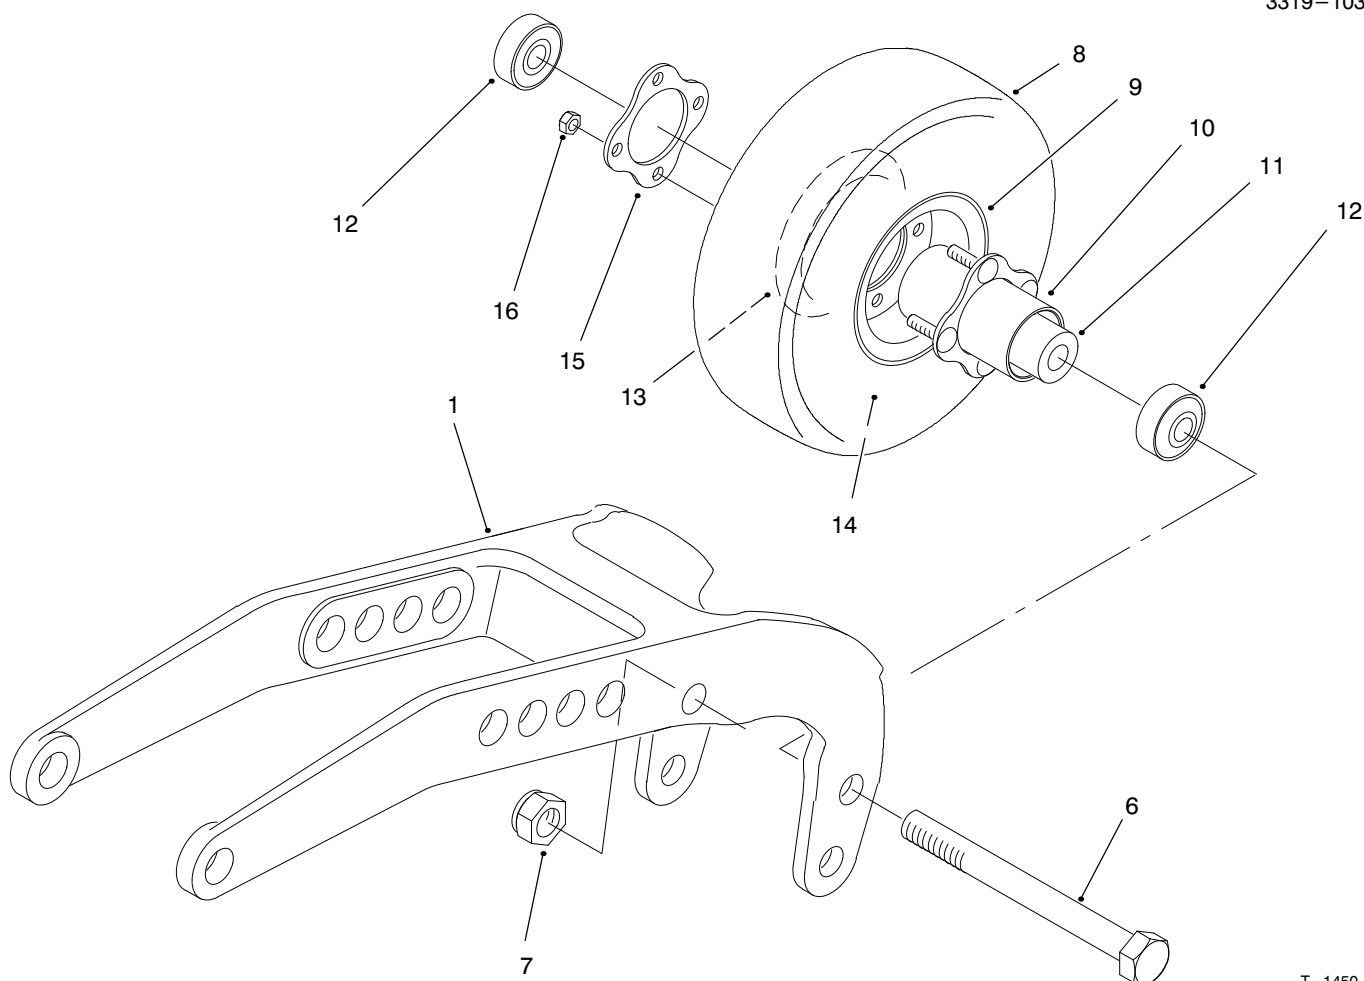


T-1450-3

REAR PIVOT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-9790	Arm - Pivot, Rear	2	14	68-8950	Tube - w/Valve	2
6	327-24	Screw - Cap Hex. Hd.	2	15	93-4242	Plate	2
7	3296-53	Nut - Lock	2	16	32128-16	Nut - Flange Lock	8
8	93-9939	Tire - 8"	2	*	93-9938	Castor Wheel Assembly (Incl. Ref. #8-16)	2
9	93-4239	Rim - Wheel	2				
10	93-5980	Hub	2	*	93-5974	8" Foam Filled Wheel Assy. (Optional) (Incl. Ref. #8-13 & 15-16)	2
11	93-4241	Spacer - Bearing	2				
12	93-4237	Bearing - Castor	4				
13	95-2741	Rim - Wheel	2				

*Not Illustrated

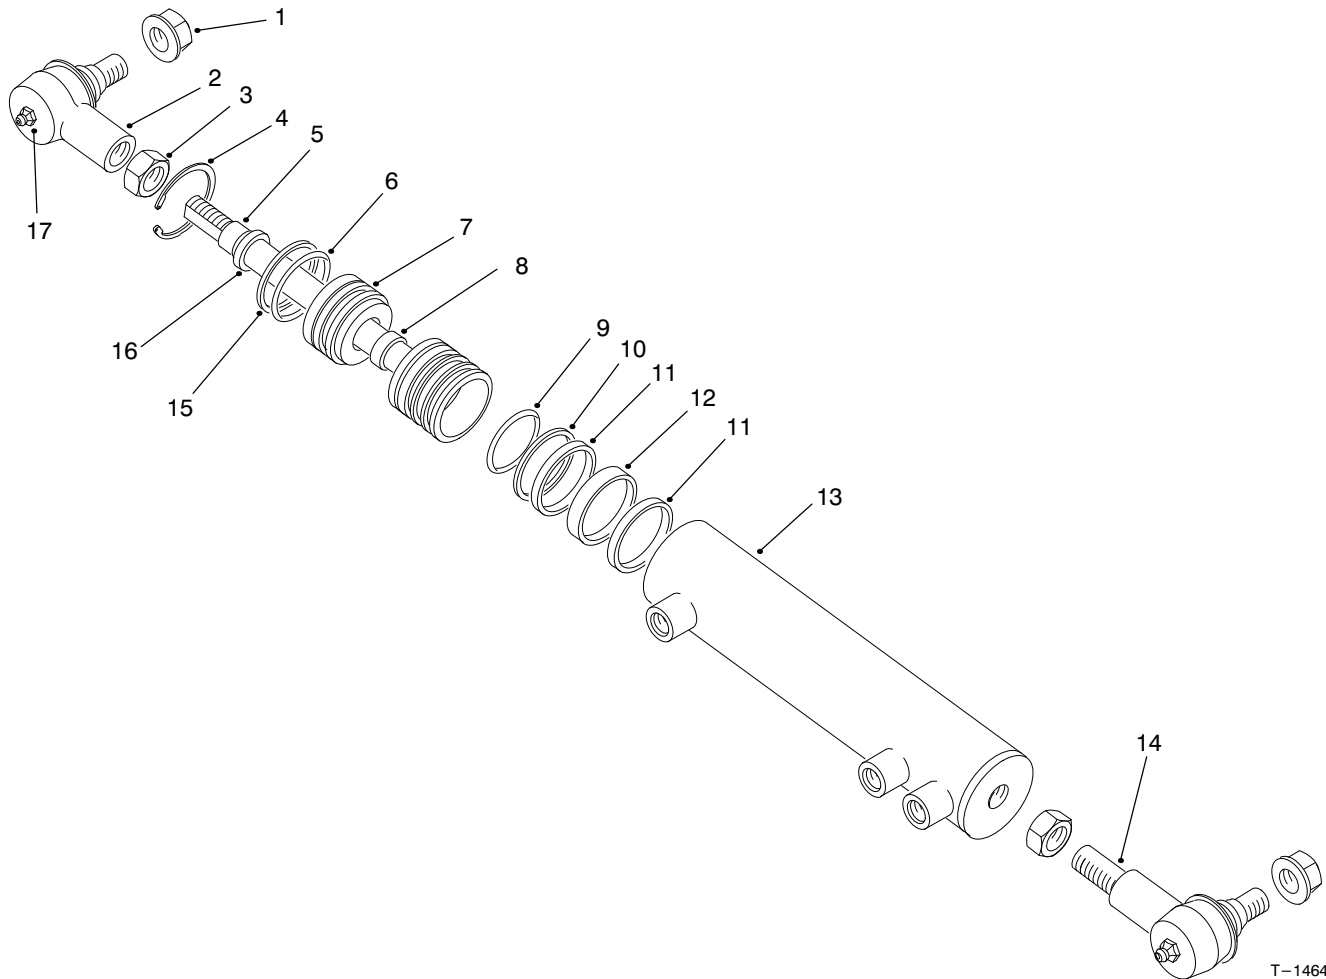


T-1464-1

HYDRAULIC CYLINDER ASSEMBLY NO. 86-2190

Ref. No.	Part No.	Description	No. Used
1	32128-54	Nut - Flange	2
2	92-5810	Assembly - Rod End	1
3	84-5300	Nut - Jam	2
4		Ring - Retaining	1
5	92-0603	Piston & Rod Assembly	1
6		O-Ring	1
7	92-0604	Head - Ring Retaining	1
8		Cup - U	1
9		O-Ring	1
10		Ring - Piston	1
11		Ring - Wear	2

Ref. No.	Part No.	Description	No. Used
12		Ring - Wear	1
13	92-0602	Assembly - Barrel	1
14	92-5811	Assembly - Rod End	1
15		Back-up	1
16		Wiper	1
17	302-5	Fitting - Grease	2
*	86-2190	Cylinder Assembly (Incl. Ref. 4-13 & 15-16)	1
*	92-0600	Kit - Seal (Incl. Ref. #4, 6, 8-12, 15 & 16)	1

*Not Illustrated

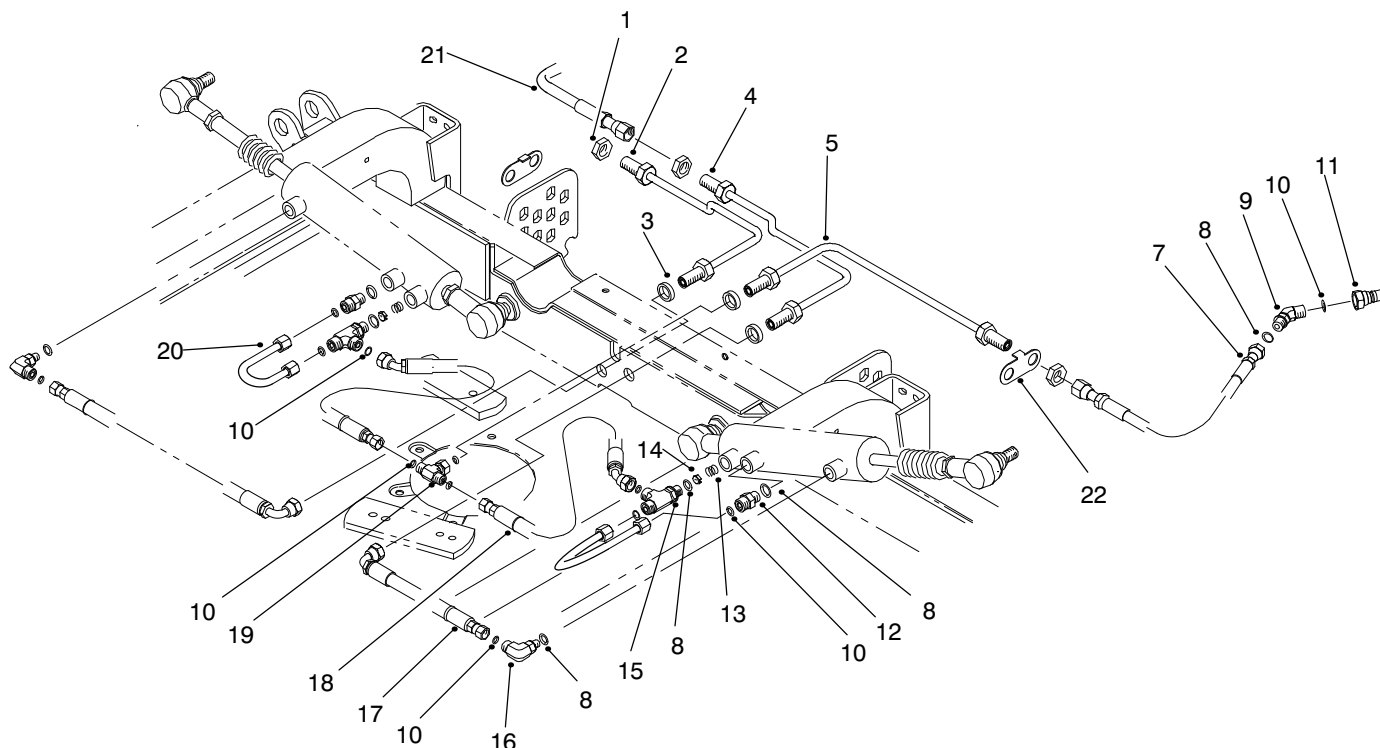


T-1460-1

HYDRAULIC HOSE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	340-70	Nut – Lock, Bulkhead	6	13	86-2630	Spring – Compression	2
2	86-2480	Assembly – Tube	1	14	84-6403	Orifice	2
3	86-0690	Spacer	3	15	340-86	Fitting – Hydraulic, Tee (Incl. Ref. #8 & 10)	2
4	86-2490	Assembly – Tube	1	16	340-77	Elbow – Hydraulic 90° (Incl. Ref. #8 & 10)	2
5	86-2470	Assembly – Tube	1	17	86-2440	Assembly – Hose	2
7	86-2460	Assembly – Hose	2	18	86-2450	Assembly – Hose	2
8	237-42	O-Ring	11	19	340-166	Fitting (Incl. Ref. #10)	1
9	340-87	Fitting – Hydraulic (Incl. Ref. #8 & 10)	3	20	86-2640	Assembly – Tube, Cylinder	2
10	237-22	O-Ring	12	21	86-1420	Hose – Hydraulic	1
11	86-5460	Nipple – Coupler	3	22	92-5807	Retainer – Hardlines	2
12	340-2	Adapter – Straight (Incl. Ref. #8 & 10)	2				

*Not Illustrated

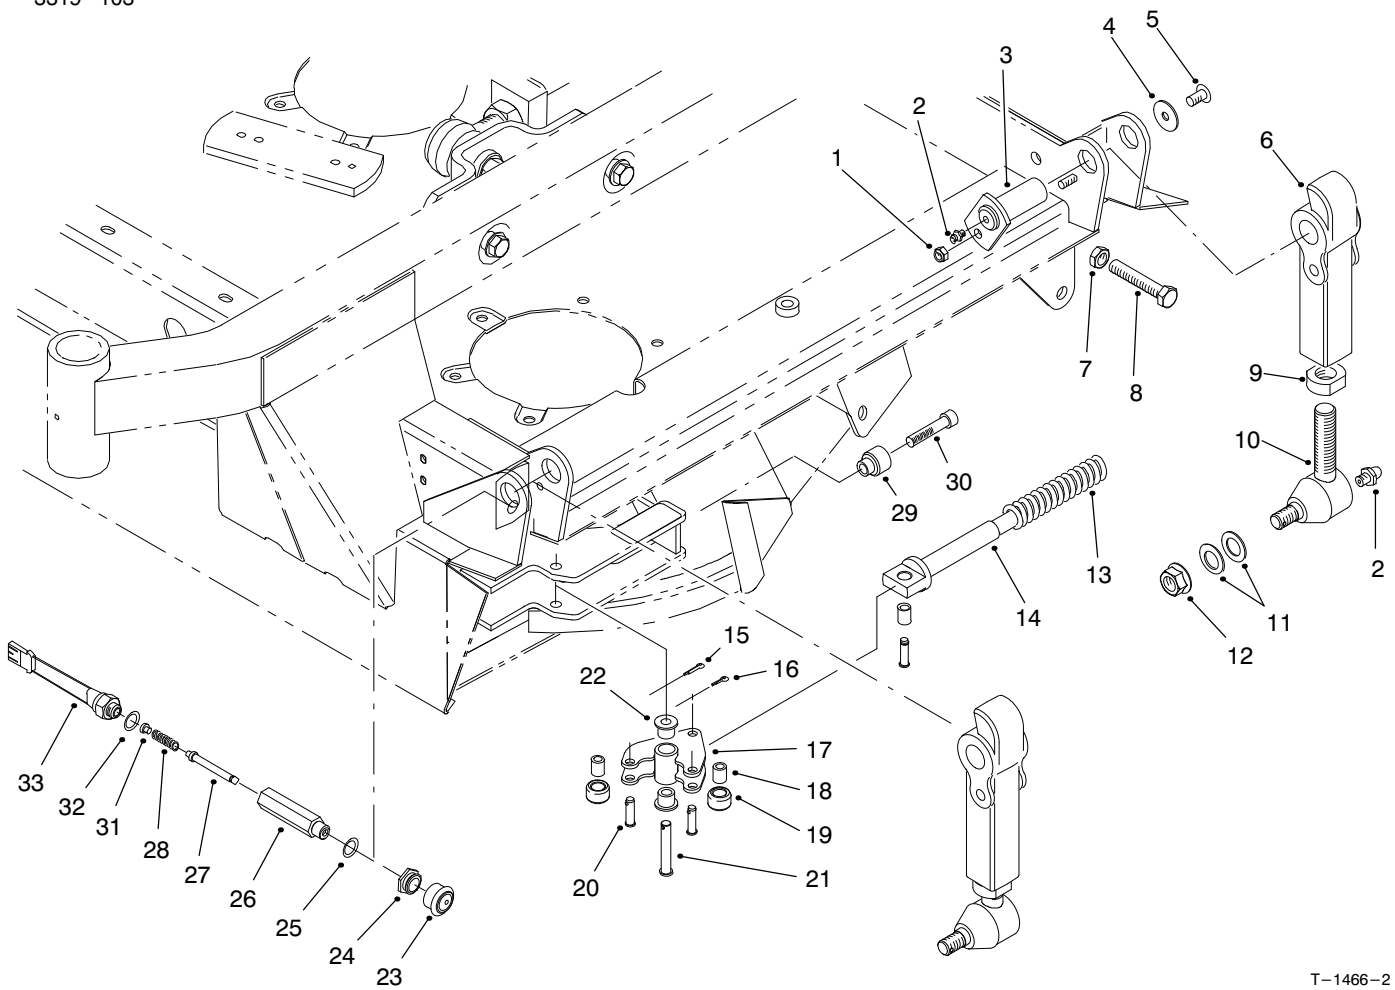


T-1466-2

PIVOT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	4
2	302-5	Fitting - Grease	8
3	84-1350	Pin - Pivot	4
4	53-6380	Washer	4
5	323-4	Screw - Hex. Hd	4
6	84-0800	Arm - Pivot	4
7	3218-18	Nut - Jam	2
8	60-9870	Screw	2
9	86-2070	Nut	4
10	86-2080	Ball Joint (Incl. Ref. #2)	4
11	86-1440	Washer - Lock	8
12	32128-54	Nut - Flange	4
13	86-2560	Spring	2
14	86-2650	Support - Spring	2
15	3272-9	Pin - Cotter	2
16	3272-5	Pin - Cotter	6

Ref. No.	Part No.	Description	No. Used
17	86-2150	Lock	2
18	86-2090	Bushing	6
19	86-2120	Roller	4
20	283-61	Pin - Clevis	6
21	86-2130	Pin - Clevis	2
22	86-2180	Bushing	4
23	94-8031	Boot	2
24	94-8029	Nut - Special	2
25	237-7	O-Ring	2
26	94-8023	Guide	2
27	94-8024	Plunger	2
28	43-8600	Spring - Compression	2
29	92-4036	Cap - Rod	2
30	92-4037	Screw - Hex. Socket Hd.	2
31	43-8610	Guide - Spring Ball & Seat	2
32	237-42	O-Ring	2
33	72-4320	Switch - Ball N.O.	2

*Not Illustrated

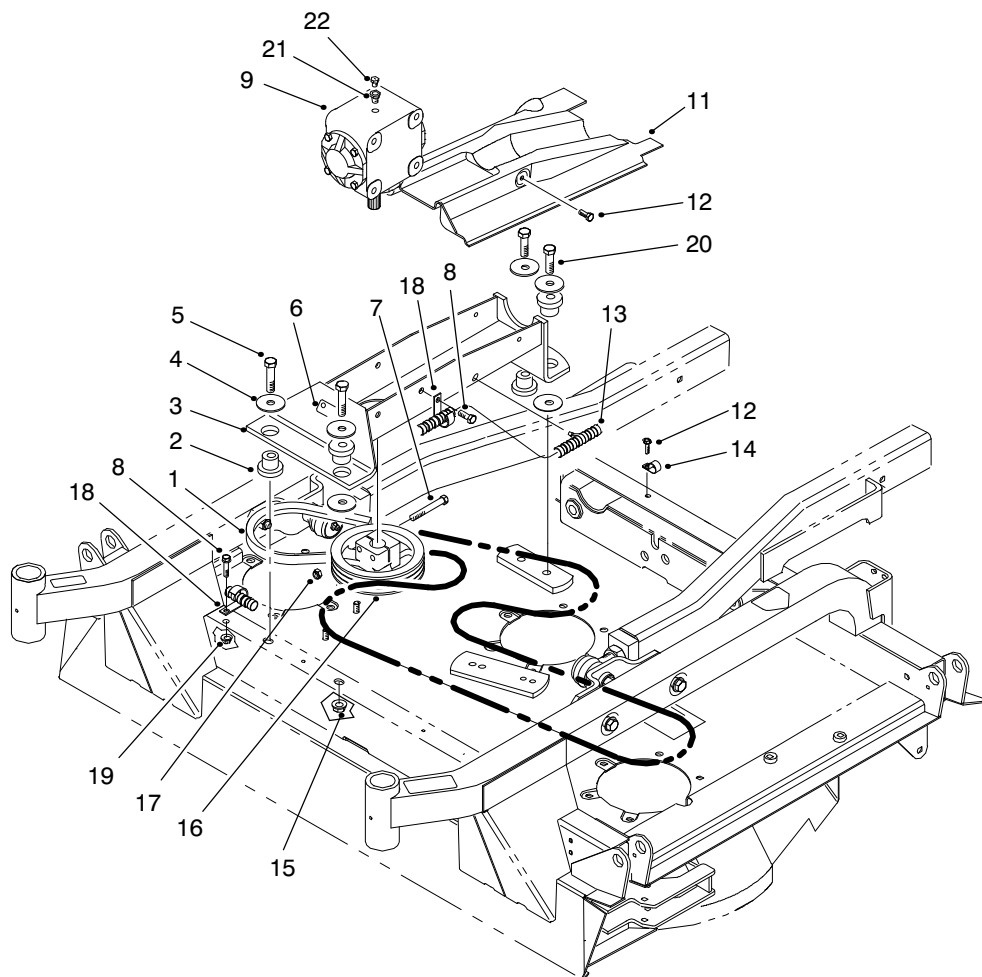


T-2682-1

GEAR BOX & DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	86-1970	V-Belt	1	13	95-4375	Wire Harness	1
2	84-1550	Mount - Rubber	4	14	2412-138	Clamp-R	1
3	86-2020	Support - Gear Box	1	15	32128-23	Nut - Hex. Flange Hd.	2
4	86-1990	Washer	6	16	86-1410	Pulley - Gearbox 6.50 Dia.	1
5	325-9	Screw - Cap Hex. Hd.	2	*	86-3100	Pulley - Gearbox 7.50 Dia. (Optional)	1
6	93-6697	Decal - Lube (Europe)	1	17	3296-39	Nut - Lock	2
6	70-2560	Decal - Lube	1	18	2412-150	J-Clip	3
7	323-14	Screw - Cap Hex. Hd.	2	19	3290-357	Nut - Flange	2
8	3234-1	Screw - Cap Hex. Hd.	6	20	325-7	Screw - Cap Hex. Hd.	2
9	94-8295	Gear Box	1	21	62-3550	Bushing - Reducer	1
11	86-1830	Cover - Drive Shaft	1	22	62-3520	Valve - Pressure Relief	1
12	32144-70	Screw - Hex. Flange Hd.	3				

*Not Illustrated

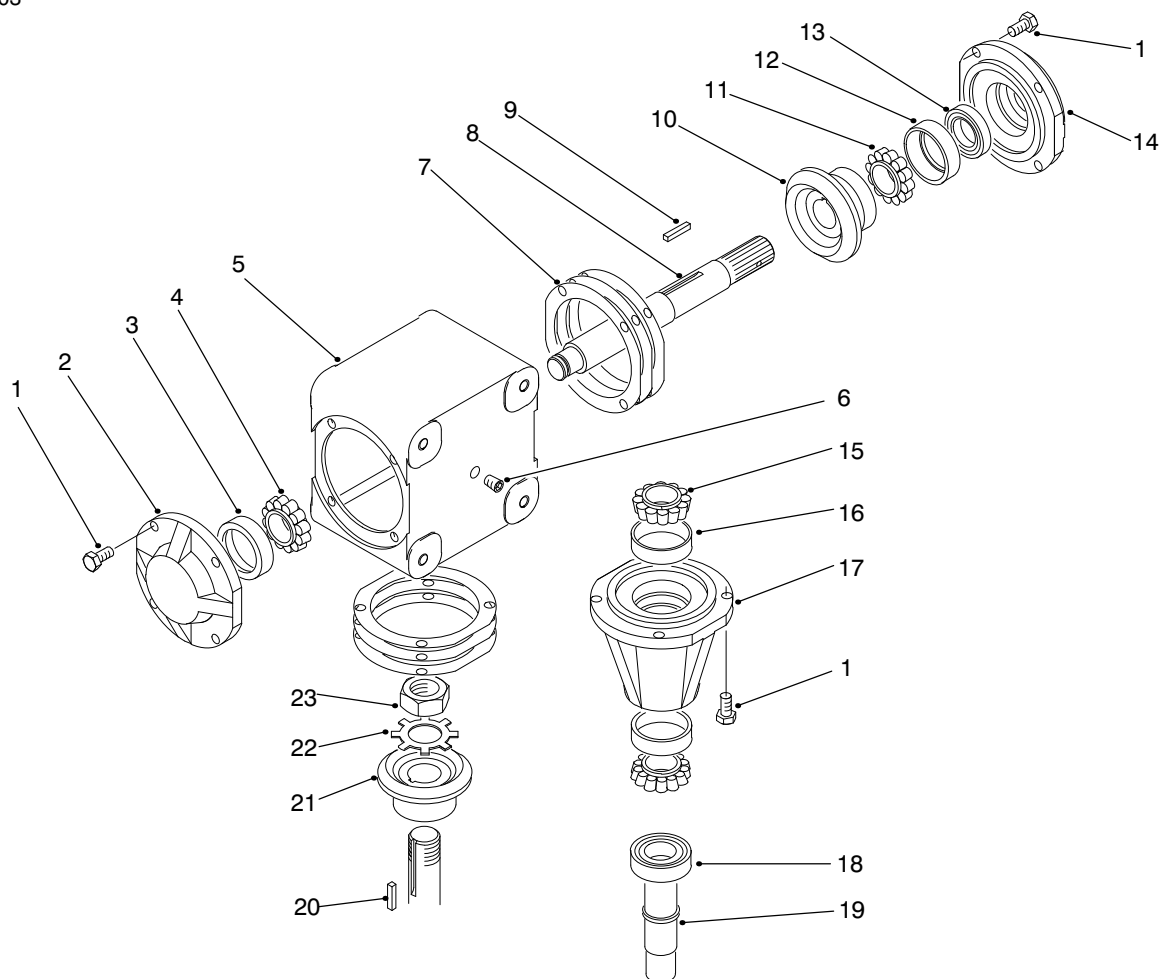


T-2678-1

GEAR BOX ASSEMBLY 94-8295

Ref. No.	Part No.	Description	No. Used
1	62-3310	Screw	12
2	62-3320	Cap - Blank	1
3	62-3340	Cup - Bearing	1
4	254-94	Cone - Bearing	1
5	92-0605	Housing	1
6	62-3490	Plug - Pipe	2
7	21-6180	Gasket - .015	A/R
*	62-3430	Gasket - .005	A/R
*	62-3440	Gasket - .003	A/R
8	94-8283	Shaft - Thru	1
9	92-0606	Key	1
10	92-0607	Gear - RH	1
11	92-0610	Cone - Bearing	1

Ref. No.	Part No.	Description	No. Used
12	92-0611	Cup - Bearing	1
13	94-8280	Seal	1
14	92-0608	Cap - Thru	1
15	92-0616	Cone - Bearing	2
16	92-0617	Cup - Bearing	2
17	92-0618	Hub	1
18	94-8282	Seal	1
19	94-8281	Shaft - Pinion	1
20	62-3380	Key	1
21	92-0619	Gear - LH	1
22	92-0613	Washer - Lock, Gear	1
23	92-0612	Nut - Lock	1


*Not Illustrated

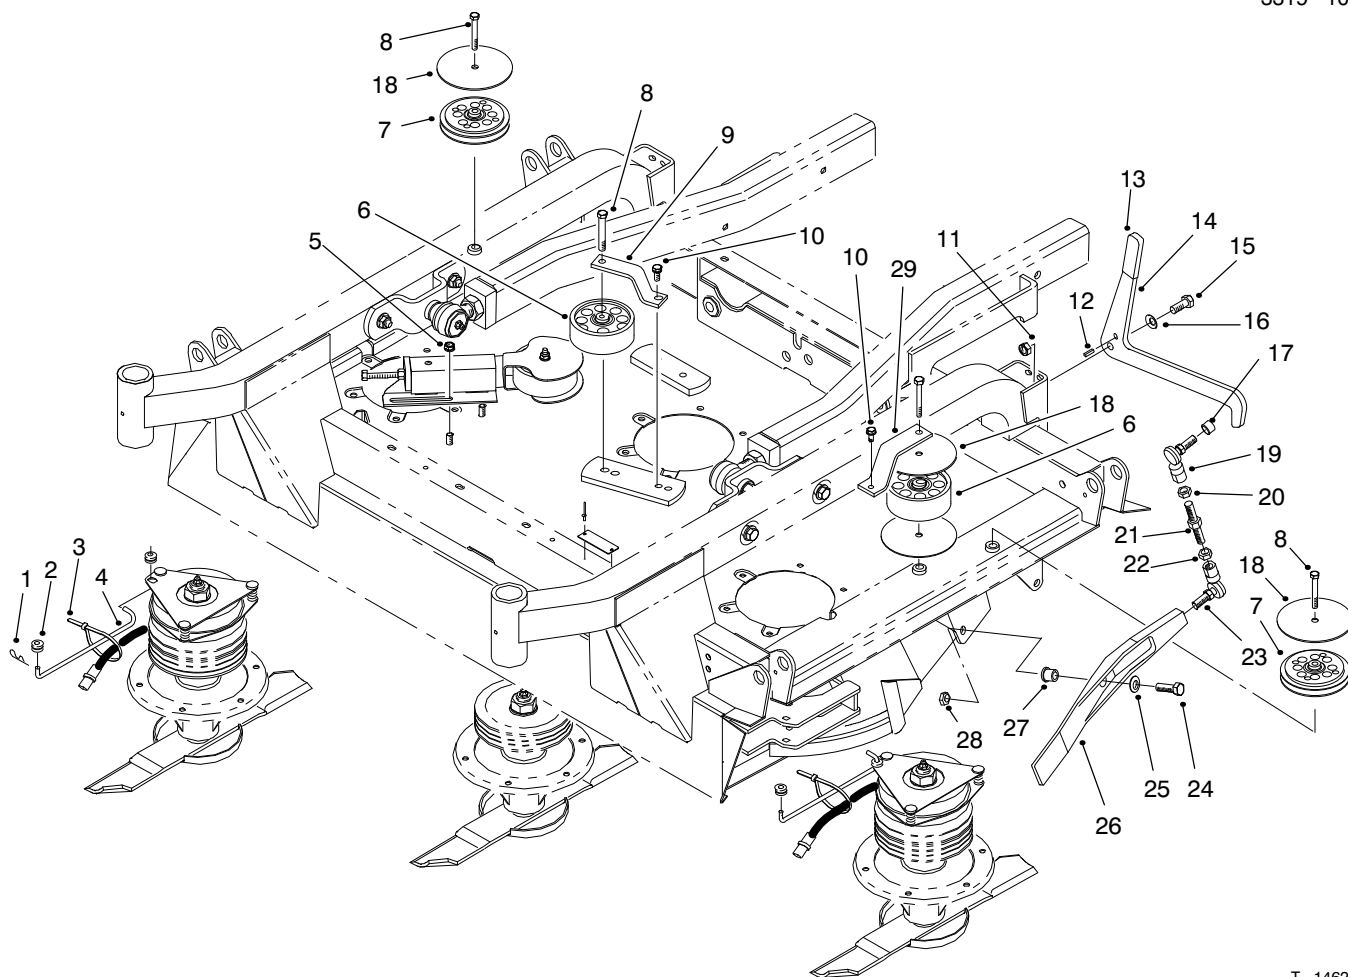

T-1462-3

CENTER DECK PULLEY ASSEMBLIES


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-467	Pin - Hair, Cotter	2	16	3290-483	Washer - Belleville	2
2	237-141	Grommet - Rubber	4	17	86-1560	Spacer	2
3	3290-378	Tie - Cable	2	18	86-2600	Washer	4
4	86-2590	Rod - Clutch	2	19	86-1490	Rod End - LH Thread	2
5	32128-19	Nut - Lock, Flange Hd.	2	20	3220-12	Nut - Jam LH Thread	2
6	92-0625	Idler Pulley Assembly	2	21	86-1570	Rod - Threaded	2
7	92-9722	Idler Pulley Assembly	2	22	3220-5	Nut - Jam	2
8	323-13	Screw - Cap Hex. Hd.	4	23	86-1550	Rod End - RH Thread	2
9	86-1820	Bracket - Pulley	1	24	325-7	Screw - Cap Hex. Hd.	2
10	32144-70	Screw - Hex. Flange Hd.	2	25	3256-26	Washer - Flat	2
11	3296-25	Nut - Lock	2	26	92-4033	Door Trap	2
12	32121-11	Pin - Roll	2	27	256-243	Bushing	2
13	48-7081	Cover - Handle	2	28	3296-25	Nut - Lock	2
14	86-2400	Latch - Arm	2	29	92-7766	Bracket - Pulley	1
15	325-5	Screw - Cap Hex. Hd.	2				

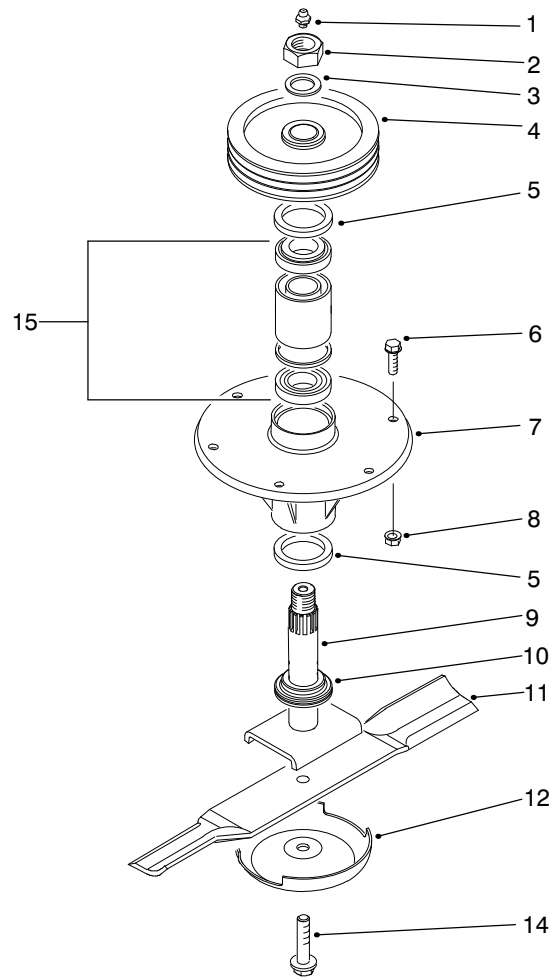

T-1328-1

SPINDLE ASSEMBLY (Center)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-2	Fitting - Grease	1	8	3290-357	Nut - Lock, Flange Head	6
2	3296-49	Nut - Lock	1	9	95-4387	Shaft - Spindle	1
3	86-1480	Washer	1	10	92-9800	Spacer - Spindle	1
4	84-0780	Pulley	1	11	86-0010	Blade - 19"	1
5	253-154	Seal - Oil	2	12	72-9361	Cup - Anti-Scalp	1
6	3234-11	Screw - Hex. Flange Head	6	14	92-5816	Bolt - Blade	1
7	69-1530	Housing - Spindle	1	15	71-2530	Assembly - Bearing	1

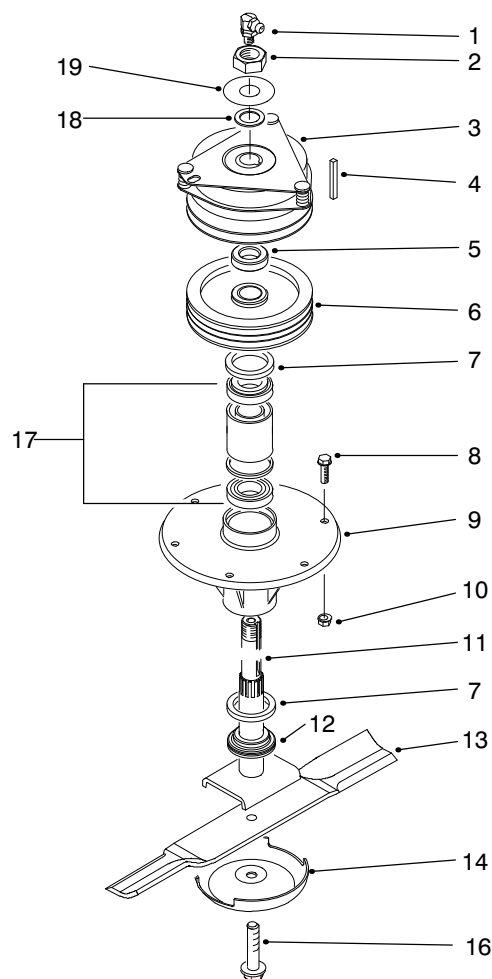

T-1329-2

SPINDLE ASSEMBLY (Clutch)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-33	Fitting - Grease 90°	1	10	3290-357	Nut - Flange	6
2	3296-49	Nut - Lock	1	11	95-4388	Shaft - Spindle	1
3	86-1710	Assembly - Clutch, Elect.	1	12	92-9800	Spacer - Spindle	1
4	68-3220	Key - Square	1	13	86-0010	Blade - 19"	1
5	86-1740	Spacer	1	14	72-9361	Cup - Anti-Scalp	1
6	84-0780	Pulley	1	16	92-5816	Bolt - Blade	1
7	253-154	Seal - Wave	2	17	71-2530	Assembly - Bearing	1
8	3234-11	Screw - Hex. Flange Head	6	18	86-1480	Washer	1
9	69-1530	Housing - Spindle	1	19	94-8013	Washer	1

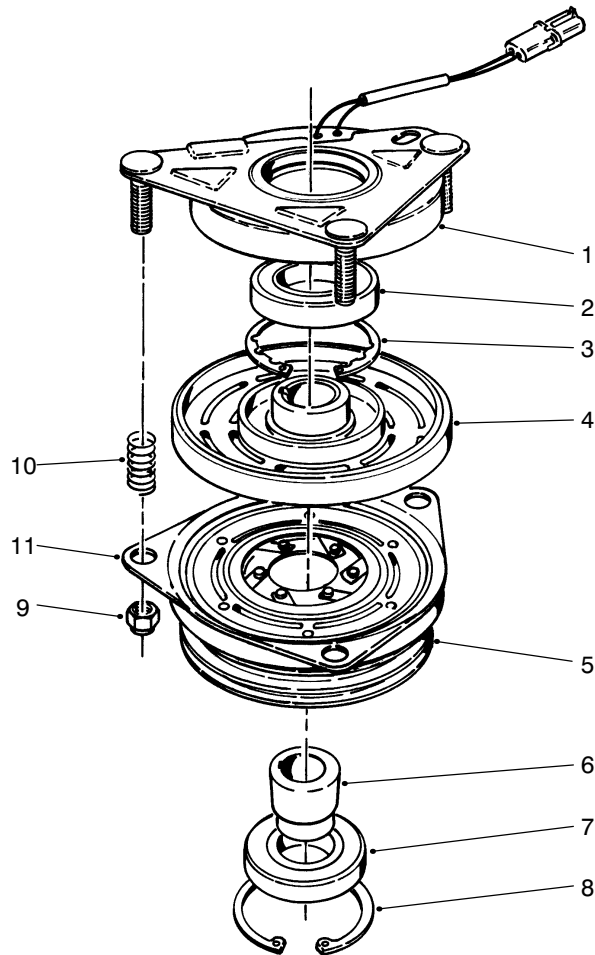

T-0544-1

CLUTCH ASSEMBLY NO. 86-1710

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-7050	Field Rotor Assembly (Incl. Ref. #2-4)	1	6	67-7080	Collar - Bearing	1
2		Bearing - Field	1	7	67-7090	Bearing - Pulley	1
3		Ring - Retaining	1	8	67-7060	Ring - Retaining	1
4		Field Coil Assembly	1	9	3296-6	Nut - Lock	3
5	92-0627	Armature & Pulley Assy. (Incl. Ref. #6-8)	1	10	44-8320	Spring	3
				11	67-7100	Plate - Brake	1

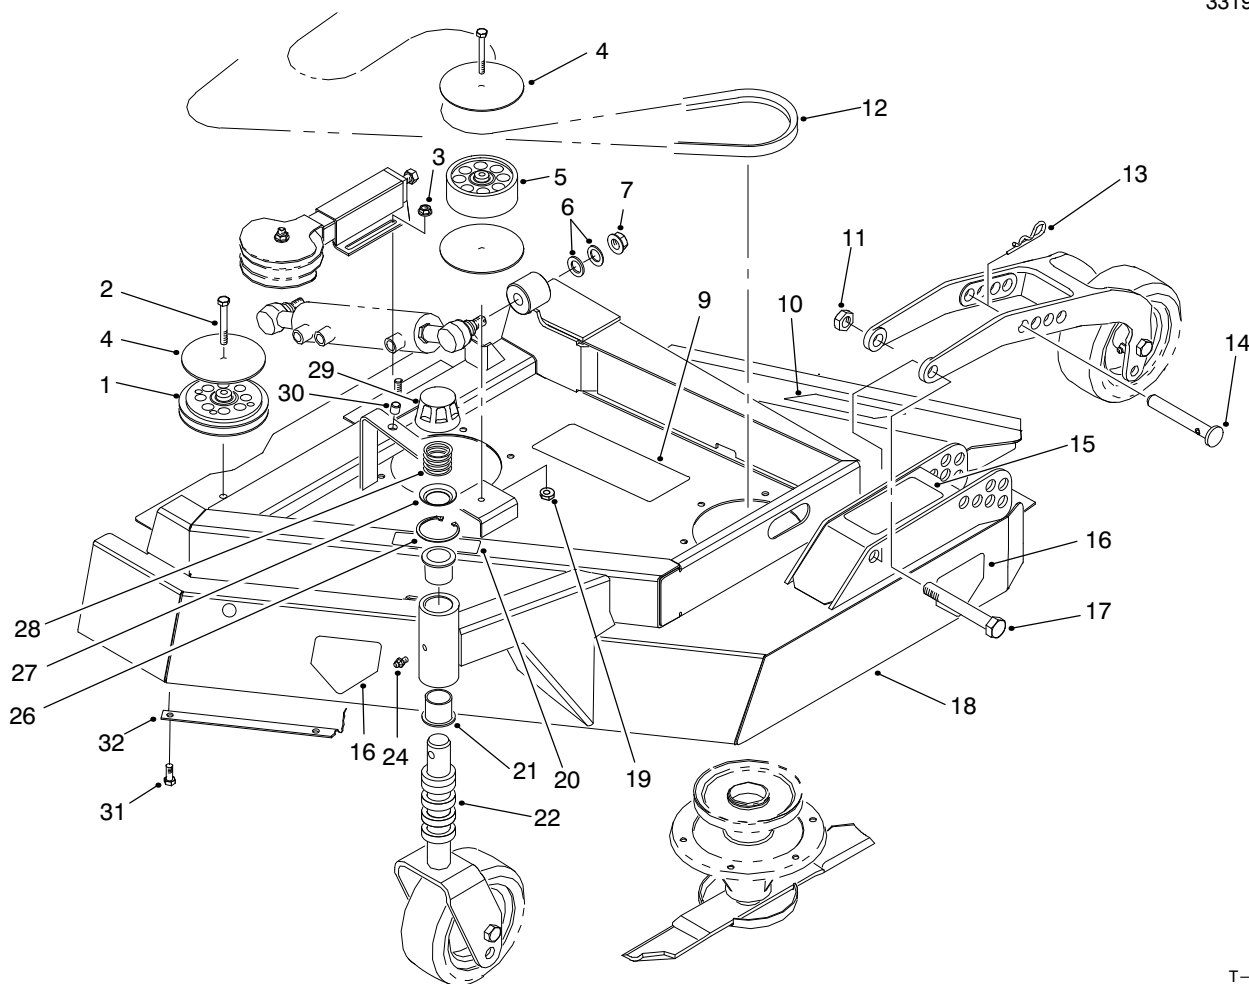


T-2680-1

WING DECK ASSEMBLY – L.H.

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-9722	V-Idler Pulley Assembly	2	18	92-7756	Wing Deck Assembly LH (Incl. Ref. #9, 10, 15, 16, 20, 21 & 30)	1
2	323-13	Screw – Cap Hex. Hd.	2	19	32128-29	Nut – Lock Flange	1
3	32128-19	Nut – Lock Flange Hd.	2	20	93-7814	Decal – Danger (Europe)	1
4	86-2600	Washer – Belt Guide	3	20	85-6410	Decal – Danger	1
5	92-0625	Idler Pulley Assembly	1	21	69-6470	Bushing	2
6	86-1440	Washer – Flat	2	22	69-1510	Spacer	5
7	32128-54	Nut – Flange	1	24	302-5	Fitting – Grease	1
9	86-0750	Decal – Belt LH	1	26	92-5581	Ring – Retaining, Internal	1
10	93-7824	Decal – Danger (Europe)	1	27	92-5583	Washer	1
10	66-1340	Decal – Danger	1	28	92-9726	Spring – Compression	1
11	3296-15	Nut – Lock	1	29	92-8861	Cap	1
12	86-1960	V-Belt	1	30	32148-10	Insert – Threaded	1
13	3290-256	Pin – Cotter Hair	1	31	32144-11	Screw – Hex. Washer Hd.	10
14	86-2010	Pin – H.O.C., Wing	1	32	93-7208	Shield – Wing	1
15	93-9412	Decal – H.O.C. (Europe)	1	*	92-9727	Cap Assembly – H.O.C. (Incl. Ref. #26-29)	1
15	86-0170	Decal – H.O.C.	1				
16	93-7815	Decal – Danger (Europe)	2				
16	43-8480	Decal – Danger	2				
17	3216-6	Screw – Cap Hex. Hd.	1				

*Not Illustrated

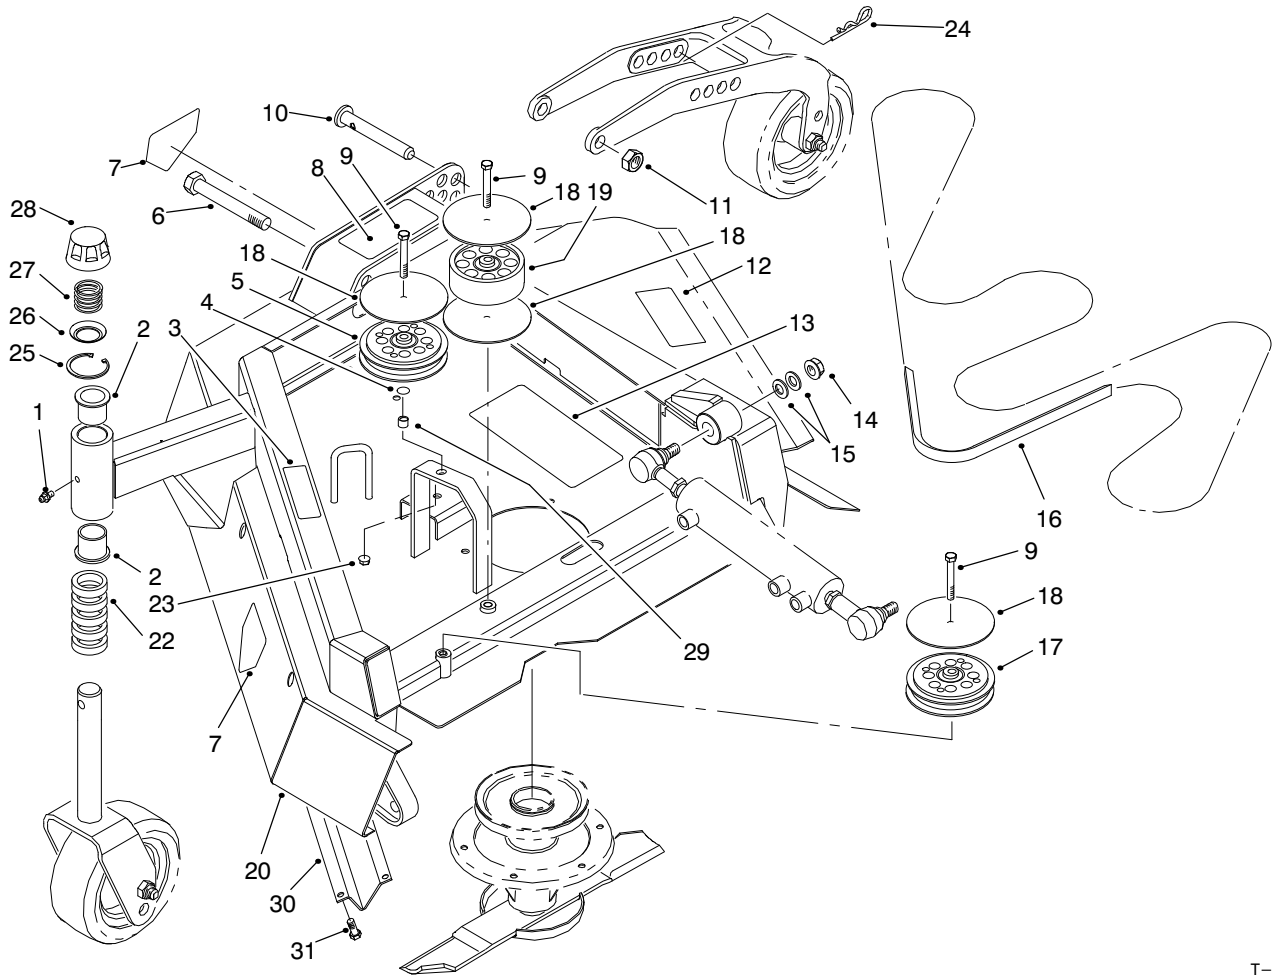


T-2681-1

WING DECK ASSEMBLY – R.H.

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting – Grease	1
2	69-6470	Bushing	2
3	93-7814	Decal – Danger (Europe)	1
3	85-6410	Decal – Danger	1
4	3256-35	Washer – Flat	1
5	92-9721	Idler Pulley Assembly	1
6	3216-6	Screw – Cap Hex. Hd.	1
7	93-7815	Decal – Danger (Europe)	2
7	43-8480	Decal – Danger	1
8	93-9413	Decal – H.O.C. (Europe)	1
8	86-0700	Decal – H.O.C.	1
9	323-13	Screw – Cap Hex. Hd.	3
10	86-2010	Pin – H.O.C. Pivot	1
11	3296-15	Nut – Lock	1
12	93-7824	Decal – Danger (Europe)	1
12	66-1340	Decal – Danger	1
13	86-0760	Decal	1
14	32128-54	Nut – Flange	1
15	86-1440	Washer – Flat	2

Ref. No.	Part No.	Description	No. Used
16	86-1960	V-Belt	1
17	92-9722	Idler Pulley Assembly	1
18	86-2600	Washer – Guide, Belt	4
19	92-0625	Idler Pulley Assembly	1
20	92-7758	Wing Deck Assembly R.H. (Incl. Ref. #2, 3, 7, 8, 12, 13 & 29)	1
22	69-1510	Spacer – Fork	5
23	32128-29	Nut – Lock Flange	1
24	3290-256	Pin – Cotter, Hair	1
25	92-5581	Ring – Retaining, Internal	1
26	92-5583	Washer	1
27	92-9726	Spring – Compression	1
28	92-8861	Cap	1
29	32148-10	Insert – Threaded	1
30	93-7208	Shield – Wing	1
31	32144-11	Screw – Hex. Washer Hd.	10
*	92-9727	Cap Assembly H.O.C. (Incl. Ref. #25-28)	1


*Not Illustrated

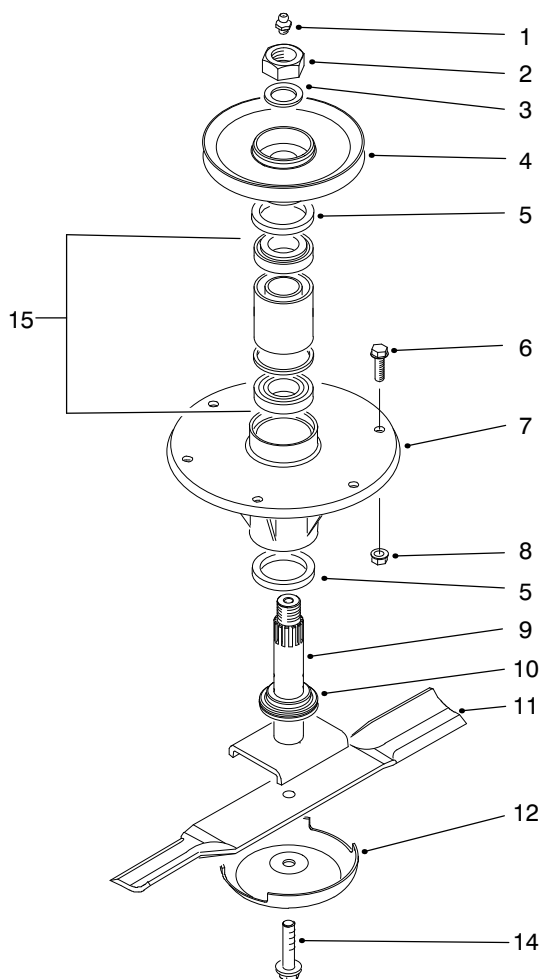

T-1327-1

SPINDLE ASSEMBLY (Wings)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-2	Fitting - Grease	1	8	3290-357	Nut - Flange	6
2	3296-49	Nut - Lock	1	9	95-4387	Shaft - Spindle	1
3	86-1480	Washer	1	10	92-9800	Spacer - Spindle	1
4	86-1700	Pulley	1	11	86-0010	Blade - 19"	1
5	253-154	Seal - Oil	2	12	72-9361	Cup - Anti-Scalp	1
6	3234-11	Screw - Hex. Flange Head	6	14	92-5816	Bolt - Blade	1
7	69-1530	Housing - Spindle	1	15	71-2530	Assembly - Bearing	1

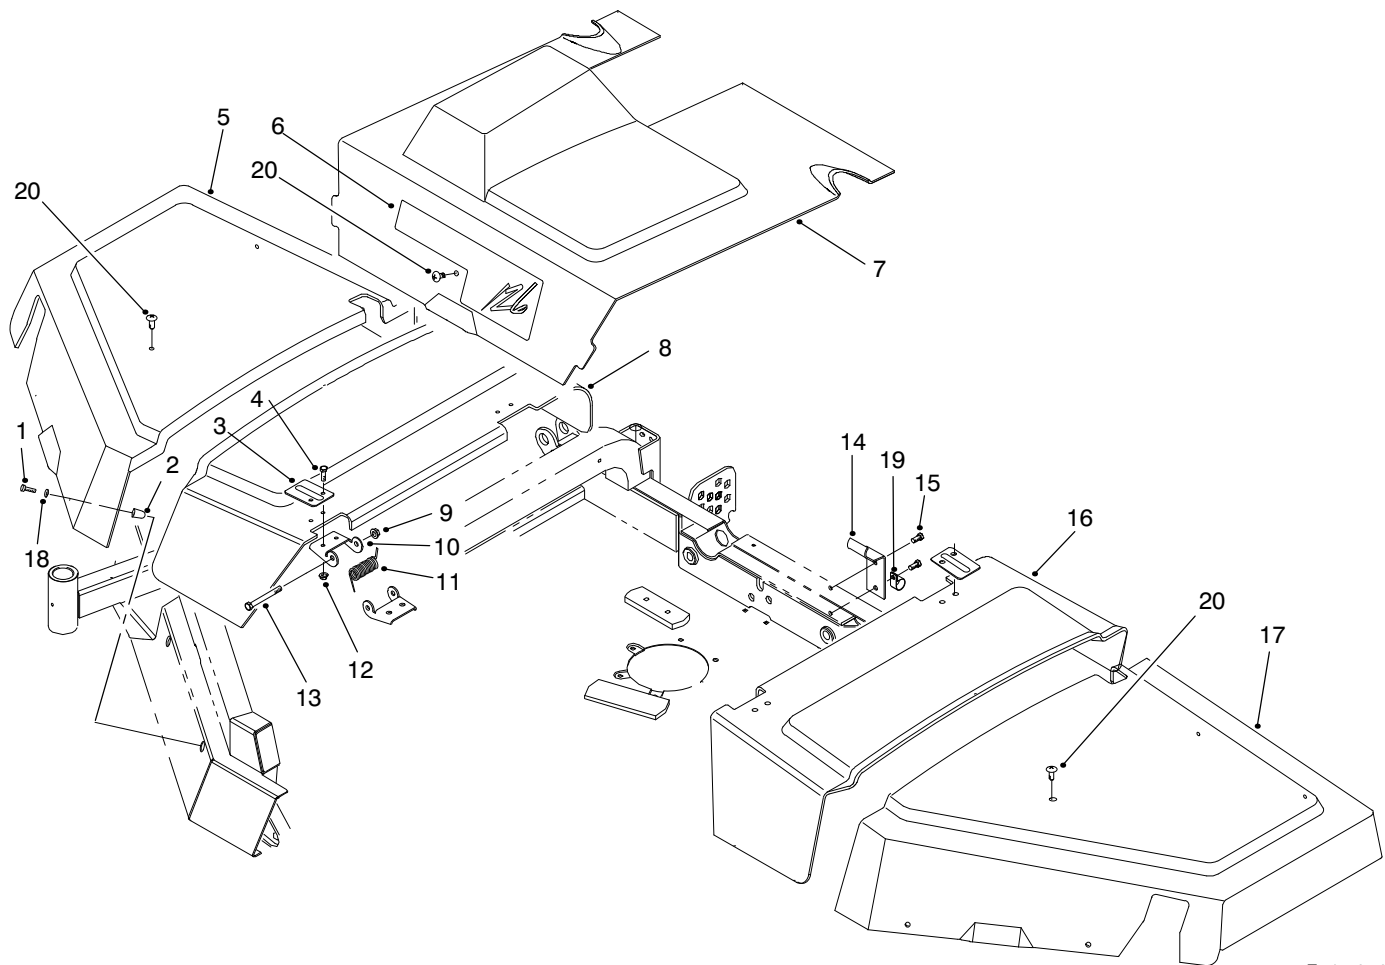

T-1453-2

COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3250-20	Screw - Pan Phil. Hd.	8
2	86-0790	Button - Guard	8
3	86-1900	Plate - Hinge	4
4	3234-29	Screw - Cap Flange Head	8
5	86-1840	Cover - Right Hand	1
6	86-0770	Decal - Quadfloat	1
7	86-1860	Cover - Center	1
8	86-1870	Cover - Center, Right Hand	1
9	3296-59	Nut - Lock, Flange Head	4
10	86-1890	Hinge	4

Ref. No.	Part No.	Description	No. Used
11	86-1920	Spring - Torsion	2
12	32128-20	Nut - Lock, Flange Head	8
13	323-15	Screw - Cap Hex. Head	4
14	86-2660	Stop - Cover	1
15	32144-70	Screw	2
16	86-1880	Cover - Center, Left Hand	1
17	86-1850	Cover - Left Hand	1
18	3256-67	Washer - Flat	8
19	2412-138	Clamp - R	1
20	3250-36	Screw - Pan Hd.	3

TORO PART NUMBER INDEX

3319-103

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
21-6180	Gasket - .015	10 7 A/R	86-0010	Blade - 19	13 13 1
29-4820	Roller	1 23 2	86-0050	Screw - Adjusting	3 7 3
43-8480	Decal - Danger	16 7 1	86-0060	Sleeve - Tube	3 2 6
43-8480	Decal - Danger	15 16 2	86-0170	Decal - H.O.C.	15 15 1
43-8480	Decal - Danger	2 35	86-0690	Spacer	7 3 3
43-8600	Spring - Compression	8 28 2	86-0700	Decal - H.O.C.	16 8 1
43-8610	Guide - Spring Ball & Seat	8 31 2	86-0720	Decal - H.O.C. RH	1 19 1
44-8320	Spring	14 10 3	86-0730	Decal - H.O.C. RH	1 10 1
48-7081	Cover - Handle	11 13 2	86-0740	Decal - Belt	1 25 1
53-6380	Washer	8 4 4	86-0750	Decal - Belt LH	15 9 1
55-4300	Decal - Warning	3 10 1	86-0760	Decal	16 13 1
55-4300	Decal - Warning	1 27 2	86-0770	Decal - Quadfloat	18 6 1
57-0680	Shaft	1 22 2	86-0780	Decal - H.O.C.	2 32 1
57-0690	Pin	1 21 2	86-0790	Button - Guard	18 2 8
60-9870	Screw	8 8 2	86-1410	Pulley - Gearbox 6.50 Dia.	9 16 1
62-3310	Screw	10 1 12	86-1420	Hose - Hydraulic	7 21 1
62-3320	Cap - Blank	10 2 1	86-1440	Washer - Flat	15 6 2
62-3340	Cup - Bearing	10 3 1	86-1440	Washer - Flat	1 11 4
62-3380	Key	10 20 1	86-1440	Washer - Flat	16 15 2
62-3430	Gasket - .005	10 * A/R	86-1440	Washer - Lock	8 11 8
62-3440	Gasket - .003	10 * A/R	86-1480	Washer	12 3 1
62-3490	Plug - Pipe	10 6 2	86-1480	Washer	17 3 1
62-3520	Valve - Pressure Relief	9 22 1	86-1480	Washer	13 18 1
62-3550	Bushing - Reducer	9 21 1	86-1490	Rod End - LH Thread	11 19 2
66-1340	Decal - Danger	15 10 1	86-1550	Rod End - RH Thread	11 23 2
66-1340	Decal - Danger	16 12 1	86-1560	Spacer	11 17 2
67-7050	Field Rotor Assembly	14 1 1	86-1570	Rod - Threaded	11 21 2
67-7060	Ring - Retaining	14 8 1	86-1700	Pulley	17 4 1
67-7080	Collar - Bearing	14 6 1	86-1710	Assembly - Clutch, Elect.	13 3 1
67-7090	Bearing - Pulley	14 7 1	86-1740	Spacer	13 5 1
67-7100	Plate - Brake	14 11 1	86-1820	Bracket - Pulley	11 9 1
68-3220	Key - Square	13 4 1	86-1830	Cover - Drive Shaft	9 11 1
68-6710	Roller	2 31 1	86-1840	Cover - Right Hand	18 5 1
68-6840	Shaft	2 30 1	86-1850	Cover - Left Hand	18 17 1
68-8340	Decal - Caution	2 33 1	86-1860	Cover - Center	18 7 1
68-8950	8 Tube - w/Valve	4 14 2	86-1870	Cover - Center, Right Hand	18 8 1
68-8950	Tube - w/Valve	5 14 2	86-1880	Cover - Center, Left Hand	18 16 1
69-1510	Spacer	15 22 5	86-1890	Hinge	18 10 4
69-1510	Spacer	2 41 10	86-1890	Hinge	1 20 4
69-1510	Spacer - Fork	16 22 5	86-1900	Plate - Hinge	18 3 4
69-1530	Housing - Spindle	12 7 1	86-1920	Spring - Torsion	18 11 2
69-1530	Housing - Spindle	17 7 1	86-1960	V-Belt	15 12 1
69-1530	Housing - Spindle	13 9 1	86-1960	V-Belt	16 16 1
69-6470	Bushing	16 2 2	86-1970	V-Belt	9 1 1
69-6470	Bushing	15 21 2	86-1990	Washer	9 4 6
69-6470	Bushing	2 43 4	86-2000	Bolt - Thin Head	3 9 3
70-2560	Decal - Lube	9 6 1	86-2010	Pin - H.O.C. Pivot	16 10 1
71-2530	Assembly - Bearing	12 15 1	86-2010	Pin - H.O.C., Wing	15 14 1
71-2530	Assembly - Bearing	17 15 1	86-2020	Support - Gear Box	9 3 1
71-2530	Assembly - Bearing	13 17 1	86-2070	Nut	8 9 4
72-4320	Switch - Ball N.O.	8 33 2	86-2080	Ball Joint	8 10 4
72-9361	Cup - Anti-Scalp	12 12 1	86-2090	Bushing	8 18 6
72-9361	Cup - Anti-Scalp	17 12 1	86-2120	Roller	8 19 4
72-9361	Cup - Anti-Scalp	13 14 1	86-2130	Pin - Clevis	8 21 2
75-9790	Arm - Pivot, Rear	5 1 2	86-2150	Lock	8 17 2
76-1880	Segmented 10 Wheel	4 18 2	86-2180	Bushing	8 22 4
77-0950	Washer	2 40 2	86-2190	Cylinder - Hydraulic	1 7 2
84-0780	Pulley	12 4 1	86-2190	Cylinder Assembly	6 * 1
84-0780	Pulley	13 6 1	86-2230	Cover - Guide, RH	1 2 1
84-0800	Arm - Pivot	8 6 4	86-2260	Cover - Guide, LH	1 * 1
84-1350	Pin - Pivot	8 3 4	86-2390	Pin - H.O.C.	1 18 2
84-1550	Mount - Rubber	9 2 4	86-2400	Latch - Arm	11 14 2
84-5300	Nut	1 4 4	86-2440	Assembly - Hose	7 17 2
84-5300	Nut - Jam	6 3 2	86-2450	Assembly - Hose	7 18 2
84-6403	Orifice	7 14 2	86-2460	Assembly - Hose	7 7 2
85-6410	Decal - Danger	16 3 1	86-2470	Assembly - Tube	7 5 1
85-6410	Decal - Danger	15 20 1	86-2480	Assembly - Tube	7 2 1
86-0010	Blade - 19	12 11 1	86-2490	Assembly - Tube	7 4 1
86-0010	Blade - 19	17 11 1	86-2510	Spring	1 3 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
86-2560	Spring	8 13 2	92-9726	Spring - Compression	15 28 1
86-2590	Rod - Clutch	11 4 2	92-9726	Spring - Compression	2 46 2
86-2600	Washer	11 18 4	92-9727	Assembly - Cap, H.O.C.	2 * 2
86-2600	Washer - Belt Guide	15 4 3	92-9727	Cap Assembly H.O.C.	16 * 1
86-2600	Washer - Guide, Belt	16 18 4	92-9727	Cap Assembly - H.O.C.	15 * 1
86-2630	Spring - Compression	7 13 2	92-9800	Spacer - Spindle	12 10 1
86-2640	Assembly - Tube, Cylinder	7 20 2	92-9800	Spacer - Spindle	17 10 1
86-2650	Support - Spring	8 14 2	92-9800	Spacer - Spindle	13 12 1
86-2660	Stop - Cover	18 14 1	93-4237	Bearing - Castor	4 12 4
86-2670	Decal - Belt	3 4 1	93-4237	Bearing - Castor	5 12 4
86-3100	Pulley - Gearbox 7.50 Dia.	9 * 1	93-4239	Rim - Wheel	4 9 2
86-5460	Nipple - Coupler	7 11 3	93-4239	Rim - Wheel	5 9 2
86-8410	Decal - Danger	2 51 1	93-4240	Wheel - 10,	4 * 2
92-0600	Kit - Seal	6 * 1	93-4241	Spacer - Bearing	4 11 2
92-0602	Assembly - Barrel	6 13 1	93-4241	Spacer - Bearing	5 11 2
92-0603	Piston & Rod Assembly	6 5 1	93-4242	Plate	4 15 2
92-0604	Head - Ring Retaining	6 7 1	93-4242	Plate	5 15 2
92-0605	Housing	10 5 1	93-4243	Tire - 10,	4 * 2
92-0606	Key	10 9 1	93-4244	10 Tube - w/Valve	4 * 2
92-0607	Gear - RH	10 10 1	93-5973	10 Foam Filled Wheel Assy.	4 * 2
92-0608	Cap - Thru	10 14 1	93-5974	8 Foam Filled Wheel Assy.	4 * 2
92-0610	Cone - Bearing	10 11 1	93-5974	8 Foam Filled Wheel Assy.	5 * 2
92-0611	Cup - Bearing	10 12 1	93-5980	Hub	4 10 2
92-0612	Nut - Lock	10 23 1	93-5980	Hub	5 10 2
92-0613	Washer - Lock, Gear	10 22 1	93-6674	Decal - Warning (Europe)	3 10 1
92-0616	Cone - Bearing	10 15 2	93-6674	Decal - Warning (Europe)	1 27 2
92-0617	Cup - Bearing	10 16 2	93-6697	Decal - Lube (Europe)	9 6 1
92-0618	Hub	10 17 1	93-7207	Shield - Center	2 38 1
92-0619	Gear - LH	10 21 1	93-7208	Shield - Wing	16 30 1
92-0625	Idler Pulley Assembly	15 5 1	93-7208	Shield - Wing	15 32 1
92-0625	Idler Pulley Assembly	11 6 2	93-7814	Decal - Danger (Europe)	16 3 1
92-0625	Idler Pulley Assembly	3 11 2	93-7814	Decal - Danger (Europe)	15 20 1
92-0625	Idler Pulley Assembly	16 19 1	93-7814	Decal - Danger (Europe)	2 51 1
92-0626	Tube Assembly	3 5 3	93-7815	Decal - Danger (Europe)	16 7 2
92-0627	Armature & Pulley Assy.	14 5 1	93-7815	Decal - Danger (Europe)	15 16 2
92-4033	Door Trap	11 26 2	93-7815	Decal - Danger (Europe)	2 35 1
92-4036	Cap - Rod	8 29 2	93-7818	Decal - Caution (Europe)	2 33 1
92-4037	Screw - Hex. Socket Hd.	8 30 2	93-7824	Decal - Danger (Europe)	15 10 1
92-5581	Ring - Retaining, Internal	16 25 1	93-7824	Decal - Danger (Europe)	16 12 1
92-5581	Ring - Retaining, Internal	15 26 1	93-9410	Decal - H.O.C. RH (Europe)	1 10 1
92-5581	Ring - Retaining, Internal	2 44 2	93-9411	Decal - H.O.C. LH (Europe)	1 19 1
92-5583	Washer	16 26 1	93-9412	Decal - H.O.C. (Europe)	15 15 1
92-5583	Washer	15 27 1	93-9413	Decal - H.O.C. (Europe)	16 8 1
92-5583	Washer	2 45 2	93-9418	Decal - Belt (Europe)	3 4 1
92-5807	Retainer - Hardlines	7 22 2	93-9421	Decal - H.O.C. (Europe)	2 32 1
92-5810	Assembly - Rod End	6 2 1	93-9938	Castor Wheel Assembly	5 * 2
92-5810	Ball Joint	1 5 2	93-9938	Wheel - 8,	4 * 2
92-5811	Assembly - Rod End	6 14 1	93-9939	Tire - 8,	4 8 2
92-5811	Ball Joint	1 9 2	93-9939	Tire - 8,	5 8 2
92-5816	Bolt - Blade	12 14 1	94-8008	Plate - Wear	1 14 2
92-5816	Bolt - Blade	17 14 1	94-8009	Strap - Deck H.O.C.	1 17 2
92-5816	Bolt - Blade	13 16 1	94-8013	Washer	13 19 1
92-7750	Fork	4 4 2	94-8020	Shield - Wire Harness	2 49 2
92-7752	Fork	4 * 2	94-8023	Guide	8 26 2
92-7756	Wing Deck Assembly LH	15 18 1	94-8024	Plunger	8 27 2
92-7757	Center Deck Assembly	1 26 1	94-8029	Nut - Special	8 24 2
92-7758	Wing Deck Assembly R.H.	16 20 1	94-8031	Boot	8 23 2
92-7766	Bracket - Pulley	11 29 1	94-8280	Seal	10 13 1
92-7767	Spring - Compression	3 3 2	94-8281	Shaft - Pinion	10 19 1
92-7768	Spring - Compression	3 * 1	94-8282	Seal	10 18 1
92-8861	Cap	16 28 1	94-8283	Shaft - Thru	10 8 1
92-8861	Cap	15 29 1	94-8295	Gear Box	9 9 1
92-8861	Cap	2 47 2	95-2741	Rim - Wheel	5 13 2
92-9721	Idler Pulley Assembly	16 5 1	95-2741	Rim - Wheel	4 17 2
92-9722	Idler Pulley Assembly	11 7 2	95-4375	Wire Harness	9 13 1
92-9722	Idler Pulley Assembly	16 17 1	95-4383	Yoke - Pulley	3 8 3
92-9722	Idler Pulley Assembly - V	3 13 1	95-4387	Shaft - Spindle	12 9 1
92-9722	V-Idler Pulley Assembly	15 1 2	95-4387	Shaft - Spindle	17 9 1
92-9726	Spring - Compression	16 27 1	95-4388	Shaft - Spindle	13 11 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-103

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
237-7	O-Ring	8 25 2	3272-11	Pin - Cotter	1 24 2
237-22	O-Ring	7 10 12	3290-256	Pin - Cotter Hair	15 13 1
237-42	O-Ring	7 8 11	3290-256	Pin - Cotter, Hair	1 15 2
237-42	O-Ring	8 32 2	3290-256	Pin - Cotter, Hair	16 24 1
237-141	Grommet - Rubber	11 2 4	3290-357	Nut - Flange	17 8 6
2412-138	Clamp - R	18 19 1	3290-357	Nut - Flange	13 10 6
2412-138	Clamp - R	9 14 1	3290-357	Nut - Flange	9 19 2
2412-150	J-Clip	9 18 3	3290-357	Nut - Lock, Flange Head	12 8 6
251-321	Bearing - Ball	4 21 2	3290-378	Tie - Cable	11 3 2
251-332	Spacer - Inner	4 20 2	3290-467	Pin - Hair, Cotter	11 1 2
253-154	Seal - Oil	12 5 2	3290-483	Washer - Belleville	11 16 2
253-154	Seal - Oil	17 5 2	3296-6	Nut - Lock	14 9 3
253-154	Seal - Wave	13 7 2	3296-15	Nut - Lock	15 11 1
254-94	Cone - Bearing	10 4 1	3296-15	Nut - Lock	16 11 1
256-243	Bushing	11 27 2	3296-25	Nut - Lock	11 11 2
283-61	Pin - Clevis	8 20 6	3296-25	Nut - Lock	11 28 2
302-2	Fitting - Grease	12 1 1	3296-29	Nut - Hex. Lock	1 16 4
302-2	Fitting - Grease	17 1 1	3296-29	Nut - Lock	8 1 4
302-5	Fitting - Grease	16 1 1	3296-39	Nut - Lock	9 17 2
302-5	Fitting - Grease	8 2 8	3296-49	Nut - Lock	12 2 1
302-5	Fitting - Grease	6 17 2	3296-49	Nut - Lock	13 2 1
302-5	Fitting - Grease	4 19 2	3296-49	Nut - Lock	17 2 1
302-5	Fitting - Grease	15 24 1	3296-53	Nut - Lock	4 3 2
302-5	Fitting - Grease	2 42 2	3296-53	Nut - Lock	5 7 2
302-33	Fitting - Grease 90°	13 1 1	3296-59	Nut - Lock, Flange Head	18 9 4
322-5	Screw - HH	3 12 1	32121-11	Pin - Roll	11 12 2
322-21	Screw - HH	1 13 4	32121-51	Pin - Roll	1 6 2
323-4	Screw - Hex. Hd	8 5 4	32128-16	Nut - Flange Lock	5 16 8
323-13	Screw - Cap Hex. Hd.	15 2 2	32128-16	Nut - Hex. Lock	4 16 8
323-13	Screw - Cap Hex. Hd.	11 8 4	32128-19	Nut - Flange Hd.	1 1 2
323-13	Screw - Cap Hex. Hd.	16 9 3	32128-19	Nut - Lock Flange Hd.	15 3 2
323-14	Screw - Cap Hex. Hd.	9 7 2	32128-19	Nut - Lock, Flange Hd.	11 5 2
323-15	Screw - Cap Hex. Head	18 13 4	32128-20	Nut - Lock, Flange Head	18 12 8
325-5	Screw - Cap Hex. Hd.	11 15 2	32128-21	Nut - Flange Hd.	2 29 1
325-7	Screw - Cap Hex. Hd.	9 20 2	32128-23	Nut - Flange Hd.	2 48 4
325-7	Screw - Cap Hex. Hd.	11 24 2	32128-23	Nut - Hex. Flange Hd.	9 15 2
325-9	Screw - Cap Hex. Hd.	9 5 2	32128-29	Nut - Lock Flange	15 19 1
325-35	Screw - Cap Hex. Hd.	2 36 4	32128-29	Nut - Lock Flange	16 23 1
327-24	Screw - Cap Hex. Hd.	4 5 2	32128-43	Nut - Lock, Flange Head	3 1 3
327-24	Screw - Cap Hex. Hd.	5 6 2	32128-54	Nut - Flange	6 1 2
3216-6	Screw - Cap Hex. Hd.	16 6 1	32128-54	Nut - Flange	15 7 1
3216-6	Screw - Cap Hex. Hd.	15 17 1	32128-54	Nut - Flange	1 12 2
3217-9	Nut - Jam	3 6 3	32128-54	Nut - Flange	8 12 4
3218-18	Nut - Jam	8 7 2	32128-54	Nut - Flange	16 14 1
3220-5	Nut - Jam	11 22 2	32144-11	Screw - Hex. Washer Hd.	15 31 10
3220-12	Nut - Jam LH Thread	11 20 2	32144-11	Screw - Hex. Washer Hd.	16 31 10
3234-1	Screw - Cap Hex. Hd.	9 8 6	32144-11	Screw - Hex. Washer Hd.	2 39 14
3234-1	Screw - Hex. Flange Hd.	1 28 1	32144-26	Screw - Hex. Washer Hd.	1 8 12
3234-11	Screw - Hex. Flange Head	12 6 6	32144-70	Screw	18 15 2
3234-11	Screw - Hex. Flange Head	17 6 6	32144-70	Screw - Hex. Flange Hd.	11 10 2
3234-11	Screw - Hex. Flange Head	13 8 6	32144-70	Screw - Hex. Flange Hd.	9 12 3
3234-29	Screw - Cap Flange Head	18 4 8	32148-10	Insert - Threaded	16 29 1
3250-20	Screw - Pan Phil. Hd.	18 1 8	32148-10	Insert - Threaded	15 30 1
3250-36	Screw - Pan Hd.	18 20 3	32148-10	Insert - Threaded	2 34 1
3256-26	Washer - Flat	11 25 2	340-2	Adapter - Straight	7 12 2
3256-26	Washer - Flat	2 37 4	340-70	Nut - Lock, Bulkhead	7 1 6
3256-35	Washer - Flat	16 4 1	340-77	Elbow - Hydraulic 90°	7 16 2
3256-67	Washer - Flat	18 18 8	340-86	Fitting - Hydraulic, Tee	7 15 2
3272-5	Pin - Cotter	8 16 6	340-87	Fitting - Hydraulic	7 9 3
3272-9	Pin - Cotter	8 15 2	340-166	Fitting	7 19 1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Quadfloat 126 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the top, front rail of the center deck. In any correspondence concerning the Quadfloat 126, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

- 1. Model and serial number of the Quadfloat 126.
- 2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Center Deck & Carrier Mounting Assembly	1-2	Center Deck Pulley Assemblies	11
Belt Tension Adjustor	3	Spindle Assembly (Center)	12
Front Castor Fork Assembly	4	Spindle Assembly (Clutch)	13
Rear Pivot Arm Assembly	5	Clutch Assembly No. 86-1710	14
Hydraulic Cylinder Assembly No. 86-2190	6	Wing Deck Assembly - L.H.	15
Hydraulic Hose Assembly	7	Wing Deck Assembly - R.H.	16
Pivot Arm Assembly	8	Spindle Assembly (Wings)	17
Gear Box & Drive Assembly	9	Cover Assembly	18
Gear Box Assembly 94-8295	10	TORO Part Number Index	19-21

[illegible]

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.