



Count on it.

Form No. 3373-408 Rev B

Parts Catalog

GT2200 Garden Tractor

Model No. 14AQ94RP848—Serial No. 1 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LPG: Liquid Propane Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Front and Rear Wheel Assembly 4

Engine Component Assembly 5

Steering and Front Axle Assembly 6

Frame, Battery and Electric PTO Assembly 8


Seat, Fender and Deck Lift Assembly 10

Fuel Tank, Hood and Dash Assembly 12

Drive System Assembly 14


50 Inch Deck Assembly 16

Attachments and Accessories 18

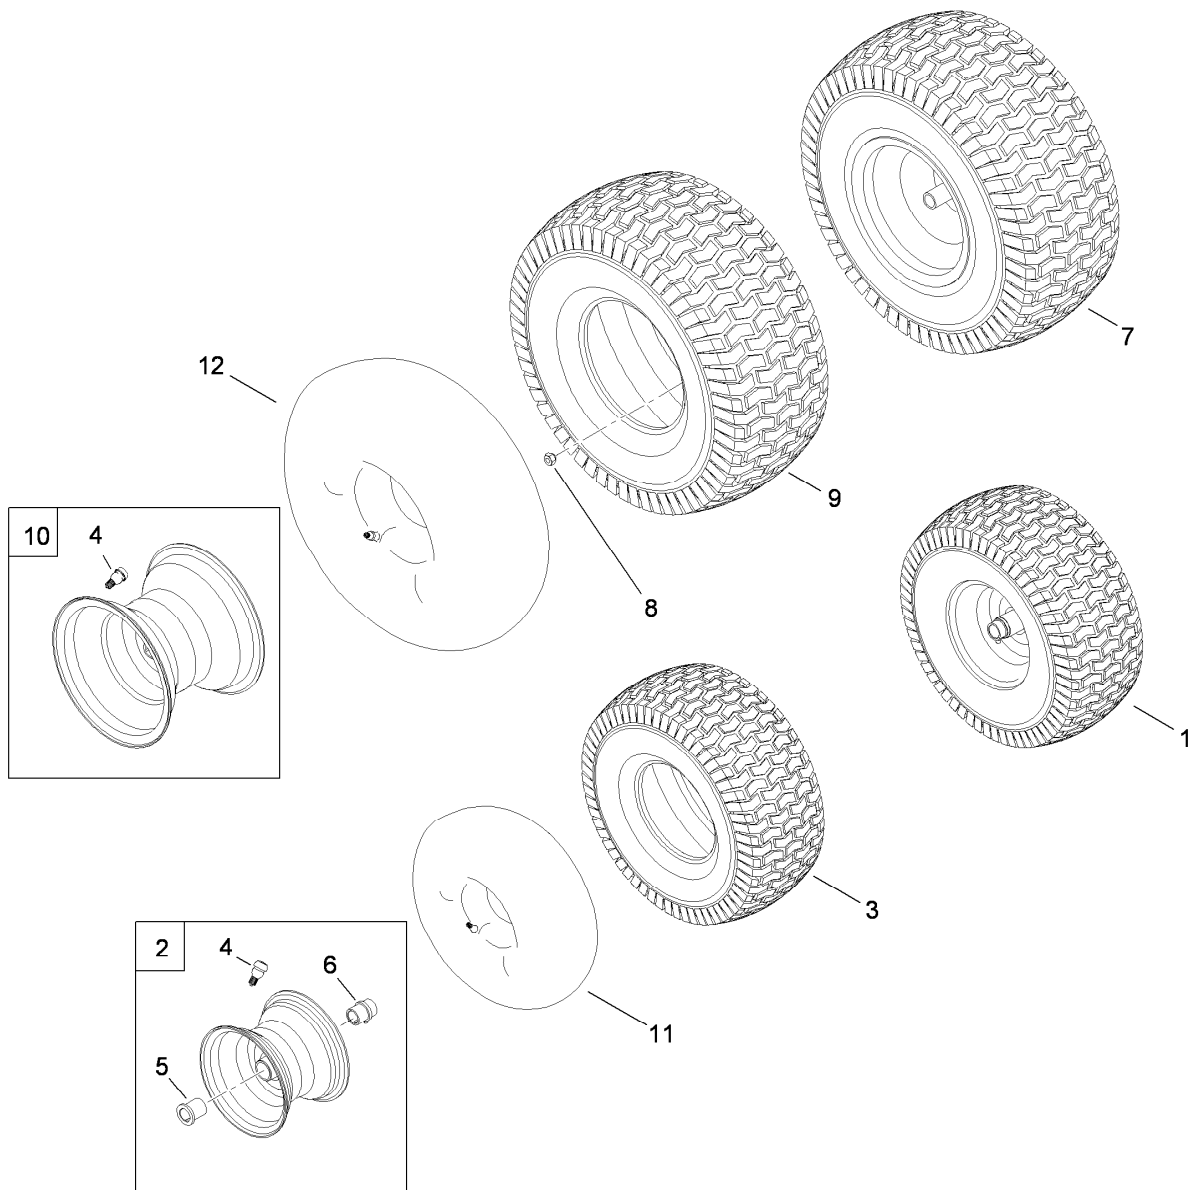

Front and Rear Wheel Assembly

Ref.	Part Number	Qty.	Description
1	119-9078	1	Tire And Wheel ASM
2	112-0919	1	Rim ASM
3	119-9079	1	Tire
4	112-0503	1	Valve-Air, Tubeless
5	112-0331	1	Bearing-Flange
6	112-0375	1	Bearing-Flange (W/Zerk)
7	112-0847	1	Wheel ASM
8	112-0911	1	Nut-Lug
9	112-0876	1	Tire-Turf
10	112-0849	1	Rim ASM
11	112819	1	Tube-Inner
12	231-90	1	Tube

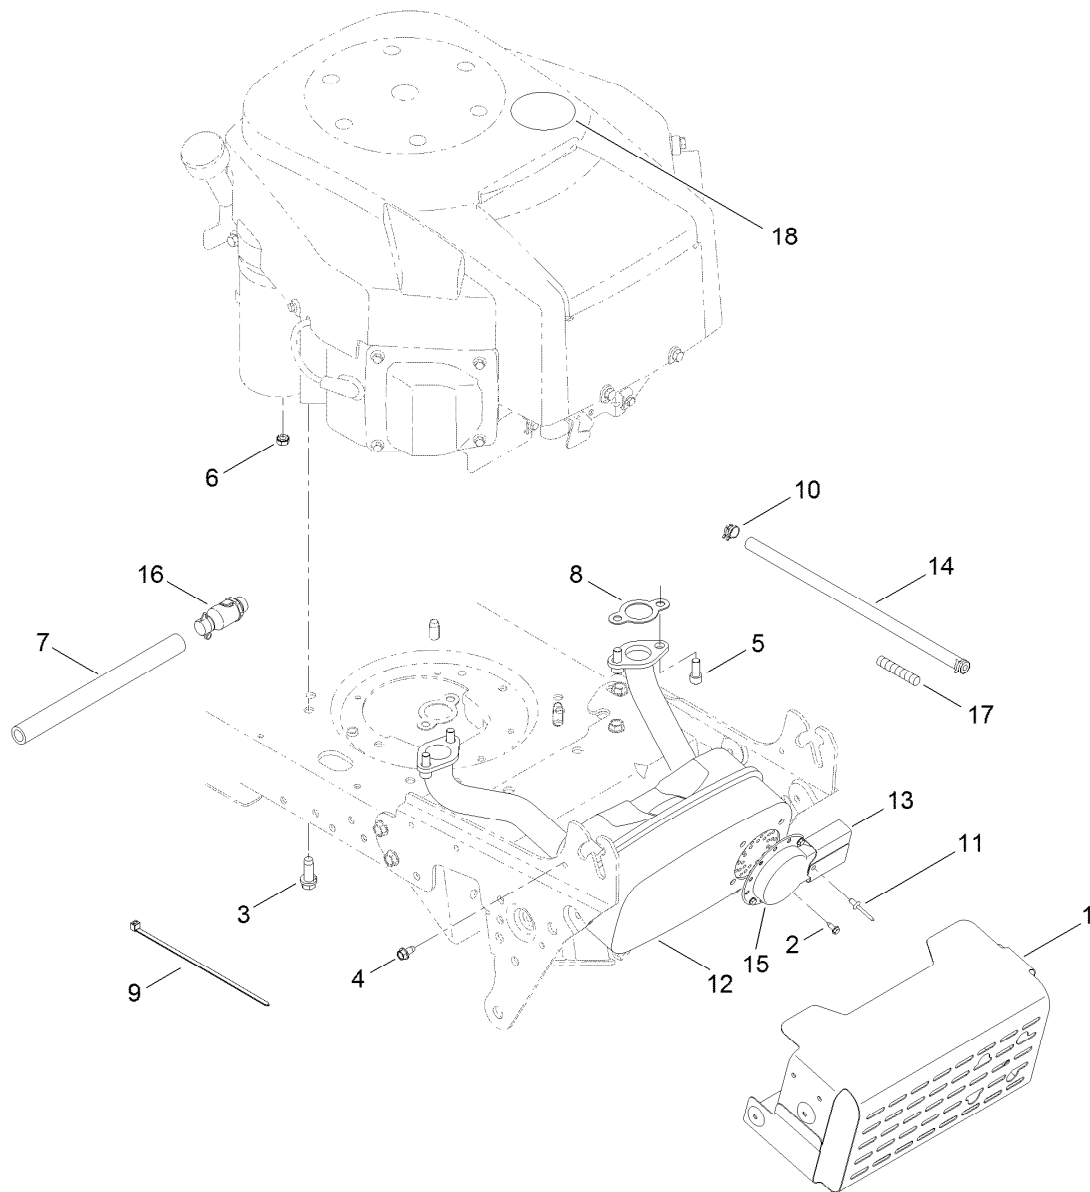


Engine Component Assembly

Ref.	Part Number	Qty.	Description
1	112-6202	1	Shield-Muffler
2	112-0626	1	Screw-HWHTF
3	112-6163	1	Screw-HH, TAP
4	112-0524	1	Screw-HWHTF
5	112-6012	1	Screw-HSH
6	112-0546	1	Nut-Sems
7	112-0553	1	Hose-Drain
8	119-9146	1	Gasket-Exhaust
9	112-0527	1	Tie-Cable

Ref.	Part Number	Qty.	Description
10	112-0573	1	Clamp-Hose
11	112-3741	1	Rivet-Pop
12	112-6164	1	Muffler-Twin
13	112-0453	1	Deflector-Muffler
14	112-0720	1	Hose-Fuel
15	119-9147	1	Deflector-Muffler
16	110-9890	1	Drain-Oil
17	119-9145	1	Hose-Vent
18	112-5960	1	Decal-Check Oil


Steering and Front Axle Assembly

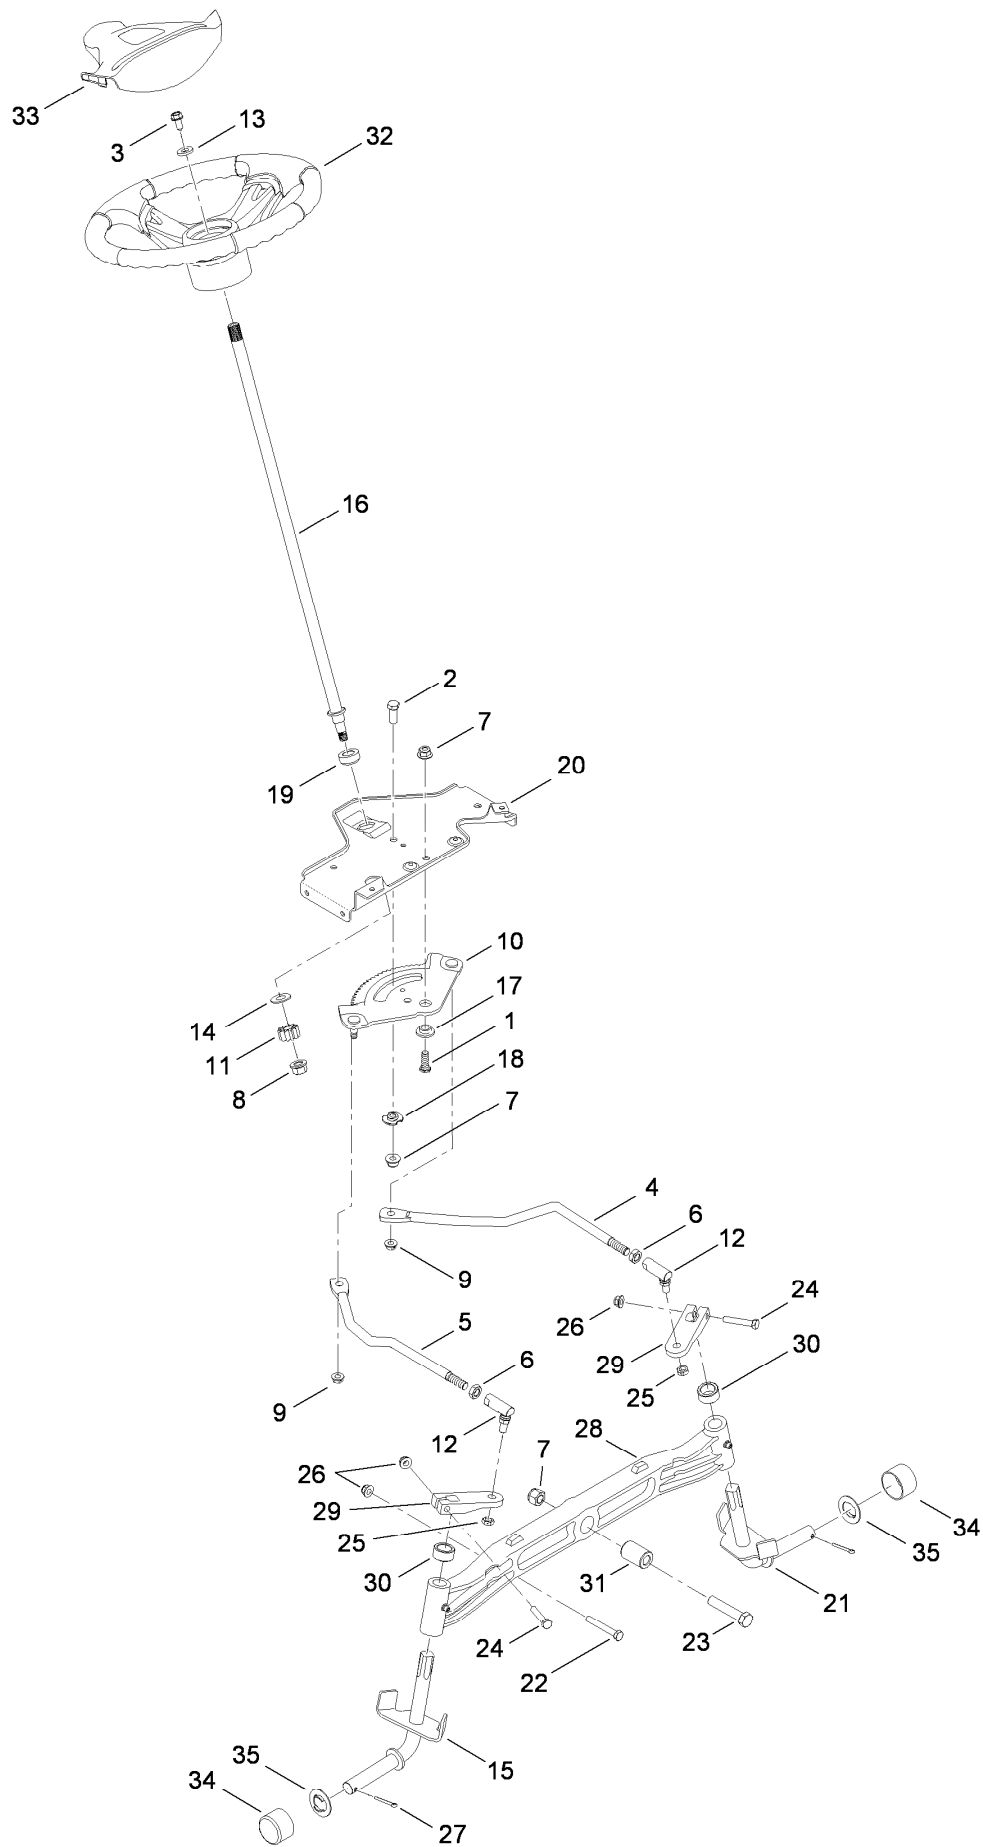

Steering and Front Axle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-0631	1	Screw-HH	19	112-6257	1	Bearing-Flange, Hex
2	112-0492	1	Screw-HH	20	119-3979	1	Bracket-Support, Steering
3	112-0473	1	Screw-HH	21	119-9081	1	LH Axle ASM
4	119-3974	1	Link-Drag, LH	22	112-5843	1	Screw-HH
5	119-3975	1	Link-Drag, RH	23	112-0611	1	Screw-HH
6	112-0493	1	Nut-Jam	24	112-1095	1	Bolt-HH
7	112-0668	1	Nut-Lock, Flange	25	112-0483	1	Nut-Hex, Lock
8	112-0859	1	Nut-Lock, Flange	26	112-0650	1	Nut-Lock, Flange
9	112-0511	1	Nut-Lock, Flange	27	112-0860	1	Pin-Cotter
10	119-3976	1	Gear-Steering	28	119-3982	1	Axle-Cast
11	112-0863	1	Gear-Pinion, Steering	29	119-3983	1	Block-Steering
12	112-0917	1	Ball Joint ASM	30	112-6136	1	Spacer
13	112-0924	1	Washer-Flat	31	119-3984	1	Spacer
14	112-0925	1	Washer-Flat	32	112-0438	1	Wheel-Steering, Softgrip
15	119-9080	1	RH Axle ASM	33	112-0341	1	Cover-Wheel, Steering
16	112-6097	1	Shaft-Steering	34	119-9128	1	Cap-Bumper
17	119-3977	1	Spacer-Shoulder	35	112-6258	1	Washer-Flat
18	119-3978	1	Spacer				

Frame, Battery and Electric PTO Assembly

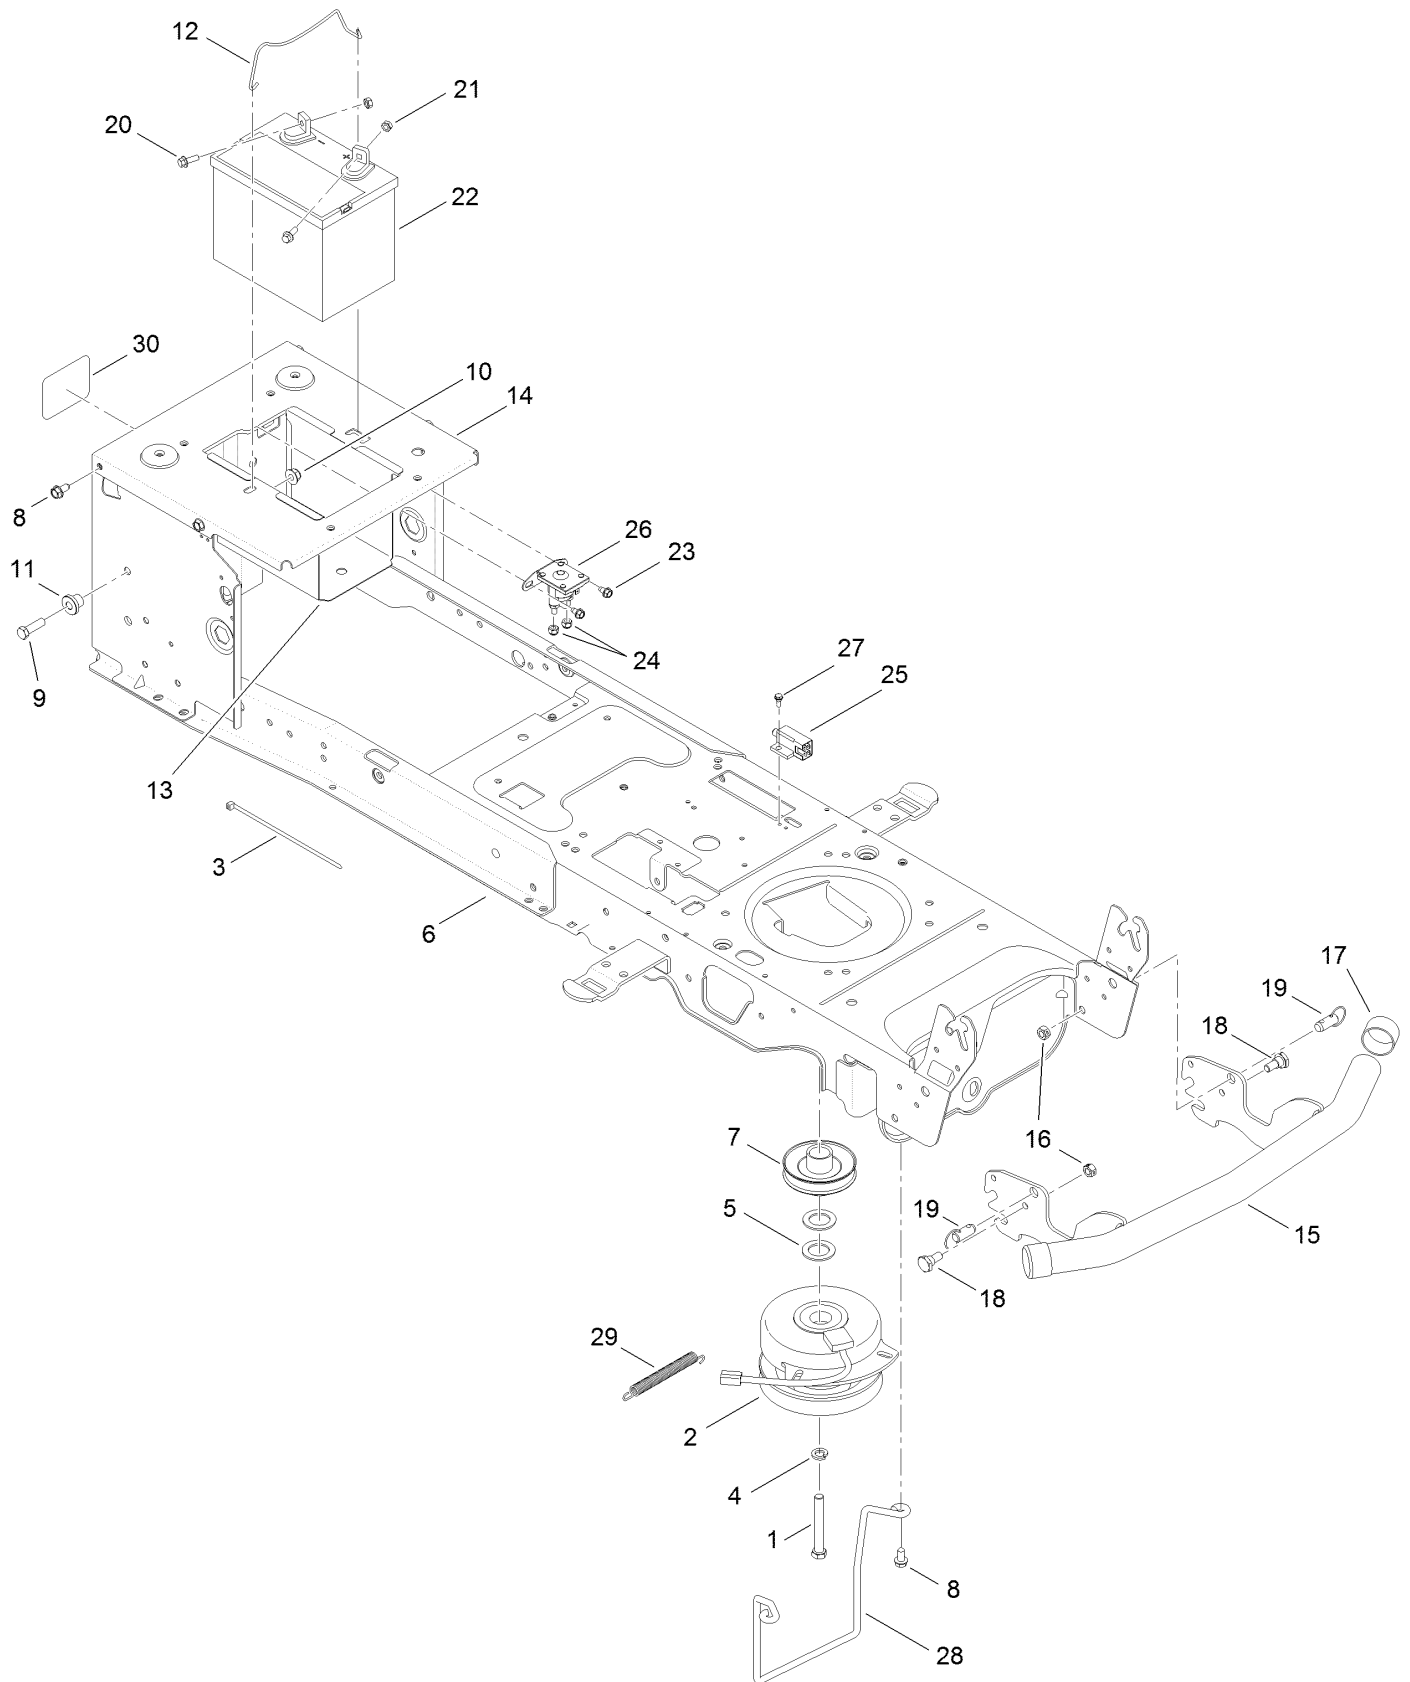


Frame, Battery and Electric PTO Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-0561	1	Screw-HH	17	112-5968	1	Cap-Hub
2	112-6044	1	Clutch-Electric	18	112-0565	1	Bolt-Shoulder
3	112-0527	1	Tie-Cable	19	119-3954	1	Pin-Release, Quick
4	112-0428	1	Washer-Lock	20	119-3994	1	Bolt
5	112-0420	1	Washer-Flat	21	112-0546	1	Nut-Sems
6	119-3993	1	Lower Frame ASM	22	112-0425	1	Battery-245, Cca (Dry Flat Top)
7	112-6045	1	Pulley-Engine	23	112-6022	1	Screw-TAP
8	112-6070	1	Screw-TAP	24	112-0636	1	Nut-Lock, Flange
9	112-0557	1	Screw-HH	25	112-6210	1	Switch-Interlock, No/Nc
10	112-0668	1	Nut-Lock, Flange	26	112-6073	1	Solenoid-12V, 2 Post 2 Tab
11	112-0661	1	Spacer-Shoulder	27	112-6206	1	Bolt-Shoulder
12	112-0581	1	Rod-Holddown, Battery	28	119-9082	1	Rod-Keeper, Belt
13	112-0570	1	Tray-Battery	29	112-6153	1	Spring-Extension
14	112-6209	1	Bracket-Frame, Seat	30	119-8485	1	Decal-Release, Hydro
15	119-9071	1	Bumper-Universal	99	119-9058	1	Harness-Wiring ●
16	112-0909	1	Nut-Lock				

● Not illustrated


Seat, Fender and Deck Lift Assembly

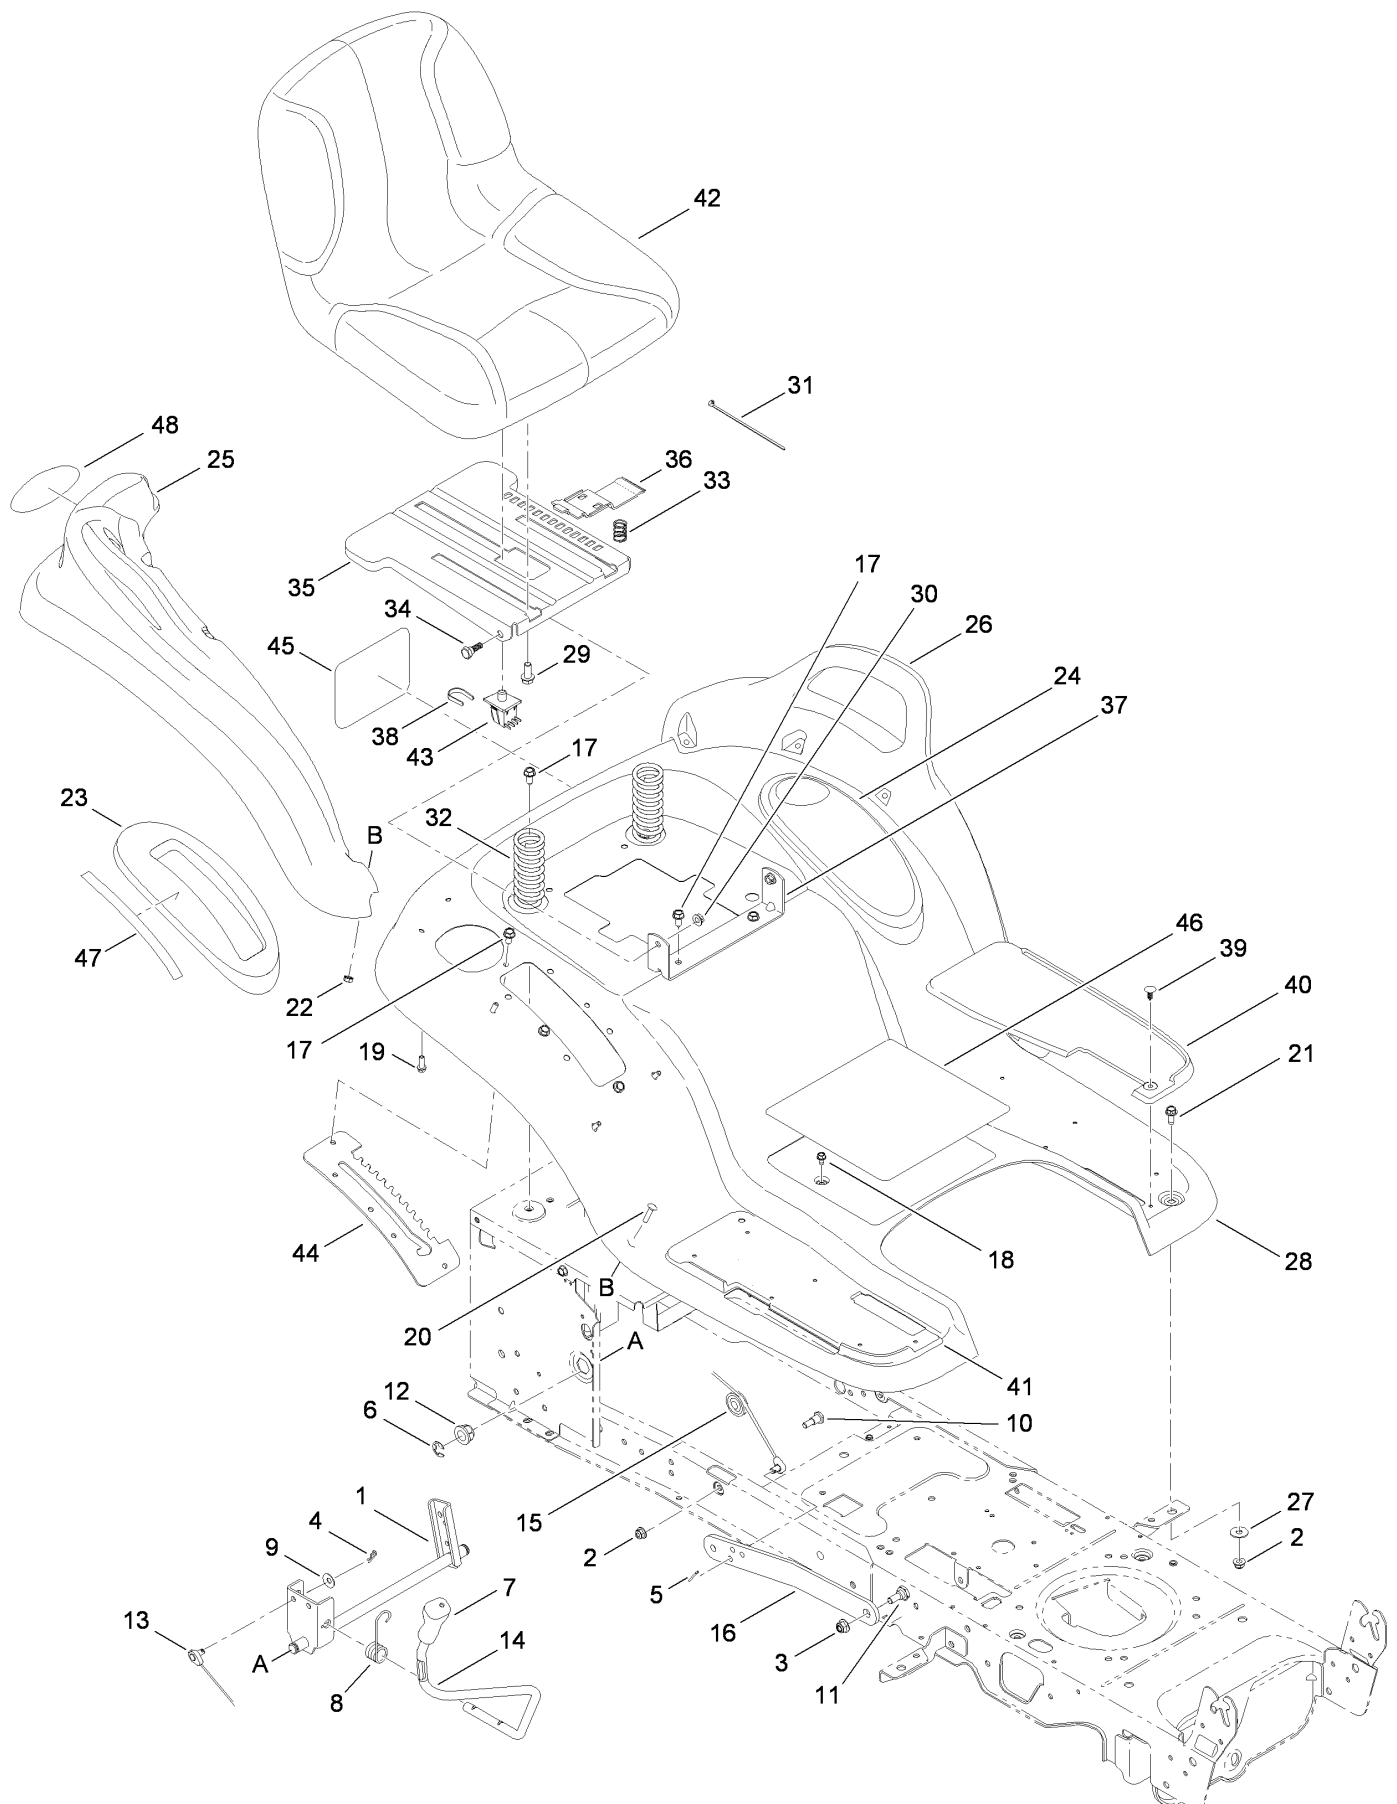

Seat, Fender and Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-6183	1	Lift Shaft ASM	25	112-0871	1	Flare-Fender, RH
2	112-0650	1	Nut-Lock, Flange	26	112-0872	1	Flare-Fender, LH
3	112-0668	1	Nut-Lock, Flange	27	112-0582	1	Washer-Flat
4	112-0459	1	Pin-Cotter	28	119-9083	1	Fender
5	112-0990	1	Pin-Cotter	29	112-6229	1	Screw-HH
6	112-0586	1	Ring-E	30	112-0511	1	Nut-Lock, Flange
7	112-0585	1	Grip-Handle	31	112-0527	1	Tie-Cable
8	112-0477	1	Spring-Torsion	32	112-6208	1	Spring-Compression
9	112-0660	1	Washer-Spring	33	112-6234	1	Spring-Compression
10	112-0443	1	Bolt-Shoulder	34	112-0575	1	Bolt-Shoulder
11	112-0442	1	Bolt-Shoulder	35	112-6214	1	Bracket-Mount, Seat
12	112-0347	1	Bearing-Flange	36	112-6232	1	Lever-Adjustment, Seat
13	112-0374	1	Cable-Lift	37	112-6217	1	Bracket-Pivot, Seat
14	119-3998	1	Handle-Lift	38	119-8400	1	Clip-Retension
15	119-3999	1	Pulley-Cable	39	112-0549	1	Clip-Ratchet, Fastener
16	119-9106	1	Arm-Lift	40	119-8402	1	Pad-Foot, LH
17	112-6070	1	Screw-TAP	41	119-8403	1	Pad-Foot, RH
18	112-0524	1	Screw-HWHTF	42	112-6215	1	Seat-High
19	112-0509	1	Screw-TAP	43	119-8404	1	Switch-Seat
20	112-0907	1	Screw-CARR	44	119-9084	1	Bracket-Lift
21	112-0395	1	Screw-HWH	45	119-9050	1	Decal-Toro
22	112-0546	1	Nut-Sems	46	119-8481	1	Decal-Safety
23	112-6226	1	Cover-Lift, Lever	47	119-8477	1	Decal-HOC
24	112-0870	1	Cover (W/Cup Holder)	48	112-5873	1	Reflector


Fuel Tank, Hood and Dash Assembly

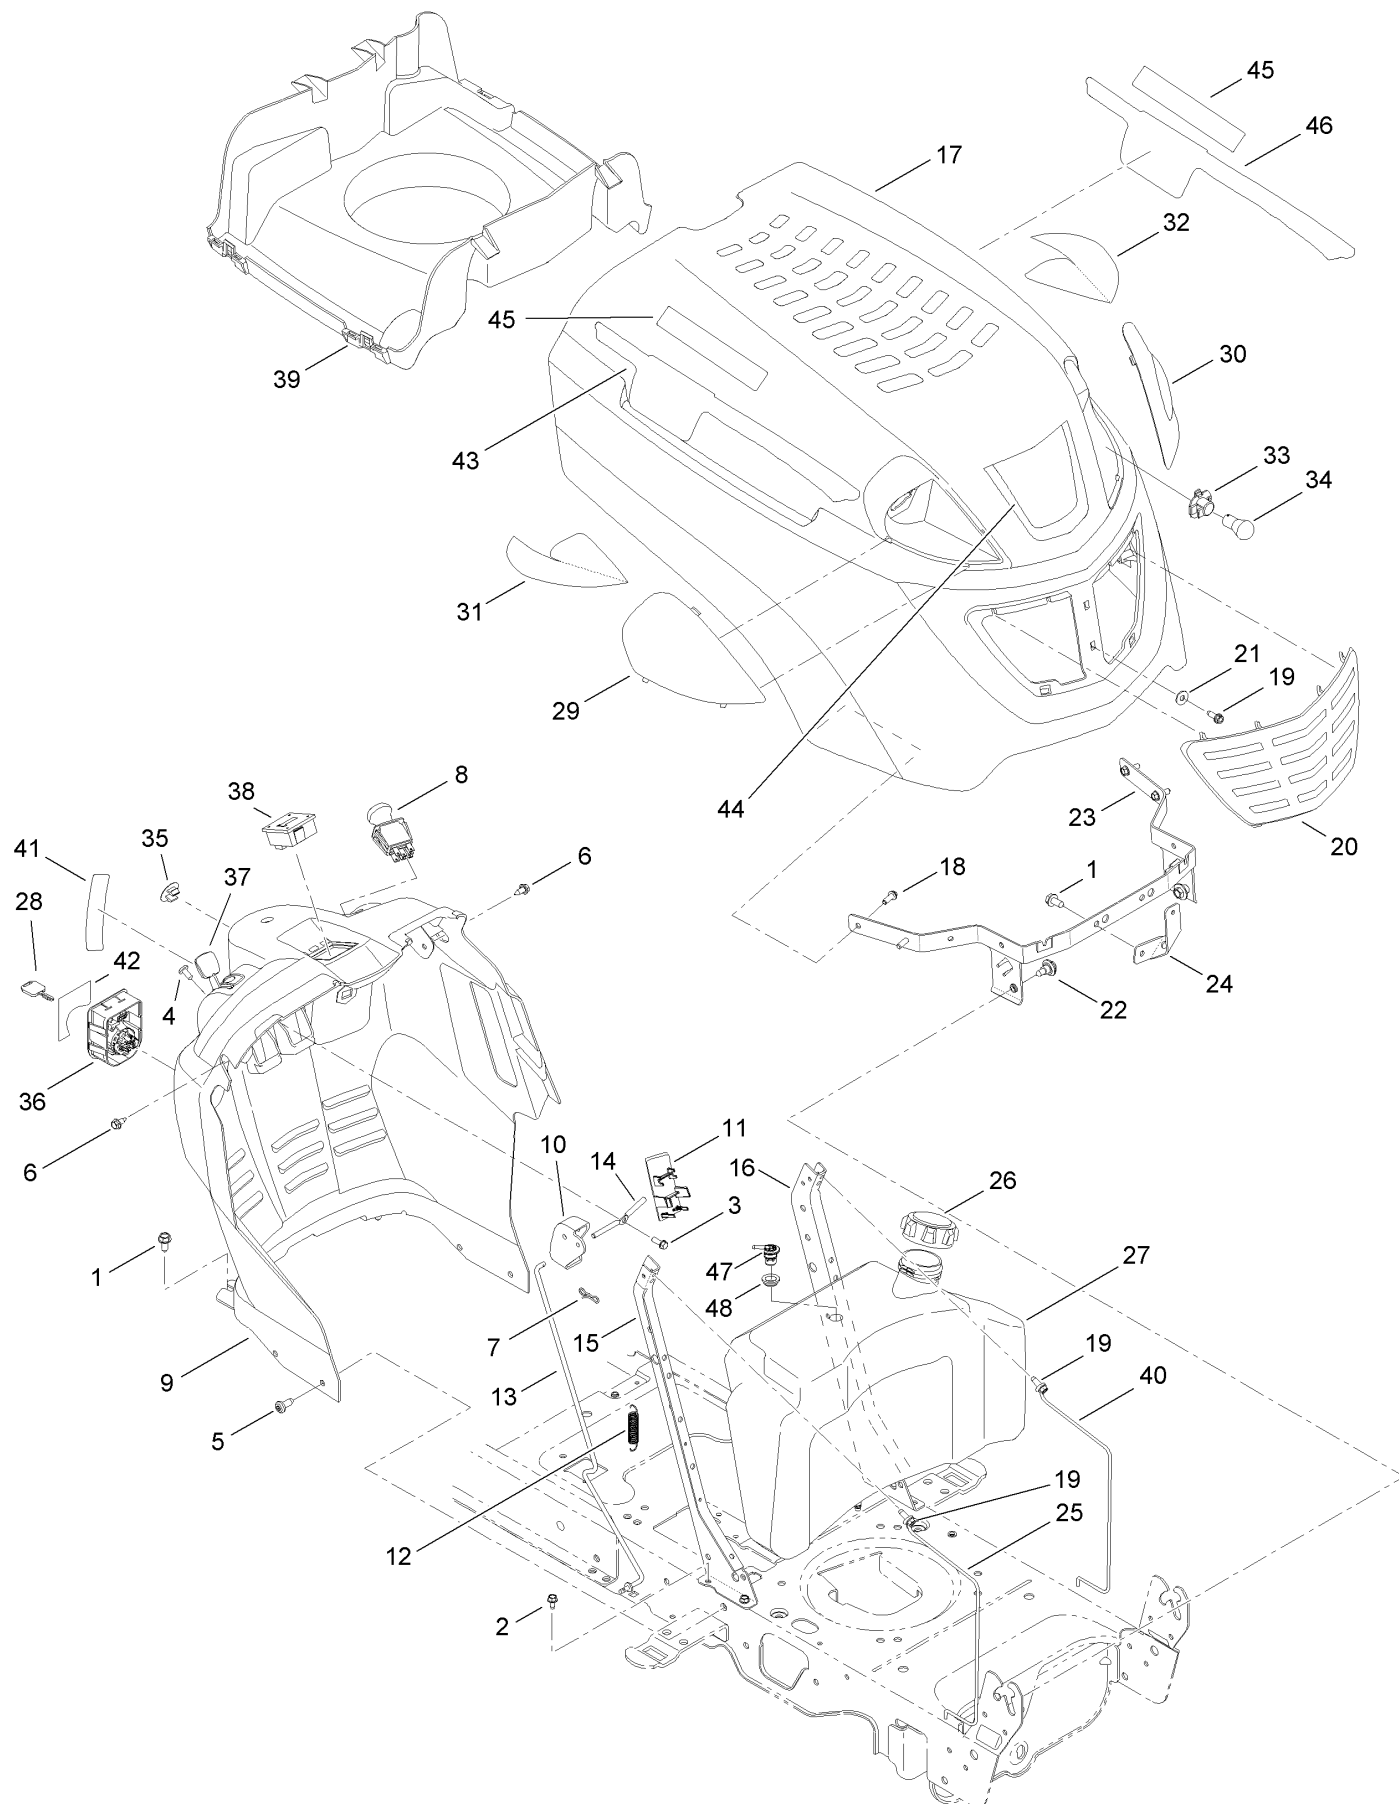

Fuel Tank, Hood and Dash Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-6070	1	Screw-TAP	25	112-0678	1	Rod-Support
2	112-0524	1	Screw-HWHTF	26	119-9118	1	Cap-Fuel
3	112-0509	1	Screw-TAP	27	119-9121	1	Tank-Fuel
4	112-0550	1	Screw-TAP	28	112-6115	1	Key-Ignition
5	112-0563	1	Screw-TAP	29	112-0447	1	Lens-RH
6	112-0659	1	Screw-HWH	30	112-0446	1	Lens-LH
7	112-0990	1	Pin-Cotter	31	112-5810	1	Reflector-RH
8	112-0411	1	Switch-Electric, PTO	32	112-5811	1	Reflector-LH
9	112-6266	1	Dash-Electric, PTO	33	112-0408	1	Socket-Headlight
10	119-8407	1	Lever-Dash	34	112-0402	1	Lamp-12V, Miniature
11	119-8408	1	Cover-Cruise	35	112-0535	1	Plug-Choke
12	119-8409	1	Spring-Extension	36	119-8412	1	Module-Switch, Ignition
13	119-8410	1	Rod-Latch	37	112-6265	1	Cable-Throttle
14	112-0604	1	Rod-Lever, Bent	38	112-6117	1	Meter-Hour
15	112-6262	1	Support-Dash, Plate (RH)	39	112-6141	1	Plenum-Hood
16	112-6263	1	Support-Dash, Plate (LH)	40	119-9117	1	Rod-Support, LH Tank
17	112-0444	1	Hood	41	112-6283	1	Decal-Throttle
18	119-8411	1	Screw	42	119-8479	1	Decal-Switch, Ignition
19	112-0587	1	Screw-TAP	43	112-5953	1	Decal-Hood, Right Side
20	112-0381	1	Grill	44	112-3716	1	Decal-Hood
21	112-5989	1	Washer-Flat	45	112-5967	1	Decal-Side Panel
22	112-6128	1	Bolt-Shoulder, TAP	46	112-5952	1	Decal-Hood, Left Side
23	112-5985	1	Bracket-Pivot	47	125-1798	1	Valve-Rollover, Grommet
24	112-5986	1	Bracket-Support, Hood	48	125-1799	1	Grommet-Rubber


Drive System Assembly

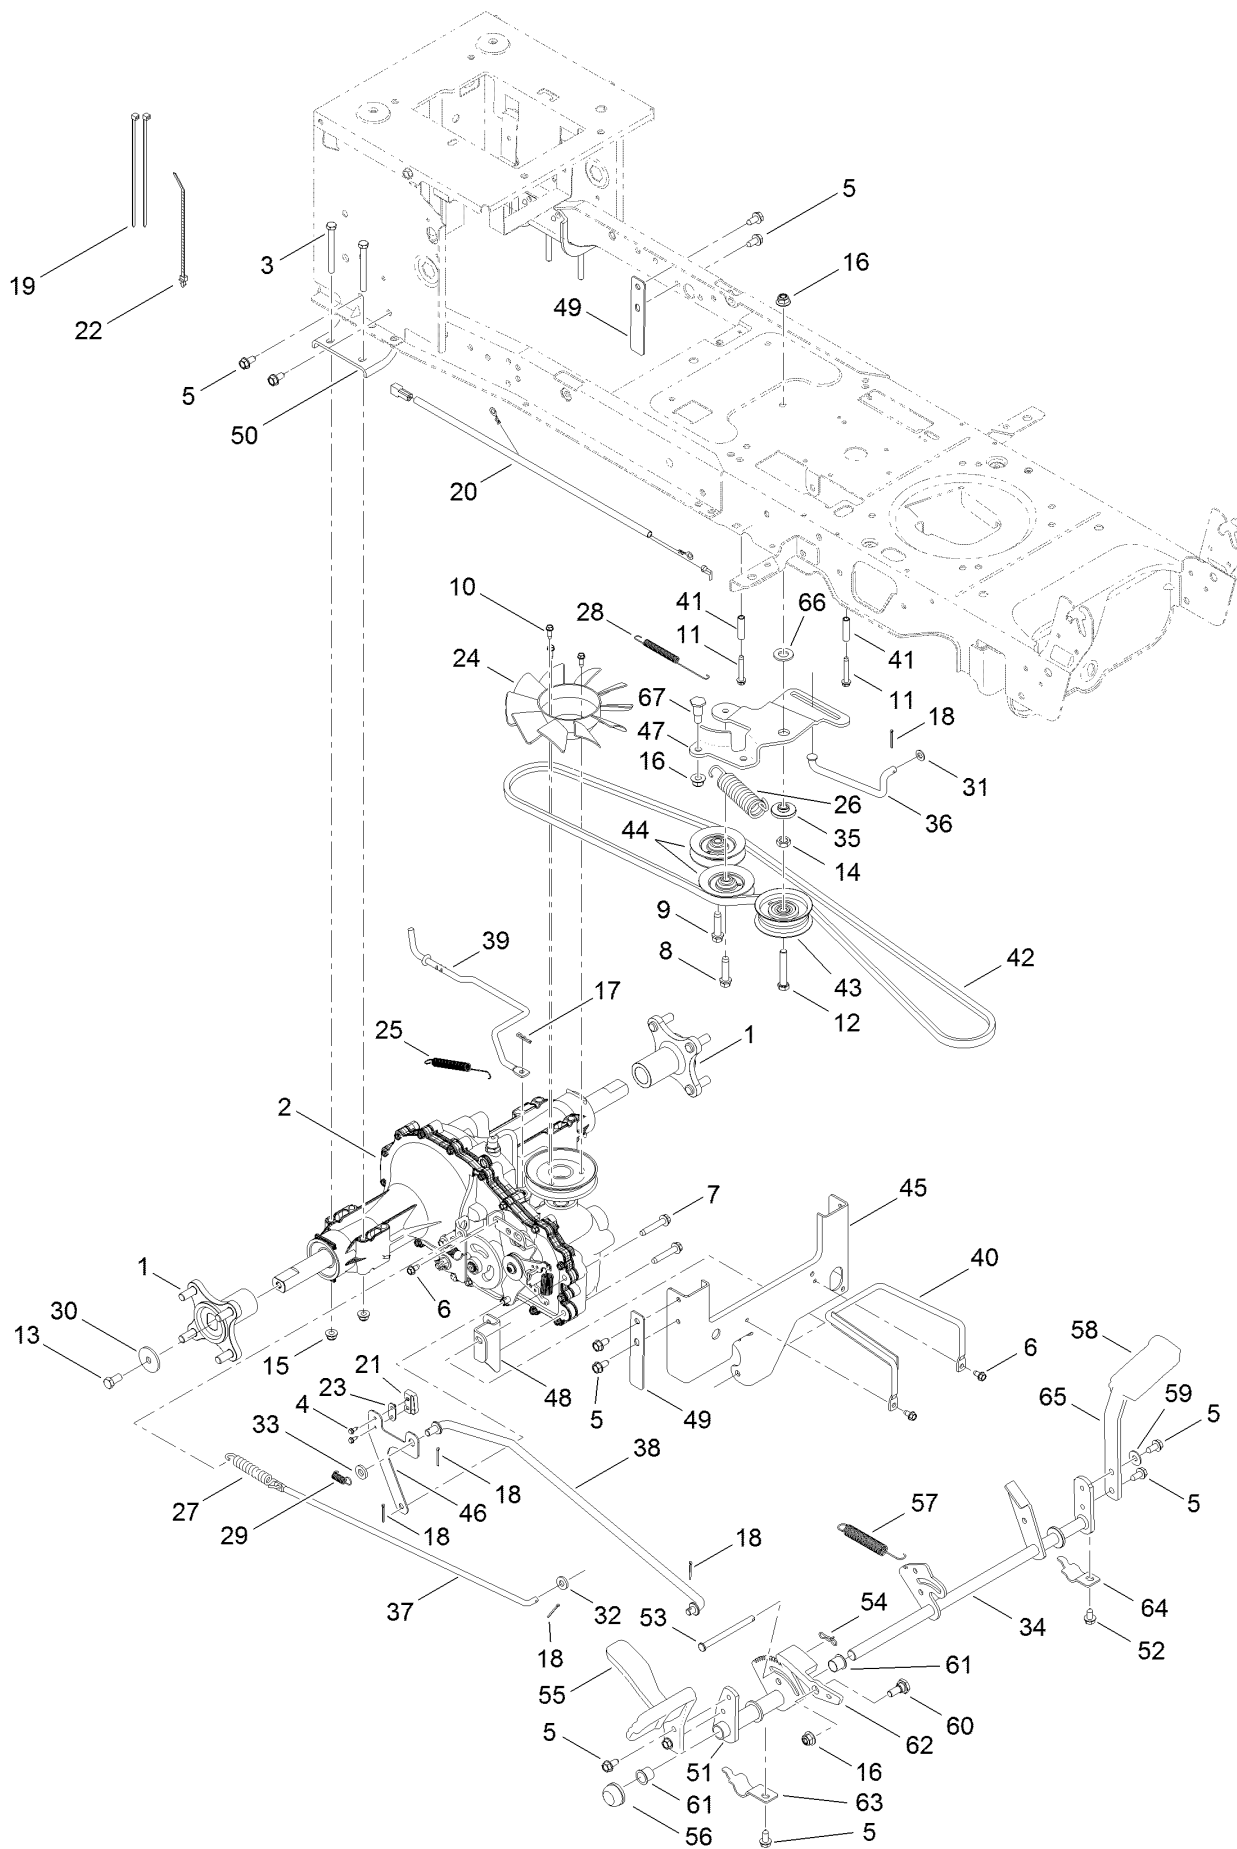

Drive System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-0738	1	Wheel Hub ASM	36	119-8420	1	Rod-Bypass, Foot Pedal
2	119-9085	1	Transmisson	37	119-9089	1	Rod-Brake
3	112-6238	1	Screw-HH	38	119-9090	1	Rod-Control
4	112-0626	1	Screw-HWHTF	39	119-9091	1	Rod-Disengage
5	112-6070	1	Screw-TAP	40	119-9092	1	Keeper-Belt
6	112-0524	1	Screw-HWHTF	41	112-5831	1	Spacer
7	119-9086	1	Screw-Taptite	42	119-9093	1	Belt-V
8	112-0469	1	Screw-TAP	43	112-0313	1	Pulley-Idler, Flat
9	112-6143	1	Screw-TAP	44	112-6149	1	Pulley-Idler, Y Type
10	119-9087	1	Screw	45	119-9104	1	Bracket-Torque
11	112-0839	1	Screw-TAP	46	112-6243	1	Bracket-Actuator, Switch
12	112-6009	1	Screw-HH	47	119-8427	1	Bracket-Idler, Center Double
13	112-0768	1	Screw-HH	48	119-9094	1	Bracket-Deck
14	112-0493	1	Nut-Jam	49	119-9095	1	Bracket-Plate
15	112-0650	1	Nut-Lock, Flange	50	119-9105	1	Bracket-Axle
16	112-0668	1	Nut-Lock, Flange	51	119-9096	1	Bracket-Pedal, Hydro
17	112-0459	1	Pin-Cotter	52	112-0556	1	Screw-HWH
18	112-0568	1	Pin-Cotter	53	119-8431	1	Pin-Clevis
19	112-0527	1	Tie-Cable	54	112-0990	1	Pin-Cotter
20	119-8489	1	Harness-Jumper	55	125-1800	1	Pedal-Control
21	112-0602	1	Switch-Spring, Short	56	119-8432	1	Cap-Push
22	112-0866	1	Tie-Cable	57	119-8433	1	Spring-Extension
23	112-0625	1	Plate-Insulator	58	119-8434	1	Pad-Pedal, Brake
24	119-9088	1	Fan-Blade	59	112-0435	1	Washer-Bell
25	112-6244	1	Spring-Extension	60	112-0442	1	Bolt-Shoulder
26	119-9142	1	Spring-Extension	61	119-8435	1	Bearing-Flange
27	112-0350	1	Spring-Extension	62	119-8436	1	Latch-Cruise
28	119-3989	1	Spring-Extension	63	119-8437	1	Bracket-Strap, Pedal Support
29	112-0875	1	Spring-Extension	64	119-8438	1	Bracket-Strap, Pedal Support
30	112-0534	1	Washer-Flat	65	119-8439	1	Bracket-Pedal, Brake
31	119-8492	1	Washer-Flat	66	119-9065	1	Washer-Flat
32	112-0579	1	Washer-Flat	67	119-9143	1	Screw-Shoulder
33	112-0544	1	Washer-Flat				
34	119-8429	1	Brake Control ASM				
35	119-8419	1	Spacer-Shoulder				

50 Inch Deck Assembly

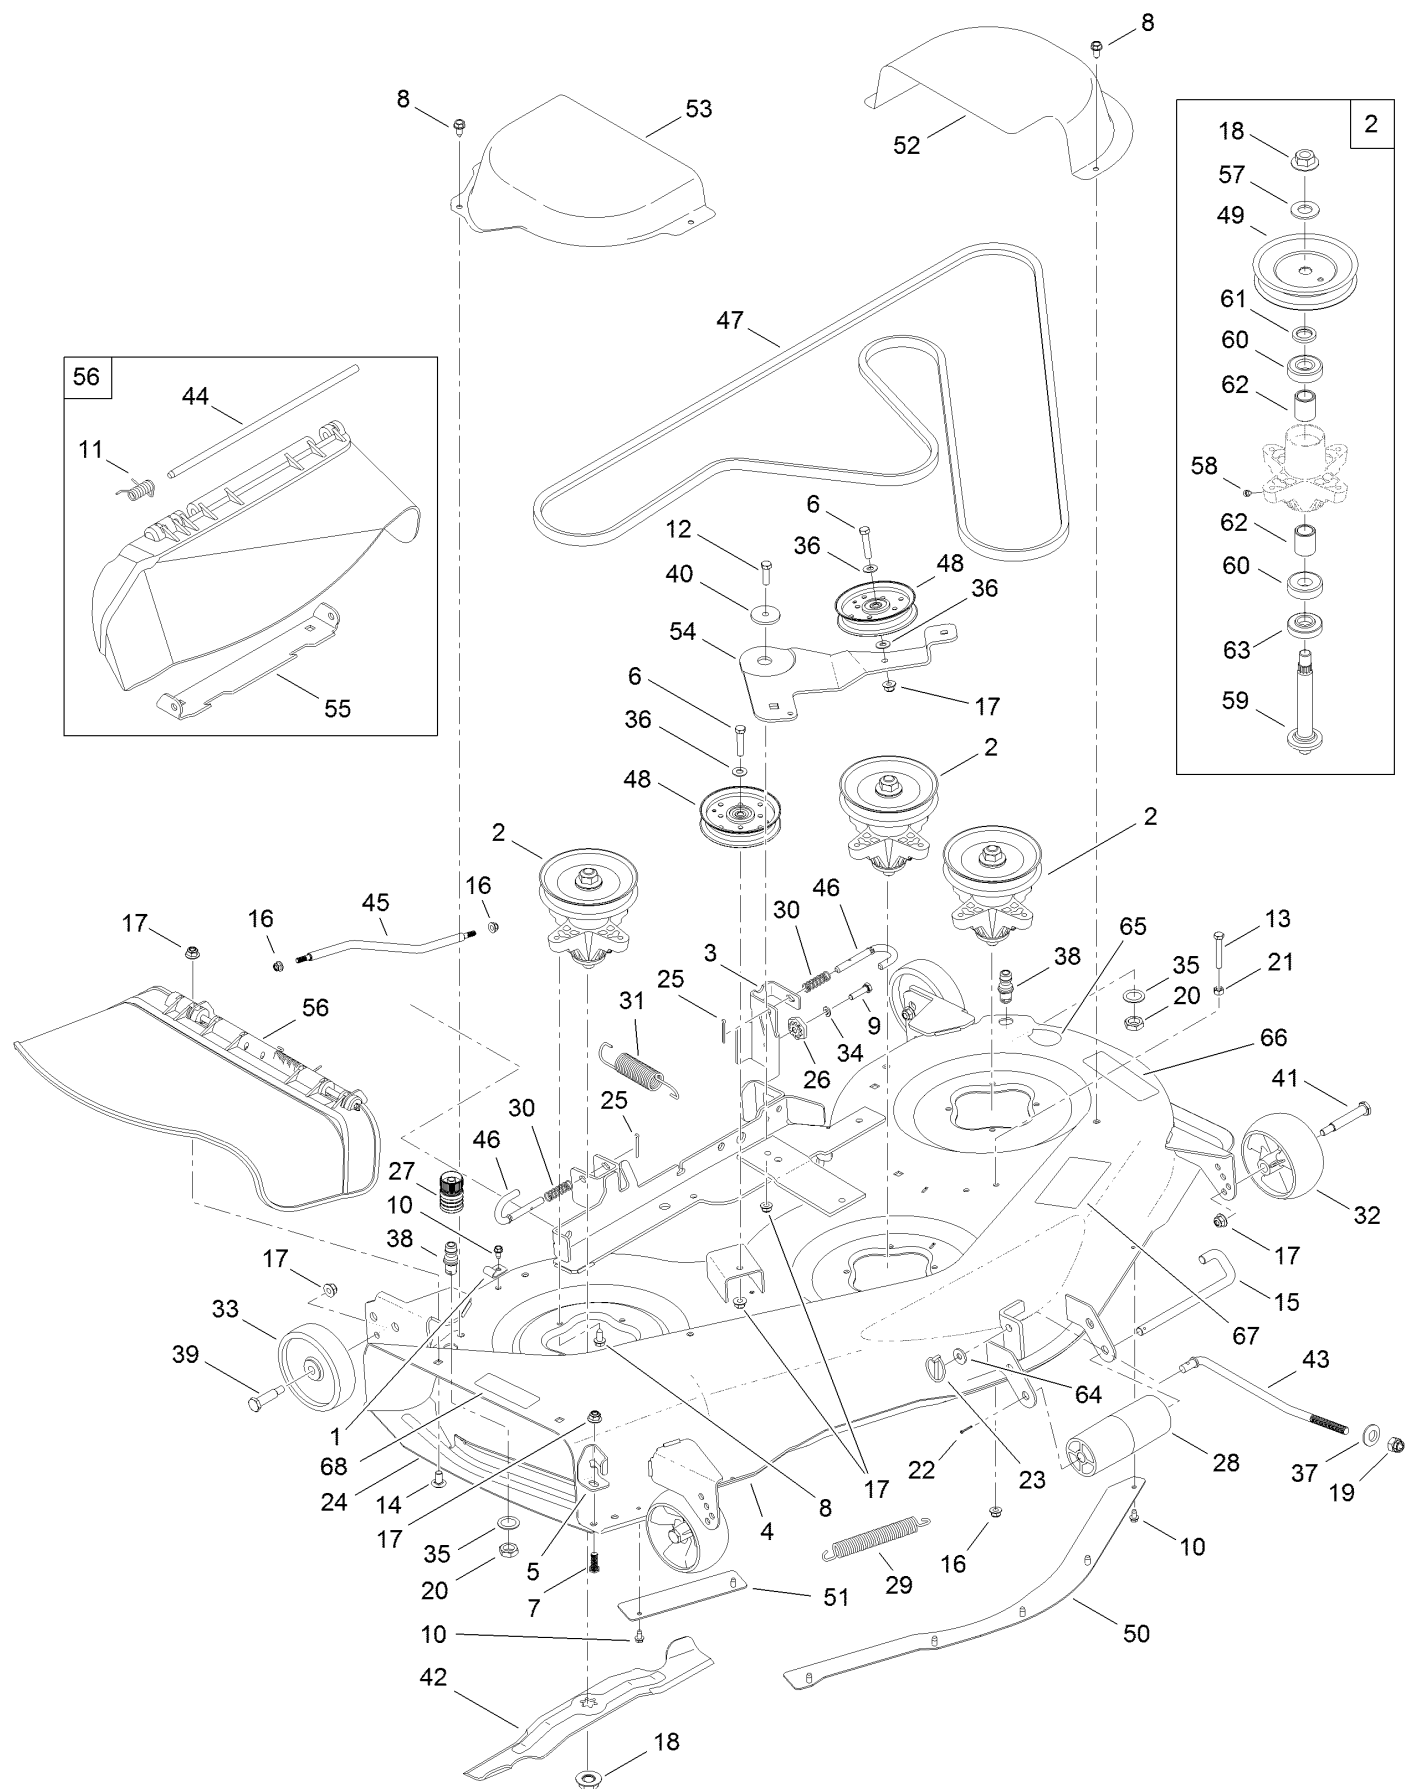

50 Inch Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-0378	1	Bracket-Retain, Hook	35	112-0643	1	Washer-Lock
2	112-6042	1	Spindle ASM	36	112-0572	1	Washer-Flat
3	112-0413	1	LH Hanger Bracket ASM	37	119-8455	1	Washer-Bellville
4	119-9129	1	Deck ASM	38	112-6274	1	Nozzle-Water, Deck
5	125-0080	1	Stop-Deflector, Chute	39	112-0334	1	Bolt-Shoulder
6	112-0513	1	Screw-HH	40	112-0584	1	Spacer-Shoulder
7	112-0631	1	Screw-HH	41	112-0325	1	Bolt-Shoulder
8	112-6070	1	Screw-TAP	42	112-6280	1	Blade-Star, 17.90
9	112-0373	1	Screw-HH	43	125-0081	1	Front Deck Lift Rod
10	112-0524	1	Screw-HWHTF	44	119-9100	1	Pin-Hinge
11	119-9111	1	Spring-Torsion	45	119-9130	1	Rod-Deck
12	112-0557	1	Screw-HH	46	112-0436	1	Pin-Handle, Deck Release
13	112-0590	1	Screw-HH	47	112-0729	1	Belt-V Type
14	112-0452	1	Bolt-CARR	48	112-0314	1	Pulley-Idler
15	119-9098	1	Pin-Roller	49	112-5926	1	Pulley
16	112-0650	1	Nut-Lock, Flange	50	112-5837	1	Skirt-Center
17	112-0668	1	Nut-Lock, Flange	51	112-0612	1	Skirt-RH
18	112-0330	1	Nut-Lock, Flange	52	112-6041	1	Cover-Belt, LH
19	119-8449	1	Nut	53	112-6040	1	Cover-Belt, RH
20	112-0351	1	Nut-Hex	54	112-6057	1	Bracket-Idler
21	112-0437	1	Nut-Hex	55	119-9102	1	Bracket-Chute
22	112-0568	1	Pin-Cotter	56	119-9103	1	Chute ASM
23	119-8450	1	Pin-Lynch	57	112-0921	1	Washer-Flat
24	112-0574	1	Bracket-Finger Guard	58	112-0926	1	Fitting-Grease
25	112-0412	1	Pin-Cotter	59	112-0884	1	Shaft-Spindle, Blade (Star)
26	112-0327	1	Gear-Adjustment, Deck	60	112-0377	1	Bearing-Ball
27	112-0916	1	Adapter-Nozzle, Water	61	112-6038	1	Spacer
28	112-6185	1	Roller-Front	62	112-0389	1	Spacer
29	112-6043	1	Spring-Extension	63	119-9110	1	Spacer
30	119-8451	1	Spring-Compression	64	119-8454	1	Washer-Flat
31	112-0399	1	Spring-Lift, Assist	65	119-8474	1	Decal-Deck Wash System
32	112-0677	1	Wheel-Deck, Front	66	112-6284	1	Decal-Deck
33	112-0337	1	Wheel-Deck, Rear	67	119-8476	1	Decal-Belt Routing
34	112-0366	1	Washer-Lock	68	112-6285	1	Decal-Chute

Attachments and Accessories

For 14AQ94RP848 GT2200 Garden Tractor

Product Name	Model/Part
42 inch Two-Stage Snowthrower	190-032-101
46 inch Front Blade.....	190-833-000
50 inch Triple Bagger.....	19A40002000
50 inch Mulch Kit	77220
10 cu. ft. Poly Dump Cart	79991
17 cu. ft. Poly Dump Cart	79992
125 lb. Tow Spreader	79993
42 inch Sweeper	79994
48 inch Dethatcher.....	79995
40 inch Spike Aerator	79996
Stake Side Kit	79997

Notes:



Count on it.