


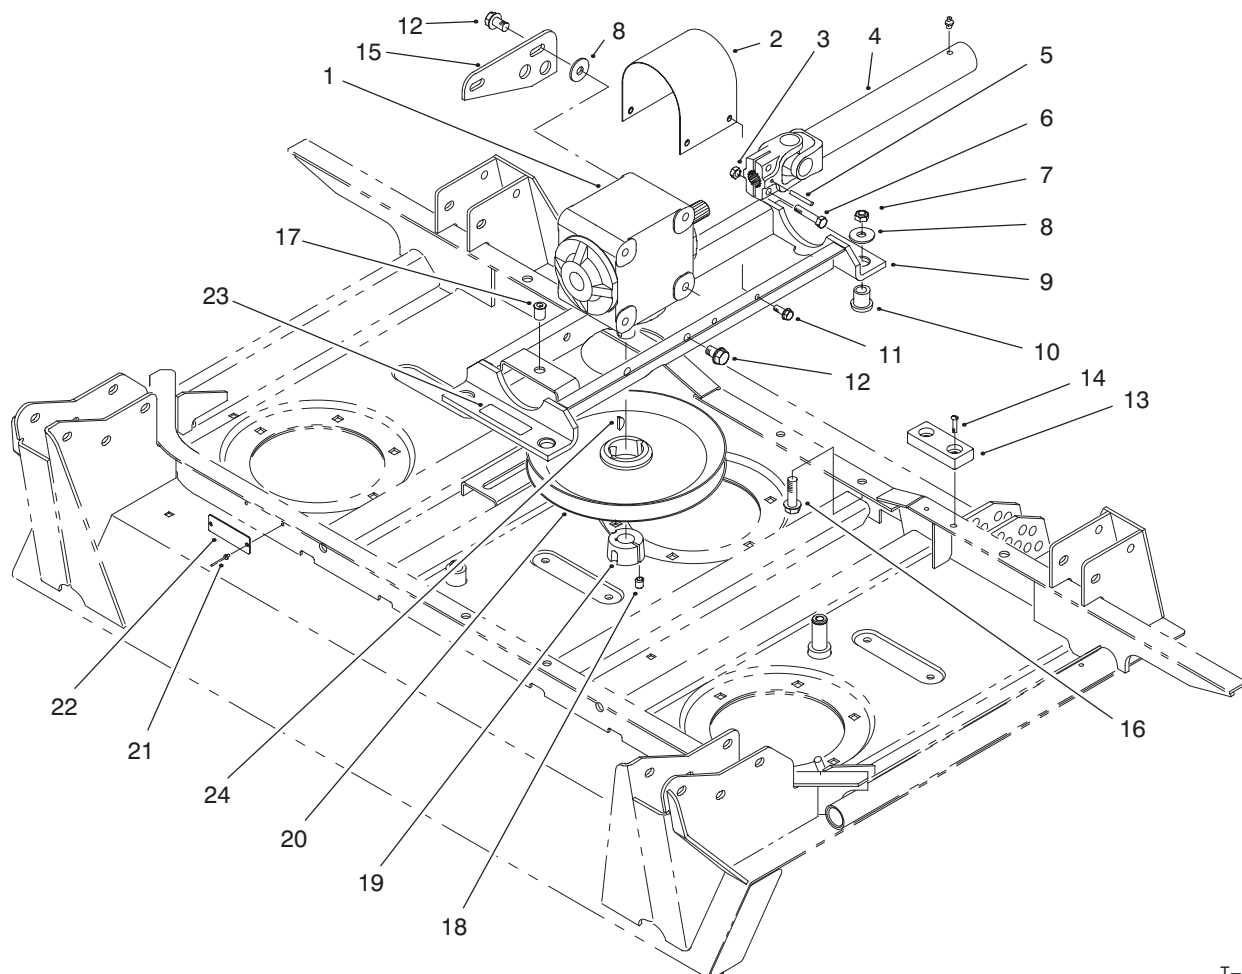


MODEL NO. 30385-70001 &amp; UP

**PARTS  
CATALOG**
**84" REAR DISCHARGE DECK**  
 For Groundsmaster® 3000


T-2707-1

**GEAR BOX & MOUNTING ASSEMBLY**

| Ref. No. | Part No.  | Description                                     | No. Used | Ref. No. | Part No.  | Description                              | No. Used |
|----------|-----------|-------------------------------------------------|----------|----------|-----------|------------------------------------------|----------|
| 1        | 93-4872   | Gearbox Assembly                                | 1        | 13       | 86-5350   | Bumper - Rubber                          | 2        |
| 2        | 93-4638   | Shroud - Universal                              | 1        | 14       | 3269-11   | Rivet                                    | 4        |
| 3        | 33024-00  | Nut - Lock NI                                   | 2        | 15       | 93-5606   | Plate - Latch                            | 1        |
| 4        | 93-4524   | Shaft - Drive                                   | 1        | 16       | 33115-040 | Screw - HH                               | 4        |
| 5        | 32121-34  | Pin - Roll                                      | 1        | 17       | 32148-9   | Insert - Threaded                        | 1        |
| 6        | 33114-040 | Screw - HH                                      | 2        | 18       | 3247-4    | Screw - Set                              | 1        |
| 7        | 33025-00  | Nut - Lock NI                                   | 4        | 19       | 23-1640   | Bushing - Taper Lock<br>(Incl. Ref. #18) | 1        |
| 8        | 93-4637   | Washer - Flat                                   | 6        | 20       | 93-4871   | Gearbox Pulley Assembly                  | 1        |
| 9        | 93-4820   | Gearbox Mount Assembly<br>(Incl. Ref. #17 & 23) | 1        | 21       | 3290-271  | Rivet - Pop                              | 2        |
| 10       | 63-9750   | Mount - Rubber                                  | 4        | 22       |           | Plate - Serial                           | 1        |
| 11       | 32104-95  | Screw - HWH                                     | 4        | 23       | 93-6697   | Decal - Lube                             | 1        |
| 12       | 33105-020 | Screw - HHF                                     | 6        | 24       | 3257-5    | Key - Woodruff                           | 1        |

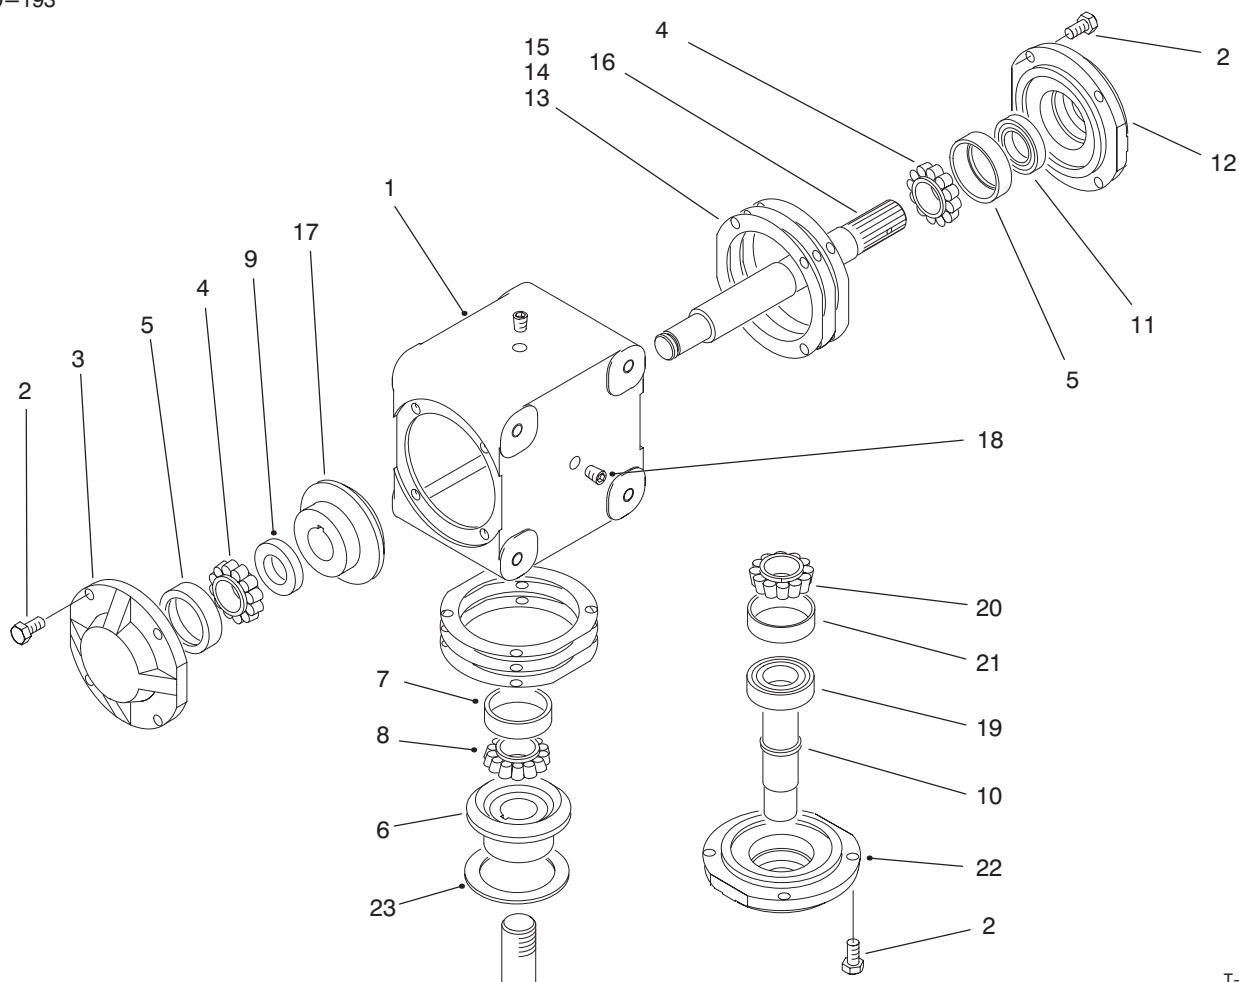


T-2351-1

## GEAR BOX ASSEMBLY NO. 93-4872

| Ref. No. | Part No. | Description    | No. Used |
|----------|----------|----------------|----------|
| 1        | 93-4815  | Housing        | 1        |
| 2        | 62-3310  | Sems Cap Screw | 12       |
| 3        | 62-3320  | Cap            | 1        |
| 4        | 62-3330  | Bearing Cone   | 2        |
| 5        | 62-3340  | Bearing Cup    | 2        |
| 6        | 93-4842  | Gear - RH      | 1        |
| 7        | 93-4814  | Bearing Cup    | 1        |
| 8        | 93-4813  | Bearing Cone   | 1        |
| 9        | 93-4843  | Spacer         | 1        |
| 10       | 94-9846  | Shaft          | 1        |
| 11       | 94-9843  | Seal           | 1        |
| 12       | 62-3410  | Cap            | 1        |

| Ref. No. | Part No. | Description       | No. Used |
|----------|----------|-------------------|----------|
| 13       | 62-3420  | Gasket (.015)     | A/R      |
| 14       | 62-3430  | Gasket (.005)     | A/R      |
| 15       | 62-3440  | Gasket (.003)     | A/R      |
| 16       | 94-9845  | Shaft             | 1        |
| 17       | 93-4841  | Gear - LH         | 1        |
| 18       | 62-3490  | Pipe Plug (Solid) | 2        |
| 19       | 94-9844  | Seal              | 1        |
| 20       | 92-0610  | Bearing Cone      | 1        |
| 21       | 92-0611  | Bearing Cup       | 1        |
| 22       | 92-0608  | Cap               | 1        |
| 23       | 93-4852  | Washer            | 1        |

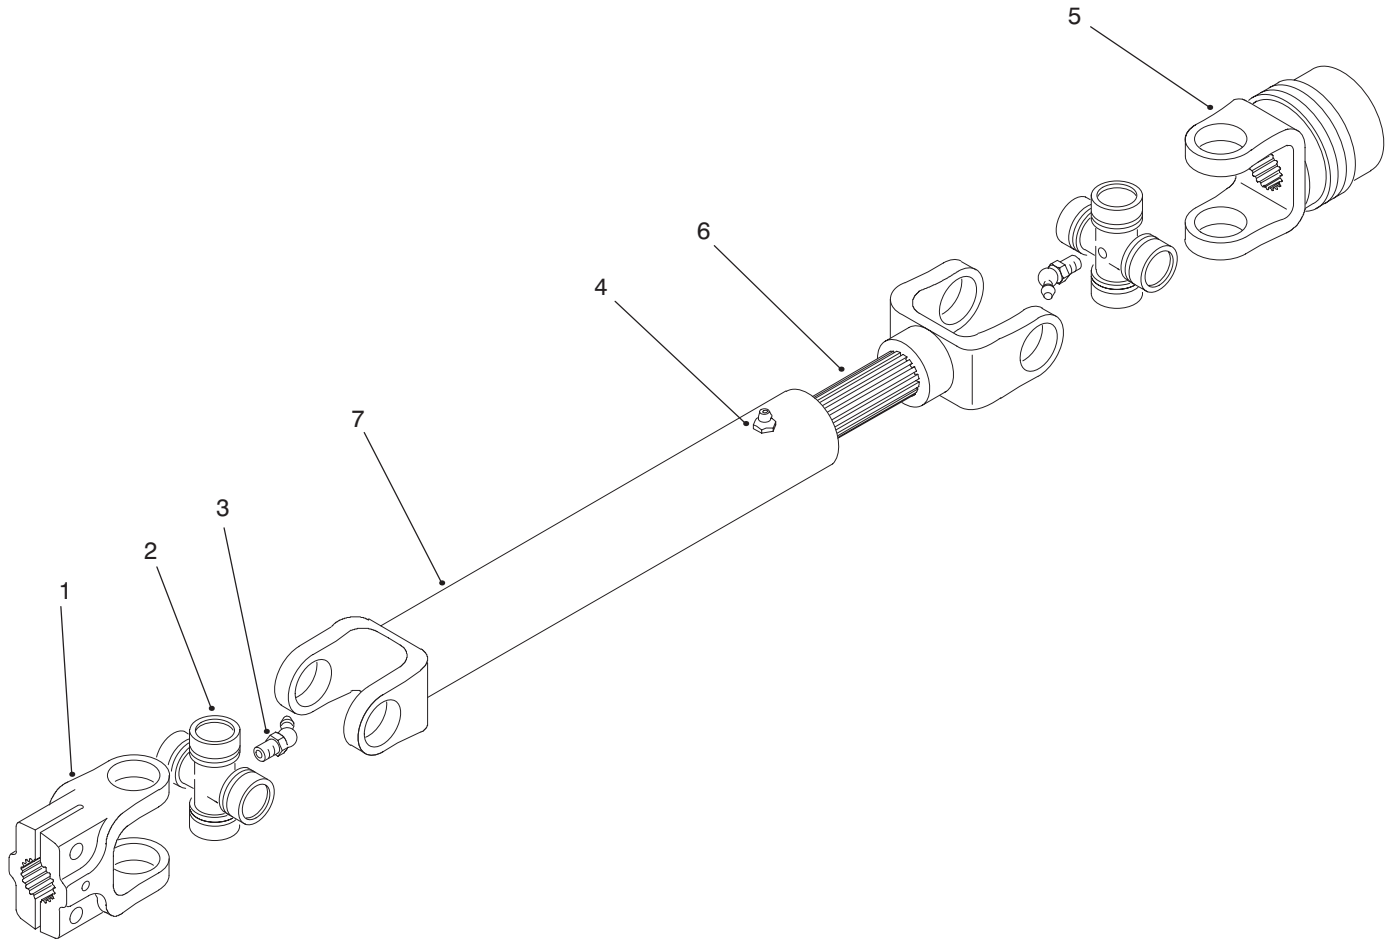


T-2250-1

# **DRIVE SHAFT ASSEMBLY NO. 93—4524**

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 1        | 54—9040  | End Yoke         | 1        |
| 2        | 54—9180  | U—Joint Kit      | 2        |
| 3        | 62—3820  | Fitting — Grease | 2        |
| 4        | 302—58   | Fitting — Grease | 1        |

| Ref. No. | Part No. | Description       | No. Used |
|----------|----------|-------------------|----------|
| 5        | 93—4633  | Yoke Assembly     | 1        |
| 6        | 93—4634  | Shaft — Slip Yoke | 1        |
| 7        | 93—4635  | Tube — Slip Yoke  | 1        |

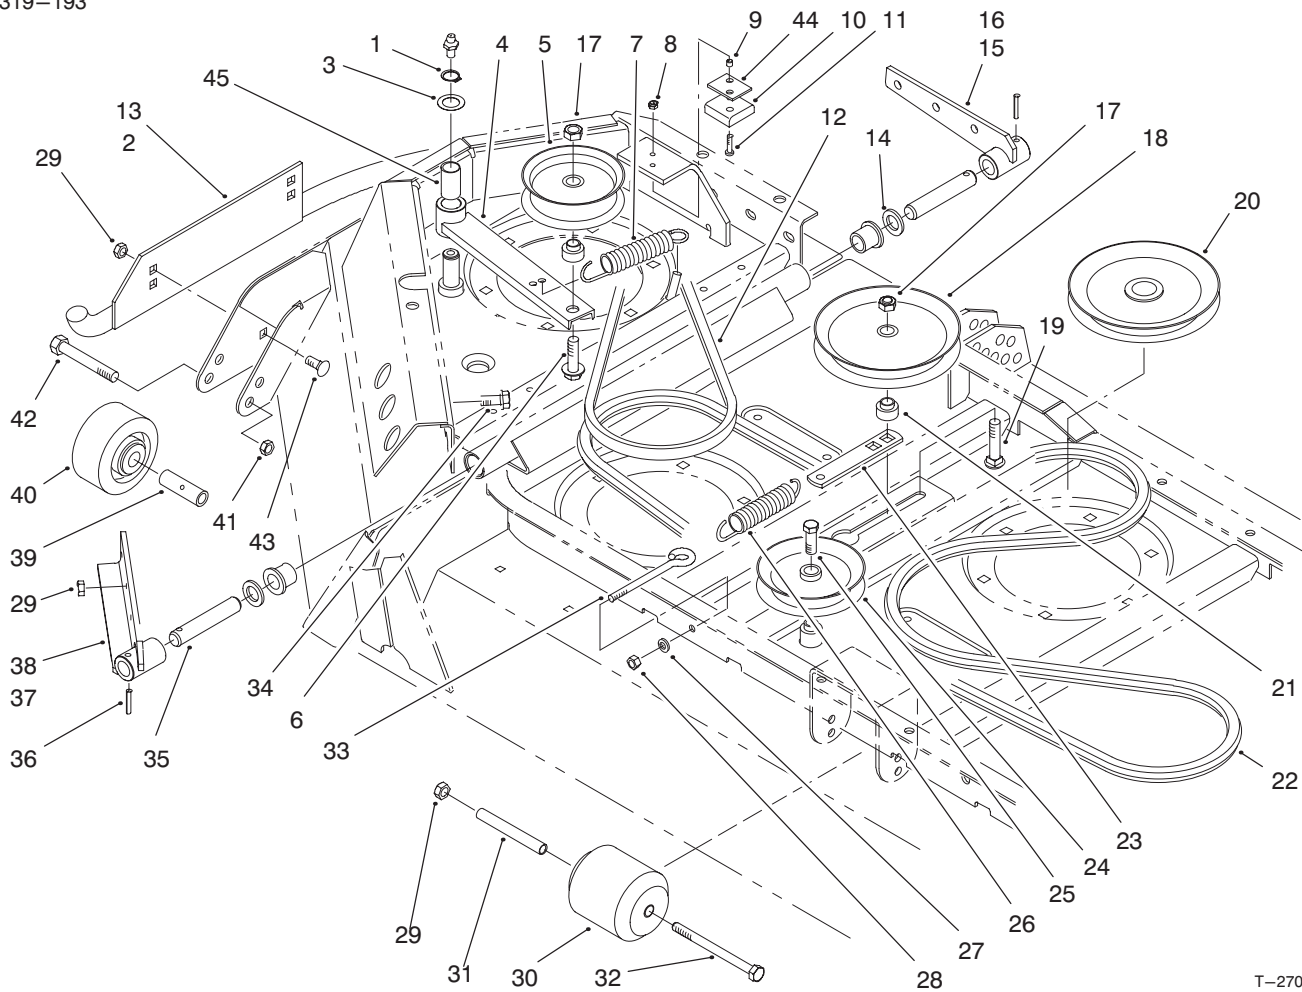


T-2708-1

## IDLERS, SKIDS & ROLLERS ASSEMBLY

| Ref. No. | Part No.  | Description                              | No. Used |
|----------|-----------|------------------------------------------|----------|
| 1        | 32120-72  | Ring - External Retaining                | 2        |
| 2        | 93-4519   | Skid Assembly - RH                       | 1        |
| 3        | 3-6498    | Washer - Thrust                          | 2        |
| 4        | 69-6610   | Wing Idler Arm Assembly (Incl. Ref. #45) | 2        |
| 5        | 69-5430   | Pulley - Idler, Flat                     | 2        |
| 6        | 33116-050 | Screw - HH                               | 2        |
| 7        | 76-1670   | Spring - Extension                       | 2        |
| 8        | 3296-2    | Nut - Lock                               | 4        |
| 9        | 40-9520   | Spacer - Split                           | 4        |
| 10       | 40-0330   | Cushion - Rubber                         | 2        |
| 11       | 3250-27   | Screw - PPH                              | 4        |
| 12       | 93-4839   | V-Belt                                   | 2        |
| 13       | 93-4522   | Skid Assembly - LH                       | 1        |
| 14       | 256-305   | Bushing - Thrust                         | 4        |
| 15       | 93-4620   | Rear Hinge Assembly - RH                 | 1        |
| 16       | 93-4622   | Rear Hinge Assembly - LH                 | 1        |
| 17       | 33026-00  | Nut - Lock NI                            | 3        |
| 18       | 93-4662   | Pulley - Idler                           | 1        |
| 19       | 33126-050 | Screw - Carriage                         | 1        |
| 20       | 93-4837   | Spindle Pulley Assembly                  | 1        |
| 21       | 69-6970   | Spacer - Flat, Idler                     | 3        |
| 22       | 93-4838   | Belt - Hex                               | 1        |


| Ref. No. | Part No.  | Description               | No. Used |
|----------|-----------|---------------------------|----------|
| 23       | 93-4805   | Strap                     | 1        |
| 24       | 63-1540   | Pulley - Idler            | 1        |
| 25       | 33116-030 | Screw - HH                | 1        |
| 26       | 93-4802   | Spring - Extension        | 1        |
| 27       | 3256-23   | Washer - Flat             | 1        |
| 28       | 33024-00  | Nut - Lock NI             | 1        |
| 29       | 33025-00  | Nut - Lock NI             | 17       |
| 30       | 93-4803   | Roller - Deck             | 1        |
| 31       | 93-4685   | Spacer                    | 1        |
| 32       | 33115-130 | Screw - HH                | 1        |
| 33       | 93-4804   | Rod                       | 1        |
| 34       | 33105-025 | Screw - HHF               | 12       |
| 35       | 93-4650   | Shaft - Hinge             | 4        |
| 36       | 32121-6   | Pin - Roll                | 4        |
| 37       | 93-4624   | Front Hinge Assembly - RH | 1        |
| 38       | 93-4626   | Front Hinge Assembly - LH | 1        |
| 39       | 93-4764   | Spanner - Wheel           | 2        |
| 40       | 93-4747   | Wheel - Gage              | 2        |
| 41       | 3296-19   | Nut - Lock                | 2        |
| 42       | 93-4806   | Bolt - Wheel              | 2        |
| 43       | 33125-025 | Screw - Carriage          | 4        |
| 44       | 42-6200   | Shim - Cushion            | A/R      |
| 45       | 256-188   | Bushing                   | 2        |

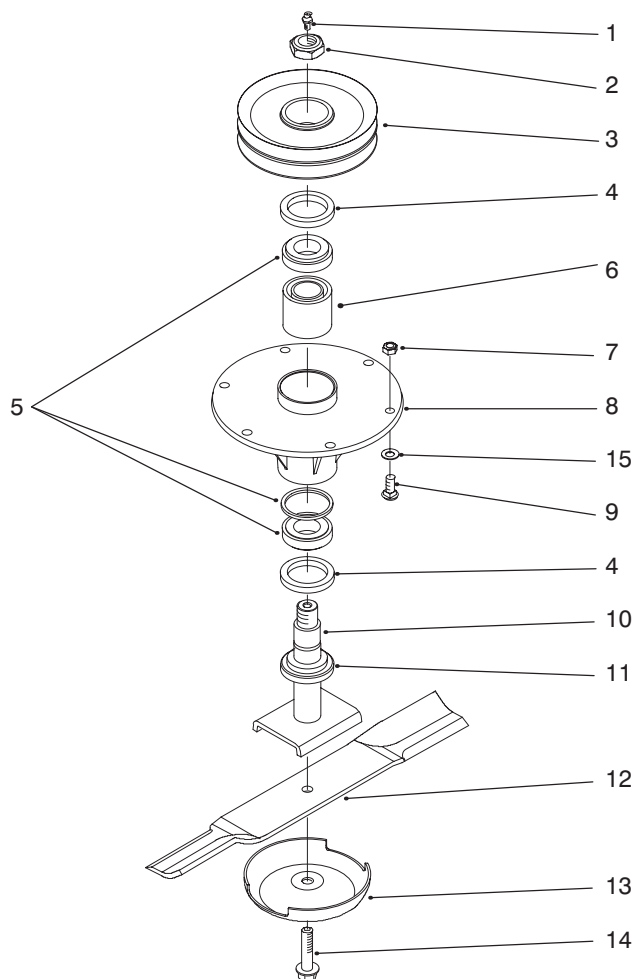

T-2217-2

## SPINDLE ASSEMBLY

| Ref. No. | Part No. | Description                         | No. Used | Ref. No. | Part No.  | Description            | No. Used |
|----------|----------|-------------------------------------|----------|----------|-----------|------------------------|----------|
| 1        | 302-2    | Fitting - Grease                    | 5        | 8        | 93-4503   | Spindle Housing        | 5        |
| 2        | 93-4658  | Nut - Lock                          | 5        | 9        | 33125-030 | Screw - Carriage       | 30       |
| 3        | 93-4836  | Double Pulley Assembly              | 4        | 10       | 93-4516   | Spindle Shaft Assembly | 5        |
| 4        | 253-154  | Seal - Oil                          | 10       | 11       | 92-9800   | Spacer - Spindle Shaft | 5        |
| 5        | 93-4825  | Spacer & Bearing<br>(Incl. Ref. #6) | 5        | 12       | 86-0010   | Blade - 19"            | 5        |
| 6        |          | Spacer - Matched Sets               | 5        | 13       | 72-9361   | Anti-Scalp Cup         | 5        |
| 7        | 33025-00 | Nut - Lock NI                       | 30       | 14       | 92-5816   | Screw - Blade          | 5        |
|          |          |                                     |          | 15       | 3256-24   | Washer - Flat          | A/R      |

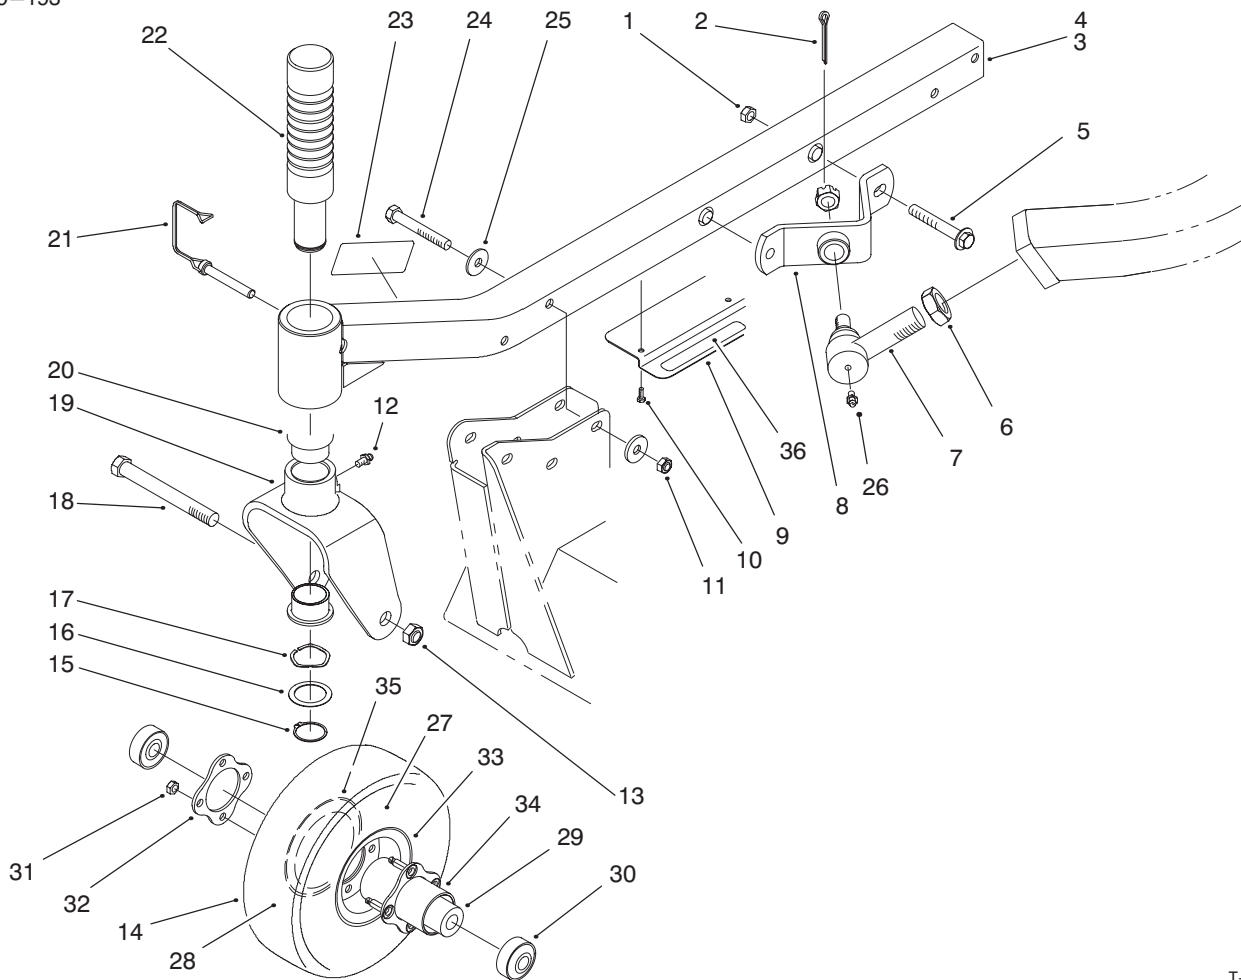


T-2713-2

## CASTOR WHEELS & ARMS ASSEMBLY

| Ref. No. | Part No.  | Description                                  | No. Used |
|----------|-----------|----------------------------------------------|----------|
| 1        | 33026-00  | Nut – Lock NI                                | 4        |
| 2        | 3272-12   | Pin – Cotter                                 | 2        |
| 3        | 93-4828   | Castor Arm Assembly – LH                     | 1        |
| 4        | 93-4826   | Castor Arm Assembly – RH                     | 1        |
| 5        | 33106-080 | Screw – HHF                                  | 4        |
| 6        | 21-3000   | Nut – Jam                                    | 2        |
| 7        | 86-8100   | Ball Joint<br>(Incl. Ref. #26)               | 2        |
| 8        | 21-3020   | Ball Joint Mount Asm – RH                    | 2        |
| 9        | 93-4655   | Plate – Cover                                | 2        |
| 10       | 32104-60  | Screw – HWH                                  | 6        |
| 11       | 33025-00  | Nut – Lock NI                                | 10       |
| 12       | 302-5     | Fitting – Grease                             | 2        |
| 13       | 33028-00  | Nut – Lock NI                                | 2        |
| 14       | 93-4240   | Wheel – Pneumatic 10”<br>(Incl. Ref. #27-35) | 2        |
| 15       | 32120-84  | Ring – Retaining                             | 2        |
| 16       | 93-4628   | Washer                                       | 2        |
| 17       | 93-4632   | Washer – Wave                                | 2        |
| 18       | 33118-140 | Screw – HH                                   | 2        |


| Ref. No. | Part No.  | Description                                   | No. Used |
|----------|-----------|-----------------------------------------------|----------|
| 19       | 93-4824   | Castor Fork Assembly<br>(Incl. Ref. #12 & 20) | 2        |
| 20       | 93-4510   | Bushing – Castor                              | 4        |
| 21       | 93-4696   | Pin – Snapper                                 | 2        |
| 22       | 93-4582   | Shaft – Castor                                | 2        |
| 23       | 93-4690   | Decal – HOC                                   | 2        |
| 24       | 33115-080 | Screw – HH                                    | 10       |
| 25       | 93-4637   | Washer – Flat                                 | 20       |
| 26       | 302-5     | Fitting – Grease                              | 2        |
| 27       | 93-4243   | Tire – 10”                                    | 2        |
| 28       | 93-4244   | Tube – w/Valve                                | 2        |
| 29       | 93-4241   | Spacer – Bearing                              | 2        |
| 30       | 93-4237   | Bearing                                       | 4        |
| 31       | 32128-16  | Nut – HHF                                     | 8        |
| 32       | 93-4242   | Plate                                         | 2        |
| 33       | 93-4239   | Rim – Wheel                                   | 2        |
| 34       | 93-5980   | Hub Assembly                                  | 2        |
| 35       | 95-2741   | Rim – Wheel                                   | 2        |
| 36       | 93-4894   | Decal – Cover                                 | 2        |

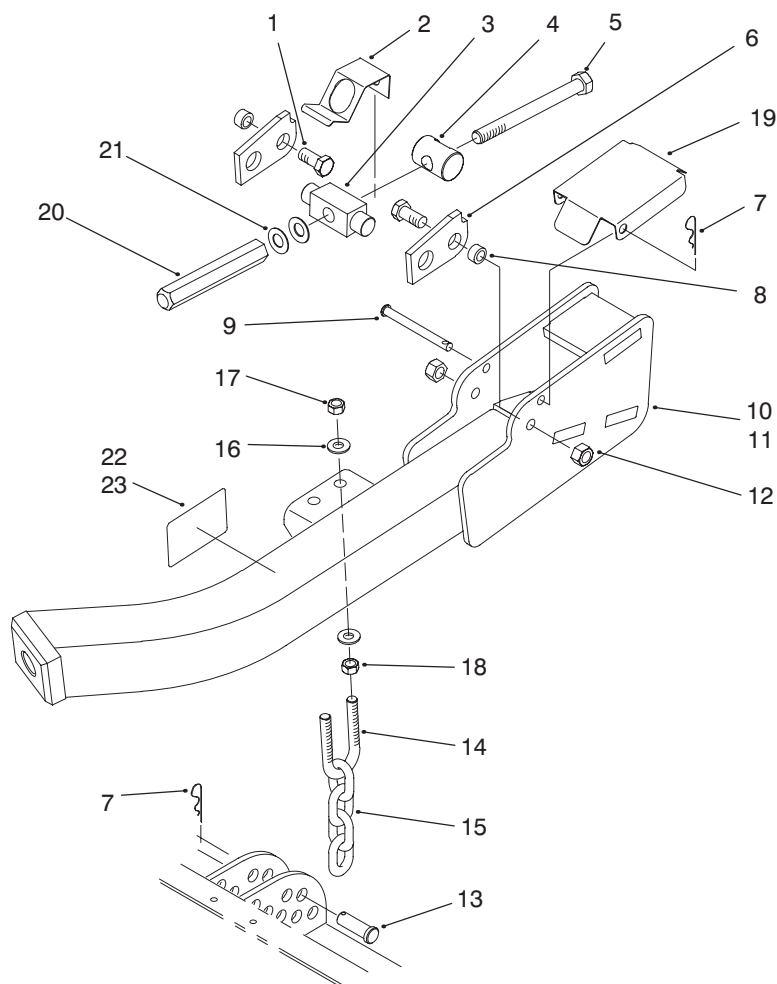

T-2709-1

## LIFT ARM ASSEMBLY

| Ref. No. | Part No.  | Description        | No. Used | Ref. No. | Part No. | Description         | No. Used |
|----------|-----------|--------------------|----------|----------|----------|---------------------|----------|
| 1        | 33115-025 | Screw – HH         | 4        | 13       | 283-55   | Pin – Clevis        | 2        |
| 2        | 93-4818   | Spring – Lever     | 2        | 14       | 96-1259  | U-Bolt              | 2        |
| 3        | 93-4677   | Hub – Release      | 2        | 15       | 95-6231  | Chain – HOC         | 2        |
| 4        | 93-4676   | Shaft – Latch      | 2        | 16       | 3256-24  | Washer – Flat       | 8        |
| 5        | 3213-24   | Screw – HH         | 2        | 17       | 3296-6   | Nut – Lock          | 4        |
| 6        | 93-4675   | Plate – Release    | 4        | 18       | 3219-3   | Nut – Hex           | 4        |
| 7        | 3290-467  | Pin – Cotter, Hair | 4        | 19       | 93-4819  | Cover – Latch       | 2        |
| 8        | 93-4618   | Spacer – Pivot     | 4        | 20       | 93-4678  | Lever – Release     | 2        |
| 9        | 283-88    | Pin – Clevis       | 2        | 21       | 3290-413 | Washer – Spring     | 4        |
| 10       | 95-6214   | LH Arm Assembly    | 1        | 22       | 94-3392  | Decal – RH Rear HOC | 1        |
| 11       | 95-6212   | RH Arm Assembly    | 1        | 23       | 93-4691  | Decal – LH Rear HOC | 1        |
| 12       | 33025-00  | Nut – Lock NI      | 4        |          |          |                     |          |

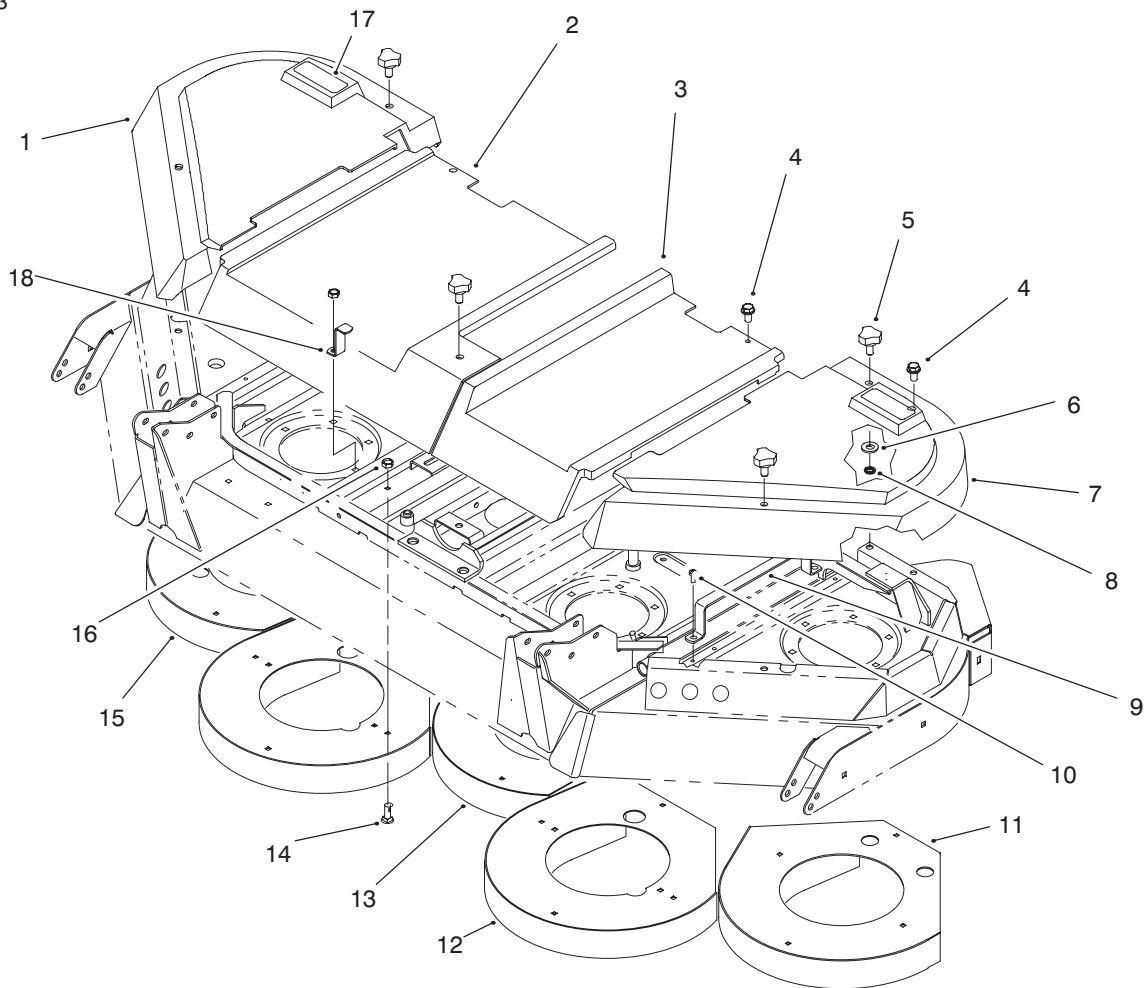


T-2711-1

## COVER & CHAMBER ASSEMBLY

| Ref. No. | Part No.  | Description        | No. Used | Ref. No. | Part No.  | Description            | No. Used |
|----------|-----------|--------------------|----------|----------|-----------|------------------------|----------|
| 1        | 93-4642   | Cover - RH         | 1        | 10       | 32104-82  | Screw - HWH            | 4        |
| 2        | 93-4641   | Cover - Center, RH | 1        | 11       | 95-6232   | LH Chamber Assembly    | 1        |
| 3        | 93-4646   | Cover - Center, LH | 1        | 12       | 95-6204   | Front Chamber Assembly | 2        |
| 4        | 33104-016 | Screw - HHF        | 4        | 13       | 95-6205   | Chamber Assembly       | 1        |
| 5        | 95-9648   | Retainer - Cover   | 5        | 14       | 33124-020 | Screw - Carriage       | 17       |
| 6        | 3256-3    | Washer - Flat      | 5        | 15       | 95-6233   | RH Chamber Assembly    | 1        |
| 7        | 93-4643   | Cover - LH         | 1        | 16       | 33024-00  | Nut - Lock NI          | 17       |
| 8        | 32151-72  | Ring - Retaining   | 5        | 17       | 93-0299   | Decal - No Step        | 2        |
| 9        | 93-4652   | Bracket - Cover    | 2        | 18       | 93-4860   | Support - Cover        | 1        |



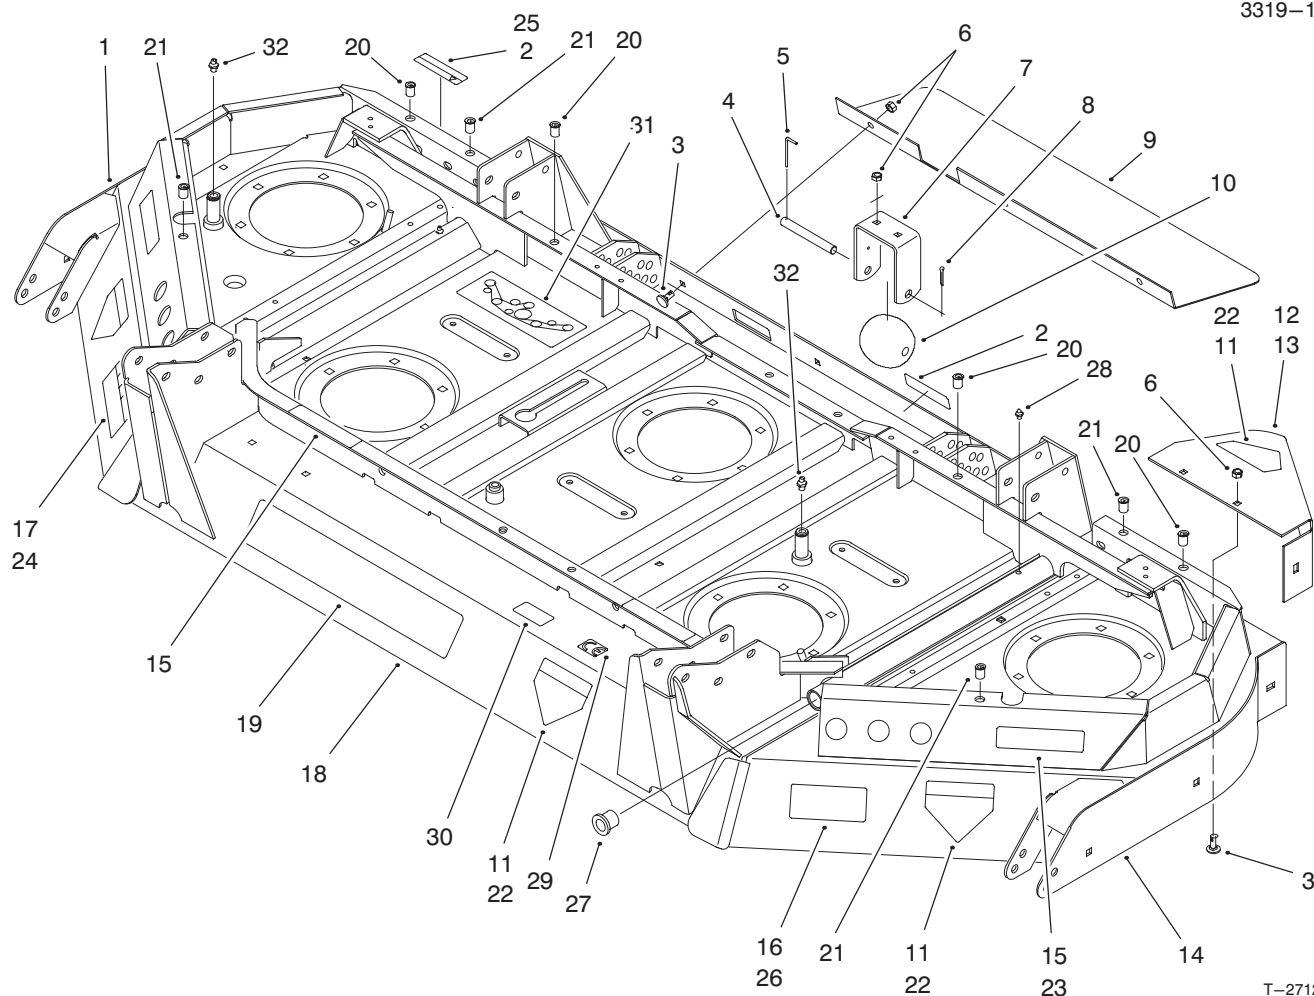

T-2712-1

## HOUSING & DECALS

| Ref. No. | Part No.  | Description                                      | No. Used | Ref. No. | Part No. | Description                                                | No. Used |
|----------|-----------|--------------------------------------------------|----------|----------|----------|------------------------------------------------------------|----------|
| 1        | 95-6207   | RH Deck Assembly<br>(Incl. Ref. #19-25)          | 1        | 16       | 93-7818  | Decal - Torque                                             | 1        |
| 2        | 93-7828   | Decal - Danger                                   | 3        | 17       | 93-7824  | Decal - Danger                                             | 1        |
| 3        | 33124-020 | Screw - Carriage                                 | 11       | 18       | 95-6209  | Center Deck Assembly<br>(Incl. Ref. #20-23, 25<br>& 27-32) | 1        |
| 4        | 57-0680   | Shaft - Roller                                   | 1        | 19       | 95-6206  | Decal - 84 Rear Discharge                                  | 1        |
| 5        | 57-0690   | Pin - Cotter, Special                            | 1        | 20       | 93-5449  | Nut - Clinch                                               | 4        |
| 6        | 33024-00  | Nut - Lock NI                                    | 11       | 21       | 32148-9  | Insert - Threaded                                          | 6        |
| 7        | 95-6236   | Bracket - Roller                                 | 1        | 22       | 43-8480  | Decal - Danger                                             | 5        |
| 8        | 3272-11   | Pin - Cotter                                     | 1        | 23       | 85-6410  | Decal - Danger                                             | 4        |
| 9        | 95-6224   | Deflector - Rear                                 | 1        | 24       | 66-1340  | Decal - Discharge                                          | 1        |
| 10       | 29-4820   | Roller                                           | 1        | 25       | 66-6380  | Decal - Danger                                             | 3        |
| 11       | 93-7815   | Decal - Danger                                   | 5        | 26       | 68-8340  | Decal - Torque                                             | 1        |
| 12       | 95-6241   | RH Deflector Assembly<br>(Incl. Ref. #22)        | 1        | 27       | 256-117  | Bushing - Flange                                           | 4        |
| 13       | 95-6242   | LH Deflector Assembly<br>(Incl. Ref. #22)        | 1        | 28       | 302-5    | Fitting - Grease                                           | 2        |
| 14       | 95-6208   | LH Deck Assembly<br>(Incl. Ref. #20-23, 25 & 26) | 1        | 29       | 93-7252  | Decal - CE                                                 | 1        |
| 15       | 93-7814   | Decal - Warning                                  | 4        | 30       |          | Decal - Safety Standard                                    | 1        |
|          |           |                                                  |          | 31       | 93-4688  | Decal - Belt                                               | 1        |
|          |           |                                                  |          | 32       | 302-2    | Fitting - Grease                                           | 2        |

# TORO PART NUMBER INDEX

| Part No. | Description               | Pg. Ref.<br>No. No. Qty. | Part No. | Description              | Pg. Ref.<br>No. No. Qty. |
|----------|---------------------------|--------------------------|----------|--------------------------|--------------------------|
| 3—6498   | Washer — Thrust           | 4 3 2                    | 93—4633  | Yoke Assembly            | 3 5 1                    |
| 21—3000  | Nut — Jam                 | 6 6 2                    | 93—4634  | Shaft — Slip Yoke        | 3 6 1                    |
| 21—3020  | Ball Joint Mount Asm — RH | 6 8 2                    | 93—4635  | Tube — Slip Yoke         | 3 7 1                    |
| 23—1640  | Bushing — Taper Lock      | 1 19 1                   | 93—4637  | Washer — Flat            | 1 8 6                    |
| 29—4820  | Roller                    | 9 10 1                   | 93—4637  | Washer — Flat            | 6 25 20                  |
| 40—0330  | Cushion — Rubber          | 4 10 2                   | 93—4638  | Shroud — Universal       | 1 2 1                    |
| 40—9520  | Spacer — Split            | 4 9 4                    | 93—4641  | Cover — Center, RH       | 8 2 1                    |
| 42—6200  | Shim — Cushion            | 4 44 A/R                 | 93—4642  | Cover — RH               | 8 1 1                    |
| 43—8480  | Decal — Danger            | 9 22 5                   | 93—4643  | Cover — LH               | 8 7 1                    |
| 54—9040  | End Yoke                  | 3 1 1                    | 93—4646  | Cover — Center, LH       | 8 3 1                    |
| 54—9180  | U—Joint Kit               | 3 2 2                    | 93—4650  | Shaft — Hinge            | 4 35 4                   |
| 57—0680  | Shaft — Roller            | 9 4 1                    | 93—4652  | Bracket — Cover          | 8 9 2                    |
| 57—0690  | Pin — Cotter, Special     | 9 5 1                    | 93—4655  | Plate — Cover            | 6 9 2                    |
| 62—3310  | Sems Cap Screw            | 2 2 12                   | 93—4658  | Nut — Lock               | 5 2 5                    |
| 62—3320  | Cap                       | 2 3 1                    | 93—4662  | Pulley — Idler           | 4 18 1                   |
| 62—3330  | Bearing Cone              | 2 4 2                    | 93—4675  | Plate — Release          | 7 6 4                    |
| 62—3340  | Bearing Cup               | 2 5 2                    | 93—4676  | Shaft — Latch            | 7 4 2                    |
| 62—3410  | Cap                       | 2 12 1                   | 93—4677  | Hub — Release            | 7 3 2                    |
| 62—3420  | Gasket (.015)             | 2 13 A/R                 | 93—4678  | Lever — Release          | 7 20 2                   |
| 62—3430  | Gasket (.005)             | 2 14 A/R                 | 93—4685  | Spacer                   | 4 31 1                   |
| 62—3440  | Gasket (.003)             | 2 15 A/R                 | 93—4688  | Decal — Belt             | 9 31 1                   |
| 62—3490  | Pipe Plug (Solid)         | 2 18 2                   | 93—4690  | Decal — HOC              | 6 23 2                   |
| 62—3820  | Fitting — Grease          | 3 3 2                    | 93—4691  | Decal — LH Rear HOC      | 7 23 1                   |
| 63—1540  | Pulley — Idler            | 4 24 1                   | 93—4696  | Pin — Snapper            | 6 21 2                   |
| 63—9750  | Mount — Rubber            | 1 10 4                   | 93—4747  | Wheel — Gage             | 4 40 2                   |
| 66—1340  | Decal — Discharge         | 9 24 1                   | 93—4764  | Spanner — Wheel          | 4 39 2                   |
| 66—6380  | Decal — Danger            | 9 25 3                   | 93—4802  | Spring — Extension       | 4 26 1                   |
| 68—8340  | Decal — Torque            | 9 26 1                   | 93—4803  | Roller — Deck            | 4 30 1                   |
| 69—5430  | Pulley — Idler, Flat      | 4 5 2                    | 93—4804  | Rod                      | 4 33 1                   |
| 69—6610  | Wing Idler Arm Assembly   | 4 4 2                    | 93—4805  | Strap                    | 4 23 1                   |
| 69—6970  | Spacer — Flat, Idler      | 4 21 3                   | 93—4806  | Bolt — Wheel             | 4 42 2                   |
| 72—9361  | Anti—Scalp Cup            | 5 13 5                   | 93—4813  | Bearing Cone             | 2 8 1                    |
| 76—1670  | Spring — Extension        | 4 7 2                    | 93—4814  | Bearing Cup              | 2 7 1                    |
| 85—6410  | Decal — Danger            | 9 23 4                   | 93—4815  | Housing                  | 2 1 1                    |
| 86—0010  | Blade — 19                | 5 12 5                   | 93—4818  | Spring — Lever           | 7 2 2                    |
| 86—5350  | Bumper — Rubber           | 1 13 2                   | 93—4819  | Cover — Latch            | 7 19 2                   |
| 86—8100  | Ball Joint                | 6 7 2                    | 93—4820  | Gearbox Mount Assembly   | 1 9 1                    |
| 92—0608  | Cap                       | 2 22 1                   | 93—4824  | Castor Fork Assembly     | 6 19 2                   |
| 92—0610  | Bearing Cone              | 2 20 1                   | 93—4825  | Spacer & Bearing         | 5 5 5                    |
| 92—0611  | Bearing Cup               | 2 21 1                   | 93—4826  | Castor Arm Assembly — RH | 6 4 1                    |
| 92—5816  | Screw — Blade             | 5 14 5                   | 93—4828  | Castor Arm Assembly — LH | 6 3 1                    |
| 92—9800  | Spacer — Spindle Shaft    | 5 11 5                   | 93—4836  | Double Pulley Assembly   | 5 3 4                    |
| 93—0299  | Decal — No Step           | 8 17 2                   | 93—4837  | Spindle Pulley Assembly  | 4 20 1                   |
| 93—4237  | Bearing                   | 6 30 4                   | 93—4838  | Belt — Hex               | 4 22 1                   |
| 93—4239  | Rim — Wheel               | 6 33 2                   | 93—4839  | V—Belt                   | 4 12 2                   |
| 93—4240  | Wheel — Pneumatic 10      | 6 14 2                   | 93—4841  | Gear — LH                | 2 17 1                   |
| 93—4241  | Spacer — Bearing          | 6 29 2                   | 93—4842  | Gear — RH                | 2 6 1                    |
| 93—4242  | Plate                     | 6 32 2                   | 93—4843  | Spacer                   | 2 9 1                    |
| 93—4243  | Tire — 10                 | 6 27 2                   | 93—4852  | Washer                   | 2 23 1                   |
| 93—4244  | Tube — w/Valve            | 6 28 2                   | 93—4860  | Support — Cover          | 8 18 1                   |
| 93—4503  | Spindle Housing           | 5 8 5                    | 93—4871  | Gearbox Pulley Assembly  | 1 20 1                   |
| 93—4510  | Bushing — Castor          | 6 20 4                   | 93—4872  | Gearbox Assembly         | 1 1 1                    |
| 93—4516  | Spindle Shaft Assembly    | 5 10 5                   | 93—4894  | Decal — Cover            | 6 36 2                   |
| 93—4519  | Skid Assembly — RH        | 4 2 1                    | 93—5449  | Nut — Clinch             | 9 20 4                   |
| 93—4522  | Skid Assembly — LH        | 4 13 1                   | 93—5606  | Plate — Latch            | 1 15 1                   |
| 93—4524  | Shaft — Drive             | 1 4 1                    | 93—5980  | Hub Assembly             | 6 34 2                   |
| 93—4582  | Shaft — Castor            | 6 22 2                   | 93—6697  | Decal — Lube             | 1 23 1                   |
| 93—4618  | Spacer — Pivot            | 7 8 4                    | 93—7252  | Decal — CE               | 9 29 1                   |
| 93—4620  | Rear Hinge Assembly — RH  | 4 15 1                   | 93—7814  | Decal — Warning          | 9 15 4                   |
| 93—4622  | Rear Hinge Assembly — LH  | 4 16 1                   | 93—7815  | Decal — Danger           | 9 11 5                   |
| 93—4624  | Front Hinge Assembly — RH | 4 37 1                   | 93—7818  | Decal — Torque           | 9 16 1                   |
| 93—4626  | Front Hinge Assembly — LH | 4 38 1                   | 93—7824  | Decal — Danger           | 9 17 1                   |
| 93—4628  | Washer                    | 6 16 2                   | 93—7828  | Decal — Danger           | 9 2 3                    |
| 93—4632  | Washer — Wave             | 6 17 2                   | 94—3392  | Decal — RH Rear HOC      | 7 22 1                   |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

3319-193

| Part No. | Description               | Pg. Ref.<br>No. No. Qty. | Part No.  | Description               | Pg. Ref.<br>No. No. Qty. |
|----------|---------------------------|--------------------------|-----------|---------------------------|--------------------------|
| 94-9843  | Seal                      | 2 11 1                   | 3290-271  | Rivet - Pop               | 1 21 2                   |
| 94-9844  | Seal                      | 2 19 1                   | 3290-413  | Washer - Spring           | 7 21 4                   |
| 94-9845  | Shaft                     | 2 16 1                   | 3290-467  | Pin - Cotter, Hair        | 7 7 4                    |
| 94-9846  | Shaft                     | 2 10 1                   | 3296-2    | Nut - Lock                | 4 8 4                    |
| 95-2741  | Rim - Wheel               | 6 35 2                   | 3296-6    | Nut - Lock                | 7 17 4                   |
| 95-6204  | Front Chamber Assembly    | 8 12 2                   | 3296-19   | Nut - Lock                | 4 41 2                   |
| 95-6205  | Chamber Assembly          | 8 13 1                   | 32104-60  | Screw - HWH               | 6 10 6                   |
| 95-6206  | Decal - 84 Rear Discharge | 9 19 1                   | 32104-82  | Screw - HWH               | 8 10 4                   |
| 95-6207  | RH Deck Assembly          | 9 1 1                    | 32104-95  | Screw - HWH               | 1 11 4                   |
| 95-6208  | LH Deck Assembly          | 9 14 1                   | 32120-72  | Ring - External Retaining | 4 1 2                    |
| 95-6209  | Center Deck Assembly      | 9 18 1                   | 32120-84  | Ring - Retaining          | 6 15 2                   |
| 95-6212  | RH Arm Assembly           | 7 11 1                   | 32121-6   | Pin - Roll                | 4 36 4                   |
| 95-6214  | LH Arm Assembly           | 7 10 1                   | 32121-34  | Pin - Roll                | 1 5 1                    |
| 95-6224  | Deflector - Rear          | 9 9 1                    | 33125-025 | Screw - Carriage          | 4 43 4                   |
| 95-6231  | Chain - HOC               | 7 15 2                   | 32128-16  | Nut - HHF                 | 6 31 8                   |
| 95-6232  | LH Chamber Assembly       | 8 11 1                   | 32148-9   | Insert - Threaded         | 1 17 1                   |
| 95-6233  | RH Chamber Assembly       | 8 15 1                   | 32148-9   | Insert - Threaded         | 9 21 6                   |
| 95-6236  | Bracket - Roller          | 9 7 1                    | 32151-72  | Ring - Retaining          | 8 8 5                    |
| 95-6241  | RH Deflector Assembly     | 9 12 1                   | 33024-00  | Nut - Lock NI             | 1 3 2                    |
| 95-6242  | LH Deflector Assembly     | 9 13 1                   | 33024-00  | Nut - Lock NI             | 9 6 11                   |
| 95-9648  | Retainer - Cover          | 8 5 5                    | 33024-00  | Nut - Lock NI             | 8 16 17                  |
| 96-1259  | U-Bolt                    | 7 14 2                   | 33024-00  | Nut - Lock NI             | 4 28 1                   |
| 253-154  | Seal - Oil                | 5 4 10                   | 33025-00  | Nut - Lock NI             | 1 7 4                    |
| 256-117  | Bushing - Flange          | 9 27 4                   | 33025-00  | Nut - Lock NI             | 5 7 30                   |
| 256-188  | Bushing                   | 4 45 2                   | 33025-00  | Nut - Lock NI             | 6 11 10                  |
| 256-305  | Bushing - Thrust          | 4 14 4                   | 33025-00  | Nut - Lock NI             | 7 12 4                   |
| 283-55   | Pin - Clevis              | 7 13 2                   | 33025-00  | Nut - Lock NI             | 4 29 17                  |
| 283-88   | Pin - Clevis              | 7 9 2                    | 33026-00  | Nut - Lock NI             | 6 1 4                    |
| 302-2    | Fitting - Grease          | 5 1 5                    | 33026-00  | Nut - Lock NI             | 4 17 3                   |
| 302-2    | Fitting - Grease          | 9 32 2                   | 33028-00  | Nut - Lock NI             | 6 13 2                   |
| 302-5    | Fitting - Grease          | 6 12 2                   | 33104-016 | Screw - HHF               | 8 4 4                    |
| 302-5    | Fitting - Grease          | 6 26 2                   | 33105-020 | Screw - HHF               | 1 12 6                   |
| 302-5    | Fitting - Grease          | 9 28 2                   | 33105-025 | Screw - HHF               | 4 34 12                  |
| 302-58   | Fitting - Grease          | 3 4 1                    | 33106-080 | Screw - HHF               | 6 5 4                    |
| 3213-24  | Screw - HH                | 7 5 2                    | 33114-040 | Screw - HH                | 1 6 2                    |
| 3219-3   | Nut - Hex                 | 7 18 4                   | 33115-025 | Screw - HH                | 7 1 4                    |
| 3247-4   | Screw - Set               | 1 18 1                   | 33115-040 | Screw - HH                | 1 16 4                   |
| 3250-27  | Screw - PPH               | 4 11 4                   | 33115-080 | Screw - HH                | 6 24 10                  |
| 3256-3   | Washer - Flat             | 8 6 5                    | 33115-130 | Screw - HH                | 4 32 1                   |
| 3256-23  | Washer - Flat             | 4 27 1                   | 33116-030 | Screw - HH                | 4 25 1                   |
| 3256-24  | Washer - Flat             | 5 15 A/R                 | 33116-050 | Screw - HH                | 4 6 2                    |
| 3256-24  | Washer - Flat             | 7 16 8                   | 33118-140 | Screw - HH                | 6 18 2                   |
| 3257-5   | Key - Woodruff            | 1 24 1                   | 33124-020 | Screw - Carriage          | 9 3 11                   |
| 3269-11  | Rivet                     | 1 14 4                   | 33124-020 | Screw - Carriage          | 8 14 17                  |
| 3272-11  | Pin - Cotter              | 9 8 1                    | 33125-030 | Screw - Carriage          | 5 9 30                   |
| 3272-12  | Pin - Cotter              | 6 2 2                    | 33126-050 | Screw - Carriage          | 4 19 1                   |

\*Not Illustrated

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## IDENTIFICATION AND ORDERING

## MODEL AND SERIAL NUMBERS

The 84" Rear Discharge Deck has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the front channel on the center deck. In any correspondence concerning the 84" Rear Discharge Deck, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the 84" Rear Discharge Deck.
2. Part number, description, and the quantity of part(s) desired.

**NOTE:** Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

# TABLE OF CONTENTS

| Description                                | Page | Description                             | Page  |
|--------------------------------------------|------|-----------------------------------------|-------|
| Gear Box & Mounting Assembly . . . . .     | 1    | Castor Wheels & Arms Assembly . . . . . | 6     |
| Gear Box Assembly No. 93—4872 . . . . .    | 2    | Lift Arm Assembly . . . . .             | 7     |
| Drive Shaft Assembly No. 93—4524 . . . . . | 3    | Cover & Chamber Assembly . . . . .      | 8     |
| Idlers, Skids & Rollers Assembly . . . . . | 4    | Housing & Decals . . . . .              | 9     |
| Spindle Assembly . . . . .                 | 5    | Toro Part Number Index . . . . .        | 10—11 |

## MAINTENANCE RECORD

[illegible]