



Part No. 85-6230

# INSTALLATION INSTRUCTIONS

## RUN SOLENOID FOR GROUNDMASTER® 580-D

**Note:** This run solenoid has (2) mounting holes instead of (4) as in the old solenoid. The hole spacing for the new solenoid is different than any (2) current holes in the mounting bracket. Using dimensions shown in figure, locate and drill a new .281 dia. hole in mounting bracket.

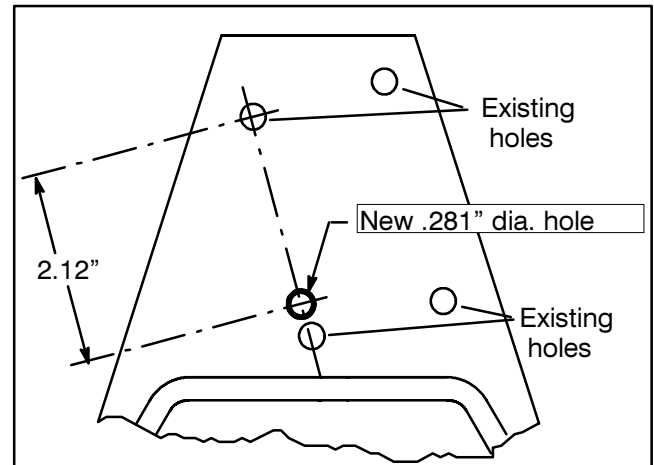


Figure 1

© The TORO Company -1991



Part No. 85-6230

# INSTALLATION INSTRUCTIONS

## RUN SOLENOID FOR GROUNDMASTER® 580-D

**Note:** This run solenoid has (2) mounting holes instead of (4) as in the old solenoid. The hole spacing for the new solenoid is different than any (2) current holes in the mounting bracket. Using dimensions shown in figure, locate and drill a new .281 dia. hole in mounting bracket.

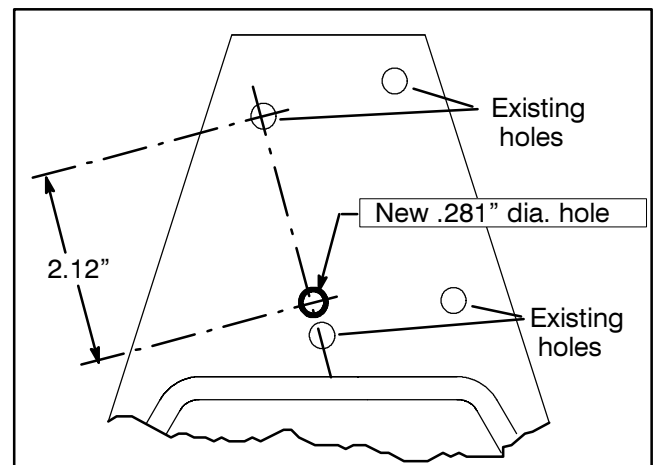


Figure 1

© The TORO Company -1991