



Count on it.

Parts Catalog

GrandStand® Mower

With 60in TURBO FORCE® Cutting Unit

Model No. 74553—Serial No. 312000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Frame Assembly.....	4
Wheel and Bearing Assembly No. 112-3810.....	6
Parking Brake Assembly.....	7
Decklift Assembly.....	8
Platform Assembly.....	10
Cushion Assembly No. 119-8742.....	11
Platform Assembly No. 117-9640.....	12
Ground Drive Assembly.....	13
Hydraulic Motor Assembly No. 114-0549.....	14
Pump Idler Assembly.....	15
Hydraulic System Assembly.....	16
Hydraulic Pump Assembly No. 119-7375.....	17
Control Assembly.....	18
Engine Assembly.....	19
Fuel Tank Assembly.....	20
Vent Hose Assembly.....	21
Electrical Assembly.....	22
Deck Assembly.....	24
Deck Decal Assembly No. 120-6414.....	25
Right Hand Idler Assembly No. 121-5970.....	26
Left Hand Idler Assembly No. 121-5965.....	27
Spindle Assembly No. 119-8560.....	28
Deflector Assembly No. 121-5960.....	29
Attachments and Accessories.....	30

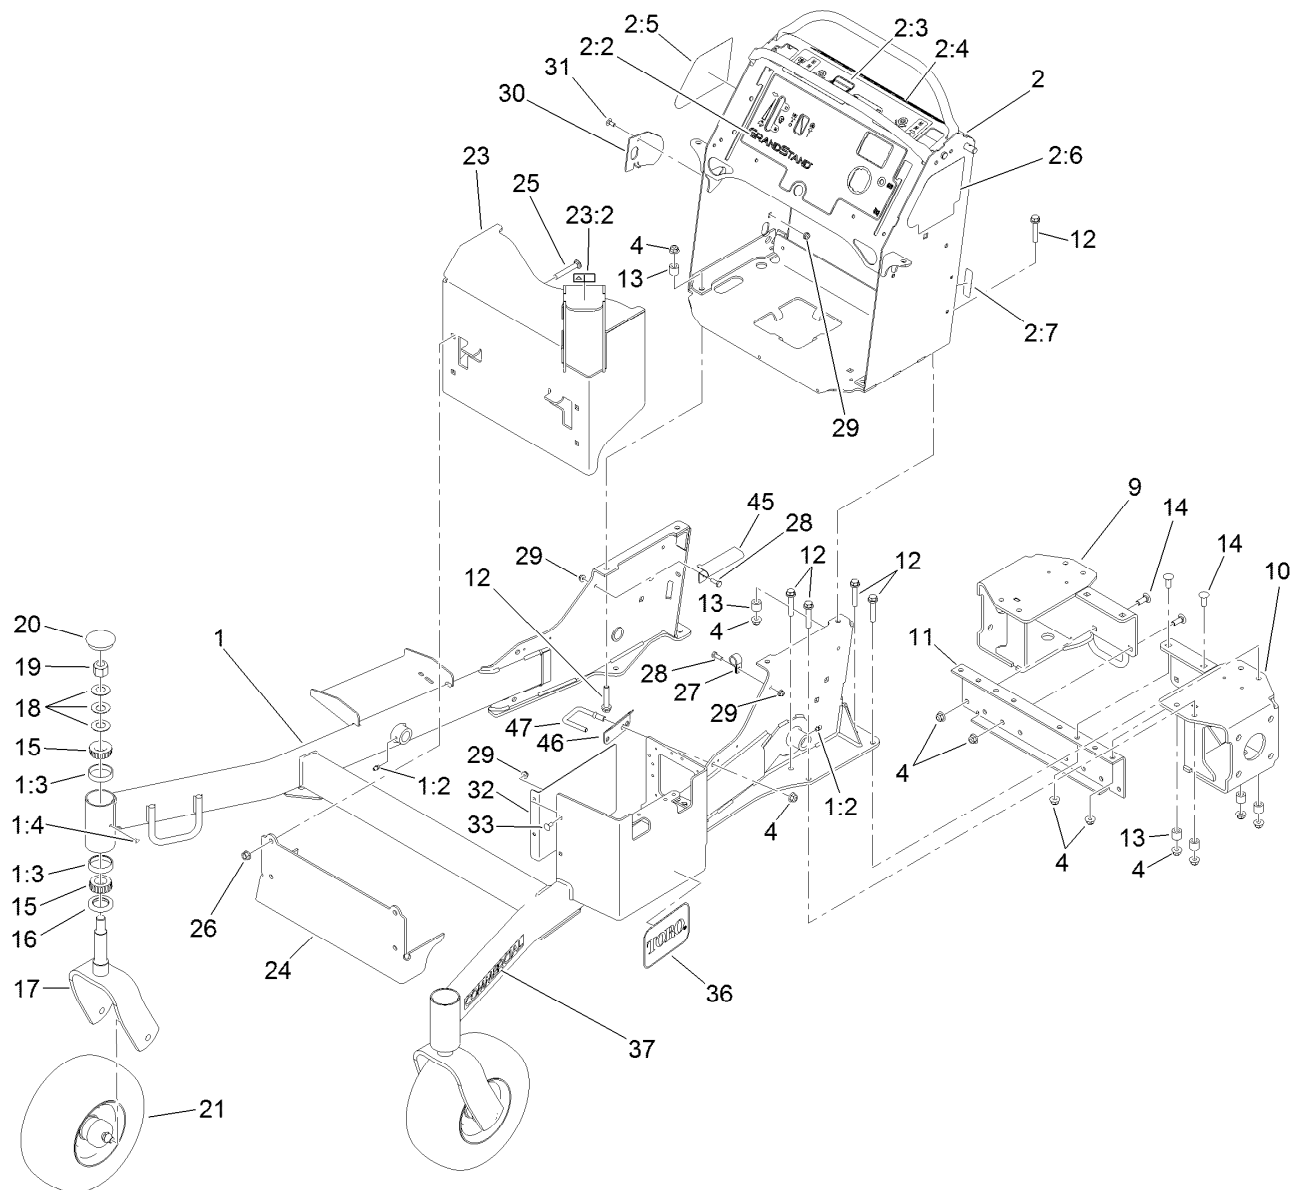

Frame Assembly


Ref.	Part Number	Qty.	Description
1	121-5995	1	Front Frame ASM
1:2	302-5	4	Fitting-Grease
1:3	1-543508	4	Cup-Bearing
1:4	1-811010	2	Plug
2	120-6460	1	Control Tower ASM
2:2	120-6464	1	Decal-Control Panel
2:3	119-8727	1	Decal-Opc
2:4	117-3626	1	Decal-Warning
2:5	117-0456	1	Decal-HOC
2:6	121-5972	1	Decal-Aid, Service
2:7	116-3267	1	Decal-Fuse
4	104-8301	22	Nut-Flange, NI
9	119-7222-01	1	RH Motor Mount ASM
10	119-7220-01	1	LH Motor Mount ASM
11	119-7224-01	1	Mount-Motor, Center
12	108-3742	12	Screw-HHF
13	121-1760	12	Spacer
14	3231-22	8	Screw-CARR
15	1-543509	4	Bearing-Roller, Tapered
16	1-543511	2	Seal-Grease
17	103-8618-01	2	Fork-Caster

Ref.	Part Number	Qty.	Description
18	1-633508	6	Washer-Bellville
19	3296-51	2	Nut-Lock, NI
20	103-4882	2	Cap-Grease
21	112-3810	2	Wheel/Tire And Bearing ASM
23	116-2490	1	Muffer Guard ASM
23:2	106-5517	1	Decal-Warning, Hot Surface
24	116-3113-01	1	Panel-Guard
25	3231-31	4	Screw-CARR
26	32128-21	4	Nut-HF
27	2412-87	1	Clamp-Cable
28	321-4	2	Screw-HH
29	104-7201	5	Nut-HF
30	119-7312	1	Plate-Striker
31	3229-11	1	Screw-CARR
32	121-7489-01	1	Shield-Heat
33	3229-11	2	Screw-CARR
36	68-3640	1	Decal
37	117-3591	2	Decal-Commercial
45	116-5067	1	Bracket-Hose, Fuel (Double)

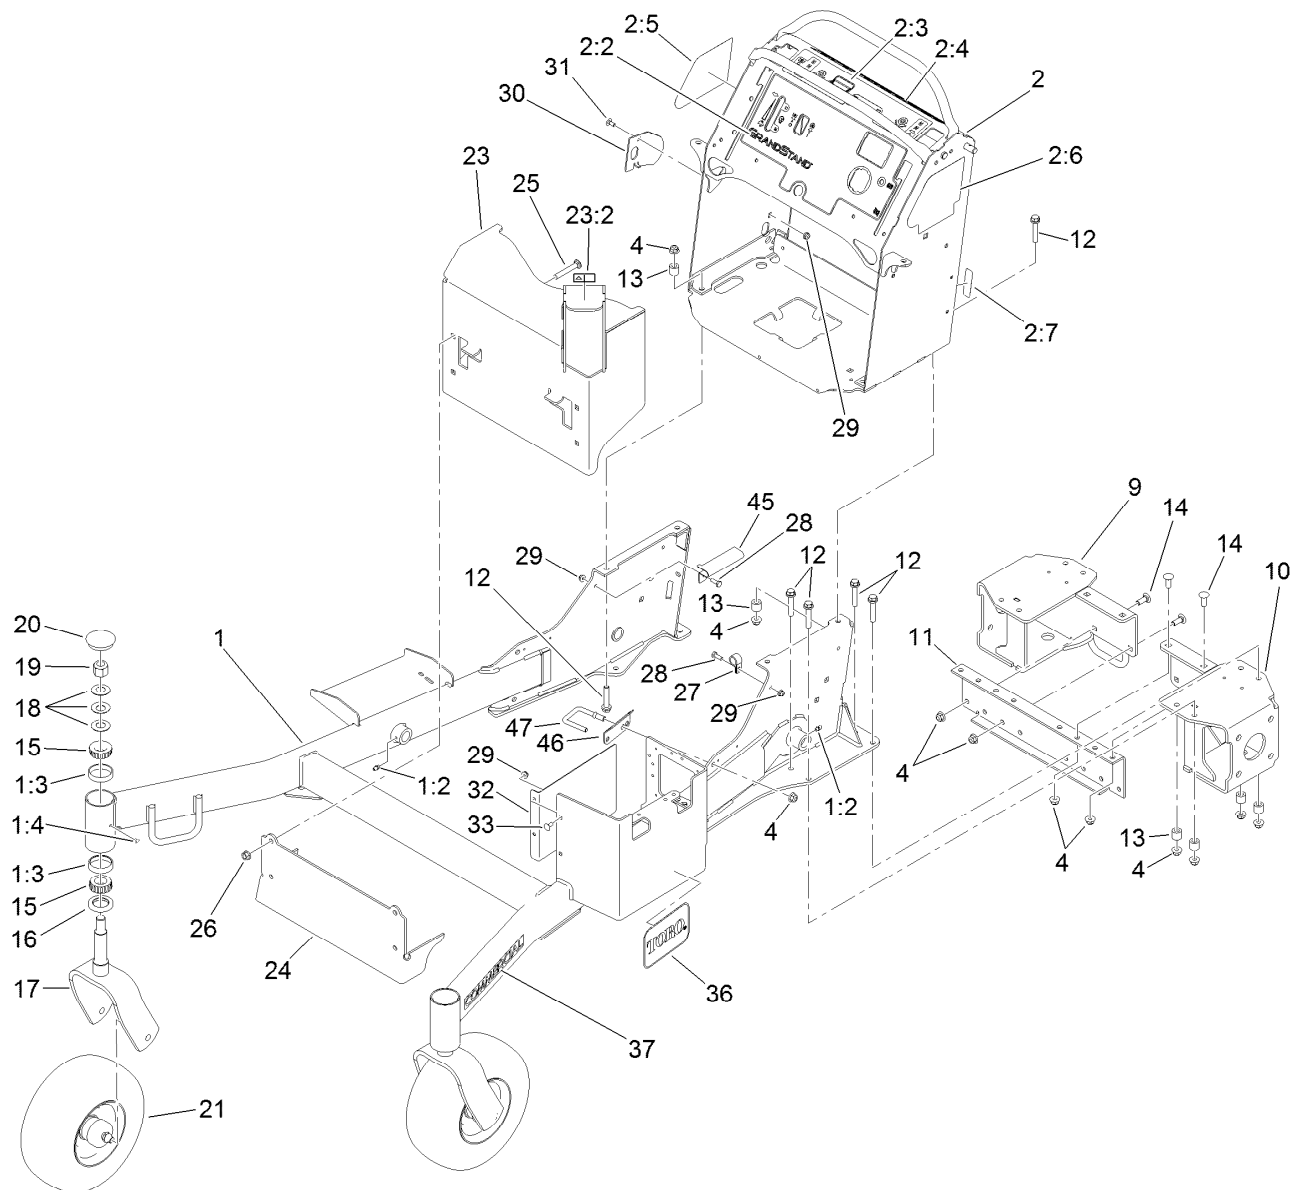

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
46	121-6003	2	Guard-Hose
47	121-6004	2	Guide-Hose

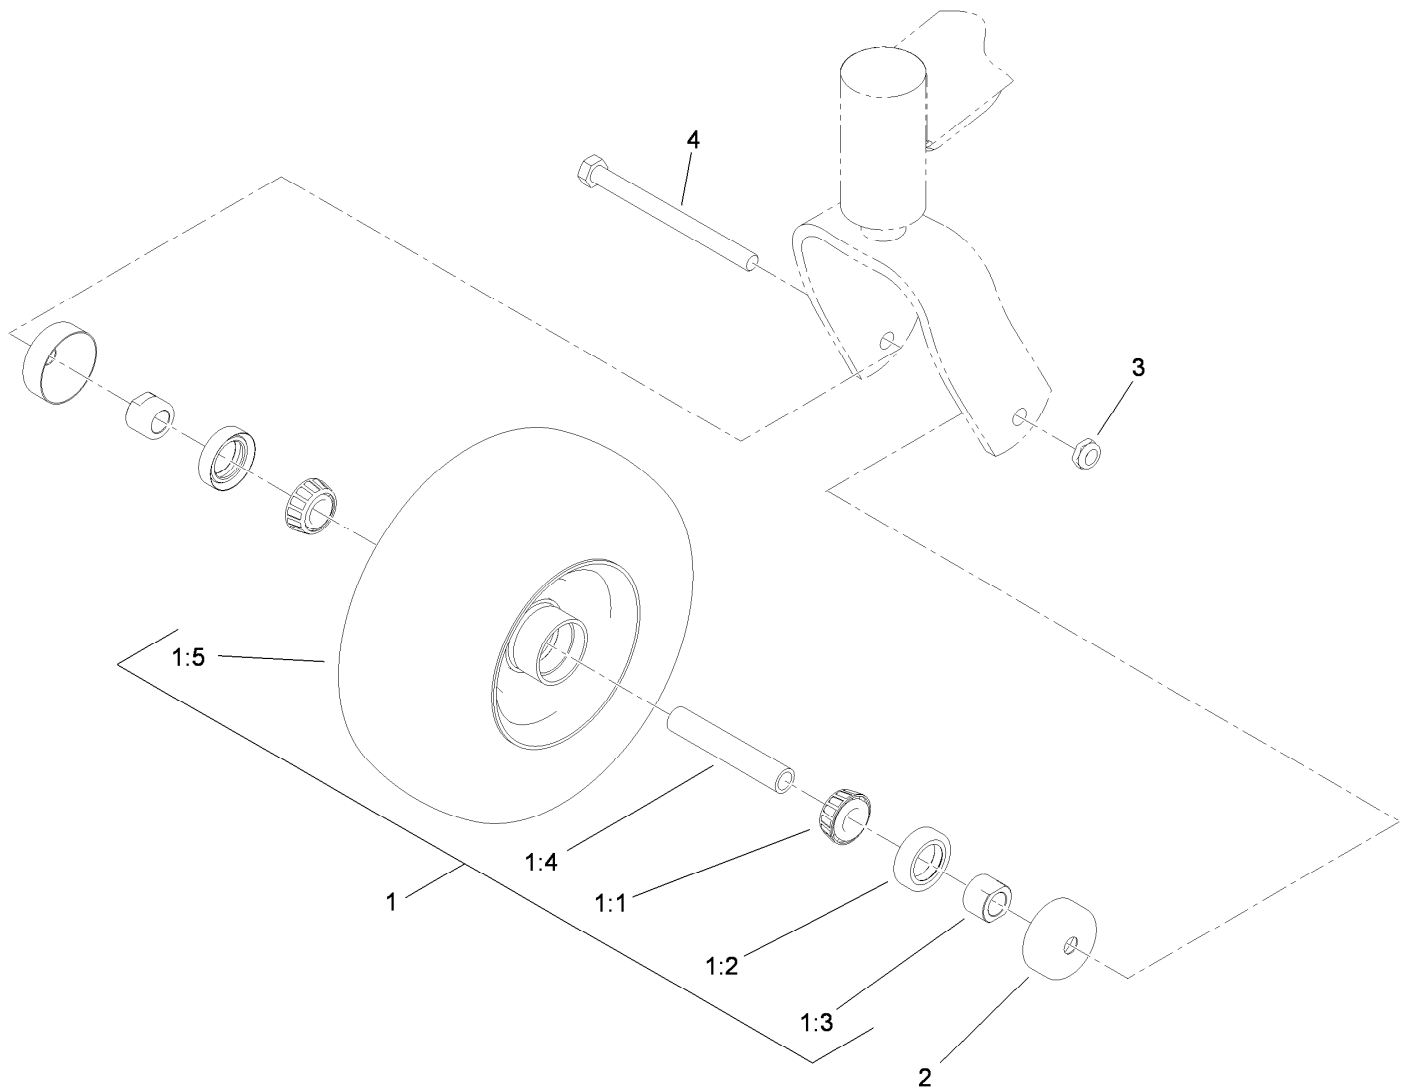


Wheel and Bearing Assembly No. 112-3810

Ref.	Part Number	Qty.	Description
1		1	Wheel And Bearing ASM ●
1:1	1-633585	2	Bearing-Cone, Taper
1:2	103-0063	2	Seal-Caster
1:3	103-3051	2	Spacer-Nut ■
1:4	103-3157	1	Axle-Caster
1:5	110-9965	1	Wheel And Tire ASM
2	103-2768	2	Guard-Seal
3	3296-45	1	Nut-Lock, NI
4	325-20	1	Screw-HH

● Not serviced separately


■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on spacer nut

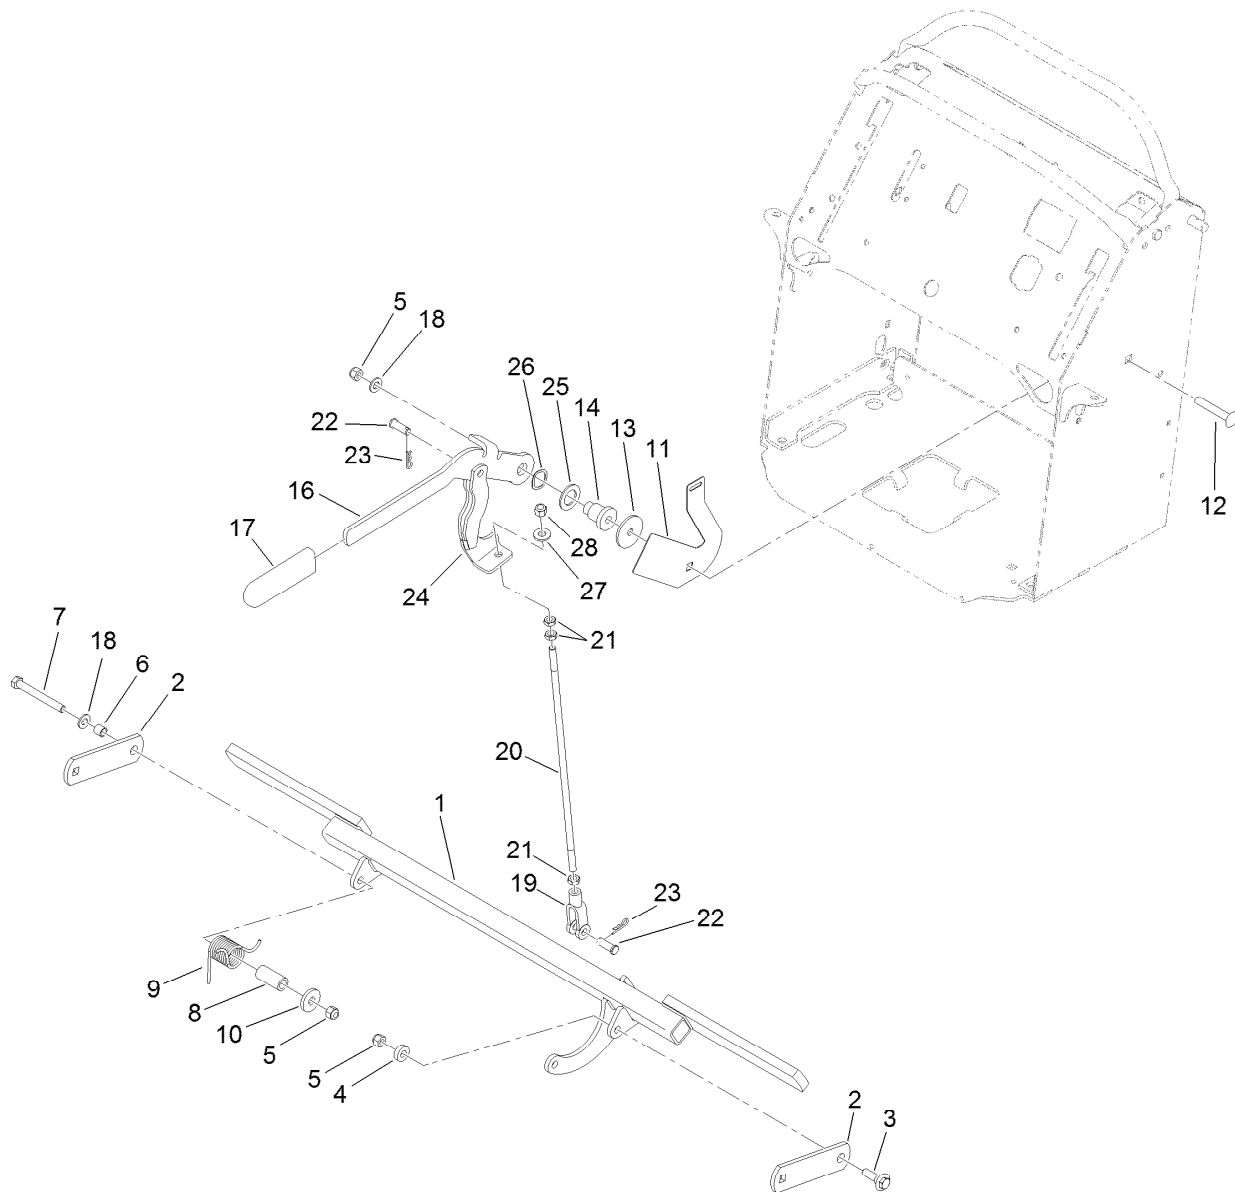

Parking Brake Assembly

Ref.	Part Number	Qty.	Description
1	119-8730-03	1	Brake Bar ASM
2	114-5186-01	2	Support-Brake
3	614672	1	Bolt-Shoulder
4	5-0652	1	Spacer
5	104-8301	3	Nut-Flange, NI
6	117-9684	1	Spacer
7	323-20	1	Screw-HH
8	117-9683	1	Spacer
9	117-9682	1	Spring-Torsion
10	1-373034	1	Washer
11	117-0452-03	1	Plate-Switch, Brake
12	3231-44	1	Screw-CARR
13	63-7400	1	Washer-Rebound
14	106-3214	1	Mount-Pulley


Ref.	Part Number	Qty.	Description
16	117-5759-03	1	Lever-Brake
17	1-633268	1	Grip-Lever
18	3256-24	2	Washer-Flat
19	1-633131	1	Yoke-Linkage, Brake
20	119-7244	1	Rod-Brake
21	3220-3	3	Nut-HJ
22	283-2	2	Pin-Clevis
23	3290-307	2	Pin-Hair
24	119-8780-03	1	Brake Arm ASM
25	1-303007	1	Washer
26	106-5335	1	Washer-Wave
27	98-5975	1	Washer-Belleville
28	3296-6	1	Nut-Lock

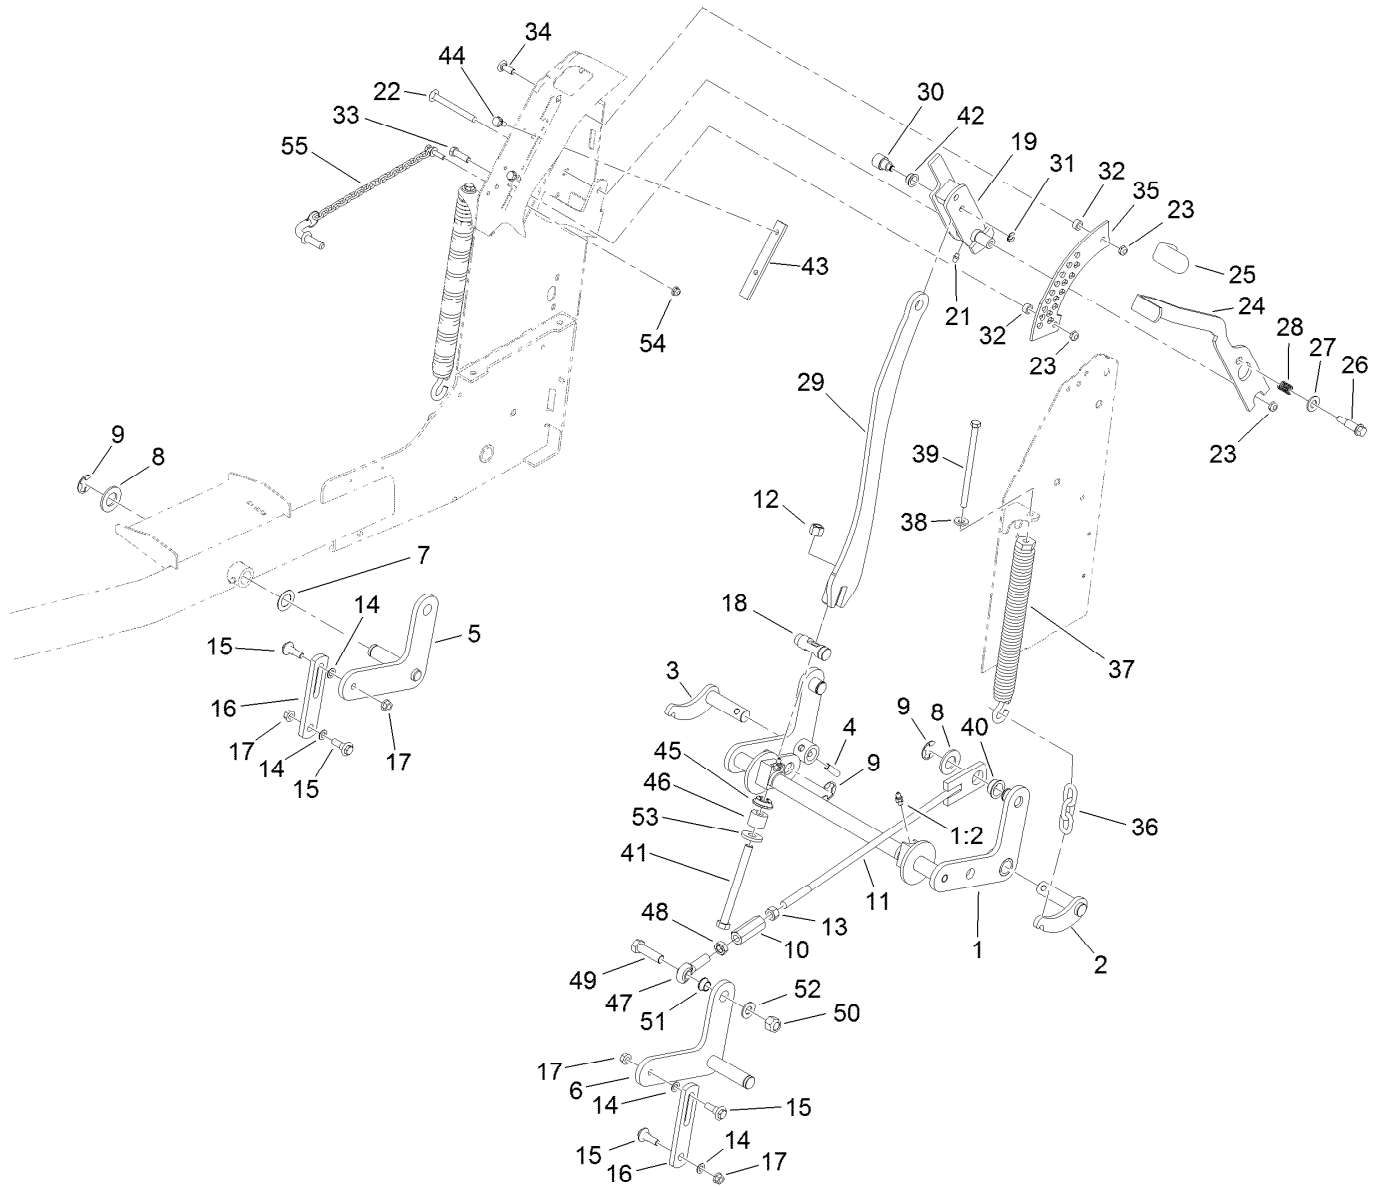

Decklift Assembly


Ref.	Part Number	Qty.	Description
1	116-3103	1	Rear Crossshaft ASM
1:2	302-11	2	Fitting-Lube, 45 DEG
2	116-3104-01	1	LH Pivot Shaft ASM
3	116-3105-01	1	RH Pivot Shaft ASM
4	116-3107	2	Pin-Spiral
5	119-7301-01	1	RH Lift ASM
6	119-7302-01	1	LH Lift ASM
7	110-6767	2	Washer-Thrust
8	3256-29	4	Washer-Flat
9	32151-103	5	Ring-Retaining, EXT
10	119-7250	2	Link-Lift
11	119-7306	2	Lift Rod ASM
12	3296-23	1	Nut-Lock, NI
13	3217-9	2	Nut-HH
14	40-1940	4	Washer
15	109-9840	4	Screw-Shoulder, HHF
16	117-0519	2	Link-Lift
17	32128-21	4	Nut-HF
18	114-5274	1	Pin-HOC
19	114-3512	1	HOC Handle ASM
21	302-5	1	Fitting-Grease

Ref.	Part Number	Qty.	Description
22	3231-24	1	Screw-CARR
23	3296-59	3	Nut-Lock, NI
24	114-1878-03	1	Lever-HOC
25	1-633268	1	Grip-Lever
26	66-0561	1	Screw-Shoulder
27	3256-26	1	Washer-Flat
28	65-9940	1	Spring
29	116-2939	1	Bar-Lift
30	116-3048	1	Hub-Pivot
31	32151-47	1	Ring-Retaining
32	111044	2	Spacer
33	323-7	1	Screw-HH
34	3231-22	1	Screw-CARR
35	114-5307	1	Bracket-HOC
36	103-9859	2	Chain-Decklift, Front
37	116-0886	2	Extension Spring ASM
38	98-5975	2	Washer-Belleville
39	323-58	2	Bolt-TAP, HH
40	116-2909	2	Bearing-Flange
41	325-22	1	Screw-HH
42	116-3047	1	Bearing-Flange

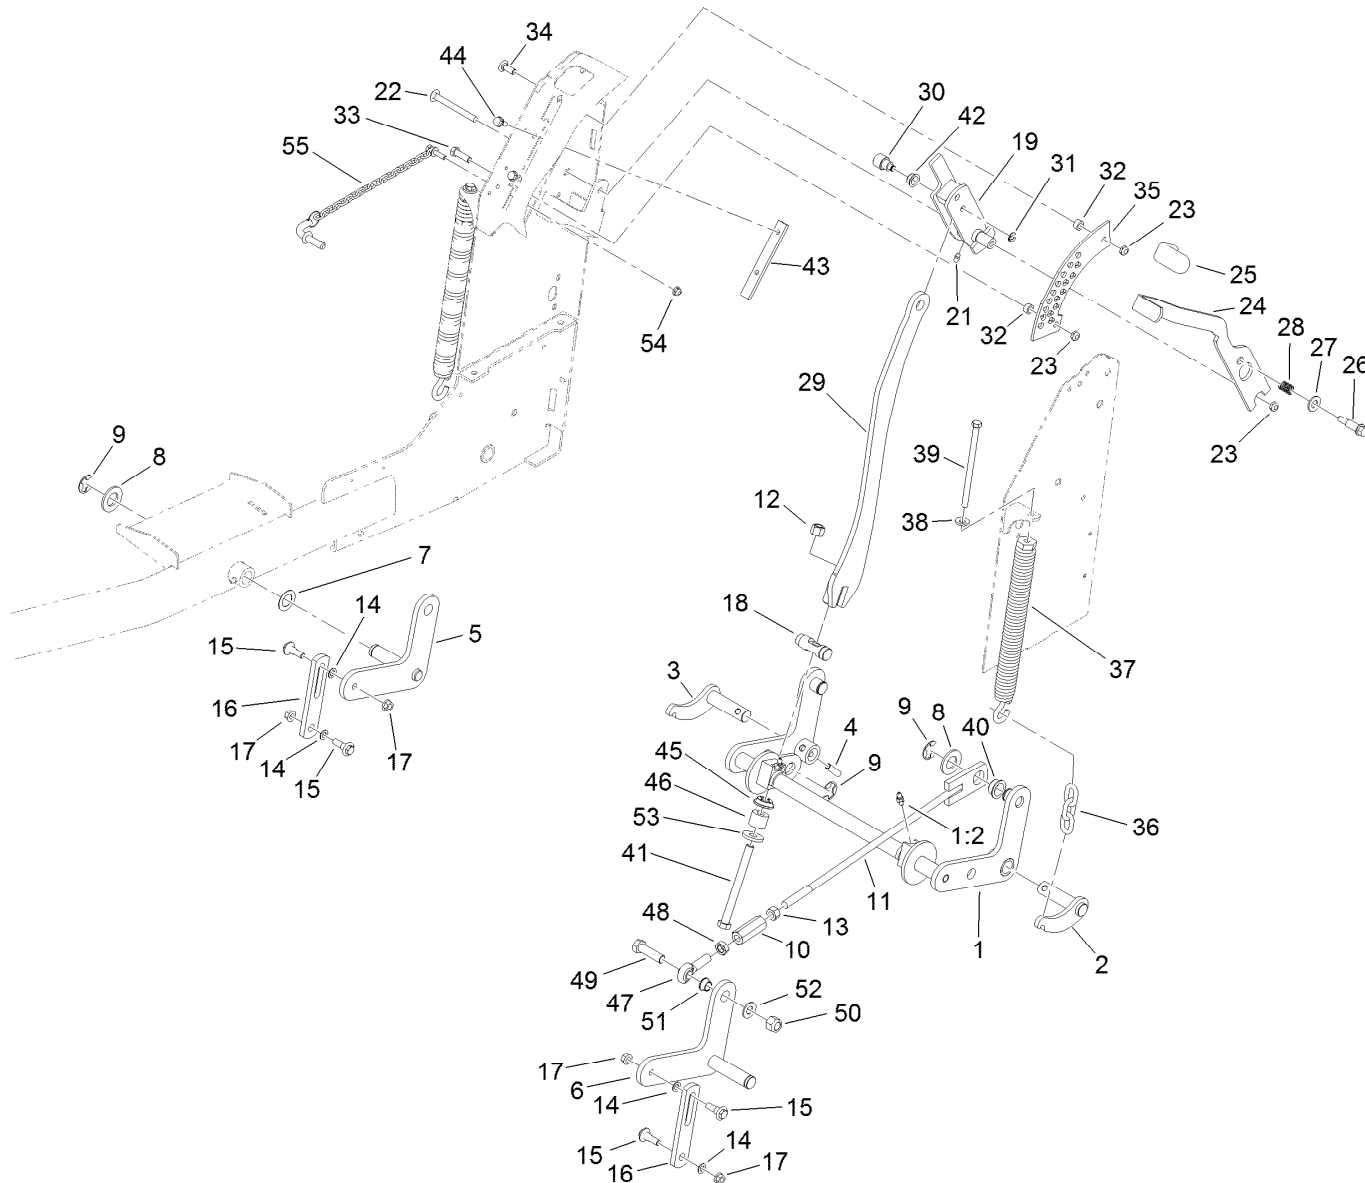


Decklift Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
43	116-3124	1	Skid-Handle, Lift	50	3296-53	2	Nut-Lock, NI
44	32144-11	2	Screw-HWHTF	51	80-1290	2	Bushing
45	116-3625	1	Seat-Spring	52	3256-27	2	Washer-Flat
46	116-3241	1	Spring-Urethane	53	92-2651	1	Washer
47	117-5291	2	Balljoint-Spherical	54	104-7201	1	Nut-HF
48	117-5293	2	Nut-Jam	55	114-0409	1	HOC Pin ASM
49	327-22	2	Screw-HH				

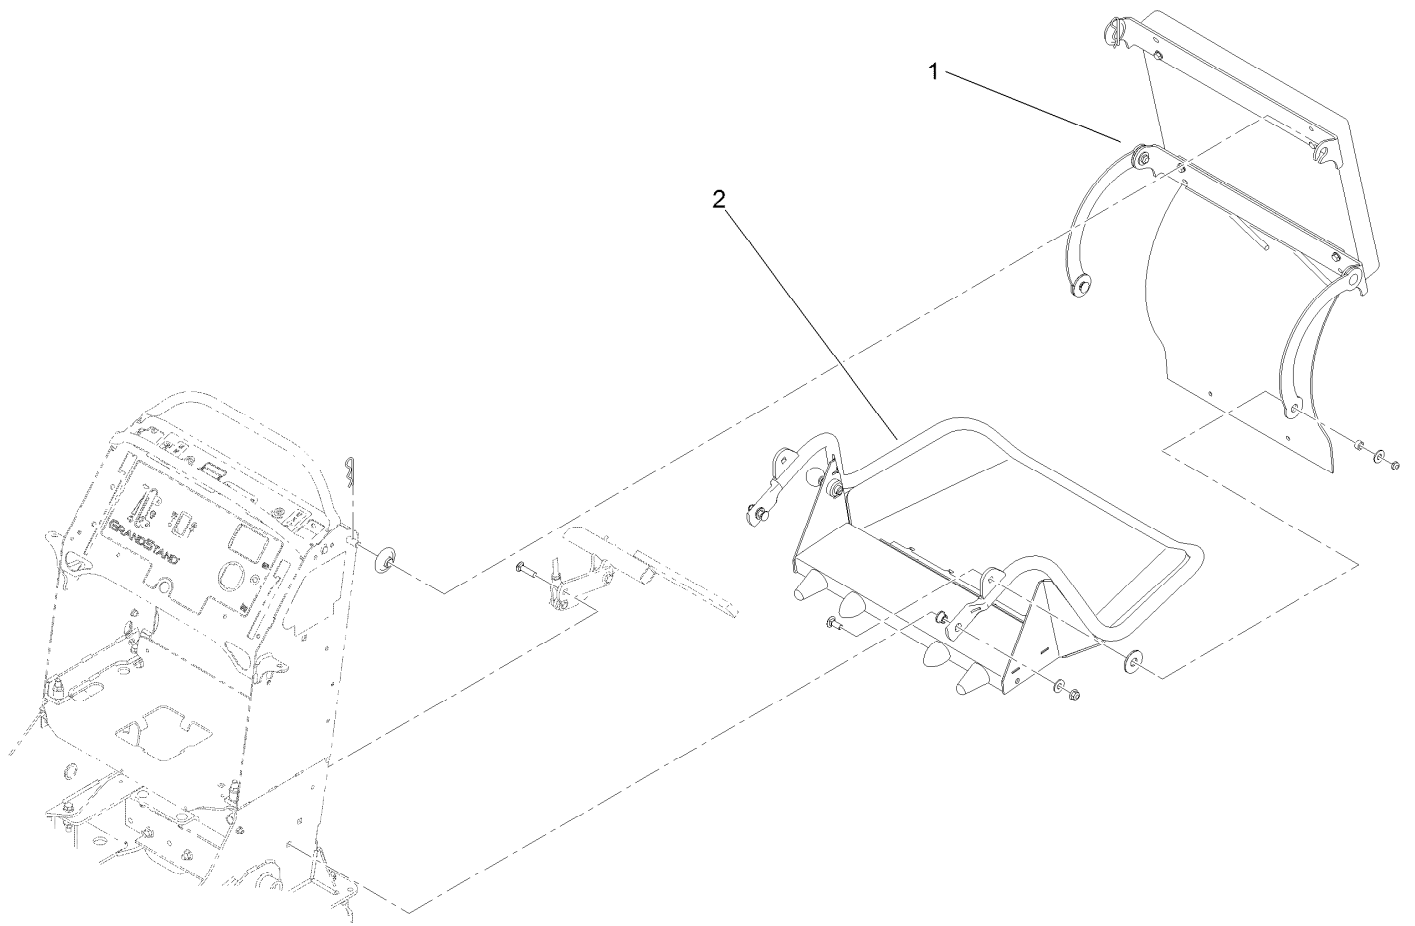


Platform Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-8742	1	Cushion ASM
2	117-9640	1	Platform ASM

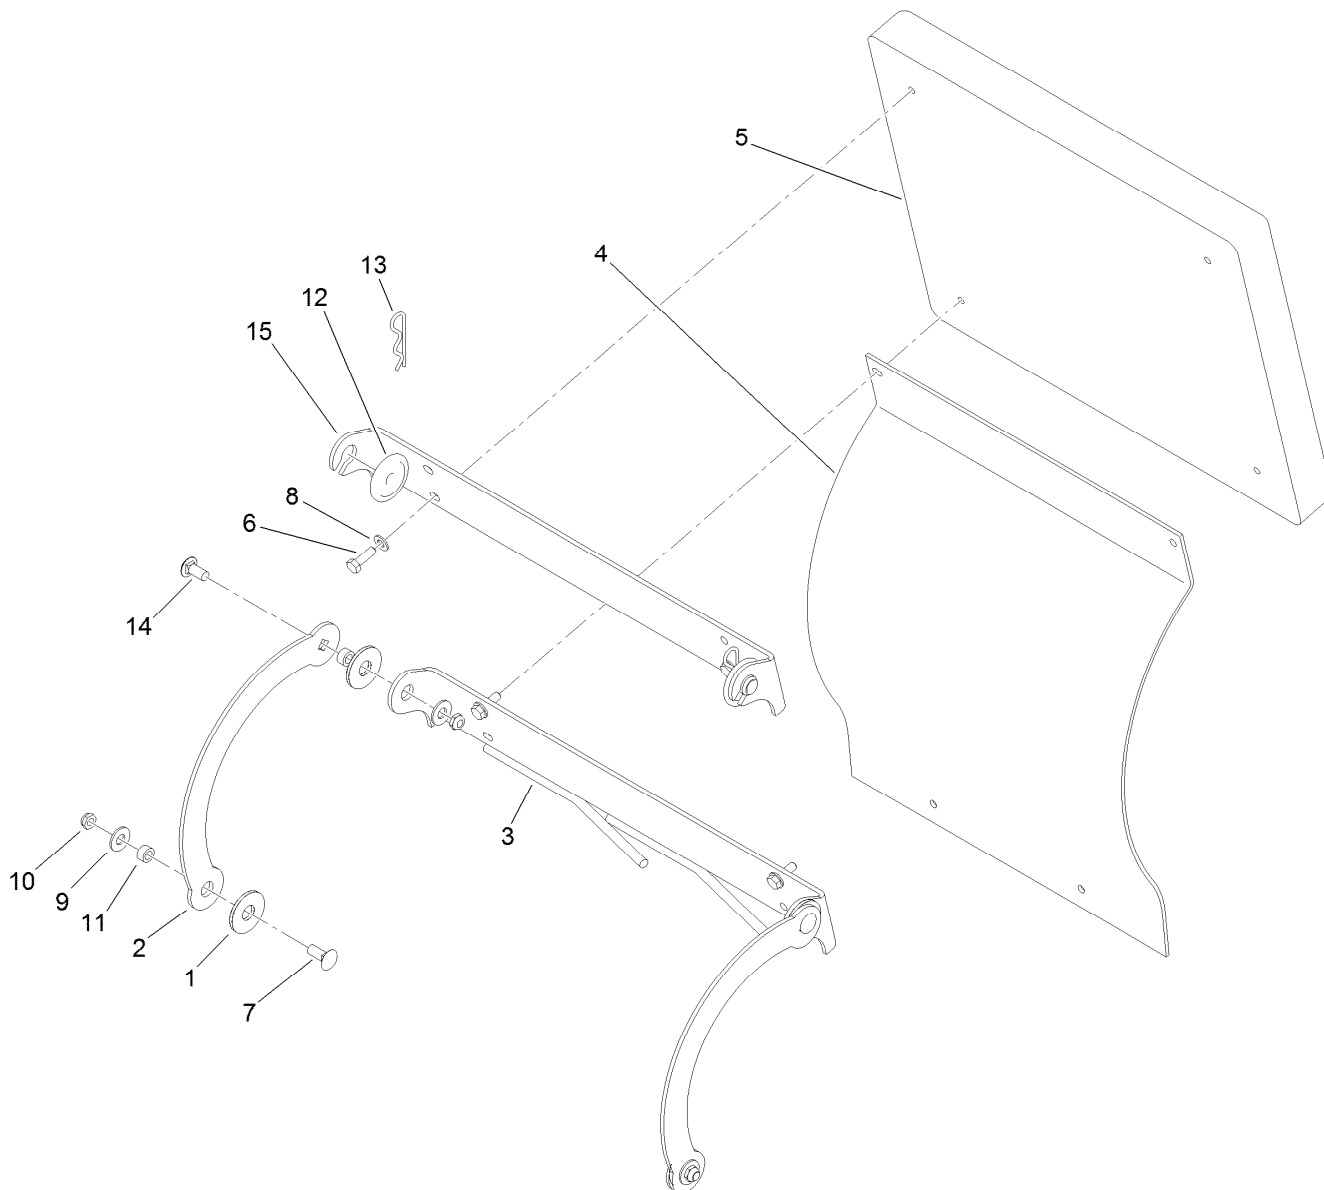


Cushion Assembly No. 119-8742

Ref.	Part Number	Qty.	Description
1	114-0463	4	Washer-Friction, Composite
2	114-1915-01	2	Link-Pad
3	119-7369-03	1	Lower Hinge ASM
4	114-1919	1	Shield-Rear
5	117-9739	1	Pad-Cushion
6	116-0648	4	Screw-HH, Thread Locking
7	3231-2	2	Bolt-CARR
8	3256-23	4	Washer-Flat
9	3256-4	4	Washer-Flat
10	3296-59	4	Nut-Lock, NI
11	111044	4	Spacer
12	116-2886	2	Slide-Bushing
13	3290-355	2	Pin-Hair
14	3231-27	2	Screw-CARR
15	116-2757-03	1	Hinge-Pad

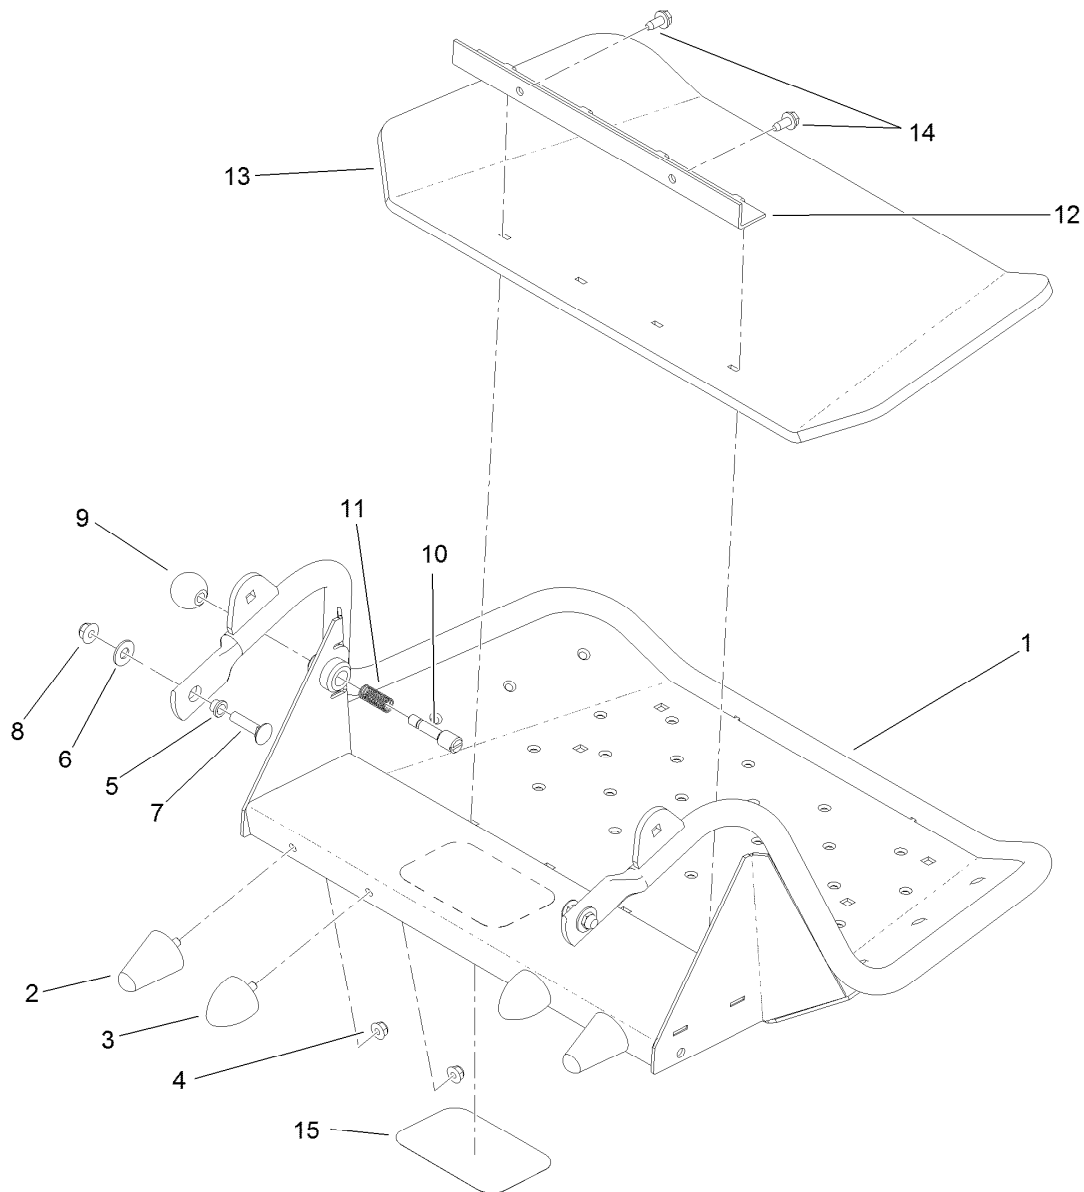

Platform Assembly No. 117-9640

Ref.	Part Number	Qty.	Description
1	117-9641-01	1	Platform ASM
2	114-1925	2	Bumper-Rubber
3	114-1926	2	Bumper-Rubber
4	104-8300	4	Nut-Flange, NI
5	109-8788	2	Bushing-Flanged
6	3256-4	2	Washer-Flat
7	3231-4	2	Screw-CARR
8	104-8301	2	Nut-Flange, NI
9	1-603175	1	Knob-Ball
10	119-8650	1	Pin-Latch
11	114-5348	1	Spring
12	114-1920-03	1	Clamp-Shield
13	114-5349	1	Mat-Foot
14	32144-70	2	Screw-HWHTF
15	68-3640	1	Decal

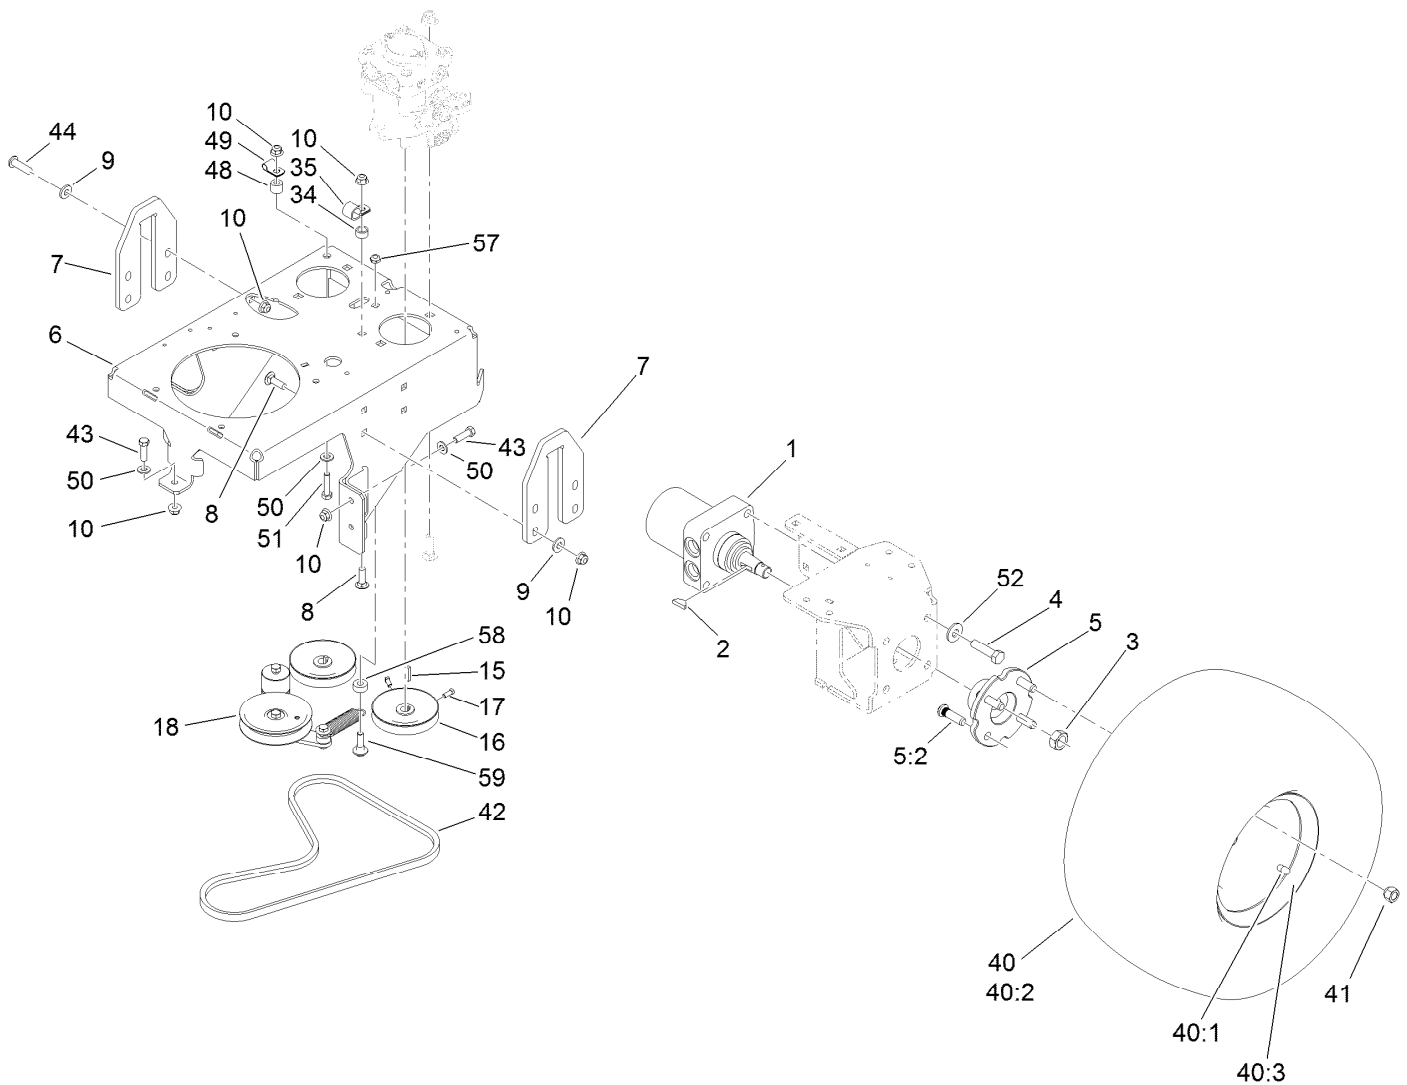


Ground Drive Assembly

Ref.	Part Number	Qty.	Description
1	114-0549	2	HYD Motor ASM
2	3257-8	2	Key-Woodruff
3	85-7310	2	Nut-Motor, Wheel
4	325-8	8	Screw-HH
5	105-0800	2	Wheel Hub ASM
5:2	10-6830	4	Stud-Type, Drive
6	120-6456-01	1	Base-Engine
7	119-8662	2	Plate-Lift
8	3231-25	8	Bolt-CARR
9	98-5975	8	Washer-Belleville
10	104-8301	15	Nut-Flange, NI
15	1-807272	2	Key
16	105-5648	2	Pulley-Pump
17	3241-5	4	Screw-Set
18		1	Pump Idler ASM ●
34	1-653069	1	Spacer-Wheel
35	1-633396	1	Clip-Loom

Ref.	Part Number	Qty.	Description
40	120-6465	2	Wheel/Tire ASM
40:1	116-4605	1	Rim-8 Inch
40:2	120-6466	1	Tire
40:3	232-27	1	Stem-Valve
41	242-50	8	Nut-Lug
42	114567	1	Belt-V, Lower PTO
43	3234-42	5	Screw-HHF
44	3274-63	1	Screw-HSBH
48	121-1760	1	Spacer
49	116-3362	1	Clip-Tube
50	3256-24	1	Washer-Flat
51	323-8	1	Screw-HH
52	1-513435	8	Washer-Spring
57	3296-59	1	Nut-Lock, NI
58	104-8426	1	Spacer
59	614672	1	Bolt-Shoulder


● Not serviced separately

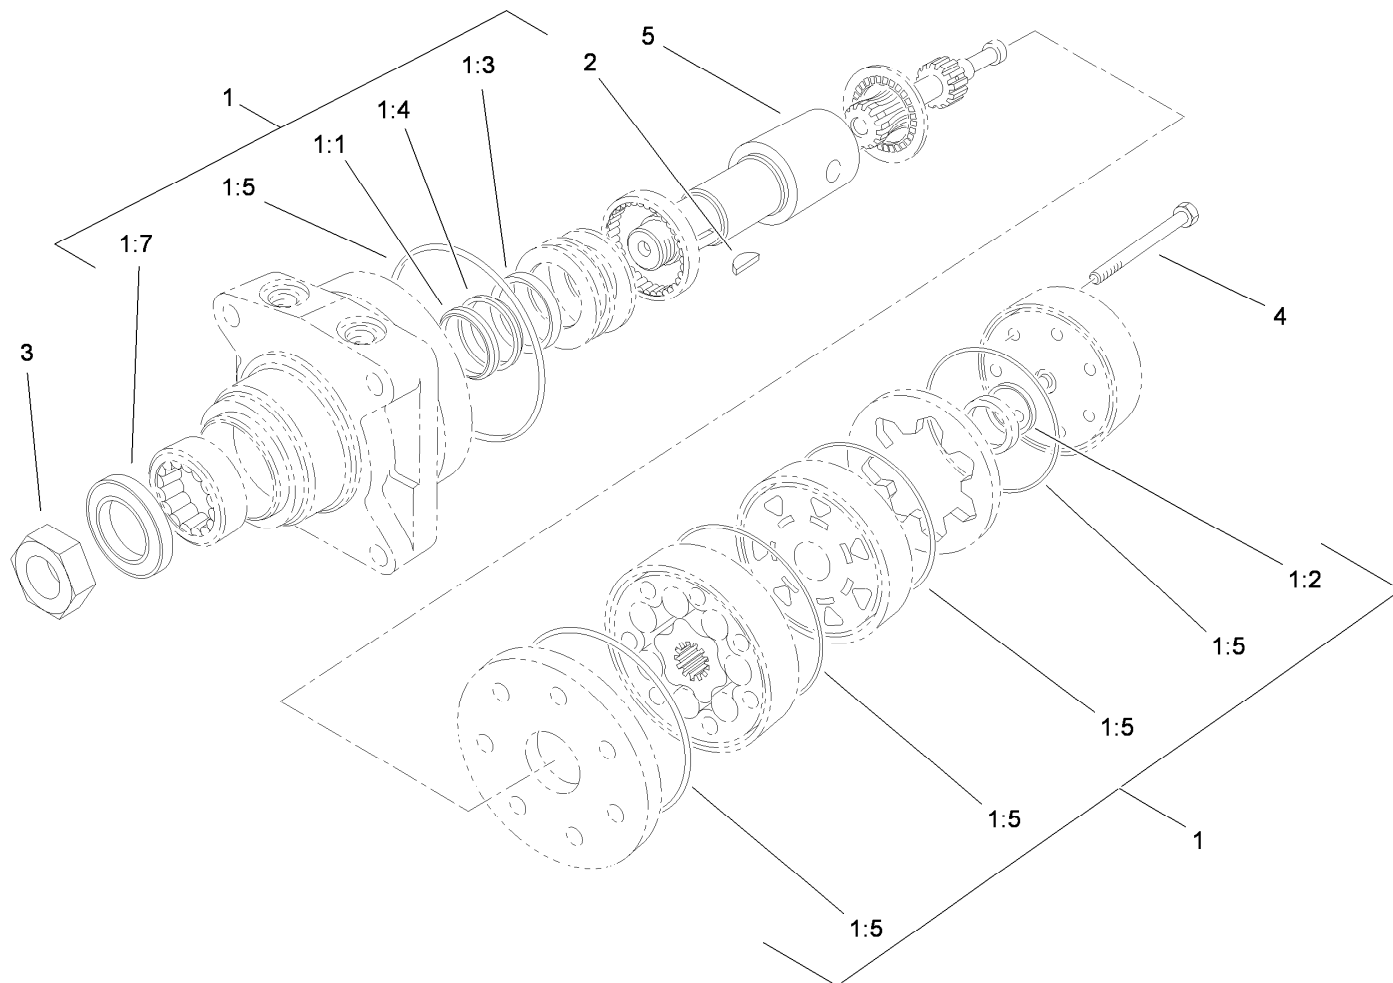

Hydraulic Motor Assembly No. 114-0549


Ref.	Part Number	Qty.	Description
1	1-000119	1	Seal Kit
1:1		1	Ring-Back Up ●
1:2		1	Seal-Commutator ●
1:3		1	Seal-Shaft (Viton) ●
1:4		1	Washer-Back Up, Steel ●
1:5		5	Ring-Seal (Viton) ●
1:7		1	Seal-Dirt And Water ●
2	3257-8	1	Key-Woodruff
3	85-7310	1	Nut-Motor, Wheel
4	106-5549	6	Bolt-Special
5	106-8764	1	Shaft-Coupling

● Not serviced separately

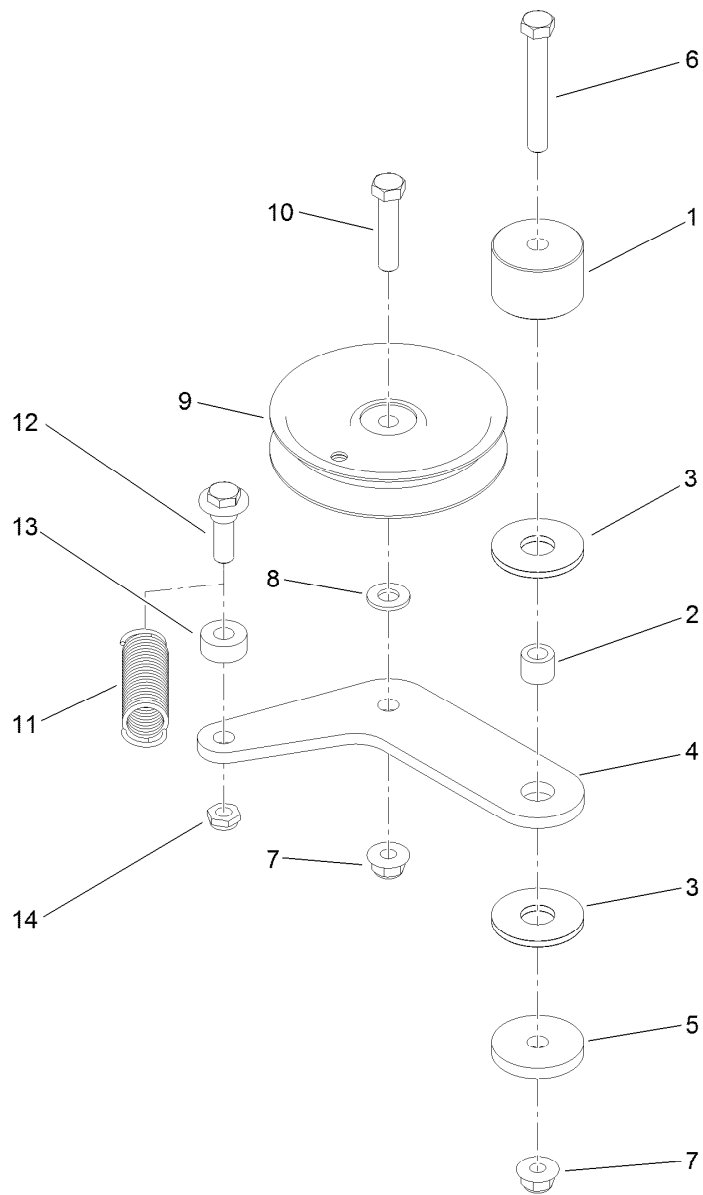

Pump Idler Assembly

Ref.	Part Number	Qty.	Description
1	117-3568	1	Hub-Idler
2	1-413088	1	Bushing-Lever, Lift
3	114-0463	2	Washer-Friction, Composite
4	119-8737	1	Plate-Idler
5	110-9981	1	Washer-Plain
6	323-13	1	Screw-HH
7	104-8301	2	Nut-Flange, NI
8	3256-24	1	Washer-Flat
9	93-1622	1	Pulley-Idler
10	323-9	1	Screw-HH
11	108-4056	1	Spring-Extension
12	614672	1	Bolt-Shoulder
13	104-8426	1	Spacer
14	3296-59	1	Nut-Lock, NI

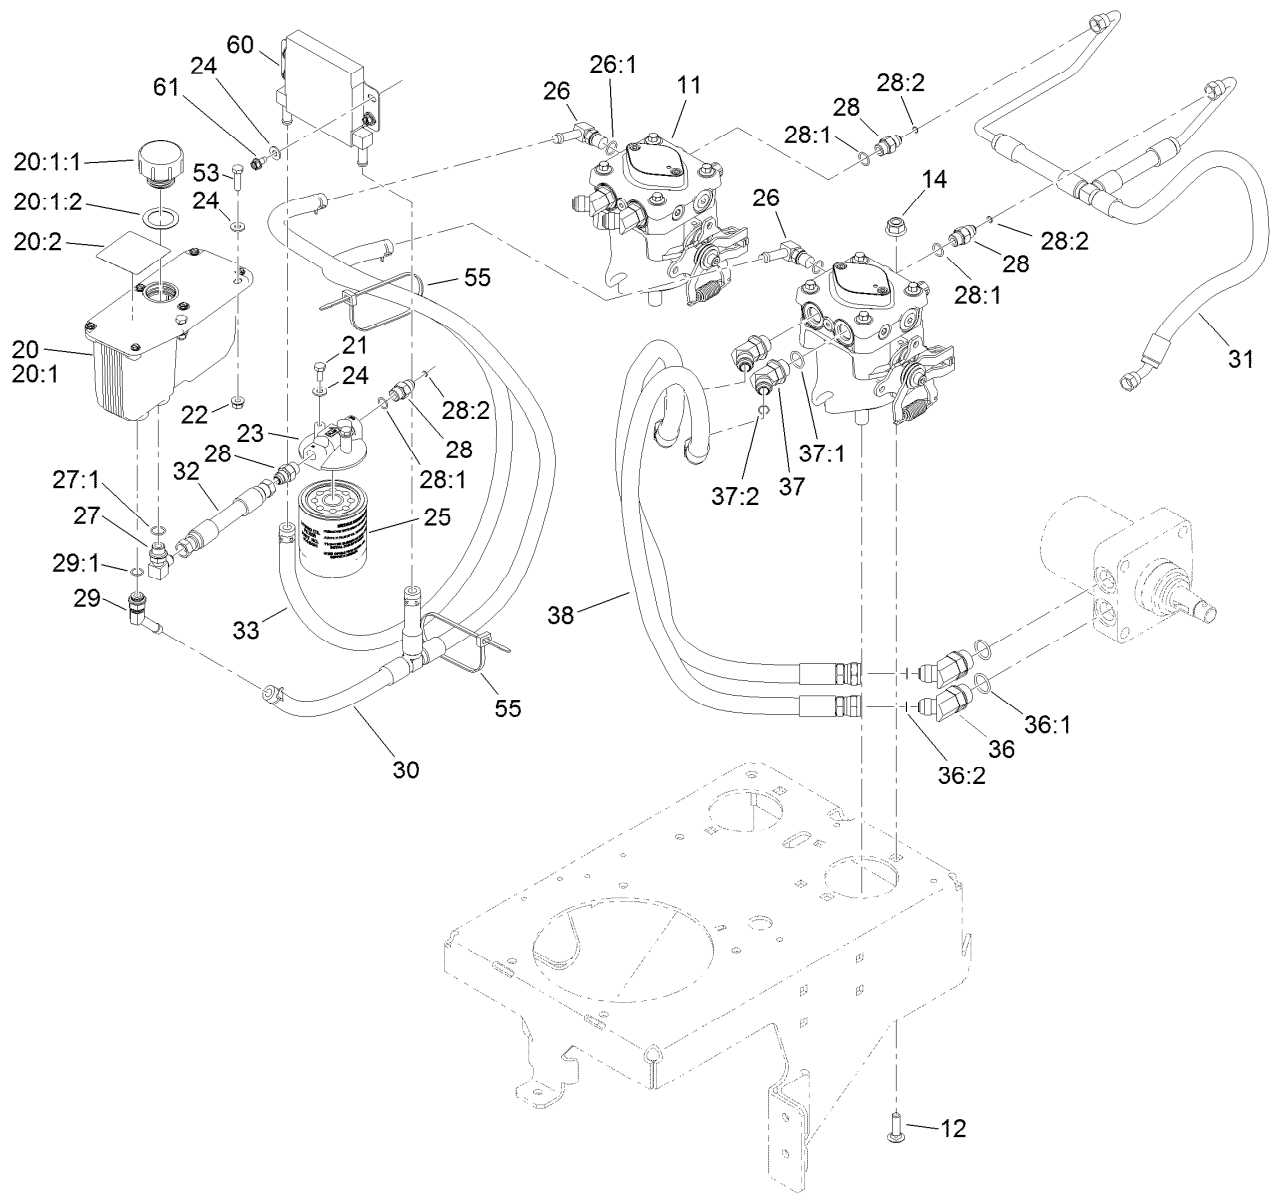


Hydraulic System Assembly

Ref.	Part Number	Qty.	Description
11	119-7375	2	Hydraulic Pump ASM
12	3232-3	4	Bolt-CARR
14	114-8417	4	Nut-HF, NI
20	107-8433	1	HYD Reservoir ASM
20:1		1	Reservoir-HYD ●
20:1:1	103-1948	1	Cap-Reservoir, HYD
20:1:2	103-1949	1	Gasket-Cap
20:2	115-4212	1	Decal-Warning
21	321-3	2	Screw-HH
22	32128-32	2	Nut-HHF
23	104-7836	1	Head-Filter
24	3256-22	8	Washer-Flat
25	114-3494	1	Element-Filter, 25 Micron
26	100-4887	2	Fitting-Barbed, 90 DEG
26:1	237-42	1	O-Ring
27	103-1802	1	Fitting-HYD, 90 DEG
27:1	1-603921	1	O-Ring
28	103-2156	4	Fitting-Straight
28:1	1-603921	1	O-Ring

Ref.	Part Number	Qty.	Description
28:2	103-1020	1	O-Ring
29	103-1807	1	Fitting-Barbed, 45 DEG
29:1	237-42	1	O-Ring
30	121-5981	1	Case Drain Hose ASM
31	121-5968	1	Charge Hose ASM
32	121-5983	1	HYD Hose ASM
33	121-5982	1	Case Drain Hose ASM
36	1-523222	4	Fitting-HYD, 45 DEG
36:1	1-603919	1	O-Ring
36:2	1-603992	1	O-Ring
37	1-523221	4	Fitting-HYD, 45 DEG
38	116-6902	4	HYD Hose ASM
37:1	1-603920	1	O-Ring
37:2	1-603992	1	O-Ring
53	321-6	2	Screw-HH
55	3290-378	2	Tie-Cable
60	116-7205	1	Cooler-Oil
61	32104-17	4	Screw-HWH


● Not serviced separately

99 - Seal Overhaul Kit

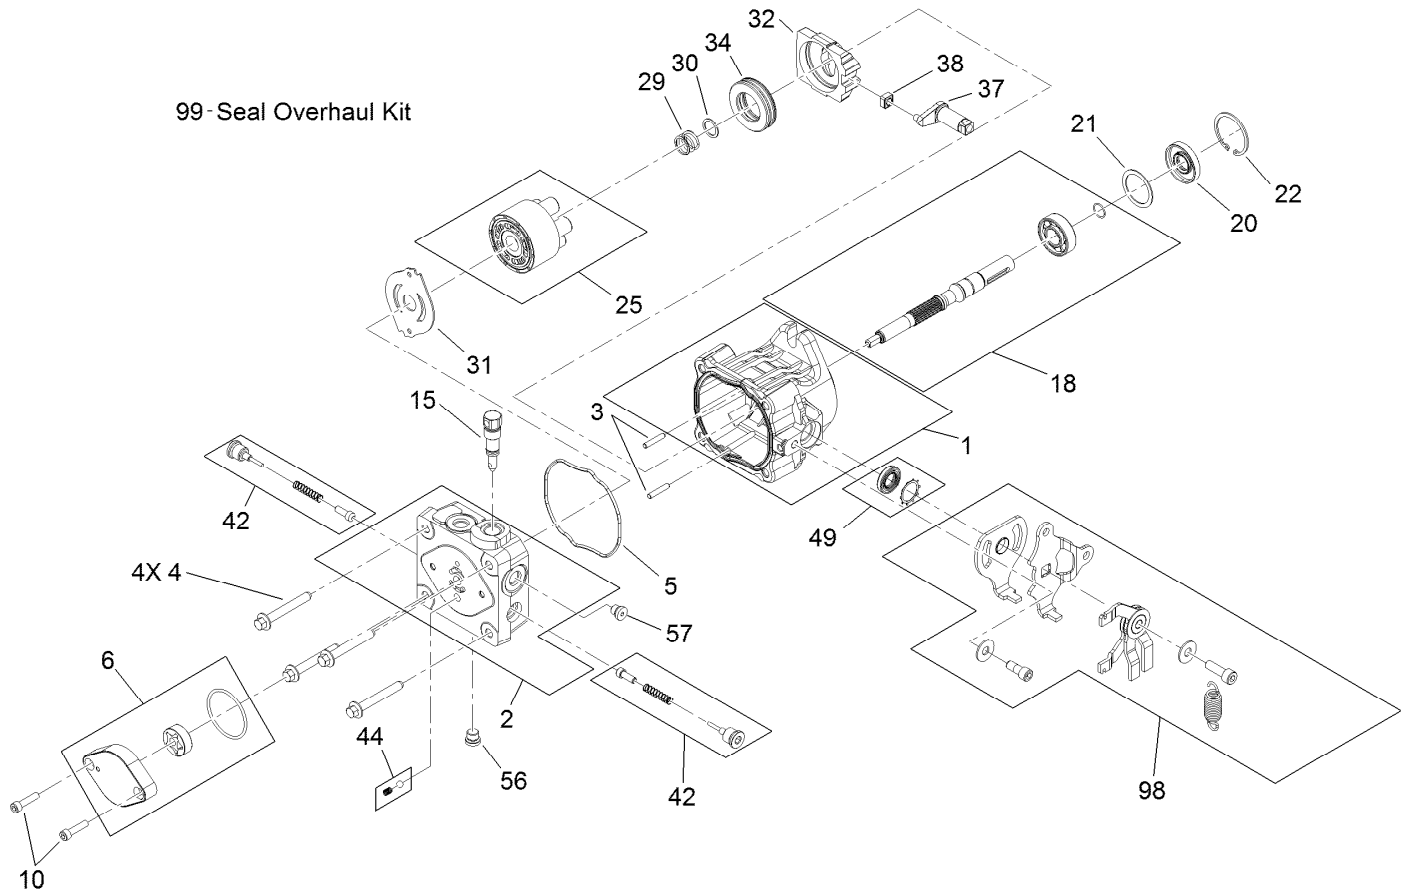

Hydraulic Pump Assembly No. 119-7375


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	115-4464	1	Housing Kit	30	94-1937	1	Washer-Thrust
2	106-8752	1	End Cap Kit (W/Poppets)	31	105-6185	1	Plate-Valve
3	106-8753	2	Pin-Headless, Straight	32	94-1907	1	Swashplate-Variable
4	106-8754	4	Bolt-HF	34	94-6922	1	Bearing-Thrust
5	106-8755	1	O-Ring	37	115-4458	1	Arm-Trunnion, Tapered Square
6	106-8756	1	Charge Pump Kit	38	94-1910	1	Guide-Slot
10	104-2111	2	Capscrew	42	98-3252	2	Valve-Check (W/Poppet)
15	106-8759	1	Bypass Valve Kit	44	106-8760	1	Charge Relief Valve Kit
18	103-2664	1	Input Shaft Kit	49	106-8761	1	Trunnion Seal / Retainer Kit
20	104-5310	1	Seal-Lip	56	106-8762	1	Plug-HSH
21	104-5308	1	Spacer	57	104-2189	1	Plug-Thread, Straight
22	104-5309	1	Ring-Retaining	98	115-4046	1	Return Kit
25	103-2666	1	Cylinder Block Kit	99	105-6184	1	Seal Overhaul Kit
29	94-1936	1	Spring-Block				

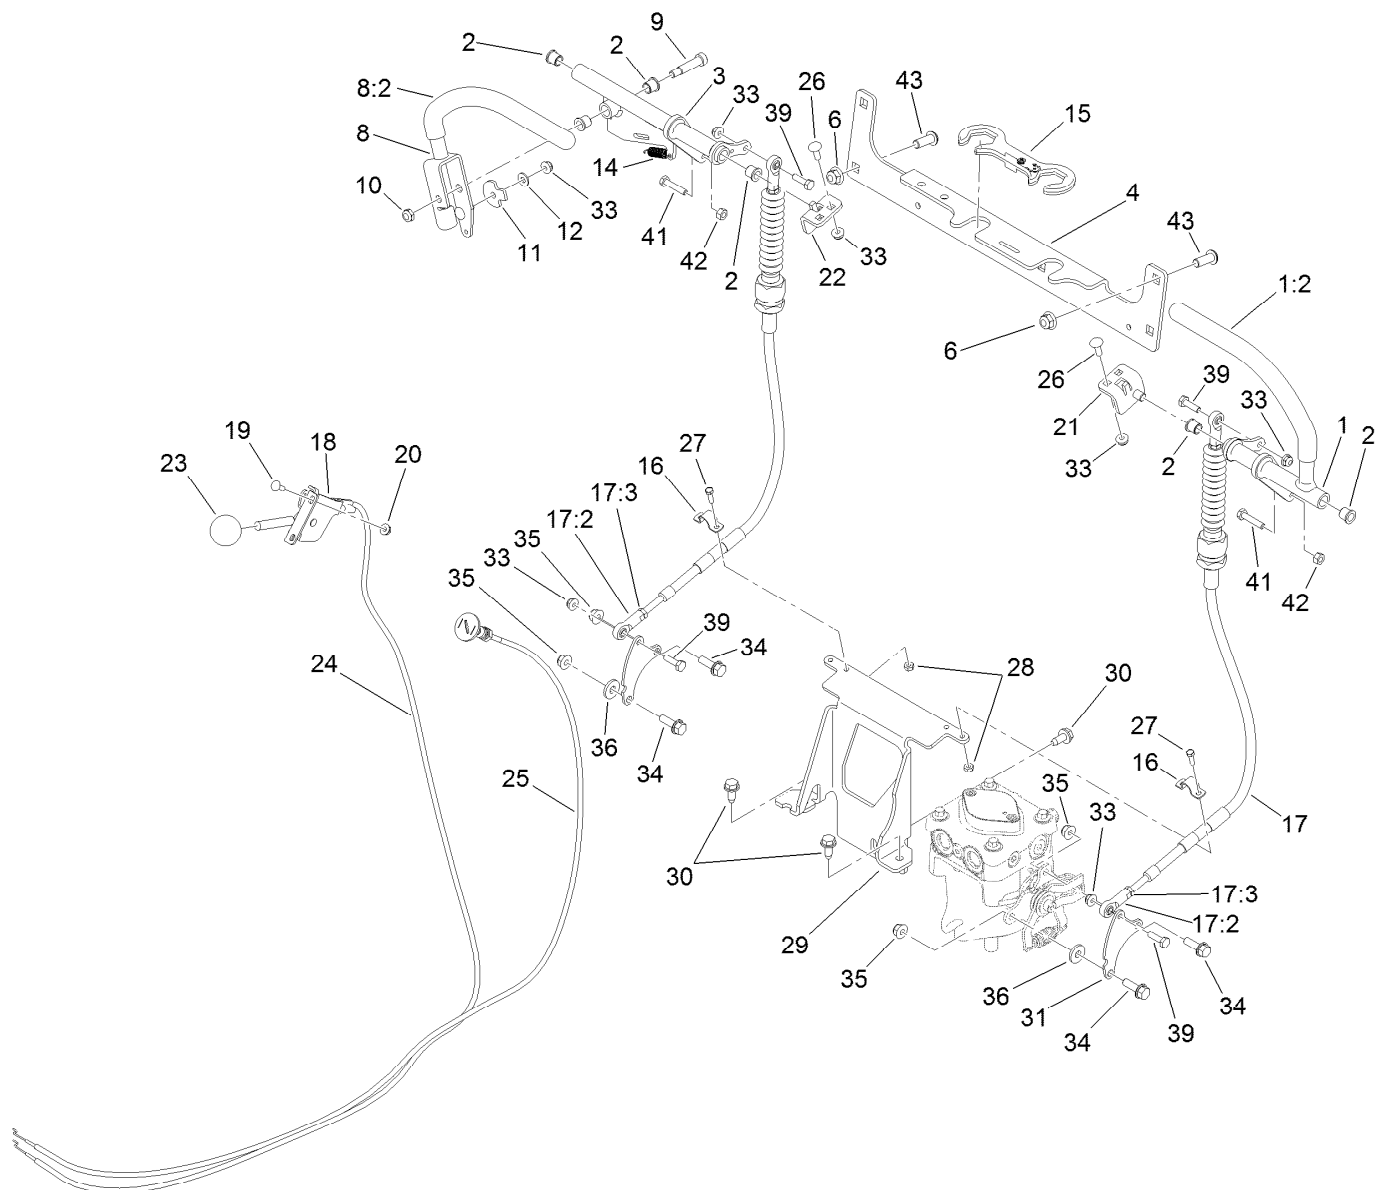

Control Assembly

Ref.	Part Number	Qty.	Description
1	119-8743	1	LH Lever ASM
1:2	119-0222	1	Grip
2	103-9928	6	Bearing
3	119-7353	1	RH Motion Control ASM
4	119-7359-01	1	Bracket-Cross
6	104-8301	4	Nut-Flange, NI
8	119-1887	1	RH Motion Lever ASM
8:2	119-0222	1	Grip
9	114-0239	1	Screw-HSH
10	3296-47	1	Nut-Lock, NI
11	114-0268	1	Cam-Lever
12	3256-22	1	Washer-Flat
14	114-0249	1	Spring-Extension
15	120-8372	1	Lock-Cable
16	119-7370	2	Clamp
17	119-7366	2	Cable ASM
17:2	119-7379	2	Rod-Ball Joint
17:3	3220-1	3	Nut-Jam
18	110-5547	1	Control Lever ASM
19	1-807533	2	Bolt-CARR

Ref.	Part Number	Qty.	Description
20	32128-17	2	Nut-Lock, Flange
21	119-8690	1	LH Pivot Tab ASM
22	119-8718	1	RH Pivot Tab ASM
23	1-603175	1	Knob-Ball
24	119-6654	1	Cable-Throttle
25	119-6655	1	Control-Choke, Push/Pull
26	3229-1	4	Bolt-CARR
27	3290-134	4	Screw
28	3296-2	4	Nut-Lock, NI
29	119-8746-01	1	Bracket-Cable Mount
30	32144-70	3	Screw-HWHTF
31	121-5967	2	Plate-Control, Pump
33	104-7201	8	Nut-HF
34	3234-29	4	Screw-HHF
35	104-8300	4	Nut-Flange, NI
36	4-2390	2	Washer-Flat
39	321-5	4	Screw-HH
41	114-0282	2	Screw-HH
42	3217-5	2	Nut-Hex
43	3274-94	4	Screw-HSBH

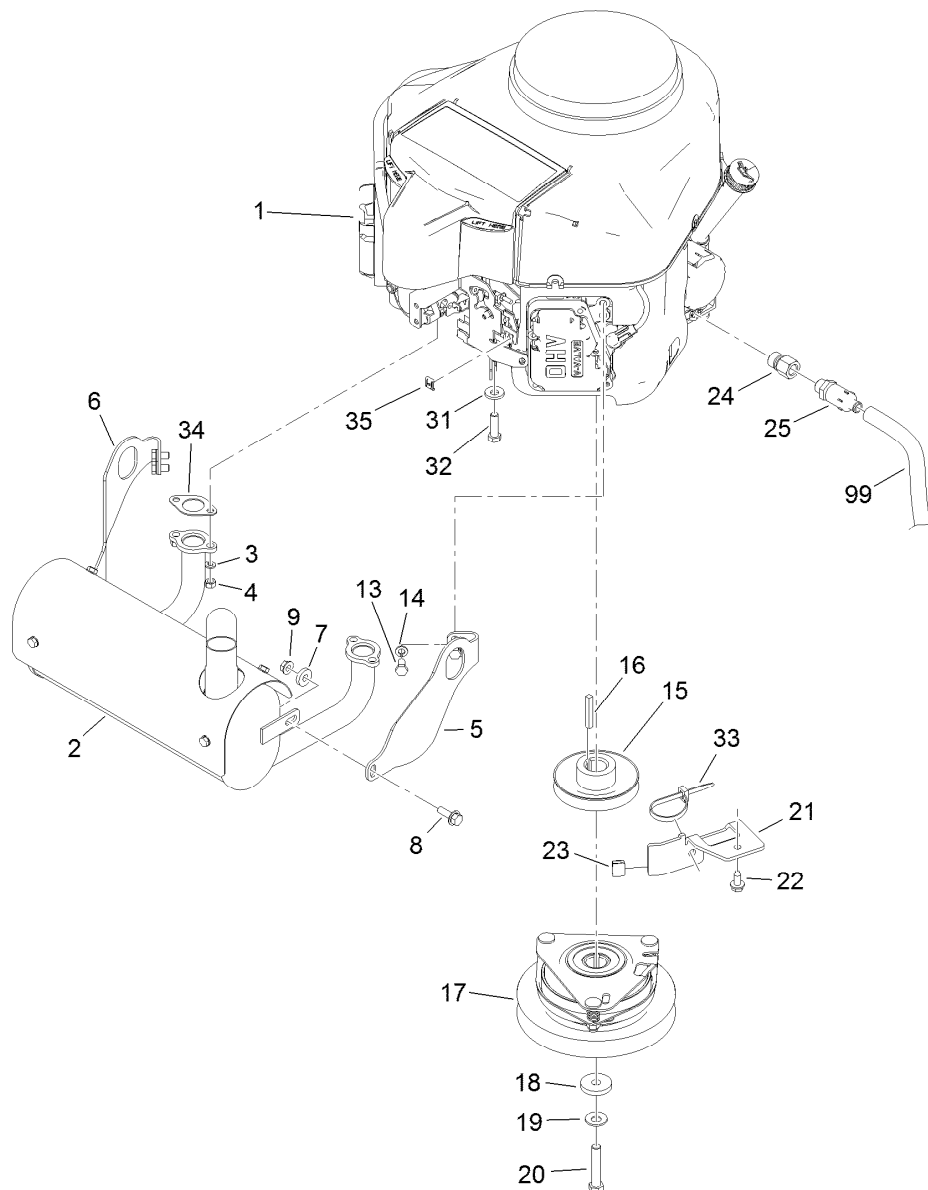


Engine Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fs730V ●■
2	116-2352	1	Muffler
3	114-3550	4	Washer-Lock, Spring
4	114-3549	4	Nut
5	116-2353	1	Bracket-Muffler Mount, LH
6	116-2354	1	Bracket-Muffler Mount, RH
7	104-7658	2	Spacer
8	3234-29	2	Screw-HHF
9	32128-25	2	Nut-HF
13	33114-016	4	Screw-HH
14	3253-4	4	Washer-Lock
15	112-7067	1	Pulley
16	608006	1	Key-Square
17	105-2635	1	Clutch / Brake ASM

Ref.	Part Number	Qty.	Description
18	107-4136	1	Washer
19	1-603610	1	Washer-Spring
20	3212-9	1	Screw-HH
21	121-5984-03	1	Bracket-Clutch Stop
22	32144-70	1	Screw-HWHTF
23	109-3765	1	Bumper
24	103-1966	1	Adapter
25	92-6877	1	Valve-Drain, Oil
31	98-5975	4	Washer-Belleville
32	323-7	4	Screw-HH
33	3290-378	1	Tie-Cable
34	1-653313	2	Gasket-Exhaust
35	81-1690	1	Clamp-Cable
99	103-1964	1	Hose-Drain, Oil

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

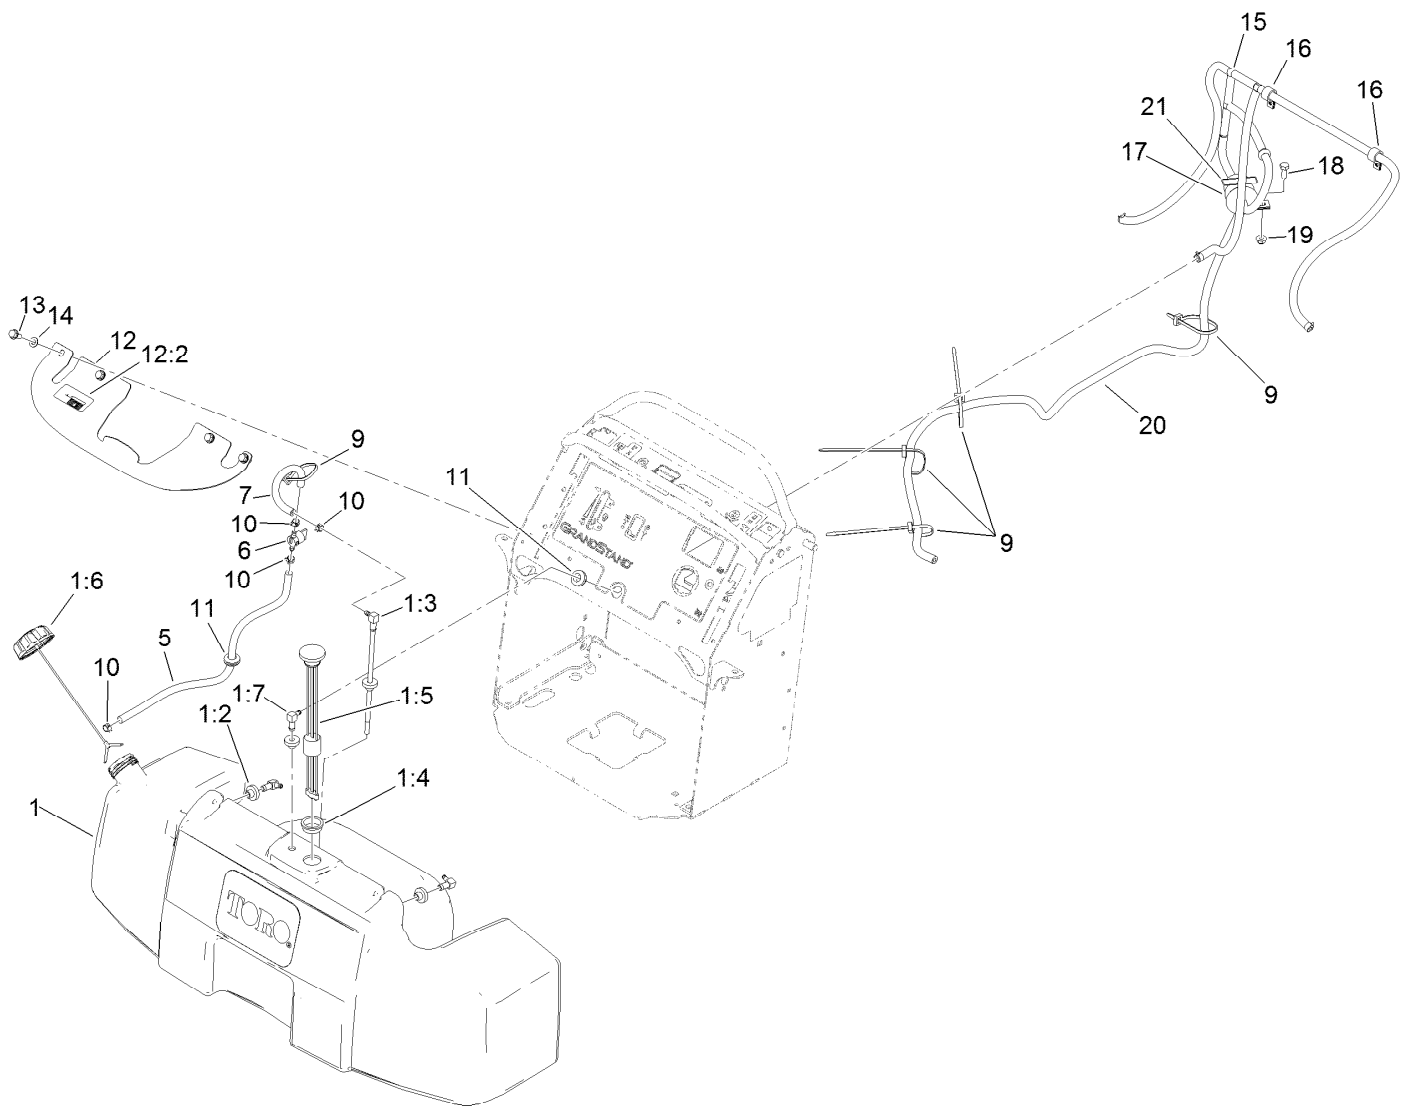


Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
1	119-7346	1	Tank ASM
1:2	46-6560	4	Bushing
1:3	117-9655	1	Fitting-Fuel, Screen Tube
1:4	95-8972	1	Grommet
1:5	117-9719	1	Guage-Fuel
1:6	116-1704	1	Cap-Fuel, Ratcheting
1:7	1-643172	3	Elbow-90 DEG
5	110-5701	1	Hose-Fuel
6	1-603770	1	Valve-Fuel
7	109-0297	1	Hose-Fuel
9	3290-378	5	Tie-Cable
10	2412-98	4	Clamp-Hose


Ref.	Part Number	Qty.	Description
11	112-7069	2	Grommet
12	120-6462	1	Bracket-Tank
12:2	116-3290	1	Decal-Fill, Fuel
13	32144-11	4	Screw-HWHTF
14	3256-70	4	Washer-Flat
15		1	Vent Hose ASM ●
16	2412-87	2	Clamp-Cable
17	2412-96	1	Clamp-R
18	322-3	1	Screw-HH
19	104-8300	1	Nut-Flange, NI
20	119-6073	1	Hose-Fuel
21	116-4769	1	Decal-Filter, Emissions

● Not serviced separately

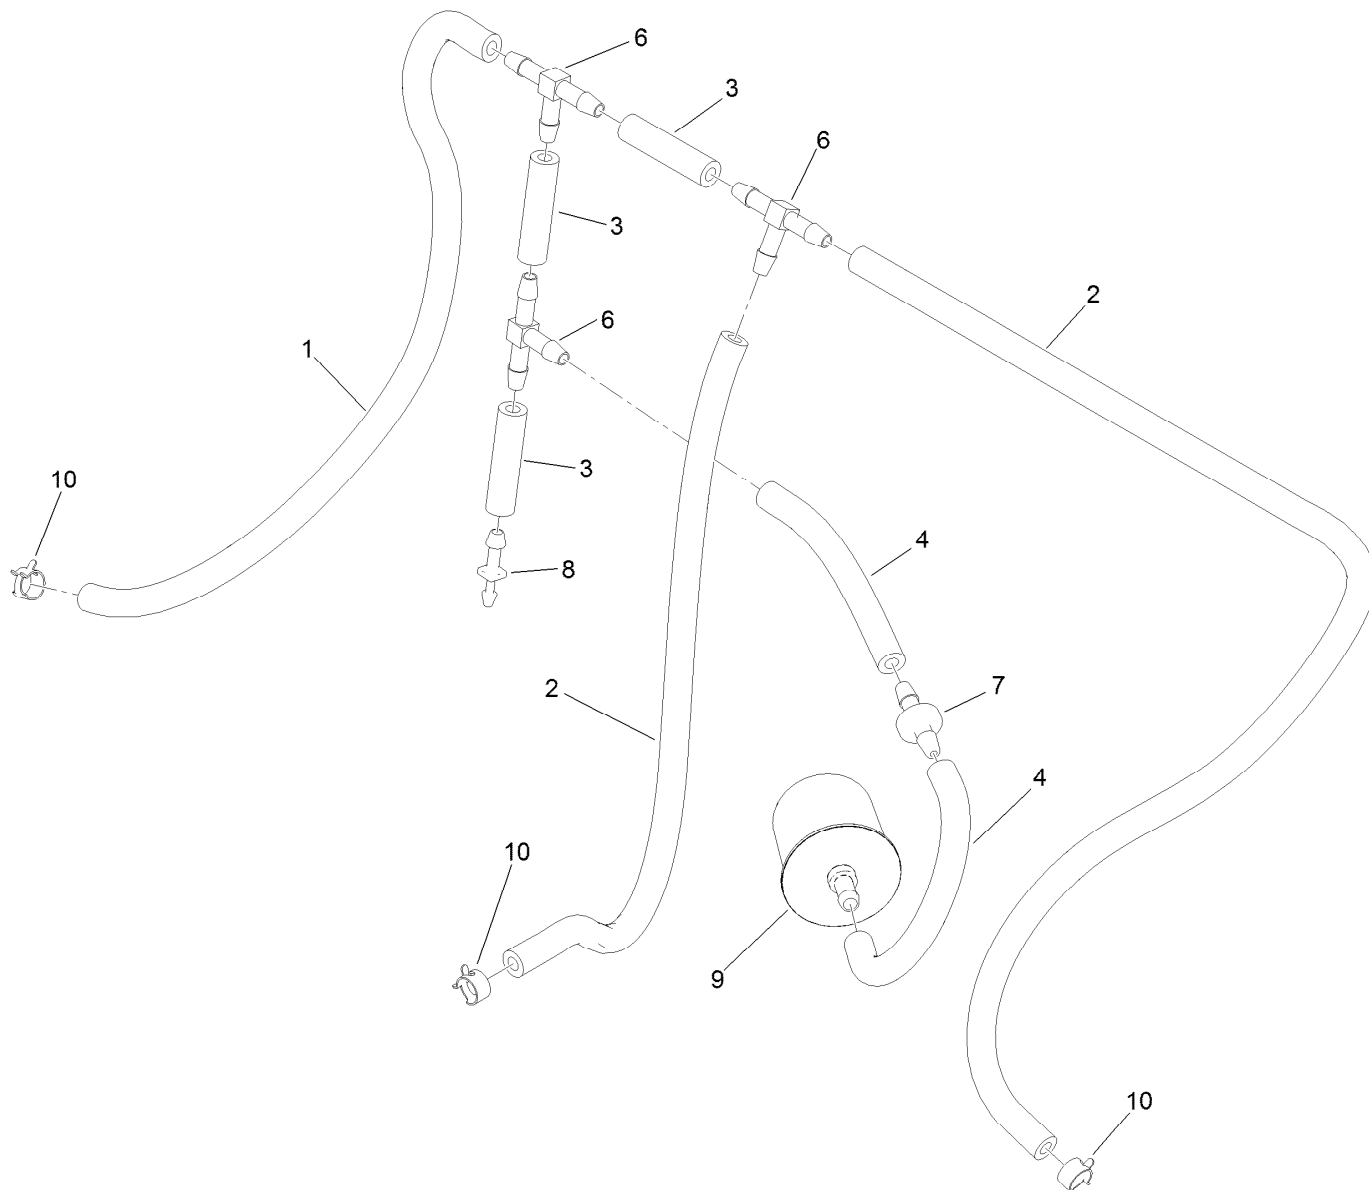

Vent Hose Assembly


Ref.	Part Number	Qty.	Description
1	109-3491	1	Hose-Fuel
2	109-0299	2	Hose-Fuel
3	119-7856	3	Hose-Fuel
4	109-0295	2	Hose-Fuel
6	99-5005	3	Fitting-Tee, Barbed
7	99-5000	1	Valve-Check, Fuel
8	106-8150	1	Fitting-Straight
9	120-2235	1	Filter-Air
10	2412-98	3	Clamp-Hose

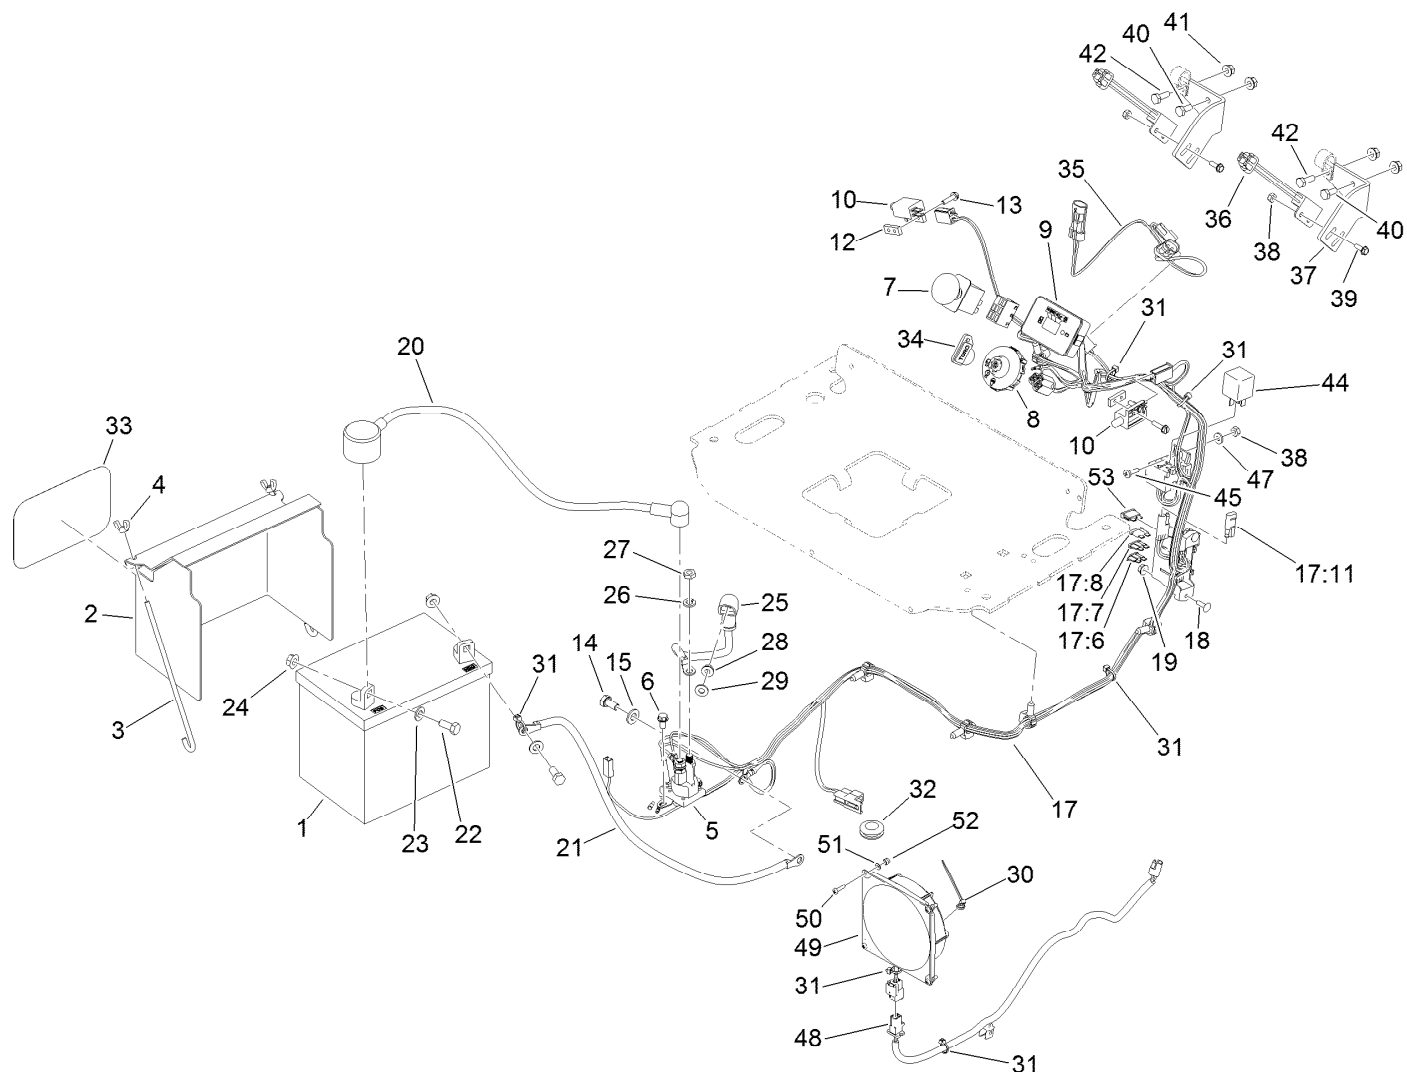

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery
2	117-0543-01	1	Cover-Battery
3	1-633651	2	Bolt-Holddown
4	1-543792	2	Wingnut
5	117-1197	1	Solenoid
6	32144-4	2	Screw-HWH
7	114-0279	1	Switch-PTO
8	117-2222	1	Switch-Ignition
9	117-3886	1	Module-Hour Meter
10	1-513152	2	Switch-Closed, Normally
12	1-633181	2	Plate-Tapped
13	32105-13	4	Screw-HWH
14	33114-016	1	Screw-HH
15	33094-00	1	Washer-Plain
17	121-7510	1	Harness-Wire
17:6	109103	1	Fuse-Blade, 30 Amp
17:7	109102	1	Fuse-Blade, 25 Amp
17:8	218-578	1	Fuse-Blade, 10 Amp
17:11	116-0053	1	Cap-Plug
18	1-807533	2	Bolt-CARR
19	3290-148	2	Nut-HF


Ref.	Part Number	Qty.	Description
20	115-3864	1	Cable-Battery, Positive
21	105-0836	1	Cable-Battery, Black
22	322-3	2	Screw-HH
23	3256-23	2	Washer-Flat
24	109-5715	2	Nut-HHF, Smooth
25	106-8268	1	Cable-Battery, Red
26	3253-4	2	Washer-Lock
27	3220-2	2	Nut-Jam
28	32128-33	1	Nut-HF
29	3256-22	1	Washer-Flat
30	3290-381	1	Tie-Cable
31	1-303287	6	Tie-Cable
32	117-2781	1	Grommet
33	68-3640	1	Decal
34	63-8360	1	Key-Ignition (W/Shield)
35	119-8729	1	Harness-Wire, Neutral
36	105-0023	2	Switch-Proximity
37	119-8503-01	2	Bracket-Mount, Switch
38	3296-2	5	Nut-Lock, NI
39	32105-23	4	Screw

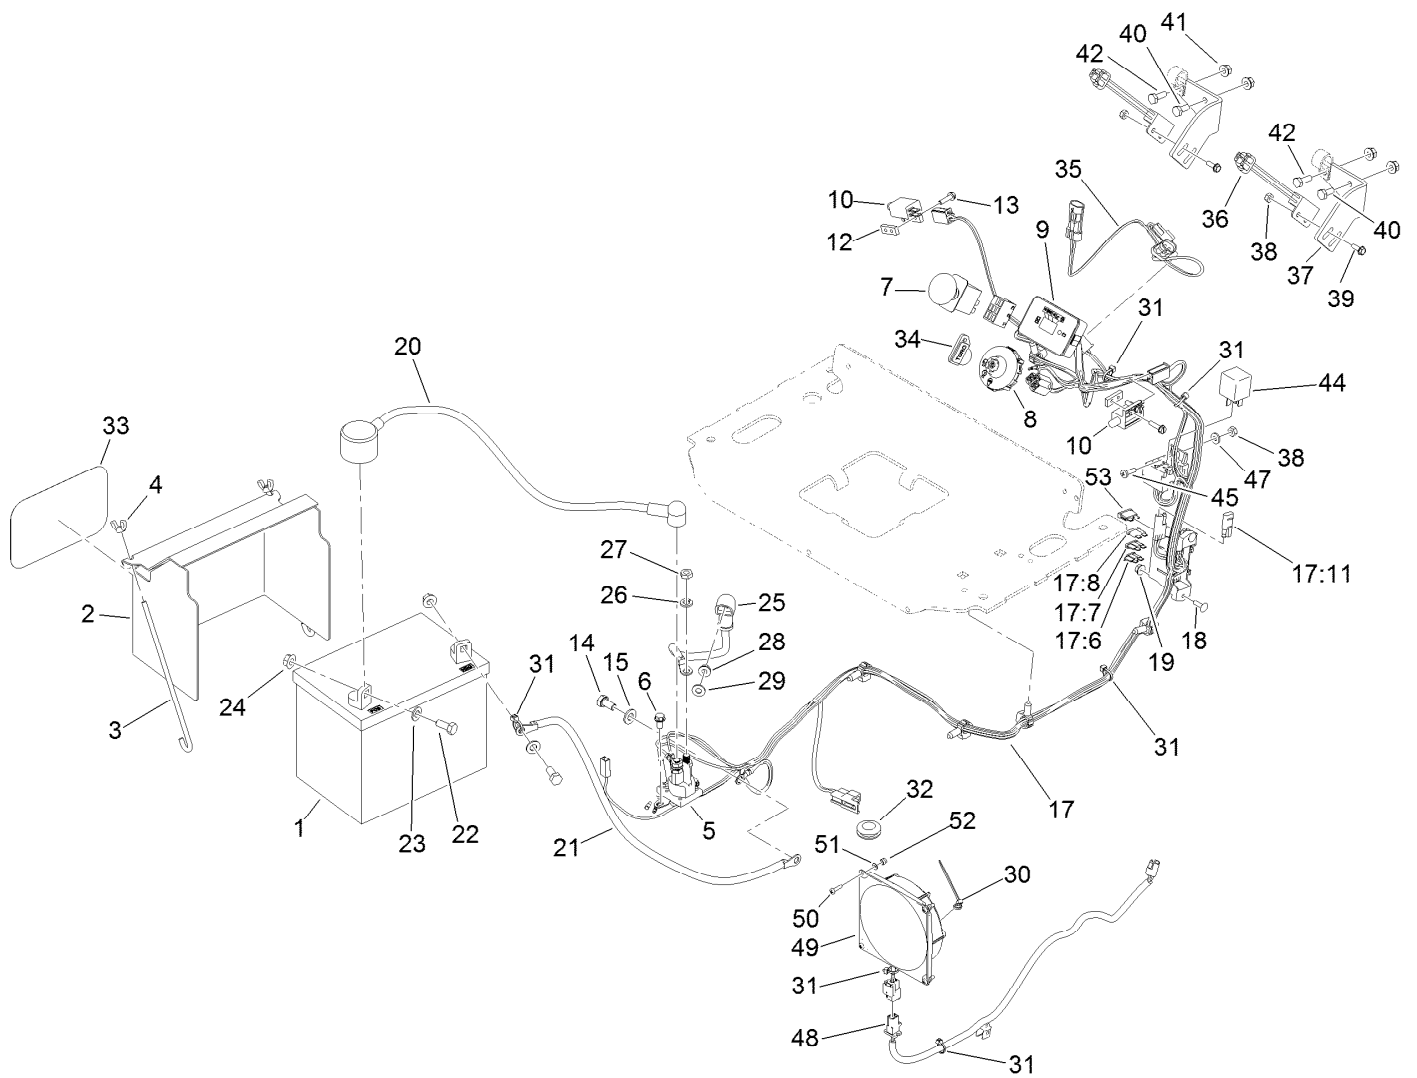

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
40	321-3	2	Screw-HH
41	32128-32	4	Nut-HHF
42	321-4	2	Screw-HH
44	1-643275	1	Relay
45	3290-500	1	Screw-PPH
47	3256-14	1	Washer-Flat


Ref.	Part Number	Qty.	Description
48	120-8389	1	Harness-Wire, Fan
49	116-7047	1	Fan-Electric
50	46-0670	4	Screw-PPH
51	48-7990	4	Washer-Flat
52	46-0430	4	Nut-Lock
53	109355	1	Fuse-Blade, 15 Amp

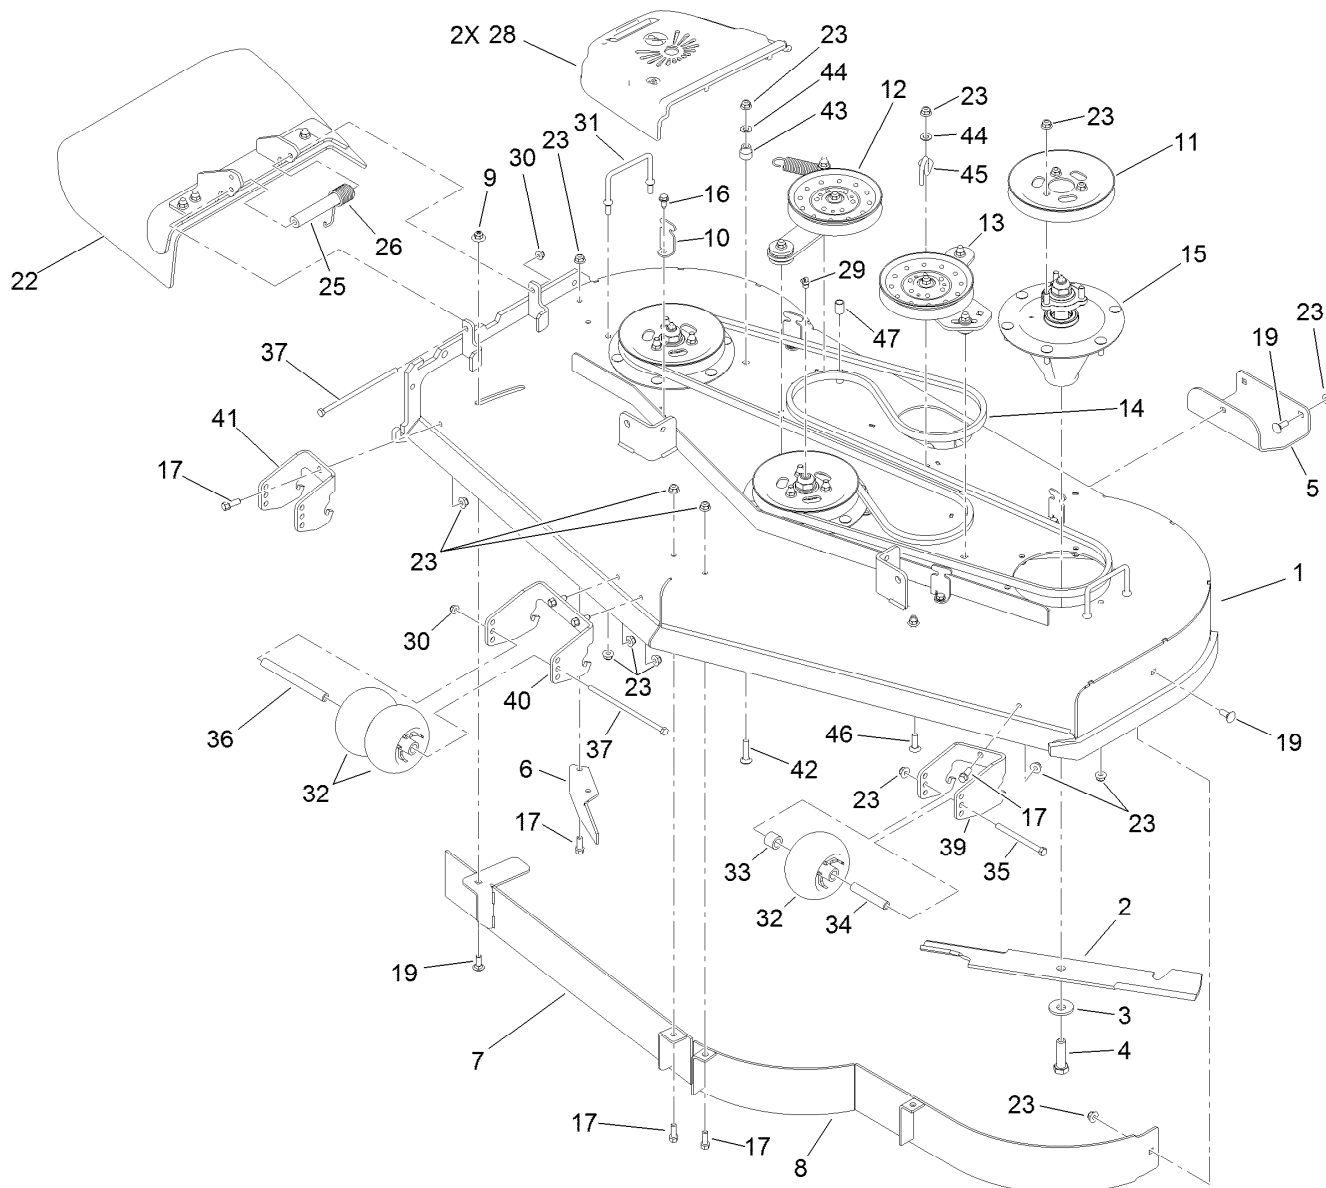

Deck Assembly

Ref.	Part Number	Qty.	Description
1	120-6414	1	Deck ASM
2	105-7718-03	3	Blade-Hi Flow
3	103-0865	3	Washer-Blade Bolt, Heavy
4	51-4060	3	Screw-Blade
5	114-1908-01	1	Skid
6	106-3216-01	1	Baffle-Discharge
7	121-1788-01	1	Baffle ASM
8	117-9701-01	1	Baffle ASM
9	109-6658	1	Nut-Flange, NI
10	117-5758-03	4	Bracket-Cover
11	120-6434	3	Pulley
12	121-5970	1	RH Idler Arm ASM
13	121-5965	1	LH Idler Arm ASM
14	106-7369	1	Belt-V
15	119-8560	3	Spindle ASM
16	32144-70	4	Screw-HWHTF
17	92-1624	9	Screw-HWH
19	3231-2	5	Bolt-CARR
22	121-5960	1	Deflector ASM
23	104-8301	48	Nut-Flange, NI
25	105-4622	1	Spacer


Ref.	Part Number	Qty.	Description
26	108-4052	1	Spring-Torsion
28	120-6423	2	Cover-Belt
29	302-33	1	Fitting-Grease
30	104-8300	2	Nut-Flange, NI
31	109-6982	2	Wireform-Cover
32	1-603299	4	Roller-Scalp, Anti
33	98-7913	2	Tube-Spacer
34	98-7912	2	Tube-Spanner
35	323-23	2	Screw-HH
36	98-5967	1	Spacer-Wheel
37	322-50	2	Screw-HH
39	114-5204-01	1	Bracket-Wheel, LH
40	114-5208-01	1	Bracket-Wheel, Center
41	114-5213-01	1	Bracket-Wheel, RH
42	3231-5	1	Screw-CARR
43	1-603496	1	Bushing-Idler
44	3256-24	2	Washer-Flat
45	110-6975	1	Guide-Belt
46	3231-28	1	Screw-CARR
47	121-7521	1	Bumper-Idler

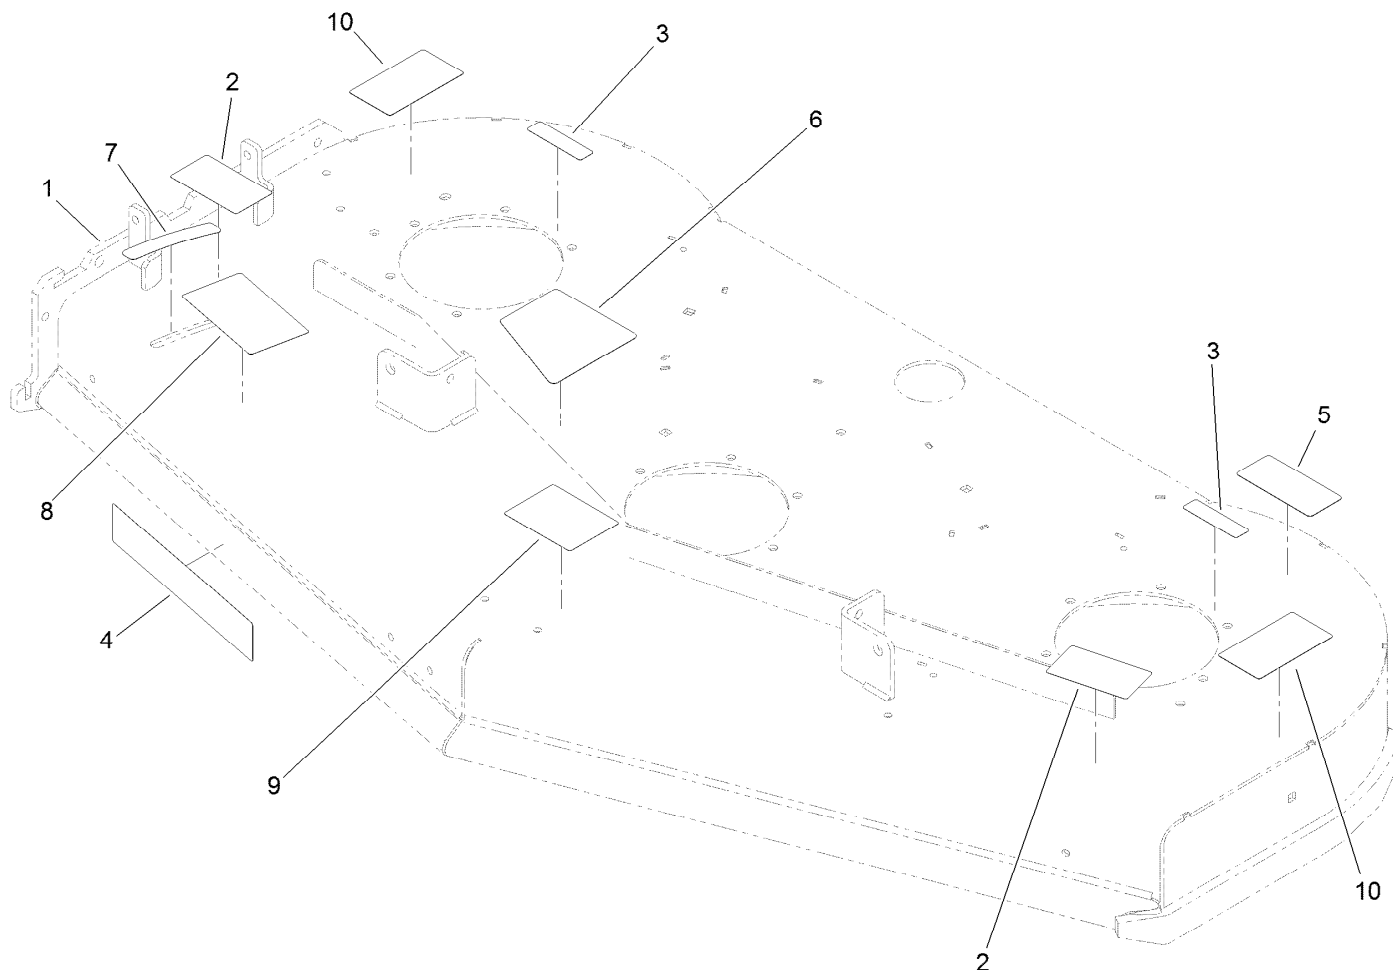

Deck Decal Assembly No. 120-6414


Ref.	Part Number	Qty.	Description
1		1	Deck ASM ●
2	93-7010	2	Decal-Danger
3	119-0217	2	Decal-Danger
4	107-1619	1	Decal
5	93-7818	1	Decal-Torque, Blade Bolt
6	120-6412	1	Decal-Belt Tension, Ce
7	110-2067	1	Decal-Setting, Baffle
8	110-2068	1	Decal-Adjustment, Baffle
9	112-3858	1	Decal-Anti Scalp
10	120-6424	2	Decal-Danger, Rotating Parts

● Not serviced separately

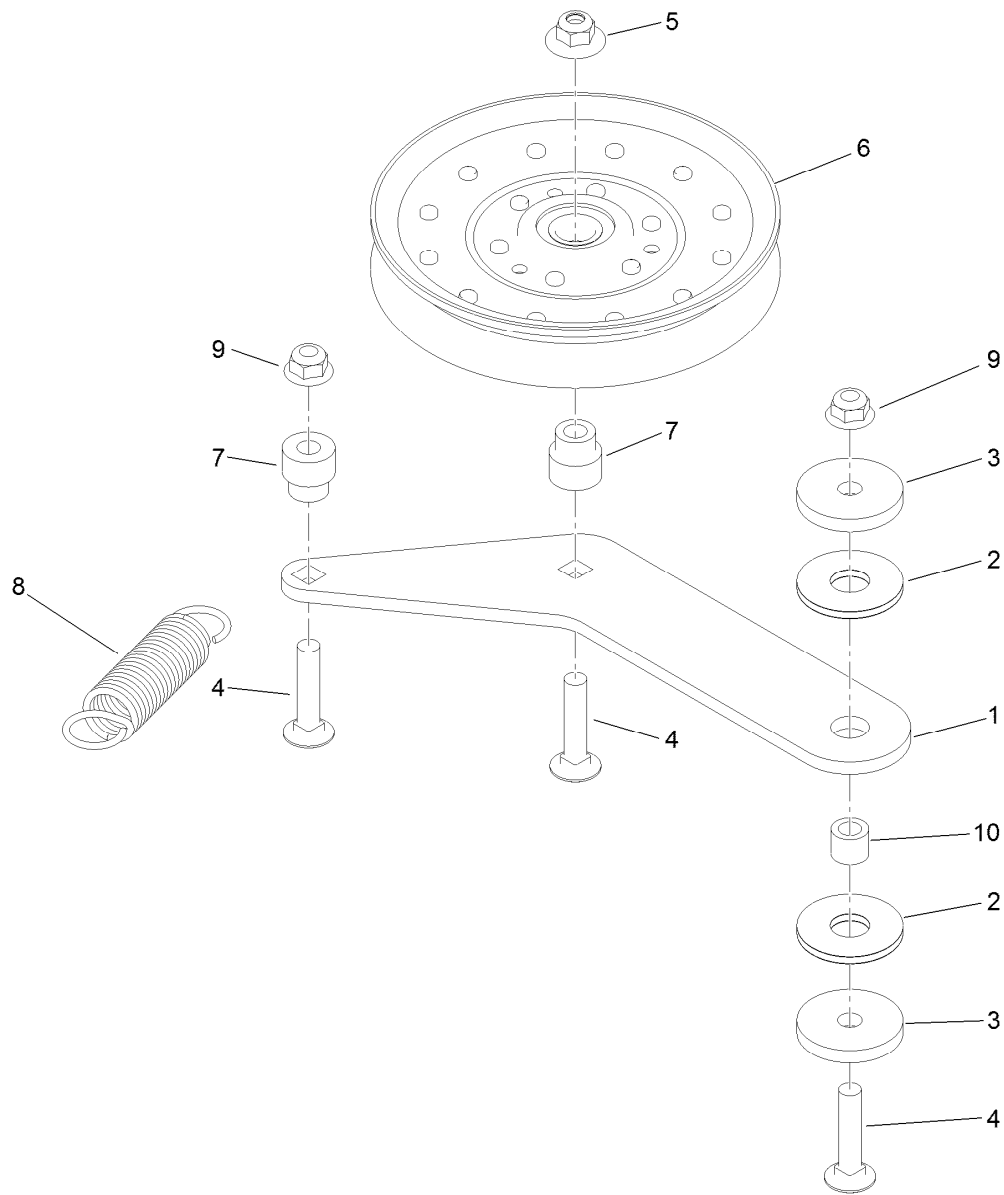


Right Hand Idler Assembly No. 121-5970

Ref.	Part Number	Qty.	Description
1	121-5971	1	Arm-Idler, RH
2	114-0463	2	Washer-Friction, Composite
3	110-9981	2	Washer-Plain
4	3231-5	3	Screw-CARR
5	109-6658	1	Nut-Flange, NI
6	116-4667	1	Idler-Pulley, Flat
7	1-603496	2	Bushing-Idler
8	1-603402	1	Spring-Extension
9	104-8301	2	Nut-Flange, NI
10	1-413088	1	Bushing-Lever, Lift

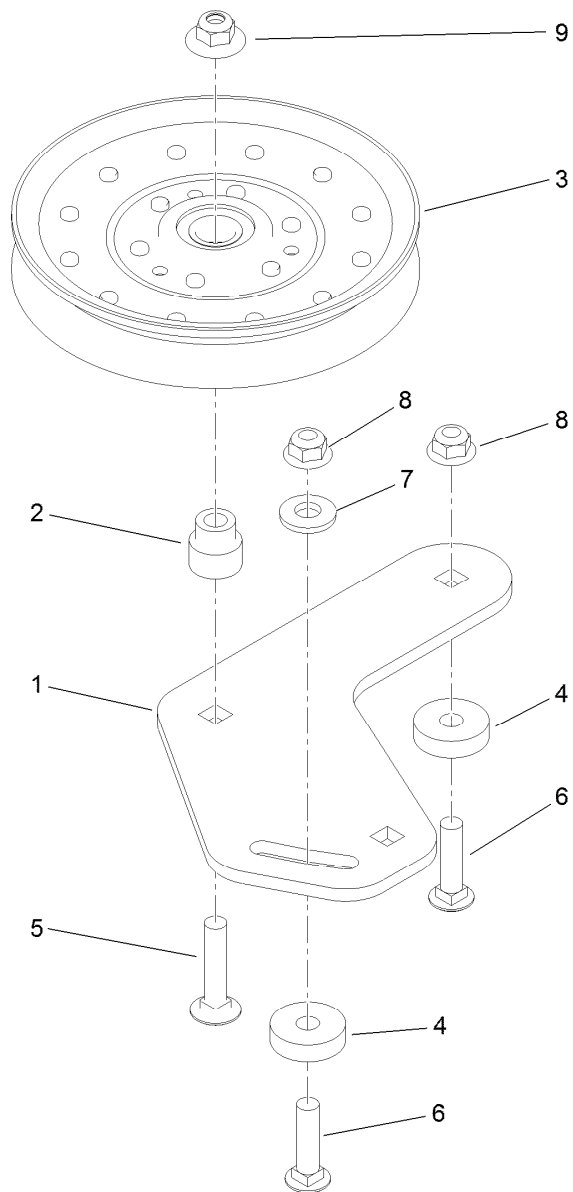

Left Hand Idler Assembly No. 121-5965


Ref.	Part Number	Qty.	Description
1	121-5966-03	1	Arm-Idler, LH
2	1-603496	1	Bushing-Idler
3	116-4667	1	Idler-Pulley, Flat
4	105-7788	2	Spacer
5	3231-5	1	Screw-CARR
6	3231-4	2	Screw-CARR
7	98-5975	1	Washer-Belleville
8	104-8301	2	Nut-Flange, NI
9	109-6658	1	Nut-Flange, NI

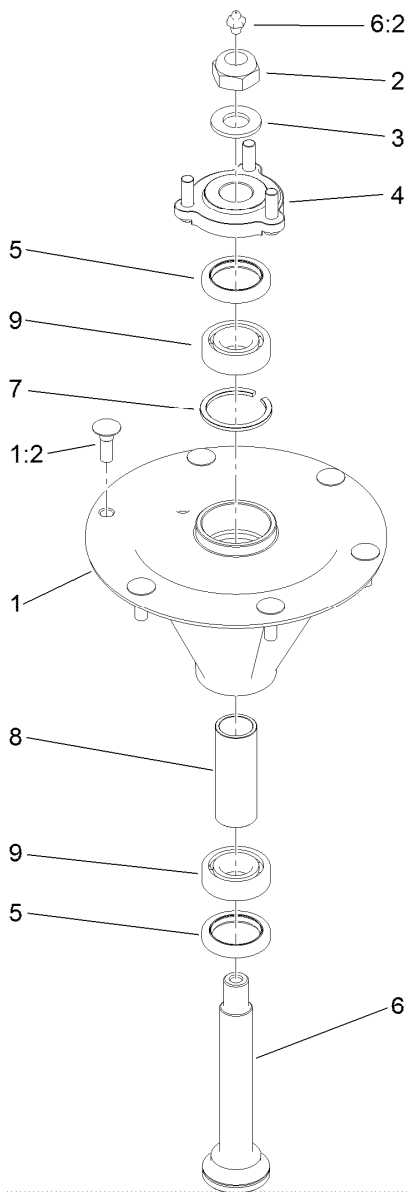

Spindle Assembly No. 119-8560

Ref.	Part Number	Qty.	Description
1		1	Spindle Housing And Studs ASM ●
1:2	114-8195	6	Bolt-Ribbed Neck
2	3296-67	1	Nut-Lock, NI
3	92-5836	1	Washer
4	117-6172	1	Spindle Hub ASM
5	253-133	2	Seal-Oil
6	119-8527	1	Spindle Shaft And Zerk ASM
6:2	302-2	1	Fitting-Grease
7	119-8532	1	Snap Ring
8	117-6184	1	Spacer
9	119-8558	2	Bearing-Noseal

● Not serviced separately

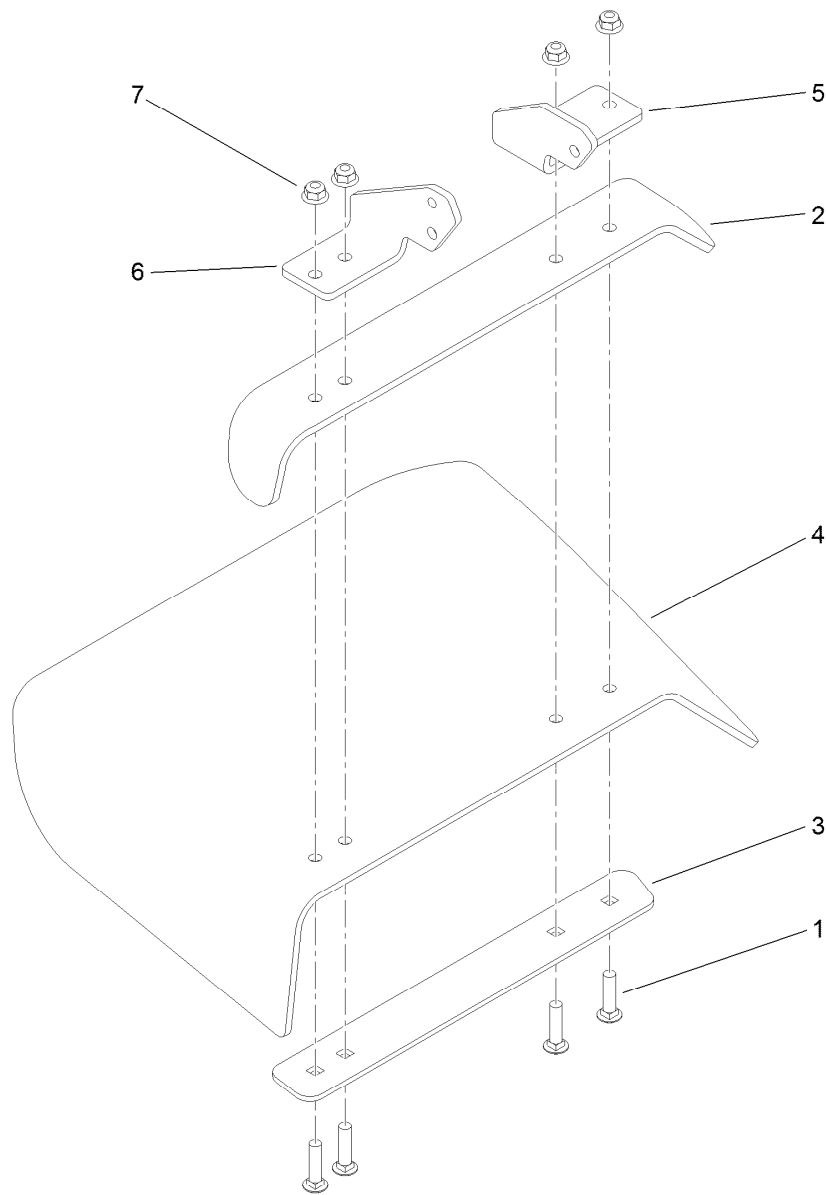

Deflector Assembly No. 121-5960

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-Flange, NI

Attachments and Accessories

For 74553 GrandStand Mower With 60in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Mid Flow, 20.5in	105-7715-03
Blade-Lo Flow, 20.5in	105-7716-03
Blade-Hi Flow, 20.5in.....	105-7718-03
Blade-Recycler, 20.5in.....	105-7777-03
Blade-Atomic, 20.5in	105-8777-03
Turbo Baffle Kit	107-1634
6 Pack Blade, 20.5in Hi-Flow	108-1114
6 Pack-Blade, 20.5in Atomic.....	108-1115
6 Pack Blade, 20.5in Mid-Flow	108-1123
6 Pack-Blade, 20.5in Lo Flow	108-1128
6 Pack-Blade, 20.5in Recycler.....	110-0405
Weight-Cast.....	112-7059-01
Light Kit.....	114-3505
Striping Kit	114-3521
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon).....	114-4714
Hypr-Oil 500-5 (5 gallon).....	114-4715
Recycler Kit	115-7468
Weight Kit	117-3620
Chute Gate Kit With Bag	119-7292
Trash Bag ASM	119-7293
Speed Control Kit.....	119-7390
Soft Bag (3 Bushel).....	30104
Spark Arrestor	98-9099

Notes:



Count on it.