



HAYTER

MAKERS OF THE FINEST MOWERS

Parts Catalogue

RT380H Recycling Mower

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Frame and Body Assembly	4
Hood and Tower Assembly	5
Rear Body and Seat Assembly	6
Steering Assembly	7
Fixed Steering Assembly	8
Engine Assembly	9
Traction Clutching Assembly	10
Rear Wheel and Tire Assembly	11
Hydro Transaxle Assembly	12
Side Housing and Bearing Assembly Transaxle No. 104-1760	13
Gear Assembly Transaxle No. 104-1760	14
Main Housing and Bearing Assembly Transaxle No. 104-1760	15
Hydro Transaxle Control Assembly	16
38 Inch Deck Assembly	17
38 Inch Deck Blade Drive Assembly	18
38 Inch Deck Engagement Assembly	19
Height-of-Cut Assembly	20
Electrical Assembly	21
Cylinder Assembly Briggs and Stratton Model 31E777-0130-E1	22
Cylinder Head Assembly Briggs and Stratton Model 31E777-0130-E1	23
Crankshaft Assembly Briggs and Stratton Model 31E777-0130-E1	24
Crankcase Assembly Briggs and Stratton Model 31E777-0130-E1	25
Carburetor Assembly (Nikki) Briggs and Stratton Model 31E777-0130-E1	26
Governor Assembly Briggs and Stratton Model 31E777-0130-E1	27
Blower Housing Assembly Briggs and Stratton Model 31E777-0130-E1	28
Starter Assembly Briggs and Stratton Model 31E777-0130-E1	29
Gasket Set Briggs and Stratton Model 31E777-0130-E1	30
Carburetor Overhaul Kit (Nikki) Briggs and Stratton Model 31E777-0130-E1	31

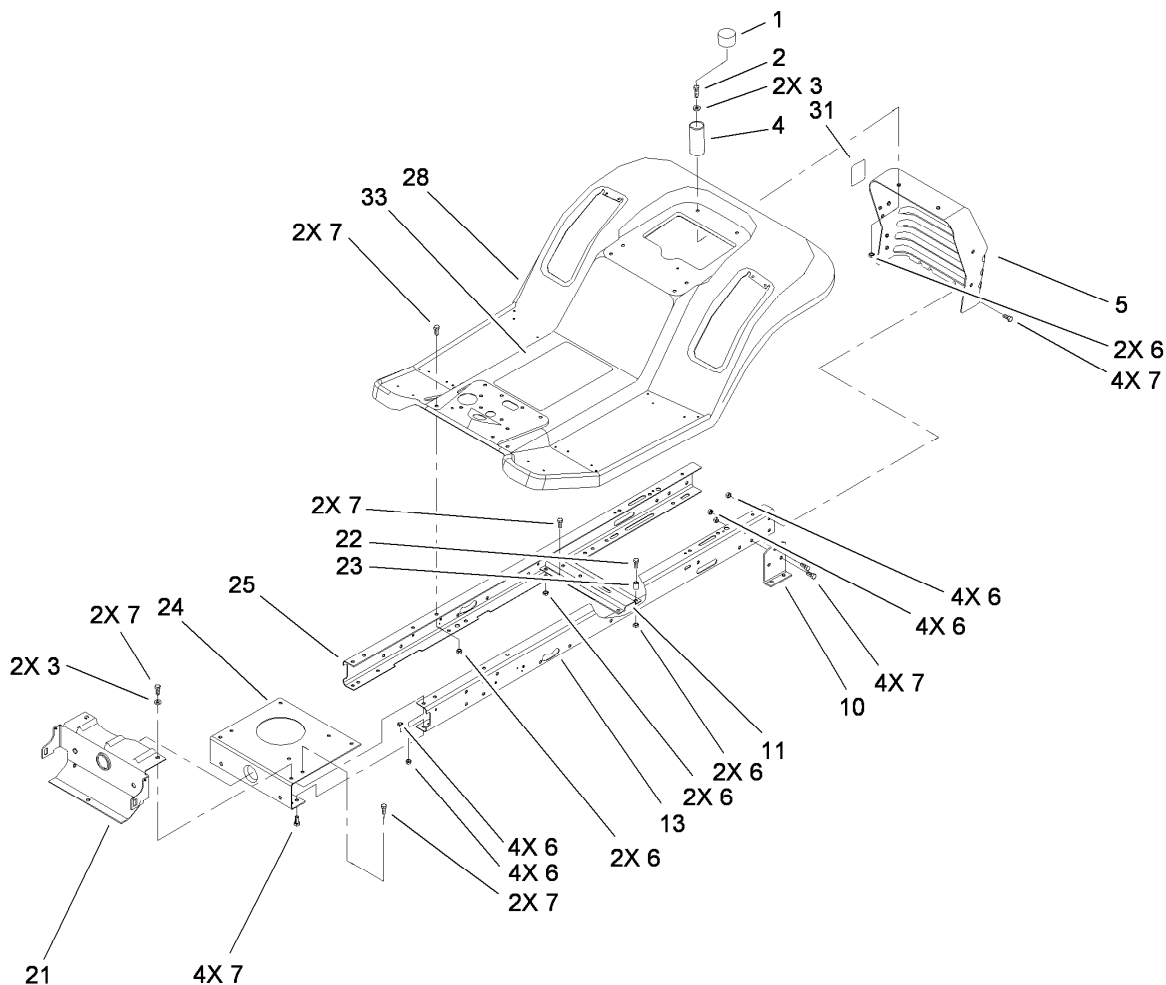

Frame and Body Assembly


Ref.	Part Number	Qty.	Description
1	701178	2	Cap-Protector
2	322-5	2	Screw-HH
3	3256-23	4	Washer-Flat
4	88-6220	2	Spring-Compression
5	99-2957-03	1	Support-Seat/Rear Hitch
6	3296-29	24	Nut-Lock, NI
7	322-3	20	Screw-HH
10	88-5260-03	2	Bracket-Transaxle, Mounting
11	88-4620-03	1	Bracket-Idler Pivot
13	99-2958-03	1	Rail-Frame, LH
21	110-8636-03	1	Support-Axle, Front
22	322-12	2	Screw-HH
23	88-5470	2	Spacer
24	88-4630-03	1	Plate-Mounting, Engine
25	99-2959-03	1	Rail-Frame, RH
28	114-3229	1	Body-Rear
31	100-7449	1	Decal-Valve, Dump
33	114-3236	1	Decal-Instruction, Safety

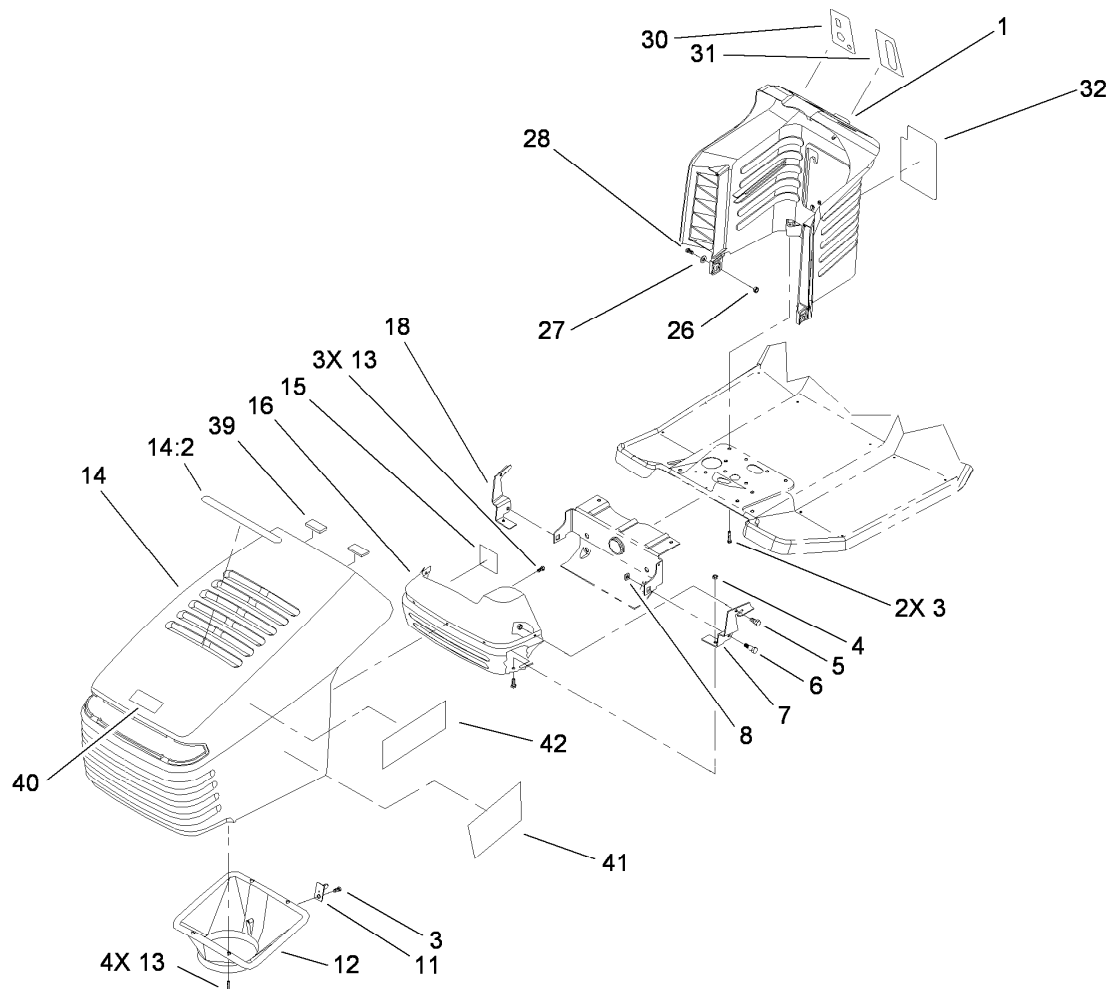

Hood and Tower Assembly


Ref.	Part Number	Qty.	Description
1	107-4920	1	Tower-Steering
3	46-8091	3	Screw-HWH
4	3296-42	4	Nut-Lock, NI
5	321-2	4	Screw-HH
6	28-0540	2	Bolt-Shoulder
7	88-6050-03	1	Bracket-Pivot, LH Hood
8	3290-496	2	Nut-Retainer
11	94-1984	1	Latch-Pin
12	93-3891	1	Duct-Air, Hood
13	46-8090	7	Screw-Plastite
14	114-3221	1	Hood Decal ASM
14:2	114-3223	1	Decal-Air Duct
15	92-5782	3	Tape-Foil

Ref.	Part Number	Qty.	Description
16	93-3864-03	1	Shield-Heat
18	88-6040-03	1	Bracket-Pivot, RH Hood
26	3296-29	2	Nut-Lock, NI
27	3256-23	2	Washer-Flat
28	322-3	2	Screw-HH
30	99-8141	1	Decal-Ignition/Lights
31	92-5730	1	Decal-Throttle/Choke
32	107-4922	1	Decal-Danger
39	94-1980	2	Foam-Hood
40	410087	1	Decal
41	111-1907	2	Decal
42	111-1952	2	Decal

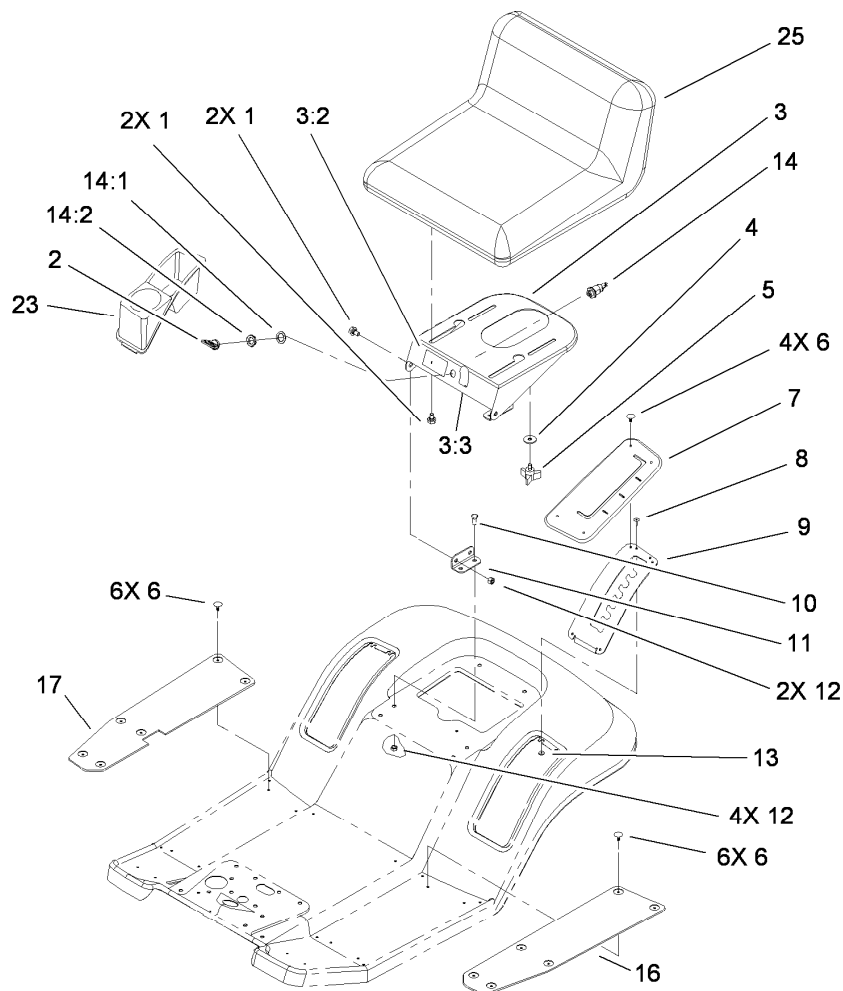

Rear Body and Seat Assembly

Ref.	Part Number	Qty.	Description
1	37-8770	4	Bolt-Shoulder
2	700918	1	Key
3	106-6437	1	Seat Support ASM
3:2	99-2986	1	Decal-Danger
3:3	99-5340	1	Decal-Switch
4	5-4460	2	Washer-Pivot
5	92-9674	2	Knob
6	3290-479	16	Fastener-Panel
7	93-7657	1	Cover-HOC
8	3290-282	2	Rivet-Blind
9	88-5030-03	1	Gate-HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket-Pivot, Seat
12	3296-29	6	Nut-Lock, NI
13	3269-26	2	Washer-Plain
14	46-5780	1	Starter Switch ASM
14:1	3254-5	1	Washer-Tooth, Internal
14:2	218-461	1	Nut-HH
16	88-5240	1	Mat-Foot, LH
17	88-5230	1	Mat-Foot, RH
23	88-4990	1	Tray-Fender
25	114-3237	1	Seat ASM

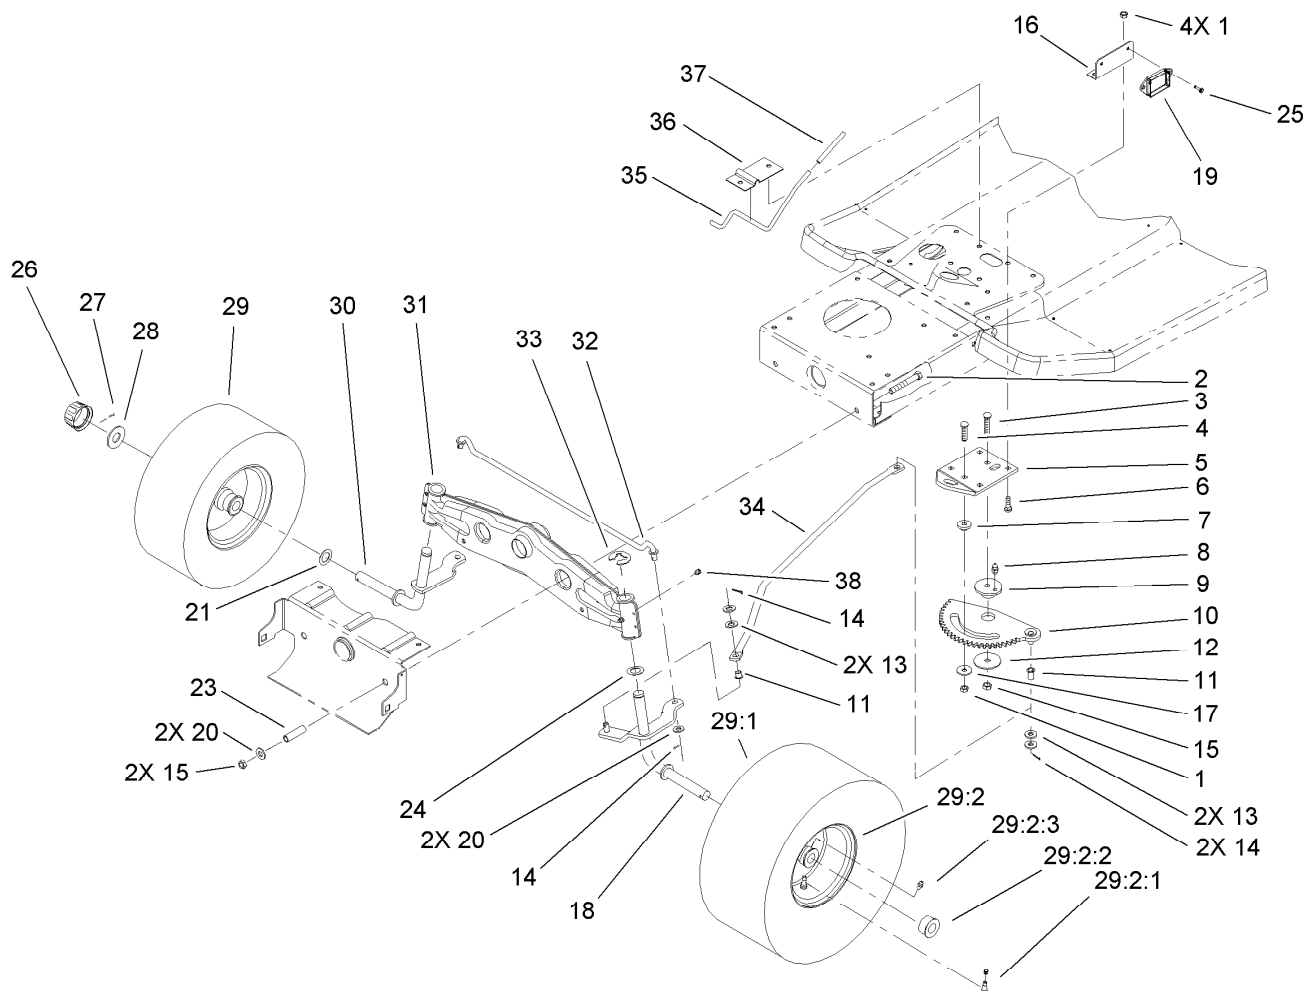


Steering Assembly

Ref.	Part Number	Qty.	Description
1	3296-29	5	Nut-Lock, NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Rack, Steering
6	3230-2	4	Bolt-CARR
7	88-5010	1	Spacer-Rack, Steering
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing-Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	2	Bushing-Flanged, Nylon
12	111419	1	Washer-Bearing
13	3256-25	4	Washer-Flat
14	3272-10	4	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	92-7890-03	1	LH Spindle ASM
19	99-3701	1	Module-Clutch
20	3256-24	4	Washer-Flat
21	3-6498	4	Washer-Thrust
23	88-5470	2	Spacer

Ref.	Part Number	Qty.	Description
24	3-6498	2	Washer-Thrust
25	9266714	2	Screw-HWH
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer-Plain
29		2	Front Wheel And Tire ASM ■
29:1	99-2988	1	Tire
29:2	99-6829	1	Rim ASM
29:2:1	232-27	1	Stem-Valve
29:2:2	110513	2	Bearing-Wheel
29:2:3	302-5	1	Fitting-Grease
29:3	232-39	1	Tube-Inner ●
30	92-7889-03	1	RH Spindle ASM
31	99-6844-03	1	Axle-Front
32	88-5380	1	Tie Rod-Steering
33	32151-48	2	E-Ring
34	88-4830	1	Link-Drag
35	88-5510	1	Rod-Brake, Parking
36	88-5520-03	1	Bracket-Parking Brake
37	88-0890	1	Grip-Brake, Parking
38	302-5	2	Fitting-Grease


● Not illustrated

■ Not serviced separately

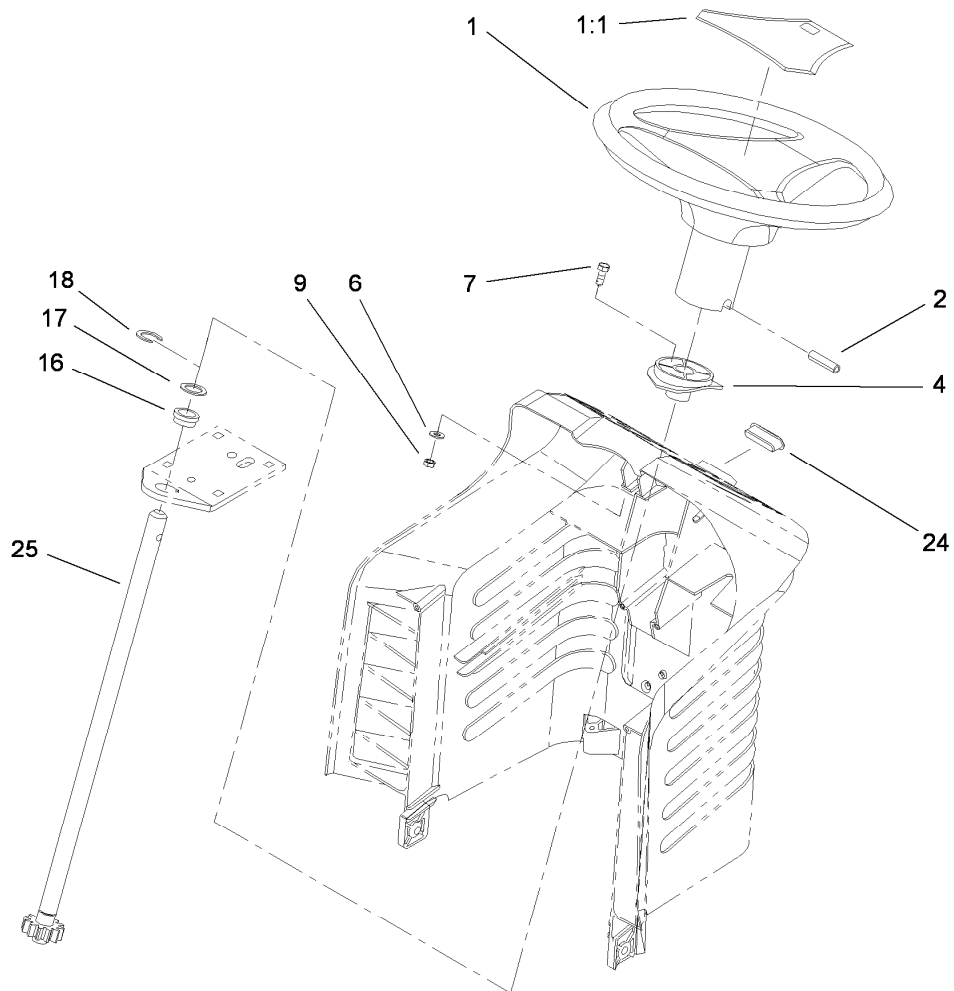

Fixed Steering Assembly

Ref.	Part Number	Qty.	Description
1	98-1467	1	Steering Wheel ASM
1:1	98-1468	1	Cover-Wheel, Steering
2	32121-111	1	Pin-Roll
4	88-4190	1	Bushing-Sliding
6	3256-22	2	Washer-Flat
7	321-4	2	Screw-HH
9	3296-42	2	Nut-Lock, NI
16	88-5150	1	Bearing-Flange
17	3-6498	1	Washer-Thrust
18	32151-48	1	E-Ring
24	88-4150	1	Plug
25	88-6380	1	Shaft-Steering, Long

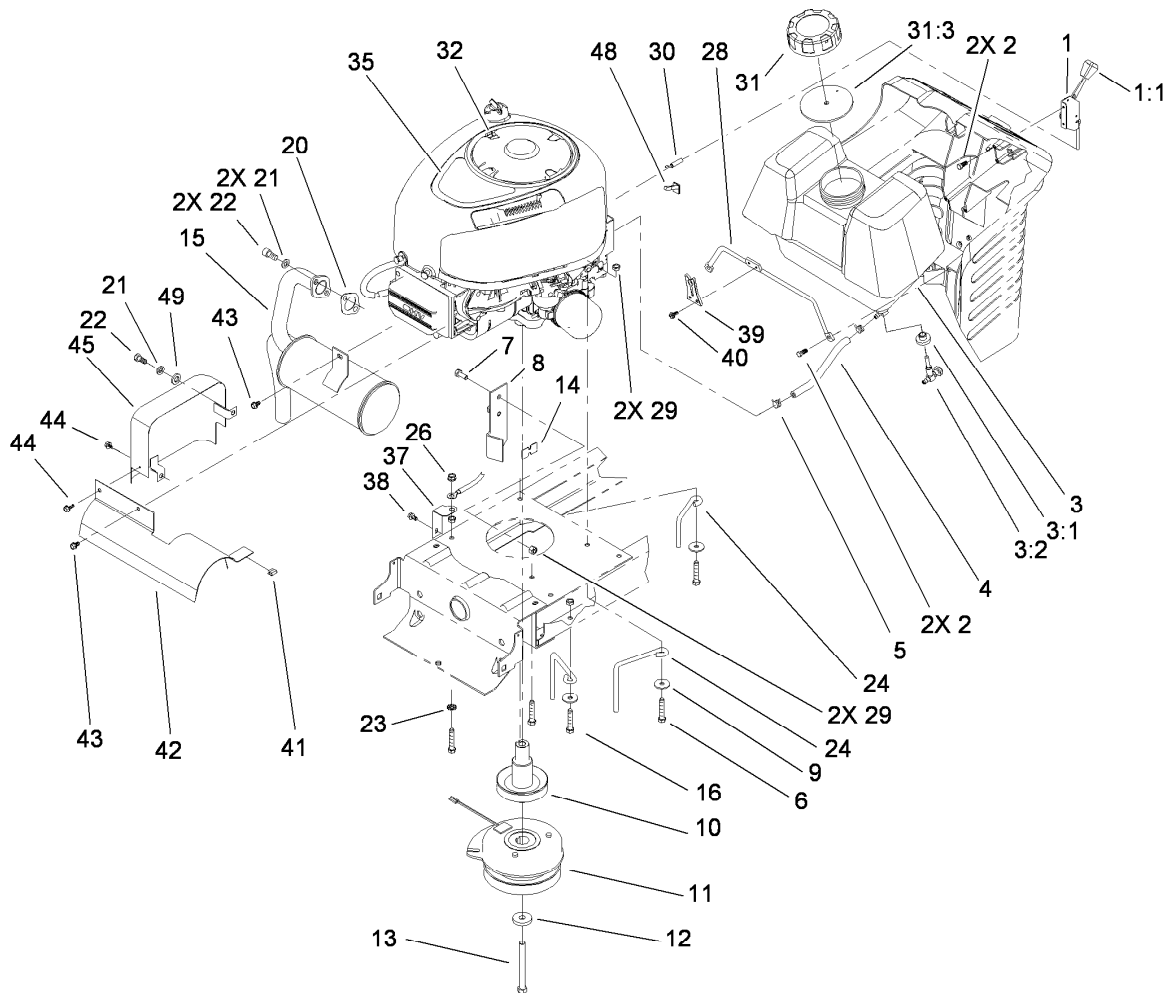


Engine Assembly

Ref.	Part Number	Qty.	Description
1	88-4340	1	Throttle Control ASM
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	46-6560	1	Bushing
3:2	104048	1	Valve-Fuel
4	107-9297	1	Hose-Fuel
5	2412-98	2	Clamp-Hose
6	322-9	3	Screw-HH
7	322-3	2	Screw-HH
8	107-4914-03	1	Stop-Clutch
9	5-4460	2	Washer-Pivot
10	107-4915	1	Pulley-Engine
11	108-9510	1	Clutch-PTO, Electric
12	112843	1	Washer
13	3212-18	1	Screw-HH
14	98-5023	1	Bumper
15	114-3185	1	Muffler-Exhaust
16	9267154	1	Screw-HWH, Taptite
20	88-4410	1	Gasket-Exhaust
21	3253-4	3	Washer-Lock
22	3274-10	3	Screw-HSH

Ref.	Part Number	Qty.	Description
23	3255-8	1	Washer-Lock
24	93-3855	2	Guide-Belt, RH
26	32149-1	2	Nut-Keps
28	94-1952	1	Rod-Tank, Gas
29	3296-29	4	Nut-Lock, NI
30	88-4350	1	Throttle Cable ASM
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
32		1	Engine-Briggs & Stratton, 31E777-0130-E1 ●■
35	114-3224	1	Decal-Engine
37	93-3809	1	Bracket-Ground
38	9266714	1	Screw-HWH
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-HWH
41	93-3882	1	Clip-Tinnerman
42	114-3170-03	1	Exhaust Shield ASM
43	9266714	2	Screw-HWH
44	32104-76	2	Screw-Thd Cutting,HWH
45	93-8450-03	1	Heat Shield ASM
48	88-4490	1	Reducer-Throttle, Rpm
49	3256-23	1	Washer-Flat

● Not serviced separately


■ Obtain parts from www.briggsandstratton.com

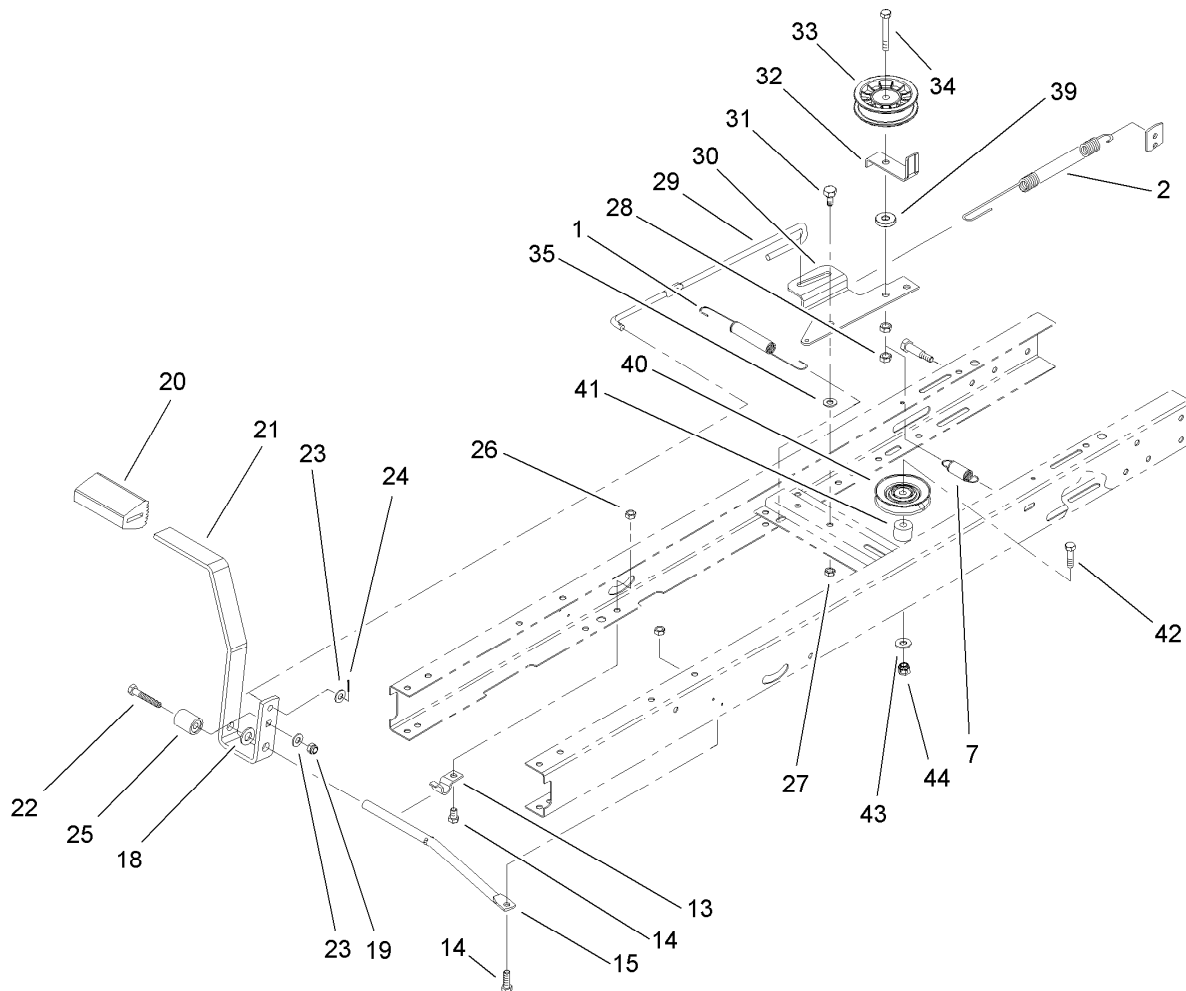

Traction Clutching Assembly

Ref.	Part Number	Qty.	Description
1	27-8890	1	Spring-Extension
2	100-7422	1	Spring-Extension
7	88-6330	1	Spring-Extension
13	88-4810	1	Clamp-Pivot, Shift
14	322-3	2	Screw-HH
15	88-5500	1	Rod-Pivot, Pedal
18	3256-26	1	Washer-Flat
19	3296-47	1	Nut-Lock, NI
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch/Brake, Hydro
22	322-9	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer
26	3296-29	2	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
27	3296-29	1	Nut-Lock, NI
28	3296-59	2	Nut-Lock, NI
29	88-5270	1	Rod-Clutch/Brake
30	88-6070	1	Arm-Idler
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler, Belt
33	104-4160	1	Pulley-Idler
34	323-11	1	Screw-HH
35	5-4460	1	Washer-Pivot
39	92-4890	1	Washer
40	92-7102	1	Pulley-Idler
41	92-5791	1	Spacer
42	323-10	1	Screw-HH
43	3256-3	1	Washer-Flat
44	3296-39	1	Nut-Lock, NI

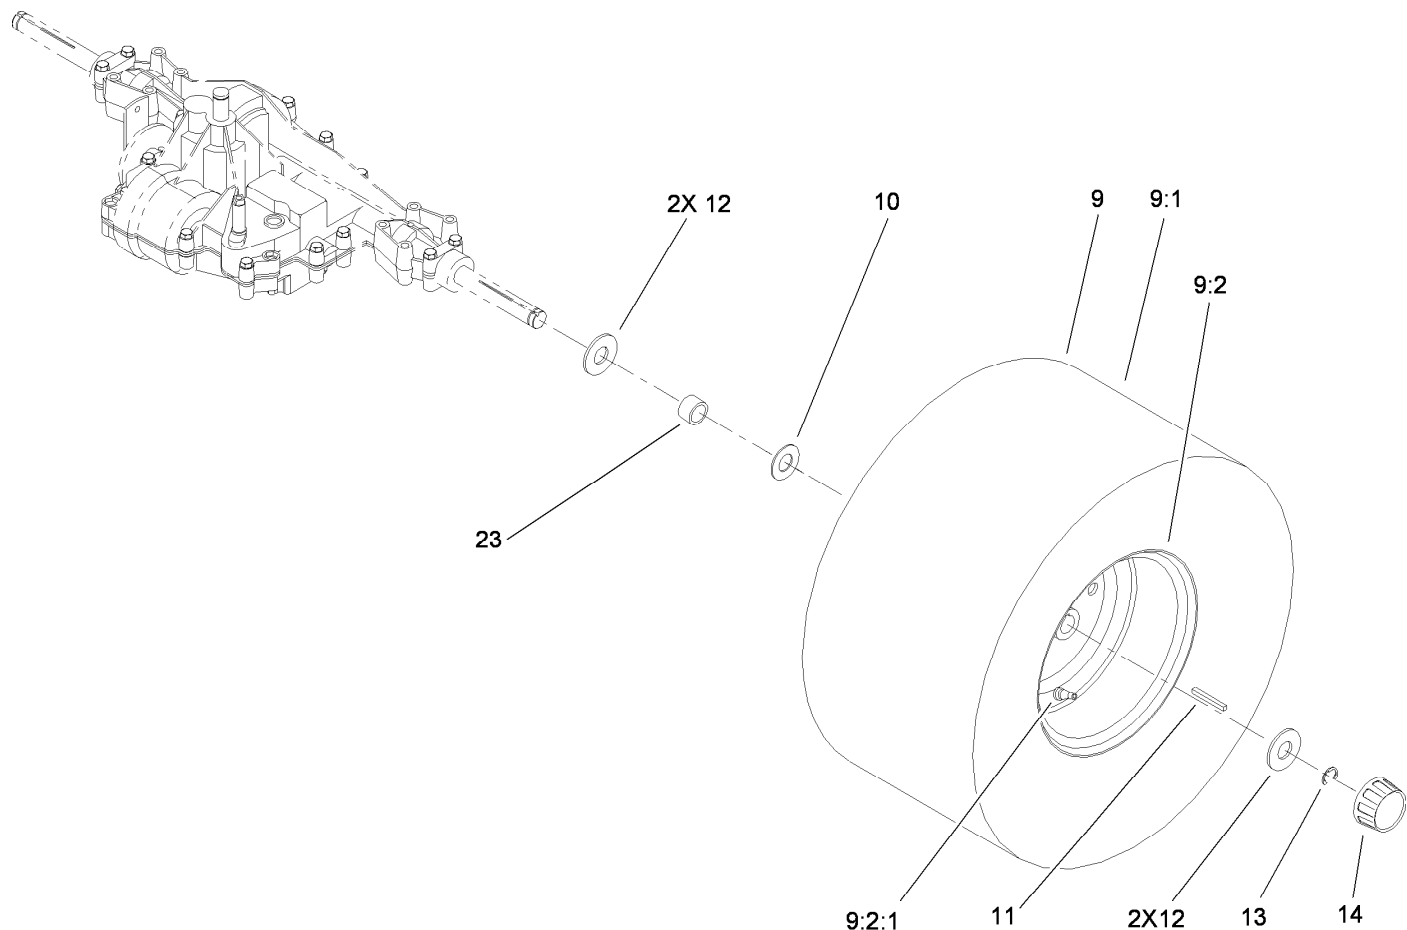


Rear Wheel and Tire Assembly

Ref.	Part Number	Qty.	Description
9		2	Rear Wheel And Tire ASM ■
9:1	99-2996	1	Tire
9:2	88-4390	1	Rim ASM
9:2:1	232-27	1	Stem-Valve
9:99	232-41	1	Tube ●
10	3-6498	2	Washer-Thrust
11	7-0036	2	Key-Square
12	28-2480	4	Washer-Plain
13	32151-48	2	E-Ring
14	61-9780	2	Cap-Hub
23	104-4161	2	Spacer-Wheel


● Not illustrated

■ Not serviced separately

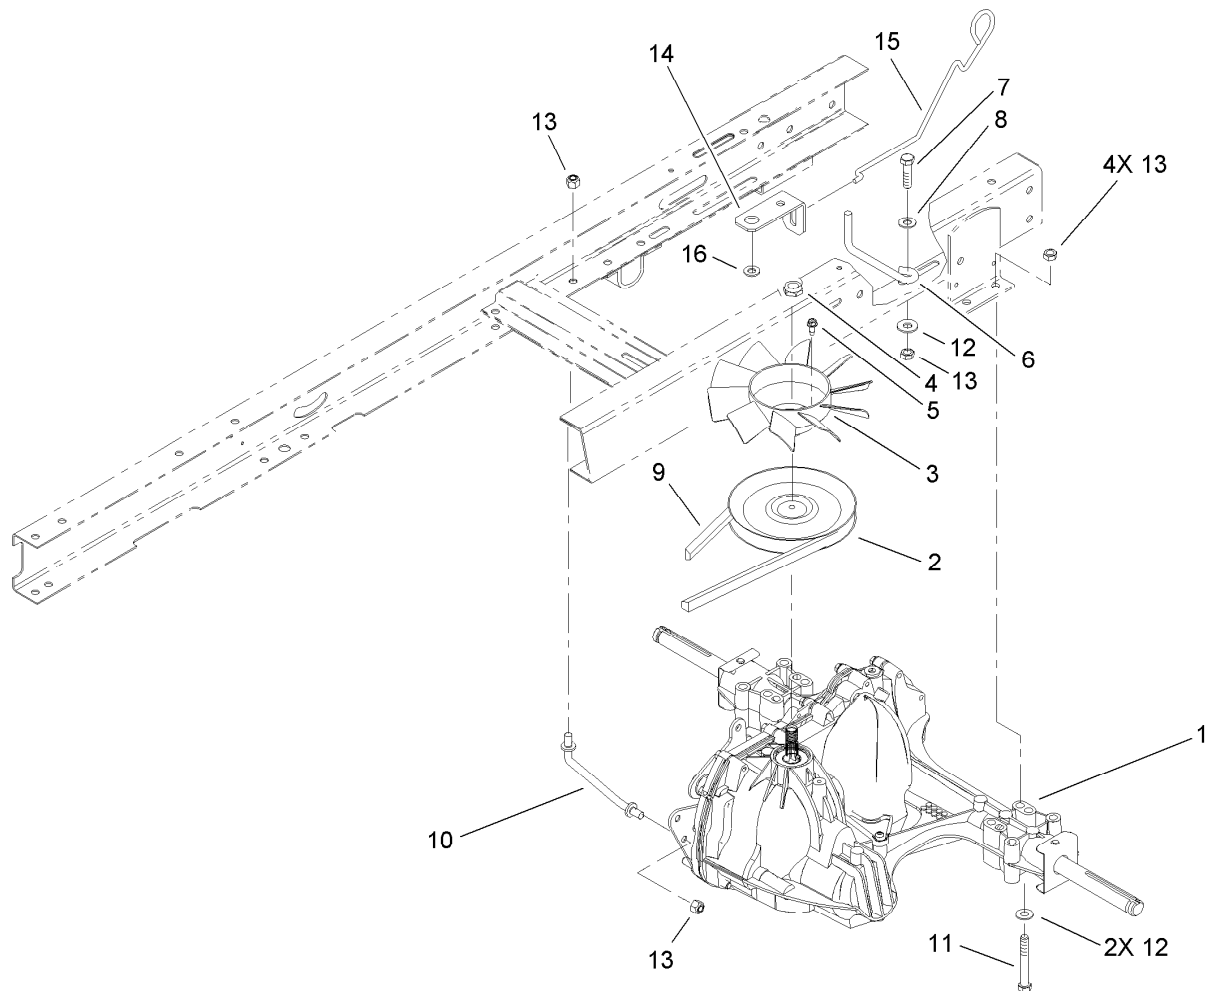

Hydro Transaxle Assembly


Ref.	Part Number	Qty.	Description
1	104-1760	1	Transaxle ASM
2	104-1754	1	Pulley
3	104-2162	1	Fan
4	3296-28	1	Nut-Lock, NI
5	9134304	3	Screw-HWH
6	107-4911	1	Guide-Belt
7	322-5	1	Screw-HH
8	5-4460	1	Washer-Pivot
9	88-6280	1	V-Belt
10	100-6225	1	Strap-Torque
11	322-13	4	Screw-HH
12	3256-23	3	Washer-Flat
13	3296-29	7	Nut-Lock, NI
14	100-7406	1	Bracket-Bypass
15	100-7407	1	Rod-Bypass
16	3256-3	1	Washer-Flat

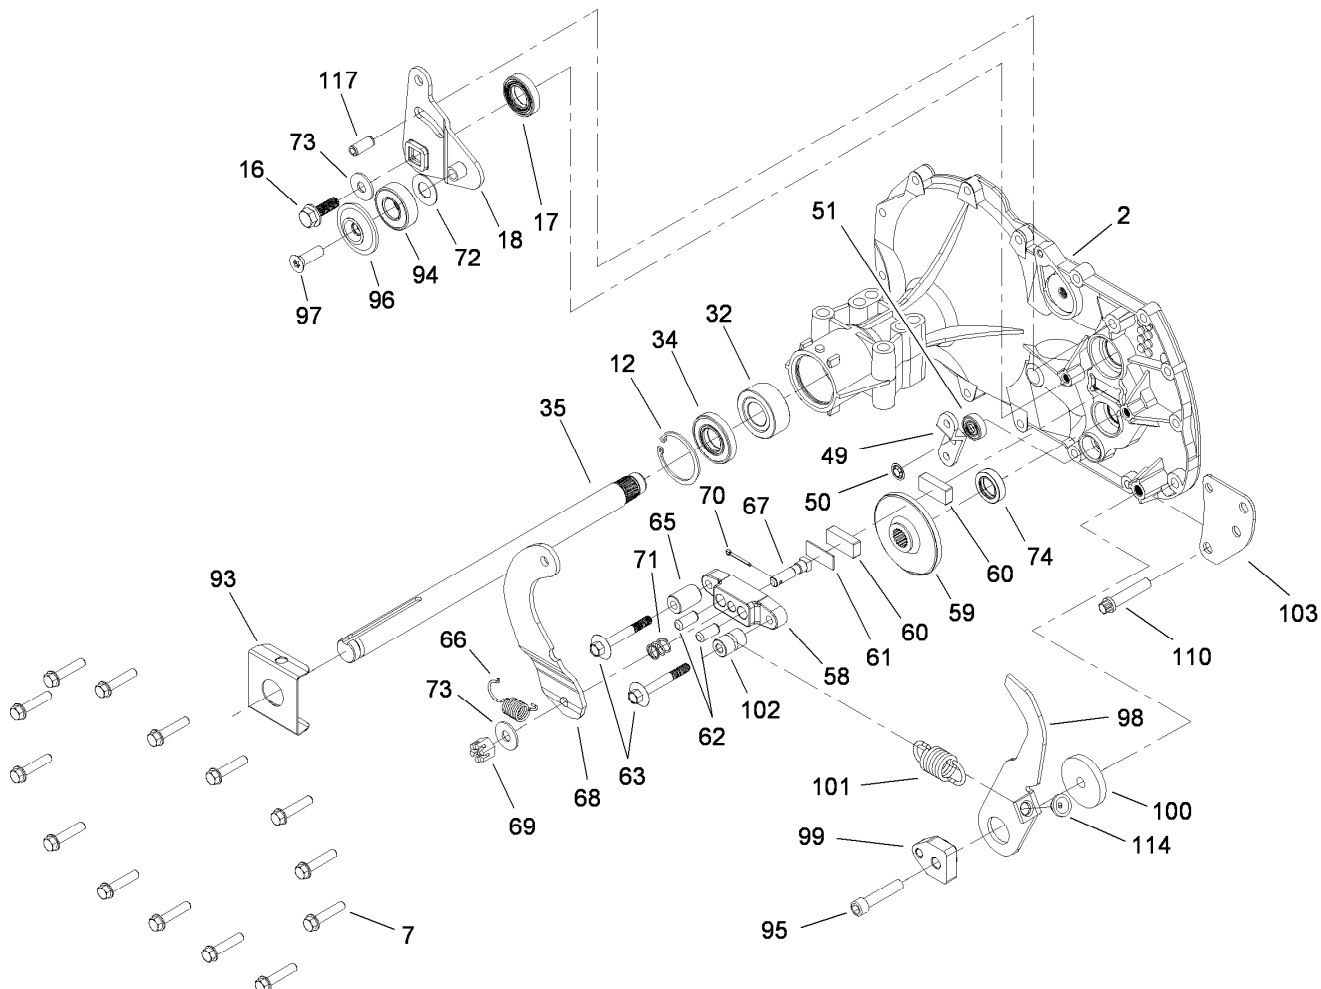

Side Housing and Bearing Assembly Transaxle No. 104-1760

Ref.	Part Number	Qty.	Description
2	104-5302	1	Side Housing ASM
7	104-5305	14	Screw-HHF
12	104-5309	1	Ring-Retaining
16	104-5312	1	Screw-HF
17	104-5313	1	Seal-Lip
18	104-5314	1	Arm-Control
32	104-5321	1	Bearing-Sleeve, Outboard
34	104-5322	1	Seal-Lip
35	104-5323	1	Shaft-Axle, RH
49	104-5336	1	Arm-Bypass
50	104-5337	1	Ring-Retaining
51	104-5338	1	Seal-Lip
58	104-5343	1	Yoke-Brake
59	104-5344	1	Rotor-Brake
60	104-2171	2	Puck-Brake
61	104-2181	1	Puck-Plate
62	104-2176	2	Pin-Brake
63	104-5345	2	Screw-HF
65	104-2180	1	Spacer
66	104-2184	1	Spring-Arm, Brake (Bias)
67	104-2174	1	Bolt-SQH


Ref.	Part Number	Qty.	Description
68	104-5346	1	Arm-Brake
69	93-3807	1	Nut-Castle
70	3272-7	1	Pin-Cotter
71	104-2188	1	Spring-Brake, Anti Drag
72	94-1933	1	Washer
73	5-4460	2	Washer-Pivot
74	104-5347	1	Seal-Oil
93	104-5353	1	Clip-Spring
94	104-2156	1	Bearing
95	104-2155	1	Screw
96	104-2157	1	Spacer-Locating
97	104-2158	1	Screw-Countersunk
98	104-5354	1	Arm-Return
99	104-2119	1	Puck-Adjusting
100	104-5355	1	Washer
101	104-5356	1	Spring-Extension
102	104-5357	1	Spacer
103	104-5358	1	Bracket-Torque
110	104-2148	1	Screw-TTH
114	104-5363	1	Guide-Spring
117	104-5365	1	Pin-Spring

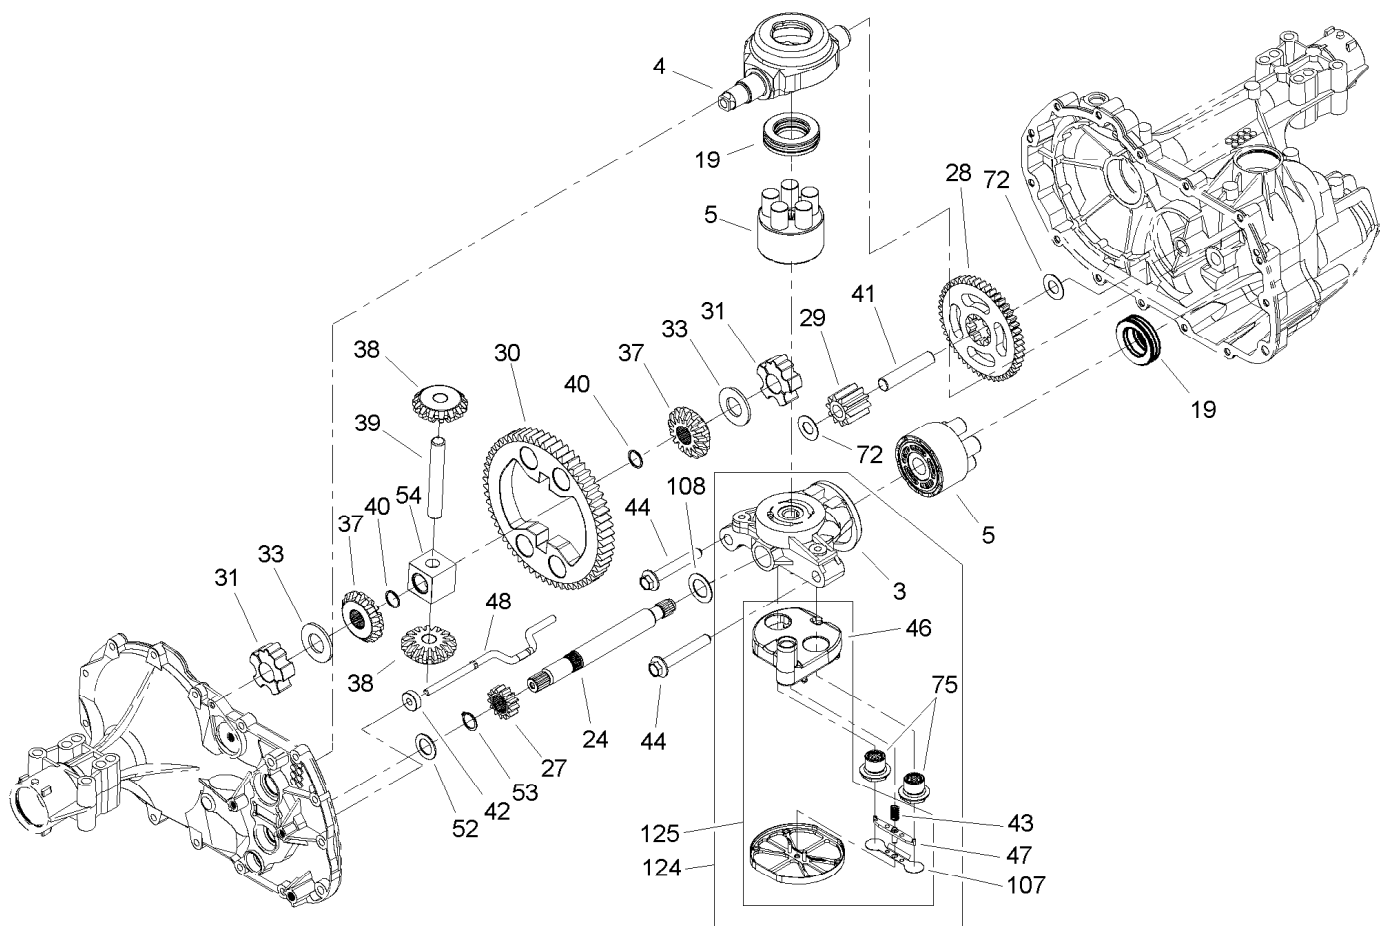

Gear Assembly Transaxle No. 104-1760


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
3	104-5303	1	Center Section ASM	43	104-5331	1	Spring-Bypass
4	104-5304	1	Swashplate-Trunnion	44	94-6926	2	Bolt
5	103-2666	2	Cylinder Block Kit	46	104-5333	1	Base-Filter
19	94-6922	2	Bearing-Thrust	47	104-5334	1	Actuator-Bypass
24	104-5315	1	Shaft-Motor	48	104-5335	1	Rod-Actuator, Bypass
27	104-5316	1	Gear-Pinnion, 13T	52	104-5339	1	Washer-Flat
28	104-5317	1	Gear-10T/48T	53	104-5340	1	Ring-Retaining
29	104-5318	1	Gear-Jackshaft, 10T	54	104-5341	1	Bearing-Block, Center
30	104-5319	1	Gear-Bull 60T	72	94-1933	2	Washer
31	104-5320	2	Bearing-Sleeve	75	104-5348	2	Check Plug ASM
33	94-1943	2	Washer	107	104-5359	1	Deflector
37	104-5325	2	Gear-Miter	108	104-5360	1	Washer
38	104-5326	2	Gear-Miter 15T	124	106-6522	1	Center Section Filter Bypass ASM
39	104-5327	1	Shaft	125	106-6523	1	Filter ASM
40	104-5328	2	Ring-Retaining, Spiral	127	104-5368	1	Seal Kit ●
41	104-5329	1	Pin-Jackshaft				
42	104-5330	1	Magnet-Ring				

● Not illustrated

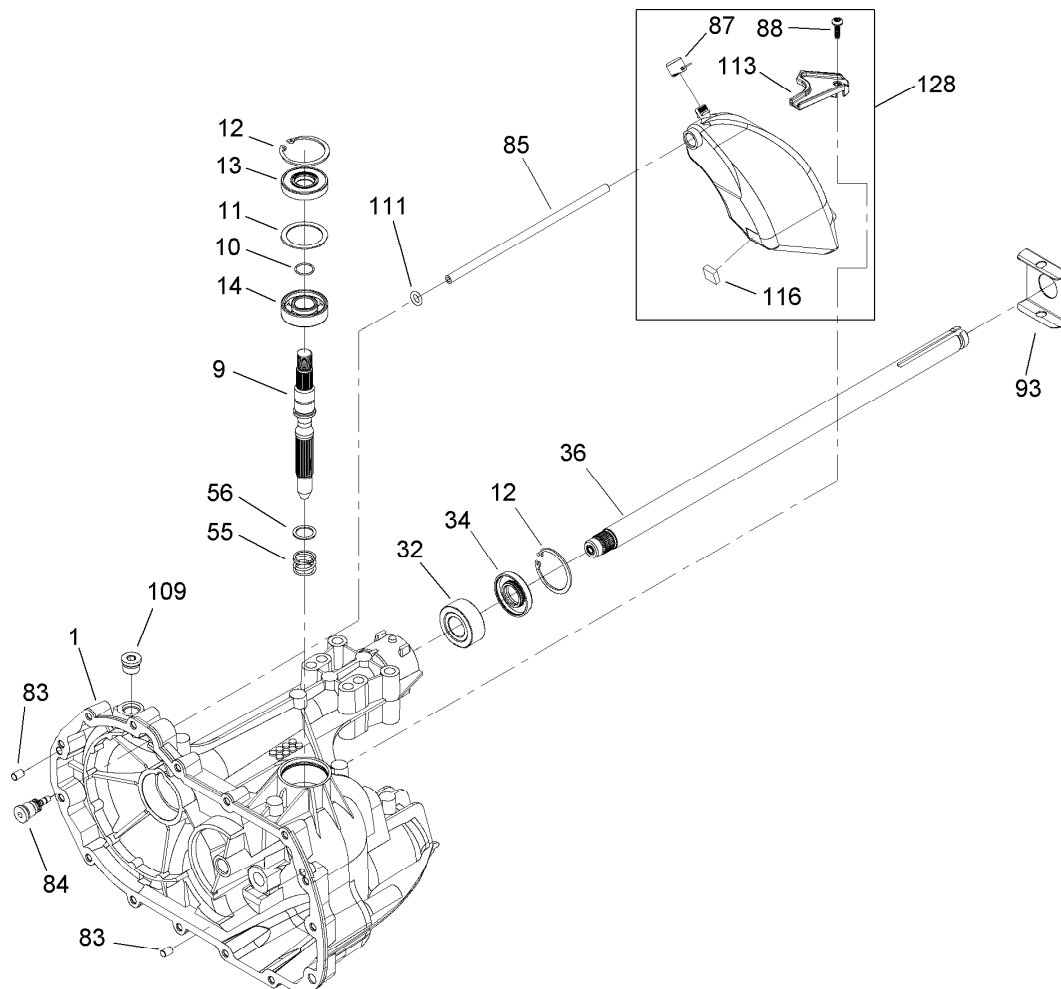

Main Housing and Bearing Assembly Transaxle No. 104-1760


Ref.	Part Number	Qty.	Description
1	104-5301	1	Main Housing ASM
9	104-5306	1	Shaft-Input
10	104-5307	1	Ring-Retaining
11	104-5308	1	Spacer
12	104-5309	2	Ring-Retaining
13	104-5310	1	Seal-Lip
14	104-5311	1	Bearing-Ball
32	104-5321	1	Bearing-Sleeve, Outboard
34	104-5322	1	Seal-Lip
36	104-5324	1	Shaft-Axle, LH
55	94-1936	1	Spring-Block
56	94-1937	1	Washer-Thrust
83	104-2170	2	Pin
84	104-5349	1	Fitting-Sae
85	104-5350	1	Hose-Expansion, Tank
87	104-5351	1	Cap-Vent
88	104-5352	1	Bolt-Tapping, Self
93	104-5353	1	Clip-Spring
109	104-2189	1	Plug-Thread, Straight
111	104-5361	1	O-Ring
113	104-5362	1	Bracket-Support
116	104-5364	1	Sponge-Silicone
128	104-5369	1	Expansion Tank Kit

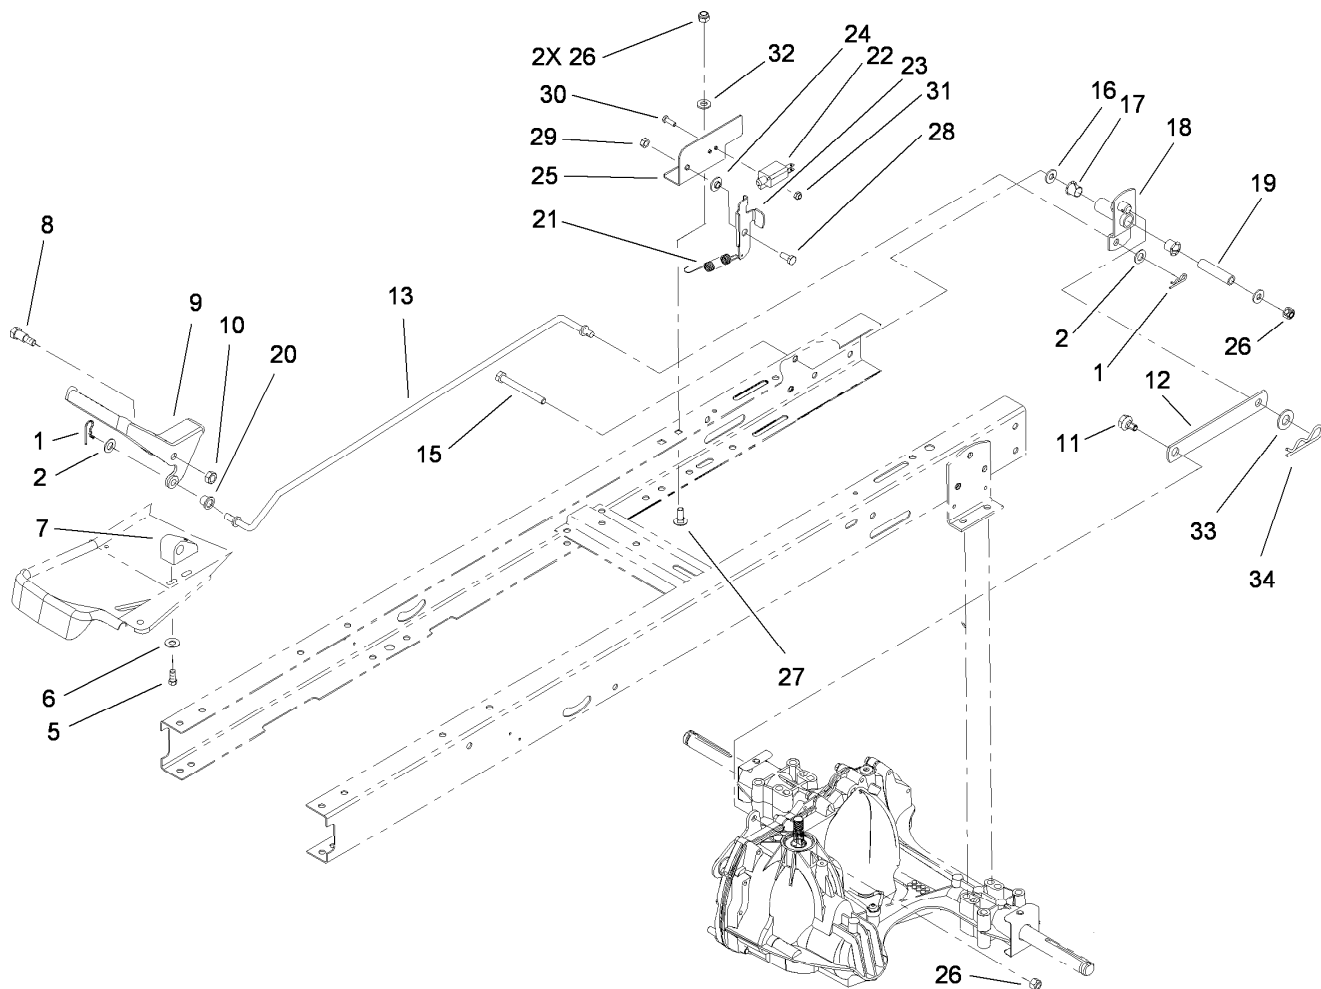

Hydro Transaxle Control Assembly

Ref.	Part Number	Qty.	Description
1	3290-307	2	Pin-Hair
2	3256-38	2	Washer-Flat
5	46-8090	2	Screw-Plastite
6	3256-22	2	Washer-Flat
7	88-4690	1	Block-Pivot
8	23-0310	1	Screw-Shoulder, HH
9	99-6120-05	1	Pedal-Control, Speed
10	3296-59	1	Nut-Lock, NI
11	37-8770	1	Bolt-Shoulder
12	99-6833	1	Link-Control, Speed
13	99-6839	1	Rod-Control, Speed
15	322-14	1	Screw-HH
16	3256-2	2	Washer-Flat
17	256-257	2	Bushing-Nyliner
18	99-6835-03	1	Pivot ASM
19	99-6832	1	Spacer-Pivot

Ref.	Part Number	Qty.	Description
20	99-6121	1	Bushing-Flanged
21	99-6805	1	Spring-Extension
22	95-1653	1	Switch-Pole, Single
23	99-6807	1	Bracket-Pivot
24	99-6808	1	Washer-Stepped
25	99-6806	1	Bracket-Adjustment
26	3296-29	4	Nut-Lock, NI
27	3230-18	2	Screw-CARR
28	99-6810	1	Screw-HH
29	3296-42	1	Nut-Lock, NI
30	3290-392	2	Screw-SHH
31	3296-1	2	Nut-Lock
32	3256-23	2	Washer-Flat
33	3256-26	1	Washer-Flat
34	9335054	1	Pin-Hair

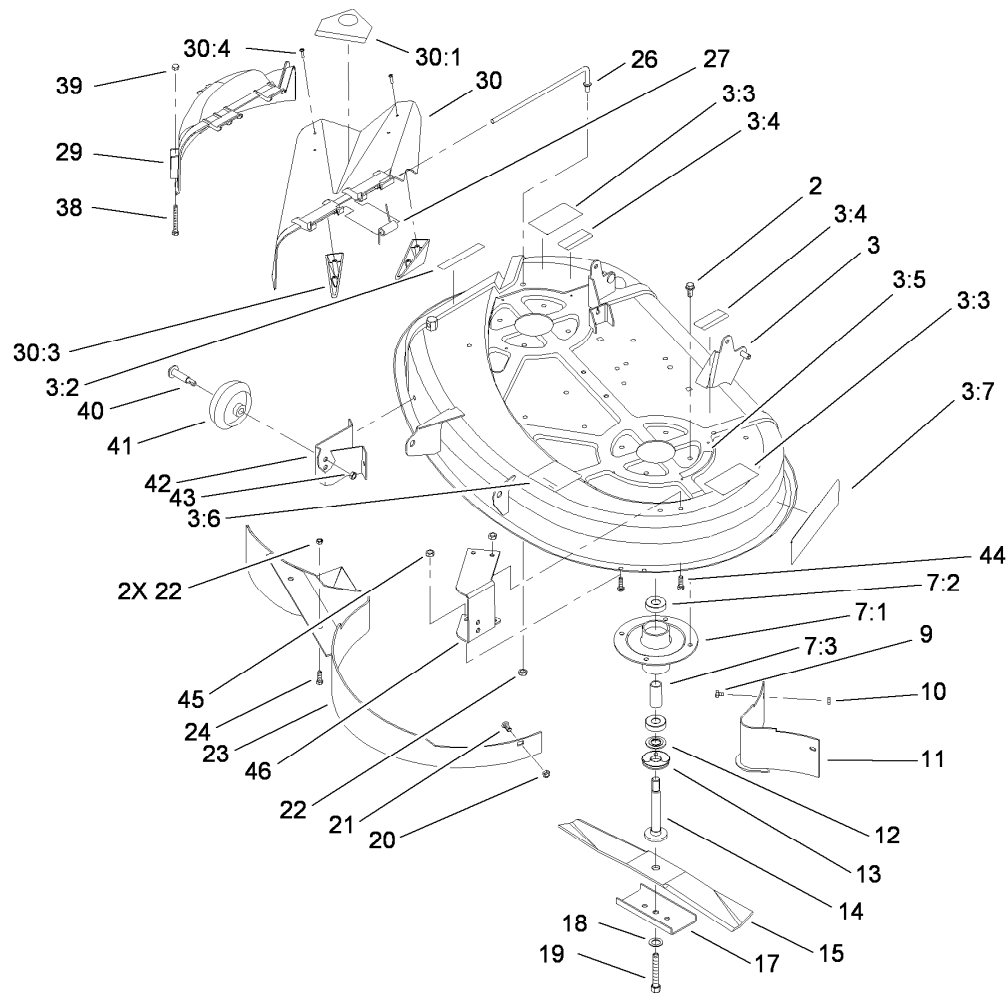


38 Inch Deck Assembly

Ref.	Part Number	Qty.	Description
2	32144-41	8	Screw-Taptite
3	114-3230	1	38 Inch Deck ASM
3:2	93-7009	1	Decal-Danger, Deflector
3:3	93-7010	2	Decal-Danger
3:4	93-6674	2	Decal-Warning
3:5	93-6677	1	Decal-Danger, Shield
3:6	93-6679	1	Decal-Routing, Belt
3:7	114-3233	1	Decal-Recycling
7		2	Spindle ASM ●■
7:1	88-4510	1	Housing-Spindle
7:2	100-1048	2	Bearing-Ball
7:3	62-3661	1	Spacer
9	321-4	2	Screw-HH
10	3296-42	2	Nut-Lock, NI
11	79-1640-03	1	Baffle ASM
12	80-4380	2	Spacer
13	80-4360	2	Shield-Bearing
14	80-4341	2	Shaft-Spindle
15	114-3231	1	Blade Kit
17	80-0510-03	2	Stiffener-Blade
18	3290-465	2	Washer-Belleville
19	26-0671	2	Screw-HH

Ref.	Part Number	Qty.	Description
20	3296-29	1	Nut-Lock, NI
21	3230-1	1	Bolt-CARR
22	3296-39	3	Nut-Lock, NI
23	88-6210-03	1	Baffle-38 Inch
24	323-5	2	Screw-HH
26	95-1661	1	Rod-Pivot
27	57-6950	1	Spring
29	88-4520	1	Cover-Discharge, Deck
30	93-7695	1	Deflector ASM
30:1	93-7317	1	Decal-Danger
30:3	93-7696	2	Kicker
30:4	93-0231	4	Screw-PPH
38	321-14	2	Screw-HH
39	32111-7	2	Nut-Cap
40	56-6591	2	Screw-Shoulder, HWH
41	701756	2	Wheel-Gage
42	88-5740-03	1	Bracket-Wheel, RH
43	3296-39	2	Nut-Lock, NI
44	322-3	6	Screw-HH
45	3296-29	6	Nut-Lock, NI
46	93-3896-03	1	Bracket-Wheel, LH

● Not illustrated


■ Not serviced separately

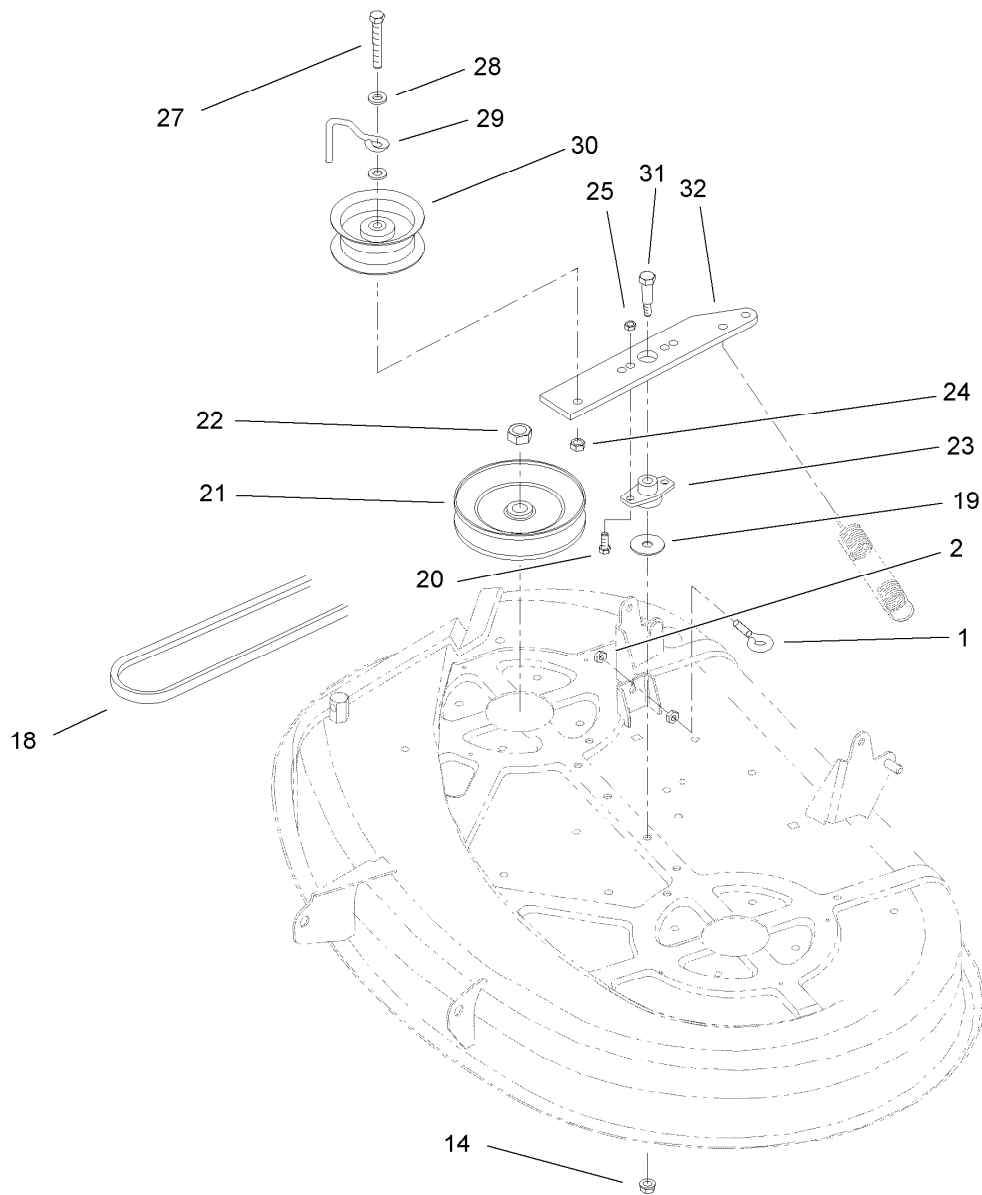

38 Inch Deck Blade Drive Assembly


Ref.	Part Number	Qty.	Description
1	85-9910	1	Eyebolt
2	3218-2	2	Nut-Jam
14	3296-58	1	Nut-Lock, NI
18	88-6250	1	Belt-V
19	3256-68	1	Washer-Flat
20	322-5	2	Screw-HH
21	88-5330	2	Pulley ASM
22	3219-6	2	Nut-Hex
23	88-4980	1	Bushing-Arm, Idler

Ref.	Part Number	Qty.	Description
24	3296-39	1	Nut-Lock, NI
25	3296-29	2	Nut-Lock, NI
27	323-12	1	Screw-HH
28	3256-24	2	Washer-Flat
29	107-7307	1	Guide-Idler, Belt
30	88-5630	1	Pulley-Idler, Flat
31	7-0030	1	Screw-Shoulder, HH
32	88-4870-03	1	Arm-Idler

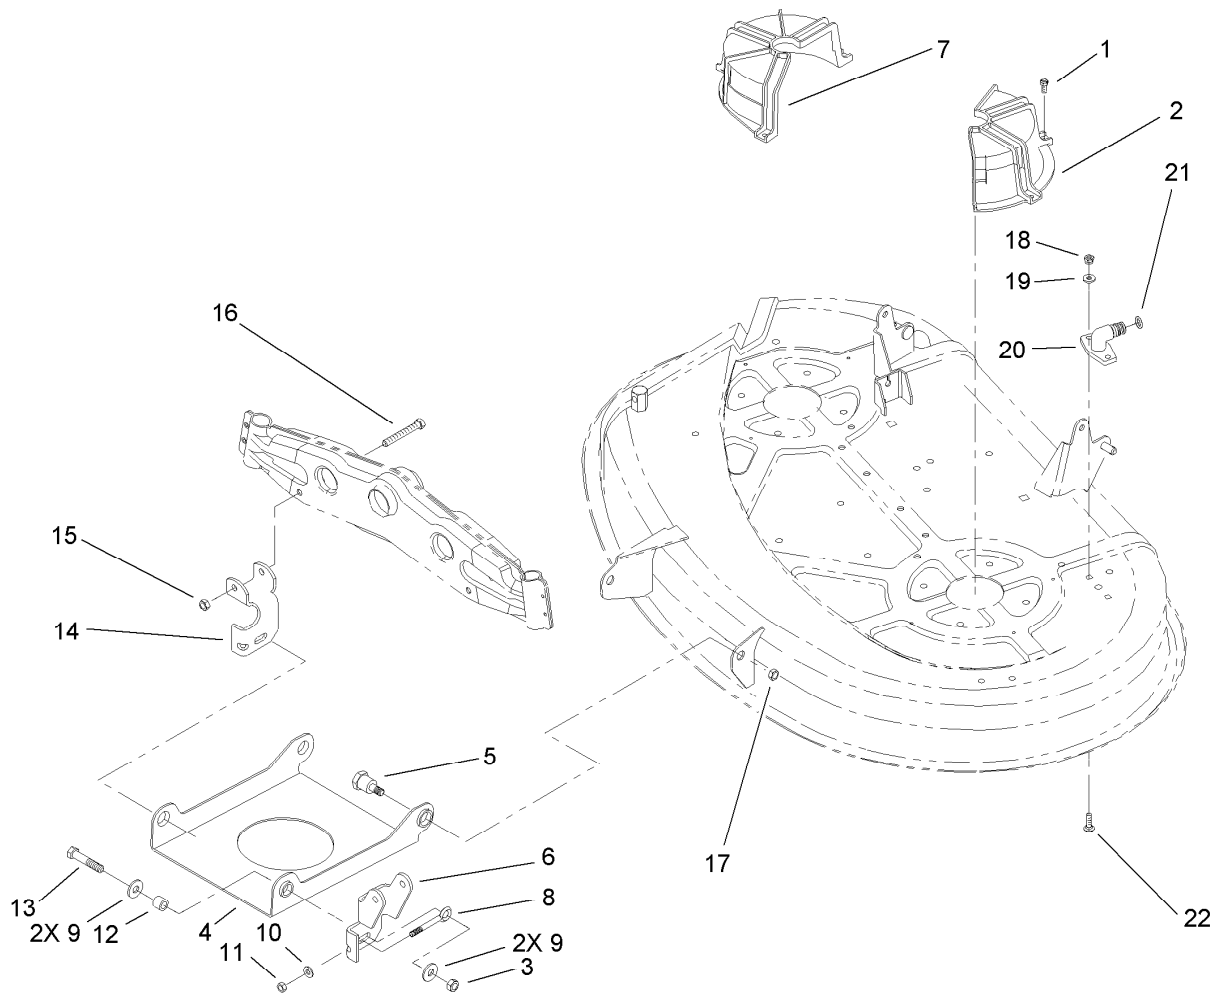


38 Inch Deck Engagement Assembly

Ref.	Part Number	Qty.	Description
1	32104-76	5	Screw-Thd Cutting,HWH
2	88-4030	1	Guide-Belt, LH
3	3296-39	2	Nut-Lock, NI
4	93-3881-03	1	Pan-Deck Suspension, Front
5	94-5823	2	Bolt-Shoulder, HH
6	94-1971-03	1	Bracket-Suspension, LH
7	88-4020	1	Guide-Belt, RH
8	61-9980	2	Screw-Adjusting
9	80-6990	4	Washer-Hardened
10	3256-22	2	Washer-Flat
11	3296-42	2	Nut-Lock, NI
12	93-9847	2	Spacer
13	323-9	2	Screw-HH
14	94-1970-03	1	Bracket-Suspension, RH
15	3296-29	2	Nut-Lock, NI
16	322-12	2	Screw-HH
17	3296-23	2	Nut-Lock, NI
18	3296-16	2	Nut-Lock, NI
19	3256-1	2	Washer-Flat
20	95-2747	1	Fitting-Washout
21	46-6290	1	O-Ring, Seal
22	3229-1	2	Bolt-CARR

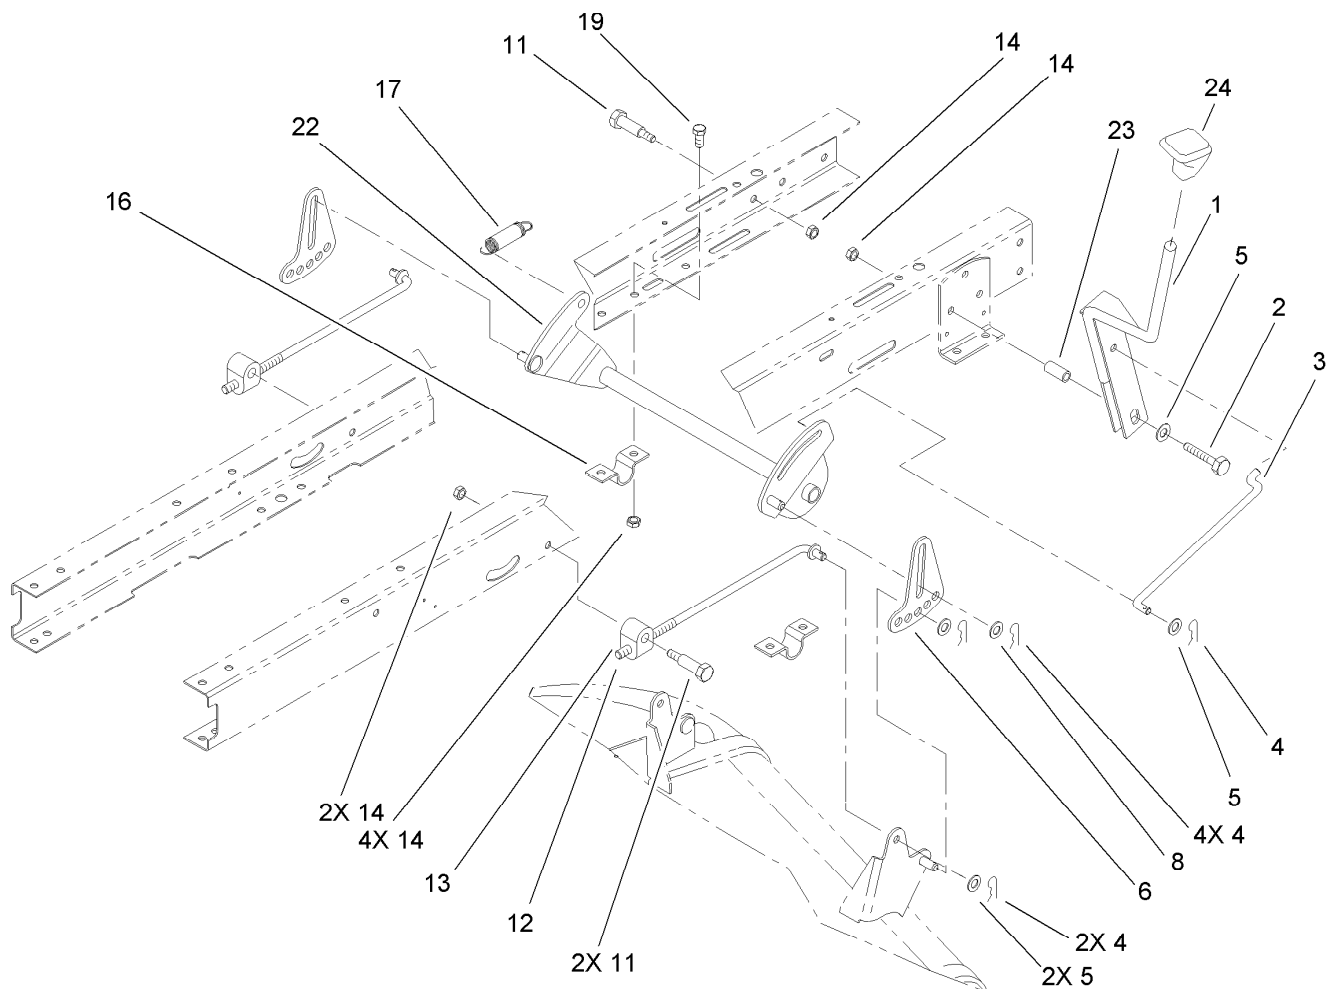

Height-of-Cut Assembly


Ref.	Part Number	Qty.	Description
1	93-3822-03	1	HOC Lever ASM
2	322-32	1	Screw-HH
3	88-5900	1	Link-HOC
4	3290-307	7	Pin-Hair
5	3256-24	4	Washer-Flat
6	88-5570-03	2	Link-Adjusting, HOC
8	80-6990	4	Washer-Hardened
11	7-0030	3	Screw-Shoulder, HH
12	88-5450	2	Rod-Hanger, Rear
13	88-4230	2	Trunnion-HOC
14	3296-29	8	Nut-Lock, NI
16	88-4730	2	Clamp-Pivot, HOC
17	88-6460	1	Spring-Extension
19	322-3	4	Screw-HH
22	88-5110-03	1	Pivot ASM
23	65-7210	1	Spacer
24	94-5565	1	Knob-Shift

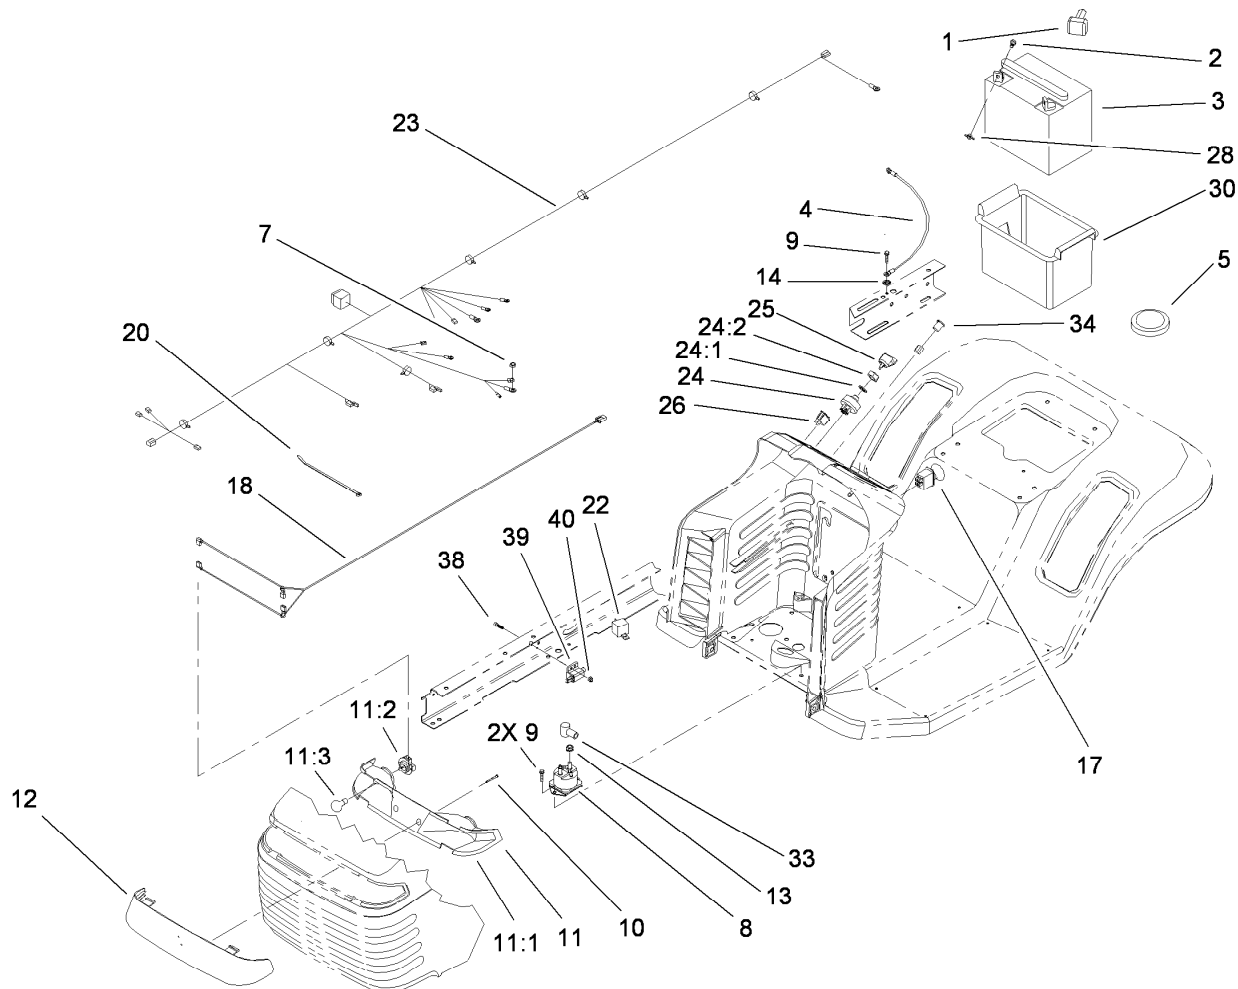

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery-155 Cca
4	44-8110	1	Wire ASM
5	100-3524	1	Switch-Seat
7	32149-2	1	Nut-Keps
8	106-8245	1	Solenoid-Starter
9	9266714	3	Screw-HWH
10	32144-32	2	Screw
11	88-3970	1	Headlight Reflector ASM
11:1	93-8741	1	Reflector-Light
11:2	116262	2	Socket-Headlight
11:3	7228	2	Bulb
12	88-3960	1	Lens-Headlight
13	32149-2	2	Nut-Keps
14	3255-7	2	Washer-Lock/EXT
17	93-9998	1	Switch-PTO

Ref.	Part Number	Qty.	Description
18	99-1935	1	Harness-Headlight
20	614249	1	Tie-Cable
22	98-7249	1	Relay
23	107-4912	1	Harness-Wire
24	88-9830	1	Key Switch ASM
24:1	3254-5	1	Washer-Tooth, Internal
24:2	218-461	1	Nut-HH
25	700918	1	Key
26	92-8875	1	Switch-Rocker
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
33	93-3190	1	Boot-Insulator, Terminal
34	95-7652	1	Light-Indicator
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch-Pole, Single
40	3296-2	2	Nut-Lock, NI

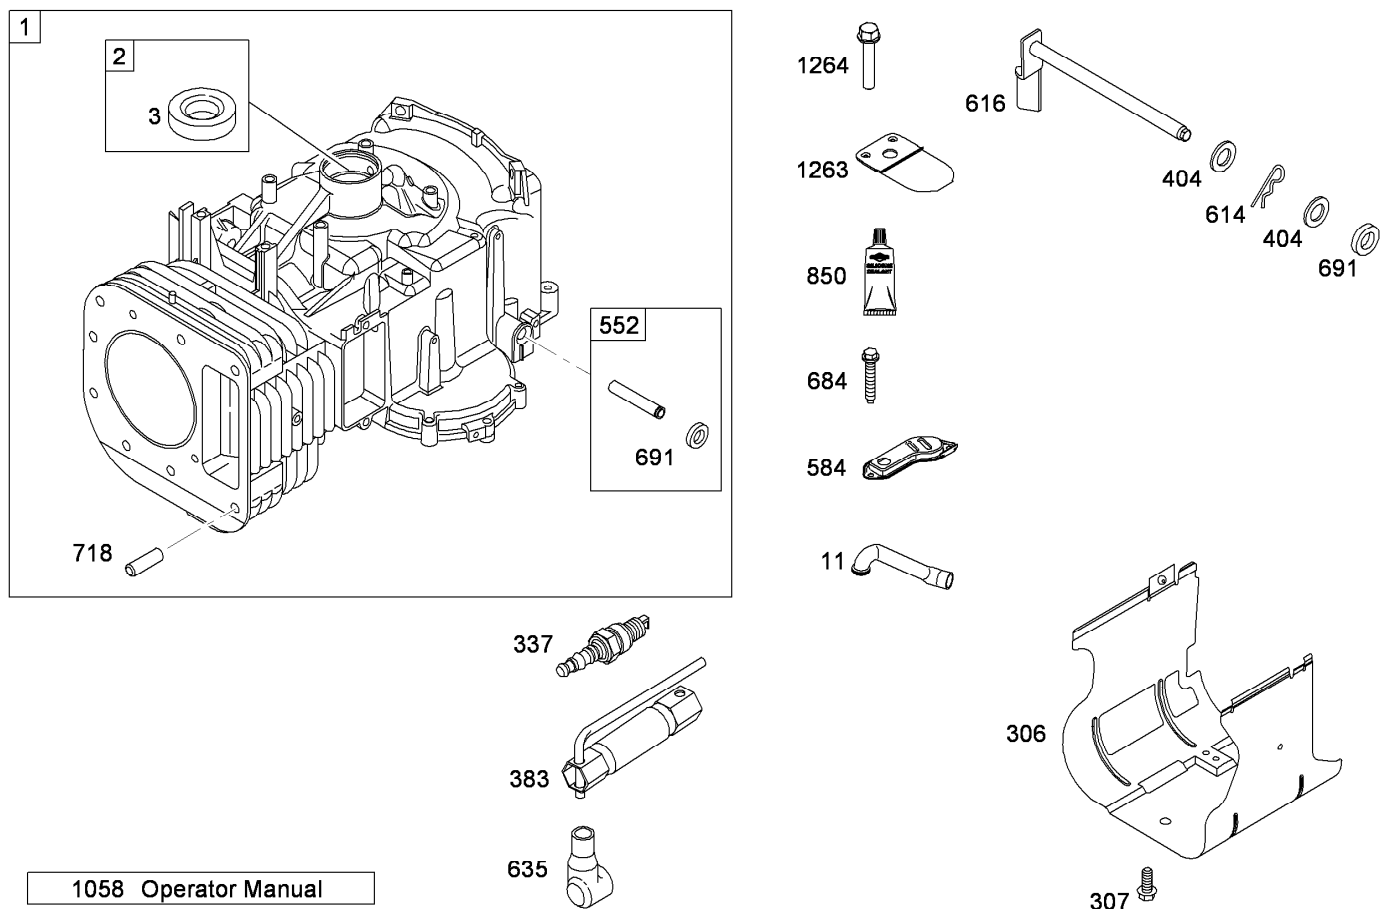

Assemblies include all parts shown in frames


Cylinder Assembly Briggs and Stratton Model 31E777-0130-E1

Ref.	Part Number	Qty.	Description
1	793987	1	Cylinder Asm ■
2	399265	1	Bushing And Seal Kit (Magneto Side) ■
3	391086s	1	Seal-Oil (Magneto Side) ■▲
11	794683	1	Tube-Breather ■
48	697762	1	Short Block ASM ■●
306	697107	1	Shield-Cylinder ■
307	691003	1	Screw (Cylinder Shield) ■
337	691043	1	Spark Plug ■
383	89838s	1	Wrench-Spark Plug ■
404	691691	1	Washer (Governor Crank) ■
552	697144	1	Bushing-Crank, Governor ■
584	794682	1	Cover-Passage, Breather ■
614	691620	1	Pin-Cotter ■
616	692012	1	Crank-Governor ■
635	691909	1	Boot-Spark Plug ■
684	697157	1	Screw (Breather Passage Cover) ■
691	692407	1	Seal-Shaft, Governor ■▲
718	690959	1	Pin-Locating ■
850	100100	1	Sealant-Liquid ■
1058	MS3788	1	Manual-Operator ■
1263	697124	1	Reed-Breather ■
1264	697104	1	Screw (Breather Reed) ■

● Not illustrated

▲ Included in Engine Gasket Set (Ref. No. 358)

■ Obtain parts from www.briggsandstratton.com

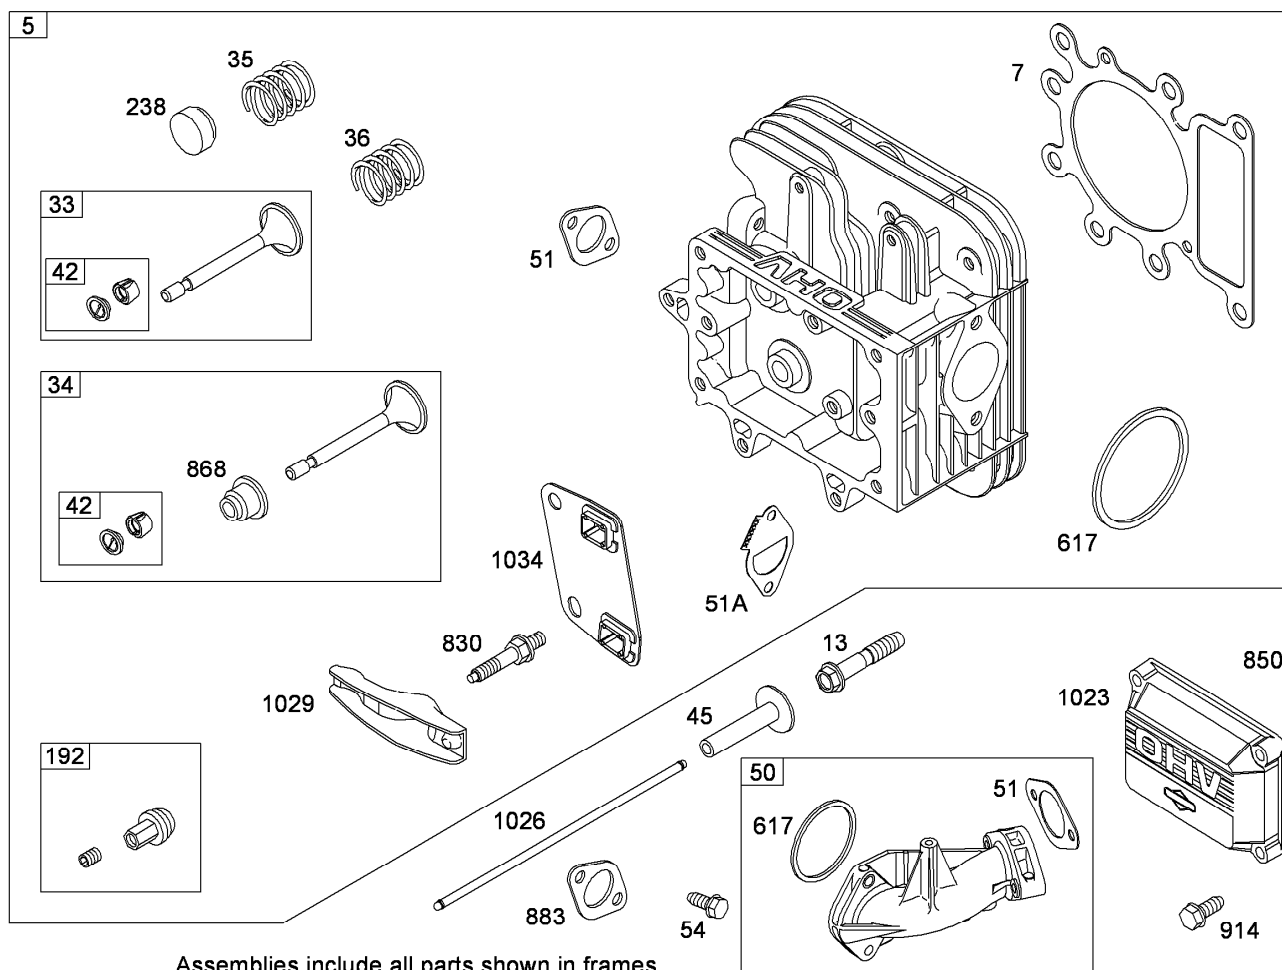


Cylinder Head Assembly

Briggs and Stratton Model 31E777-0130-E1

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
5	793989	1	Head-Cylinder ●	192	691986	1	Adjustor-Arm, Rocker ●
7	699168	1	Gasket-Head, Cylinder ●■	238	691843	1	Cap-Valve ●
13	793988	1	Screw (Cylinder Head Gasket) ●	617	692138	1	Seal-O Ring (Intake Manifold) ●◆■
33	791934	1	Valve-Exhaust ●	830	691095	1	Stud-Arm, Rocker ●
34	791935	1	Valve-Intake ●	850	100100	1	Sealant-Liquid ●
35	691279	1	Spring-Valve (Intake) ●	868	690968	1	Seal-Valve ●■▲
36	691279	1	Spring-Valve (Exhaust) ●	883	692236	1	Gasket-Exhaust ●
42	499586	1	Keeper-Valve ●	914	691108	1	Screw (Rocker Cover) ●
45	690564	1	Tappet-Valve ●	1023	791079	1	Cover-Rocker ●
50	690193	1	Manifold-Intake ●	1026	692003	1	Rod-Push (Intake) ●
51	692137	1	Gasket-Intake ●◆■▲	1026	692011	1	Rod-Push (Exhaust) ●
51A	794312	1	Gasket-Intake ●■	1029	691751	1	Arm-Rocker ●
54	691148	1	Screw (Intake Manifold) ●	1034	690822	1	Guide-Rod, Push ●

- Obtain parts from www.briggsandstratton.com
- ▲ Included in Valve Gasket Set (Ref. No. 1095)

■ Included in Engine Gasket Set (Ref. No. 358)
 ◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

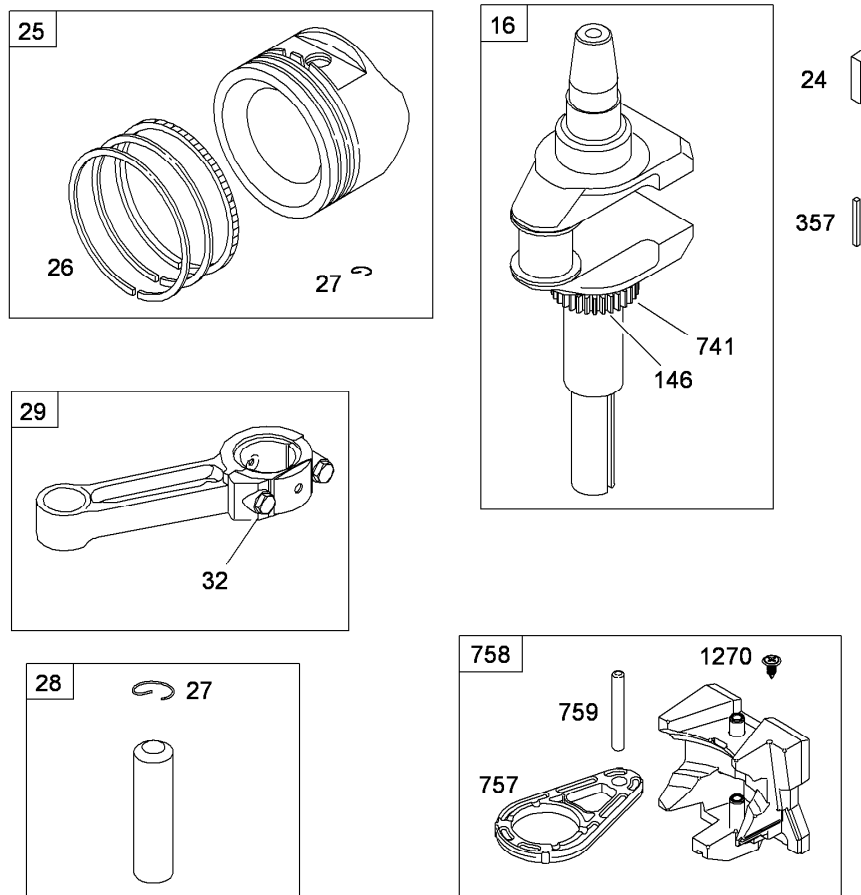


Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton Model 31E777-0130-E1

Ref.	Part Number	Qty.	Description
16	697127	1	Crankshaft ●
24	222698s	1	Key-Flywheel ●
25	792507	1	Piston Asm (Standard) ●
25	792648	1	Piston ASM (.020 Oversize) ●
26	791631	1	Ring Set (Standard) ●
26	792649	1	Ring Set (.020 Oversize) ●
27	698469	1	Lock-Pin, Piston ●
28	697099	1	Pin-Piston (Standard) ●
29	794122	1	Rod-Connecting (Standard) ●
32	791118	1	Screw (Connecting Rod) ●
146	691639	1	Key-Timing ●
357	691483	1	Key pulley , Drive ●
741	697128	1	Gear-Timing ●
757	793242	1	Link-Counterweight ●
758	697134	1	Counterweight ●
759	697392	1	Pin-Counterweight ●
1270	793243	1	Plug-Counterweight, A V S ●

● Obtain parts from www.briggsandstratton.com

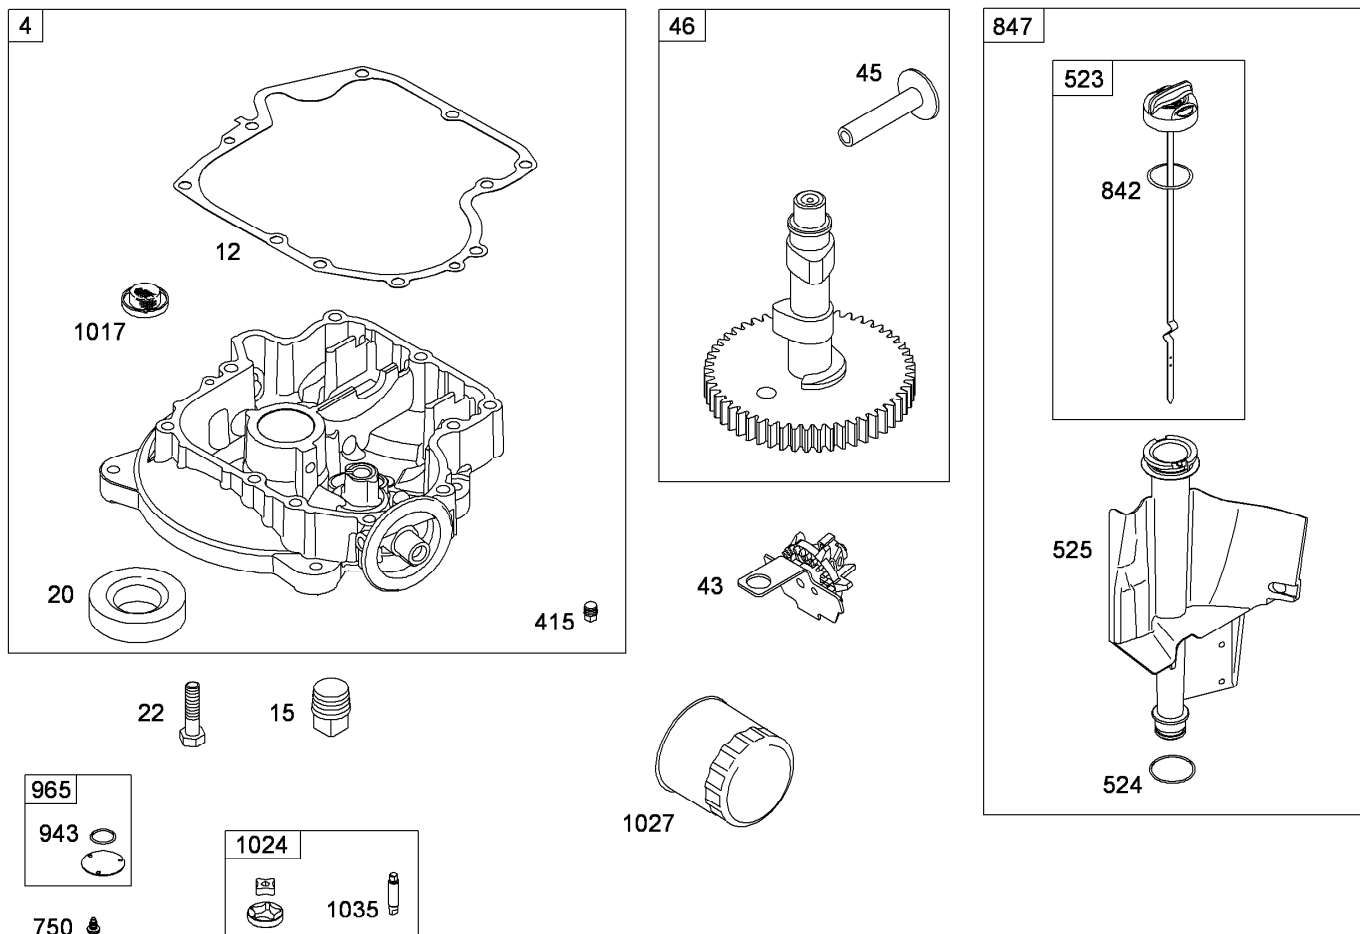


Assemblies include all parts shown in frames

Crankcase Assembly Briggs and Stratton Model 31E777-0130-E1

Ref.	Part Number	Qty.	Description
4	697188	1	Sump-Engine ●
12	697110	1	Gasket-Crankcase ●■
15	690946	1	Plug-Drain, Oil ●
20	791892	1	Seal-Oil (PTO Side) ●■
22	692125	1	Screw (Engine Sump) ●
43	691968	1	Slinger-Governor, Oil ●
45	690564	1	Tappet-Valve ●
46	793583	1	Camshaft ●
415	690283	1	Plug-Oil ●
523	699908	1	Dipstick ●
524	691032	1	Seal-O Ring (Dipstick Tube) ●■
525	697184	1	Tube-Dipstick ●
750	790832	1	Screw (Oil Pump Cover) ●
842	691031	1	Seal-O Ring (Dipstick) ●■
847	790442	1	Dipstick And Tube ASM ●
943	690589	1	Seal-Oil (Oil Pump Cover) ●■
965	499613	1	Cover-Pump, Oil ●
1017	690770	1	Screen-Pump, Oil ●
1024	499054	1	Pump-Oil ●
1027	492932s	1	Filter-Oil ●
1035	693784	1	Shaft-Pump, Oil ●

● Obtain parts from www.briggsandstratton.com

■ Included in Engine Gasket Set (Ref. No. 358)

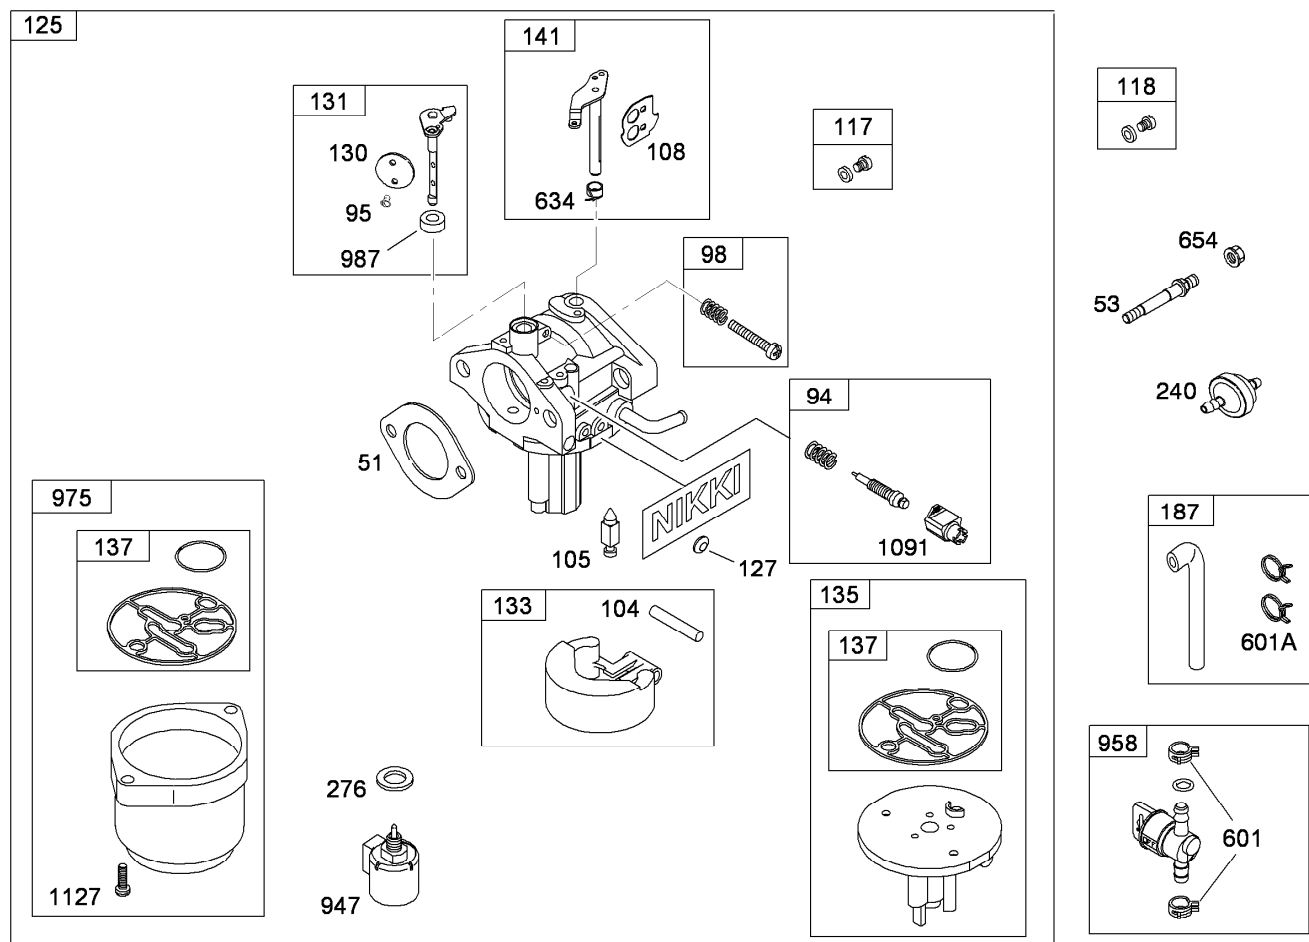

Assemblies include all parts shown in frames

Carburetor Assembly (Nikki) Briggs and Stratton Model 31E777-0130-E1

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
51	692137	1	Gasket-Intake ◻ ■ ◆ ▲	137	698780	1	Fuel Transfer Tube Asm ● ◻
53	690227	1	Stud (Carburetor) ●	141	698778	1	Choke Shaft Kit ●
94	695425	1	Idle Mixture Kit ●	187	791805	1	Line-Fuel (Cut To Required Length) ●
95	690718	1	Screw (Throttle Valve) ● ◻	240	394358s	1	Filter-Fuel ●
98	695408	1	Idle Speed Kit ●	276	695410	1	Washer-Sealing ●
104	694918	1	Pin-Hinge, Float ● ◻	601	691038	1	Clamp-Hose ●
105	696136	1	Valve-Float, Needle ● ◻	601A	791850	1	Clamp-Hose ●
108	695419	1	Valve-Choke ●	634	698779	1	Spring And Seal Asm ● ◻
117	699732	1	Jet-Main (Standard) ●	654	690958	1	Nut (Carburetor) ●
118	792358	1	Jet-Main (High Altitude) ●	947	699915	1	Solenoid, Fuel ●
125	792171	1	Carburetor ●	958	698183	1	Valve shut Off, Fuel ●
127	690727	1	Plug-Welch ● ◻	975	699502	1	Bowl-Float ●
130	699500	1	Valve-Throttle ●	987	698777	1	Seal-Shaft, Throttle ● ◻
131	699501	1	Throttle Shaft Kit ●	1091	691333	1	Cap-Limiter ●
133	694914	1	Carburetor Float ASM ●	1127	695407	1	Screw (Float Bowl) ●
135	792022	1	Tube-Transfer, Fuel ●				


● Obtain parts from www.briggsandstratton.com

▲ Included in Valve Gasket Set (Ref. No. 1095)

◻ Included in Carburetor Overhaul Kit (Ref. No. 121)

■ Included in Engine Gasket Set (Ref. No. 358)

◆ Included in Carburetor Gasket Set (Ref. No. 977)

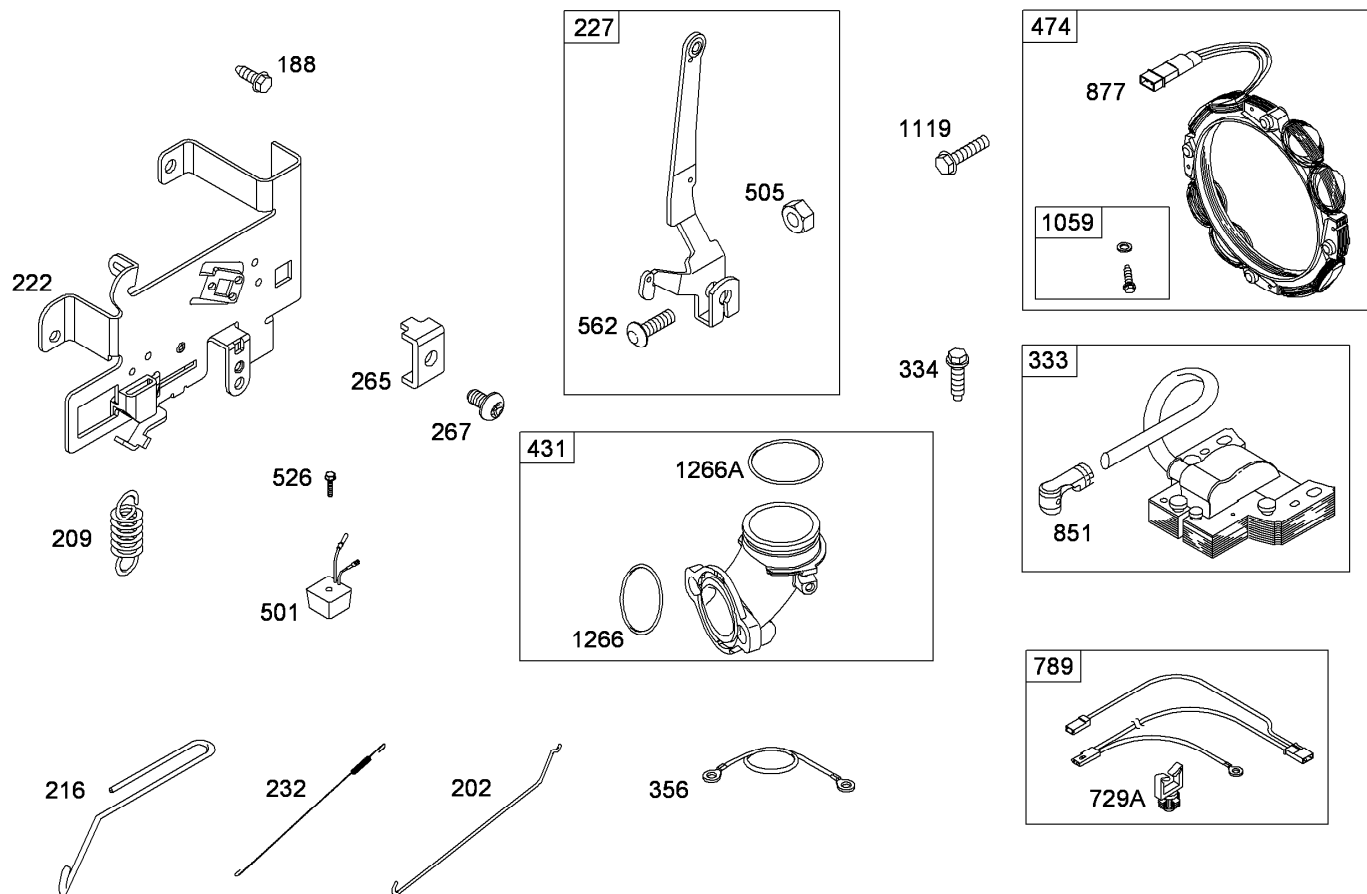


Assemblies include all parts shown in frames

Governor Assembly Briggs and Stratton Model 31E777-0130-E1

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
188	691693	1	Screw (Control Bracket) ●	501	691188	1	Regulator ●
202	691841	1	Link-Governor, Mechanical ●	505	691251	1	Nut (Governor Control Lever) ●
209	692208	1	Spring-Governor ●	526	697088	1	Screw (Regulator) ●
216	691840	1	Link-Choke ●	562	691119	1	Bolt (Governor Control Lever) ●
222	694042	1	Bracket-Control ●	729A	691335	1	Clip wire ●
227	691374	1	Lever-Control, Governor ●	789	692037	1	Wiring-Harness ●
232	691842	1	Spring-Link, Governor ●	851	493880s	1	Terminal-Spark Plug ●
265	691024	1	Clamp-Casing ●	877	393537	1	Connector-Wire, Tri Circuit ●
267	794904	1	Screw (Casing Clamp) ●	1059	698516	1	Screw And Washer Kit ●
333	492341	1	Armature-Magneto ●	1119	691183	1	Screw (Alternator) ●
334	691061	1	Screw (Magneto Armature) ●	1266	691917	1	Seal-O Ring (Intake Elbow) ●▲■
356	697089	1	Stop-Wire ●	1266A	697123	1	Seal-O Ring ●▲■●▲■
431	697122	1	Elbow-Intake ●				
474	696457	1	Alternator ●				

● Obtain parts from www.briggsandstratton.com
▲ Included in Carburetor Overhaul Kit (Ref. No. 121)

■ Included in Engine Gasket Set (Ref. No. 358)

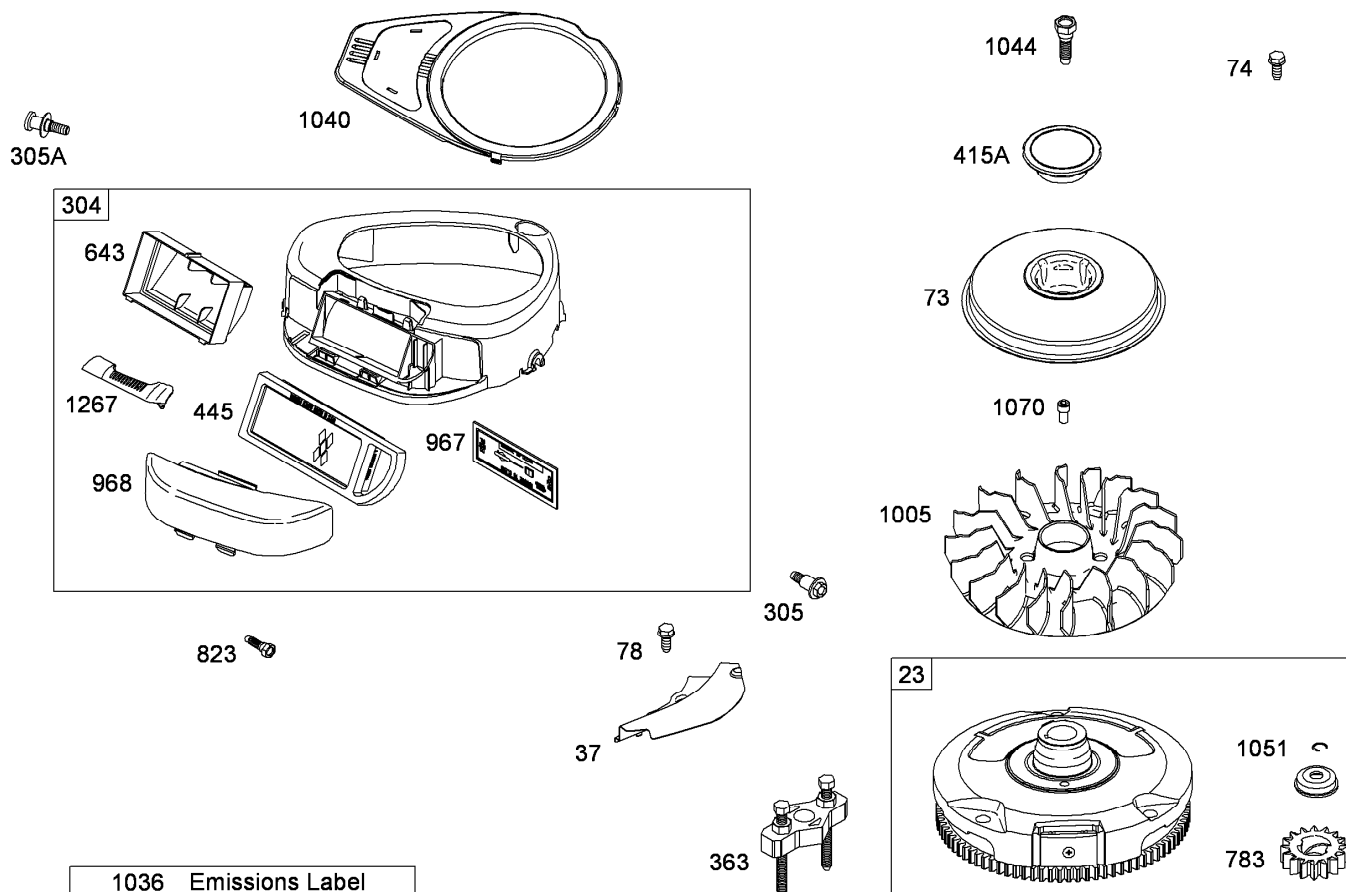


Assemblies include all parts shown in frames

Blower Housing Assembly Briggs and Stratton Model 31E777-0130-E1

Ref.	Part Number	Qty.	Description
23	693556	1	Flywheel ●
37	697352	1	Guard-Flywheel ●
73	794437	1	Screen-Rotating ●
74	697897	1	Screw (Rotating Screen) ●
78	691003	1	Screw (Flywheel Guard) ●
304	698599	1	Housing-Blower ●
305	697102	1	Screw (Blower Housing) ●
305A	793376	1	Screw (Blower Housing) ●
363	19203	1	Puller-Flywheel ●
415A	794129	1	Plug ●
445	698083	1	Filter-Cartridge, Air Cleaner ●
643	698401	1	Retainer-Filter, Air ●
783	693713	1	Gear-Pinion ●
823	698941	1	Screw (Muffler Adapter) ●
967	697015	1	Filter-Cleaner, Pre ●
968	698403	1	Cover cleaner , Air ●
1005	794438	1	Fan-Flywheel ●
1036		1	Label-Emissions ●
1040	699852	1	Plate-Trim ●
1044	698139	1	Screw (Crankshaft Extension) ●
1051	691265	1	Ring-Retaining ●
1070	690363	1	Screw (Flywheel Fan) ●
1267	697419	1	Latch-Housing, Blower ●

● Obtain parts from www.briggsandstratton.com

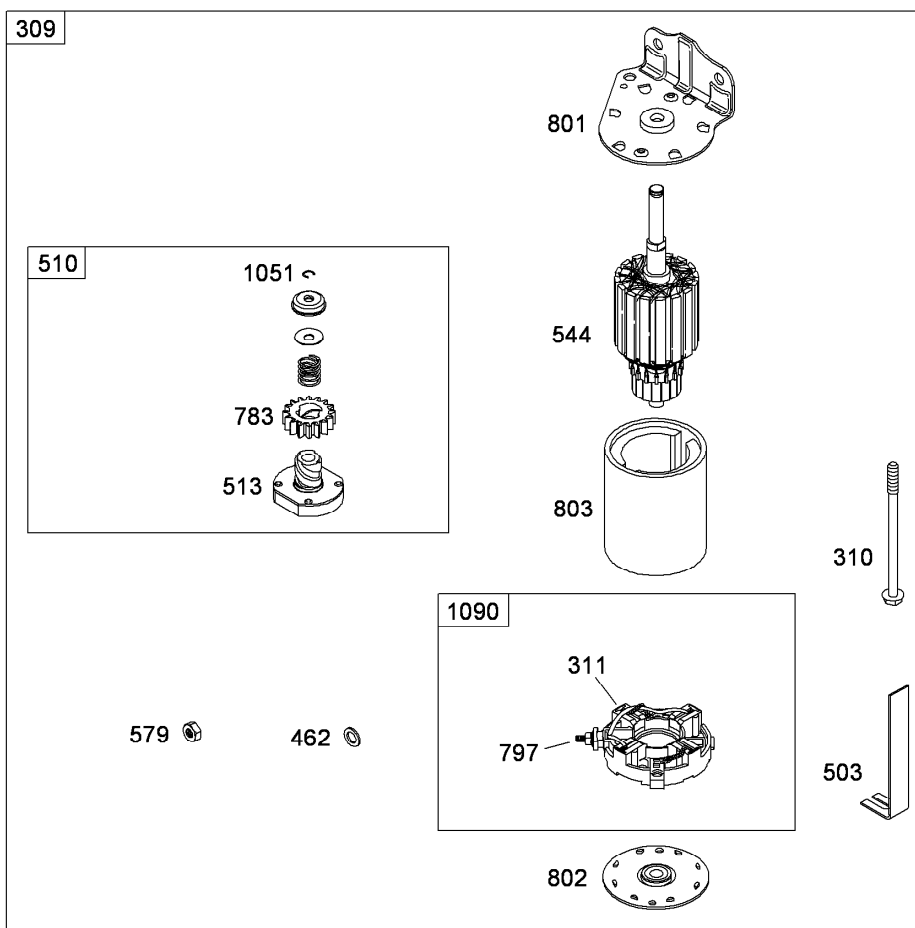



Assemblies include all parts shown in frames

Starter Assembly Briggs and Stratton Model 31E777-0130-E1

Ref.	Part Number	Qty.	Description
309	693551	1	Motor-Starter ■
310	690323	1	Bolt (Starter Motor) ■
311	497608	1	Brush Set ■
462	691261	1	Washer (Brush Retainer) ■
503	691532	1	Strap-Starter ■
510	693699	1	Drive-Starter ■
513	692024	1	Clutch-Drive ■
544		1	Armature-Starter (For Service Order 693551) ■ ●
579	691029	1	Nut (Brush Retainer) ■
697	690372	1	Screw (Drive Cap) ■
729	691224	1	Clip-Wire ■
783	693713	1	Gear-Pinion ■
797	693167	1	Nut (Brush Retainer) ■
801	691283	1	Cap-Drive ■
802	691286	1	Cap-End ■
803		1	Housing-Starter (For Service Order 693551) ■ ●
1051	691265	1	Ring-Retaining ■
1090	691293	1	Retainer-Brush ■

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com

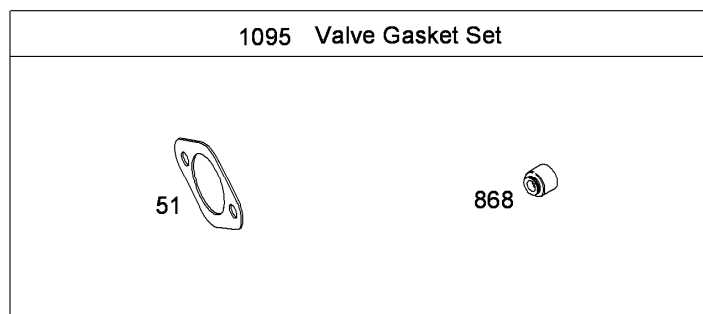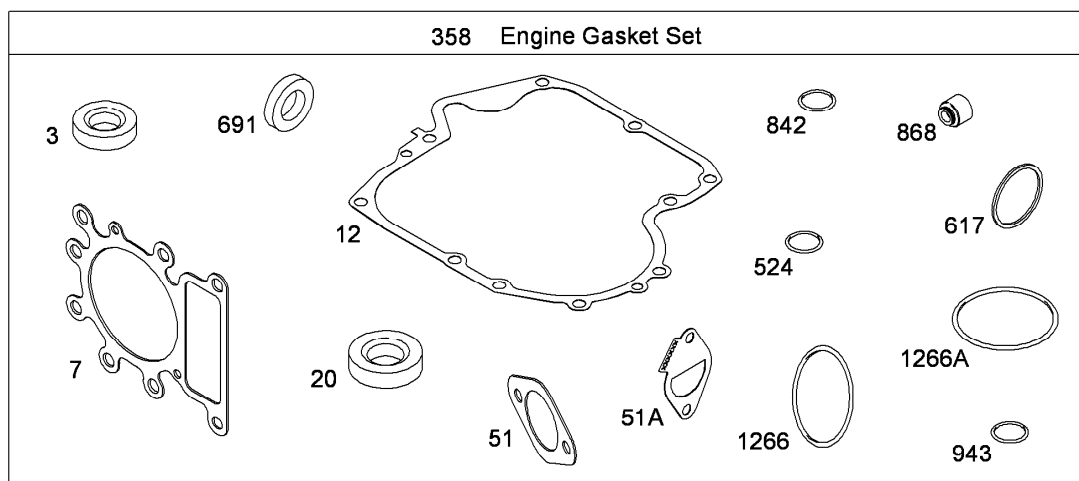

Assemblies include all parts shown in frames


Gasket Set

Briggs and Stratton Model 31E777-0130-E1

Ref.	Part Number	Qty.	Description
3	391086s	1	Seal-Oil (Magneto Side) ●■
7	699168	1	Gasket-Head, Cylinder ●■
12	697110		Gasket-Crankcase ●■
20	791892	1	Seal-Oil (PTO Side) ●■
51	692137	1	Gasket-Intake ●◆■▲
51A	794312	1	Gasket-Intake ●■
358	794150	1	Engine Gasket Set ●
524	691032	1	Seal-O Ring (Dipstick Tube) ●■
617	692138	1	Seal-O Ring (Intake Manifold) ●◆■
691	692407	1	Seal-Shaft, Governor ●■
842	691031	1	Seal-O Ring (Dipstick) ●■
868	690968	1	Seal-Valve ●■▲
943	690589	1	Seal-O Ring (Oil Pump Cover) ●■
1095	691581	1	Valve Gasket Set ●
1266	691917	1	Seal-O Ring (Intake Elbow) ●◆■
1266A	697123	1	Seal-O Ring (Intake Elbow) ●◆■

● Obtain parts from www.briggsandstratton.com
▲ Included in Valve Gasket Set (Ref. No. 1095)

■ Included in Engine Gasket Set (Ref. No. 358)
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

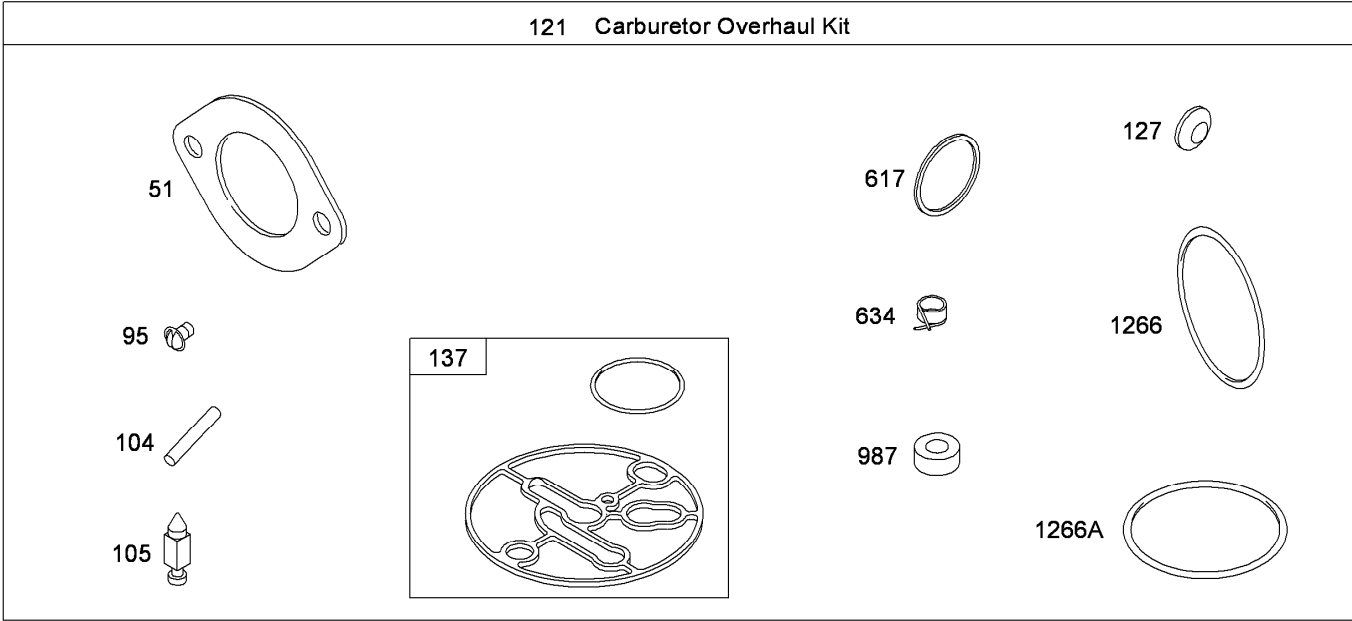

Assemblies include all parts shown in frames

Carburetor Overhaul Kit (Nikki) **Briggs and Stratton Model 31E777-0130-E1**

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
51	692137	1	Gasket-Intake ●◆■▲
95	690718	1	Screw (Throttle Valve) ●◆
104	694918	1	Pin-Hinge, Float ●◆
105	696136	1	Valve-Float, Needle ●◆
121	699521	1	Carburetor Overhaul Kit ●
127	690727	1	Plug-Welch ●◆
137	698781	1	Gasket-Bowl, Float ●◆
617	692138	1	Seal-O Ring (Intake Manifold) ●◆■
634	698779	1	Spring And Seal Asm ●◆
987	698777	1	Seal-Shaft, Throttle ●◆
1266	691917	1	Seal-O Ring (Intake Elbow) ●◆■
1266A	697123	1	Seal-O Ring (Intake Elbow) ●◆■

● Obtain parts from www.briggsandstratton.com
 ▲ Included in Valve Gasket Set (Ref. No. 1095)

■ Included in Engine Gasket Set (Ref. No. 358)
 ◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

