



Form No. 3375-959 Rev A

Count on it.

Parts Catalog

STX-38

Stump Grinder

Model No. 23212—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Frame Assembly..... 4

Track Assembly 5

Hydraulic Motor Assembly No. 121-1957..... 7

Engine, Gear Pump and Idler Arm Assembly..... 8

Traction Control Assembly 10

Parking Brake Assembly..... 12

Cutter Head Assembly..... 13

Tower Assembly 15


Control Valve Assembly No. 119-4585 17

Cooler Assembly 18

Hydraulic Routing Assembly..... 20

Electrical Assembly 22


Two-Button Handle Grip Assembly No. 119-4587..... 24

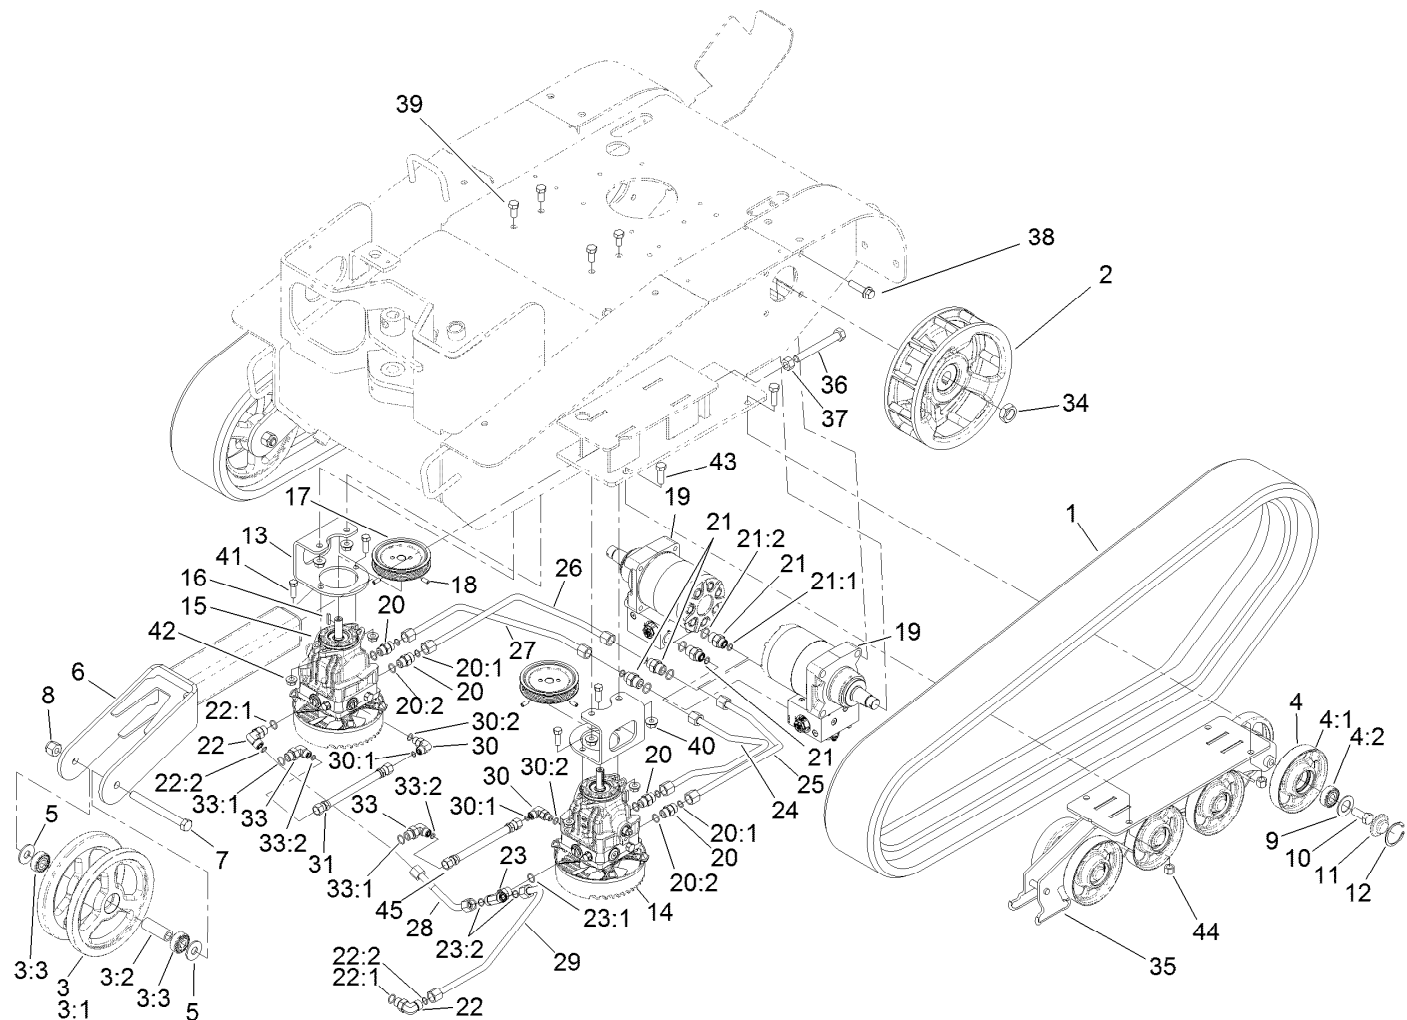

Track Assembly

Ref.	Part Number	Qty.	Description
1	121-1021	2	Track-Rubber
2	117-6426-03	2	Wheel-Drive
3	104-5745	2	Tensioner Wheel ASM
3:1	104-5747-03	1	Wheel-Tensioner
3:2	98-9835	1	Spacer-Wheel, Tensioner
3:3	120-5378	2	Bearing-Ball
4	112-4817	16	Wheel-Tensioner
4:1	114-3014-03	1	Wheel-Track
4:2	120-5378	1	Bearing-Ball
5	3256-7	4	Washer-Flat
6	121-1018-03	2	Arm-Tensioner
7	327-17	2	Screw-HH
8	3296-24	2	Nut-Lock, NI
9	106-7585	16	Gasket-Bogie
10	327-4	16	Screw-HH
11	106-7557	16	Cap-Wheel, Bearing
12	106-7595	16	Ring-Snap, Internal
13	115-1289-01	2	Bracket-Mount, Pump
14	121-1953	1	Pump-HYD, LH
15	121-1954	1	Pump-HYD, RH
16	80-6090	2	Key-Pump


Ref.	Part Number	Qty.	Description
17	109-2202	2	Sheave
18	3246-6	4	Screw-Set, HSH
19	121-1957	2	HYD Motor ASM
20	340-4	4	Fitting-HYD, Straight
20:1	237-30	1	O-Ring
20:2	237-79	1	O-Ring
21	340-6	4	Fitting-HYD, Straight
21:1	237-30	1	O-Ring
21:2	237-80	1	O-Ring
22	340-98	2	Fitting-HYD, 90 DEG
22:1	237-79	1	O-Ring
22:2	237-30	1	O-Ring
23	340-157	1	Fitting-HYD, Tee
23:1	237-79	1	O-Ring
23:2	237-30	2	O-Ring
24	121-1124	1	Tube-HYD
25	121-1125	1	Tube-HYD
26	121-1126	1	Tube-HYD
27	121-1127	1	Tube-HYD
28	121-1198	1	Tube-HYD
29	121-1130	1	Tube-HYD

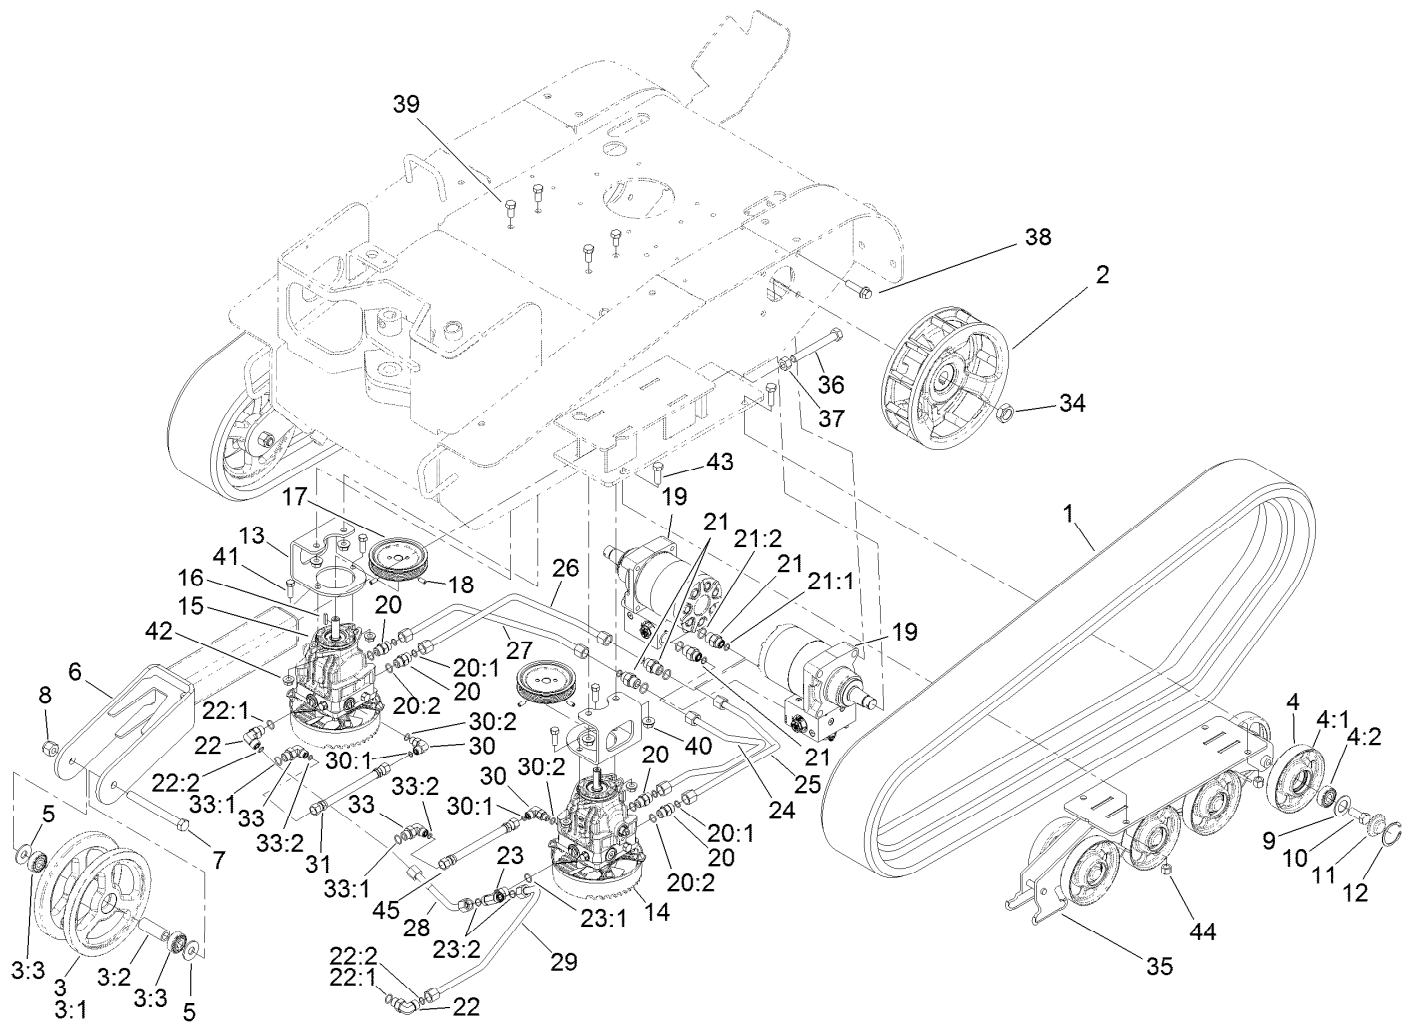

Track Assembly (continued)

Ref.	Part Number	Qty.	Description
30	340-77	2	Fitting-HYD, 90 DEG
30:1	237-22	1	O-Ring
30:2	237-42	1	O-Ring
31	94-4712	1	Hose-HYD
33	340-18	2	Fitting-HYD, 90 DEG
33:1	237-79	1	O-Ring
33:2	237-22	1	O-Ring
34	106-8159	2	Nut-Lock
35	121-0883-01	2	Mount-Wheel
36	125-0357	2	Screw-HH, TAP

Ref.	Part Number	Qty.	Description
37	3217-11	2	Nut-Hex
38	3234-27	8	Screw-HHF
39	325-4	4	Screw-HH
40	32128-49	4	Nut-HHF
41	324-5	4	Screw-HH
42	32128-42	4	Nut-HF
43	325-6	8	Screw-HH
44	3296-23	8	Nut-Lock, NI
45	76-9420	1	Hose-HYD

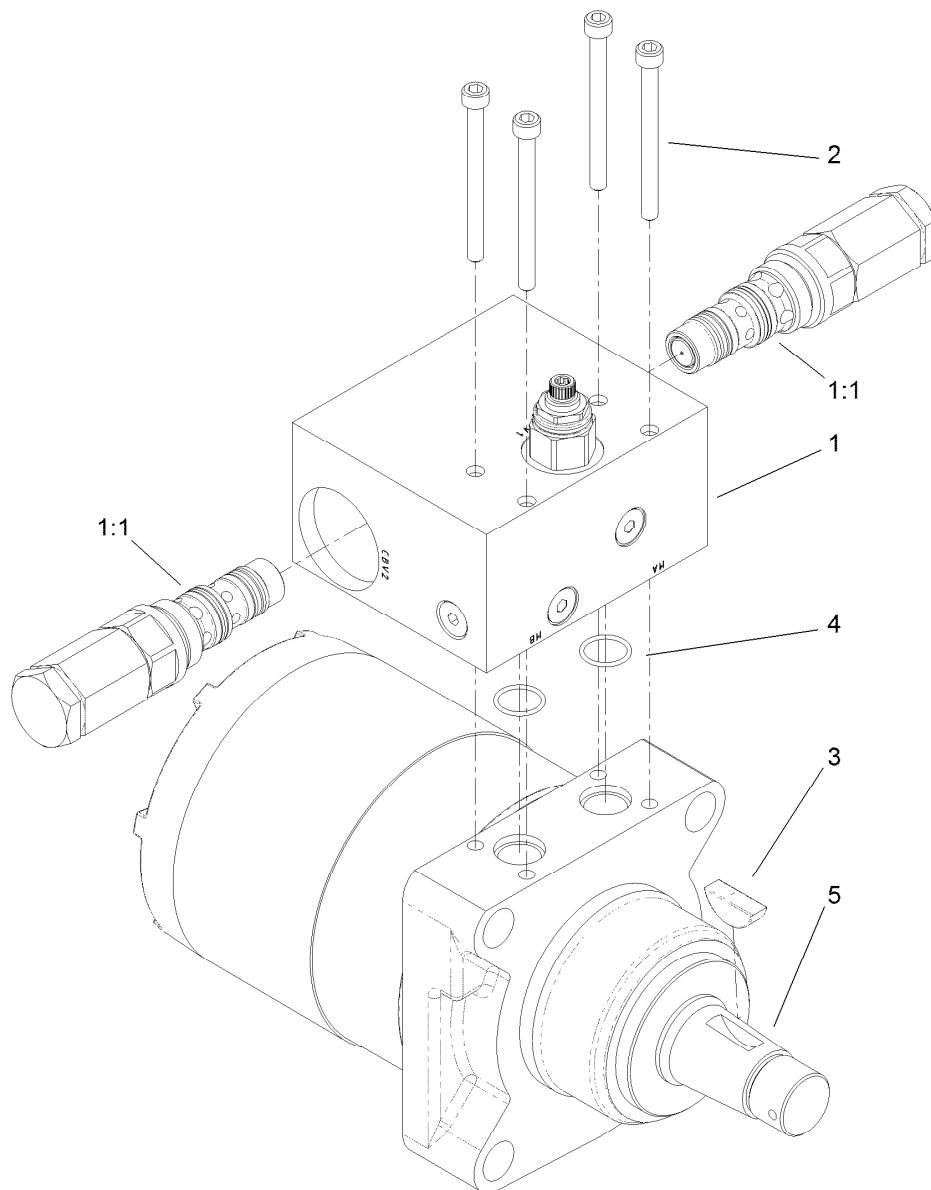


Hydraulic Motor Assembly No. 121-1957

Ref.	Part Number	Qty.	Description
1	121-4464	1	Counterbalance Valve ASM
1:1	121-4463	2	Cartridge-Cb
2	119-4611	4	Bolt-HSH
3	3257-42	1	Key-Woodruff
4	120-0691	2	O-Ring
5	76-0860	1	Shaft-Coupling
6	100-6131	1	Seal Kit (HYD Motor) ●

● Not illustrated

Engine, Gear Pump and Idler Arm Assembly

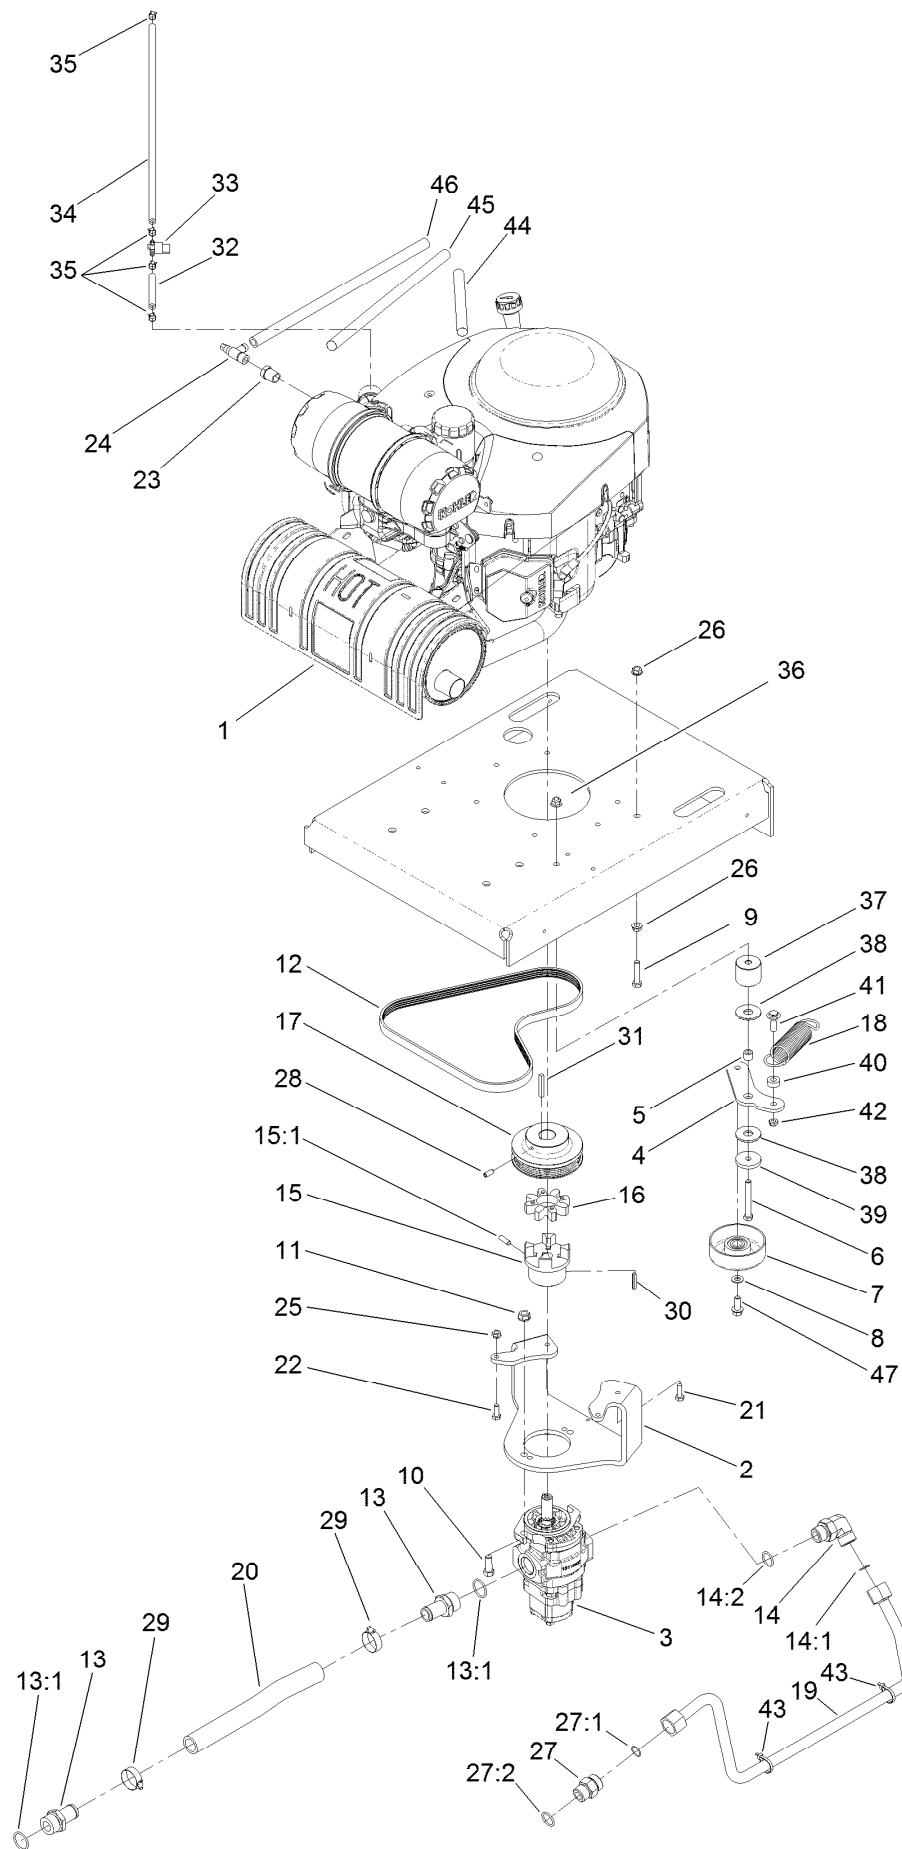


Engine, Gear Pump and Idler Arm Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Kohler, Cv980 ●■	24	103-1965	1	Valve-Drain, Oil
2	114-2912-01	1	Mount-Pump	25	32128-20	2	Nut-HF
3	121-1952	1	Gear Pump ASM	26	3290-357	2	Nut-HHF, Whiz
4	125-0252	1	Arm-Idler	27	340-9	1	Fitting-HYD, Straight
5	1-413088	1	Bushing-Lever, Lift	27:1	237-58	1	O-Ring
6	323-14	1	Screw-HH	27:2	237-81	1	O-Ring
7	95-8802	1	Pulley-Idler	28	3246-6	2	Screw-Set, HSH
8	3256-24	1	Washer-Flat	29	2412-34	2	Clamp-Hose
9	323-9	1	Screw-HH	30	27-8590	1	Key-Square
10	324-5	2	Screw-HH	31	608006	1	Key-Square
11	32128-37	2	Nut-HF	32	109-0295	1	Hose-Fuel
12	121-4326	1	Belt-V	33	1-603770	1	Valve-Fuel
13	354-78	2	Connector-Hose	34	110-1872	1	Hose-Fuel
13:1	237-146	1	O-Ring	35	2412-98	4	Clamp-Hose
14	340-142	1	Fitting-HYD, 90 DEG	36	104-8301	1	Nut-Flange, NI
14:1	237-58	1	O-Ring	37	125-0251	1	Spacer-Idler
14:2	237-81	1	O-Ring	38	114-0463	2	Washer-Friction, Composite
15	121-4330	1	Hub-Coupler	39	110-9981	1	Washer-Plain
15:1	100-7594	1	Screw-Set	40	104-8426	1	Spacer
16	104-3542	1	Spider	41	614672	1	Bolt-Shoulder
17	121-1028	1	Pulley-Engine	42	3296-59	1	Nut-Lock, NI
18	105-6992	1	Spring-Extension	43	3290-379	2	Tie-Cable
19	121-1128	1	Tube-HYD	44	121-4403	1	Sleeve-Thermal,
20	121-4340	1	Hose-Suction	45	121-4404	1	Sleeve-Thermal,
21	33114-025	4	Screw-HH	46	98-4667	1	Hose
22	322-4	2	Screw-HH	47	3234-11	1	Screw-HHF
23	103-1390	1	Bushing				

● Not serviced separately


■ Obtain parts from www.kohlerplus.com

Traction Control Assembly

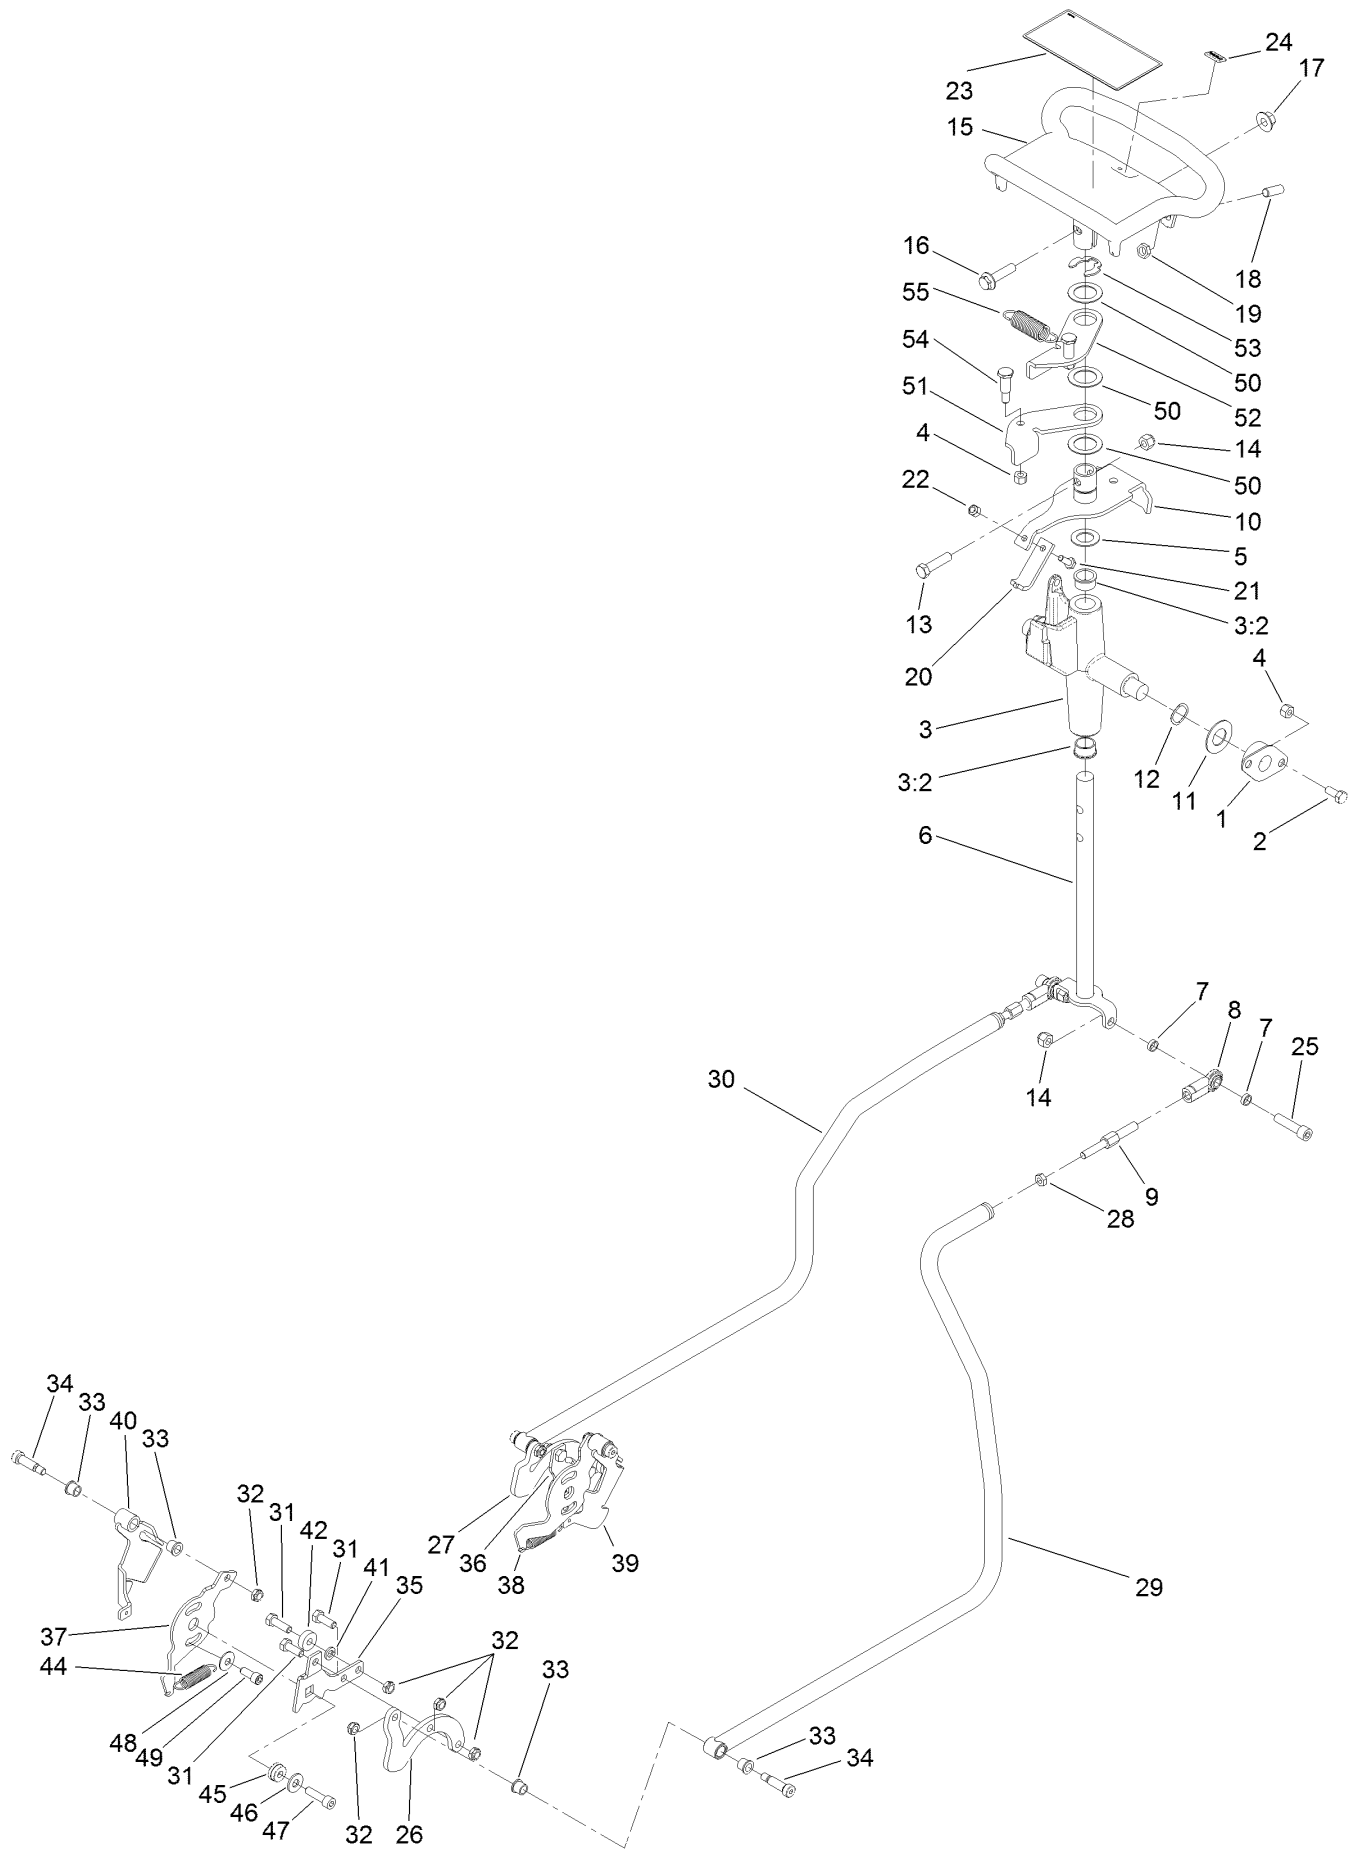


Traction Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	68-2970	2	Bushing	28	3220-2	2	Nut-Jam
2	322-3	4	Screw-HH	29	121-1108	1	LH Control Rod ASM
3	106-5737	1	Control Support ASM	30	121-1109	1	RH Control Rod ASM
3:2	256-252	2	Bearing-Flange	31	322-4	6	Screw-HH
4	3296-29	6	Nut-Lock, NI	32	3296-47	10	Nut-Lock, NI
5	257-8	1	Washer-Thrust	33	256-116	8	Bushing-Flange
6	117-6335	1	Rod-Drive	34	114-8629	4	Bolt-Shoulder
7	108-0634	4	Spacer-Plate, Retaining	35	115-6628	1	Plate-Arm, Return, LH
8	103-1167	2	Joint-Ball End, LH	36	115-6536	1	Plate-Arm, Return
9	117-6334	2	Link-Control, Adjustment	37	115-6549	1	Plate-Base, LH
10	112-2783	1	Lever-Pivot	38	115-6535	1	Plate-Base, RH
11	3256-39	2	Washer-Flat	39	115-6636	1	Pivot-RH
12	95-3703	2	Washer-Spring, Wave	40	115-6637	1	Pivot-LH
13	323-8	1	Screw-HH	41	3253-4	2	Washer-Lock
14	3296-39	3	Nut-Lock, NI	42	251-259	2	Bearing-Ball
15	106-7614-03	1	Handle-Control	44	121-4409	2	Spring-Extension
16	3234-18	1	Screw-HHF	45	117-6429	2	Lock-Trunion
17	32128-43	1	Nut-Flange	46	3256-3	2	Washer-Flat
18	3247-6	2	Screw-Set	47	94-3559	2	Screw-HSH
19	3218-3	2	Nut-Jam	48	3290-456	2	Washer-Belleville
20	115-1204	1	Plate-Neutral	49	3273-14	2	Screw-HSH
21	321-4	1	Screw-HH	50	108-9743	3	Washer-Plain
22	3296-42	1	Nut-Lock, NI	51	98-8407	1	Lever-Return, RH
23	115-4020	1	Decal-Traction	52	98-8408	1	Lever-Return, LH
24	98-1459	1	Decal	53	32151-91	1	Ring-Retaining
25	3274-2	2	Screw-HSH	54	63-2650	2	Screw-Shoulder
26	121-1123	1	Plate-Control, LH	55	108-4724	1	Spring-Extension
27	121-1122	1	Plate-Control, RH				

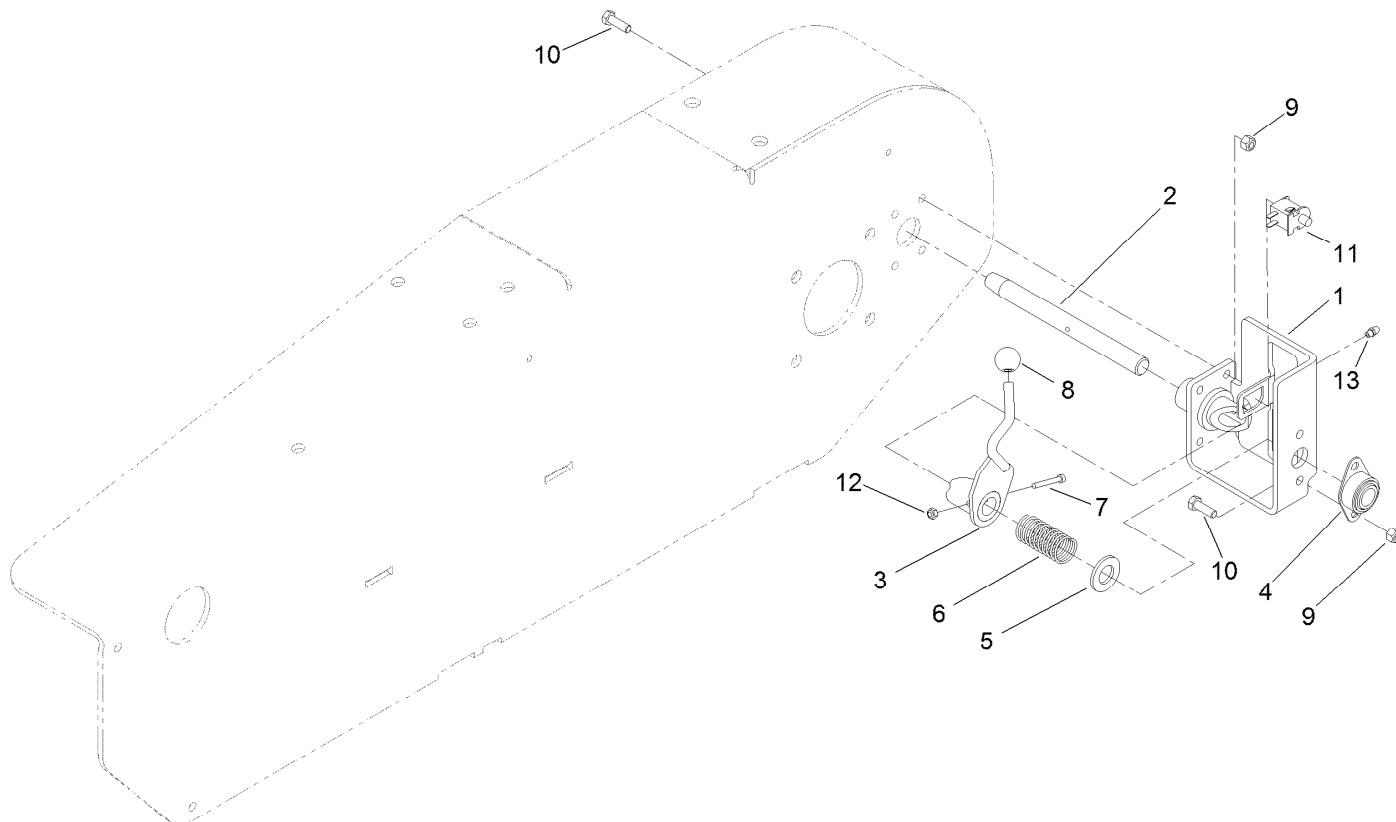

Parking Brake Assembly


Ref.	Part Number	Qty.	Description
1	125-0259-03	1	Bracket-Brake
2	121-4352	1	Shaft-Brake
3	121-4356-03	1	Handle-Brake
4	68-2970	1	Bushing
5	3256-28	1	Washer-Flat
6	125-0344	1	Spring-Comperssion
7	3274-59	1	Screw-HSH
8	233-69	1	Knob
9	3296-29	6	Nut-Lock, NI
10	322-5	6	Screw-HH
11	740275	1	Switch
12	3296-2	1	Nut-Lock, NI
13	302-5	1	Fitting-Grease

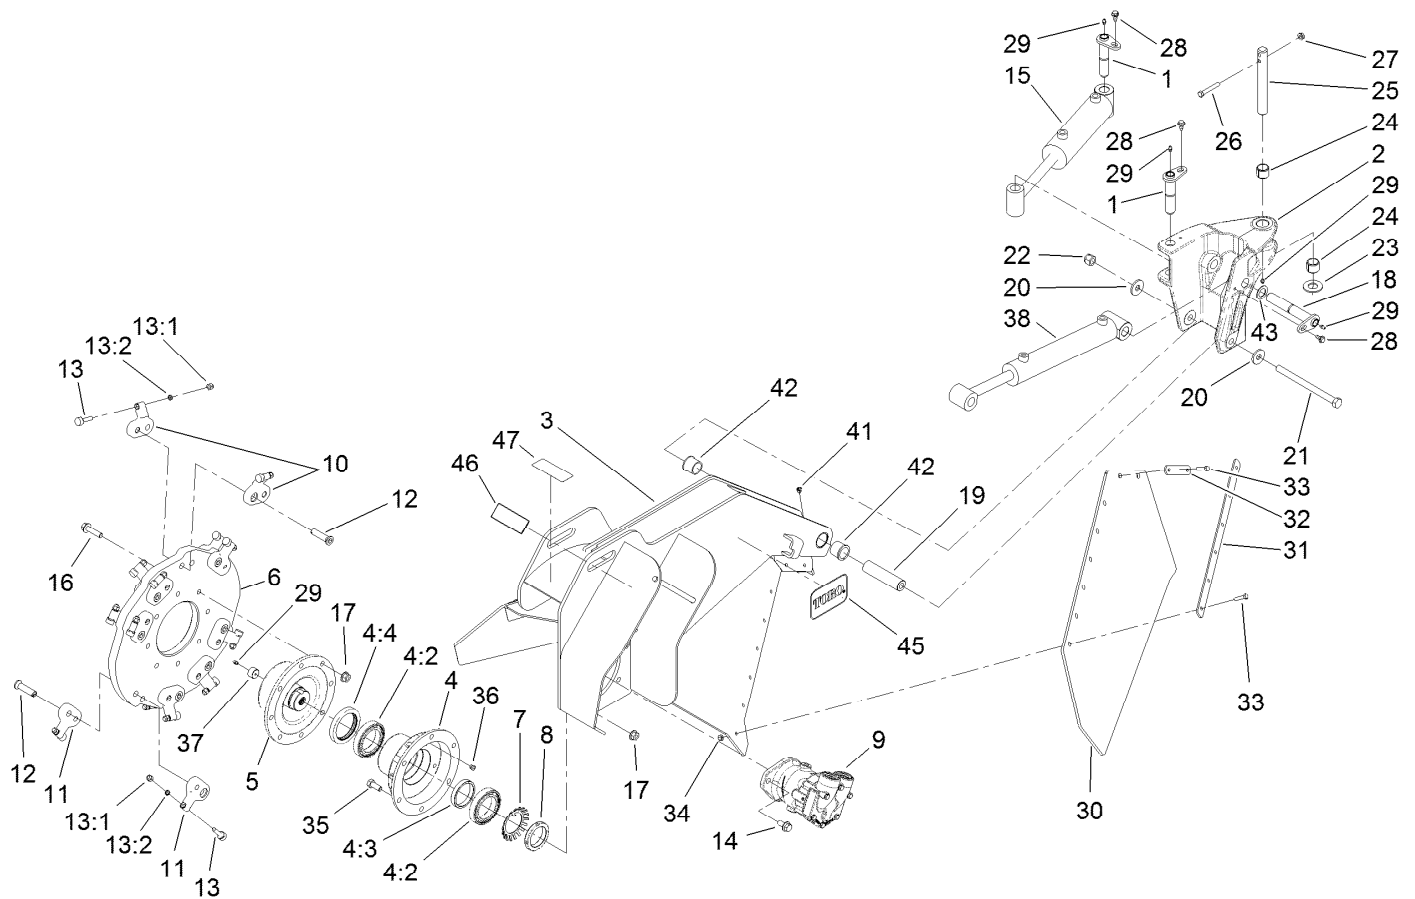

Cutter Head Assembly

Ref.	Part Number	Qty.	Description
1	121-1113	2	Pin-Pivot
2	121-0871-01	1	Head-Pivot
3	121-4440-01	1	Head-Grinder
3	121-4533	1	Head-Grinder
4	121-4458	1	Wheel Bearing Housing ASM
4:2	121-4378	2	Bearing-Ball
4:3	121-0872	1	Spacer-Bearing
4:4	121-4379	1	Seal-Grease
5	121-4337	1	Shaft-Cutter
6	121-1012-03	1	Plate-Wheel, Cutter
7	104-5915	1	Washer-Lock, Bearing
8	104-1973	1	Nut-Lock, Bearing
9	121-4325	1	HYD Motor ASM
10	115-9384	12	Pocket-Angled
11	115-9388	4	Pocket-Straight
12	121-4318	16	Bolt-HSH
13	115-9385	16	Grinder Tooth ASM
13:1	3296-39	1	Nut-Lock, NI
13:2	121-4365	1	Spacer-Tooth
14	3234-6	2	Screw-HHF


Ref.	Part Number	Qty.	Description
15	121-1956	1	HYD Cylinder ASM
16	3234-27	8	Screw-HHF
17	32128-49	14	Nut-HHF
18	121-0860	2	Pin-Pivot
19	121-1101	1	Spacer-Pivot
20	104-9216	2	Washer-Hardened
21	117-6327	1	Bolt-HH
22	3296-53	1	Nut-Lock, NI
23	256-121	1	Washer-Thrust
24	98-4871	2	Bushing-Tension
25	121-1112	1	Pin-Pivot, Grinder
26	323-47	1	Screw-HH
27	3290-357	1	Nut-HHF, Whiz
28	99-5105	4	Bolt-Shoulder
29	302-5	6	Fitting-Grease
30	121-4449	2	Shield-Rubber
31	121-4332-03	2	Strap-Retainer
32	121-4333-03	2	Strap-Retainer
33	322-6	16	Screw-HH
34	3296-29	16	Nut-Lock, NI
35	325-5	6	Screw-HH

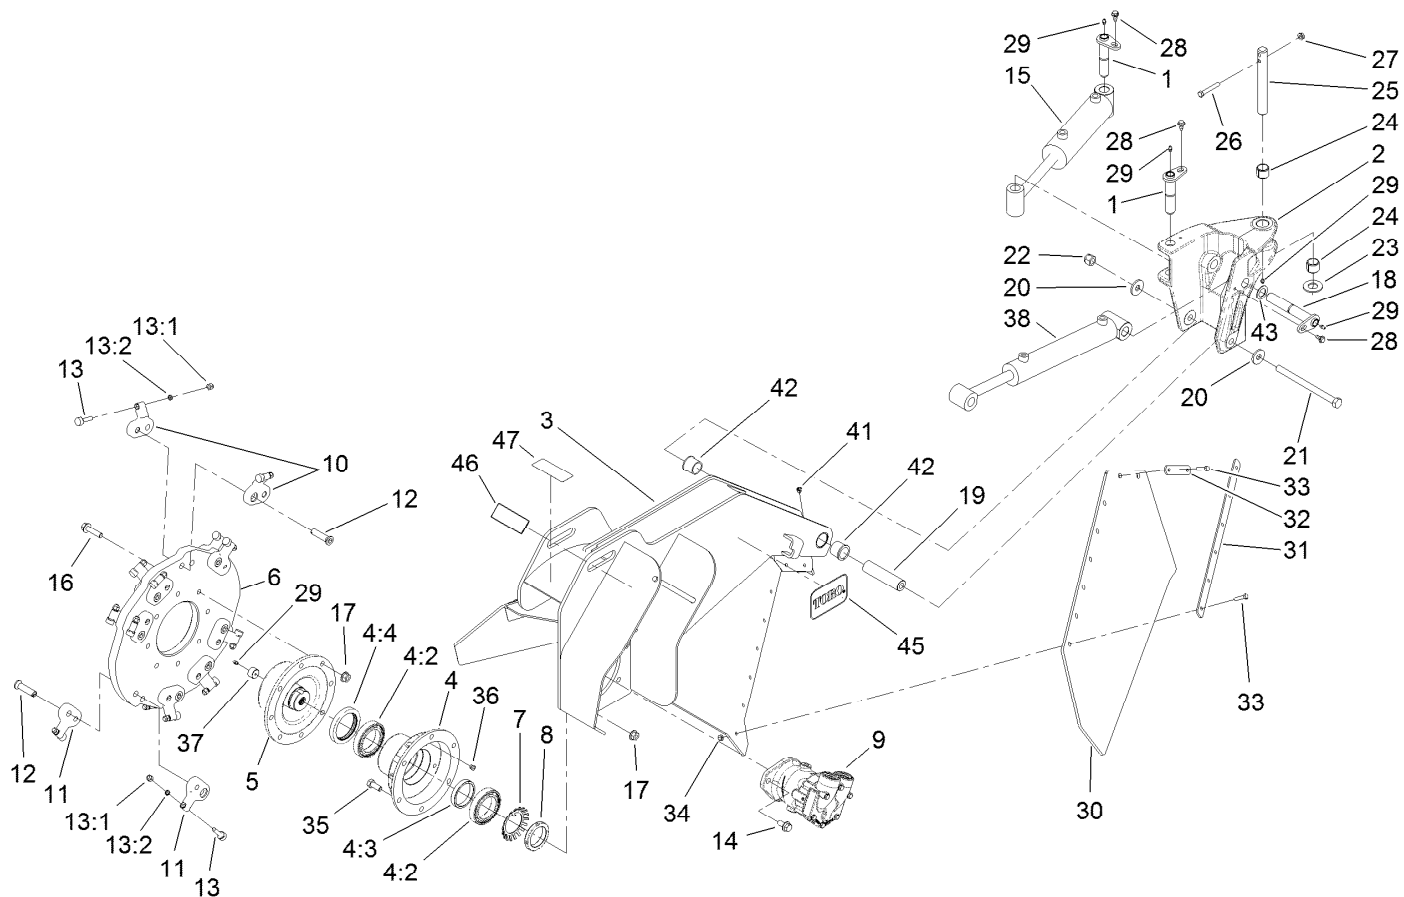

Cutter Head Assembly (continued)

Ref.	Part Number	Qty.	Description
36	302-34	1	Fitting-Lube
37	121-0875	1	Plug-Shaft, Cutter
38	121-1955	1	HYD Cylinder ASM
41	302-11	1	Fitting-Lube, 45 DEG
42	104-0015	2	Bushing-Flange


Ref.	Part Number	Qty.	Description
43	75-9180	1	Washer-Rubber
45	104-3989	2	Decal
46	93-7321	2	Decal-Danger
47	107-9366	1	Decal-Warning

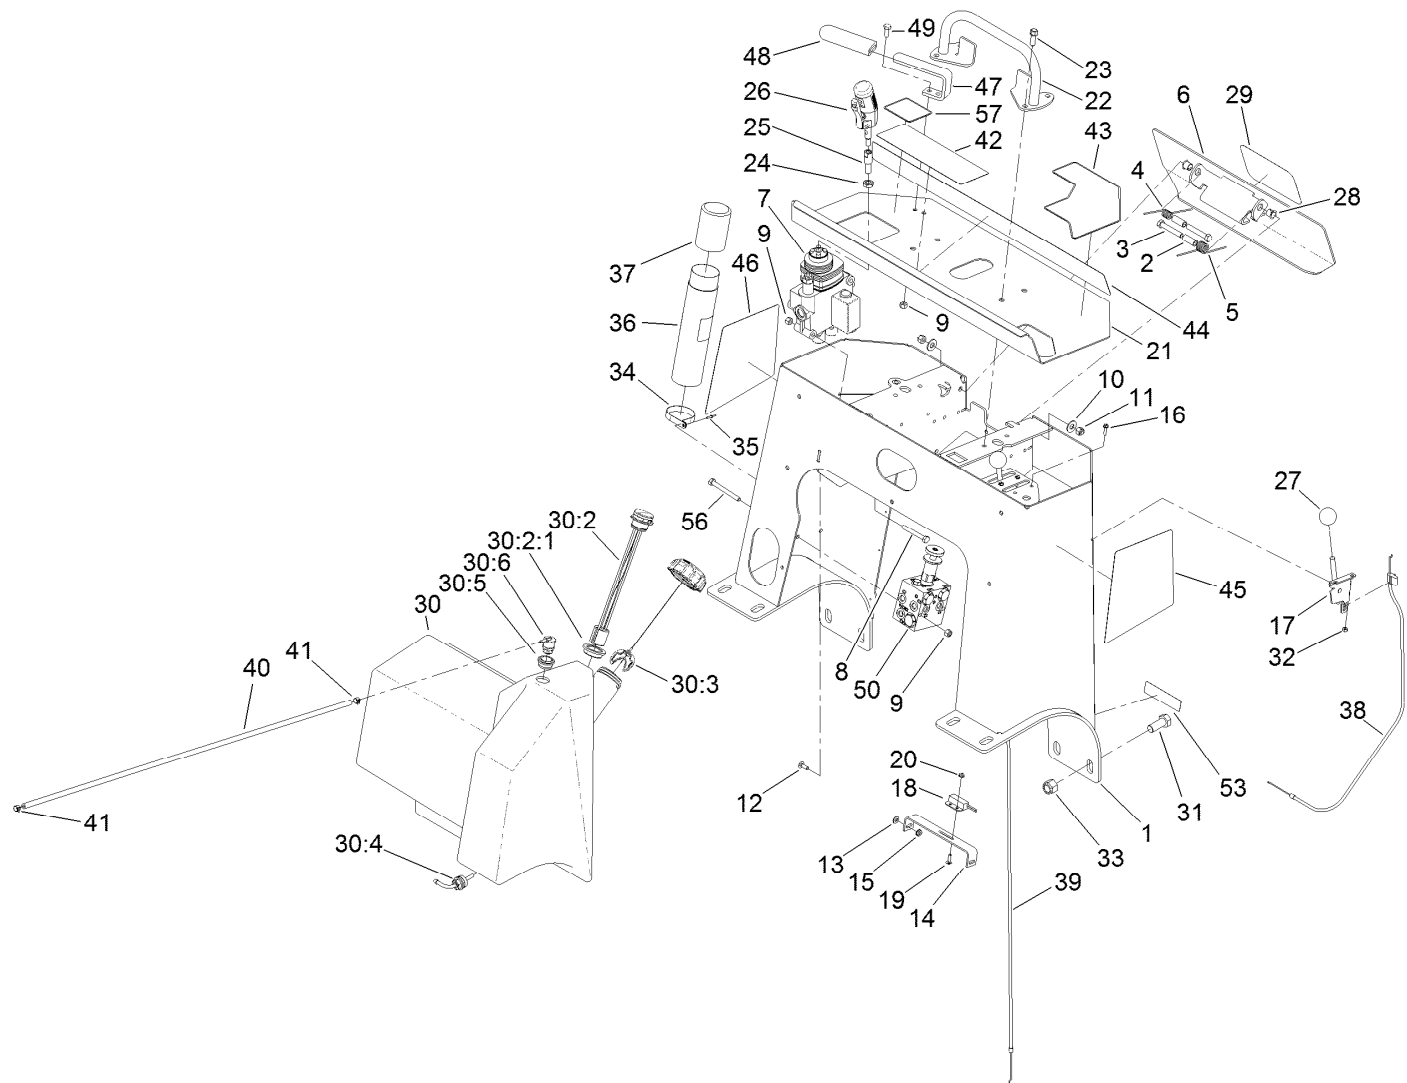

Tower Assembly

Ref.	Part Number	Qty.	Description
1	121-1150-01	1	Tower
2	114-1337	2	Spacer-Spring
3	323-11	2	Screw-HH
4	98-8425	1	Spring-Torsion, LH
5	98-8424	1	Spring-Torsion, RH
6	121-1110-03	1	Plate-Backup
7	119-4585	1	HYD Valve ASM
8	322-12	3	Screw-HH
9	3296-29	7	Nut-Lock, NI
10	3256-4	2	Washer-Flat
11	3296-39	2	Nut-Lock, NI
12	3229-1	2	Bolt-CARR
13	3256-22	2	Washer-Flat
14	100-1263	1	Plate-Switch
15	32149-2	2	Nut-Keps
16	32105-13	4	Screw-HWH
17	108-9730	2	Lever-Control
18	100-1270	1	Switch-Proximity
19	3229-20	2	Screw-CARR
20	32149-7	2	Nut-Keps
21	121-4534	1	Cover-Control


Ref.	Part Number	Qty.	Description
22	106-7715	1	Bar-Reference
23	95-1726	4	Screw-Taptite
24	51-2070	1	Nut
25	119-5103	1	Adapter-Handle
26	119-4587	1	Two Button Handle Grip ASM
27	233-42	2	Knob
28	256-257	2	Bushing-Nyliner
29	105-1217	1	Decal
30	121-4350	1	Fuel Tank ASM
30:2	117-8362	1	Guage-Fuel
30:2:1	117-8403	1	Seal
30:3	115-7788	1	Cap-Fuel
30:4	103-2605	1	Fitting-Fuel, Bulkhead
30:5	114-0284	1	Grommet
30:6	114-0285	1	Valve-Rollover
31	327-4	8	Screw-HH
32	3296-2	4	Nut-Lock, NI
33	3296-53	8	Nut-Lock, NI
34	2412-120	2	Clamp-R
35	3269-17	2	Rivet-Pop

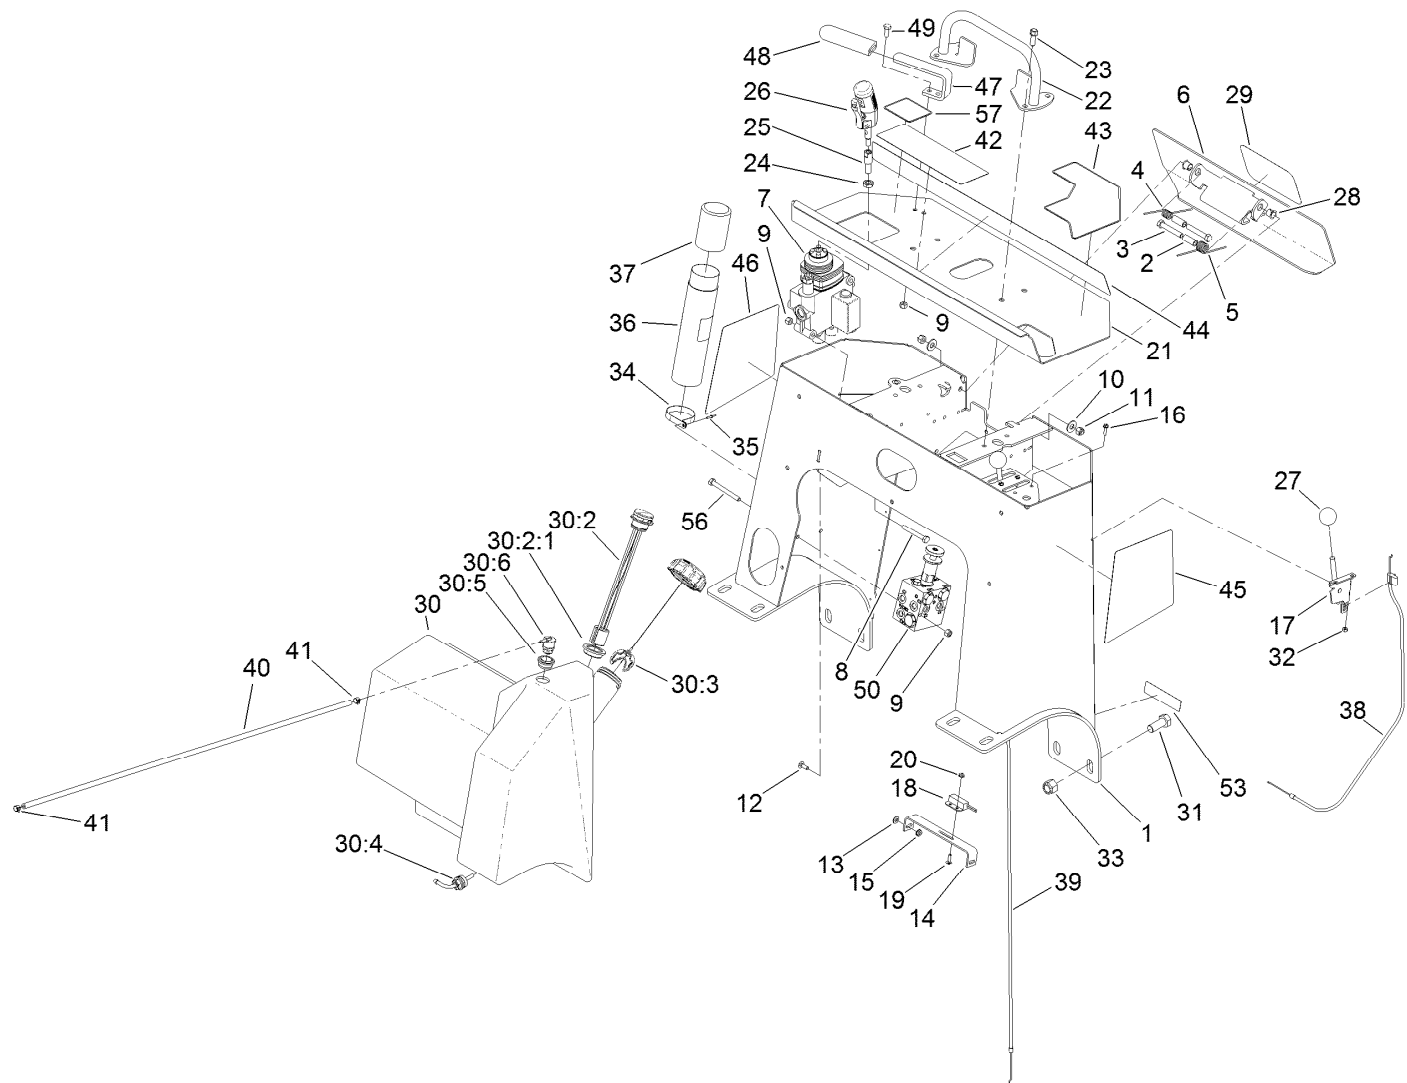

Tower Assembly (continued)

Ref.	Part Number	Qty.	Description
36	104-7050	1	Tube-Manual
37	104-7048	1	Cap-Housing
38	115-1211	1	Cable-Control
39	119-6654	1	Cable-Throttle
40	119-3517	1	Hose-Fuel
41	2412-146	2	Clamp-Hose
42	119-4606	1	Decal-Warning
43	121-4381	1	Decal-Console, LH
44	121-4382	1	Decal-Console, RH


Ref.	Part Number	Qty.	Description
45	121-4383	1	Decal-Logo, LH
46	121-4384	1	Decal-Logo, RH
47	125-3570-03	1	Bar-Arm Rest
48	1-633268	1	Grip-Lever
49	322-3	2	Screw-HH
50	121-4466	1	Sweep Manifold ASM
53	117-2718	1	Decal-Arrester, Spark
56	322-14	2	Screw-HH
57	121-4402	1	Decal-Joystick

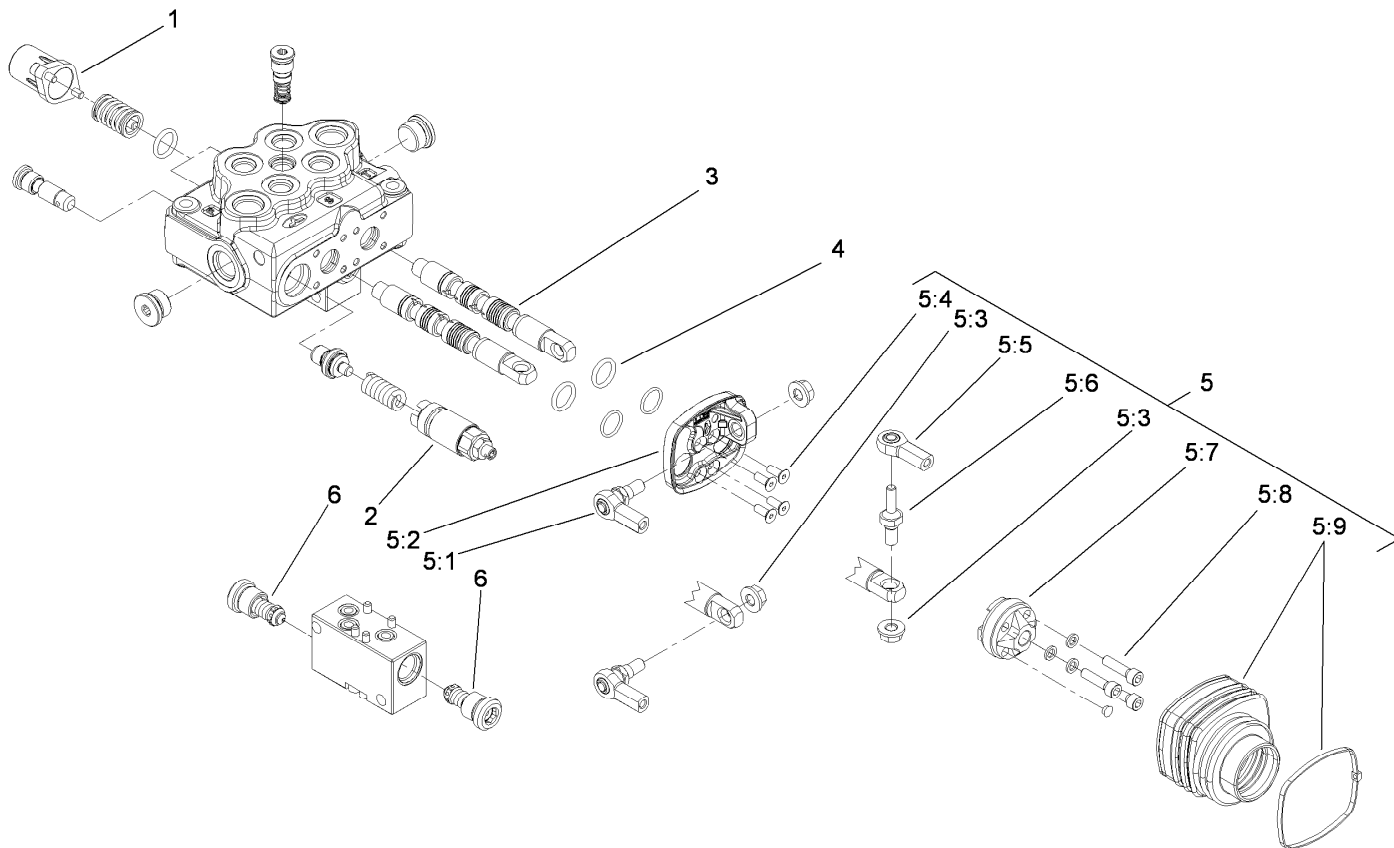

Control Valve Assembly No. 119-4585

Ref.	Part Number	Qty.	Description
1	100-8801	2	High Force Spring Kit
2	100-8805	1	Valve-Relief
3	114-8625	2	Valve-Spool
4	106-7719	4	Seal-Valve
5	119-4622	1	Joystick Kit
5:1	119-4623	2	Joint-Joystick
5:2	119-4624	1	Base-Joystick
5:3	117-1350	3	Nut-HF, Lock
5:4	119-4625	4	Screw-Joystick
5:5	119-4626	1	Joint-Joystick
5:6	119-4627	1	Pin-Spool
5:7	119-4628	1	Holder-Joystick
5:8	3273-42	3	Screw-HSH
5:9	119-4629	1	Boot-Joystick
6	119-4630	2	Valve Kit


Cooler Assembly

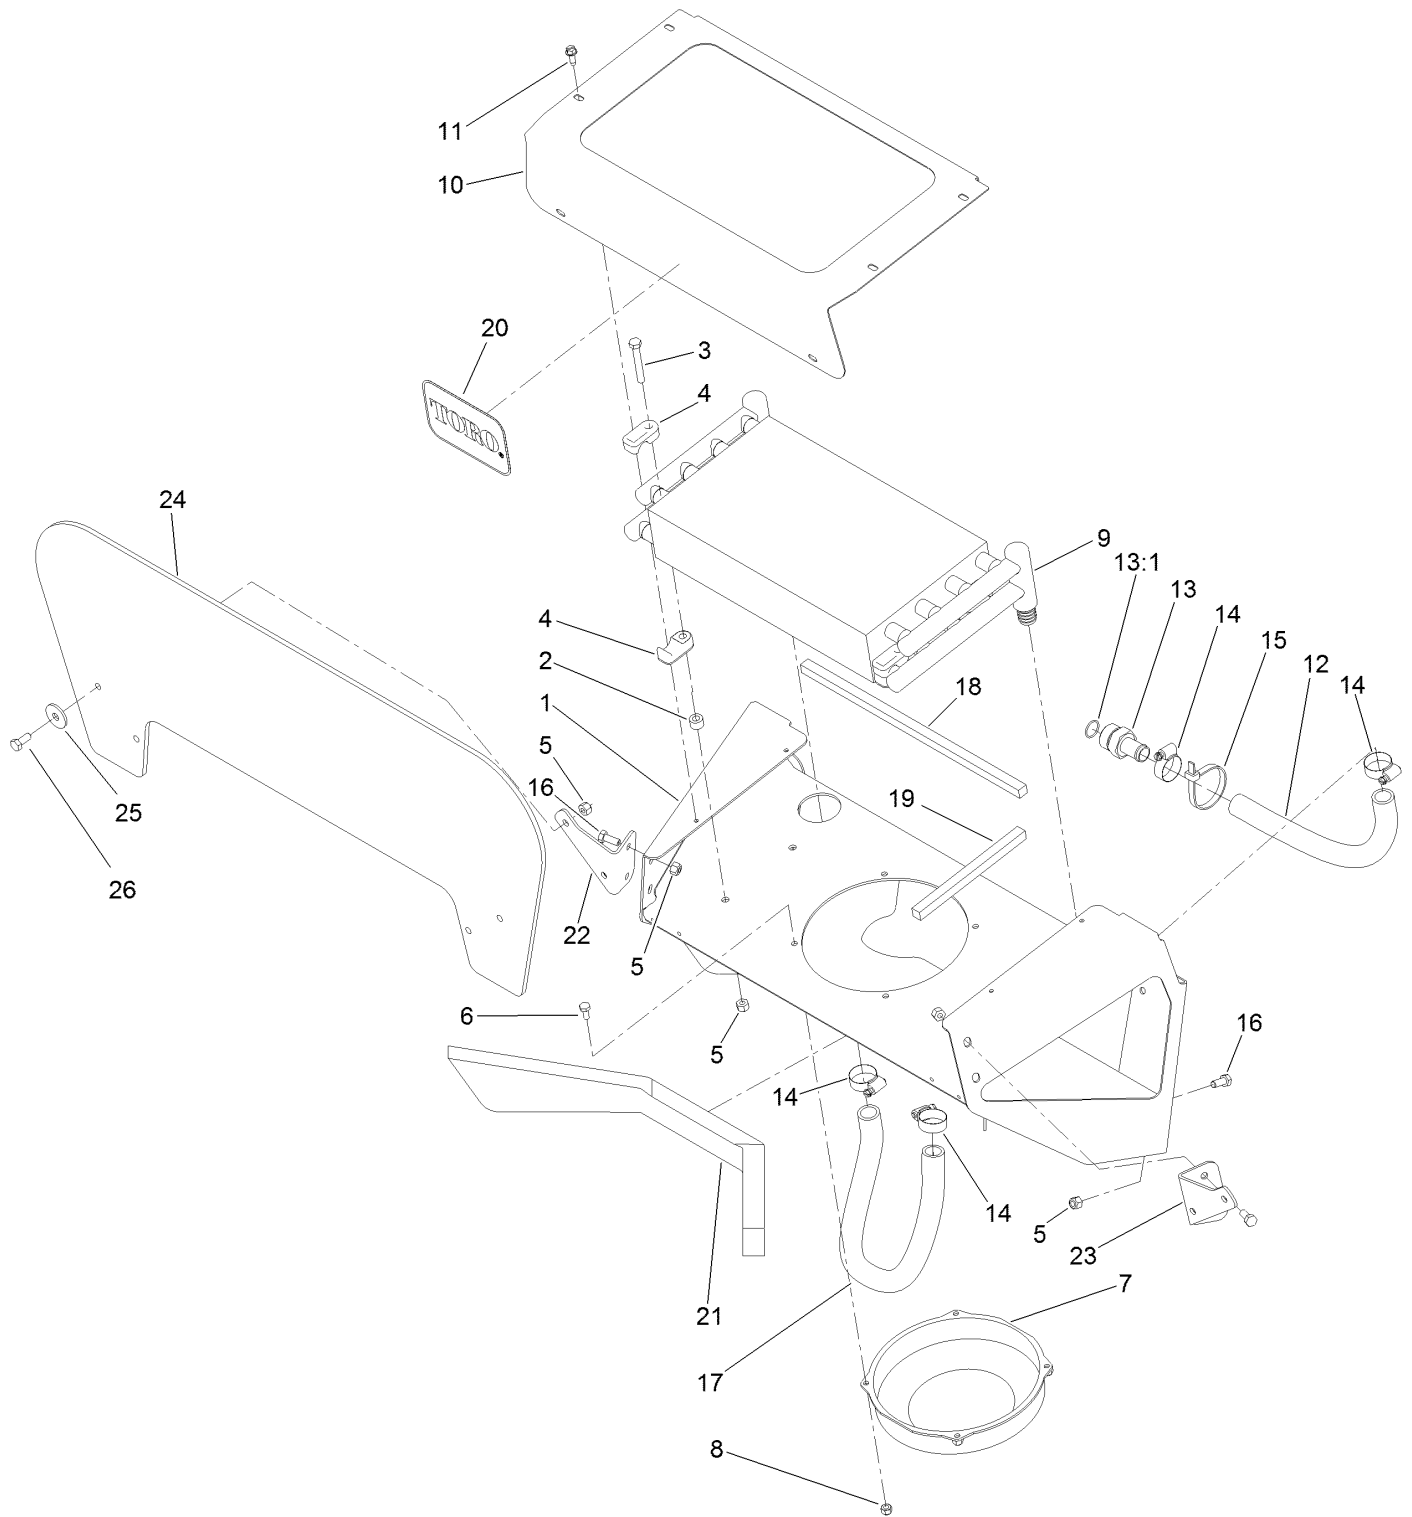

Cooler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-1180-01	1	Mount-Cooler	14	2412-129	4	Clamp-Hose
2	98-4695	4	Spacer	15	3334-945	1	Tie-Cable
3	322-11	4	Screw-HH	16	322-3	8	Screw-HH
4	105-3943	8	Clamp-Cooler, Oil	17	125-0266	1	Hose-Return
5	3296-29	16	Nut-Lock, NI	18	125-0319	2	Foam-Seal
6	321-3	4	Screw-HH	19	125-0324	2	Foam-Seal
7	120-7390	1	Fan	20	104-3989	1	Decal
8	3296-42	4	Nut-Lock, NI	21	125-0316	1	Foam-Seal
9	117-6320	1	Cooler-Oil	22	125-0350-01	1	Bracket-Shield, RH
10	125-0308-01	1	Cover-Cooler	23	125-0351-01	1	Bracket-Shield, LH
11	32104-95	6	Screw-HWH	24	125-0340	1	Shield-Chip
12	121-4537	1	Hose-HYD	25	63-8410	4	Washer
13	107-8652	1	Fitting-Straight	26	322-4	4	Screw-HH
13:1	237-58	1	O-Ring				


Hydraulic Routing Assembly

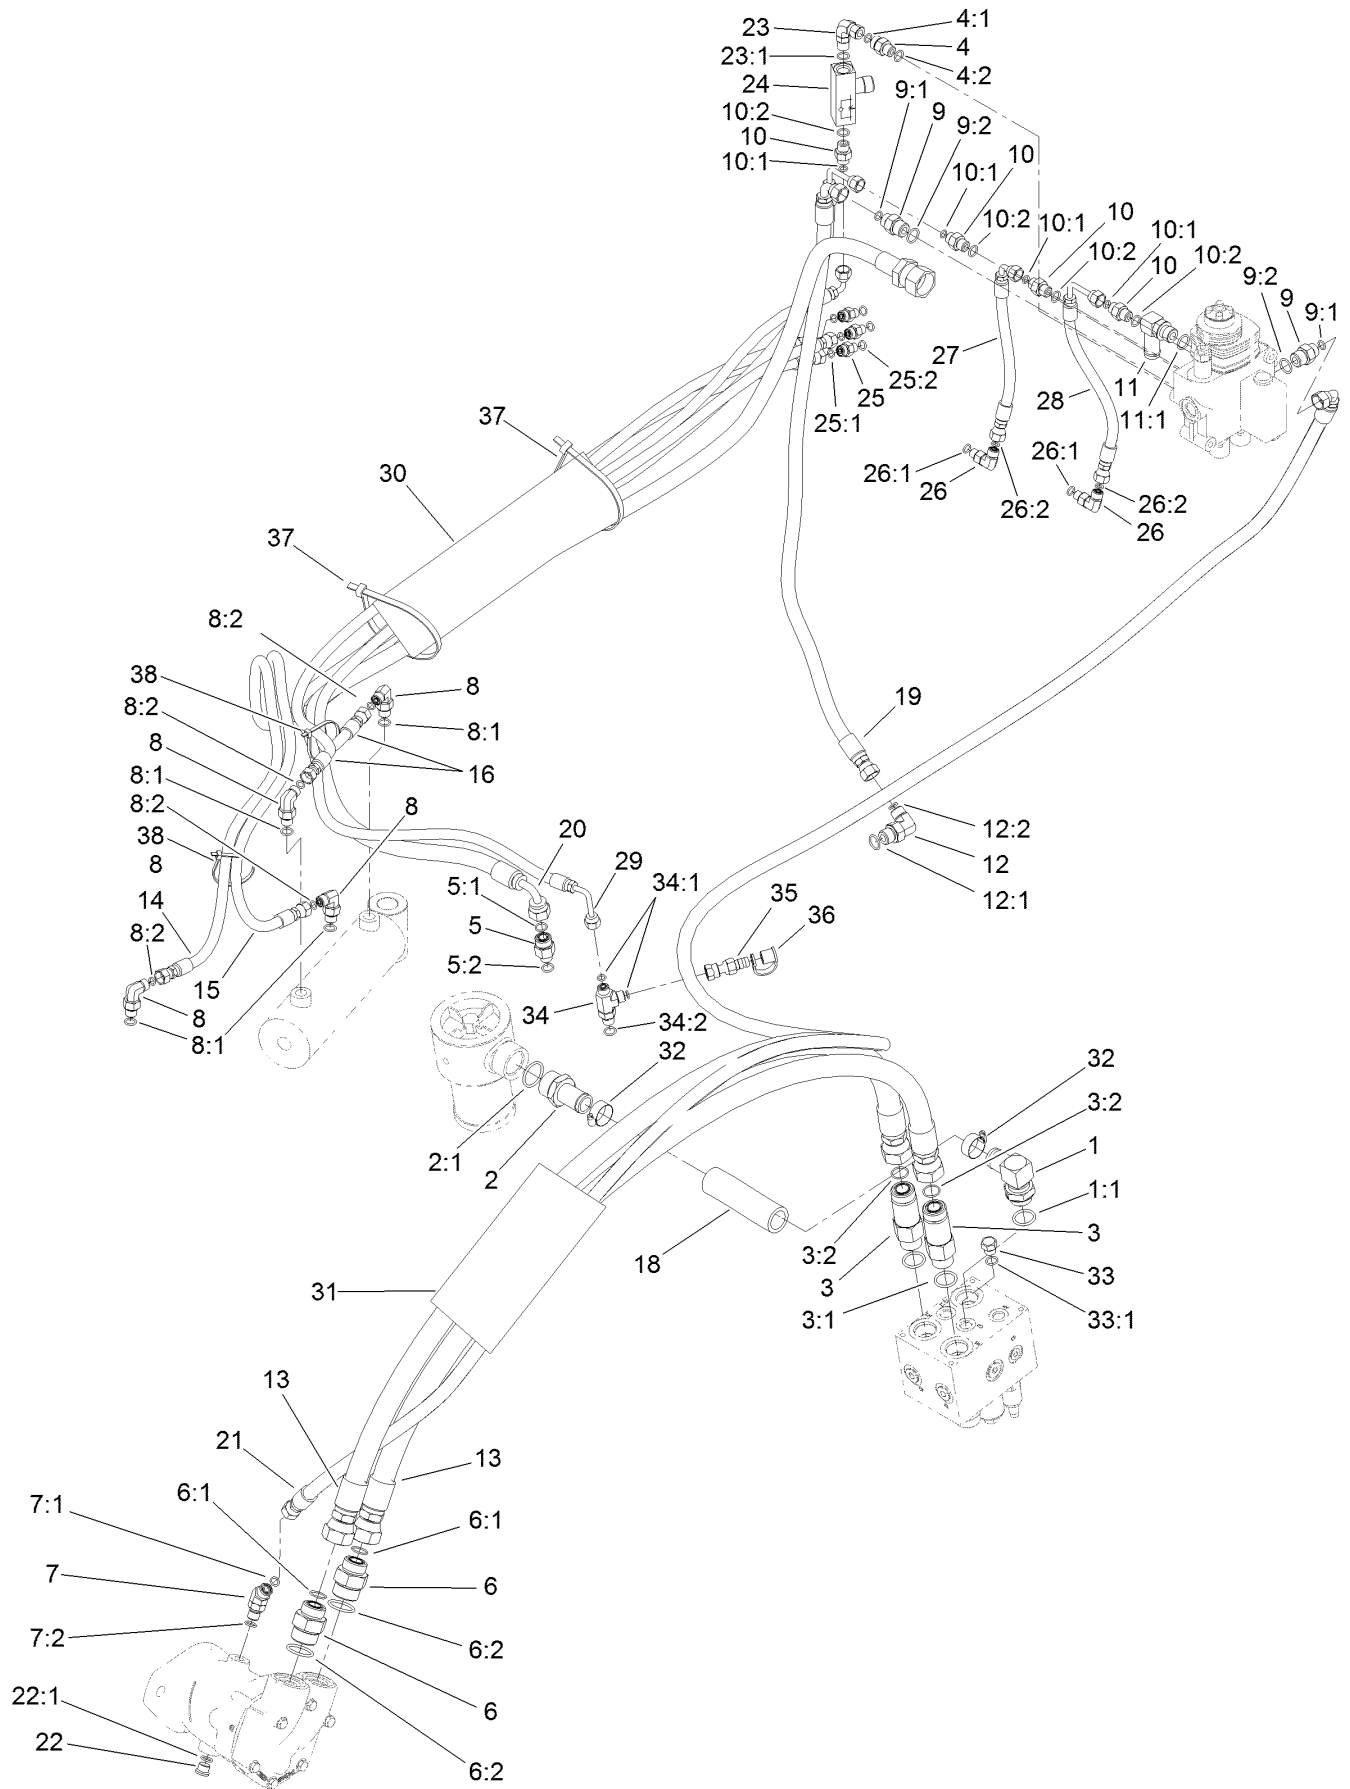

Hydraulic Routing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-4202	1	Fitting-HYD, 90 DEG	14	121-4345	1	Hose-HYD
1:1	237-81	1	O-Ring	15	121-4346	1	Hose-HYD
2	354-78	1	Connector-Hose	16	121-4347	2	Hose-HYD
2:1	237-146	1	O-Ring	18	121-4341	1	Hose-Return
3	92-6058	2	Fitting-HYD	19	121-1199	1	Hose-HYD
3:1	237-81	1	O-Ring	20	121-4344	1	Hose-HYD
3:2	237-58	1	O-Ring	21	121-4343	1	Hose-HYD
4	340-2	1	Fitting-HYD, Straight	22	353-989	1	Plug-Hex, Hollow
4:1	237-22	1	O-Ring	22:1	237-42	1	O-Ring
4:2	237-42	1	O-Ring	23	340-110	1	Fitting-Swivel, 90 DEG
5	340-5	1	Fitting-Straight	23:1	237-42	1	O-Ring
5:1	237-42	1	O-Ring	24	98-9742	1	Valve-Control, Flow
5:2	237-30	1	O-Ring	25	340-92	3	Fitting-HYD, Straight
6	340-91	2	Adapter	25:1	237-78	1	O-Ring
6:1	237-58	1	O-Ring	25:2	237-21	1	O-Ring
6:2	237-146	1	O-Ring	26	340-132	2	Fitting-HYD, 90 DEG
7	340-87	1	Fitting-HYD, 45 DEG	26:1	237-78	1	O-Ring
7:1	237-22	1	O-Ring	26:2	237-21	1	O-Ring
7:2	237-42	1	O-Ring	27	121-4455	1	Hose-HYD
8	340-82	4	Adapter	28	121-4456	1	Hose-HYD
8:1	237-42	1	O-Ring	29	119-4601	1	Hose-HYD
8:2	237-21	1	O-Ring	30	121-4454	1	Sleeve-Protective
9	340-3	2	Adapter	31	99-5648	1	Sleeve-Protective
9:1	237-22	1	O-Ring	32	2412-34	2	Clamp-Hose
9:2	237-79	1	O-Ring	33	353-508	1	Plug-HH
10	340-1	4	Fitting-HYD, Straight	33:1	237-42	1	O-Ring
10:1	237-21	1	O-Ring	34	108-5688	1	Fitting-Tee
10:2	237-42	1	O-Ring	34:1	237-21	2	O-Ring
11	353-954	1	Adapter	34:2	237-42	1	O-Ring
11:1	237-79	1	O-Ring	35	115-8886	1	Nipple-Test
12	340-18	1	Fitting-HYD, 90 DEG	36	354-79	1	Cap-Dust
12:1	237-79	1	O-Ring	37	3334-945	2	Tie-Cable
12:2	237-22	1	O-Ring	38	3290-379	2	Tie-Cable
13	121-4342	2	Hose-HYD				


Electrical Assembly

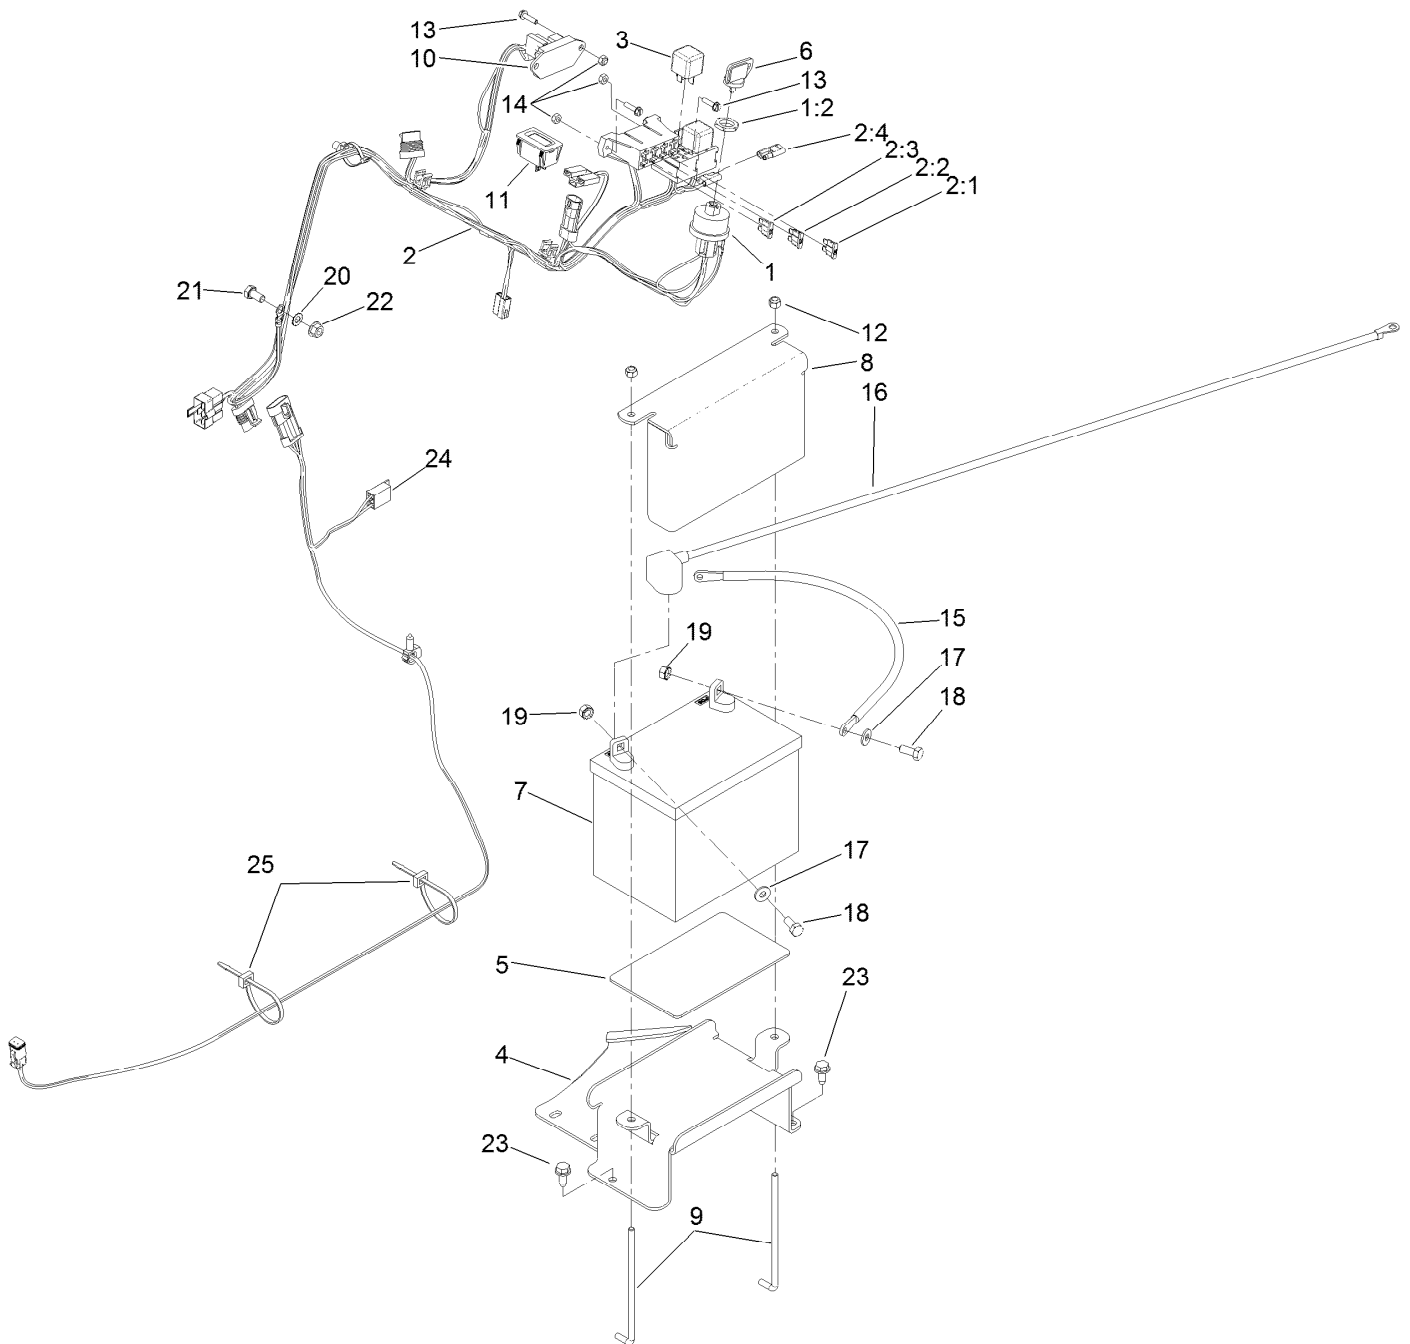

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	88-9830	1	Key Switch ASM	10	100-6170	1	Module-Delay
1:1	3254-5	1	Washer-Tooth, Internal (Not Used In This Application) ●	11	120-2244	1	Hourmeter
1:2	218-461	1	Nut-HH	12	3296-42	2	Nut-Lock, NI
2	121-4315	1	Harness-Wire	13	32105-13	5	Screw-HWH
2:1	109103	1	Fuse-Blade, 30 Amp	14	3296-2	5	Nut-Lock, NI
2:2	109102	1	Fuse-Blade, 25 Amp	15	106-8945	1	Cable-Battery, Positive
2:3	109101	1	Fuse-Blade, 20 Amp	16	121-4437	1	Cable-Battery, Negative
2:4	116-0053	1	Cap-Plug	17	3256-2	2	Washer-Flat
3	98-7249	2	Relay	18	322-3	2	Screw-HH
4	125-0322-01	1	Tray-Battery	19	32149-1	2	Nut-Keps
5	62-4300	1	Pad-Skid, Anti	20	3255-8	1	Washer-Lock
6	63-8360	1	Key-Ignition (W/Shield)	21	33114-016	1	Screw-HH
7	104-4657	1	Battery	22	33004-00	1	Nut-HF
8	115-6621-03	1	Plate-Hold Down, Battery	23	32144-70	2	Screw-HWHTF
9	104-8567	2	Holdown-Battery	24	121-4319	1	Harness-Wire
				25	3290-378	2	Tie-Cable

● Not illustrated

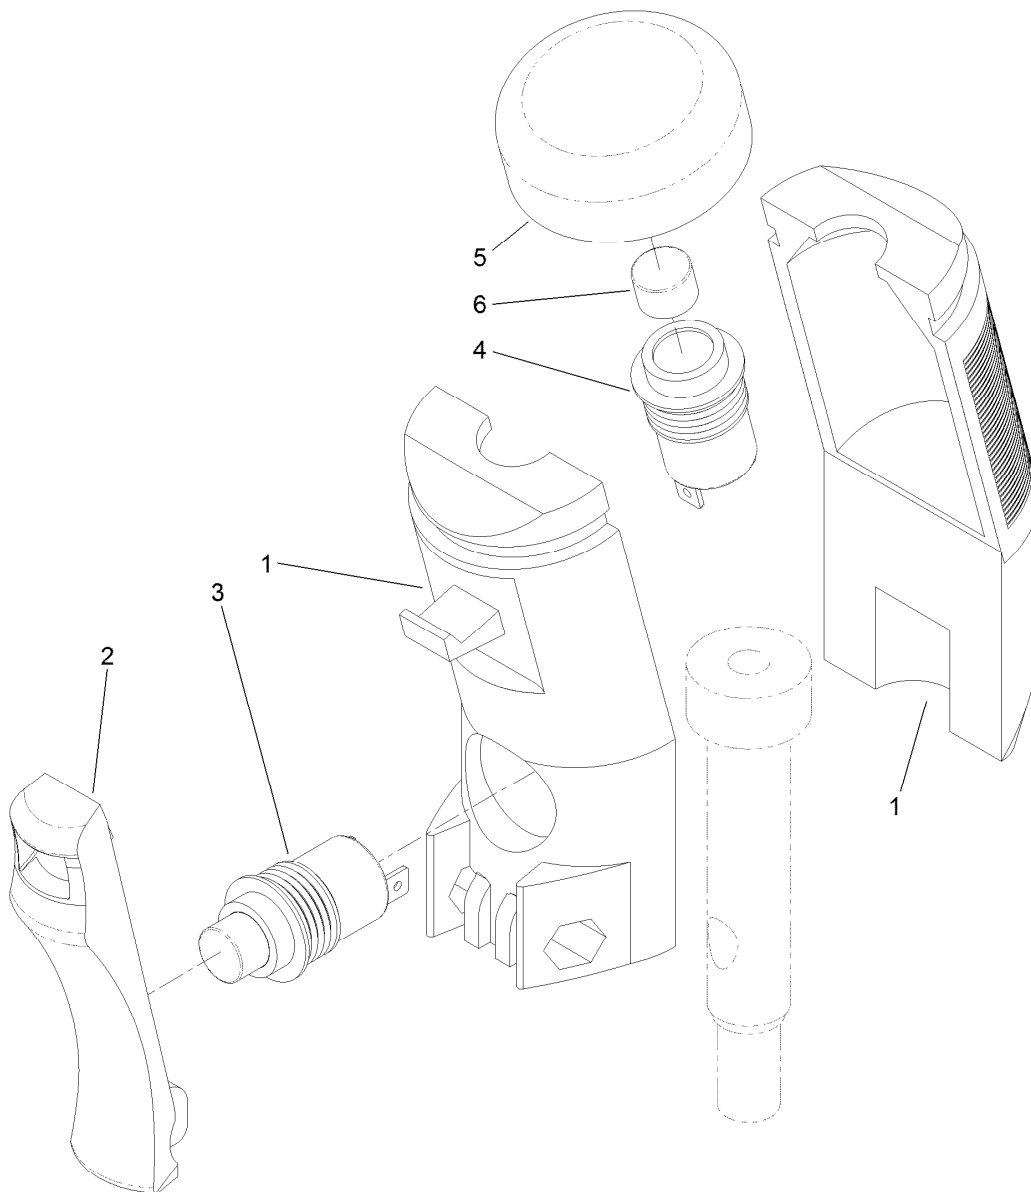

Two-Button Handle Grip Assembly No. 119-4587

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-4637	1	Halve-Handle
2	119-4638	1	Lever-Handle
3	119-4639	1	Button-Push, Lever
4	119-4640	1	Button-Push, Top
5	119-4641	1	Boot-Button
6	119-4642	1	Button-Actuator

Notes:

Notes:

Notes:



Count on it.