



PART NO. 94-3341

INSTALLATION
INSTRUCTIONS

RADIATOR KIT

For Groundsmaster® 580D

1. Position machine on a clean, level surface, stop engine, engage parking brake and remove key from ignition switch.
2. Drain radiator.
10. Connect remaining hoses to radiator.
11. Replenish fluids as required.



CAUTION

If engine is hot and the radiator cap removed, hot pressurized coolant can escape and cause burns. If engine coolant is hot, slowly and carefully remove radiator cap.

3. Disconnect hydraulic hoses connected to bottom of radiator. Disconnect other end of hoses from engine.
4. Disconnect all other hoses secured to radiator.
5. Disconnect and remove radiator from machine. Removed and Retain all parts from radiator for re-assembly.
6. Install new hydraulic fittings and hoses to engine as shown in figure 1.
7. Install old component parts to radiator.
8. Install new radiator to machine.
9. Connect new hydraulic lines to engine and radiator fittings.

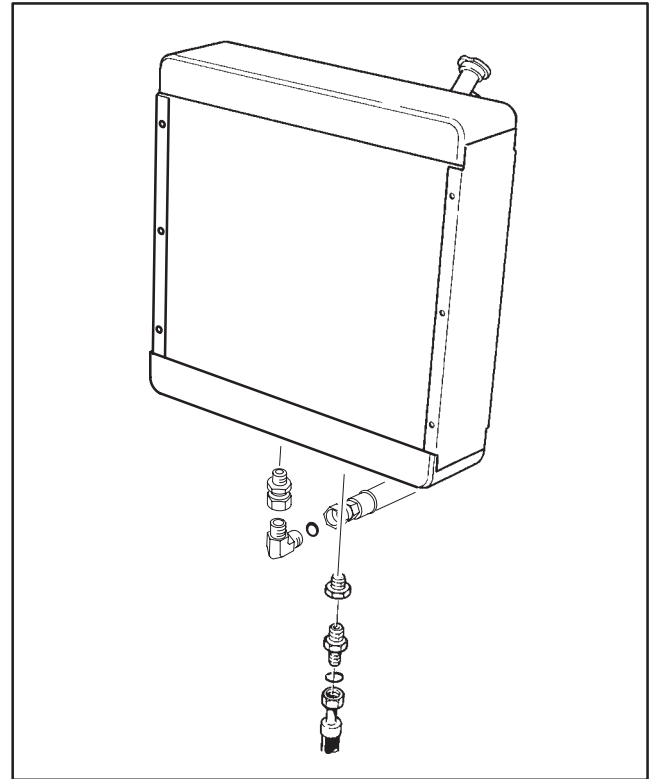


Figure 1